

# Crane

**Adorable Humidifiers**

## INSTRUCTION MANUAL

**1 GALLON/ 3.78 LITER  
ULTRASONIC HUMIDIFIER**

**MODEL # EE-3184-4138, 865**



**PLEASE READ AND SAVE ALL INSTRUCTIONS TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS APPLIANCE.**

## TABLE OF CONTENTS

Table of Contents, Humidifier Models	P.1
Important Safety Instructions	P. 2
General Safety Instructions	P. 3
List of Main Parts	P.4
Tech. Specifications, Contents of Packaging	P.5
Operation and Use	P.5-8
Maintenance	P.8-9
Trouble Shooting	P.10
Service Center	P.11
Warranty Information	P.12
Warranty Card	P.14
Order Form	P.16

## HUMIDIFIER MODELS

This instruction manual applies to the following items of the Adorable Humidifiers product range:

Frog Model# EE-3191	Elephant Model# EE-3186	Penguin Model# EE-865	Panda Model# EE-3189	Dog Model# EE-3190
Cat Model# EE-3187	Pig Model# EE-4139	Cow Model# EE-4140	Soccer Ball Model # EE-3188	Football Model# EE-4136
Basketball Model# EE-4137	Baseball Model EE-4138	Green Apple Model# EE-3184	Orange Model# EE-3185	Nursery Pink Model# EE-3189
Nursery Yellow Model# EE-3189	Nursery Blue Model# EE-3189			

For information on all CRANE Humidifiers please visit <http://www.crane-usa.com> for retail outlets.



## IMPORTANT SAFETY INSTRUCTIONS

### INTRODUCTION

Thank you for purchasing our CRANE Ultrasonic Humidifier. Each unit has been manufactured to ensure safety and reliability. Before using for the first time, please read the instructions carefully, and keep them for further reference.

**WARNING! READ AND SAVE THESE INSTRUCTIONS.** Failure to follow all the instructions listed below may result in electric shock, fire and/or serious personal injury.

1. **Do not carry water tank by handle when it is filled with water. It is advisable to carry filled water tank with two hands.**
2. **DO NOT operate outdoors; this humidifier is intended for indoor use only.**
3. Always have water in the water tank when operating the unit.
4. Use only clean, cool tap water to fill the tank (filtered or distilled water is recommended to avoid white dust if tap water is too hard). **DO NOT** use hot water.
5. Be sure that the filling cap of the tank is firmly tightened. Always have the mist direction nozzle and the mist chamber in place while the unit is operating. Place the mist direction nozzle so it aims away from children, walls, furniture, and electrical appliances.
6. Use only a 110-120VAC outlet. **ALWAYS plug and unplug unit with dry hands.**
7. Never operate the unit with a damaged cord or plug.
8. Always place the unit on a smooth, flat, level surface, and away from direct sunlight. Keep the cord away from heated surfaces and areas where it could be walked on or tripped over. Unplug the unit when not in use and whenever you clean or move the unit.
9. Do not add medication of any type into the nozzle, base or water tank. Do not cover any openings on the unit or insert objects into any openings.
10. The unit should not be left unattended in a closed room as the air could become saturated and leave condensation on walls or furniture. Leave room door partly open.
11. When cleaning the inside of the unit keep water away from the air outlet / fan vent (see FIG.3). The exterior may be wiped with a damp cloth, except the electrical controls, **only when the unit is off and unplugged.** Humidifier requires regular cleaning. Refer to cleaning instructions.
12. Do not tilt or tip the unit or attempt to empty or fill it while it is in operation.
13. Do not use a detergent to clean any parts of the unit that contain water. Always use a few drops of bleach with water to clean humidifier. Detergent film dissolved in the water supply can interfere with the output of the unit.

## SAVE THESE INSTRUCTIONS!

## GENERAL SAFETY INSTRUCTIONS



**WARNING!** Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are a factor which cannot be built into this product, but must be supplied by the operator.

### **THIS HUMIDIFIER IS NOT A TOY!**

**Do not let your child play with this appliance.** Serious injury and electrocution might be possible. This appliance has to be operated by an adult only. Children should be supervised to ensure that they do not play with the humidifier.

### **SAVE ALL INSTRUCTIONS!**

**CAUTION:** A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

#### **ELECTRIC POWER**

If electric circuit is overloaded with other appliances, your appliances may not operate properly. The appliances should be operated on a separate electrical circuit from other operating appliances.

#### **POLARIZED PLUG**

This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



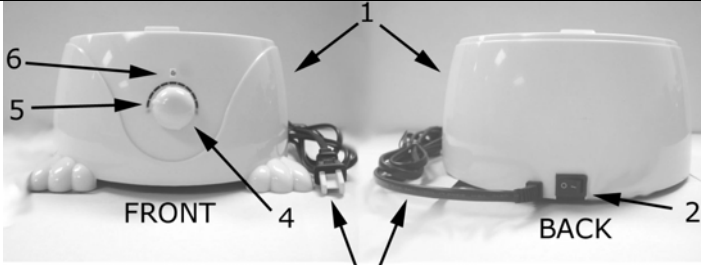
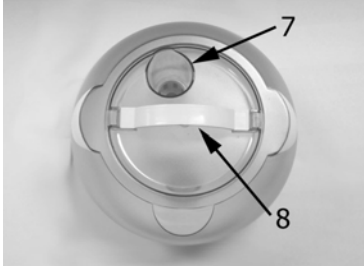
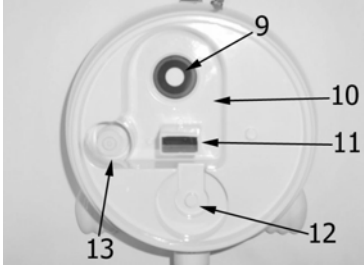
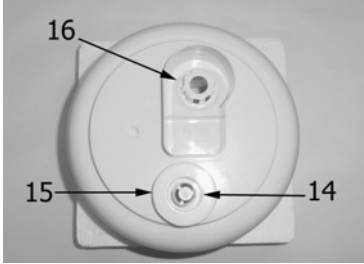
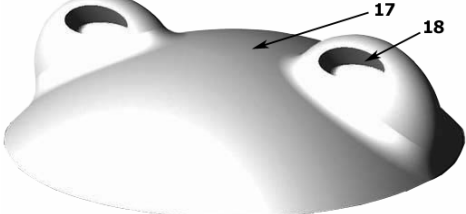
#### **SAFETY WARNING**

Although your appliance is easy to operate, for your safety, the below warnings must be followed:

1. Do not place the appliance near a heat source.
2. Never leave the appliance unattended while connected to the electrical outlet.
3. To avoid any accidents, never cover the mist vent when the appliance is in operation.
4. Use the appliance on a stable surface away from water.
5. Do not unplug from the wall socket by pulling on the supply cord.
6. The appliance must be unplugged:
  - A. Before either filling or emptying
  - B. Before any cleaning or maintenance
  - C. After use
  - D. If it appears to be faulty

**THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.**

## LIST OF MAIN PARTS

<p><b>Fig. 1 (Central Body)</b></p> <ol style="list-style-type: none"> <li>1. Central Body (water basin)</li> <li>2. On/Off Switch</li> <li>3. Power Cord</li> <li>4. Regulator Control Knob</li> <li>5. Humidity Output Indication</li> <li>6. Red/Green Power Light</li> </ol> <p><i>(shape of Central Body depends on model #)</i></p>	 <p>Fig. 1</p>
<p><b>Fig. 2 (Top of Water Tank)</b></p> <ol style="list-style-type: none"> <li>7. Vapor Outlet Channel</li> <li>8. Water Tank Handle</li> </ol> <p><i>(shape of Tank depends on model #)</i></p>	 <p>Fig. 2</p>
<p><b>Fig. 3 (Water Basin)</b></p> <ol style="list-style-type: none"> <li>9. Nebulizer</li> <li>10. Vaporization Chamber</li> <li>11. Fan Vent</li> <li>12. Valve Opener</li> <li>13. Water Level Sensor</li> </ol>	 <p>Fig. 3</p>
<p><b>Fig. 4 (Bottom of Water Tank)</b></p> <ol style="list-style-type: none"> <li>14. Water Tank Valve</li> <li>15. Water Tank Cap</li> <li>16. Vapor outlet channel</li> </ol>	 <p>Fig. 4</p>
<p><b>Fig. 5 (Water Tank Lid)</b></p> <ol style="list-style-type: none"> <li>17. Water Tank Lid</li> <li>18. Vapor Output Slots</li> </ol> <p><i>(shape of Water Tank Lid depends on model #)</i></p>	 <p>Fig. 5</p>

## TECHNICAL SPECIFICATIONS:

Rating Voltage	120V
Frequency	60Hz
Power	32W
Water Tank Capacity	Approx. 1.0 Gallon / 3.78 Liter
Output Per 24 Hours	Approx. 2.1 Gallon / 8 Liter
Run Time Per Tank	Min. 11 Hours
Humidifying Capacity	Up to 500 sq.ft. / 46 m <sup>2</sup>
Noise	< 36.5 (dB) A

## CONTENTS OF PACKAGING

- a. Instruction Manual
- b. Central Humidifier Body
- c. Water Tank
- d. Water Tank Lid with Vapor Output Slots

If any of the above items are missing, please contact our service department at 1-888-599-0992 (<http://www.crane-usa.com>) for replacement. Business hours Mon-Fri 9:00am - 4:00pm CT

## OPERATION AND USE

### BEFORE EACH USE

**CHECK HUMIDIFIER PLACEMENT** - Place the Humidifier on an elevated non-metallic waterproof surface for best performance. This is to help disperse the mist in the air, and prevent it from being knocked or tipped over.

**CHECK WATER LEVEL SENSOR** - Make sure that the water level sensor is secured properly. Refer to Water Level Sensor on page 9 for instructions on how to clean and assemble water level sensor.

### CHECK FAN VENT

This fan vent is located on the bottom of the humidifier. The purpose of the fan vent is to blow the cool mist through the vapor outlet slots. It is important that this part is kept clean and free of obstructions. We recommend checking the fan vent before using this item (i.e. lint, paper).

**Do not place humidifier on top of a towel, or a carpeted surface. The fan vent on the bottom may become blocked, and overheat the humidifier.**

Fan Vent



**CAUTION:**

**DO NOT operate the humidifier without water in the water tank. DO NOT plug or unplug the cord with wet hands; electric shock could happen.**

**ASSEMBLY**

1. Lift the water tank off the central body.
2. Turn over the water tank and unscrew the water tank cap at the bottom of the tank by turning it counterclockwise. (See Fig. 6)



**Fig. 6**

3. Fill water tank with cold water; do not fill all the way to the rim. (See Fig. 7)

**Note:** To avoid possible white dust due to hard water it is recommended to use filtered or distilled water.



**Fig. 7**

**DO NOT** use hot water. Use cool tap water.

**DO NOT** add any medication or other additives to the water.

**DO NOT** pour water into Vapor Outlet Channel (Fig. 2 on page 4)

4. Replace the water tank cap, aligning the threads on the tank with the threads on the cap, and turn it clockwise. (See Fig. 8)



**Fig. 8**

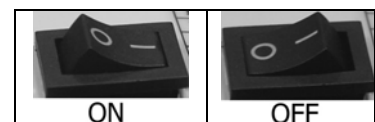
5. Turn the tank over, holding it by the top handle, and place it on the central body, making sure it fits perfectly. Place the water tank cap with output slots on top of the water tank. (see Fig. 9)

**Note:** Do not attempt to move humidifier while water tank is placed on the water basin. Doing so may cause leakage of water. Also do not place humidifier on the floor. Place humidifier on an elevated surface.



**Fig. 9**

6. Plug the power cord into a wall socket and turn on the unit. The On/Off switch is located at the back of the unit.



7. The Power Light will turn on red. In a few seconds it will switch to green, indicating that enough water is in the water basin, and mist will start emitting through the openings at water tank lid.

8. Use the humidity output regulator control knob to adjust the intensity of the mist output. Turning the knob clockwise will increase the moisture output, turning the knob counterclockwise will reduce the moisture output.

**(see Fig. 10)**

**Note:** When at maximum level it is normal to hear a faint dripping sound.



**Fig. 10**

9. When the humidifier runs out of water the power light will turn red, and the mist output will stop. This is a safety feature to prevent the humidifier from possibly overheating and damaging the nebulizer. This safety feature uses a water level sensor to stop the nebulizer once the water level sinks below the required level in the water basin. Turn the humidifier off and unplug before removing and refilling the water tank. **Please note that the power light on the humidifier body will stay on. The (red) light signal indicates that the humidifier is turned on and needs to be refilled.**

### **INSERTING HUMIDIFIER FILTER**

**(SOLD SEPARATELY not included with your humidifier)**

A humidifier filter is an optional accessory for your Crane Cool Mist Humidifier. Filters are used to eliminate white dust caused by hard water and to reduce mold spores and bacteria that can build up in your humidifier.

Place humidifier filter in humidifier as shown in Fig. 10A

**NOTE:** Do not leave filter in humidifier longer than recommended time. See filter instructions on filter box packaging.

Filters are not included with the humidifier and can be purchased separately.

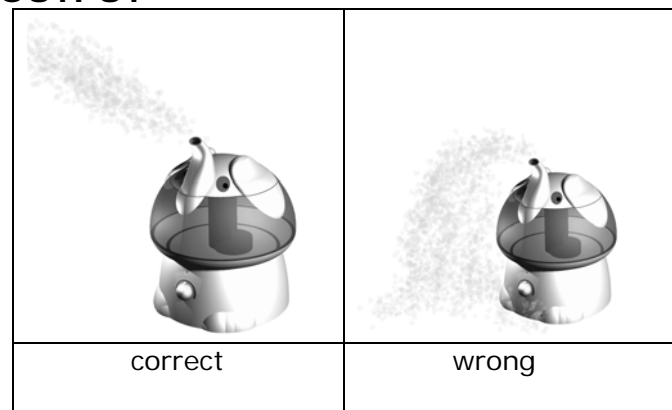


**Fig. 10 A**

### **SET THE CORRECT HUMIDITY OUTPUT**

Adjust the mist control so that the mist rises up and gets absorbed by the room air. Do not turn on too high an output as the mist cannot be absorbed by the air and accumulates on the surface around the humidifier.

If the humidifier is placed near a fan or air conditioning outlet the mist may be forced down by the foreign air stream. Change the location of the humidifier or reduce the output of the other room conditioning appliances.





## **A NOTE ABOUT HUMIDITY**

- It is best to keep the humidity level at about 30-50 percent of relative humidity.
- The comfort level of humidity will vary from room to room and with changing room conditions.
- In cold weather, windows and even some walls may fog or develop frost from excessive indoor humidity. If this occurs, reduce the mist intensity setting to avoid damage from condensed water dripping on windowsills.
- Too much humidity in the room may allow moisture to accumulate on surfaces where bacteria and fungi can grow. Moisture that gathers may also damage furniture and walls, especially wallpaper.
- To eliminate excessive humidity, especially in small rooms, leave the room door open and adjust the mist intensity control setting.

## **MAINTENANCE**



### **CAUTION:**

**Always be sure that the appliance is unplugged and switched OFF before cleaning or attempting to store the item. NEVER PLUG OR UNPLUG UNIT WITH WET HANDS.**

**DO NOT leave water in water tank or water basin when unit is not in use as it may result in the build up of mineral deposits and bacteria that can inhibit the output efficiency of the humidifier.**

**PLEASE NOTE that if water remains in the water tank for more than a day or two, bacterial growth is possible.**

**ALWAYS use fresh cool water when using unit.**

**NOTE:** When removing water tank, water may accumulate under vapor lid and on the bottom of the water tank. It is recommended to have a dry cloth ready to dry wet surfaces.

## **DISINFECTING THE WATER TANK AND WATER BASIN**

1. Fill water tank with 1 teaspoon of household bleach in 1 gallon of water. Let stand twenty minutes, shaking vigorously with two hands every few minutes, drain and rinse with clean water until the bleach smell is gone. Dry with a clean cloth or paper towel.
2. Wipe the water basin with a soft cloth dampened in the bleach and water solution. Rinse the water basin with cool water to remove any bleach smell. **DO NOT IMMERSER WATER BASIN IN WATER.**
3. Wipe all exteriors surfaces of the base with a soft, dry cloth. Do not immerse the base in water or use water to clean the base. An electric shock may result or the humidifier may be damaged.

**NOTE:** It is recommended to clean humidifier with water and bleach solution as stated above after using the humidifier the fourth time.

## GENERAL MAINTENANCE AND CLEANING

Before any cleaning operation, switch the humidifier off and unplug it.

1. Always unplug the unit before cleaning.
2. The humidifier must be drained and cleaned before storing.
3. Once unplugged the exterior of the unit may be cleaned by wiping with a soft dry cloth. **Caution:** The ON/OFF switch must be thoroughly dry before unit is again plugged into power source.
4. There may be some lime deposits in the nebulizer, particular in areas with hard water. Overcome this drawback by cleaning the nebulizer with water and vinegar on a soft cloth regularly, as follows:
  - A. Dampen a cloth with vinegar and wipe the nebulizer gently, until the lime deposits disappear completely.
  - B. Rub down gently with a dry cloth and remove remains of humidity.
  - C. Do not rub the nebulizer with solid objects.
  - D. Do not clean with chemical products
5. When cleaning the water basin do not place the nebulizer directly under the water tap.
6. Never immerse the unit in water or let water enter the fan vent (**see figure 3**) or any other openings.
7. It is normal for water to be in the water basin. However water must not get inside the central body. If this should happen, take the humidifier to an authorized service center before using it again.
8. Clean the inside of the water tank at least once a week, as follows:
  - A. Fill the tank with clean water adding a few drops of bleach. Close the tank completely with its cap and shake by holding the tank with both hands. Do not hold by handle while shaking the tank.
  - B. Rinse thoroughly.

**Water Level Sensor-** The water level sensor is made of three key parts. When cleaning DO NOT MISPLACE these parts and MAKE SURE that you assemble these three parts correctly after cleaning and before operating humidifier. They are as follows:

**Plastic Cap** – this part has 4 flat tabs coming out from the bottom and is placed on top of a plastic pin.

**Water Float** - a small round part resembling a “life saver” candy located underneath the plastic cap.

**Pin** – plastic pin that secures water float and plastic cap.

To clean the water float unscrew the plastic cap from the pin. Remove the water float and clean by wiping the parts with a soft damp cloth. Replace the parts by first putting the water float onto the pin and re-screwing the plastic cap onto pin.



## STORING YOUR HUMIDIFIER

Allow the appliance to dry completely before storing. Store the appliance in a dry location. Do not place any heavy items on top of appliance during storage as this may result in possible damage of the appliance. Store the cord in a clean, dry location away from metal objects. Always check the plug before use to assure metal items have not become attached.

- Save the box for off-season storage.
- Make sure the tank, water basin and water tank cap are thoroughly dry before storing.
- If water is left in the unit during storage, it may evaporate completely and leave deposits that can prevent the unit from operating properly.

Leave the water tank refill cap loose to prevent the water cap (*see figure 4*) and gasket from sticking together. This will prolong the life of the gasket.

## TROUBLE SHOOTING

**CAUTION: DO NOT attempt to repair the motor or nebulizer yourself. If the humidifier continues to not operate please call our service center (see toll free number).**

Problem	Solution
<p><i>Humidifier power light is staying red and not turning green</i></p> <p><i>Humidifier is working than stops:</i></p>	<ul style="list-style-type: none"> <li>▪ Ensure that water level sensor is assembled properly.</li> <li>▪ Clean water float</li> <li>▪ Call service center and request replacement water float</li> <li>▪</li> </ul>
<p><i>If humidifier does not work at all:</i></p>	<ul style="list-style-type: none"> <li>▪ Ensure it is properly plugged into a power outlet.</li> <li>▪ Check that the switch is in the ON position.</li> <li>▪ If Power On indicator light does not come on, bring to authorized service station.</li> </ul>
<p><i>If there is a strange odor:</i></p>	<ul style="list-style-type: none"> <li>▪ Clean the tank with water and vinegar or bleach and rinse with clean water.</li> <li>▪ Leave the tank open for some time without the cap, in a cool place.</li> </ul>
<p><i>The power light is green but there is no mist being emitted:</i></p>	<ul style="list-style-type: none"> <li>▪ Check that there is water in the tank.</li> <li>▪ Check for possible lime deposits on the water level sensor or the nebulizer (see page 8 and 9).</li> <li>▪ Make sure that nothing blocks the vapor output slots.</li> <li>▪ Check that the fan vent on bottom of humidifier is not blocked.</li> <li>▪ Empty the humidifier and rinse the water basin with cool tap water and allow to dry for 15 to 30 min.</li> </ul>
<p><i>White dust appears and settles outside the humidifier:</i></p>	<ul style="list-style-type: none"> <li>▪ Area tap water may have too many minerals, change to filtered or distilled water.</li> <li>▪ Use Crane filter cartridge to eliminate minerals.</li> </ul>

## **SERVICE CENTER**

If you have any question in regards to the operation of this appliance or are in need of a spare part please contact our service center at:

### **Dart Warehouse Corporation**

Tel: 1-888-599-0992 (Business Hours Mon-Fri 9:00am-4:00 pm Ct)

Website: <http://www.crane-usa.com>

1835 Ferry Road

Naperville, Illinois 60563



## **ENVIRONMENTAL PROTECTION**

If the appliance should no longer work at all, please make sure that it is disposed in an environmentally friendly way, by handing it into a public collection point. Please do not put it with your household waste.

## LIMITED WARRANTY

Thank you for purchasing a top quality **Crane** product. This Ultrasonic Humidifier was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship for 1 year with proof of purchase.

The warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons or failure to follow operation instructions provided with the product. This warranty does not apply to commercial use.

The warranty is non-transferable and applies only to the original purchase and does not extend to subsequent owners of the product. Liability under this warranty is limited to repair, replacement or refund. In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss, direct, indirect, incidental, special or consequential damage arising out of in connection with use of this product. This warranty is valid only in the United States of America. This Warranty gives you specific legal rights. However you may have other rights that vary from state to state. Some states do not allow limitation on implied warranties or exclusion of consequential damages therefore these restrictions may not apply to you.

In case you find this product to be defective please proceed as follows:

- A. within 90 days of purchase : return the product to your retailer for a refund
- B. After 90 days and within the warranty period: send the product (freight prepaid) to our service center. To avoid transport damages please send the product in the original packaging. In return you will receive your repaired item, a new product or a refund at the service center's discretion.

Please fill out the Warranty Card and send it together with the product and purchase receipt

To arrange pick-up of the defective item please call our service center:

**Dart Warehouse Corporation**

Tel: 1-888-599-0992 (Business Hours Mon-Fri 9:00am-4:00 pm CT)

Website: <http://www.crane-usa.com>

1835 Ferry Road

Naperville, Illinois 60563

**WARRANTY INFORMATION**



# WARRANTY CARD



## Ultrasonic Humidifier

- In case you find this product to be defective please proceed as follows:
- A. within 90 days of purchase : return the product to your retailer for a refund
  - B. After 90 days and within the warranty period: send the product (freight prepaid) to our service center. To avoid transport damages please send the product in the original packaging. In return you will receive your repaired item, a new product or a refund at the service center's discretion.

This Ultrasonic Humidifier was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship for 1 year with proof of purchase.

Please print clearly and fill in your details below. Send it together with the product and purchase receipt. Please read the Limited Warranty conditions mentioned in this instruction manual.

<b>Customer Name</b>	
<b>Street</b>	
<b>City</b>	
<b>State</b>	
<b>ZIP Code</b>	
<b>Model #/Style</b>	
<b>Purchase Date</b>	
<b>Description of Defect :</b>	

Service Center Address

### Dart Warehouse Corporation

Tel: 1-888-599-0992 (Business Hours Mon-Fri 9:00am-4:00 pm CT)  
Website: <http://www.crane-usa.com>  
1835 Ferry Road  
Naperville, Illinois 60563

PLEASE DETACH THIS SECTION AND RETURN IT WITH YOUR PRODUCT



WARRANTY CARD





# ORDER FORM

FOR REPLACEMENT CRANE ADORABLE HUMIDIFIER WATER TANK

Price per Water Tank (includes shipping and handling \$18.00)

Please send a **MONEY ORDER** only (no cash or personal checks),  
Please use **Street address** only (we cannot ship to PO Boxes)  
payable to **Wachsmuth & Krogmann Inc.** to the following address:

Crane Inc,  
1800 Nicholas Blvd.  
Elk Grove Village, IL 60007

Kindly fill in your information below and send together with your  
Money Order. To avoid delay please print clearly.

Name	<input type="text"/>
Street	<input type="text"/>
City	<input type="text"/>
State	<input type="text"/>
ZIP	<input type="text"/>
Phone #	<input type="text"/>
Date	<input type="text"/>
Model #/Style	<input type="text"/>
Quantity of Parts	<input type="text"/> <b>Water Tank @ \$</b>
Total amount	<input type="text"/> <b>\$</b>

