INSTRUCTIONS-PARTS LIST



*307-051

APRIL 1974

Supersedes OCT, 1973

·IMPORTANT ·

INSTRUCTION MANUAL 306-997 contains IMPORTANT WARNINGS and INSTRUCTIONS - READ and UNDERSTAND-

This manual contains IMPORTANT WARNINGS and INSTRUCTIONS READ AND RETAIN FOR REFERENCE

30:1 PRESIDENT Hydra-Spray®

Air supply hose not included (See accessories page 4)

SIPHON STAND and SIPHON CART "Airless" PAINT SPRAYERS

3600 PSI -- 248 bar -- MAXIMUM WORKING PRESSURE

• 30:1 ratio pump delivers up to 1.67 gpm at up to 3600 psi. Supplies one spray gun with up to a .041 in. orifice tip, or two guns with up to .029 in, orifice tips.


- Pumps from original containers.
- Outlet filter with 60 mesh screen.
- TECHNICAL DATA on back page.
- ACCESSORIES page 4 and 5.

Model **226-238** SERIES "D"

Model 206-448

swivel, hose and tip)


SERIES "D" (Same as 226-238 less gun,

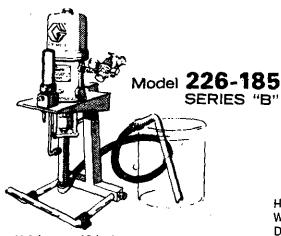

40 inches Height Width 22 inches 24 inches®

Depth Weight Height 43 inches Width 31 inches 27-1/2 inches Depth 144 lb (226-238) Weight: 100 lb (206-448)

Supersedes 306-742 and 306-801 covering early units



INSTALLATION

PREPARING FOR USE

Operating instructions and safety warnings are given in separate manual 306-997; service instructions are given in the manuals for the separate components.

CONNECTING HOSES

Connect fluid hose to nipple on outlet manifold. Do not use thread sealer. Connect spray gun to swivel.


-WARNING-

NEVER exceed 120 psi (8 bar) air pressure to pump. At 120 psi, the pump develops up to 3600 psi (248 bar) fluid pressure. Be sure that any hose, valve, etc., that you use will withstand the pressures developed.

Connect a 1/2 ID static grounded air hose to the 1/2 npt air inlet union. You should have a bleed type master air valve in your air supply line so that you can shut off air before it reaches unit.

Flush unit as described in 306-997. If you have the stationary unit, install the filter conversion kit. Refer to manual 306-812 for instructions.


Troubleshooting and service instructions are given in 306-997 and the separate manuals for each component assembly.

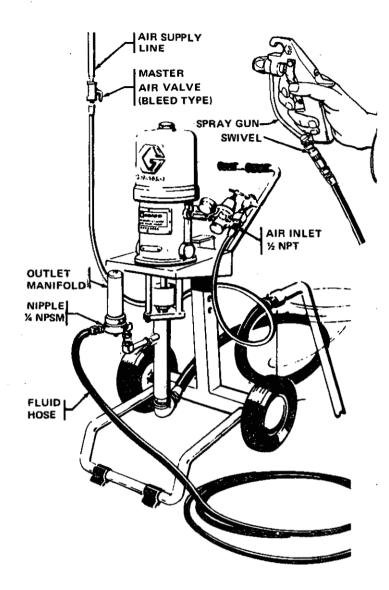

PARTS DRAWING

30:1 PRESIDENT HYDRA-SPRAY (SIPHON STAND)


Model 226-185 Series "B"

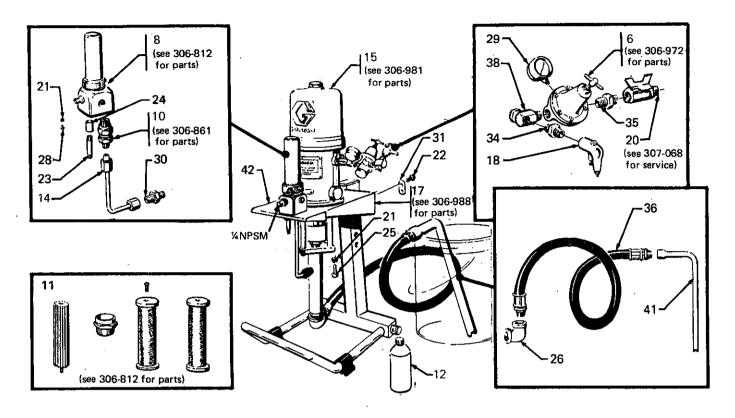

30:1 PRESIDENT HYDRA-SPRAY (SIPHON CART)

Model 226-238 Series "D"

Model 206-448 Series "D" (Same as 226-238 less hose, swivel, gun and tip)

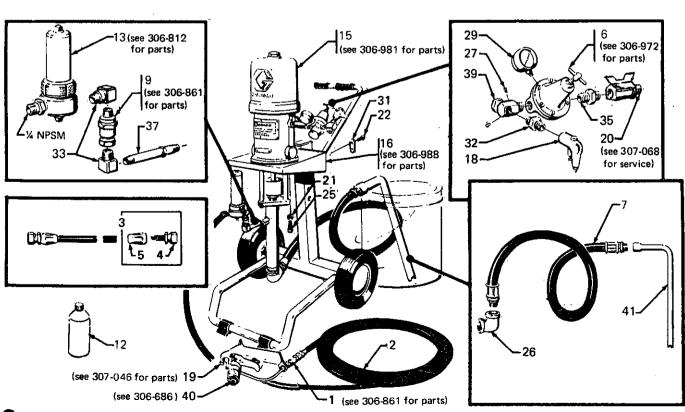

Model 226-185 Series "B" Includes items 6, 8, 10-12,14, 15, 17, 18, 20-26, 28-31 34-36, 38, 41, 42

Model 226-238 Series "D"

Includes items 1, 2, 6, 7, 9, 12, 13,15, 16, 18-20, 2 of item 21, 22, 25-27, 29, 31-33, 35, 37, 39-41

Model 206-448 Series "D"

Includes items 6, 7, 9, 12, 13, 15, 16, 18, 20, 2 of item 21, 22, 25-27, 29, 31-33, 35, 37, 39, 41

PARTS LIST

REF NO.	PART NO.	DESCRIPTION	QTY.		PART NO.	DESCRIPTION	QTY.
1	*204-940	SWIVEL (see 306-861 for parts)	1	18	208-627	BLOW GUN	1
2	*205-492	FLUID HOSE Assy, nylon w/grnd wire, ¼ id, 25 ft., cpld ¼ npsm(f)		19	208-663	HYDRA-SPRAY GUN (see 307-046 for parts)	1
		swivel, replaceable part, item 3		20	208-630	BALL VALVE(see 307-068 for service	٠,
3	205-493	REUSEABLE COUPLING Assy.		21	100-016	LOCKWASHER, spring, ¼ screw	-,,
_		Includes items 4 and 5	2		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	size	6
4	205-494	STUD, ¼ npsm(f)	2	22	100-055	DRIVE SCREW	2
5	164-625	SLEEVE	2	23	100-124	NIPPLE, pipe, ¼ npt x 2½"	1
6	206-197	AIR REGULATOR (see 306-972	-	24	100-175	COUPLING, pipe, 1/4 npt	1
-		for parts)	1	25	100-270	CAPSCREW, hex hd, 1/4-20 x 5/8	2
7	206-297	HOSE, cpld, % npt(mbe), % id,	·	26	100-349	ELBOW, 90°, % npt(fbe)	1
		3½ ft.	1	27	100-403	PLUG, pipe, square head, 1/8 npt	2
8	206-482	FILTER (see 306-812 for parts)	1	28	100-609	SCREW, mach, rd hd, ¼-20 x 3/8	4
9	206-831	CHECK VALVE (see 306-861 for		29	101-180	GAUGE, air, 0-200 lb, 1/4 npt(m)	1
		parts)	1	30	101-958	MALE CONNECTOR, 3/8 od tube	
10	206-835	CHECK VALVE (see 306-861		-		x 3/8 npt (m)	1
		for parts)	1	31	150-707	SERIAL PLATE	1
11	206-979	FILTER CONVERSION KIT (see		32	151-519	NIPPLE, reducing, 1/4 to 1/8 npt	1
		306-812 for parts)	1	33	155-699	ELBOW, 90°, 3/8 npt (m x f)	2
12	206-994	THROAT SEAL LUBRICANT,		34	156-971	NIPPLE, pipe, short, ¼ npt	1
		1 pint	1	35	159-239	NIPPLE, reducing, 1/2 to 3/8 npt	1
13	207-277	FILTER (see 306-812 for parts)	1	36	160-049	HOSE, cpld, % npt(mbe), % id, 6 ft.	1
14	207-701	RISER TUBE	1	37	160-790	NIPPLE, adapter, 3/8 npt; 3 - 5/8" lg	1
15	207-707	30:1 PRESIDENT PUMP (sée 306-		38	161-262	MANIFOLD, $\frac{1}{2}$ npt(m) x $\frac{1}{2}$ npt(f)	
		981 for parts)	1			swivel, ¼ npt hole tapped in body	1
16	208-210	UNIVERSAL MOUNTING STAND,		39	162-376	MANIFOLD, ½ npt(m x f), 900	
		portable (see 306-988 for parts)	1			swivel, 3 holes (1/8 npt) in body	1
17	208-211	UNIVERSAL MOUNTING STAND,	-	40	•163-???	SPRAY TIP, std. (see 306-686)	1
		stationary (see 306-988 for parts)	1	41	165-767	SUCTION TUBE, 3/8 npt, 18"	1
		, , , , , , , , , , , , , , , , , , ,		42	169-558	PLATE, adapter	1

NOTE: 306 & 307 Numbers in description refer to separate instruction manuals.

* SUGGESTED REPLACEMENT PARTS

Order parts by number and name. Also give series letter and model number for which parts are ordered. Call or write your Graco distributor, nearest Graco factory branch or service depot for parts or service.

SERVICE INFORMATION

Listed below by the assembly changed are OLD and NEW parts.

ASSEMBLY	PART	REF	PART	NAME
CHANGED	DESIGNATION	NO.	NO.	
226-238	OLD	19	208-327	Spray Gun
FINAL_Assy	NEW		208-663	Spray Gun
ALL	OLD	20	207-919	Ball Valve
FINAL Assy	NEW		208-630	Ball Valve

INTERCHANGEABILITY NOTE: NEW parts replace OLD parts listed directly above them.

ACCESSORIES

(Must be purchased separately)

Air Supply Hose

Air hose with static ground wire for connecting air supply to unit.


1/2 in. id; coupled 1/2 NPT(MBE).

Fluid Hoses, Static Grounded Nylon

Stainless Steel braid cover.


1/4 in. id; coupled 1/4 NPSM(F)

With Management of the Control of th		
PART N	IO. LEŅ	GTH
205-418	6	ft.
205-216	3 15	ft.
205-273	3 25	ft.
208-594	50	ft.




PART NO.	LENGTH	
207-880	15 ft.	
207-881	25 ft.	
207-882	50 ft.	

Fluid Hoses, Static Grounded Nylon

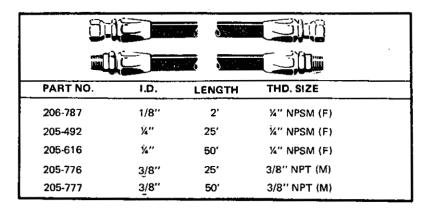


High Pressure Ball Valves


For two gun hookup with individual line control.

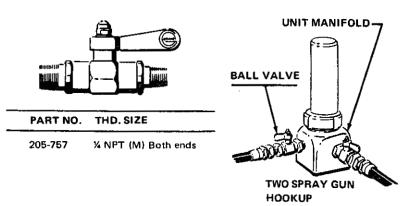

Air Strainer 204-999

Can be attached to air inlet manifold of unit. Has ½-in: swivel union for connection of air supply hose and a removable 60 mesh screen for filtering air to pump.

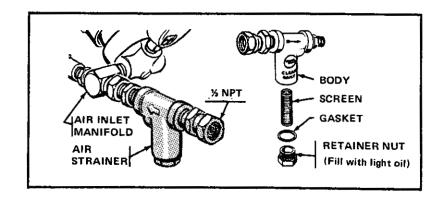

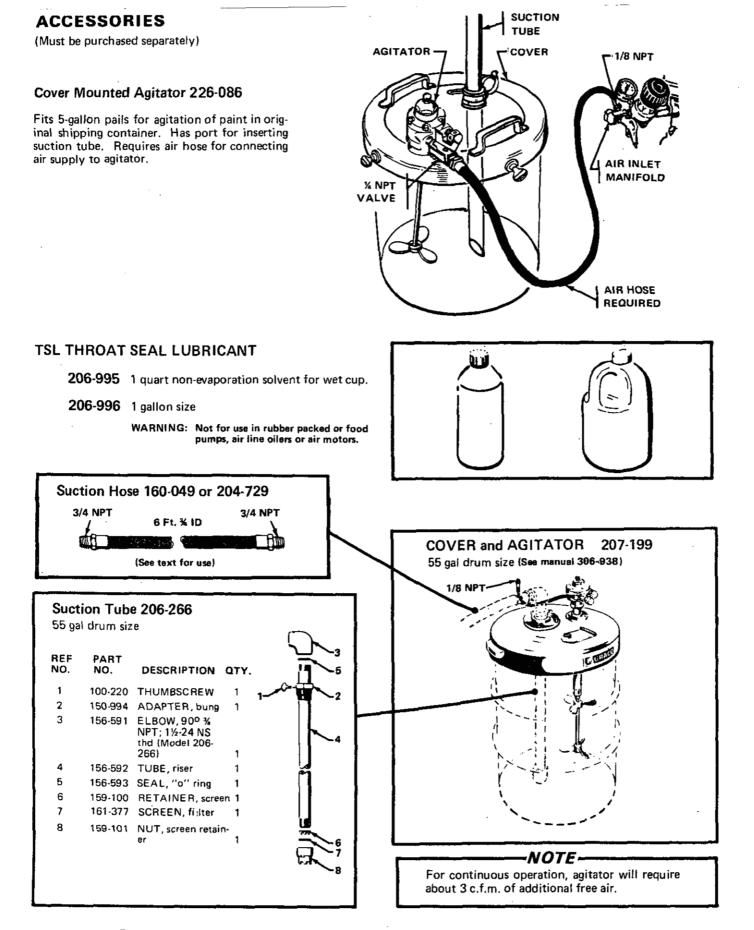

For agitation of paint and suction directly from original 55-gallon shipping container. 6-ft. suction hose 160-049 is for petroleum base solvent flushing and water base materials: 204-729 is for hydracarbon solvent flushing materials.

TECHNICAL DATA

Recommended air operating range Maximum recommended pump speed

> Air_consumption Maximum working pressure Air inlet size Fluid filter

40 to 120 psi (3 to 8 bar) 104 cycles/min; 1.67 gpm for continuous operation see below 3600 psi (248 bar) % NPT(F) 60 mesh screen

AIR CONSUMPTION

Pump Delivery	CFM at 70 psi (5 bar)	CFM at 100 psi (7 bar)
1.67 gpm	42	54
1.0 gpm	28	36
.25 gpm	10	14

THE GRACO WARRANTY

Graco Inc. warrants all equipment manufactured by it and bearing its name to be free from defects in material and workmanship under normal use and service. Scope of this warranty extends to the original purchaser for a period of 12 months from the date of purchase and is applicable only when the equipment is installed and operated in accordance with factory recommendations. The warranty does not extend to damage or wear caused by misuse, abrasion, corrosion, negligence, accident, faulty installation or tampering in a manner to impair its normal operation.

In the event the equipment supplied by Graco Inc. is found to be defective within the above-stated 12-month period, Graco Inc. will repair or replace free of charge such defective parts if rendered prepaid to the factory or to an authorized Graco service agency and is found by Graco Inc.'s inspection to be truly defective in workmanship or material. In the event said material is deemed defective in workmanship or material, it will be corrected and shipped transportation prepaid within the continental U.S. If inspection of any such equipment by Graco Inc. does not disclose any defect in workmanship or material, repairs will be made at a reasonable charge. Purchased assemblies which are incorporated into Graco equipment, carry the manufacturer's regular warranty.

The foregoing warranties are exclusive, and are in lieu of all other warranties (whether written, oral or implied) including warranty of merchantability in other respects than expressly set forth above and warranty of fitness for a particular purpose. Except as herein provided, every form of flability for direct or consequential damages or loss is expressly excluded and denied.

Factory Branches:

ATLANTA, CHICAGO(Broadview), CLEVELAND, DALLAS, DETROIT(Southfield), FT. LAUDERDALE, HOUSTON, LOS ANGELES, PHILADELPHIA (Levittown), ST. LOUIS (Maryland Heights), SOUTH SAN FRANCISCO, WEST CALDWELL (N.J.)

Subsidiary and

CANADA: ARGENTINA: BRAZIL: VENEZUELA; ENGLAND: FRANCE: GER-

Affiliate Companies: MANY; ITALY; SWITZERLAND; SWEDEN; HONG KONG; JAPAN

GRACO INC. P.O. BOX 1441 Minneapolis, MN 55440

307-051 May, 1971 Revised Apr., 1974 PRINTED U.S.A