


Step. 5

Cable connection (Back of computer)

1. Connect the other end of the cables that came with the MiniView™ SE KVM switch to your computer.
2. Once complete, turn the USB KVMP switch on.
3. Then turn on the power to the connected computers.

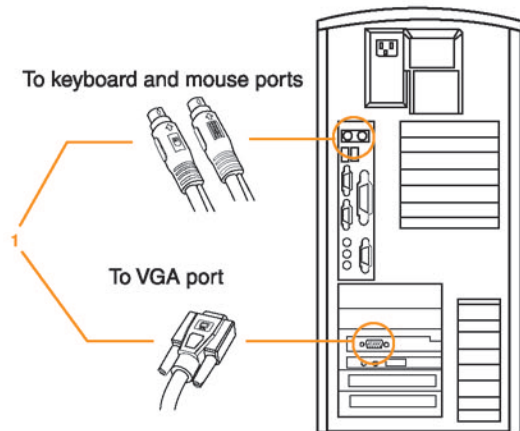


Hot Key Summary

Combination	Action	Model
[ctr]+[ctr]	To switch to another computer	GCS82B only
[alt]+[ctr]+[shft]+[1 or 2 or 3 or 4]+[Enter]	To switch to another computer	GCS84B only
[L-shft]+[R-shft]	To activate auto scan	GCS82B only
[alt]+[ctr]+[Shft]+[0]+[Enter]	To activate auto scan	GCS84B only
[spacebar]	To end auto scan	both
[alt]+[ctr]+[shft]+[0]+[Enter]	Last/next mode	GCS84B only
[L-shft]	Switch to previous computer	GCS84B only
[spacebar]	To end last/next mode	GCS84B only


Congratulations!

Product installation is now complete!

If you have any further question on MiniView™ SE, please refer to manual for detailed information on product installation and specification.

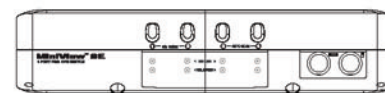

2/4 Port Desktop KVM Switch

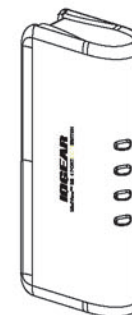

MiniView™ SE 2/4 Port Desktop KVM Switch


Quick Start Guide (GCS82B/GCS84B)



Step. 1

Introduction (Front)


1. CPU port indicator/selection buttons
2. On-line LED indicators
3. Selected LED indicator
4. Keyboard and mouse console ports
5. Pressing these 2 buttons will simultaneously invoke Auto Scan mode.
6. Pressing these 2 buttons will simultaneously reset the KVM.

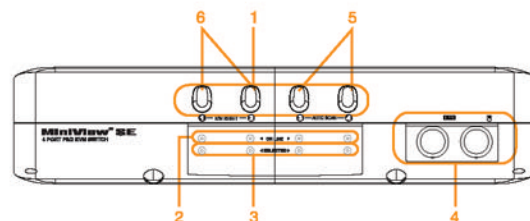

Step. 2

Introduction (Back)

1. Port for power adapter
2. VGA console port for your monitor
3. Keyboard and mouse ports to connect your computer via our premium bonded KVM cables
4. VGA ports to connect to your computer VIA our premium bonded USB KVM cables

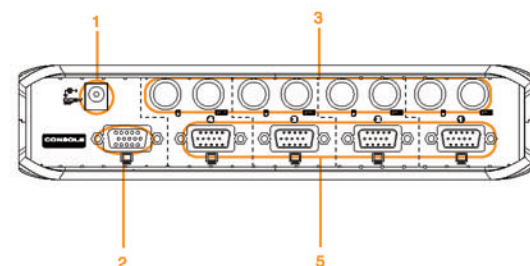


Step. 3

Cable Connection (KVM Switch: Console section)

* Before you begin, please make sure that the power to all devices has been turned off.


1. Plug your Mouse, Keyboard and Monitor into the console area on the KVM.
2. Plug the power adapter into the power adapter port. (optional)

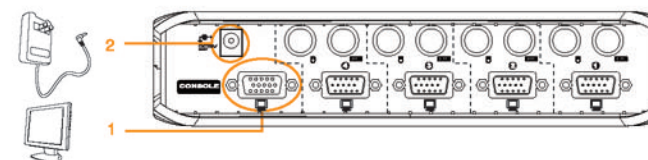

Step. 4

Cable connection (KVM Switch: Computer section)

1. Connect the cables that came with the MiniView™ SE KVM switch to the KVM switch's CPU ports.

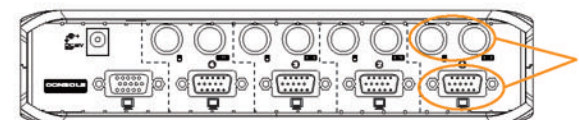

MiniView™ SE 2/4 Port Desktop KVM Switch

(GCS82B/GCS84B Quick Start Guide)

IOGEAR
23 Hubble
Irvine, CA 92618

866-9-IOGEAR
949.453.8782 (Outside of U.S.)

Web-site: www.iogear.com
E-mail: support@iogear.com

Entire contents copyright © 2002 IOGEAR
All rights reserved. Reproduction in whole or in part without permission is prohibited. MiniView™ is a trademark of IOGEAR. All other trade marks are the property of their respective owners.
PKG-M0013/QS

