

CAR SEAT/ STROLLER INSTRUCTION MANUAL

Century[®]

DEDICATED TO QUALITY

**4-in-1
System**
Pro Sport™ Plus

Do not use this 4-in-1
System until you read and
understand these
instructions!

IMPORTANT INFORMATION

Thank you for selecting this 4-in-1 System Pro Sport Plus Car Seat/Stroller which has many uses:

- Infant car seat
- Carrier
- Car seat/Stroller
- Stroller

* Need Help?

If you need help with this product, **call toll-free 1-800-837-4044 from anywhere in the U.S. or Canada. Outside these areas please call 330-963-2800** 8:00 AM until 6:00 PM E.S.T. Monday through Friday.

Or write us at: Century Products Company
9600 Valley View Road
Macedonia, OH 44056-2096
Attention: Consumer Relations Department

Please have the following information available. See label on leg of stroller.

Date of Purchase: _____

Model Number: _____

Manufacture Date: _____

* Safety First Check List

- ✓ Read and understand instruction booklets for stroller and car seat before using.
- ✓ Use the SmartFit™ Adjustable Base provided with this product only with Century Assura™ Premiere or SmartFit™ Infant Car Seat.
- ✓ Never leave child unattended.
- ✓ Use with only one (1) child at a time.
- ✓ Do not use accessories other than those provided by Century.

NOTE: All warnings and instructions apply whether stroller is being used with or without napper bar.

* Weight & Height Limit

- Car Seat/Stroller Use:
 - Less than 9 kg. (20 lbs.)
 - Less than 60 cm. (27 inches)
- Stroller Use:
 - Up to 15.9 kg. (35 lbs.)
 - Up to 101 cm. (40 inches)

* No Tools Required for Assembly

**Save instruction manual
for future reference.**

Table of Contents

Page

- 1 Important Information
- 2 Stroller Warnings

* Car Seat/Stroller Assembly

- 3 Opening Stroller
- 3 Front Wheel Assembly
- 3 Lock Footrest
- 3 Rear Wheel Assembly

* Car Seat/Stroller Usage

- 4 To Attach Car Seat Adapter
- 4 To Attach Car Seat
- 4 To Remove Car Seat

* Stroller Usage

- 5 To Remove Car Seat Adapter
- 5 Canopy Positions
- 5 To Attach Napper Bar
- 5 Seat Back Positions
- 5 To Secure Child

* Special Information

- 6 Folding and Storing
- 6 Maintenance
 - Cleaning
 - Dented Wheels
- 7 Replacement Parts
- 8 Replacement Parts Order Form




⚠ WARNINGS

Never leave child unattended. Always keep child in view, even when sleeping.

- Children may become entangled in harness straps and suffocate, even when sleeping.
- Stroller may roll away, crash and seriously injure child, even with brakes engaged.



Avoid serious injury from falling or sliding out. Always use seat belt.

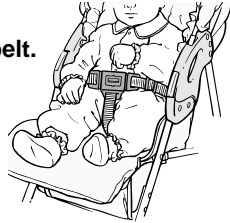

Avoid serious injury or strangulation, DO NOT place child in stroller seat when car seat adapter is attached. Remove adapter assembly BEFORE using stroller seat.

DO NOT pull or carry stroller on stairs or escalators with child in it because child could fall out and be injured.



DO NOT lift car seat/stroller unit by car seat handle. Handle may break.



DO NOT allow child to climb unassisted into stroller as stroller may fall over injuring child.

DO NOT allow children to play, hang or pull down on car seat or stroller handle.

- Stroller may tip over.



- Car seat handle may break.




Push stroller at normal walking speed only. Fast walking, jogging or running can cause loss of control and injure child.



DO NOT overload basket. Maximum basket weight is 10 lbs. (4.5 kg.). Stroller may become unstable and fall over injuring child.



DO NOT hang anything on handlebar or canopy as stroller could fall over and injure child.

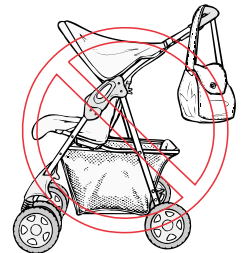


CAR SEAT/STROLLER ASSEMBLY




✳ Opening Stroller:

1 Stand stroller upright and pull tab up to release latch.

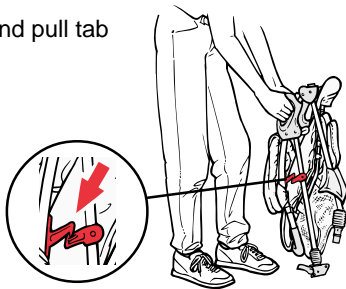


2 Spread handle and rear legs until both fold locks "click" into position.

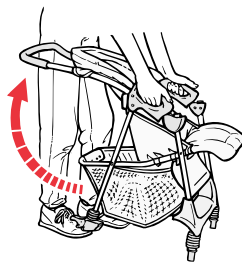


✳ Front Wheel Assembly:

1 Hold swivel wheel assembly upright (tab pointing down).

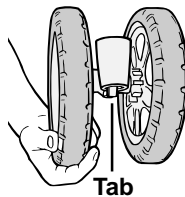

2 Tilt stroller slightly back and push wheel assembly up onto leg until it locks in place.


Repeat steps 1 & 2 for opposite leg.

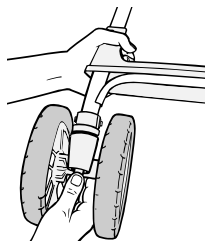

CAUTION: After wheel assembly is complete, pull on wheels to check that they are locked into place.

✳ Lock Footrest:


1 Push footrest down so that frame tube is centered between three (3) tabs on bottom of footrest and snaps into place.

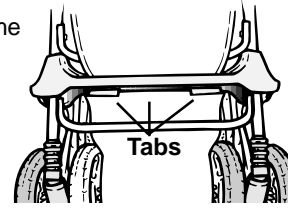

✳ Rear Wheel Assembly:


1 Remove axle protectors from ends of axle and discard.

2 Rotate brake lever to the unlocked position and slide wheel onto each end of axle rod with brake ribs facing in.

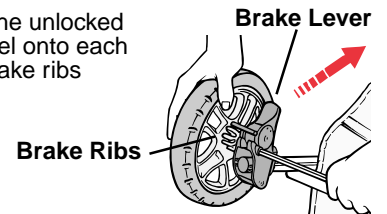

3 Attach wheel to axle:

- Snap wheel retainer onto grooved end of axle. Make sure large end of wheel retainer is towards wheel.
- Snap wheel retainer cap over wheel retainer.

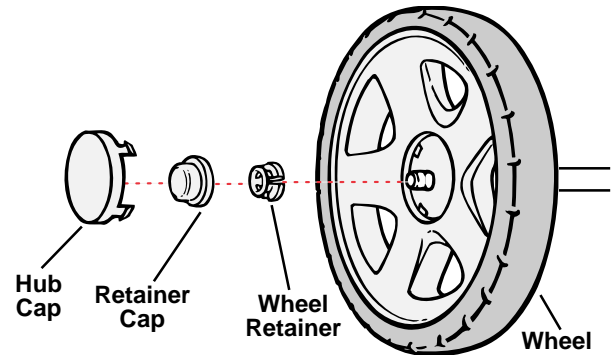

CAUTION:

- Failure to install retainer cap may cause wheels to come off of stroller.
- After wheel assembly is complete, pull on wheels to check that they are locked into place.


- Line up hub cap tabs with slots in wheel and snap hub cap into place.

⚠ WARNING

Prevent possible choking hazard: discard axle protectors and polybag which contained rear wheel parts.


✿ **To Attach Car Seat Adapter:**

1 Step down on brake lever to lock brakes.

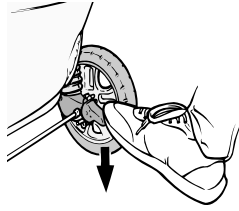


2 Release both levers on sides of seat back.


NOTE: Stroller seat back **MUST** be in reclined position to use car seat adapter.

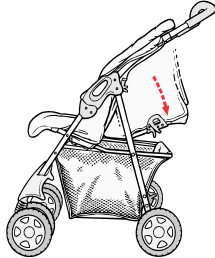

3 With release handle of car seat adapter facing away from stroller, align both sides of adapter bracket with top of stroller handle grip buttons.

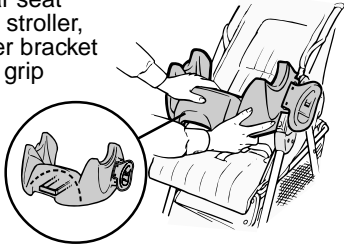

4 Rotate adapter bracket into handle grip opening and snap into place.

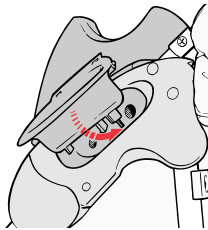


Repeat for opposite side.


Pull on adapter to be sure adapter is locked.

✿ **To Attach Car Seat:**

1 Step down on brake lever to lock brakes.

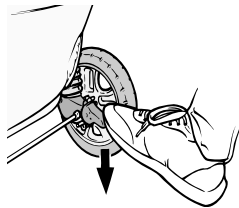


2 With car seat facing stroller handle and stroller canopy in closed position, place round car seat handle hubs into curved slots of car seat adapter. Both sides must "click" into position.

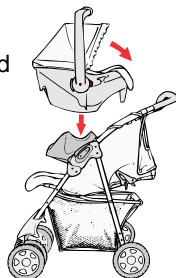

✿ **To Attach Car Seat continued**

3 Push in red button on each handle hub and rotate handle back until it "clicks" and locks just behind car seat.

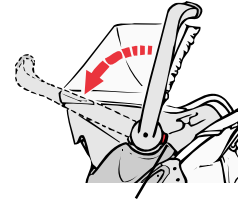

Red Button

4 Pull up on both handle hubs to be sure car seat is locked in car seat adapters.



NOTE: Car seat comes with a level indicator which is used for vehicle installation only.


! WARNING

Avoid serious injuries from falls. Be sure:


- Harness straps are used to restrain child.
- Car seat handle is in locked carrying position when lifting or carrying child.
- Car seat is locked into adapter before each use.
- Stroller is fully set up and locked before using.
- Brakes are locked when attaching and removing car seat from stroller frame.

✿ **To Remove Car Seat From Stroller:**

1 Step down on brake lever to lock brakes.

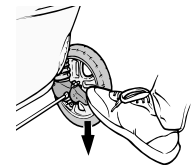


2 Push red buttons on car seat handle and rotate handle up until it "clicks" into the **locked** carrying position (upright). Do not lift car seat from car seat adapter until you have checked that handle is locked.

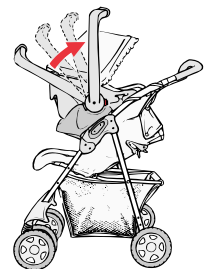

3 Pull release lever and lift car seat out of car seat adapter.

Release Lever

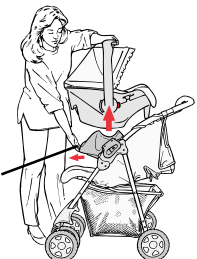


STROLLER USAGE


✿ To Remove Car Seat Adapter:

! WARNING
STRANGULATION HAZARD! Remove car seat adapter **BEFORE** using as a stroller seat.

1 Squeeze tab in adapter bracket to unlock bracket.

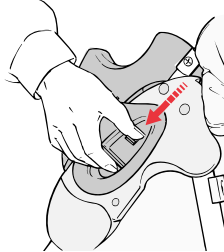

2 Pull adapter bracket out of handle grip opening.

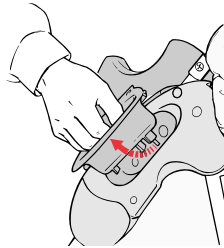


Repeat for opposite side.

3 Lift car seat adapter away from stroller frame.


Store car seat adapter for future use.

✿ Canopy Positions:

1 Canopy has three (3) positions:

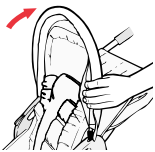

Closed

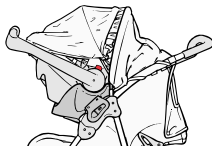

Halfway Opened
(for use with car seat)




Fully Opened
(for use as stroller only)

! WARNING

Prevent serious injuries:

• Make sure child is clear of any moving parts when adjusting stroller.

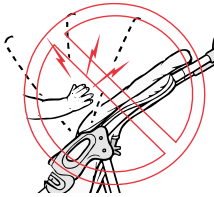


• DO NOT place parcels on top of canopy.




✿ To Attach Napper Bar:

(Stroller can be used with or without Napper Bar.)


1 Align napper bar (flat side down) with slots in lower part of handle bracket.

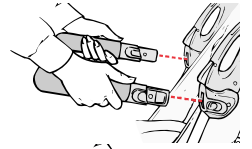

2 Push napper bar into slots. Pull napper bar to be sure it is locked.

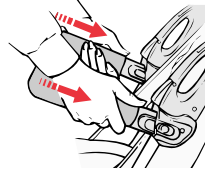


3 To remove: push buttons on fold lock and pull napper bar out

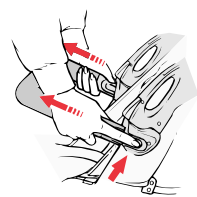


✿ Seat Back Positions:

- Seat back has two (2) positions:
 - Upright
 - Semi-reclined

1 For upright position: Lift seat back forward until seat back pins hook into seat back latches.

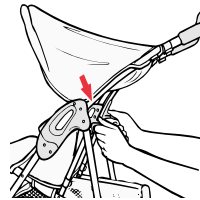

CAUTION: Be sure seat back is latched onto seat back pins by pushing down on seat back.

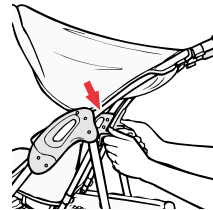

2 For Semi-reclined position: Squeeze both levers on sides of seat back and pull seat back down.

✿ To Secure Child:


! WARNING

Avoid serious injury from falling or sliding out:


- Always use seat belt to restrain child, even when sleeping.
- To prevent child from standing or sliding out of stroller, be sure waist strap is always **SNUG** and on child.
- Periodically check waist strap to be sure it is snug around child's waist.

1 Secure child with harness system.

- Pull waist straps around child's waist and place crotch strap between child's legs.
- Snap both buckle tongues into buckle on crotch strap.
- Pull on waist straps to be sure they are buckled and snug.

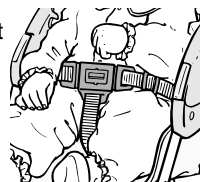

2 Adjust length of waist straps by loosening or tightening as shown. Double check to make sure strap does not slip out of buckle tongues.

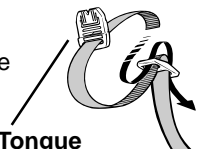


Buckle Tongue

SPECIAL INFORMATION


* Folding and Storing:

- 1 Step down on brake lever to lock brakes.

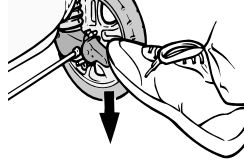


- 2 Remove car seat from stroller frame (see page 4).

NOTE: Car seat adapter may remain on stroller when folding.

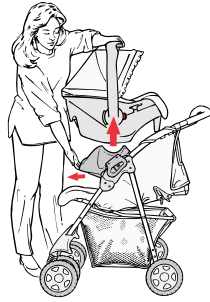


- 3 Place seat back in its most reclined position.

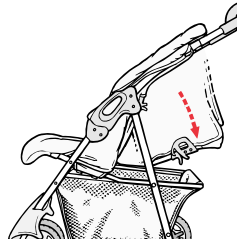


- 4 Release fold locks on each side by grasping handle grips and pressing on both buttons.

NOTE: This can be done with the napper bar attached.

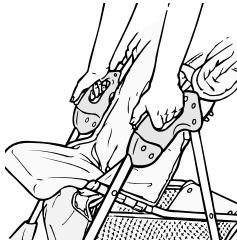


- 5 Continue pushing buttons and lift handle to fold stroller.

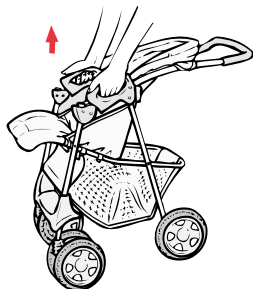


* Folding and Storing continued:

IMPORTANT:


- When folding stroller, turn stroller front wheels to straddle frame.

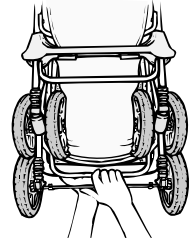

- **DO NOT** allow front wheels to rest on frame. Doing so will cause wheels to warp and they will not roll correctly.

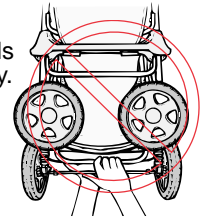

- 6 Engage latch on side of stroller to retain stroller in folded position.

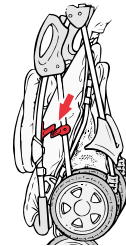

MAINTENANCE

Cleaning:

- Wipe fabric and frame with damp cloth and mild soap. **DO NOT USE** abrasives, solvents, strong detergents, or household cleaners; they can weaken plastic.
- **DO NOT** machine wash or dry seat pads that have boards in them.
- Comfort pad is removable and machine washable. Machine wash in cold water, machine dry on cool setting to prevent shrinkage. **DO NOT** wash with other clothes.
- When replacing comfort pad, make sure harness straps are threaded correctly through slots in comfort pad.
- Loop front of comfort pad over leg rest and fasten tabs.

! WARNING










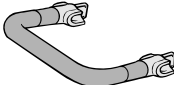

To avoid serious injury to child, periodically check anchoring straps beneath seat pad to ensure they are secured to frame.

* Dented Wheels:

Sometimes wheels become “dented” from shipment or normal use. You may try the following procedure for repairing the dented wheel before calling our Consumer Relations Department.

- Blow warm air from hair dryer over dented area for 1 to 3 minutes.

REPLACEMENT PARTS

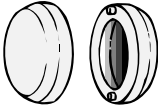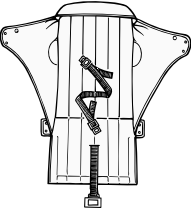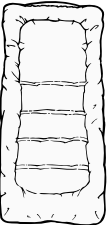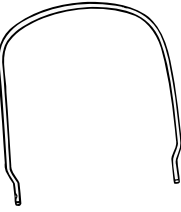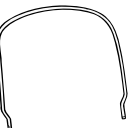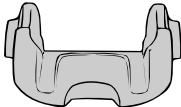PARTS LIST	PRICE	PART	
A. Front Wheel Assembly 2-Preassembled Wheels (11-65X)	\$ 7.50	A	
B. Rear Wheel Kit 1-Wheel, Wheel Retainer Clip & Retainer Cap (11-65X)	4.95	B	
C. Hub Cap Set (2) (11-65X)	2.75	C	
D. Seat Pad (11-65X)	13.00	D	
E. Comfort Pad (11-65X)	9.50	E	
F. Canopy Pad (11-65X)	6.50	F	
G. Canopy Frame (11-65X)	2.65	G	
H. Car Seat Adapter with Brackets (11-65X)	6.95	H	
I. Mesh Basket (11-65X)	7.50	I	
J. Napper Bar (11-652 ONLY)	4.50	J	
K. Instructions & Parts Order Form	FREE	K	

NOTE: Prices Subject To Change

Add-On Chart
\$5.00 = Canada

Shipping & Handling Chart
 \$.01 to \$5.00 = \$4.00
 \$ 5.01 to \$50.00 = \$5.00
 \$50.01 to \$200.00 = 10% of Order Total
 \$200.01 and over = 5% of Order Total



REPLACEMENT PARTS ORDER FORM

Please fill out and return this form to address shown on back of page.

- A. Front Wheel Assembly \$ _____
- B. Rear Wheel Kit \$ _____
- C. Hub Cap Set \$ _____
- D. Seat Pad \$ _____
- E. Comfort Pad \$ _____
- F. Canopy Pad \$ _____
- G. Canopy Frame \$ _____
- H. Car Seat Adapter with Brackets \$ _____
- I. Mesh Basket \$ _____
- J. Napper Bar \$ _____
- K. Instructions & Parts Form FREE

Subtotal Amount \$ _____
 Shipping & Handling (see chart page 7) \$ _____
 Outside USA (see add-on chart page 7) \$ _____
 Total Amount of Order \$ _____

**** IMPORTANT ****

We must have this information to process your order. See label on right rear leg of stroller.

Model Number: _____

Manufacturer Date: _____

Charge to credit card Visa MasterCard

Card Number: _____

Expiration Date: _____

Cardholder's Name: _____

Check Enclosed

Please make checks payable in U.S. currency to:
Century Products Company

SHIP TO:

Customer Name: _____

Street Address: _____

City, State, Zip: _____

Area Code: _____ Telephone Number: _____

**Send order with check, money order, or charge card number,
in an envelope to:**

**Century Products Company
9600 Valley View Road
Macedonia, OH 44056-2096
Attention: Consumer Relations Department**



You put more than your trust in us.™