Tanaka.

Parts Catalog

Brush Cutter

Model: TBC-205

DPL-BC205-HST 03-18-96

TBC-205


OPTIONS AND ACCESSORIES

NYLON LINE



746156 .095, Box, 50 ft. 746157 .105, Box, 50 ft. 746160 .095, 1/2 lb. Box, 143 ft. 746161 .105, 1/2 lb. Box, 110 ft 746165 .095, 1 lb. Box, 285 ft. 746166 .105, 1 lb. Box, 235 ft. 746169 .095, 3 lb. spool, 855 ft. 746170 .105, 3 lb. spool, 705 ft. 746173 .095, 5 lb. spool, 1425 ft. 746174 .105, 5 lb. spool, 1175 ft.

SHOULDER STRAPS

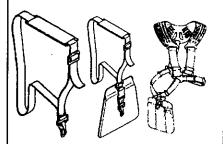

PSS-175 SS-250* SS-400*

* Requires 355-37302-900

SEMI-AUTO HEAD



746153 PNH-180

Parts	List
ET-1201	Body
ET-1206	Cap
ET-1225	Adapter
ET-1205	Spool
ET-1207	Eyelet
ET-1208	Spring
ET-1209	Bump Disk

TH-96 "Brain Head" can be used on this unit

BLADES



746101 Weed Blade, 9"X4T 746103 Weed Blade, 9"X48T 746104 Saw Blade, 9"X80T 746192 Carbide Blade, 9"X36T


ALUMINUM MANUAL HEAD



PCH-100 (746180)

PCH-300 (746190)

PERFECT MIX® 2-Cycle Engine Oil

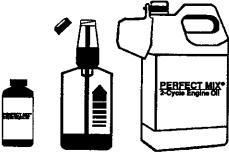

700109 2.8 oz. Bottle, 1 Gallon Size (24*) 700108 16 oz. Self-measuring Bottle (24*) 700110 1 Gallon Jug Commercial Size (6*) * Case Quantity

MANUALS / CATALOGS

970-33901-201 DPL-BC205-HST WSM-TBC

Owner's Manual **Parts Catalog** Service Manual

SPECIAL TOOLS

006-29326-000 009-29323-500 015-29338-000

Flywheel Remover Piston Pin Remover Gear Shaft Remover 016-29338-000 **Pinion Remover**

037-29376-000 001-29000-000

Clutch Remover Tachometer 070-2000W-500 Pressure Tester 070-2000W-501 Carb. Tool Kit



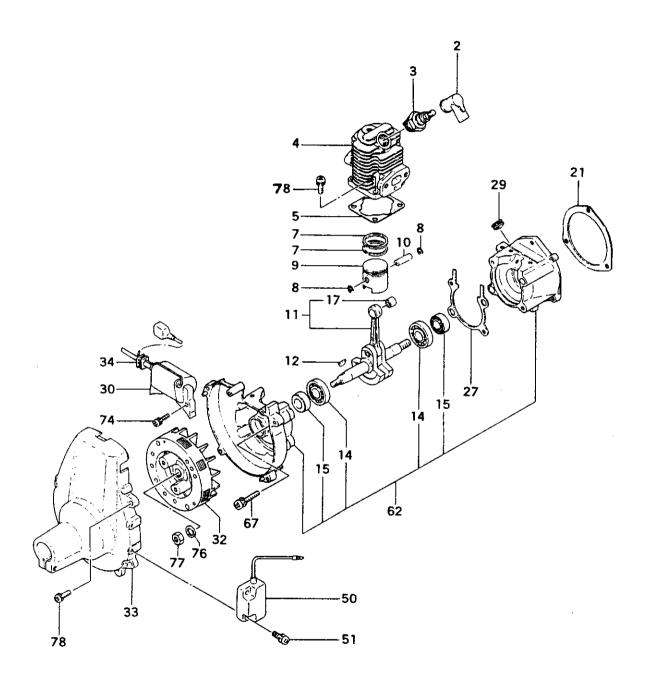









FIG.1 ENGINE



	TDO-203 PARTS LISTING									
REF.		PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS			
2		CAP,SPARK PLUG,ASS'Y	1		С					
3	018-01805-200	PLUG,SPARK	1		В					
4	002-0602K-801	CYLINDER	1		D					
5	017-06100-200	GASKET,CYLINDER	1		C					
7	041-06100-200	RING,PISTON	2		C					
8	039-06100-200	CIRCLIP, PISTON PIN	2		Α					
		PISTON	1		D					
10	037-06100-200	PIN,PISTON	1		D					
11	046-0605A-800	CRANKSHAFT	1		D					
	i	KEY,WOODRUFF,3X13X4.5	1		C					
	i	BEARING,BALL,#6001	1		В					
15	999-66122-240	SEAL,OIL,12227	2		Α					
21	810-06000-201	GASKET,RECOIL STARTER	1		D					
27	090-06000-202	GASKET,CRANKCASE	1		C					
29	203-06000-200	GROMMET,PRIMARY CORD	1		C					
1	1	COIL,IGNITION	1		C					
i	155-21702-800	ROTOR,MAGNETO	1		D					
33	112-0608A-901	CASE,FAN	1		D	į				
34	203-0604A-202	GROMMET	1		С					
50	159-21401-870	IGNITOR,TTI-ID	1		В					
51	994-14040-141	SCREW,4X14/S	2		D					
62	072-0605A-900	CRANKCASE,ASS'Y	1		D					
67	994-14050-301	SCREW,5X30/S	4		D					
74	994-14040-181	SCREW,S,4X18	2		D					
76	065-00000-200	WASHER,FLYWHEEL	1		D					
77	327-00201-201	NUT,L.H,7	1		D					
78	994-14050-161	SCREW,5X16/S	8		С					
		1		- 1	ľ					

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.2 ENGINE SYSTEM

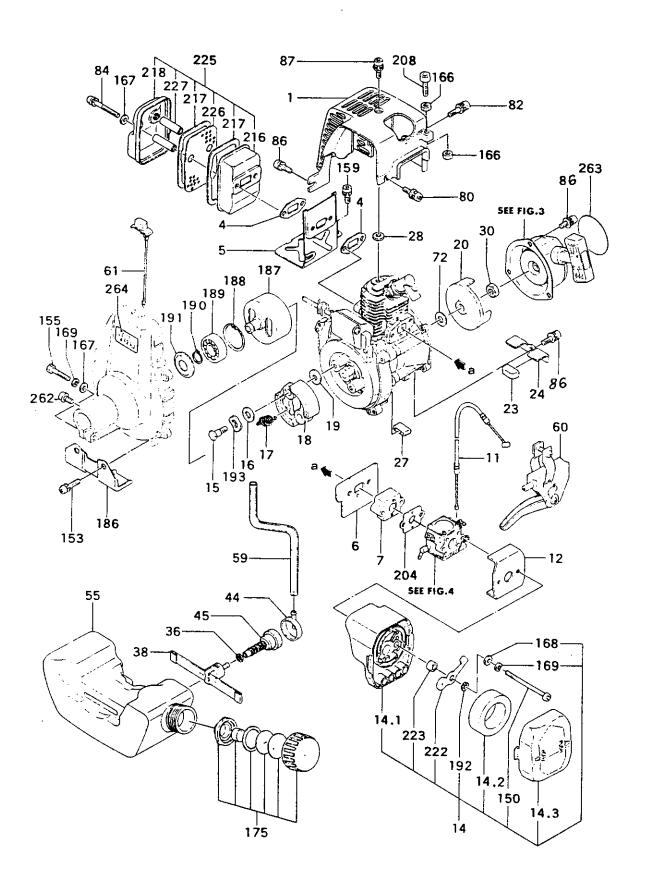

REF.	PART NO.	PART DESCRIPTION				SERIAL NO.	REMARKS
		PROTECTOR,BLACK	1	Ť	D	<u></u>	I IEIWAI IIO
4	737-06100-21	GASKET,MUFFLER	2		В		
1 1	133-0604A-203		1		E		
		GASKET,INLET MANIFOLD	1		Ε		
7		INSULATOR, CARBURETOR	1		D		
11		WIRE,THROTTLE	1		в		
		·					·
12	436-0608A-200	BASE,CLEANER	1		D		
14	410-0608A-902	CLEANER,AIR ASS'Y	1		D		
14-1	423-0608A-201	BODY,CLEANER	1		D		
14-2	446-0602W - 200	ELEMENT, CLEANER	1		Α		
14-3	424-0137R-200	COVER,AIR CLEANER	1	Ιİ	В		
15	357-00601-200	BOLT,STEP,CLUTCH	2		C		
16	358-02103-200	WASHER,CLUTCH A	2		A	~B003000	
16	348-0602R-200	WASHER,CLUTCH A	2		В	B003001~	
17	342-0605A-201	SPRING,CLUTCH	2		C		
18	290-00501-802	SHOE,CLUTCH	2		Α		
19	359-02103-200	WASHER,CLUTCH,B	2		в		
20	798-06094-200	PULLEY,STARTER	1		D		
	655-06100-200		2		Α		
1 1	653-06000-200	•	1				
1 1	655-01551-200		2	1			
1 1	102-01300-200	INSULATOR	1		D		
1 1		NUT,8/L.H	1				
36	680-04019-210	CLIP,7	1		В		
	075 00004 000	EU 750 EUE					
1 1	675-0608A-900	i i			A		
1 1		CAP,RUBBER PIPE]		A		
1 1	678-00601-201]		A		
1 1		TANK			C		
1 1		PIPE,FUEL,3X5X130			В		
60	67 U-UOUOA-9U3	LEVER,THROTTLE ASS'Y			D		
61	170 - 0604A-800	BLITTON STOP					
		WASHER, CLUTCH B					·
1 !		SCREW,4X10					
	İ	SCREW,5X10/PS			D		
		SCREW,5X45/S	2				1
		SCREW,WS,5X10	2				
		55.1211,110,07.10	-				
86	994-16050-121	SCREW,5X12/PS	4		Ы		
1 [SCREW,5X14/WS	1				
					1		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

• • • • • • • • • • • • • • • • • • • •	done z con.	1 BU-205 F	A	7/	5	LISTING	
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
	994-15050-651		2		D		
153	994-14050-101	SCREW,S,5X10	4	İ	D		
155	994-25050-201	BOLT,5X20/PS	1		D		
166	991-01060-021	NUT,6	2		D		
167	992-00050-011	WASHER,SMALL,5	3	ĺ	С		
168	992-01050-011	WASHER,5	2		Α		
	992-10050-012	WASHER,S,5	3		Α		
175	595-0650A-90	CAP,TANK	1		Α		
		STAND	1		D		
	†	SHAFT,CLUTCH ASS'Y	1		В		
		RING,STOP,C-32 IN	1		C		
189	999-61620-101	BEARING,BALL #6201ZZ	1		C		
		RING,STOP,C-12 EX	1		A		
	801-0604A-201		1		D		
l .		O-RING,P7	1		C		
i		WASHER,8	2		C	~B003000	
	Į.	WASHER,8	2		C	B003001~	
204	402-00601-20	GASKET,CARBURETOR	1		A		
	00404000		ا ا				
1	ř.	ADJUSTER, THROTTLE WIRE	1		C		
		BODY,MUFFLER,A	1	ļ	D		
		GASKET, MUFFLER COUPLING	2		В		
		BODY,MUFFLER,B	1		D		
	528-0602W-202	1	1		D		
223	470-0602N-200	COLLAR,CLEANER	2		C		
225	706-0608A-910	MULEE ED ACOV					
	•	PARTITION, MUFFLER	1 1		D D		
		COLLAR,MUFFLER	2				
		SCREW,5X14/WS	1		ם		
		DECAL	[[]		E		
	906-32124-200	DECAL			D		
-• .					7		
E		,	, 1				

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.3 RECOIL STARTER


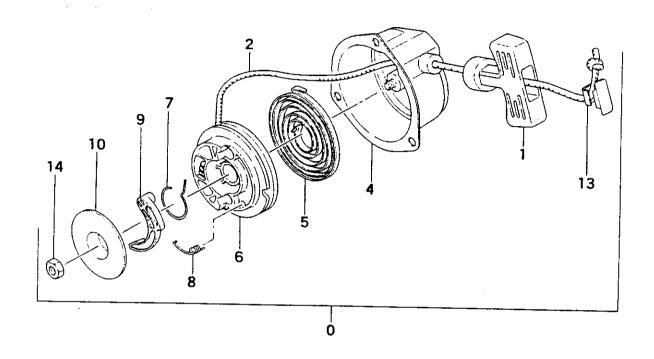


FIGURE 3

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
0	762-06092-901	STARTER, RECOIL ASS'Y	1		С		
1	785-06000-200	HANDLE,STARTER	1		D		
2	783-0162V-200	ROPE,STARTER,3.5X890	1		D		
4	772-0604A-800	BODY,RECOIL STARTER	1		D		• •
5	779-06000-200	SPRING,RECOIL	1		В	ŀ	
6	774-06000-210	PULLEY,STARTER	1		Ъ		
7	836-06000-200	SPRING, FRICTION	1		Ы		
8	832-01500-200	SPRING,RETURN	1	ĺ	c	ļ	
9	788-06000-210	PAWL,STARTER	1		D		
10	837-06092-200	PLATE, FRICTION	1	- 1	D		
13	815-06000-200	METAL,STARTER HANDLE	1		D		
14	991-01050-013	NUT,5	1		С		
					-		


FIG.4 CARBURETOR

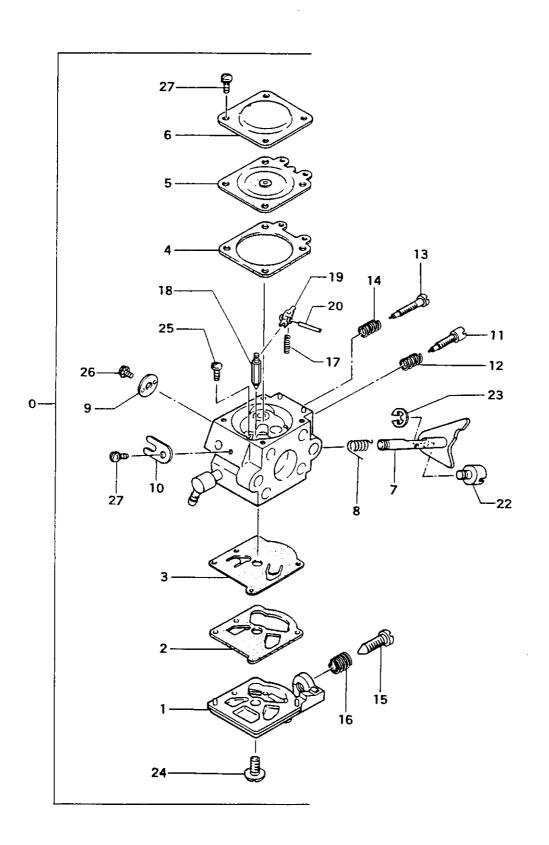

		100-203 F	~'		•	LIGITIAG	
REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO.	REMARKS
0	455-25009-900	CARBURETOR, ASS'Y	1		E		
1	575-25006-200	BODY,PUMP	1		D		
2	~~~	(1)(2)GASKET,PUMP	1		ם		(1) Carb. Repair Kit
3	~~~	(1)(2)DIAPHRAGM,PUMP	1		C		650-25001-910
4	~~~	(1)(2)GASKET,DIAPHRAGM	1		Α		
5	~~~	(1)(2)DIAPHRAGM,METERING	1	i	Α		(2) Carb. Gasket/Dia. Kit
							652-25001-910
6	476-25004-200	COVER, DIAPHRAGM	1		ם		
7	464-25006-800	SHAFT,THROTTLE	1		D		
8	486-25009-200	SPRING,THROTTLE	1		C		
9	488-25006-200	VALVE,THROTTLE	1		D		
10	557-25006-200	CLIP,THROTTLE SHAFT	1		D		
11	460-25006-200	SCREW,HIGH ADJUST	1		D		
1	485-25003-200	SPRING,ADJUST,HIGH	1		D		
1	461-25006-200	SCREW,ADJUST,LOW	1		D		
i		SPRING,ADJUST,LOW	1		P		
1	462-25006-200	SCREW,IDLE ADJUST	1		P		
	463-25006-200	SPRING,IDLE ADJUST	1		D		
17	477-25003-200	SPRING,VALVE	1		D		
1			П				
18	~~~	(1)VALVE,NEEDLE	1		C		
19	~~~	(1)HINGE,VALVE	1		디		
20		(1)PIN,FLOAT	1		D		
	539-25008-200	SWIVEL	1		C		
1	489-25008-200	RING,STOP	1		С		
24	514-25001-200	SCREW,SET	1		D		
		SCREW,SET,HINGE PIN	1		D		
	467-25003-200	SCREW,SHUTTER	1		C		
27	548-25012-200	SCREW,SET	5		D		
1	I	1	ıl				

^{(1) (2)} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.5 GEAR CASE

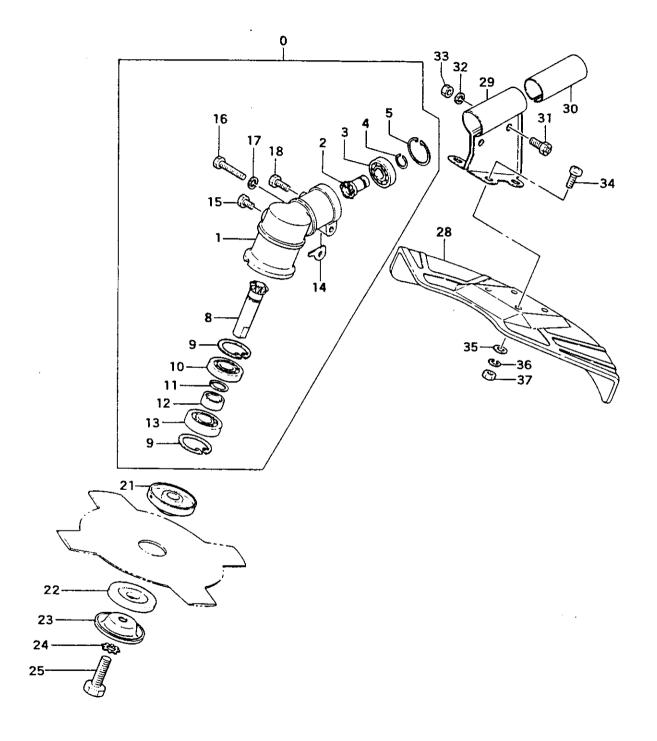

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
0	300-33904-900	CASE,GEAR,ASS'Y	1		С		
1	300-33904-202	CASE,GEAR	1		D		
2	302-33900-200	PINION	1		В		
3	999-61609-001	BEARING,BALL,609ZZ	1	Į	D		
4	993-52009-002	RING,STOP,S-9 EX	1		С		
5	993-51024-002	RING,STOP,C-28,IN	1		С		
	301-33900-200		1		В		
9		RING,STOP,IN,C-28	2		С		
	į.	BEARING,BALL,#6001	1		В		
1		RING,STOP,12	1		C		
		COLLAR	1	İ.,	D		
13	999-61600-103	BEARING,BALL,#6001D	1		Α		
14	324-33900-200	WASHER,GEAR CASE	4		D		
1		BOLT,PLUS,6X10	, 1		D		
1		BOLT,PLUS,5X25	1		С		
	[WASHER,S,5	1		A		
		BOLT,5X10	,		D		
		HOLDER, CUTTER	1		c		
		·					
22	311-33900-200	CAP,CUTTER HOLDER	1		С		
23	316-33410-200	PROTECTOR,BOLT	1		A		
24	992-29080-000	WASHER,TOOTHED LOCK,8	1		В		
25	312-33700-200	BOLT,8,L.H.,THREAD	1		В		
28	441-33700-220	GUARD,SAFETY	1		c		
29	442-33410-200	BRACKET,SAFETY GUARD	1		D		
	444 00000 000						
		SPACER,BRACKET	1		D		
31		BOLT,P,5X15	2		D		
32	992-10060-012		2		A		
		NUT,6	2		Α		
34	990-11050-121	SCREW,5X12	4		A		ļ
35	992-01050-011	WASHER,5	4		Α	:	1
36	992-10050-012	WASHER,S,5	8		A		
37	991-01050-011	NUT,5	6		A		· .
					- "		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.6 DRIVE SHAFT & HANDLE

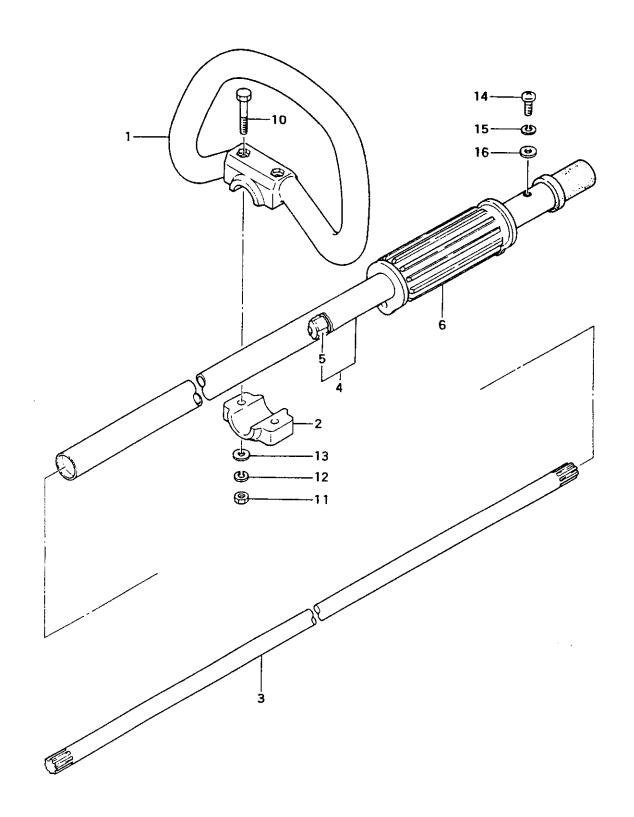

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	500-33900-210	HANDLE	1		D		
2	506-33900-200	BRACKET,HANDLE,A] 1		D		
3	343-33900-201	SHAFT,DRIVE	1		С		
4	341-33901-800	PIPE,DRIVE SHAFT	1		D		
5	347-33900-900	BUSHING,ASS'Y	1		D		
6	504-33900-200	GRIP,SHAFT	[[1]		۵		
10	990-21060-451	BOLT,6X45	2		D		
11	991-01060-011	NUT,6	2		Α		
12	992-10060-012	WASHER,S,6	2		Α		
13	992-01060-011	WASHER,6	2		Α		
14	990-11060-101	SCREW,6X10	1		D		
15	992-10060-012	WASHER,S,6	1		Α		
16	992-00060-011	WASHER,SMALL,6	1		С		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.7 TOOLS










FIGURE 7

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO.	REMARKS	_
1	808-20000-200	SPANNER,10X13	1		D			
2	829-20000-80	SPANNER,COMBI,13X19	1		lс			
3	801-20000-200	SPANNER,8X10	1		D	i		
4	752-33900-200	BAR,LOCKING	1		c			