

# COGNEX

## DataMan<sup>®</sup> 260 Series

### Quick Reference Guide



04/24/2017


Version: 5.7.0.218

# Precautions

Observe these precautions when installing the Cognex product, to reduce the risk of injury or equipment damage:

- This device requires the use of an LPS or NEC class 2 power supply (non-PoE device) or the use of a PoE Class 1 (PoE device).
- Do not connect or disconnect this device from the I/O module or 15-pin USB adapter cable while the I/O module or adapter cable is connected to a PC .
- To reduce the risk of damage or malfunction due to over-voltage, line noise, electrostatic discharge (ESD), power surges, or other irregularities in the power supply, route all cables and wires away from high-voltage power sources.
- Changes or modifications not expressly approved by the party responsible for regulatory compliance could void the user's authority to operate the equipment.
- Cable shielding can be degraded or cables can be damaged or wear out more quickly if a service loop or bend radius is tighter than 10X the cable diameter. The bend radius must begin at least six inches from the connector.
- This device should be used in accordance with the instructions in this manual.
- All specifications are for reference purpose only and may be changed without notice.

# Product Overview

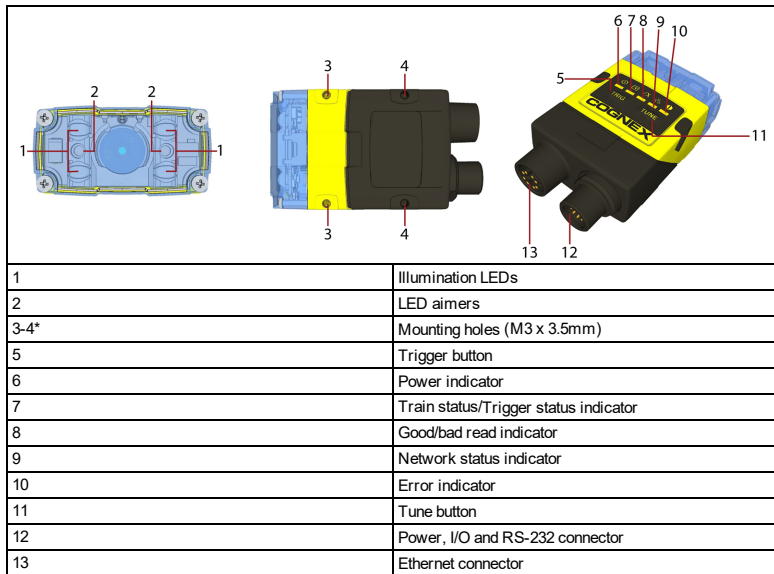





**Note:** \*Use only one set of mounting holes (either 3 OR 4) for mounting.

**Note:** The five status LEDs together also function as a peak meter using an orange light.

# DataMan 260 Accessories

## LENS OPTIONS, COVERS, ILLUMINATIONS AND FILTERS

6.2 mm lens kit	DM150-LENS-62	
IR 6.2 mm lens kit, 3 -position with IR LED	DMA-KIT-IR-62	
IR 16 mm lens kit	DMA-KIT-IR-16	
16 mm lens with extended optics mount (requires the use of an extended front cover and high-powered red LED)	DM260-LENS-16	
Liquid Lens Module (LLM) to be used with 6.2 mm lens or 16 mm lens	DMA-LLM-150-260	
ImageMax kit	DM260-KIT-16LL	
Clear lens cover*	DM150-CVR-CLR	
Clear lens cover, ESD safe*	DM150-CVR-ESD	
Polarized front cover*	DM260-LENS-62CVR-F***	
Extended lens cover, un-polarized** Extended lens cover, half-polarized ** Extended lens cover, fully polarized**	DM260-LENS-16CVR*** DM260-LENS-16CVR-P*** DM260-LENS-16CVR-F***	
C-mount adaptor, IP40	DM260-CMNT-00	
C-mount adaptor, IP65	DM260-CMNT-CVR	

Blue bandpass filter	DM150-BP470	
Red bandpass filter	DM150-BP635	
Red LED illumination*	DM150-LED-RED	
White LED illumination*	DM150-LED-WHT	
Blue LED illumination*	DM150-LED-BLU	
High Powered red LED illumination**	DM260-LED-RED-HP	











**Note:** \*Use with a 6.2 mm lens only!


\*\*Use with a 16 mm lens only!

\*\*\*ESD safe


## CABLES AND OTHER

Connection cable 24V, I/O, RS-232	CCBL-05-01 CCB-M12x12Fy-xx (y=S: straight / y=A: angled *, xx specifies length)	
Connection cable RS-232	CCB-M12xDB9Y-05	
Adapter cable, M12x12 to M8x4/M8x5, 0.5 m	DM260-ADAP-M12M8	
X-Coded to RJ45 Ethernet Cable	CCB-84901-2001-xx, where xx can be 02, 05, 10, 15 or 30, indicating length in meters	
Adapter cable, ETH, M12, X-CODED/A-CODED, 0.5 m	CCB-M12x8MS-XCAC	
Universal Mounting Bracket	DM100-UBRK-000	
Pivot Mounting Bracket	DM100-PIVOTM-00	
DataMan 362 to DataMan 262 adapter kit	DM-ADAP-PLT	

# Dimensional Drawings

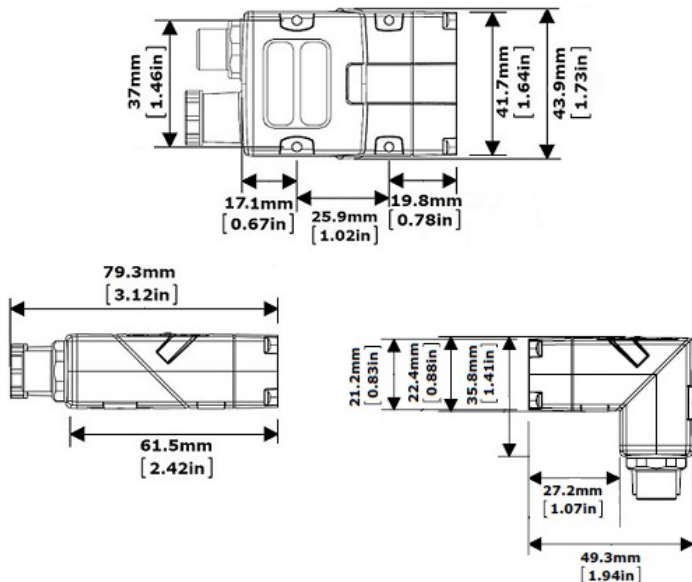


# Field of View and Reading Distances

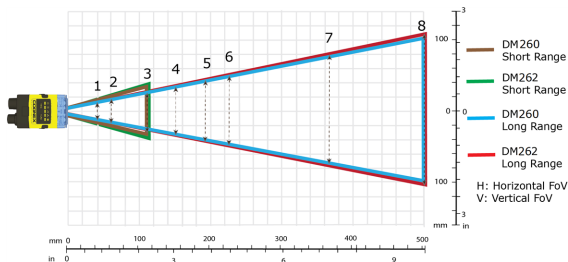

1	2	3	4
H:34 mm [1.3 in]	H:50 mm [1.9 in]	H:77 mm [3.0 in]	H:115 mm [4.5 in]
V:22 mm [0.8 in]	V:32 mm [1.25 in]	V:49 mm [1.9 in]	V:73 mm [2.8 in]
H:37 mm [1.45 in]	H:56 mm [2.2 in]	H:87 mm [3.4 in]	H:123 mm [4.8 in]
V:28 mm [1.1 in]	V:42 mm [1.65 in]	V:65 mm [2.5 in]	V:92 mm [3.6 in]
5	6	7	8
H:144 mm [5.6 in]	H:170 mm [6.7 in]	H:279 mm [10.9 in]	H:370 mm [14.5 in]
V:92 mm [3.6 in]	V:108 mm [4.25 in]	V:178 mm [7.0 in]	V:236 mm [9.2 in]
H:153 mm [6.0 in]	H:181 mm [7.1 in]	H:297 mm [11.7 in]	H:394 mm [15.5 in]
V:115 mm [4.5 in]	V:135 mm [5.3 in]	V:223 mm [8.7 in]	V:295 mm [11.6 in]

Device	Distances in mm/ 2D min. code 6.2 mm lens Short Range		Distances in mm/ 1D min. code 6.2 mm lens Long Range		Device	Distances in mm/ 2D min. code 6.2 mm lens Long Range		Distances in mm/ 1D min. code 6.2 mm lens Long Range	
DM260	40	4 MIL	40	2 MIL	DM260	150	12 MIL	150	6 MIL
	65	5 MIL	65	3 MIL		190	15 MIL	190	10 MIL
	105	10 MIL	105	6 MIL		225	18 MIL	225	10 MIL
DM262	40	3 MIL	40	2 MIL		375	30 MIL	375	15 MIL
	65	4 MIL	65	2 MIL		500	35 MIL	500	20 MIL
	105	7 MIL	105	5 MIL		1000	80 MIL	1000	35 MIL
DM262					DM262	150	12 MIL	150	5 MIL
						190	10 MIL	190	6 MIL
						225	15 MIL	225	6 MIL
						375	20 MIL	375	10 MIL
						500	25 MIL	500	15 MIL
						1000	50 MIL	1000	30 MIL

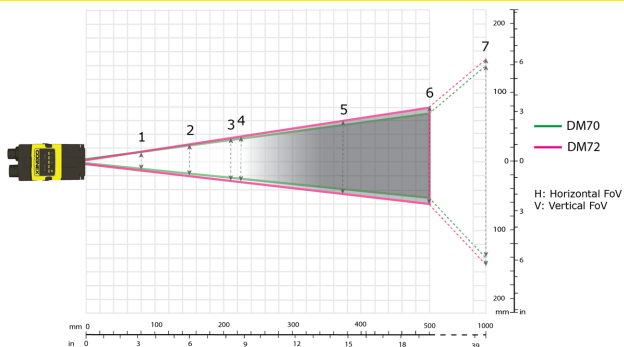

1	2	3	4	5	6	7
H: 22 mm [0.87 in]	H: 43 mm [1.7 in]	H: 54 mm [2.1 in]	H: 64 mm [2.5 in]	H: 106 mm [4.1 in]	H: 142 mm [5.6 in]	H: 283 mm [11 in]
V: 14 mm [0.55 in]	V: 27 mm [1.1 in]	V: 34 mm [1.3 in]	V: 41 mm [1.6 in]	V: 68 mm [2.7 in]	V: 90 mm [3.5 in]	V: 180 mm [7.1 in]
H: 24 mm [0.94 in]	H: 45 mm [1.8 in]	H: 58 mm [2.3 in]	H: 68 mm [2.7 in]	H: 113 mm [4.4 in]	H: 151 mm [5.9 in]	H: 301 mm [12 in]
V: 18 mm [0.71 in]	V: 34 mm [1.3 in]	V: 43 mm [1.7 in]	V: 51 mm [2.0 in]	V: 85 mm [3.3 in]	V: 113 mm [4.4 in]	V: 226 mm [8.9 in]

Device	Distances in mm/ 2D min. code 16 mm lens		Distances in mm/ 1D min. code 16 mm lens	
DM260	80	3 MIL	80	2 MIL
	150	5 MIL	150	3 MIL
	190	6 MIL	190	4 MIL
	225	7 MIL	225	4 MIL
	375	12 MIL	375	5 MIL
	500	15 MIL	500	10 MIL
DM262	1000	25 MIL	1000	15 MIL
	80	2 MIL	80	2 MIL
	150	3 MIL	150	2 MIL
	190	4 MIL	190	2 MIL
	225	4 MIL	225	3 MIL
	375	7 MIL	375	4 MIL
	500	10 MIL	500	6 MIL
	1000	20 MIL	1000	15 MIL



# Connecting the Reader


## Legend

1 = Mount the reader

2 = Connect the Ethernet cable

3 = Connect the breakout cable\*

\*Wire colors are included for reference

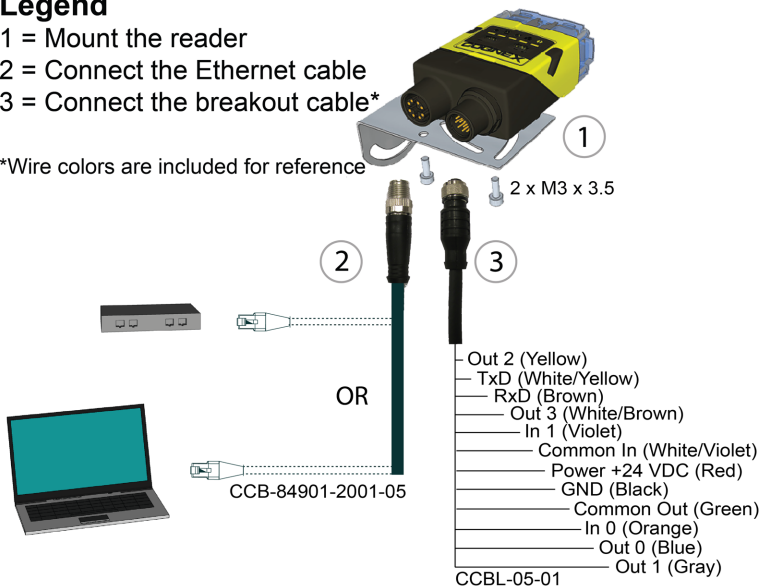

# Installation

Installation procedures and specifications are presented in detail in the *DataMan® 260 Reference Manual*, which is installed with the DataMan Setup Tool. From the Windows Start menu, select the following to access the manual: *All Programs > Cognex > DataMan Software vx.x.x > Documentation*.

---

**Note:**

- Cables are sold separately.
- If any of the standard components appear to be missing or damaged, immediately contact your Cognex Authorized Service Provider (ASP) or Cognex Technical Support.




**CAUTION:** All cable connectors are “keyed” to fit the connectors on the reader; do not force the connections or damage may occur.

---

## Mounting

Mounting the DataMan 260 at a slight angle (15°) can reduce reflections and improve reader performance.

Use the set of mounting holes on the rear part to mount the DataMan reader.

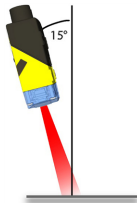

## Connect the Ethernet Cable

1. Connect the Ethernet cable's X-coded connector to the DataMan system's ENET connector.
2. Connect the Ethernet cable's RJ-45 connector to a switch/router or PC, as applicable.

## Connect the Breakout Cable



**Note:** Unused wires can be clipped short or tied back using a tie made of non-conductive material.

1. Verify that the 24VDC power supply being used is unplugged and not receiving power.
2. Attach the Breakout cable's +24VDC and GROUND to the corresponding terminals on the power supply.



**CAUTION:** Never connect voltages other than 24VDC. Always observe the polarity shown.

3. Attach the Breakout cable's M12 connector to the DataMan 260 reader's 24VDC connector.
4. Restore power to the 24VDC power supply and turn it on if necessary.

# Install Software and Documentation and Connect the Reader

Follow the steps below to connect your reader to power and network:

1. Connect the I/O+RS232+24V cable to your reader.
2. For a network connection, connect your reader through an Ethernet cable to your network.
3. Connect the cable to a 24V power supply.

To configure a DataMan 260 reader, the DataMan Setup Tool software must be installed on a networked PC. The DataMan Setup Tool is available from the DataMan support site: <http://www.cognex.com/support/dataman>.

1. After installing the software, connect the DataMan 260 Series reader to your PC.
2. Launch the DataMan Setup Tool and click **Refresh**.
3. Select your DataMan 260 reader from the list and click **Connect**.

# DataMan 260 Specifications

Weight	142 g		
Operating Temperature	0°C — +40°C (+32°F — +104°F)		
Storage Temperature	-10°C — +60°C (+14°F — +140°F)		
Maximum Humidity	<95% (non-condensing)		
Environmental	IP65		
Shock and Vibration	IEC 60068-2-27: 1000 shocks, semi-sinusoidal, 11g, 10ms IEC 60068-2-6: vibration test in each of the three main axis for 2 hours @ 10 Gs (10 to 500 Hz at 100m/s <sup>2</sup> / 15mm)		
LED Safety	IEC 62471: Exempt risk group, no further labeling is required.		
RS-232	Rx/D, Tx/D according to TIA/EIA-232-F		
Codes	1-D barcodes: Codabar, Code 39, Code 128, and Code 93, Code 25, Interleaved 2 of 5, Pharma, Postal, Code UPC/EAN/JAN, MSI 2-D barcodes: Data Matrix™ (IDMax and IDQuick: ECC 0, 50, 80, 100, 140, and 200) QR Code and microQR Code, RSS/CS, PDF 417, MicroPDF 417, AztecCode, DotCode, MaxiCode		
Discrete I/O operating Limits	HS Output 0, 1, 2, 3	I <sub>MAX</sub>	@ 24 VDC 50 mA
		R <sub>MAX</sub>	@ 12 VDC 150 Ω
			@ 24 VDC 470 Ω
	Input 0 (Trigger)	V <sub>IH</sub>	±15 — ±25 V
	Input 1	V <sub>IL</sub>	0 — ±5 V
		I <sub>TYP</sub>	@ 12 VDC 2.0 mA
			@ 24 VDC 4.2 mA
Power Supply Requirements	Options: <ul style="list-style-type: none"> <li>PoE powered: Class 1 PoE supply, maximum 3.84 W</li> <li>External power supply (no PoE): +24 VDC +/- 10% (1 A maximum, 5 W average)</li> </ul> Supplied by LPS or NEC class 2 only		

Power	<3.84 W (PoE Class 1)
Consumption	<5 W (average, externally powered at +24 V)

# DataMan 260 Series Imager Specifications

Specification	DataMan 260 Imager	DataMan 262 Imager
Image Sensor	1/3 inch CMOS	1/3 inch CMOS
Image Sensor Properties	4.51 mm x 2.88 mm (W x H), 6.0 $\mu$ m square pixels	4.8 mm x 3.6 mm (W x H), 3.75 $\mu$ m square pixels
Image Resolution (pixels)	752 x 480	1280 x 960
Lens Type	S-mount 6.2 mm F:5 (with optional liquid lens) with IR blocking filter S-mount 16 mm F:7 (with optional liquid lens) with IR blocking filter	

# Compliance Statements

The DataMan 260 has Regulatory Model 1AA5 and meets or exceeds the requirements of all applicable standards organizations for safe operation. However, as with any electrical equipment, the best way to ensure safe operation is to operate them according to the agency guidelines that follow. Please read these guidelines carefully before using your device.

## Manufacturer:





Cognex Corporation  
One Vision Drive  
Natick, MA 01760 USA

Regulator	Specification
USA	FCC 47 CFR Part 15 Subpart B, Class A
Canada	ICES-003
European Community	EN55022 (CISPR 22) Class A
	EN55024
	EN60950
Australia	C-TICK, AS/NZS CISPR 22 / EN 55022 for Class A Equipment
Japan	VCCI V-3/2015.04 Class A



**Note:** For the most up-to-date CE declaration and regulatory conformity information, please refer to the Cognex online support site: <http://www.cognex.com/Support>.



Safety and Regulatory	
European Compliance 	<p><b>WARNING:</b> This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.</p> <hr/> <p>The CE mark on the product indicates that the system has been tested to and conforms with the provisions noted within the 2014/30/EU Electromagnetic Compatibility Directive. For further information please contact: Cognex Corporation, One Vision Drive Natick, MA 01760 USA. Cognex Corporation shall not be liable for use of our product with equipment (i.e., power supplies, personal computers, etc.) that is not CE marked.</p>
FCC Class A Compliance Statement 	<p>FCC Part 15, Class A This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.</p>
Canadian Compliance	<p>This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.</p>
C-Tick Statement 	<p>Conforms to AS/NZS CISPR 22/ EN 55022 for Class A Equipment.</p>
UL and cUL Statement 	<p>UL and cUL listed: IEC 60950-1:2005 (2nd Edition); Am 1:2009 + Am 2:2013</p>

## LED Safety Statement

This device has been tested in accordance with IEC62471, and has been certified to be under the limits of Exempt Risk Group. No further labeling is required.

## For European Community Users

Cognex complies with Directive 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).

This product has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment, if not properly disposed.

In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems for product disposal. Those systems will reuse or recycle most of the materials of the product you are disposing in a sound way.



The crossed out wheeled bin symbol informs you that the product should not be disposed of along with municipal waste and invites you to use the appropriate separate take-back systems for product disposal.

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You may also contact your supplier for more information on the environmental performance of this product.

# 中国大陆RoHS (Information for China RoHS Compliance)

根据中国大陆《电子信息产品污染控制管理办法》(也称为中国大陆RoHS), 以下部份列出了本产品中可能包含的有毒有害物质或元素的名称和含量。



Table of toxic and hazardous substances/elements and their content, as required by China's management methods for controlling pollution by electronic information products.

Part Name 部件名称	Hazardous Substances 有害物质					
	Lead (Pb) 铅	Mercury (Hg) 汞	Cadmium (Cd) 镉	Hexavalent Chromium (Cr (VI)) 六价铬	Polybrominated biphenyls (PBB) 多溴联苯	Polybrominated diphenyl ethers (PBDE) 多溴二苯醚
Regulatory Model 1AA5	X	O	O	O	O	O
<p>This table is prepared in accordance with the provisions of SJ/T 11364. 这个标签是根据SJ/T 11364 的规定准备的。</p> <p>O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB / T26572 - 2011. 表示本部件所有均质材料中含有的有害物质低于GB / T26572 - 2011 的限量要求。</p> <p>X: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB / T26572 - 2011. 表示用于本部件的至少一种均质材料中所含的危害物质超过GB / T26572 - 2011 的限制要求。</p>						

Copyright © 2017  
Cognex Corporation. All Rights Reserved.