

Turn cab round and on the rear upper section there is a metal panel secured with 2 screws - remove them and the panel.



Disconnect the cables from the right-hand side of the screen (Power, Remote, DVI (Optional), VGA). Then undo the 4 bolts.



Turn the cab around and take hold of the sides of the monitor frame, lift it out and put it somewhere safe (where you're not going to knock it over).




Remove 2 long screws holding these brackets in place - note which way they are mounted - repeat for the other side.



Remove 3 screws holding the long metal plate that runs along the bottom of the speaker unit and remove the metal plate - mine was stuck down with spilt liquid and arcade filth.



Undo this clip and undo the wires connected to the back of the speakers and you can remove the lower speaker system.

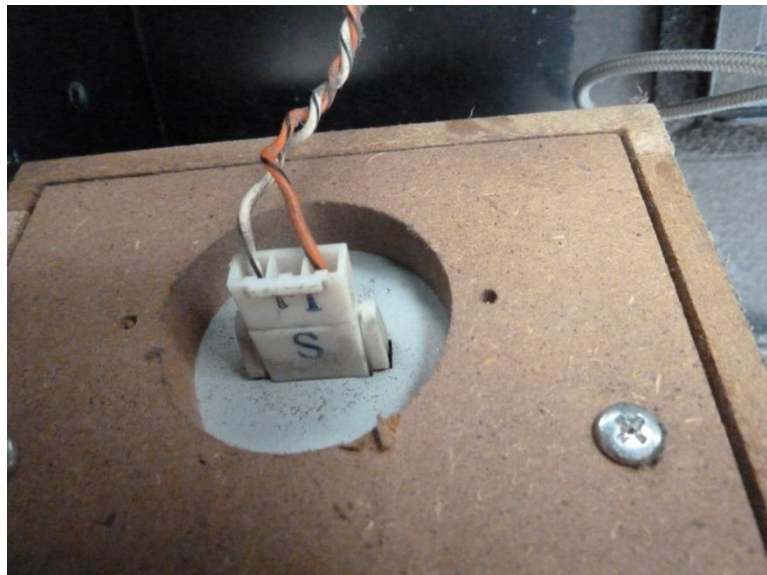

If you've followed the guide this far your cab should look like this....

Front view...




Side view....



Unlock the rear lower panel and if fitted remove the 3 screws securing it in place (if you have no key - you can remove the nut from the lock from the front of the cab. Remove the PCB shelf.



On the side panels there are 5 screws, 2 near the bottom, 2 in the middle and one higher up - these hold the lower side trim in place remove all 10 screws and the side panels lift off.

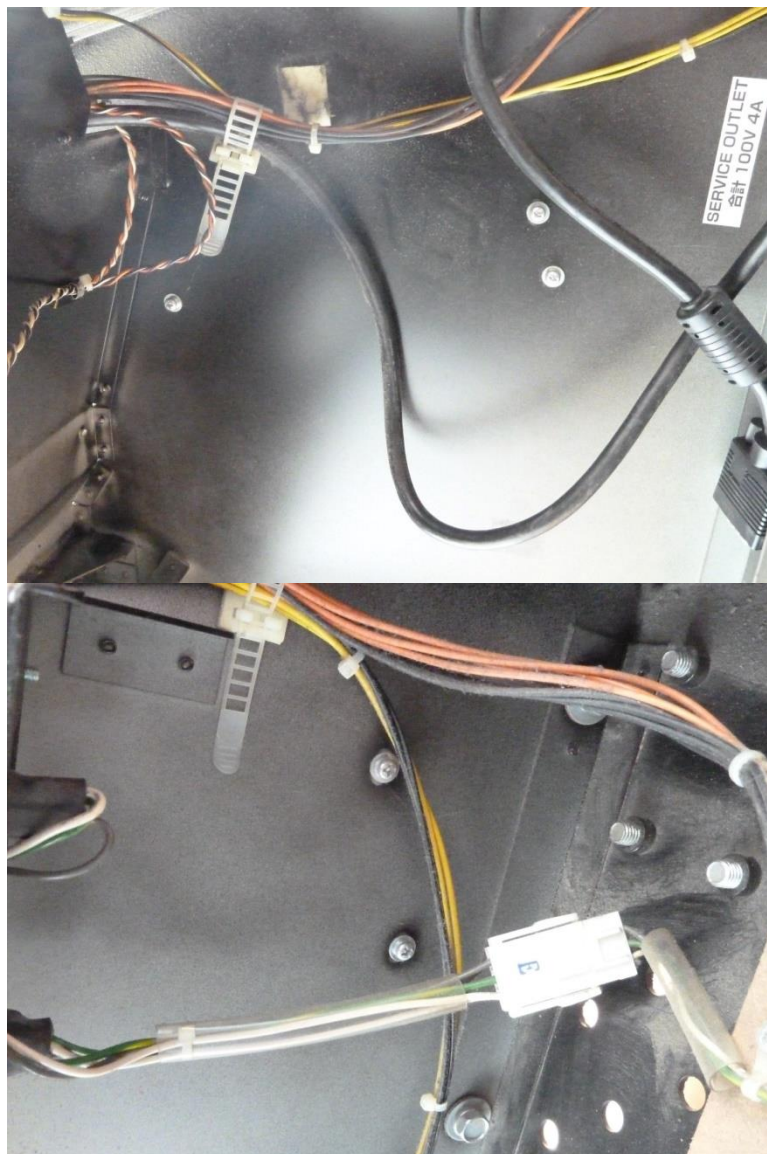



Disconnect and remove the 3 PSU's in the base - the 12VDC Aux PSU and 24VDC LCD PSU are mounted on 4 PCB feet - the Wai-Ya is screwed to the wood with 4 screws, loosen the 2 rear ones and remove the 2 front ones (as rear mounts are slots).



Aux 12VDC PSU 75W.




LCD 24VDC PSU 150W.



Wei-Ya P271 PSU.



Mains filter

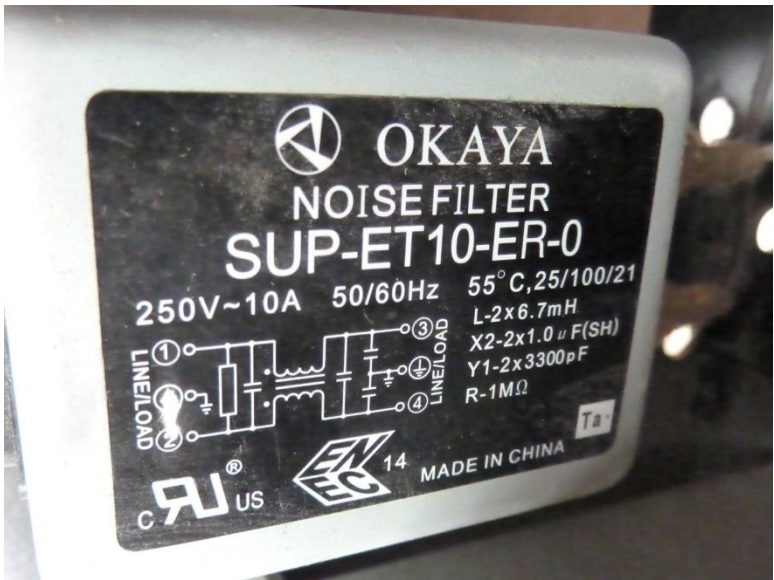

The side-trims have metal brackets fastened inside, carefully undo the screws and scrub the panels & brackets clean with plenty of hot soapy water. remove any marks with magic eraser (you will need to re-polish the panels if you do). when you refit the screws DO NOT OVER-TIGHTEN them as the plastic pillars they fasten into will break!



If you've followed the guide this your cab should look like this....



Check for debris inside, clean everything, reassemble and play....

Reassembly is just a matter of reversing the process for dismantling it.

My recommendations :-

- 1) Refit the top marquee section first as it's easier to retrieve dropped screws at this point.
- 2) When you fit the white front marquee retainer, fit the two middle screws first - then fit the edge ones as the extra flex you have makes lining up the screw-holes simpler, also refit before putting the side trim back on in case you drop the screws.
- 3) Fit the top pair of speakers loosely so you can tweak them so no gap above monitor.
- 4) Make sure you don't trap any cables behind the rear speaker ports on the lower set of speakers.
- 5) Wear gloves when cleaning the plastics so you don't irritate your skin.
- 6) Watch out for sharp burrs when cleaning the inside of the cab, especially under the control panel ledge.

Differences if monitor is TATE - To remove the speakers/Screen.

Remove the top and bottom trim bars.

Remove cables from monitor via lower access hole in rear of cab.

Remove the screws for top/bottom speakers on left side, tilt forwards and unclip speaker cables, repeat process for right side.

Remove both speaker pods – you can now get a decent grip on the screen to remove it