

Insielleiton Guide

2-Port USB Dual-Link DVI-D Cable KVM Switch with Audio and Microphone Support

GCS982U PART NO. M1196

Table of Contents

Package Contents	4
System Requirements	5
Overview	6
Standard Installation	7
Advanced Installation	9
LED Indication	12
Port Switching	13
Hotkeys Summary Table	14
Autoscan Interval Table	16
Mac Keyboard Emulation	17
Sun Keyboard Emulation	18
Factory Default Settings	19

Firmware Upgrade	20
Upgrade Fail	24
Federal Communications Commission (FCC) Statement	25
CE Compliance	26
SJ/T 11364-2006	27
Limited Warranty	28
Contact	29

Package Contents

- 1 x 2-Port USB Dual-Link DVI-D Cable KVM Switch
- 1 x Remote Switch Button
- 1 x Installation Guide
- 1 x Warranty Card

System Requirements

Console

- DVI-D supported monitor
- USB keyboard and mouse
- · Powered speakers and microphone (optional)

Computers

- Two USB ports
- A DVI-D supported connection
- 3.5mm audio and microphone connections (optional)

Operating System

- Windows XP
- Windows Vista (32-bit / 64-bit)
- Windows 7 (32-bit / 64-bit)
- Mac OS X or greater
- Sun Solaris workstation
- · Linux, UNIX and other USB supported systems*

*Additional drivers and support may be needed

Overview

- 1. LEDs
- 2. Console DVI-D Video Port
- 3. Console USB Mouse Port
- 4. Console USB Keyboard Port
- 5. Console Mic. Port
- 6. Console Audio Port
- 7. Remote Switch Button Port
- 8. Remote Switch Button

- 9. CPUs USB Keyboard connection
- 10. CPUs USB Mouse connection
- 11. CPUs DVI-D connection
- 12. CPUs Audio connection
- 13. CPUs Mic. connection



Standard Installation

Step 1

Please make sure your computers and monitor are powered off before you start.

Step2

Connect the DVI cable from your monitor to the console DVI monitor port. Then, turn on the monitor.

Step 3

Connect your USB keyboard and mouse to the console USB keyboard port and console USB mouse port. If you would like to use the remote switch button, please connect it to the remote switch button port.





Connect your powered speaker and mic. to the console audio port and console mic. port.




Step 5

Connect a set of your molded KVM cable to each of your computers – DVI cable to the DVI output, USB cables to open USB ports from your computer, audio cable to your audio output and mic. cable to the mic. input.

Final Step

Turn on your computers.

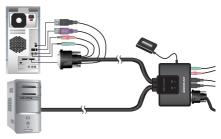

Advanced Installation

Step 1

Please make sure your computers and monitor are powered off before you start.

Step2

Connect the DVI cable from your monitor to the console DVI monitor port. Then, turn on the monitor.

Step 3

Connect your USB keyboard to the console USB keyboard port. If you would like to use the remote switch button, please connect it to the remote switch button port.





Connect a powered USB hub to the console mouse port, then connect the mouse to any available USB port in the hub. Then, connect any peripherals that you want to share between your computers to the other available USB ports in the hub.

Note: Please make sure mouse emulation has been disabled for this setup to function correctly. Please refer to HotKeys summary on page 14 for instructions on how to disable mouse emulation.



Step 5


Connect your powered speaker and mic. to the console audio port and console mic. port.



Connect a set of your molded KVM cable to each of your computers – DVI cable to the DVI output, USB cables to open USB ports from your computer, audio cable to your audio output and mic. cable to the mic. input.

Final Step

Turn on your computers.

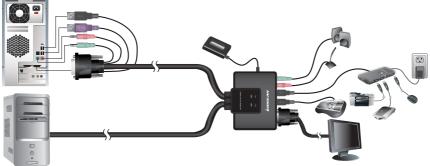

LED Indication

LED Indication

- LED will light up in Green showing the port that can be controlled by the console.
- Both LEDs will be flashing together when the KVM is in Firmware Upgrade Mode.

Port Switching

You can switch ports via remote switch button, mouse or hotkey commands.

Port Switching via Remote Switch Button

Simply press the remote switch button once to switch focus to the next port.

Port Switching via Mouse

Simply press scroll wheel button twice rapidly to switch focus to the next port.*

*Note: This feature requires a mouse that has a scroll wheel. Also, this feature can only be used when both Mouse Emulation Mode and Mouse Port-Switching Mode are enabled.

Port Switching via Hotkey Commands

To trigger a Hotkey Mode, simply press [Scroll Lock] [Scroll Lock]**. Please refer to Hotkey Summary Table for details.

**Note: If there is a conflict using [Scroll Lock] [Scroll Lock] sequence, you can change to the alternative sequence [Ctrl] [Ctrl] by press and holding the remote switch button for 3 seconds. When you press and hold the remote switch button for 3 second when the sequence is [Ctrl] [Ctrl], it will change the sequence back to [Scroll Lock] [Scoll Lock].

Hotkeys Summary Table

Hotkey combination		Description			
	[Enter]	Switch KVM and audio focus to the next port			
	[k] [Enter]	Switch KVM focus to the next port			
	[s] [Enter]	Switch audio focus to the next port			
[Scroll Lock] [Scroll Lock] +	[a] [Enter]	Activate Autoscan Mode. It will toggle between the two computers every 5 seconds			
or [Ctrl] [Ctrl]* +	[a]/[n], [Enter]	Activate Autoscan Mode. It will toggle between the two computers with the specific time depending on the interval [n] that you have input. Please see Autoscan Interval Table for details.			
	[x] [Enter]	Change hotkey sequence to the alternative sequence			
*Note: If alternative hotkey	[m] [Enter]	Enable/disable mouse emulation			
sequence is chosen	[d] [Enter]	Capture and store monitor's EDID on specific port			
	[w] [Enter]	Enable/disable mouse port-switching function Note: If you enable this feature when Mouse Emulation Mode is disabled, Mouse Emulation Mode will be enabled automatically			
	[F2] [Enter]	Enable Mac keyboard emulation			
	[F3] [Enter]	Enable Sun keyboard emulation			

Hotkey combination		Description		
	[F4] [Enter]	List out current settings Note: Please have a Notepad or word document opened before you trigger this function.		
[Scroll Lock] [Scroll Lock] +	[F5] [Enter]	Perform a USB keyboard and mouse reset		
or	[F10] [Enter]	Auto detect keyboard operating system		
[Ctrl] [Ctrl]* +	[r] [Enter]	Reset to factory default settings		
	[E]/[e], [Enter]	Enable/Disable Power On detection function		
*Note: If alternative hotkey sequence is chosen [N]/[n], [Enter]		 Enables/Disable Keyboard emulaion function Default Keyboard emulation enabled 		
	[F6]/[nn], [Enter]	Set the keyboard language layout. Where [nn] is a 2 digits number that represents the keyboard language code. (US English: 33, French: 08, Japanese: 15).		

Autoscan Interval Table

n	Description
1	3 eeconde

2 5 seconds (default)

3 10 seconds

4 20 seconds

Mac Keyboard Emulation

The PC compatible (101/104 key) keyboard can emulate the functions of the Mac keyboard. The emulation mappings are listed in the table below.

PC Keyboard	Mac Keyboard	[Alt]	Alt
[Shift]	Shift	[Print Screen]	F13
[Crtl]	Ctrl	[Scroll Lock]	F14
	æ	Ē	=
[Ctrl] [1]		[Enter]	Return
[Ctrl] [2]		[Backspace]	Delete
[Ctrl] [3]		[Insert]	Help
[Ctrl] [4]		[Ctrl]	F15

*Note: When using key combinations, press and release the first key (Ctrl), then press and release the second key.

Sun Keyboard Emulation

The PC compatible (101/104 key) keyboard can emulate the functions of the Sun keyboard. The emulation mappings are listed in the table below.

PC Keyboard	Sun Keyboard	[Ctrl] [F9]	Find	
[Crtl] [t]	Stop	[Crtl] [F10]	Cut	
[Crtl] [F2]	Again	[Crtl] [1]		
[Crtl] [F3]	Props	[Crtl] [2]	()-■)	
[Crtl] [F4]	Undo	[Crtl] [3]		
[Crtl] [F5]	Front	[Crtl] [4]	(
[Crtl] [F6]	Сору	[Crtl] [h]	Help	
[Crtl] [F7]	Open		Compose	
[Crtl] [F8]	Paste		♦	

*Note: When using key combinations, press and release the first key (Ctrl), then press and release the second key.

Factory Default Settings

Function	Default Setting
Autoscan Interval	5 seconds
Hotkeys	[Scroll Lock] [Scroll Lock]
Keyboard Operating Platform	PC compatible
Mouse Emulation	On
Mouse Port-Switching	Off
Keyboard Emulation	On (Gaming mode: Off)
Power on Detection	Enable
Keyboard Language	US English

Firmware Upgrade

Note: In order to perform a firmware upgrade, you need to use a computer that's not connected to the KVM.

Step 1

Go to www.iogear.com to download the latest available firmware or the specific firmware that you wish to upgrade to.

Step 2

Please make sure all the computers that are connected to the KVM are completely shutdown.

Step 3

Press and hold the remote switch button of the KVM while connecting the 2 USB connections of a set of KVM cable to the computer that you will use to perform the firmware upgrade. When you see the 2 LEDs are flashing on the KVM, you can now release the remote switch button.

Note: The computer used to perform the firmware upgrade must be powered on before you connect the 2 USB connections to it.

Windows will now install all the required drivers. You may see the below message in the system tray icon area.

Step 5

After you see the below message "Your new hardware is installed and ready to use.", extract the downloaded file with WinRAR or compatible software. Then double click on the execute file to begin with the Firmware Upgrade Utility.





Read the License Agreement and click "I Agree" then click "Next" if you wish to continue with the firmware upgrade. Otherwise, click "Cancel" to exit.

📽 Firmware Upgrade Utility	×
Welcome to the Firmware Upgrade Utility.	
Put your device into Firmware Upgrade Mode. Use the Firmware Upgrade Cable to connect its Firmware Upgrade Pot to your computer (or connect via Ethernet). Agree to the License Agreement; Then Click No.	est.
LICENSE AGREEMENT	^
LICENSE GRANT	
AFEII International Co., Lud ("Listensor") grants torous a non-reactivity: promitanalenable licensor to access and use RPMANAEE UPRIADED UTU IV the "Provider" divang the "Test and to the torous You may install the Product on a listensor and the strateging devices install and use the Product on a listense for one proposed of the product on a listense for any and whether the the product on a listense for the product over such network; and make backup copies of the Product.	н
RESTRICTIONS	
Vou agree not to modify, adapt, translate, reverse engineer, recompile, disassemble or otherwise attempt to discover the source code of the Product, or create derivative work is based on the Product, or remove any proprietary oncises or labels on the Product, including cognight, tadamas, no patent perfug notices. You may not subisense the Product or otherwise allow others to use the Product licensed to you.	~
€ Lågree ⊂ I Don't ågre	e
Help About Cancel	

Step 7

Choose the correct KVM that you wish to perform firmware upgrade from the "Device List" and then click "Next" to continue. Then the Firmware Upgrade Utility will verify if there is a KVM connected to the computer by the firmware upgrade cable. (Check Firmware Version checkbox is optional)

📽 Firmware Upgrade U	tility	X
If Check Firmware Version is files. If the device's version is checked, the utility performs Click Next to begin.	checked, the utility compares the device's limware level with the upgrade newer, the utility lets you decide whether to continue or not. If it is not the upgrade directly.	
Device List:	Status Messages:	
GCSS32UB (MAIN) 000	> Loading & Institut (Be: Loading & Institut (Be: C) (C) 2 sharting fra denices	
Device Description CPU : 8021/22 Device FAV: Ver 1.0.031 Upgrade FAV: Ver 1.0.071 MID: 000		
Check Firmware Version	Progress	=
Help View Lo	g < Back Next > Cance	


If you have checked the "Check Firmware Version" checkbox, then the utility will check the current firmware that is on your KVM. If the current firmware is newer than the firmware that you wish to upgrade to, you will be prompted and asked if you wish to proceed. Simply click "Yes" to start the upgrade and "No" to cancel the upgrade.

Warning	s 🛛 🕅
?	The firmware (Ver 1.0.092) is not newer than current firmware (Ver 1.0.092) in device GCS932UB (MAIN) : 000 Continue the upgrade? (Yes/No)
	<u>Yes</u> <u>N</u> o

Note: If you did not check the "Check Firmware Version" checkbox, utility will perform the upgrade automatically no matter what version of firmware you have in the KVM.

Step 9

When the firmware upgrade is done, you will see "Firmware upgrade OK" in the "Status Messages" window. Then simply click "Finish" to complete the whole firmware upgrade process.

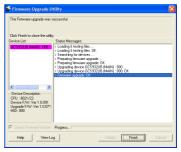

Final Step

Now the KVM will reset by itself and it will be ready for usage after the reset.

Upgrade Fail

If the upgrade fails to complete, unplug the 2 USB connections from your computer that has performed the firmware upgrade. Then, repeat the firmware upgrade process by following the procedure of Firmware Upgrade section starting from step 3.

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential setting. This product generates, uses, and can radiate radio frequency energy and, if not installed and used as directed, it may cause harmful interference to radio communications. Although this product complies with the limits for a Class B digital device, there is no guarantee that interference will not occur in a particular installation.

CE Compliance

This device has been tested and found to comply with the following European Union directives: Electromagnetic Capability (89/336/EMC), Low Voltage (73/23/EEC) and R&TTED (1999/5/EC).

SJ/T 11364-2006

The following contains information that relates to China.

	有毒有害物	勿质或元素				
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电器部件	•	\bigcirc	0	\circ	0	0
机构部件	0	0	\bigcirc	0	0	0

 ○:表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求之下。
 ●:表示符合欧盟的豁免条款,但该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006的限量要求。

x:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006的限量要求。



Limited Warranty

WE'RE HERE TO HELP YOU! NEED ASSISTANCE SETTING UP THIS PRODUCT?

Make sure you:

Use the live chat at www.iogear.com to try and solve any issues you may be having with the product
 Visit the Tech Info Library/FAQ on www.iogear.com (under the Support tab)
 Call the tech support line at 1(866) 946-4327 (U.S. only) or (949) 453-8782

Warranty Information

This product carries a 3 Year Limited Warranty. For the terms and conditions of this warranty, please go to http://www.iogear.com/support/warranty or call 1-866-946-4327

Register online at http://www.iogear.com/register

Important Product Information

Product Model ______ Serial Number ______

Contact

IOGEAR

19641 Da Vinci, Foothill Ranch, CA 92610 P 949.453.8782 F 949.453.8785 Visit us at: www.iogear.com

© 2011 IOGEAR® Part No. M1196

IOGEAR, the IOGEAR logo, are trademarks or registered trademarks of IOGEAR. Microsoft and Windows are registered trademarks of Microsoft Corporation. All other brand and product names are trademarks or registered trademarks of their respective holders. IOGEAR makes no warranty of any kind with regards to the information presented in this document. All information furnished here is for informational purposes only and is subject to change without notice. IOGEAR assumes no responsibility for any inaccuracies or errors that may appear in this document.



About Us

FUN

IOGEAR offers connectivity solutions that are innovative, fun, and stylish, helping people enjoy daily life using our high technology products.

GREEN

IOGEAR is an environmentally conscious company that emphasizes the importance of conserving natural resources. The use of our technology solutions helps reduce electronic waste.