



CONTENTS

Contents	2
Introduction	7
V650	7
USB cable	7
Bluetooth® Smart Heart Rate Sensor*	8
Polar FlowSync Software	8
Polar Flow Web Service	8
Get started	9
Charge the Battery	9
Basic Settings	9
Menu and Functions	10
Menu Items	11
Button Functions	12
Touch Screen Functions	12
Pairing Sensors with V650	13
Settings	14
General Settings	14
Pairing	14
Use GPS time	15
Time	15
Date	15
Language	15

Un	its	.15
Pir	n code lock	.15
Fro	ontlight	16
Dis	splay backlight	16
Au	tomatic Power Off	. 17
Ab	out V650	.17
Sport P	rofile Settings	. 17
Tra	aining views	17
HF	R view	.18
Sp	eed View	18
Tra	aining sounds	.18
GP	PS	18
Au	tomatic pause	.18
Au	tomatic lap	18
Fro	ont button takes lap	18
HR	R zones	19
Bike Se	ettings	.19
Meas	suring the wheel size	.19
Physica	al Settings	20
Se	x	21
He	ight	21
We	eight	.21
Da	to of hirth	2

HR max	21
Resting HR	21
VO2 max	22
Firmware Update	22
Compatible Sensors	24
Polar Heart rate Sensor Bluetooth® Smart	24
Pair a Heart Rate Sensor with V650	24
Polar Speed Sensor Bluetooth® Smart	24
Pair Speed sensor with V650	25
Polar Cadence Sensor Bluetooth® Smart	25
Pair Cadence sensor with V650	25
Install Bike Mount	27
Polar Adjustable Bike Mount	27
Training	28
Wear the Heart Rate Sensor	28
Start a Training Session	28
During Ride	30
Training Views	31
Time	31
Environment	32
Body Measurement	32
Distance	33
Spand	22

Cadence	34
Lap Information	34
Back to Start	35
Pause and Stop Training	35
After Training	37
Summary	37
History	37
Sessions	37
Totals	38
Features	39
GPS	39
Barometer	39
Sport Profiles	39
Smart Coaching	39
Polar Heart Rate Zones	40
Smart Calories	42
Training Benefit	42
Polar Flow Web Service	44
Syncing	46
Caring for Your V650	47
Polar V650	47
Heart Rate Sensor	47
Speed Sensor Plustooth® Smart and Cadence Sensor Plustooth® Smart	47

	Storing	48
	Service	48
b	mportant Information	49
	Batteries	49
	Change the Heart Rate Sensor Battery	49
	Precautions	50
	Interference During Training	50
	Minimizing Risks When Training	50
	Technical Specifications	52
	Polar V650	52
	Heart Rate Sensor	53
	Polar FlowSync Software and USB Cable	53
	Water Resistance	53
	Limited International Polar Guarantee	54
	Disclaimer	EE

INTRODUCTION

Congratulations on your new V650! Designed for the most ambitious cyclist, the V650 helps you ride with confidence and reach your peak performance.

This user manual includes complete instructions to help you get the most out of your new riding companion. To check the video tutorials and the latest version of this user manual, please go to www.-polar.com/en/support/v650.



V650

View your training data, such as heart rate, speed, distance and altitude at a glance from the big screen.

USB CABLE

Use the USB cable to charge the battery and to sync data between your V650 and the Polar Flow web service via FlowSync software.

BLUETOOTH® SMART HEART RATE SENSOR*

See live, accurate heart rate on your V650 during your training sessions. Your heart rate is used to analyze how your session went.

*Only included in V650 with heart rate sensor sets. If you bought your V650 without a heart rate sensor, not to worry, you can buy one at any time.

POLAR FLOWSYNC SOFTWARE

Flowsync software allows you to sync data between your V650 and the Flow web service on your computer via the USB cable. Go to flow.polar.com/start to download and install Polar FlowSync software.

POLAR FLOW WEB SERVICE

Plan and analyze every detail of your training, customize your device and learn more about your performance at polar.com/flow.

GET STARTED

To make sure you get to enjoy your V650 at its best, please go to <u>flow.polar.com/start</u> where simple instructions will guide you through setting up your V650, downloading the latest firmware and taking the Flow web service into use.

If you're in a hurry for your first run with V650, you can do a quick set up by entering the basic settings on the device, as instructed in Basic Settings.

CHARGE THE BATTERY

After unboxing your V650, the first thing you need to do is charge the battery. Let your V650 fully charge before taking it into use for the first time.

The V650 has an internal, rechargeable battery. Use the USB cable included in the product set to charge your V650 via the USB connector on your computer. You can also charge the battery via a wall outlet. When charging via a wall outlet use a USB power adapter (not included in the product set). If you use an AC adapter, make sure that the adapter is marked with "output 5Vdc 1A-2A max". Only use an AC adapter which is adequately safety approved (marked with "LPS", "Limited Power Supply" or "UL listed").

- 1. Push down to open the cap.
- 2. Lift the cap and plug the micro USB connector into the USB port.
- 3. Plug the other end of the cable into your PC.
- 4. The charging animation appears on the display. Charging the battery fully takes up to five hours.

The operating time of the battery is approximately 10 hours. The operating time depends on many factors, such as the temperature of the environment in which you use your V650, the features you select and use, and battery aging. The operating time is significantly reduced in temperatures well below freezing.

① Don't leave the battery fully discharged for a long period of time or keep it fully charged all the time, because it might affect the battery life time.

BASIC SETTINGS

Wake your V650 by pressing the side button. The first time you do this, your V650 will take you through an initial set up process.

Start by choosing your language from the following options: Dansk, Deutsch, English, Español, Français, Italiano, Nederlands, Norsk, Português, Suomi, Svenska, 日本語 or 简体中文.

If your language is not visible, swipe up to scroll the list. Choose a language by tapping it. The field turns red. Confirm and continue to the following setting by tapping at the bottom of the screen.

To get the most accurate and personal training data, it's important that you're precise with physical settings like your age, weight and sex.

Units: Choose Metric (kg/cm) or Imperial (lb/ft) units.

Use GPS time: If you want the V650 to read the Coordinated Universal Time (UTC) from the GPS satellites, tick the box and choose the UTC Time Zone that is closest to you.

Time of day: Change the time format by touching 12h/24h (1). The chosen time format is written in white. If you choose the 12h time format, also select AM or PM (2). Then enter the local time.



Date: Enter current date.

Sex: Select Male or Female.

Height: Enter your height.

Weight: Enter your weight.

Date of birth: Enter your date of birth.

To change your settings, tap **①** at the bottom of the screen to return to the desired setting. To accept the settings, tap **①**. The V650 enters the main view.

MENU AND FUNCTIONS

MENU ITEMS

- 1. **HISTORY**: See the details of your sessions and the totals of your cycling history.
- 2. **PULL-DOWN MENU**: Swipe down to open the pull-down menu. There you can adjust the frontlight, the training sounds and the display brightness.
- 3. **SETTINGS**: Modify the settings to suit your needs.
- 4. **BIKE**:Choose the bike for your ride.
- 5. **PROFILE**: Choose the profile for your ride.
- 6. The indicators displayed at the bottom of the display provide information about the status of the sensors.



BUTTON FUNCTIONS

There is one physical button on the side of the V650 and another button on the front.

Press the side button (1) to view the following options:

- o Calibrate altitude
- Lock display
- ∘ Turn off V650
- Search sensor: Search for a heart rate sensor or cycling sensor.

Press the front button (2) to start recording, press and hold it to pause.

Take lap with a regular press. See <u>Sport Profile settings</u> for instructions on setting FRONT BUTTON TAKES LAP function on/off.



TOUCH SCREEN FUNCTIONS

Tap

- · Open what you tap.
- · Choose an item.
- Confirm and return to the previous level by tapping .
- Continue further by tapping .

Swipe right or left

- Switch training views during training.
- Browse training view layouts in sport profile settings.
- · Scroll details of your riding session in HISTORY.

Swipe down from the top edge of the screen

Open the pull-down menu. There you can adjust the frontlight, the training sounds and the display brightness.

Swipe up or down

Scroll through what's on the screen.

PAIRING SENSORS WITH V650

Sensors compatible with V650 use Bluetooth Smart ® wireless technology. Before taking a new heart rate sensor or cycling sensor into use, it has to be paired with your V650. Pairing only takes a few seconds, and ensures that your V650 receives signals from your sensors and devices only, and allows disturbance-free training in a group. Before entering an event or race, make sure that you do the pairing at home to prevent interference due to data transmission.

For more information on pairing specific sensors, see **Compatible Sensors**.

SETTINGS

GENERAL SETTINGS

To view and edit your general settings, go to **Settings > General settings**. There you'll find:

- Pairing
- Use GPS time
- Time
- Date
- Language
- Units
- Pin code lock
- Frontlight
- Display backlight
- Automatic power off
- About V650

Tap to open the setting you want to change, and edit as you like. Confirm and return to previous menu by tapping **①**.

In certain settings (e.g. UNITS), tap the field until you see the correct value.

PAIRING

Before taking a new sensor into use, it has to be introduced to your V650. This is called pairing and only takes a few seconds. Pairing ensures that the V650 receives signals from your sensor only, and enables disturbance-free training in a group.

Pair new device: Pair a sensor with your V650. For more information on pairing specific sensors, see Compatible Sensors.

Paired devices: View all the devices you have paired with your V650.

To remove pairing with a sensor:

- 1. Go to Settings > General settings > Pairing > Paired devices.
- 2. Tap the device you want to remove from the list and tap Remove pairing.

USE GPS TIME

If you want the V650 to read the Coordinated Universal Time (UTC) from the GPS satellites, tick the box in **USE GPS TIME** field, and choose the UTC Time Zone that is closest to you.

TIME

Set the time of day.

If you want to change the time format, tap 12h/24h (image). The currently selected format is written in white. If you choose the 12h time format, also select AM or PM.

DATE

Set the date.

LANGUAGE

Choose: Dansk, Deutsch, English, Español, Français, Italiano, Nederlands, Norsk, Português, Suomi, Svenska, 日本語 or 简体中文.

UNITS

Choose metric or imperial. Set the units used to measure weight, height, distance and speed.

PIN CODE LOCK

Keep your training information safe by setting a PIN code on your V650. It's a handy way to make sure that only you have access to your training information.

The V650 will ask for your PIN code every time it is turned on.

If you forget your PIN code, you can do a Factory reset on your V650. It removes V650's connection to your user account and deletes any saved data on it.

- 1. Plug in your V650 to your computer's USB port and go to Polar FlowSync software. The Polar FlowSync software transfers your training information to the Polar Flow web service.
- 2. Go to Settings and choose Factory Reset.
- 3. Go to the Polar Flow web service (<u>flow.polar.com/V650</u>) and repeat what you did when you first started using the product.


FRONTLIGHT

The function of the frontlight on the top edge of the V650 is to optimize your cycling security in dark conditions. It's an intelligent feature that you can set to turn on automatically when it gets dark and to turn off when it gets bright. Alternatively, you can manage it manually from the pull-down menu.

Manual: Manage the frontlight manually from the pull-down menu. Adjust the Blink rate* by dragging the slider.

Automatic: The V650 turns the frontlight on and off according to light conditions. Adjust the **Activation level** and the **Blink rate*** by dragging the slider.

Frontlight settings in pull-down menu

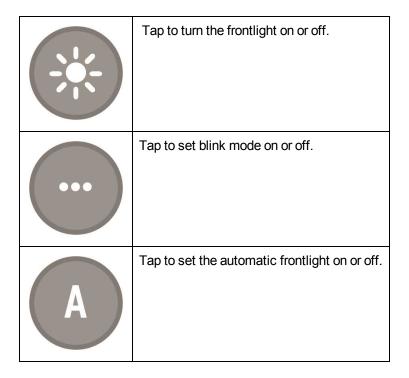

DISPLAY BACKLIGHT

Manual: The backlight turns on each time you touch the screen, press a button, get a notification or an alarm. It remains bright for 15 seconds, then goes dim again.

Always on: The backlight is always on.

Automatic: The backlight turns on and off automatically according to light conditions when you're recording a session. In other modes it works the same way as manual backlight. You can adjust the **Activation level** by dragging the slider.

AUTOMATIC POWER OFF

Set On/Off: The power switches off automatically when you haven't touched the buttons/touch screen in 15 minutes (except when the V650 is recording a training sessions or in the pause mode).

ABOUT V650

Check the device ID, firmware version and HW model of your V650.

SPORT PROFILE SETTINGS

To view or modify sport profile settings, go to **Settings** > **Sport profiles** and choose the profile you want to edit.

You'll find the following settings for each profile:

- Training views
- HR view
- Speed view
- Training sounds
- GPS
- Automatic pause
- Automatic lap
- Front button takes lap
- HR zones

Tap to open the setting you want to change, and edit as you like. Confirm and return to previous menu by tapping **①**.

In certain settings (e.g. Training sounds), tap the field until you see the correct value.

TRAINING VIEWS

You can choose to have up to six training views for each profile, each training view containing up to eight items. In addition to the training views, you can choose to have a lap view.

- Tick the box on the left side of the display to activate View 1, View 2, View 3, View 4, View 5 or View
 6.
- 2. Tap the view you want to edit.
- 3. Choose the layout for the view. There are many layout options; simply swipe left or right until you see a layout you like.

- 4. If you want to change an item, tap it and choose a new item from the list. The content of the list varies slightly between different layouts. This is because some of the items (e.g. graphs) don't fit in all the layouts. You can find a complete list of available items in Training Views.
- 5. When the layout is complete, confirm and return to the **TRAINING VIEWS** menu by tapping **①**.
- 6. If you want to set more training views for the profile, repeat the steps 1-5.
- 7. To set Lap view on, tick the box in the Lap view field.
- 8. Tap **1** in **TRAINING VIEWS** menu to save your changes.

HR VIEW

Choose % (percent of maximum heart rate) or bpm (beats per minute).

SPEED VIEW

Choose km/h or min/km.

TRAINING SOUNDS

Choose Mute, Soft, Loud and Very loud.

GPS

Set GPS function On/Off.

AUTOMATIC PAUSE

Tick the box to turn the function on.

Tap Activation speed to set the speed at which recording is paused.

AUTOMATIC LAP

Tick the box to turn the function on, then set the automatic lap **Duration** or **Distance**.

FRONT BUTTON TAKES LAP

Set the function On/Off. If you set the function on, pressing the front button takes a lap when you're recording a session.

By default, the function is on in Road cycling, Mountain biking and Indoor cycling.

Pressing and holding the front button pauses recording.

HR ZONES

Check heart rate zone limits.

BIKE SETTINGS

To view or modify bike settings, go to Settings > Bike settings and choose the bike. The sensors you have linked to the bike appear under the bike name.

You'll find the following settings:

BIKE NAME: Bike 1, Bike 2, Bike 3 or Bike 4.

WHEEL SIZE (MM): Set the wheel size in millimeters. For more information, see Measuring the wheel size.

SENSORS: View all the sensors you have linked to the bike.

MEASURING THE WHEEL SIZE

Wheel size settings are a prerequisite for accurate cycling information. There are two ways to determine the wheel size of your bike:

Method 1

Measure the wheel manually for the most accurate result.

Use the valve to mark the point where the wheel touches the ground. Draw a line on the ground to mark the point. Move your bike forward on a flat surface for one complete rotation. The tire should be perpendicular to the ground. Draw another line on the ground when the valve is at the starting point to mark a full rotation. Measure the distance between the two lines.

Subtract 4 mm from the distance to account for your weight on the bike to get your wheel circumference. Enter this value in the cycling computer.

Method 2

Look for the diameter in inches or in ETRTO printed on the wheel. Match it to the wheel size in millimeters in the right column of the chart.



You can also check the wheel size from the manufacturer.

ETRTO	Wheel size diameter (inches)	Wheel size setting (mm)
25-559	26 x 1.0	1884

ETRTO	Wheel size diameter (inches)	Wheel size setting (mm)
23-571	650 x 23C	1909
35-559	26 x 1.50	1947
37-622	700 x 35C	1958
47-559	26 x 1.95	2022
20-622	700 x 20C	2051
52-559	26 x 2.0	2054
23-622	700 x 23C	2070
25-622	700 x 25C	2080
28-622	700 x 28	2101
32-622	700 x 32C	2126
42-622	700 x 40C	2189
47-622	700 x 47C	2220
55-622	29 x 2.2	2282
55-584	27.5 x 2.2	2124

Wheel sizes on the chart are advisory as wheel size depends on the wheel type and air pressure. Due to te variation of the measurements, Polar cannot be held responsible for their validity.

PHYSICAL SETTINGS

To view and edit your physical settings, go to Settings > Physical settings. There you'll find:

- Sex
- Height
- Weight
- · Date of birth
- HR max
- Resting HR
- VO2max

It is important that you are precise with the physical settings, especially when setting your weight, height, date of birth and sex, as they have an impact on the accuracy of the measuring values, such as the heart rate limits and calorie expenditure.

Tap to open the setting you want to change, and edit as you like. Confirm and return to previous menu by tapping ①.

In certain settings (e.g. SEX), tap the field until you see the correct value.

SEX

Choose Male or Female.

HEIGHT

Set your height.

WEIGHT

Set your weight.

DATE OF BIRTH

Set your date of birth.

HR MAX

HR MAX:Set your maximum heart rate, if you know your laboratory measured current maximum heart rate value. Your age-predicted maximum heart rate value (220-age) is displayed as a default setting when you set this value for the first time.

About maximum heart rate

 ${
m HR}_{
m max}$ is used to estimate energy expenditure. ${
m HR}_{
m max}$ is the highest number of heart-beats per minute during maximum physical exertion. ${
m HR}_{
m max}$ is also useful when determining training intensity. The most accurate method for determining your individual ${
m HR}_{
m max}$ is to perform a maximal exercise stress test in a laboratory.

RESTING HR

RESTING HR: Set your resting heart rate.

About resting heart rate

A person's resting heart rate (HR $_{\rm rest}$) is the lowest number of heart beats per minute (bpm) when fully relaxed and without distractions. Age, fitness level, genetics, health status and gender affect the HR $_{\rm rest}$. HR $_{\rm rest}$ is decreased as the result of cardiovascular conditioning. A normal value for an adult is 60-80 bpm, but for top athletes it can be below 30 bpm. An exceptionally high HR $_{\rm rest}$ can be a sign of over-exertion or illness.

VO2 MAX

VO2max: Set your maximal oxygen uptake, VO2_{max}.

About VO2_{max}

A clear link exists between oxygen consumption (VO2) of the body and cardiorespiratory fitness because oxygen delivery to tissues is dependent on lung and heart function. $VO2_{max}$ (maximal oxygen uptake, maximal aerobic power) is the maximal rate at which oxygen can be used by the body during maximal work; it is related directly to the maximal capacity of the heart to deliver blood to the muscles. $VO2_{max}$ can be measured or predicted by fitness tests (e.g. maximal tests, submaximal tests, Polar Fitness Test). $VO2_{max}$ is a good index of cardiorespiratory fitness and a good predictor of performance capability in aerobic events such as distance running, cycling, crosscountry skiing, and swimming.

VO2_{max} can be expressed either as milliliters per minute (ml/min = ml ■ min-1) or this value can be divided by the person's body weight in kilograms (ml/kg/min = ml ■ kg-1■ min-1).

The relationship between oxygen uptake (VO2) and heart rate (HR) is linear within an individual during dynamic exercise. Percentages of VO $_{2max}$ can be changed to % of HR $_{max}$ with the following formula: %HR $_{max}$ = (%VO2 $_{max}$ + 28.12)/1.28.

VO2_{max} is the basic variable of the intensity of exercise. When determining target exercise intensities heart rate is more practical and useful because it is easily and non-invasively obtained, e.g. on-line during exercise with heart rate monitors.

FIRMWARE UPDATE

The firmware of your V650 can be updated. Any time a new firmware version is available, FlowSync will notify you when connecting V650 to your computer with the USB cable. The firmware updates are downloaded via the USB cable and FlowSync software.

Firmware updates are performed to improve the functionality of your V650. They can include improvements to existing features or completely new features, for example.

HOW TO UPDATE FIRMWARE

To update the firmware of your V650, you must have:

- A Flow web service account
- Installed FlowSync software
- Registered your V650 in the Flow web service

Go to <u>flow.polar.com/start</u>, and create your Polar account in the Polar Flow web service and download and install FlowSync software onto your PC.

To update the firmware:

- 1. Plug the micro USB connector into your V650, and plug the other end of the cable into your PC.
- 2. FlowSync starts syncing your data.
- 3. After syncing, you are asked to update the firmware.
- 4. Choose Yes. New firmware is installed, and V650 reboots.

Before updating the firmware, the data from your V650 is synced to the Flow web service. Therefore you will not lose any data when updating.

COMPATIBLE SENSORS

Polar Heart rate Sensor Bluetooth® Smart	24
Pair a Heart Rate Sensor with V650	24
Polar Speed Sensor Bluetooth® Smart	24
Pair Speed sensor with V650	
Polar Cadence Sensor Bluetooth® Smart	
Pair Cadence sensor with V650	25

POLAR HEART RATE SENSOR BLUETOOTH® SMART

Polar heart rate sensor consists of comfortable strap and connector. It detects your heart rate accurately and sends the data to the V650 in real time.

Heart rate data gives you an insight into your physical condition and how your body responds to training. Although there are many subjective clues as to how your body is doing during exercise (perceived exertion, breathing rate, physical sensations), none is as reliable as measuring heart rate. It is objective and is affected by both internal and external factors - meaning you will have a dependable measure of your physical state.

PAIR A HEART RATE SENSOR WITH V650

- 1. Wear your heart rate sensor as instructed in <u>Wear the Heart Rate Sensor</u> and go to <u>Settings > General Settings > Pair new device</u>.
- 2. V650 lists the devices it finds. Tap the one you want to pair.
- 3. Pairing succeeded tells you that the pairing is complete.

POLAR SPEED SENSOR BLUETOOTH® SMART

There are a range of factors that can affect your cycling speed. Obviously fitness is one of them, however, weather conditions and the varying gradients of the road play a huge part too. The most advanced way of measuring how these factors affect your performance speed is with the aerodynamic speed sensor.

- Measures your current, average and maximum speeds
- Track your average speed to see your progress and performance improve
- Light yet tough, and easy to attach

PAIR SPEED SENSOR WITH V650

Before pairing a speed or cadence sensor, make sure they have been correctly installed. For more information on installing the sensors see their user manuals.

- 1. Go to **General Settings > Pairing > Pair new device**. The V650 should be less than three meters from the sensor you want to pair. It's close enough when it's mounted on the handlebar.
- 2. Activate the sensor you want to pair. Rotate the wheel a few times to activate the sensor. The flashing red light in the sensor indicates that you've activated the sensor.
 - Do the pairing within 30 seconds of the sensor activation.
- 3. V650 lists the devices it finds. The device closest to V650 is at the top of the list. Tap the device you want to pair.
- 4. Pairing succeeded tells you that the pairing is complete.
- 5. Link the sensor to Bike 1, Bike 2, Bike 3 or Bike 4. You can change the bike later in Paired devices.
- 6. Set the wheel size. Confirm and return to the PAIRING menu by tapping
- When you select a bike for a ride, your V650 automatically starts searching for the sensors you've linked to the bike. V650 is ready once the green circle around the sensor indicator is static.

POLAR CADENCE SENSOR BLUETOOTH® SMART

The most practical way of measuring your cycling session is with our advanced wireless cadence sensor. It measures your real-time, average and maximum cycling cadence as revolutions per minute so you can compare the technique of your ride against previous rides.

- Improves your cycling technique and identifies your optimal cadence
- Interference-free cadence data lets you evaluate your individual performance
- Designed to be aerodynamic and light

PAIR CADENCE SENSOR WITH V650

Before pairing a cadence sensor, make sure they have been correctly installed. For more information on installing the sensors see their user manuals.

- 1. Go to **General Settings > Pairing > Pair new device**. The V650 should be less than three meters from the sensor you want to pair. It's close enough when it's mounted on the handlebar.
- 2. Activate the sensor you want to pair. Rotate the crank a few times to activate the sensor. The flashing red light in the sensor indicates that you've activated the sensor.


- ① Do the pairing within 30 seconds of the sensor activation.
- 3. V650 lists the devices it finds. The device closest to V650 is at the top of the list. Tap the device you want to pair.
- 4. Pairing succeeded tells you that the pairing is complete.
- 5. Link the sensor to Bike 1, Bike 2, Bike 3 or Bike 4. You can change the bike later in Paired devices.
- When you select a bike for a ride, your V650 automatically starts searching for the sensors you've linked to the bike. V650 is ready once the green circle around the sensor indicator is static.

INSTALL BIKE MOUNT


POLAR ADJUSTABLE BIKE MOUNT

You can install the Polar Adjustable Bike Mount on the stem or on the left- or right-hand side of the handlebar.

- 1. Place the rubber base on the stem/handlebar
- 2. Position the bike mount on the rubber base so the POLAR logo is in line with the handlebar.
- 3. Secure the bike mount on to the stem/handlebar with the O-ring.

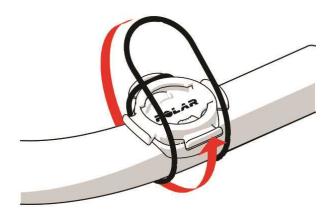


4. Align the ledges on the back of the V650 with the slots on the bike mount and turn clockwise until the V650 is in its place.

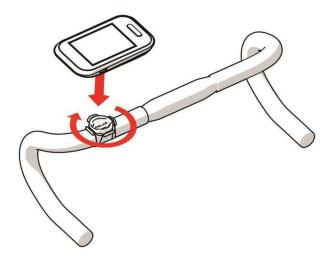

TRAINING


WEAR THE HEART RATE SENSOR

- 1. Moisten the electrode areas of the strap.
- 2. Attach the connector to the strap.
- 3. Adjust the strap length to fit tightly but comfortably. Tie the strap around your chest, just below the chest muscles, and attach the hook to the other end of the strap.
- 4. Check that the moist electrode areas are firmly against your skin and that the Polar logo of the connector is in a central and upright position.

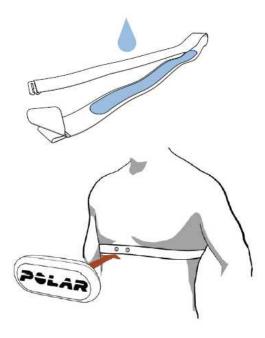

Detach the connector from the strap, and rinse the strap under running water after every training session. Sweat and moisture may keep the heart rate sensor activated, so also remember to wipe it dry.

START A TRAINING SESSION

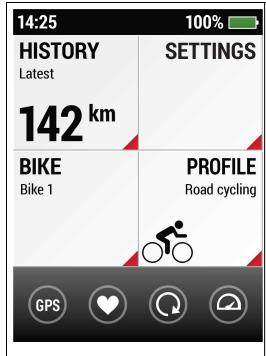

If you have turned on GPS in the profile you chose, the V650 automatically starts searching for the GPS satellite signals.


Keep your V650 still with the display facing upwards during the search. It typically takes 30-60 seconds the first time. In future it should take only a few seconds.

The V650 is ready once the green circle around GPS is static.



After finding the satellites, the V650 calibrates the altitude. Altitude calibration complete tells you that the calibration is ready. To make sure that the altitude remains accurate, calibrate your V650 manually whenever a reliable reference, such as a peak or a topographic map, is available or when at sea level. To calibrate manually, press the side button and choose Calibrate altitude. Then, set the altitude of your current location.

2. Go to BIKE to choose Bike 1, Bike 2, Bike 3 or Bike 4. Tap 3 to confirm.

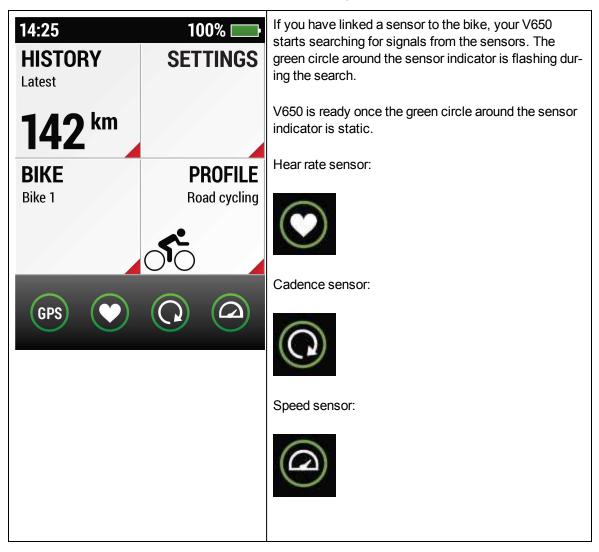

3. Press the front button to begin your ride.

DURING RIDE

- Swipe across the screen to change the training views.
- The red triangle at the bottom right corner of a data field indicates that you can quickly toggle the information shown, from speed to average speed, for example.
- Swipe down to open the pull-down menu. There you can adjust the safety light, the training sounds and the display brightness.
- Press and hold the front button to pause recording. Take lap with a regular press when FRONT BUTTON TAKES LAP function is on.

① In heavy rainfall the rain drops may interfere with the touch screen functions. To prevent this, lock the display from the side button menu.

TRAINING VIEWS

The training views of V650 are fully customizable. You can choose to have up to six training views for each profile, each training view containing up to eight items.

All available training view items are presented below. Choose the ones that suit you and your training needs and requirements best. For instructions on customizing the training views, see Sport profile settings.

Item sizes



You can see available item sizes for each training view item from the tables below.

TIME

Time of day	Current time of day
1/2, 1/4, 1/8	
Duration	Total duration of your training session so far
1/2, 1/4, 1/8	
Lap time	The stopwatch time for the current lap
1/2, 1/4, 1/8	

ENVIRONMENT

Altitude	Current altitude in feet or meters
1/2, 1/4, 1/8	
Altitude graph	Altitude as a graphical trend
1/2 🚅, 1/4 🖼	
Ascent	Ascended meters/feet
1/2, 1/4, 1/8	
Back to start	An arrow points in the direction of your starting point. Also shows
1/1 🚄, 1/2 🚄	the direct distance (beeline) between you and the starting point.
Barometer	Current air pressure
1/2, 1/4, 1/8	
Descent	Descended meters/feet
1/2, 1/4, 1/8	
Inclination	Incline/decline in degrees or in %
1/2, 1/4 🚅, 1/8	
Route	A line drawing of your route that indicates your current position and starting location.
1/1 🚄	Starting location.

BODY MEASUREMENT

Calories	The calories you've burned so far.
1/2, 1/4, 1/8	
Heart rate	Your heart rate in beats per minute (BPM) or percentage of maximum hear rate (%)
1/2, 1/4, 1/8	infunitieal fate (70)
HR zones	Your heart rate and duration of the ride. The bars indicate the time
1/1 🚅, 1/2 🚅	spent on each heart rate zone.

	You can lock the zone you're currently on by tapping the view. The limits of the locked zone are shown. If your heart rate goes outside the locked zone, you will be notified with audio feedback. Unlock the zone by tapping the view again.
HR graph	Your heart rate as a graphical trend.
1/2 🛋, 1/4 🛋	You can lock the zone you're currently on by tapping the view. The limits of the locked zone are shown. If your heart rate goes outside the locked zone, you will be notified with audio feedback. Unlock the zone by tapping the view again. Tap to toggle the view.
HR avg	Your average heart rate
1/2, 1/4, 1/8	
HR max	Your maximum heart rate
1/2, 1/4, 1/8	
Lap HR max	Your maximum heart rate for the current lap
1/2, 1/4, 1/8	

DISTANCE

Distance	The distance you've traveled during the ride
1/2, 1/4, 1/8	
Lap distance	The distance you've traveled during the current lap
1/2, 1/4, 1/8	

SPEED

Speed / Pace	Current speed (km/h or mph)
1/2, 1/4, 1/8	
Speed avg / Pace avg	Average speed (km/h or mph)

1/2, 1/4, 1/8	
Speed max / Pace max	Maximum speed (km/h or mph)
1/2, 1/4, 1/8	
Lap speed max / Lap pace max	Average speed (km/h or mph) for the current lap
1/2, 1/4, 1/8	
Speed graph / Pace graph	Shows your current speed (km/h or mph) and the latest speed changes as a graphical trend.
1/2 🚅, 1/4 🚅	changes as a graphical trend.
VAM	Ascended feet/meters per hour
1/2, 1/4, 1/8	


CADENCE

Cadence	Pedaling rate as rotations per minute
1/2, 1/4, 1/8	
Cadence avg	Average pedaling rate
1/2, 1/4, 1/8	


LAP INFORMATION

Every time you take a lap, the lap notification is displayed for a moment. If you'd like to follow the lap information during the lap, you can choose a separate **Lap view** in Sport profile settings.

Lap notification:

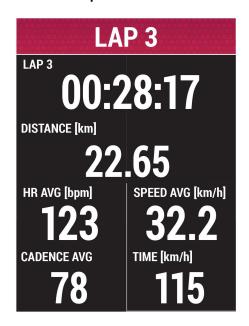

Lap view:

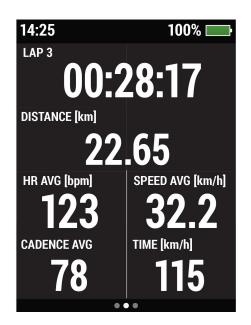

BACK TO START

The Back to start feature guides your way back to the starting point. When the V650 finds the GPS satellite signals in the beginning of the training session, your location is saved as a starting point.

When it is time to return to your starting point, do the following:

- Browse to the BACK TO START-view.
- Keep moving in order for the V650 to determine which direction you are going. An arrow will point in the direction of your starting point.
- To get back to the starting point, navigate in the direction of the arrow.
- The V650 also shows the direct distance (beeline) between you and the starting point.
- Always keep a map at hand in case the V650 loses the satellite signal or the battery runs out.

This feature uses the GPS function. Set GPS on in sport profile settings. For instructions, see Sport Profiles.

PAUSE AND STOP TRAINING

To pause training recording, press and hold the front button. To continue training recording, choose **CONTINUE**.

To stop recording completely, choose **STOP**.

Take care for your heart rate sensor after training. Detach the connector from the strap and rinse the strap under running water after every use. For complete care and maintenance instructions, see <u>Taking care of your V650</u>.

AFTER TRAINING

SUMMARY

After each training session, you'll get an instant summary of your session. The summary includes:

- Duration of your session
- Distance
- Average and maximum heart rate
- Average and maximum speed/pace
- Altitude-compensated calories and fat burn % of calories
- Training Benefit: Textual feedback, for example Steady state training+, is displayed if you trained at least a total of 10 minutes in the sport zones. For more information, see <u>Training Benefit</u>.
- Time spent on each heart rate zone
- Average and maximum cadence
- · Ascent and descent
- Maximum altitude

Lap details

- Lap number and time
- Distance
- Average heart rate
- Average speed
- Average cadence

To view your training summary later, go to **HISTORY > Sessions**.

HISTORY SESSIONS

The V650 saves the summary of your ride in **HISTORY** > **Sessions**. There you can see a list of your sessions with the following information: date, start time, profile and bike.

- Tap a session to open its summary. Browse the summary by swiping left or right.
- Tap and hold to delete a session.

For deeper analysis, transfer your training history to the Polar Flow web service with the USB cable and FlowSync software. The web service offers various options to analyze the data with.

TOTALS

To view your training totals go to **HISTORY** > **Totals**.

Totals includes cumulative information recorded during training sessions since the last reset:

- Time frame
- Duration
- Distance
- Calories
- Distance ridden on Bike 1, Bike 2, Bike 3 and Bike 4
- Tap the field to reset totals. Bike totals need to be reset separately.

The values are updated automatically when you stop recording.

Use the total values file as a seasonal or monthly counter of riding data.

FEATURES

GPS

The V650 has built-in GPS that provides accurate speed and distance measurement, and allows you to see your route on map in the Flow web service after your session. V650 includes the following GPS features:

- Distance: Gives you accurate distance during and after your session.
- Speed: Accurate speed information during and after your session.
- Back to start: Directs you to your starting point in the shortest distance possible and shows the distance to your starting point. Now you can check out more adventurous routes and explore them safely, knowing that your V650 can take you back to where you started.
- Route: A line-drawing of your route that indicates your current position and starting location.

BAROMETER

V650 measures altitude with an atmospheric air pressure sensor and converts the measured air pressure into an altitude reading. This is the most accurate way to measure altitude and altitude changes (ascent / descent).

The barometer features include:

- Altitude, ascent and descent
- Inclinometer (Requires Speed Sensor Bluetooth® Smart)
- Real time VAM (mean ascent velocity)
- · Altitude-compensated calories

To make sure that the altitude remains accurate, it needs to be calibrated whenever a reliable reference, such as a peak or a topographic map, is available or when at sea level. Pressure variations due to weather conditions or indoor air-conditioning may affect altitude readings.

SPORT PROFILES

V650 has three profiles for cycling (and one profile for other sports). You can define specific settings for each one of them. For example, you can customize each profile with up to six different training views, to see the information you really want.

For more information, see Sport Profile Settings.

SMART COACHING

Whether it's working out at the right intensity or receiving instant feedback, Smart Coaching offers a choice of unique, easy-to-use features, personalized to your needs and designed for maximum enjoyment and motivation when training.

V650 includes the following Smart Coaching features:

- Heart rate zones: Heart rate zones provide an easy way to select and monitor the intensity of your training and to follow heart rate-based training programs.
- Smart calories: The most accurate calorie counter on the market counts the number of calories burned.
- Training Benefit: The V650 gives motivating feedback about the effect of your training immediately after your session.

POLAR HEART RATE ZONES

Polar heart rate zones introduce a new level of effectiveness in heart rate-based training. Training is divided into five heart rate zones based on percentages of maximum heart rate. With heart rate zones, you can easily select and monitor training intensities.

Target zone	Intensity % of HRmax*, bpm	Example dur- ations	Training effect
MAXIMUM	90–100% 171–190 bpm	less than 5 minutes	Benefits: Maximal or near maximal effort for breathing and muscles.
50			Feels like: Very exhausting for breathing and muscles.
71			Recommended for: Very experienced and fit athletes. Short intervals only, usually in final preparation for short events.
HARD	80–90% 152–172 bpm	2–10 minutes	Benefits: Increased ability to sustain high speed endurance.
4			Feels like: Causes muscular fatigue and heavy breathing.
~1			Recommended for: Experienced athletes for year- round training, and for various durations. Becomes more important during pre competition season.
MODERAT- E	70–80% 133–152 bpm	10–40 minutes	Benefits: Enhances general training pace, makes moderate intensity efforts easier and improves efficiency.
2			Feels like: Steady, controlled, fast breathing.
A			Recommended for: Athletes training for events, or looking for performance gains.
LIGHT	60–70% 114-133	40–80 minutes	Benefits: Improves general base fitness, improves

Target zone	Intensity % of HRmax*, bpm	Example dur- ations	Training effect
7	bpm		recovery and boosts metabolism. Feels like: Comfortable and easy, low muscle and cardiovascular load.
			Recommended for: Everybody for long training sessions during base training periods and for recovery exercises during competition season.
VERY LIGHT	50–60% 104–114 bpm	20–40 minutes	Benefits: Helps to warm up and cool down and assists recovery.
11.			Feels like: Very easy, little strain.
X			Recommended for: For recovery and cool-down, throughout training season.

HRmax = Maximum heart rate (220-age). Example: 30 years old, 220–30=190 bpm.

Training in heart rate zone 1 is done at a very low intensity. The main training principle is that performance improves when recovering after, and not only during training. Accelerate the recovery process with very light intensity training.

Training in heart rate zone 2 is for endurance training, an essential part of any training program. Training sessions in this zone are easy and aerobic. Long-duration training in this light zone results in effective energy expenditure. Progress will require persistence.

Aerobic power is enhanced in heart rate zone 3. The training intensity is higher than in sport zones 1 and 2, but still mainly aerobic. Training in sport zone 3 may, for example, consist of intervals followed by recovery. Training in this zone is especially effective for improving the efficiency of blood circulation in the heart and skeletal muscles.

If your goal is to compete at top potential, you will have to train in heart rate zones 4 and 5. In these zones, you exercise anaerobically in intervals of up to 10 minutes. The shorter the interval, the higher the intensity. Sufficient recovery between intervals is very important. The training pattern in zones 4 and 5 is designed to produce peak performance.

The Polar target heart rate zones can be personalized by using a laboratory measured HRmax value, or by taking a field test to measure the value yourself. When training in a target heart rate zone, try to make use of the entire zone. The mid-zone is a good target, but keeping your heart rate at that exact level all the time is not necessary. Heart rate gradually adjusts to training intensity. For instance, when crossing from heart rate target zone 1 to 3, the circulatory system and heart rate will adjust in 3-5 minutes.

Heart rate responds to training intensity depending on factors such as fitness and recovery levels, as well as environmental factors. It is important to look out for subjective feelings of fatigue, and to adjust your training program accordingly.

SMART CALORIES

The most accurate calorie counter on the market calculates the number of calories burned. The energy expenditure calculation is based on:

- Body weight, height, age, gender
- Individual maximum heart rate (HR_{max})
- Heart rate during training
- Individual resting heart rate value (HR_{rest})
- Individual maximal oxygen uptake (VO2_{max})
- Altitude

For best possible Smart Calories information accuracy, please give V650 your measured VO2max and HRmax values if you have them.

TRAINING BENEFIT

The Training Benefit feature helps you better understand the effectiveness of your training. This feature requires the use of the heart rate sensor. After each training session you get textual feedback on your performance providing that you have trained at least a total of 10 minutes in the sport zones. The feedback is based on training time distribution on sport zones, calorie expenditure and duration. In Training Files you get the feedback in more detail. The descriptions of different training benefit options are listed in the table below

Feedback	Benefit
Maximum training+	That was a hard session! You improved your sprint speed and the nervous system of your muscles, which make you more efficient. This session also increased your resistance to fatigue.
Maximum training	That was a hard session! You improved your sprint speed and the nervous system of your muscles, which make you more efficient.
Maximum & Tempo training	What a session! You improved your speed and efficiency. This session also significantly developed your aerobic fitness and your ability to sustain high intensity effort for longer.
Tempo & Maximum training	What a session! You significantly improved your aerobic fitness and your ability to sustain high intensity effort for longer. This session also developed your speed and efficiency.
Tempo training+	Great pace in a long session! You improved your aerobic fitness, speed, and ability to sustain high intensity effort for longer. This session also increased your resistance to fatigue.

Feedback	Benefit
Tempo training	Great pace! You improved your aerobic fitness, speed, and ability to sustain high intensity effort for longer.
Tempo & Steady state training	Good pace! You improved your ability to sustain high intensity effort for longer. This session also developed your aerobic fitness and the endurance of your muscles.
Steady state & Tempo training	Good pace! You improved your aerobic fitness and the endurance of your muscles. This session also developed your ability to sustain high intensity effort for longer.
Steady state training +	Excellent! This long session improved the endurance of your muscles and your aerobic fitness. It also increased your resistance to fatigue.
Steady state training	Excellent! You improved the endurance of your muscles and your aerobic fitness.
Steady state & Basic training, long	Excellent! This long session improved the endurance of your muscles and your aerobic fitness. It also developed your basic endurance and your body's ability to burn fat during exercise.
Steady state & Basic training	Excellent! You improved the endurance of your muscles and your aerobic fitness. This session also developed your basic endurance and your body's ability to burn fat during exercise.
Basic & Steady state training, long	Great! This long session improved your basic endurance and your body's ability to burn fat during exercise. It also developed the endurance of your muscles and your aerobic fitness.
Basic & Steady state training	Great! You improved your basic endurance and your body's ability to burn fat during exercise. This session also developed the endurance of your muscles and your aerobic fitness.
Basic training, long	Great! This long, low intensity session improved your basic endurance and your body's ability to burn fat during exercise.
Basic training	Well done! This low intensity session improved your basic endurance and your body's ability to burn fat during exercise.
Recovery training	Very nice session for your recovery. Light exercise like this allows your body to adapt to your training.

POLAR FLOW WEB SERVICE

The Polar Flow web service allows you to plan and analyze every detail of your training and learn more about your performance. Follow and visually analyze your progress, create training targets, and add them and your favorite routes to your favorites.

With the Flow web service you can:

- · Analyze all of your training details with visual graphs and a route view
- Compare specific data with others like laps or speed vs. heart rate
- See long-term progress by following the trends and details which matter to you the most
- Compare training sessions with your own and others' sessions
- Share highlights with your followers
- Relive your and other users' sessions afterward

To start using the Flow web service, go to <u>flow.polar.com/start</u>, and create your Polar account. **If you already** have a Polar Account, you don't need to register a new account in the Flow web service. You can sign in with the same username and password you are using e.g. with polarpersonaltrainer.com.

Download and install FlowSync software from the same place to allow you to sync data between V650 and Flow web service.

Feed

In Feed you can see what you've been up to lately, plus you can see your friends' activities and comment.

Explore

In Explore you can discover routes by browsing the map. See public training sessions that other users have shared, and relive your own or other people's routes and see where the highlights happened.

Diary

In Diary you can see your scheduled training sessions, as well as review past sessions. Information shown includes: training plans in day, week or month view, individual sessions and weekly summaries.

Progress

In Progress you can follow your development with reports. Reports are a handy way to follow your progress in training over longer periods. In week, month and year reports you can choose the sport for the report. In custom period, you can choose both the period and the sport. Choose the time period and sport for report from the drop down lists, and press the wheel icon to choose what data you want to view in the report graph.

For support and more information about using the Flow web service, go to www.-polar.com/en/support/flow.

SYNCING

To sync data with the Flow web service you need FlowSync software. Go to flow.polar.com/V650, and download and install the software before trying to sync.

- 1. Plug the micro USB connector into the USB port and the other end of the cable into your PC.
- 2. Make sure FlowSync software is running.
- 3. The FlowSync window opens on your computer, and the syncing starts.
- 4. Completed is displayed when you are done.

Every time you plug in your V650 to your computer, the Polar FlowSync software will transfer your data to the Polar Flow web service and sync any settings you may have changed. If the syncing does not automatically start, start FlowSync from the desktop icon (Windows) or from the applications folder (Mac OS X). Every time a firmware update is available, FlowSync will notify you, and request you to install it.

If you change settings in the Flow web service while your V650 is plugged into your computer, press the synchronize on FlowSync to transfer to the settings to your V650.

For support and more information about using FlowSync software, go to www.-polar.com/en/support/FlowSync.

CARING FOR YOUR V650

Like any electronic device, the Polar V650 should be treated with care. The suggestions below will help you fulfil guarantee obligations and enjoy this product for many years to come.

POLAR V650

Keep your training device clean. Use a damp paper towel to wipe dirt from the training device. To maintain the water resistance, do not wash the training device with a pressure washer. Do not immerse the training device in water. Never use alcohol or any abrasive material such as steel wool or cleaning chemicals.

After each time of using the USB port of the training device, check visually that there is no hair, dust or other dirt on the sealing surface area of the lid/back case. Gently wipe to remove any dirt. Do not use any sharp tools or equipment for cleaning, which could cause scratches to the plastic parts.

 Not suitable for bathing or swimming. Protected against wash splashes and raindrops. Do not immerse the training device in water. Using the training device in excessive rainfall may cause interference on GPS reception.

HEART RATE SENSOR

Connector: Detach the connector from the strap after every use and dry the connector with a soft towel. Clean the connector with a mild soap and water solution when needed. Never use alcohol or any abrasive material (eg. steel wool or cleaning chemicals).

Strap: Rinse the strap under running water after every use and hang to dry. Clean the strap gently with a mild soap and water solution when needed. Do not use moisturizing soaps, because they can leave residue on the strap. Do not soak, iron, dry clean or bleach the strap. Do not stretch the strap or bend the electrode areas sharply.

Check the washing instructions on the label of the strap.

SPEED SENSOR BLUETOOTH® SMART AND CADENCE SENSOR BLUETOOTH® SMART

Clean the sensors with a mild soap and water solution and rinse them with clean water. To maintain the water resistance, do not wash the sensors with a pressure washer. Do not immerse the speed sensor or cadence sensor in water. Never use alcohol or any abrasive material such as steel wool or cleaning chemicals. Avoid hard hits to the sensors, as these may damage the sensor units.

STORING

Keep your training device and sensors in a cool and dry place. Do not keep them in a damp environment, in non-breathable material (a plastic bag or a sports bag) nor with conductive material (a wet towel). Do not expose the training device to direct sunlight for extended periods, such as by leaving it in a car or mounted on the bike mount.

We recommend that you store the V650 charged. The battery slowly loses its charge when it is stored. If you are going to store your V650 for several months, we recommend that you recharge it after a few months. This will prolong the battery lifetime.

Dry and store the strap and the connector separately to maximize the heart rate sensor battery lifetime. Keep the heart rate sensor in a cool and dry place. To prevent snap oxidation, do not store the heart rate sensor wet in non-breathing material, such as a sports bag. Do not expose the heart rate sensor to direct sunlight for extended periods.

SERVICE

During the two-year guarantee/warranty period we recommend that you have service done by an authorized Polar Service Center only. The warranty does not cover damage or consequential damage caused by service not authorized by Polar Electro. For further information, see <u>Limited International Polar Guarantee</u>.

For contact information and all Polar Service Center addresses, visit www.polar.com/support and country-specific websites.

Register your Polar product at http://register.polar.fi/ to ensure we can keep improving our products and services to better meet your needs.

The username for your Polar Account is always your email address. The same username and password are valid for Polar product registration, polarpersonaltrainer.com, Polar discussion forum and newsletter registration.

IMPORTANT INFORMATION

BATTERIES

The Polar V650 training device has an internal, rechargable battery. Rechargeable batteries have a limited number of charge cycles. You can charge and discharge the battery over 300 times before a notable decrease in its capacity. The number of charge cycles also varies according to use and operating conditions.

At the end of the working life of the product Polar encourages you to minimize possible effects of waste on the environment and human health by following local waste disposal regulations and, where possible, utilizing separate collection of electronic devices. Do not dispose of this product as unsorted municipal waste.

The Polar *Bluetooth* Smart® heart rate sensor has a user changeable battery. To change the battery yourself, please follow the instructions carefully as instructed in chapter Change the Heart Rate Sensor Battery.

The batteries for the speed sensor *Bluetooth* Smart®, and cadence sensor *Bluetooth* Smart® cannot be replaced. Polar has designed the sensors to be sealed in order to maximize mechanical longevity and reliability. The sensors have long-life batteries inside. To purchase a new sensor contact your authorized Polar Service Center or retailer.

Keep the batteries away from children. If swallowed, contact a doctor immediately. Batteries should be disposed of properly according to local regulations.


CHANGE THE HEART RATE SENSOR BATTERY

To change the battery of the heart rate sensor yourself, carefully follow the instructions below:

When changing the battery, make sure the sealing ring is not damaged, in which case you should replace it with a new one. You can purchase the sealing ring/battery kits at well-equipped Polar retailers and authorized Polar Services. In the USA and Canada, the additional sealing rings are available at authorized Polar Service Centers. In the USA the sealing ring/battery kits are also available at www.shoppolar.com.

When handling a new, fully charged battery, avoid clasp-like contact, i.e. simultaneously from both sides, with metal or electrically conducting tools, like tweezers. This may short circuit the battery, causing it to discharge more rapidly. Typically, short circuiting does not damage the battery, but it may decrease the capacity and the lifetime of the battery.

- 1. Lever the battery cover open by using the clip on the strap.
- Remove the old battery from the battery cover with a suitable sized small rigid stick or bar, such as a toothpick. A
 non-metal tool is preferable. Be careful not to damage the
 battery cover.
- 3. Insert a new battery (CR 2025) inside the cover with the negative (-) side facing up.
- 4. Align the ledge on the battery cover with the slot on the connector and press the battery cover back into place. You should hear a snap.

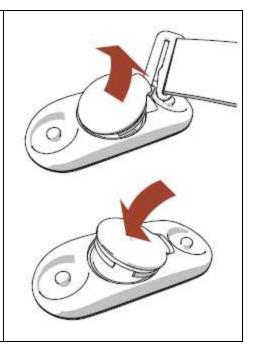

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

PRECAUTIONS

The Polar V650 shows your performance indicators. The training device is designed to indicate the level of physiological strain and recovery during and after an exercise session. It measures heart rate, speed and distance. It also measures cycling cadence when used with a cadence sensor. No other use is intended or implied.

The training device should not be used for obtaining environmental measurements that require professional or industrial precision.

INTERFERENCE DURING TRAINING

Electromagnetic Interference and Training Equipment

Disturbance may occur near electrical devices. Also WLAN base stations may cause interference when training with the training device. To avoid erratic reading or misbehavior, move away from possible sources of disturbance.

MINIMIZING RISKS WHEN TRAINING

Training may include some risk. Before beginning a regular training program, it is recommended that you answer the following questions concerning your health status. If you answer yes to any of these questions,

we recommend that you consult a doctor before starting any training program.

- Have you been physically inactive for the past 5 years?
- Do you have high blood pressure or high blood cholesterol?
- Are you taking any blood pressure or heart medication?
- Do you have a history of breathing problems?
- Do you have symptoms of any disease?
- Are you recovering from a serious illness or medical treatment?
- Do you use a pacemaker or other implanted electronic device?
- Do you smoke?
- · Are you pregnant?

Note that in addition to training intensity, medications for heart conditions, blood pressure, psychological conditions, asthma, breathing, etc., as well as some energy drinks, alcohol, and nicotine may also affect heart rate.

It is important to be sensitive to your body's responses during training. If you feel unexpected pain or excessive fatigue when training, it is recommended that you stop the training or continue at a lighter intensity.

Note! If you are using a pacemaker, you can use Polar products. In theory interference to pacemaker caused by Polar products should not be possible. In practice no reports exist to suggest anyone ever having experienced interference. We cannot however issue an official guarantee on our products' suitability with all pacemakers or other implanted devices due to the variety of devices available. If you have any doubts, or if you experience any unusual sensations while using Polar products, please consult your physician or contact the implanted electronic device manufacturer to determine safety in your case.

If you are allergic to any substance that comes into contact with your skin or if you suspect an allergic reaction due to using the product, check the listed materials in <u>Technical Specifications</u>. To avoid any skin reaction to the heart rate sensor, wear it over a shirt, but moisten the shirt well under the electrodes to ensure flawless operation.

The combined impact of moisture and intense abrasion may cause a black color to come off the heart rate sensor's surface, possibly staining light-colored clothes. If you use perfume or insect repellent on your skin, you must ensure that it does not come into contact with the training device or the heart rate sensor.

TECHNICAL SPECIFICATIONS POLAR V650

Battery type:	Rechargeable 1900 mAh Li-ion Polymer battery
Operating time:	10 h
Operating temperature:	-20 °C to +50 °C / -4 °F to 122 °F
V650 materials:	Acrylonitrile butadiene styrene (ABS), Polycarbonate (PC), Asahi Dragontrail (glass), Polyamide (PA)
Bikemount materials:	Polyoxymethylene (POM)
Watch accuracy:	Better than ± 0.5 seconds / day at 25 °C / 77 °F temperature
GPS accuracy:	distance ±2%, speed ±2km/h
Altitude accuracy:	±20 m / 65 ft
Ascent/Descent resolution:	5 m
Maximum altitude:	9000 m / 29528 ft
Sample rate:	1 Hz
Accuracy of the heart rate monitor:	± 1% or 1 bpm, whichever larger. Definition applies to stable conditions
Heart rate measuring range:	15-240 bpm
Current speed display range:	0-399 km/h or 248 mph
Water resistance:	Water proof IPX7
	Protected against wash splashes and raindrops. Do not immerse the V650 in water. Using the V650 in heavy rainfall may cause interference on GPS reception.

V650 limit values

Maximum number of saved sessions:	The V650 stores the sessions from the current week and the previous four weeks.
Maximum time recorded in one session:	99 h 59 min 59 s
Maximum number of laps recorded in one session:	999
Maximum number of automatic laps recorded in one session:	999
Total calories:	65535

HEART RATE SENSOR

Battery life:	300 h
Battery type:	CR2025
Battery sealing ring:	O-ring 20.0 x 0.90 Material Silicone
Operating temperature:	-10 °C to +50 °C / 14 °F to 122 °F
Connector material:	ABS
Strap material:	38% Polyamide, 29% Polyurethane, 20% Elastane, 13% Polyester
Water resistance:	30 m

Uses Bluetooth® Smart wireless technology.

POLAR FLOWSYNC SOFTWARE AND USB CABLE

To use FlowSync software you need a computer with Microsoft Windows or Mac OS X operating system with an internet connection and a free USB port for USB cable.

FlowSync is compatible with the following operating systems:

Computer operating system	32-bit	64-bi
Windows 7	X	X
Windows 8	X	X
Mac OS X 10.6	Х	X
Mac OS X 10.7	X	X
Mac OS X 10.8	X	X
Mac OS X 10.9	Х	X
Mac OS X 10.10	Х	X

WATER RESISTANCE

Water resistance of Polar products is tested according to International IEC 60529 IPX7 (1m, 30min, 20°C). Products are divided into four different categories according to water resistance. Check the back of your Polar product for the water resistance category and compare it to the chart below. Please note that these definitions do not necessarily apply to products of other manufacturers.

Marking on case back	Water resistant characteristics
Water resistant IPX7	Not suitable for bathing or swimming. Protected against wash splashes and raindrops. Do not wash with a pressure washer.

Marking on case back	Water resistant characteristics
Water resistant	Not suitable for swimming. Protected against wash splashes, sweat, raindrops etc. Do not wash with a pressure washer.
Water resistant 30 m/50 m	Suitable for bathing and swimming
Water resistant 100 m	Suitable for swimming and snorkeling (without air tanks)

LIMITED INTERNATIONAL POLAR GUARANTEE

- This guarantee does not affect the consumer's statutory rights under applicable national or state laws in force, or the consumer's rights against the dealer arising from their sales/purchase contract.
- This limited Polar international guarantee is issued by Polar Electro Inc. for consumers who have purchased this product in the USA or Canada. This limited Polar international guarantee is issued by Polar Electro Oy for consumers who have purchased this product in other countries.
- Polar Electro Oy/Polar Electro Inc. guarantees the original consumer/purchaser of this device that the
 product will be free from defects in material or workmanship for two (2) years from the date of purchase.
- The receipt of the original purchase is your proof of purchase!
- The guarantee does not cover the battery, normal wear and tear, damage due to misuse, abuse, accidents or non-compliance with the precautions; improper maintenance, commercial use, cracked, broken or scratched cases/displays, armband, elastic strap and Polar apparel.
- The guarantee does not cover any damage/s, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the product.
- Items purchased second hand are not covered by the two (2) year warranty, unless otherwise stipulated by local law.
- During the guarantee period, the product will be either repaired or replaced at any of the authorized Polar Service Centers regardless of the country of purchase.

Guarantee with respect to any product will be limited to countries where the product has been initially marketed.

This product is compliant with Directives 1999/5/EC and 2011/65/EU. The relevant Declaration of Conformity is available at www.polar.com/en/regulatory_information.

Regulatory information is available at www.polar.com/support.

This crossed out wheeled bin marking shows that Polar products are electronic devices and are in the scope of Directive 2012/19/EU of the European Parliament and of the Council on waste electrical and

electronic equipment (WEEE) and batteries and accumulators used in products are in the scope of Directive 2013/56/EC of the European Parliament and of the Council of 6 September 2006 on batteries and accumulators and waste batteries and accumulators. These products and batteries/accumulators inside Polar products should thus be disposed of separately in EU countries. Polar encourages you to minimize possible effects of waste on the environment and human health also outside the European Union by following local waste disposal regulations and, where possible, utilize separate collection of electronic devices for products, and battery and accumulator collection for batteries and accumulators.



This marking shows that the product is protected against electric shocks.

Polar Electro Oy is a ISO 9001:2008 certified company.

© 2014 Polar Electro Oy, FI-90440 KEMPELE, Finland. All rights reserved. No part of this manual may be used or reproduced in any form or by any means without prior written permission of Polar Electro Oy.

The names and logos in this user manual or in the package of this product are trademarks of Polar Electro Oy. The names and logos marked with a ® symbol in this user manual or in the package of this product are registered trademarks of Polar Electro Oy. Windows is a registered trademark of Microsoft Corporation and Mac OS is a registered trademark of Apple Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Polar Electro Oy is under license.

DISCLAIMER

- The material in this manual is for informational purposes only. The products it describes are subject to change without prior notice, due to the manufacturer's continuous development program.
- Polar Electro Inc./Polar Electro Oy makes no representations or warranties with respect to this manual or with respect to the products described herein.
- Polar Electro Inc./Polar Electro Oy shall not be liable for any damages, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the use of this material or the products described herein.

Manufactured by:
Polar Electro Oy
Professorintie 5
FI-90440 KEMPELE
Tel +358 8 5202 100
Fax +358 8 5202 300

www.polar.com

1.0 07/2014