


INSTRUCTION MANUAL

20.1" Wide LCD Screen

All in One System Built-in 8Ch DVR

MODEL: LCD2084, LCD2088

Ver. 051309, 061009, 102609

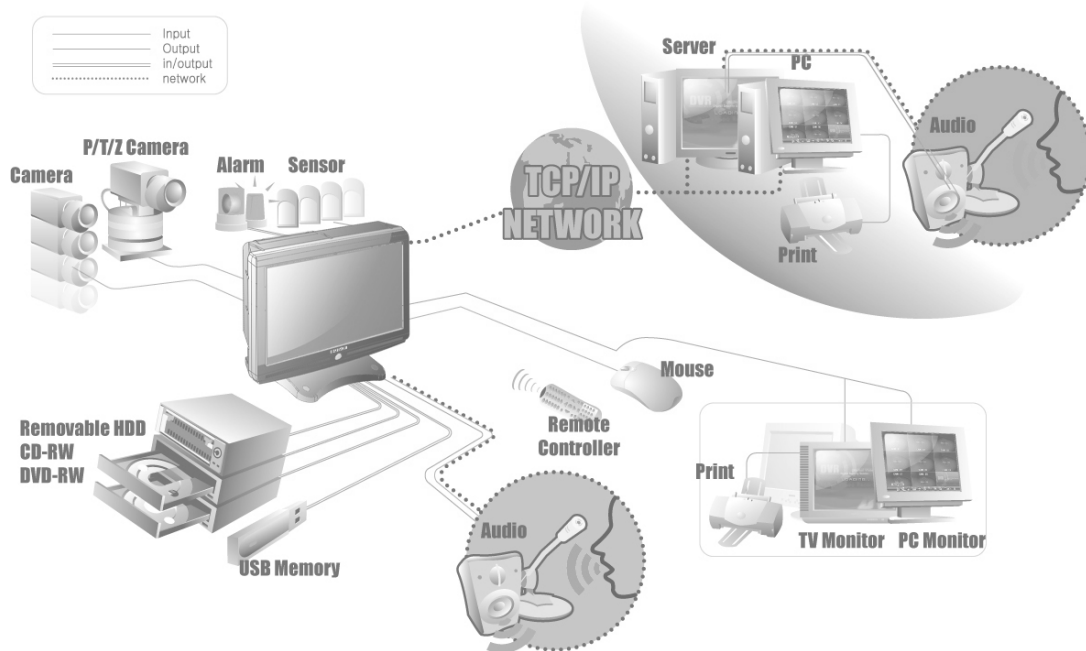

Copyright © 2009 Clover Electronics U.S.A. All Rights Reserved.

CONTENTS

ABOUT THIS MANUAL.....	9
1. UNPACKING.....	11
1-1. 20.1" WIDE LCD PANEL BUILT-IN 8 CH DIGITAL VIDEO RECORDER	12
2. FEATURES.....	13
3. WHAT TO DO AT THE TIME OF INSTALLATION.....	15
4. SPECIFICATIONS.....	17
5. INSTALLATION	19
5-1. CONTROLS AND CONNECTORS.....	20
5-2. NOTE FOR INSTALLATION	23
5-3. SYSTEM CONNECTION	24
5-4. INSTALLATION	25
5-4.1. Camera Connection	25
5-4.2. Installation of the Monitor.....	25
5-4.2.1. Connection of Composite Monitor	26
5-4.3. Sensor Connection and RELAY IN &OUT.....	26
5-4.4. RS485 Connection	27
5-4.5. Connection to an Ethernet Network (Optional).....	27
5-4.6. POWER CABLE CONNECTION	28
6. HOW TO OPERATE.....	29
6-1. GENERAL INFORMATION	31
6-2. OPERATING INTERFACE	32
6-3. IR REMOTE CONTROLLER	33
6-4. POWER ON/OFF	34
6-4.1. POWER ON	34
6-4.2. STAND-BY POWER MODE BUTTON.....	34
6-4.3. POWER OFF	34
6-5. MENU WINDOW	36
6-6. DISPLAY SCREEN.....	37

6-6.1. FULL SCREEN.....	37
6-6.2. SPLIT SCREENS.....	38
6-7. LIVE	39
6-7.1. FULL SCREEN.....	39
6-7.2. SPLIT SCREEN	39
6-7.3. SEQUENCING SCREENS	40
6-7.4. LIVE AUDIO	41
6-7.4.1. COMMUNICATION BETWEEN MONITOR AND CLIENT COMPUTER VIA INTERNET	42
6-7.4.2. COMMUNICATION BETWEEN MONITOR AND CAMERAS	42
6-7.5. ZOOM.....	43
6-7.6. OSD ON / OFF	44
6-7.7. PAN / TILT	45
6-7.8. SYSTEM STATUS.....	48
6-7.9. POWER LOSS LISTS.....	49
6-7.10. VIDEO LOSS LIST.....	51
6-8. VIDEO ENHANCE.....	53
6-8.1. CAMERA INPUT CONFIG (CONTRAST / BRIGHTNESS).....	54
6-8.2. VGA OUTPUT CONFIG (SCALE / CONTRAST / BRIGHTNESS / SATURATION)	55
6-9. RECORD	56
6-9.1. Manual (Continuous) recording	56
6-9.2. Manual Event Recording.....	56
6-9.3. Timer Recording.....	57
6-9.4. Timer Event Recording	58
6-9.5. Audio Recording.....	59
6-9.6. Estimated Recording Time.....	59
6-9.7. Recording Icons	60
6-10. REPLAY	61
6-10.1. QUICK REPLAY	61
6-10.2. REPLAY	61
6-10.2.1. Playback Devices.....	62
6-10.2.2. Set the Start Time	62
6-10.2.3. Replaying	64
6-10.2.4. Disappearance of Replay control buttons	66

Contents

6-11. COPY	68
6-11.1. Copying devices	68
6-11.2. Set the Copy Start Time (Copying extent)	69
6-11.3. Set the Copy End Time (Copying extent)	71
6-11.4. Copying the recorded data during replaying	72
6-11.5. PLAYER / AVI File Format	74
7. SETUP	75
7-1. SETUP	78
7-2. SYSTEM	79
7-2.1. SYSTEM NAME	80
7-2.2. LANGUAGE	81
7-2.3. TIME / DATE	81
7-2.4. SYSTEM CONFIG	83
7-2.4.1. FACTORY DEFAULT	84
7-2.4.2. LOAD CONFIG / BACKUP CONFIG	85
7-2.5. PASSWORD	87
7-2.6. IR REMOTE ID	88
7-2.7. FIRMWARE UPDATE	89
7-2.8. SYSTEM INFO	89
7-3. DISK MANAGER	90
7-3.1. HDD WRITE FAIL	91
7-3.2. HDD OVERWRITE	91
7-3.3. Format	91
7-4. CAMERA	92
7-4.1. Camera ON/OFF	93
7-4.2. Camera Name (Camera Title)	93
7-4.3. Buzzer	94
7-4.4. Relay	94
7-4.5. Pan/Tilt Settings	95
7-4.6. Display	99
7-4.7. Sequencing dwell time	99
7-5. AUDIO	100
7-5.1. Microphone Volume	100

7-6. RECORD.....	101
7-6.1. Record ICON Display.....	101
7-6.2. All Manual / Timer recording button	102
7-6.3. All Motion ON / OFF, Sensitivity Setting	103
7-6.4. All Sensors ON / OFF	104
7-6.5. Size (Recording Resolution)	104
7-6.6. Recording Speed.....	105
7-6.7. Recording Quality.....	106
7-6.8. Recording Mode.....	107
7-6.8.1. Manual Recording.....	107
7-6.8.2. Manual Event Recording	107
7-6.8.3. Timer Recording (Schedule Recording)	107
7-6.8.4. Timer Event Recording	107
7-6.9. Recording by Motion Detection.....	108
7-6.10. Recording by Sensor (PIR Sensor)	117
7-7. NETWORK.....	119
7-7.1. IP Mode	119
7-7.2. GATEWAY, SUBNET, IP ADDRESS	120
7-7.3. Port.....	121
7-7.3.1. Port Forwarding	121
7-7.4. MAC ID.....	121
7-7.5. MNS (MAC NAME SERVER)	122
7-7.6. DDNS (DYNAMIC DOMAIN NAME SYSTEM).....	123
7-7.7. HOW TO SETUP AND USE THE DDNS.....	125
7-7.7.1. Router.....	125
7-7.7.2. Registration to the DDNS server	125
7-7.8. EMAIL NOTIFICATION	126
8. REMOTE HOST PROGRAM	131
8-1. REMOTE PROGRAM OVERVIEW.....	133
8-2. INSTALLING THE PROGRAM TO PC.....	134
8-3. INTERNET EXPLORER	135
8-4. REMOTE HOST	137
8-4.1. Setup	139

Contents

8-4.2. Connection	142
8-4.3. Capture.....	143
8-4.4. Status	144
8-4.5. Replay	145
8-4.6. COPY	147
8-4.7. Switch the Normal Screen to Full Screen.....	149
8-4.8. Speaker / Microphone	150
8-4.9. Connection mode.....	151
8-4.9.1. Terminal mode.....	151
8-4.9.2. Multi mode.....	152
8-4.10. Copy in the Terminal mode (not available on this version).....	153
8-4.11. E-Map	155
8-4.11.1. Addition of map	155
8-4.11.2. Placement of cameras on the map	156
8-4.11.3. Usage of camera position	157
8-4.11.4. Deletion of Camera position icon.....	157
8-4.12. Pan / Tilt & Preset	158
8-5. PLAYER	159
9. APPENDIX.....	167
RECORDING TIME TABLE	168
FACTORY DEFAULT SETTINGS	169
10. FAQ.....	173
I CAN NOT LOGIN.....	174
11. LIMITED 1YEAR WARRANTY	175
12. HOW TO OBTAIN FACTORY SERVICE.....	176

About this manual

This is the Instruction Manual for 20.1" Wide TFT-LCD monitor built-in 8Ch DVR system, Model LCD2084 and LCD2088.

The last digit of the model numbers (e.g.: 4 and 8) represent the number of cameras included in the system.

This Manual describes how to install and operate the 20.1" Wide TFT-LCD monitor built-in 8Ch DVR system and provides specifications and features.

Please read this manual thoroughly and follow the installation process before using the system.



Note : Be sure to correctly follow step 3. What to do at the time of installation.

Contact our distributors or dealers when you have any queries.

1. Unpacking

Care should be taken when unpacking to avoid damaging the system.
Please check that the following items are included:



Note: Contact your dealer immediately if any components are missing.

1-1. 20.1" Wide LCD Panel Built-in 8 Ch Digital Video Recorder

LCD2084 is the most reliable and functional embedded DVR system available today. The system displays 8 Channels of live images in Real Time speed, compresses data digitally and records them to the Hard Disk Drive, which can be replayed and searched easily any time.

The **LCD2084** supports easy back up via USB port, external Hard Disk Drive and networking in both static & dynamic IP modes.

User can remotely view live images or search the recorded images.

Under emergency situation, the remote operator can control, turn on and turn off the field installed alarms, such as a siren or light.

It is a very user- friendly DVR system. User can control the **LCD2084** by Mouse or Buttons on the top panel or Remote controller.

2. Features

- ▶ **20.1" Wide Screen**
 - High resolution TFT-LCD 1,680(H) x 1,050(V), Contrast ratio 1,000:1, Response 3.9msec
- ▶ **Multi Functional Record**
 - Powerful, multiple Record Modes available: Manual (Continuous), Timer, and Motion Detection Recording.
- ▶ **User friendly GUI**
 - A few simple buttons for Easy control.
- ▶ **Automatic System Recovery**
 - Automatic and Complete System recovery within 10 seconds.
- ▶ **Easy PTZ control via RS port**
 - No need to use PTZ controller
 - PTZ control from remote PC
- ▶ **Networking**
 - DHCP based automatic network set-up-Easy Network Configuration from Dynamic IP to Dynamic IP
 - Support TCP/IP and Remote Control on all DVR features
 - Up to 10 users can remote access the system through DVRMaster (GUI) or Internet Explorer simultaneously.
 - DDNS support
- ▶ **MPEG-4 Algorithm Compression**
 - The most advanced compression available today.
- ▶ **High Resolution DVR 720 x 480**
 - Real time display 240 Frames/sec
 - Recording speed 240 Frames/sec based on 720x240
 - Programmable display resolution and recording speed on each channel
- ▶ **2 Way Audio**
 - Communicate between the system and cameras or between the system and client computer through the internet
- ▶ **Easy Data Playback in any PC**
 - Back Up data convertible to AVI file format.
- ▶ **Back UP**
 - External HDD, Stick memory, and through network access.
- ▶ **Desktop or Wall-mountable (VESA Mount)**

3. What to do at the time of Installation

The system should be installed in the following order;

1. Make sure all the required hardware is available.
 - 20.1" wide TFT-LCD monitor built-in 8 Ch DVR
 - Up to 8 cameras capacity (Refer to the retail box for the number of camera included in the system).
 - CCTV monitor or TV set if necessary
 - Network cable if connecting to a PC
2. Connect the cameras to the monitor (Refer to [Fig. 5-3]).
4. Confirm if live video is displayed on the monitor before going to the next step.
5. Select the Setup Menu and set current date and time (Refer to Section 7-2.3).
6. Run the FACTORY DEFAULT setting in the SYSTEM menu.
7. Perform HDD formatting.
8. Escape from Setup Menu.
9. Set values for required options.
10. Network cable should be connected to the monitor before turning the power on.
Refer to [Fig. 5-8] for the cable specification.

4. Specifications

	ITEM	DESCRIPTIONS
VIDEO SIGNAL	Television System	NTSC PAL
	Refresh Rate	60 fields/sec 50 fields/sec
	Video Resolution	720x480 720x576
	Video Inputs	8- 6pin Din Cameras and 8- BNC Cameras
	Video Input Signal	Composite 1.0 Vp-p 75 Ohms
	Video Output	1- Composite output
	Video Output Signal	Composite 1.0 Vp-p 75 Ohms
VIDEO FEATURES	Live	240 Frames/sec display 200 Frames/sec display
	Zoom	2 times digital
	Sequence	Sequence display in Full size
	Display Format	1 screen(full), Quad pages split
	Camera Video enhance	Brightness, Contrast control on each cameras
	LCD Display enhance	Brightness, Contrast, saturation, 4:3 or 16:10 selectable
AUDIO FEATURES	G.723	4ch Input / 1ch Output
RECORD	Recording Speed	240 Frames/sec 200 Frames/sec
	Recording resolution	720x480,720x240,360x240(NTSC) 720x576,720x288,360x288 (PAL)
	Codec	Mpeg4
	Recording	Timer, Motion, Alarm, Manual individually set
	Pre record	0~30 sec
	Material	SATA HDD(Auto overwrite)
SEARCH	Manual, Timer ,Motion, Alarm, Each Camera, All Camera	Fast x128 , Slow, Forward, Reverse, Frame by Frame
BACKUP	External HDD, USB memory, through Network	Each Camera, ALL Cameras, Time range
Recorded data lock	Data protection in overwrite HDD	Time range, Back up
USER INTERFACE	GUI	RGB 24bit full color
	Operating interface	Mouse, Keypad, IR remote controller, Network
NETWORK	Ethernet 10/100M Auto	TCP/IP, DHCP, MNS server
EMAIL NOTIFICATION	SMTP Server	Alarm, Motion, Record ON/OFF, Replay, HDD Fail, Video loss, Power Loss...etc
PC Program	Remote viewer	Same as DVR monitor (Mouse or Key button)
	PC Player	External HDD, USB memory, Internal HDD (Replay, Convert, Copy, Print)
USB	USB 2.0	for external DVD R/W, CD RW, HDD, USB memory
SERIAL	RS485	8 camera Pan/Tilt, Remote control
ALARM	Alarm Inputs	8 Inputs
	Alarm Outputs	1 Relay Output(1A max)
	Alarm Latch up	1~30 sec
	Buzzer Out	On/Off
HDD	SATA	Refer to the retail box
POWER	Input Voltage	AC 110V/ 220V 50~60Hz (Free voltage)
	Power consumption	Approx. 200W
CONNECTORS	Video Inputs	8- 6pin DIN & 8 BNC
	Video Output	1 RCA for slave monitor
	Audio Output	1 RCA for Speaker
	Alarm In/Out	Alarm In: 9pin terminal block, Alarm Out: 3pin terminal block
	RS485	2pin terminal block
	Ethernet	RJ45
	Mouse	USB mouse
MECHANICAL	Dimension(m/m)	520(W)x370(H)x80(D),520(W)x410(H)x190(D):with mounting bracket
	Weight	Approx.15 Lbs
ENVIRONMENT	Operating Temperature	0 ~ 60°C
	Humidity	10 ~ 60%

Stand-alone DVR Instruction Manual

LCD	Display	20.1" TFT LCD active matrix
	Pixel Pitch	0.258 mm x 0.258mm
	Active Display Area	433.44(H) x 270.90(V) mm
	Display Colors	16.7M (Hi-FRC)
	Display Mode	Normally White
	Pixel Arrangement	RGB vertical stripe
	Luminance of White	300 cd/m ²
	Contrast Ratio	1,000 : 1
	Viewing Angle L/R/U/D	85 / 85 / 75 / 85 degree
	Operating Temperature	0°C ~ 60°C
	Storage Temperature	-25°C ~ 60°C

[Fig. 4-1 Specifications]



Design and the specifications are subject to change without notice.


5. Installation

CONTENTS

5-1. CONTROLS AND CONNECTORS	20
5-2. NOTE FOR INSTALLATION	23
5-3. SYSTEM CONNECTION	24
5-4. INSTALLATION	25
5-4.1. CAMERA CONNECTION	25
5-4.2. INSTALLATION OF THE MONITOR	25
5-4.2.1. CONNECTION OF COMPOSITE MONITOR	26
5-4.3. SENSOR CONNECTION AND RELAY IN & OUT	26
5-4.4. RS485 CONNECTION	27
5-4.5. CONNECTION TO AN ETHERNET NETWORK (OPTIONAL)	27
5-4.6. POWER CABLE CONNECTION	28

5-1. Controls and Connectors

- Front

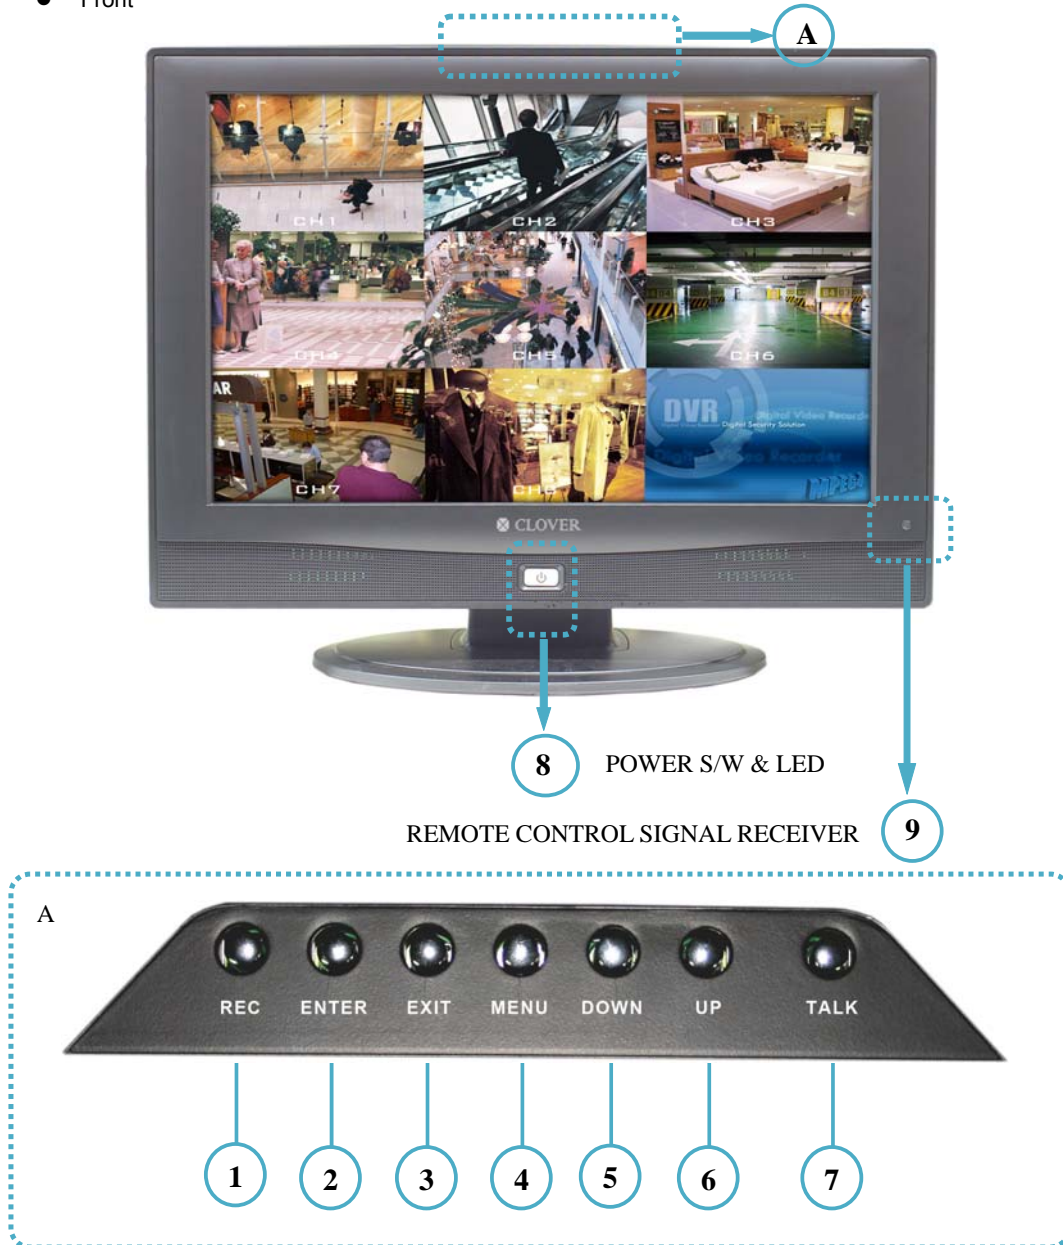

[Fig. 5-1 Front/Top View]

1. REC Key

- Press this key to start recording.
- In order to stop recording, press this key again or click the REC button on the MENU window and then the following message will be appeared. Click the OK button or press the ENTER key.



2. ENTER Key

- Press this key to select items or save menu settings.

3. EXIT Key

- Press this key to exit menu with saving.

4. MENU Key

- Press this key in the Live mode to display the Video Enhancement menu for VGA output (See section 6-8.2 for more detailed information).

5. DOWN Key

- Used to decrease Audio Volume for the system.

6. UP Key

- Used to increase Audio Volume for the system.

7. TALK Key

- See section 6-7.4.2 for information.


8. Stand-by Power Mode Button

- Turn the LCD Panel (Screen) On or Off
- Even though the LCD Screen is turned off by pressing this button, the system will be continued to work.
- See section 6-4 for more information.
- The red LED is lit when the Power switch on the rear of the system is ON.

9. Remote Control Signal Receiver

- Do not block the receiver port on the unit. Doing so may cause the remote controller to function improperly.

● Rear

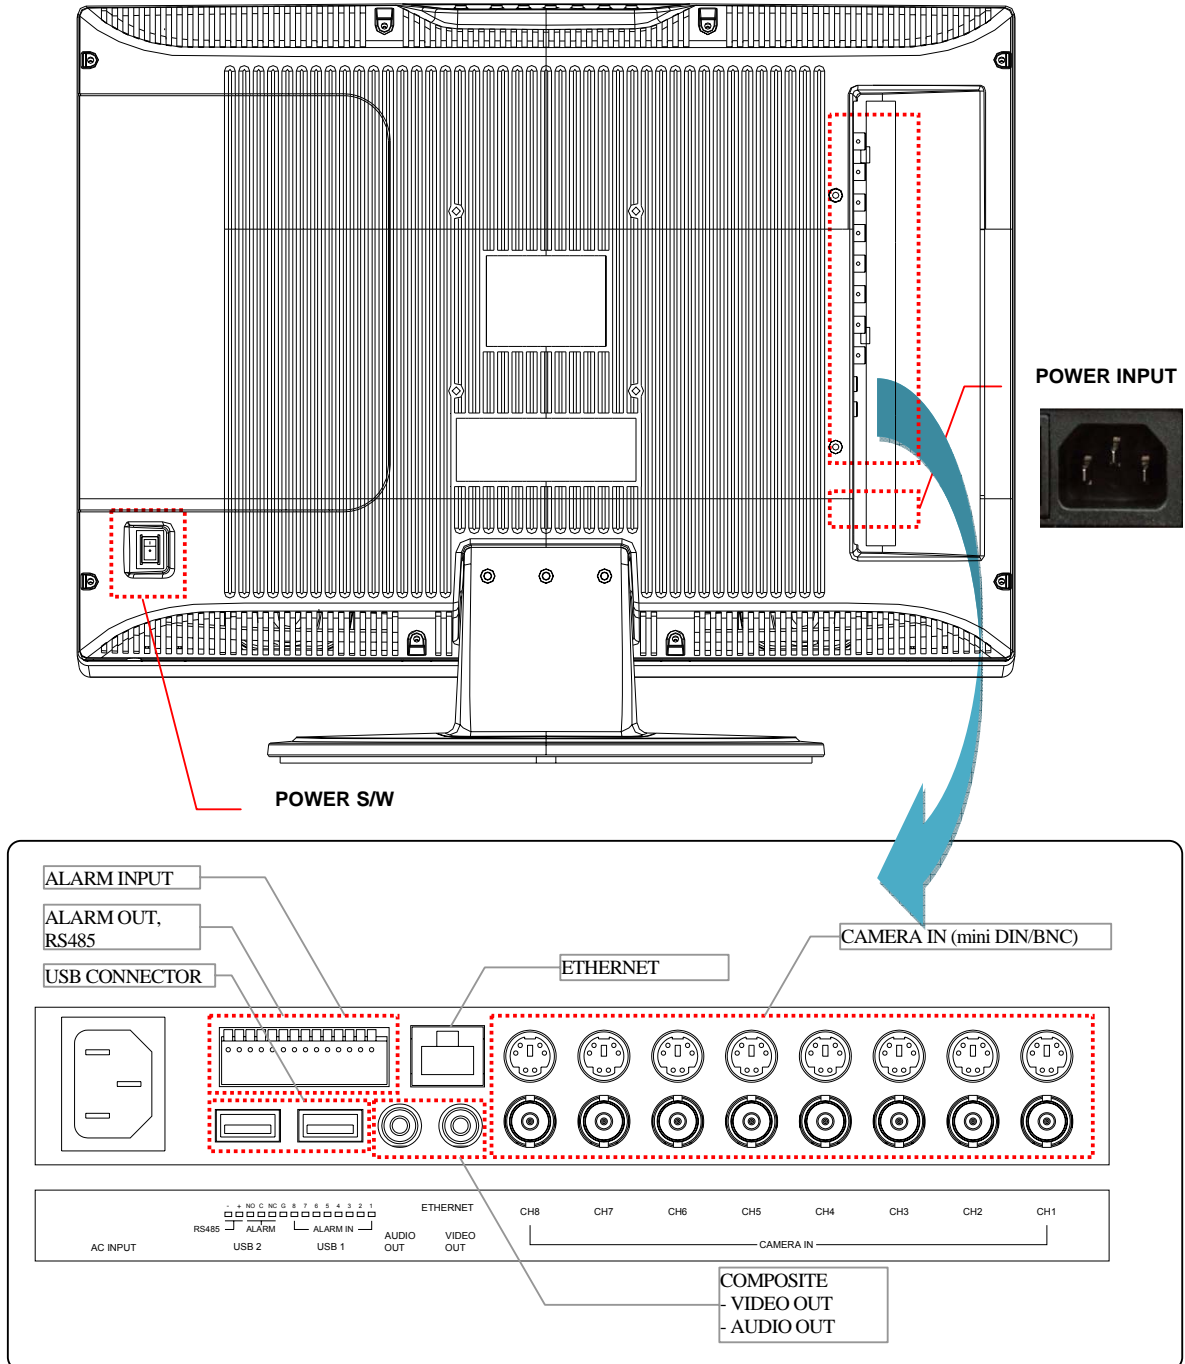


[Fig. 5-2 Rear & Side View]

5-2. Note for Installation

- ◆ Install the system according to the instructions described in this manual.
- ◆ The 20.1" LCD monitor built-in 8Ch DVR and Indoor Cameras are designed for indoor use and should not be used outdoors.
- ◆ Avoid any area with high humidity or dust which can shorten lifetime of the system.
- ◆ Choose a well ventilated area and keep minimum of 10" away from obstructions. Do not place the system near heat generating devices.
- ◆ Avoid any area with movement as this can interfere with the internal Hard Drive.
- ◆ Use a compatible input/output signal type of cameras and monitor.
- ◆ Contact your dealer if you have any problems in regards to the installation of this system.

The Warranty may be voided in case of unauthorized disassembling, abuse or modification.

5-3. System Connection

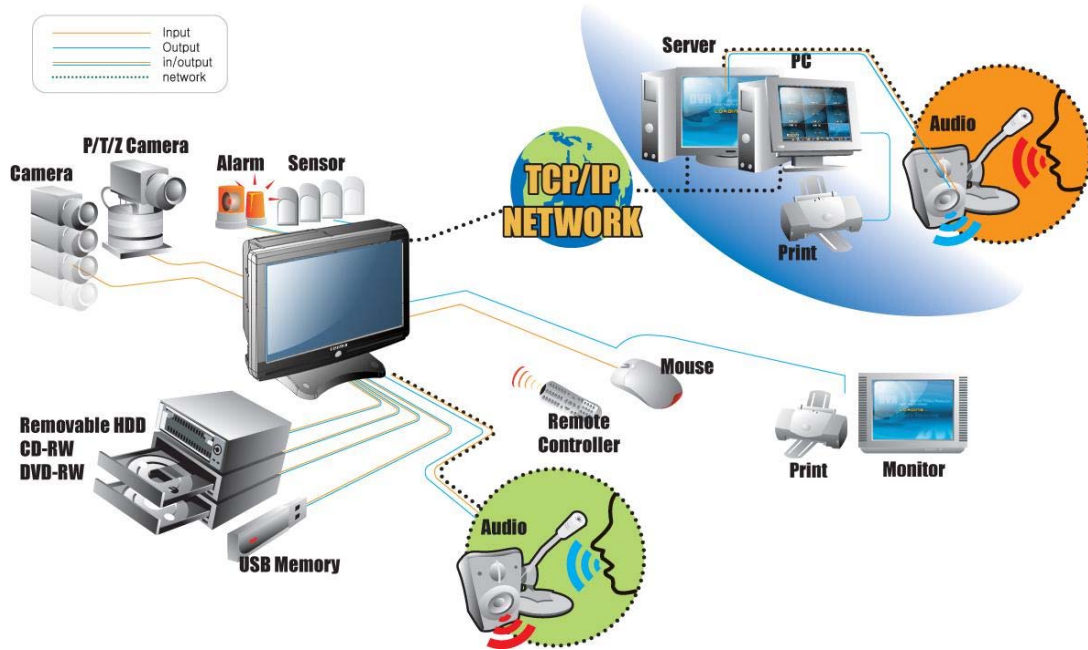

[Fig. 5-3 System Connection]

5-4. Installation

5-4.1. Camera Connection

▫ Connection of 6pin MINI DIN Cameras

Connect the supplied cameras to the Camera Input (6pin mini DIN jack) on the left side of the system as shown in [Fig. 5-2 Rear & Side View].

Connect the BNC cameras (not included) to the Camera Input (BNC connector) on the left side of the system as shown in [Fig. 5-2 Rear & Side View].

5-4.2. Installation of the Monitor



[Fig. 5-4 Removing three screws]



[Fig. 5-5 Separating the mounting bracket]

▫ Desktop

- Place the system on the flat surface.
- Do not place this product near a bathtub, kitchen sink, wet basement, over a radiator, or heat generator.

▫ Installation of the system on the wall

- Place the system on the flat surface with soft fabric as shown in **Error! Reference source not found.**.
- Separate the mounting bracket by removing three screws on the rear of the system as shown in **Error! Reference source not found.**
- The wall mounting bracket is not included in the system and refer to the manufacturer's instructions on how to install it to the wall.



Note:

- Pay attention to not make scratches or dents on the surface of panel (screen) during installation of the system.
- In case of this, the warranty will be voided.


5-4.2.1. Connection of Composite Monitor

If necessary, connect the composite Video Output (yellow RCA) and Audio Output (white RCA) to Video IN and Audio IN on a composite monitor or TV (RCA cable: not included).

5-4.3. Sensor Connection and RELAY IN &OUT

▫ **SENSOR Connection (SENSOR IN)**


Connect up to 8 sensors to ALM (SENSOR) IN. The Sensors should be contactor type and support N.O. (Normal Open).

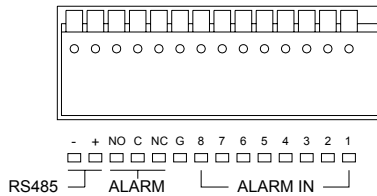

[Fig. 5-6 SENSOR IN PIN]

▫ **ALARM OUT Connection**


When necessary, use ALARM OUT. The ALARM OUTPUT is a relay contactor type and supports N.O. (Normal Open) and N.C. (Normal Close). The Output capacity is 220V 1A. A higher capacity can cause system failure.

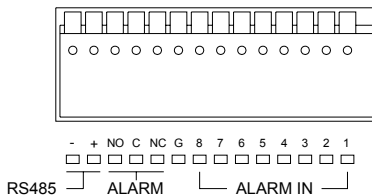

[Fig. 5-7 Alarm Output]

5-4.4. RS485 Connection

- Connect the cable to the “RS485 PORT” on the terminal block of the system.

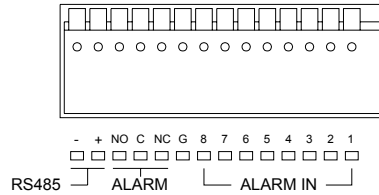


[Fig. 5-8 RS485 Connection]

5-4.5. Connection to an Ethernet Network (Optional)

- Connecting the cable to Ethernet.**

Our Ethernet connector is a RJ45 type. The maximum cable length is 300 ft. When you want to use a longer cable, we suggest using repeater.

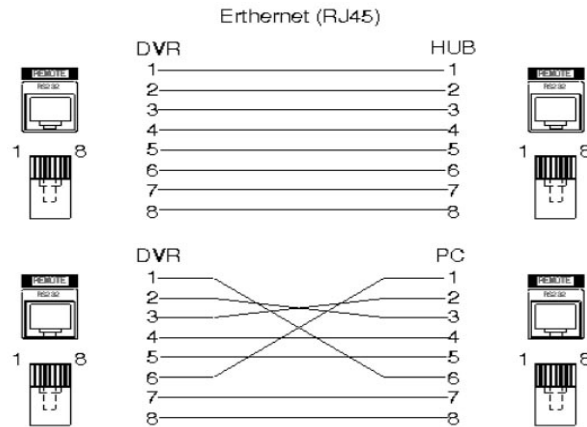


[Fig. 5-9 Straight-through & Crossover Cable]

5-4.6. POWER CABLE CONNECTION

Connect the provided AC power cable to the monitor and an AC outlet. AC input voltage is AC 110V to 220V 50/60Hz.

It should not be shared with other electrical equipment on the same line.

Frequent power cuts can cause crucial failures, so if you have an unstable power source we recommend the use of an Uninterrupted Power Supply or other backup power source.

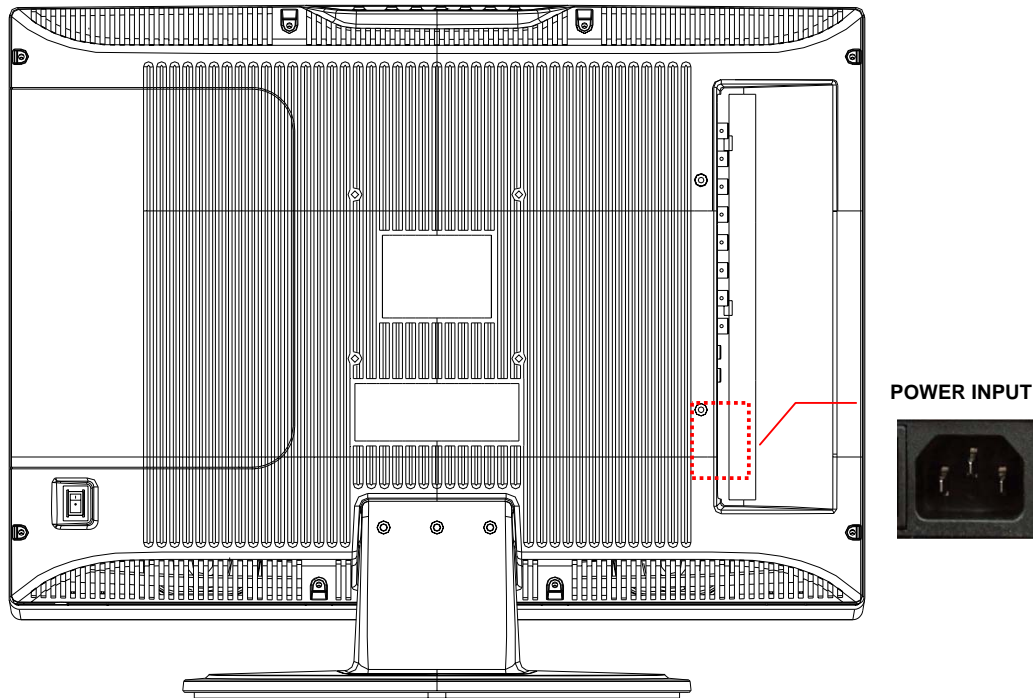

[Fig. 5-10 Power cable connection]

6. How to operate

CONTENTS

6-1. GENERAL INFORMATION	31
6-2. OPERATING INTERFACE	32
6-3. IR REMOTE CONTROLLER.....	33
6-4. POWER ON/OFF	34
6-4.1. POWER ON	34
6-4.2. STAND-BY POWER MODE BUTTON	34
6-4.3. POWER OFF	34
6-5. MENU WINDOW.....	36
6-6. DISPLAY SCREEN	37
6-6.1. FULL SCREEN	37
6-6.2. SPLIT SCREENS.....	38
6-7. LIVE.....	39
6-7.1. FULL SCREEN	39
6-7.2. SPLIT SCREEN	39
6-7.3. SEQUENCING SCREENS.....	40

CONTENTS

6-7.4. LIVE AUDIO41

 6-7.4.1. COMMUNICATION BETWEEN MONITOR AND CLIENT COMPUTER VIA INTERNET ..42

 6-7.4.2. COMMUNICATION BETWEEN MONITOR AND CAMERAS42

6-7.5. ZOOM.....43

6-7.6. OSD ON / OFF.....44

6-7.7. PAN / TILT.....45

6-7.8. SYSTEM STATUS.....48

6-7.9. POWER LOSS LISTS49

6-7.10. VIDEO LOSS LIST51

6-8. VIDEO ENHANCE53

 6-8.1. CAMERA INPUT CONFIG (CONTRAST / BRIGHTNESS).....54

 6-8.2. VGA OUTPUT CONFIG (SCALE / CONTRAST / BRIGHTNESS / SATURATION)55

6-9. RECORD.....56

 6-9.1. MANUAL (CONTINUOUS) RECORDING56

 6-9.2. MANUAL EVENT RECORDING.....56

 6-9.3. TIMER RECORDING.....57

 6-9.4. TIMER EVENT RECORDING.....58

 6-9.5. AUDIO RECORDING59

 6-9.6. ESTIMATED RECORDING TIME59

 6-9.7. RECORDING ICONS.....60

6-10. REPLAY61

 6-10.1. QUICK REPLAY61

 6-10.2. REPLAY61

 6-10.2.1. PLAYBACK DEVICES.....62

 6-10.2.2. SET THE START TIME62

 6-10.2.3. REPLAYING64

 6-10.2.4. DISAPPEARANCE OF REPLAY CONTROL BUTTONS66

6-11. COPY68

 6-11.1. COPYING DEVICES68

 6-11.2. SET THE COPY START TIME (COPYING EXTENT).....69

 6-11.3. SET THE COPY END TIME (COPYING EXTENT).....71

 6-11.4. COPYING THE RECORDED DATA DURING REPLAYING72

 6-11.5. PLAYER / AVI FILE FORMAT74


6-1. General Information

- You can operate all functions of the system by use of the buttons located on the top panel, remote controller and a mouse. Additionally, you can remotely control this unit via RS485 or the Ethernet port located on the side of the unit.
- System status is indicated by either LED lights or the system menu.
- The system is protected from any accidental pressing of any operator buttons, but care should be taken when using the functions of HDD Formatting as this can lead to data loss.

6-2. Operating Interface

There are 3 ways to operate the system by pressing the buttons on the top panel or buttons on the remote controller and clicking the mouse. A lot of users mostly prefer to use a mouse on these kinds of products such as DVRs, computers and computer-aided devices. Therefore we would like to describe all the instructions in this manual based on using the mouse.

6-3. IR Remote Controller

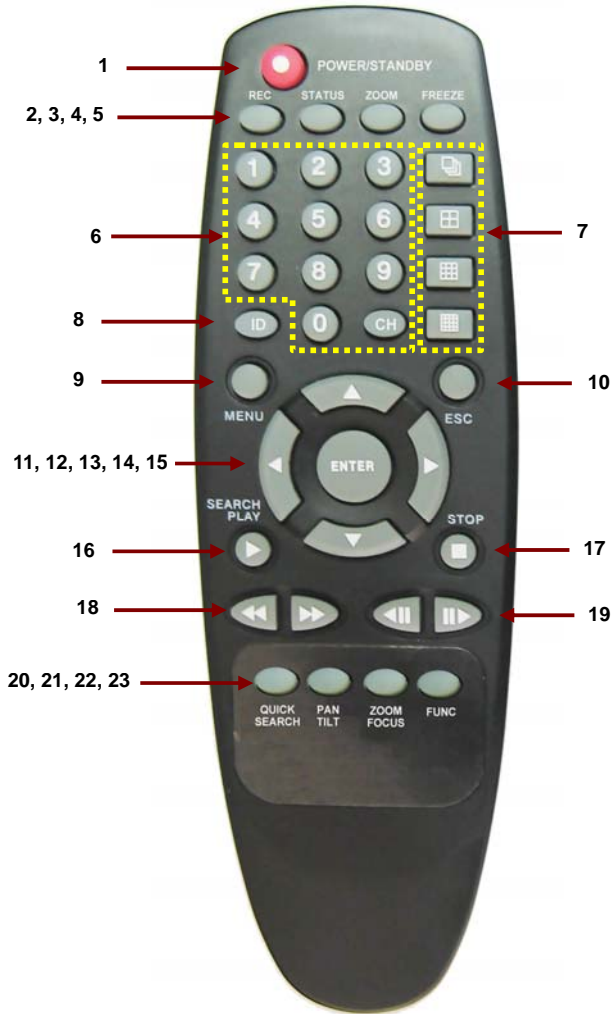

1.	POWER / STANDBY
2.	REC
3.	STATUS
4.	ZOOM
5.	FREEZE
6.	No.1~8 Channel (Full Screen) or IR ID Number
7.	Display format (Split)
8.	IR ID Set
9.	MENU
10.	ESC
11.	UP
12.	DOWN
13.	LEFT
14.	RIGHT
15.	ENTER
16.	SEARCH / PLAY
17.	STOP
18.	FF, REW
19.	Movement forward or backward by 1 Field.
20.	QUICK SEARCH
21.	PAN / TILT
22.	ZOOM / FOCUS
23.	FUNC

[Fig. 6-1 IR Remote Controller]

6-4. Power On/Off

6-4.1. POWER ON

On the rear panel:

Turn on the **POWER** switch on the rear panel (See *Fig.5-2*). The LED on the front panel is lit when the **POWER** switch is **ON**.

By Stand-by Power Mode Button

Press this button on the front panel (See *Fig.5-1*) to turn **ON** the system when the **POWER (MAIN)** switch is turned **ON** and the **Stand-by Power Mode Button** is turned **OFF**.

6-4.2. STAND-BY POWER MODE BUTTON

In order to extend the lifetime of the LCD screen and the backlights inside the monitor, press the **POWER** button located on the front panel (See [*Fig. 5-1*]) to turn **OFF** if you don't need to observe the system for a long time. The system will continue recording when it is in the recording mode even though the **Stand-by Power Mode Button** is turned **OFF**.

6-4.3. POWER OFF

By pressing the Stand-by Power Mode Button:

Press the **POWER** button on the front panel for **3 seconds** and then the **POWER OFF** message as shown in [*Fig. 6-2*] will be displayed on the screen.

- Click the **OK** button to turn the power **OFF**.

On the remote controller:

Press the **POWER** button on the remote controller and then the following message will be displayed on the screen.



[Fig. 6-2 Message of POWER off]

- Press the **ENTER** (↵) button to turn the power **OFF**.

By clicking the mouse:

- Right-click on the screen in the live mode to display the MENU window.
- Click the **POWER OFF** button on the MENU window (See [Fig. 6-3]) and then the message (See [Fig. 6-2]) will be displayed on the screen.
- Click the **OK** button to turn the power off.



[Fig. 6-3 POWER button on MENU window]

6-5. Menu Window

Right-click on the screen in the LIVE or the RECORD mode and then the MENU window will be appeared as shown in [Fig. 6-4]. Click the  (EXIT) button to return to the LIVE Mode.



[Fig. 6-4 Menu Window]

6-6. Display Screen

6-6.1. FULL SCREEN




[Fig. 6-5 FULL screen]


6-6.2. SPLIT SCREENS




FULL SCREEN

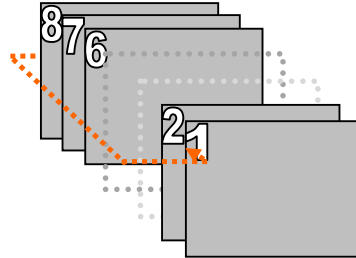

SEQUENCING SCREEN

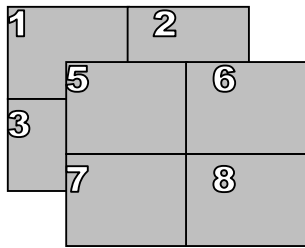

QUAD SCREEN

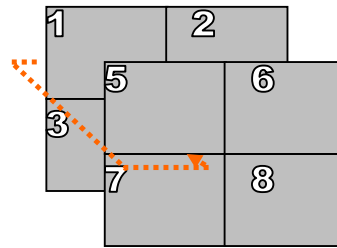

4page SEQUENCING SCREEN

6-7. LIVE

6-7.1. FULL SCREEN

- A Full SCREEN is available in the LIVE mode or the RECORD mode.
- Click on a certain camera's screen in the LIVE mode or in the RECORD mode, then a FULL SCREEN will be displayed.
- Click the FULL screen to return to the SPLIT SCREEN.


6-7.2. SPLIT SCREEN

- A SPLIT SCREEN is available in the LIVE mode or the RECORD mode.
- Scroll up or down the mouse wheel in the LIVE mode, then the SPLIT SCREENS pop-up screen will be displayed as shown in [Fig. 6-6].
- To display, click one of the SPLIT screens on the pop-up screen within 30 seconds. It will disappear after that time.





[Fig. 6-6 SPLIT SCREENS pop-up screen]

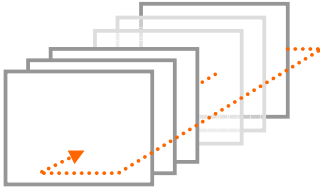6-7.3. SEQUENCING SCREENS



▫ Displaying the cameras in SEQUENCE is available in the LIVE mode or the RECORD mode.

Each of the channels will be displayed in sequence and the dwell time can be adjusted in the camera set up menu (Refer to 7-4.7).

-  This ICON is displayed in the upper left hand corner of the screen while the system is in the Sequencing Mode.
- Scroll up or down the mouse wheel in the LIVE mode, then click a  (SEQUENCE) button on the SPLIT SCREENS pop-up screen as shown in [Fig. 6-8].
- Click a Full screen to return to the SPLIT screen while the system is sequencing.



: Full Screen Sequencing









: 4 Split Screen Sequencing




[Fig. 6-7 SEQUENCING screen]


[Fig. 6-8 SPLIT SCREENS]

6-7.4. LIVE AUDIO

- Setup LIVE AUDIO when the system is not connected through the DvrMaster or Internet Explorer and the OSD is turned ON.
- If cameras (up to 8cameras) have audio function, it will sound in the live mode.
- Click the  (LIVE AUDIO) button in the LIVE mode (See [Fig. 6-9]), then the LIVE AUDIO popup screen will be displayed (See [Fig. 6-10]).
- Click the CHANNEL button you wish to listen on the LIVE AUDIO popup screen as shown below (See [Fig. 6-10]). The pop up screen will disappear after 10 seconds.
- Turn the AUDIO (speaker) ON by clicking the AUDIO ON/OFF button as shown below (See [Fig. 6-10]). You can select the AUDIO ON or OFF by repeatedly clicking the mouse. AUDIO ON: , AUDIO OFF: .
- Adjust the Audio Volume by clicking the  or the  button when the AUDIO is turned ON.
- Click the  (EXIT) button to return to the LIVE Mode.

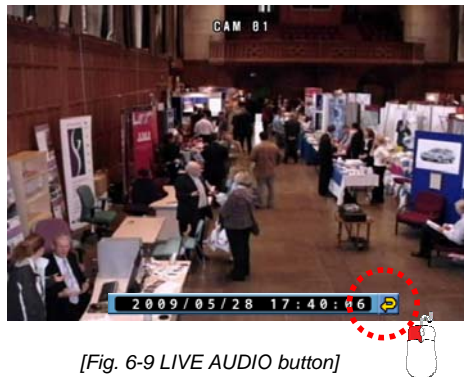

[Fig. 6-9 LIVE AUDIO button]

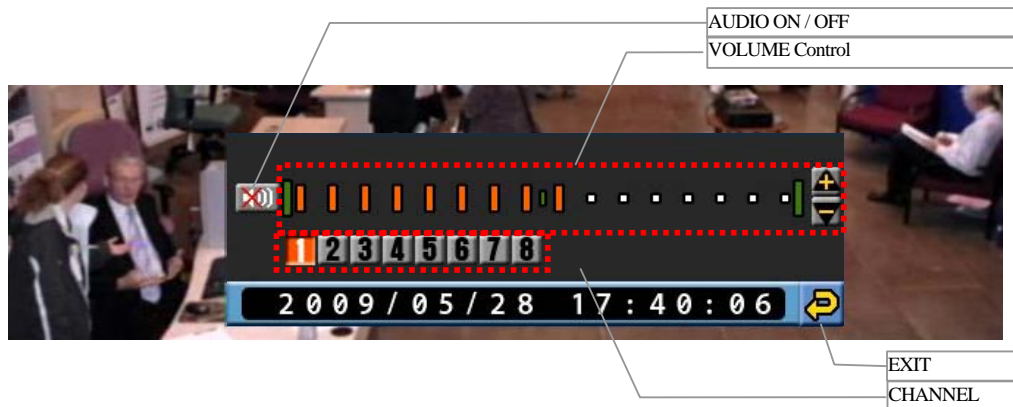

[Fig. 6-10 LIVE AUDIO popup screen]

6-7.4.1. COMMUNICATION BETWEEN MONITOR AND CLIENT COMPUTER VIA INTERNET

- This system is normally in listening mode between the LCD monitor and your computer through the Internet (DvrMaster or Internet Explorer). In order to communicate between the system and your computer, connect a head phone or a microphone and a speaker to the computer. Adjust the Speaker and the Microphone volume on the DvrMaster or Internet Explorer by clicking the amount of volume (See section 8-4.8 Speaker / Microphone).
- Don't forget to turn the AUDIO (speaker) ON by clicking the SPEAKER icon (See section 6-7.4 for more information) on the system.

6-7.4.2. COMMUNICATION BETWEEN MONITOR AND CAMERAS

- Turn the AUDIO (speaker) ON by clicking the SPEAKER icon on the LIVE AUDIO pop up screen. (See 6-7.4 for more information).
- To communicate (two way Audio) with a camera, select one out of Indoor cameras by clicking the CHANNEL button on the LIVE AUDIO pop up screen and press the **TALK** button on the side of the system.
- To listen only (one way Audio), select one out of outdoor/outdoor cameras by clicking the CHANNEL button on the LIVE AUDIO pop up screen.




Note:

- **It is impossible to communicate between the system and the cameras as long as the DVRMaster (GUI) is being executed, even though the Speaker and the Microphone are turned Off.**
 - **Exit the DVRMaster by clicking the Exit button on the GUI in order to communicate between the system and the cameras.**
 - **In order to listen to the recorded audio in playback mode, select the corresponding channel to make it a full screen.**
-



6-7.5. ZOOM

The image on the screen will be zoomed up to 2 times when the ZOOM button is clicked in the LIVE mode (This function is available on the full screen mode only).

- Right-click on the screen in the LIVE or the RECORD mode and the MENU window will be appeared as shown in [Fig. 6-4].
- Click the ZOOM button on the MENU window screen.
- Move the mouse on the ZOOMED screen, and then the 8-directional arrow marks will be appeared as shown below [Fig. 6-11].
- Click the  (EXIT) button to return to the MENU window.




[Fig. 6-11 ZOOMED screen]



6-7.6. OSD ON / OFF

OSD ON /OFF is possible in the LIVE mode or RECORD mode.

- Click the **OSD** button on the MENU window to turn the OSD (On Screen Display) ON or OFF. When the OSD is in OFF position, all the texts on the screen will be disappeared.

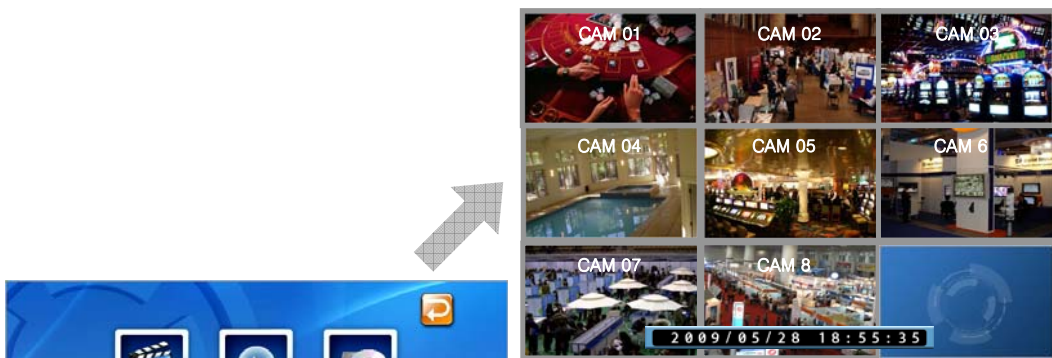


[Fig. 6-12 OSD 'ON' SCREEN]



[Fig. 6-13 OSD 'OFF' SCREEN]



6-7.7. PAN / TILT


- Click the **PAN/TILT** button on the MENU window in the LIVE mode to access the PAN/TILT cameras.
- Click the  (EXIT) button to return to the MENU window.



[Fig. 6-14 PAN/TILT button]



[Fig. 6-15 PAN/TILT window]

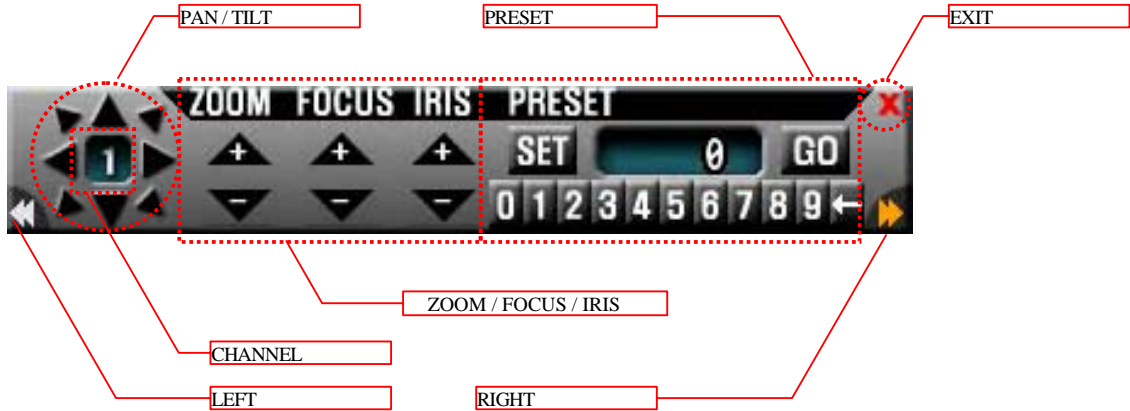

[Fig. 6-16 PAN/TILT CONTROL]

▫ **Channel Selection and Screen Conversion**

To change a channel, press the CHANNEL button on the remote controller or click the CHANNEL button on the [Fig. 6-16]. It will be converted a full screen.

To return to the MENU window, click the  (EXIT) button as shown in [Fig. 6-16].

▫ **ZOOM / FOCUS**

Control the ZOOM and FOCUS of PAN/TILT camera.

Click the ZOOM/FOCUS button on the PAN/TILT CONTROL window [Fig. 6-16].

▫ **PAN / TILT**

Control the PAN and TILT of PAN/TILT camera.

Click the PAN/TILT Button on the PAN/TILT CONTROL window [Fig. 6-16].

▫ **IRIS**

To provide optimum performance, adjust the lens iris by clicking “+” or “-” in [Fig. 6-16].

▫ **Button of PAN/TILT Control window**  

Move the PAN/TILT window as shown in [Fig. 6-16] by clicking the Left or Right button if necessary.

▫ PRESET



[Fig. 6-17 Preset Menu]

It is a function to preset the PTZ camera(s) which you wish to monitor frequently.

Preset Setup

- Select a position of camera you wish to preset and click the SET button in [Fig. 6-17].
- Click the number(s) for the current position of camera.
- Delete the numbers by using ← button.


Preset Execution

Click the number(s) which you preset and click GO button to move the camera.

** If you preset the number again, the previous setup is not available and only current setup is available.*




6-7.8. SYSTEM STATUS

- Click the SYSTEM STATUS button on the MENU window to see the system status as shown below ([Fig. 6-18]).
- Click the  (EXIT) button to return to the MENU window.




[Fig. 6-18 SYSTEM STATUS button]

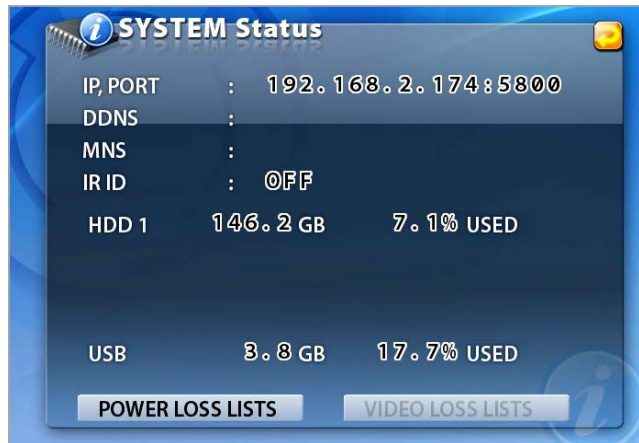

[Fig. 6-19 SYSTEM STATUS window]

6-7.9. POWER LOSS LISTS

The list indicates the time/date when the system power was turned OFF.

- Click the POWER LOSS LISTS button on the SYSTEM STATUS window to view the POWER LOSS LISTS.
- Each of the pages contains 10 lists. You can search the pages by clicking the UP/DOWN button.
- Click the  (EXIT) button to return to the SYSTEM STATUS window.




[Fig. 6-20 POWER LOSS LISTS window]

▫ CLEAR LISTS button

Click the CLEAR LISTS button to clear the lists, you will be prompted to confirm changes.

When you click the OK button, the POWER LOSS LISTS will be deleted.


To cancel, click the CANCEL button

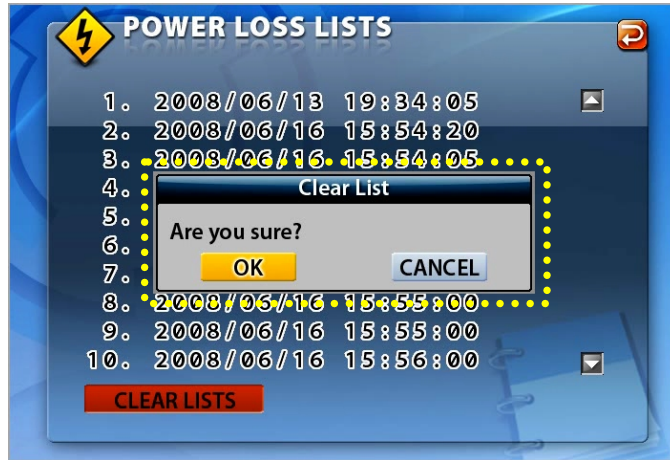

[Fig. 6-21 POWER LOSS LISTS Message]


6-7.10. VIDEO LOSS LIST

The list indicates the video loss channel and the time/date when the video signal was disconnected.

- Click the VIDEO LOSS LISTS button on the SYSTEM STATUS window to view the VIDEO LOSS LISTS.
- Each of the pages contains 4 lists. You can search the pages by clicking the UP/DOWN button.
- Click the  (EXIT) button to return to the SYSTEM STATUS window.



[Fig. 6-22 VIDEO LOSS LISTS window]

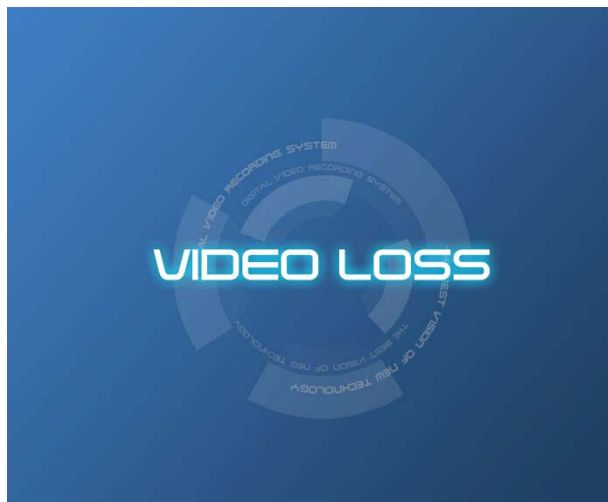


[Fig. 6-23 VIDEO LOSS window]

▫ CLEAR LISTS button

Click the CLEAR LISTS button to clear the lists, you will be prompted to confirm changes.


When you click the OK button, the VIDEO LOSS LISTS will be deleted.

To cancel, click the CANCEL button

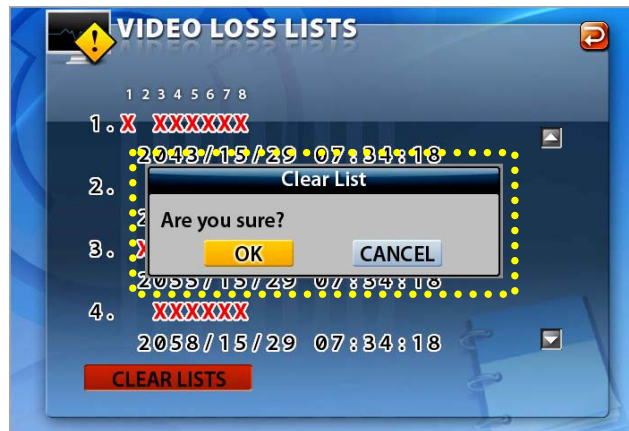

[Fig. 6-24 VIDEO LOSS LISTS Message window]

6-8. VIDEO ENHANCE

- Click the DISPLAY button in the MENU window to enhance the picture quality on each of channels (Contrast and Brightness) and VGA output (Contrast, Brightness and Saturation). The VIDEO ENHANCE menu will show up (See [Fig. 6-26]).
- Click the  (EXIT) button to return to the MENU window.




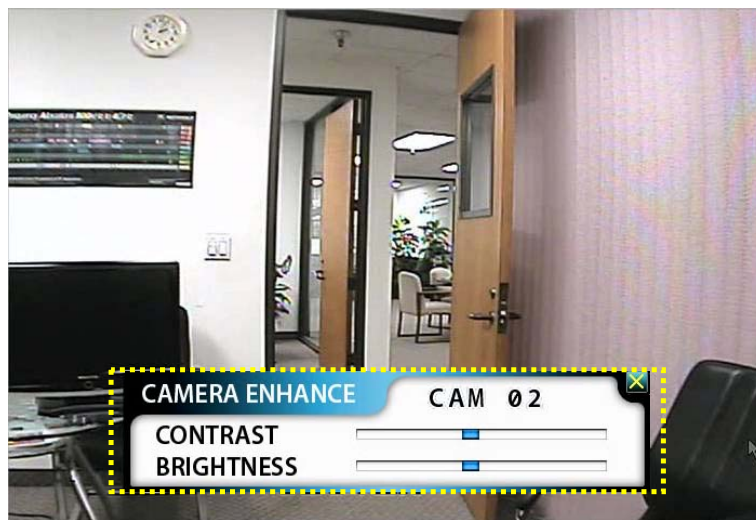
[Fig. 6-25 DISPLAY button]



[Fig. 6-26 VIDEO ENHANCE window]


6-8.1. CAMERA INPUT CONFIG (CONTRAST / BRIGHTNESS)


- Click a CAMERA INPUT button in the VIDEO ENHANCE menu.
- The CONTRAST and BRIGHTNESS sliders will be displayed along with camera picture as shown in [Fig. 6-27].
- Adjust the Contrast and Brightness with the sliders by clicking the mouse.
- To return to the VIDEO ENHANCE menu, click the  (EXIT) button.



[Fig. 6-27 CAMERA INPUT]

6-8.2. VGA OUTPUT CONFIG (SCALE / CONTRAST / BRIGHTNESS / SATURATION)

- To Setup the SCALE / CONTRAST / BRIGHTNESS / SATURATION of VGA Output, click the VGA OUTPUT in the VIDEO ENHANCE menu and then the VGA ENHANCE menu will display as shown in [Fig. 6-28].
- Select one of Scales (Aspect Ratio) between 16:10 and 4:3 by clicking the box. The default value is 16:10.
- Adjust the Contrast, Brightness and Saturation by using the sliders or clicking the slider bars.
- To Return to the VIDEO Enhance menu, click the  (EXIT) button on the VGA ENHANCE menu.

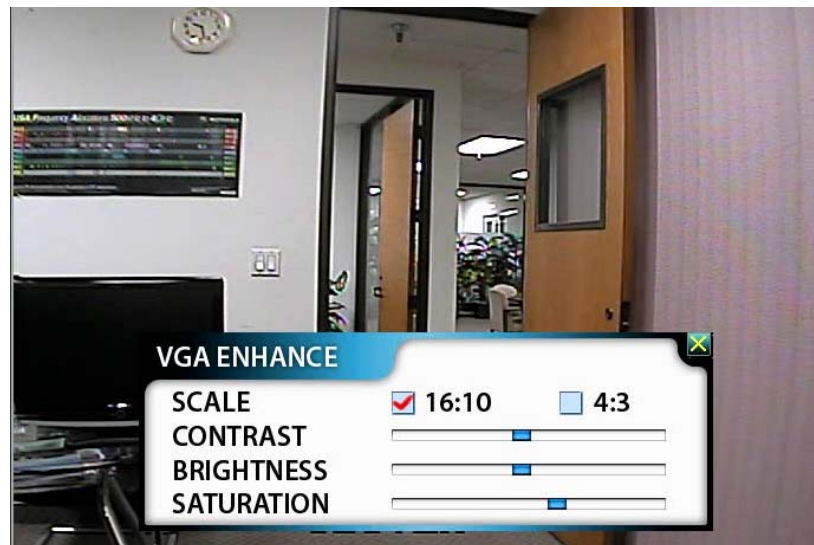

[Fig. 6-28 VGA ENHANCE menu]

6-9. Record




This system provides Watchdog function.

When power goes off during recording and the power turns on, the system will automatically start recording.

6-9.1. Manual (Continuous) recording

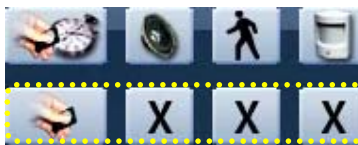

- Click the SETUP icon on the MENU window in the LIVE mode.
- Click the RECORD button in the SETUP menu, then the RECORD window will be displayed.
- Select the MANUAL RECORDING () between the MANUAL RECORDING () and the TIMER RECORDING () as shown in [Fig. 6-29]. All channels can be set at the same time by clicking the ALL () or each of the channels can be set by clicking the MANUAL RECORDING () on the CAM 1 through CAM 8. The MOTION () and SENSOR () as shown in [Fig. 6-29] should be turned **OFF** in this recording mode.
- Press the RECORD button on the side panel or click the RECORD icon on the MENU window.



[Fig. 6-29 Manual Recording setup]

6-9.2. Manual Event Recording

- Click the SETUP icon on the MENU window in the LIVE mode.
- Click the RECORD button in the SETUP menu and the RECORD window will be displayed.
- Select the MANUAL RECORDING () between the MANUAL RECORDING () and the TIMER RECORDING () as shown in [Fig. 6-30]. All channels can be set at the same time by clicking the ALL () or each of the channels can be set by clicking the MANUAL RECORDING () on the CAM 1 through CAM 8.








The MOTION () or SENSOR () as shown in [Fig. 6-30] should be turned **ON** in this recording mode.


- Press the RECORD button on the side panel or click the RECORD icon on the MENU window.



[Fig. 6-30 Manual Event Recording setup]

6-9.3. Timer Recording

- Click the SETUP icon on the MENU window in the LIVE mode.
- Click the RECORD button in the SETUP menu and then the RECORD window will be displayed.
- Select the TIMER RECORDING () between the MANUAL RECORDING () and the TIMER RECORDING () as shown in [Fig. 6-31]. All channels can be set at the same time by clicking the ALL (**ALL** ) or each of the channels can be set by clicking the TIMER RECORDING () on the CAM 1 through CAM 8.
The MOTION () and SENSOR () as shown in [Fig. 6-31] should be turned **OFF** in this recording mode.
- Choose one from SUNDAY to SATURDAY in the TIMER menu by clicking the mouse on (**X**) that turns to (**O**). You can choose the value **O** or **X** by repeatedly clicking the mouse.
- Click the Hour (or Minute) button in [Fig. 6-33] to setup the Starting Time and Ending Time, then the Hour (or Minute) table will appear as shown in [Fig. 6-34].
-Click the Hour (or Minute) you wish to set up.
-The recording time can be set in military hour mode (24hour).
- Press the RECORD button on the side panel or click the RECORD icon on the MENU window.

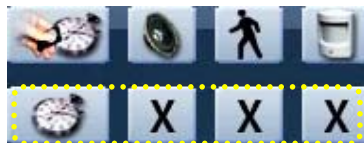


[Fig. 6-31 Timer Recording setup]

6-9.4. Timer Event Recording

- Click the SETUP icon on the MENU window in the LIVE mode.
- Click the RECORD button in the SETUP menu and the RECORD window will be displayed.
- Select the TIMER RECORDING (🕒) between the MANUAL RECORDING (👤) and the TIMER RECORDING (🕒) as shown in [Fig. 6-32]. All channels can be set at the same time by clicking the ALL (ALL 🕒) or each of the channels can be set by clicking the TIMER RECORDING (🕒) on the CAM 1 through CAM 8.
The MOTION (👤) or SENSOR (🗑️) as shown in [Fig. 6-32] should be turned **ON** in this recording mode.
- Choose one from SUNDAY to SATURDAY in the TIMER menu by clicking the mouse on (X) that turns to (O). You can choose the value O or X by repeatedly clicking the mouse.
- Click the Hour (or Minute) button in [Fig. 6-33] to setup the Starting Time and Ending Time, then the Hour (or Minute) table will appear as shown in [Fig. 6-34].
-Click the Hour (or Minute) you wish to set up.
-The recording time can be set in military hour mode (24hour).
- Press the RECORD button on the side panel or click the RECORD icon on the MENU window.



[Fig. 6-32 Timer Event Recording setup]

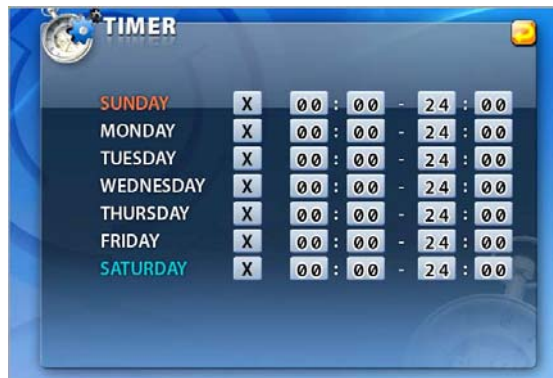

[Fig. 6-33 Timer Menu]


0	1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22	23

0	1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18	19
20	21	22	23	24	25	26	27	28	29
30	31	32	33	34	35	36	37	38	39
40	41	42	43	44	45	46	47	48	49
50	51	52	53	54	55	56	57	58	59

[Fig. 6-34 Hour/Minute Selection Table]

6-9.5. Audio Recording


- Click the Audio Recording button, **O** or **X** in the RECORD menu as shown in Fig.6-35. If the “**O**” is selected, the corresponding channel’s audio will record along with video signals. If the “**X**” is selected, the corresponding channel’s audio won’t record but video signals will record continuously.

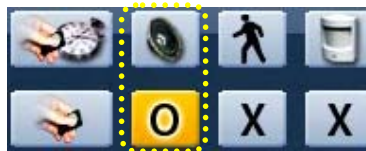

[Fig. 6-35 Audio Record ON/OFF button]

6-9.6. Estimated Recording Time

- Displays the estimated recording duration according to the current recording setup.




[Fig. 6-36 Estimated Recording Time]

6-9.7. Recording Icons

The Recording Icons depends on recording modes are displayed in the upper left hand corner of the screen.

- To turn the Recording Icon OFF, click the DISPLAY ON in the RECORD menu and then it will be turned OFF. You can select the value **ON** or **OFF** by repeatedly clicking the mouse.

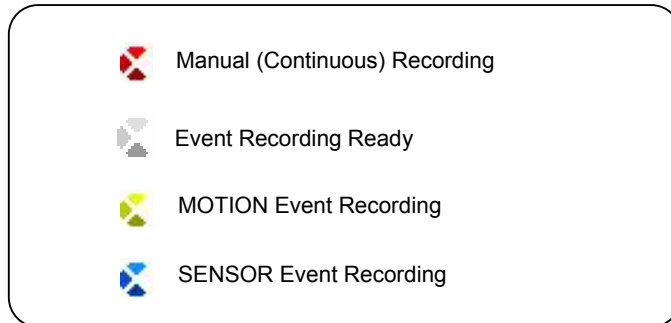

[Fig. 6-37 Recording Icons]

6-10. REPLAY


6-10.1. QUICK REPLAY

It is available only by pressing the QUICK SEARCH button on the remote controller.

- Press the PLAY button, then the recent recorded list will be played.

6-10.2. REPLAY



- Click the REPLAY icon on the MENU window, then the REPLAY window as shown in [Fig. 6-38] will be displayed.
- Click the  (EXIT) button to return to the previous mode.




[Fig. 6-38 REPLAY window]

6-10.2.1. Playback Devices

In order to playback, plug the USB devices such as external USB HDD, USB memory to the USB port or insert a recorded media (CD-R/W or DVD-R/W) into the DVD-R/W drive.

When the devices are ready to playback, the **Ready** on the corresponding devices will be displayed as shown in [Fig. 6-39].


- Click the mouse on a device among HDD, USB, CD-R/W and DVD-R/W that is displaying the **Ready** (See [Fig. 6-39]). The corresponding light will be lit in yellow when the device is selected.

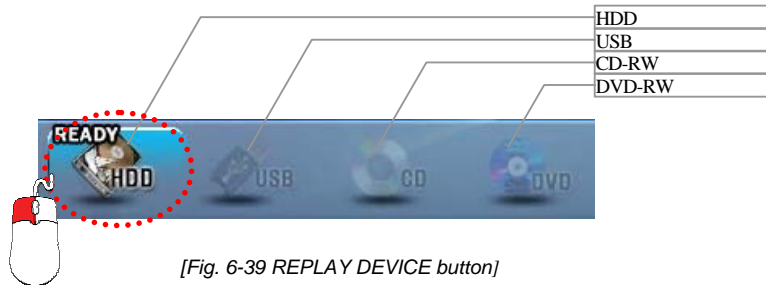

[Fig. 6-39 REPLAY DEVICE button]

6-10.2.2. Set the Start Time


- Select the Date (year / month / day) on the calendar by clicking the mouse on the highlighted character in black that turns to highlighted character in red (See [Fig. 6-40]). The highlighted character in black indicates the dates and times that contains recorded data, and the highlighted character in red indicates the selected dates and times.
- Select the month (year) by clicking the mouse on the ◀button or ▶ button.

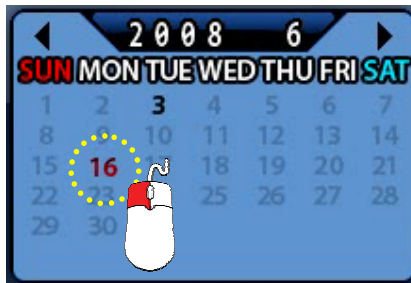

[Fig. 6-40 Calendar window]

- Select the hour on the Start Time Select Window (See [Fig. 6-41]) by clicking the mouse on the Hour (0 – 23 hour) you wish to start to play.

The green active buttons indicate the HOUR that contains recorded data, and the red active buttons indicate the selected Start HOUR.

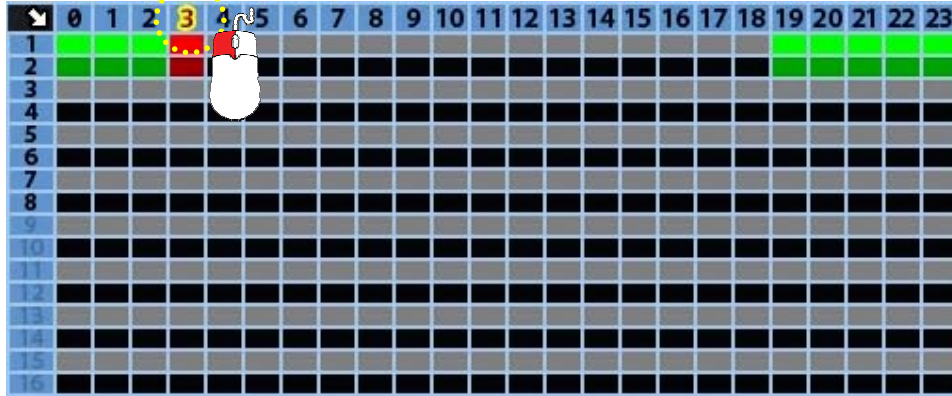

[Fig. 6-41 Start Time Select window]

By using the Replay Time set-up buttons:

The time and date can also set on the Replay Time set-up button window (See [Fig. 6-42]).

- Click the Month/Date/Year button as shown in [Fig. 6-42], and then select the Month/Date/Year in the displaying calendar by clicking ◀ or ▶ button for a month, year and a date.
- Click the Hour (or Minute/Second) button in [Fig. 6-42], and then the Hour (or Minute/Second) table will appear as shown in [Fig. 6-34].
- Click the Hour (or Minute/Second) you wish to set up.



[Fig. 6-42 Replay time set-up button]

By using the Replay Time set-up bar:

The starting time to play can also be set by clicking the slider on the bar and dragging it or clicking the bar.



[Fig. 6-43 Replay time set-up bar]

6-10.2.3. Replaying

Replaying start time set-up can be possible within a recording time extent.

- Replay buttons (NORMAL / MOTION / SENSOR)



NORMAL PLAY: Click the button to play all the recorded data.



MOTION PLAY: Click the button to play the recorded data by MOTION only.



SENSOR PLAY: Click the button to play the recorded data by SENSOR only.

- How to control the buttons while replaying





[Fig. 6-44 Replay screen]

① Search Slider

It is possible to playback by clicking the slider on the bar and dragging it.



② PLAY / PAUSE

Click the  button to pause.



Click the  button to replay when in the pause mode.

③ REW/FF

During replaying, press the  or  button for fast rewinding and fast forwarding up to 128 times.

Keep pressing the  or  button to accelerate the speed up to 128 times.
(Same as shuttle ring)

④ PREV / NEXT

During replaying, press the  button to view previous frame in still image and press the  button to view the next frame in still image.

⑤ Speaker ON / OFF

Turn speaker ON  or OFF .

⑥ Speaker Volume


Adjust the Audio Volume by clicking the ▲ or the ▼ button when the AUDIO is turned ON.

6-10.2.4. Disappearance of Replay control buttons



During replaying, the replay control buttons appear on the bottom of the screen. To disappear, drag the mouse pointer downward until the replay control buttons disappear and to appear, drag the mouse pointer upward until the replay control buttons appear.

6. How to Operate

- Click the mouse on one out of channels during replaying to view a full screen.
- Click the mouse on the full screen during replaying to return to the split screen.

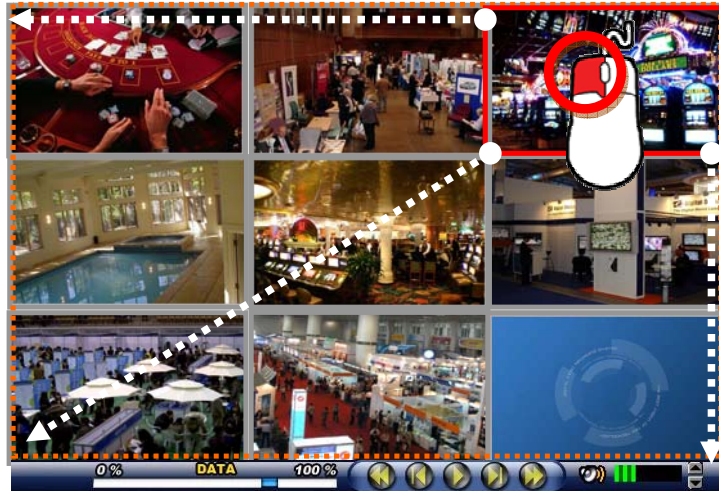


[Fig. 6-45 SPLIT screen during replaying]

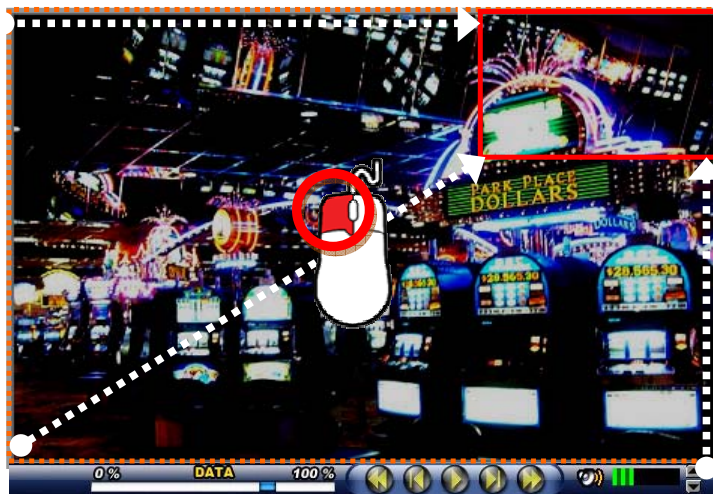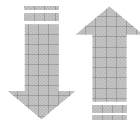


[Fig. 6-46 FULL screen during replaying]

6-11. COPY



- Click the COPY icon on the MENU window, and then the COPY window as shown in [Fig. 6-47] will be displayed.
- Click the  (EXIT) button to return to the previous mode.

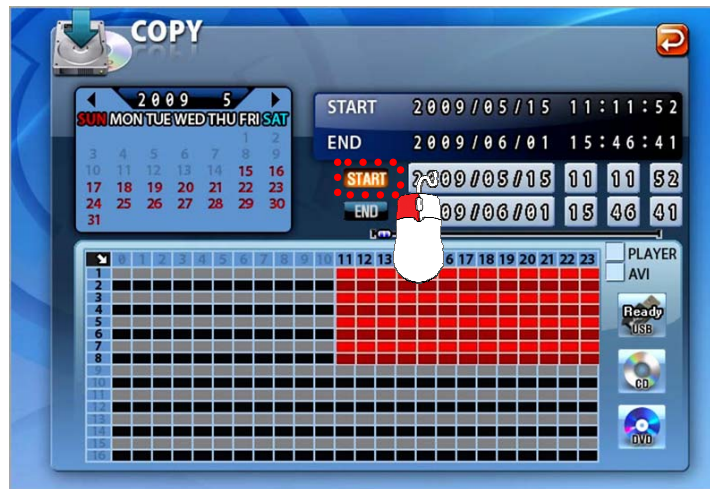

[Fig. 6-47 COPY window]

6-11.1. Copying devices

In order to copy the recorded data, plug the USB devices such as external USB HDD, USB memory to the USB port or insert a blank media (CD-R/W or DVD-R/W) into the DVD-R/W drive.

When the device and media are ready to copy, the **Ready** on the corresponding device and media will be displayed as shown in [Fig. 6-47].

We recommend you to format the USB devices prior to copy the recorded data as follows, but the Medias such as CD-R/W and DVD-R/W don't need to format.

- Connect the USB devices to the DVR
- Click the SETUP icon on the MENU window, and the SETUP menu will be displayed.
- Click the DISK MANAGER in the SETUP menu, and the DISK MENAGER will be displayed.
- Click the mouse on the USB button in the DISK MANAGER, and you will be asked.
- Click the OK, and then the progressive bar will be shown along with FORMATTING USB....

In regards to blank Medias (CD-R/W and DVD-R/W)


Most Medias can be used with the system, but some of them may be not compatible with. Refer to the included instructions related to Medias or visit the website of DVD/CD DRIVE unit manufacturer for more information.

6-11.2. Set the Copy Start Time (Copying extent)

- Select the Date (year / month / day) on the calendar by clicking the mouse on the highlighted character in red that turns to highlighted character in black (See [Fig. 6-48]). The highlighted character in black indicates the dates and times that contains recorded data, and the highlighted character in red indicates the selected dates and times.
- Select the month (year) by clicking the mouse on the ◀button or ▶ button.
- Select the hour on the Copy Start Time and Channel Selection Window (See [Fig. 6-49]) by clicking the mouse on the Hour (0 – 23 hour) you wish to start to copy. The green active buttons indicate the HOUR that contains recorded data, and the red active buttons indicate the selected Start HOUR.



[Fig. 6-48 Calendar for Copying]

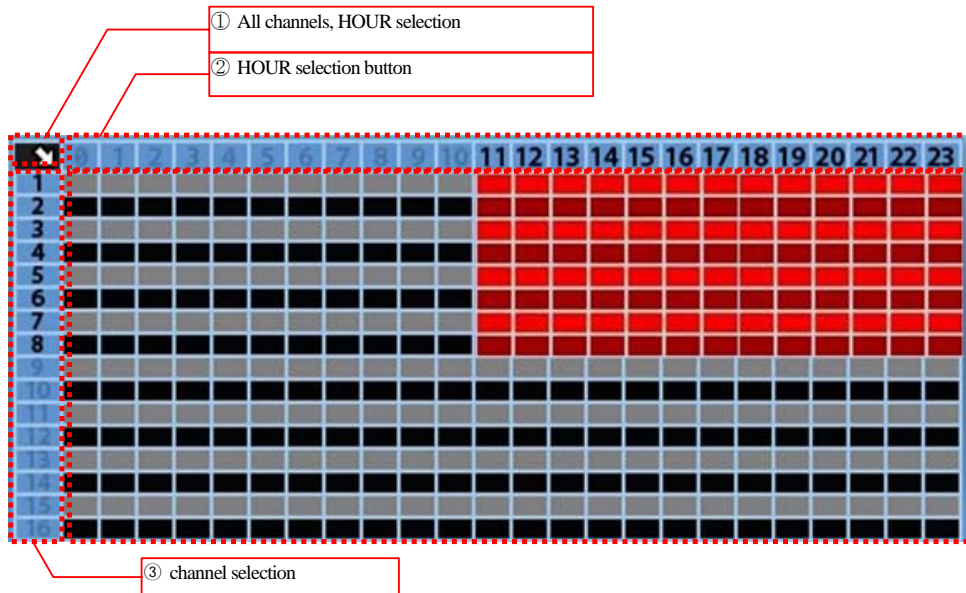

[Fig. 6-49 Copy Start time and Channel Selection window]

① All channels, HOUR selection button.

Click the arrow button in the upper left corner as shown in [Fig. 6-49] to set the full extent of the recording and all the channels simultaneously.

② HOUR selection button

Select the start time to copy by clicking the mouse on HOUR (0-23: in the military hour). Thereafter the extent of the recording will be saved on.

③ Channel selection button

Some channels can be selected by clicking the mouse on the corresponding channels.

By using the Copy Start/End set-up buttons:

The time and date can also set on the Copy Start/End set-up buttons window (See [Fig. 6-50]).

- Select the values (year/month/date and hour/minute/second) by clicking the mouse, change the values with the mouse's wheel and click the mouse again on the changed values to complete as shown in [Fig. 6-50].



[Fig. 6-50 Copy Start/End setup buttons]

By using the Start/End set-up bar:

The starting time to copy can also be set by clicking the slider on the bar and dragging it or just click the bar.



[Fig. 6-51 Copy Start/End setup bar]


6-11.3. Set the Copy End Time (Copying extent)

Refer to the above explanation (See section 6-11.2).

6-11.4. Copying the recorded data during replaying


The system, LCD2084 allows users to copy the recorded data during replaying.

- Start replaying (See section 6-10).
- Right-click on the replaying screen, then the COPY DATA screen will be displayed (See [Fig. 6-52]).
- **To set the starting time and date to copy**, select the values (year/month/date window and hour/minute/second) on the COPY DATA window by clicking the mouse, change the values with the mouse's wheel and click the mouse again on the changed values to complete.
- Select each of channels (1 through 8 in red) or "A" in black for all the channels on the COPY DATA window, and click on the SELECTED button to save.

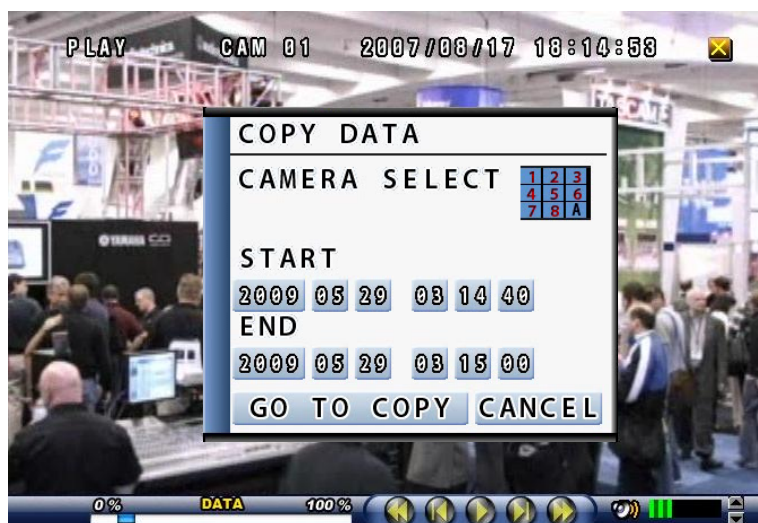

[Fig. 6-52 Start Copy Time Setup window]

- **To set the ending time and date to copy**, right-click on the replaying screen again, and the COPY DATA window that contains end time for copying will be displayed (See [Fig. 6-53]). Set the ending time and date to copy as described above.
- To select the COPY MODE, click on the GO TO COPY button (See [Fig. 6-53]), and the COPY window (See [Fig. 6-47]) will be displayed. The time and date (starting time and ending time) to copy can be changed on the COPY window as well (See section 6-11.2).

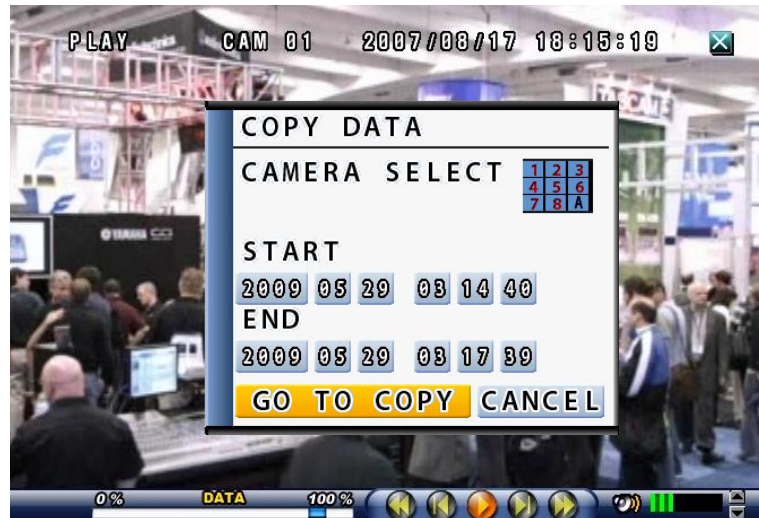

[Fig. 6-53 End Copy Time Setup window]

- Choose one among NETWORK, USB, CD and DVD which are ready to copy (See section 6-11.1).

Select COPY Mode

Only when the device and media are ready to copy, the **Ready** on the corresponding device and media will be displayed.



USB COPY

Save the recorded data in **USB Device**.
Click the **USB Device** button to start copying.



CD-RW COPY

Save the recorded data on **CD-R/W Media**.
Click the **CD-R/W** button to start copying.



DVD-RW COPY

Save the recorded data on **DVD-R/W Media**.
Click the **DVD-R/W** button to start copying.

- As soon as one of the above buttons is clicked, copying will start along with displaying the icon shown in [Fig. 6-54].

The following icon indicates that copying is in process.




[Fig. 6-54 Copying Icon]

6-11.5. PLAYER / AVI File Format

Copying the Recorded data with the PLAYER

- If the PLAYER in the COPY menu is selected by clicking, the recorded data will be saved along with the PLAYER (Refer to Section 8-5 PLAYER for more information) so that you can easily replay the saved data in anywhere and PC.



[Fig. 6-55 Copying with Player/AVI]

Copying the AVI File Format

- If the AVI in the COPY menu is selected by clicking, it allows you to save a video clip as AVI File Format. AVI File also includes audio if recorded.

7. SETUP

CONTENTS

7-1. SETUP	78
7-2. SYSTEM.....	79
7-2.1. SYSTEM NAME.....	80
7-2.2. LANGUAGE.....	81
7-2.3. TIME / DATE	81
7-2.4. SYSTEM CONFIG	83
7-2.4.1. FACTORY DEFAULT	84
7-2.4.2. LOAD CONFIG / BACKUP CONFIG	85
7-2.5. PASSWORD.....	87
7-2.6. IR REMOTE ID	88
7-2.7. FIRMWARE UPDATE	89
7-2.8. SYSTEM INFO	89
7-3. DISK MANAGER	90
7-3.1. HDD WRITE FAIL	91
7-3.2. HDD OVERWRITE	91
7-3.3. FORMAT	91

CONTENTS

7-4. CAMERA	92
7-4.1. CAMERA ON/OFF	93
7-4.2. CAMERA NAME (CAMERA TITLE)	93
7-4.3. BUZZER.....	94
7-4.4. RELAY	94
7-4.5. PAN/TILT SETTINGS	95
7-4.6. DISPLAY	99
7-4.7. SEQUENCING DWELL TIME	99
7-5. AUDIO	100
7-5.1. MICROPHONE VOLUME	100
7-6. RECORD	101
7-6.1. RECORD ICON DISPLAY	101
7-6.2. ALL MANUAL / TIMER RECORDING BUTTON	102
7-6.3. ALL MOTION ON / OFF, SENSITIVITY SETTING	103
7-6.4. ALL SENSORS ON / OFF	104
7-6.5. SIZE (RECORDING RESOLUTION)	104
7-6.6. RECORDING SPEED.....	105
7-6.7. RECORDING QUALITY	106
7-6.8. RECORDING MODE.....	107
7-6.8.1. MANUAL RECORDING.....	107
7-6.8.2. MANUAL EVENT RECORDING	107
7-6.8.3. TIMER RECORDING (SCHEDULE RECORDING)	107
7-6.8.4. TIMER EVENT RECORDING	107
7-6.9. RECORDING BY MOTION DETECTION.....	108
7-6.10. RECORDING BY SENSOR (PIR SENSOR).....	117

CONTENTS

7-7. NETWORK	119
7-7.1. IP MODE	119
7-7.2. GATEWAY, SUBNET, IP ADDRESS	120
7-7.3. PORT	121
7-7.3.1. PORT FORWARDING.....	121
7-7.4. MAC ID	121
7-7.5. MNS (MAC NAME SERVER)	122
7-7.6. DDNS (DYNAMIC DOMAIN NAME SYSTEM).....	123
7-7.7. HOW TO SETUP AND USE THE DDNS	125
7-7.7.1. ROUTER.	125
7-7.7.2. REGISTRATION TO THE DDNS SERVER.....	125
7-7.8. EMAIL NOTIFICATION.....	126


7-1. SETUP




[Fig. 7-1 Setup Icon on MENU window]




It is possible to set up the menus in the LIVE mode and partly in the RECORD mode.


- Click the “SETUP” button on the MENU window, then the SETUP menu will be displayed.
- Click the  “EXIT” button to return to the previous mode.

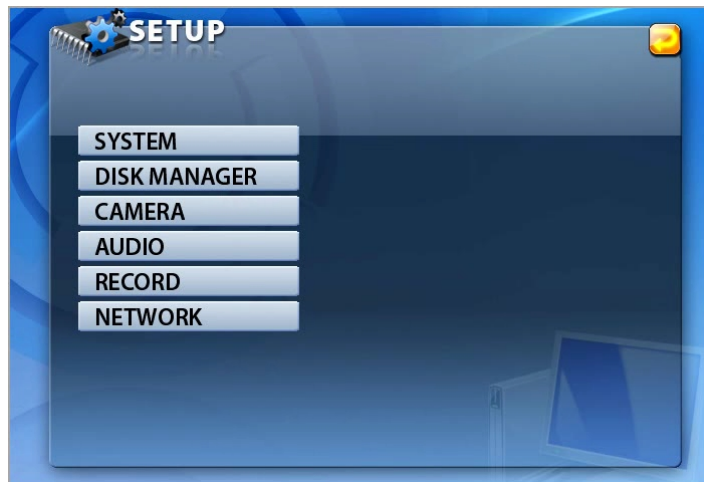

[Fig. 7-2 SETUP menu]

7-2. SYSTEM

- Click the “SYSTEM” button in the SETUP menu, and then the SYSTEM menu shown in Fig.7-3 will be displayed.
- Click the  “EXIT” button to return to the SETUP menu.

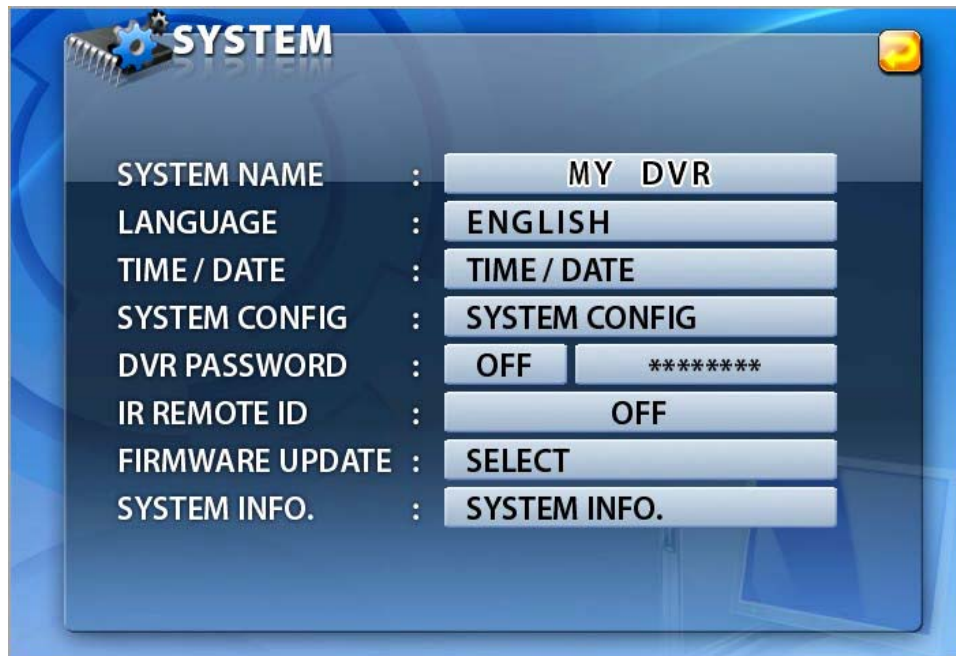



[Fig. 7-3 SYSTEM menu]

7-2.1. SYSTEM NAME


The SYSTEM NAME is one of the important factors to access the DVR through MNS (MAC NAME SERVER) with the DvrMaster (GUI).

You can't access the DVR system if the SYSTEM NAME you entered already exists on the network. Try to connect the system with other SYSTEM NAME.

- Click the "SYSTEM NAME" button in the SYSTEM menu, then the On Screen Keyboard will display as shown in [Fig. 7-5].
- Delete the existing SYSTEM NAME with the  button on the On Screen Keyboard.
- Enter the new SYSTEM NAME using the On Screen Keyboard and click on the OK button to save.
- Click the  "EXIT" button to return to the SYSTEM menu.



[Fig. 7-4 System name button]

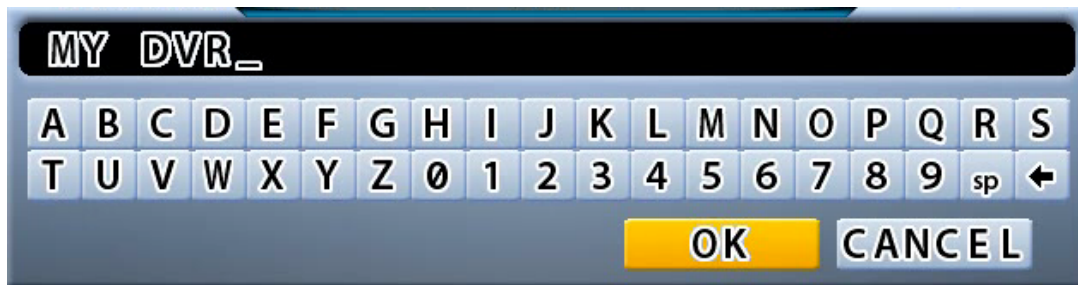


[Fig. 7-5 On Screen Keyboard]



Note: You should type the System Name up to 15 characters in order to utilize the MNS server (See section 7-7.5.)


7-2.2. LANGUAGE


- Click the “LANGUAGE” button in the SYSTEM menu, then the LANGUAGE submenu will display.
- Select English or Spanish by clicking the mouse.
- Click the  “EXIT” button to return to the SYSTEM menu.



[Fig. 7-6 LANGUAGE button]

7-2.3. TIME / DATE

- Click the “TIME/DATE” button in the SYSTEM menu, then the TIME/DATE menu will be displayed (See [Fig. 7-7]).
- Click the  “EXIT” button to return to the SYSTEM menu.

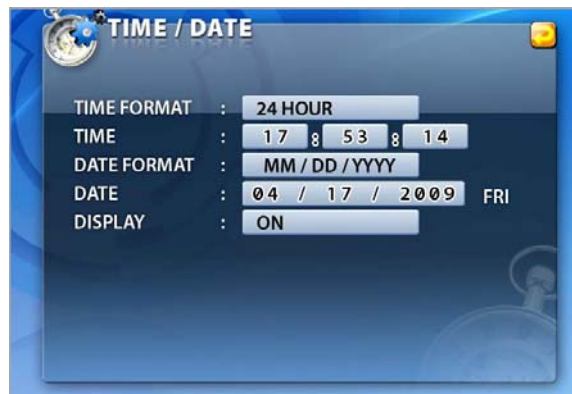

[Fig. 7-7 TIME / DATE menu]

▫ TIME FORMAT

Click the TIME FORMAT button, and select 24 HOUR or 12 HOUR by clicking the mouse.



[Fig. 7-8 Time Format button]

▫ TIME Settings

Click the button (AM or PM and hour/minute/second) and select one of the values in the hour/minute/second selection table by clicking the mouse.



[Fig. 7-9 Time Setting]

▫ DATE FORMAT

There are three formats to display the time and date as follows.

- MM / DD / YYYY: For U.S.A.
- YYYY / MM / DD: For Asian countries.
- DD / MM / YYYY: For European countries.


Click the mouse on the DATE FORMAT button to change, and then select a DATE FORMAT among YYYY/MM/DD, DD/MM/YYYY and MM/DD/YYYY.



[Fig. 7-10 Date Format button]

▫ DATE Settings

Click the DATE button (month, date and year) and select the Date on the calendar by clicking the mouse. Select the month (year) by clicking the ◀ button or ▶ button.



[Fig. 7-11 Date Settings button]

▫ DISPLAY

It enables you to display the time and date on the Live screen.

Click the DISPLAY button to set display on or off.




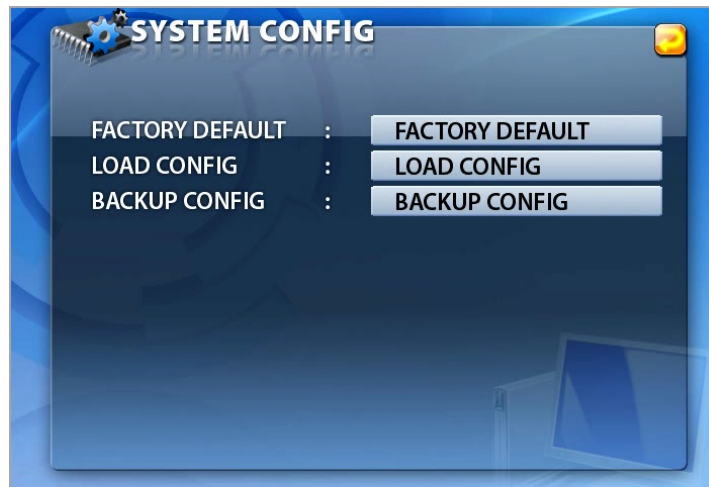
[Fig. 7-12 Display button]



Note: Setting the new time will cause loss of recording data. After setting the time, HDD should be formatted prior to start recording.

7-2.4. SYSTEM CONFIG

- Click the “SYSTEM CONFIG” button in the SYSTEM menu, and then the SYSTEM CONFIG menu will be displayed (See [Fig. 7-13]).
- Click the  “EXIT” button to return to the SYSTEM menu.



[Fig. 7-13 SYSTEM CONFIG]


7-2.4.1. FACTORY DEFAULT

- Click the “**FACTORY DEFAULT**” button in the SYSTEM CONFIG menu, and you will be asked as shown in [Fig. 7-15].



[Fig. 7-14 Factory Default button]

- Click the “OK” button in [Fig. 7-15] to reset to the Factory Default Values, and then the system will save the factory default values (settings).
Click the CANCEL button to cancel.

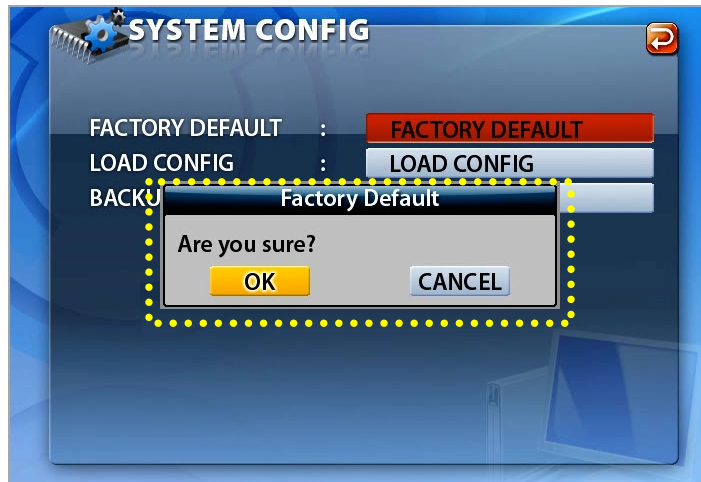

[Fig. 7-15 Confirmation window of Factory Default]

7-2.4.2. LOAD CONFIG / BACKUP CONFIG

You can save up to four different settings in the BACKUP CONFIG and load the files in the LOAD CONFIG to change the settings to the system.


▫ LOAD CONFIG

This function is to load the changed settings to the system.

- Click the LOAD CONFIG button and then the LOAD CONFIG window will be displayed (See [Fig. 7-17]).
- Select a backup file among FILE 1, FILE 2, FILE 3 and FILE 4 by clicking the mouse.
- Click the LOAD button to change the settings (See [Fig. 7-17]).
- Click the CANCEL button to cancel.



[Fig. 7-16 LOAD CONFIG button]

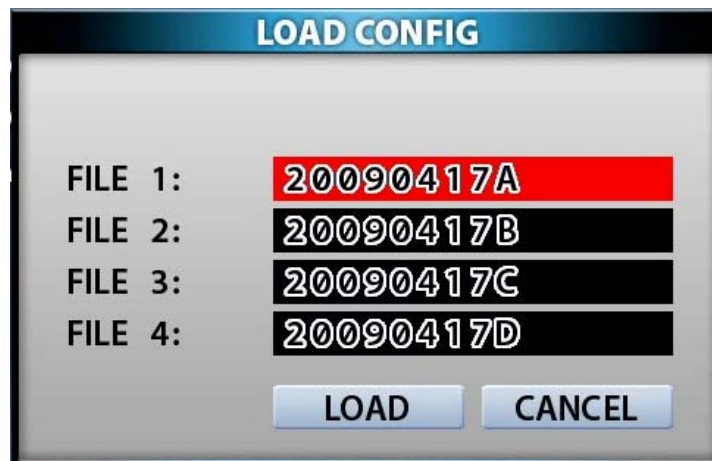

[Fig. 7-17 LOAD CONFIG window]


▫ **BACKUP CONFIG**

This function is to save the current settings to load the settings to the system. Save the current settings in the BACKUP CONFIG in order to load it to the system in the near future whenever you change the settings.

- Click the BACKUP CONFIG button and then the BACKUP CONFIG window will be displayed (See [Fig. 7-19]).
- Select a blank file among FILE 1, FILE 2, FILE 3 and FILE 4 by clicking the mouse.
- Click the BACKUP button in the BACKUP CONFIG window, then type a file name by using the On Screen Keyboard and click OK to save the current setting (See [Fig. 7-19]).
- To delete, click the mouse on the saved file and click the DELETE button.
- Click the CANCEL button to cancel.



[Fig. 7-18 BACKUP CONFIG button]

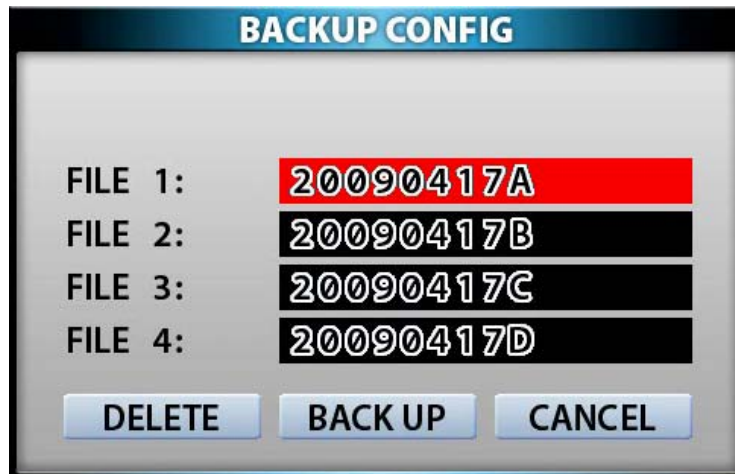

[Fig. 7-19 BACKUP CONFIG window]

7-2.5. PASSWORD


- ON/OFF

Select ON or OFF by clicking the mouse.

If the ON is selected, the password has to be entered to get into the SETUP mode, RECORD mode, COPY mode, REPLAY mode, and when trying to connect the network through the **DVR Master**.


- PASSWORD CHANGE

Click the password “*****” button and then the On Screen Keyboard will be displayed as shown in [Fig. 7-20]. The factory default password is “11111111”.

Delete the existing password with the  button on the On Screen Keyboard. Enter the new password by using the On Screen Keyboard and click the OK button to save.

The password should be 8 digits.

If you executed the factory default setting, the existing password will be changed to “11111111”.

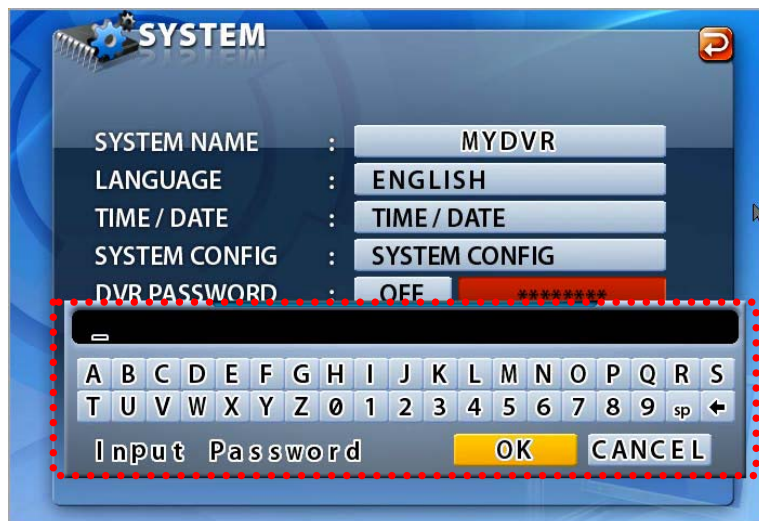

[Fig. 7-20 PASSWORD KEYBOARD window]



Note: Don't forget the password.

7-2.6. IR REMOTE ID

Up to 16 DVR systems can be controlled by only one remote controller we provided, but IDs should be assigned on each of the systems. You don't have to assign any ID on the single unit and you can control the system with the provided remote controller without IR REMOTE ID, which is in the OFF mode (Skip this section).

- Click the IR REMOTE ID button and select one among OFF, 1 through 16 to assign an ID for the system by clicking the mouse.




[Fig. 7-21 IR REMOTE ID button]

- When an IR Remote ID is assigned In the SYSTEM menu, press the “ID” button and the same channel button on the remote controller as an assigned ID in the SYSTEM menu to match the IDs between the system and the remote controller. And then press the “ID” button one more time for setting an ID.

When the “ID” button and the channel button are pressed on the remote controller,

- if the channel button is identical to the assigned ID, the Detect IR ID as shown in [Fig. 7-22] will be displayed along with the IR ID number.
- if not, the IR ID Denied as shown in [Fig. 7-23] will be displayed along with the denied IR ID number.

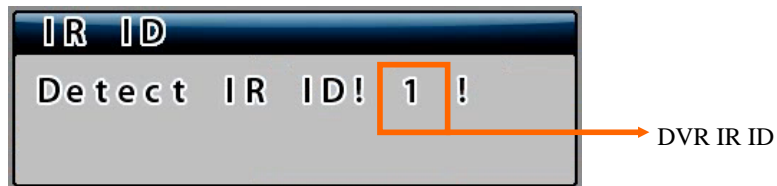

[Fig. 7-22 DETECT IR ID Message]



[Fig. 7-23 IR ID DENIED Message]

7-2.7. FIRMWARE UPDATE

There are two ways to update the firmware through **USB memory** and the **DvrMaster** (GUI). We recommend users to update the firmware only in the LIVE mode.


▫ **By USB memory**


- Format the USB with your computer and save the firmware file on it (not including folder).
- Plug it on the USB port on the DVR.
- Click the mouse on the SELECT button in the SYSTEM menu and the FIRMWARE LIST will be displayed.
- Click on the list, and then You will be asked, OK or CANCEL.
- Click the OK button to update the firmware and the system will automatically start rebooting.
- Click the CANCEL button to cancel.

▫ **By DvrMaster (GUI)**

Refer to section 8-4.1 ⑥ Firmware Update on page 140.


7-2.8. SYSTEM INFO


- Click the “SYSTEM INFO” button in the SYSTEM menu and then the SYSTEM INFO that contains the system version and the last updated date will be displayed.
- Click the  (EXIT) button to return to the SETUP menu.

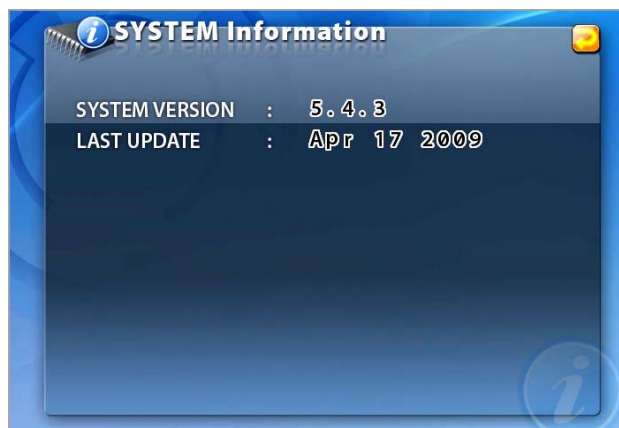

[Fig. 7-24 SYSTEM INFORMATION window]

7-3. DISK MANAGER

- Click the “**DISK MANAGER**” button in the SETUP menu and then the DISK MANAGER window will be displayed (See [Fig. 7-25]).
- Click the  (EXIT) button to return to the SETUP menu.
- A DVD R/W (USB) and 1 Hard Disk Drives can be installed, and all information in regards to the drives will automatically display on the DISK MANAGER window.

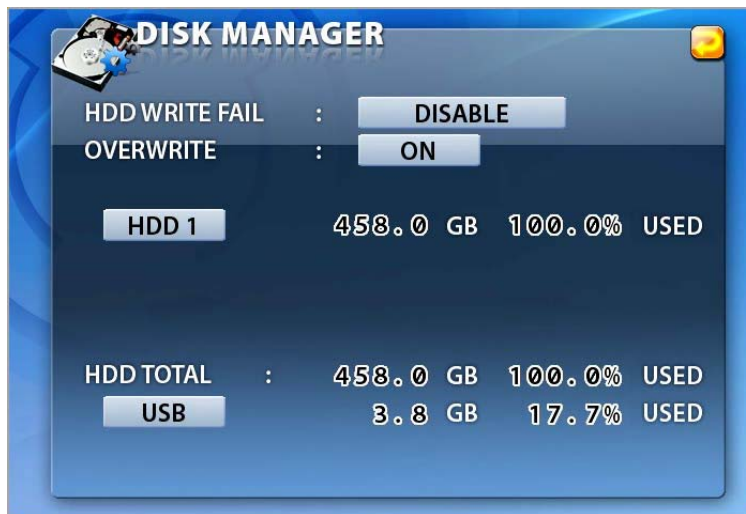

[Fig. 7-25 DISK MANAGER window]

7-3.1. HDD WRITE FAIL

If HDD is in full and the OVERWRITE on the HDD is turned OFF in the recording mode, the system will activate the relay output (See section 5-4.3) for a siren or other device.

- Click the HDD WRITE FAIL button in the DISK MANAGER window and select RELAY 1 OUT or DISABLE.



[Fig. 7-26 HDD Write Fail button]

7-3.2. HDD OVERWRITE

- Click the OVERWRITE button to select the ON or the OFF. If the ON is selected, the system continues recording by overwriting start from the first index of the recorded file even though the space of HDD is in full. If the OFF is selected, the system will stop recording when the space of HDD is in full.




[Fig. 7-27 Overwrite button]

7-3.3. Format


When you install the new Hard Disk Drives (HDD), it should be formatted before recording. Formatting is possible only when the system is in the LIVE mode.

- Click the “HDD or USB” button to format and then the HDD or USB FORMAT message box will be displayed (See [Fig. 7-28]).
- Click the “OK” button, and you can see the formatting process of the HDD.
- Click the “CANCEL” button to return to the Disk Manager.

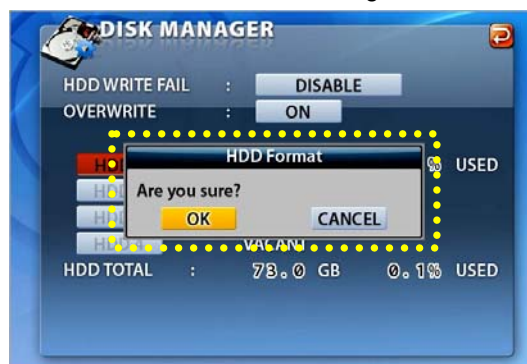

[Fig. 7-28 HDD FORMAT window]

7-4. CAMERA

- Click the “CAMERA” button in the SETUP menu and then the CAMERA menu will be displayed (See [Fig. 7-29]). To change the settings in the CAMERA menu, stop recording by clicking the RECORD icon on the MENU window. It is possible only in the LIVE mode.
- Click the  (EXIT) button to return to the SETUP menu.



[Fig. 7-29 CAMERA menu]



7-4.1. Camera ON/OFF

- Click on each of the channels to select the “O” or “X” in the CAMERA menu. If the “O” is selected, the corresponding video channels (CAM 01 through CAM 08) will be displayed on the screen. If the “X” is selected, the corresponding video channels (CAM 01 through CAM 08) won’t be displayed.



[Fig. 7-30 Camera ON/OFF button]

7-4.2. Camera Name (Camera Title)

- Click the NAME (Camera Title) button in the CAMERA menu and then the On Screen Keyboard will be displayed as shown in [Fig. 7-31].
- Delete the existing NAME (Camera Title) with the  button on the On Screen Keyboard.
- Enter the new NAME up to 8 Characters by using the On Screen Keyboard and click on the OK button to save. Click on the CANCEL button to cancel.
- Click the  (EXIT) button to return to the SETUP menu.



[Fig. 7-31 Camera Name Setting Keyboard window]

7-4.3. Buzzer

In order to alert users, the Buzzer will sound at that time video signal lost.

- Click on each of the channels you wish to turn the buzzer “ON” or “OFF”. If the “O” is selected, the buzzer will sound when video signal lost and if the “X” is selected, the buzzer won’t sound.



[Fig. 7-32 Buzzer button]

7-4.4. Relay

The system will automatically activate a siren or other device through the Relay Output on the rear panel when video signal lost.

- Click on each of the channels you wish to select the Relay Output “O” or “X”. If the “O” is selected, the Relay Output will be turned on to activate a siren or other device when video signal lost.




[Fig. 7-33 Relay OFF]




[Fig. 7-34 Relay ON button]

7-4.5. Pan/Tilt Settings

- Click the PAN/TILT button on the corresponding channels in the CAMERA menu, then the PAN/TILT window will be displayed as shown in [Fig. 7-36].
- Click the  (EXIT) button to return to the CAMERA menu.



[Fig. 7-35 PAN/TILT button]

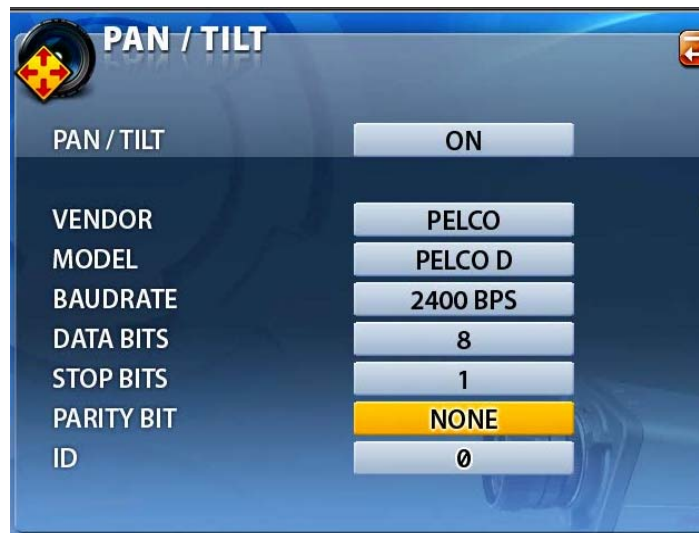


[Fig. 7-36 PAN/TILT window]

▫ Pan/Tilt Vendor select

Click the “PAN/TILT” button in the PAN/TILT window, then the vendor lists will show up.
Select a vendor on the vendor lists by clicking the mouse.



[Fig. 7-37 PAN/TILT]

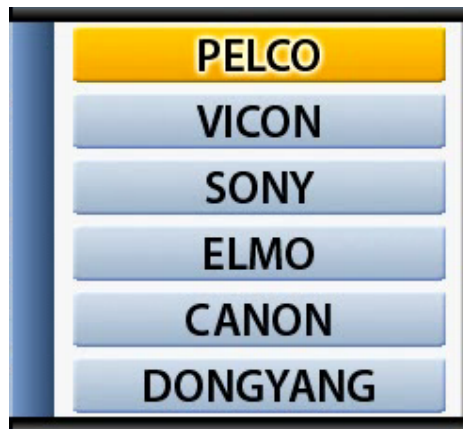

[Fig. 7-38 PAN/TILT Vendor lists]

▫ Model

Click the “MODEL” button in the PAN/TILT window and then select the model on the pop-up lists by clicking the mouse.



[Fig. 7-39 MODEL button]



[Fig. 7-40 PAN/TILT Model pop-up window]

- Baud rate

Click the “BAUD RATE” button in the PAN/TILT window and choose a value among 1200bps, 2400bps, 4800bps, 9600bps, 19200bps, 38400bps, 57600bps and 115200bps on the Baud Rate pop-up window by clicking the mouse.



[Fig. 7-41 BAUDRATE button]



[Fig. 7-42 Baud Rate pop-up window]

- Data Bits

Click the “DATA BITS” button in the PAN/TILT window and choose a value among 5, 6, 7 and 8 on the Data Bits pop-up window by clicking the mouse.



[Fig. 7-43 DATA BITS button]



[Fig. 7-44 Data Bits pop-up window]

▫ Stop Bits

Click the “STOP BITS” button in the PAN/TILT window and select 1 or 2 on the Stop Bits pop-up window by clicking the mouse.



[Fig. 7-45 STOP BITS button]



[Fig. 7-46 Stop Bits pop-up window]

▫ Parity Bit

Click the “PARITY BIT” button in the PAN/TILT window and choose a value among NONE, ODD, EVEN, STICK and ZERO on the Parity Bit pop-up window by clicking the mouse.



[Fig. 7-47 PARITY BIT button]



[Fig. 7-48 Parity Bit pop-up window]

▫ PTZ ID


- Click the PTZ ID button in the PAN/TILT window, then On Screen Keyboard will show up.
- Delete the current ID with the  button and choose a number among “0” to “255” by using the On Screen Keyboard, and then click **OK** button to save it. The ID should be identical to one PTZ camera has.
- Click the “**CANCEL**” button to return to the previous value.



Fig. 7-48-1 PTZ ID

7-4.6. Display

- Click the DISPLAY button in the CAMERA menu and select the ON or OFF. If the “ON” is selected, the camera name (camera title) in the LIVE mode will be displayed on the screen. If the “OFF” is selected, the camera name (camera title) in the LIVE mode won't be displayed.



[Fig. 7-49 Display ON/OFF button]

7-4.7. Sequencing dwell time

- Click the “SEQUENCING DWELL” button in the CAMERA menu and choose a value among 1, 2, 3, 4 and 5seconds on the dwell time pop-up window by clicking the mouse.




[Fig. 7-50 Sequencing Dwell Time button]



[Fig. 7-51 Sequencing Dwell Time pop-up window]

7-5. AUDIO

- Click on the AUDIO button in the SETUP menu and then the AUDIO menu will be displayed on the screen.
- Click the  (EXIT) button to return to the SETUP menu.



[Fig. 7-52 AUDIO menu]


7-5.1. Microphone Volume

- Adjust audio volume by clicking the ▲ or ▼ button.



[Fig. 7-53 Microphone Volume control button]

7-6. RECORD

- Click the “RECORD” button in the SETUP menu and then the RECORD menu will be displayed as shown in [Fig. 7-54].
- Click the  (EXIT) button to return to the SETUP menu.



[Fig. 7-54 RECORD menu]

7-6.1. Record ICON Display

- The Recording Icons depends on recording modes are displayed in the upper left corner of the screen.
- To turn the Recording Icon OFF, click the DISPLAY ON in the RECORD menu and then it will be turned OFF. You can select the value **ON** or **OFF** by repeatedly clicking the mouse.



[Fig. 7-55 Record ICON Display button]

7-6.2. All Manual / Timer recording button

- Click the **All Manual / Timer** recording button in the RECORD menu, then the **All Manual / Timer** recording button will be displayed as shown in [Fig. 7-57].
- Select the Manual Recording button or Timer Recording button for all the channels by clicking the mouse in [Fig. 7-57].
- See section 6-9.1 through 6-9.7 on page 56 through 60 for more information related to recording.






[Fig. 7-56 All Manual / Timer button]



[Fig. 7-57 All Manual / Timer pop-up window]

7-6.3. All Motion ON / OFF, Sensitivity Setting

- Click the  button in the RECORD menu, then the ALL MOTION setup pop-up window will be displayed as shown in [Fig. 7-59].
- By clicking the mouse, select the **ALL  ENABLE** on the pop-up window (See [Fig. 7-59]) to enable the system to start recording by motion detection for all the channels.
- By clicking the mouse, select the **ALL  DISABLE** on the pop-up window (See [Fig. 7-59]) to disable the system to start recording by motion detection for all the channels.
- By clicking the mouse, select the **SENSITIVITY HIGH** on the pop-up window (See [Fig. 7-59]) and choose one of the sensitivity among **LOW**, **1**, **2**, **3** and **HIGH** for all the channels with the mouse's wheel, and then click it to save.
- See section 6-9.1 through 6-9.7 on page 56 through 60 for more information related to recording.



[Fig. 7-58 All Motion Setup button]






[Fig. 7-59 All Motion Setup pop-up window]



[Fig. 7-60 All Motion Sensitivity setup button]

7-6.4. All Sensors ON / OFF

- Click the  button in the RECORD menu, then the ALL SENSOR setup pop-up window will be displayed as shown in [Fig. 7-62].
- By clicking the mouse, select the **ALL  ENABLE** on the pop-up window (See [Fig. 7-62]) to enable the system to start recording by Sensor (Passive Infrared sensor) for all the channels.
- By clicking the mouse, select the **ALL  DISABLE** on the pop-up window (See [Fig. 7-62]) to disable the system to start recording by Sensor (Passive Infrared sensor) for all the channels.



[Fig. 7-61 All Sensor Setup button]



[Fig. 7-62 All Sensor Setup pop-up window]

7-6.5. Size (Recording Resolution)

Select the size of the screen for recording. The larger the size selected, the better display quality is but the larger the data becomes.

- Click the SIZE (Recording Resolution) button on each of the channels in the RECORD menu, then the SIZE (Recording Resolution) pop-up window will be displayed as shown in [Fig. 7-64].
- Select one of the Resolution among **D1**, **HALF D1** and **CIF** on the pop-up window by clicking the mouse.




[Fig. 7-63 Record Size button]



[Fig. 7-64 Record Size pop-up window]

7-6.6. Recording Speed

- Click the F/S (Frames Per Seconds: Recording Speed) button on each of the channels in the RECORD menu, then the Recording Speed pop-up window will be displayed as shown in [Fig. 7-66].
- Select one of the Recording Speed among AUTO, 30, 15, 10, 7, 5, 3, 2, 1 and OFF on the pop-up window by clicking the mouse.
- If the AUTO is selected on all the channels, the Recording Speed on all the channels should be the same. If the OFF is selected, the corresponding channel won't be recording.

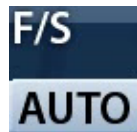

[Fig. 7-65 Record Speed button]



[Fig. 7-66 Record Speed pop-up window]

NTSC	30
	15
	10
	7
	5
	3
	2
	1
	OFF

PAL	25
	12
	8
	6
	5
	3
	2
	1
	OFF

[Fig. 7-67 Recording Speed for each channel]

7-6.7. Recording Quality

- Click the QUALITY button on each of the channels in the RECORD menu, then the QUALITY pop-up window will be displayed as shown in [Fig. 7-69].
- Select one of the Recording Quality among LOW, NORMAL, HIGH and BEST on the pop-up window by clicking the mouse.



[Fig. 7-68 Record Quality button]



[Fig. 7-69 Record Quality pop-up window]

7-6.8. Recording Mode

The factory default setting for Recording is the Manual Recording (or called Continuous Recording), which keeps recording continuously if the OVERWRITE is set ON in the DISK MANAGE menu. This Manual Recording mode is not only one of the most popular Recording modes for users, but also one of the most convenient Recording modes to use.

Users can select one of the following Recording modes depends on their application.

7-6.8.1. Manual Recording

See section 6-9.1 [on page 56](#).

7-6.8.2. Manual Event Recording

See section 6-9.2 [on page 56](#).

7-6.8.3. Timer Recording (Schedule Recording)



See section 6-9.3 [on page 57](#).


7-6.8.4. Timer Event Recording

See section 6-9.4 [on page 58](#).

7-6.9. Recording by Motion Detection

When the menu of motion is properly set up (See section 7-6.3 for all the channels and this section for each of the channels) and detected motion of objects, the system begins recording automatically. The recording icon on the MENU window should be selected in this recording mode. If not, it won't be recording.

- Click the mouse on the  button for each of the channels in the RECORD menu, then the MOTION menu will be displayed on the screen as shown in [Fig. 7-70].
- Click the  (EXIT) button to return to the RECORD menu.

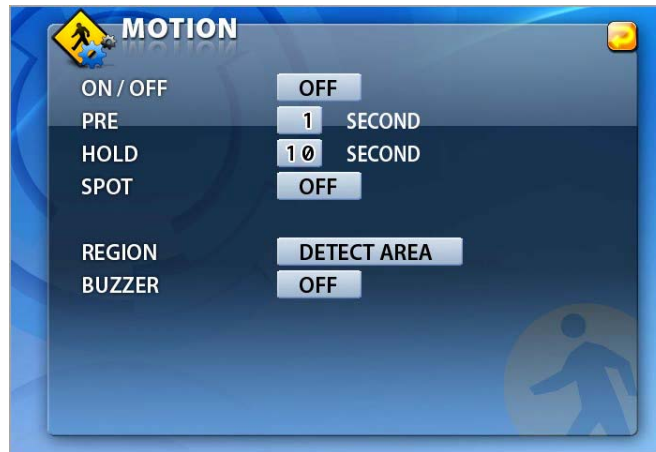

[Fig. 7-70 MOTION menu]

- ON/OFF

The system will start recording when MOTION is detected and the ON is selected in the MOTION menu by clicking the mouse. If the OFF is selected, the system won't be recording.



[Fig. 7-71 MOTION ON/OFF button]

▫ Pre-Alarm Time Setup

Allows you to record a section of video just prior to Motion or Sensor activation. Click the mouse on the PRE in the MOTION menu and choose one of the values among 1 through 30 seconds in the pop-up table by clicking.



[Fig. 7-72 Pre-Record Time setup button]

▫ Motion Hold Time Setup

The system continues recording for the MOTION HOLD TIME and finishes the recording. Click the mouse on the HOLD in the MOTION menu and choose one of the values among 1 through 30 seconds in the pop-up table by clicking.



[Fig. 7-73 Hold-Record Time Setup button]

▫ Spot Setup

If the "ON" is selected by clicking the mouse on the SPOT button in the MOTION menu, a full screen will display when a motion is detected. If the "OFF" is selected, the full screen won't be displayed even though motion of objects is detected.



[Fig. 7-74 Spot Setup button]


▫ Region

The Motion Detection Area displays in blue on the screen, and it turns to **doubly-boxes** when the motion is detected. The white color on the screen represents none of detection area. There are three kinds of REGION settings as below.

Click the **DETECT AREA** button in the MOTION menu, and then the setting window for Motion Detection Area will be displayed in blue as shown in [Fig. 7-75].

Right-click on the setting window for Motion Detection Area ([Fig. 7-75]), and then the pop-up setting window for Motion Detection Area will be displayed ([Fig. 7-76]).

Click the **EXIT** button to return to the MOTION menu.

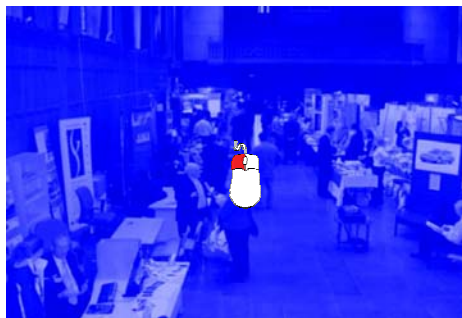

[Fig. 7-75 Motion Detect Area Setting window]



[Fig. 7-76 pop-up setting window for Motion Detect Area]



[Fig. 7-77 EXIT button]


By All Set

Right-click on the setting window for Motion Detection Area ([Fig. 7-75]), and then the pop-up setting window for Motion Detection Area will be displayed ([Fig. 7-76]).

By clicking the mouse, select the **ALL SET** button on the pop-up setting window. Motion Detect Area displays in blue on the screen as shown in [Fig. 7-78].

Click the **EXIT** button to return to the MOTION menu.

The Factory default value is the ALL SET.

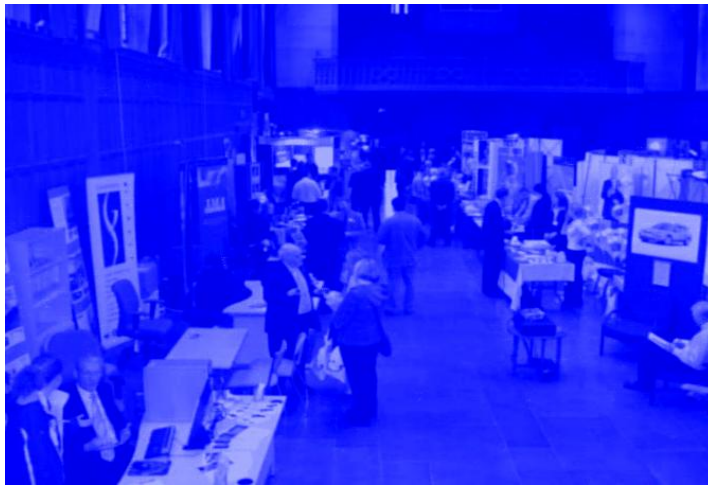

[Fig. 7-78 All Set screen]

- All Clear

Right-click on the setting window for Motion Detection Area ([Fig. 7-75]), and then the pop-up setting window for Motion Detection Area will be displayed ([Fig. 7-76]).

By clicking the mouse, select the **ALL CLEAR** button on the pop-up setting window in order to clear the Motion Detect Area. The window turns to white color as shown in [Fig. 7-79].

Click the **EXIT** button to return to the MOTION menu.



[Fig. 7-79 All Cleared screen]


By Window Set

Right-click on the setting window for Motion Detection Area ([Fig. 7-75]), and then the pop-up setting window for Motion Detection Area will be displayed ([Fig. 7-76]).

By clicking the mouse, select the **WINDOW SET** button on the pop-up setting window. Click one of cells for the starting point of the area which you would like to designate, and then click the other one of cells for the ending point of area until the motion detection area is the size you want it to be. The multiple motion areas can be set on each of cameras.

The motion detection by Window Set will be made on the designated area only.

Click the **EXIT** button to return to the MOTION menu.

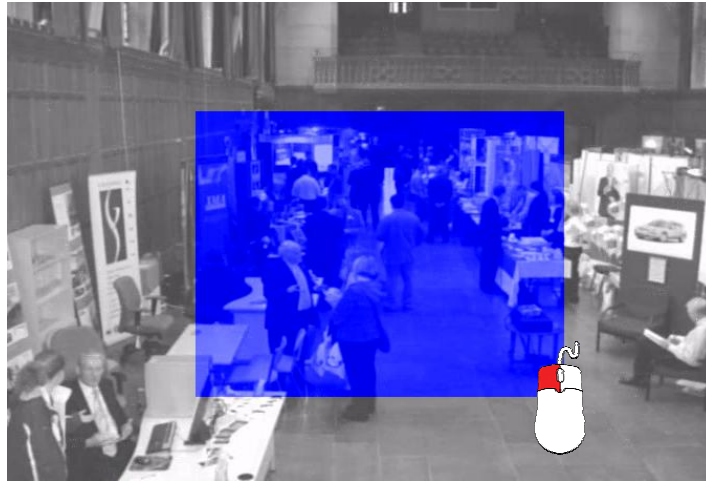


[Fig. 7-80 Window Set screen]

- Window Clear

Right-click on the setting window for Motion Detection Area (*Fig. 7-75*), and then the pop-up setting window for Motion Detection Area will be displayed (*Fig. 7-76*).

By clicking the mouse, select the **WINDOW CLEAR** button on the pop-up setting window in order to clear the Motion Detection Area, and then the motion detection area you have created will be displayed. Click the starting point and the ending point as much as you wish to clear or it can be cleared by ALL CLEAR as described above (See ALL CLEAR).

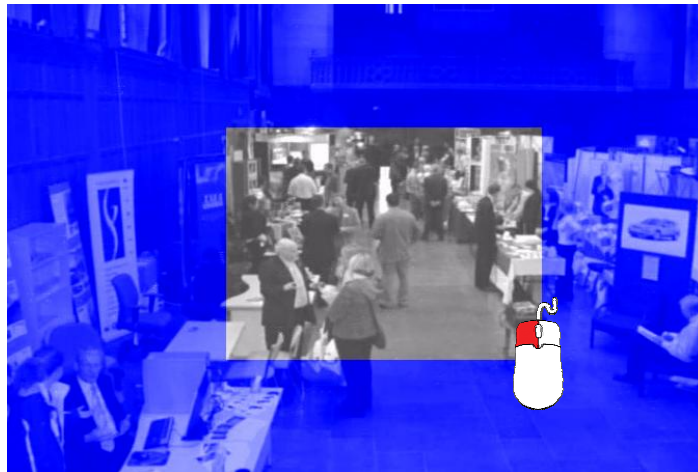


[Fig. 7-81 Window Clear setup screen]

By Each Cell

Right-click on the setting window for Motion Detection Area ([Fig. 7-75]), and then the pop-up setting window for Motion Detection Area will be displayed ([Fig. 7-76]).

By clicking the mouse, select the **EACH CELL** button on the pop-up setting window. Click the mouse on each of the cells as much as you would like to designate the Motion Detection Area.

To clear, click the designated cells.

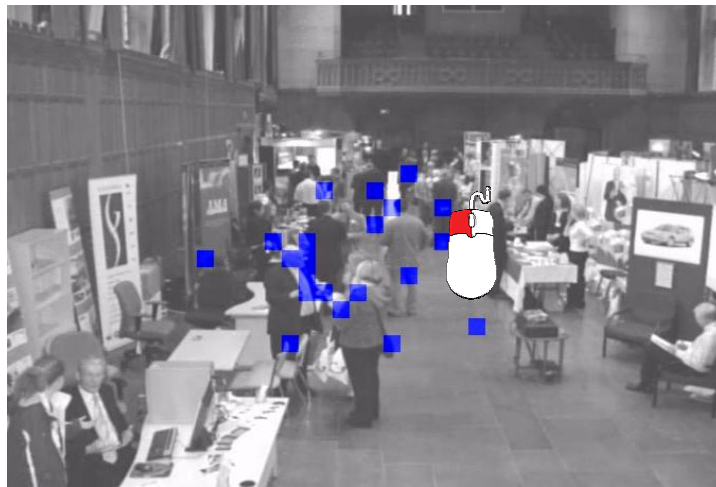

[Fig. 7-82 Each Cell Setup screen]

▫ Buzzer

Click the buzzer button in the MOTION menu to turn the buzzer “ON” or “OFF”. If the “ON” is selected, the buzzer will sound when a motion is detected. If the “OFF” is selected, the buzzer won’t sound.



[Fig. 7-83 Buzzer ON/OFF]






Note : Please pay attention to the following directions in order to use the Motion

Detection function properly:

- Adjust the sensitivity level and motion area to fit your requirements.
 - Do not use this function in an area where many objects are continuously moving. In case of this, change the recording mode to the Continuous (Manual) Recording mode.
 - Use a high quality camera that does not generate video static or “noise”. The motion detection algorithm recognizes this “noise” as a motion and records the noise even if there was no actual motion.
 - Do not point the camera toward a strong and changing lighting source; it can activate false motion detection.
-

7-6.10. Recording by Sensor (PIR Sensor)

- Click the mouse on the  button for each of the channels in the RECORD menu, and then the SENSOR menu will be displayed on the screen as shown in [Fig. 7-84].
- Click the  (EXIT) button to return to the RECORD menu.

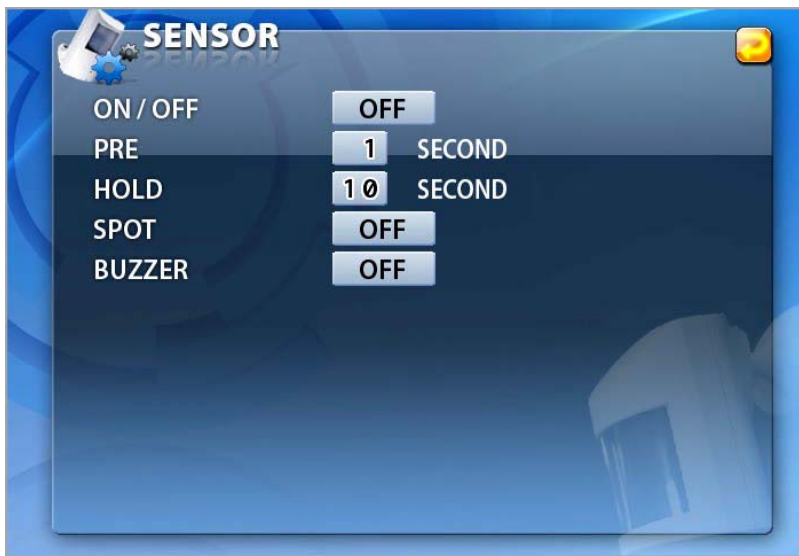

[Fig. 7-84 SENSOR window]

▫ ON/OFF

The system will start recording when an Alarm is detected and the ON is selected in the SENSOR menu by clicking the mouse. If the OFF is selected, the system won't be recording.

If you select "ON", it will be recorded when only sensor is activated.



[Fig. 7-85 SENSOR ON/OFF button]

▫ Pre-Alarm Time Setup

Allows you to record a section of video just prior to Sensor activation. Click the mouse on the PRE in the SENSOR menu and choose one of the values among 1 through 30 seconds in the pop-up table by clicking.



[Fig. 7-86 Pre-Alarm Time Setup button]

▫ Alarm Hold Time Setup

The system continues recording for the Alarm HOLD TIME and finishes the recording. Click the mouse on the HOLD in the SENSOR menu and choose one of the values among 1 through 30 seconds in the pop-up table by clicking.



[Fig. 7-87 Alarm Hold Time Setup button]

▫ Spot Setup

If the "ON" is selected by clicking the mouse on the SPOT button in the SENSOR menu, a full screen will display when the sensor is activated. If the "OFF" is selected, the full screen won't be displayed even though the sensor is activated.



[Fig. 7-88 Spot Setup button]


▫ Buzzer


Click the buzzer button in the SENSOR menu to turn the buzzer "ON" or "OFF". If the "ON" is selected, the buzzer will sound when a sensor is activated. If the "OFF" is selected, the buzzer won't sound.



[Fig. 7-89 Buzzer ON/OFF]

7-7. NETWORK

- Click the “NETWORK” button in the SETUP menu, and then the NETWORK menu will be displayed on the screen as shown in [Fig. 7-90].
- Click the  (EXIT) button to return to the SETUP menu.

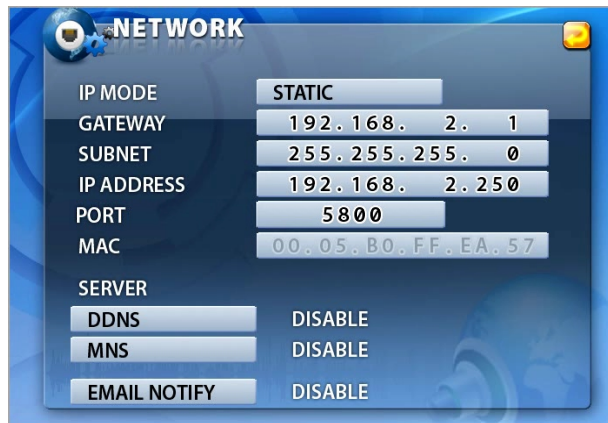

[Fig. 7-90 NETWORK menu]

7-7.1. IP Mode

When the system uses the same IP address every time it connects to the network, it is known as a static IP address. If the system’s IP address changes frequently, it is called a dynamic IP address. Check with your Internet Service Provider to determine which IP address was given. This manual will guide users through the setup process for both types.

DYNAMIC IP: automatically receives IP address from the router or gateway. With Dynamic IP, It doesn’t need to enter the GATEWAY ADDRESS, SUBNET MASK, and IP ADDRESS.

STATIC IP: requires you to enter the GATEWAY ADDRESS, SUBNET MASK, and IP ADDRESS.

- Click the “IP MODE” button in the NETWORK menu, and then the IP mode pop-up window will be displayed on the screen (See [Fig. 7-92]).
- Select the STATIC or DYNAMIC by clicking the mouse depends on your networking.




[Fig. 7-91 IP Mode button]




[Fig. 7-92 IP Mode pop-up window]

7-7.2. GATEWAY, SUBNET, IP ADDRESS

- Click the GATEWAY / SUBNET / IP ADDRESS button in the STATIC IP MODE, then the On Screen Keyboard will appear.
- Delete the current values with the  button and enter the address numbers by using On Screen Keyboard, and then click **OK** button to set with new address.
- Click the **CANCEL** button to return to the original values.


GATEWAY	192.168.2.1
SUBNET	255.255.255.0
IP ADDRESS	192.168.2.250

[Fig. 7-93 Address Setup window]

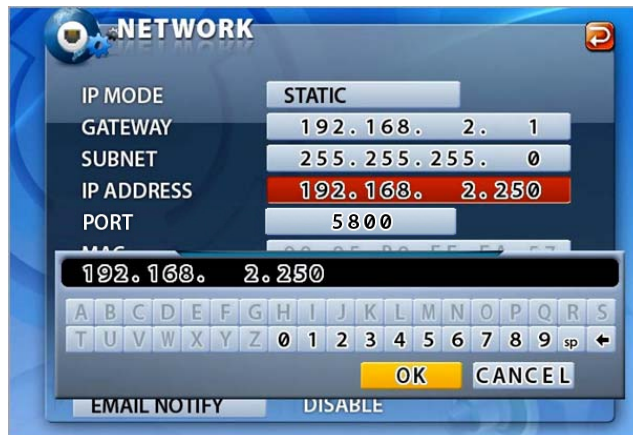


[Fig. 7-94 On Screen Keyboard]

7-7.3. Port

- PORT is the TCP address of the program, which is used to connect to the network viewer. It can be set from 1 to 65535 values.
- Click the **PORT** button in the Network menu, then the On Screen Keyboard will show up.
- Delete the current port number with the  button and enter the new port number by using On Screen Keyboard, and then click “**OK**” button to set with new port number.
- Click the “**CANCEL**” button to return to the default value.



[Fig. 7-95 Port Setup window]

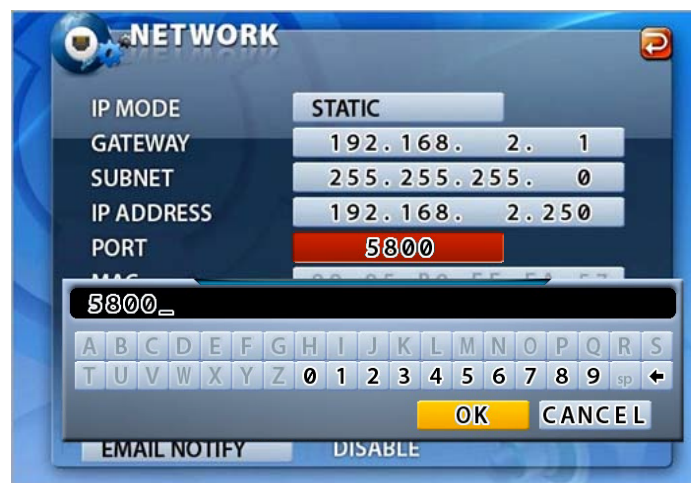

[Fig. 7-96 Port Setup Keyboard window]

7-7.3.1. Port Forwarding


- Router has to be set as a virtual server (or port forwarding) in order to utilize the MNS (Mac Name Server) or the DDNS service to use Internet Explorer (See section 8-3) on this product.
- Do not use the public port numbers.


7-7.4. MAC ID

- MAC ID is connecting address for Ethernet, every unit has 12 digit addresses (HEX 6 byte). MAC ID was already assigned with the factory default value. User can not change it.

7-7.5. MNS (MAC NAME SERVER)

As a sort of DDNS, two servers in our company are being operated so that our client can access DVR with a Dynamic IP address. If one of servers stops operating, the other one will automatically start working.

- Click the **MNS** button in the NETWORK menu with a mouse or buttons on the remote controller and then the **MNS** window will show up as below (See [Fig. 7-97]).
- To return to the **NETWORK** window, click the  (EXIT) button in the **MNS** menu.

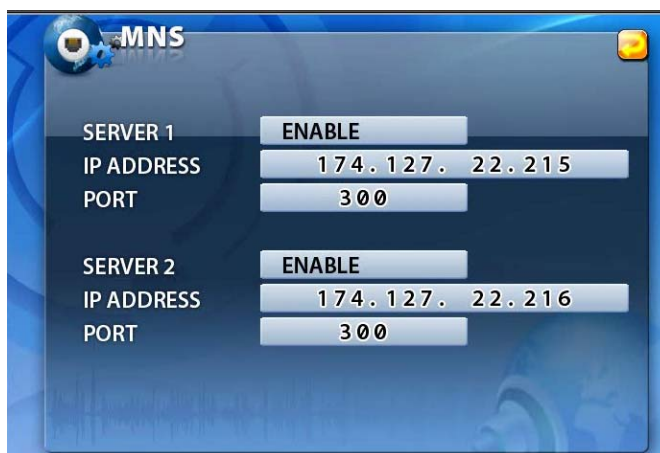

[Fig. 7-97 MNS window]

- DISABLE / ENABLE

You can select the **DISABLE** or **ENABLE** button on both SERVER 1 and SERVER 2 by clicking the mouse or pressing the **ENTER** button on the remote controller.

“**DISABLE**”: MSN (MAC NAME SERVER) is not working.

“**ENABLE**”: MSN (MAC NAME SERVER) is working.



[Fig. 7-98 DISABLE/ENABLE button]



- IP ADDRESS / PORT


DO NOT CHANGE THE IP ADDRESS AND PORT NUMBER IN THE MNS MENU IF YOU DON'T HAVE ANY SPECIAL SERVER TO ACCESS YOUR DVR WITH A DYNAMIC IP ADDRESS. IF YOU CHANGE THEM, YOU CAN'T NOT ONLY USE OUR MNS (MAC NAME SERVER), BUT ALSO YOUR NETWORKING WILL BE DISCONNECTED.



Note : You should type the System Name up to 15 characters in order to utilize the MNS server (See section 7-2.1.)

7-7.6. DDNS (DYNAMIC DOMAIN NAME SYSTEM)

- Select the DDNS button in the NETWORK menu by clicking the mouse or pressing the buttons on the remote controller. The DDNS menu will show up as shown in [Fig. 7-99].
- To return to the NETWORK menu, click the  (EXIT) button.
- If you were in the middle of entering values on the DDNS menu, you can't exit by clicking the mouse. Choose the SERVER button in the DDNS menu by clicking the mouse and select the DISABLE, and then click the  (EXIT) button.

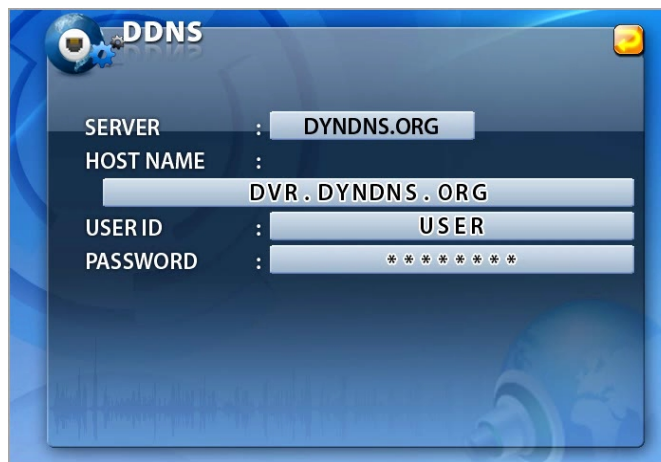

[Fig. 7-99 DDNS menu]

▫ SERVER

- Choose the SERVER button in the DDNS menu by clicking the mouse or pressing the buttons on the remote controller and select the DYNDNS.ORG (or NO-IP.ORG) provided by www.dyndns.org (or www.no-ip.org) at no cost.



[Fig. 7-100 SERVER button]

▫ HOST NAME

- Click the HOST NAME in the DDNS menu and type the HOST NAME registered to the DDNS server such as DYNDNS.ORG and NO-IP.ORG by using the On Screen Keyboard.
- After changing the values, click on the OK button.



[Fig. 7-101 HOST NAME button]

▫ USER ID

- Click the USER ID in the DDNS menu and type the USER ID registered to the DDNS server by using the On Screen Keyboard.
- After changing the values, click on the OK button.



[Fig. 7-102 USER ID button]

▫ PASSWORD

- Click the PASSWORD in the DDNS menu and type the PASSWORD registered to the DDNS server by using the On Screen Keyboard.
- After changing the values, click on the OK button.



[Fig. 7-103 PASSWORD button]

7-7.7. HOW TO SETUP AND USE THE DDNS

7-7.7.1. Router.

It has to be set as a virtual server (or port forwarding) in order to utilize the DDNS. There are a lot of manufacturers on the market. Please read the provided manual thoroughly before setting or visit our website at www.cloverusa.co.kr in regards to do it.

We, the manufacturer of DVR systems will not support the solution to your individual network issues.

** DDNS (Dynamic Domain Name System) is a method of keeping a domain name linked to a changing IP address. This is a useful feature since many computers do not use a static IP address.

7-7.7.2. Registration to the DDNS server

Visit at www.dyndns.org to register.

Registration to DYNDNS.ORG

1. Visit at www.dyndns.com.
2. Sign up for a new user name and a password: Click the Create Account on the upper right hand corner.
3. After signup new user, check your e-mail and confirm an e-mail from dyndns.com.
4. Go back to www.dyndns.com and log in with the ID and the Password.
5. After log in on dyndns.com front page, click on my services.
6. Click on the Add Host Service (Next to Host Level Service).
7. Click the Add Dynamic DNS Host on the Dynamic DNS.
8. The window to input Host Name will pop up, and select the dyndns.org or the dvr dns.org on the pop-up window.
9. To complete, click the Add Host button on the bottom.
10. After registration, go to the NETWORK menu on the DVR and enter the HOST NAME, USER ID and the PASSWORD you just registered in the DDNS menu (See section 7-7.6).


7-7.8. EMAIL NOTIFICATION

- Email notification enables to notify events (sensor, motion, video loss, power on/off, power loss, record on/off, record fail, replay or copy start/stop) by sending emails to one or two email accounts.




[Fig. 7-104 Email Notification window]

◦ EMAIL ADDRESS SETUP

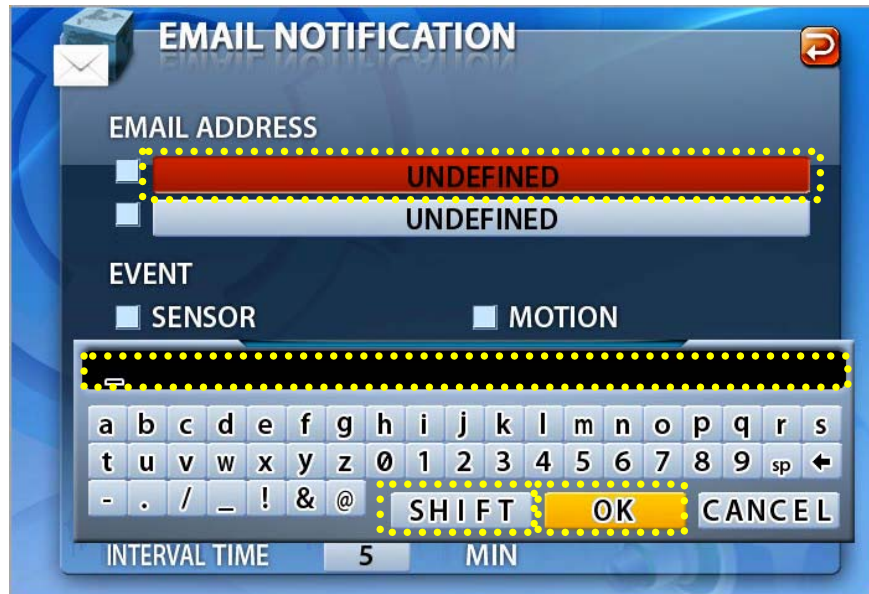

[Fig. 7-105 Keyboard window]

- Click one of email address boxes and then the On Screen Keyboard will show up as shown [Fig. 7-105].
- Delete the current email address with the  button and enter an email address by using the On Screen Keyboard.
- If necessary, click the **SHIFT** button to enter upper cases.
- Click the OK button to save.
- Click the check box below to enable the email notification.



[Fig. 7-106 Check Box for email]



Note : If a check box in [Fig. 7-106] is checked, “ENABLE” message will be displayed in the NETWORK menu, if not, “DISABLE” will be displayed.

▫ EVENT Setup


- Click the check boxes below to choose the events you need.
- To delete, click the check box again.



[Fig. 7-107 Event setup]

▫ INTERVAL TIME Setup

- Click the INTERVAL TIME (see [Fig. 7-108]) to set the interval time of sending emails and then choose the time (in minutes) on the pop-up window by clicking the mouse.
- If the 5 minutes is selected, the system will automatically send only one email every 5 minutes even though a lot of events occur.

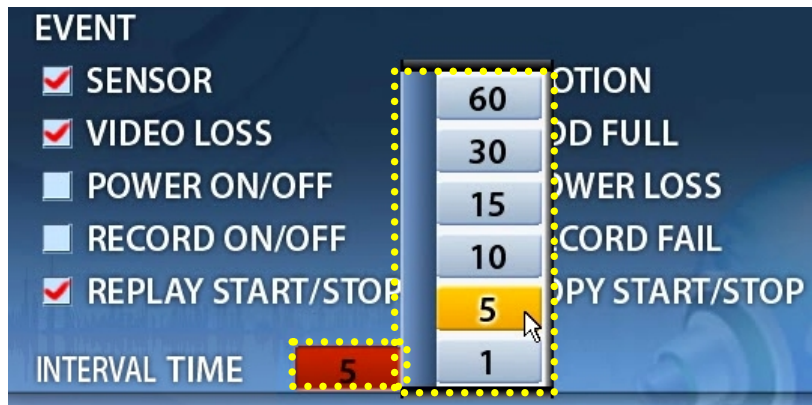

[Fig. 7-108 interval time setup]

Note : If the motion is selected in [Fig. 7-108], you may receive numerous emails from the DVR systems due to a couple of factors such as continuous moving objects, a strong and changing lighting source, low resolution and noises of cameras. In case of this, select a longer INTERVAL TIME and refer to “Note for Motion Detection Function” on page 116.

8. Remote Host Program

CONTENTS

8-1. REMOTE PROGRAM OVERVIEW	133
8-2. INSTALLING THE PROGRAM TO PC	134
8-3. INTERNET EXPLORER.....	135
8-4. REMOTE HOST	137
8-4.1. SETUP.....	139
8-4.2. CONNECTION	142
8-4.3. CAPTURE.....	143
8-4.4. STATUS	144
8-4.5. REPLAY	145
8-4.6. COPY.....	147
8-4.7. SWITCH THE NORMAL SCREEN TO FULL SCREEN	149
8-4.8. SPEAKER / MICROPHONE	150
8-4.9. CONNECTION MODE.....	151
8-4.9.1. TERMINAL MODE.....	151
8-4.9.2. MULTI MODE	152
8-4.10. COPY IN THE TERMINAL MODE (NOT AVAILABLE ON THIS VERSION)	153
8-4.11. E-MAP.....	155
8-4.11.1. ADDITION OF MAP	155
8-4.11.2. PLACEMENT OF CAMERAS ON THE MAP	156
8-4.11.3. USAGE OF CAMERA POSITION.....	157
8-4.11.4. DELETION OF CAMERA POSITION ICON	157
8-4.12. PAN / TILT & PRESET	158
8-5. PLAYER.....	159

8-1. Remote Program Overview

The Remote Host Program allows you to view live video, search archived video, control PTZ cameras and to set up the exact same menus as the DVR does.

The DVR system can have up to 10 simultaneous Remote Connections. Each user can perform on the DVR system and will not affect the other users. The only exception to this is accessing Setup. Only one user is allowed to access Setup at any time.

In order to log in to the DVR system, users should be requested to enter the password if the password is already turned **ON** in the **SYSTEM** menu (Click **SETUP – SYSTEM**). This ensures that only authorized personnel are allowed to log in.

Remote system minimum requirements

- Microsoft Windows 2000, XP or VISTA Operating System
- Pentium-4 2.0GHz or higher
- 256MB System memory
- 1024 x 768 Display Resolution, 32Bit color
- Internet or LAN Connection
- TCP/IP installed
- Microsoft DirectX 9.0c

It is recommended to have DirectX 9.0c version in client PC. DirectX 9.0 is available for download from Microsoft homepage (www.microsoft.com/windows/directx).

8-2. Installing the Program to PC

Install the program into PC by using program CD (supplied) as follows.

How to install the program

1. Start the operating system (Windows 2000/XP/VISTA).
2. Insert the program CD into CD-ROM drive.
3. Open **My Computer**, and then select CD-ROM drive.
4. Double click **Setup.EXE**. The software installation will begin.
5. After the installation has been completed, the **DVR Master** icon will be created on your desktop screen as shown below.
7. Double click the **DVR Master** icon and the **DVR Master** screen appears.



[Fig. 8-1 DVR Master icon]

How to set Screen Resolution and Color Quality

1. Click **Start**, point to **Control Panel** and then click on it.
2. Double-click **Display** icon.
3. In **Display Properties** Window, select **Settings**.
4. Set **Colors as True color (32 bit)** and **Screen area as 1024 x 768 (or 1152 x 864) pixels**.


8-3. Internet Explorer

When you are trying to use this function, it is highly recommended that the password should be turned **ON** in the SYSTEM menu not to enable unauthorized personnel to access your DVR system (See section 7-2.5).


Up to 10 users can remotely access your DVR with the HOST NAME.

How to setup the Internet Explorer


- Registration to the www.dyndns.org (See section 7-7.7.2 on page 125).
- In the IP address box of Microsoft Internet Explorer, type the HOSET NAME (See [Fig. 8-2]) you entered in the DDNS menu and the PORT NUMBER of the DVR, and then you will be asked to install the AciveX control software (See [Fig. 8-3]). **You should type the protocol (http://), the host name (example: cloverdvr1.dyndns.org) or the static IP address (See Fig.8-2-1) and the port number (:5800) in the IP Address box.**



[Fig. 8-2 Host Name]



[Fig.8-2-1 IP & Port]

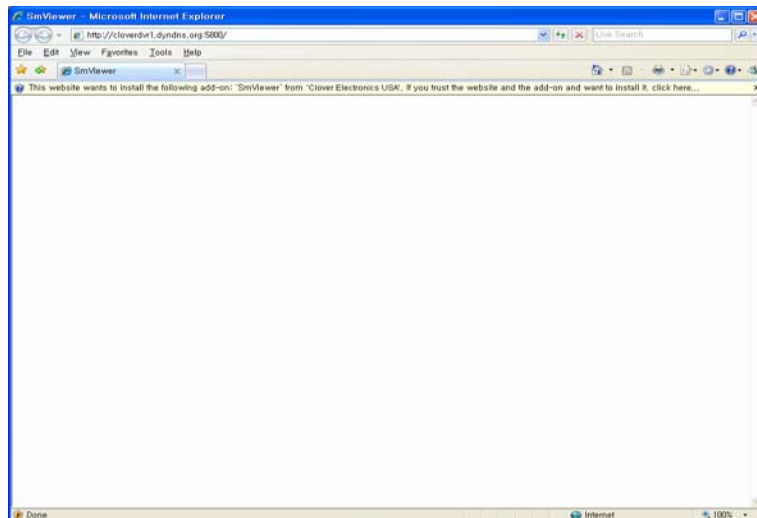

[Fig. 8-3 DVR Master- Windows Internet Explorer]

- Click on the following message.
This site wants to install the following add-on: 'DVR Master' from 'Clover Electronics USA'. If you trust the website and the add-on and want to install it, click here....
- Click the **click install ActiveX Control**.... on the pop-up screen and the following window will be displayed.



[Fig. 8-4 Install the DVR Master]

- Click the **Install** button on the above window (See [Fig. 8-4]) and the **DVR Master** will be shown. Refer to the following pages in regards to the **DVR Master**.

8-4. Remote Host




[Fig. 8-5 DVR Master]

Table. Description of Remote Host Program Button

- ① Minimization Button
 - ② Close Button
 - ③ Current Time
 - ④ Connection Button
 - ⑤ Setup Button
 - ⑥ Player Execution Button
 - ⑦ Capture Button
 - ⑧ Multi-Mode
 - ⑨ Terminal Mode
 - ⑩ E-map Button
 - ⑪ Splits the screen in 4, 8Ch.
 - ⑫ PAN /TILT Control Button (Control the PTZ camera from the remote site DVR)
 - ⑬ Depending on the mode, it displays Status/REPLAY / COPY information.
 - ⑭ Change button for STATUS / REPLAY/ COPY mode.
 - ⑮ When connected, it displays the audio channel, PC Speaker & Mic control button of remote site DVR.
 - ⑯ It displays the IP address, Frame rate and transfer rate.
-

8-4.1. Setup

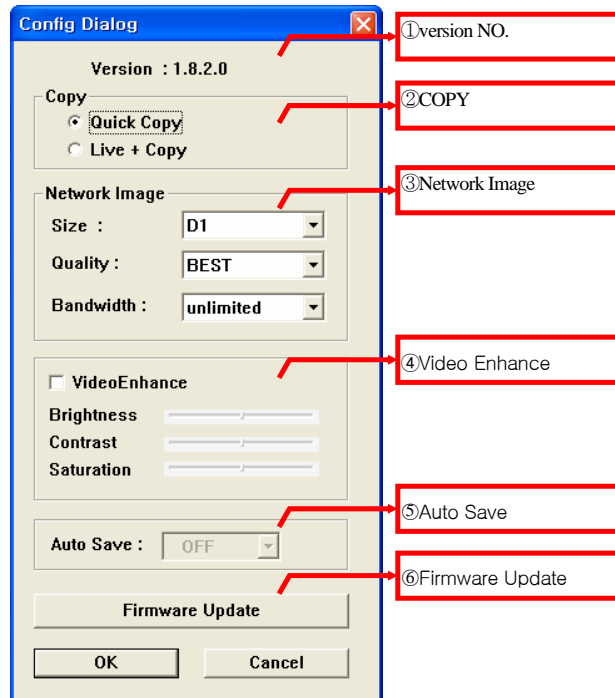

[Fig. 8-6 HOST CONFIG window]

① Version number

It represents the current version number of the Firmware.

② Copy

Refer to Section 8-4.10 in regards to copying methods after selecting one between the Quick Copy and the Live + Copy.

▫ Quick Copy

Click on the Quick Copy for faster copying the recorded data from the DVR to the Host Program (DVR Master) without live images. The copying speed of the Quick Copy is faster than the Live + Copy.

▫ Live + Copy

Click on the Live + Copy for copying the recorded data from the DVR to the Host Program (DVR Master) with live images. The copying speed of the Live + Copy is slower than the Live + Copy.

③ Network Image

▫ Size

Choose a Size (Resolution) among D1, Half D1 and CIF you wish to display on the DVR Master by clicking the mouse. This setting does not affect the DVR.

▫ Quality

Choose one among LOW, NORMAL, HIGH and BEST you wish to display on the DVR Master by clicking the mouse. This setting does not affect the DVR.

▫ Bandwidth

The default is set to unlimited. Select between 64KBPS to 10MBPS to optimize your network performance.

④ Video Enhance

- Adjust the Brightness of screen by clicking on the bar or dragging the slider on the bar.
- Adjust the Contrast of screen by clicking on the bar or dragging the slider on the bar.
- Adjust the Saturation of screen by clicking on the bar or dragging the slider on the bar.


⑤ Auto Save

It enables users to save live images from the DVR system to a PC through internet.

- Select one among OFF, 1GB, 2GB, 5GB, 10GB and 50GB on the Config Dialog menu as shown in [Fig. 8-6] before clicking the “CONNECT” button on the DvrMaster. The “GB”, Giga Bytes represent the data volume of live images you can save to a PC.
- The live images will be saved in the AutoSave Folder (Open Windows Explorer – click My Computer – click Program Files – click DvrMaster – click AutoSave).
- To replay, refer to Section 8-5 PLAYER.

⑥ Firmware Update

- Save the latest Firmware to the System Files (Open Windows Explorer – click My Computer - click the Program Files – click DVR Master – click System Files).
- Click the Firmware Update button in the [Fig. 8-6] and then you will be asked “Do you want to update a firmware?”
- Click the Yes to update.
- Double click the latest firmware as shown in [Fig. 8-7] and then you will be asked “Shall I update firmware?”
- Click the OK to update. The DVR will display the “Firmware Updating.....” along with the progressive bar on the screen and it will automatically reboot.

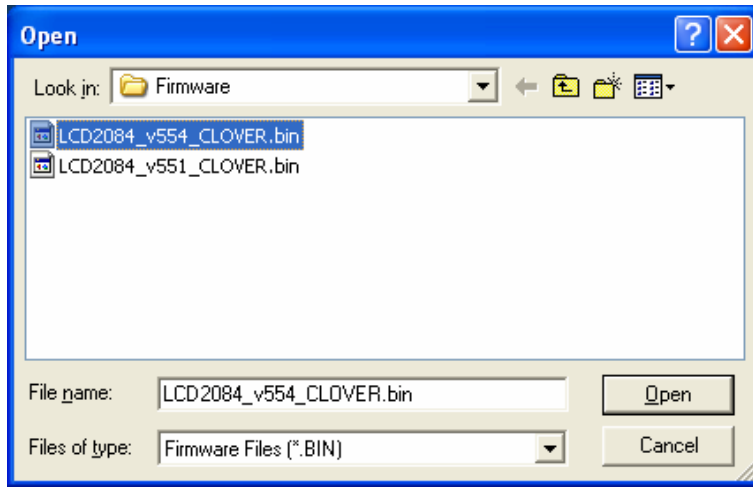

[Fig. 8-7 Firmware Files]

8-4.2. Connection

There are two ways to access the DVR through the **DVR Master** as follows.


- With **Set Direct** setting
 - Click the “CONNECT” button on the DVR Master and then the “Connect Dialog menu” as shown in [Fig. 8-8] will be displayed.
 - Click the “Set Direct” in the Connect Dialog menu and click the “EDIT” button.
 - Enter the IP address (or WAN IP address of the Router) and Port number, which must be the same as DVR has.
 - Click the “EDIT” button again and then the connection list will be created in the Name List (up to 20 lists).
 - Choose a Site Name in the Name Lists and click the “CONNECT” button in order to access the DVR.

- With **Get Server** setting
 - Click the “CONNECT” button on the DVR Master and the “Connect Dialog menu” as shown in [Fig. 8-8] will be displayed.
 - Click the “Get Server” in the Connect Dialog menu and click the “EDIT” button.
 - Enter the IP address, Port number and Site Name, which must be the same as the MNS has (**SETUP**-click **NETWORK**-click **MNS** in the **NETWORK** menu: Refer to section 7-7.5 MNS on page 122).
 - Click the “EDIT” button again and then the connection list will be created in the Name Lists (up to 20 lists).
 - Choose a Site Name in the Name Lists and click the “CONNECT” button in order to access the DVR.

- With **Domain** setting
 - Click the “CONNECT” button on the DVR Master and then the “Connect Dialog menu” as shown in [Fig. 8-8] will be displayed.
 - Click the “Domain” in the Connect Dialog menu and click the “EDIT” button.
 - Type the DOMAIN name, Port number and User’s defined name.
 - Click the “EDIT” button again and then the Domain list will be created in the Name Lists (up to 20 lists).

8. REMOTE HOST PROGRAM

- Choose a Domain Name in the Name Lists and click the “CONNECT” button in order to access the DVR.
- To register the Domain name (Host Name), refer to section 7-7.7.2 on page 125.

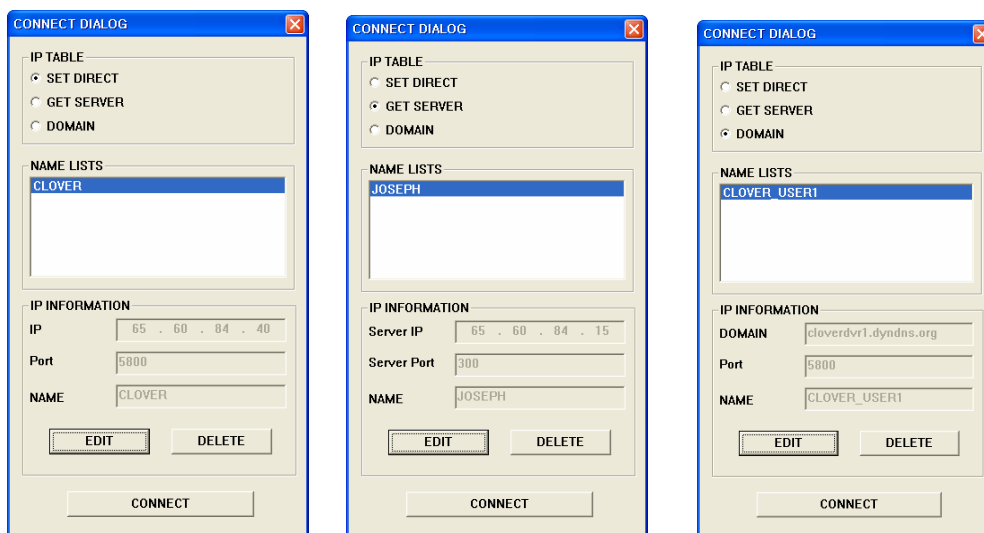

[Fig. 8-8 Connect Dialog]

8-4.3. Capture



The current images on the screen will be captured and saved in the Printed Files (Open Windows Explorer – click My Computer – click Program Files – click DvrMaster – click Printed Files).

To play captured images, double-click one of JPEG Images in the Printed Files.

8-4.4. Status



If the Status button on the DvrMaster is selected by clicking the mouse, the DvrMaster displays the DVR's status related to connections of cameras, sensors, relay outputs and remaining HDD (Hard Disk Drive) capacity available for recording.



Status button

[Fig. 8-9 STATUS MODE]

8-4.5. Replay



It is possible to replay the recorded data from the DVR system by using the Replay button in [Fig. 8-10] in the Multi mode only (refer to section 8-4.9.2).

- Click the Replay button as shown in [Fig. 8-10] to playback the recorded data from the DVR system, and then the Replay Time Setup Window will be displayed.




Replay Time Setup Window

REPLAY button

[Fig. 8-10 Replay mode]

- After checking the Start Time and End Time on the upper part of the Replay Time Setup Window, click the Edit (**Edit**) button to set the Replay Start Time.
- Set the Replay Start Time in the Start Time Setting menu as shown in [Fig. 8-11] and click the OK button. Replaying start time setup can be possible within a recording time extent.
- Click the Play (**Play**) button.
- It will start playing the recorded data and the playback control buttons will show up.

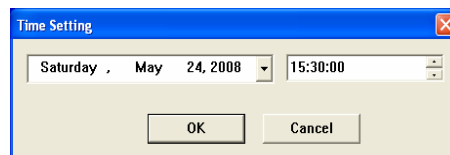

[Fig. 8-11 Start Time setting]

▫ Playback Control



Playback Control Buttons

[Fig. 8-12 Playback control]

Playback control buttons



: Button for fast rewinding up to 128 times by repeatedly pressing.



: Button for viewing previous frame in still image.




: Play button.



: Button for viewing the next frame in still image.



: Button for fast forwarding up to 128 times by repeatedly pressing.



: It stops replaying.

8-4.6. COPY



It is possible to copy the recorded data from the DVR system to a client PC by using the Copy button in [Fig. 8-13] in the Multi mode only (refer to section 8-4.9.2).

- Click the Copy button as shown in [Fig. 8-13] to copy the recorded data from the DVR system to a PC, and then the Copy Time Setup Window will be displayed.
- The copy data will be saved in the Backup Files (Open Windows Explorer – click My Computer – click Program Files – click DvrMaster folder – click Backup Files).



Copy Time Setup Window


Copy button


[Fig. 8-13 Copy mode]

- Check the Start Time and End Time on the upper part of the Copy Time Setup Window and click the Edit (**Edit**) button to set the Copy Start/End Time.
- Set the Copy Start/End Time in the Start/End Time Setting menu as shown in [Fig. 8-14] and click the OK button. Copying Start/End time setup can be possible within a recording time extent.
- Select camera(s) you wish to copy by clicking “ALL” or camera channel number(s) in the Copy Time Setup Window.


“ALL” in yellow represents that all the cameras are selected.

The camera channel number(s) in yellow represents that the corresponding channel(s) are selected.

- Click the Copy () button and then the copying progressive bar as shown [Fig. 8-15] will show up.
- While copying, click the Stop button in the Copy Time Setup Window if you want to stop copying.
- To playback, refer to section 8-5.PLAYER.

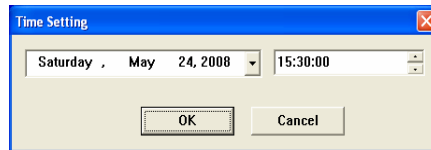

[Fig. 8-14 Copy Start/End Time setting menu]

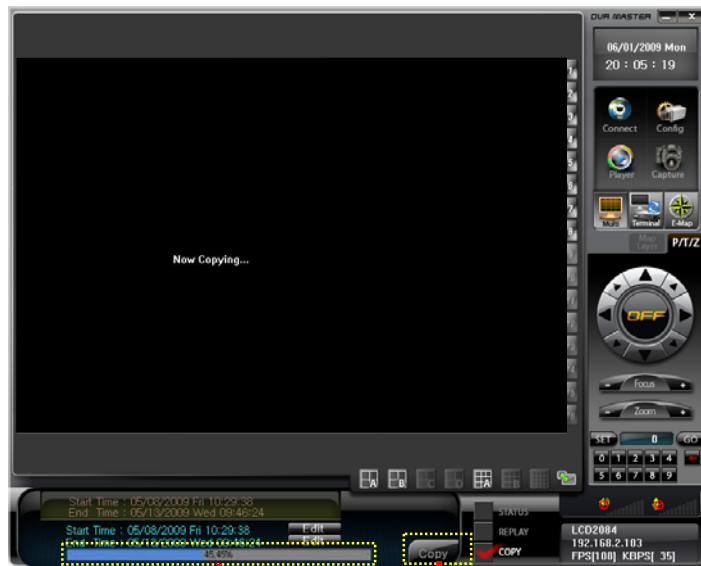

Copying Progressive Bar Stop button


[Fig. 8-15 Status of Copying]

8-4.7. Switch the Normal Screen to Full Screen

- Click the “FULL SCREEN” button on the DvrMaster as shown [Fig. 8-16] and then the current screen size will be enlarged to fit the monitor’s screen size, but the resolution will be lowered.
- Click the “FULL SCREEN” button again to go back to the NORMAL SCREEN.




[Fig. 8-16 Full Screen Button]

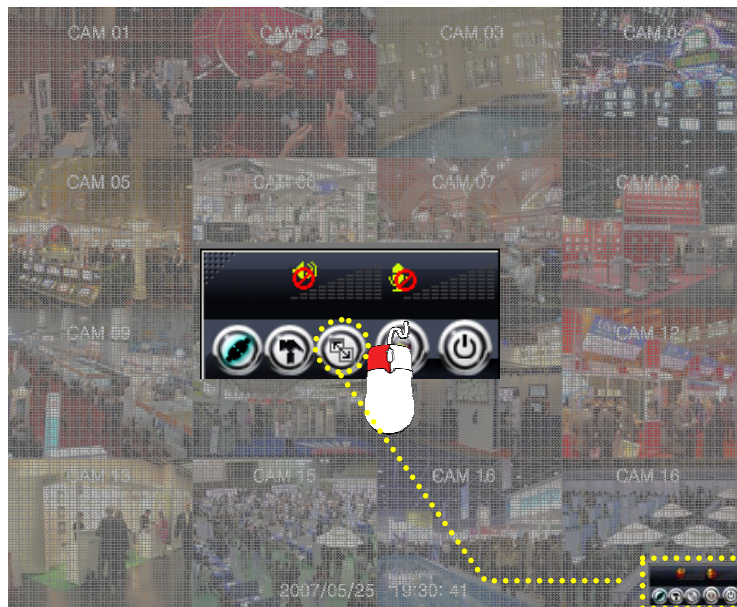

[Fig. 8-17 Switch the Normal Screen to Full Screen]

8-4.8. Speaker / Microphone

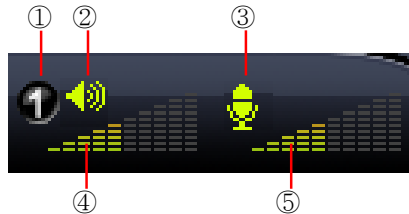

[Fig. 8-18 Speaker / Microphone]

Buttons of Remote Host Program

- ① Audio Input channel selection: Select the same audio channel as the DVR has.
 - ② PC Speaker ON/OFF: Turn the Speaker ON or OFF by clicking the mouse.
 - ③ PC Microphone ON/OFF: Turn the Microphone ON or OFF by clicking the mouse.
 - ④ PC Speaker Volume Control: Adjust the Speaker Volume by clicking the amount of audio volume. It is available when the Speaker is turned ON.
 - ⑤ Microphone Volume Control: Adjust the Microphone Volume by clicking the amount of audio volume. It is available when the Microphone is turned ON.
-

8-4.9. Connection mode

There are two kinds of connection mode (See [Fig. 8-19]) on the DvrMaster. Select one of them by clicking the mouse depending on your application.



[Fig. 8-19 Connection Mode]

8-4.9.1. Terminal mode

The functions of icons such as Recording, Play, Copy, Setup, System Status, Pan/Tilt, Display, Zoom and OSD on the bottom of the screen are identical to ones DVR system has.

If the terminal mode button on the DvrMaster (See [Fig. 8-19]) is selected, the image of channel 16 won't be displaying on the monitor connected to DVR and DvrMaster.

- Right-click on the screen to appear the icons and right-click it again to disappear.
- For displaying a full screen, click one of channels and for the split screen, click it again.

To display the image of channel 16 on the DVR's monitor,

- **Switch the terminal mode to multi mode on the DvrMaster.**

- Or exit the DvrMaster by clicking  on the upper right-hand corner of the screen.

8-4.9.2. Multi mode

It is impossible to control (Recording on/off, Setup, System Status, Display and OSD) the DVR system in the Multi mode except Replaying and Copying (See section 8-4.5, 8-4.6 on page 145-147), but the image of channel 16 will always display on the monitor and the DvrMaster.


- Click the Multi mode button to choose the Multi mode as shown in [Fig. 8-20].




[Fig. 8-20 Multi mode screen]


8-4.10. Copy in the Terminal mode (not available on this version)

There are four icons such as NETWORK, USB, CD and DVD in the COPY menu of the Multi mode. The recorded data will be saved in the Backup Files (Open Windows Explorer – click My Computer - click the Program Files – click DvrMaster – click Backup Files) through the NETWORK, but the other icons such as USB, CD and DVD will only show what the DVR system functions on these icons. Therefore it is impossible to copy the recorded data to client computer with these icons.


- Click the COPY button on the menu window and the COPY menu will be displayed on the screen.
- In order to set the Copy starting time and the Copy ending time, select the values (year/month/date and hour/minute/second) by clicking the mouse, change the values with the mouse's wheel and click the mouse again on the changed values to complete.
- Click the mouse on the  icon only when the network is connected and you will be asked as shown in [Fig. 8-21].
- Click the Yes to copy and the DvrMaster will show the progressive status to copy (See [Fig. 8-22]).
- Click the OK to complete the copy (See [Fig. 8-23]).

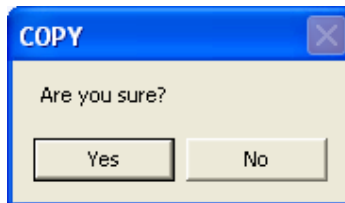

[Fig. 8-21 Copy Confirmation]

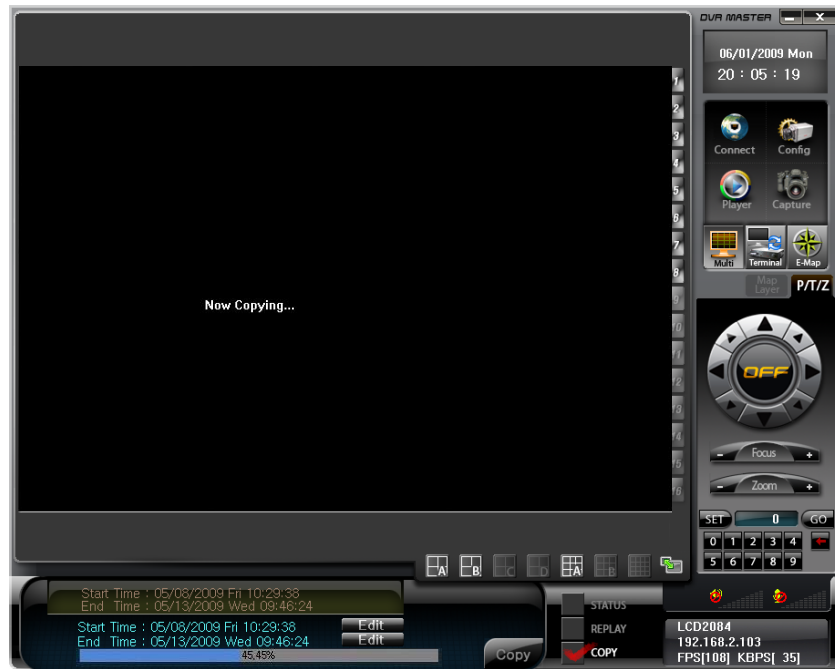

[Fig. 8-22 Copying in the Terminal mode]

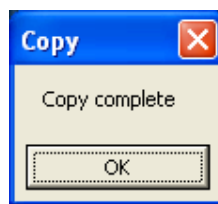

[Fig. 8-23 Copy Completion]

8-4.11. E-Map


E-Map enables users to display the cameras on the digital map for better monitoring. The digital map should be a BMP file and you can make it (the higher resolution the better) or use the E-map samples saved in the E-map folder (See Fig.8-26).




[Fig. 8-24 E-Map MODE]

8-4.11.1. Addition of map

- Click the E-Map button on the DvrMaster.
- Right-click the MAP as shown in [Fig. 8-25] and click “Add eMap” on the pop-up window, and then the BMP files factory saved will show up (See [Fig. 8-26]).
- Select a BMP file and click “OPEN button in 8-26], and then an eMap will be saved under the MAP button. [Fig.

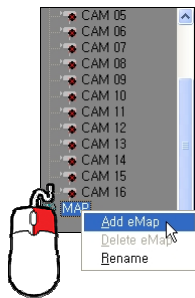


[Fig. 8-25 Add eMap]

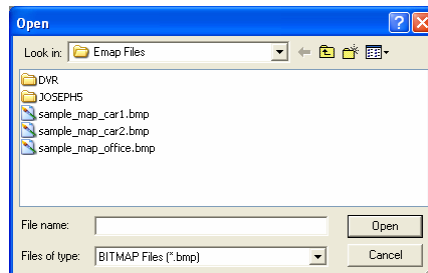


[Fig. 8-26 BMP files]

- To rename, right-click a saved eMap list and click “Rename” on the pop-up window as shown in [Fig. 8-27].
- To delete, right-click a saved eMap list and click “Delete eMap” on the pop-up window as shown in [Fig. 8-28].
- To display, double-click one of saved eMap lists. The image size of each channel will be minimized or maximized as much as you want.

 **Note :** The eMap list that is currently displaying can't be deleted or renamed.

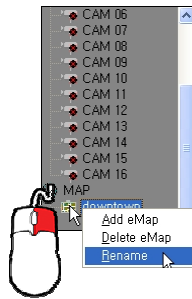


[Fig. 8-27 Rename]

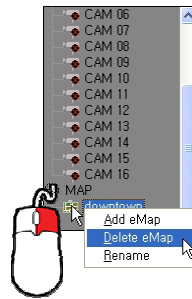

[Fig. 8-28 Delete]

8-4.11.2. Placement of cameras on the map

- Click one of the cameras connected to the DVR system and drag the mouse and drop on the map as shown in [Fig. 8-29].

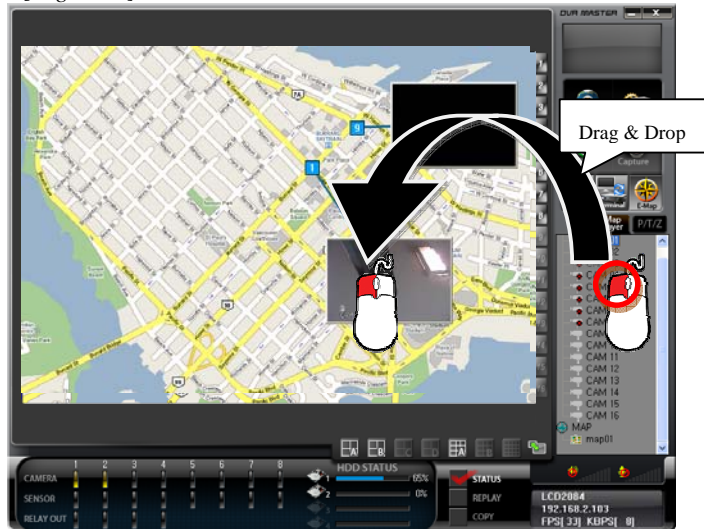

[Fig. 8-29 Placement of Cameras on the Map]

8-4.11.3. Usage of camera position

The small squares with channel numbers on the map indicate the camera position. The blue screen represents that the corresponding camera is not connected to the DVR system.


- Double-click the image to display a full screen.
- To change the camera position, click the image and drag the mouse and drop on the map.
- Double-click the channel number(s) to hide or show the image(s).
- Place the mouse pointer on the square line and minimize or maximize the image by using \leftrightarrow sign.



[Fig. 8-30 Usage of Camera Position]

8-4.11.4. Deletion of Camera position icon


Click the image or channel number and drag the mouse and drop the mouse pointer outside of the screen.

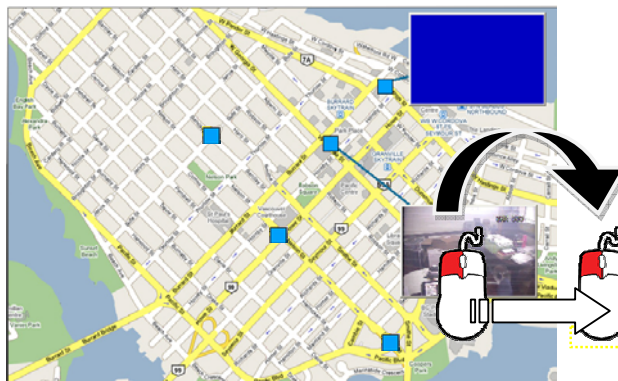

[Fig. 8-31 Deletion of Camera Position icon]


8-4.12. Pan / Tilt & Preset

You can control the PTZ camera through DvrMaster. This feature is basically identical to what the DVR system has. Refer to section 6-7.7 PAN/TILT on page 45.

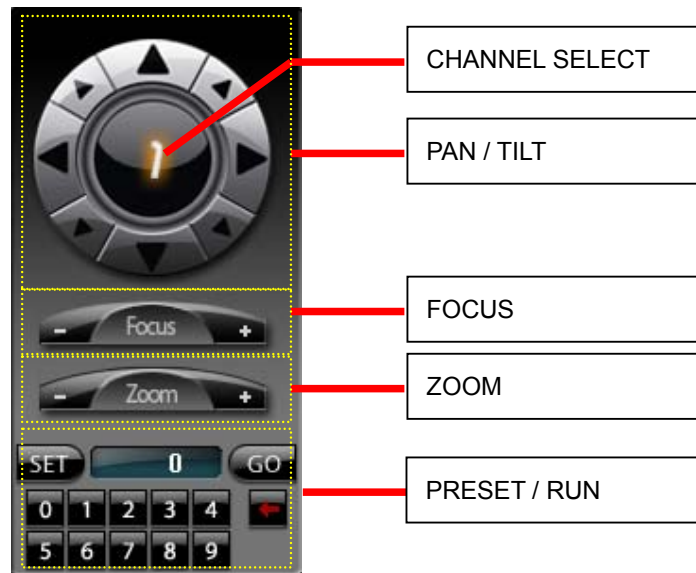

[Fig. 8-32 PAN / TILT]

8-5. PLAYER

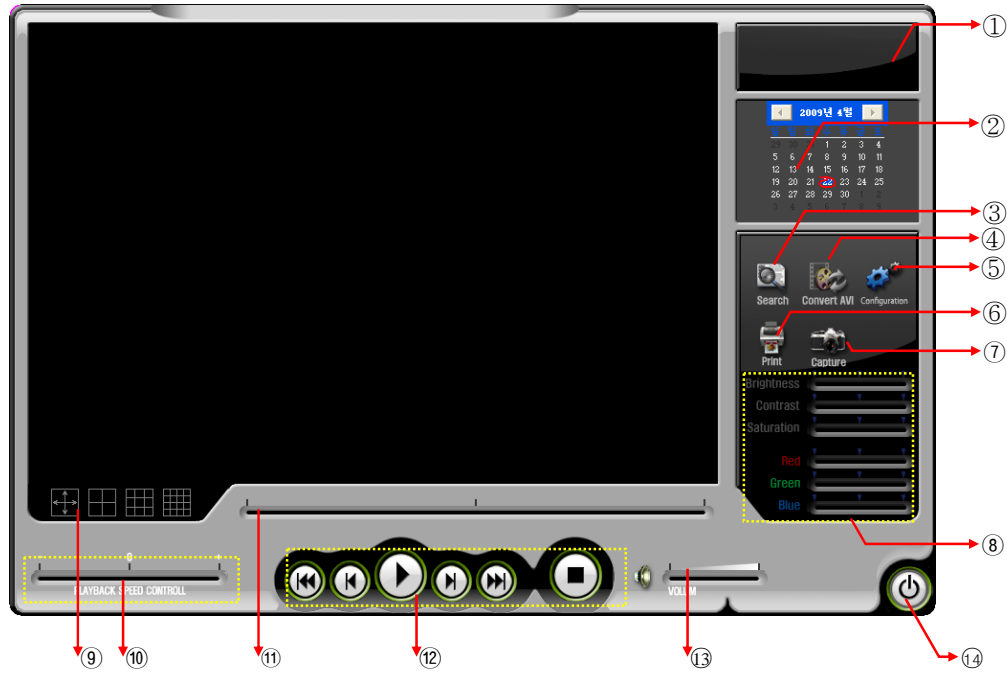

[Fig. 8-33 Player]

Chart. Button of Player Program

- ① Status window (Play mode, Date, Time)
- ② Calendar
- ③ Search button for replaying
- ④ Convert to AVI File
- ⑤ Configuration
- ⑥ Print button
- ⑦ Capture button
- ⑧ Video Enhance
- ⑨ Division button
- ⑩ Playback (Replay) speed Control
- ⑪ Search slider for Replaying
- ⑫ Replay Control
- ⑬ Volume Control
- ⑭ Exit program button

① Status window (Play mode, Date, Time)

It indicates the play mode, date and time.



[Fig. 8-34 Status window]

② Calendar

It shows the date currently being replayed.



[Fig. 8-35 Calendar]


④ Search button for Replaying



- Click the Search button on the Player and the Browse for Folder will be displayed.
- Select the folder that contains the recorded data and click the OK button on the Browser for Folder. One channel or all the channels can be replayed depending on the selection.


③ Convert AVI File

Convert the recorded files to AVI files.

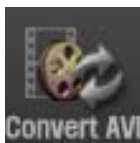


8. REMOTE HOST PROGRAM

- Click the Convert AVI button on the Player and the Convert AVI window will be displayed (See [Fig. 8-36])
- Click on the SELECT button for Source on the Convert AVI window and the Convert AVI window or the DVR Player will be displayed (See [Fig. 8-37] and [Fig. 8-38]).
- Select the folder that contains the recorded data and select one of the channels by clicking the mouse and click the OK (See [Fig. 8-39]).
- Click the Start Convert button on the Convert AVI window and click the CLOSE button after verifying the status "Complete" (See [Fig. 8-40]).

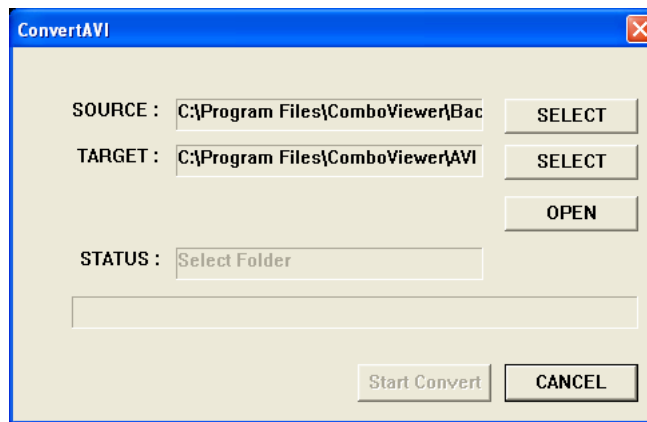


[Fig. 8-36 Convert AVI window]

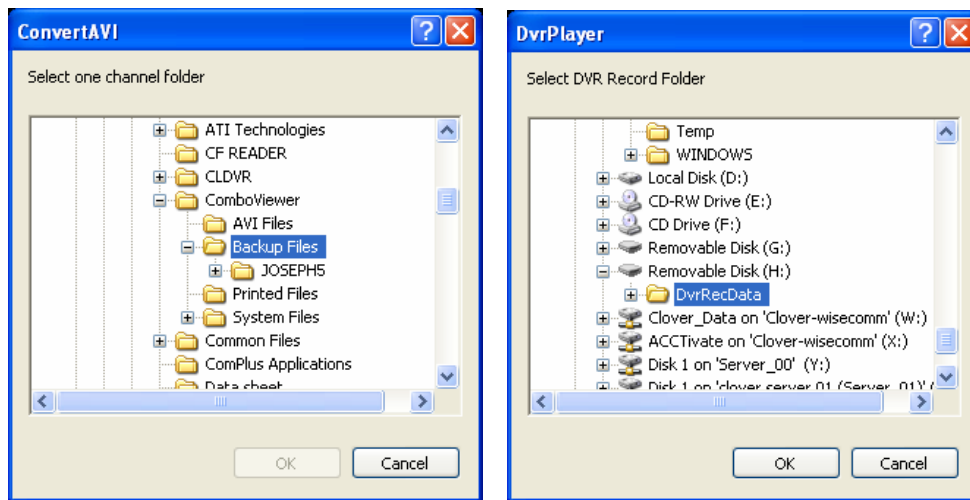


[Fig. 8-37 Backup Files by Networking]

[Fig. 8-38 DvrRecData by USB]

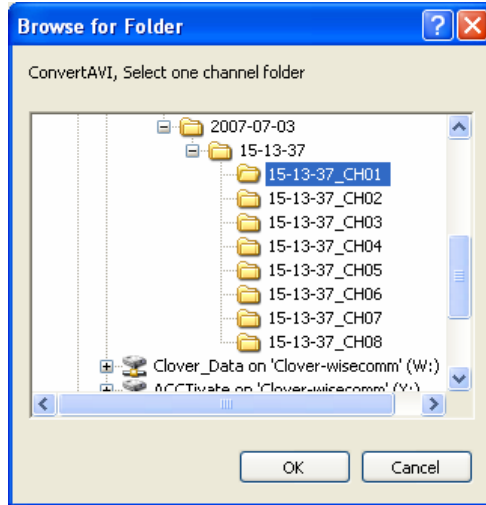

[Fig. 8-39 Select one of the Channels]

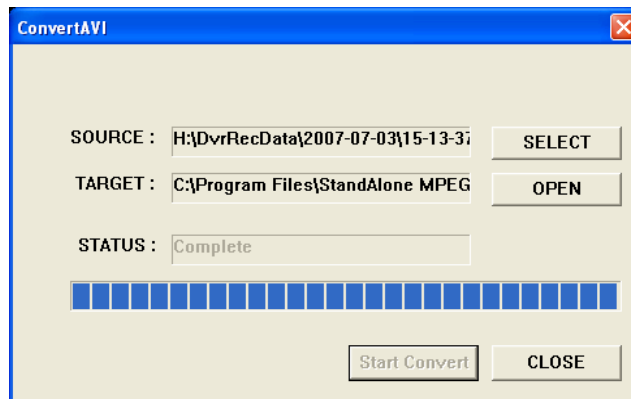

[Fig. 8-40 Start Convert Button]

How to play the AVI files

By using Windows media player:

- Click the OPEN button on the Convert AVI window and double click one of the AVI files to play. The AVI files will save in the AVI Files folder (Open Windows Explorer – click My Computer - click the Program Files – click DvrMaster – double click one of the AVI Files).


⑤ Configuration



[Fig. 8-41 Configuration window]


- If the “Fit to window” is selected in [Fig. 8-41], it will automatically fit to the Player window in [Fig. 8-33] (720x480) even though the recorded data is CIF (360x240) in the playback mode.
- If the “Open Data Folder” is clicked in [Fig. 8-41], the folders relating to the DvrMaster such as the Auto Save, AVI Files, Backup Files, Emap Files, Printed Files and System Files will be displayed.

⑥ Print button

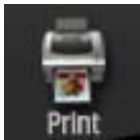

- Click the Print button when a full screen is replaying on the Player and the current images will print out along with comments if you write down some comments in the Print Comment Dialog as shown in [Fig. 8-42].
- Click the OK button in the Print Comment Dialog regardless of the comments to print.

⑦ Capture button

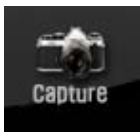

- Click the Capture button when a full screen is replaying on the Player and the current images will be saved in the Printed Files (Open Windows Explorer – click My Computer -

click the Program Files – click DvrMaster – click Printed Files) in JPEG file format.



[Fig. 8-42 Print command window]



[Fig. 8-43 Print image]





⑧ Video Enhance

Refer to section 6-8 on page 53.

⑨ Division button



Select one of the following divisions while replaying.

-  Full Screen
-  4 Division Screen
-  9 Division Screen
-  16 Division Screen

[Fig. 8-44 Division button]

⑩ Playback (Replay) Speed Control

Move the slider with the mouse to control the replaying speed.

The “0” represents the normal speed, “-“and “+” represents slow speed and fast speed respectively.



[Fig. 8-45 Replay Speed Control Slider]

⑪ Search slider for replaying

The slider can be moved left and right by clicking the slider on the bar and dragging it or just click the bar to search the recorded data.



[Fig. 8-46 Replay Search Slider]

⑫ Replay Control

Refer to section 6-10.2.3.



[Fig. 8-47 Replay Control buttons]

⑬ Volume Control.

Control the volume when replaying in the full screen mode



[Fig. 8-48 Replay Volume Control Slider]

⑭ Exit button



Click the Exit button on the Player to exit.

9. APPENDIX

CONTENTS

RECORDING TIME TABLE	168
FACTORY DEFAULT SETTINGS	169



Recording time table

HDD: 500GB

Recording Resolution: Half D1 (720 x 240)

Based on 8 cameras

HOURS

Each (Total)	30 fps (240fps)	15 fps (120fps)	10 fps (80fps)	7 fps (56fps)	5 fps (40fps)	3 fps (24fps)	2 fps (16fps)
BEST	58.00	115.00	173.00	249.00	347.00	579.00	870.00
HIGH	194.00	387.00	581.00	830.00	1162.00	1937.00	2907.00
NORMAL	452.00	903.00	1356.00	1937.00	2712.00	4519.00	6778.00
LOW	917.00	1833.00	2750.00	3929.00	5500.00	9169.00	13754.00

DAYS

Each (Total)	30 fps (240fps)	15 fps (120fps)	10 fps (80fps)	7 fps (56fps)	5 fps (40fps)	3 fps (24fps)	2 fps (16fps)
BEST	2.40	4.79	7.20	10.38	14.45	24.12	36.25
HIGH	8.00	16.13	24.20	34.58	48.41	80.70	121.12
NORMAL	18.80	37.63	56.50	80.70	113.00	188.29	282.41
LOW	38.20	76.38	114.58	163.70	229.16	382.00	573.00

Factory default settings

(1) LIVE SCREEN

8 SPLIT
OSD ON

(2) TIME / DATE

DISPLAY : ON
TIME FORMAT : 24 HOUR
DATE FORMAT : YYYY/MM/DD

(3) LOAD / BACKUP CONFIG

NONE LISTS

(4) USER ACCOUNT

PASSWORD : SET YOUR PASSWORD (THE PASSWORD IS NULL)
PASSWORD ON/OFF : OFF

(5) IR REMOTE ID

OFF

(6) HDD OVERWRITE

ON

(7) CAMERA

ACTIVE : ALL ON
NAME : CAM XX
BUZZER : ALL ON
RELAY : ALL OFF
PAN/TILT VENDOR : PELCO

DISPLAY : ON

SEQ DISPLAY DWELL : 1 SEC

(8) AUDIO

AUDIO 1 : RELATED CAMERA CH 1, RECORD OFF, LEVEL 5

AUDIO 2 : RELATED CAMERA CH 2, RECORD OFF, LEVEL 5

AUDIO 3 : RELATED CAMERA CH 3, RECORD OFF, LEVEL 5

AUDIO 4 : RELATED CAMERA CH 4, RECORD OFF, LEVEL 5

(9) RECORD

RECORD ICON DISPLAY : ON

SIZE : ALL HALF D1 (704 X 240)

FPS : ALL 15 fps

QUALITY : ALL HIGH

MODE: ALL MANUAL RECORD MODES

SENSITIVITY : LOW (19)

- TIMER RECORD

ACTIVE : ALL OFF

TIMER : ALL 00 : 00

- MOTION

DETECT : OFF

PRE : 1 sec.

HOLD : 1 sec.

SPOT : OFF

REGION : ALL SET

- SENSOR

DETECT : OFF

PRE : 1 sec.

HOLD : 1 sec.

SPOT : OFF

(10) NETWORK

TYPE : DYNAMIC

PORT : 5800

SERVER 1 MODE : DISABLE

SERVER 1 IP ADDRESS : 65.60.84.15

SERVER 1 PORT : 300

SERVER 2 MODE : DISABLE

SERVER 2 IP ADDRESS : 65.60.84.15

SERVER 2 PORT : 300

SERVER SITE NAME : SXXXXXX (MAC ADDRESS)

(11) VIDEO

- CAMERA INPUT

BRIGHTNESS : 128 (Max. 255)

CONTRAST : 128 (Max. 255)

- VGA OUTPUT

BRIGHTNESS : 20 (Max. 40)

CONTRAST : 20 (Max. 40)

SATURATION : 20 (Max. 40)

10. FAQ

CONTENTS

I CANNOT LOGIN174

I can not login

- ▶ **Please check if the link LED of DVR and LAN port of PC are lit.**

- ▶ **Please check if the IP address on DVR and the PC is identical.**

Check SYSTEM STATUS by pressing STATUS button of DVR
(Available on LIVE mode and RECORD mode.)

MY IP : xxx.xxx.xxx.xxx

Check Target IP Address by clicking CONF button of PC host program.

TARGET IP ADDRESS : xxx.xxx.xxx.xxx

- ▶ **Please check whether there is a response upon PING test with DVR IP.**

Type "PING -t xxx.xxx.xxx.xxx" in DOS COMMAND window and execute.
(xxx.xxx.xxx.xxx is the DVR IP)

Request timed out → Check IP address

Reply from : xxx.xxx.xxx.xxx : Check Port number. Check if other user is using this.

- ▶ **Please check the Port number of DVR and PC is identical.**

Check Port number at MENU-SETUP → SYSTEM → NETWORK IP CONFIG.

PORT : 5800 (on DVR)

TARGET PORT NUMBER : 5800 (on Host Program)

- ▶ **Please confirm the Password of DVR and PC is identical.**

Check Password at MENU → SETUP → SYSTEM → PASSWORD

- ▶ **Please check whether DVR is connected another PC.**

Check SYSTEM STATUS by pressing STATUS button.

FROM : xxx.xxx.xxx.xxx : IP which is presently connected.

MY IP : xxx.xxx.xxx.xxx : DVR is waiting for connection.

- ▶ **Please check whether firewall is installed in the network.**

Ask the network administrator to reconfigure the firewall.

11. Limited 1Year Warranty

This warranty gives the original purchaser specific legal rights and you may also have other rights, which may vary from state to state. If our products do not function because of any defect in material or workmanship, we will repair it for free for 1 year on parts and labor from the date of original purchase. This warranty does not cover modification, abuse, incidental or consequential damages unless the state of owner's residence specially prohibits limitations on incidental or consequential damages.

12. How to obtain Factory Service

- Original purchaser must fill out the warranty card and mail it to the factory with the model number, serial number and the date of purchase.
- We will repair or replace, and return the system to the owner under this limited warranty.
- Please pack the system carefully and securely using the original packing materials, and send it prepaid and insured to: **13073 E. 166th St, Cerritos, CA 90703**.
- Please include a check for \$50.00 to cover the cost of return postage and handling. If the system is returned within the warranty period, please include a proof of purchase. If the system is out of warranty, you will receive an estimate of the repair cost for your approval before repair work will be started.