

# User Guide

palm pixi plus



## Intellectual property notices

© 2009 Palm, Inc. All rights reserved. Palm, Pixi, Synergy, Touchstone, webOS, and the Palm and Pixi logos are among the trademarks or registered trademarks owned by or licensed to Palm, Inc. Microsoft and Outlook are trademarks of the Microsoft group of companies. Exchange ActiveSync Enabled. Facebook® is a registered trademark of Facebook, Inc. Google and Google Maps are trademarks of Google, Inc. Amazon, Amazon MP3, and the Amazon MP3 logo are trademarks of Amazon.com, Inc. or its affiliates. Doc View and PDF View are provided by Documents To Go®, a product of DataViz, Inc. ([dataviz.com](http://dataviz.com)). All other brand and product names are or may be trademarks of, and are used to identify products or services of, their respective owners.

## Disclaimer and limitation of liability

Palm, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this guide. Palm, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. Palm, Inc. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

Patent pending. This product also is licensed under United States patent 6,058,304.

Use of this device requires providing a valid email address, mobile phone number, and related information for account setup and activation. A data plan is also required. An unlimited-usage data plan is strongly recommended, or additional data charges may apply.

## Open Source License information

You can view the Open Source License terms on your phone. Tap the center of the gesture area, and then tap the **Launcher** icon. Swipe left until the **PDF View** icon appears. Tap **PDF View** and then tap **Open Source Information.pdf**.

You can also view the file on your computer. Connect your phone to your computer with the **USB cable**. On your phone, tap **USB Drive**. On your computer, locate and double-click the removable drive named for your phone. To locate the drive, do the following for your operating system:

- Windows Vista/Windows 7: Open **Computer**.
- Windows XP: Open **My Computer**.
- Mac: Open **Finder**.
- Linux (Ubuntu): The drive is displayed on the desktop.
- Other Linux distribution: The location of the drive may vary by system.

After you open the drive, double-click the file **Open Source Information.pdf**.

## Recycling and disposal



This symbol indicates that Palm products should be recycled and not be disposed of in unsorted municipal waste. Palm products should be sent to a facility that properly recycles electrical and electronic equipment. For information on environmental programs visit [palm.com/environment](http://palm.com/environment) or [recyclewireless.com/](http://recyclewireless.com/).

As part of Palm's corporate commitment to be a good steward of the environment, we strive to use environmentally friendly materials, reduce waste, and develop the highest standards in electronics recycling.

v. 1.0

# Contents

## Chapter 1 Welcome

- 6 Your Palm® Pixi™ Plus phone
- 7 What's in the box?
- 8 Where can I learn more?

## Chapter 2 Basics

- 10 Get to know your phone
- 13 Set up your phone
- 13 Charge the battery
- 15 Turn the phone on/off
- 17 Use gestures: tap, swipe, drag, flick, pinch
- 23 Open applications
- 24 Work with applications
- 27 Enter and save information
- 31 Use the menus
- 32 Search to find info and make calls
- 34 View and respond to notifications
- 35 Update the software on your phone
- 36 Use App Catalog to shop for new applications
- 40 Copy files between your phone and your computer

## Chapter 3 Transferring data

- 44 Data transfer overview
- 44 How do I get data from my old phone?
- 44 How do I get data off my computer?

- 46 I'm already using Google, Facebook, Yahoo!, and/or Microsoft Exchange
- 46 I want to keep using my current desktop app and sync with an online account on my phone
- 47 I don't need to sync, but I do want a copy of my data backed up somewhere besides my phone
- 47 I'd rather sync directly with my computer

## Chapter 4 Phone

- 50 Make calls
- 53 Receive calls
- 54 Use voicemail
- 54 What can I do during a call?
- 57 What's my number?
- 57 View your call history
- 58 Save a phone number to Contacts
- 58 Use a phone headset
- 59 Customize phone settings

## Chapter 5 Email and other messages

- 64 Email
- 74 Messaging

## Chapter 6 Personal information

- 84 Contacts
- 93 Calendar

	100	Tasks
	104	Memos
	105	Clock
	107	Calculator
	107	Facebook
<b>Chapter 7</b>		<b>Photos, videos, and music</b>
	110	Camera
	110	Photos
	114	Videos
	116	YouTube
	117	Music
	119	Amazon MP3
<b>Chapter 8</b>		<b>Web and wireless connections</b>
	124	Wi-Fi
	126	Location Services
	127	Web
	131	Google Maps
	132	VZ Navigator
	134	Bluetooth® wireless technology
<b>Chapter 9</b>		<b>Documents</b>
	138	Doc View
	141	PDF View
<b>Chapter 10</b>		<b>Preferences</b>
	144	Backup
	146	Date & Time
	147	Device Info
	150	Regional Settings
	150	Screen & Lock
	152	Sounds & Ringtones

<b>Chapter 11</b>		<b>Troubleshooting</b>
	156	For users of other Palm® devices
	156	Battery
	161	Screen and performance
	162	Phone
	163	Hands-free devices
	164	Synchronization
	166	Sending and receiving data in Email, Messaging, and Web
	167	Email
	167	Messaging
	168	Web
	169	Calendar and Contacts
	169	Camera
	170	Amazon MP3
	170	Transferring information from your computer
	170	Backing up and restoring data
	171	Updates
	171	Transferring information from another Palm® webOS™ platform phone
	172	Third-party applications
	172	Making room on your phone

## Terms

## Regulatory and Safety Information

## Specifications

	185	Specifications
	188	Online accounts available for webOS phones

## Index



# Welcome

Congratulations on the purchase of your Palm® Pixi™ Plus phone.

## In this chapter

- 6 Your Palm® Pixi™ Plus phone
- 7 What's in the box?
- 8 Where can I learn more?

# Your Palm® Pixi™ Plus phone

In one compact and indispensable device, you now have all of the following:

- An advanced wireless phone running the Palm® webOS™ platform
- A full suite of organizer applications: Contacts, Calendar, Memos, and Tasks
- High-speed data transfer with EvDO and 1x support
- Wi-Fi capability
- A 2-megapixel digital camera
- GPS functionality
- Integrated text, multimedia, and instant messaging (IM)
- Tools to view and manage Microsoft Office and Adobe PDF files
- App Catalog, where you can download applications designed for your phone; select from an ever-expanding list of applications.

Your Palm® Pixi™ Plus phone puts Palm's new multitasking, gesture-based operating system, the Palm® webOS™ platform, inside a small, beautiful device. Here are a few highlights of your new phone.

**Gestures:** On your Pixi Plus phone, you make calls, move around, and manage your applications and info by making simple gestures either on the touchscreen or in the gesture area directly beneath the screen. For more information, see [Use gestures: tap, swipe, drag, flick, pinch](#), and go to [palm.com/support](http://palm.com/support) to see animations that demonstrate these gestures. Carry the Gesture Guide (included in the box with your Pixi Plus phone) around with you and you'll soon know all the gestures by heart.

**Multitasking:** You can have many applications open at once and easily move among them. Go to the Launcher to open apps. See the lineup of your open apps in Card view. Tap an app to bring it into the foreground and work with it. For more information, see [Open applications](#).

**The Palm® Synergy™ feature:** The Palm® Synergy™ feature on your Pixi Plus phone displays information from several sources in a single view, so you can access your info quickly, without having to remember where you stored it.

For example, suppose you have a Google account for personal email, contacts, and calendar events, and an Exchange account for your corporate email, contacts, and events. The Email, Contacts, and Calendar applications on your Pixi Plus phone all provide a kind of view in which you can see information from both of those accounts in one place—but even though the information is brought into one view, the sources of that information are kept separate. For more information, read about linked contacts, layered calendars, and the single inbox for your email in [Contacts](#), [Calendar](#), and [Email](#).

---

**NOTE** See the online accounts table at the back of the user's guide for the current list of online accounts that you can set up on your phone and for information about the behavior of these accounts.

---

Thanks also to the Synergy feature, in the Messaging application, all your conversations with the same person are grouped together in one chat-style view. If you start an IM chat with Ed, for example, you can continue the same conversation when Ed signs out of IM by sending him a text message—and you can see it all in the same view. For more information, see [Messaging](#).

**Universal search:** Need to call Ed? Just type **ed**. If he's listed in your Contacts, you can get his numbers from the search results. Tap a number and you've made the call. Search works just as fast when you need to search the web. For more information, see [Search to find info and make calls](#).

**Sync:** Your Pixi Plus phone gives you synchronization without a cable. You can sync with online services that Palm has partnered with so that you can store and sync your info in online accounts. You can access your data even when you are not able to make a connection to the Web because a copy of your data is stored on the device.

**Your Palm profile:** When you set up your phone, you create a Palm profile. Your profile gives you access to services like automatic updates and automatic, frequent backups of any of your info that is stored only on your phone and isn't synchronized with an online account. See [What is a Palm profile?](#)

---

**WARNING** Please refer to [Regulatory and Safety Information](#) for information that helps you safely use your phone. Failure to read and follow the important safety information in this guide may result in property damage, serious bodily injury, or death.

---

## What's in the box?

All of the following items are included in the phone box:

### Print material


- Getting Started guide
- Consumer Information About Radio Frequency Emissions and Responsible Driving
- Gesture Guide
- Limited Warranty
- General User Guide: Important Safety and Legal Information

### Hardware

- Palm Pixi Plus phone
- USB cable
- AC charger
- Standard lithium-ion battery (installed)



## Where can I learn more?

- **On-device Help:** Read short how-tos and watch animations on your new phone.  
To view all Help: [Open Help](#) .  
To view Help topics for a single application: Open the application, open the [application menu](#), and tap **Help**.
- **Online support from Palm:** Visit [palm.com/support](http://palm.com/support) to edit your Palm profile, watch how-to animations, access the Data Transfer Assistant, and read comprehensive information about your phone.
- **Customer service from Verizon Wireless:** For questions about your mobile account or features, contact Verizon Wireless's customer care.





# Basics

You're about to discover the many things about your Palm® Pixi™ Plus phone that can help you better manage your life and have fun, too. As you become more familiar with your phone, you'll want to personalize the settings and add applications to make it uniquely yours.

But first, take the few easy steps in this chapter to set up your phone and get it running. Then learn about the key features that make moving around on your phone and accessing your information easy: gestures, menus, search, notifications, and more.

## In this chapter

- 10 Get to know your phone
- 13 Set up your phone
- 13 Charge the battery
- 15 Turn the phone on/off
- 17 Use gestures: tap, swipe, drag, flick, pinch
- 23 Open applications
- 24 Work with applications
- 27 Enter and save information
- 31 Use the menus
- 32 Search to find info and make calls
- 34 View and respond to notifications
- 35 Update the software on your phone
- 36 Use App Catalog to shop for new applications
- 40 Copy files between your phone and your computer

# Get to know your phone

## Front view



- 1 Earpiece
- 2 **Touchscreen:** Tap and make other gestures directly on the screen. See [Touchscreen](#).
- 3 **Gesture area:** Make the back gesture and begin other gestures here.
- 4 **Keyboard:** See [Use the keyboard](#).
- 5 **Microphone**
- 6 **Ringer switch:** Slide to turn the ringer and notification sounds on or off. (Red means off.)  
The ringer switch does not affect music or video playback sounds.
- 7 **Volume**
- 8 **Charger/microUSB connector**

---

**IMPORTANT** Be careful not to scratch, crush, or apply too much pressure on the touchscreen. Do not store your phone in a place where other items might damage it.

---

## Keyboard



- 1 **Option:** Press to enter numbers, punctuation, and symbols that appear above the letters on the keys (see [Enter alternate keyboard characters](#)), or to move the cursor (see [Text selection gestures](#)).
- 2 **Shift:** See [Enter uppercase letters](#).
- 3 **Space**
- 4 **Backspace**
- 5 **Enter:** Press to enter a line return (for example, in a memo or in an email message you are composing) or to accept information you entered in a field. See [Enter information in a field](#).
- 6 **Sym:** Press to enter symbols and accented characters that don't appear on the keys. See [Enter characters from the symbols table](#).

## Touchscreen



- 1 **Application name:** Displays the name of the currently open application. Drag down over the app name to open the [application menu](#).
- 2 **Launcher:** See [Open an application in the Launcher](#).
- 3 **Scroll arrow:** Swipe up or down to see icons that are on the page but hidden.
- 4 **Quick Launch:** See [Open an application in Quick Launch](#).
- 5 **Connection icons:** Show the status of wireless service connections and battery strength (see [Icons in the title bar](#)). Tap the icons to open the [connection menu](#).
- 6 **Page indicators:** Show how many Launcher pages are to the right or the left of the currently displayed page. Swipe left or right on the screen to see other pages.
- 7 **Notification icons:** Show missed calls, new voicemail and email messages, and more. Tap the bottom of the screen to view notification details (see [View all your notifications](#)).








## Icons in the title bar

You can monitor the status of several items using icons in the area at the top of the phone screen:

Table 1. Title bar icons and descriptions

Item	Description
	The battery is being charged.
	The battery is fully charged.
	The battery is low. See <a href="#">Charge the battery</a> .
	Airplane mode is turned on. This means that the phone, Wi-Fi feature, and Bluetooth® wireless technology feature are off (incoming calls go to voicemail). See <a href="#">Turn wireless services off (airplane mode)</a> .
	Wi-Fi is turned on. The number of filled-in bars denotes signal strength. See <a href="#">Wi-Fi</a> .
	The phone is searching for a Wi-Fi network.
	The phone is on. The number of filled-in bars denotes signal strength. See <a href="#">Turn wireless services on</a> .
	Your phone is connected to a 1x data network. Data is not currently being transmitted over the network.
	Your phone is connected to a 1x data network and data is being transmitted over the network.
	Your phone is connected to an EvDO data network. Data is not currently being transmitted over the network.
	Your phone is connected to an EvDO data network and data is being transmitted over the network.
	Your phone is on and connected to the Verizon Wireless network.
	The phone is searching for the Verizon Wireless network.
	The Verizon Wireless network is not available.

Table 1. Title bar icons and descriptions

Item	Description
	Bluetooth® wireless technology is turned on. See <a href="#">Bluetooth® wireless technology</a> .
	A Bluetooth connection is in progress.
	A Bluetooth connection has been made.
	Your phone is performing a search on the characters you entered. If you are in Card view or the Launcher, your phone conducts a universal search (see <a href="#">Search to find info and make calls</a> ). If you are in an application such as Contacts or Memos, your phone searches for items within the app that match the search term you entered.
	Your phone is in roaming coverage. See <a href="#">Set roaming and data usage preferences</a> .
	TTY is turned on. See <a href="#">Enable TTY/TDD</a> .
	HAC is turned on. See <a href="#">Enable HAC</a> .

## Back view



- 1 Camera flash
- 2 Camera lens
- 3 Speaker


## Top view



- 1 **3.5mm headset jack**
- 2 **Power:** Press to wake up or turn off the screen. Press and hold to turn wireless services on and off, replace the battery, or turn your device completely on and off. Turn your device completely off before you remove the battery.

# Set up your phone

## Complete setup

- 1 Press and hold the **power** button  on the upper-left corner of your phone until you see the Palm® logo on the screen (approximately five seconds).
- 2 Follow the onscreen instructions to complete setup.
- 3 To create a Palm profile, enter a working email address and select and answer a security question (see [What is a Palm profile?](#)).

---

**NOTE** If you have a Palm profile from an old webOS phone that you no longer use, you can enter that profile email address and username to download that profile information to your new phone. But if you are still using the other phone, you must create a new Palm profile for your Pixi Plus phone—you can't use the same profile on two phones.

---

- 4 Your phone is ready to use. To learn how to make your first call, see [Make calls](#).

## Verify your profile

After you finish setup, look for an email on your computer at the address you used for your Palm profile. Click the link in the email to do the following:

- Verify your Palm profile.
- Follow a link to learn about getting data like contacts and appointments onto your phone from your desktop organizer software (see [How do I get data off my computer?](#)).

---

**TIP** If you don't see the confirmation email in your Inbox, check your spam mail folder in your desktop email program.

---

## What is a Palm profile?

Your Palm profile gives you the following benefits:

- Automatic system and software updates are sent to your phone.
- A Palm profile account is automatically created for you on your phone. In this account you can store Contacts and Calendar info that you don't store in online accounts like Google or Exchange.

---

**NOTE** You cannot access Palm profile data on the profile website—you can access the data on your phone only.

---

- Info stored in your Palm profile account, as well as info you have in applications on your phone (like Memos and Tasks), is automatically backed up to servers administered by Palm.
- If your phone is lost or stolen, you can do a remote erase of the info on the phone.

---



**NOTE** If you want to erase data on your phone while you are still in possession of the phone—for example, before you give it to someone else—don't do a remote erase. Instead, do a partial or full erase of the phone itself (see [Erase data and reset your phone](#)).

---

For detailed information about your Palm profile, see [Backup](#).

Although you create a Palm profile by entering a valid email address, setting up a Palm profile is different from setting up email on your phone. To set up email, see [Set up email](#). To change your Palm profile information after you have set it up, see [Update your Palm Profile settings](#).


## Charge the battery

When the battery is very low, the battery  icon in the upper-right corner of the screen changes to red. When the battery is fully charged, the icon appears full and changes to green .

---

**WARNING** Use only batteries and chargers that are approved by Palm with your phone. Failure to use a battery or charger approved by Palm may increase the risk that your phone will overheat, catch fire, or explode, resulting in property damage, serious bodily injury, or death. Use of unapproved third-party power supply accessories may damage the phone and void the Limited Warranty for the product.

---

Although the battery may come with a sufficient charge to complete the setup process, we recommend that after setup you charge your phone until the battery  icon in the upper-right corner of the screen is full to ensure that the battery is fully charged.

See [Maximizing battery life](#) for tips on making your battery's power last longer.

- 1 On the right side of your phone, open the **charger/microUSB connector**.



- 2 Connect the small end of the **USB cable** to the **charger/microUSB connector**.



- 3 Connect the other end of the **USB cable** to the **AC charger**.
- 4 Plug the **AC charger** into a working outlet.

---

**TIP** You can also charge your phone battery by connecting your phone to your computer using the USB cable. Charging this way takes much longer than using the AC charger. Do not, however, connect the Palm® Touchstone™ charging dock (sold separately) to your computer.

---




## Maximizing battery life

Battery life depends on how you use your phone. You can maximize the life of your battery by following a few easy guidelines:

- Charge your phone whenever you can. Charge it overnight. The battery has a much longer useful life when it is topped off frequently than when it is charged after it is fully drained.
- Set your screen to turn off automatically after a shorter period of inactivity (see [Set the interval for turning the screen off automatically](#)).
- Keep your battery away from direct sunlight and other sources of heat. Temperatures over 113 degrees Fahrenheit (45 degrees Celsius) can permanently reduce the capacity and life span of any lithium-ion battery.

- As with any mobile phone, if you are in an area with no wireless coverage, your phone continues to search for a signal, which consumes power. Turn off your phone if you are outside a coverage area (see [Turn wireless services off \(airplane mode\)](#)).
- The fewer wireless connections you have, the less power is required of the battery. Turn on airplane mode when you don't need to be wirelessly connected. Airplane mode turns off your connection to the Verizon Wireless network, and it also turns off Wi-Fi and Bluetooth. You can turn on Wi-Fi (see [Wi-Fi](#)) and Bluetooth (see [Bluetooth® wireless technology](#)) separately when airplane mode is on. You can also turn off GPS (see [Location Services](#)).
- If you set up an email account in the Email application, set the interval to automatically download email to every two hours or less frequently (see [Enter advanced account settings](#)).
- Lower the screen brightness (see [Change screen brightness](#)).
- Keep in mind that frequent use of instant messaging (IM) can reduce battery life.
- Turn the phone completely off if you won't be using it for an extended period of time (see [Turn everything \(the screen and wireless services\) on/off](#)).
- Buy an extra battery as a spare for long plane trips or periods of heavy use. To purchase batteries that are compatible with your phone, go to [palm.com/store](http://palm.com/store) and click Accessories for your phone.

## Turn the phone on/off

Your Pixi Plus phone's screen can be turned on and off separately from its wireless services (which are the **Phone**  app, **Wi-Fi**  app, and **Bluetooth**  app). This means you can wake up the screen to use just the organizer features of your device (Calendar, Contacts, Tasks, Memos, and so on) without turning on the phone and other wireless features. Also, when the screen is turned off, the phone can be on and ready for you to receive phone calls or messages.

## Turn the screen on/off

Turn the screen on and leave the wireless services turned off when you want to use only the organizer features, for example, when you're on a plane and you must turn off all wireless services, but you want to look at your calendar.

To turn the screen on, press **power** . Drag  up to unlock the screen.



\* Power

To turn the screen off, press **power** .

To save power, the screen dims automatically after a period of inactivity and then turns off. You can be on a call when the screen dims and turns off—this does not affect the call. To brighten the screen after it dims, tap the screen.

---

**TIP** You can set how long the screen stays on during a period of inactivity (see [Set the interval for turning the screen off automatically](#)).


---


## Turn wireless services off (airplane mode)

Airplane mode turns off your phone as well as the Wi-Fi and Bluetooth® wireless technology features. Use airplane mode when you are on a plane or anywhere else you need to turn off all wireless services. You can't browse the web, but you can still use apps like Calendar, Contacts, Photos, Music, Doc View, and PDF View.



Do one of the following:

- Tap the upper-right corner of any screen to open the connection menu. Tap **Turn on Airplane Mode**.
- Press and hold **power**  and tap **Airplane Mode**.

When your phone is in airplane mode, the airplane mode  icon appears at the top of every screen, and Airplane Mode appears in the upper-left corner of the screen in the **Launcher**, **Card view**, and **Phone**. Your phone is not connected to any mobile network.



\* These indicate that wireless services are off (airplane mode).

---


**TIP** When your phone is in airplane mode, you can turn the Wi-Fi and Bluetooth features on individually (see [Turn Wi-Fi on and off](#) and [Turn the Bluetooth feature on/off](#)). To turn your phone back on, you must turn airplane mode off.

---

## Turn wireless services on


When you turn on your phone, it automatically connects to your mobile network so that you can make and receive phone calls and use other wireless services (if supported by the local network).

- If airplane mode is turned on, you need to turn it off before you can connect to your mobile network. Tap the upper-right corner of any screen to open the connection menu. Tap **Turn off Airplane Mode**.

When your phone locates a signal, **Verizon Wireless** appears in the upper-left corner of the screen in the **Launcher**, **Card view**, and **Phone**, and the signal-strength  icon appears at the top of the screen.



\* These indicate that wireless services are on.


When you are inside a phone coverage area, the bars on the signal-strength  icon are filled in. If you're outside a coverage area, the bars in the signal-strength icon appear dimmed with an X.



## Turn everything (the screen and wireless services) on/off

Usually, turning your phone off and/or putting it in airplane mode is sufficient for normal periods when you have the phone with you but you're not using it. On rare occasions, however, you may want to put your phone into deep sleep because you are not going to use it for an extended period. At those times, do one of the following:

- Open **Device Info** ⓘ and tap **Reset Options**. Tap **Shut Down**, and tap **Shut Down** again.
- Press and hold **power** ⏻, and tap **Power**. Tap **Shut Down/Swap Battery**, and tap **Shut Down**.

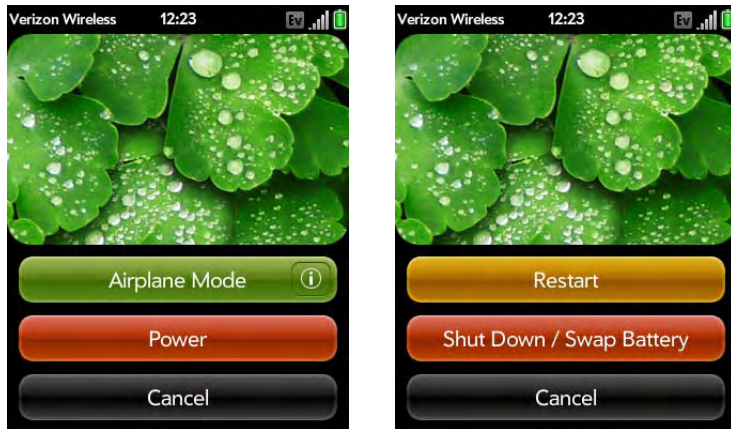

---

**NOTE** When you turn everything off, the phone's alarms, ringer, and notifications are also turned off.

---

To turn both the screen and wireless services back on, press and hold **power** ⏻.

## Use gestures: tap, swipe, drag, flick, pinch

Gestures are an important, basic part of your phone. They're easy to learn, and they make working with the phone fast. You make most gestures with one finger. For a few, you need two. Make gestures with the tip of your finger. Don't use your fingernail. Don't bear down.

To see short animations illustrating how to do gestures, go to [palm.com/support](http://palm.com/support) or tap **Clips** in Help on your phone (see [Open applications](#) for information on how to open Help).

You make gestures in two areas on your phone: the touchscreen and the gesture area. The gesture area is the black area extending along the bottom of the screen.



\* Gesture area

When you're working in an application, the gesture area displays a lighted bar in the center. The lighted bar also appears when you tap the center of the gesture area to maximize a card in Card view.

## Basic gestures

**Tap:** Tap with the tip of the finger—not the fingernail. Tap fast and firmly, and then immediately lift your fingertip off the screen. Don't bear down on what you're tapping. Don't wait for a response; the response comes after you lift your finger. Don't linger on the gesture; a tap takes a split second to do.



Tap the center of the gesture area to do the following:

- When you're working in an application, tap the center of the gesture area to see Card view. Card view shows you all the applications that are currently open, displayed as a series of cards (small active windows).



- When you're in Card view, tap the center of the gesture area to maximize the app in the center of the view.

**Swipe:** A swipe is most often a horizontal gesture, from right to left or left to right. Do it fast, do it lightly. In a swipe, your fingertip just skims the surface of the touchscreen or gesture area.



One kind of swipe you'll use a lot: **Back**. Make the back gesture from right to left anywhere in the gesture area. Back takes you up one level from a detailed view to a more general view of the application you're working in.

For example, when you finish reading an email message, make the back gesture to close the message and return to your list of messages. Or when you finish writing a memo, make the back gesture to close and save the memo and return to the display of all your memos. When you make the back gesture in an application and that's the only screen of that app that's open, you minimize the app and go back to Card view.

In Web, the back gesture performs the same function as the back button on the browser, allowing you to move back through previously viewed pages.



The **forward** gesture, available in Web only, is a swipe from left to right anywhere in the gesture area. The forward gesture allows you to move forward through previously viewed web pages.

**Drag:** Drag is the gesture you make for a slow scroll up and down a list. Slide your fingertip slowly along the surface—no need to bear down.



One kind of drag that you'll use a lot brings up **Quick Launch** when you're in an application. This drag gesture begins in the gesture area and ends on the touchscreen. As your fingertip slowly crosses the border between the gesture area and the touchscreen, it seems to drag Quick Launch into view. To open one of the apps in Quick Launch, move your finger to its icon. When you see the app name appear, lift your finger. The application opens.

You also make the drag gesture as part of a drag and drop.

**Flick:** As its name tells you, this is a quick gesture, great for scrolling long lists. Do it fast, do it lightly; as with a swipe, your fingertip just skims the surface. The faster you flick, the faster and farther you scroll up or down a list.



To **close an application** in Card view, flick the card up toward the top of the touchscreen. This is called **throwing** the card off the top of the screen.

In some applications, such as Email and Messaging, you can throw a list item off the side of the screen to delete the item.

If an application is maximized, you can flick up from the gesture area to the screen to minimize the app and display Card view. This is the **up** gesture. If you make the up gesture when Card view is displayed, you open the Launcher.

## Scroll gestures

**Scroll slow:** Drag the screen in the desired direction.



**Scroll fast:** Flick the screen in the desired direction.



**Stop scrolling:** Tap or drag the screen while scrolling.



## Zoom gestures

**Zoom in/pinch out** to increase the size of items on the screen in Email, Web, Photos, Doc View, PDF View, Google Maps: Place two fingers on the screen and spread them slowly apart.



**Zoom out/pinch in** to decrease the size of items on the screen in Email, Web, Photos, Doc View, PDF View, Google Maps: Place two fingers on the screen and bring them together.



**Zoom in or out a fixed amount** in Web, Photos, Doc View, PDF View: Double-tap the screen.



## Text selection gestures


---

**TIP** See [Cut, copy, and paste information](#) and [Use the Copy All or Select All feature](#) for information on working with text you've selected.


---

**Insert the cursor in a text field:** Tap the location.






**Move the cursor:** Tap the location to insert the cursor. Press and hold **Option** . Place your finger anywhere onscreen and drag your finger in the direction you want to move the cursor.



**Select text when you can see a cursor:** Tap the location to insert the cursor. Press and hold **Shift** . Place your finger anywhere onscreen and drag your finger in the direction you want to select text. Tap the highlighted text to deselect it.



**Select a paragraph of text:** When you cannot insert a cursor in the text—for example, on a web page or in an email message you received—the smallest amount of text you can select is a whole paragraph. Press and hold **Shift** , and then tap a paragraph. Tap an adjacent paragraph to add it to your selection (you can't skip around). If you need to scroll down to select the next paragraph, release **Shift** , scroll, press **Shift** , and tap the paragraph. Tapping any part of the highlighted selection deselects it.



## Drag and drop

Tap and hold the item, drag it, and then lift your finger to drop it. You get a visual cue that the item is ready to be dragged. For example, an icon in the Launcher is ready to be dragged when you see a halo around the icon. A

card in Card view is ready to be dragged when it changes size and becomes transparent.



## Delete a list item

Throw the item off the side of the screen. If prompted, tap **Delete** to confirm the deletion.





The delete gesture is available in applications such as Email, Messaging, Tasks, Music, and Bluetooth. If you can't delete a list item by throwing it, open the item and look in the [application menu](#) for a delete command.

---

**TIP** To delete multiple list items, throw each one off the screen. If you get the **Delete** confirmation prompt after throwing the first item, you don't need to tap it—just throw the second item, and the first deletion is confirmed automatically.

---

## Open applications

You can have as many applications open at one time as you like, limited only by the amount of memory available on your phone at the time.

### Open an application in Quick Launch

Quick Launch is the bar of five icons that is always available at the bottom of Card view and the Launcher. To open an application from Quick Launch, just tap the icon.



\* Quick Launch

Quick Launch can display no more than five icons. By default it displays, from left to right, Phone, Contacts, Email, Calendar, and the Launcher. You can change the order of icons (except the Launcher icon) in Quick Launch (see [Reorder Quick Launch icons](#)), or swap in whatever applications you like (see [Change the applications that appear in Quick Launch](#)).

When an application fills the whole screen, make the following gesture to display Quick Launch and open one of its applications.

1 Drag up slowly from the gesture area to the screen.

---

**NOTE** Don't confuse this “drag up” with the up gesture, which is a flick up from the gesture area to the screen that displays Card view.


---

2 Move your finger to the application icon. When you see the app name appear, lift your finger. The application opens.



### Open an application in the Launcher

The Launcher displays all your applications that are not on Quick Launch. The Launcher includes multiple pages, which you can organize to group apps the way you want (see [Reorder Launcher icons](#)).

- 1 Tap the center of the gesture area to open Card view, and tap .




**TIP** You can also open the Launcher by flicking up twice from the gesture area to the screen. If you are in Card view, just flick up once to open the Launcher.

- 2 To find the app you want, swipe up or down to see all the icons on a page. Swipe left or right to see other pages.



- 1 Arrow indicates that you can swipe up to see partially or fully hidden icons.
  - 2 Page indicators show that there are two Launcher pages to the right—swipe right to left on the screen to see them.
- 3 Tap the application icon.

To close the Launcher, do one of the following:

- Tap the center of the gesture area.
- Tap .
- Make the up gesture: Flick up from the gesture area to the screen.

## Open an application using search

- 1 Tap the center of the gesture area to open Card view.
- 2 Enter the name of or a keyword for the application (see [Universal search application keywords](#)).
- 3 When the application icon appears in the search results, tap it.

## Work with applications

### Go up one level in an app (back gesture)

The back gesture takes you up one level from a detailed level to a more general view of the application you're working in. For example, when you finish reading an email message, make the back gesture to close the message and return to your list of messages. Or when you finish writing a memo, make the back gesture to close and save the memo and return to the display of all your memos. When you make the back gesture in an application and that's the only screen of that app that's open, you minimize the app and go back to Card view.



To make the back gesture, swipe right to left anywhere in the gesture area.



## Display all open applications (Card view)

Card view displays open applications as small cards, so that you can easily scroll through them and drag them to change their order.

When an application fills the screen and you want to go to Card view, do one of the following:

- Tap the center of the gesture area.



- Make the up gesture: Flick up from the gesture area to the screen.

## Move among open applications

- 1 In Card view (see [Display all open applications \(Card view\)](#)), swipe left or right on the screen to see other open apps.



- 2 Tap a card to maximize the application.

---

**TIP** You can also maximize the center card in Card view by flicking down from the screen to the gesture area.

**TIP** You can set a preference to move among open apps without first going to Card view (see [Turn advanced gestures on/off](#)).

---

## Reorder open cards

- 1 In Card view (see [Display all open applications \(Card view\)](#)), tap and hold a card to further reduce the size of the cards.

---

**TIP** You can also tap anywhere on the screen around the cards to reduce the size of the cards.

---

- 2 Tap and hold a card, and after the card becomes transparent, drag it to another position.



### Close an application

- In Card view (see [Display all open applications \(Card view\)](#)), throw the card off the top of the screen.



### Change the applications that appear in Quick Launch

If Quick Launch contains five icons, you must remove an application from Quick Launch before you can add another one. You can remove any application except the Launcher.

- 1 Open the Launcher. Quick Launch appears at the bottom.
- 2 Tap and hold a **Quick Launch icon**, and after the halo appears around the icon, drag it onto the Launcher.



- 3 Tap and hold an **icon** in the Launcher, and after the halo appears around the icon, drag the icon onto the Quick Launch bar.

### Reorder Quick Launch icons

You can change the position of any Quick Launch icon except the Launcher icon.

- 1 In Card view, tap and hold a Quick Launch icon.

- 2 After the halo appears around the icon, drag it to another location.




## Reorder Launcher icons

- 1 In the Launcher, tap and hold an icon.
- 2 After the halo appears around the icon, drag it to another location.
- 3 To move the icon to another page, drag it to the left or right edge of the screen. Don't release the icon until the new page appears.



## Delete an application

You can delete applications that you installed on your phone.

- 1 While pressing and holding **Option** , tap the app icon.
- 2 Tap **Delete**.

---

**TIP** You can also delete an application you installed by opening the Launcher, opening the [application menu](#), and tapping **List Apps**. On the list of applications, tap and hold an app name or throw the app off the side of the screen, and then tap **Delete**.

---

## Enter and save information

### Use the keyboard








- 1 Option: Press to enter numbers, punctuation, and symbols that appear above the letters on the keys (see [Enter alternate keyboard characters](#)), or to move the cursor (see [Text selection gestures](#)).
- 2 Shift: See [Enter uppercase letters](#) and [Text selection gestures](#).
- 3 Space
- 4 Backspace

- 5 Enter: Press to enter a line return (for example, in a memo or in an email message you are composing) or to accept information you entered in a field. See [Enter information in a field](#).
- 6 Sym: See [Enter characters from the symbols table](#).






## Enter uppercase letters

By default, the first letter of each sentence or field is capitalized and the remaining text you enter is lowercase. To enter other uppercase letters, do one of the following:

- Press **Shift**  and press the letter key. The Shift symbol appears: . You don't need to hold down Shift while you press the letter key.
- Turn on Caps Lock: Press **Shift**  twice. The Caps Lock symbol appears: .
- Turn off Caps Lock: Press **Shift** .

## Enter alternate keyboard characters

Numbers, punctuation, and symbols appear above the letters on the keys. To enter these characters, do one of the following:


- Press **Option**  and press the key for the character. The alternate character symbol appears: . You don't need to hold down Option while pressing the second key.
- Enter a series of alternate characters: Press **Option**  twice to turn on Option Lock. The Option Lock symbol appears: .
- Turn off Option Lock: Press **Option** .

## Enter passwords

You can see each character of a password only as you enter it, so be careful. Be sure Caps Lock and Option Lock are off unless you need them. For information on how to enter characters, see [Enter uppercase letters](#) and [Enter alternate keyboard characters](#).

## Enter characters from the symbols table

You can enter symbols and accented characters that don't appear on the keys by using the symbols table. See [Symbols and accented characters](#) for a list of the available symbols and accented characters.

- 1 Press **Sym**  to display the symbols table.
- 2 Narrow the list by pressing the key that corresponds to the character you want. For example, to enter an **é**, press **e**. See the table below for a list of corresponding characters.

**TIP** The symbols and accented characters are grouped according to their similarity to the corresponding key. In some cases, the symbol is related to the alternate character on the key, not the letter. For example, to type a ¢ or other currency symbol, press **Sym + h**. Why? Because the alternate character on the H key is \$.

**TIP** If you press the wrong key, press **Backspace** to return to the full list of symbols and accented characters. You can then press another key.

- 3 Scroll to find the character you want.
- 4 Tap the character to insert it.

## Symbols and accented characters

Table 2. Symbols and accented characters




Press Sym  and press...	to select...
a or A	á à â ã ä å æ Á À Ã Ä Å Æ ã ~ \ ` • ÷ ^ [] {} < > <<> Ø μ
b or B	~ \ ` • ÷ ^ [] {} < > << >> Ø μ
c or C	© ç Ç ¢
d or D	† ‡
e or E	é è ë ê ë É Ê Ë Ì Í Î Ñ ¼ ½

Table 2. Symbols and accented characters


Press Sym  and press...	to select...
h or H	¢ € £ ¥ ¢
i or I	í î ï ð ñ ò ó
j or J	ï
k or K	:-) :-(- :-)
l or L	‘ ’ ‚ “ ”
m or M	µ :-) :-(- :-)
n or N	ñ Ñ ¿
o or O	ó ò ö ô œ õ ø Ó Ò Ö Õ Œ Ñ Ø ² “ ” „ < > « »
p or P	¶ ~ \ ` • ÷ ^ [ ] { } < > « » Ø µ
q or Q	\ ~
r or R	® ²
s or S	ß š Š ~ \ ` • ÷ ^ [ ] { } < > « » Ø
t or T	™ ³ ¾
u or U	ú ù ü û Ú Û Ü Ů [ ] { } < > « »
v or V	^
w or W	÷ ^ ±
x or X	x ²
y or Y	ÿ ý Ÿ Ÿ ¥ [ ] { } < > « »
z	ž Ž •
, or _	~ \ ` • ÷ ^ [ ] { } < > « » Ø µ
.	... ~ \ ` • ÷ ^ [ ] { } < > « » Ø µ
@	° • Ø

## Enter information in a field

You can enter information in a field by typing or by pasting previously copied information (see [Cut, copy, and paste information](#)).

Applications with text fields support the auto-correct feature. If the app recognizes a common misspelling, it auto-corrects the word. To cancel the auto-correction, press **Backspace** .

To accept the information you entered, do one of the following:



- Tap outside the field.
- Press **Enter** . If a screen contains multiple fields, pressing Enter accepts the information you just entered and jumps the cursor to the next field.
- When you are done entering information on the screen containing the field, make the back gesture to accept the information and back out of the screen (see [Go up one level in an app \(back gesture\)](#)).

## Select items in a list

Lists enable you to select from a range of options. Lists are different from menus (see [Use the menus](#)), which give you access to additional features.

Lists are hidden until you tap the currently displayed option for that list.

- 1 Tap the currently displayed option to open the list. For example, when creating a new event in Calendar, tap **15 minutes before** to display the list of reminder options.

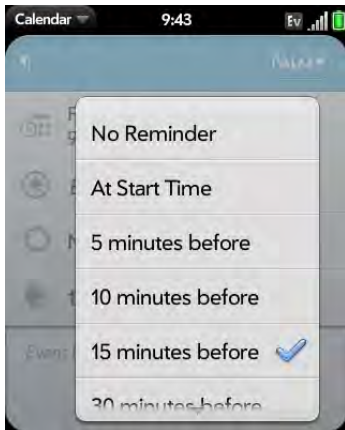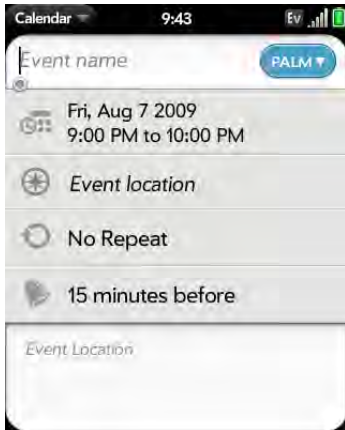

- 2 Tap the list item you want.

## Cut, copy, and paste information

You can copy any selectable text, and you can cut any selectable text that you yourself entered, for example, in a memo or an email. This includes text

you can select by dragging the cursor and paragraphs you can select by tapping them (see [Text selection gestures](#)).

- 1 Select the text you want to cut or copy (see [Text selection gestures](#)).
- 2 Open the [application menu](#) and tap **Edit > Cut** or **Copy**.
- 3 Open the app and insert the cursor where you want to paste the text (see [Text selection gestures](#)).
- 4 Open the [application menu](#) and tap **Edit > Paste**.

---

**TIP** You can also use keyboard shortcuts to cut, copy, and paste. After selecting the text or inserting the cursor, press and hold the gesture area until a light appears under the surface of the gesture area, and press **X** (cut), **C** (copy), **V** (paste), or **A** (copy/select all, in apps that support this feature).

---

## Use the Copy All or Select All feature

Some applications offer a Copy All menu option. For example, in Messaging, you can start or open a conversation, open the [application menu](#), and tap **Edit > Copy All**. This saves the entire conversation as plain text, which you can paste in a memo, email message, and so on.

Other apps offer a Select All menu option. For example, in Memos, you can open a memo, open the [application menu](#), and tap **Edit > Select All**. This highlights the full memo text, which you can cut or copy.

Some apps offer both the Copy All and Select All features to perform different text selection tasks:

**Email:** In an open email message in Email, use Copy All to copy the entire message (including header info such as sender, recipient, and subject), or use Select All to select just the message body text (see [Copy messages](#)).


**Contacts:** On the contact details screen, use Copy All to copy the contents of the contact entry as plain text; or, on the contact edit screen, insert the cursor in a field and use Select All to highlight the contents of that field.

## Save information

- On most screens, your information is saved automatically. Just make the back gesture to close the screen (see [Go up one level in an app \(back gesture\)](#)), and your info is saved at the same time.
- Your info is also saved if you minimize an app screen to a card and throw the card off the top of the screen to close the app.
- On screens with a Done button, tap **Done** to save your information.

## Use the menus

Most applications have an application menu hidden in the upper-left corner, which provides access to additional features. There is also a connection menu hidden in the upper-right corner, which provides access to wireless services.

Some applications have additional menus. For example, in Photos, tap an open picture and tap  to display a menu of tasks you can do with the picture (see [Photos](#)).

To get the most out of your phone, it's a good idea to familiarize yourself with the additional features available through the menus in various applications.

### Open the application menu

The application menu contains items for the application you are working in, such as Cut and Copy, Preferences, Help, and other application-specific commands.



1 Do one of the following:


- Drag down from the upper-left corner of the phone (above the screen) onto the screen.



- Tap the application name in the upper-left corner of the screen.



2 Tap a menu item to open it. If a menu item displays a right-pointing arrow , tap the item to display the submenu for that item—for example, tap the **Edit** menu item to open a submenu containing Cut, Copy, and Paste items. If you see a downward-pointing arrow  at the bottom of the menu, scroll down to see additional menu items.

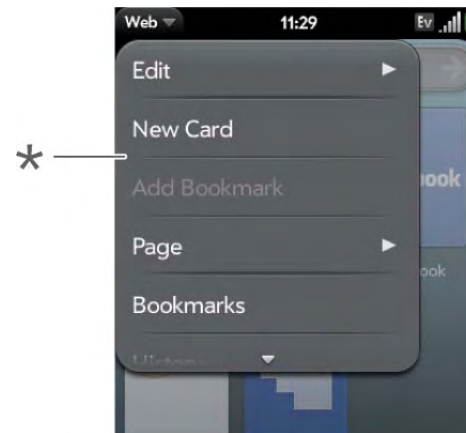

\* Application menu

## Open the connection menu

The connection menu lets you manage wireless services—the phone, Wi-Fi, and Bluetooth® wireless technology.

---

**DID YOU KNOW?** The connection menu also displays the current day and date and the battery charge level.

---


1 Do one of the following:

- Drag down from the upper-right corner of the phone (above the screen) onto the screen.



- Tap the upper-right corner of the screen.




2 Tap a menu item to turn that wireless feature on or off or to display a list of menu items for that feature (see [Turn wireless services off \(airplane mode\)](#)). If you see a downward-pointing arrow  at the bottom of the menu, scroll down to see additional menu items.

## Search to find info and make calls

### Use universal search

You can search for contacts and applications on your phone, or search the web.

- 1 Open Card view (see [Display all open applications \(Card view\)](#)) or the Launcher (see [Open an application in the Launcher](#)).
- 2 Begin typing a search term or keyword (see [Universal search application keywords](#)). As you type, search displays any contact names and application names that match the character or application names that are associated with the keyword. As you continue typing, the search results narrow.

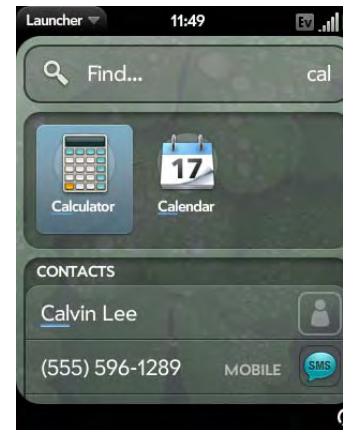

---

**TIP** You can also start a search by copying text in another application, opening the Launcher, and pasting the text. The text appears at the top of the screen as the search term. Note that you can't paste text in Card view.

---



3 Do one of the following:

- To look up or get in touch with someone: Tap a contact name to open the person's contact information. Tap a phone number to dial it, an email address to send a message, and so on. If only the contact name is displayed, tap the name to display ways to get in touch. You can also tap **Add Reminder** to add a reminder message to the contact (see [Assign a reminder message to a contact](#)).
- To perform a web search: Tap the search term you entered to open a list of web search options, and tap the option. If your search returns no contacts or applications, the web search options are displayed automatically.



- To open an application: Tap the application.

## Universal search application keywords

If you don't know the name of the app you are searching for, you can enter a keyword associated with the app. This table shows the keywords you can use to find an app on your phone.

Table 3.

Application Name	Keywords
App Catalog	Store
Backup	Settings, Preferences
Bluetooth	Settings, Preferences, Wireless
Calendar	Datebook, Meetings, Events
Clock	Alarm, Time, Watch
Contacts	Addresses, People
Date & Time	Clock, Settings, Preferences
Device Info	Settings, Preferences, Reset
Doc View	Word, Excel, PowerPoint
Email	Mail
Google Maps	Maps
Location Services	Settings, Preferences
Memos	Notes, Stickies, Notepad
Messaging	Text, SMS, MMS, IM, Instant Chat
Music	Songs, Tunes, Audio
PDF View	Acrobat
Phone	Dial
Photos	Pictures
Regional Settings	Settings, Preferences
Screen & Lock	Wallpaper, Security, Desktop, Brightness, Unlock, Gestures, Settings, Preferences

Table 3.

Application Name	Keywords
Sounds & Ringtones	Audio, Music, Volume, Vibrate, Silent, Settings, Preferences
Tasks	To Do, Todos, Checklist
Updates	Settings, Preferences
Videos	Movies
Web	Browser, Blazer, Internet
YouTube	Videos, Movies

## Search within an application

In applications such as Contacts, Email, Memos, Doc View, and PDF View, you can search for entries or files. From the list view, enter the file name; a few words from a memo; or a contact name, initials, address, or number. See the individual application sections for details.

You can also enter a search term in the Help application to search for help content related to the term.

## View and respond to notifications

### Respond to a notification

Notifications show up at the bottom of the screen to notify you of new voicemail and messages, upcoming appointments, missed calls, and more.




Do one of the following:

- Tap the notification to act on it.
- For some types of notifications, throw the notification off the side of the screen to dismiss it.

### View all your notifications

For most types of notifications, if you do not tap a notification after a few seconds, it becomes an icon in the lower-right portion of the screen.

- 1 Tap anywhere on the bottom of the screen to display your notifications.

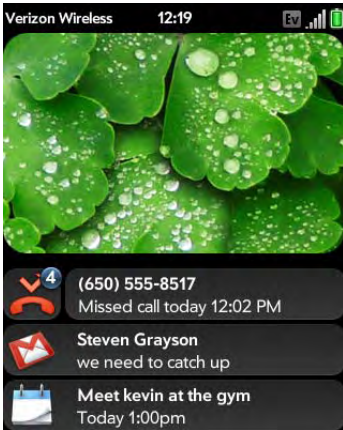

- 2 Tap a notification to act on it.

## Reorder notifications and other dashboard items

The area that displays all of your notifications (see [View all your notifications](#)) is called the dashboard.

- Tap and hold a dashboard item, and then drag it to a different location.
- Throw a dashboard item off the side of the screen to dismiss it.

## Update the software on your phone

Palm continually provides updates to your phone's operating system. Update notifications are sent to your phone automatically when a system update is available (see [Respond to a system software notification](#)). When you update your phone's operating system, your personal information and files are not affected. In addition to receiving update notifications, you can manually check for operating system updates at any time (see [Manually check for system updates](#)).

What's more, both Palm and many application developers make updates available for applications you have installed on your phone. You can check in App Catalog at any time for application updates (see [Update downloaded applications](#)).

## Respond to a system software notification

When you get a notification that a system update is available, do one of the following:

- Tap **Install Now** twice. When installation is complete and the phone resets, tap **Done**. Installation may take around 15 minutes.
- Tap **Install Later**. The next time you charge your phone, you receive another update notification. You can again choose whether to install the update now or later. If you do not tap Install Later within 10 minutes of receiving the notification, installation begins automatically.

---

**NOTE** You can use your phone while updates are being downloaded, but you cannot use your phone while updates are being installed—including making emergency calls.

---

---

**IMPORTANT** Do not remove the battery while updates are being installed.

---


Here is some additional information about system updates:

- If you have Wi-Fi turned on and the battery has at least a 30% charge, your phone automatically downloads a system update if one is available—you don't have to do anything. If Wi-Fi is not turned on when the update becomes available, the Palm servers continue to check your phone for Wi-Fi availability for two days.
- If you do not have Wi-Fi turned on anytime within two days of an update's becoming available, your phone automatically downloads the update over Verizon Wireless's network as long as the battery has at least a 30% charge and you have a data connection, as indicated by the **Ev** or **1x** icon at the top of the screen.

- If the battery has less than a 30% charge, you must charge the battery before you can download or install an update.
- To avoid roaming charges, updates are not downloaded if your phone is in roaming coverage.
- If you do not install an update immediately after downloading it, you are prompted to install the update the next time you charge your phone. You can choose whether to install the update now or later. You have ten minutes to decide; otherwise, the update installs automatically.

## Manually check for system updates

- 1 **Open Updates** .

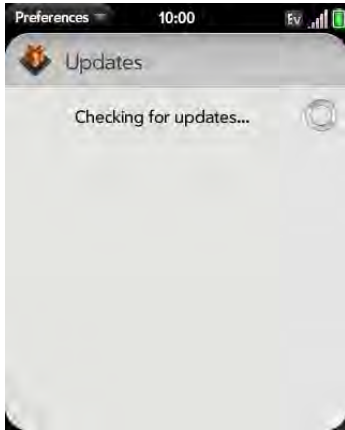

- 2 If a message appears stating that a system update is available, do the following:



- Tap **Download Now**.
- When prompted, tap **Install Now**.
- After installation has finished and the phone resets, tap **Done**.

---

**IMPORTANT** Do not remove the battery while updates are being installed.

---

## Use App Catalog to shop for new applications

### Browse applications in App Catalog


Use App Catalog to browse and download any of the many applications available for your phone. App Catalog contains both free apps and apps you can buy.




---

**NOTE** Applications you installed on your old Palm OS® by ACCESS or Windows Mobile smartphone do not work on your Pixi Plus phone because your Pixi Plus phone uses the new Palm® webOS™ platform. Check App Catalog for a new version of your old favorites. Or purchase the Classic app from App Catalog. Classic enables you to run many Palm OS applications on your Pixi Plus phone.

---

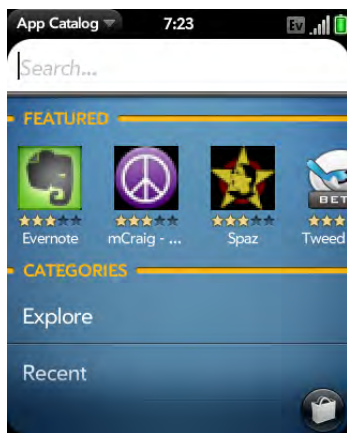1 Open App Catalog .



- 2 The first time you open App Catalog, tap **Accept**.
- 3 Swipe right or left on the thumbnails to see featured applications, or do one of the following:
- To search by name: Tap **Search**, enter the search term, and press **Enter** .
  - To search apps by category: Tap **Explore**. To view categories in an alphabetical list, tap . To view them as a tag cloud, tap .

---

**DID YOU KNOW?** In a tag cloud, categories that have more items or more popular items appear in a larger font size, giving you a visual clue as to which categories you might want to explore.

---

- To find the most recently added apps: Tap **Recent**.
- To find the most popular apps: Tap **Popular**.

- 4 (Optional) To sort the list of applications or to browse results by date, alphabetical order, rating, or price, tap a sort icon at the bottom of the screen.
- 5 When the app you want appears, tap the name to display app details.
- 

**NOTE** New apps that are in beta (test) mode are shown on a green background. Apps that are delivered from the web and have not been tested by Palm are shown on a gray background.

---

- 6 On the app details screen, do any of the following:



- Tap a screenshot to see a larger view.
- Tap **Reviews** to read all reviews.
- Tap **Share** and then tap **Email** or **Text Message** to share info about an app with a friend.
- Tap **Developer Home** to go to the app developer's home page.
- If available, tap **Support** to go to the developer's product support page.

## Download a free application

**BEFORE YOU BEGIN** Before you put applications on your phone, make sure you have enough storage space on your phone to fit the app. [Open Device Info](#) and look at the **Available** field under **Phone**. If you need to free up memory for a new app, you can delete an app (see [Delete an application](#)) or you can delete some files from your phone (see [Copy files between your phone and your computer](#)).

- 1 [Open App Catalog](#).
- 2 Browse to the app you want (see [Browse applications in App Catalog](#)).
- 3 Tap the app name, and then tap **Download for free**.
- 4 If the app uses Location Services, a notification is displayed (see [Location Services](#)). Tap **Continue**.

---

**TIP** To pause a download, tap the **Downloading** progress bar. To resume downloading, tap **Download paused**.

---

- 5 To cancel a download, tap **X** on the **Downloading** progress bar.
- 6 To open a downloaded app, tap **Tap to Launch**. The app also now appears as an icon in the Launcher, so you can open it from the Launcher as well.

You can move to other screens and work in other applications while your new app downloads in the background. For example, find another app in App Catalog and start its download while the first download is finishing.

## Buy an application

**BEFORE YOU BEGIN** Before you put applications on your phone, make sure you have enough storage space on your phone to fit the app. [Open Device Info](#) and look at the **Available** field under **Phone**. If you need to free up memory for a new app, you can delete an app (see [Delete an](#)

[application](#)) or you can delete some files from your phone (see [Copy files between your phone and your computer](#)).

- 1 [Open App Catalog](#).
- 2 Browse to the app you want (see [Browse applications in App Catalog](#)).
- 3 Tap the app name, and then tap **Download for [price]**.
- 4 If the app uses Location Services, a notification is displayed (see [Location Services](#)). Tap **Continue**.
- 5 Do one of the following:
  - If you have set up a billing account: If prompted, enter your Palm profile password to authorize the purchase, and tap **Continue**.
  - If you have not set up a billing account: Tap **Continue**. Enter your Palm profile password, and tap **Continue**. See [Set up a billing account](#).

If you enter an incorrect Palm profile password three times, a message appears that explains how you can contact Palm support for help.

- 6 Tap **OK**.

---

**TIP** To pause a download, tap the **Downloading** progress bar. To resume downloading, tap **Download paused**.

---

- 7 To cancel a download, tap **X** on the **Downloading** progress bar.
- 8 To open a downloaded app, tap **Tap to Launch**. The app also now appears as an icon in the Launcher, so you can open it from the Launcher as well.



---

**TIP** If you delete a purchased application, you can reinstall it without paying for it again (see [Manage applications](#)).


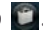
---

You can move to other screens and work in other applications while your new app downloads in the background. For example, find another app in App Catalog and start its download while the first download is finishing.

## Manage applications


- 1 [Open App Catalog](#) .
- 2 Tap  and tap **Applications**.
- 3 Tap the app name.
- 4 Do one of the following:
  - To report a problem with an application: Open the [application menu](#) and tap **Report A Problem**.
  - To read reviews: Tap **Reviews** on the app details screen.
  - To add a review: Tap **Reviews** on the app details screen and then tap **Review**.
  - To share info about an app: Tap **Share** on the app details screen and then tap **Email** or **Text Message**.
  - To delete an application: Open the [application menu](#), tap **Delete Application**, and then tap **Delete**.
  - To reinstall a deleted application: Browse to the app (see [Browse applications in App Catalog](#)), tap the app name, and tap **Download**. You do not need to buy the app again.

## Update downloaded applications

- 1 [Open App Catalog](#) .
- 2 Tap . The list of your downloaded apps appears. Apps with an available update display an icon to the right of the app name with a number and a green arrow.

- 3 Do one of the following:
  - To update one app: Tap the icon to the right of the app name.
  - To update all apps: Tap **Install Updates**.

## Set up a billing account

- 1 [Open App Catalog](#) .
- 2 Do one of the following:
  - Tap an app you want to buy, and tap **Continue**.
  - Open the [application menu](#), tap **Preferences & Accounts**, and tap **Add Account**.
- 3 Enter your Palm profile password and tap **Continue**.

---

**NOTE** If you enter an incorrect Palm profile password three times, a message appears that explains how you can contact Palm support for help.

---

- 4 Tap the credit card type you want to use. Enter your credit card and billing address details, and tap **Submit**.

---

**IMPORTANT** Your credit card details are not stored on your phone. They are encrypted and stored in your Palm profile.

---

- 5 Tap **OK** to verify your email address, or tap **Change This Address** to enter a different one. Purchase receipts are sent to the address shown here.
- 6 In **Password is Required**, select one of the following:


**Once every 4 hours:** You must enter your password the first time you make a purchase. If you make any other purchases within four hours, you don't need to enter your password again. After four hours, you



enter your password again for the first purchase, which starts a new four-hour clock.

**Every Purchase:** You must enter your password for each purchase, regardless of the time interval.

## Update or delete a billing account

- 1 [Open App Catalog](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap your account name.
- 4 Enter your Palm profile password and tap **Continue**.

If you enter an incorrect Palm profile password three times, a message appears that explains how you can contact Customer Support for help.

- 5 Do one of the following:
  - Edit the account information: Change the information as needed and tap **Submit**.
  - Delete the account information: Tap **Remove Account**.

## Copy files between your phone and your computer

You can copy any type of file from a computer to your phone, and from your phone to your computer, by putting your phone in USB Drive mode.


After you copy a file to your phone, you can open the file if your phone has an application that supports the file type. You can open many file formats for photos, videos, and music; Microsoft Office files; and PDF files. You can also copy ringtones that you download from your computer's web browser.

---

**IMPORTANT** All files that you store on the USB drive of your phone are not backed up to your Palm profile, and they cannot sync to any of your online accounts. So be sure to keep a copy of all such files somewhere besides your phone just in case you lose your phone or you must do a full erase of the info on your phone.

---

When your phone is in USB Drive mode, you can't make or receive calls or use other wireless features such as email or the web.

**BEFORE YOU BEGIN** Before you copy files from your computer, make sure you have enough storage space on your phone to fit the file. [Open Device Info](#)  and look at the **Available** field under **Phone**.

- 1 Connect your phone to your computer using the **USB cable**.
- 2 On your phone, tap **USB Drive**. On your computer, your phone appears as a removable drive.
- 3 On a Windows computer, if the Found New Hardware wizard opens, click **Cancel** to close the wizard.
- 4 Open **My Computer** (Windows XP), **Computer** (Windows Vista/Windows 7), or the **Finder** (Mac), double-click the drive representing your phone, and drag and drop files to your phone. The drive displays folders that you can use to organize the files you copy. You can also create your own folders.

---

**NOTE** If you copy ringtones to your phone, be sure to place them in the **ringtones** folder on your phone's USB drive.

---

- 5 On a Windows computer, to end the connection safely, right-click the drive representing your phone and click **Eject**. On a Mac computer, from your desktop, drag the drive representing your phone to the **Trash**. Trash changes to **Eject**.
- 6 Disconnect the **USB cable** from the computer when the USB drive screen is no longer displayed on your phone.



## Copy music, photos, and videos using third-party software

Besides using USB Drive mode to copy your photos, videos, and DRM-free music from your computer to your phone, you can also use solutions available from third-party software developers (sold separately) that facilitate the transfer of media files to your phone. For more information, go to [palm.com/sync-solutions](http://palm.com/sync-solutions).

## Sync personal data using third-party software

You can set up online accounts like Google and Exchange to sync your contacts (see [How do I add names and other info into Contacts?](#)) and calendar events (see [How do I get events into Calendar?](#)).

If, however, you prefer to leave your personal data on your computer and sync it directly with the data on your phone, there are third-party solutions (sold separately) available to enable you to do that. For more information, go to [palm.com/sync-solutions](http://palm.com/sync-solutions).





## Transferring data

If you have data such as contacts or calendar appointments in a desktop organizer such as Palm® Desktop software by ACCESS or Microsoft Outlook®, you can transfer that data to your Palm® Pixi™ Plus phone.

From a Windows computer, you can transfer contacts, calendar appointments, tasks, and memos/notes from Palm Desktop software by ACCESS version 6.2 and Microsoft Outlook 2003 or later. From a Mac computer, you can transfer contacts, calendar events, and tasks from Address Book and iCal.

### In this chapter

- 44 Data transfer overview
- 44 How do I get data from my old phone?
- 44 How do I get data off my computer?
- 46 I'm already using Google, Facebook, Yahoo!, and/or Microsoft Exchange
- 46 I want to keep using my current desktop app and sync with an online account on my phone
- 47 I don't need to sync, but I do want a copy of my data backed up somewhere besides my phone
- 47 I'd rather sync directly with my computer

## Data transfer overview

While you have many options for transferring data, Palm recommends that you take advantage of the Palm® Synergy™ feature by putting your data in an online account—for example, if you don't have a Google account, we recommend that you create one and store your data there (see [How do I add names and other info into Contacts?](#), [How do I get events into Calendar?](#), and [How do I send and receive email on my phone?](#)).

If you don't want to sync with an online account, there are other ways to get data on your phone. See [I'd rather sync directly with my computer](#).

Consider carefully whether you'll want to be able to access and change your data somewhere besides your phone. If you do, do you prefer the other means of access to be a website (for example, Google), or to be software that is installed on your computer? In either case, you can set things up so that you can synchronize new or changed data between your phone and the other data location.


You could also decide not to have a sync setup for your data, in which case you can use your Palm profile to back up your data (see [Backup](#)). You can't access this data anywhere but on your phone. However, your data is backed up, and in an emergency (such as a lost or stolen device), you can remove the data on your lost or stolen phone and restore it to a new Pixi Plus phone.

### How do I get data from my old phone?



Do you want to sync your personal information between your Pixi Plus phone and Google or Exchange, but first need to get your data out of an old

phone that you want to stop using? You can do a one-time, one-way export of data to your Pixi Plus phone, and then if you choose to, use the Synergy feature to sync the data to Google or Exchange.

- 1 On your computer, set up an account on the Google website (go to [gmail.com](#)) or with Microsoft Exchange (speak to an IT person at your company).
- 2 **Open Contacts**  on your Pixi Plus phone.
- 3 Enter your username and password for the Google or Exchange account. See [Use Contacts for the first time](#).

---

**NOTE** You don't have to go to Calendar to set up your account there—that's done automatically using the username and password you enter in Contacts.


---

- 4 Go to a Verizon Wireless store and ask a support agent for help in transferring data from your old phone. When you're ready to transfer data from your old phone, be sure to tell the agent which account to transfer the data to.

### How do I get data off my computer?



Do you want to sync your personal information between your Pixi Plus phone and Google or Exchange, but first need to get the data out of a desktop app that you want to stop using? You can do a one-time, one-way export of data to your phone, and then if you choose to, sync the data to Google or Exchange.

- 1 On your computer, set up an account on the Google website (go to [gmail.com](http://gmail.com)) or with Microsoft Exchange (speak to an IT person at your company).
- 2 **Open Contacts**  on your Pixi Plus phone.
- 3 Enter your username and password for the Google or Exchange account.

---

**NOTE** You don't have to go to Calendar to set up your account there—that's done automatically using the username and password you enter in Contacts.

---

- 4 To transfer data from a desktop app that you want to stop using, go to [palm.com/migrate-pixi](http://palm.com/migrate-pixi) for more information about the Data Transfer Assistant (DTA)—it's a free download from Palm.

## About the Data Transfer Assistant

The DTA enables you to do a one-time, one-way export of data from selected desktop apps to your Pixi Plus phone through the USB cable included with your phone. After the data is on your phone, you can select the account you want to import the data to.

---

**IMPORTANT** The DTA is not synchronization software. It is meant to be used once per desktop app, to export your info from the desktop app to an account on your phone.

---

These are the desktop apps that the DTA works with, and what data the DTA transfers to your phone:

Table 1. DTA: application data transferred

	Desktop application	Contacts	Calendar	Tasks	Memos/Notes
Windows XP, Vista®, or 7	Outlook 2003 or 2007	√	√	√	√
	Palm Desktop v6.2	√	√	√	√
Mac OS 10.5	Address Book	√			
	iCal		√		

Note the following:

- Depending on the amount of data you are transferring, it can take up to an hour to transfer data with the DTA.
- On Windows Vista and Windows 7, only Outlook 2007 is supported.
- If you have an earlier version of Palm Desktop, you can download version 6.2 for free from [palm.com/desktop](http://palm.com/desktop). Install it, sync with your old Palm device, and then use the DTA to transfer your data.
- Do you use Palm Desktop on the Mac? Don't worry, you can export your contacts, calendar events, and tasks into Address Book and iCal. Then use the DTA to transfer your data. For more information, go to [palm.com/migrate-pixi](http://palm.com/migrate-pixi).
- To transfer Calendar and Contacts to Yahoo!, you must use the upload tool provided by Yahoo!. For more information, go to [palm.com/migrate-pixi](http://palm.com/migrate-pixi).

## I'm already using Google, Facebook, Yahoo!, and/or Microsoft Exchange



If you are already using Google, Facebook, Yahoo!, and/or Exchange to manage your calendar and contacts, then all you need to do is set up one or more of these accounts on your phone.

Table 2. Online account sync table

Set up your Pixi Plus phone to sync with...	To sync this data...
Google	Contacts and calendar events
Exchange	Contacts, calendar events, and tasks
Yahoo!	Contacts and calendar events
Facebook	Contacts and calendar events

**NOTE** Changes you make in your Yahoo! or Facebook account on the web show up on your phone. Contacts and calendar events you add or change on your phone, however, do not automatically update your Yahoo! or Facebook account on the web.

- 1 [Open Contacts](#) .

- 2 Enter the account credentials for your Google, Facebook, Yahoo!, or Exchange account. See [Use Contacts for the first time](#).

**NOTE** You don't have to go to Calendar to set up your account there—that's done automatically using the credentials you entered in Contacts.


## I want to keep using my current desktop app and sync with an online account on my phone



If you want to continue using a desktop app to store your contacts, calendar events, and tasks—iCal and Address Book on the Mac, or desktop Outlook® or Palm® Desktop by ACCESS on Windows—consider adopting this solution.

Download and install a third-party application (sold separately) that can sync your desktop app to Google. Your desktop app syncs with your Google account, and then the Synergy feature takes over to sync your Google account, and your phone also syncs with Google.

- 1 On your computer, set up an account on the Google website (go to [gmail.com](http://gmail.com)).

- 2 **Open Contacts**  on your Pixi Plus phone.
- 3 Enter the account credentials for your Google account. See [Use Contacts for the first time](#).

---

**NOTE** You don't have to go to Calendar to set up your account there—that's done automatically using the credentials you entered in Contacts.

---

- 4 Install a third-party application on your computer that enables you to sync with Google. Go to [palm.com/migrate-pixi](http://palm.com/migrate-pixi) to learn about available third-party sync solutions.
- 5 Follow the instructions of the third-party app to sync the data in your desktop app with Google. The next time Google syncs with your phone, your data appears on your phone.

## I don't need to sync, but I do want a copy of my data backed up somewhere besides my phone

Use the Data Transfer Assistant to move your data into your Palm profile account. For information on your Palm profile account, see [Backup](#).



## I'd rather sync directly with my computer



Would you rather sync your Pixi Plus phone directly to your computer without going through the web? Download a third-party application (sold separately) that enables synchronization of your phone and your desktop app.

- 1 Go to [palm.com/migrate-pixi](http://palm.com/migrate-pixi) to learn about third-party applications that enable you to sync your phone with your computer using Wi-Fi.
- 2 Follow the instructions given by the third-party vendor to install the app on your computer.

---

**NOTE** You may also have to install another part of the application on your phone. Follow the instructions of the third-party vendor.

---







# Phone

Your Palm® Pixi™ Plus phone enables you to effectively manage multiple calls. You can answer a second call, swap between calls, and set up a three-way conference call. You can also work with other applications while on a call. Your Pixi Plus phone helps you to do all these tasks with ease.

## In this chapter

- 50 Make calls
- 53 Receive calls
- 54 Use voicemail
- 54 What can I do during a call?
- 57 What's my number?
- 57 View your call history
- 58 Save a phone number to Contacts
- 58 Use a phone headset
- 59 Customize phone settings

# Make calls

For information on turning the phone off and back on, see [Turn the phone on/off](#).



\* These indicate that the phone is on.




\* These indicate that the phone is off (airplane mode).

## Dial using the onscreen dial pad

The onscreen dial pad is useful when you need to dial numbers that are expressed as letters and when you need large, brightly lit numbers that you can tap.

- 1 [Open Phone](#) 📞.

- 2 Tap the dial pad numbers to enter the number.

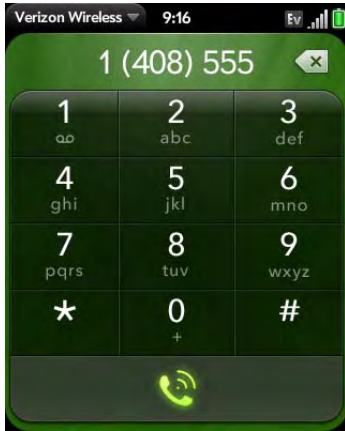

- 3 Tap  to dial.

---

**TIP** Press **Backspace** or tap the onscreen backspace icon (to the right of the number you enter) to delete numbers one at a time. Tap and hold the icon to delete all the numbers.

**TIP** You can paste numbers copied from other applications—for example, from an email message or a memo—into the dial pad.

**TIP** To enter +, tap and hold **0** onscreen.


---

## Dial by contact name using universal search

- 1 Open Card view (see [Display all open applications \(Card view\)](#)) or the Launcher (see [Open an application in the Launcher](#)).
- 2 Begin typing the contact first or last name, or initials.
- 3 Tap one of the contact's phone numbers to dial it. If only the contact name appears, tap the name to display the phone numbers for that contact, and then tap the number.

## Dial using the keyboard

- 1 In the Launcher, Card view, or Phone, use the keyboard to enter the number. You do not need to press **Option**  to enter numbers, \*, or #.

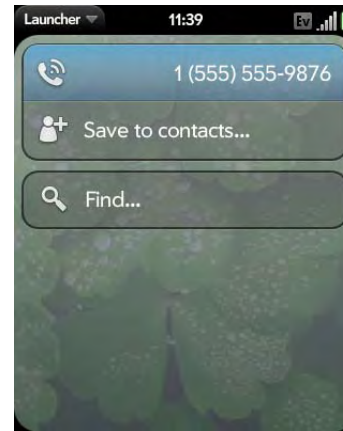

- 2 When you finish entering the number, tap it to dial.

---

**TIP** If you turn off the preference to show contact matches in the dial pad (see [Show contact matches](#)), this changes how you dial using the keyboard in the Phone application. In Phone, after you enter the number with the keyboard, tap the onscreen dial icon to dial.

---


## Dial using a speed dial


See [Assign a speed dial to a contact](#) for instructions on creating a speed dial.

- In the Launcher, Card view, or Phone, press and hold the speed-dial key you assigned to the number.

## Dial by contact name in the Phone application

See [How do I add names and other info into Contacts?](#) for instructions on adding contacts to your phone. You can also look up and dial contacts using universal search (see [Dial by contact name using universal search](#)).

- 1 **Open Phone** .
- 2 Using the keyboard, enter a name or initials until the contact you want appears.

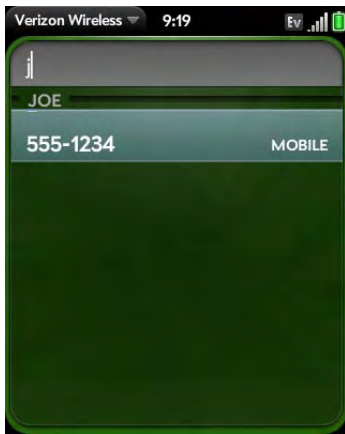

**DID YOU KNOW?** If you press E, R, or any other key that displays both a letter and a number, you see both matching names and numbers onscreen.

**DID YOU KNOW?** If your company uses Microsoft Exchange Server with a Global Address List (GAL), entering the contact search information returns matching results from the GAL as well.




- 3 Tap the number.

---

**TIP** If you do not want contact matches to appear when you type a number on the keyboard, you can turn off the Show Contact Matches preference (see [Show contact matches](#)). When this preference is off, you can still dial by contact name in the Phone application. After opening Phone, tap the contact list icon to the right of “Enter name or number.” Type the contact name or initials, and tap the number when it appears.



---

## Redial the last number dialed

- 1 **Open Phone** .
- 2 Tap . When the contact name or number appears at the top of the screen, tap  again to dial.


## Dial your national emergency number

To dial 911, do the following:

- 1 Press **power**  to wake up the screen.
- 2 Tap the center of the gesture area to display Card view.
- 3 Enter the emergency number, and tap the number to dial. If the phone is turned off, a notification appears prompting you to turn it on. You don't have to press **Option**  to enter numbers.

## Dial from another application

If a phone number appears in another application as an underlined link, you can begin dialing the number directly from that application. For example, you can dial phone numbers that appear in web pages, in messages (email, text, or multimedia), or in notes to calendar events.

- 1 If a phone number appears as an underlined link, tap the number. This displays the dial pad with the number already entered.
- 2 Tap  to dial.

## Receive calls

If you want to answer calls, your phone must be on. This is different from having only the screen turned on (see [Turn the phone on/off](#)). When your phone is off, your calls go to voicemail.

---

**TIP** You can pick the ringtone for incoming calls (see [Select the ringtone for incoming calls](#)). You can set a ringtone for individual contacts as well (see [Add a ringtone to a contact](#)).

---

## Answer a call

Do one of the following:

- If the screen is on when the phone starts ringing, tap .



- If the screen is off, drag  up to unlock the screen and answer the call.

---

**DID YOU KNOW?** If you are playing music or a video on your phone and a call arrives, playback pauses automatically and resumes when you hang up or ignore the call.


**TIP** You can see a photo of the person calling you by assigning a caller ID photo. See [Add a photo to a contact](#).

---

## Silence the ringer on an incoming call

When you silence the ringer on an incoming call, you can answer the call or let it ring through to voicemail.

Do one of the following:

- Press **power** .
- Press **volume up** or **volume down**.
- Slide the **ringer** switch off (red means off). This silences the ringer and any notification sounds. These sounds remain off until you slide the **ringer** switch back on. Other sounds, such as music and video playback, are not affected by sliding the ringer switch off.

## Ignore a call



To send a call immediately to voicemail, do one of the following:

- Tap .
- Press **power**  twice.





To reply to a caller who is in your Contacts list after you ignore a call, tap the ignored call notification. This opens the caller's contact entry, where you can select a reply method. To reply to a caller who's not in your Contacts list, go to your call history (see [View your call history](#)).

## Use voicemail

### Set up voicemail

- 1 In the Launcher, Card view, or Phone, press and hold **1** . When the search results screen appears, continue holding **1**  until the Phone application appears.
- 2 Follow the voice prompts to set up your voicemail.

### Listen to voicemail messages

- 1 Do one of the following:
  - In the Launcher, Card view, or Phone, press and hold **1** .
  - Tap a voicemail notification at the bottom of the screen.
  - [Open Phone](#) . Then tap .
  - [Open Phone](#) . Then tap and hold **1** onscreen.
- 2 Follow the voice prompts to listen to your messages.

## What can I do during a call?


Your phone offers many advanced telephone features, including call waiting and three-way conferencing. These features depend on your service plan. Contact Verizon Wireless for more information.



While you're on a call, info about the call appears on the call screen. When you're on a call, you can open other applications and work in them, and you won't lose your call. See [Open applications](#).

If you created a reminder in the contact info of a caller, the reminder appears as a notification when you make a call to or receive a call from the person. See [Assign a reminder message to a contact](#).

### Manage a call

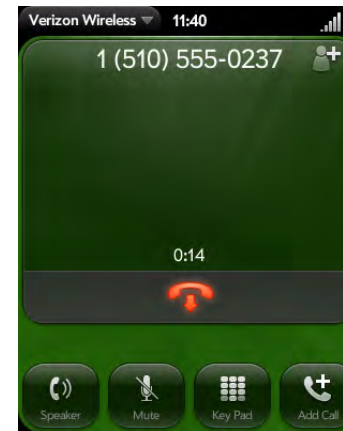Do any of the following:




- Put the call on speakerphone: Tap .
- Mute the microphone so you can't be heard: Tap .

---

**TIP** You don't need an on-hold button to put a call on hold. Just tap the mute icon to mute your end of the line.

---

- Open the dial pad to enter numbers for navigating phone trees, responding to prompts, and so on: Tap .
- Add a call: See [Make a second call](#).
- Adjust call volume: Press **volume up** or **volume down**.



- 1 Volume up
- 2 Volume down

---

**DID YOU KNOW?** You can send and receive text messages during a call. This is a great way to stay connected with friends and colleagues during a long call.

---

## End a call

- Tap .

## Use another application while on a call


While you're on a call, you can use many other applications on your phone, for example, the personal information applications (Contacts, Calendar, and so on). You can also send and receive text messages. But you can use the Verizon Wireless network for only one activity at a time—phone (which includes text messaging) or data—so you cannot use the network to browse the web, send and receive email, or send and receive multimedia or instant (IM) messages when you are on a call. To browse the web or send and receive email or IM messages during a call, you must connect to a Wi-Fi network (see [Wi-Fi](#)).

---


**NOTE** You cannot send or receive multimedia messages using a Wi-Fi network.

---

- 1 Open Card view (see [Display all open applications \(Card view\)](#)) or the Launcher (see [Open an application in the Launcher](#)) while on a call.
- 2 Tap the other application.
- 3 Tap the call notification at the bottom of the screen to return to the call screen.

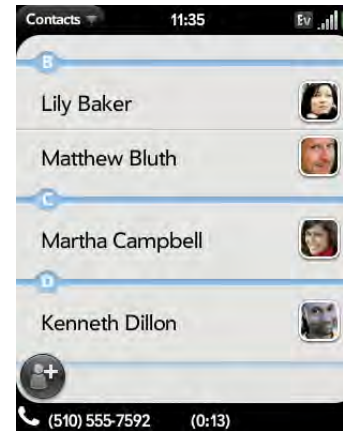

## Make a second call


- 1 While on a call, tap .
- 2 Dial the second call.


## Answer a second call (call waiting)

When a second call notification appears, tap . The first call is put on hold.

## Swap between two calls

You can swap between calls only if the second call is incoming.

- Tap  to put the active call on hold and switch to the other caller.

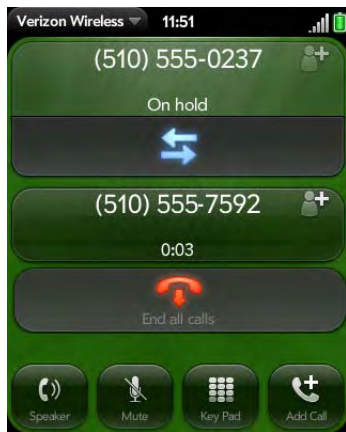



## Make a conference call

When you're on a call, you can make a second call and create a three-way conference call, provided that the service is available in your area. Please contact Verizon Wireless for more information. Additional charges may apply, and minutes in your mobile account may be deducted for each call you make.

- 1 While you're on a call, make a second call. This is the limit of conference callers. Check your service plan about conference calls.


- 2 Tap  to create the conference call.

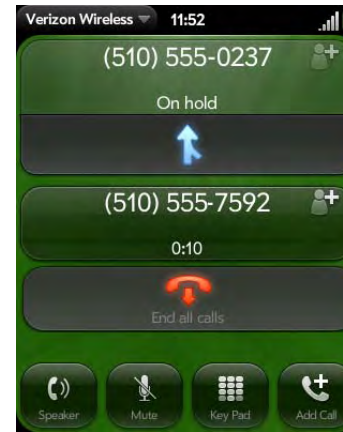

- 3 Do one of the following:
  - Tap  to end all calls.
  - Ask one of the callers to hang up, so you can stay connected to the other caller.

## Look up or send a message to a contact

When you're on a call with a contact, tap the contact name to see the person's information in Contacts. With the contact entry open, you can do the following:

- Tap  to send the contact a text message. For example, if the contact is on hold while you're having a long conversation with a second caller, you can send the contact a text stating you'll call him or her back.
- Tap **Edit** to edit the contact entry. For example, if a contact gives you his or her new email address while you're talking, you can enter the address during the call.





## What's my number?

- 1 Open Phone .
- 2 Open the [application menu](#) and tap **Preferences**. Your phone number appears at the top of the Phone Preferences screen.






**TIP** You can also see your phone number by opening **Device Info**. The number appears as the first entry under **Phone**.

## View your call history

- 1 Open Phone .
- 2 Tap .

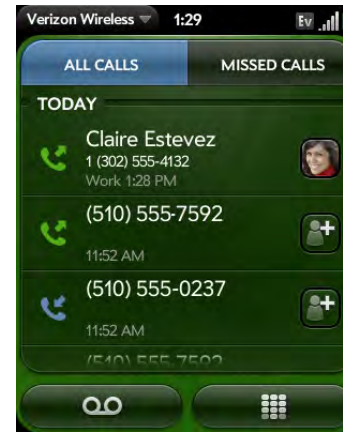- 3 Do any of the following:






- Switch the types of calls displayed: Tap **All Calls** or **Missed Calls**.
- Call a number: Tap the number.
- Save the number to Contacts: Tap  to the right of the number (see [Save a phone number to Contacts](#)).
- View a contact entry: Tap  or the contact picture to the right of the number.
- Delete a call history entry: Throw the entry off the side of the screen. Tap **Delete** to confirm.
- Clear the call history: Open the [application menu](#), tap **Clear Call History**, and tap **Clear Call History** to confirm.

**DID YOU KNOW?** In the call history, outgoing calls are designated by a right-pointing green arrow, and incoming calls are designated by a left-pointing blue arrow. Missed calls are designated by a bent red arrow. Ignored calls are designated by a red X.

## Save a phone number to Contacts

You can save the number from an incoming or outgoing call to an existing contact, or create a new contact for the number. If an incoming call uses caller ID blocking, you cannot save the number.

- 1 Do one of the following:
  - Before dialing a number you entered in the dial pad: Tap **Add to Contacts**.
  - During a call: Tap .
  - After a call: From the dial pad, tap . Tap  to the right of the number, and tap **Add To Contacts**.
- 2 Tap one of the following:

**Add New Contact:** Create a new contact for the phone number.

**Add To Existing:** Tap the contact you want to add the phone number to.

## Use a phone headset

You can connect a 3.5mm headset (sold separately) for hands-free operation.





---

**WARNING** If driving while using a phone is permitted in your area, we recommend using a headset or hands-free car kit (sold separately). However, be aware that use of a headset that covers both ears impairs your ability to hear other sounds. Use of such a headset while operating a motor vehicle or riding a bicycle may create a serious hazard to you and others, and may be illegal. If you must use a stereo headset while driving, place a speaker in only one ear. Leave the other ear free to hear outside noises, and use the headset only if it is legal and you can do so safely.

---

## Use a wired headset

Your phone works with headsets that have a 3.5mm connector (look for three colored bands on the plug). When in doubt, ask the third-party headset manufacturer if the product is compatible with your phone. If you hear a headset buzz or poor microphone performance, your headset may be incompatible with your phone.

- 1 Connect the headset. While on a call, the  icon changes to .
- 2 The headset button performs different actions depending on the headset model and what's happening on the phone. Press the headset button once to perform any of the following tasks supported by your particular headset:
  - Answer an incoming call.
  - Respond to call waiting.
  - Hang up a single active call or all calls on a conference call.
- 3 If you want to stop using the headset, do any of the following:
  - Switch from the headset to your phone's speaker: Tap  and tap **Speaker**.
  - Switch from the wired headset to a previously paired Bluetooth® hands-free device: Tap  and tap the device name.
  - Use your phone without the headset: Disconnect the headset.

## Set up and use a Bluetooth® hands-free device

Your phone is compatible with many headsets and car kits (sold separately) enabled with Bluetooth® wireless technology version 2.1, with EDR and stereo (with AVRCP media controls).

After you set up a connection with a Bluetooth headset or hands-free car kit, you can communicate using that device whenever it is within range and the Bluetooth feature on your phone is turned on. The range varies greatly, depending on environmental factors. The maximum is about 30 feet (10 meters).

---

**NOTE** You can use a stereo (A2DP-enabled) Bluetooth headset or speakers to listen to music files on your phone. You cannot, however, use a mono Bluetooth headset to listen to music files.

---

- 1 **Open Bluetooth** .
- 2 If the Bluetooth setting at the top of the screen is off, tap **Off** to switch the Bluetooth feature from Off to On.
- 3 Tap **Add device** and tap the device name.
- 4 To use a Bluetooth device with your phone, follow the instructions that came with the Bluetooth device.
- 5 To switch to another Bluetooth device while on a call: Tap  and tap the new device name. You can also tap **Handset** or **Speaker** to use your phone without the headset.

---

**TIP** If you make a Bluetooth connection with a car kit, you might get a notification on your phone asking if you want to upload contacts to the car kit. Tap **Allow** to upload contacts. If you later want to delete the contacts from the car kit, check the car kit documentation for instructions.

---

For more information on using the Bluetooth feature on your phone, see [Bluetooth® wireless technology](#).


## Customize phone settings

Use Phone Preferences to customize phone settings.



### Show contact matches

By default, when you have the dial pad displayed but you're using the keyboard to enter a phone number, both numbers and letters appear and your phone performs a search of matching names in Contacts. If you turn off this preference, typing on the keyboard with the dial pad displayed enters numbers only, and no search is done in Contacts.

- 1 **Open Phone** .
- 2 Open the [application menu](#) and tap **Preferences**.
- 3 In **Show Contact Matches**, tap **On** or **Off**.


---

**TIP** If you turn off the Show Contact Matches preference, you can still perform a contact search in the Phone application. After opening Phone, tap the contact list icon to the right of "Enter name or number." Type the contact name or initials, and tap the number when it appears.

---

## Enable international dialing

The international dialing preference makes it easy to make calls to another country, for example, to call home when you are traveling abroad. When you make a call, your phone automatically adds the dialing prefix for the country you are calling. Suppose you select the U.S. or Canada as the country for your international dialing preference. Your phone adds “+1” if you dial a 10-digit U.S. or Canadian number. It adds “+1” and your phone's area code if you dial a 7-digit US or Canadian number.

- 1 **Open Phone** .
- 2 Open the **application menu** and tap **Preferences**.
- 3 In **International Dialing**, tap **Off** to switch international dialing from Off to On.
- 4 Tap the country whose dialing prefix you want to use. If multiple prefixes are displayed, tap the correct prefix.


---

**NOTE** Your Pixi Plus phone supports only International CDMA Roaming. Refer to [verizonwireless.com](http://verizonwireless.com) for a complete list of the over 40 countries in which your Pixi Plus phone is Global Ready. "

---


## Use dialing tones

Dialing tones, also known as DTMF tones, are the tones that play when you press a key to dial. A short tone plays briefly and then stops, no matter how long you press the key. A long tone plays until you release the key.

- 1 **Open Phone** .
- 2 Open the **application menu** and tap **Preferences**.
- 3 In **DTMF tones**, tap **Short** or **Long**, and then tap the option you want.

## Use dialing shortcuts

Dialing shortcuts add a prefix at the beginning of a number, so you can dial an extension instead of the whole number.

- 1 **Open Phone** .
- 2 Open the **application menu** and tap **Preferences**.
- 3 Under **Dialing Shortcuts**, tap **Add new number**.
- 4 Set the following:

**When I Dial:** Tap this field and select the number of digits you need to enter to have your phone add a dialing shortcut.

**Use This Dialing Prefix:** Enter the prefix to be added at the beginning of the dialed number. The combination of prefix and digits you enter must add up to a complete phone number.

- 5 Tap **Done**.

**Example:** A complete phone number in your company's phone system has 11 numbers, for example, 1-555-408-1122. When dialing from a phone that's part of the system, you need to dial only the last five digits (81122). When you create a dialing shortcut on your phone, you select “5 digit numbers” for **When I Dial** and enter “155540” in **Use This Dialing Prefix**. So when you dial your co-worker's five-digit extension (51122), your phone automatically dials the whole number: 1-555-408-1122.

## Set roaming and data usage preferences

Use roaming and data usage preferences to set options for using your phone in your home network and while roaming. For example, you can set options to prevent placing a call or making a data connection while roaming, so that you avoid extra charges.

- 1 **Open Phone** .

- 2 Open the [application menu](#) and tap **Preferences**.
- 3 Under **Network**, set any of the following:

**Voice Network:** Tap **Verizon Only** to allow phone calls only when you are on the Verizon Wireless network, or tap **Automatic** to allow roaming on other networks.

---

**NOTE** On some phones, the Voice Network list might display several Automatic options: **Automatic-1**, **Automatic-2**, and so on. If you see these options, contact Verizon Wireless to find out which option to select.

---

**Data Roaming:** Set whether to allow web browsing, email, multimedia messaging, and instant messaging when you are roaming. This option appears only if you have set Voice Network to Automatic.

**Data Usage:** Set whether to turn data services—web browsing, email, multimedia messaging, and instant messaging—on or off.

## Enable TTY/TDD


A TTY (also known as TDD or text telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. Your phone is compatible with select TTY devices.

You can connect a TTY/TDD machine to your phone using the headset jack. Check with the manufacturer of your TTY device for connectivity information. Be sure that the TTY device supports digital wireless transmission.

---


**NOTE** When TTY is enabled, you cannot use the headset jack for anything else, and all audio modes are disabled on your phone, including holding the phone up to your ear and listening.

---

- 1 Connect a TTY/TDD device to your phone using the headset jack.
- 2 [Open Phone](#) .
- 3 Open the [application menu](#) and tap **Preferences**.
- 4 In **TTY/TDD**, tap **Off** to switch TTY/TDD from Off to On.


## Enable HAC

To use your phone with a hearing aid, turn on the HAC feature. This feature ensures that your phone can make the necessary connection with a hearing aid.

- 1 [Open Phone](#) .
- 2 Open the [application menu](#) and tap **Preferences**.
- 3 In **HAC**, tap **Off** to switch HAC from Off to On.

## Reset the voicemail count

Occasionally you may continue to receive notifications of new voicemail messages even after you have listened to or deleted all your messages. If this happens, use the Reset Voicemail Count preference to stop the notifications.

- 1 [Open Phone](#) .
- 2 Open the [application menu](#) and tap **Preferences**.
- 3 Tap **Reset Voicemail Count**.





## Email and other messages

Enjoy the ease and speed of keeping in touch with friends, family, and colleagues by email anywhere you can access Verizon Wireless's data network or a Wi-Fi network. You can send and receive attachments as well.

And keep the Messaging app in mind for times when you need to send a short text, multimedia, or instant message to a mobile phone number—especially handy when you're in a meeting that's running late.

### In this chapter

- 64 Email
- 74 Messaging

# Email

## How do I send and receive email on my phone?

Use the Email application on your phone to access the many email accounts you have: company (like Exchange), ISP (like EarthLink or Comcast), and web-based (like Gmail).


The Palm® Synergy™ feature makes it easy to synchronize all data from an online account. By setting up synchronization in one app, synchronization of the other apps is automatically set up for you. For example, if you set up your Google contacts account in Contacts before you set up Gmail, when you first open Email, you find that your Gmail messages are already downloaded. And when you first open Calendar, you find that your Google calendar events are already in your phone's Calendar app.

For email accounts that do not make use of the Synergy feature, you need to enter the settings for that account—such as username and password—directly in the Email application (see [Set up email](#)).

You can also use your phone's web browser to view your web-based email—just go to the email provider's website.

## Merged inboxes in Email

You can set up multiple email accounts on your phone. When you open Email, you see all your accounts in a single view: Account List view. From there, you can open the inbox of an individual account—or, thanks to the Palm® Synergy™ feature, you can see all messages from all your inboxes displayed in a single merged view called All inboxes.

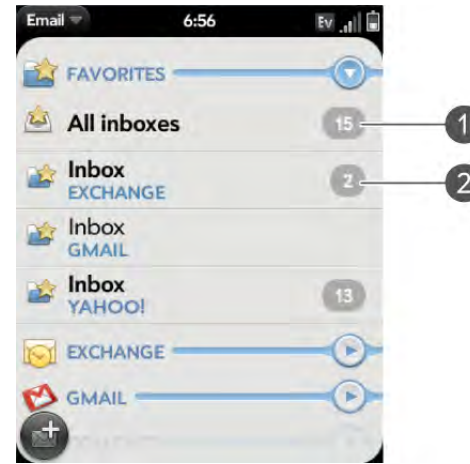

- 1 The number to the right of All inboxes indicates the total number of unread email messages in all your email accounts.
- 2 The number to the right of an individual folder name indicates the number of unread messages in that folder.

If you reply to a message when you're working in All inboxes, the message is sent from the same account in which it was received.

If you create a new message when you're working in All inboxes, the message goes out using the account you set as the default account (see [Set email preferences](#)).

## Set up email

Follow this procedure if you have a common email provider, for example, AOL, EarthLink, or Yahoo! If you are setting up the Email application to work with your corporate email account that uses Microsoft Exchange ActiveSync, see [Set up email: Microsoft Exchange ActiveSync \(EAS\)](#).

If the email account you set up takes advantage of the Synergy feature, then setting up email also synchronizes the provider's calendar and contacts.

- 1 [Open Email](#)



- 2 The first time you open Email, do one of the following:



- If this is the first email account you are setting up: The email address you used for your Palm profile is entered by default. Use that address, or enter an address for one of your other email accounts. Enter your password for the account, tap **Sign In**, and tap **Done**.
  - If you have already set up an account that takes advantage of the Synergy feature and want to set up another one: Tap **Add An Account** and enter the email address and password. Tap **Sign In**.
- 3 Any other time you open Email, open the [application menu](#), tap **Preferences & Accounts**, and tap **Add An Account**. Enter the email address and password and tap **Sign In**.

---

**NOTE** If automatic setup fails for your email account, an error message appears. Tap **OK**, tap **Manual Setup**, gather the settings info you need, and enter the account settings (see [Set up email when automatic setup fails](#)).

---

## Set up email: Microsoft Exchange ActiveSync (EAS)

Follow this procedure to get email from an Exchange account.

**BEFORE YOU BEGIN** Get this info from your email provider or system administrator:

- Mail server name or IP address for receiving mail
- Server domain name
- Your username and password

---

**NOTE** If your corporate Exchange system utilizes policies such as remote wipe and password enforcement (including minimum password length, allowed number of failed password attempts, and other parameters), those policies are supported in your Exchange account on your phone. Check with your system administrator for details.

---

- 1 [Open Email](#) .
- 2 The first time you open Email, do one of the following:




- If this is the first email account you are setting up: The email address you used for your Palm profile is entered by default. Use that address, or enter an address for one of your other email accounts. Enter your password for the account.
- If you have already set up an account that takes advantage of the Synergy feature and want to set up another one: Tap **Add An Account**. Enter your username and password.

- 3 Any other time you open Email, open the [application menu](#), tap **Preferences & Accounts**, and tap **Add An Account**. Enter your username and password.
- 4 Open the [application menu](#) and tap **Manual Setup**.
- 5 Tap the **Mail Type** field and tap **Exchange (EAS)**.
- 6 Enter info for the incoming and outgoing mail server as needed, based on the info you learned. You can enter either the server name or IP address in the **Incoming Mail Server** field.
- 7 Tap **Sign In**.

### Set up email when automatic setup fails

Follow these steps if automatic setup (see [Set up email](#)) does not work for your email account.

**BEFORE YOU BEGIN** Get this info from your email provider or system administrator:

- Account type (POP or IMAP)
  - Incoming and outgoing mail server names
  - Incoming mail server username and password
  - Incoming and outgoing server port numbers
  - Any SSL requirements for incoming and/or outgoing mail
  - Any authentication (ESMTP) requirements for outgoing mail
  - Root folder (IMAP accounts only)
- 1 If you have already started account setup and an “Unable To Sign In” message appears, tap **OK**, tap **Manual Setup**, and skip to step 7. Otherwise, start at step 2.
  - 2 [Open Email](#) .

- 3 The first time you open Email, do one of the following:




- If this is the first email account you are setting up: The email address you used for your Palm profile is entered by default. Use that address, or enter an address for one of your other email accounts. Enter your password for the account.
- If you already set up an account that takes advantage of the Synergy feature and want to set up another one: Tap **Add An Account**. Enter your username and password.

- 4 Any other time you open Email, open the [application menu](#), tap **Preferences & Accounts**, and tap **Add An Account**. Enter your username and password.
- 5 Open the [application menu](#) and tap **Manual Setup**.
- 6 Tap the **Mail Type** field and tap your account type.
- 7 Enter info for the incoming and outgoing mail server as needed, based on the info you learned.
- 8 Tap **Sign In**.

## Enter advanced account settings

These settings apply only to the account you select in step 3.

- 1 [Open Email](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Set any of the following:



**Account Name:** Enter the name that appears in the account list.

**Full Name:** Enter the name you want to appear in the From field for messages you send.

**Show Icon:** Set whether a notification icon appears onscreen when a new message arrives.

**Play Sound:** Set whether a sound plays when a new message arrives.

**Vibrate:** Set whether your phone vibrates when a new message arrives.

**Signature:** Tap to create a signature that's added to outgoing messages (see [Add a signature to outgoing messages](#) for more information).

**Reply-to Address:** Enter the address you want recipients to see and reply to on your outgoing messages, if this is different from your actual email address.

**Sync deleted emails (POP accounts only):** Set whether messages should be deleted on the server when you delete them on your phone.

**Show Email:** Set how many days' worth of messages to retrieve from the server.

**Get Email:** Set how frequently to synchronize email for this account.


**Default Folders (IMAP accounts only):** Specify the folder where messages you send, save as drafts, or delete are stored.

**Remove Account:** See [Delete an email account](#).

**Change Login Settings:** See [Change account login settings](#).


## Change account login settings

When you change your password for an online email account, remember to make the change in the account settings on your phone also.



- 1 [Open Email](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Tap **Change Login Settings** and tap the relevant fields to change the account information.


## Delete an email account




When you delete an email account from your phone, it removes the account information from your phone only. It does not affect your account with the email provider.

- 1 Open **Email** .
- 2 Open the **application menu** and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Tap **Remove Account**, and then tap **Remove Email Account**.


## Create and send an email message

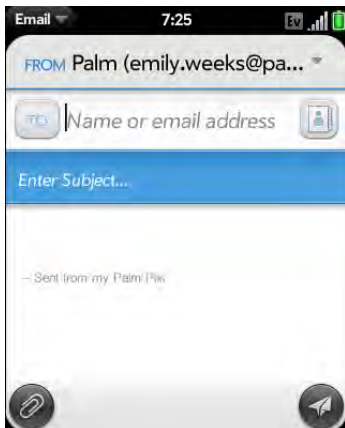- 1 Open **Email** .
- 2 If this is the first time you have opened the Email application, and you have set up at least one email account, tap **Done**. If you have not set up an email account, see [Set up email](#).
- 3 Tap .



- 4 (Optional) Tap **From** to change the email account you are using to send the message. This option appears only if you have more than one email account set up on your phone.
  - 5 In the **To** field, do one of the following to address the message:
    - Enter a contact name, initials, or email address. Tap the email address when it appears.
    - Tap  to open the full contact list. Tap the contact you want, or enter a name or address to narrow the list.
    - Enter the full email address for a recipient who is not a contact.
  - 6 (Optional) Tap **To** to open the Cc and Bcc fields, and enter an address.
  - 7 (Optional) Repeat steps 5 and 6 to enter additional addresses.
  - 8 Enter the subject, press **Enter** , and enter the body text.
  - 9 (Optional) To format body text, do one of the following:
    - To enter bold, italic, or underlined text: Open the **application menu** and tap **Edit** > **[the option you want]**. Enter the text. To turn off the formatting, open the **application menu** and tap **Edit** > **[the option you want to turn off]**.
    - To enter colored text: Open the **application menu** and tap **Edit** > scroll down > **Text Color**. Tap the color and enter the text.
- 
- TIP** To format text you already entered, select the text, open the **application menu**, and tap **Edit** > **[the option you want]**. To turn off a formatting option, open the **application menu** and tap **Edit** > **[the option you want to turn off]**. For text color, tap the black square.
- 
- 10 (Optional) To set the priority for the message, open the **application menu** and tap **Set As Normal Priority** or **Set As High Priority**.
  - 11 Tap .

## Add attachments to a message

- 1 While composing a message, tap .
- 2 To locate a file, do the following:
  - Tap an icon at the bottom of the screen to search for pictures, videos, music files, or documents.
  - Begin typing the file name.

---

**TIP** To take a new picture to send as an attachment, tap the photo icon at the bottom of the screen and tap **New Photo**.

---

- 3 Tap the file name.
- 4 Repeat steps 1–3 to attach other files.



## Save a message as a draft

- While composing a message, open the [application menu](#) and tap **Save As Draft**.

## Receive and read email messages

The Email application synchronizes messages anytime you open a mail folder. It also synchronizes messages on an automatic schedule—the default interval is every 30 minutes (see [Enter advanced account settings](#) for information on changing the interval).

Follow these steps to manually retrieve messages.

- 1 **Open Email** .
- 2 If the folders for the account you want are hidden, tap  to display the folders.


- 3 Tap the folder you want to check messages for. If synchronization doesn't start, tap .



---

**TIP** How can you tell if sync is happening? Look for the animated circular movement around the number of messages in the upper-right corner of the screen.

---

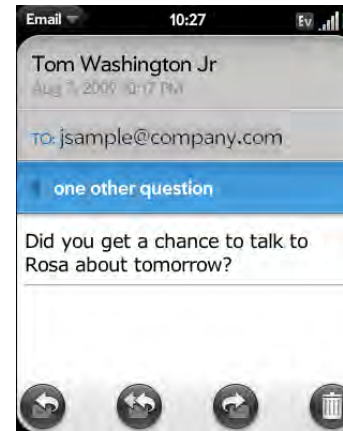- 4 Tap a message to open it.




- 5 Tap  or  in the subject line to view the next newer or older message.
- 6 To view messages for another account, make the back gesture (see [Go up one level in an app \(back gesture\)](#)) to return to the account list, and tap the account name.

## Save or share an inline image

If a message contains an inline image—an image inserted right into the body text—you can share the image with someone else via email. If you choose this option, a new blank email message opens with the image file as an attachment.


If the image is in JPG, BMP, or PNG format, you can also save it to and view it in the Photos app.

- 1 With the message open, press and hold **Option**  and tap the image.
- 2 Tap **Copy To Photos** (if available) or **Share**.

## Open attachments

You can receive any kind of file sent to you, but you can only open an attachment if your phone has an application that can open the file type.

- To open a single attachment: Tap the name to open the attachment. For large attachments, tap the name to fully download the attachment, and tap the name again to open the attachment.
- To open multiple attachments: Tap the list of attachment names to view the attachments, and tap an attachment name to open the file.

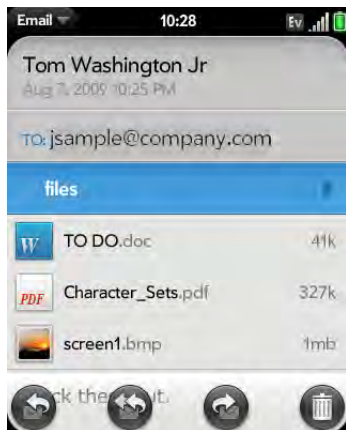

## Save attachments

When you open attachments of certain file types, you can save them to your phone so you can view them later in one of your phone's applications.

- 1 Open the attachment (see [Open attachments](#)).
- 2 Do one of the following:
  - For pictures in JPG, BMP or PNG format: Tap **Copy To Photos**.
  - For other file types: Open the [application menu](#) and tap **Save As**. If the Save As menu item is not available, you cannot save the attachment.
  - To save an attached image that appears in the body of an email to your phone: Tap the image. If the image is in JPG BMP, or PNG format, you can view it in Photos.

## Add a contact from an email message

You can add a contact name or email address to your Contacts list directly from the To, Cc, or Bcc field of an incoming email message. You can either create a new contact or add the information to an existing contact.

- 1 In a message you received, tap the name or email address.
- 2 Tap **Add To Contacts**.
- 3 Tap one of the following:

**Add New Contact:** Create a new contact for the name or address.

**Add To Existing:** Tap the contact you want to add the name or address to.

## View a contact from an email message




- In a message you received from someone listed in the Contacts app, tap the name to open the contact entry.

## Search for an email message



You can search for messages in any email folder. Incoming messages must be fully downloaded to your phone to show up in search results.

- In the folder containing the message, type a few characters of a name or email address in the From, To, or Cc line, or a few characters of the subject. Matching results appear as you type. Keep entering characters to narrow the list.

## Reply to a message

- 1 Open a message.
- 2 Do one of the following:
  - Reply to just the sender: Tap .
  - Reply to the sender and all other addressees: Tap .
- 3 Enter the reply message text and tap .

## Forward a message

- 1 Open a message and tap .
- 2 Address the forwarded message (see [Create and send an email message](#)).
- 3 Enter the forwarded message text and tap .

## Copy messages

- 1 Open a message.
- 2 Do one of the following:
  - To copy the entire contents of the message, including the sender, date, recipient, subject, and body text: Open the [application menu](#), tap **Edit**, and tap **Copy All**.
  - To copy the body text only: Open the [application menu](#), tap **Edit**, and tap **Select All**. Then open the [application menu](#), tap **Edit**, and tap **Copy**.

## Move a message to another folder

- 1 Open a message.
- 2 Open the [application menu](#) and tap **Move To Folder**.
- 3 Tap the folder you want.

## Mark a message as read or unread

- 1 Open a message.
- 2 Open the [application menu](#) and tap **Mark As Read/Unread**.

## Flag or unflag a message

- 1 Open a message.
- 2 Open the [application menu](#) and tap **Set Flag** or **Remove Flag**.

## Show or hide message header details

- 1 Open a message.
- 2 Tap a recipient name to show details. Tap again to hide details.

## Delete a message

Deleting a message moves it to your deleted items folder, so it's still on your phone. Depending on your email account, this folder is called Deleted Items, Deleted, Trash, or something else.

If you accidentally delete a message, you can move it back to the original folder (see [Move a message to another folder](#)). To remove a message from your phone permanently, delete it from the deleted items folder.

---

**TIP** If you change the folder where you store deleted messages for an IMAP account (see [Enter advanced account settings](#)), deleting messages from this folder removes them from your phone.


---

Do one of the following:

- In the message list: Throw the message off the side of the screen.
- In an open message: Tap .



## Add a signature to outgoing messages

A signature includes information you want to add to the closing of all your outgoing messages—for example, your name, address, and phone numbers; your website; or a personal motto. You can use a different signature for each email account.


- 1 [Open Email](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account you want.
- 4 Tap the **Signature** field and enter the signature text. To format the text with bold, italics, or color, select the text (see [Text selection gestures](#)), open the [application menu](#), and tap **Edit** > **[the option you want]**.



## View mail folders




- 1 [Open Email](#) .
- 2 Do any of the following:
  - View all folders for an account: Tap .
  - Open a folder: Tap the folder name.
  - View folder information such as last sync and number of messages: Open the folder, and then tap the folder header.

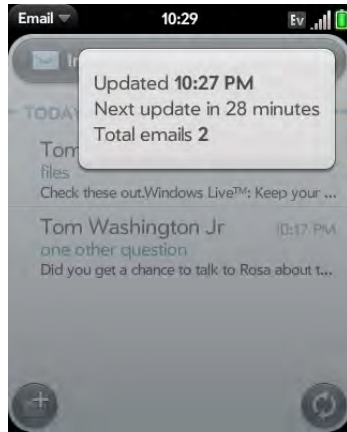




### Add a folder as a favorite

Favorites appear at the top of Account List view.

- 1 [Open Email](#) .
- 2 If the folder you want is not displayed, tap  to the right of the email account name to display the folder.
- 3 Tap  to the right of the folder name.

To remove a folder as a favorite, repeats steps 1 and 2 and tap  to the right of the folder name.

### Set email preferences

- 1 [Open Email](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.

- 3 Set any of the following:




**Smart Folders:** Set whether to include All Inboxes and/or All Flagged messages as favorites at the top of Account List view.

**Accounts:** Tap an account name to enter advanced settings (see [Enter advanced account settings](#)).

**Default Account:** Tap the account shown to set another account as the default. The default account is used to send a message when you create a new message in Account List view or in a merged folder such as All Inboxes or All Flagged. If you have only one email account on your phone, the Default Account preference is not displayed.

**Add An Account:** See [Set up email](#).

### Reorder accounts

- 1 [Open Email](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap and hold the account name, wait for the visual cue, and then drag the account up or down. This changes the order of the accounts in Account List view.

## Reply to meeting invitations

You can receive meeting invitations on your phone in the same way that you receive email messages. You cannot create meeting invitations on your phone.

- Tap whether to accept, tentatively accept, or decline an invitation.

Here are the key features of meeting invitations:

- Meeting invitations appear on your phone in the Email application, not in the Calendar application.
- From within the Email application, you can accept, decline, or tentatively accept a meeting invitation.
- If you accept or tentatively accept an invitation, it appears as an event in Calendar.
- You can reply to and forward meeting invitations in the same way as email messages.

---

**TIP** If you receive an updated meeting invitation, you can again choose to accept, decline, or tentatively accept. If you receive a meeting cancellation, open the message and tap **Remove From Calendar** to delete the meeting from your calendar.

---

## Send email messages from within another application

Look in the application menu to see if an application supports sending an item as an attachment to an email message. This menu item is available in the Contacts, Photos, Doc View, PDF View, and Memos applications, among others. Depending on the app, the menu item might be named **Share**, **Send**, or **Email**. For details, look in this guide for the section that documents the specific application.

## Messaging

### What kinds of messages can I send and receive?

You can use the Messaging application to send and receive the following types of messages:



- Text and multimedia messages (see [Create and send a text or multimedia message](#))
- Instant messages for an IM account you already have set up online (see [Set up an instant messaging \(IM\) account](#))

The Synergy feature enables the Messaging app to gather all your text, multimedia, and instant messages to and from the same contact or phone number into a single conversation (sometimes called a thread). So you can see your entire message history with a person regardless of the different methods you happened to use to communicate with that person (see [Work with conversations](#)). You can even switch from account to account without losing the thread of your conversation (see [Switch between messaging accounts in a conversation](#))—just pick the messaging account that's most likely to keep you in unbroken contact with the person you're talking to.

### Work with conversations

When you exchange more than one message with a person, the messages are grouped into a conversation. A single conversation can contain text, multimedia, and IM messages. When you start or continue a conversation, the upper part of the conversation screen displays all messages you've exchanged with this person, and the bottom part provides the area where you type your next message.

You can carry on multiple conversations at the same time.

- 1 [Open Messaging](#) .
- 2 Do one of the following:
  - Start a new conversation: Create a message (see [Create and send a text or multimedia message](#) or [Send and receive IM messages](#)), or tap a message and reply to it.
  - Continue an existing conversation: Tap the conversation.
- 3 Enter your message.
- 4 Tap .

---

**TIP** You can copy the contents of a conversation as plain text, which you can paste in a memo, email message, and so on (see [Copy messages](#)).


---

## Switch between messaging accounts in a conversation

In a single conversation, you can switch between text/multimedia messaging and an IM account. So if you are having an IM chat with someone and he or she goes offline, you can send the person a text message to wrap up the conversation. You can also switch between different phone numbers for sending a text message to a person.

- 1 In Messaging, start a new conversation or open one that's listed in Conversations view.

- 2 Tap **Text** or an IM account name in the upper-right corner of the screen. If available, the other ways to communicate with this contact appear in a list. Tap the account or phone number you want to use.

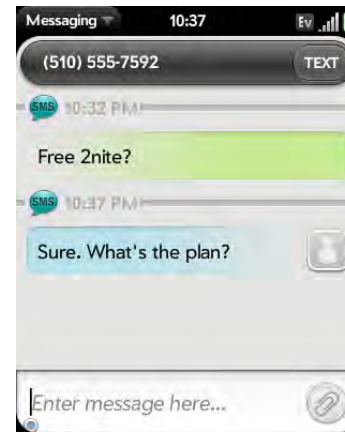

## Switch between Conversations view and Buddies view

Conversations view lists all of your Messaging conversations. Buddies view lists all of your IM buddies.

- 1 [Open Messaging](#) .

- For Conversations view, tap **Conversations**. For Buddies view, tap **Buddies**.



- In Buddies view, tap  to expand a buddy list. Tap a buddy name to contact that person.

**TIP** You can set a preference to show all your buddies, whether they are online or offline, or to hide offline buddies. In Buddies view, open the [application menu](#) and tap **Show/Hide Offline Buddies**.


## Create and send a text or multimedia message

Each text message can have up to 160 characters. If you send a text message to an email address, the email address is deducted from the 160-character count.



Multimedia messages consist of both text and pictures. You can include pictures in JPG format.

**DID YOU KNOW?** You can send and receive text messages even while you are on a phone call. This is easiest when using a hands-free headset or the speaker.


**BEFORE YOU BEGIN** Make sure that your phone is on and that you're inside a coverage area (see [Turn wireless services on](#)).

- Open **Messaging** .
- The first time you open Messaging, tap **Done** to send a text or multimedia message. Thereafter, skip to step 3.

**TIP** If you want to set up an instant messaging (IM) account the first time you open Messaging, tap **Add An Account** and see [Set up an instant messaging \(IM\) account](#) for instructions.

- Tap . The cursor is in the To field. Do one of the following to address the message:
  - Enter a contact's first or last name or initials, screen name, phone number, or email address. Tap the phone number, IM, or email address you want to use to send the message when it appears.
  - Tap  to open your full contact list. Tap the contact you want or enter a name or address to narrow the list.
  - Enter a phone number for a recipient who is not a contact.


**TIP** Do you need to enter a short code that contains letters? Use the keyboard to enter it; just press the letter keys. For example, if the code is "win01," press **W** to enter w, **I** to enter i, and so on. No need to figure out the numbers that correspond to the letters.

- Tap the **To** field and repeat step 3 to enter additional recipients.
- Do one of the following to attach a picture to a multimedia message:
  - Before entering the message text: Tap . Tap the album containing the picture you want. Tap the picture, or tap **New Photo** and take the picture. Tap **Attach Photo**.
  - After entering the message text: Open the [application menu](#) and tap **Add Picture**. Tap the album containing the picture you want and tap the picture, or tap **New Photo** and take the picture. Tap **Attach Photo**.

6 Enter the message text and tap .

**TIP** You can include emoticons in your message (see [Use emoticons in a message](#)).

**TIP** You can also send a contact entry as part of a multimedia message. Do this in the Contacts app (see [Send Contacts](#)).

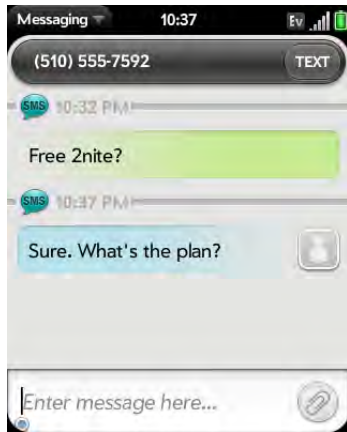

## Use emoticons in a message

To include an emoticon in a text, multimedia, or IM message, type in a keyboard character combination for that emoticon. Most emoticons can be created by more than one combination. After you send the message, the emoticon image appears in the conversation on your phone and on the recipient's phone, as long as the receiving IM application supports the image.

This table shows the emoticons that are supported on your phone.

**NOTE** Emoticon combinations that use words, such as :cool or :cry, are not supported in most chat applications. Emoticons created using these combinations may not appear correctly on the recipient's phone.

Table 1. Supported emoticons























To display this emoticon...	Enter any of these keyboard character combinations...
	>:o >:-o >:O >:-O >:( >:-( :angry :mad
	o_O :confused
	8) 8-) B) B-) :cool
	:'( ='( :cry
	:[ :-[ =[ =-[ :redface
	:S :-S :s :-s %-( %( X-( X( :eww :gross
	:! :-! :eek
	:( :-(- =( =(- :sad
	:O :-O :o :-o =O =-O =o =-o :surprised :shock :omg
	^^ ^_^ ^-^ :grin :biggrin
	<3 :heart
	O:) O:-) o:) o:-) :innocent :angel
	:-* :* =* =-* :kiss
	:-D :D =D =-D :laugh :lol
	>:-) >:) >:-> >:> :evil :twisted
	:  :-  :neutral :meh
	:-& :& =& =-& :-@ :@ =@ =-@ :sick
	:) :-) =) =-) :smile

Table 1. Supported emoticons

To display this emoticon...	Enter any of these keyboard character combinations...
	:/ :-/ :\ :-\ =/ =-/ =\ =-\ :doh
	;) ;-) :wink
	:P :-P :p :-p :b :-b =p =P =b =-b =-p =-P :yuck :razz

## Receive and view text and multimedia messages

You can view pictures and videos and listen to music files included in a multimedia message. You can save pictures in JPG format to your phone for viewing in the Photos application.

- 1 [Open Messaging](#) .
- 2 Tap a conversation to view messages.
- 3 If **Download MMS** is displayed, tap it to view the attached file. (See [Turn automatic download of multimedia messages on or off.](#))
- 4 In a multimedia message, tap a music, video, or vCard file name to view the attached file. (Attached pictures are displayed within the message.) To save an attached JPG picture, tap the photo, tap **View**, and then tap **Copy Photo**.

## Add a contact from a message


- 1 In Conversations view, tap a conversation with someone who is not a contact.
- 2 Tap the header at the top of the screen.
- 3 Tap **Add To Contacts**.

- 4 Tap one of the following:

**Add New Contact:** Create a new contact for the name or address.


**Add To Existing:** Tap the contact you want to add the name or address to.

## Forward a message

- 1 In a conversation, tap a message and tap **Forward**.
- 2 Enter the recipient's number, screen name, or email address in the **To** field.
- 3 (Optional) Tap the message text, and edit the text.
- 4 Tap .

## Copy messages

You can copy an individual message as plain text. You can also copy the contents of an entire conversation.

- 1 [Open Messaging](#) .
- 2 Tap a conversation.
- 3 Do one of the following:
  - To copy the entire conversation: Open the [application menu](#), tap **Edit**, and tap **Copy All**.
  - To copy a single message: Tap the message and tap **Copy Text**.

## View a contact's information from a message

- In a conversation, tap the header of a message received from a contact to open the contact entry.

## Dial a number from a message

- Tap a phone number.

## Delete a message

- 1 In a conversation, throw the message off the side of the screen.
- 2 Tap **Delete** to confirm.

## Delete a conversation

- 1 In Conversations view, throw the conversation off the side of the screen.
- 2 Tap **Delete** to confirm.

## Turn automatic download of multimedia messages on or off


By default, multimedia messages are downloaded automatically. You can change the option so that you can decide whether to download a multimedia message.

- 1 [Open Messaging](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 In **Auto-Download MMS**, tap **On** or **Off**.

## Set up an instant messaging (IM) account

To use an IM account on your phone, such as a GoogleTalk IM account, you must already have the account online. If you have an IM account with a provider that takes advantage of the Synergy feature, that IM account is automatically added to your phone when you enter your username and password for that provider in Email, Calendar, or Contacts.

- 1 [Open Messaging](#) .
- 2 Do one of the following:
  - The first time you open Messaging: Tap **Add An Account**.
  - Any other time: Open the [application menu](#) and tap **Preferences & Accounts**. Tap **Add IM Account**.
- 3 Tap the account type and enter your username and password.

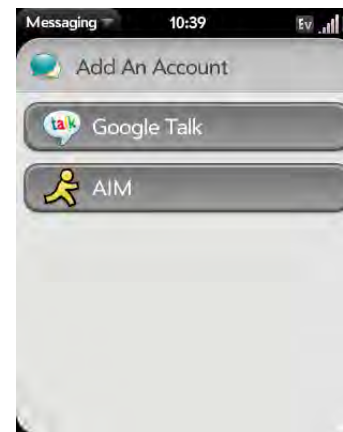

- 4 Tap **Sign In**.

## Sign in to an IM account


- 1 [Open Messaging](#) .

- 2 Tap **Buddies**.





- 3 Tap  to the left of the text **Offline** and tap **Available**.

## Sign out of an IM account


- 1 Open **Messaging** .
- 2 Tap **Buddies**.
- 3 Tap the status icon to the left of your online status (**Available** or **Busy**) and tap **Sign off**.

## Send and receive IM messages

**BEFORE YOU BEGIN** Make sure that your phone is on and that you're inside a coverage area (see [Turn wireless services on](#)).

- 1 Open **Messaging** .
- 2 Do one of the following to start or continue a conversation:
  - In Conversations or Buddies view: Tap  to start a new conversation.

- In Conversations view: Tap an existing conversation and enter a new message.
- In Buddies view: Tap a buddy name and enter a new message.

- 3 Tap **Text** or an IM account name in the upper-right corner of the screen, and tap the IM account you want to use.
- 4 Enter the message text and tap .



---

**TIP** You can include emoticons in your message (see [Use emoticons in a message](#)).

---

- 5 When the message recipient replies, the reply appears below your message in the conversation. Repeat step 4 to send another message.

## Change your online status

- 1 Open **Messaging** .
- 2 Tap **Buddies**.
- 3 Tap the status icon to the left of the status description, and tap your new status.
- 4 Tap  to confirm your status.

## Change your custom message

Your custom message is seen by your IM buddies. It appears next to your IM screen name and status. It can contain any text you want.

- 1 Open **Messaging** .
- 2 Tap **Buddies**.



- 3 Do one of the following:
  - If you already have a custom message: Tap the current message and enter the new message text.
  - If you're creating a custom message for the first time: Tap the status text (**Available**, **Busy**, and so on) and enter the custom message text.

## Change your IM account username and password

If you change the username or password for your IM account online, you need to enter the updated information for the account on your phone.

- 1 [Open Messaging](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Enter the new information and tap **Sign In**.

## Delete an IM account

- 1 [Open Messaging](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Tap **Remove Account**, and tap **Remove Account** again to confirm.

## Turn messaging notifications on or off

You can set your phone to show a notification and/or play a sound when a new message arrives. These settings apply to all your Messaging accounts.

- 1 [Open Messaging](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Turn either of the following new message notifications on or off:



**Show Notifications:** Set whether a notification appears when you receive a new message.

**Sound:** If Show Notifications is on, set whether an alert sound plays when you receive a new message. Tap **System Alert**, **Ringtone**, or **Mute**. If you select **Ringtone**, tap the name of the ringtone to select it. See [Sounds & Ringtones](#) for information on selecting a ringtone.

The ringer switch must be set to **On** for you to hear the sound.





## Personal information

Your Palm® Pixi™ Plus phone is all you need to organize your personal information and keep it with you wherever you go.

All your personal information is backed up and kept private either in your Palm profile or in one of your online accounts.

### In this chapter

84	Contacts
93	Calendar
100	Tasks
104	Memos
105	Clock
107	Calculator
107	Facebook

# Contacts

## How do I add names and other info into Contacts?

You have a few options for getting contact info into to show up in your Contacts.

**Connect to an online address book.** If you have an address book in an online account that works with the Palm® Synergy™ feature (for example, Google or Microsoft Exchange ActiveSync), you can set up Contacts on your phone to synchronize and display contacts that you store in the online address book. Set up synchronization the first time you open Contacts (see [Use Contacts for the first time](#)), or anytime after that (see [Customize Contacts](#)). After you set up the connection to the online address book, contacts you enter online show up automatically in Contacts, and contacts you enter on your phone sync to the online account, provided the account allows writing from the phone to the online account.

The Synergy feature makes it easy to synchronize other data from an online account. By setting up synchronization in one app, synchronization of the other apps is automatically set up for you. For example, if you set up your Gmail account in Email before you set up Contacts, when you first open Contacts, you find that your Google contacts are already downloaded. And when you first open Calendar, you find that your Google calendar events are already in your phone's Calendar.

---

**NOTE** See the online accounts table at the back of the user's guide for the current list of online accounts that you can set up on your phone, from which you can access contacts.

---

**Transfer contacts using the Data Transfer Assistant:** When you transfer contacts from desktop software, you select which account to assign those contacts to. Look for those contacts in the account you select (see [How do I get data off my computer?](#)).

**Enter a contact directly in Contacts:** See [Create a contact](#) for instructions. You can assign the contact to one of your online address books—if you do, it

synchronizes with the online address book. Or you can create the contact in your Palm profile account, which means it shows up on your phone only. Palm profile contacts are included in the daily backup of your Palm profile information, so you can restore them if they are accidentally erased.

**Download vCard info to Contacts:** A vCard is an electronic business card attached to an email or an MMS. If you receive an email or an MMS with a vCard attachment, download the attachment to Contacts. See [Receive vCards](#).

## Linked contacts


The Synergy feature automatically links contacts from different accounts if it finds data in common between them. For example, if you have a contact in Exchange and in Google for Thomas Flagg, your phone links the contacts so that all of Thomas's info shows up on a single contact screen. You need to open just one view to see all of Thomas's info. The actual data remains stored separately with your different providers; it's just assembled in one view on your phone for your convenience.

How can you tell if a contact is linked? Look in the upper-right corner of the contact screen. If you see a stack of photos and a number, that means that you're looking at a linked contact, with combined info from contacts you're storing with separate providers.



- 1 Tap the stack of photos to see the contacts that are linked.
- 2 Thomas is a contact in your Google online account and in your Palm profile account.




- 3 Scroll down to see Thomas's combined contact info.
  - Tap the appropriate field to call or send an email or instant message to that contact. For example, tap a phone number to call the contact.
  - Tap  to send a text message.
  - Tap an address field to view the address on a map.

You can unlink automatically linked contacts, and you can manually link contacts yourself (see [Link a contact](#) or [Unlink a contact](#)).

## Use Contacts for the first time

- 1 **Open Contacts** .

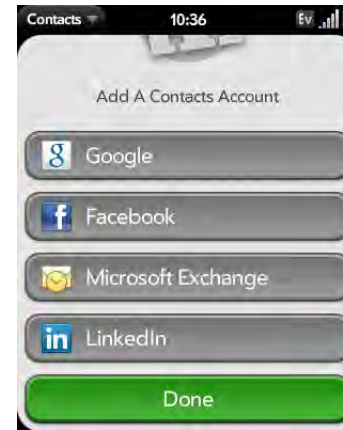

- 2 Do one of the following:
  - **To set up your first online account to sync:** Tap the account type, enter the account information, and tap **Sign in**.
  - **To set up a second online account to sync:** Tap **Add An Account**, tap the account type, enter the account information, and tap **Sign In**.
  - **To open Contacts without creating an online account:** Tap **Done**. This opens your Palm profile account, and you can start creating contacts in this account.

---



**NOTE** If you add your Facebook or LinkedIn account to Contacts, your friends' Facebook and LinkedIn email addresses show up in Contacts. You cannot change Facebook or LinkedIn info from Contacts on your phone. You also cannot add friends to your Facebook or LinkedIn account from Contacts. To work directly with Facebook or LinkedIn, go to [facebook.com](http://facebook.com) or [linkedin.com](http://linkedin.com) in the Web application (see [Web](#)). To update your status and see your Facebook news feed, use the Facebook application developed for your phone (see [Facebook](#)).

---

## Create a contact

When you add a contact, if you don't specify the account, the new contact is added to your default account.

If you are using Contacts for the first time, you go through a few different steps to add or access the contacts on your phone (see [Use Contacts for the first time](#)). Follow this procedure to add contacts directly on your phone after the first time you use Contacts.

- 1 **Open Contacts** .
- 2 Tap .

---

**NOTE** If an account doesn't appear in the list, you can't add data to that account from your phone.

---

- 3 (Optional) Tap the account icon to the right of **Name** to change the account to which the new contact will be added.



\* Account icon, showing Palm profile account

- 4 Tap fields to enter contact details, select a ringtone for that contact, add notes, or add birthday details for the contact. Scroll to see all of the fields available for contact info.

- 5 To add detailed name information—such as a prefix, suffix, or middle name—open the [application menu](#) and tap **Name Details**.
- 6 In some fields, such as **New Phone Number**, when you enter the information a label button appears on the right. Tap the button to change the label for your entry—for example, to identify a number as a mobile or work phone.

---

**TIP** When you enter a phone number that requires pauses—for example, a number for which you need to enter a password or respond to prompts, you can insert a pause or a stop in the number. To insert a two-second pause, enter a **T** where you want the pause to appear. To insert a stop, enter a **P** where you want the stop to appear. To dial the next set of numbers after the stop, you will need to tap the screen.


**TIP** Use the Reminder field to enter that important message or question you have for this contact. The next time you send or receive a call or a message to or from the contact on your phone, you get a notification at the bottom of the screen. You can add a reminder to a contact at any time (see [Assign a reminder message to a contact](#)).


---

- 7 Tap **Done**.

## Find a contact

You can find a contact from Card view or the Launcher view. To learn how, see [Use universal search](#). To find a contact within the Contacts app, use these steps.

- 1 **Open Contacts** .
- 2 Begin typing any of the following:
  - First, middle, or last name
  - First and last initial (no space between)
  - Company
  - Nickname

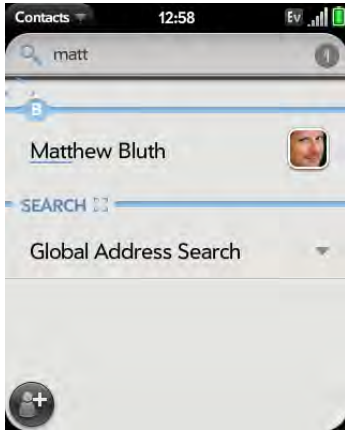

- 3 For more search options, tap **Global Address Lookup**. (This option is available if you are using Microsoft Exchange ActiveSync with a Global Address List.)
- 4 Tap the contact.

### View, edit, copy, or delete contact information

- 1 [Open Contacts](#) .
- 2 Search for a contact (see [Find a contact](#)), and tap the contact name.



- 3 To edit a contact, tap **Edit**.  
Info that's dimmed means it originates from an account that you can't edit on your phone (like Facebook).
- 4 In a linked contact, tap the account icon in the upper-right corner to edit fields specific to that account.

---

**NOTE** The fields that make up the contact header (name, photo, job title, company) are unique to each account. You must open a specific account to enter these fields.

---

- 5 Tap fields to add or change information (see [Enter information in a field](#)).

---


**NOTE** In a linked contact, when you enter info in a field for the first time, you can assign that info to any account by tapping the account button in the field.

---


- 6 To copy a contact, open the [application menu](#) and tap **Copy All**.  
The contents of the contact entry is copied as plain text, with carriage returns between each element.
- 7 To delete a piece of contact information, such as a phone number, throw the item off the side of the screen, and tap **Delete**.
- 8 Tap **Done**.

### Add a photo to a contact

The photo you add appears onscreen when this contact calls you.

- 1 While creating (see [Create a contact](#)) or editing (see [View, edit, copy, or delete contact information](#)) a contact, do one of the following:
  - To add or change the photo in the default account, tap .

- In a linked contact, to add or change the photo of another account, tap the account button in the upper-right corner and tap the other account (see [Linked contacts](#)).

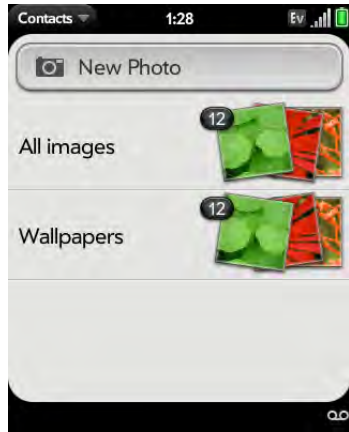

2 Do one of the following:

- To take a new photo, tap **New Photo**, take the picture, and tap Assign to Contact.
- To use an existing photo, tap the album containing the picture, tap the picture, and tap Assign to Contact.

---

**DID YOU KNOW?** If you see a stack of photos in a contact, with a number attached to the stack, that's because it's a linked contact (see [Linked contacts](#)).

---



3 (Optional) Do either or both of the following:

- To enlarge a face or other portion of the picture, zoom in by making the pinch-out gesture.
- To capture the portion of the picture you want, tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the contact photo.

4 Tap **Attach Photo**.

## Add a ringtone to a contact

Select the ringtone you want to hear when this contact calls you.

- 1 While creating (see [Create a contact](#)) or editing (see [View, edit, copy, or delete contact information](#)) a contact, tap **Set a ringtone**.
- 2 Tap the ringtone name.
- 3 Tap  to preview the ringtone.
- 4 To use a music file as a ringtone, tap  and tap the file name.
- 5 Tap **Done**.

---

**TIP** To change the ringtone for a contact, while creating or editing a contact, tap the ringtone and tap **Change Ringtone**. **Delete Ringtone** deletes the ringtone from the contact, not from the list of available ringtones.

---


## Assign a speed dial to a contact

You can assign a speed dial to any contact phone number. You can assign up to 26 speed dials.

---


**NOTE** You cannot assign 1 (the E key) as a speed dial. The number 1 is reserved for dialing your voicemail system.

---

- 1 **Open Contacts** .
- 2 Search for a contact (see [Find a contact](#) to learn how), and tap the contact name.



- 3 Open the [application menu](#) and tap **Set Speed Dial**.

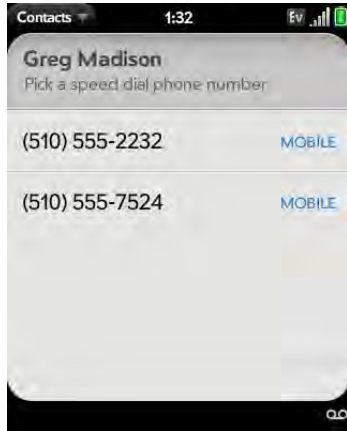

- 4 Tap the phone number you want to assign a speed dial to, and then tap the key to use as a speed dial. You may have to scroll to find the key you want.

---


**TIP** To assign a currently used speed dial key to a new number, follow the steps for setting a new speed dial for the new number. Tap the key to use in step 4, and tap **Reassign To [Name]**.

**TIP** To remove a speed dial from a number, open the contact, open the [application menu](#), and tap **Set Speed Dial**. Tap the number and tap **Remove Speed Dial [key letter]**.

---

## Assign a reminder message to a contact

If you have an important message or a question for a contact, you can enter a reminder right on your phone. The next time you and the contact are in touch—whether by phone call, email, or text message/IM—a notification appears showing the contact name and a message bubble. Tap the bubble to view the reminder.

- 1 **Open Contacts** .
- 2 Search for a contact (see [Find a contact](#)), and tap the contact name.
- 3 Open the [application menu](#) and tap **Add Contact Reminder**.
- 4 Enter the reminder, and make the back gesture to save it.

---

**TIP** To remove a reminder message before it pops up as a notification, open the [application menu](#), and tap **Add Contact Reminder**. Tap the trash icon.

---


## Link a contact


When your phone recognizes matching information in two or more contacts—for example, the same name and phone number—it automatically gathers the info from the two records into a single view that displays all the contact information. You can also manually link contacts. The info for your linked contacts appears combined only on your phone—the actual info is kept separate and distinct in the accounts it came from.

---

**IMPORTANT** To maintain the integrity of your contact data, it's important that you link only one person's contact info in different accounts. For example, if you have contact info for Emily Weeks in Google, Facebook, Microsoft Exchange, and your Palm profile account, go ahead and link all four contacts into a linked contact. But don't link Emily's contact info with her sister Allison's.


---

- 1 **Open Contacts** .
- 2 Search for a contact (see [Find a contact](#)), and tap the contact name.
- 3 In the open entry, tap the contact name in the header, and tap **Link more profiles**.

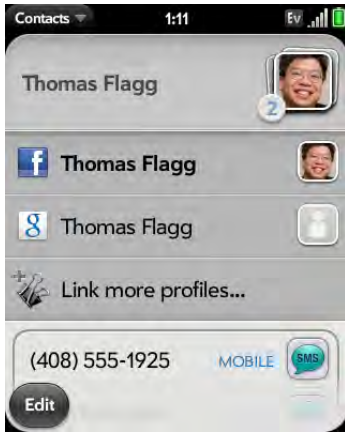


- 4 Search for the contact (see [Find a contact](#)) and tap it to link the two contacts.
- 5 After you create the link, be sure the linked contact appears in your Contacts list under the name you're most likely to search for and recognize (and not, say, under a person's IM screen name, which can be unrelated to their real name). To do this, tap the contact name you want to appear, and tap **Set As Primary Profile**. When you search for a contact using universal search (see [Use universal search](#)), the search feature looks through primary profile information only.

## Unlink a contact

- 1 [Open Contacts](#) .
- 2 Search for a contact (see [Find a contact](#)), and tap the contact name.
- 3 Tap the contact name in the header, and tap the contact you want to unlink.
- 4 Tap **Unlink This Profile**.

## Add a contact entry to the Launcher

Assign your favorite contacts to the Launcher, so you can open them directly from that location.

- 1 [Open Contacts](#) .
- 2 Search for a contact (see [Find a contact](#)), and tap the contact name.
- 3 Open the [application menu](#) and tap **Add to Launcher**.
- 4 (Optional) Edit the first and last name as you want them to appear in the Launcher.
- 5 Tap **Add To Launcher**. To see the contact in the Launcher, scroll down on page 1.

If the contact has a picture (see [Add a photo to a contact](#)), the picture appears as a Launcher icon. If the contact doesn't have a picture, the contact name appears in the Launcher with a placeholder icon. Tap the real or placeholder icon to open the contact.


## Get in touch with a contact

- 1 [Open Contacts](#) .


- 2 Tap the contact name.



- 3 Do any of the following:

- Tap the appropriate field to call or send an email or instant message to that contact. For example, tap a phone number to call the contact.
- Tap  to send a text message.
- Tap an address field to view the address on a map.

## Delete a contact

- 1 [Open Contacts](#) .
- 2 Tap the contact name.

---

**NOTE** Entries that you cannot change on your phone, like those from Facebook and LinkedIn, you also cannot delete from the phone. You must delete them from your account on the web to remove them from your phone.

---


- 3 Do one of the following:

- **Delete an unlinked contact or an entire linked contact:** Open the [application menu](#) and tap **Delete Contact**. Tap **Delete All Profiles** to confirm.

---

**NOTE** If you see **Delete Other Profiles** rather than **Delete All Profiles**, that's because you have linked contacts that come from accounts whose info you can't change on your phone (like Facebook and LinkedIn). Tap it. To delete any remaining contacts, on your computer, go to the account online and delete them there.

---

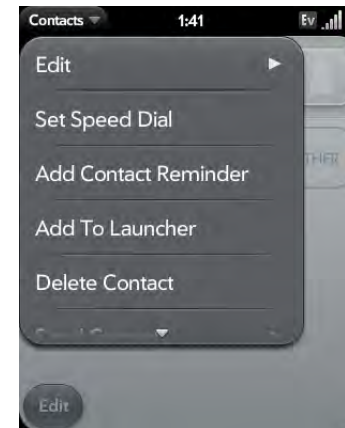

- **Delete one entry only in a linked contact:** Tap the displayed contact name to open the list of all entries in the linked contact. Tap the entry you want and tap **Delete This Profile**.

If you delete a contact that is assigned to an online account, the contact is deleted in the online account also.

## Customize Contacts

- 1 [Open Contacts](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.



3 Set the following options:

**List Order:** Tap to select the criteria by which the contact list is sorted. If you select **Last name** as sort, the names are alphabetized by last name, but still they appear in the Contacts list as First name Last name. If you select **First name** as sort, names are alphabetized by first name.

You can also choose to sort by **Company & first name** or **Company & last name**. In these cases, the company name is alphabetized, and within the company, whichever you choose, the names are still listed First name Last Name.

**Accounts:** Tap an account to change login settings and sign in using the new settings.


**Default account:** Tap the current default account to change to another account. New contacts you create are assigned to this account unless you specify otherwise.

**Sync Now:** Tap to manually synchronize your online accounts.

**Add An Account:** Tap, and then tap an account type. Enter the account information. Before you can set up an account on your phone, you must already have an account online with the provider.

## Manually synchronize Contacts with your online accounts

If you want to get contacts from an online account on your phone immediately—or upload contacts from your phone to the online account—you can do a manual sync. This synchronizes Contacts with all the accounts you have set up on your phone, and it synchronizes your calendar and email with those accounts also.

- 1 [Open Contacts](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap **Sync Now**.


## Stop synchronization of Contacts with an online account

If you synchronize contacts with an online account, you can delete the account from Contacts. This stops synchronization of contacts only—if you also sync email or calendar events with that online account, those continue to synchronize. Deleting the account from Contacts also deletes any associated contact entries from your phone only. The entries are not deleted from the online account.

---

**NOTE** Microsoft Exchange is an exception to other online accounts. If you delete your Exchange account from Contacts, the account is also deleted from Calendar, Email, and Tasks.

---

- 1 [Open Contacts](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Tap **Remove Account** and tap **Remove Contact Account**.

## Send Contacts


You can send all contacts to a hands-free car kit (with Bluetooth), or send a contact using multimedia messaging (MMS) or email.

To send all contacts to a car kit, first turn on your Bluetooth device.

- 1 [Open Contacts](#) .
- 2 Open the [application menu](#) and tap **Send All To Car Kit**.

If a Bluetooth device is detected, all contacts are sent.

To send one contact:

- 1 [Open Contacts](#) , and tap a contact.
- 2 Open the [application menu](#) and tap **Send Contact**.
- 3 Tap one of the following:
  - **Send To Car Kit** (your Bluetooth device needs to be on and detected).
  - **Send Via MMS** (messaging opens)
  - **Send Via Email** (email opens)

## Receive vCards

To get an emailed vCard into Contacts:

- 1 From the open Email message, tap the attachment.  
  
The vCard opens automatically within Contacts.
- 2 Tap **Add to Contacts**.

- 3 Tap one of the following:

**Save As New:** Save the vCard as a new contact.

**Add To Existing:** Add the vCard information to an existing contact.

## Calendar

### How do I get events into Calendar?

You have a few options for getting events to show up in Calendar:

**Connect to an online calendar through the Palm® Synergy™ feature:** If you have a calendar in an online account that works with the Synergy feature (for example, Google or Microsoft Exchange ActiveSync), you can set up Calendar on your phone to synchronize and display events in the online calendar. Set up synchronization the first time you open Calendar (see [Use Calendar for the first time](#)) or anytime after that (see [Customize Calendar](#)). After you set up the connection to the online calendar, events you enter online show up automatically in Calendar, and events you enter on your phone sync to the online account.

---

**DID YOU KNOW?** If you synchronize with your Google calendar, you can add Google Weather to the calendar on your desktop and have it appear in Calendar on your phone. On your desktop, log in to your Google Calendar account and open **Calendar Settings**. Click the **General** tab, enter your location, and click the temperature unit you want in **Show weather based on my locations**. The next time your phone synchronizes with your Google account, Google Weather appears in Calendar on your phone.

---

The Synergy feature makes it easy to synchronize other data from an online account. By setting up synchronization in one app, synchronization of the other apps is automatically set up for you. For example, if you set up your Gmail account in Email before you set up Calendar, when you first open

Calendar, you find that your Google calendar events are already downloaded. And when you first open Contacts, you find that your Google contacts are already in your phone's Contacts app.

**Transfer calendar events using the Data Transfer Assistant:** When you transfer calendar events from desktop software, you select which account to assign those events to. Look for those events in the account you select (see [How do I get data off my computer?](#)).

---

**NOTE** See the online accounts table at the back of the user's guide for the current list of online accounts that you can set up on your phone, from which you can access Calendar events.

---

**Enter an event directly in Calendar:** See [Create an event](#) for instructions. You can assign the event to one of your online calendars—if you do, it synchronizes with the online calendar. Or you can create the event in your Palm profile account, which means it shows up on your phone only. Palm profile events are included in the daily backup of your Palm profile information, so you can restore them if they are accidentally erased.

## Layered calendars


Suppose you use the calendar in both Microsoft Exchange ActiveSync and in Google. If you set up both of those accounts to sync with your phone, your phone's Calendar app shows the events from both in a single view—a layered calendar with events that are color-coded to identify which provider they come from. Individual events remain stored separately with your different providers; the events are just assembled in one view on your phone for your convenience.

If you change an event, the change is made in the appropriate calendar.

You can also look at the events of just one calendar at a time.

## Use Calendar for the first time

- 1 **Open Calendar** .

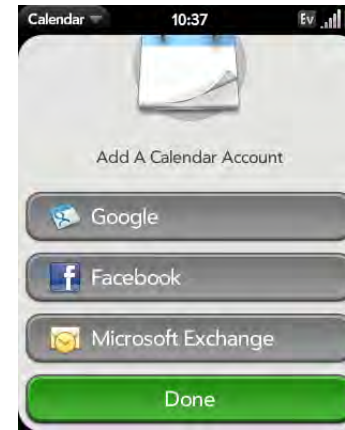

- 2 Do one of the following:
  - **To set up your first online account to sync:** Tap the account type, enter the account information, and tap **Sign In**.
  - **To set up a second online account to sync:** Tap **Add An Account**, tap the account type, enter the account information, and tap **Sign In**.
  - **To open Calendar without creating an online account:** Tap **Done**. This opens your Palm profile account, and you can start creating events in this account.

---

**NOTE** If you choose to sync Calendar with an online Facebook account, your Facebook events show up in Calendar, but you cannot add calendar events to Facebook from the Calendar app. To work directly with Facebook, go to [facebook.com](http://facebook.com) in the Web application (see [Web](#)). To update your status and see your Facebook news feed, use the Facebook application developed for your phone (see [Facebook](#)).

---

## Create an event

You can add an event to calendar accounts. If you don't specify an account, the new event is added to your default calendar. For information on managing your phone's time settings, see [Date & Time](#).

---

**NOTE** If an account doesn't appear in the list, you can't add data to that account from your phone.

---


- 1 Open **Calendar** .



- 2 Tap **All** or an online account name in the upper-right corner, and tap the calendar you want to use for this event.

If you create an event in All Calendars view, the event is created in the calendar set as the default (see [Customize Calendar](#)).


- 3 Go to the day you want (see [Move around in Calendar](#)) and tap a blank time slot.

- 4 Enter the event name and press **Enter** .

In Day view, available time slots between events are compressed and labeled X Hrs Free. To expand free time so you can enter an event, tap **X Hrs Free**.

Don't look for a save button—your info is automatically saved when you make the back gesture to close the event.

## Enter the event location


- 1 While creating an event (see [Create an event](#)), tap  to the right of the event name. To enter the event location after creating an event, tap the event name in Day view.
- 2 Tap **Event location** and enter the location.

---


**TIP** Need to find the event location on a map? Open an event that has a location specified in the **Event location** field, open the [application menu](#), and tap **Event Location**. Tap either **Show on Map**, which shows the location on Google Maps, or **Get Directions**, which gives directions from your current location.

---

## Schedule a repeating event

- 1 While creating an event (see [Create an event](#)), tap  to the right of the event name. To set an event as repeating after creating the event, tap the event name in Day view.

- 2 Tap **No Repeat** and tap the repeat interval.

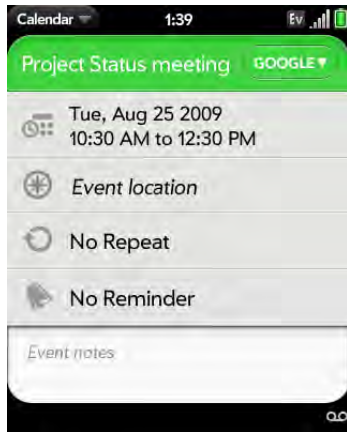

- 3 (Optional) Tap **Custom** to define your own repeat interval and set the end date.

---

**DID YOU KNOW?** To enter a birthday, anniversary, or holiday, create an untimed event. Then select **Yearly on [date]** as the repeat interval. See [Create an all-day \(untimed\) event](#).

---

## Add an alarm to an event

- 1 While creating an event (see [Create an event](#)), tap **i** to the right of the event name. To add an alarm after creating an event, tap the event name in Day view.
- 2 Tap **No Reminder** and tap the interval for the alarm.

## Add a note to an event

- 1 While creating an event (see [Create an event](#)), tap **i** to the right of the event name. To add a note after creating an event, tap the event name in Day view.
- 2 Tap **Event notes** and enter the note.

---


**NOTE** If a phone number is displayed in an event note as an underlined link, you can tap the number to make a call. This displays the phone dial pad with the number already entered.

---

## Create an all-day (untimed) event

An all-day event such as a birthday appears in your calendar without a specific time slot.

- 1 [Open Calendar](#) .
- 2 Go to the day you want, open the [application menu](#) and tap **New > All Day Event**.

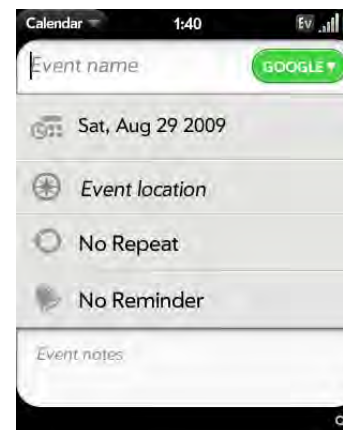

- 3 Enter the event details.



## Change the Calendar display

You can change the display of Calendar to show events from all of your calendars or just the events recorded in one of your calendars. You can also change the color of each calendar, and whether the calendar view shows by day, week, or month.





- 1 **Open Calendar** .
- 2 To change your Calendar view from day to week to month, do the following:
  - From Calendar view, tap an icon at the lower part of the display to see different calendar views:

Table 1.

Icon	Description
	Day view
	Week view
	Month view

- 3 Tap the account icon in the upper-right corner to do any of the following:
  - To switch the Calendar account you're viewing: Tap **All** or one of your Calendar accounts.
  - To remove a Calendar account from the layered calendar view (All): Scroll down and tap **Calendar View Options**. For the account you want to remove, tap **On** to switch the view option to **Off**.
  - To change the color that identifies a Calendar account: Scroll down and tap **Calendar View Options**. Tap the current color, and then tap a new color in the list.

## Move around in Calendar

- **Next or previous day:** In Day view, swipe left or right on the screen.
- **Next or previous week:** In Week view, swipe left or right on the screen.
- **Next or previous month:** In Month view, swipe up or down on the screen.
- **Go to a specific month, date, or year:** Open the [application menu](#) and tap **Jump To**. Tap the month, day, and year and tap **Go To Date**.
- **Go to today:** Open the [application menu](#) and tap **Show today**.

---

**TIP** Other ways to go to today: When you're in Day View, just tap the **Day view** icon. Also, in the application menu, tap **Jump To** and tap **Go To Today**.

---

## Quickly glimpse your schedule

- In Day or Week view, slightly drag left or right to peek at the next/previous day or week without changing the current view.
- In Month view, slightly drag up or down to peek at the next/previous month.



## Delete an event


If you delete an event that is assigned to an online account, the event is deleted in the online account also.

---

**IMPORTANT** When you delete a Microsoft Exchange event on your phone, notification is not sent to attendees.


---

- 1 Open **Calendar** .
- 2 Delete an event in one of two ways:
  - In Day view, press and hold **Option** , and tap the event. You have the option to delete this event or to cancel the delete.
  - Tap the event name. Open the **application menu** and tap **Delete event**, and then tap **Delete** to confirm. If this event is one of a series of repeating events, tap the option to delete just this event or the entire series.

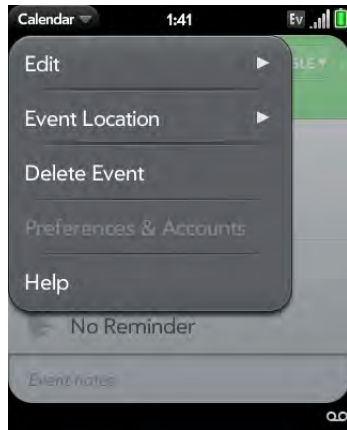

## Respond to an event reminder

When an event reminder appears in the notification bar at the bottom of the screen, tap the event description to open the event, or tap one of the following:

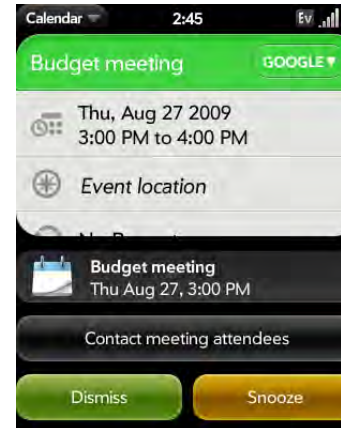

- **Contact meeting attendees:** This opens an email message with the participants' addresses added to the To field. The default message text is "Running late, on my way...". You can edit the text before sending the message.
- **Dismiss:** Close the notification.
- **Snooze:** The reminder reappears in five minutes.

## View meeting participants

If you receive a meeting request, you can view the participants.

- 1 On your calendar, tap the meeting request. The Participants field shows the organizer name plus the number of participants.
- 2 Tap the number to see the participants' names.

- (Optional) Tap a participant's name. If the participant is a contact, the contact entry is displayed. If the participant is not a contact, tap **Add to Contacts** to add the participant to your contacts list.

## Customize Calendar

- Open **Calendar** .
- Open the **application menu** and tap **Preferences & Accounts**.



- Set the following options:

**First Day of Week:** Select the day that appears as the start of the week in Week view and Month view.

**Day Start and End:** Tap to enter the default start and end times that appear in Day view and Week view.

**Default Event Reminder:** Tap the time interval for a notification to appear for timed and all-day events. Reminders you set for individual events override the default setting.

**Event Reminders:** Select to play a sound when a calendar notification appears.

**Default Event Duration:** The default event duration is set to one hour. Tap to change this to **30 minutes** or **2 hours**.

**Accounts:** For all calendar accounts, tap an account to change login settings or remove the account. You should change login settings only if you have changed this information for the calendar account online—the information you enter here must match the information in the online account.


**Calendar View Options:** Set the color for events created in that account and show or hide that account in All Calendars view.

**Default Calendar:** If you create an event in All Calendars view, the event is assigned to your default calendar.

**Add An Account:** Tap the account type and enter your username and password for the online calendar account. Before you can set up an account on your phone, you must already have an account online with the provider.

## Manually synchronize Calendar with your online accounts

If you want to get calendar events from an online account on your phone immediately—or upload events from your phone to the online account (if the account allows it)—you can do a manual sync. This synchronizes Calendar with all the accounts you have set up on your phone, and it synchronizes your contacts and email with those accounts also.

- Open **Calendar** .
- Open the **application menu** and tap **Preferences & Accounts**.
- Tap **Sync Now**.


## Stop synchronization of Calendar with an online account

If you synchronize calendar events with an online account, you can delete the account from Calendar. This stops synchronization of calendar events only—if you also sync contacts or email messages with that online account, those continue to synchronize. Deleting the account from Calendar also deletes any associated events from your phone only. The entries are not deleted from the online account.

---

**NOTE** Microsoft Exchange is an exception to other online accounts. If you delete your Exchange account from Calendar, the account is also deleted from Contacts, Email, and Tasks.



---


- 1 [Open Calendar](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Under **Accounts**, tap the account name.
- 4 Tap **Remove Account** and tap **Remove Calendar Account**.


## Tasks

### Create a task list


All individual tasks you create (see [Create a task](#)) must be placed in a task list. A task list is a group of related to-do items.

- 1 [Open Tasks](#) .
- 2 Tap .

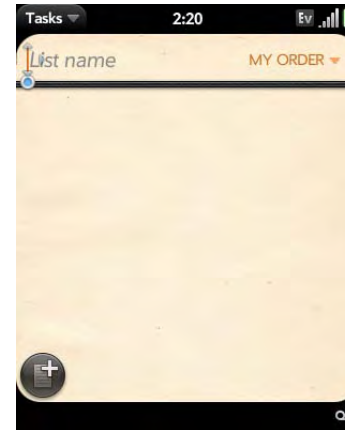


- 3 Enter the list name in the List Name field and press **Enter** .
- 4 Create a task (see [Create a task](#)).

### Create a task


- 1 [Open Tasks](#) .
- 2 Tap the list you want to assign the task to.

- 3 Tap .

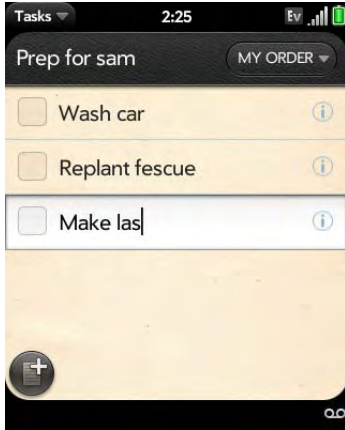


- 4 Enter the task name in the Task name field. To set the task priority, see the next procedure.

### Set task priority, due date, and other details

- 1 Open **Tasks** .
- 2 Tap the list containing the task.

- 3 Tap  to the right of the task name.

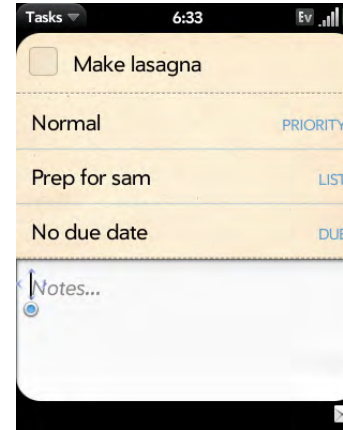


- 4 Set any of the following:
  - Priority:** High priority tasks appear in red. Normal priority tasks appear in bold text, and low priority tasks appear in gray text.
  - List:** Assign the task to a different list.
  - Due:** Tap **No due date**, and tap a due date option. If you set a due date, a notification appears at bottom of the screen on the due date. Tap the notification to open the task.
- 5 To enter a note about the task, tap **Notes** and enter the note.

### Check off a task

- 1 Tap the list containing the task.

- 2 Tap the box to the left of the task name.

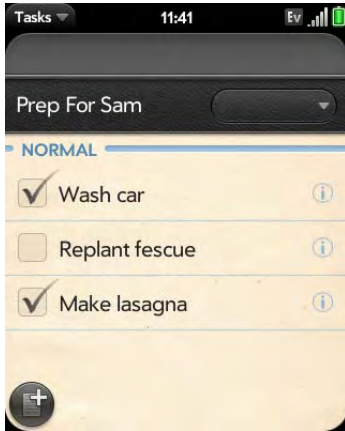


## View tasks that are due today

- 1 **Open Tasks** . The number to the right of the List All Tasks field shows the total number of tasks that are due today or are overdue. The number to the right of each task list name shows the number of tasks in that list that are due today or overdue.
- 2 Tap a task list name to view tasks that are due today or overdue.

---

**NOTE** Tap **Exchange** to view tasks synced from your Exchange Tasks feature.

---

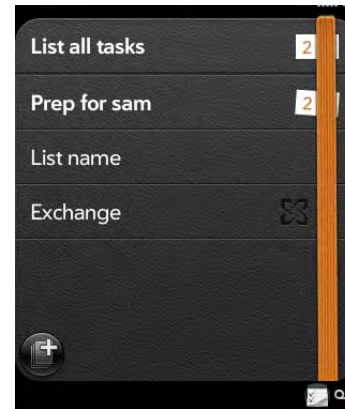

## Rename a task


- 1 On the task list, tap the task name.
- 2 Enter the new name and press **Enter** .

## Sort a task list

You can sort a task list to show all tasks (the default setting), remaining tasks, or completed tasks.

- 1 **Open Tasks** .
- 2 Tap the list you want to sort.

- 3 Tap **My Order** in the upper-right corner, and tap the sort option you want: **My Order**, **Due Date**, or **Priority**.

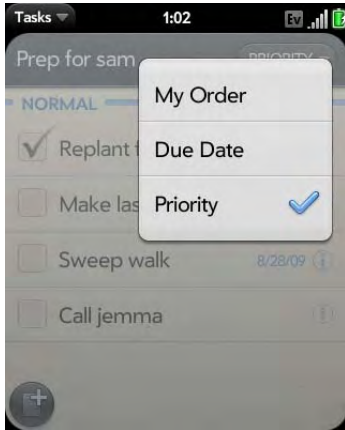


- 4 To manually sort tasks, tap and hold a task, wait for the visual cue, and then drag it to a new location in the list (see also [Check off a task](#)).

## Reorder your tasks


You can change the order of a task list or an individual task.

- Tap and hold the list or task name, wait for the visual cue, and drag the item to another position.

## Set due dates for all tasks in a list


- 1 [Open Tasks](#) .
- 2 Tap the list containing the tasks.

- 3 Open the [application menu](#) and tap **Set Due Date For All**.

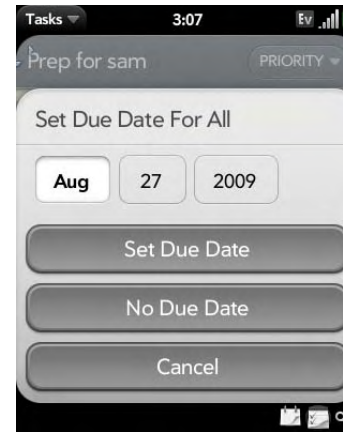


- 4 Tap the month, date, and year, and then tap **Set Due Date**.
- 5 To remove a previously assigned due date, tap **No Due Date**.

## Mark all tasks in a list completed/incomplete

- 1 [Open Tasks](#) .
- 2 Tap the list containing the tasks.
- 3 Open the [application menu](#) and tap **Mark All** and tap **Mark All Completed/Mark All Incomplete**.

## Hide or delete all completed tasks in a list

- 1 [Open Tasks](#) .
- 2 Tap the list containing the tasks.
- 3 Open the [application menu](#).

- 4 Do one of the following:
  - To hide tasks you've completed, tap **Hide Completed**.
  - To delete tasks you've completed, tap **Delete Completed Tasks**.

## Delete a task or a task list

- Throw the task or task list off the side of the screen and tap **Delete** to confirm.


## Memos

If you used the Data Transfer Assistant and imported notes from Outlook on your desktop to your phone, those notes are in Memos. Your Exchange Active Sync notes, however, do not sync. All memos are backed up to your Palm profile.

### Create a memo

- 1 [Open Memos](#) .



- 2 Do one of the following:
  - Tap **New Memo** .
  - Open the [application menu](#) and tap **Add A Memo**.
- 3 Enter the memo text. Memos are saved as you type.

### Find a memo


- In Memos, start typing any letters or numbers in the memo, and then tap the memo when it appears.

---

**NOTE** The results of universal search that you access in Card view or the Launcher do not include memos.

---

### Edit a memo

- 1 [Open Memos](#) .
- 2 Tap the memo you want to edit.
- 3 Tap the screen to position the cursor (see [Text selection gestures](#)), and edit the memo text.

---

**NOTE** In the [application menu](#), tap **Edit** > **Copy All** to select the whole memo.

---


### Change the color of a memo

Color-code your memos to help you recognize memos of a certain type. For example, make all of your grocery lists blue.

- 1 Tap the memo.




- 2 Tap the lower-right corner of the screen, and tap the new color.

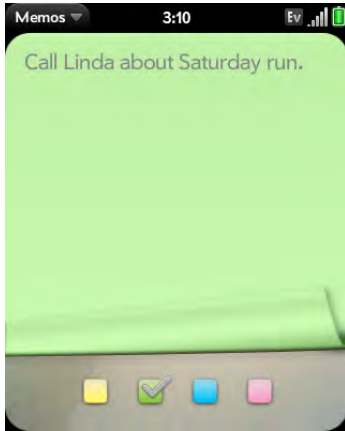

### Delete a memo

- 1 In an open memo, open the [application menu](#) and tap **Delete**.
- 2 Tap **Delete** to confirm.



### Email a memo

- 1 In an open memo, open the [application menu](#) and tap **Email Memo**.
- 2 Enter the email address.  
  
The subject, Just a quick memo, is automatically filled in.
- 3 Tap .

## Clock

Use Clock to get up at the same time wherever you are, for example, the recurring 7AM alarm you set in San Francisco rings at 7AM in New York. Use Calendar to have your appointment times adjusted so that the notification for a 9AM meeting in San Francisco will sound at noon when you're in New York (see [Create an event](#)).

### Manage Clock

- 1 [Open Clock](#) .
- 2 Tap .



To change the clock display: Open the [application menu](#) > **Preferences** > and tap **Themes**. Then tap a theme.


To change the time: See [Date & Time](#).

### Set an alarm

Make sure ringtone volume is on and you can hear it, so that the alarm will sound when you want it to (see [Manage system sounds and notifications](#)).

- 1 [Open Clock](#) .

- 2 Tap , and then tap .

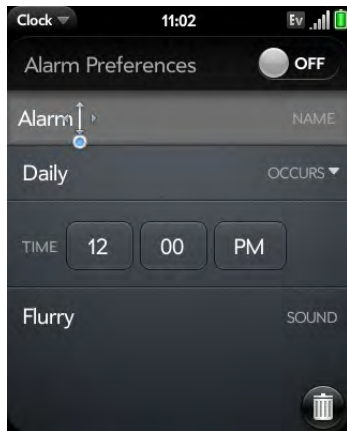


- 3 Set the following options:

**Alarm Preferences:** Tap the **Off** button in the upper right to turn the alarm on. When an alarm is turned on, the alarm icon appears in the lower-right corner of the phone screen. Tap the icon to see alarm details.

**Name:** Enter a name for the alarm.

**Occurs:** Tap to select the alarm frequency.

**Time:** Tap to set hour, minute, and AM/PM for the alarm.

**Sound:** Tap to open the list of ringtones, and then tap the name of a ringtone. Tap  to preview it.

---

**TIP** When you set an alarm, you can adjust the alarm volume by pressing the **volume up** or **volume down** buttons on the side of the phone. This also sets the ringtone volume for incoming calls. Conversely, adjusting the Ringtone Volume slider in the Sounds & Ringtones app is the same as using the **volume up** and **volume down** buttons on the side of the phone.

---

When an alarm sounds on your phone, tap Dismiss to stop it or Snooze to have it sound again in five minutes.

---

**TIP** If you want the ringer switch off but still hear the alarm, go to **Sounds & Ringtones > application menu > Preferences**. Under **Ringer Switch Off**, be sure **Play alarm anyway** is switched to **On**.

---

---


**NOTE** When you shut down your phone by pressing and holding **power** , alarms don't sound.

---




### Cancel an alarm

- **Open Clock** , and then tap ; tap **On** to turn an alarm off.

### Change the alarm volume

- 1 **Open Sounds & Ringtones** .
- 2 Tap, hold, and drag the **Ringtone Volume** slider.


### Delete an alarm

- 1 **Open Clock** .
- 2 Tap , then tap the alarm name.
- 3 Tap .

# Calculator

Use Calculator for addition, subtraction, multiplication, and division, and also for determining percent and square root. You can enter numbers in Calculator using either the onscreen keypad or the keyboard.

## Perform calculations

- 1 [Open Calculator](#) .
- 2 Enter numbers and perform calculations.






---

**NOTE** Press the **space bar** to access additional operations.

---

## Calculator buttons

Table 2.

Button	Description
	Clear the current calculation or displayed number.
	Add the currently displayed number to memory.
	Subtract the currently displayed number from memory.
	Display the memory.
	Clear the memory.

# Facebook

The Palm Facebook app allows you to make a status comment, view and respond to friends' comments, and attach a photo to your status. Before you

begin, download the Facebook app from the App Catalog. It's free (see [Download a free application](#)).

- 1 [Open Facebook](#) .

- 2 Do any of the following:



**Show new posts:** If you see this at the top of your Facebook page, tap it to show new comments.

**Update your status:** Type a comment, and then tap **Share**.



**Add a photo to your status:** Type a comment, tap **Attach**, choose a photo or take a new one, tap **Attach Photo**, and then tap **Share**.

**Add a comment to a post:** Tap   , tap  (optional), type your comment, and then tap .

**Comment on a photo:** Tap the photo, tap , type your comment, and then tap .





## Photos, videos, and music

There's no need to carry a separate media player; you can play music and videos, and view photos, on your Palm® Pixi™ Plus phone. Listen to music through the built-in speaker or through a 3.5mm headset or headphones (both sold separately).

### In this chapter

- 110 Camera
- 110 Photos
- 114 Videos
- 116 YouTube
- 117 Music
- 119 Amazon MP3




# Camera

## Take a picture

Your phone comes with an easy-to-use, 2-megapixel camera with an LED flash. You can use the camera to take pictures, and then use the Photos app to view them and send them to your friends and family (see [Share a picture](#)). To add a personal touch to your phone, use your pictures as your wallpaper (see [Save a picture as wallpaper](#)) and as caller ID images (see [Add a picture to a contact](#)).

- 1 **Open Camera** .



- 2 The camera is set to automatically determine if the flash is needed. If you want to change the flash setting, tap  to keep the flash on, and tap again to keep the flash off.
- 3 To take the picture in landscape view, turn your phone 90 degrees.
- 4 Press **Space**  or tap .

---

**TIP** Press and hold **Space** to take pictures in continuous burst mode. Release **Space** to stop taking pictures.

---

The picture you took is automatically saved in JPG format. Keep snapping pictures, and then go to Photos to look at them and delete the ones you don't want.

---

**DID YOU KNOW?** Your phone offers another way to “take a picture”: You can save any currently displayed screen as a picture file (also known as a screenshot). When the screen you want is open, press and hold **Option + Sym + P**. The picture is saved to the **Screen captures** album in Photos, and you can work with it like any other picture.

---

## Review pictures

- 1 After taking a picture, tap the thumbnail of the picture in the lower-left corner of the screen. This opens the picture in the Photo roll of the Photos application.
- 2 Swipe left or right on the screen to view other pictures you have taken.

## Photos

### Look at pictures


To get pictures on the phone, you can do any of the following:


- Take a picture with your phone's camera (see [Take a picture](#)).
- Copy pictures from your computer (see [Copy files between your phone and your computer](#)).
- Receive pictures as email attachments (see [Open attachments](#)).
- Receive pictures as part of a multimedia message (see [Receive and view text and multimedia messages](#)).

You can view a picture as an email attachment in JPG, GIF, BMP, or PNG format. You can view a picture as part of a multimedia message in JPG

format. In the Photos application, you can view pictures you take with the camera or copy from your computer in JPG, BMP, or PNG format.

You can also look at pictures on the web directly in the web browser (see [Web](#)).

- 1 **Open Photos** .
- 2 Tap the album containing the picture, and tap the thumbnail of the picture. The Photo roll album contains pictures you took with your phone's camera.

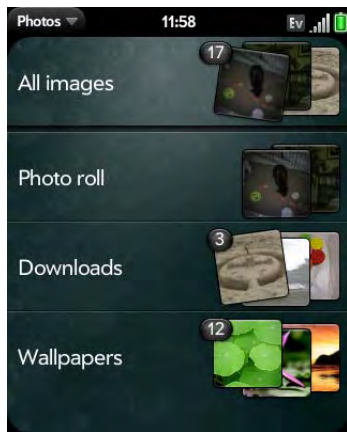

- 3 Swipe left or right on the screen to look at other pictures in the album.

## Organize your pictures into albums

The Photos application contains the following default albums:

**Photo roll:** Contains all pictures you take with your phone's camera.

**Wallpapers:** Contains default pictures that you can use as your wallpaper.

---

**DID YOU KNOW?** If you use one of your own pictures as wallpaper (see [Save a picture as wallpaper](#)), that picture is not saved to the Wallpapers album.

---

The Photos application creates additional albums automatically as you add the following types of pictures to your phone:

**Miscellaneous:** Contains any pictures you copy from your computer that you do not assign to a different album, as described in the following procedure.

**Messaging:** Contains any pictures in JPG format that you save from a multimedia message.

**Downloads:** Contains any pictures in JPG, BMP, or PNG format that you save from an email attachment.

**Screen captures:** Contains any screenshots that you take.

You can assign any pictures on your phone to one of these albums or to an album you create. To create and assign pictures to albums, you must put your phone into USB Drive mode. You then create the albums and move pictures into them using your computer.

---

**TIP** Besides using USB Drive mode to copy your photos, videos, and DRM-free music from your computer to your phone, you can also use solutions available from third-party software developers (sold separately) that facilitate the transfer of media files to your phone. For more information, go to [palm.com/sync-solutions](http://palm.com/sync-solutions).

---

- 1 Connect your phone and your computer using the **USB cable**.
- 2 On your phone, tap **USB Drive**. If prompted, tap **OK**. On your computer, your phone appears as a removable drive.

---

**NOTE** On a Windows computer, if the Found New Hardware wizard opens, click **Cancel** to close the wizard.

---

- 3 Open **My Computer** (Windows XP), **Computer** (Windows Vista/Windows 7), or the **Finder** (Mac), and double-click the drive representing your phone.
- 4 To create an album, use your computer's controls for creating a new folder. To be sure the Photos application can find the album, create it at the root level of the drive representing your phone, not as a subfolder of another folder.

---

**NOTE** The Photos application displays an album you create only if the album contains at least one picture in JPG, BMP, or PNG format.

---

- 5 Assign pictures to albums using your computer's controls to copy or move items. It is easiest to find the pictures you want by displaying them as thumbnails.
- 6 On a Windows computer, to end the connection safely, right-click the drive representing your phone and click **Eject**. On a Mac computer, from your desktop, drag the drive representing your phone to the **Trash**. Trash changes to **Eject**.
- 7 Disconnect the **USB cable** from the computer when the USB drive screen no longer appears on your phone.


---

**TIP** To delete an album, connect your phone to your computer and tap **USB Drive**. From your computer, open the drive representing your phone and delete the folder representing the album.


---


## Add a picture to a contact

You can also add a picture to a contact in the Contacts application (see [Add a photo to a contact](#)).

- 1 Tap a picture thumbnail to view it full-screen.
- 2 If  is not visible, tap the screen to display it.



- 3 Tap  and tap **Assign to contact**.
- 4 Enter the contact name and tap the contact.
- 5 (Optional) Do either or both of the following:

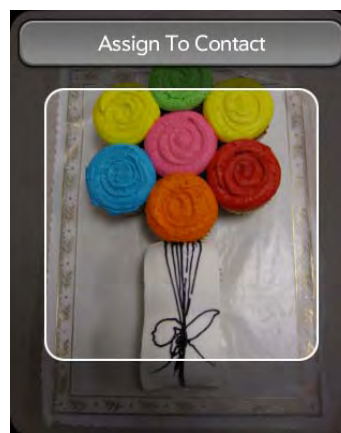

- To enlarge a face or other portion of the picture: Zoom in by making the pinch-out gesture.





- To capture the portion of the picture you want for the contact photo: Tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the contact photo.

6 Tap **Assign To Contact**.


## Save a picture as wallpaper

Your wallpaper appears as the background in Card view.

- 1 Tap a picture thumbnail to view it full-screen.
- 2 If  is not visible, tap the screen to display it.
- 3 Tap  and tap **Set wallpaper**.
- 4 Do either or both of the following:
  - To zoom out or in on a part of the picture, pinch in or out on the picture.
  - To capture the portion of the picture you want to use as wallpaper, tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the wallpaper.
- 5 Tap **Set Wallpaper**.

## Share a picture

You can send a picture to other picture-enabled devices or to an email address as an attachment.

- 1 Tap a picture thumbnail to view it full-screen.
- 2 If  is not visible, tap the screen to display it.

3 Tap  and tap **Share via email** or **Share via MMS**.

4 Create the email or multimedia message.



---

**TIP** You can also copy pictures from your phone to your computer (see [Copy files between your phone and your computer](#)).

---

## Upload a picture to the web

To upload a picture to a web service such as Facebook or Photobucket, you must already have an account with the service, and you must have the account set up on your phone. You can set up the account on your phone during the upload process, as described in this procedure, or you can set it up at any other time (see [Set up an online pictures account on your phone](#)).

- 1 Tap a picture thumbnail to view it full-screen.
- 2 If  is not visible, tap the screen to display it.
- 3 Tap  and tap **Upload**.
- 4 Do one of the following:
  - If you have already set up your picture web service on your phone, tap the name of the service you want to use.
  - If you have not set up your picture web service on your phone, tap **Add An Account** and tap the account type. Enter your username and password and tap **Sign In**. When you have signed in to your account, return to the picture in full-screen view and repeat steps 2 and 3.

## Set up an online pictures account on your phone

To upload pictures to an account you have with a web service such as Facebook or Photobucket, you must set up the account on your phone.

---

**DID YOU KNOW?** If you set up a Facebook account in the Photos application, your Facebook contacts and calendar events appear in the Contacts and Calendar applications on your phone also. Likewise, if you set up a Facebook account in Contacts or Calendar, the account is already set up to allow you to upload pictures from Photos. See [Online accounts available for webOS phones](#) for information about the behavior of Facebook, Photobucket, and other online accounts on your phone.

---



- 1 Open **Photos** .
- 2 Open the **application menu** and tap **Preferences & Accounts**.



- 3 Tap **Add An Account**, and tap the type of account you want to add.
- 4 Enter your account username and password and tap **Sign In**.

## Delete a picture

- 1 Tap a picture thumbnail to view it full-screen.

- 2 If  is not visible, tap the screen to display it.
- 3 Tap .
- 4 Tap **Delete** to confirm.

## Videos

### Watch a video

To get videos on your phone, you can do any of the following:

- Copy videos from your computer (see [Copy files between your phone and your computer](#)).
- Receive videos as email attachments (see [Open attachments](#)).
- Receive videos as part of a multimedia message (see [Receive and view text and multimedia messages](#)).


You can view DRM-free videos that you receive as email attachments or that you copy from your computer in the MPEG4, H.263, H.264, MP4, M4V, 3GP, 3GPP, 3G2, and 3GP2 formats. You can view videos you open in a multimedia message in MP4 format. Videos play on your phone in landscape orientation.

---


**KEY TERM DRM-free:** Describes a file that is not protected by Digital Rights Management. DRM-free music files can be copied as many times as you like and can be played on your Pixi Plus phone.

---

Use the YouTube application to view YouTube videos (see [YouTube](#)).

**BEFORE YOU BEGIN** Before you put videos on your phone, make sure you have enough storage space on your phone to fit the file. [Open Device Info](#)  and look at the **Available** field under **Phone**.

## 1 Open Videos .

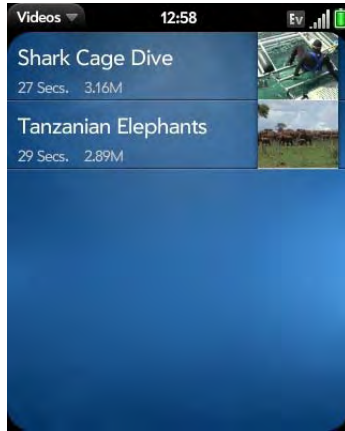

## 2 Tap the video.

### Use video playback controls

Playback controls automatically appear when you start a video. They disappear after a few seconds. Tap the video to manually display or dismiss the controls.





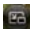


Table 1. Video playback controls

Control	Function
	Play.
	Pause.
	Move forward or backward (tap and hold the slider, then drag forward or backward).
	Switch between full-screen view and original size.

**TIP** To skip ahead 30 seconds in a video, flick left to right on the screen. To jump back 10 seconds, flick right to left.
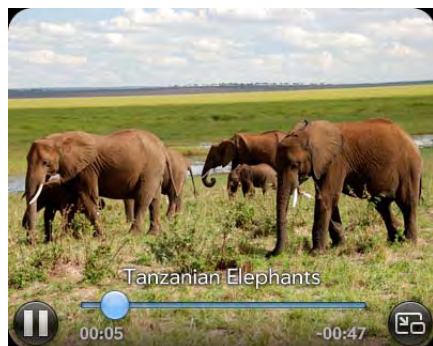
### Delete a video

To delete a video file from your phone, you must put your phone in USB Drive mode and delete the video using your computer.

- 1 Connect your phone and your computer using the **USB cable**.
- 2 On your phone, tap **USB Drive**. If prompted, tap **OK**. On your computer, your phone appears as a removable drive.

**NOTE** On a Windows computer, if the Found New Hardware wizard opens, click **Cancel** to close the wizard.




- 3 Open **My Computer** (Windows XP), **Computer** (Windows Vista/Windows 7), or the **Finder** (Mac), and double-click the drive representing your phone.
- 4 Delete the video using your computer's controls.
- 5 On a Windows computer, to end the connection safely, right-click the drive representing your phone and click **Eject**. On a Mac computer, from your desktop, drag the drive representing your phone to the **Trash**. Trash changes to **Eject**.

- 6 Disconnect the **USB cable** from the computer when the USB Drive screen no longer appears on your phone.

## YouTube

### Watch a video

YouTube on your phone lets you watch videos available online at the YouTube website. Videos are displayed on your phone in landscape orientation.

- 1 [Open YouTube](#) .
- 2 Do one of the following:
  - To search for a video: Tap **Search All Videos**, enter a search term, and press **Enter**  or tap .
  - To display the most highly rated videos: Tap **Videos** and tap **Popular**.
  - To display the most frequently viewed videos: Tap **Videos** and tap **Most Viewed**.
  - To display videos you have recently viewed: Tap **Videos** and tap **History**.
- 3 When the video you want appears, do one of the following:
  - To view the video: Tap the video thumbnail.
  - To view video details: Tap the text to the right of the video thumbnail.

---





**DID YOU KNOW?** Some videos can be viewed in YouTube on your computer only. For those videos, you can view video details on your phone, but if you try to play the video on your phone, an error message appears.

---

### Use video playback controls

Playback controls automatically appear when you start a video. They disappear after a few seconds. Tap the video to manually display or dismiss the controls.

Table 2. Video playback controls

Control	Function
	Play.
	Pause.
	Move forward or backward (tap and hold the slider, then drag forward or backward).
	Switch between full-screen view and original size.

### Find related videos

Find videos from the same author or otherwise related to the one you selected.

On the video details screen (see [Watch a video](#)), do one of the following:

- View videos from the same author: Tap **More** > **More From This Author**.
- View related videos: Tap **More** > **Related Videos**.

### Share a video

Send a friend a link to a YouTube video.

- 1 On the video details screen (see [Watch a video](#)), tap **Share**.
- 2 Tap **Email** or **Text Message**.
- 3 Address and send the message.

# Music

## Listen to music


You can listen to music through the speaker on the back of your phone or through a 3.5mm headset or headphones, stereo headset equipped with Bluetooth® wireless technology, or speakers (all sold separately).

To get music onto your phone, you can do any of the following:


- Copy music files from your computer (see [Copy files between your phone and your computer](#)).
- Receive music files as email attachments (see [Open attachments](#)).
- Receive music files as part of a multimedia message (see [Receive and view text and multimedia messages](#)).
- Buy music using the Amazon MP3 app on your phone (see [Amazon MP3](#)).

You can also listen to streaming music from the web directly in the web browser (see [Web](#)).

You can play music that you copy from your computer or stream from the web in the following formats: MP3, AAC, or AAC+ format. You can play music that you receive as an email attachment if it is in the MP3, AAC, AAC+, WAV, or AMR format. You can play music that you receive in a multimedia message or that you buy from Amazon MP3 if it is in the MP3 format.

- 1 [Open Music](#) .
- 2 If the Music application finds no music files on your phone, tap one of the following:
  - **Get My Music:** Read information about how to get music on your phone.
  - **Amazon MP3:** Open the Amazon MP3 application to buy songs (see [Amazon MP3](#)).

- 3 Do one of the following:

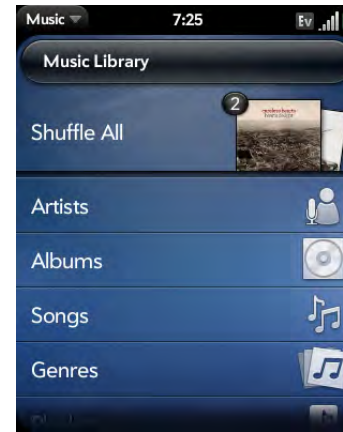

- Listen to all songs on your phone: Tap **Shuffle All**.
- Listen to a specific song: Tap **Artists**, **Albums**, **Songs**, **Genres**, or **Playlists** to search that category. Continue making selections until the song you want appears. Tap the song name.
- Listen to all songs from an artist: Tap **Artists** and tap the artist name. To listen to the artist's songs in the order they are displayed onscreen, tap the first song. The songs play one after the other in sequence. To listen to the songs in random order, tap **Shuffle All**.
- Listen to an album: Tap **Albums** and tap the album name. To listen to the album's songs in the order they are displayed onscreen, tap the first song. The songs play one after the other in sequence. To listen to songs in random order, tap **Shuffle All**.
- Listen to all songs in a genre: Tap **Genres** and tap the genre name. To listen to the songs in the order they are displayed onscreen, tap the first song. The songs play one after the other in sequence. To listen to the songs in random order, tap **Shuffle All**.
- Browse a music store to preview or purchase songs (if available): Tap the music store name. Continue making selections until the song you want appears. Tap the song name.

---








**DID YOU KNOW?** Music continues to play in the background if you switch to another application, turn off the screen, or slide the **ringer** switch off.

---

## Use music playback controls



Table 3. Music playback controls

Control	Function
	Play.
	Pause.
	Rewind.
	Fast forward.
	Shuffle current playlist.
	Repeat. Tap once to repeat the current song. Tap again to repeat the entire playlist.
	Move forward or backward. Tap the song name, then tap and hold the slider, and drag forward or backward. To display the slider, tap the text below the album art in Album Art view.

**DID YOU KNOW?** If you stop playback of an audio file for which the Genre field is defined as **podcast**, **speech**, **spoken word**, **netcast**, or **audiobook**, when you play the item again, playback resumes at the point it was stopped.

**TIP** If you put the Music app in the background while you work in another app, a music notification icon appears at the bottom of the screen. Tap the icon to display the music playback controls. You can use the controls even if the screen is locked.

## Switch the Now Playing display

You can switch the display to show the songs you are listening to by name or by album cover art.

- While you are listening to a song, tap the header to switch between Playlist view and Album Art view.

## Search for related songs or content

When you are listening to a song, you can search the web for related items such as songs by the same artist or from the same album.

- 1 While listening to a song, open the [application menu](#).
- 2 Tap one of the web search options (such as YouTube), and then tap the info you want.

## Change the order of items in the Now Playing list

- In Playlist view, tap and hold a song name. Drag the song to move it to a new location in the list.

## Remove a song from the Now Playing list

- In Playlist view, throw the song name off the side of the screen. This does not delete the song file from your phone.

## Delete a song

To delete a song file from your phone, you must put your phone in USB Drive mode and delete the song using your computer.

- 1 Connect your phone and your computer using the **USB cable**.
- 2 On your phone, tap **USB Drive**. If prompted, tap **OK**. On your computer, your phone appears as a removable drive.

---

**NOTE** On a Windows computer, if the Found New Hardware wizard opens, click **Cancel** to close the wizard.

- 3 Open **My Computer** (Windows XP), **Computer** (Windows Vista/Windows 7), or the **Finder** (Mac), and double-click the drive representing your phone.
- 4 Delete the song using your computer's controls.
- 5 On a Windows computer, to end the connection safely, right-click the drive representing your phone and click **Eject**. On a Mac computer, drag the drive representing your phone to the **Trash**. Trash changes to **Eject**.
- 6 Disconnect the **USB cable** from the computer when the USB drive screen no longer appears on your phone.

## Amazon MP3

Before you can download items using the Amazon MP3 application on your phone, you must have an Amazon account, and you must read and agree to the MP3 Music service terms and conditions.

After you purchase and download items from Amazon MP3, listen to them with your phone's Music application (see [Listen to music](#)).


---

**NOTE** Music you download from Amazon MP3 is not backed up to your Palm profile. To back up your music, you can copy downloaded files from the AmazonMP3 folder on your phone's USB drive to your computer (see [Copy files between your phone and your computer](#)).



---

## Sign in to your Amazon account

You must be signed in to your Amazon account to download music.


- 1 [Open Amazon MP3](#) .
- 2 Open the [application menu](#) and tap **Sign In**.
- 3 Enter your email address and password, and tap **Sign In**. To purchase songs without needing to enter your password each time, turn on **Enable1-Click**.

## Search for a specific song, album, or artist

- 1 [Open Amazon MP3](#) .
- 2 Tap **Search** and enter the song, album, or artist name.
- 3 Press **Enter** .



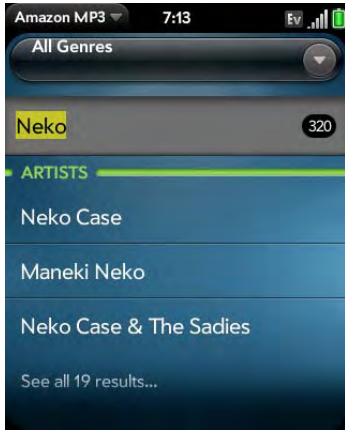

- 4 Do one of the following:



- If the item you want appears on the screen: Tap the song, album, or artist name. Tapping the name of a song plays the preview; tapping its price gives you the option to buy it (see [Preview and buy a song](#)).
- If the item you want doesn't appear: Tap **See all [total number of] results** at the bottom of the Artists, Albums, or Songs section.

## Browse songs, albums, artists, or genres

- 1 [Open Amazon MP3](#) .
- 2 Do any of the following:
  - View all songs in a certain genre: Tap  and tap the genre.
  - View the top 10 new and notable releases: Swipe left or right on the **New & Notable** album thumbnails.
  - View the top 100 new releases: Tap **New releases**.
  - View the top 100 albums: Tap **Albums**.
  - View the top 100 artists: Tap **Artists**.
  - View the top 100 songs: Tap **Songs**.

## View artist information

- 1 Search for (see [Search for a specific song, album, or artist](#)) or browse to (see [Browse songs, albums, artists, or genres](#)) an artist, and tap the artist name.
- 2 Tap the word in the lower-right corner of the screen (**Albums, Songs, or Bio**).
- 3 Tap to view any of the following:

**Albums:** To buy and download an album, tap the album price and tap **Buy**. Tap anywhere else on the album entry to view detailed album information.

**Songs:** To buy and download a song, tap the song price and tap **Buy**. Tap anywhere else on the song entry to preview the song.

**Bio:** Tap to read biographical information about the artist.

---

**IMPORTANT** Your credit card is charged for the price of an item as soon as you tap **Buy**.

---

## View album information and buy an album

- 1 Search for (see [Search for a specific song, album, or artist](#)) or browse to (see [Browse songs, albums, artists, or genres](#)) an album, and tap the album name.
- 2 To preview a song, tap anywhere on the song entry except the price.
- 3 Do either of the following:
  - Tap the album price and tap **Buy**.
  - Tap a song price and tap **Buy**.



---


**IMPORTANT** Your credit card is charged for the price of an item as soon as you tap **Buy**.

---

## Preview and buy a song

**BEFORE YOU BEGIN** Before you download a song to your phone, make sure you have enough storage space on your phone to fit the file. [Open Device Info](#) and look at the **Available** field under **Phone**.

- 1 Search for (see [Search for a specific song, album, or artist](#)) or browse to (see [Browse songs, albums, artists, or genres](#)) an album or artist entry containing the song you want.
- 2 To preview a song, tap anywhere on the song entry except the price.

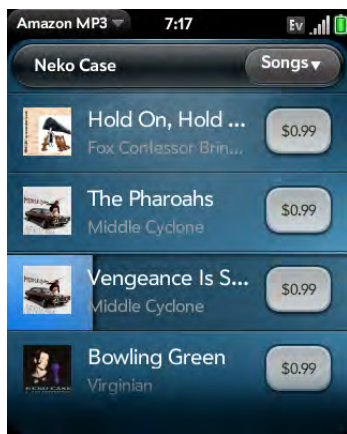

- 3 Tap the song price and tap **Buy**.


---

**IMPORTANT** Your credit card is charged for the price of an item as soon as you tap **Buy**.

---

## View and work with downloaded items

- 1 Tap **Download** on any screen displaying this button. This displays items that you are currently downloading or that you already downloaded.

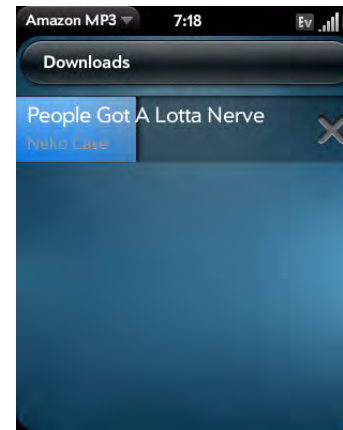

- 2 To cancel a current download, tap .

After you download an item, listen to it in the Music application (see [Listen to music](#)).





# Web and wireless connections

With your wireless service provider's network and your Palm® Pixi™ Plus phone's web browser, you can take the web with you almost anywhere you go.

The Bluetooth® wireless technology on your phone helps you easily set up wireless connections to a number of devices.

## In this chapter

- 124 Wi-Fi
- 126 Location Services
- 127 Web
- 131 Google Maps
- 132 VZ Navigator
- 134 Bluetooth® wireless technology

# Wi-Fi

## What is a Wi-Fi connection?

Many environments, such as corporate offices, coffee shops, airports, and libraries, offer access to a Wi-Fi network. A Wi-Fi network is a wireless local area network (WLAN). Your phone supports Wi-Fi connectivity based on the 802.11 standard (802.11b and 802.11g), with WPA, WPA2, WEP, and 802.1x authentication. A Wi-Fi access point, also called a hotspot, is a network device with an antenna that provides wireless connections to a larger network. When you're within range of an accessible Wi-Fi network, you can use your phone's Wi-Fi feature to connect to that network and access the web.

## Why use a Wi-Fi connection?

A Wi-Fi connection is especially helpful in the following situations:

- You're outside a coverage area and you want to access the web.
- You want to maintain a web connection while talking on the phone.
- You're inside a coverage area, but outside the Verizon Wireless EvDO coverage area. (A Wi-Fi connection may provide faster throughput than a 1x data connection.)

## Are there different kinds of Wi-Fi networks?

There are two types of Wi-Fi networks:

- **Open networks:** These networks broadcast their name (SSID) and do not require you to enter a password or other settings. To learn how to connect to an open network for the first time, see [Connect to a new open network](#).
- **Secure networks:** These networks may broadcast their name, but at the very least, they require you to enter a password that you get from an administrator (who may be, for example, the librarian or the person behind the counter at the coffee shop). You may also have to get other

network settings from the system administrator. To learn how to connect to a secure network for the first time, see [Connect to a new secure network](#).

To connect to either type of network after the first time, see [Connect to a previously used network](#).

## Turn Wi-Fi on and off

Do one of the following:


- **Open Wi-Fi** , and tap **On** or **Off**.
- **From any screen:** Open the [connection menu](#) at the upper-right corner, tap **Wi-Fi**, and tap **Turn on Wi-Fi** or **Turn off Wi-Fi**.

If your phone finds the network you want, tap the network name to connect to it. Otherwise, see [Connect to a new open network](#) and [Connect to a new secure network](#).

## Connect to a new open network

For an explanation of open networks, see [Are there different kinds of Wi-Fi networks?](#)

Some locations, such as airports or coffee shops, provide an open network but charge a fee to use it. After you connect your phone to the network, you need to open the web browser and register with the Wi-Fi service provider before you can check email or browse the web.

- 1 **Open Wi-Fi** .
- 2 Make sure Wi-Fi is on (see [Turn Wi-Fi on and off](#)).
- 3 Do one of the following:
  - **If the network you want is displayed:** Tap the network name.

- **If the network you want is not displayed:** Tap **Join network** and enter the network name. Make sure Open is displayed in the Security field, then tap **Connect**.


---

**TIP** You can also open Wi-Fi by opening the [connection menu](#), tapping **Wi-Fi**, and tapping **Wi-Fi Preferences**.


---

## Connect to a new secure network

For an explanation of secure networks, see [Are there different kinds of Wi-Fi networks?](#)


- 1 **Open Wi-Fi** .
- 2 Make sure Wi-Fi is on (see [Turn Wi-Fi on and off](#)).
- 3 Do one of the following:
  - **If the network you want is displayed:** Tap the network name, enter your **Username** and/or **Password**, and tap **Sign In**. You're done.
  - **If the network you want is not displayed:** Tap **Join network** and enter the network name. Follow steps 4 to 7.
- 4 Tap the **Security** field, and then tap the network type: **Open**, **WPA-personal**, **WEP**, or **Enterprise**.
- 5 Tap **Connect**.
- 6 A series of different screens appears depending on the network type. Enter or select the following if you are prompted to do so:  
  
**Username** and/or **Password**.  
  
**Certificate**
- 7 Tap **Sign In**.

## Connect to a previously used network

- **If Wi-Fi is turned off:** Turn on Wi-Fi (see [Turn Wi-Fi on and off](#)). Your phone automatically attempts to connect to a previously used network, starting with the most recently used network.
- **If Wi-Fi is turned on but you are not connected to a network:** Your phone automatically attempts to connect to a previously used network, starting with the most recently used network.
- **If you are connected to one network and want to use a different one:** **OpenWi-Fi** . Tap another network name.

## Disconnect from a network

When you disconnect from a network, you can keep it on your list of known networks so that your phone can automatically connect to it again. If you remove the network from your list of known networks, however, you must reconnect to the network. Follow the steps in [Connect to a new open network](#) or [Connect to a new secure network](#) to connect to the network again.

- **To disconnect from a network but keep it on your list of known networks:** Turn off Wi-Fi (see [Turn Wi-Fi on and off](#)). This disconnects from the network.
- **To disconnect from a network and remove it from your list of known networks:** **Open Wi-Fi** . Tap the network name, and then tap **Forget Network**.

## Customize connection settings

Do not change Wi-Fi settings unless you are having trouble connecting to a network.

**BEFORE YOU BEGIN** You must be connected to the network you want to customize (see [Connect to a new open network](#), [Connect to a new secure network](#), or [Connect to a previously used network](#)).

1 [Open Wi-Fi](#) .

2 Tap the network name.

3 In **Automatic IP settings**, tap **On** or **Off**.

**When Automatic IP Settings are on:** The IP address is automatically and dynamically configured.

**When Automatic IP Settings are off:** You can manually configure the IP address.

4 If you turned automatic IP settings off, enter any of the following:

**IP Address**

**Subnet Address**

**Gateway**

**DNS Server:** addresses (#1 and #2)

5 Tap **Done**.

## Location Services

The Location Services application provides information about your location to applications that request it. For example, Google Maps may use your location information if you need driving directions.

---

**NOTE** Location Services is available only when Google Services are on.

---

1 [Open Location Services](#) .

2 The first time you open Google Services you may be asked to review and accept the terms of use, and decide whether to allow anonymous data collection. Tap **Next** and do the following:

- Review the terms of use.
- If you decide not to allow anonymous data collection, tap the checkmark to remove it.
- Tap **Agree** or **Don't Agree**.

3 Decide whether to enable auto locate, or whether you want to be asked each time an application needs to know your location: Tap **Auto Locate** or **Ask Each Time**.

4 To change settings after you accept the terms of use, tap **On** or **Off** for any of the following:



- **Auto Locate:** If you turn Auto Locate off and an application subsequently needs to know your location, a notification appears asking if the application can identify your location. Tap **Allow** to turn on Location Services for that session only.
- **Geotag Photos:** If Geotag Photos is turned on, photos are tagged with the latitude and longitude coordinates of the location in which they were taken.

---

**DID YOU KNOW?** The geotag is stored as an Exif tag in the photo file, not on the image itself. A common use of the geotag occurs in online photo services like Photobucket and desktop apps like Google Earth, which use the data to position the photo as a thumbnail on a map.

---

- **Background Data Collection:** Turn on Background Data Collection to allow the collection of anonymous aggregate location data to improve the quality of the location services provided to applications that require them.
- 5 To turn Google Services on or off, open [application menu](#), tap **Locate Me Using**, and choose one or both of the following:
- **GPS**
  - **Use Google Services**


## Web

### Go to a website

The web browser on your phone is capable of displaying most web content. The browser features the latest web standard technologies such as HTML 4.01, CSS 2.1, Ajax, and JavaScript. It does not support plug-ins such as Flash or Java applets.

- 1 [Open Web](#) 🌐.

- 2 Enter the address of the page. You don't need to enter the prefix `http://www`.

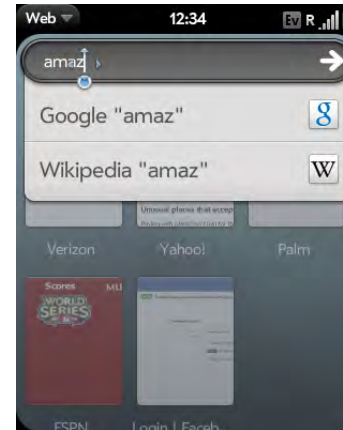

If the page appears in the list of viewed pages, tap it to go there again. If not, press **Enter** ⏎.

---

**DID YOU KNOW?** If you browse to a secure web page, the lock icon in the address line appears closed.

---

- 3 To cancel a page while it is loading, tap 🗑️.


### Go to a website using search

You can also search the web from the Launcher or Card view (see [Search to find info and make calls](#)).





- 1 [Open Web](#) 🌐.
- 2 Enter the search term and tap a search option.

## Open another browser

If you are looking at one web page and need to check something on a different one, simply open another browser.

- 1 **Open Web** , open the **application menu** and tap **New Card**.
- 2 Enter an address or search term for the second instance of the browser.
- 3 To move between the two pages, tap the center of the gesture area to display Card view. Tap one web page and then the other to go between the two.


## Navigate a web page

- **Move back through previously viewed pages:** Tap  or make the back gesture from right to left anywhere in the gesture area.
- **Move forward through previously viewed pages:** Tap  or make the forward gesture from left to right anywhere in the gesture area.
- **Refresh the current page:** Tap .
- **Scroll a page:** Swipe up or down on the screen.
- **View a web page in landscape mode:** Turn the phone on its side. When the display is in landscape mode, you can swipe up and down on the gesture area to scroll up and down a page.
- **Zoom in or out on a page:** Pinch out to enlarge items onscreen. Pinch in to decrease the size of items onscreen. Double-tap the screen to zoom in or out a specified amount.
- **Zoom in on a column of a web page:** Double-tap the page to center a column and enlarge it. To zoom out to see the whole page again, keep double-tapping.
- **Pan a page:** Tap, hold, and drag the page.
- **Enter information in a form:** Tap the form field. Enter or select information and press **Enter** .
- **Share a web address as a link:** Open the **application menu**, tap **Page**, and tap **Share**. Create the email message.
- **Display the address bar:** Start typing a search term or web address, or scroll to the top of the page.

## Add a web page to the Launcher

Add any web pages you visit frequently to the Launcher so you can access them in a few taps.

- 1 Open the page you want to add to the Launcher.
- 2 Open the **application menu**, tap **Page**, and tap **Add To Launcher**.

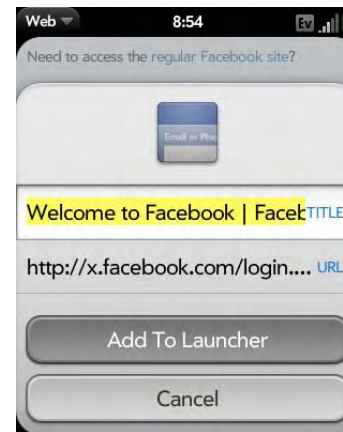

- 3 Enter any of the following:

**Icon:** Tap the currently displayed page icon thumbnail. Then tap, hold, and drag the web page to use a different portion of the page as the Launcher icon. You can zoom in or out of the page while selecting the portion you want to use. The portion that appears in the white square is used as the icon. Tap **Done**.

**Title:** See [Text selection gestures](#) for useful gestures if you want to edit the page title.

**URL:** Enter or edit the URL for the page. For example, change the URL to the home page of a site instead of a drill-down page within the site.


- 4 Tap **Add To Launcher**.

The page now appears as an icon on the Launcher. Tap the icon to open the page. To delete the page from the Launcher, see [Delete an application](#).



## Create a bookmark

- 1 Open the page you want to bookmark.
- 2 Open the [application menu](#) and tap **Add Bookmark**.

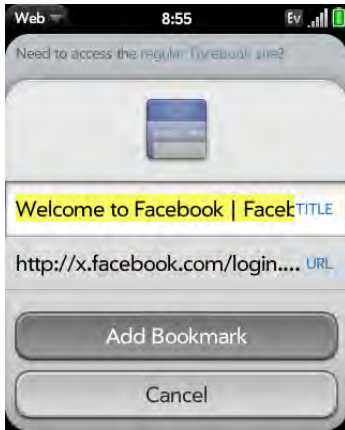

- 3 Enter any of the following:

**Icon:** Tap the currently displayed bookmark icon. Then tap, hold, and drag the web page to use a different portion of the page as the bookmark icon. You can zoom in or out of the page while selecting the portion you want to use. The portion that appears in the white square is used as the icon. If you add the bookmark to the Launcher, the icon is used as the Launcher icon. Tap **Done**.

**Title:** See [Text selection gestures](#) for useful gestures if you want to edit the bookmark title.

**URL:** Enter or edit the URL for the bookmark. For example, change the URL to the home page of a site instead of a drill-down page within the site.

- 4 Tap **Add Bookmark**.

The first 12 bookmarks you create become thumbnails on the start page of the web app.

## Open a bookmarked page


Do one of the following:


- From the start page when you open the browser, tap a thumbnail.
- To open a bookmark if it's not on the start page, or after you navigate away from the start page, open the [application menu](#) and tap **Bookmarks**. Then tap a bookmark.



## Edit, reorder, or delete a bookmark


- 1 Open the [application menu](#) and tap **Bookmarks**.

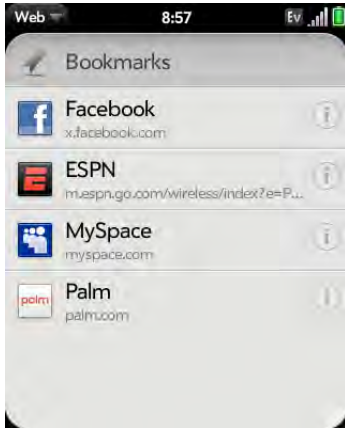

- 2 Do one of the following:
  - **Edit:** Tap  to the right of the bookmark name. Enter the new icon, title, or URL and tap **Save Bookmark**.
  - **Reorder:** Tap, hold, wait for the visual cue, and then drag the bookmark.
  - **Delete:** Throw the bookmark off the side of the screen and tap **Delete**.

## Return to previously viewed web pages


- 1 Open the [application menu](#) and tap **History**.

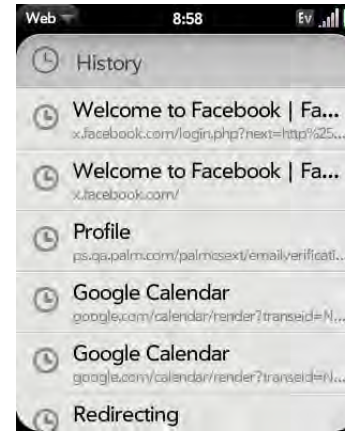

- 2 Scroll to the page name and tap the page.

You can also search for a recently viewed page by entering a term or address in the address bar in the standard Web view, that matches the page name or address.

## Use links on a web page

- **To follow a link to another page:** Zoom in on the page (pinch out or double-tap the page), and tap the link.
- **To dial a phone number that appears as a link:** Tap the link to display the dial pad with number entered, and tap .

## Customize web browser settings

- 1 [Open Web](#) .

- Open the [application menu](#) and tap **Preferences**.



- Set any of the following:

**Block Popups:** Prevents websites from opening up new browser windows. Tap **Yes** to turn Block Popups off.

**Accept Cookies:** Allows cookies from any website you view, even if you are redirected to a site from another site. Tap **Yes** to turn Accept Cookies off.


**JavaScript:** Tap **On** to turn off JavaScript. Turning off JavaScript may prevent some websites from functioning properly.


**Clear History:** Tap to delete your browsing history.

**Clear Cookies:** Tap to delete cookies used by some websites to remember visiting history and user settings.

**Clear Cache:** Tap to delete any web page content that has been stored in the local cache. This ensures that you are viewing the most current content when you visit a web page.





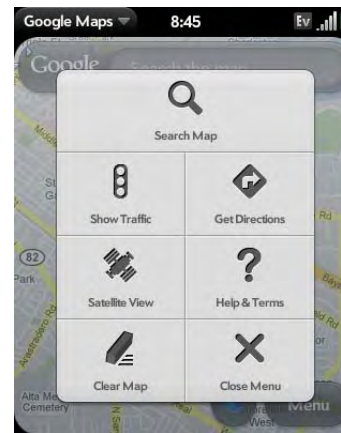



## Google Maps

- Open **Google Maps** .
- Tap **Menu** in the lower-right corner.



In Google Maps, use these icons to do the following:

Table 1. Google maps icons

Icon	Description
	<b>Search Map:</b> Search for location.
	<b>Show Traffic:</b> View local traffic conditions.
	<b>Directions:</b> Get directions.
	<b>Satellite:</b> View a satellite photo of the map area.
	<b>Map:</b> Return to Map view from Satellite view.
	<b>Help &amp; Terms:</b> Get help.
	<b>Clear Map:</b> Clear the current map.
	<b>Close Menu:</b> Close the Google Maps menu.

# VZ Navigator

You can use VZ Navigator to check weather conditions, get driving directions, and search for services.

## Sign up for VZ Navigator


The first time you open VZ Navigator, you are asked to pay a monthly subscription for the service. To continue, tap **Buy** and then tap **Accept** to confirm your purchase. Review the license agreement and tap **Accept** to continue.

---

**NOTE** When you agree to buy VZ Navigator, the charge is added to your monthly Verizon Wireless bill.

---


## Check local weather conditions

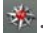
- 1 Open **VZ Navigator** .
- 2 If prompted, tap **Allow** to turn on **Location Services**.





- 3 Tap the temperature to see the local seven-day forecast. In forecast view, tap a day to see wind, precipitation, humidity, sunrise, and sunset information for that day.

## Get directions

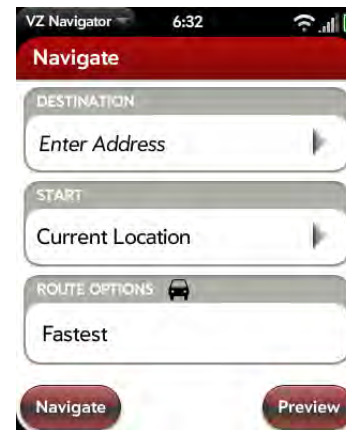- 1 Open **VZ Navigator** .
- 2 If prompted, tap **Allow** to turn on **Location Services**.
- 3 Tap **Navigate**.



- 4 Enter the following information:  
**Destination:** Enter a destination, or tap  and select a destination from Recents, Favorites, Contacts, or Airports.  
**Start:** Your current location is entered as your default starting point. Tap **Current Location** and enter a new starting point, or tap  and select a starting point from Recents, Favorites, Contacts, or Airports.  
**Route Options:** Tap to select your preferred route options.




- 5 Do one of the following:
  - To start turn-by-turn voice navigation: Tap **Navigate**.
  - To see step-by-step text directions: Tap **Preview**.

## Share location information

---

**NOTE** You can only share location information with other Verizon Wireless phones.

---

- 1 Open **VZ Navigator** .
- 2 If prompted, tap **Allow** to turn on **Location Services**.
- 3 Tap **Share**.
- 4 Tap **Share New Place**.
- 5 In the **To** field, do one of the following to address the message:
  - Enter a contact name, initials, or email address. Tap the email address when it appears.
  - Tap  to open the full contact list. Tap the contact you want.
  - Enter the full email address for a recipient who is not a contact.
- 6 (Optional) To share a location other than your current location, tap  in the **Place** field and browse to a new location.
- 7 (Optional) Type a message in the **Message** field.
- 8 Tap **Send**.

## Find a location or a service


- 1 Open **VZ Navigator** .

- 2 If prompted, tap **Allow** to turn on **Location Services**.
- 3 Tap **Find**.



- 4 Tap any of the following:
  - Places:** Search for a variety of services, including hospitals, gas stations, banks, restaurants, stores, and more.
  - Movies:** Search for movies playing near you.
  - Events:** Search for events happening near you.
  - Address:** Search for an address.
  - Airports:** Search for directions to an airport.

## Customize VZ Navigator

- 1 Open **VZ Navigator** .
- 2 If prompted, tap **Allow** to turn on **Location Services**.

- 3 Open the [application menu](#) and tap **Preferences**. Tap any of the following:



**Regional:** Select units of measurement for distance and temperature.

**Navigation:** Select a mode of transportation, and then set your preferences for the kind of route VZ Navigator should design for you.

**Display:** Select items for the icon tray displayed on maps and for the carousel displayed on the main screen of VZ Navigator.

**Audio:** Select the voice that gives you turn-by-turn directions, and set whether you want to hear street names or short voice prompts.

- 4 To clear all your VZ Navigator information, including messages, recents, and favorites: Open the [application menu](#), tap **Master Clear**, and tap **OK**.

## Bluetooth® wireless technology


### What is Bluetooth® wireless technology?

With the Bluetooth® wireless technology on your phone, you can connect to a number of Bluetooth devices, including a hands-free device such as a headset or car kit; see [Set up and use a Bluetooth® hands-free device](#).

Before you can connect to another Bluetooth device, you need to pair with that device. You can either make the pairing request from your phone (see [Make a pairing request to another device](#)), or accept a pairing request from the other device (see [Accept a pairing request from another device](#)).

### Turn the Bluetooth feature on/off

Do one of the following:

- [Open Bluetooth](#) , and tap **On** or **Off**.
- **From any screen:** Open the [connection menu](#), tap **Bluetooth**, and tap **Turn on Bluetooth** or **Turn off Bluetooth**.

### Make a pairing request to another device

**BEFORE YOU BEGIN** The other device must be discoverable to appear on your phone's Devices list. Check the documentation that came with the other device for information on making it discoverable.

You can make a pairing request to a Bluetooth audio device such as a headset, car kit, or A2DP device.

- 1 [Open Bluetooth](#) .

- 2 Make sure Bluetooth is on (see [Turn the Bluetooth feature on/off](#)).



- 3 Tap **Add device** and tap the device name on the list of discoverable Bluetooth devices.
- 4 If a passkey is not required, pairing is complete when the Devices list appears. If a passkey is required, tap **Yes, allow**.
- 5 Do one of the following:
  - **An automatically generated passkey appears on the passkey screen:** Check the other device screen to verify that the passkey is correct, and tap **Yes, connect** to connect.
  - **The screen displays a passkey generated by your phone:** Enter the displayed passkey on the other device.
  - **The screen prompts you to enter a passkey:** Check the documentation that came with the other device to see if there's a required passkey. If so, enter that passkey on your phone. If not, make up a passkey and enter it on both devices.

---

**TIP** You can also open the Bluetooth app by opening the [connection menu](#), tapping **Bluetooth**, and tapping **Bluetooth Preferences**.


---

## Accept a pairing request from another device

---

**NOTE** Your phone is discoverable only when the Bluetooth app is open, the app window is maximized, and Bluetooth is turned on. If you move away from the Bluetooth app, minimize the app to a card, or turn off the screen; your phone is no longer discoverable.

---

- 1 **Open Bluetooth** .
- 2 Make sure Bluetooth is on (see [Turn the Bluetooth feature on/off](#)).
- 3 Initiate a pairing from the other device.
- 4 When the connection request appears, tap **Yes, allow**.
- 5 If a passkey is not required, pairing is complete when the Devices list appears. If a passkey screen appears, do one of the following:
  - **An automatically generated passkey appears on the passkey screen:** Check the other device screen to verify that the passkey is correct, and tap **Yes, connect** to connect.
  - **The screen displays a passkey generated by your phone:** Enter the displayed passkey on the other device.
  - **The screen prompts you to enter a passkey:** Check the documentation that came with the other device to see if there's a required passkey. If so, enter that passkey on your phone. If not, make up a passkey and enter it on both devices.

## Connect with a paired device

After you pair with a device, you can connect to that device without having to go through the pairing process again.

---

**NOTE** To connect with a paired computer, you must initiate the connection from the computer. See the computer documentation for instructions.

---


- 1 [Open Bluetooth](#) .



- 2 Make sure Bluetooth is on (see [Turn the Bluetooth feature on/off](#)) and tap the device name.

## Disconnect from a device


Disconnecting from a device does not mean you delete the relationship you created between the device and your phone. See [Connect with a paired device](#) for instructions on how to reconnect with the device.

- 1 [Open Bluetooth](#) .
- 2 Tap the connected device name to disconnect from it. Or tap another device name to disconnect from the current device and connect to the new device.


## Delete a device

Deleting a device means you end the relationship you created between your phone and the device. This means that you must pair with the device again if you want to connect (see [Make a pairing request to another device](#) or

[Accept a pairing request from another device](#)). If all you want to do is temporarily disconnect from a device, see [Disconnect from a device](#).

- 1 [Open Bluetooth](#) .
- 2 Throw the name off the side of the screen and tap **Delete**.

## Rename a device

- 1 [Open Bluetooth](#) .
- 2 Tap and hold the device name.
- 3 Enter a new name.





# Documents

Your Palm® Pixi™ Plus phone enables you to take your office with you—including your Microsoft Office files. You can view and search Microsoft Word, Excel®, and PowerPoint® files on your phone.

You can also view PDF files on your phone.

## In this chapter

- 138 Doc View
- 141 PDF View


# Doc View


With Doc view, you can view Microsoft Word, Excel®, and PowerPoint® files on your phone.

## Open a file

**BEFORE YOU BEGIN** Before you put files on your phone, make sure you have enough storage space on your phone to fit the file. [Open Device Info](#) and look at the **Available** field under **Phone**.

You can view a file that you copy from your computer (see [Copy files between your phone and your computer](#)) or receive as an email attachment (see [Open attachments](#)). You can view files in DOC, DOCX, TXT, XLS, XLSX, PPT, and PPTX formats.

- 1 [Open Doc view](#) . The list of the Microsoft Office files that are on your phone appears onscreen.

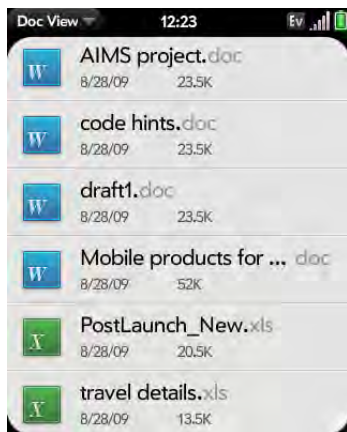

- 2 To search for a file, begin typing the name. Tap the file when it appears.
- 3 To open a second file: Open the [application menu](#) and tap **Open**. Tap the file.


## Change the display size





For information on zooming in and out, see [Zoom gestures](#).

- **Pinch out to enlarge items onscreen.**
- **Pinch in to decrease the size of items onscreen.**
- **Double-tap the screen to zoom in or out a specified amount.**
- **Turn on horizontal scroll (Word documents only):** Open the [application menu](#) and tap **Wide View**. In Wide view, text does not wrap on the right side of the screen. You can scroll horizontally to see more text.
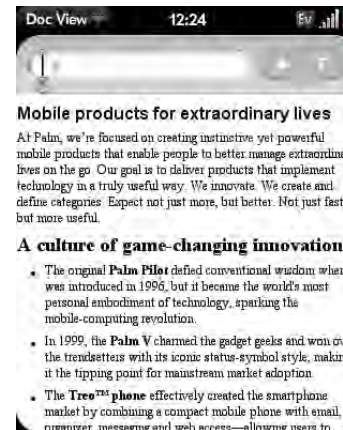
## Find text in a file

- 1 With a file open, open the [application menu](#) and tap **Find**.




- 2 Type the text you want to find and press **Enter**  or tap . The first instance of the text appears highlighted.
- 3 **Find the next instance:** Tap .
- Find the preceding instance:** Tap .
- 4 To exit search, open the [application menu](#) and tap **Find**.

## Save a file with a new name

- 1 With the file open, open the [application menu](#) and tap **Save As**.
- 2 Enter the new file name and tap **Save As**.

## Share a file

- 1 With the file open, open the [application menu](#) and tap **Share**.
- 2 Create the email message and tap .

## View file properties

You can view properties such as the file size, date created or modified, and more.

- 1 With the file open, tap the file name.




- 2 Tap outside the file properties to dismiss them.

## Work with comments, endnotes, and footnotes in a Microsoft Word document

In an open Word document, comments, endnotes, and footnotes are indicated by highlighted text.

- 1 Tap the text or footnote indicator to open the comment, endnote, or footnote.

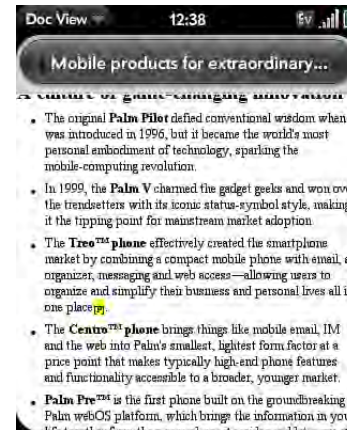

- 2 To close the comment, endnote, or footnote, tap outside it.

## Select a row or column in an Excel® spreadsheet


- Tap the row header or column header.

## Resize rows or columns in a spreadsheet

- 1 Open the [application menu](#) and tap **Resize**.
- 2 Tap, hold, and drag the row or column.

## Show or hide rows or columns in a spreadsheet

- **To hide a row or column:** Tap the row or column header to select it, and tap **Hide selected**.

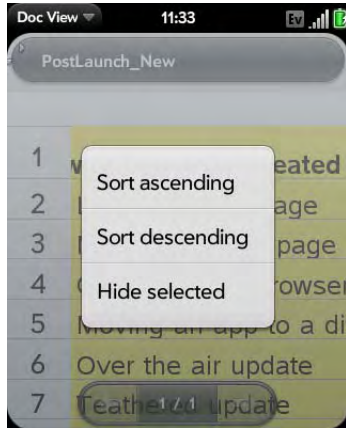




- **To show a hidden row or column:** Tap, hold, and drag one of the row or column headers to either side of the hidden row or column. Tap **Show Hidden**.
- **To display all hidden rows or columns:** Open the [application menu](#) and tap **Show All Hidden**.

## Sort your data in a spreadsheet

- Tap the column header and tap **Sort ascending** or **Sort descending**.

## Switch among sheets

Do one of the following:

- Tap  or  to move to the next or previous sheet.
- Open the [application menu](#) and tap **Worksheets**. Tap the sheet.
- Tap the current sheet number in the lower-left corner of the screen. Enter the page number you want to jump to and press **Enter** .

## View comments in a spreadsheet

In an open Excel® spreadsheet, comments are indicated by a red triangle in the upper-right corner of the relevant cell.

- 1 Tap the red comment indicator to open the comment.
- 2 Tap the comment to close it.




## Switch among views in a PowerPoint® presentation

In an open presentation, open the [application menu](#) and tap a view.

To return to normal presentation from Outline or Show Notes view:


- **From Outline view:** Tap a slide.
- **From Notes view:** Open the [application menu](#), and tap **Show Notes**.

## Move around in a presentation

- **Go to the next or preceding slide:** Tap  or .
- **Jump to a different slide:** Tap the current slide number in the lower-left corner of the screen. Enter the slide number you want and press **Enter** .

## Upgrade to Documents To Go® from DataViz

With Documents To Go® from DataViz, you can create and edit Word, Excel, and PowerPoint files right on your phone, in addition to viewing them.

- 1 **Open Doc View** .
- 2 Open a document, open the [application menu](#), scroll down the menu if needed, and tap **Document Editing**.

For more information on Documents To Go, go to [dataviz.com](http://dataviz.com).


# PDF View

With PDF View, you can view PDF (Adobe Acrobat) files on your phone.

## Open a file

You can view a PDF file that you copy from your computer (see [Copy files between your phone and your computer](#)) or receive as an email attachment (see [Open attachments](#)).

**BEFORE YOU BEGIN** Before you put files on your phone, make sure you have enough storage space on your phone to fit the file. [Open Device Info](#) and look at the **Available** field under **Phone**.

- 1 [Open PDF View](#) . The list of your files appears onscreen.
- 2 To search for a file, begin typing the name. Tap the file when it appears.






If the PDF file was created with a password, enter the password to open the file.

- 3 To open a second file: Open the [application menu](#) and tap **Open**. Tap the file.

**TIP** To move between open PDFs, tap the center of the gesture area to go to Card view. Tap the card of the PDF you want to read.

## Move around in a file

- **Go to the next or preceding page:** Tap  or .
- **Jump to a different page:** Tap the current page number at the bottom of the screen. Enter the page number you want and press **Enter** .


## Change the display size





For information on zooming in and out, see [Zoom gestures](#).

- **Pinch out to enlarge items onscreen.**
- **Pinch in to decrease the size of items onscreen.**
- **Double-tap the screen to zoom in or out a specified amount.**
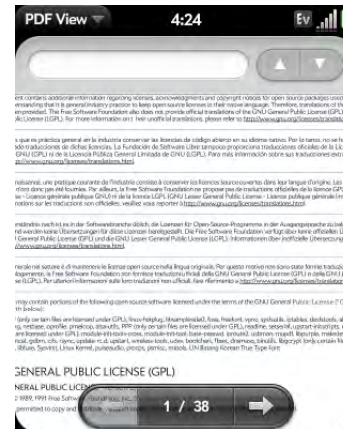
## Find text in a file

- 1 With a file open, open the [application menu](#) and tap **Find**.



- 2 Type the text you want to find, and press **Enter**  or tap . The first instance of the text appears highlighted.
- 3 **Find the next instance:** Tap .
- Find the preceding instance:** Tap .
- 4 To exit search, open the [application menu](#) and tap **Find**.


## Save a file with a new name

- 1 With the file open, open the [application menu](#) and tap **Save As**.



- 2 Enter the new file name and tap **Save As**.


## Share a file

- 1 With the file open, open the [application menu](#) and tap **Share**.
- 2 Create the email message and tap .

## View bookmarks

If a PDF file was created with bookmarks, you can see the bookmarks on your phone.

- 1 With the file open, open the [application menu](#) and tap **Bookmarks**.

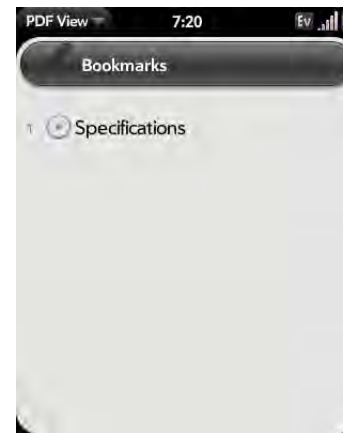

- 2 To search for a specific bookmark, type the bookmark name.
- 3 Tap a bookmark to jump to that section of the file.



# Preferences

There are lots of ways to make your Palm® Pixi™ Plus phone work better for you. Personalize your phone to make it match your lifestyle.

You can easily customize many features of your phone like the wallpaper, screen brightness, ringtone for incoming calls, and more.

## In this chapter

- 144 Backup
- 146 Date & Time
- 147 Device Info
- 150 Regional Settings
- 150 Screen & Lock
- 152 Sounds & Ringtones

# Backup

## Back up your information

A Palm profile connects your phone to Palm to get automatic updates, back up your data, and more. You create a Palm profile when you set up your phone.

Your phone backs up the contacts, calendar events, tasks, and memos that are in your Palm profile account, as well as system settings and applications you downloaded to your phone. An automatic backup to your Palm profile of all this information happens every day. So if you ever need to erase the info from your phone, you can restore all your backed-up info. You can turn off automatic backup, and you can also perform a manual backup.

Backup does not affect information stored in online accounts like Google. Information stored in online accounts is synchronized by the online provider at regular intervals. Information stored in Outlook Exchange is synchronized by your company's Exchange server.

- 1 **Open Backup** .



- 2 Do any of the following:
  - **Back up your information manually:** Tap **Back up now**.
  - **Turn off automatic backup and delete backed-up information:** Tap **On** to switch backup from On to Off. Tap **Turn Off And Erase Data**. This deletes all your information on the server. It does not affect the information on your phone.

---

**TIP** Open **Device Info** to delete the information on your phone (see [Erase data and reset your phone](#)).

---

- **Turn on automatic backup if you had previously turned it off:** Tap **Off** to switch Backup from Off to On.

## What information is backed up?

All data backed up to your Palm profile is encrypted, and only you, the profile owner, can access your data. Backed up data cannot be accessed by Palm. Data in your Palm profile account can only be added to or edited on your phone.

---

**IMPORTANT** In the event that your phone is lost or stolen, you can go to your Palm profile on palm.com and from there erase the data on your phone.

---

The following table lists info that is and is not backed up to your Palm profile:

Table 1.

Application	Backed up	Not backed up
Backup	Backup setting is on by default.	
Bluetooth		<b>Nothing is backed up.</b>



Table 1.

Application	Backed up	Not backed up
Calendar	Events in your Palm profile account.  Username for accounts like Google that sync calendar events online.  Preferences (see <a href="#">Customize Calendar</a> ).	Events in online accounts.  Password for online accounts.
Contacts	Contacts in your Palm profile account.  Username for accounts like Google that sync contacts online.  Preferences (see <a href="#">Customize Contacts</a> ).  Linking relationships between contacts.	Contacts in online accounts.  Original contact photos added from a local image on the phone.  Password for online accounts.  Speed dials.
Date & Time	<b>Nothing is backed up.</b>	
Doc View	<b>Nothing is backed up.</b> Keep a copy of these files on your computer (see <a href="#">Copy files between your phone and your computer</a> ).	
Email	Username of your email accounts. When you sign in to your Palm profile after your phone is erased, email accounts are restored automatically and synchronized.	Emails, their passwords, contents, and attachments, their sort order, and account preferences.

Table 1.

Application	Backed up	Not backed up
Launcher	<b>Nothing is backed up.</b>	
Location Services	<b>Nothing is backed up.</b>	
Memos	All memos.	
Messaging	Username of accounts.	Message contents, passwords, attachments, and history.
Music	<b>Nothing is backed up.</b> Keep a copy of these files on your computer (see <a href="#">Copy files between your phone and your computer</a> ).	
PDF View	<b>Nothing is backed up.</b> Keep a copy of these files on your computer (see <a href="#">Copy files between your phone and your computer</a> ).	
Phone	<b>Nothing is backed up.</b>	
Photos	Username of online accounts like Facebook and Photobucket.	<b>No photos are backed up.</b> Keep a copy of your photos on your computer (see <a href="#">Copy files between your phone and your computer</a> ). Online passwords are not backed up.
Regional Settings	<b>Nothing is backed up.</b>	
Screen & Lock	<b>Nothing is backed up.</b>	
Sounds & Ringtones	Nothing is backed up.	

Table 1.

Application	Backed up	Not backed up
Tasks	Tasks in your Palm profile account.  Username for accounts like Microsoft Exchange ActiveSync that synchronize tasks online.	Tasks in online accounts.  Passwords are not backed up.
Third-party apps	Apps you downloaded are downloaded again from App Catalog.	
Videos	<b>Nothing is backed up.</b> Keep a copy of these files on your computer (see <a href="#">Copy files between your phone and your computer</a> ).	
Wallpaper	<b>Nothing is backed up.</b>	
Web	Browser cookies.	


## Update your Palm Profile settings

In the event that your phone is lost or stolen, you can go to your Palm profile at <http://www.palm.com/palmprofile> and from there erase the data on your phone.

---

**IMPORTANT** To ensure that the data on your phone is consistent with that stored on your Palm profile, it is recommended that you perform a manual backup of your data after changing any of your Palm profile settings (see [Back up your information](#)).

---

- 1 [Open Backup](#) .
- 2 Tap [application menu](#) and tap **Palm Profile**.

- 3 Enter your Palm profile password and tap **Done**.



- 4 Edit any of the following:

**First Name/Last Name** Change the first name and/or last name associated with your Palm profile.

**Email:** Change the email address associated with your Palm profile. A verification email is sent to the new address. Click the link in the email to verify the new address. After you verify, the email address is changed.

**Security Question/Answer:** Tap the current question and tap a new one. Then tap **Answer** and enter an answer.

**Change Password:** Tap **Change Password**. Enter your new password and confirm it. Tap **Done**.

## Date & Time

You can set your phone to adjust the date and time automatically to the local date and time wherever you are, or you can turn this feature off and enter this information manually.

- 1 [Open Date & Time](#) ⓘ.



- 2 Set any of the following:

**Time Format:** Set whether to use a 12-hour or a 24-hour format.

**Network time:** Tap **On** or **Off**. If you turn this option off, select the date and time. If you switch from manual time to network time, there might be a delay before the network time updates on your phone.

**Network time zone:** Tap **On** or **Off**. If you turn this option off, tap the city that appears onscreen. Type the name of a country or city in the time zone you want, and then tap the location.

## Device Info

### View system information

- 1 [Open Device Info](#) ⓘ. Basic system information is displayed, such as your phone number, battery usage, and available memory.
- 2 To view more detailed system information, tap **More Info**, and tap **Software** or **Hardware**.

### Rename your phone


- 1 [Open Device Info](#) ⓘ.
- 2 Tap the **Name** field and enter the new name.

### Restart your phone

If an application freezes, first try restarting your phone. No files or settings are changed when you restart. Do one of the following:

- 1 Do any of the following:
  - [Open Device Info](#) ⓘ, tap **Reset Options** and tap **Restart**.
  - Press and hold the **power** button, tap **Power**, and then tap **Restart**.

---

**NOTE** If the screen does not respond to taps, press and hold **power**  and slide the **ringer switch** three times to restart your phone.

---

### Erase data and reset your phone

If restarting your phone does not solve the problem of application freezes, you may need to reset the phone. A reset deletes some or all information from your phone (depending on the type of reset you select). After a reset, you must follow the prompts to sign in to your Palm profile again before you can use your phone.


---

**IMPORTANT** You should perform a manual backup of your data before resetting your phone (see [Back up your information](#)).

---

- 1 [Open Device Info](#) ⓘ.

## 2 Tap **Reset Options**.

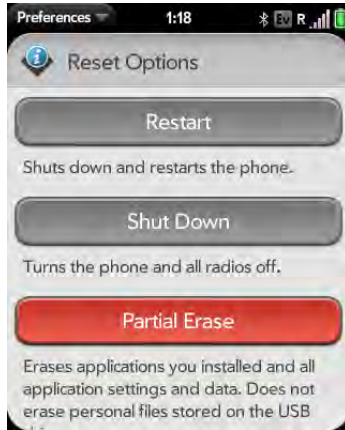

## 3 Do one of the following:

- **Erase all data from the phone except items stored in USB Drive storage, such as pictures, videos, and music:** Tap **Partial Erase** twice.
- **Erase all data from the phone:** Tap **Full Erase** twice (**scroll down to see this option**). All data from all accounts and in USB Drive storage is erased from your phone, including information about your Palm profile. But all your data on the Web—in your online accounts and in your Palm profile—is untouched. Perform a full erase when you give your phone to somebody else and you don't want that person to be able to access your data. Also, before giving your phone to another person, you must manually delete all the apps you installed, because they reappear on your phone after a full erase (see [Delete an application](#)).

After a full erase, you can sign in to your Palm profile either on a new webOS phone or the same phone you just erased. Signing in restores your Palm profile data and information from online accounts, but not your stored files such as pictures, videos, and music (you must copy those again to the phone; see [Copy files between your phone and your computer](#)). You can also sign in to your Palm profile on a new phone and restore your data to the new phone.

---

**TIP** You can also perform a full erase by pressing and holding **Option** + **Sym** + **power**.

---

**IMPORTANT** If you have a Palm profile from a phone that you no longer use, you can sign in to your existing profile. All info associated with your profile is downloaded to your new phone.

---

## Run Quick Tests

If you are troubleshooting your device with a support agent, you can run Quick Tests to get diagnostic information. If you need more information after running Quick Tests, you can run one or more Interactive Tests (see [Run Interactive Tests](#)).

- 1 [Open Device Info](#).
- 2 Open the [application menu](#) and tap **Quick Tests**.
- 3 Work with the support agent to view and report the test results.


## Run Interactive Tests

If you are troubleshooting your device with a support agent and need more information after running Quick Tests (see [Run Quick Tests](#)), you can run one or more Interactive Tests.

- 1 [Open Device Info](#).
- 2 Open the [application menu](#) and tap **Interactive Tests**.
- 3 Work with the support agent to run and view results from one or more tests.

## Change default applications

If you have more than one application on your phone that can perform a particular function, you can change the default application to use for that function. For example, your phone comes with two applications that can be used to show the map location of an address: Google Maps and VZ Navigator. You can select which of these applications opens by default when you tap an address to see its location on a map. Google Maps is the default application.

- 1 [Open Device Info](#) .
- 2 Open the [application menu](#) and tap **Default Applications**.
- 3 Tap a data type in **Data Types** and tap an application.

To override the default application setting when looking for the map location of an address: Press and hold **Option** , tap the address, and tap an application.

## Use Certificate Manager


Certificates are digital documents that are used to authenticate and exchange information on networks. Certificates can be issued for a user, a device, or a service.

### Add a certificate from USB Drive storage

You can install a certificate that is located in the USB Drive storage on your phone. To copy a certificate into USB Drive storage, see [Copy files between your phone and your computer](#).

- 1 [Open Device Info](#) .

- 2 Open the [application menu](#) and tap **Certificate Manager**.

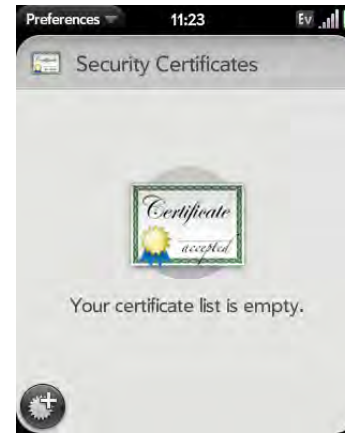


- 3 Tap  and tap the certificate name.

### Add a certificate from an email attachment

Open the email attachment (see [Open attachments](#)), and then tap **Trust Certificate**.


### View certificate details

Only user-installed certificates can be viewed.

- 1 [Open Device Info](#) .
- 2 Open the [application menu](#) and tap **Certificate Manager**.
- 3 Tap the certificate name.

### Delete a certificate


Only user-installed certificates can be deleted.

- 1 [Open Device Info](#) .
- 2 Open the [application menu](#) and tap **Certificate Manager**.
- 3 Tap the certificate and tap **Delete Certificate**.

## Regional Settings

### Language


You can set your phone display to any language available for the device.

- 1 [Open Regional Settings](#) .
- 2 Tap the language.
- 3 If a region list is displayed, tap the region.
- 4 Confirm you want to use the new language, or revert to the original language.

Your phone resets after you select a new language. You do not lose any data or applications from the reset.

### Formats

You can set your phone to format numbers, currency, date, and time to reflect your country's style.

- 1 [Open Regional Settings](#) .
- 2 Tap the country name.
- 3 Do one of the following:
  - Type the name of the country, and when it appears, tap it.


- Scroll down to find a country, and then tap it.

- 4 Confirm you want to change the format, or tap **Cancel**.

Your phone restarts after you select a new country format. You do not lose any data.


## Screen & Lock

### Change screen brightness

- 1 [Open Screen & Lock](#) .
- 2 Under **Screen**, tap, hold, and drag the **Brightness** slider to the preferred level.


### Set the interval for turning the screen off automatically

By default, your screen turns off after one minute of inactivity to save battery power. You can change this interval.

- 1 [Open Screen & Lock](#) .
- 2 In **Turn Off After**, tap the interval shown, then tap the number of seconds or minutes.

### Change your wallpaper

Your wallpaper is the screen background in Card view. You can customize the wallpaper to show a favorite picture.

- 1 [Open Screen & Lock](#) .
- 2 Tap **Change Wallpaper**.

- 3 Do one of the following:
  - **Use an existing picture as the background:** Tap the album containing the picture, and tap the picture (see [Save a picture as wallpaper](#)).
  - **Use a new picture as the background:** Tap **New Photo** and take the picture.
- 4 (Optional: applies to new pictures only) Do either or both of the following:
  - To zoom out or in on a part of the picture, pinch in or out on the picture.
  - To capture the portion of the picture you want for your wallpaper, tap and hold the picture, and then drag the portion you want to the center of the onscreen box.
- 5 Tap **Set Wallpaper**.

## Turn advanced gestures on/off

Turning on advanced gestures gives you two new gestures, previous and next, and also changes the way you make the back gesture, and the forward gesture (in Web only).

- **New gestures:** The previous and next gestures let you move among your open applications without first going to Card view. The previous gesture is a full swipe from left to right across the entire length of the gesture area. The next gesture is a full swipe from right to left across the entire length of the gesture area. Use these gestures when you have more than one app open and an app is displayed full-screen. By making the previous and next gestures you go from full-screen view to full-screen view of each app. The order of applications is determined by the order that you opened them or arranged them in Card view.
- **Change to back gesture:** The back gesture still goes from right to left in the gesture area, but you must make a shorter swipe, from the center outward.

- **Change to front gesture:** The front gesture (available in Web only) still goes from left to right in the gesture area, but it's a shorter swipe, from the center outward.

- 1 **Open Screen & Lock** .



- 2 In **Switch Applications**, tap **On** or **Off**.

## Set options for unlocking the screen

The screen locks five seconds after it turns off automatically, or immediately if you turn the screen off manually. Use Secure Unlock if you want to require a PIN or a password to unlock the screen.

---

**TIP** If your company issued your phone to you, check with your system administrator whether the company has its own settings for locking and unlocking the screen of your phone.

---

- 1 **Open Screen & Lock** .

- To turn on Secure Unlock, tap **Off** in **Secure Unlock**, and then tap **Simple PIN** or **Password** and do one of the following:
  - **Simple PIN:** Enter a PIN of any length. This is a PIN that you make up. Enter the PIN again to confirm, and then tap **Done**.
  - **Password:** Enter a password containing any combination of letters and numbers. Enter the password again to confirm, and then tap **Done**.

---

**IMPORTANT** Be sure to write down your PIN or password and keep it somewhere safe. If you forget your PIN or password, you need to remotely reset your phone and may lose data.

---

- Tap **Lock After** to choose whether the screen locks after a designated time, or after the screen turns off.
- (Optional) Under **Notifications**, tap **On** or **Off** to set whether notifications are displayed when the screen is locked.
- To turn Secure Unlock off, in **Secure Unlock**, tap **Off**. Enter the PIN or password, and then tap **Done**.

---

**TIP** To change your PIN or password, in **Secure Unlock**, tap **Change PIN** or **Change Password**. Enter the old PIN/password and the new PIN/password, and then tap **Done**.

---

## Sounds & Ringtones

### Manage system sounds and notifications


You can turn system sounds, such as transition sounds, and notification alerts, on or off. You can also set the volume for system sounds.

---

**NOTE** Sliding the ringer switch off turns off system sounds. The ringer switch does not affect the Clock alarm or media sounds, such as Music and Video.

---

- Open **Sounds & Ringtones** .

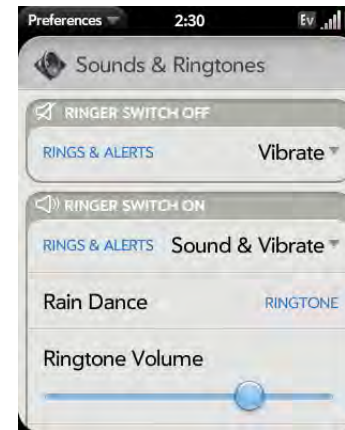

- In **Ringer Switch Off**, tap **Vibrate** or **Mute** to set whether your phone vibrates when you slide the ringer switch off.
- Under **Ringer Switch On**, set any of the following:

**Rings & Alerts:** Select **Sound & Vibrate**, or **Sound**. To change the ringtone for incoming calls, see [Select the ringtone for incoming calls](#). Tap, hold, and drag the **Ringtone Volume** slider to set the ringtone volume.



---

**TIP** Adjusting the Ringtone Volume slider is the same as using the **volume up** and **volume down** buttons on the side of the phone.

---

**System Sounds:** Set whether to turn on systemwide sounds for general actions such as transitions and alarms set in Clock. Tap, hold, and drag the Volume slider to set the system sounds volume.



---

**TIP** By default, when the ringer switch is off, you can still hear the Clock alarm. If you want to change this setting, go to **Clock > Preferences**. Under **Ringer Switch Off**, change **Play alarm anyway** to Off or On.

---

## Select the ringtone for incoming calls




The ringtone you select here applies globally to all incoming calls. You can also set a unique ringtone for a contact (see [Add a ringtone to a contact](#)).

- 1 **Open Sounds & Ringtones** .
- 2 Tap the displayed ringtone to open the full list of tones.
- 3 Tap the name of the ringtone to select it.
- 4 Tap  to listen to the ringtone.
- 5 Use the back gesture to get to the **Ringtone Volume** slider, and then tap, hold, and drag the slider to change volume.

## Select a song as a ringtone

You can add the first few seconds of a song as the ringtone for your phone.

The ringtone you select here applies globally to all incoming calls. You can also set a unique ringtone for a contact (see [Add a ringtone to a contact](#)).

- 1 **Open Sounds & Ringtones** .
- 2 Tap the displayed ringtone.
- 3 Tap .
- 4 Tap  to the right of a song title to preview it.
- 5 Tap the song title to add it as your ringtone.
- 6 Use the back gesture to get to the **Ringtone Volume** slider, and then tap, hold, and drag the slider to change volume.

## Download a ringtone

You can copy or download music, a sound, or a ringtone to use as a ringtone on your phone. Supported file types are MP3, AAC, AAC+, AMR, QCELP, and WAV.

- 1 Identify a file on your computer to use as a ringtone on your phone.
- 2 Connect your phone to your computer using the **USB cable**.
- 3 On your phone, tap **USB Drive**. On your computer, your phone appears as a removable drive.
- 4 Open **My Computer** (Windows XP), **Computer** (Windows Vista/Windows 7), or the **Finder** (Mac), double-click the drive representing your phone, and drag and drop files to the **ringtones** folder on your phone.
- 5 On a Windows computer, to end the connection safely, right-click the drive representing your phone and click **Eject**. On a Mac computer, from your desktop, drag the drive representing your phone to the **Trash**. Trash changes to **Eject**.
- 6 Disconnect the **USB cable** from the computer when the USB Drive screen is no longer displayed on your phone.

The new file appears in the list of ringtones on your phone. You can select the new ringtone to apply to all incoming calls (see [Select the ringtone for incoming calls](#)) or set it as a unique ringtone for a contact (see [Add a ringtone to a contact](#)).



# Troubleshooting

Although we can't anticipate all the questions you might have, this chapter provides answers to some of the most commonly asked questions. For additional information and answers to other common questions, visit [palm.com/support](http://palm.com/support).

## In this chapter

- 156 For users of other Palm® devices
- 156 Battery
- 161 Screen and performance
- 162 Phone
- 163 Hands-free devices
- 164 Synchronization
- 166 Sending and receiving data in Email, Messaging, and Web
- 167 Email
- 167 Messaging
- 168 Web
- 169 Calendar and Contacts
- 169 Camera
- 170 Amazon MP3
- 170 Transferring information from your computer
- 170 Backing up and restoring data
- 171 Updates
- 172 Third-party applications
- 172 Making room on your phone

## For users of other Palm® devices

### I want to transfer my data from my computer

If you previously synchronized data from a Palm® smartphone—such as contacts or calendar events—with a desktop organizer such as Palm® Desktop by ACCESS or Microsoft Outlook®, you can do a one-time, one-way export of that data from the desktop organizer to your Palm® Pixi™ Plus phone.

---

**IMPORTANT** If your desktop Outlook synchronizes with an Exchange server using Microsoft Exchange ActiveSync, you cannot do a one-way export of that Outlook data to your phone. Instead, set up your Exchange account to synchronize with your phone (see [How do I send and receive email on my phone?](#)).

---

**Windows:** You can transfer contacts, calendar events, tasks, and memos/notes from Palm Desktop software by ACCESS version 6.2 and Microsoft Outlook 2003 or later. If you don't have Palm Desktop version 6.2, download it for free from [palm.com/support](http://palm.com/support).

**Mac:** You can transfer contacts, calendar events, and tasks from Address Book, iCal, or Palm Desktop software by ACCESS version 6.2. If you don't have Palm Desktop version 6.2, download it for free from [palm.com/support](http://palm.com/support).

---

**NOTE** You can transfer data from Palm Desktop, Outlook on your Windows computer, and Address Book and iCal on your Mac computer, even if you never synchronized with a Palm smartphone.

---

For instructions on doing a one-time, one-way transfer of your data, see [Transferring data](#). For more detailed information, go to [palm.com/migrate-pixi](http://palm.com/migrate-pixi).

## Battery

---

**WARNING** Use only batteries and chargers that are approved by Palm with your phone. Failure to use a battery or charger approved by Palm may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage. Use of unapproved third-party power supply accessories may damage the device and void the Limited Warranty for the product.

---

### I can't charge the battery

- If you're using a new battery or a new charger, make sure the battery and charger are approved by Palm for use with your phone. Failure to use an approved battery or charger may prevent your phone from turning on or being charged.
- If you're using an existing, approved battery, the battery may have reached the end of its useful life and may need to be replaced. See [I need to replace the battery](#) for details.

### I need to replace the battery

Your Pixi Plus phone comes with a replaceable battery. Be sure to use a battery that is approved by Palm and that is compatible with your phone. Failure to use the proper battery may result in personal injury or product damage, and it voids your phone warranty.


---

**NOTE** Please dispose of the old battery properly.


---

- 1 If the **USB cable** is attached to the phone, disconnect the USB cable.
- 2 If a wired headset is attached to the phone, disconnect the headset.

- 3 Turn the phone completely off (see [Turn everything \(the screen and wireless services\) on/off](#)).
- 4 To begin separating the back cover from the body of the phone, use your thumbnail to release the clasp at the midpoint of the left side of the phone (see a in step 5).

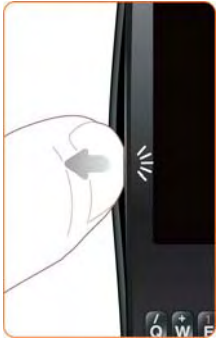

- 5 Run your thumbnail around the hairline opening to release the upper-left and top clasps. You may hear a sound when the clasp releases.

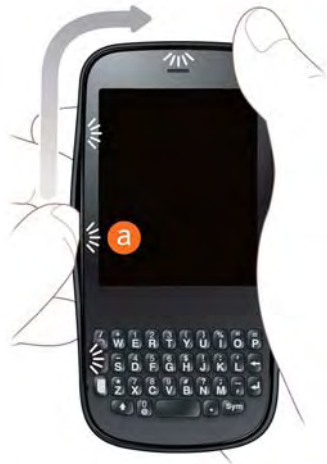

- 6 Run your thumbnail around the hairline opening to release the bottom-left and bottom clasps. End at (b).



- 7 Swing the body of the phone out of the back cover as if the right side were a hinge.



- 8 Remove the **battery** by sliding your finger under the groove at the side of the battery.



- 9 Insert the new **battery**.




- 10 To replace the back cover: Insert the ringer switch into the hole provided for it on the right side of the back cover.



- 11 Press the back cover and the body of the phone together at each pair of clasps. You can feel the clasps engage.





- 12 Press and hold **power**  on the upper-left corner of your phone until you see the Palm logo on the screen (approximately five seconds). Please be patient while your phone starts up.

---

**TIP** If your phone does not turn on after you insert the battery and press and hold **power**, you may need to charge the battery (see [Charge the battery](#)).

---

### I can't get my screen to turn on after removing and replacing the battery

Removing the battery turns off your phone completely, so you can't just press **power**  to turn on the screen. Instead, press and hold **power**  until you see the Palm logo on the screen (approximately five seconds). Please be patient while your phone starts up.

---


**TIP** If your phone does not turn on after you press and hold **power**, you need to charge the battery (see [Charge the battery](#)).

---

### I can't get the back cover off

- 1 If the **USB cable** is attached to the phone, disconnect the USB cable.
- 2 If a wired headset is attached to the phone, disconnect the headset.
- 3 If you are removing the cover to replace the battery, turn the phone completely off (see [Turn everything \(the screen and wireless services\) on/off](#)).

- 4 To begin separating the back cover from the body of the phone, use your thumbnail to release the clasp at the midpoint of the left side of the phone (see a in step 5).

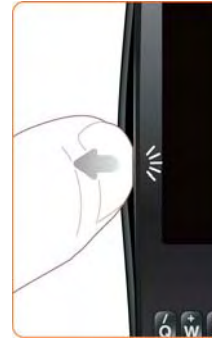

- 5 Run your thumbnail around the hairline opening to release the upper-left and top clasps. You may hear a sound when the clasp releases.



- 6 Run your thumbnail around the hairline opening to release the bottom-left and bottom clasps. End at (b).



- 7 Swing the body of the phone out of the back cover as if the right side were a hinge.



### I can't get the back cover back on


- 1 Insert the ringer switch into the hole provided for it on the right side of the back cover.



- 2 Press the back cover and the body of the phone together at each pair of clasps. You can feel the clasps engage.





- 3 Press and hold **power**  on the upper-left corner of your phone until you see the Palm logo on the screen (approximately five seconds). Please be patient while your phone starts up.

---


**TIP** If your phone does not turn on after you insert the battery and press and hold **power**, you need to charge the battery (see [Charge the battery](#)).




---

## Screen and performance

### The screen appears blank



To save power, the screen dims automatically after a period of inactivity, and then turns off.

If you just inserted or replaced the battery, you need to press and hold **power**  until you see the Palm logo on the screen. Otherwise, follow these steps in sequence if you see a blank screen:

- 1 To brighten the screen if it has dimmed, tap the screen.
- 2 To turn on the screen, press **power** . Drag  up to unlock the screen.
- 3 Look closely at the screen. If you can see a dim image, try adjusting the screen brightness (see [Change screen brightness](#)).
- 4 If the problem persists, connect your phone to the **AC charger** (see [Charge the battery](#)). If you see a dim image, try to restart your phone (see [Restart your phone](#)).
- 5 If that doesn't work, press and hold **power**  and slide the **ringer** switch three times to restart your phone. Please be patient while your phone starts up.

### An application is not responding to taps

Try the following steps in sequence:

- 1 [Open Device Info](#)  and restart your phone (see [Restart your phone](#)).
- 2 If the screen does not respond to taps at all, press and hold **power**  and slide the **ringer** switch three times to restart your phone. Please be patient while your phone starts up.

### Applications are running slower than usual

---

**TIP** Be sure that any third-party applications you install are compatible with the Palm® webOS™ platform. Applications written for Palm smartphones using the Palm OS operating system or Windows Mobile are not compatible with your Pixi Plus phone. If you can try a free version of the software before purchasing it, you can test it first to make sure it works properly. In App Catalog, you can purchase the Classic application from MotionApps to run Palm OS applications on your Pixi Plus phone.

---


- 1 Tap the center of the gesture area to display Card view.
- 2 Scroll through the cards and note how many applications you have running.
- 3 Close any application you are not using by throwing its card off the top of the screen.

If the problem persists, try restarting your phone (see [Restart your phone](#)).

### My gestures in the gesture area aren't working

- Some gestures begin in the gesture area and end in the touchscreen, and vice versa. Crossing the border between the two areas with your finger is crucial to making the gesture successfully. Likewise, the drag gesture for

opening a menu begins at the top of the phone, above the screen, and crosses down onto the screen.

- If you cannot make the back gesture, check to see if you have the next/previous app gestures turned on (see [Turn advanced gestures on/off](#)). If so, you need to make a short swipe left for the back gesture, and a full swipe right or left for the next or previous open app.
- Likewise, you can't use the next/previous app gestures unless you turn them on (see [Turn advanced gestures on/off](#)).
- You can see animations of many gestures: [Open Help](#)  and tap **Clips**. Or go to [palm.com/support](https://palm.com/support) to watch the animations on your desktop computer. Also, see [Use gestures: tap, swipe, drag, flick, pinch](#).

## There are small icons in the lower-right corner of the screen

Those icons represent notifications that you have not opened or dismissed. For most types of notifications, if you do not tap a notification after a few seconds, it becomes an icon in the lower-right portion of the screen. If you see one or more icons, tap anywhere on the bottom of the screen to display your notifications.

## Phone

### Signal strength is weak


Become familiar with low coverage areas where you live, commute, work, and play. Then you know when to expect signal-strength issues.

- If you're standing, move about 10 feet (3 meters) in any direction.
- In a building, move near a window. Open any metal blinds.
- In a building, move outdoors or to a more open area.
- Outdoors, move away from large buildings, trees, or electrical wires.
- In a vehicle, move your phone so that it's level with a window.

## My phone won't connect to the mobile network

- Try the suggestions in the preceding section for weak signals.
- Turn off your phone and turn it on again (see [Turn the phone on/off](#)).
- Restart your phone (see [Restart your phone](#)).

## I see five bars in the signal-strength icon, but I still can't connect to the network

The **signal-strength**  icon always displays five bars. Your signal strength is indicated by the number of bars that are shaded white. If most or all of the bars are gray, you are in an area of weak or no coverage.


## The other person hears an echo

- Try decreasing the volume on your phone—whether you are using the speakerphone or the earpiece—to avoid coupling or feedback on the other person's end.
- Position the earpiece closer to your ear to prevent sound leaking back into the microphone.
- If you're using the speakerphone feature with your phone lying on a flat surface, try turning the phone face down (screen facing the surface).

## I hear my own voice echo


Ask the person on the other end of the call to turn down the volume on his or her phone or to hold the phone closer to his or her ear.

## My voice is too quiet on the other end

- Be sure to position the microphone, which is on the lower-left side of the keyboard next to the **Option**  key, close to your mouth. Make sure you are not covering the microphone with your cheek or chin.

- Check the **signal-strength**  icon. If the signal is weak, try to find an area with better coverage (see [Signal strength is weak](#)).

## I hear static or interference

Check the **signal-strength**  icon. If the signal is weak, try to find an area with better coverage (see [Signal strength is weak](#)).

If you're using a hands-free device enabled with Bluetooth® wireless technology, try the following:

- Move your phone closer to the hands-free device. Audio quality degrades as the distance between your phone and the hands-free device increases. The effective range for a hands-free device varies among manufacturers.
- Confirm that no obstructions, including your body, are between the phone and your hands-free device. For example, move your phone to the same side of your body as your hands-free device.

## My phone seems to turn off by itself

Your phone has a power-saving feature that's set to turn off the screen if it has been idle for one minute. You can change the auto-shut off interval (see [Set the interval for turning the screen off automatically](#)).

If you restart your phone, wireless services, such as Wi-Fi and Bluetooth, are automatically turned on if they were on before the restart. However, if the phone can't determine if a wireless service was on before the restart, that service does not automatically turn on (see [Turn the phone on/off](#)).

If the problem persists and you're using third-party applications, see [Third-party applications](#) for additional suggestions.

## Hands-free devices

### I can't make or receive calls using a Bluetooth® hands-free device

Verify all of the following:

- The Bluetooth feature is turned on (see [Turn the Bluetooth feature on/off](#)).
- Your Bluetooth hands-free device is charged and turned on.
- You have already formed a partnership between your phone and your hands-free device, and the hands-free device appears in the **Devices** list (see [Connect with a paired device](#)).
- Your phone is within range of the hands-free device. Bluetooth range is up to 30 feet (10 meters) in optimum environmental conditions, which include the absence of obstacles, radio interference from nearby electronic equipment, and other factors.
- You are away from other devices using the 2.4GHz radio frequency, such as cordless phones and microwaves. If this is impossible, move the phone closer to the hands-free device.
- The hands-free device is compatible with your phone. Go to [palm.com/support](http://palm.com/support) to see a list of supported devices.

### I lost the connection between my phone and my Bluetooth headset

If your headset isn't working, delete the existing partnership (see [Delete a device](#)) and create a new one (see [Set up and use a Bluetooth® hands-free device](#)).

### I hear static or interference when using my hands-free device

- Try moving your phone closer to the hands-free device. Audio quality degrades as the distance between your phone and the hands-free device increases. The effective range for a hands-free device varies among manufacturers.

- Confirm that no obstructions, including your body, are between the phone and your hands-free device.
- Move to a quieter location to reduce environmental noise.

## Some features of my hands-free device don't work with my phone

- Check the compatibility list at [palm.com/support](http://palm.com/support) to ensure that your device is compatible with your Pixi Plus phone.
- Not all hands-free features work with every hands-free device. Check the documentation that came with your hands-free device or the manufacturer's website for feature-compatibility information specific to your device.

## Synchronization

### What is synchronization?

Anytime you are in Email, Calendar, or Contacts, you can set up a relationship to wirelessly sync data with selected service providers—for example, Google or Microsoft Exchange ActiveSync® (EAS—check to see if your company supports this). Sync means that if you enter, change, or delete information in one location, the change automatically shows up in the other location. So if you enter a Google contact in the Contacts application on your phone, the contact appears in your online Google contacts—no need to enter it twice.

You must already have an account with a service provider before you can set it up on your phone.

### How do I set up synchronization with an online account?

The first time you open Email, Contacts, or Calendar, you are given the option to enter settings for one or more online accounts (see [Set up email](#), [Use Contacts for the first time](#), or [Use Calendar for the first time](#)). For any account, you need to enter the settings in only one of these applications to synchronize data for all three.

You can add additional accounts at any time using the preferences in any of these applications (see [Set email preferences](#), [Customize Contacts](#), or [Customize Calendar](#)).

You can also set up the Messaging application to work with an online instant messaging (IM) account (see [Set up an instant messaging \(IM\) account](#)), and the Photos application to work with an online pictures account such as Facebook or Photobucket (see [Set up an online pictures account on your phone](#)).

---

**NOTE** See [Online accounts available for webOS phones](#) for the current list of online accounts that synchronize your info and those that do a one-way transfer of info either from the web to your phone, or from your phone to the web.

---

### I don't want to sync calendar or contact information with my online account—just email

For most online account providers that sync with more than one app—for example, Google—if you do not want to sync an application with that provider's online account, you can remove that account from within the application. The online account continues to sync with any other related applications.

---

**IMPORTANT** You cannot remove individual Exchange account applications. If you remove your Exchange account from one application, sync stops with all your Exchange apps.

---

- 1 [Open](#) the application.
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Tap **Remove Account**, and then tap **Remove [app name] Account**.

## I want to sync with Outlook or Palm Desktop software on my computer

By default, your Pixi Plus phone does not support synchronization with Palm Desktop software or Outlook on your desktop computer. Your Pixi Plus phone, however, gives you options for synchronization without a cable. You can sync with online services that Palm has partnered with so that you can store and sync your info in online accounts. You can access your data even when you are not able to make a connection to the web because your data is stored on your phone.

If you have data from a Palm smartphone in Outlook or Palm Desktop software, you can do a one-time, one-way export of the data from the desktop application to your phone (see [How do I get data off my computer?](#)). You can assign this data to sync with an online account. You can also assign it to the Palm profile account. Data in this account is backed up to your Palm profile daily, so you can retrieve it if you need to reset your phone. But it is not a true sync because you cannot change your Palm profile data anywhere except on your phone.

If your desktop Outlook synchronizes with an Exchange server using Microsoft Exchange ActiveSync, you cannot do a one-way export of that Outlook data to your phone. However, you can synchronize the Outlook data wirelessly with your phone through your Exchange account.

---

**TIP** A number of third-party applications (sold separately) are available that let you synchronize data on your Pixi Plus phone with a desktop application. Visit [palm.com/sync-solutions](http://palm.com/sync-solutions) to learn more

---

## I have an Exchange ActiveSync account at work, but my data is not being downloaded to my phone

Check with your system administrator to obtain or verify the name of the mail server that offers you wireless access to the corporate mail system. If you cannot obtain the name of this server (some companies do not give it out, because they do not want wireless access to their servers), you cannot synchronize with your Exchange ActiveSync account.

If your company requires you to change your password for accessing your Exchange ActiveSync account, you must change the password on your phone (see [Change account login settings](#)).

## I entered the settings to sync with Exchange ActiveSync, but I can't synchronize with my company's Exchange server

Check with your system administrator to find out if a systemwide locking policy is in place.

## A notification tells me that ActiveSync encountered a problem on the server

There is a temporary problem with the server, or the server may be temporarily overloaded. Try again later, and if the problem persists, contact your system administrator.

## A notification tells me that there is not enough free memory to synchronize

- 1 Tap the center of the gesture area to display Card view.
- 2 Scroll through the cards and note how many applications you have running.

- 3 Close any application you are not using by throwing its card off the top of the screen.

If the previous steps don't fix the problem, see [Making room on your phone](#) for other suggestions.

### A notification tells me that the server could not be reached

Make sure your phone is connected to the Verizon Wireless network or a Wi-Fi network (see [Icons in the title bar](#)).

If you have a network connection and receive this notification, it means your phone had to wait too long to connect to the Exchange server. The connection may have been lost, the server may be temporarily overloaded, or the server may have encountered an internal error. Check your Exchange server name and proxy server settings (see [Set up email: Microsoft Exchange ActiveSync \(EAS\)](#)), and try again later.

### A notification tells me that ActiveSync encountered a problem with [item type] [item name]

There was an error while synchronizing a single item. This error can usually be corrected only by deleting the item that caused the error. If you sync again to see if the error persists, be aware that items causing this type of error are skipped and do not show up again.

## Sending and receiving data in Email, Messaging, and Web

### I can't tell if data services are available

The following icons appear in the title bar to indicate whether data services are available. If you don't see one of these icons, you cannot open a data connection:






---

**KEY TERM 1xRTT (single-carrier [1x] radio transmission technology):** A wireless technology that can provide fast data transfer and Internet access, with average speeds of 60-to-80Kbps and bursts of up to 144Kbps.

**KEY TERM EvDO (Evolution Data Optimized):** A wireless broadband technology that is designed for very high-speed data transfer, with average download speeds of 400-to-600Kbps, and capable of reaching speeds up to 3.2Mbps and upload speeds up to 1.8Mbps.

---

Table 1. Data connection icons

Icon	Description
	Your phone is connected to a 1x data network. Data is not currently being transmitted over the network.
	Your phone is connected to a 1x data network and data is being transmitted over the network.
	Your phone is connected to an EvDO data network. Data is not currently being transmitted over the network.
	Your phone is connected to an EvDO data network and data is being transmitted over the network.
	Your phone is connected to a Wi-Fi network. You can open a data connection.

# Email

## I have problems using my account

Occasionally you may experience problems using an email account after you set it up. If you followed the account setup procedure (see [Set up email](#)) and are experiencing problems using the account, verify that the account complies with your email provider's requirements:

- Verify both your password and your username for your email account.
- If you changed your password in an online email account, you must change the password on your phone (see [Change account login settings](#)).
- Some wireless service providers have requirements specific to their service. Check with Verizon Wireless to find out whether any provider-specific requirements exist.
- Make sure your ISP or email provider allows you to access email on a phone. (Some providers do not offer this option at all; other providers require an account upgrade for you to access email on a phone.)
- Email provider settings may change. If your email account was working but you are currently experiencing problems, check with your email provider to find out whether any of the account settings have changed.

## I have problems sending and receiving email

- Make sure your phone is on and that your data connection to your mail server or email service provider has not been interrupted (see [Turn the phone on/off](#)).
- Short periods of time when email is unavailable are common, due to server problems or poor wireless coverage. If you have problems sending or receiving mail for an extended period of time, check with your ISP or email service provider to verify that the service is working properly, and check with Verizon Wireless for outage information in your area.

## I have problems sending email (IMAP and POP accounts)

If you are able to receive email messages but cannot send them, try the following:

- Turn on authentication (see [Set up email when automatic setup fails](#)). Many service providers require authenticated access, or ESMTP, to use their SMTP servers for outgoing mail.
- Enter the name of a different outgoing mail server for sending mail (see [Set up email when automatic setup fails](#)). Many ISPs, such as cable companies, require that you have an Internet connection to their network to send email through their servers. In this case, you can almost always receive email from these accounts, but if you want to send email, you must send it through another server. Check with your email service provider for the correct outgoing mail server name.

## After I receive messages, older messages disappear from my Inbox

When email sync takes place, by default, the last three days' worth of email messages is downloaded from your mail server to your Inbox. All messages older than three days are removed from your Inbox; they are not deleted on the server, however.



You can change the setting to download only one or two days' worth of messages. If you select one of these options, any messages older than one or two days are deleted from your Inbox. You can also change the setting to download all messages regardless of the date, in which case all messages continue to appear in your Inbox (see [Enter advanced account settings](#)).

# Messaging

## I can't send or receive text or multimedia messages

- Make sure that your phone is on (see [Turn the phone on/off](#)).



- For multimedia messages, do the following:
  - Contact Verizon Wireless to verify that messaging services have been correctly activated on your phone, and that they are available at your location. (Verizon Wireless should be able to tell you if messaging services have been experiencing transmission delays.)
  - Check to see if you have data services enabled. Open **Phone** , open the [application menu](#), and tap **Preferences**. Under **Network**, make sure **Data Usage** is set to **On**.
  - If you are in roaming coverage, check to see if you have data roaming enabled. Open **Phone** , open the [application menu](#), and tap **Preferences**. Under **Network**, tap **Data Roaming** and tap **Enabled**.
- If possible, contact the recipient of the message, and make sure the receiving device can handle the type of message you're sending.
- If a message arrives but does not display a notification, restart your phone (see [Restart your phone](#)).

## I want to send a video in a multimedia message, but do not see it on the list of items I can attach


You can attach only pictures in JPG format to outgoing multimedia messages. To send files of other types, attach them to an email message (see [Add attachments to a message](#)).

## Web




### My phone won't connect to the Internet

Your phone supports EVDO, 1xRTT, and Wi-Fi wireless data networks.

- Check to see if you have data services enabled. Open **Phone** , open the [application menu](#), and tap **Preferences**. Under **Network**, make sure **Data Usage** is set to **On**.

- If you are in roaming coverage, check to see if you have data roaming enabled. Open **Phone** , open the [application menu](#), and tap **Preferences**. Under **Network**, tap **Data Roaming** and tap **Enabled**.
- Turn off your phone and turn it on again (see [Turn the phone on/off](#)).
- Restart your phone (see [Restart your phone](#)).
- Contact Verizon Wireless to verify that your data plan has been correctly activated. Verizon Wireless should also be able to tell you if there are any outages in your location.

### I can't access a page

- 1 Make sure you have Internet access:
  - [Open Web](#)  and try to view a web page you've loaded before.
  - To ensure that you're viewing the page directly from the Internet, tap .
  - After confirming your Internet connection, try to view the page again. If it comes up blank, tap .
  - If you're still having trouble, the page may contain elements that are not supported by the browser, such as Flash, Shockwave, VBScript, WML script, and other plug-ins.
- 2 Some websites redirect simple web addresses given to the public to actual web addresses that are more complex (for example, if you enter the address [www.palm.com/support](http://www.palm.com/support), it may actually go to the web address <http://www.palm.com/us/support>). If your phone's browser can't follow the redirect, enter the web address in a desktop browser and read the actual web address in the address bar. Then enter the actual address in your phone's browser.

### An image or map is too small on my screen

Do either of the following:

- To switch to landscape mode to see more of the image, turn the phone on its side.
- To zoom in on the image, pinch out or double-tap the screen.



## A secure site refuses to permit a transaction

Some websites don't support certain browsers for transactions. Contact the site's webmaster to make sure the site allows transactions using your phone's web browser.

## Calendar and Contacts

### I haven't entered any contacts or calendar events on my phone, but when I open those apps, I see entries

The entries you see displayed in Calendar or Contacts have been downloaded to your phone from one of your online accounts such as Google or Microsoft Exchange ActiveSync. Anytime you are in Email, Calendar, or Contacts, you can set up a relationship to wirelessly sync data with one of these accounts. And after you enter the account settings in just one of these apps, any information you have online is automatically downloaded to all three—so if you set up a Gmail account in Email but also have a Google calendar, your phone's calendar automatically displays events entered in your Google calendar.

You can remove an online account from an application so that that app no longer syncs with that account (see [Stop synchronization of Contacts with an online account](#), [Stop synchronization of Calendar with an online account](#), or [Delete an email account](#)).

### My personal and work contact and calendar information is getting merged into a single view—I'd rather keep them separate

The Palm® Synergy™ feature on your phone displays information from several sources in a single view, so you can access your info quickly, without having to remember where you stored it. Even though the information is visible in one view, the sources of that information are kept separate.

In Calendar, to see events from just one calendar, tap the word **All** in the upper-right corner of the screen and pick the account you want to see. See [Change the Calendar display](#).

In Contacts, the list view shows all contacts from all accounts. You can, however, see what data comes from which account by opening the contact and tapping **Edit**. If you want to unlink contacts, see [Unlink a contact](#).

In Email, you can turn off the smart folder for All Inboxes (see [Set email preferences](#)). Then make the inboxes of your individual accounts favorites so that they're always easy to see in Account List view (see [Add a folder as a favorite](#)).

### I started entering a contact's name in universal search, but I'm not seeing the person in the results

- You need to enter at least two letters in universal search before contact matches are returned.
- If the contact is a linked contact, universal search searches on the primary profile only. Scroll through the contact match results to make sure that universal search did not return a different match for your contact from the one you were expecting.

For example, suppose you're searching for your friend Ed Smith's contact info. You have three contact entries for Ed that are linked, and the primary entry happens to be the one listed by Ed's screen name, ScubaEd. Typing **es** is not going to find Ed's contact; you have to type **scu**. To correct this, make the contact listing Ed's real name the primary contact (see [Link a contact](#)).

## Camera

Here are some tips for taking good pictures with the camera:

- Clean the camera's lens with a soft, lint-free cloth.
- Take pictures in bright lighting conditions. Low-light images may be grainy, due to the sensitivity of the camera.

- Hold the phone as still as possible. Try supporting your picture-taking arm up against your body or a stationary object (such as a wall).
- Keep the subject of the pictures still. Exposure time is longer with lower light levels, so you may see a blur.
- For best results, verify that you have the brightest light source coming from behind you, lighting the subject's face. Avoid taking indoor pictures with the subject in front of a window or light. If the light is behind the subject, try moving closer to the subject and enabling the flash.
- Make sure the subject is at least 18 inches (0.5 meter) away from the camera to ensure good focus.

## Amazon MP3

I bought a song from Amazon MP3, but it isn't showing up on my phone

Occasionally, the download process may be interrupted, so a song you purchased may not be successfully downloaded to your phone. To confirm the purchase and download of a song, log in to your Amazon account from your computer. If the song shows up there as purchased and downloaded, contact Amazon support and let them know you never received your song.

## Transferring information from your computer

I bought a song through Amazon MP3 and want to transfer it to my computer

You can copy music files on your phone to your computer for use with a desktop music player. For instructions, see [Copy files between your phone and your computer](#).

I copied files from my computer, but I can't see or play them on my phone

When you connect your phone to your computer in USB Drive mode, you can copy any file onto your phone. However, each media application on your phone—Photos, Music, and Videos—can display or play files in certain file formats only. If your media file is in an unsupported format, you can't use it on your phone.

For a list of supported photo types, see [Photos](#). For a list of supported music file types, see [Music](#). For a list of supported video file types, see [Videos](#).

When I open the drive folder representing my phone from my computer, I see subfolders. Do I need to move my files into these folders?

The default folders are there to help you organize files you copy to and from your computer. But you can copy files from your computer into any folder you want—you can create your own folders, or just drag your files to the top level of the drive. As long as the file is in a supported format, your phone can detect and open it.

---

**NOTE** If you move a music file into the ringtones folder, the Music application cannot find it.

---

## Backing up and restoring data

I need to reset my phone but don't understand the difference between a partial erase and a full erase

Both a partial erase and a full erase delete all personal information, such as events, contacts, and tasks, as well as applications you have added, such as third-party software, on your phone. In addition, a full erase deletes all files

stored in the USB drive of your phone, which includes all pictures, videos, music files, documents, PDF files, and ringtones.




For more information, see [Erase data and reset your phone](#).

## How do I get my data back after a full or partial erase?

After a full or a partial erase, on your phone, enter your existing Palm profile email address, and password—don't create a new one! When you do this, all data that has been backed up to your profile—contacts, calendar events, and tasks, as well as apps you bought through App Catalog—is restored to your phone. To restore information about your online accounts to your phone, simply enter the password for each account when prompted after the erase—synchronization begins again.

A full erase deletes everything deleted by a partial erase, plus everything you stored in your phone's USB drive (pictures, videos, music, documents, PDF files, ringtones, and so on). You need to have copies of those files available elsewhere if you want to restore them to your phone. For example, you can save copies on your computer and then transfer them back to your phone (see [Copy files between your phone and your computer](#)).

## I want to do a full erase, but the screen is cracked or doesn't respond to taps


If you can't do a full erase using the screen, you can use a keyboard shortcut. Press and hold **Option**  + **Sym**  + **power** .

## My bookmarks were restored, but the thumbnail icon is not displaying

Web bookmarks are part of the data backed up to your Palm profile. After a partial or full erase, a bookmark is restored with a generic thumbnail icon. After you revisit the page for which you created the bookmark, a thumbnail icon is restored.

# Updates

## I dismissed a system update notification, and now I don't know how to get the update on my phone

If you have a phone network connection or a Wi-Fi connection and the battery has at least a 30% charge, you can start the update yourself: [Open Updates](#) . Your phone checks for the availability of the update, and if one is available, tap **Download Now**. The download happens in the background, so you can continue to use your phone until the actual installation takes over.

After the update has finished being downloaded, tap **Install Now** to install the update on your phone.

## My phone froze while I was downloading or installing a system update

If this happens, you can use webOS Doctor™ to restore your phone and install the system update from your computer using the USB cable. On your computer, go to [palm.com/support](http://palm.com/support) to download webOS Doctor.

## Transferring information from another Palm® webOS™ platform phone

### I want to get files off my old webOS phone, but the screen is cracked or doesn't respond to taps, so I can't access USB Drive mode

If you can't put your phone in USB Drive mode using the screen, you can use a keyboard shortcut. Press and hold **Option**  + **Sym**  + **U**.

## Third-party applications

Some third-party applications may cause conflicts with your phone. Third-party applications that modify the wireless features of your phone may require extra troubleshooting. Use caution when installing the following:

- Ringtone managers
- Caller ID applications
- Instant messaging
- Applications that modify when your phone or data connections turn on or off and how your phone behaves

If you recently installed an application and your phone seems to be stuck, try the following in sequence until the problem is resolved:

- 1 Restart your phone (see [Restart your phone](#)).
- 2 Make sure your third-party applications are up-to-date (see [Manually check for system updates](#)).
- 3 See if a system update is available (see [Manually check for system updates](#)).
- 4 Delete the most recently installed application, or the application you think could be causing the problem, from your phone (see [Delete an application](#)). Perform a backup (see [Back up your information](#)).
- 5 Perform a partial erase (see [Erase data and reset your phone](#)).
- 6 Enter your Palm profile email address and password to restore your backed-up information.
- 7 If the problem is resolved, begin reinstalling your third-party applications one at a time.
- 8 If the problem recurs, delete the last application you installed and report the problem to its developer.

## Getting more help

Contact the author or vendor of any third-party software if you require further assistance. Neither Palm nor Verizon Wireless provides technical support for applications that are not built into your phone.

## Making room on your phone

If you store a large number of files, or install many third-party applications, the USB drive on your phone may fill up. Here are some ways to clear space on your phone:

- **Photos, Videos, Music, Amazon MP3, Doc View, PDF View:** Large files take up a lot of memory. Move files to your computer (see [Copy files between your phone and your computer](#)), or delete them from your phone.
- **Email:** Email attachments can be large and consume lots of memory. Copy attachments to your computer (see [Copy files between your phone and your computer](#)), or delete large files from your phone (see [Delete a message](#)). You may also want to empty the deleted items folder.
- **Web:** Delete stored web browsing information by clearing your history, cookies, and cache (see [Customize web browser settings](#)).
- **Third-party applications:** You can delete infrequently used applications (see [Delete an application](#)).

# Terms

## airplane mode

A mode in which all the wireless services on your phone are turned off. Wireless services include the phone used for making and receiving calls, and Bluetooth® wireless technology. See [Turn wireless services off \(airplane mode\)](#).

## application menu

A menu that contains application commands such as cut, copy, and paste (where available); preferences; and application help. To open the application menu, tap the application name in the upper-left corner of the screen. See also [connection menu](#).

## application search

The feature that lets you search for entries within an application by typing a search term when the list view is displayed—for example, a contact name or phone number, the subject text of an email message, or a few words from a memo. See also [universal search](#).

## application update

An update from the developer of an application you bought through App Catalog on your phone. When an application update is available, a notification appears on your phone. You can also check for application updates manually. Additional fees may apply. See [Update the software on your phone](#).

## back

The gesture you use to move up one level from a detailed view to a more general view of the application you're working in. For example, when you finish reading an email message, make the back gesture to close the message and return to your list of messages. Or when you finish writing a memo, make the back gesture to close and save the memo and return to the

display of all your memos. See [Go up one level in an app \(back gesture\)](#). Making the back gesture is also the way you save your work in many apps. If you don't see a Done button, make the back gesture to save your work.

## card

A minimized view of an open application. You can easily move among and reorder cards in Card view. Tap a card to restore the full-screen view of the application and continue working in it. See also [Card view](#).

## Card view

The view on your phone that displays applications as minimized cards, allowing you to easily move among and reorder them. Don't confuse Card view with the [Launcher](#), which along with [Quick Launch](#), shows you all the apps you have on your phone, not just the open ones. To display Card view from any open application window, flick up from the gesture area to the screen, or tap the center of the gesture area. Card view displays your wallpaper.

## connection menu

A menu that lets you turn on or off connection features including Bluetooth® wireless technology, and all wireless services (airplane mode). To open the connection menu, tap the upper-right corner of the screen. See also [application menu](#).

## dashboard

A list of all your notifications. When one or more notification icons appear at the bottom of the screen, tap the icons to open the dashboard. Tap a dashboard item to act on it. See also [notification](#).

### Data Transfer Assistant

A tool that allows you to do a one-way transfer of information such as contacts and calendar events from a desktop organizer to your phone. See [Transferring data](#).

### drag

A slow movement of the finger up or down on the touchscreen.


### flick

A very fast skimming of the finger horizontally or vertically on the touchscreen.

### gesture area

The strip beneath the touchscreen that you use to perform the back gesture, among others. Some gestures you begin in the gesture area and complete on the touchscreen, for example, the slow drag that displays [Quick Launch](#) when you have an application filling the screen.

### Launcher

A group of screens displaying all your applications. To open the Launcher, tap  in [Quick Launch](#), or flick up twice from the gesture area to the screen. If you are in Card view, flick up once from the gesture area to the screen to open the Launcher. In the Launcher, swipe up, down, left, and right to see all your apps. Tap an app icon to open it.

### linked contact

A contact containing information from more than one source. For example, if you have a work contact in Exchange ActiveSync and a personal contact for the same person in Google, the Contacts application automatically recognizes the connection and links the two contacts so that you can see all the information in one place—but the information is kept separate in the different accounts where it originated. You can also manually link and unlink contacts.

### merged view

A feature on your phone that displays data from several sources in a single view, but keeps the sources of your data separate.

Let's say you use Google calendar for your personal events and your company's Outlook calendar for business events. Your phone's Calendar application displays events from both calendars in a single view, called All.

Likewise, if you set up multiple email accounts, the Email application displays the messages from all your account inboxes in a single view, called All inboxes. And in Messaging, all your messages with a person show up in a single conversation view, whether they are text, multimedia, or instant messages. See also [linked contact](#).


### notification

A message that appears at the bottom of the screen alerting you of an incoming or missed call; voicemail, email, or text messages; an upcoming event; and more. In most cases, you can tap a notification to act on it. See also [dashboard](#).

### online account

An account that you have with an online service such as Google or Microsoft Exchange ActiveSync. You can synchronize contacts, calendar events, and email between your phone and many of your online accounts.

### Option key

The key you use to enter characters that appear above the letters on the keyboard keys. Press once to enter a single character. Press twice to lock the alternate character feature, so you can enter a series of characters. Also, press and hold **Option**  and then drag your finger onscreen to move the cursor in text.

### Palm profile

A Palm profile gives you access to services like automatic updates, backup of your data, and more. You create a Palm profile by entering a working email address during initial setup of your Palm® Pixi™ Plus phone. See [Set up your phone](#). Your Palm profile also identifies the location on the web where the data you store in your Palm Profile account is backed up. (You cannot see or change this data on the web, however.) See also [Palm profile account](#).

### Palm profile account

An account that is automatically set up for you when you create your Palm profile. You can assign contacts and calendar events to it. Palm profile items are included in the daily backup of information to your Palm profile but do not synchronize with any of your online accounts. See also [Palm profile](#).

### pinch

A gesture used to go in for a magnified view (zoom in) or move out to see a larger area (zoom out). To zoom in, you pinch out: Place the thumb and

index fingertips close together on the touchscreen; then slowly spread them apart. To zoom out, you pinch in: Place the thumb and index fingertips apart on the touchscreen, and slowly bring them together.

### Quick Launch

A bar of up to five icons that give you quick access to applications. Quick Launch always appears at the bottom of Card view and the Launcher. By default, Quick Launch displays icons for the following apps: Phone, Email, Contacts, and Calendar. The fifth icon is the Launcher. Tap a Quick Launch icon to open the app.

You can also open Quick Launch from any maximized application window by dragging up from the gesture area to the screen. Move your finger to the app you want, and then lift your finger. The application opens.


### smart folder

One of two folders—All Inboxes and All Flagged—that can be set to appear at the top of the Account List view in the Email application. See [Set email preferences](#).

### swipe

A light, fast horizontal movement with the finger from right to left or left to right on the touchscreen or the gesture area.

### Sym key

The key you use to enter symbols and accented characters. Press Sym to open the full table of symbols. Press Sym + a letter key to narrow the table to symbols associated with that letter—for example, press  + **e** to enter é.

### Synergy™ feature

The feature from Palm that lets you take advantage of merged views and linked contacts on your phone. See [Your Palm® Pixi™ Plus phone](#).

### system update

Updates provided by Palm to the Palm® webOS™ platform and core applications such as Contacts and Calendar. When a system update is available, a notification appears on your phone. You can also check for system updates manually. See [Update the software on your phone](#).

### tap

A light quick touch on the touchscreen. Use the fleshy part of your fingertip to tap. Don't tap with a fingernail, and don't use a pen or pencil—the screen does not respond to touches like that. Also, don't bear down. Make the tap firmly, but lightly.

### universal search

The feature that lets you make calls, search for applications and contacts on your phone, and search the web simply by typing the number or search term in either Card view or the Launcher. See [Search to find info and make calls](#).

### webOS™ platform

The operating system of your Palm® Pixi™ Plus phone. Key features of the webOS platform include gestures, cards, merged views, and linked contacts.





# Regulatory and Safety Information

## FCC Statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This phone meets the FCC Radiofrequency Emission Guidelines and is certified with the FCC as:

FCC ID: O8F-PIXEW

The FCC ID on your Palm phone is located on a label inside the battery compartment. The battery must be removed as shown below to view the label.

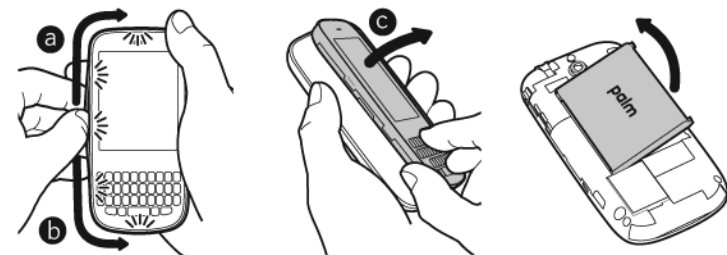

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Antenna Care/Unauthorized Modifications

Use only the supplied integral antenna. Unauthorized antenna modifications or attachments could damage the unit and may violate FCC regulations.

## Industry Canada

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The term "IC" before the equipment certification number only signifies that the Industry Canada technical specifications were met.

IC: 3905A-PIXEW

This Class B digital apparatus complies with Canadian ICES-003.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Cet appareil numérique de la classe [\*] est conforme à la norme NMB-003 du Canada.

## Radio Frequency (RF) Safety Exposure

**General statement on Radio Frequency (RF) energy:** Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

**Specific Absorption Rate (SAR):** Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

In order to certify this unit for sale to the public, this unit has been tested for RF exposure compliance at a qualified test laboratory and found to comply with the regulations regarding exposure to RF Energy under the recommendations of the International Commission on Non-Ionizing Radiation Protection (ICNIRP). The tests are performed in positions and locations as required by the FCC and IC for each model.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated below. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

The SAR limit for mobile devices set by FCC/IC is 1.6 W/kg averaged over 1 gram of tissue for the body or head (4.0 W/kg averaged over 10 grams of tissue for the extremities—hands, wrists, ankles, and feet).

The highest reported SAR values of the Palm® Pixi™ Plus phone are:

Table 1.

Maximum scaled SAR values (W/kg) FCC	
Head	1.47
Body	0.730

In order to comply with FCC and IC RF exposure safety guidelines, users MUST use one of the following types of body-worn accessories:

- 1 A Palm® brand body-worn accessory that has been tested for (specific absorption rate) SAR compliance and is intended for use with this product.
- 2 An accessory that contains NO metal (snaps, clips, etc.) and provides AT LEAST 1.5 cm (0.6 in.) of separation between the user's body and the unit.

Do NOT use the device in a manner such that it is in direct contact with the body (i.e., on the lap or in a breast pocket). Such use will likely exceed the FCC RF safety exposure limits. See [fcc.gov/oet/rfsafety](http://fcc.gov/oet/rfsafety) for more information on RF exposure safety.

To view the most recent SAR values of the Palm® Pixi™ Plus phone, visit [palm.com/sarverizon-pixiplus](http://palm.com/sarverizon-pixiplus).

**Body worn operation:** Important safety information regarding radio frequency (RF) radiation exposure: To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5 cm (0.6 in.) separation from the body. Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

**Limiting exposure to radio frequency (RF) fields:** For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

**Precautionary measures:** Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page [who.int/mediacentre/factsheets/fs193/en/index.html](http://who.int/mediacentre/factsheets/fs193/en/index.html) WHO Fact sheet 193: June 2000.

## Hearing Aid Compatibility (HAC)

### Using Your Phone With a Hearing Device

Your device has been tested for hearing aid compatibility. Your Palm® Pixi™ Plus phone has an M4/T4 rating. For additional HAC information, including the HAC rating of this product, please refer to [palm.com/hacverizon-pixiplus](http://palm.com/hacverizon-pixiplus).

When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile s, to assist hearing-device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that have been rated have a label on the box.

These ratings are not guarantees. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference with hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings.

The more immune your hearing aid device is, the less likely you are to experience interference noise from your wireless phone. Hearing aid devices should have ratings similar to those of

phones. Ask your hearing health care professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers the best use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for “best use.” This is synonymous for T ratings.

Palm further suggest that you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. If you experience interference or find the quality of service unsatisfactory after purchasing your device, promptly return it to the store within 30 days of purchase. With the Palm 30-day Risk-Free Guarantee, you may return the device within 30 days of purchase for a full refund, and you will only be responsible for charges based on your actual usage.

### Getting the Best Hearing Device Experience With Your Device

To further minimize interference:

- Set the phone's screen and keyboard backlight settings to ensure the minimum time interval.
- Move the phone around to find the point with the least interference.

For more information, please go to the FCC's Consumer Alert on accessibility of digital wireless phones at [fcc.gov/cgb/consumerfacts/hac\\_wireless.html](http://fcc.gov/cgb/consumerfacts/hac_wireless.html).

### Battery Handling

- Do not disassemble or open; crush, bend, or deform; puncture or shred the battery.
- Do not modify or remanufacture; attempt to insert foreign objects into the battery; immerse or expose to water or other liquids; expose to fire, explosion, or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per the IEEE/CTIA-1725 standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short-circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per IEEE/CTIA-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage, or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.

- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Do not handle a damaged or leaking Lithium-Ion (LI-ion) battery as you can be burned.
- Improper battery use may result in a fire, explosion, or other hazard.

Based on DOT rules, spare batteries must not be transported in checked luggage on commercial flights. Spare batteries can only be transported in carry-on luggage. For more information: [http://safetravel.dot.gov/whats\\_new\\_batteries.html](http://safetravel.dot.gov/whats_new_batteries.html).

### Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

Recently there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Use only manufacturer-approved batteries and accessories found at Carrier Stores or through your device's manufacturer. Buying the right batteries and accessories is the best way to ensure they are genuine and safe.


- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month: -4° F to 140° F (-20° C to 60° C)

More than one month: -4° F to 113° F (-20° C to 45° C)

## Power Specifications

Use only Palm-approved power accessories such as AC-power adapters and batteries. Unauthorized and non-approved batteries will NOT operate with the Pixi Plus phone.

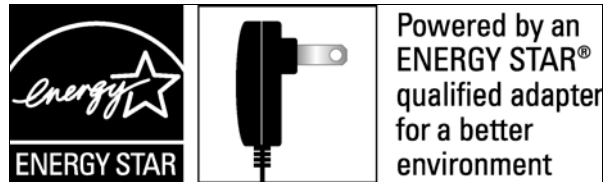

### AC Power Adapter source: Palm

Part Number: 157-10130-00

Input Rating: 100-240Vac, 50/60Hz, 0.2A

Output Rating: 5Vdc, 1000mA

### AC Power Adapter source: Palm

Part Number: 157-10124-00

Input Rating: 100-240 Vac, 50/60Hz, 0.2A

Output Rating: 5Vdc, 1000mA

### Battery Source: Palm

Type: Rechargeable Li-ion Polymer

Model: 157-10119-00

Rating: 3.7Vdc, 1150mAh (minimum)

## Recycling and Disposal



This symbol indicates that Palm products should be recycled and not be disposed of in unsorted municipal waste. Please return Palm products to the electrical and electronic equipment collection points in your municipality or county or to a facility that properly recycles electrical and electronic equipment. These collection points are available free of charge. For detailed information please contact your municipality or county. For information on Palm's environmental programs, visit [palm.com/environment](http://palm.com/environment).

Hazardous substances that may be included in electronic products can potentially affect human health and the environment. Recycling benefits the environment by diverting waste from landfills and by recovering materials that may be recycled into other products. Responsible recycling ensures materials are properly collected and disposed.

Palm is committed to supporting the collection and recycling of its products. Palm is committed to participate and support the European Union WEEE Directive (2002/96/EC) and the protection of the environment for future generations. For more information on the WEEE Directive implementation in the various EU member states please see [weee-forum.org](http://weee-forum.org).

It is everyone's responsibility to ensure that electrical and electronic products are properly reused, recycled, or recovered.

As part of Palm's corporate commitment to be a good steward of the environment, we strive to use environmentally friendly materials, reduce waste, and collaborate with our channel partners to raise awareness and help keep Palm handheld devices, s, and mobile companions out of landfills through evaluation and disposition for reuse and recycling. Visit [palm.com/recycle](http://palm.com/recycle) for additional details and information about how you can help reduce electronic waste.

## User Safety

### Operational Warnings

**IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.** Read this information before using your phone. For the safe and efficient operation of your phone, observe these guidelines:

**Potentially Explosive Atmospheres:** Turn off your phone when you are in any areas with a potentially explosive atmosphere, such as fueling areas (gas or petrol stations, below deck on boats), storage facilities for fuel or chemicals, blasting areas and areas near electrical blasting caps, and areas where there are chemicals or particles (such as metal powders, grains, and dust) in the air.

**Interference to Medical and Personal Electronic Devices:** Most but not all electronic equipment is shielded from RF signals and certain electronic equipment may not be shielded against the RF signals from your phone.

**Pacemakers:** The Health Industry Manufacturers Association recommends that a minimum separation of 15 centimeters (6 inches) be maintained between a phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by the recommendations of Wireless Technology Research.

Persons with pacemakers should do the following:

- ALWAYS keep the phone more than six inches (15 centimeters) from their pacemaker when the phone is turned ON.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the phone OFF immediately if you have any reason to suspect that interference is taking place.

**Other Medical Devices, Hospitals:** If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

**Repetitive Motion Injuries:** When using the keyboard or playing games on your phone, you may experience discomfort in your neck, shoulders, hands, arms, or other parts of the body. To avoid any injury, such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorder, make sure to take necessary breaks from use, take longer rests (such as several hours) if

discomfort or tiring begins, and see a doctor if discomfort persists. To minimize the risk of Repetitive Motion Injuries, when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Make use of the special features in the handset which minimize the number of buttons which have to be pressed, such as message templates and predictive text.
- Take lots of breaks to stretch and relax.

**Blackouts and Seizures:** Blinking lights, such as those experienced with television or playing video games, may cause some people to experience blackout or seizure, even if never experienced before. In the event a phone user should experience any disorientation, loss of awareness, convulsion, eye or muscle twitching, or other involuntary movements, stop use immediately and consult a doctor. Individuals with personal or family history of such events should consult a doctor before using the device. To limit the possibility of such symptoms, wherever possible every hour take a minimum break of 15 minutes, use in a well lighted area, view the screen from the farthest distance, and avoid exposure to blinking lights if you are tired.

**Operating Machinery:** Do not use your phone while operating machinery. Full attention must be given to operating the machinery in order to reduce the risk of an accident.

**Aircraft:** While in aircraft, follow all instructions regarding the operation of your phone. Use of your phone while on board an aircraft must be done in accordance and in compliance with airline instructions and regulations.

**Vehicles with Air Bags:** Your phone should not be placed in a position that would affect the operation of air bag deployment or in a position that, should the air bag inflate, could propel the phone. Air bags will inflate with great force and care should be taken to protect within a vehicle that has air bags. Do not place a phone in the area over an air bag or in the air bag deployment area. Store the phone safely before driving the vehicle.

**Hearing Aids:** People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

**Small Children:** Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone. Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Keep the device away from the abdomens of pregnant women and adolescents, particularly when using the device hands-free.

To reduce exposure to radiation, use your device in good reception areas, as indicated by the bars on your phone, at least 3 to 4 bars.

### Caution: Avoid Potential Hearing Loss

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, ear buds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies. The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings, and the headphones. You should follow some common sense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech, or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.
- You can obtain additional information on this subject from the following sources:

#### American Academy of Audiology

11730 Plaza America Drive, Suite 300  
Reston, VA 20190  
Voice: (800) 222-2336  
Email: [info@audiology.org](mailto:info@audiology.org)  
Internet: [audiology.org](http://audiology.org)

#### National Institute on Deafness and Other Communication Disorders

National Institutes of Health  
31 Center Drive, MSC 2320  
Bethesda, MD USA 20892-2320  
Voice: (301) 496-7243  
Email: [nidcdinfo@nih.gov](mailto:nidcdinfo@nih.gov)  
Internet: [nidcd.nih.gov/health/hearing](http://nidcd.nih.gov/health/hearing)

### National Institute for Occupational Safety and Health

395 E Street, S.W., Suite 9200  
Patriots Plaza Building  
Washington, DC 20201  
Voice: 1-800-CDC-INFO (1-800-232-4636)  
Internet: <http://www.cdc.gov/niosh/topics/noise/>

#### Product Handling & Safety

**General statement on handling and use:** You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture, or high humidity.
- Do not drop, throw, or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories; only authorized personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum 14° F and maximum 140° F (-10° C to 60° C).
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

**Battery:** Your phone includes an internal lithium-ion or lithium-ion polymer battery. Please note that use of certain data applications can result in heavy battery use and may require frequent battery charging. Any disposal of the phone or battery must comply with laws and regulations pertaining to lithium-ion or lithium-ion polymer batteries.

**Demagnetization:** To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

**Normal use position:** When making or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.

**Emergency calls:** This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

**Phone heating:** Your phone may become warm during charging and during normal use.

**Accessories:** Use only approved accessories. Do not connect with incompatible products or accessories. Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

**Connection to a car:** Seek professional advice when connecting a phone interface to the vehicle electrical system.

**Faulty and damaged products:** Do not attempt to disassemble the phone or its accessory. Only qualified personnel must service or repair the phone or its accessory. If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

**Interference in cars and to other Electronic Devices:** Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation. RF energy may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or representative to determine if these systems are adequately shielded from external RF energy. Also check with the manufacturer of any equipment that has been added to the vehicle.

#### Driving Safety

##### Driving Safety Tips Overview

Always obey all laws and regulations on the use of the phone in your driving area.

Safety—Your most important call. The Wireless Industry reminds you to use your phone safely when driving.

- 1 Get to know your phone and its features, such as speed-dial and redial.
- 2 Use a hands-free device where it is allowed. In some areas, you may not use your phone while driving even with a hands-free accessory.
- 3 Position your phone within easy reach.
- 4 Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- 5 Do not take notes, look up phone numbers, read/write e-mail, or surf the Internet while driving.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.
- 7 Do not engage in stressful or emotional conversations that may divert your attention from the road.
- 8 Dial your national emergency number to report serious emergencies. This is a free call from your phone.
- 9 Use your phone to help others in emergencies.
- 10 Call roadside assistance or a special non-emergency wireless number when necessary.



## Driving Safety Tip Details

- 1 Get to know your phone and its features such as speed-dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phone models offer, including automatic redial and memory dial. Also, work to memorize the phone keyboard so you can use the speed-dial function without taking your attention off the road.
- 2 Use a hands-free device. A number of hands-free phone accessories are readily available today. Whether you choose an installed mounted device for your phone or a speaker accessory, take advantage of these devices. If driving while using a phone is permitted in your area, we recommend using a phone headset or a hands-free car kit (sold separately). However, be aware that use of a headset that covers both ears impairs your ability to hear other sounds. Use of such a headset while operating a motor vehicle or riding a bicycle may create a serious hazard to you and/or others, and may be illegal. If you must use a stereo headset while driving, place a speaker in only one ear. Leave the other ear free to hear outside noises, and do so only if it is legal and you can do so safely.
- 3 Make sure you place your phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voicemail answer it for you.
- 4 Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
- 5 Do not take notes, look up phone numbers, read/write e-mail, or surf the internet while driving. If you are reading an address book or business card while driving a car, or writing a to-do list, then you are not watching where you are going. It's common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip, or attempt to schedule your calls with times you may be temporarily stopped or otherwise stationary. But if you need to dial while driving, follow this simple tip: dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix—they are distracting and even dangerous when you are behind the wheel. Make people you are talking with aware you are driving and if necessary, suspend phone conversations which have the potential to divert your attention from the road.
- 8 Use your phone to call for help. Your phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations—with your phone at your side, help is only three numbers away. Dial your national emergency number in the case of fire, traffic accident, road hazard, or medical emergencies. Remember, your national emergency number is a free call on your phone.
- 9 Use your phone to help others in emergencies. If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call your national emergency number, as you would want others to do for you.
- 10 Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call to your national emergency number. But you can still use your phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken

traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

## General Operation

**Prolonged Views of Screen:** If you are driving, do not access any function requiring a prolonged view of the screen. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

**Volume Setting:** Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

**Let Your Judgment Prevail:** The Device Software is only an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. The Device Software is not a substitute for your personal judgment.

## Hands-Free Capability

All CTIA Certified portable products provide the consumer with a toll-free number for the purchase of a compatible hands-free device, 1-800-881-7256.

## ESD Safety

Electrostatic discharge (ESD) can cause damage to electronic devices if discharged into the device, so you should take steps to avoid such an occurrence.

## Description of ESD

Static electricity is an electrical charge caused by the buildup of excess electrons on the surface of a material. To most people, static electricity and ESD are nothing more than annoyances. For example, after walking over a carpet while scuffing your feet, building up electrons on your body, you may get a shock—the discharge event—when you touch a metal doorknob. This little shock discharges the built-up static electricity.

## ESD-susceptible equipment

Even a small amount of ESD can harm circuitry, so when working with electronic devices, take measures to help protect your electronic devices, including your Palm phone, from ESD harm. While Palm has built protections against ESD into its products, ESD unfortunately exists and, unless neutralized, could build up to levels that could harm your equipment. Any electronic device that contains an external entry point for plugging in anything from cables to docking stations is susceptible to entry of ESD. Devices that you carry with you, such as your phone, build up ESD in a unique way because the static electricity that may have built up on your body is automatically passed to the device. Then, when the device is connected to another device such as a docking station, a discharge event can occur.

## Precautions against ESD

Make sure to discharge any built-up static electricity from yourself and your electronic devices before touching an electronic device or connecting one device to another. The recommendation from Palm is that you take this precaution before connecting your phone to your computer, placing the phone in a docking station, or connecting it to any other device. You can do this in many ways, including the following:

- Ground yourself when you're holding your mobile device by simultaneously touching a metal surface that is at earth ground. For example, if your computer has a metal case and is plugged into a standard three-prong grounded outlet, touching the case should discharge the ESD on your body.
- Increase the relative humidity of your environment.
- Install ESD-specific prevention items, such as grounding mats.

## Conditions that enhance ESD occurrences

Conditions that can contribute to the buildup of static electricity in the environment include the following:

- Low relative humidity.
- Material type. (The type of material gathering the charge. For example, synthetics are more prone to static buildup than natural fibers like cotton.)
- The rapidity with which you touch, connect, or disconnect electronic devices.

While you should always take appropriate precautions to discharge static electricity, if you are in an environment where you notice ESD events, you may want to take extra precautions to protect your electronic equipment against ESD.

## Owner's Record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

**Product:** Palm® Pixi™ Plus phone

**Model:**

**Serial No.:**



# Specifications

## Specifications

Table 1. Specifications

Category	Description
Radio	<ul style="list-style-type: none"><li>• Dual-band CDMA2000 EvDO Rev A and 1xRTT</li></ul>
Features	<ul style="list-style-type: none"><li>• Speaker</li><li>• Hands-free headset jack (3.5 mm stereo, 3-barrel connector)</li><li>• HAC M4/T4</li><li>• Microphone mute option</li><li>• TTY-compatible</li><li>• Ringer switch</li></ul>
Processor technologies	<ul style="list-style-type: none"><li>• Qualcomm® MSM7627™ integrated application processor and modem chipset</li></ul>
Battery	<ul style="list-style-type: none"><li>• Rechargeable lithium-ion</li><li>• 1150mA/hr power capacity</li><li>• Removable</li></ul>
Operating system	<ul style="list-style-type: none"><li>• Palm® webOS™ platform</li></ul>
Camera	<ul style="list-style-type: none"><li>• 2 megapixel</li><li>• LED flash</li><li>• Auto-exposure</li><li>• Auto-white balance</li><li>• Geotagging</li></ul>
Size	<ul style="list-style-type: none"><li>• 4.37 in. x 2.17 in. x 0.43 in. (111.0 mm x 55. mm x 10.85 mm)</li></ul>
Weight	<ul style="list-style-type: none"><li>• 3.26 ounces (92.5 grams)</li></ul>

Table 1. Specifications

Category	Description
Connectivity	<ul style="list-style-type: none"> <li>• Wi-Fi 802.11 b/g with WPA, WPA2, WEP, 802.1x authentication</li> </ul>
Display	<ul style="list-style-type: none"> <li>• 2.63-inch touchscreen</li> <li>• 18-bit TFT color</li> <li>• Resolution: 320 x 400 sub-HVGA</li> <li>• User-adjustable brightness</li> </ul>
Keyboard	<ul style="list-style-type: none"> <li>• Physical QWERTY keyboard</li> </ul>
Sensors	<ul style="list-style-type: none"> <li>• Ambient light</li> <li>• Accelerometer</li> <li>• Proximity</li> </ul>
Memory	<ul style="list-style-type: none"> <li>• 8GB (~7GB user available)</li> <li>• USB mass storage support</li> </ul>
Connector	<ul style="list-style-type: none"> <li>• microUSB connector with USB 2.0 Hi-Speed</li> </ul>
Included Palm webOS applications (at time of purchase)	<ul style="list-style-type: none"> <li>• Amazon MP3</li> <li>• App Catalog</li> <li>• Calculator</li> <li>• Calendar</li> <li>• Camera</li> <li>• Contacts</li> <li>• Doc View</li> <li>• Email</li> <li>• Memos</li> <li>• Messaging (integrated SMS, MMS, and IM)</li> <li>• Music</li> <li>• PDF View</li> <li>• Phone</li> <li>• Photos</li> <li>• Tasks</li> <li>• Videos</li> <li>• Web</li> </ul>

Table 1. Specifications

Category	Description
Included third-party applications (at time of purchase)	<ul style="list-style-type: none"><li>• Google Maps</li><li>• YouTube</li><li>• VZ NavigatorSM</li></ul>
Operating temperature range	<ul style="list-style-type: none"><li>• 32°F to 113°F (0°C to 45°C)</li><li>• 5% to 90% RH</li></ul>

## Online accounts available for webOS phones

Table 2. Online accounts available for webOS phones

Account/Behavior	Applications that display data from this account	Relationship between phone and online account*	Can I edit and add info to this account on my phone?	Can I edit and add data to this account on the web?	What happens when I delete this account from one app**
Exchange Active Sync	Contacts, Calendar, Tasks, Email	Sync	Yes	Yes	All data from all affected apps is simultaneously deleted
Facebook	Contacts, Calendar	Contacts, Calendar: Transfer (from web to phone)  Photos: Transfer/upload (from phone to web)	Photos only	Contacts and Calendar only	Only info in that app is deleted; info remains in other apps
Google	My Contacts, Calendar, Messaging, Email	Sync	Yes	Yes	Only info in that app is deleted; info remains in other apps
LinkedIn	Contacts	Transfer (from web to phone)	No	Yes	Only one app is affected: Contacts
Palm profile	Contacts, Calendar, Tasks, Memos; see “Backup” for full list of affected info	Transfer (from phone to web)	Yes	No	All data is deleted from all affected apps; see “Backup” for details
Photobucket	Photos	Transfer/upload (from phone to web)	Yes	No	Only info in that app is deleted
Yahoo!	Contacts, Calendar, Messaging, Email	Contacts: Transfer (from web to phone)  Calendar: Sync	Contacts: No  Calendar: Yes	Yes	Only info in that app is deleted; info remains in other apps

\***Sync** – A two-way exchange and update of your data. What you add or change in one location is automatically added or changed in the other. **Transfer**– A one-way update of your data. You can add or change data only in one location; the data is then copied to the other location.

\*\*Only the data on your phone is deleted. The data source is not affected.

# Index

## NUMERICS

112 phone numbers 52  
1xRTT data networks 166  
3G2 files 114  
3GP files 114  
3GP2 files 114  
3GPP files 114  
911 phone numbers 52  
999 phone numbers 52

## A

AAC files 117  
AAC+ files 117  
AC charger 7  
accented characters 28  
Accept Cookies option 131  
accessories  
    *See also* battery; hands-free devices  
    handling of 182  
    hands-free 178, 183  
    power 14, 156, 179, 180  
Account List view 64, 73, 175  
accounts  
    *See also specific types*

    contacts and 86  
    erasing data from 148  
    linked contacts from 84  
    music and 119, 170  
    online 164  
    Palm profile 47, 144  
    pictures and 114  
    setting up 13  
Acrobat Reader files. *See* PDF files  
active calls. *See* phone calls  
ActiveSync accounts. *See*  
    Exchange ActiveSync accounts  
Add An Account option  
    Calendar 94, 99  
    Contacts 85, 92  
    Email 65  
Add Bookmark option 129  
Add Contact Reminder 89  
Add device option 59, 135  
Add Picture 76  
Add To Launcher 90, 128  
address  
    outgoing email 67  
Address Book on Mac 45  
address books 52, 84  
addresses. *See* contacts; email addresses

advanced account settings 67  
advanced gestures 151  
air bags 181  
aircrafts 181  
airplane mode 11, 15–16, 173  
alarms 34, 96, 99, 105–106  
    *See also* Clock application  
Album Art view 118  
album headers 113  
albums. *See specific types*  
alerts. *See* alarms; notifications  
All Calendars view 95  
All Flagged view 73, 175  
All Inboxes view 64, 175  
all-day events 96  
    *See also* calendars; events  
alternate characters 28  
Amazon accounts 119, 170  
Amazon MP3 service 119–121, 170  
AMR files 117  
animations 6, 8  
answering phone 53, 56  
antenna 177  
AOL accounts 64  
App Catalog 36–40  
application menu 31, 173  
application search 34, 173

application update 39, 173  
applications  
    *See also* third-party applications; *specific types*  
    adding 36–38  
    beta apps 37  
    buying 36  
    changing default applications 149  
    closing 26  
    deleting 27, 172  
    dialing from 52  
    displaying 25  
    emailing from 74  
    in Quick Launch 23, 26  
    included with phone 186  
    keywords for 33  
    losing 170, 171  
    moving between 25  
    music and 117  
    opening 23–24  
    Palm OS 36  
    reinstalling 39  
    running 6  
    searching in 34, 173  
    troubleshooting 147, 161, 165  
    updating 39, 173

- using on calls 55
- appointments. *See* events
- artists 117, 120
- attachments
  - files as 139, 142
  - internal memory and 172
  - messages and 69, 74
  - music as 117
  - opening 70, 78
  - pictures as 113
  - saving 70
- audio files. *See* music
- audio quality 163
- authentication 125, 167
- Auto Locate option 126
- auto-correct feature 29
- Auto-Download MMS option 79
- automatic backup 144
- Automatic IP settings options 126
- auto-shut off interval 150, 163

## B

- back cover 157–158, 159–161
- back gesture 18, 151, 173
- Back View 12
- Background data collection option 127
- Backup application 144
  - See also* Palm profile
- basic gestures 18–19
- battery
  - caring for 14, 179
  - charger for 7
  - charging 14, 156
  - icons 11, 13

- life 14–15
- purchasing 15
- replacing 156
- specifications 185
- troubleshooting 156–159
- billing accounts 39–40
- blackouts 181
- blank screens 161
- Block Popups option 131
- blocking caller IDs 58
- Bluetooth devices 134–136
  - adding 59, 135
  - airplane mode and 15, 16
  - backup summary 144
  - connecting to 134, 135
  - deleting 136
  - disconnecting from 136
  - discovering 135
  - pairing 134–135
  - passkeys for 135
  - phone calls and 58
  - renaming 136
  - troubleshooting 163
  - turning on and off 134
- Bluetooth wireless technology 59, 134, 134–136
  - See also* wireless services
- BMP files 70, 110, 111, 112
- bookmarks 129–130, 142
- Brightness slider 150
- browser. *See* Web browser
- Buddies view 75
- built-in applications 186
- buying
  - See also* downloading
  - applications 36

- music 120–121
- VZ Navigator 132

## C

- cable service providers 167
- cache (web pages) 131
- Calculator application 107
- calendar accounts 95, 97, 99
- Calendar application 93–100
- Calendar View Options 97, 99
- calendars 93–100
  - See also* events
  - alarms and 96, 99
  - backup summary 145
  - dates on 97
  - default 99
  - display of 97
  - events 93, 95, 96, 97
  - getting started with 94
  - Google 64, 93, 169
  - online 99
  - preferences for 99–100
  - saving 95
  - synchronizing 94, 100, 164
  - troubleshooting 169
- call history 54, 57
  - See also* phone calls
- call waiting 56
- caller IDs 58, 87, 112
- calls. *See* phone calls
- camera 110, 169, 185
- capitalization 28
- Caps Lock 28
- car kits 58, 59
- Card view 6, 22, 25, 26, 173
  - See also* wallpaper
- Certificate Manager 149
- Change Login Settings option 67
- Change Wallpaper option 150
- character searches 51
- characters 28–29
- charger 7
- charging dock 14
- charging the battery 7, 14, 156
- chat rooms. *See* conversations
- children, safety of 181
- Classic application 37, 161
- Clear Cache option 131
- Clear Call History command 57
- Clear Cookies option 131
- Clear flag command 71
- Clear History option 131
- Clips (animations in Help) 8
- Clock application 105–106
- colors
  - for calendar entries 94
  - for email message text 68, 72
  - for memos 104
- columns, resizing 139
- Comcast accounts 64
- comments
  - Facebook 107
  - in documents 139
  - in spreadsheets 140
- compatibility information 58, 156, 161, 164
- conference calls 56
- connection menu 32, 173
- connections
  - Bluetooth devices and 59, 134

- corporate servers and 165
  - Internet 123
  - network settings for 124
  - online address books and 84
  - Palm profile and 144
  - phone calls and 55
  - roaming and 60
  - timing out 166
  - transferring files and 112, 115, 119
  - troubleshooting 162, 168
  - TTY/TDD devices and 61
  - Wi-Fi 124, 124–125
  - connectivity specifications 186
  - connectors 186
  - contact header 87
  - contact lists 70, 92
  - contact matches 51, 52, 59, 169
  - contacts 84–92
    - adding 84, 86
    - backup summary 145
    - car kits and 59
    - copying 87
    - default account 92
    - deleting 91
    - dialing by name 52
    - displaying 57, 87, 88, 89
    - editing 87, 88, 89
    - Facebook 85
    - getting in touch with 91
    - getting started with 85
    - Launcher icons for 90
    - linked 84
    - LinkedIn 85
    - linking 89
    - photos for 87, 112
    - preferences for 91–92
    - reminders for 33, 54, 86, 89
    - ringtones for 88, 153
    - saving information for 58, 70, 78, 79, 86
    - searching 59, 86
    - selecting 53
    - speed dials for 88
    - synchronizing 84, 85, 92, 164
    - troubleshooting 169
    - unlinking 89
    - vCards and 93
  - Contacts application 84–92
  - conversations 74–76, 79
    - See also instant messages
  - Conversations view 75
  - cookies 131, 146, 172
  - Copy All option 30
  - copying
    - contacts 44, 87
    - files from computer 40, 41
    - messages 71, 78
    - text 30
  - corporate accounts 65–66, 165
  - coupling 162
  - coverage areas 16, 124, 162
  - creating
    - bookmarks 129
    - contacts 86
    - emails 68
    - events 95
    - files 140
    - instant messages 80
    - memos 104
    - multimedia messages 76–77
    - Palm profile 13
    - task lists 100
    - tasks 100–101
  - credit cards 39, 120, 121
  - cursors 21
  - custom messages 80
  - customer support 8
  - customizing
    - Calendar application 99–100
    - Contacts application 91–92
    - email accounts 67
    - Email application 73
    - instant messaging accounts 79, 81
    - Location Services 126
    - phone settings 59, 61
    - roaming preferences 60
    - signatures 72
    - VZ Navigator 133
    - Web browser 130
    - Wi-Fi connections 125–126
  - cutting text 30
- ## D
- dashboard 173
  - data connection icons 166
  - data roaming 61, 168
  - data service icons 166
  - data service providers 167
  - data transfer 41, 44–47, 84, 94, 170, 171
  - Data Transfer Assistant 45, 84, 94, 174
  - Data Usage 61, 168
  - DataViz 140
  - Date & Time application 145
  - dates 101, 146
    - See also calendars
  - Day view 97
  - default accounts
    - calendar 99
    - contacts 92
    - email 73
  - Default Calendar option 99
  - Default Event Duration option 99
  - Default Event Reminder option 99
  - Default Folder option 67
  - default settings 171
  - delete gesture 23
  - deleting
    - See also erasing
    - alarms 106
    - albums 112
    - applications 27, 172
    - billing accounts 40
    - Bluetooth devices 136
    - bookmarks 130
    - browsing history 131
    - call history 57
    - certificates 149
    - contacts 91
    - conversations 79
    - cookies 131
    - email 67, 72
    - email accounts 68
    - events 97
    - information 147
    - instant messaging accounts 81
    - memos 105
    - messages 79
    - music 119
    - numbers on dial pad 51

- online accounts 164
  - photo albums 112
  - pictures 114
  - ringtones 88
  - tasks 103
  - videos 115
  - web page content 131
  - demagnetization 182
  - desktop organizers 156
  - desktop software 45, 84, 94, 156, 165
  - device. *See* Palm Pixi Plus phone; Bluetooth devices
  - Device Info application 147–148
  - device names 147
  - Devices list 134
  - diagnostic information 148
  - dial pad 50
  - dialing 50–53, 88, 130
  - dialing prefixes 60
  - dialing shortcuts 60
  - dialing tones 60
  - Digital Rights Management (DRM) 114
  - directions 95, 126, 131, 132
  - display. *See* touchscreen
  - display size 138, 141
  - displaying
    - album headers 113
    - applications 25
    - calendar events 97
    - certificates 149
    - contacts 57, 84, 87, 88, 89
    - email folders 72
    - file properties 139
    - images 168
    - maps 85, 91
    - meeting participants 98
    - multimedia messages 78
    - notifications 152
    - phone calls 54, 57
    - pictures 110
    - tasks 102
    - text messages 78
    - videos 114, 116
    - web pages 128
  - DNS Server option 126
  - DOC files 138
  - Doc View 138–140, 145
  - Document Editing 140
  - documentation 8
  - documents 138–141
    - See also* Word files; Excel files; PowerPoint files; PDF files
  - Documents To Go 140
  - DOCX files 138
  - downloading
    - See also* App Catalog; buying applications 36, 38
    - email 67, 69, 167
    - multimedia messages 79
    - music 120–121
    - pictures 110
  - downloads albums 111
  - drafts 69
  - drag and drop gesture 22
  - drag gesture 19, 174
  - driving directions 95, 126, 131, 132
  - driving safety tips 58, 182
  - DRM-free files 111, 114
  - DTA. *See* Data Transfer Assistant
  - DTMF tones 60
  - due dates (tasks) 101, 103
- ## E
- earpiece 162
  - EarthLink accounts 64
  - EAS. *See* Exchange ActiveSync
  - echoes 162
  - editing
    - bookmarks 129, 130
    - contacts 87, 88, 89
    - email accounts 67
    - files 140
    - instant messages accounts 81
    - memos 104
    - Palm profile 144
    - tasks 102
    - text 21, 30
    - web page bookmarks 130
  - electrostatic discharge (ESD) 183
  - email 64–74
    - See also* email addresses; Email application
    - advanced settings 67
    - alerts for 67
    - attachments 70, 74
    - backup summary 145
    - contacts and 70
    - creating 68
    - deleting 67, 72
    - dialing from 52
    - download options for 167
    - drafts 69
    - files and 69, 139, 142
    - flagging 71
    - folders 72, 73
    - forwarding 71
    - links in 116
    - managing 71
    - memos 105
    - merging 64
    - message headers 72
    - music and 117
    - pictures and 113
    - preferences for 73
    - receiving 64, 67, 69
    - replying to 71
    - retrieving 124
    - roaming and 61
    - sending 64, 68, 74
    - signatures 67, 72
    - synchronizing 64, 67, 69, 164
    - troubleshooting 167
  - email accounts 64–68
    - accessing 64
    - changing 67
    - default 73
    - deleting 68
    - login settings 67
    - multiple 65
    - preferences for 67
    - reordering 73
    - setting up 64–66
    - troubleshooting 165, 167
  - email addresses
    - changing 146
    - entering 67, 68
    - saving 70
  - Email application 64–74
  - email service providers 64, 167
  - emergency calls 52, 182
  - emergency phone numbers 52



- emoticons 77–78
  - endnotes, in documents 139
  - erasing 13, 144, 146, 147, 148, 170–171
    - See also deleting
  - ESD safety 183
  - ESMTP authentication 167
  - EvDO data networks 11, 166
  - Event Location option 95
  - Event Notes option 96
  - Event Reminder option 99
  - events 93–96
    - alarms and 96, 99
    - calendar 93, 95
    - creating 95
    - deleting 97
    - displaying 97
    - locations for 95
    - reminders for 96, 98
    - repeating 95
    - saving 95
    - synchronizing 93, 94, 100
    - untimed 96
  - Excel files 138, 139–140
  - Exchange ActiveSync accounts
    - availability 188
    - phone synchronization 44, 46
    - setting up 65–66
    - Synergy feature and 6
    - troubleshooting 165
  - Exchange servers
    - searching over 52
    - synchronizing with 165, 166
    - troubleshooting 166
  - explosive atmospheres 180
  - exporting data 44–47
    - See also data transfer
  - extensions (phone calls) 60
- ## F
- Facebook accounts
    - availability 188
    - backup 145
    - calendar synchronization 94
    - contacts synchronization 85
    - deleting from 91
    - phone synchronization 46
    - pictures and 113–114
  - Facebook application 107
  - factory-installed applications 186
  - favorites
    - email folders 73
    - web bookmarks 129
  - FCC statements 177
  - feedback 162
  - file types
    - document 138
    - music 117
    - picture 110
    - video 114
  - files
    - See also specific types
    - changing contents 140
    - copying to phone 40, 114, 138, 141
    - creating 140
    - display size 138
    - finding text in 138, 141, 142
    - freeing memory and 172
    - losing 170, 171
    - opening 138, 141
    - properties for 139
    - saving 139, 142
    - searching for 138
    - sending 69, 139, 142
    - storing 170
  - filtering tasks 102
  - Find command 138, 141, 142
  - finding. See searching
  - flagging emails 71
  - flick gesture 19, 174
  - folders
    - copying files to 170
    - email 72, 73
  - footnotes, in documents 139
  - Forget Network option 125
  - formatting
    - email message text 68, 72
    - phone 150
  - forward gesture 18, 151
  - forwarding
    - meeting invitations 74
    - messages 71, 78
  - free applications 38
  - front gesture 151
  - Front view 10
  - frozen phone 147, 161
  - full erase 148, 170
- ## G
- GALs. See Global Address Lists
  - genres 117, 118, 120
  - Geotag Photos option 126
  - gesture area 17, 174
  - gestures 6, 17–23
    - advanced 151
    - basic 18–19
    - scroll 19–20
    - text selection 21–22
    - zoom 20
  - Get email option 67
  - Get My Music option 117
  - GIF files 110
  - Global Address Lists 52, 84
  - Global Address Lookup option 87
  - Gmail 64, 84, 93, 164, 169
  - Google accounts
    - availability 188
    - phone synchronization 44, 46
    - setting up account on phone 64, 84, 93
    - setting up account on website 44, 45, 46
    - Synergy feature and 6
  - Google calendar 64, 93, 169
  - Google Earth 127
  - Google Maps 131
  - Google Services 126, 127
  - Google Weather 93
  - GPS applications 127
- ## H
- H.263 files 114
  - H.264 files 114
  - HAC 12, 61, 178–179
  - hands-free devices
    - setting up 58
    - troubleshooting 163–164
  - hanging up 53, 58
  - hard resets. See full erase
  - hardware 7

headsets 58–59, 163  
hearing aid compatibility. *See* HAC  
hearing aids 61, 178–179, 181  
hearing loss 181  
help 8, 172  
    *See also* troubleshooting  
Help application 8  
history 54, 57, 74, 130, 131, 172  
hospitals 180

## I

iCal on Mac 45  
icons  
    battery 11, 13  
    bookmarks 129  
    data services 166  
    Google maps 131  
    Launcher 27  
    notifications and 162  
    phone status 11  
    Quick Launch 26  
    signal-strength 162  
    title bar 11–12  
    web page 128, 129  
    Wi-Fi 11  
ignored calls 53, 57  
IM. *See* instant messages  
images 168  
    *See also* pictures  
IMAP email accounts 167  
importing information 165  
    *See also* data transfer  
inbox (email) 64, 73, 167  
Industry Canada 177  
information

*See also* text  
    accessing 6, 165  
    backing up 144  
    cutting, copying 30  
    deleting 147  
    entering 128  
    importing 165  
    linked contacts 89  
    losing 170  
    pasting 30  
    protecting 144  
    restoring 171  
    retrieving 6  
    saving 86  
    transferring 43, 156  
inline images 69  
    *See also* pictures  
installing  
    third-party applications 36, 172  
    updates 35–36  
instant messages 80–81  
    accounts 79, 81  
    creating 80  
    notifications for 81  
    online status 80  
    sending 75, 80  
Interactive Tests 148  
interference 163  
internal memory. *See* memory  
international dialing 60  
international language settings  
    150  
Internet. *See* websites  
Internet service providers 167  
IP addresses 126

ISPs. *See* Internet service  
    providers

## J

JavaScript option 131  
Join network option 125  
JPG files 70, 76, 78, 110, 111, 112,  
    168

## K

keyboard 51, 186  
keyboard shortcuts 30  
keywords 33  
known networks 125

## L

labels 86  
landscape view 110, 114, 116, 128,  
    168  
language 150  
Launcher  
    backup summary 145  
    contacts in 90  
    defined 174  
    gesture 24  
    icons 27  
    pages 11, 24  
    web pages in 128  
layered calendars 94  
light in gesture area 17, 30  
lighted dial pad 50  
linked contacts 84, 174  
LinkedIn accounts 188

    contacts synchronization 85  
    deleting from 91  
linking to contacts 89  
List Order option 92  
lists  
    scrolling in 19  
    selecting items in 29  
    sorting items in 102  
location information 95, 126  
    *See also* maps  
Location Services 126–127, 145  
lock icon 127  
login settings 67, 99  
lost devices 144  
lowercase letters 28

## M

M4V files 114  
Mac computers  
    copying files 112, 115, 119  
    data transfer from 45  
Mac computers and devices  
    transferring files and 170  
machinery, operating 181  
maps 85, 91, 131, 132, 168  
Mark All Completed/Incomplete  
    command 103  
Mark as read/unread command 71  
media files 170, 172  
medical devices 180  
meeting invitations. *See* meeting  
    requests  
meeting participants 98  
meeting requests 74, 98  
memory 172, 186

- Memos application 104–105, 145
- menus 173
- merged views 64, 72, 174
- message headers 72
- messages. *See* email; multimedia messages; text messages; voicemail; instant messages
- messaging albums 111
- Messaging application 74–81
  - backup summary 145
  - troubleshooting 167
- microphone 162
- Microsoft Excel files. *See* Excel files
- Microsoft Exchange ActiveSync.
  - See* Exchange ActiveSync
- Microsoft PowerPoint files. *See* PowerPoint files
- Microsoft Word files. *See* Word files
- miscellaneous albums 111
- missed calls 11, 57
- misspelled words 29
- mobile network connections. *See* connections
- Month view 97
- Move to folder command 71
- movie listings 133
- MP3 files 117
- MP3 music service 119–121, 170
- MP4 files 114
- MPEG4 files 114
- multimedia messages 76–79
  - addressing 76
  - attachments 78
  - contact information and 79
  - copying 78

- creating 76–77
- deleting 79
- dialing from 52
- displaying 78
- downloading 79
- forwarding 78
- notifications for 81
- pictures and 113
- roaming and 61
- sending 55, 75, 77
- troubleshooting 167

multitasking 6, 23

music 117–121

- answering phone and 53
- backing up 119
- deleting 119
- downloading 120–121
- information about 120
- listening to 59, 117
- playback controls 118
- as ringtones 153, 170
- searching for 118, 119
- troubleshooting 170

Music application 117–119

mute 54, 81, 152

## N

names

- See also* user names
- Bluetooth device 136
- device 147
- dialing by 52
- sending or receiving messages and 67

- national emergency phone numbers 52
- navigation 133, 134
- network connections. *See* connections
- network settings 124
- network times 147
- networks 124, 125
- New card command 128
- next gestures 151
- normal use position 182
- notes 96, 101
- notifications
  - contacts and 53
  - defined 174
  - displaying 34, 152
  - icons 11, 162
  - messages and 67, 81
  - responding to 34, 162
  - sounds for 53
  - troubleshooting 168
  - voicemail and 61
- Now Playing list 118, 119
- numbers 28, 51, 107

## O

online accounts

- See also* accounts; email accounts
- availability of 188
- defined 174
- synchronization of 64, 164

online address books 52, 84

online calendars 93, 94, 99

- See also* calendars

- online status 80
- online support 8
- open Wi-Fi networks 124
- opening
  - application menu 31
  - applications 23–24
  - attachments 70, 78
  - connection menu 32
  - files 138, 141
  - maps 85, 91
  - web pages 127, 130
- operating system 175, 185
- Option key 10, 27, 174
- organizer features 83
- outage information 167
- outgoing email address 67
- Outlook 45, 165
- overdue tasks 102

## P

pacemakers 180

page indicators 11, 24

pairing devices 134–135

Palm Desktop software 45, 156, 165

Palm online support 8

Palm OS 36

Palm Pixi Plus phone 6

- See also* phone

Palm profile

- about 6, 13
- Amazon MP3 music and 119
- backups 144–146
- creating 13
- defined 174

- events and 94
- passwords 38
- restoring data 171
- reusing 13
- settings 146
- Palm profile account 47, 174
- Palm Synergy feature. *See* Synergy feature
- Palm webOS. *See* webOS platform
- partial erase 148, 170
- partnerships. *See* pairing
- passkeys 135
- Password is Required 40
- passwords
  - changing 146
  - entering 28
  - instant messages and 81
  - Palm profile 38
  - PDF files and 141
  - screens and 152
  - Wi-Fi 124
- pasting text 30
- pauses in phone numbers 86
- PDF files 141, 142, 145
- PDF View 141–142, 145
- performance 161
- Personal Identification Numbers. *See* PINs
- personal information 41, 44, 170
- phone
  - See also* phone calls
  - answering 53, 56
  - backup summary 145
  - caring for 182
  - compatible devices for 164
  - conference calls 56
  - data services and 166
  - data transfer to 156
  - dialing 50–53, 88, 130
  - disposing of 180
  - emergency calls and 52
  - getting started with 10
  - hanging up 53, 58
  - installing third-party applications and 172
  - lost 144, 146
  - number for 57
  - pairing 134–135
  - preferences for 59–61
  - redialing 52
  - regional settings for 150
  - renaming 147
  - replying to conversations and 75
  - restarting 147, 161, 163
  - safety information 58
  - setting up 13
  - silencing ringer for 53
  - specifications 185
  - status 11
  - stolen 144, 146
  - system information about 147
  - troubleshooting 148, 162–163
  - TTY/TDD devices and 61
  - turning on and off 15, 17
  - volume 54
- phone calls 50–56
  - contact information for 58
  - driving and 58, 182
  - ending 55
  - hands-free devices and 59
  - hold 54, 56
  - information about 54, 57
  - making 50–53, 54, 130
  - messages during 76
  - receiving 53
  - replying to 53
  - ringtones for 88, 153
  - searching and 6
  - searching for contacts and 59
  - second 55
  - sending to voicemail 53
  - shortcuts for 60
  - swapping 56
- phone headsets 58–59, 163
- phone icons 11
- Phone Reset Options settings 148
- phone settings 59–61
- photo albums 111, 112
- Photo roll albums 110, 111
- Photobucket accounts 113–114, 145, 188
- Photobucket application 127
- photos. *See* pictures
- Photos application 111–114
- pictures 110–114
  - albums and 111
  - backup summary 145
  - caller IDs and 87, 112
  - contact 87, 112
  - deleting 114
  - displaying 110
  - downloading 110
  - Facebook 113–114
  - Launcher icons for 90
  - Photobucket 113–114
  - sending 76, 113, 168
  - taking 110, 169
  - uploading 113–114
    - as wallpaper 113, 150
- pinch in gesture 20, 174
- pinch out gesture 20, 174
- PINs 152
- Pixi Plus phone. *See* Palm Pixi Plus phone; phone
- play lists 118, 119
- Play sound option 67
- playback controls
  - for music 118
  - for video 115, 116
- playing
  - music 118
  - videos 115, 116
  - voicemail messages 54
- Playlist view 118
- PNG files 70, 110, 111, 112
- POP email accounts 167
- popups 131
- power accessories 14, 156, 179, 180
- power button 12
- PowerPoint files 138
- power-saving feature 15, 163
- PPT files 138
- PPTX files 138
- preferences. *See* customizing
- prefixes 60
- presentations. *See* PowerPoint files
- previous gestures 151
- priority settings 68, 101
- processor specifications 185
- profile 6, 144, 174

protecting information 144  
punctuation 28  
Purge completed command 104

## Q

Quick Launch  
  applications in 26  
  defined 175  
  gesture 19  
  icons 26  
Quick Tests 148

## R

radio frequency 178  
radio specifications 185  
reading email 69  
recharging the battery 14  
recurring events. *See* repeating events  
recycling 180  
redialing 52  
redirectors (web pages) 168  
regional settings 134  
Regional Settings application 145, 150  
reinstalling applications 39  
reminders  
  *See also* alarms  
  contacts 33, 54, 86, 89  
  events 96, 98, 99  
remote diagnostics 148  
remote erase 13  
Remove Contacts Account option 92

Remove Email Account option 68  
Remove Flag 71  
renaming device 147  
reordering  
  bookmarks 130  
  cards 25  
  email accounts 73  
  icons 26, 27  
  notifications 35  
  tasks 103  
repeating events 95  
repetitive motion injuries 180  
Reply-to address option 67  
Reset Voicemail Count option 61  
resetting phone 147, 170–171  
restarting phone 147, 161  
reviews 37, 39  
ringer 53  
ringer switch 10, 53, 152  
ringtone volume 105, 106, 152, 153  
ringtones 88, 153  
  download 153  
roaming 36, 60, 168  
rows, resizing 139

## S

safety information 177  
SAR 178  
satellite photos 131  
saving  
  attachments 70  
  calendar events 95  
  contacts 86  
  email addresses 70  
  files 139, 142

images 113  
information 86  
phone numbers 58  
pictures 113  
  web page bookmarks 130  
schedules. *See* calendars  
screen  
  brightness 15, 150  
  caring for 10  
  troubleshooting 159, 161  
  turning on or off 15, 17, 150  
  unlocking 151  
Screen & Lock application 145, 150–152  
screen captures albums 110, 111  
scroll fast gesture 20  
scroll gesture 11  
scroll gestures 19–20  
scroll slow gesture 19  
searching 6, 104  
  for applications 24  
  for contacts 59, 86  
  for files 138  
  for locations 133  
  for memos 104  
  for music 117, 118, 119  
  for text 138, 141  
  for videos 116  
  for websites 127  
second phone calls 55  
secure networks 125  
Secure Unlock option 151  
secure websites 127, 169  
secure Wi-Fi networks 124  
security 125

*See also* Certificate Manager;  
  erasing data  
  locking the screen 150, 151  
  Palm profile 146  
seizures 181  
Select All option 30  
sending  
  conversation messages 75  
  document files 139  
  email 64, 68, 74  
  instant messages 80  
  multimedia messages 55, 77  
  music 117  
  PDF files 142  
  pictures 76, 113, 168  
  text messages 76, 77  
  videos 168  
sensors 186  
Set a ringtone option 88  
Set due date for all command 103  
Set flag command 71  
Set speed dial command 89  
setting up  
  alarms 105–106  
  billing accounts 39–40  
  email accounts 64–66  
  Exchange ActiveSync accounts 65–66  
  Google accounts 44, 45, 46, 64, 84, 93  
  hands-free devices 58  
  instant messaging accounts 79  
  online pictures accounts 114  
  phone 13  
  voicemail 54  
  web service 113

- settings 171
  - share option 74
  - sharing
    - files 139, 142
    - images 69, 113
    - locations 133
    - videos 116
    - web pages 128, 130, 172
  - Shift 28
  - shortcuts 30, 60
  - Show Contact Matches option 59
  - Show email option 67
  - Show Icon option 67
  - signal 16, 162, 163
  - signatures 67, 72
  - Simple PIN option 152
  - size specifications 185
  - slides. *See* PowerPoint files
  - smart folders 73, 175
  - SMTP servers 167
  - snooze 98, 106
  - soft resets. *See* partial erase
  - software 165
  - software updates 35–36
  - songs. *See* music
  - sorting
    - contacts 92
    - data in spreadsheets 140
    - task lists 102
  - Sounds & Ringtones application
    - 145, 152–153
  - sounds. *See* specific types
  - speakerphone 162
  - specific absorption rate. *See* SAR
  - specifications 185–187
  - speed dialing 51, 88
  - spelling errors 29
  - spreadsheets. *See* Excel files
  - static 163
  - stereo headsets 58, 59
  - stop scrolling gesture 20
  - storage space 172
  - streaming
    - music 117
    - videos 116
  - supported file types. *See* file types; *specific file types*
  - swapping phone calls 56
  - swipe gesture 18, 175
  - Sym key 10, 175
  - symbols 28
  - Sync deleted emails option 67
  - Sync Now option 92
  - synchronization
    - calendars 94
    - defined 164
    - desktop software and phone 46
    - email 64, 67, 69
    - Exchange accounts 46
    - Exchange servers 165, 166
    - Facebook accounts 46
    - Google accounts 46
    - online calendars 93, 94, 100, 164
    - online contacts 84, 85, 92
    - retrieving information and 6, 165
    - setting up online accounts for 164
    - third-party 165
    - troubleshooting 165–166
  - Synergy feature 44
  - about 6
  - Calendar 93
  - Contacts 84
  - defined 175
  - Email 64
  - Google accounts 6, 46
  - Messaging 74
  - system information 147
  - system updates 35–36, 175
    - See also* updating phone
- ## T
- tap gesture 18, 161, 175
  - task lists
    - assigning tasks to 101
    - creating 100
    - deleting 104
    - filtering 102
    - reordering items in 103
  - tasks
    - backup summary 146
    - completing 101, 103
    - creating 100–101
    - deleting 103
    - displaying 102
    - due dates for 103
    - editing 102
    - priorities for 103
  - Tasks application 100–104
  - TDD devices 61
  - technical support 8
  - temperature ranges 187
  - tests. *See* Quick Tests; Interactive Tests
  - text 142
    - See also* information
    - copying, cutting 30
    - finding 138, 141
    - formatting 68, 72
    - pasting 30
    - selecting 21
  - text messages 76–79
    - addressing 76
    - contact information and 78, 79
    - copying 78
    - creating 76–77
    - deleting 79
    - displaying 78
    - forwarding 78
    - links in 116
    - notifications for 81
    - phone calls and 52, 55
    - roaming and 61
    - sending 75, 76, 77
    - troubleshooting 167
  - text selection gestures 21–22
  - text telephones. *See* TTY/TDD devices
  - third-party applications
    - adding 36
    - backup summary 146
    - internal memory and 172
    - losing 170, 171
    - synchronizing using 165
    - troubleshooting 172
  - third-party software 41
  - throwing gesture 19
  - thumbnail images 110
  - times 146, 147
  - Tips (Help application) 8
  - title bar icons 11–12

- Top view 12
- touchscreen 17
  - See also screen
- Touchstone charging dock 14
- traffic information 131
- transferring data 44–47
  - computer to phone 44
  - contacts 84
  - events 94
  - Exchange to phone 46
  - Facebook to phone 46
  - Google to phone 46
  - old phone to new 44
  - planning for 44
- troubleshooting 156–172
  - battery 156–159
  - calendars 169
  - cameras 169
  - contacts 169
  - email 167
  - email accounts 167
  - hands-free devices 163–164
  - memory 172
  - messaging 167
  - music 170
  - notifications 168
  - performance 161
  - phones 148, 162–163
  - screens 159, 161
  - synchronization 165–166
  - third-party applications 172
  - transferring data 170, 171
  - updates 171
- trusted partnerships. See pairing
- TTY/TDD devices 61

- Turn Off and Erase Data option 144
- Turn On/Off Airplane Mode
  - option 16
- turning on and off
  - advanced gestures 151
  - airplane mode 16
  - Bluetooth 134
  - JavaScript 131
  - phone 15
  - screen 15, 150
  - Wi-Fi 124
  - wireless services 15, 16
- TXT files 138

## U

- universal search 6, 32–34, 51, 169, 175
  - See also searching
- unlinking contacts 90
- unlocking the screen 151
- unread emails 64
- untimed events 96
  - See also calendars; events
- up gesture 19
- updating
  - applications 39, 173
  - billing accounts 40
  - phone 35–36
  - troubleshooting 171
- uploading pictures 113–114
- uppercase letters 28
- URLs 127, 128, 129
- USB cable 7
- USB Drive mode 40, 170

- user names 81
- user profile 6, 144, 174
- user safety information 180

## V

- vCards 84, 93
- Verizon Wireless
  - bills 132
  - customer service 8, 44
  - location services and 133
- Verizon Wireless network
  - connecting to 15
  - icons for 11
  - roaming and 61
  - usage of 55
- vibrate 67, 152
- video playback controls 116
- videos 114–116
  - answering phone and 53
  - deleting 115
  - playback controls 115, 116
  - searching for 116
  - sending 168
  - sharing 116
  - watching 114, 116
- Videos application 114–116
- views 6
  - See also cards
- Voice Network 61
- voicemail
  - listening to 54
  - resetting 61
  - sending calls to 53
  - setting up 54
- Voicemail Count Reset option 61

- volume
  - alarms 105, 106
  - phone call 54
  - ringtone 105, 152, 153
  - system sounds 152
  - troubleshooting 162
- VZ Navigator 132–134

## W

- waking up screen 12
- wallpaper 113, 146, 150
  - See also Card view
- WAV files 117
- weak signals 162, 163
- weather 93, 132
- web addresses 127, 128, 129
- Web application 127–131, 146, 168
- Web browser 127–131
- web pages
  - bookmarking 129–130
  - browsing history for 131
  - cache for 131
  - dialing from 52
  - display options for 128
  - images on 168
  - information on 6, 128, 169
  - navigating through 128
  - opening 127, 130
  - recently viewed 130
  - refreshing 128
  - sharing 128, 130, 172
  - troubleshooting access to 168
- web search 33
- web service
  - setting up 113

- web-based email 64, 64–66
- webOS platform 6, 175
- websites
  - additional browsers 128
  - browsing 61, 124
  - connecting to 124, 127
  - customer support 8
  - internal memory and 172
  - JavaScript for 131
  - music from 117
  - pictures and 113–114
  - popups from 131
  - searching for 127
  - secure 127, 169
  - troubleshooting connections to 168
  - videos from 116
- Week view 97
- weight specifications 185
- Wide View 138
- Wi-Fi
  - See also* wireless services
  - connecting to 124, 124–125
  - disconnecting from 125
  - icons 11
  - network lists 125
  - network types 124
  - preferences for 125–126
  - turning on and off 124
- Windows 7 computers
  - copying files from 112, 115, 119
  - Outlook support 45
- Windows Vista computers
  - copying files from 112, 115, 119
  - data transfer from 45
  - Outlook support 45

- Windows XP computers
  - copying files from 112, 115, 119
  - data transfer from 45
- wired headsets 58
- wireless networks 124
- wireless services
  - restarted phone and 163
  - turning on and off 15, 16, 17
- WLANs. *See* wireless networks
- Word files 138, 139
- worksheets. *See* Excel files

## X

- XLS files 138
- XLSX files 138

## Y

- Yahoo! accounts 45, 64, 188
- YouTube application 114, 116

## Z

- zoom in gesture 20
- zoom out gesture 20



