

# Riō<sup>®</sup>

## Forge



**Table of Contents**

**Getting Started**

**Connections**

**Software Setup**

**Basic Operations**

**Advanced Features**

**Help**

**Index**

## Package Contents

- Rio Forge
- Installation CD
- Earphones
- Rio Forge Sports Case and Armband
- Quick Start Poster
- USB Cable



## Copyright/Trademarks

© 2004 Digital Networks North America, Inc. All rights reserved. Digital Networks North America, Inc. shall not be liable for any errors contained herein or for any damages arising out of or related to this document or the information contained herein, even if Digital Networks North America has been advised of the possibility of such damages. This document is intended for informational and instructional purposes only. Digital Networks North America, Inc. reserves the right to make changes in the specifications and other information contained in this document without prior notification. Digital Networks North America, Inc. disclaims any obligation to update the information contained herein. Rio® is a registered trademark of Digital Networks North America, Inc.

Microsoft, Windows Media and the Windows Logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

AudibleReady is a registered trademark of Audible, Inc.

This product is iTunes ready. iTunes is provided by Apple Computer, Inc. Copyright © 2001 Apple Computer, Inc. All rights reserved. iTunes is a trademark of Apple Computer, Inc. Mac and the Mac logo are trademarks of Apple Computer, Inc. registered in the United States and other countries.

All other product names may be trademarks of the companies with which they are associated.

P/N 75550250-003

# Riō



**AudibleReady®**



# Table of Contents

• Package Contents .....	ii		
• Copyright/Trademarks .....	ii		
<b>1 - Getting Started</b>			
<b>Welcome</b> .....	1		
• Learning More .....	1		
<b>Tour of the Rio Forge</b> .....	2		
<b>LCD Overview</b> .....	5		
• Player Mode .....	5		
• Menu Mode .....	5		
• Date View .....	6		
• Time Code View .....	6		
• Track Format View .....	6		
• Play Screens .....	6		
• FM Radio: Store Preset .....	7		
• FM Radio: Manual .....	7		
• FM Radio: Preset .....	7		
<b>2 - Connections</b>			
<b>Basic Connections</b> .....	8		
• Battery .....	8		
• Earphones .....	8		
• USB .....	8		
• Additional Accessories .....	9		
<b>3 - Software Setup</b>			
<b>Windows</b> .....	11		
• Rio Music Manager .....	12		
<b>Mac</b> .....	13		
• iTunes .....	13		
<b>4 - Basic Operations</b>			
<b>Basic Operations</b> .....	14		
<b>Copy Tracks</b> .....	15		
• Copying Tracks with Rio Music Manager .....	15		
<b>Transfer Tracks</b> .....	16		
• Rio Music Manager .....	16		
• Transferring Tracks using Windows Explorer .....	17		
• iTunes .....	18		
<b>Control the Player</b> .....	19		
<b>Play Music</b> .....	20		
<b>Play Music</b> .....	21		
• Play All .....	22		
• Album .....	22		
• Artist .....	22		
• Genre .....	23		
• Track .....	23		
• Year .....	23		
• New Music .....	23		
• Playlist .....	24		
• Spoken Word .....	24		
• FM Recordings (Rio Forge 256 and 512 Only) .....	24		
<b>FM Tuner</b> .....	25		
• FM Control .....	25		
• Manual .....	26		
• Store Preset .....	26		
• Preset .....	26		
<b>5 - Advanced Features</b>			
<b>Advanced Features</b> .....	27		

**Bookmarks** .....28

**Settings** .....29

- Playback .....30
- Equalizer .....31
- Power .....32
- Resume .....33
- Display .....34
- Time .....35
- Language .....36
- FM Tuner .....37
- Lock Setup .....38
- Tags .....39

**FM Record (Rio Forge 256 and 512 Only)** .....40

**Stopwatch** .....41

**About** .....42

**6 - Help**

**Troubleshooting** .....43

- Customer Service Information .....43
- Frequently Asked Questions .....44

**Glossary of Digital Audio Terms** ..50

- Bass .....50
- Bitrate .....50
- Codec .....50
- DRM .....50
- Firmware .....51
- Gain .....51
- ID3 Tags .....51
- Mass Storage Class .....51
- MP3 .....51
- Playlist .....51
- Rip and Encode .....52

- Synchronize .....52
- Treble .....52
- VBR .....52
- WMA .....52

**ECC, FCC, and Industry Canada**

**Compliance** .....53

- Statement of Compliance .....53
- Federal Communications Commission (FCC) 53
- Industry Canada .....53

**Safety** .....54

- Warning .....54
- CAUTION .....54

## Chapter 1

# Getting Started

---


## :: Welcome


Thank you for purchasing the Rio Forge. The Rio Forge is a portable digital audio player that provides many hours of MP3 and WMA playback. The Rio Forge features a lighted LCD, a memory expansion slot, a stopwatch, and an FM radio tuner.

## Learning More

- Refer to the Quick Start poster for the basics on how to set up and start using the Rio Forge.
- Visit the Rio website at [www.rioaudio.com](http://www.rioaudio.com).

## :: Tour of the Rio Forge

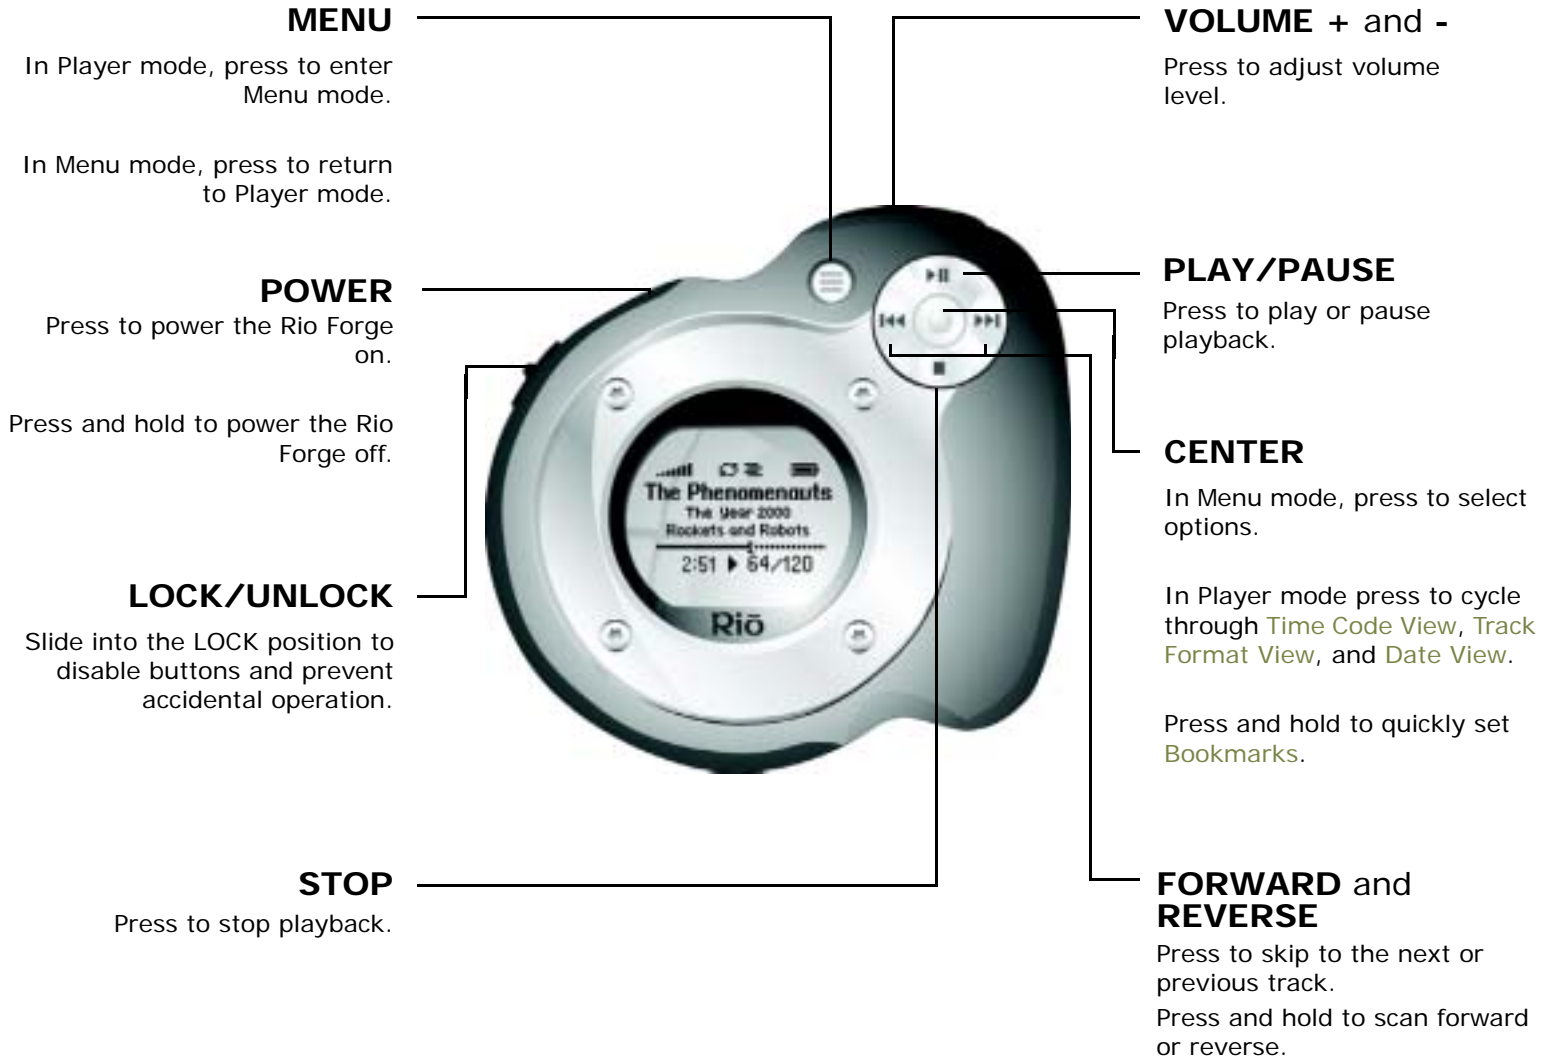

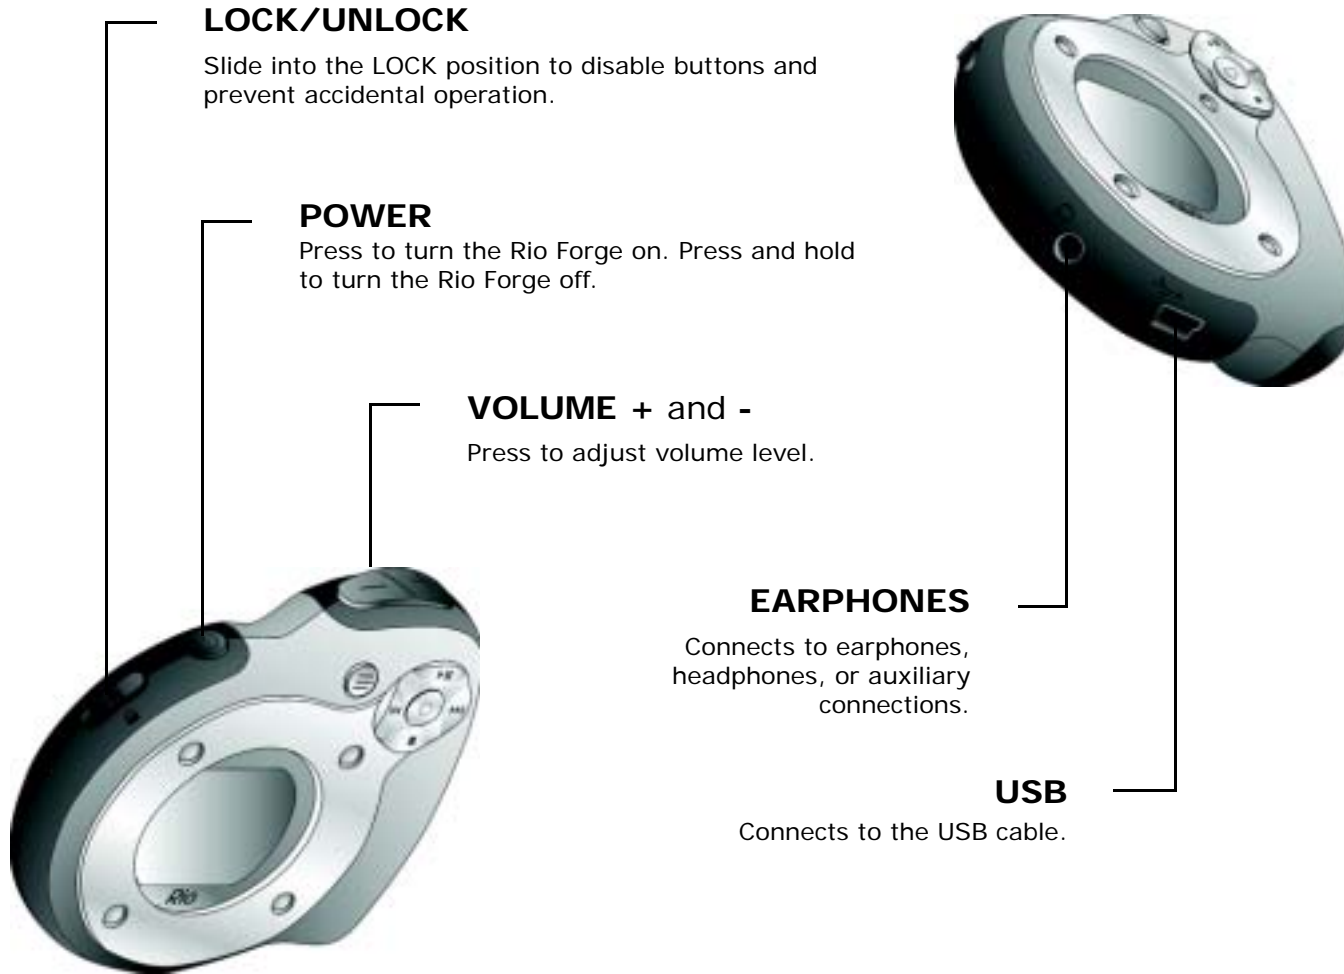

**LOCK/UNLOCK**

Slide into the LOCK position to disable buttons and prevent accidental operation.

**POWER**

Press to turn the Rio Forge on. Press and hold to turn the Rio Forge off.

**VOLUME + and -**

Press to adjust volume level.

**EARPHONES**

Connects to earphones, headphones, or auxiliary connections.

**USB**

Connects to the USB cable.

**Optional Memory Card**

The Rio Forge supports optional SD and MMC memory sizes of 8MB - 1GB.



**AAA Battery**

Insert AAA-battery. The Rio Forge supports both alkaline and NiMH batteries.


**Battery Compartment Cover**

Remove to access the battery compartment.




## :: LCD Overview

### Player Mode

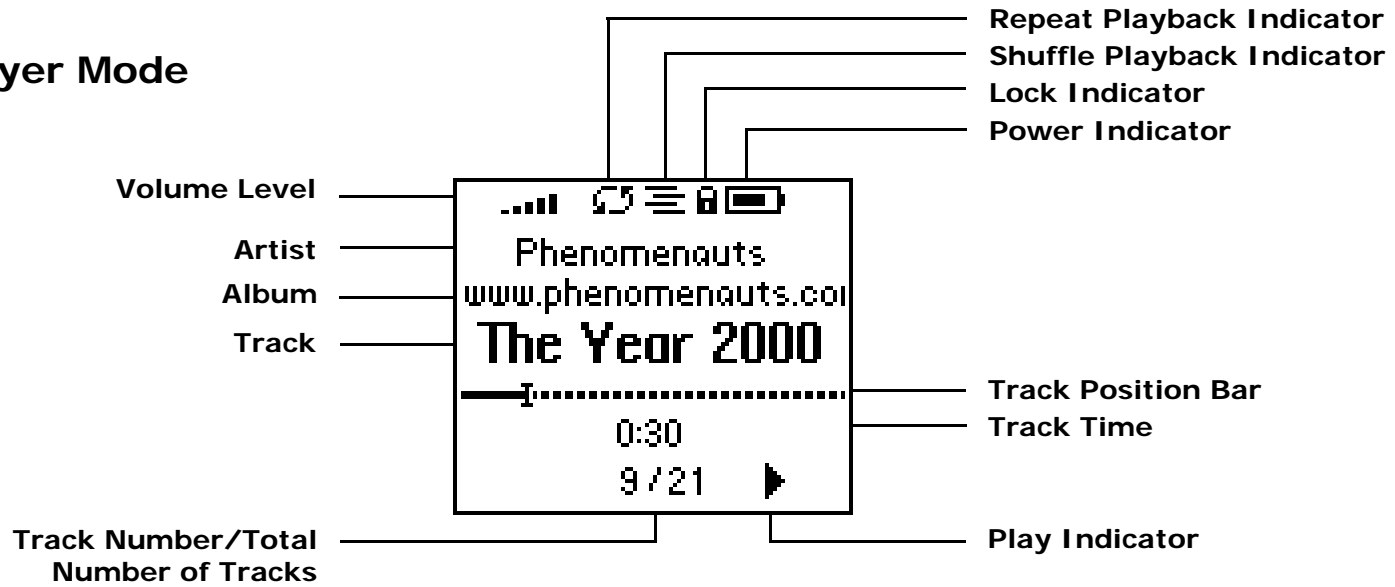


### Menu Mode

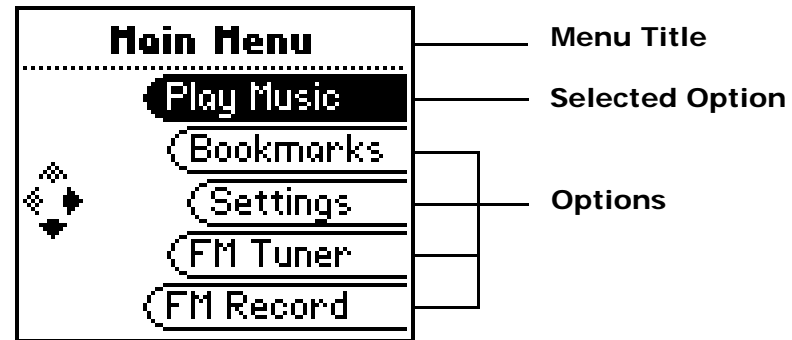

**Time Code View**

Track Time  
Track Number/Total  
Number of Tracks

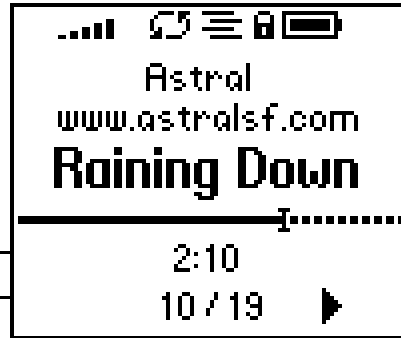

**Play Screens**

Press **CENTER** to cycle through Time Code, Date, and Track Format, and EQ setting views.

**Date View**

Time



Month/Day/Year


**Track Format View**

Codec and Bitrate




Track Size


**FM Radio: Manual**

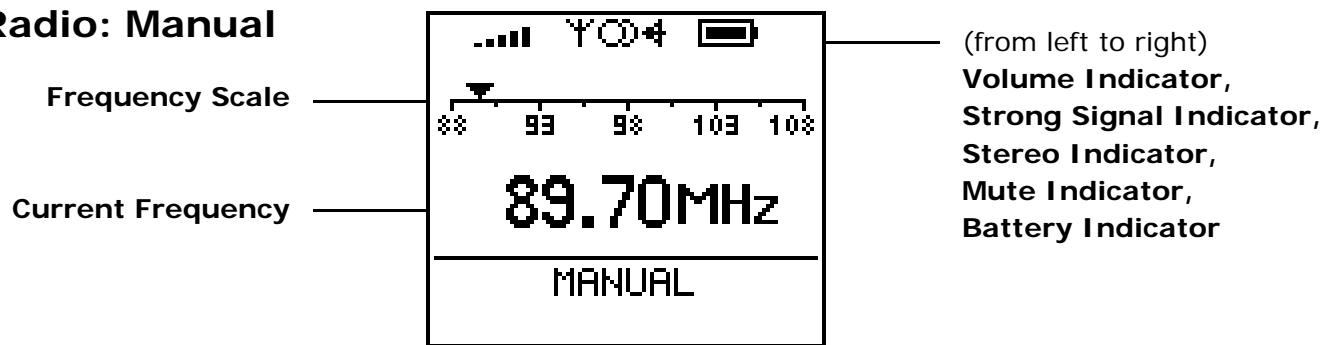

**FM Radio: Store Preset**

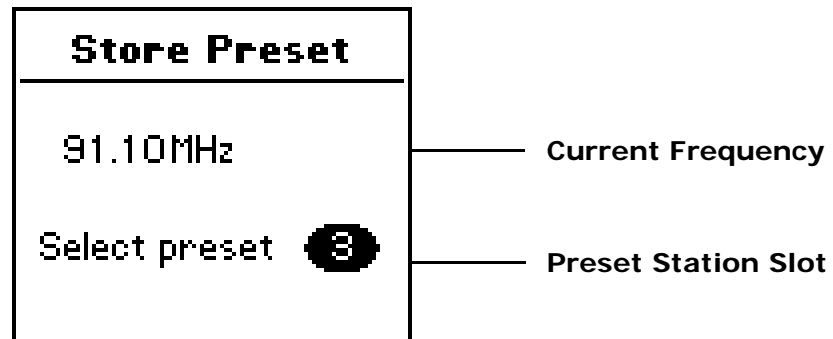

**FM Radio: Preset**

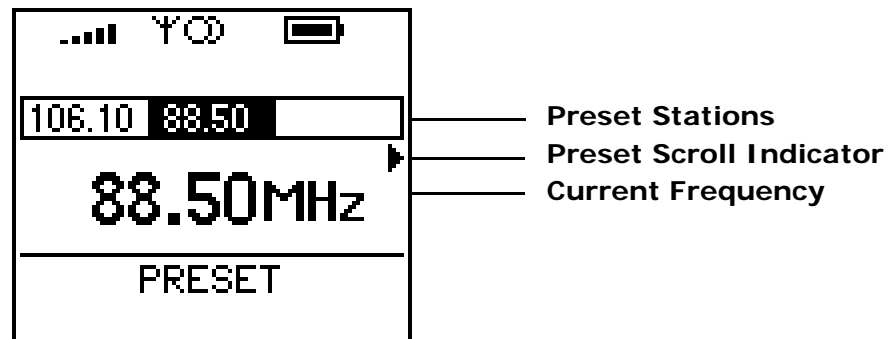

## Chapter 2

# Connections

## :: Basic Connections

This chapter describes how to connect the Rio Forge to earphones, mini USB cables, and alternate devices. Basic connections include:

### Battery

The Rio Forge uses a single AAA-battery that can provide many hours of use. The **Battery Compartment Cover** must be removed before a battery can be installed.

### Earphones

Connect the supplied earphones to the **EARPHONES** jack on the bottom of the Rio Forge.

### USB

The Rio Forge must be connected using the included USB cable to the USB port on your computer before music or files can be transferred to and from the Rio Forge and your computer.

### USB Detection with the Windows Device Driver

USB connectivity works immediately. Installation of device driver software is not required unless your computer uses the Windows 98 SE operating system.

If using Windows 98 SE the Windows Device Driver Wizard will be displayed after the USB cable has been plugged into both the Rio Forge and the computer. Please follow these steps:

- 1 Confirm the Rio installation CD is in the computer's CD-ROM drive.
- 2 Check the **CD-ROM Drives** box when the Windows Device Driver Wizard requests the location of the Rio Forge drivers.
- 3 Click **Next** and follow the Windows Device Driver Wizard instructions.



## Additional Accessories

Get the most out of your Rio Forge with additional accessories available online at the Rio [website](#). Some of the most popular accessories include the following:

- **Rio Approved External Memory Cards**

Add an [external memory card](#) to your Rio Forge and significantly increase the number of tracks that can be loaded onto the Rio Forge.



- **Rio Forge Sports Case and Armband**

Replace sports cases and armbands that have been worn down by extreme sports and intensely active lifestyles.



- **Rio Car Stereo Adapter**

Upgrade your car stereo for hundreds of dollars less than buying a new MP3 CD player. The Rio car stereo adapter connects to the earphone jack on the Rio Forge and lets you play your favorite music in any vehicle equipped with a standard cassette deck.



# Software Setup

---

## Chapter 3

### Software Setup

Software found on the Rio installation disc should be installed on a computer before using the Rio Forge. Rio Music Manager should be installed on computers that use the Windows operating systems. iTunes and the Rio iTunes plug-in should be installed on computers that use a Mac operating system.

Windows

Mac




## :: Windows

Follow these instructions to load **Rio Music Manager** onto your PC.

- 1 Place the installation CD label-side up into the computer's CD-ROM drive.  
The Rio installation software launches automatically.
- 2 Click **Rio Music Manager INSTALL NOW** (required) and follow the on-screen instructions.
- 3 If prompted, reboot the computer when the installation is complete.




- If Rio installation software does not display automatically, follow these steps to begin the installation manually:

- 4 Double-click the **My Computer** icon,  , on the Windows desktop.
- 5 Double-click the **CD-ROM** icon,  .
- 6 Double-click the **Install** icon,  .
- 7 Go to Step 2.

## Rio Music Manager

Rio Music Manager is an all-in-one solution that can rip, encode, and manage entire collections of digital audio tracks. Rio Music Manager provides the following capabilities:

- Save (**Rip and Encode**) audio CDs into compressed digital audio formats. Rio Music Manager encodes WMA files by default and MP3 via an optional upgrade pack.
- Automatically **Synchronize** the music collection on your computer with your Rio Forge.
- Edit **ID3 Tags** and **WMA** tags on digital audio tracks.
- Organize and manage digital audio tracks on your computer and your Rio Forge.
- Search for tracks on your computer and your Rio Forge.
- Create custom **Playlists**.
- Transfer tracks from your computer to your Rio Forge.

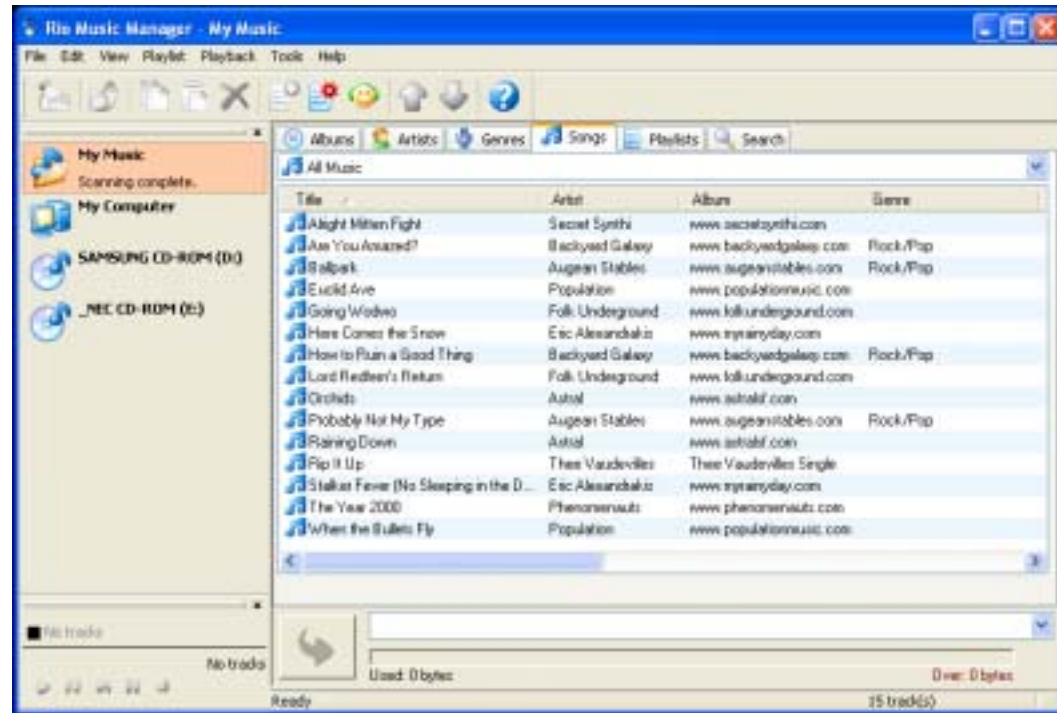



## :: Mac

### iTunes

Rio Forge is compatible with Macintosh OS X v10.2 systems using Apple's iTunes 4.2 or greater. iTunes is free and available [online](#). Support for iTunes can be found [here](#).

Follow these instructions to load the software that enables your Macintosh to recognize the Rio Forge:

- 1 Place the software CD label-side up into the computer's CD-ROM drive.
- 2 Double-click the **Rio** icon on your computer's desktop.
- 3 Double-click the **Install** icon.

The Rio Installation Screen will display.

- 4 Click **iTunes Plug-in**.

The Plug-in Installation Screen will display.

- 5 Click **Install**.
- 6 Click **Done**.

## :: Basic Operations

Enjoying music on the Rio Forge is easy. Basic operations of the Rio Forge include:

- Copy Tracks
- Transfer Tracks
- Control the Player
- Play Music

## :: Copy Tracks

### Copying Tracks with Rio Music Manager

Copying tracks from Audio CDs involves two steps commonly known as ripping and encoding. Ripping and encoding refers to the process of ripping (copying) audio from a CD and encoding (saving) the audio content into a compressed digital audio format like MP3 or WMA.

- 1 Launch the Rio Music Manager.
- 2 Insert an Audio CD into your CD-ROM drive.
- 3 Click the CD-ROM icon on the Rio Music Manager Device List.
- 4 Use any of the following techniques to select tracks:

Track Type	Technique
Single track.	• Click the track.
Multiple tracks.	• Press <b>SHIFT+Click</b> or <b>CTRL+Click</b> .
All tracks.	• Press <b>CTRL+A</b> .
No tracks.	• Press <b>CTRL+N</b> .
Every track except for the currently selected tracks.	• Select <b>Edit, Invert Selection</b> .

- 5 Click  to begin copying tracks to your computer.

## :: Transfer Tracks

### Rio Music Manager

Transferring tracks from the PC to the Rio Forge with the Rio Music Manager involves selecting tracks, then transferring them to the Rio Forge.

- 1 Launch the Rio Music Manager.
- 2 Click **My Music** in the left frame to access tracks. Rio Music Manager will scan the computer's hard drives for digital audio files that are compatible with the Rio Forge. Files are automatically categorized by album title and displayed in the Track List.
- 3 Select tracks within a category of tracks. Categories include Albums, Artists, Genres, Songs, and Playlists.

For example, if you wish to copy all tracks from a favorite artist onto the Rio Forge, click the Artists tab and then use any of the techniques in **Step 4** to select the desired tracks.

- 4 Use any of the following techniques to select files:

File type	Technique
Single track, album, or artist.	<ul style="list-style-type: none"> <li>• Click the track, album, or artist.</li> </ul>
Multiple tracks, albums, and/or artists.	<ul style="list-style-type: none"> <li>• Press <b>SHIFT</b>+Click or <b>CTRL</b>+Click.</li> </ul>
All tracks, albums, and artists.	<ul style="list-style-type: none"> <li>• Press <b>CTRL+A</b>.</li> </ul>
No tracks, albums, or artists.	<ul style="list-style-type: none"> <li>• Press <b>CTRL+N</b>.</li> </ul>
Every track except for the currently selected tracks.	<ul style="list-style-type: none"> <li>• Select <b>Edit, Invert Selection</b>.</li> </ul>

- 5 After the tracks have been selected they can be copied to the Rio Forge by clicking



## Transferring Tracks using Windows Explorer

Transferring tracks from the PC to the Rio Forge using Windows Explorer is as easy as Copy and Paste.

- 1 Connect the Rio Forge to a computer using the supplied USB cable.
- 2 Double-click **My Computer** on the Windows Desktop or in the Start Menu.
- 3 Locate **MP3** or **WMA** audio files on the computer.
- 4 Highlight files and/or folders to transfer to the Rio Forge.
- 5 Click **Edit**.
- 6 Click **Copy**.
- 7 Double-click **My Computer** on the Windows Desktop or in the Start Menu to open another window.
- 8 In the new window, locate the **Rio Forge (X:)** icon that is associated with the Rio Forge. (**X** equals the drive letter assigned to the Rio Forge.)



- A **Removable Disk (X:)** icon will also be displayed if your player supports expansion memory cards-- even if no expansion memory card is present.
- If no expansion memory card is present, double-clicking the associated **Removable Disk (X:)** icon will generate a message that reads: **Please insert a disk into drive "X":**.

- 9 Double-click **Rio Forge (X:)** or **Removable Disk (X:)**.
- 10 Click **Edit**.
- 11 Click **Paste**.

Any type of file can be transferred using this method but to assure full functionality, **Playlists** and copy protected music using **Digital Rights Management (DRM)** should be transferred to Rio players using Rio Music Manager.



- Files and folders can also transferred to the Rio Forge using drag-and-drop techniques.

## iTunes

- 1 Launch iTunes.
- 2 Connect the Rio Forge to a USB port on the computer.
- 3 Power the Rio Forge on.
- 4 Click **Library** in the iTunes Source frame.
- 5 Select tracks to transfer.
- 6 Drag and drop selected tracks to the **Rio Forge Player** in the iTunes Source frame.



- iTunes will only refresh the audio contents located on the Rio Forge after all selected tracks have been transferred.

## :: Control the Player

The controls on the Rio Forge work as follows:

- **POWER**  
Press and hold to power the Rio Forge on or off.
- **MENU**  
In Player mode, press to enter Menu mode. In Menu mode, press to return to Player mode.
- **CENTER**  
In Player mode, press to cycle through **Play Screens**. In Menu mode, press to select menu options.
- **PLAY/PAUSE**  
In Player mode, press to play or pause playback. In Menu mode, press to control menu navigation.
- **FORWARD** and **REVERSE**  
In Player mode, press to skip to the next or previous track. Press and hold to scan forward or reverse through a track. In Menu mode, press to control menu navigation.
- **STOP**  
In Player mode, press to stop playback. In Menu mode, press to control menu navigation.
- **VOLUME +** and **-**  
Press to adjust volume level.
- **LOCK/UNLOCK**  
Slide into the **LOCK** position to disable buttons and prevent accidental operation.




### Controls

Locations of all controls can be found on pages 2 and 3.

## :: Play Music

The Rio Forge plays digital audio tracks in Player mode and FM radio in FM Tuner mode. Modes can be changed at anytime through the Main Menu.

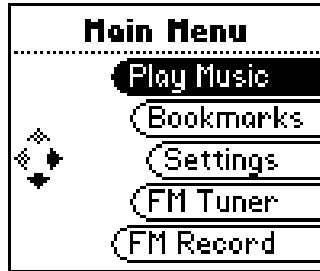


Play Music  
FM Tuner



## :: Play Music

In Player mode (the default mode), any track or preset customized **Playlist** can be played within a matter of seconds so you can spend more time enjoying tracks and less time finding them.

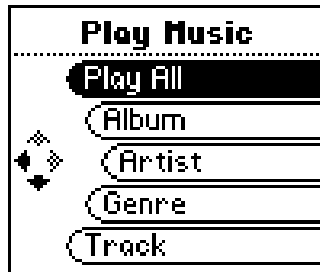

Play All  
Album  
Artist  
Genre  
Track  
Year  
New Music  
Playlist  
Spoken Word  
FM Recordings (Rio Forge 256 and 512 Only)



- If the Rio Forge does not power on after **POWER** has been pressed, check the **LOCK/UNLOCK** switch and confirm it is in the **UNLOCK** position.

## Play All

Follow these steps to play all tracks on the Rio Forge:

- 1 Press **MENU**.
- 2 Select **Play Music**.
- 3 Select **Play All**.

## Album

To play tracks from specific albums please follow these steps:

- 1 Press **MENU**.
- 2 Select **Play Music**.
- 3 Select **Album**.
- 4 Select **Play All** or a specific album.
- 5 If a specific album is selected, select **Play All** or a specific track.

## Artist

To play tracks from a specific artist please follow these steps:

- 1 Press **MENU**.
- 2 Select **Play Music**.
- 3 Select **Artist**.
- 4 Select **Play All** or a specific album.
- 5 If a specific album is selected, select **Play All** or a specific track.

## Genre

To play tracks from a specific genre please follow these steps:

- 1 Press **MENU**.
- 2 Select **Play Music**.
- 3 Select **Genre**.
- 4 Select **Play All**, a specific genre, or **[none]**.
- 5 If a specific genre is selected, select **Play All** or a specific track.

## Track

To play a specific track please follow these steps:

- 1 Press **MENU**.
- 2 Select **Play Music**.
- 3 Select **Track**.
- 4 Select **Play All** or a specific track.

## Year

To play tracks from a specific year please follow these steps:

- 1 Press **MENU**.
- 2 Select **Play Music**.
- 3 Select **Year**.
- 4 Select **Play All**, a specific year, or **[none]**.

## New Music

Select to compose a running order composed of the tracks that have most recently been added to the Rio Forge during a set amount of time. The most recently played tracks are played first. To play tracks using **New Music** please follow these steps:

- 1 Press **MENU**.
- 2 Select **Play Music**.
- 3 Select **New Music**.
- 4 Select **1 day** (the default setting), **2 days**, **1 week**, or **1 month**.

## Playlist

To play tracks from playlists created in Rio Music Manager please follow these steps:


- 1 Press **MENU**.
- 2 Select **Play Music**.
- 3 Select **Playlist**.
- 4 Select **Play All** or a specific playlist.

## Spoken Word

Select to play tracks formatted using the Audible #2 and #3 formats. To play spoken word tracks please follow these steps:

- 1 Press **MENU**.
- 2 Select **Play Music**.
- 3 Select **Spoken Word**.
- 4 Select an Audible track.



- When in spoken word mode, the Rio Forge display's the following icon: .
- When in spoken word mode, press **FORWARD** or **REVERSE** to skip from one section of the track to another.

## FM Recordings (Rio Forge 256 and 512 Only)

To play FM recordings created using **FM Record**, please follow these steps:

- 1 Press **MENU**.
- 2 Select **Play Music**.
- 3 Select **Recording**.
- 4 Select **Play All** or a specific recording.

## :: FM Tuner

To access **FM Tuner** mode:

- 1 Press **MENU**.
- 2 Select **FM Tuner**.

FM Control  
Manual  
Preset  
Store Preset

### FM Control

When in Tuner mode, the following controls function differently:

- **CENTER**  
Press to enter **Preset** mode. Press and hold to enter **Store Preset** mode.
- **PLAY/PAUSE**  
Press and release to mute the FM radio. Press and hold to start or stop **FM Record (Rio Forge 256 and 512 Only)**.
- **FORWARD** and **REVERSE**  
In Manual mode, press to tune up or down the frequency range. In Manual mode, press and hold to search up or down the frequency range for particularly strong signals.
- **STOP**  
Press and hold to turn off the Manual mode strong signal search. When turned off, **no search** is displayed and selecting and holding **FORWARD** or **REVERSE** will scan up or down the frequency range manually.



- When in Tuner mode, the earphone wire acts as the antenna for the FM radio. For best reception, keep the earphones plugged into the **EARPHONE** jack whenever the FM radio is in use.




### Controls

Locations of all controls can be found on pages 2 and 3.

## Manual

Follow these steps to enter the manual Tuner mode:

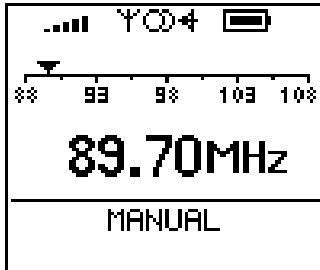

- 1 Press **MENU**.
- 2 Select **Tuner**.
- 3 Press **CENTER**.

## Store Preset


The Rio Forge allows programming of up to 8 FM preset slots.



- 1 When in Manual mode, tune to a frequency you wish to store to a preset slot.
- 2 Press and hold **CENTER** to enter **Store Preset** mode.
- 3 Press **FORWARD** or **REVERSE** to cycle to the desired preset station slot.
- 4 Press **CENTER** to store the frequency to the selected FM preset slot. After a frequency has been stored to a slot the Rio Forge will enter Preset mode.

## Preset

FM preset slots can be accessed within seconds using Preset mode.

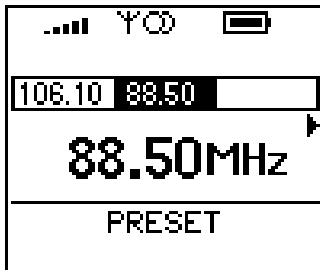

- 1 When in Manual mode, press **CENTER** to enter Preset mode.
- 2 Press **FORWARD** or **REVERSE** to cycle to the desired preset station slot.
- 3 Press **CENTER** to return to Manual mode.

## :: Advanced Features

Advanced features of the Rio Forge include:

Bookmarks

Settings

FM Record (Rio Forge 256 and 512 Only)


Stopwatch

About

## :: Bookmarks

Bookmarks store specific player settings, including the current running order, the current track, the current time position of the track, and the **Playback** settings. Users can save these settings in a bookmark and restore them whenever they use the Rio Forge. Bookmarks are great for:

- Placing digital bookmarks in digital audio books or other extended length tracks.
- Maintaining positions in long term running orders.
- Sharing your player with others without losing personal settings.

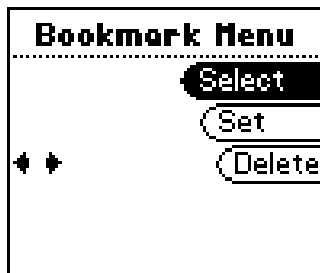

- 1 Press **MENU**.
- 2 Select **Bookmarks**.
- 3 Select a Bookmark option.

**Bookmark** options include:

- **Select**  
Select a bookmark. Press **CENTER** to restore the selected bookmark settings.
- **Set**  
Select a bookmark. Press **CENTER** to save the current settings to a bookmark.
- **Delete**  
Select a bookmark. Press **CENTER** to delete the selected bookmark.




- *In Player mode, press and hold **CENTER** to quickly bookmark the current settings.*
- *The Rio Forge automatically saves user settings when it is turned off. These settings are automatically restored when the Rio Forge is turned on. Settings saved automatically are not saved as a bookmarks.*



## :: Settings


Rio Forge settings include:

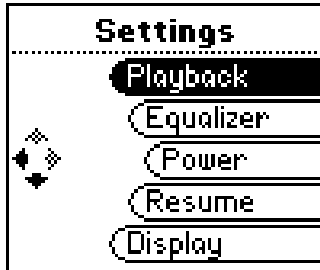

- Playback
- Equalizer
- Power
- Resume
- Display
- Time
- Language
- FM Tuner
- Lock Setup
- Tags

## Playback

Various playback settings can be set to modify the way the Rio Forge plays tracks. Tracks can be shuffled at random and/or repeated continuously.

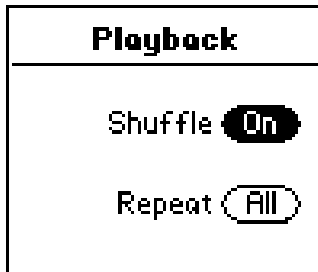

- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **Playback**.
- 4 Select **Playback** options.
- 5 Press **CENTER** to apply settings.

**Playback** options include:


- **Shuffle**  
Set selected tracks to play in standard or random order. Settings include **Off** (the default setting) and **On**.
- **Repeat**  
Set selected tracks to repeat playback of all tracks or the current track. Settings include **Off** (the default setting), **All**, and **One**.

## Equalizer

The sound of tracks played on the Rio Forge can be adjusted using various preset and fully customizable equalizer options. Equalizer settings include:

### Custom

Custom mode allows the Rio Forge's settings to be adjusted according to personal preferences.

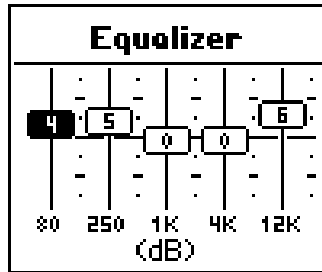

- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **Equalizer**.
- 4 Select **Custom**.
- 5 Adjust 5-band equalizer. Press **FORWARD** or **REVERSE** to navigate between frequencies. Press **PLAY/PAUSE** or **STOP** to boost or cut the **Gain** of the frequency.
- 6 Press **CENTER** to save settings and return to Player mode.

### Normal

Select the **EQ Off** equalizer option to apply no equalizer adjustments to audio content on the Rio Forge.

- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **Equalizer**.
- 4 Select **EQ Off**.
- 5 Press **CENTER** to set the **EQ Off** equalizer option and return to Player mode.


### Preset

Select a **Rock**, **Jazz**, **Classical**, **Pop**, or **Trance** equalizer option to change the sound of tracks according to the selected preset settings.

- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **Equalizer**.
- 4 Select **Rock**, **Jazz**, **Classical**, **Pop**, or **Trance**.
- 5 Press **CENTER** to set the selected equalizer option and return to Player mode.

## Power

By adjusting the **Power** settings the Rio Forge can conserve energy and extend the amount of playback time during each battery charge.

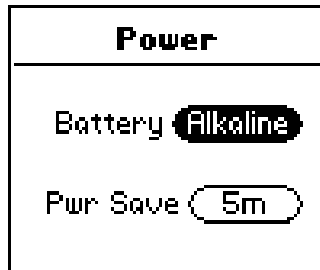


- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **Power**.
- 4 Select **Power** options.
- 5 Press **CENTER** to apply settings and return to Player mode.

**Power** options include:

- **Battery**  
Although the Rio Forge ships with an Alkaline battery, it can also use rechargeable Nickel-Metal Hydride (NiMH) batteries. The **Battery** option must be set to the same battery type that is being used or the battery indicator will not display the correct amount of battery life. Settings include **Alkaline** (the default setting) and **NiMH**.
- **Pwr Save**  
Set the Rio Forge to enter shutdown after being idle for a specific number of minutes. Settings include **1m**, **5m** (the default setting), **10m**, **30m**, and **Never**.

## Resume

Use the options in the **Resume** menu to set the track that the Rio Forge will play whenever it is powered on.

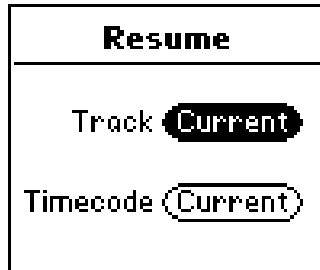


- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **Resume**.
- 4 Select **Resume** options.
- 5 Press **CENTER** to apply settings and return to Player mode.

**Resume** options include:

- **Track**  
Set the Rio Forge to begin playback of the last track played before shutdown or the first track in the running order when the Rio Forge is powered on. Settings include **Current** (the default setting) and **First**.
- **Timecode**  
Set the Rio Forge to begin playback of the last track played at the point the track was at during shutdown or at the start of the track. Settings include **Current** (the default setting) and **Start**.

## Display

Use the **Display** menu to adjust backlight and contrast settings.

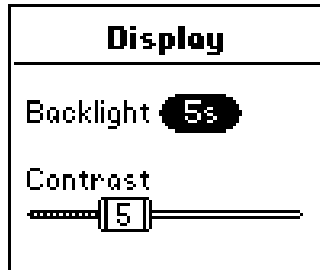

- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **Display**.
- 4 Adjust **Backlight** options and **Contrast** settings.
- 5 Press **CENTER** to apply settings and return to Player mode.

**Display** options include:

- **Backlight**

Set the backlight on the Rio Forge to shut itself off after a specific number of seconds. Settings include **Off**, **2s**, **5s**, (the default setting) **10s**, **20s**, and **On**. **On** sets the backlight to remain lit constantly.




- *To conserve battery life, the **On** setting should rarely be used.*

- **Contrast**

Press **FORWARD** and **REVERSE** to control the contrast slider. Use the contrast slider to set how light or dark the images on the LCD will appear. Setting the contrast too high will result in washed out images. Setting the contrast too dark will result in images that are too dark to read.

## Time

Use the options in the **Time** menu to set the Rio Forge's internal clock. Time is set automatically every time tracks are transferred to the Rio Forge using Rio Music Manager.

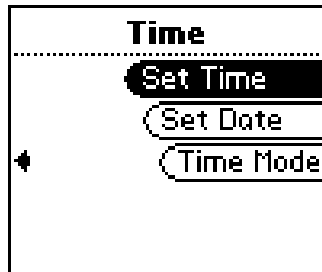


- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **Time**.
- 4 Select **Set Time**, **Set Date**, or **Time Mode** options.
- 5 Press **CENTER** to apply settings and return to Player mode.

**Time** settings include:

- **Set Time**  
Options include **Hour**, **Minute**, and **AM / PM**.
- **Set Date**  
Options include **Month**, **Day**, and **Year**.
- **Time Mode**  
Options include **12 hour** (the default setting) and **24-hour** time formats and **USA** (the default setting), **Europe**, and **Japan** date formats.

## Language

The Rio Forge menus can be set to display in one of five languages.

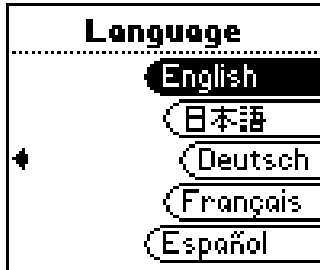

- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **Language**.
- 4 Select a **Language** setting.

**Language** settings include:

- **English** (the default setting)  
Set the display language to **English**.
- 日本語  
Set the display language to **Japanese**.
- **Deutsch**  
Set the display language to **German**.
- **Français**  
Set the display language to **French**.
- **Español**  
Set the display language to **Spanish**.



- *To return to the language menu from any language setting, press **MENU**, select the **third** option, select the **seventh** option.*



## FM Tuner

Use the options in the **FM Tuner** menu to set the Rio Forge's FM radio settings.




- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **FM Tuner**.
- 4 Select **Options**.
- 5 Adjust **FM Stereo Mode** and/or **Region** options.
- 6 Press **CENTER** to apply settings and return to Player mode.

**FM Tuner** options include:

- **FM Stereo Mode**  
Options include **On** (the default setting), and **Off**. Selecting **Off** will place the tuner in mono mode.
- **Region**  
Options include **USA** (tunes by .2MHz, the default setting), and **Europe** (tunes by .05MHz), and **Japan** (tunes by .05MHz).

## Lock Setup

Use the options in the **Lock Setup** menu to enable various controls when the lock is enabled.

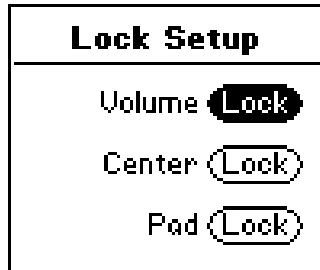

- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **Lock Setup**.
- 4 Select **Lock Setup** options.
- 5 Press **CENTER** to apply settings and return to Player mode.

**Lock Setup** settings include:

- **Volume**  
Options include **Lock** (the default setting) and **Off**. When set to **Off**, the volume level can be adjusted even when the Rio Forge has been locked.
- **Center**  
Options include **Lock** (the default setting) and **Off**. When set to **Off**, pressing **CENTER** will scroll through **Time Code View**, **Track Format View**, and **Date Views** even when the Rio Forge has been locked.
- **Pad**  
Options include **Lock** and **▶/|| (PLAY/PAUSE)**. When set to **▶/||**, any **CONTROL PAD** movement will be interpreted as the **▶/||** control.

## Tags

Adjust Tags menu settings if the Rio Forge displays random alphabet characters instead of the correct **ID3 Tags**. The Rio Forge supports Latin- and Japanese-based languages. If ID3 tags are displayed properly then Tags menu settings do not need to be changed.

Rio Music Manager encodes tracks tags using the Unicode method. Properly tagged (Unicode) tracks are unaffected by changes to the Tags menu settings. All WMA tracks are Unicode.




- 1 Press **MENU**.
- 2 Select **Settings**.
- 3 Select **Tags**.
- 4 Select **ASCII** (the default setting), **UTF-8**, or **Shift-JIS**.
- 5 Press **CENTER** to apply settings and return to Player mode.

**Tags** settings include:

- **ASCII**  
Select to read ID3 tags that are encoded using the ASCII Latin alphabet. ASCII is an acronym for American Standard Code for Information Interchange.
- **UTF-8**  
Select to read ID3 tags that are encoded using the UTF-8/Unicode format. UTF-8 is backwards compatible with ASCII. UTF is an acronym for Unicode Transformation Format
- **Shift-JIS**  
Select to read ID3 tags that are encoded using the Shift-JIS format. Shift-JIS is a character encoding format created by Microsoft that is based on the Japanese Industrial Standard format.

## :: FM Record (Rio Forge 256 and 512 Only)

Select to create, playback, or delete FM recordings on the Rio Forge 256 or 512. Recording **ID3 Tags** can be edited using Rio Music Manager.

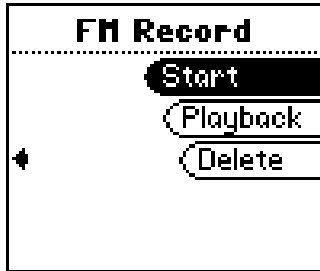

- 1 Press **MENU**.
- 2 Select **FM Record**.
- 3 Select **Start** (or **Stop**), **Playback**, or **Delete**.

**FM Record** options include:

- **Start** (Only available when in **FM Tuner** mode)  
Select to begin recording. After recording has started, return to the **FM Record** menu and select the **Stop** option to stop recording.
- **Playback**  
Select an FM recording and press **CENTER** to play the selected recording.
- **Delete**  
Select an FM recording and press **CENTER** to delete the selected recording.



- When in Tuner mode, the earphone wire acts as the antenna for the FM radio. For best reception, keep the earphones plugged into the **EARPHONE** jack whenever the FM radio is in use.

## :: Stopwatch

Use the stopwatch to keep track of time-sensitive events while listening to music.

- 1 Press **MENU**.
- 2 Select **Stopwatch**.

Lap statistics are displayed at the bottom of the **Stopwatch** screen. When a new lap is set, the difference, either faster (-) or slower (+) between new lap times and the average laptime is displayed for a few moments.


When in **Stopwatch** mode, the controls work in the following ways:

- **MENU**  
Press to return to the **Main Menu**.




- *Pressing **MENU** and using other player functions will not turn the timer off. The timer will continue to run until **PLAY/PAUSE** is pressed while in **Stopwatch** mode.*

- **PLAY/PAUSE**  
Press to start and stop the timer.
- **CENTER**  
Press to set a lap time. Press and hold to return to single lap display. Multiple laps and lap averages will be lost.
- **STOP**  
Press to reset timer.

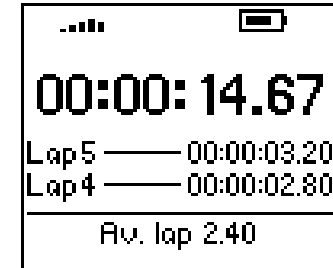

Average Lap Time

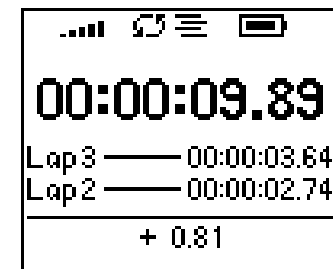

Lap Difference

## :: About

The about screen displays information about the Rio Forge. Information includes the total amount of memory on the Rio Forge, the amount of free memory, the number of tracks on the Rio Forge, and the **Firmware** version.



- 1 Press **MENU**.
- 2 Select **About**.
- 3 Select **Player** or **Storage**.

**About** options include:

- **Player**  
Displays firmware version, copyright, and Rio website information.
- **Storage**  
Press **CENTER** to cycle through displays of memory usage graphic bar and memory usage (MB used/MB capacity), the total number of tracks, the total duration of all tracks, the number of playlists, and the number of personal files for both internal and external player memory on the Rio Forge.

## :: Troubleshooting

### Customer Service Information

The FAQs below will help you solve common issues with your player. If you do not find the answers you need here, you can contact our Customer Service Department via any of the following methods:

**Web:** [www.rioaudio.com/support](http://www.rioaudio.com/support)

**Technical Support Telephone (United States):** (254) 299-2759

**Technical Support Telephone (United Kingdom):** 0207-744-0802

**Technical Support Telephone (Canada):** (905) 305-6565

**Customer Service (United States):** (254) 299-2759

**Customer Service (United Kingdom):** 0207-744-0802

**Customer Service (Canada):** (905) 305-6565

**Customer Sales/Presales (United States):** (866) 286-3662

**Customer Sales/Presales (United Kingdom):** 0207-744-0802

**Customer Sales/Presales (Canada):** (905) 305-6565

### With every Rio product you receive the following support services:

- Unlimited access to the Rio web-based technical information resources, available 24 hours a day every day at <http://www.rioaudio.com/support>. Here you will find FAQ files, product updates, and other useful information.
- Unlimited e-mail support for the duration of your Rio product hardware warranty period.
- Access to the latest software updates and enhancements for Rio products via our [website](#).

## Frequently Asked Questions

Question	Answer
What size and type of external memory cards can my Rio Forge use?	<ul style="list-style-type: none"> <li>The Rio Forge currently supports SD and MMC memory sizes of 8MB - 1GB. Please visit the Rio support site at <a href="http://www.rioaudio.com/support">www.rioaudio.com/support</a> for more information on external memory cards.</li> </ul>
How do I install an external memory card?	<ol style="list-style-type: none"> <li>1 Turn the Rio Forge off.</li> <li>2 Remove the battery compartment cover on the back of the player.</li> <li>3 Remove the battery.</li> <li>4 Gently insert the memory card with the label side up and the notch in the upper right corner into the memory card slot next to the battery compartment. The memory card spring will slightly click when the memory card is in place.</li> <li>5 Replace the battery.</li> <li>6 Replace the battery compartment cover.</li> <li>7 Turn the Rio Forge on.</li> </ol>
How do I remove an external memory card?	<ol style="list-style-type: none"> <li>1 Turn the Rio Forge off.</li> <li>2 Remove the battery compartment cover on the back of the player.</li> <li>3 Remove the battery.</li> <li>4 Gently push the memory card until you hear the memory card spring slightly clicks and releases the memory card.</li> </ol>
What type of files can I play with the Rio Forge?	<ul style="list-style-type: none"> <li>The Rio Forge can play MP3, WMA, and Audible #2 and #3 format files.</li> </ul>
Can I add MP3 and WMA files to the player at the same time?	<ul style="list-style-type: none"> <li>Yes. You can play MP3 and WMA audio content. They can be mixed together.</li> </ul>
What are the differences between MP3 and WMA files?	<ul style="list-style-type: none"> <li>Because WMA's use a lower bitrate than equivalent MP3's they are generally half as large as MP3 files and you can store more music in less space on CDs, hard drives, or the Rio Forge. The WMA format is exclusive to Windows-based computers.</li> </ul>



<p>Will the Rio Forge play Variable Bitrate (VBR) files?</p>	<ul style="list-style-type: none"> <li>• Yes. Because there are many standards for VBR files, it cannot be guaranteed that every encoding software package will properly function with the Rio Forge. VBR files that do not comply to standards may lack track time, fast forward, and/or rewind capabilities.</li> </ul>
<p>What kind of batteries can I use with the Rio Forge?</p>	<ul style="list-style-type: none"> <li>• The Rio Forge can use either alkaline or Nickel-Metal Hydride (NiMH) batteries. The <b>Power</b> setting <b>Battery</b> option must be set to the same battery type that is being used or the battery indicator will not display the correct amount of battery life.</li> </ul>
<p>Where is the battery indicator on my Rio Forge?</p>	<ul style="list-style-type: none"> <li>• The battery indicator on the Rio Forge is located in the top-right corner of the display. The segments in the battery icon show the remaining battery power. The illumination of all segments indicates a fully charged battery. Non-illuminated segments indicate a run down battery. The battery indicator blinks when less than 20% of the charge on the battery remains.</li> </ul>
<p>What kind of skip protection does the Rio Forge have?</p>	<ul style="list-style-type: none"> <li>• Because the Rio Forge uses no moving parts it will never skip or stutter during audio playback due to physical shock.</li> </ul>
<p>What should I do if my Rio Forge is not detected as a removable drive?</p>	<ul style="list-style-type: none"> <li>• It is possible that a network drive is preventing the Rio Forge from being mapped properly. This is a known Microsoft problem and has been documented in their knowledge base as KB297694. To resolve this issue and detect the Rio Forge as a removable drive:             <ol style="list-style-type: none"> <li>1 Click the <b>Start Bar</b>.</li> <li>2 Right-click <b>My Computer</b> on the Windows Desktop or taskbar.</li> <li>3 Click <b>Manage</b>.</li> <li>4 Locate <b>Computer Management (Local)</b> and click <b>Disk Management</b>.</li> <li>5 Right-click the new drive.</li> <li>6 Click <b>Change Drive Letter and Path(s)</b>.</li> <li>7 Click <b>Change</b>.</li> <li>8 Use the drop-down box to select a drive letter for the new drive that is not assigned to a mapped network drive.</li> <li>9 Click <b>OK</b>.</li> <li>10 Click <b>OK</b>.</li> </ol> </li> </ul>

<p>What should I do if my Rio Forge is not detected by Rio Music Manager?</p>	<ul style="list-style-type: none"> <li>Your Rio Forge was designed to work with the version of Rio Music Manager that was included on the Installation CD. Previous versions of Rio Music Manager may not be able to detect your Rio Forge.</li> </ul>												
<p>What should I do if my Rio Forge is not detected by my computer?</p>	<ul style="list-style-type: none"> <li>Verify that the USB cable is securely inserted into the USB port on both the Rio Forge and your computer.</li> <li>Connect the USB cable to a USB port on the back of your computer rather than to a USB port on the front of your computer.</li> <li>If using a USB hub, connect to a powered USB hub. Unpowered USB hubs may not work.</li> <li>Connect the USB cable directly to your PC, bypassing any USB hubs.</li> <li>Remove USB extension cables from the connection path.</li> <li>Disconnect other USB devices.</li> </ul>												
<p>How much music can I store on the Rio Forge?</p>	<ul style="list-style-type: none"> <li>The amount of music that can be stored on the Rio Forge depends on the bitrate of the files stored.</li> </ul> <table border="1" data-bbox="772 732 1654 966"> <thead> <tr> <th>Bitrate</th> <th>Approximate amount of space required per minute of audio content</th> </tr> </thead> <tbody> <tr> <td>64 kbps</td> <td>0.5 MB</td> </tr> <tr> <td>96 kbps</td> <td>0.75 MB</td> </tr> <tr> <td>128 kbps</td> <td>1 MB</td> </tr> <tr> <td>164 kbps</td> <td>1.25 MB</td> </tr> <tr> <td>192 kbps</td> <td>1.75 MB</td> </tr> </tbody> </table>	Bitrate	Approximate amount of space required per minute of audio content	64 kbps	0.5 MB	96 kbps	0.75 MB	128 kbps	1 MB	164 kbps	1.25 MB	192 kbps	1.75 MB
Bitrate	Approximate amount of space required per minute of audio content												
64 kbps	0.5 MB												
96 kbps	0.75 MB												
128 kbps	1 MB												
164 kbps	1.25 MB												
192 kbps	1.75 MB												
<p>Why will the Rio Forge not turn on?</p>	<ul style="list-style-type: none"> <li>The Rio Forge will not power on if <b>LOCK/UNLOCK</b> is in the lock position. Confirm the <b>LOCK/UNLOCK</b> switch on the Rio Forge is not in the lock position and press <b>POWER</b> to turn the Rio Forge on.</li> </ul>												

<p>Why would I ever want to reformat my Rio Forge?</p>	<ul style="list-style-type: none"> <li>• If for any reason you suspect that your Rio player's file system has been corrupted, reformatting the player will restore the file system to its original state.</li> </ul> <p>Use Windows Explorer to format <b>Mass Storage Class</b> compatible Rio players.</p> <ol style="list-style-type: none"> <li><b>1</b> Double-click <b>My Computer</b> on the Windows Desktop or in the Start Menu.</li> <li><b>2</b> Locate the <b>Removable Disk (X:)</b> or <b>Player (X:)</b> icon that is associated with the player. (X: equals the drive letter assigned to the Rio player.)</li> <li><b>3</b> Right-click the <b>Removable Disk (X:)</b> or <b>Player (X:)</b> icon.</li> <li><b>4</b> Click <b>Format....</b></li> </ol> <p>Reformatting your Rio player will result in the deletion of all tracks and settings on the Rio player and any attached Memory Cards (if any). Reformatting your Rio player will immediately cancel any transfers currently in progress.</p> <ol style="list-style-type: none"> <li><b>5</b> If you are sure you want to reformat your player, click <b>Start</b>.</li> </ol>
<p>Why won't the Rio Forge play secure, dated, or other <b>DRM</b> (digital rights management) encoded files?</p>	<ul style="list-style-type: none"> <li>• DRM files may not work properly if the Rio Forge's internal clock is no longer accurate. This can happen if the battery loses all charge for more than a few minutes. Make sure the battery is fully charged, then follow these steps:</li> </ul> <ol style="list-style-type: none"> <li><b>1</b> Connect the Rio Forge to the computer using the USB cable.</li> <li><b>2</b> Transfer any track to the player using Rio Music Manager.</li> </ol> <ul style="list-style-type: none"> <li>• Connect to the secure service where the DRM encoded files came from.</li> </ul> <p>The Rio Forge's clock should now be in sync with your computer's clock.</p> <p>DRM files should now play correctly.</p>

Why does my Rio Forge experience errors after I unplug the USB cable?

- Removing a **Mass Storage Class (MSC)** compatible Rio player from a USB connection prior to ejecting, stopping, or otherwise closing communication between the player and the computer may result in a corrupting the player's file system.

e.g. All tracks, although different, are assigned the same name; the player will not power off; etc.

To eject or stop an MSC compatible Rio player please follow the instructions applicable to your computer's operating system:

#### **Windows 98 SE**

- 1 Double-click **My Computer** on the Windows Desktop.
- 2 Locate the **Removable Disk (X:)** or **Player (X:)** icon that is associated with the player. (X: equals the drive letter assigned to the Rio player.)
- 3 Right-click the **Removable Disk (X:)** or **Player (X:)** icon.
- 4 Click **Eject**.

#### **Windows ME**

- 1 Double-click the **Unplug or Eject Hardware** icon on the Windows taskbar.
- 2 Select **USB Disk**.
- 3 Click **Stop**.
- 4 Select the **Removable Disk (X:)** or **Player (X:)** icon.
- 5 Click **OK**.

#### **Windows 2000**

- 1 Double-click the **Unplug or Eject Hardware** icon on the Windows taskbar.
- 2 Select **USB Mass Storage Device**.
- 3 Click **Stop**.
- 4 Select the **Player USB Device** icon.
- 5 Click **OK**.

#### **Windows XP**

- 1 Double-click the **Safely Remove Hardware** icon on the Windows taskbar.
- 2 Select **USB Mass Storage Device**.
- 3 Click **Stop**.
- 4 Select the **Player MSC USB Device** icon.
- 5 Click **OK**.

Can I update the firmware on the Rio Forge?

- Yes. If available, firmware for your Rio can be downloaded online.

**Note:** Quit all applications before running the firmware update. While running the firmware update, do not close the program, turn off the player, or unplug the USB cable.

#### Downloading the update

- 1 Click on the following link: [Firmware Upgrade](#).
- 2 Click on the link to the Rio Forge.
- 3 Locate **UPDATES** and click **Firmware**.  
Select and download the latest software. Download the software that is specific to the operating system you use on your PC:

- \* .exe (Windows)
- \* .hqx (Mac)
- \* .zip (Windows)
- \* .txt (All operating systems—a text file including update information and instructions.)

#### Installing the update (PC)

- 1 Connect the player to your computer with the USB cable.
- 2 Wait for **Idle** to be displayed on the player screen.
- 3 Double-click the file that you downloaded from the Rio website.  
The update should take approximately 30 seconds to load.

#### Installing the update (Mac)

- 1 Connect the player to your computer with the USB cable.
- 2 Wait for **Idle** to be displayed on the player screen.
- 3 Double-click the **Rio Update** you downloaded.
- 4 Follow the instructions to complete the update.

## :: Glossary of Digital Audio Terms

### **Bass**

Bass is the particular low-range area of the sound spectrum where low musical notes and sounds are located. Increasing the bass value will make the low vocals and drums more prominent in your music. You can select the amount of bass in your music by selecting various [Equalizer](#) options.

### **Bitrate**

Bitrate denotes the number of bits per second used by a digital music file. The size and quality of a compressed digital audio file is determined by the bitrate used when encoding the file. Generally, the higher the bitrate used, the higher the sound quality, and the larger the file size. For example, a bitrate of 96kbps (96,000 bits per second) is generally thought of as "CD quality" for WMA audio files, and takes up about 0.75 megabytes (MB) per minute of music. At a 64kbps bitrate, the sound quality of WMA is similar to that of an FM radio signal, but approximately two minutes of music will fit in 1MB of space.

### **Codec**

Depending on the context and kind of technology involved, codec can be defined as a compressed digital audio file format (like MP3, WMA, etc.), a "coding/decoding" chip used to translate between digital and analog transmissions (used in modems), or a compression/decompression algorithm. Codecs compress audio data into a file, often for efficient transmission over a network, and then decode it for playback. While all the codecs perform similar compression of digital audio, there are differences in the technology.

The Rio Forge supports the following digital audio codecs:

- MP3
- WMA
- Audible

### **DRM**

Digital rights management (DRM) is a type of encryption that is intended to protect copyrighted tracks and is added to many commercially purchased music files during the encoding process. DRM encryption frequently restricts the number of times a file can be downloaded, transferred to portable devices, or burned to CD. Copy protected music using DRM should be transferred to the Rio Forge using Rio Music Manager.

## Firmware

Firmware is the read-only software that is installed on the player. Like software it can be updated, but unlike software it can never be deleted from the player.

## Gain

Gain is a measurement of the amplitude of frequency ranges. Gain adjustments boost or reduce frequencies to provide a more desirable audio output.

## ID3 Tags

The ID3 tag is the part of the encoded MP3 or WMA file that contains information about the digital music file such as song title, artist, album title, encoding bitrate, track time duration, and so on. ID3 tag information is displayed on the Album/Artist/Track title line on the player's LCD.

## Mass Storage Class

Mass Storage Class (MSC) is a transfer protocol that uses USB drivers that are common to many operating systems and devices. No additional software needs to be installed for the MSC transfer protocol to work because MSC uses drivers already on a computer's operating system. Because MSC compatible Rio players are treated as removable drives, any type of file can be transferred to MSC compatible Rio players using Windows Explorer. Although any type of file can be transferred, to assure full functionality, playlists and copy protected music using Digital Rights Management (DRM) should be transferred to Rio players using Rio Music Manager.

## MP3

MP3 is short for Moving Pictures Experts Group Audio Layer 3. MP3 is the most well known compressed digital audio file format. This format allows for near "CD quality" sound, but at a fraction of the size of normal audio files. MP3 conversion of an audio track from CD-ROM can reduce the file size by approximately a 12:1 ratio with virtually no perceptible loss in quality. MP3 compression removes the redundant and irrelevant parts of a sound signal that the human ear doesn't hear. This digital sound encoding and compression process was developed by the Fraunhofer Institute for Integrated Circuits and Thomson Multimedia.

## Playlist

A playlist is a custom grouping of tracks that has been saved for later use. Rather than playing every track on the player playlists can be used to play specific tracks in specific orders. Rio Forge supports .asx, .m3u, and .pls formatted playlists. Tracks that are referenced by a playlist must be present on the Rio Forge. Tracks stored on external memory cannot be played by a playlist. Playlists that are transferred to a Rio player by an application other than Rio Music Manager may not function properly on Rio players.

## Rip and Encode

Rip and encode refers to the process of extracting audio from a music CD (ripping) and encoding it into a compressed digital audio format like MP3 or WMA.

## Synchronize

Rio Music Manager can automatically (or manually) delete old content, transfer new audio content, and keep the content on your Rio Forge fresh and dynamic. Rio Music Manager must be open for synchronization to occur.

## Treble

Treble notes occupy the higher portion of the sound spectrum. Increasing the treble value will raise the levels of the high sounds in your music files. You can select the amount of treble in your music by selecting various [Equalizer](#) options.

## VBR

Variable Bitrate (VBR) encoding converts tracks at a variable rate, using higher bitrate encoding for complex portions and lower bitrate encoding for pauses in songs.

## WMA

Windows Media Audio (WMA) is a compressed audio format created by Microsoft as an alternative to MP3. The WMA codec offers greater file compression than the MP3 codec, enabling storage of more digital audio tracks in the same amount of space when compared to MP3s at the same level of quality.



# :: ECC, FCC, and Industry Canada Compliance

## Statement of Compliance

This product complies with Council Directive 89/336/EEC and Council Directive 72/23/EEC.

## Federal Communications Commission (FCC)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Industry Canada

This Class B digital apparatus complies with Canadian ICES-003.  
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## :: Safety

### **Warning**

TO REDUCE THE CHANCE OF SHOCK OR INJURY, DO NOT USE or OPERATE THIS DEVICE IN OR NEAR WATER OR WET LOCATIONS.

### **CAUTION**

RISK OF EXPLOSION, DAMAGE OR BATTERY LEAKAGE IS POSSIBLE IF BATTERY IS REPLACED INCORRECTLY OR BY AN INCORRECT TYPE. NEVER ATTEMPT TO CHARGE A NON-RECHARGEABLE ALKALINE BATTERY. DISPOSE OF USED BATTERIES ACCORDING TO INSTRUCTIONS OR LOCAL LAWS.

Use of headphones while operating a vehicle is not recommended and is unlawful in some states and areas. Be careful and attentive while driving. Stop operation of the player if you find it disruptive or distracting while operating any type of equipment. Listening to music at full power over extended periods of time can be damaging to the hearing of the user.

# Index

## Symbols

+/- Control 19

## A

About 42  
Accessories 9  
Advanced Features 27  
Album 22  
Artist 22

## B

Backlight 34  
Basic Operations 14  
Bass  
    definition 50  
Battery  
    indicator 45  
    Installation 4  
Bitrate  
    definition 50  
Bookmarks 28  
Buttons and Controls 19

## C

Codec  
    definition 50  
    MP3 51  
    WMA 52  
Contrast 34  
Controls 19  
Copy tracks 15

Customer Service  
Information 43

## D

Date View 6  
Display 34  
DRM 50

## E

Earphones 8  
Encoding 15  
Equalizer 31

## F

Firmware 51  
FM 24  
FM Control 25  
FM Recordings 24  
FM Tuner 37  
FM Tuner mode 25  
Forward 2, 19  
Frequently Asked  
Questions 44

## G

Genre 23  
Getting Started 1  
Glossary 50

## H

Help 43

## I

ID3 Tag  
    definition 51  
iTunes 13

## L

Language 36  
Liquid Crystal Display  
LCD 5  
Lock Setup 38

## M

MP3 51  
MSC 51

## N

New Music 23

## P

Play All 22  
Play/Pause 2, 19  
Playback 30  
Playlist 24  
Playlists 51  
Power button 2  
Power settings 32  
Preset Mode 26

## R

Recording (Rio Forge

256 and 512 Only) 24  
Resume 33  
Reverse 2, 19  
Rio Music Manager 12  
Ripping and Encoding 52

## S

Settings 29  
Spoken Word 24  
Stop 2, 19  
Stopwatch 41  
Store Preset 26

## T

Tags 39  
Technical Support 43  
Time 35  
Time Code View 6  
Track 23  
Track Format View 6  
Transferring tracks  
    iTunes 18  
    Rio Music Manager  
        16  
Treble  
    definition 52  
Troubleshooting 43

## U

Upgrading Firmware 49  
USB 8

**V**  
Variable Bitrate (VBR)

52  
Volume +/- 2,19

**W**  
WMA 44,52

**Y**  
Year 23

**Riō**

2600 San Tomas Expy.  
Santa Clara, CA 95051-0953  
USA

# Riō<sup>®</sup>

# Forge


Follow steps one through three to start playing music.

For detailed instructions and feature descriptions, including copying tracks and transferring them to the Rio Forge, please see the User's Guide located on the installation CD.

P/N 41000925-001\_C

# 1

1. Open the battery compartment cover on the back of the Rio Forge.
2. Insert the supplied AAA battery. Ensure the battery is inserted properly by matching the + and - symbols on the battery with the symbols on the Rio Forge.
3. Replace the battery compartment cover.

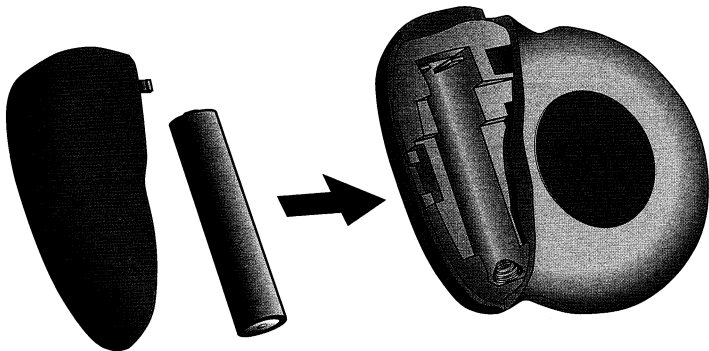

# 2

Connect the supplied earphones to the **EARPHONES** port on the bottom of the Rio Forge.





# 3

1. Press and hold **POWER** to turn the Rio Forge on, if it is not already turned on.
2. Press **PLAY/PAUSE** (▶||), to begin playback.

**POWER**

**PLAY/PAUSE**



Your Rio Forge already has some great content on it. Try it out with these tracks, and then fill it with your own.

Artist: Astral  
www.astralsf.com  
Orchids  
Raining Down

Artist: Augean Stables  
www.augeanstables.com  
Ballpark  
Probably Not My Type

Artist: Backyard Galaxy  
www.backyardgalaxy.com  
Are You Amazed?  
How to Ruin a Good Thing

Artist: Eric Alexandrakis  
www.myrainyday.com  
Here Comes the Snow  
Stalker Fever

Artist: Folk Underground  
www.folkunderground.com  
Going Wodwo  
Lord Redfern's Return

Artist: The Phenomenauts  
www.phenomenauts.com  
The Year 2000

Artist: Population  
www.populationmusic.com  
Euclid Avenue  
When the Bullets Fly

Artist: Secret Synthi  
www.secretsynthi.com  
Alright Mitten Fight

Artist: Thee Vaudevilles  
Rip It Up

**Rio** is also pleased to offer samples from our spoken words partner **Audible**. **Audible** offers a free month to **Rio** customers. To enjoy the best in Audio Books, Periodicals, and more, visit [www.audible.com/rio](http://www.audible.com/rio)

Welcome to Audible  
Dan Brown – The Da Vinci Code  
Ellen Degeneres – Funny Thing Is  
David Sedaris – Live at Carnegie Hall

**PLAYBACK MODE**

Press **PLAY/PAUSE**, **STOP**, **FORWARD**, and **REVERSE** on the control pad to control playback functions.



Press **CENTER** to cycle through Time Code, Track Format, and Date **Playback** mode views.

**MENU MODE**




Press **PLAY/PAUSE** and **STOP** to move up and down menu options.

Press **FORWARD** or **CENTER** to select the highlighted menu option.

Press **MENU** to exit Menu mode.

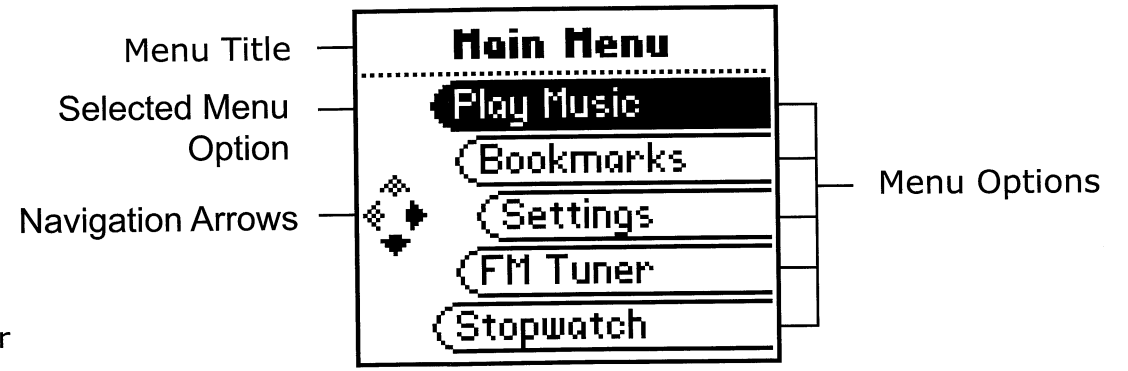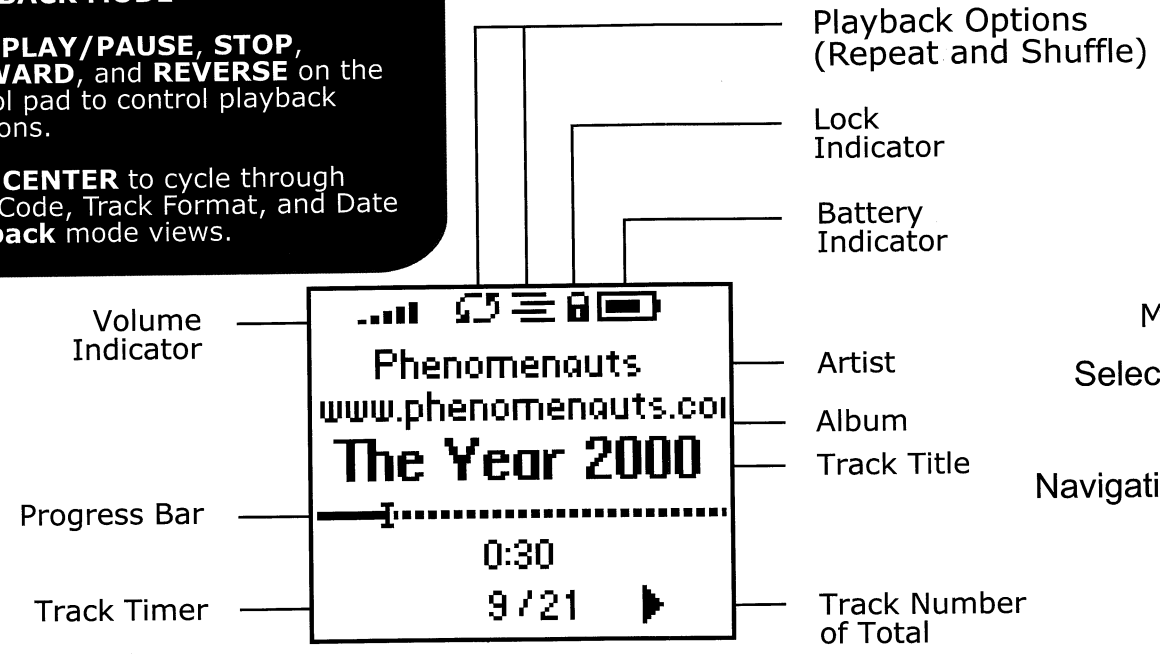

**LOCATION OF CONTROLS**

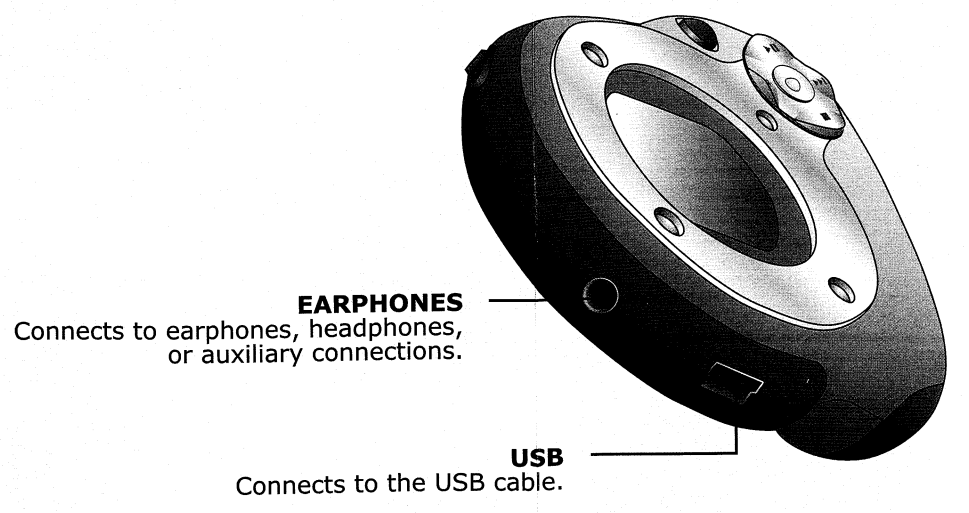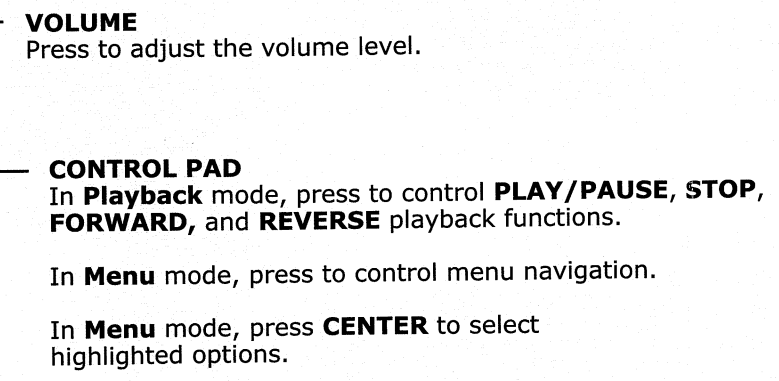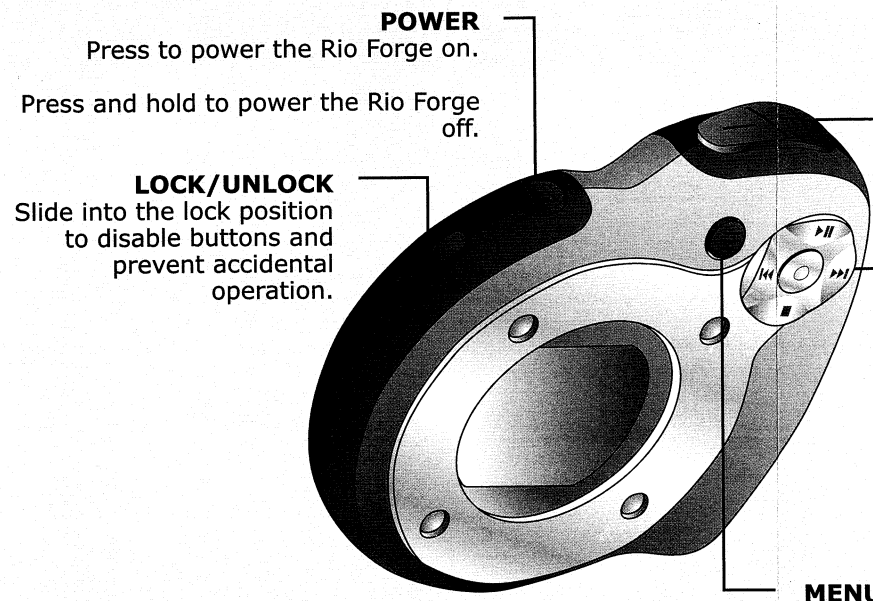

# Riō<sup>®</sup>

# Forge

Follow steps four through six to install Rio Music Manager on your computer so you can copy tracks from CDs and transfer tracks from your computer to your Rio Forge.

For detailed instructions and feature descriptions, including copying tracks and transferring them to the Rio Forge, please see the User's Guide located on the installation CD.

P/N 41000925-001\_C

# 4

When you are ready to add or delete tracks to your Rio Forge you should install **Rio Music Manager**.

1. Place the installation CD label-side up into your computer's CD-ROM drive. Rio installation software launches automatically.
2. Click Rio Music Manger **INSTALL NOW** and follow the on-screen instructions.
3. Reboot your computer when the installation is complete.

## **NOTE:**

If Rio installation software does not display automatically, follow these steps to begin the installation manually:

4. Double-click the **My Computer** icon on the Windows desktop.
5. Double-click the **CD-ROM** icon.
6. Double-click the **Install** icon.
7. Go to Step 2.




# 5

## WINDOWS 98 SE ONLY

Windows ME, 2000, and XP users skip to Step 6.

### During Software Installation

If the following window appears at any time during installation, click **Ignore**.

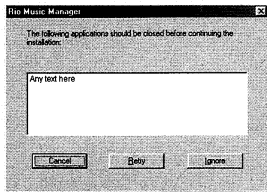

### After Software Installation

The first time you connect the Rio Forge to your computer the Found New Hardware wizard will appear.

1. Click **Next**.
2. Select **Search for the best driver for your device**.
3. Click **Next**.
4. Check **Specify a location:** and select **CD-ROM drive**.
5. Click **Next**.
6. Click **Next**.
7. Click **Finish**.




# 6

Before adding new tracks to the Rio Forge, you must connect it to your computer.


**Note:** When connected to the USB cable, the Rio Forge cannot play music.

1. Make sure the Rio Forge is powered on.
2. Connect the USB cable into the USB port on the top of the Rio Forge.
3. Connect the other end of the USB cable to the USB port on your computer.

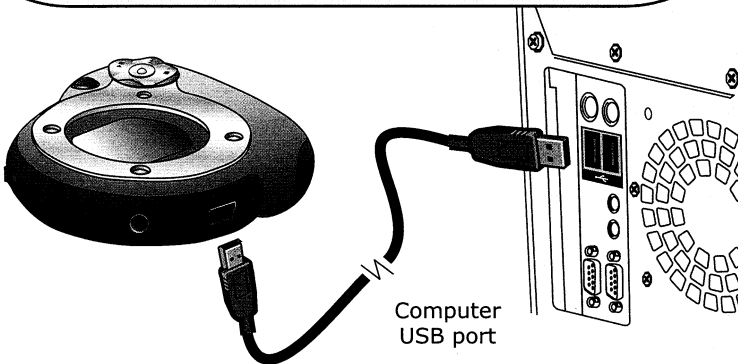

## COPY TRACKS

After installation, you can use Rio Music Manager to copy tracks from Audio CDs into a music library on your computer.

1. Insert an Audio CD into your CD-ROM drive.
2. Launch Rio Music Manager.
3. Click the **CD-ROM** icon, , located in the Device List.

Rio Music Manager will scan the disc for audio files.

4. Use any file selection technique (see right) to **select tracks**.

5. Click  to **copy** tracks to your computer.

## File Selection Techniques

### File Type


Single track, album, or artist.  
Multiple tracks, albums, and/or artists.  
All tracks, albums, and artists.


### Technique

Left-click.  
SHIFT+click or CTRL+click.  
CTRL+A.

## TRANSFER TRACKS

You can transfer tracks from your computer to your Rio Forge using Rio Music Manager.


1. Launch Rio Music Manager.
2. Confirm your Rio Forge is connected to your computer. (See Step 6.)
3. Click the **My Music** icon, , located in the Device List.
4. Use the **tabs** to sort tracks based on Albums, Artists, Genres, Songs, or Playlists.
5. Use any file selection technique (see left) to **select tracks**.

6. Click  to **transfer** the selected tracks to the player.

### CD-ROM

### Select Tracks

### Copy

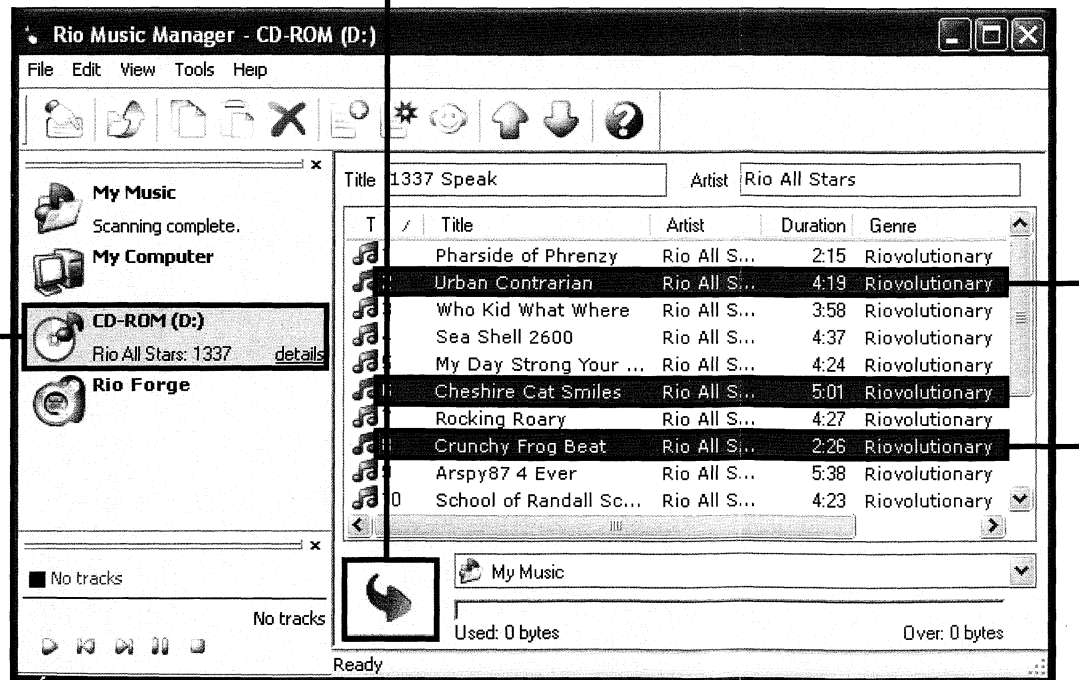

## Update Now

It is highly recommended that you maintain a connection to the Internet when using Rio Music Manager for the first time. Rio Music Manager will automatically detect the most recent version of the software. If prompted, click **Update Now** to download the latest software, including additional features and enhanced capabilities.

## Accessories

Get the latest accessories for all of your Rio players at:


<http://www.rioaudio.com>

### My Music

### Tabs

### Select Tracks

### Transfer

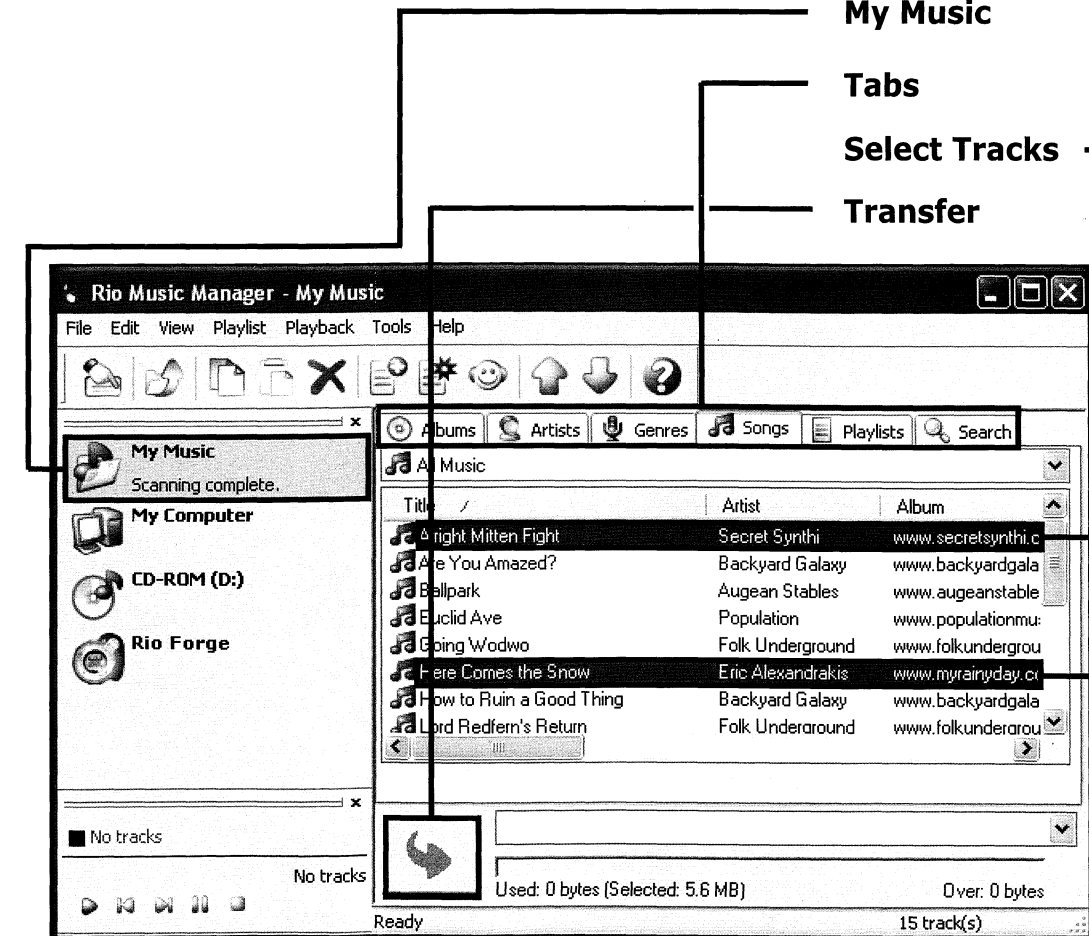

# stop

## need help?

Do not return this product to the store.  
Contact the helpful and friendly staff of  
Rio Customer Care at **(650) 261-2203**.

Please visit our web site for customer  
care online support and hours at:

**[www.rioaudio.com/support](http://www.rioaudio.com/support)**

For information on future updates and  
enhancements, please register your product at:

**[www.rioaudio.com/registration](http://www.rioaudio.com/registration)**

41000928-001\_A

**Riō<sup>®</sup>**



audible.com™

[www.audible.com/rio/freemonth](http://www.audible.com/rio/freemonth)




What's **free**,  
downloads in **minutes**  
and entertains you  
for **hours?**



audible.com®

A free month of Audible® just for Rio Audio customers. Hear the most entertaining, and engaging digital audiobooks & content.

▶▶▶ [www.audible.com/rio/freemonth](http://www.audible.com/rio/freemonth)

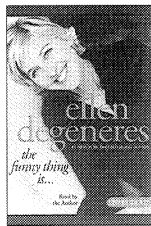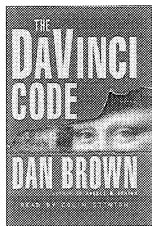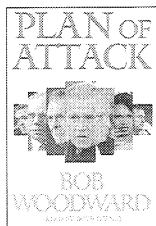


## What is Audible?

- ▶ It's digital audio that goes where you do—to the gym, on your commute, and beyond.
- ▶ Listen to more than 23,000 audiobooks, audio magazines, newspapers, radio shows, and original programs.
- ▶ Download content quickly and easily to your Rio digital media player and listen anywhere!

## Get a Month of AudibleListener® Free!

- ▶ Get any two audio programs free! ( A \$70 Value!)
- ▶ Choose audiobook genres like fiction, nonfiction, self development, mystery, and more, audio versions of the *New York Times* and *The Wall Street Journal*, audio magazines like *Forbes* and *Scientific American*, and radio programs like *This American Life*, *Fresh Air* and *Car Talk*.
- ▶ No commitment. Cancel anytime.

Hear a best seller. Free!

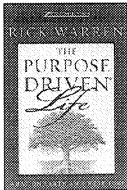

[www.audible.com/rio/freemonth](http://www.audible.com/rio/freemonth)

audible.com®

© 2004 Digital Networks North America, Inc. The Rio logo is a registered trademark of Digital Networks North America, Inc. All rights reserved. Microsoft and Windows Media are trademarks or registered trademarks of Microsoft Corporation in the United States and/or in other countries. Microsoft, Windows Media, and the Windows Media logo are registered trademarks of Microsoft Corporation in the United States and/or in other countries.

# Rio®

Install CD for  
PC and Mac®

Rio Music Manager Software for  
Rio Forge and Rio Carbon players

#### System Requirements

- Windows: PC-E 2000, Mac: XP, Mac OS X v10.2 or later
- Intel® Pentium® 2.33 MHz or higher
- 1 MB RAM
- 65 MB available hard drive space
- USB Port
- CD-ROM Drive



## Limited Warranty

### Our warranty to you:

Digital Networks North America, Inc. (DNNA) warrants that your product will be free from defects in materials and workmanship for a period of ninety (90) days from the date of original retail purchase. DNNA warrants refurbished products, marked and sold as such, for thirty (30) days from the original purchase date. This warranty is extended to the original end user purchaser only and is not assignable or transferable to any other party.

If you discover a defect covered by this warranty, DNNA will repair or replace the product with the same or a comparable product at our sole discretion using new or remanufactured product or components. DNNA's liability is limited solely to the repair or replacement of the defective product. If DNNA cannot reasonably repair or replace the defective product then DNNA may, at its sole discretion, refund the current suggested retail price for the product. DNNA warrants any replaced or repaired product for a period of thirty (30) days from shipment, or through the end of the original warranty period, whichever is longer.

### Remedies:

To obtain service under this warranty, you must contact a DNNA Customer Care Center within the applicable warranty period to receive a warranty service authorization. You will be required to provide a dated original proof of purchase. Products shipped to DNNA must be shipped postage-paid and packaged appropriately for safe shipment. Packages must be trackable using either receipt confirmation or tracking number. DNNA is not responsible for products received without a warranty service authorization. Products received without a warranty service authorization may be rejected. Repaired or replacement products will be shipped to you at DNNA's expense. All products or parts that are replaced become the property of DNNA.

### Limitation on Warranty:

This warranty does not cover damage caused by abuse, misuse, unauthorized attempts to open, modify, or repair the product, moisture, extreme heat or cold, corrosive environments, shipping, or high voltage surges from external sources such as power line, telephone line, or connected equipment. This warranty does not cover wear and tear on covers, housing or wiring. This warranty also does not apply to any product with an altered or defaced serial number. DNNA's liability is limited to the repair or replacement of this product. In no event will DNNA be liable for any amount greater than the currently suggested retail price of this product. We will not be liable to you or anyone else for any damages that result from the failure of this product or from the breach of any express or implied warranties. These include damage to other equipment, lost data, lost profits, or any consequential, incidental, or punitive damages. This written warranty represents the entire warranty agreement between DNNA and you. This warranty is given in lieu of all other warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose. This warranty is limited to the term specified above. No warranties, either express or implied, will apply after this period. This warranty may not be altered in any way other than in writing by an officer of DNNA. This warranty gives you specific legal rights and you may also have other rights, which vary, from state to state. Some states limit what warranties may be excluded as well as how long an implied warranty lasts, so the above limitation may not apply to you.

© 2003-2004. Rio is a registered trademark of Digital Networks North America, Inc. All rights reserved.  
2600 San Tomas Expwy, Santa Clara, CA 95051-0953, USA [www.rioaudio.com](http://www.rioaudio.com)

## Garantie limitée

### Notre garantie :

Digital Networks North America, Inc. (DNNA) garantit votre produit contre tout défaut, pièces et main d'œuvre, pendant une période de quatre-vingt-dix (90) jours à compter de la date d'achat d'origine auprès du fournisseur. DNNA garantit les produits reconditionnés, marqués et vendus en tant que tels, pendant une période de trente (30) jours à compter de la date d'achat d'origine. La présente garantie s'étend uniquement à l'acheteur d'origine en qualité d'utilisateur final et ne peut être assignée ni transférée à aucune autre partie.

Si vous constatez un défaut couvert par cette garantie, DNNA réparera le produit ou le remplacera par un produit identique ou comparable, à sa seule discrétion, à l'aide de produits ou de composants neufs ou refabriqués. La responsabilité de DNNA se limite exclusivement à la réparation ou au remplacement du produit défectueux. Si DNNA ne peut réparer ni remplacer sur une base raisonnable le produit défectueux, DNNA peut, à sa seule appréciation, rembourser le prix de vente de détail recommandé pour le produit. DNNA garantit tout produit remplacé ou réparé pendant une période de trente (30) jours à compter de la date d'expédition ou jusqu'à la fin de la période de garantie d'origine, la plus longue de ces périodes tant prise en considération.

### Recours en dommages et intérêts :

Pour bénéficier d'un service lié à cette garantie, vous devez prendre contact avec le centre Customer Care de DNNA durant la période de garantie en vigueur, afin d'obtenir une autorisation de service de garantie. Vous devrez produire une preuve d'achat originale datée. Les colis doivent pouvoir être localisés à l'aide de la confirmation de réception ou de la référence de suivi. DNNA ne peut être tenu responsable des produits reçus sans autorisation du service de garantie. Les produits reçus sans autorisation du service de garantie seront refusés. Les produits réparés ou de remplacement vous seront envoyés aux frais de DNNA. Tout produit ou composant remplacé devient la propriété de DNNA.

### Limitation de garantie :

Cette garantie ne couvre pas les dommages survenant à la suite d'une utilisation abusive ou inappropriée, de tentatives non autorisées d'ouverture, de modification ou de réparation du produit, d'une exposition à l'humidité, aux températures excessives de réchauffement ou de refroidissement, aux milieux corrosifs, ni les dommages dus au transport ou aux surtensions provenant de sources extérieures telles qu'une ligne d'alimentation électrique, une ligne téléphonique ou un équipement branché. La présente garantie ne couvre pas l'usure normale des couvercles, du corps du produit ou du câblage. Par ailleurs, cette garantie ne s'applique à aucun produit dont le numéro de série serait altéré ou mutilé. La responsabilité de DNNA se limite à la réparation ou au remplacement de ce produit. La responsabilité de DNNA ne peut en aucun cas dépasser le montant du prix de vente de détail recommandé pour ce produit. Nous n'assumons aucune responsabilité ni envers vous, ni envers quiconque pour tout dommage résultant d'une défaillance de ce produit, ou de toute violation de toute garantie expresse ou implicite. Ceci comprend les dommages causés à d'autres équipements, les pertes de données, les pertes de bénéfice et tout dommage consécutif, indirect ou punitif. La présente garantie critique représente l'accord de garantie intégral entre DNNA et vous. Cette garantie annule et remplace toute autre garantie, expresse ou implicite, y compris, sans limitation, les garanties implicites de qualité marchande et d'adaptation à tout but particulier. Cette garantie se limite à la période spécifiée plus haut. Aucune garantie, qu'elle soit expresse ou implicite, ne peut s'appliquer après cette période. Cette garantie ne peut être modifiée autrement que par écrit, par un responsable de DNNA. La présente garantie vous donne des droits spécifiques ; vous pouvez également jouir d'autres droits pouvant varier d'un État à l'autre. Certains États limitent les exclusions de garanties ainsi que les restrictions sur la durée d'une garantie implicite ; la restriction ci-dessus ne s'applique donc peut-être pas à votre cas.

© 2003-2004. Rio est une marque déposée de Digital Networks North America, Inc. Tous droits réservés.  
2600 San Tomas Expwy, Santa Clara, CA 95051-0953, USA [www.rioaudio.com](http://www.rioaudio.com)