



# VideoJet X10

Network Video Server



**BOSCH**



# Table of Contents

---

|          |  |           |
|----------|--|-----------|
| <b>1</b> | <b>Preface</b>                           | <b>7</b>  |
| 1.1      | About this Manual                        | 7         |
| 1.2      | Conventions in this Manual               | 7         |
| 1.3      | Intended Use                             | 7         |
| 1.4      | EU Directives                            | 8         |
| 1.5      | Rating Plate                             | 8         |
| <hr/>    |  |           |
| <b>2</b> | <b>Safety Information</b>                | <b>9</b>  |
| 2.1      | Electric Shock Hazard                    | 9         |
| 2.2      | Installation and Operation               | 9         |
| 2.3      | Maintenance and Repair                   | 9         |
| <hr/>    |  |           |
| <b>3</b> | <b>Product Description</b>               | <b>11</b> |
| 3.1      | Scope of Delivery                        | 11        |
| 3.2      | System Requirements                      | 12        |
| 3.3      | Overview of Functions                    | 13        |
| 3.4      | Connections on the Front Panel           | 16        |
| 3.5      | Connections on the Rear Panel            | 17        |
| <hr/>    |  |           |
| <b>4</b> | <b>Installation</b>                      | <b>19</b> |
| 4.1      | Preparations                             | 19        |
| 4.2      | Mounting                                 | 19        |
| 4.3      | Connections                              | 20        |
| 4.4      | Power On/Power Off                       | 25        |
| 4.5      | Setup Using the Configuration Manager    | 25        |
| <hr/>    |  |           |
| <b>5</b> | <b>Configuration Using a Web Browser</b> | <b>27</b> |
| 5.1      | Connecting                               | 27        |
| 5.2      | Configuration Menu                       | 29        |
| 5.3      | Basic Mode: Unit Access                  | 31        |
| 5.4      | Basic Mode: Date/Time                    | 32        |
| 5.5      | Basic Mode: Network                      | 33        |
| 5.6      | Basic Mode: Encoder Profile              | 34        |
| 5.7      | Basic Mode: Audio                        | 35        |
| 5.8      | Basic Mode: Recording                    | 36        |
| 5.9      | Basic Mode: System Overview              | 36        |
| 5.10     | Advanced Mode: Identification            | 37        |
| 5.11     | Advanced Mode: Password                  | 38        |
| 5.12     | Advanced Mode: Date/Time                 | 39        |
| 5.13     | Advanced Mode: Display Stamping          | 40        |
| 5.14     | Advanced Mode: Appearance                | 41        |
| 5.15     | Advanced Mode: LIVEPAGE Functions        | 43        |
| 5.16     | Advanced Mode: Logging                   | 44        |
| 5.17     | Advanced Mode: Video Input               | 45        |
| 5.18     | Advanced Mode: Picture Settings          | 45        |

|          |  |            |
|----------|--|------------|
| 5.19     | Advanced Mode: Encoder Profile             | 47         |
| 5.20     | Advanced Mode: Audio                       | 50         |
| 5.21     | Advanced Mode: Storage Management          | 51         |
| 5.22     | Advanced Mode: Remote Video Device         | 53         |
| 5.23     | Advanced Mode: Recording Profiles          | 54         |
| 5.24     | Advanced Mode: Retention Time              | 56         |
| 5.25     | Advanced Mode: Recording Scheduler         | 57         |
| 5.26     | Advanced Mode: Recording Status            | 59         |
| 5.27     | Advanced Mode: Alarm Connections           | 59         |
| 5.28     | Advanced Mode: VCA                         | 62         |
| 5.29     | Advanced Mode: VCA Profiles                | 63         |
| 5.30     | Advanced Mode: VCA Scheduled               | 67         |
| 5.31     | Advanced Mode: VCA Event Triggered         | 69         |
| 5.32     | Advanced Mode: Audio Alarm                 | 70         |
| 5.33     | Advanced Mode: Alarm E-Mail                | 71         |
| 5.34     | Advanced Mode: Alarm Task Editor           | 73         |
| 5.35     | Advanced Mode: Alarm Inputs                | 74         |
| 5.36     | Advanced Mode: Relay                       | 74         |
| 5.37     | Advanced Mode: COM1                        | 76         |
| 5.38     | Advanced Mode: Network                     | 77         |
| 5.39     | Advanced Mode: Advanced                    | 80         |
| 5.40     | Advanced Mode: Multicasting                | 81         |
| 5.41     | Advanced Mode: JPEG Posting                | 83         |
| 5.42     | Advanced Mode: Encryption                  | 84         |
| 5.43     | Advanced Mode: Maintenance                 | 84         |
| 5.44     | Advanced Mode: Licenses                    | 86         |
| 5.45     | Advanced Mode: System Overview             | 86         |
| 5.46     | Function Test                              | 87         |
| <hr/>    |  |            |
| <b>6</b> | <b>Operation</b>                           | <b>89</b>  |
| 6.1      | Operation with Microsoft Internet Explorer | 89         |
| 6.2      | The LIVEPAGE                               | 91         |
| 6.3      | Saving Snapshots                           | 94         |
| 6.4      | Recording Video Sequences                  | 94         |
| 6.5      | Running Recording Program                  | 94         |
| 6.6      | The RECORDINGS Page                        | 95         |
| 6.7      | Installing the Player                      | 97         |
| 6.8      | Hardware Connections Between Video Servers | 98         |
| 6.9      | Operation Using Software Decoders          | 100        |
| <hr/>    |  |            |
| <b>7</b> | <b>Maintenance and Upgrades</b>            | <b>101</b> |
| 7.1      | Testing the Network Connection             | 101        |
| 7.2      | Unit Reset                                 | 101        |
| 7.3      | Repairs                                    | 102        |
| 7.4      | Transfer and Disposal                      | 102        |
| <hr/>    |  |            |
| <b>8</b> | <b>Appendix</b>                            | <b>103</b> |
| 8.1      | Troubleshooting                            | 103        |
| 8.2      | General Malfunctions                       | 104        |

---

|           |                                     |            |
|-----------|-------------------------------------|------------|
| 8.3       | Malfunctions with iSCSI Connections | 106        |
| 8.4       | LEDs                                | 107        |
| 8.5       | Processor Load                      | 108        |
| 8.6       | Network Connection                  | 108        |
| 8.7       | Serial Interface                    | 108        |
| 8.8       | Terminal Block                      | 109        |
| 8.9       | Communication with Terminal Program | 110        |
| 8.10      | Copyrights                          | 112        |
| <b>9</b>  | <b>Specifications</b>               | <b>113</b> |
| 9.1       | Unit                                | 113        |
| 9.2       | Protocols/Standards                 | 114        |
| <b>10</b> | <b>Glossary</b>                     | <b>115</b> |
| <b>11</b> | <b>Index</b>                        | <b>119</b> |

---



# 1 Preface

## 1.1 About this Manual

This manual is intended for persons responsible for the installation and operation of the VideoJet X10. International, national and any regional electrical engineering regulations must be followed at all times. Relevant knowledge of network technology is required. The manual describes the installation and operation of the unit.

## 1.2 Conventions in this Manual

In this manual, the following symbols and notations are used to draw attention to special situations:



### **CAUTION!**

This symbol indicates that failure to follow the safety instructions described may endanger persons and cause damage to the unit or other equipment. It is associated with immediate, direct hazards.

---



### **NOTICE!**

This symbol refers to features and indicates tips and information for easier, more convenient use of the unit.

---

## 1.3 Intended Use

The VideoJet X10 network video server transfers video, audio and control signals over data networks (Ethernet LAN, Internet). There are various memory options for recording the images captured by the connected camera. The unit is intended for use with CCTV systems. Various functions can be triggered automatically by incorporating external alarm sensors. Other applications are not permitted.

In the event of questions concerning the use of the unit which are not answered in this manual, please contact your sales partner or:

Bosch Security Systems  
Robert-Koch-Straße 100  
85521 Ottobrunn  
Germany  
[www.boschsecurity.com](http://www.boschsecurity.com)

## **1.4 EU Directives**

The VideoJet X10 network video server complies with the requirements of EU Directives 89/336 (Electromagnetic Compatibility) and 73/23, amended by 93/68 (Low Voltage Directive).

## **1.5 Rating Plate**

For exact identification, the model name and serial number are inscribed on the bottom of the housing. Please make a note of this information before installation, if necessary, so as to have it to hand in case of questions or when ordering spare parts.



## 2 Safety Information

### 2.1 Electric Shock Hazard

- Never attempt to connect the unit to any power network other than the type for which it is intended.
- Use only power supply units with UL approval and a power output according to LPS or NEC Class 2.
- Never open the housing.
- Never open the housing of the power supply unit.
- If a fault occurs, disconnect the power supply unit from the power supply and from all other units.
- Install the power supply and the unit only in a dry, weather-protected location.
- If safe operation of the unit cannot be ensured, remove it from service and secure it to prevent unauthorized operation. In such cases, have the unit checked by Bosch Security Systems.

Safe operation is no longer possible in the following cases:

- if there is visible damage to the unit or power cables,
- if the unit no longer operates correctly,
- if the unit has been exposed to rain or moisture,
- if foreign bodies have penetrated the unit,
- after long storage under adverse conditions, or
- after exposure to extreme stress in transit.

### 2.2 Installation and Operation

- The relevant electrical engineering regulations and guidelines must be complied with at all times during installation.
- Relevant knowledge of network technology is required to install the unit.
- Before installing or operating the unit, make sure you have read and understood the documentation for the other equipment connected to it, such as cameras. The documentation contains important safety instructions and information about permitted uses.
- Perform only the installation and operation steps described in this manual. Any other actions may lead to personal injury, damage to property or damage to the equipment.

### 2.3 Maintenance and Repair

- Never open the housing of the VideoJet X10. The unit does not contain any user-serviceable parts.
- Never open the housing of the power supply unit. The power supply unit does not contain any user-serviceable parts.
- Ensure that all maintenance or repair work is carried out only by qualified personnel (electrical engineers or network technology specialists).



## 3 Product Description

### 3.1 Scope of Delivery

- VideoJet X10 network video server (with or without integrated hard drive)
- 4 terminal blocks
- Drilling template
- Quick Installation Guide
- Product CD with the following content:
  - Quick Installation Guide
  - Manual
  - System Requirements document
  - Further documentation on Bosch Security Systems products
  - Configuration Manager
  - MPEG ActiveX control
  - Player and Archive Player
  - DirectX control
  - Microsoft Internet Explorer
  - Sun JVM
  - Adobe Acrobat Reader

**NOTICE!**

Check that the delivery is complete and in perfect condition. Arrange for the unit to be checked by Bosch Security Systems if you find any damage.

---

## 3.2 System Requirements

### General Requirements

- Computer with Windows XP or Windows Vista operating system
- Network access (Intranet or Internet)
- Screen resolution 1,024 × 768 pixels
- 16- or 32-bit color depth
- Installed Sun JVM



### NOTICE!

Also note the information in the **System Requirements** document on the product CD supplied. If necessary, you can install the required programs and controls from the product CD supplied (see *Section 3.1 Scope of Delivery, page 11*).

The Web browser must be configured to enable Cookies to be set from the IP address of the unit.

In Windows Vista, deactivate protected mode on the **Security** tab under **Internet Options**.

You can find notes on using Microsoft Internet Explorer in the online Help in Internet Explorer.

### Additional Configuration Requirements

- Microsoft Internet Explorer (version 6.0 or higher)  
or
- Installed Configuration Manager program (version 2.0 or higher)

### Additional Operational Requirements

- Microsoft Internet Explorer (version 6.0 or higher)  
or
- Receiver software, for example VIDOS (version 3.11 or higher) or Bosch Video Management System (version 2.02 or higher)  
or
- MPEG-4 compatible hardware decoder from Bosch Security Systems (for example VIP XD) as a receiver and connected video monitor
- For playing back recordings: connection to storage medium

## 3.3 Overview of Functions

### Network Video Server

The VideoJet X10 is a compact network video server for a connected video source. It is primarily designed for encoding video, audio and control data for transfer over an IP network. With its encoding in the MPEG-4 format, the VideoJet X10 is ideally suited for making existing analog CCTV cameras IP-compatible and for remote access to digital VCRs and multiplexers. The use of existing networks means that integration with CCTV systems or local networks can be achieved quickly and easily.

Two units, for example a VideoJet X10 as a sender and a VIP XD as a receiver, can create a standalone system for data transfer without a PC. Video images from a single sender can be received simultaneously on multiple receivers. Audio signals can also be transmitted from and to compatible units.

The VideoJet X10 features industrial standard, robust equipment and is therefore equally suited to stationary as well as mobile use in rail or other vehicles.

### Receiver

Compatible MPEG-4 enabled hardware decoders (for example the VIP XD) can be used as receivers. Computers with decoding software such as VIDOS or computers with the Microsoft Internet Explorer Web browser can also be used as receivers.

### Video Encoding

The VideoJet X10 uses the MPEG-4 and H.264 video compression standards. Thanks to efficient encoding, the data rate remains low even with high image quality and can also be adapted to local conditions within wide limits.

### Dual Streaming

Dual Streaming allows the incoming data stream to be encoded simultaneously according to two different, individually customized profiles. This feature creates two data streams that can serve different purposes, for example one for recording and one optimized for live transmission over the LAN.

### Multicast

In suitably configured networks, the multicast function enables simultaneous real-time video transmission to multiple receivers. The UDP and IGMP V2 protocols must be implemented on the network for this function.

### Encryption

The VideoJet X10 offers a variety of options for protection against unauthorized reading. Web browser connections can be protected using HTTPS. You can protect the control channels via the SSL encryption protocol. With an additional license, the user data itself can be encrypted.

**Remote Control**

For remote control of external units such as pan or tilt heads for cameras or motorized zoom lenses, control data is transmitted via the VideoJet X10's bidirectional serial interface. This interface can also be used to transmit transparent data.

**Tamper Detection and Motion Detectors**

The VideoJet X10 offers a wide range of configuration options for alarm signaling in the event of tampering with the connected camera. An algorithm for detecting movement in the video image is also part of the scope of delivery and can optionally be extended to include special video analysis algorithms.

**Snapshots**

Individual video frames (snapshots) can be called up as JPEG images by the VideoJet X10, stored on the computer's hard drive or displayed in a separate browser window.

**Recordings**

Various local memory options enable the VideoJet X10 to be used as a digital VCR. The VideoJet X10 supports ANR technology, which guarantees seamless recording without gaps via VIDOS-NVR, even during network failures. A connection to an appropriately configured iSCSI system enables long-term recordings with high image quality over the network.

**Backup**

A function for storing the video images displayed on the hard drive of your computer is available on the LIVEPAGE as well as on the RECORDINGS page. Video sequences can be stored by means of a mouse click and can be redisplayed using the Player supplied as part of the scope of delivery.

**Integrated Network Switch**


The integrated switch functionality of the VideoJet X10 permits the ETH 1, ETH 2 and SFP interfaces to be used alternatively, redundantly or for cascading other units.

**Summary**

The VideoJet X10 provides the following main functions:

- Video and data transmission over IP data networks
- Dual Streaming function for the encoder for simultaneous encoding with two individually definable profiles
- Multicast function for simultaneous image transmission to multiple receivers
- One analog BNC composite video input (PAL/NTSC)
- Video encoding to international standard MPEG-4
- Two redundant integrated Ethernet ports (10/100 Base-T)
- SFP slot for mini-GBIC modules (1 Gbps)
- Integrated switch functionality
- CF slot for CompactFlash cards for local storage
- Optional, integrated robust hard drive for local storage
- USB interfaces for future WAN or WLAN connections
- Transparent, bidirectional data channel via RS-232/RS-422/RS-485 serial interface
- Configuration and remote control of all internal functions via TCP/IP, also secured via HTTPS
- Password protection to prevent unauthorized connection or configuration changes
- Extensive, flexible storage options
- Four alarm inputs and four relay outputs
- Built-in video sensor for motion and tamper alarms
- Event-controlled automatic connection
- Convenient maintenance via uploads
- Flexible encryption of control and data channels
- Authentication according to international standard 802.1x
- Transmission and receipt of audio signals
- Bidirectional audio (mono) for line connections
- Audio encoding to international standard G.711


### 3.4 Connections on the Front Panel

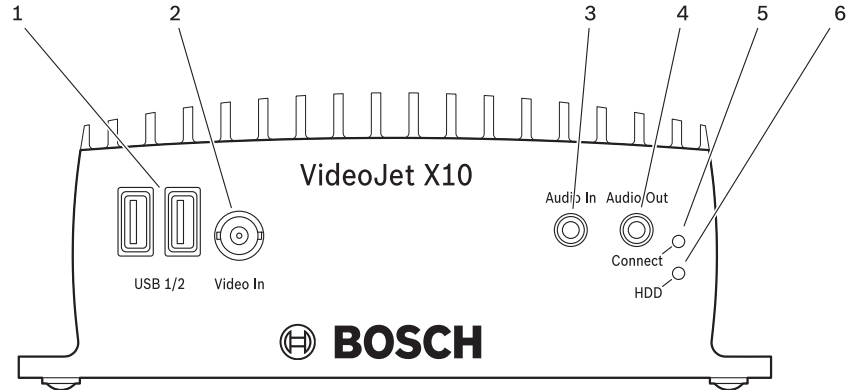

- 1 **USB 1/2** interfaces  
for future expansion of functions
- 2 **Video In** video input  
BNC socket for connecting the video source
- 3 **Audio In** audio line input  
3.5 mm stereo socket for connecting an audio line input signal
- 4 **Audio Out** audio line output  
3.5 mm stereo socket for connecting an audio line output signal
- 5 **Connect** LED  
flashes green when the unit is connected to a video
- 6 **HDD** LED  
flashes orange when hard drive activity is detected  
(only on units with a hard drive installed)



### 3.5 Connections on the Rear Panel

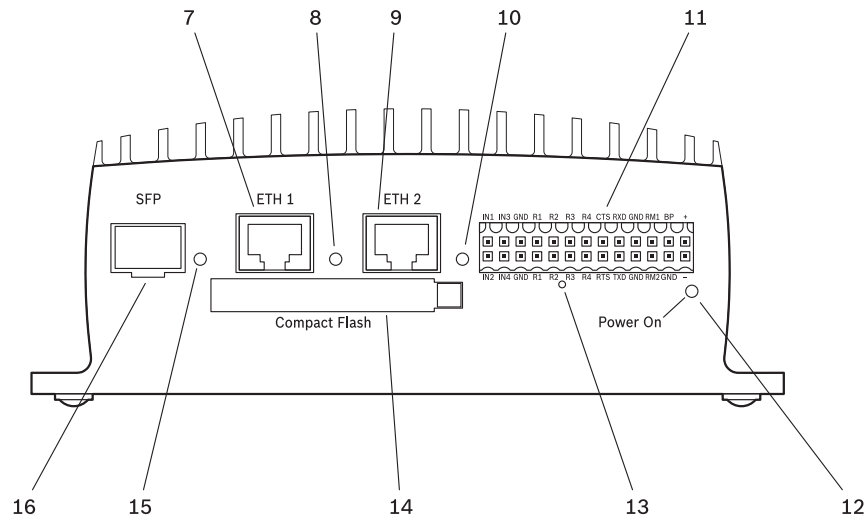

- 7 ETH 1** RJ45 socket  
for connecting to an Ethernet LAN (local network), 10/100 MBit Base-T
- 8 ETH 1** LED  
lights up yellow when the unit is connected to the network via **ETH 1**
- 9 ETH 2** RJ45 socket  
for a redundant connection to the network or to an iSCSI system
- 10 ETH 2** LED  
lights up yellow when the unit is connected to the network via **ETH 2**
- 11** Terminal block  
for alarm inputs, relay outputs, serial interface and power supply
- 12 Power On** LED  
lights up green when ready for operation
- 13** Factory reset button  
to restore factory default settings
- 14 Compact Flash** slot  
for a CF card type I or type II
- 15 SFP** LED  
lights up yellow when the unit is connected via **SFP**
- 16 SFP** slot  
for mini-GBIC module



#### NOTICE!

For more information about the LEDs, see *Section 8.4 LEDs, page 107*.  
For terminal block assignment, see *Section 8.8 Terminal Block, page 109*.



## 4 Installation

### 4.1 Preparations

The VideoJet X10 features industrial standard equipment and is therefore suitable for both stationary installation and mobile installation in vehicles.

**CAUTION!**

The unit is intended for use indoors or in housings.

Select a suitable location for installation that guarantees to meet the environmental conditions. The ambient temperature must be between  $-30$  and  $+60$  °C ( $-22$  and  $+140$  °F). The relative humidity must not exceed 95%.

The VideoJet X10 generates heat during operation, so you should ensure that there is adequate ventilation and enough clearance between the unit and heat-sensitive objects or equipment.

Please ensure the following installation conditions:

- Do not install the unit close to heaters or other heat sources. Avoid locations exposed to direct sunlight.
- Allow sufficient space for running cables.
- Ensure that the unit has adequate ventilation.
- When making connections, use only the cables supplied or use appropriate cables immune to electromagnetic interference.
- Position and run all cables so that they are protected from damage, and provide adequate cable strain relief where needed.
- Avoid impacts, blows and severe vibrations that exceed the specification limits (see *Section 9 Specifications, page 113*), as these can irreparably damage the unit.

### 4.2 Mounting

The VideoJet X10 can be permanently mounted to walls, below ceilings or other load-bearing locations using the four drillings in the unit's base.

**CAUTION!**

The front panel of the VideoJet X10 (video input) must not be pointing upwards, as internal heat dissipation is not guaranteed in this position. All other installation positions are permitted.

Make sure that the mounting location (for example wall or ceiling) can reliably hold the unit.

The load bearing capacity must be adequate for four times the weight of the unit.

For mounting on metal, use screws with the following minimum specification:

M4 × 8, 8.8, DIN ISO 4017.

For mounting on concrete, use screws with the following minimum specification:

M4 × 40 mm (1.57 in) and 6 mm (0.23 in) plastic dowels, for example fischer S4, type 50106.

## 4.3 Connections

### Camera

You can connect a video source to the VideoJet X10. Any cameras and other video sources that produce a standard PAL or NTSC signal are suitable.

1. Connect the camera or another video source to the BNC **Video In** socket using a video cable (75 Ohm, BNC plug).
2. If the video signal is not looped through, termination is performed by a software setting if necessary (see *Section 5.17 Advanced Mode: Video Input, page 45*).

### Audio Connections

The VideoJet X10 has two audio ports for audio line signals.

The audio signals are transmitted two-way and in sync with the video signals. As a result, you can connect a speaker or door intercom system at the destination point, for example. The following specifications should be complied with in all cases.

|                      |  |
|----------------------|--|
| 1 × <b>Line In:</b>  | Impedance 9 kOhm typ., 5.5 V <sub>p-p</sub> max. input voltage   |
| 1 × <b>Line Out:</b> | Impedance 10 kOhm typ., 3.0 V <sub>p-p</sub> max. output voltage,<br>impedance 16 Ohm min., 1.7 V <sub>p-p</sub> max. output voltage |

The stereo plugs must be connected as follows:

| Contact     | Line In function | Line Out function |
|-------------|------------------|-------------------|
| Tip         | Channel 1        | Channel 1         |
| Middle ring | –                | –                 |
| Lower ring  | Ground           | Ground            |

1. Connect an audio source with line level to the **Audio In** socket of the VideoJet X10 with a 3.5 mm stereo plug.
2. Connect a unit with line-in connection to the **Audio Out** socket of the VideoJet X10 with a 3.5 mm stereo plug.

### Network

You can connect the VideoJet X10 to a 10/100 Base-T network using a standard UTP category 5 cable with RJ45 plugs. The second Ethernet interface can be used to create a redundant connection to the network.



#### NOTICE!

You cannot create a connection to a second network.

1. Connect the VideoJet X10 to the network via the **ETH 1** socket.
2. Connect the VideoJet X10 to a redundant switch or hub on the same network via the **ETH 2** socket.

**SFP Slot**

You can establish an additional network connection by inserting a mini-GBIC module into the SFP slot for example via fiber optic cables (OF).

**CAUTION!**

Only laser class 1 transceivers are approved for use in the VideoJet X10.  
Use only approved modules.

**Direct iSCSI Connection**

You can connect the VideoJet X10 directly to an iSCSI system via one of the network interfaces. For **ETH 1** or **ETH 2** connections, use a UTP category 5 network cable with RJ45 plugs.

**NOTICE!**

You can obtain a list of compatible iSCSI systems from your supplier or directly from Bosch Security Systems. This list is constantly being updated and extended.

**CF Slot**

You can insert a type I or II CompactFlash card into the **Compact Flash** slot to enable recordings to be saved locally. CF cards are the ideal solution for shorter storage times and temporary recordings, for example alarm recordings or local buffering in the event of network interruptions.

**NOTICE!**

You can obtain a list of compatible CF cards from your supplier or directly from Bosch Security Systems. This list is constantly being updated and extended.

Playing back recordings is also possible using a different VideoJet X10, a VideoJet X20 or a VideoJet X40.

**CAUTION!**

If the card is formatted, all existing data is deleted from the card.  
You should therefore check whether the CF card contains any data that needs to be backed up before it is inserted.

1. Carefully slide the CF card, top side down, into the slot as far as it will go.
2. To remove the CF card, push the eject button to its right and then take out the card.

---

**Data Interface**

The bidirectional data interface is used to control units connected to the VideoJet X10, such as a dome camera with a motorized lens. The connection supports the RS-232, RS-422 and RS-485 transmission standards.

The VideoJet X10 offers the serial interface via the orange terminal block (see *Section 8.8 Terminal Block, page 109*).

The range of controllable equipment is expanding constantly. The manufacturers of the relevant equipment provide specific information on installation and control.

**CAUTION!**

Please take note of the appropriate documentation when installing and operating the unit to be controlled.

The documentation contains important safety instructions and information about permitted uses.

**NOTICE!**

A video connection is necessary to transmit transparent data.

---

**Alarm Inputs**

The VideoJet X10 has four alarm inputs on the orange terminal block (see *Section 8.8 Terminal Block, page 109*). The alarm inputs are used to connect to external alarm devices such as door contacts or sensors. With the appropriate configuration, an alarm sensor can automatically connect the VideoJet X10 to a remote location, for example.

A zero potential closing contact or switch can be used as the actuator.

**NOTICE!**

If possible, use a bounce-free contact system as the actuator.

- 
- ▶ Connect the lines to the appropriate terminals on the orange terminal block (**IN1** to **IN4**) and check that the connection is secure.

### Relay Outputs

The VideoJet X10 has four relay outputs for switching external units such as lamps or alarm sirens. You can operate these relay outputs manually while there is an active connection to the VideoJet X10. The outputs can also be configured to automatically activate sirens or other alarm units in response to an alarm signal. The relay outputs are also located on the orange terminal block (see *Section 8.8 Terminal Block, page 109*).



### CAUTION!

A maximum load of 30 V and 2 A (SELV) may be applied to the relay contacts.

- ▶ Connect the lines to the appropriate terminals on the orange terminal block (**R1** to **R4**) and check that the connection is secure.


### Remote Indication of the Connection Status

When the VideoJet X10 is connected to a video, the **Connect** LED on the front panel of the unit flashes. The LED also provides information on the operational state of the unit and signals a unit defect (see *Section 8.4 LEDs, page 107*).

You can connect an additional two-color LED to the VideoJet X10 as a remote indicator. This provides the same information as the integrated **Connect** LED. A remote indicator can be useful if the VideoJet X10 is installed at a location that is difficult to access or see, for example in a cable duct or on top of a mast. Just like the integrated LED, the remote indicator LED should also light up red and green in order to avoid confusion.

Please comply with the following specifications and the connection diagram:

|   |               |
|---|---------------|
| Voltage between <b>RM1</b> and <b>RM2</b> | 3.3 V DC max. |
| Current between <b>RM1</b> and <b>RM2</b> | 25 mA max.    |
| Source resistance                         | 140 Ohm typ.  |

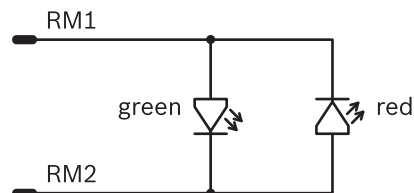

1. Connect the LED lines to the appropriate terminals on the orange terminal block (**RM1** and **RM2**) and check that the connection is secure.
2. Check that the signals on the **Connect** LED on the VideoJet X10 and the remote indicator LED correspond.

---

**Backup Power Supply**

When used in mobile vehicles (for example public transport), the VideoJet X10 is usually switched on when the vehicle is started with the ignition key. If the ignition is switched off, the power supply to the unit is also stopped. To keep the internal clock running when the engine is off, you can connect the VideoJet X10 directly to the car battery via the **BP** and **GND** contacts. The correct time is crucial for evaluating local recordings.

**CAUTION!**

Connect only batteries with the following specification: 10 to 30 V DC, 50 Ah max., 12/24 V continuous flow.

- 
1. Connect the + (plus) line on the car battery to the **BP** terminal on the orange terminal block.
  2. Connect the - (minus) line on the car battery to the **GND** terminal on the orange terminal block.
  3. Now check that the connections are secure.

**NOTICE!**

If you do not connect a battery to the unit, you should specify a time server to ensure correct system time.

---



## 4.4 Power On/Power Off

### Power Supply

The VideoJet X10 does not have a power switch. Power is supplied via a separate unit. Connect the VideoJet X10 to the power supply unit and plug this into the mains. The unit is now ready for use. The VideoJet X10 does not come supplied with a power supply unit.



### CAUTION!

Use only power supply units with UL approval and a power output according to LPS or NEC Class 2.

Where necessary, use suitable equipment to ensure that the power supply is free from interference such as voltage surges, spikes or voltage drops.

Do not connect the VideoJet X10 to the power supply until all other connections have been made.

1. Plug the terminal block with the PSU cable connected to it into the orange socket on the VideoJet X10.
2. Connect the power supply unit to the mains. The VideoJet X10 is ready for use as soon as the **Connect** LED changes from a red light, indicating the start-up procedure, to a green light.

If the network connection has been set up correctly, the yellow **ETH 1** or **ETH 2** LED will also light up. A flashing **ETH 1** or **ETH 2** LED signals that data packages are being transmitted over the network.

## 4.5 Setup Using the Configuration Manager

The **Configuration Manager** program can be found on the product CD contained in the scope of delivery. This program allows you to implement and set up new video servers in the network quickly and conveniently.



### NOTICE!

Using the Configuration Manager to set all parameters in the VideoJet X10 is an alternative to configuration by means of a Web browser, as described in chapter 5 of this manual.


### Installing the Program

1. Insert the CD into the computer's CD-ROM drive.
2. If the CD does not start automatically, open the **Configuration Manager** directory using Windows Explorer and double-click **Setup.exe**.
3. Follow the on-screen instructions.

## Configuring the VideoJet X10

You can start the Configuration Manager immediately after installation.

1. Double-click the icon on the desktop or start the program via the Start menu. After the program has started, the network is immediately searched for compatible video servers.

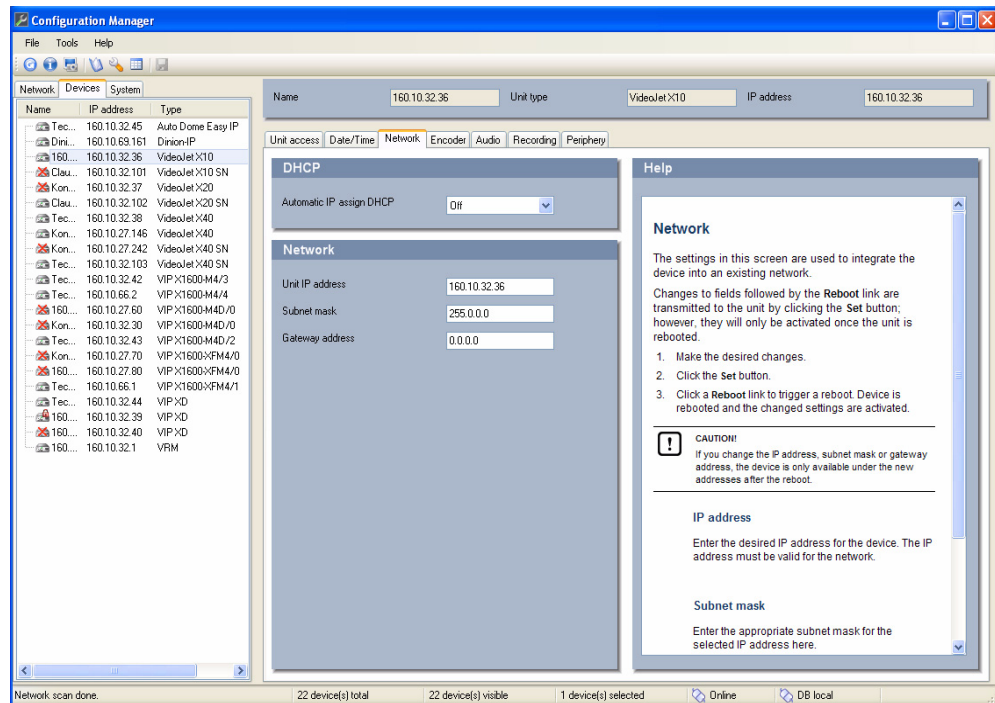

2. You can start the configuration if a VideoJet X10 is shown in the list in the left section of the window. To do this, right-click the entry for the unit.
3. Click **Unit network settings...** in the popup menu.
4. In the **Unit IP address** field, enter a valid IP address to operate on your network (for example **192.168.0.10**) and click **OK**. The unit reboots and the IP address is valid.
5. If required, enter an appropriate subnet mask for the IP address, and additional network data.



### NOTICE!

You must reboot to activate the new IP address, a new subnet mask or a gateway IP address.

### Reboot

You can trigger the reboot directly with the assistance of the Configuration Manager.

- ▶ Right-click the entry for the unit in the list in the left section of the window and select the **Reset** command from the context menu.

### Additional Parameters

You can check and set additional parameters with the assistance of the Configuration Manager. You can find detailed information on this in the documentation for this program.

## 5 Configuration Using a Web Browser

### 5.1 Connecting

The integrated HTTP server in the VideoJet X10 provides you with the option to configure the unit over the network with a Web browser. This option is an alternative to configuration using the Configuration Manager program and is considerably richer in function and more convenient than configuration using the terminal program.

#### System Requirements

- Computer with Windows XP or Windows Vista operating system
- Network access (Intranet or Internet)
- Microsoft Internet Explorer (version 6.0 or higher)
- Screen resolution 1,024 × 768 pixels
- 16- or 32-bit color depth
- Installed Sun JVM



#### NOTICE!

Also note the information in the **System Requirements** document on the product CD supplied. If necessary, you can install the required programs and controls from the product CD supplied (see *Section 3.1 Scope of Delivery, page 11*).

The Web browser must be configured to enable Cookies to be set from the IP address of the unit.

In Windows Vista, deactivate protected mode on the **Security** tab under **Internet Options**.

You can find notes on using Microsoft Internet Explorer in the online Help in Internet Explorer.

---

#### Installing MPEG ActiveX

Suitable MPEG ActiveX software must be installed on the computer to allow the live video images to be played back. If necessary, you can install the program from the product CD supplied.

1. Insert the product CD into the computer's CD-ROM drive. If the CD does not start automatically, open the root directory of the CD in Windows Explorer and double-click **MPEGAx.exe**.
2. Follow the on-screen instructions.

### Establishing the Connection

Before you can operate the VideoJet X10 within your network, it must have a valid IP address for your network and a compatible subnet mask.

The following default address is preset at the factory: **192.168.0.1**

1. Start the Web browser.
2. Enter the IP address of the VideoJet X10 as the URL. The connection is established and after a short time you will see the **LIVEPAGE** with the video image.



### Maximum Number of Connections

If you do not connect, the unit may have reached its maximum number of connections.

Depending on the unit and network configuration, each VideoJet X10 can have up to 25 Web browser connections or up to 50 connections via VIDOS or Bosch Video Management System.

### Protected VideoJet X10

If the VideoJet X10 is password protected against unauthorized access, the Web browser displays a corresponding message and prompts you to enter the password when you attempt to access protected areas.



#### NOTICE!

The VideoJet X10 offers the option to limit the extent of access using various authorization levels (see *Section 5.11 Advanced Mode: Password, page 38*).

1. Enter the user name and associated password in the corresponding text fields.
2. Click **OK**. If the password is entered correctly, the Web browser displays the page that was called up.

### Protected Network

If a RADIUS server is employed in the network for managing access rights (802.1x authentication), the VideoJet X10 must be configured accordingly, otherwise no communication is possible.

To configure the unit, you must connect the VideoJet X10 directly to a computer using a network cable. This is because communication via the network is not enabled until the **Identity** and **Password** parameters have been set and successfully authenticated (see *Section Authentication, page 81*).

## 5.2

### Configuration Menu

The **SETTINGS** page provides access to the configuration menu, which contains all the unit's parameters arranged in groups. You can view the current settings by opening one of the configuration screens. You can change the settings by entering new values or by selecting a predefined value from a list field.

There are two options for configuring the unit or checking the current settings:

- Basic mode
- Advanced mode

In **Basic Mode** the most important parameters are arranged in seven groups. This allows you to change the basic settings with just a few entries and then put the device into operation.

**Advanced Mode** is recommended for expert users or system support personnel. You can access all unit parameters in this mode. Settings that affect the fundamental functionality of the unit (such as firmware updates) can only be altered in the advanced mode.

All parameter groups are described in this chapter in the order in which they are listed in the configuration menu, from the top of the screen to the bottom.



#### CAUTION!

The settings in the advanced mode should only be processed or modified by expert users or system support personnel.

All settings are backed up in the VideoJet X10 memory so they are not lost even if the power fails.

### Starting Configuration

- ▶ Click the **SETTINGS** link in the upper section of the window. The Web browser opens a new page with the configuration menu.



### Navigation

1. Click one of the menu items in the left window margin. The corresponding submenu is displayed.
2. Click one of the entries in the submenu. The Web browser opens the corresponding page.

### Making Changes

Each configuration screen shows the current settings. You can change the settings by entering new values or by selecting a predefined value from a list field.

- ▶ After each change, click **Set** to save the change.




### CAUTION!

Save each change with the associated **Set** button.

Clicking the **Set** button saves the settings only in the current field. Changes in any other fields are ignored.

### 5.3 Basic Mode: Unit Access

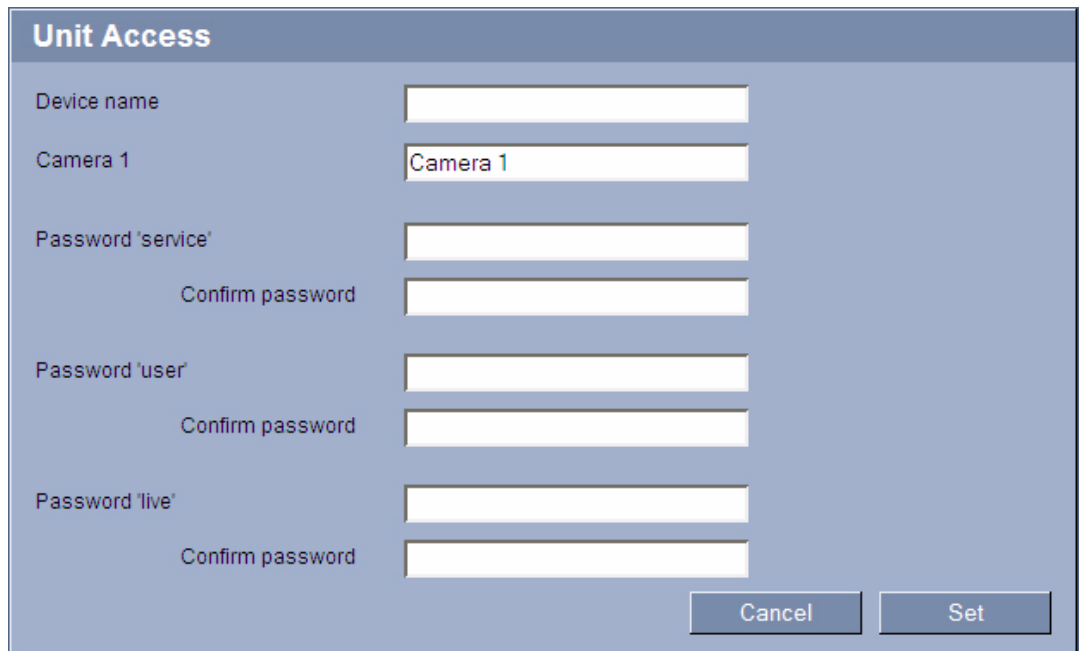

#### Device name

You can give the VideoJet X10 a name to make it easier to identify. The name makes the task of administering multiple units in larger video monitoring systems easier, for example using the VIDOS or Bosch Video Management System programs. The device name is used for the remote identification of a unit, in the event of an alarm for example. For this reason, enter a name that makes it as easy as possible to quickly identify the location.



#### CAUTION!

Do not use any special characters, for example **&**, in the name. Special characters are not supported by the system's internal recording management and may therefore result in the Player or Archive Player being unable to play back the recording.

#### Camera 1

The camera name makes it easier to identify the remote camera location, in the event of an alarm for example. It will be displayed in the video screen if configured to do so (see *Section Camera name stamping, page 40*). The camera name makes the task of administering cameras in larger video monitoring systems easier, for example using the VIDOS or Bosch Video Management System programs. Enter a unique, unambiguous name for the camera in this field.



#### CAUTION!

Do not use any special characters, for example **&**, in the name. Special characters are not supported by the system's internal recording management and may therefore result in the Player or Archive Player being unable to play back the recording.

#### Password

A VideoJet X10 is generally protected by a password to prevent unauthorized access to the unit. You can use different authorization levels to limit access. The VideoJet X10 operates with three authorization levels: **service**, **user** and **live**.

The highest authorization level is **service**. After entering the correct password, you can access all the functions of the VideoJet X10 and change all configuration settings.

With the **user** authorization level, you can operate the unit and also control cameras, for example, but you cannot change the configuration.

The lowest authorization level is **live**. It can only be used to view the live video image and switch between the different live image displays.

You can define and change a password for each authorization level if you are logged in as **service** or if the unit is not password protected.

Enter the password for the appropriate authorization level here.



#### NOTICE!

Proper password protection is only guaranteed when all higher authorization levels are also protected with a password. If a **live** password is assigned, for example, a **service** and a **user** password must also be set. When assigning passwords, you should therefore always start from the highest authorization level, **service**, and use different passwords.

#### Confirm password

In each case, enter the new password a second time to eliminate typing mistakes.



#### NOTICE!

A new password is only saved when you click the **Set** button. You should therefore click the **Set** button immediately after entering and confirming a password.

## 5.4 Basic Mode: Date/Time

| Date/Time  |  |
|--|--|
| Unit date  | Wednesday, 2009/06/03  |
| Unit time  | 17:05:37   |
| Unit time zone   | (UTC +1:00) Western & Central Europe <span style="float: right;">Sync to PC</span> |
| Time server IP address   | <input type="text" value="0.0.0.0"/>   |
| Time server type   | <input type="text" value="SNTP server"/>   |
| <input type="button" value="Cancel"/> <input type="button" value="Set"/> |  |

#### Unit date/Unit time/Unit time zone

If there are multiple devices operating in your system or network, it is important to synchronize their internal clocks. For example, it is only possible to identify and correctly evaluate simultaneous recordings when all units are operating on the same time. If necessary, you can synchronize the unit with your computer's system settings.

- ▶ Click the **Sync to PC** button to copy your computer's system time to the VideoJet X10.

#### Time server IP address

The VideoJet X10 can receive the time signal from a time server using various time server protocols, and then use it to set the internal clock. The unit polls the time signal automatically once every minute.

- ▶ Enter the IP address of a time server here.



**Time server type**

Select the protocol that is supported by the selected time server. Preferably, you should select the **SNTP server** as the protocol. This supports a high level of accuracy and is required for special applications and subsequent function extensions.

Select **Time server** for a time server that works with the protocol RFC 868.

## 5.5 Basic Mode: Network

The settings on this page are used to integrate the VideoJet X10 into an existing network. Some changes only take effect after the unit is rebooted. In this case, the **Set** button changes to **Set and Reboot**.

1. Make the desired changes.
2. Click the **Set and Reboot** button. The VideoJet X10 is rebooted and the changed settings are activated.

**CAUTION!**

If you change the IP address, subnet mask or gateway address, the VideoJet X10 is only available under the new addresses after the reboot.

**DHCP**

If a DHCP server is employed in the network for the dynamic assignment of IP addresses, you can activate acceptance of IP addresses automatically assigned to the VideoJet X10. Certain applications (VIDOS, Bosch Video Management System, Archive Player, Configuration Manager) use the IP address for the unique assignment of the unit. If you use these applications, the DHCP server must support the fixed assignment between IP address and MAC address, and must be appropriately set up so that, once an IP address is assigned, it is retained each time the system is rebooted.

**IP address**

Enter the desired IP address for the VideoJet X10 in this field. The IP address must be valid for the network.

**Subnet mask**

Enter the appropriate subnet mask for the selected IP address here.

**Gateway address**

If you want the unit to establish a connection to a remote location in a different subnet, enter the IP address of the gateway here. Otherwise leave the box blank (**0.0.0.0**).

## 5.6 Basic Mode: Encoder Profile

| Encoder Profile  |                             |
|--|-----------------------------|
| Active profile   | High resolution (4CIF/D1) ▼ |
| High resolution (4CIF/D1)  |                             |
| Profile #  | 3                           |
| Encoding interval  | 1 (0.00 ips)                |
| Video resolution   | 4CIF/D1                     |
| Target data rate   | 2000 kbps                   |
| Maximum data rate  | 4000 kbps                   |
| Video quality  | Auto                        |
| <input type="button" value="Cancel"/> <input type="button" value="Set"/> |                             |

### Active profile


You can select a profile for encoding the video signal.

You can use this to adapt the video data transmission to the operating environment (for example network structure, bandwidth, data load).

Pre-programmed profiles are available, each giving priority to different perspectives. When selecting a profile, details are displayed in the list field.

- **Low bandwidth (CIF)**  
High quality for low bandwidth connections, resolution 352 × 288/240 pixels
- **Low delay (2/3 D1)**  
High quality with low delay, resolution 464 × 576/480 pixels
- **High resolution (4CIF/D1)**  
High resolution for high bandwidth connections, resolution 704 × 576/480 pixels
- **DSL**  
For DSL connections with 500 kbps, resolution 352 × 288/240 pixels
- **ISDN (2B)**  
For ISDN connections via two B-channels, resolution 352 × 288/240 pixels
- **ISDN (1B)**  
For ISDN connections via one B-channel, resolution 352 × 288/240 pixels
- **Modem**  
For analog modem connections with 20 kbps, resolution 352 × 288/240 pixels
- **GSM**  
For GSM connections at 9,600 baud, resolution 176 × 144/120 pixels

## 5.7 Basic Mode: Audio

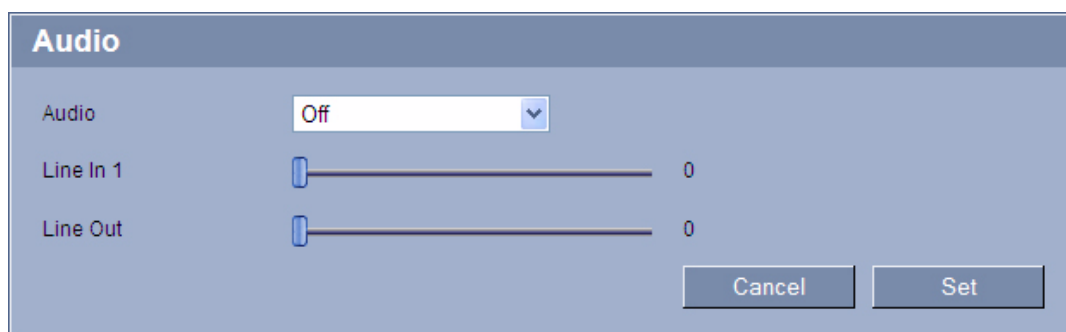

You can set the gain of the audio signals to suit your specific requirements. The current video image is shown in the small window next to the slide controls to help you check the audio source and improve assignments. Your changes are effective immediately.

If you connect via Web browser, you must activate the audio transmission on the **LIVEPAGE Functions** page (see *Section 5.15 Advanced Mode: LIVEPAGE Functions, page 43*). For other connections, the transmission depends on the audio settings of the respective system.

### Audio

The audio signals are sent in a separate data stream parallel to the video data, and so increase the network load. The audio data are encoded according to G.711 and require an additional bandwidth of approx. 80 kbps for each connection. If you do not want any audio data to be transmitted, select **Off**.

### Line In 1

You can set the line input gain. Make sure that the display does not go beyond the green zone during modulation.

### Line Out

You can set the line output gain. Make sure that the display does not go beyond the green zone during modulation.

## 5.8 Basic Mode: Recording



You can record the images from the camera connected to the VideoJet X10 on various local storage media or on an appropriately configured iSCSI system. CF cards (see *Section CF Slot, page 21*) are the ideal solution for shorter storage times. If the VideoJet X10 has a hard drive, this is suitable for longer, local recordings in mobile use. For long-term, authoritative images in stationary operation, it is essential that you use an appropriately sized iSCSI system. Here you can select a storage medium and immediately start or stop the recording.

### Storage medium

1. Select the required storage medium from the list.
2. Click the **Start** button to start the recording immediately.

## 5.9 Basic Mode: System Overview



| System Overview         |  |
|-------------------------|--|
| Hardware version        | F0000541                                       |
| Firmware version        | 27500400                                       |
| Device type             | VideoJet X10                                   |
| IP address              | 160.10.32.36                                   |
| Audio option            | Yes  |
| Storage medium attached | No   |
| Initiator name          | iqn.2005-12.com.bosch:unit00075f71de64.papagei |
| MAC address             | 00-07-5F-71-DE-64                              |
| Major version number    | 4.00   |
| Build number            | 27   |

The data on this page are for information purposes only and cannot be changed. Keep a record of this information in case technical assistance is required.



### NOTICE!

You can select all required text on this page with the mouse and copy it to the clipboard with the [Ctrl]+[C] key combination, for example if you want to send it via e-mail.

## 5.10 Advanced Mode: Identification

### Device ID

Each VideoJet X10 should be assigned a unique identifier that you can enter here as an additional means of identification.

### Device name

You can give the VideoJet X10 a name to make it easier to identify. The name makes the task of administering multiple units in larger video monitoring systems easier, for example using the VIDOS or Bosch Video Management System programs.

The device name is used for the remote identification of a unit, in the event of an alarm for example. For this reason, enter a name that makes it as easy as possible to quickly identify the location.



### CAUTION!

Do not use any special characters, for example **&**, in the name.

Special characters are not supported by the system's internal recording management and may therefore result in the Player or Archive Player being unable to play back the recording.

### Camera 1

The camera name makes it easier to identify the remote camera location, in the event of an alarm for example. It will be displayed in the video screen if configured to do so (see *Section Camera name stamping, page 40*). The camera name makes the task of administering cameras in larger video monitoring systems easier, for example using the VIDOS or Bosch Video Management System programs.

Enter a unique, unambiguous name for the camera in this field. You can use both lines for this.



### CAUTION!

Do not use any special characters, for example **&**, in the name.

Special characters are not supported by the system's internal recording management and may therefore result in the Player or Archive Player being unable to play back the recording.

You can use the second line for entering additional characters; these can be selected from a table.

1. Click the icon next to the second line. A new window with the character map is opened.
2. Click the required character. The character is inserted into the **Result** field.
3. In the character map, click the **<<** and **>>** icons to move between the different pages of the table, or select a page from the list field.
4. Click the **<** icon to the right of the **Result** field to delete the last character, or click the **X** icon to delete all characters.

- Now click the **OK** button to apply the selected characters to the second line of the **Camera 1** parameters. The window will close.

### Initiator extension

You can attach your own text to the initiator name of the VideoJet X10 to make the unit easier to identify in large iSCSI systems. This text is added to the initiator name, separated from it by a full stop. You can see the initiator name in the system overview (see *Section 5.9 Basic Mode: System Overview, page 36*).

## 5.11 Advanced Mode: Password

A VideoJet X10 is generally protected by a password to prevent unauthorized access to the unit. You can use different authorization levels to limit access.



### NOTICE!

Proper password protection is only guaranteed when all higher authorization levels are also protected with a password. If a **live** password is assigned, for example, a **service** and a **user** password must also be set. When assigning passwords, you should therefore always start from the highest authorization level, **service**, and use different passwords.

### Password

The VideoJet X10 operates with three authorization levels: **service**, **user** and **live**.

The highest authorization level is **service**. After entering the correct password, you can access all the functions of the VideoJet X10 and change all configuration settings.

With the **user** authorization level, you can operate the unit and also control cameras, for example, but you cannot change the configuration.

The lowest authorization level is **live**. It can only be used to view the live video image and switch between the different live image displays.

You can define and change a password for each authorization level if you are logged in as **service** or if the unit is not password protected.

Enter the password for the appropriate authorization level here.

### Confirm password

In each case, enter the new password a second time to eliminate typing mistakes.

**NOTICE!**

A new password is only saved when you click the **Set** button. You should therefore click the **Set** button immediately after entering and confirming a password.

**5.12****Advanced Mode: Date/Time**
**Date format**

Select your required date format.

**Unit date/Unit time**

If there are multiple devices operating in your system or network, it is important to synchronize their internal clocks. For example, it is only possible to identify and correctly evaluate simultaneous recordings when all units are operating on the same time.

1. Enter the current date. Since the unit time is controlled by the internal clock, there is no need to enter the day of the week – it is added automatically.
2. Enter the current time or click the **Sync to PC** button to copy your computer's system time to the VideoJet X10.

**Unit time zone**

Select the time zone in which your system is located.

**Daylight saving time**

The internal clock can switch automatically between normal and daylight saving time (DST). The unit already contains the data for DST switch-overs up to the year 2018. You can use these data or create alternative time saving data if required.

**NOTICE!**

If you do not create a table, there will be no automatic switching. When changing and clearing individual entries, remember that two entries are usually related to each other and dependent on one another (switching to summer time and back to normal time).

1. First check whether the correct time zone is selected. If it is not correct, select the appropriate time zone for the system, and click the **Set** button.
2. Click the **Details** button. A new window will open and you will see the empty table.
3. Select the region or the city that is closest to the system's location from the list field below the table.
4. Click the **Generate** button to generate data and enter it into the table.

5. Make changes by clicking an entry in the table. The entry is selected.
6. Clicking the **Delete** button will remove the entry from the table.
7. Select other values from the list fields below the table to change the entry. Changes are made immediately.
8. If there are empty lines at the bottom of the table, for example after deletions, you can add new data by marking the row and selecting required values from the list fields.
9. Now click the **OK** button to save and activate the table.

#### Time server IP address

The VideoJet X10 can receive the time signal from a time server using various time server protocols, and then use it to set the internal clock. The unit polls the time signal automatically once every minute.

Enter the IP address of a time server here.

#### Time server type

Select the protocol that is supported by the selected time server. Preferably, you should select the **SNTP server** as the protocol. This supports a high level of accuracy and is required for special applications and subsequent function extensions.

Select **Time server** for a time server that works with the protocol RFC 868.

## 5.13 Advanced Mode: Display Stamping

The screenshot shows a configuration window titled "Display Stamping". It has a light blue background and a dark blue header. The settings are as follows:

- Camera name stamping: Off (dropdown menu)
- Time stamping: Off (dropdown menu)
- Display milliseconds: Off (dropdown menu)
- Alarm mode stamping: On (dropdown menu)
- Alarm message: [Text input field] (max. 31 characters)
- Video watermarking: On (dropdown menu)

A "Set" button is located at the bottom right of the window.

Various overlays or "stamps" in the video image provide important supplementary information. These overlays can be enabled individually and are arranged on the image in a clear manner.

#### Camera name stamping

This field sets the position of the camera name overlay. It can be displayed at the **Top**, at the **Bottom** or at a position of your choice that you can then specify using the **Custom** option. Or it can be set to **Off** for no overlay information.

1. Select the desired option from the list.
2. If you select the **Custom** option, additional fields are displayed where you can specify the exact position (**Position (XY)**).
3. In the **Position (XY)** fields, enter the values for the desired position.

#### Time stamping

This field sets the position of the time overlay. It can be displayed at the **Top**, at the **Bottom** or at a position of your choice that you can then specify using the **Custom** option. Or it can be set to **Off** for no overlay information.

1. Select the desired option from the list.



2. If you select the **Custom** option, additional fields are displayed where you can specify the exact position (**Position (XY)**).
3. In the **Position (XY)** fields, enter the values for the desired position.

#### Display milliseconds

If necessary, you can also display milliseconds. This information can be useful for recorded video images; however, it does increase the processor's computing time. Select **Off** if you do not need to display milliseconds.

#### Alarm mode stamping

Select **On** to display a text message overlay in the event of an alarm. It can be displayed at a position of your choice that you can then specify using the **Custom** option. Or it can be set to **Off** for no overlay information.

1. Select the desired option from the list.
2. If you select the **Custom** option, additional fields are displayed where you can specify the exact position (**Position (XY)**).
3. In the **Position (XY)** fields, enter the values for the desired position.

#### Alarm message

Enter the message to be displayed in the event of an alarm. The maximum text length is 31 characters.

#### Video watermarking

Choose **On** if you wish the transmitted video images to be "watermarked". After activation, all images are marked with a green **W**. A red **W** indicates that the sequence (live or saved) has been manipulated.

## 5.14

### Advanced Mode: Appearance

On this page you can adapt the appearance of the web interface and change the website language to meet your requirements. If necessary, you can replace the manufacturer's logo (top right) and the product name (top left) in the top part of the window with individual graphics.



#### NOTICE!

You can use either GIF or JPEG images. The file paths must correspond to the access mode (for example **C:\Images\Logo.gif** for access to local files, or **http://www.mycompany.com/images/logo.gif** for access via the Internet/Intranet).

When accessing via the Internet/Intranet, ensure that a connection is always available to display the image. The image file is not stored in the VideoJet X10.

**Website language**

Select the language for the user interface here.

**NOTICE!**

There are always two languages to choose from: English and another language. If the language you require is not available for selection, you can download the current firmware with another language combination from the website [www.boschsecurity.com](http://www.boschsecurity.com).

**Company logo**

Enter the path to a suitable graphic if you want to replace the manufacturer's logo. The image file can be stored on a local computer, in the local network or at an Internet address.

**Device logo**

Enter the path to a suitable graphic if you want to replace the product name. The image file can be stored on a local computer, in the local network or at an Internet address.

**NOTICE!**

If you want to use the original graphics again, simply delete the entries in the **Company logo** and **Device logo** fields.

**JPEG size**

You can choose between two given image sizes to display the M-JPEG image on the **LIVEPAGE**.

**JPEG interval**

You can specify the interval at which the individual images should be generated for the M-JPEG image on the **LIVEPAGE**.

**JPEG quality**

You can specify the image quality for displaying M-JPEG on the **LIVEPAGE**.

## 5.15 Advanced Mode: LIVEPAGE Functions

| LIVEPAGE Functions            |   |
|-------------------------------|---|
| Transmit audio                | <input checked="" type="checkbox"/>   |
| Bilinx control                | <input checked="" type="checkbox"/>   |
| Lease time (s)                | <input type="text" value="0"/>  |
| Show alarm inputs             | <input checked="" type="checkbox"/>   |
| Show relay outputs            | <input checked="" type="checkbox"/>   |
| Show VCA trajectories         | <input checked="" type="checkbox"/>   |
| Show VCA metadata             | <input checked="" type="checkbox"/>   |
| Show event log                | <input checked="" type="checkbox"/>   |
| Show system log               | <input checked="" type="checkbox"/>   |
| Allow snapshots               | <input checked="" type="checkbox"/>   |
| Allow local recording         | <input checked="" type="checkbox"/>   |
| Path for JPEG and video files | <input type="text" value="C:\"/> <input type="button" value="Browse"/> <input type="button" value="Set"/> |

On this page you can adapt the **LIVEPAGE** functions to your requirements. You can choose from a variety of different options for displaying information and controls.

1. Check the box for the items that are to be made available on the **LIVEPAGE**. The selected items are indicated by a check mark.
2. Check whether the required functions are available on the **LIVEPAGE**.

### Transmit audio

The audio signals are sent in a separate data stream parallel to the video data, and so increase the network load. The audio data are encoded according to G.711 and require an additional bandwidth of approx. 80 kbps for each connection.

### Bilinx control

Next to the field for view control at the top left of the **LIVEPAGE**, an additional field is displayed for the special Bosch Security Systems Bilinx control.

### Lease time (s)

The lease time in seconds determines the time beyond which a different user is authorized to control the camera after no further control signals are received from the current user. After this time interval, the camera is automatically enabled.

### Show alarm inputs

Alarm inputs are shown next to the video image as icons, along with their assigned names. If an alarm is active, the corresponding icon changes color.

### Show relay outputs

Relay outputs are shown next to the video image as icons, along with their assigned names. If the relay is switched, the icon changes color.

**Show VCA trajectories**

The trajectories (motion lines of objects) from the video content analysis are displayed in the live video image if a corresponding analysis type is activated (see *Section 5.31 Advanced Mode: VCA Event Triggered*, page 69).

**Show VCA metadata**

When the analysis function is activated, the additional information from the video content analysis (VCA) will be displayed in the live video image (see *Section 5.31 Advanced Mode: VCA Event Triggered*, page 69). With the **MOTION+** analysis type, for example, the sensor fields in which motion is recorded will be marked with rectangles.

**Show event log**

The event messages are displayed along with the date and time in a field next to the video image.

**Show system log**

The system messages are displayed along with the date and time in a field next to the video image and provide information about establishing and ending connections, for example.

**Allow snapshots**

Here you can specify whether the icon for saving individual images should be displayed below the live image. Individual images can only be saved if this icon is visible.

**Allow local recording**

Here you can specify whether the icon for saving video sequences on the local memory should be displayed below the live image. Video sequences can only be saved if this icon is visible.

**Path for JPEG and MPEG files**

1. Enter the path for the storage location of individual images and video sequences that you can save from the **LIVEPAGE**.
2. If necessary, click **Browse** to find a suitable directory.

**5.16****Advanced Mode: Logging**

| Logging             |  |  |
|---------------------|--|--|
| Save event log      | <input type="checkbox"/>                   |  |
| File for event log  | <input type="text" value="C:\Event.txt"/>  | <input type="button" value="Browse"/>                                    |
| Save system log     | <input type="checkbox"/>                   |  |
| File for system log | <input type="text" value="C:\System.txt"/> | <input type="button" value="Browse"/> <input type="button" value="Set"/> |

**Save event log**

Check this option to save event messages in a text file on your local computer. You can then view, edit and print this file with any text editor or the standard Office software.

**File for event log**

1. Enter the path for saving the event log here.
2. If necessary, click **Browse** to find a suitable directory.

**Save system log**

Check this option to save system messages in a text file on your local computer.

You can then view, edit and print this file with any text editor or the standard Office software.

#### File for system log

1. Enter the path for saving the system log here.
2. If necessary, click **Browse** to find a suitable directory.

## 5.17 Advanced Mode: Video Input

The screenshot shows a configuration window titled "Video Input". It contains two rows of settings:

- Row 1: "75 Ohm termination input 1" with a dropdown menu set to "On".
- Row 2: "Source type input 1" with a dropdown menu set to "Camera".

A "Set" button is positioned to the right of the "Source type input 1" dropdown.

You can activate the 75 Ohm terminating resistance for the video input of the VideoJet X10. The terminating resistance must be deactivated for the video signal to be looped through. Every video input is closed at the time of delivery.

#### 75 Ohm termination input 1

Select **Off** if the video signal is to be looped through.

#### Source type input 1

To allow VCRs to be connected as a video source, you can change the characteristic of the video source from the preset value of **Camera** to **VCR**. VCRs require a more tolerant setting for the internal PLL as a result of jitter effects caused by the mechanical components of a VCR.



#### NOTICE!

In some cases, selecting the **VCR** option can lead to an improvement in the video image even with a camera connected.

## 5.18 Advanced Mode: Picture Settings

The screenshot shows a configuration window titled "Picture Settings" with a "Video 1" tab. It contains four rows of sliders, each with a numerical value in a text box to the right:

- Contrast (0...255): slider at approximately 75%, value 193.
- Saturation (0...255): slider at approximately 50%, value 128.
- Brightness (0...255): slider at approximately 50%, value 128.
- Low-pass filter (0...255): slider at 0%, value 0.

A "Default" button is located at the bottom center of the panel.

You can set the video image of the camera to suit your requirements. The current video image is displayed in the small window next to the slide controls as confirmation. Your changes are effective immediately.

1. Move the slide control to the required position.
2. Click **Default** to reset all settings to their default value.

**Contrast (0...255)**

You can use this function to adapt the contrast of the video image to your working environment.

**Saturation (0...255)**

You can use this function to adjust the color saturation so as to make the reproduction of colors on your monitor as realistic as possible.

**Brightness (0...255)**

You can use this function to adapt the brightness of the video image to your working environment.

**Low-pass filter (0...255)**

You can use this function to filter very fine noise from the image. This reduces and optimizes the bandwidth necessary for image transmission over the network. The image resolution may be impaired.

The higher the value set with the slide control, the flatter the image signal. Check your setting in the image window next to the slide controls.

Also observe the processor load indicator that appears at the top of the window near the manufacturer's logo (see *Section 8.6 Network Connection, page 108*).

## 5.19 Advanced Mode: Encoder Profile

### Encoder Profile

Active profile

**Video 1**

Stream 1 High resolution (4CIF/D1)  MPEG-4 SH++

Stream 2 GSM  MPEG-4 SH++

Preview for  Stream 1  Stream 2

Profile configuration

|           |           |           |           |           |           |           |           |
|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| Profile 1 | Profile 2 | Profile 3 | Profile 4 | Profile 5 | Profile 6 | Profile 7 | Profile 8 |
|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|

Profile name High resolution (4CIF/D1)

Target data rate 2000 kbps

Encoding interval 1 (0.00 ips)

Video resolution 4CIF/D1

Maximum data rate 4000 kbps

I-frame distance 0

Video quality 
 Auto

H.264 deblocking filter

Priority

Priority None

For the video signal encoding, you can select a code algorithm for each and two profiles, and you can change the presets for the profiles.

You can adapt the video data transmission to the operating environment (for example network structure, bandwidth, data load). To this end, the VideoJet X10 simultaneously generates two data streams (Dual Streaming), which compression settings you can select individually, for example one setting for transmissions to the Internet and one for LAN connections. Pre-programmed profiles are available, each giving priority to different perspectives.

- **Low bandwidth (CIF)**  
High quality for low bandwidth connections, resolution 352 × 288/240 pixels
- **Low delay (2/3 D1)**  
High quality with low delay, resolution 464 × 576/480 pixels

- **High resolution (4CIF/D1)**  
High resolution for high bandwidth connections, resolution 704 × 576/480 pixels
- **DSL**  
For DSL connections with 500 kbps, resolution 352 × 288/240 pixels
- **ISDN (2B)**  
For ISDN connections via two B-channels, resolution 352 × 288/240 pixels
- **ISDN (1B)**  
For ISDN connections via one B-channel, resolution 352 × 288/240 pixels
- **Modem**  
For analog modem connections with 20 kbps, resolution 352 × 288/240 pixels
- **GSM**  
For GSM connections at 9,600 baud, resolution 176 × 144/120 pixels

You can choose between the code algorithms MPEG-4 SH++ and H.264 for each data stream. H.264 requires a lower bandwidth at the same video quality but it does not offer 4CIF resolution. 4CIF resolution is only possible with MPEG-4 SH++.

1. Select the required profile for every data stream.
2. Select the required code algorithm for every data stream.

You can change individual parameter values of a profile and you can also change the name. You can switch between profiles by clicking the appropriate tabs.



#### **CAUTION!**

The profiles are rather complex. They include a large number of parameters that interact with one another, so it is generally best to use the default profiles. Change the profiles only once you are fully familiar with all the configuration options. In the default setting, Stream 2 is transmitted for alarm connections and automatic connections. Bear this fact in mind when assigning the profile.

---



#### **NOTICE!**

All parameters combine to make up a profile and are dependent on one another. If you enter a setting that is outside the permitted range for a particular parameter, the nearest permitted value will be substituted when the settings are saved.

---

#### **Preview for**

Select which video data stream should be displayed in the previews. You can deactivate the display of the video images if the performance of the computer is affected too strongly by the decoding of the data streams.

1. Check the box for the required data stream.
2. Click the **i** icon above the relevant preview to display further information about the data stream.

#### **Profile name**

You can enter a new name for the profile here. The name is then displayed in the list of available profiles in the **Active profile** field.



**Target data rate**

You can limit the data rate for the VideoJet X10 to optimize utilization of the bandwidth in your network. The target data rate should be set according to the desired picture quality for typical scenes with no excessive motion.

For complex images or frequent changes of image content due to frequent movements, this limit can be temporarily exceeded up to the value you enter in the **Maximum data rate** field.

**Encoding interval**

The figure selected here determines the interval at which images are encoded and transmitted. For example, entering **4** means that only every fourth image is encoded, the following three are skipped - this can be particularly advantageous with low bandwidths. The image rate in ips (images per second) is displayed next to the text field.

**Video resolution**

Here you can select the desired resolution for the video image. The following resolutions are available:

- **QCIF**  
176 × 144/120 pixels
- **CIF**  
352 × 288/240 pixels
- **1/2 D1**  
352 × 576/480 pixels
- **2CIF**  
704 × 288/240 pixels
- **4CIF/D1**  
704 × 576/480 pixels
- **2/3 D1**  
464 × 576/480 pixels

**Default**

Click **Default** to return the profile to the factory default values.

**Details**

Clicking the **Details >>** button displays further details on image quality and data transmission. These settings require extensive knowledge of the MPEG standard and video data compression. Incorrect settings can render the video images unusable.

**Maximum data rate**

This maximum data rate is not exceeded under any circumstances. Depending on the video quality settings for the I- and P-frames, this fact can result in individual images being skipped. The value entered here must be at least 10% higher than the value entered in the **Target data rate** field. If the value entered here is too low, it will automatically be adjusted.

**I-frame distance**

This parameter allows you to set the intervals in which the I-frames will be coded. **0** means auto mode, whereby the video server inserts I-frames as necessary. An entry of **1** indicates that I-frames are continuously generated. An entry of **2** indicates that only every second image is an I-frame, and **3** only every third image etc.; the frames in between are coded as P-frames.

**Video quality**

This setting allows you to adjust the image quality. The **Auto** option automatically adjusts to the optimum combination of movement and image definition (focus). Alternatively, you can use the slide control to select a value between 1 and 100. A value of **100** results in a very high refresh rate and lower image quality.

**H.264 deblocking filter**

You can activate a filter that reduces blocking in the image in the case of H.264-encoded video streams, thereby providing a smoother image. Please note that this option requires additional computing power.

**Priority**

In the default configuration **None**, the computing power provided for individual tasks is negotiated dynamically. This ensures the best possible video quality at all times. With the **MPEG-4/H.264** setting, video transmissions are given a higher priority and only a small amount of power remains available for JPEG images. The **JPEG** setting is suitable for applications that primarily require JPEG images, for example JPEG recordings. When this setting is made the amount of power available for video images will be reduced.

**5.20****Advanced Mode: Audio**

The screenshot shows a configuration window titled "Audio". At the top, there is a dropdown menu labeled "Audio" with "On" selected. Below this, there are two horizontal sliders. The first is labeled "Line In 1" and has a value of 21. The second is labeled "Line Out" and has a value of 53. At the bottom right of the window, there is a "Set" button.

You can set the gain of the audio signals to suit your specific requirements. The current video image is shown in the small window next to the slide controls to help you check the audio source and improve assignments. Your changes are effective immediately.

If you connect via Web browser, you must activate the audio transmission on the **LIVEPAGE Functions** page (see *Section 5.15 Advanced Mode: LIVEPAGE Functions, page 43*). For other connections, the transmission depends on the audio settings of the respective system.

**Audio**

The audio signals are sent in a separate data stream parallel to the video data, and so increase the network load. The audio data are encoded according to G.711 and require an additional bandwidth of approx. 80 kbps for each connection. If you do not want any audio data to be transmitted, select **Off**.


**Line In 1**

You can set the line input gain. Make sure that the display does not go beyond the green zone during modulation.

**Line Out**

You can set the line output gain. Make sure that the display does not go beyond the green zone during modulation.

**5.21 Advanced Mode: Storage Management**

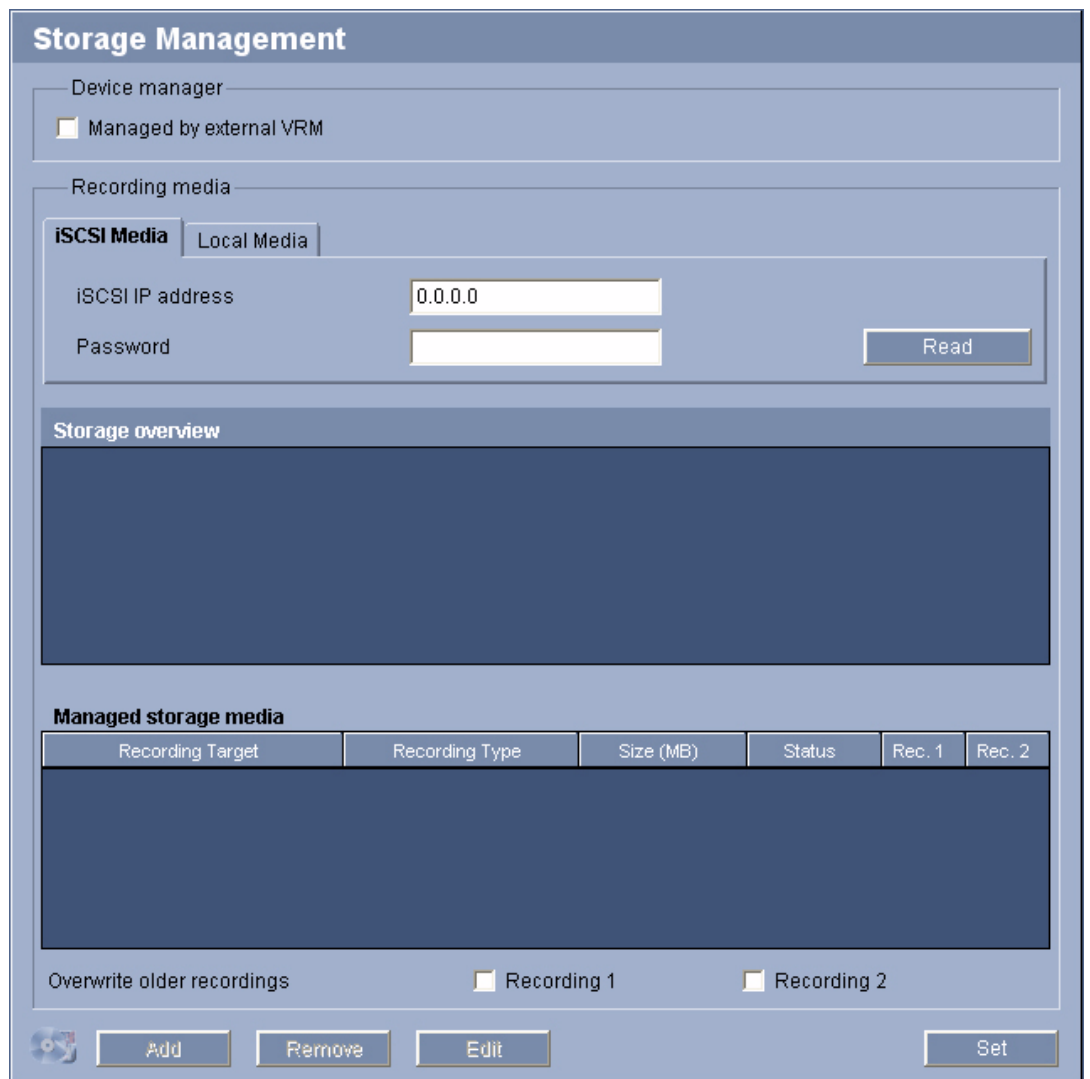

You can record the images from the camera connected to the VideoJet X10 on various local storage media or on an appropriately configured iSCSI system.

CF cards (see *Section CF Slot, page 21*) are the ideal solution for shorter storage times and temporary recordings, for example alarm recordings or local buffering in the event of network interruptions.

If the VideoJet X10 has a hard drive, this is suitable for longer, local recordings in mobile use. For long-term, authoritative images in stationary operation, it is essential that you use an appropriately sized iSCSI system.

It is also possible to let the VRM Video Recording Manager control all recording when accessing an iSCSI system. This is an external program for configuring recording tasks for video servers. For further information please contact your local customer service at Bosch Security Systems.

### Device manager

If you activate the **VRM** option in this screen, the VRM Video Recording Manager will manage all recording and you will not be able to configure any further settings here.



#### CAUTION!

Activating or deactivating VRM causes the current settings to be lost; they can only be restored through reconfiguration.

---

### Recording media

Select the required recording media here so that you can then activate them and configure the recording parameters.

#### iSCSI Media

If you want to use an **iSCSI system** as a recording medium, you must set up a connection to the required iSCSI system and set the configuration parameters.



#### NOTICE!

The iSCSI storage system selected must be available on the network and completely set up. Amongst other things, it must have an IP address and be divided into logical drives (LUN).

---

1. Enter the IP address of the required iSCSI destination in the **iSCSI IP address** field.
2. If the iSCSI destination is password protected, enter this into the **Password** field.
3. Click the **Read** button. The connection to the IP address will be established. In the **Storage overview** field, you can see the corresponding logical drives.

#### Local Media

The supported local recording media are displayed in the **Storage overview** field.

- ▶ If the local recording medium is password protected, enter this into the **Password** field.

#### Activating and Configuring Storage Media

The storage overview displays the available storage media. You can select individual media or iSCSI drives and transfer these to the **Managed storage media** list. You can activate the storage media in this list and configure them for storage.



#### CAUTION!

Each storage medium can only be associated with one user. If a storage medium is already being used by another user, you can decouple the user and connect the drive with the VideoJet X10. Before decoupling, make absolutely sure that the previous user no longer needs the storage medium.

---

1. In the **Recording media** section, click the **iSCSI Media** and **Local Media** tabs to display the applicable storage media in the overview.

2. In the **Storage overview** section, double-click the required storage medium, an iSCSI LUN or one of the other available drives. The medium is then added to the **Managed storage media** list. In the **Status** column, newly added media are indicated by the status **Not active**.
3. Click the **Set** button to activate all media in the **Managed storage media** list. In the **Status** column, these are indicated by the status **Online**.
4. Check the box in the **Rec. 1** or **Rec. 2** to specify which data stream should be recorded on the storage media selected. **Rec. 1** stores Stream 1, **Rec. 2** stores Stream 2. This means that you can record the standard data stream on a hard drive and record alarm images on the mobile CF card, for example.
5. Check the boxes for the **Overwrite older recordings** option to specify which older recordings can be overwritten once the available memory capacity has been used. **Recording 1** corresponds to Stream 1, **Recording 2** corresponds to Stream 2.

**CAUTION!**

If older recordings are not allowed to be overwritten when the available memory capacity has been used, the recording in question will be stopped. You can specify limitations for overwriting old recordings by configuring the retention time (see *Section 5.24 Advanced Mode: Retention Time*, page 56).

**Formatting Storage Media**

You can delete all recordings on a storage medium at any time.

**CAUTION!**

Check the recordings before deleting and back up important sequences on the computer's hard drive.

1. Click a storage medium in the **Managed storage media** list to select it.
2. Click the **Edit** button below the list. A new window will open.
3. Click the **Formatting** button to delete all recordings in the storage medium.
4. Click **OK** to close the window.

**Deactivating Storage Media**

You can deactivate any storage medium from the **Managed storage media** list. It is then no longer used for recordings.

1. Click a storage medium in the **Managed storage media** list to select it.
2. Click the **Remove** button below the list. The storage medium is deactivated and removed from the list.

**5.22****Advanced Mode: Remote Video Device**

**Remote Video Device**

|  |   |
|--|---|
| <p><b>IP Address</b></p> <input style="width: 90%; border: 1px solid #ccc;" type="text" value="0.0.0.0"/>                                      | <p><b>Initiator Name</b></p> <input style="width: 90%; border: 1px solid #ccc;" type="text"/> |
| <input style="border: 1px solid #ccc;" type="button" value="Network Scan"/> <input style="border: 1px solid #ccc;" type="button" value="Set"/> |   |

You can allow a remote video device to use the VideoJet X10 storage media. This means you can record video images from a camera that does not have its own storage media, for

example. Once you have entered the IP address of the remote video device and saved it by pressing **Set**, the VideoJet X10 is then displayed for selection in the Storage Management for the remote video device.

### IP Address

Enter the IP address for the remote video device.

1. If you do not know the IP address, click the **Network Scan** button. The search for possible devices in the network is started. A small arrow is then displayed next to the **IP Address** field.
2. Click the arrow to display the list of devices detected.
3. Click the required device in the list to transfer its IP address.

## 5.23

### Advanced Mode: Recording Profiles

**Recording Profiles**

| Tag     | Camera   | Recording | Standard Profile    | Post-Alarm Profile |
|---------|----------|-----------|---------------------|--------------------|
| Nacht   | Camera 1 | 1         | Low bandwidth (CIF) | Standard profile   |
| Sa./So. |          |           |                     |                    |
| rosa    |          |           |                     |                    |
|         |          |           |                     |                    |
|         |          |           |                     |                    |
|         |          |           |                     |                    |
|         |          |           |                     |                    |
|         |          |           |                     |                    |

Settings for selected camera(s)

Standard recording

Continuous  Pre-alarm  Off

Standard profile: Low bandwidth (CIF)

Post-alarm recording

Pre-alarm time: 0 s

Post-alarm time: 0 s

Post-alarm profile: Standard profile

Alarm input:  1  2  3  4

Motion alarm:  1

Video loss alarm:  1

Virtual alarm:  1  2  3  4

Recording options

Recording includes:  Audio  Metadata

Default

Copy Settings

Set

You can define up to ten different recording profiles. You will then use these recording profiles in the recording scheduler, where they are linked with the individual days and times (see *Section 5.25 Advanced Mode: Recording Scheduler, page 57*).

**NOTICE!**

You can change or add to the recording profile description on the tabs on the **Recording Scheduler** page (see *Section Time periods, page 58*).

1. Click one of the tabs to edit the corresponding profile.
2. If necessary, click the **Default** button to return all settings to their default values.
3. Click the **Copy Settings** button if you want to copy the currently visible settings to other profiles. A new window will open and you can select the profiles in which you want to copy the settings.
4. For each profile, click the **Set** button to save the settings in the unit.

**Standard recording**

Here you can select the mode for standard recordings.

If you select **Continuous**, the recording proceeds continuously. If the maximum memory capacity is reached, older recordings will automatically be overwritten. If you select the **Pre-alarm** option, recording will only take place in the pre-alarm time, during the alarm and during the set post-alarm time.

If you select **Off**, no automatic recording takes place.

**CAUTION!**

You can specify limitations for overwriting older recordings in **Continuous** mode by configuring the retention time (see *Section 5.24 Advanced Mode: Retention Time, page 56*).

**Standard profile**

From this field, you can select the encoder profile to be used for recording (see *Section 5.19 Advanced Mode: Encoder Profile, page 47*).

**NOTICE!**

The recording profile can deviate from the standard setting **Active profile** and is only used during an active recording.

**Pre-alarm time**

You can select the required pre-alarm time from the list field.

**Post-alarm time**

You can select the required post-alarm time from the list field.

**Post-alarm profile**

You can select the encoder profile to be used for recording during the post-alarm time (see *Section 5.19 Advanced Mode: Encoder Profile, page 47*).

The **Standard profile** option adopts the selection at the top of the page.

**Alarm input / Motion alarm / Video loss alarm**

Here you can select the alarm sensor that is to trigger a recording.

**NOTICE!**

The motion alarm is configured and activated on the **VCA** page (see *Section 5.31 Advanced Mode: VCA Event Triggered, page 69*).

The alarm inputs are configured and activated on the **Alarm Inputs** page (see *Section 5.35 Advanced Mode: Alarm Inputs, page 74*).

The numbering of the checkboxes for the alarm inputs corresponds to the labeling of the alarm inputs on the VideoJet X10.

**Virtual alarm**

Here you can select the virtual alarm sensors that are to trigger a recording, via RCP+ commands or alarm scripts, for example.

**NOTICE!**

For more information, please see the **Alarm Task Script Language** document and the RCP+ documentation. These documents can be found on the product CD supplied.

**Recording includes**

You can specify whether, in addition to video data, audio data and metadata (for example alarms, VCA data and serial data) should also be recorded. Including metadata could make subsequent searches of recordings easier but it requires additional memory capacity.

**CAUTION!**

Without metadata, it is not possible to include video content analysis in recordings.

**5.24****Advanced Mode: Retention Time**

You can specify the retention times for recordings. If the available memory capacity of a medium has been used, older recordings are only overwritten if the retention time entered here has expired.

**NOTICE!**


Make sure that the retention time corresponds with the available memory capacity. A rule of thumb for the memory requirement is as follows: 1 GB per hour retention time with 4CIF for complete frame rate and high image quality.

**Retention time Camera 1**

Enter the required retention time in hours or days for each recording. **Recording 1** corresponds to Stream 1, **Recording 2** corresponds to Stream 2.



## 5.25 Advanced Mode: Recording Scheduler

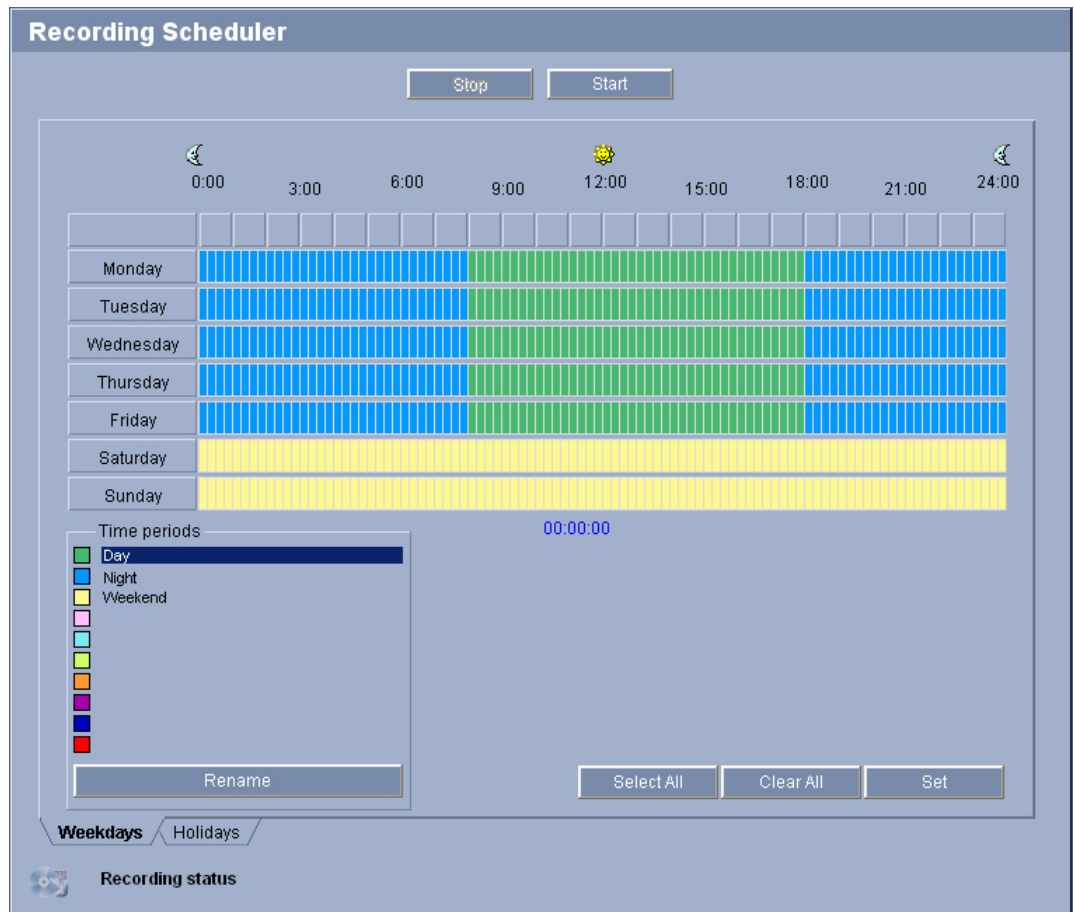

The recording scheduler allows you to link the created recording profiles with the days and times at which the camera's images are to be recorded in the event of an alarm. You can link any number of 15-minute intervals with the recording profiles for each day of the week. Moving the mouse cursor over the table displays the time below it. This aids orientation.

In addition to the normal weekdays, you can define holidays that are not in the standard weekly schedule on which recordings are to apply. This allows you to apply a schedule for Sundays to other days with dates that fall on varying weekdays.

1. Click the profile you want to link in the **Time periods** field.
2. Click in a field in the table, hold down the mouse button and drag the cursor over all the periods to be assigned to the selected profile.
3. Use the right mouse button to deselect any of the intervals.
4. Click the **Select All** button to link all time intervals to the selected profile.
5. Click the **Clear All** button to deselect all of the intervals.
6. When you are finished, click the **Set** button to save the settings in the unit.

### Holidays

You can define holidays that are not in the standard weekly schedule on which recordings are to apply. This allows you to apply a schedule for Sundays to other days with dates that fall on varying weekdays.

1. Click the **Holidays** tab. Any days that have already been selected will be shown in the table.
2. Click the **Add** button. A new window will open.
3. Select the desired date from the calendar. You can select several consecutive calendar days by holding down the mouse button. These will later be displayed as a single entry in the table.
4. Click **OK** to accept the selection. The window will close.
5. Assign the individual holidays to the recording profiles, as described above.

### Deleting Holidays

You can delete holidays you have defined yourself at any time.

1. Click the **Delete** button. A new window will open.
2. Click the date you wish to delete.
3. Click **OK**. The item will be deleted from the table and the window will close.
4. The process must be repeated for deleting additional days.

### Time periods

You can change the names of the recording profiles.

1. Click a profile and then the **Rename** button.
2. Enter your chosen name and then click the **Rename** button again.

### Activating the Recording

After completing configuration you must activate the recording scheduler and start the recording. Once recording is underway, the **Recording Profiles** and **Recording Scheduler** pages are deactivated and the configuration cannot be modified.

You can stop the recording activity at any time and modify the settings.

1. Click the **Start** button to activate the recording scheduler.
2. Click the **Stop** button to deactivate the recording scheduler. Running recordings are interrupted and the configuration can be changed.

### Recording status

The graphic indicates the recording activity of the VideoJet X10. You will see an animated graphic while recording is taking place.

## 5.26 Advanced Mode: Recording Status

| Recording Status |             |             |
|------------------|-------------|-------------|
| Video 1          | Recording 1 | Recording 2 |
| Status           | Offline     | Offline     |
| Last error       | None        | None        |
| Recording target | 0.0.0.0     | 0.0.0.0     |
| Media            |             |             |
| Data rate        | 0 kbps      | 0 kbps      |

Certain details on the recording status are displayed here for information purposes. You cannot change any of these settings.

## 5.27 Advanced Mode: Alarm Connections

| Alarm Connections                  |  |
|------------------------------------|--|
| Connect on alarm                   | Off <input type="button" value="v"/>             |
| Number of destination IP address   | 1 <input type="button" value="v"/>               |
| Destination IP address             | 0.0.0.0 <input type="text"/>                     |
| Destination password               | <input type="text"/>                             |
| Video transmission                 | UDP <input type="button" value="v"/>             |
| Remote port                        | 80 <input type="button" value="v"/>              |
| Video output                       | First available <input type="button" value="v"/> |
| Decoder                            | First available <input type="button" value="v"/> |
| SSL encryption                     | Off <input type="button" value="v"/>             |
| Auto-connect                       | Off <input type="button" value="v"/>             |
| Audio                              | Off <input type="button" value="v"/>             |
| <input type="button" value="Set"/> |  |

You can select how the VideoJet X10 responds to an alarm. In the event of an alarm, the unit can automatically connect to a pre-defined IP address. You can enter up to ten IP addresses to which the VideoJet X10 will connect in sequence in the event of an alarm, until a connection is made.

### Connect on alarm

Select **On** so that the VideoJet X10 automatically connects to a predefined IP address in the event of an alarm.

By setting **Follows input 1** the unit maintains the connection that has been automatically established for as long as an alarm exists on alarm input 1.



#### NOTICE!

In the default setting, Stream 2 is transmitted for alarm connections. Bear this fact in mind when assigning the profile (see *Section 5.19 Advanced Mode: Encoder Profile, page 47*).

#### Number of destination IP address

Specify the numbers of the IP addresses to be contacted in the event of an alarm. The unit contacts the remote stations one after the other in the numbered sequence until a connection is made.

#### Destination IP address

For each number, enter the corresponding IP address for the desired remote station.

#### Destination password

If the remote station is password protected, enter the password here.

In this page, you can save a maximum of ten destination IP addresses and hence up to ten passwords for connecting to remote stations. If connections to more than ten remote stations are to be possible, for example when initiating connections via higher-ranking systems such as VIDOS or Bosch Video Management System, you can store a general password here. The VideoJet X10 can use this general password to connect to all remote stations protected with the same password. In this case, proceed as follows:

1. Select **10** from the **Number of destination IP address** list field.
2. Enter the address **0.0.0.0** in the **Destination IP address** field.
3. Enter your chosen password in the **Destination password** field.
4. Define this password as the **user** password for all remote stations to which a connection is to be possible.



#### NOTICE!

If you enter the destination IP address 0.0.0.0 for destination 10, this VideoJet X10 address will no longer be used for the tenth attempt at automatic connection in the event of an alarm. The parameter is then used only to save the general password.

#### Video transmission

If the unit is operated behind a firewall, **TCP (HTTP port)** should be selected as the transfer protocol. For use in a local network, select **UDP**.



#### CAUTION!

Please note that in some circumstances, a larger bandwidth must be available on the network for additional video images in the event of an alarm, in case Multicast operation is not possible. To enable Multicast operation, select the **UDP** option for the **Video transmission** parameter here and on the **Network** page (see *Section Video transmission, page 78*).

#### Remote port

Depending on the network configuration, select a browser port here. The ports for HTTPS connections will be available only if the **On** option is selected in the **SSL encryption** parameter.

#### Video output

If you know which unit is being used as the receiver, you can select the analog video output to which the signal should be switched. If the destination unit is unknown, it is advisable to select the **First available** option. In this case, the image is placed on the first free video

output. This is an output on which there is no signal. The connected monitor only displays images when an alarm is triggered. If you select a particular video output and a split image is set for this output on the receiver, you can also select from **Decoder** the decoder in the receiver that is to be used to display the alarm image.

**NOTICE!**

Refer to the destination unit documentation concerning image display options and available video outputs.

---

**Decoder**

Select a decoder of the receiver to display the alarm image. The decoder selected has an impact on the position of the image in a split screen. For example, you can specify via a VIP XD that the upper-right quadrant should be used to display the alarm image by selecting decoder 2.

**SSL encryption**

The data for the connection, for example the password, can be securely transmitted with SSL encryption. If you have selected the **On** option, only encrypted ports are offered in the **Remote port** parameter.

---

**NOTICE!**

Please note that the SSL encryption must be activated and configured at both ends of a connection. This requires the appropriate certificates to be uploaded onto the VideoJet X10 (see *Section Maintenance log, page 85*).

---

You can activate and configure encryption of the media data (video, audio and metadata) on the **Encryption** page (see *Section 5.42 Advanced Mode: Encryption, page 84*).

**Auto-connect**

Select the **On** option to automatically re-establish a connection to one of the previously specified IP addresses after each reboot, after a connection breakdown or after a network failure.

---

**NOTICE!**


In the default setting, Stream 2 is transmitted for automatic connections. Bear this fact in mind when assigning the profile (see *Section 5.19 Advanced Mode: Encoder Profile, page 47*).

---

**Audio**

Select the **On** option if you wish to additionally transmit a standalone G.711 encoded audio stream with alarm connections.

## 5.28 Advanced Mode: VCA

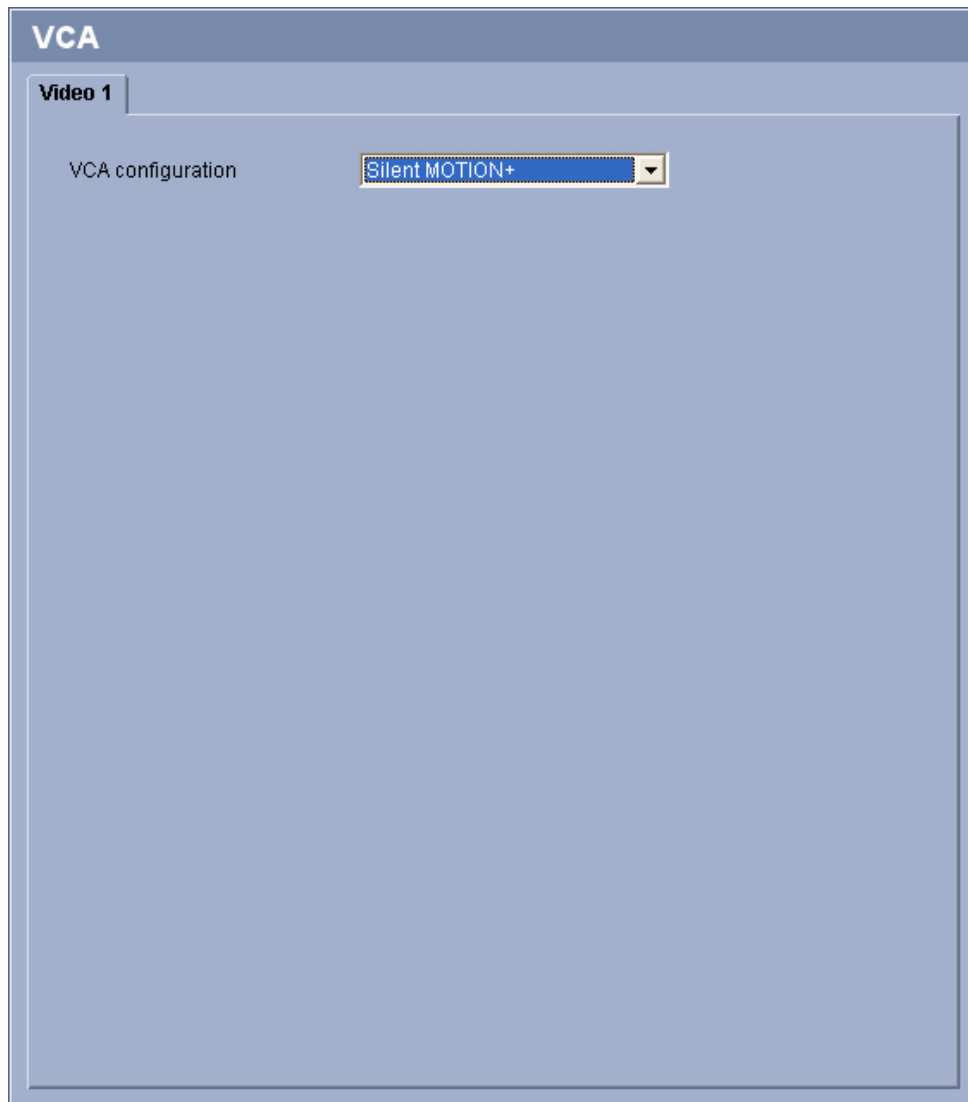

The VideoJet X10 contains an integrated video content analysis (VCA), which can detect and analyze changes in the signal on the basis of image processing. Such changes can be due to movements in the camera's field of view.

You can select various VCA configurations and adapt these to your application as required. The **Silent MOTION+** configuration is active by default. In this configuration, metadata is created to facilitate searches of recordings; however, no alarm is triggered.

1. Select a VCA configuration and make the required settings.
2. If necessary, click the **Default** button to return all settings to their default values.

## 5.29 Advanced Mode: VCA Profiles

**VCA**

**Video 1**

VCA configuration: Profile #1

Alarm status: On

Analysis type: MOTION+

**Motion detector**

Sensitivity: 100

Minimum object size: 4

Select Area

**Tamper detection**

Sensitivity: 50

Trigger delay (s): 600

Global change: 50

Global change

Scene too bright

Scene too dark

Scene too noisy

Reference check

Disappearing edges

Appearing edges

Reference

Select Area

Load... Save... Default Set

You can configure two profiles with different VCA configurations. You can save profiles on your computer's hard drive and load saved profiles from there. This can be useful if you want to test a number of different configurations. Save a functioning configuration and test new settings. You can use the saved configuration to restore the original settings at any time.



### NOTICE!

If computing power becomes short, the highest priority is always the live images and recordings. This can lead to impairment of the video content analysis. You should therefore observe the processor load and optimize the encoder settings or the video content analysis settings as necessary (see *Section 8.6 Network Connection, page 108*).

1. Select a VCA profile and enter the required settings.
2. If necessary, click the **Default** button to return all settings to their default values.

3. Click the **Save...** button to save the profile settings to another file. A new window is opened, in which you can specify where you want to save the file and what name you want to save it under.
4. Click the **Load...** button to load a saved profile. A new window opens in which you can select the profile file and specify where to save the file.

### VCA configuration

Select one of the profiles here to activate it or edit it.

You can rename the profile.

1. To rename the file, click the icon to the right of the list field and enter the new profile name in the field.
2. Click the icon again. The new profile name is saved.

### Alarm status

The alarm status is displayed here for information purposes. This means you can check the effects of your settings immediately.

### Analysis type

Select the required analysis algorithm. By default, only **MOTION+** is available – this offers a motion detector and essential recognition of tampering.



#### NOTICE!

Additional analysis algorithms with comprehensive functions such as IVMD and IVA are available from Bosch Security Systems.

If you select one of these algorithms, you can set the corresponding parameters here directly. You can find information on this in the relevant documents on the product CD supplied.

Metadata is always created for a video content analysis, unless this was explicitly excluded. Depending on the analysis type selected and the relevant configuration, additional information overlays the video image in the preview window next to the parameter settings. With the **MOTION+** analysis type, for example, the sensor fields in which motion is recorded will be marked with rectangles.



#### NOTICE!

On the **LIVEPAGE Functions** page, you can also enable additional information overlays for the **LIVEPAGE** (see *Section 5.15 Advanced Mode: LIVEPAGE Functions, page 43*).

### Motion detector (MOTION+ only)

For the detector to function, the following conditions must be met:

- Analysis must be activated.
- At least one sensor field must be activated.
- The individual parameters must be configured to suit the operating environment and the desired responses.
- The sensitivity must be set to a value greater than zero.



#### CAUTION!

Reflections of light (off glass surfaces, etc.), switching lights on or off or changes in the light level caused by cloud movement on a sunny day can trigger unintended responses from the motion detector and generate false alarms. Run a series of tests at different times of the day and night to ensure that the video sensor is operating as intended.

For indoor surveillance, ensure constant lighting of the areas during the day and at night.



**Sensitivity (MOTION+ only)**

The basic sensitivity of the motion detector can be adjusted for the environmental conditions to which the camera is subject.

The sensor reacts to variations in the brightness of the video image. The darker the observation area, the higher the value that must be selected.

**Minimum object size (MOTION+ only)**

You can specify the number of sensor fields that a moving object must cover to generate an alarm. This is to prevent objects that are too small from triggering an alarm.

A minimum value of **4** is recommended. This value corresponds to four sensor fields.

**Select Area (MOTION+ only)**

The areas of the image to be monitored by the motion detector can be selected. The video image is subdivided into 858 square fields. Each of these fields can be activated or deactivated individually. If you wish to exclude particular regions of the camera's field of view from monitoring due to continuous movement (by a tree in the wind, etc.), the relevant fields can be deactivated.

1. Click **Select Area** to configure the sensor fields. A new window will open.
2. If necessary, click **Clear All** first to clear the current selection (fields marked yellow).
3. Left-click the fields to be activated. Activated fields are marked yellow.
4. If necessary, click **Select All** to select the entire video frame for monitoring.
5. Right-click any fields you wish to deactivate.
6. Click **OK** to save the configuration.
7. Click the close button **X** in the window title bar to close the window without saving the changes.

**Tamper detection**

You can reveal the tampering of cameras and video cables by means of various options. Run a series of tests at different times of the day and night to ensure that the video sensor is operating as intended.

**NOTICE!**

The options for tamper detection can only be set for fixed cameras. Dome cameras or other motorized cameras cannot be protected in this manner as the movement of the camera itself causes changes in the video image that are too great.

---

**Sensitivity****NOTICE!**

This and the following parameter are only accessible if the reference check is activated.

---

The basic sensitivity of the tamper detection can be adjusted for the environmental conditions to which the camera is subject.

The algorithm reacts to the differences between the reference image and the current video image. The darker the observation area, the higher the value that must be selected.

**Trigger delay (s)**

You can set delayed alarm triggering. The alarm is only triggered after a set time interval in seconds has elapsed and then only if the triggering condition still exists. If the original condition has been restored before this time interval elapses, the alarm is not triggered. This allows you to avoid false alarms triggered by short-term changes, for example cleaning activities in the direct field of vision of the camera.

**Global change**

You can set how large the global change in the video image must be for an alarm to be triggered. This setting is independent of the sensor fields selected under **Select Area**. Set a high value if fewer sensor fields need to change to trigger an alarm. With a low value, it is necessary for changes to occur simultaneously in a large number of sensor fields to trigger an alarm.

This option allows you to detect, independently of motion alarms, manipulation of the orientation or location of a camera resulting from turning the camera mount bracket, for instance.

**Global change**

Activate this function if the global change, as set with the **Global change** slide control, should trigger an alarm.

**Scene too bright**

Activate this function if tampering associated with exposure to extreme light (for instance, shining a flashlight directly on the lens) should trigger an alarm. The average brightness of the scene provides a basis for recognition.

**Scene too dark**

Activate this function if tampering associated with covering the lens (for instance, by spraying paint on it) should trigger an alarm. The average brightness of the scene provides a basis for recognition.

**Scene too noisy**

Activate this function if tampering associated with EMC interference (noisy scene as the result of a strong interference signal in the vicinity of the video lines), as an example, should trigger an alarm.

**Reference check**

You can save a reference image that is continuously compared with the current video image. If the current video image in the marked areas differs from the reference image, an alarm is triggered. This allows you to detect tampering that would otherwise not be detected, for example if the camera is turned.

1. Click **Reference** to save the currently visible video image as a reference.
2. Click **Select Area** and select the areas in the reference image that are to be monitored.
3. Check the box **Reference check** to activate on-going matching. The stored reference image is displayed in black and white below the current video image, and the selected areas are marked in yellow.
4. Select the **Disappearing edges** or **Appearing edges** option to specify the reference check once again.

**Select Area**

You can select the image areas in the reference image that are to be monitored. The video image is subdivided into 858 square fields. Each of these fields can be activated or deactivated individually.


**NOTICE!**

Select only those areas for reference monitoring in which no movement takes place and that are always evenly lit, as false alarms could otherwise be triggered.

- 
1. Click **Select Area** to configure the sensor fields. A new window will open.
  2. If necessary, click **Clear All** first to clear the current selection (fields marked yellow).

3. Left-click the fields to be activated. Activated fields are marked yellow.
4. If necessary, click **Select All** to select the entire video frame for monitoring.
5. Right-click any fields you wish to deactivate.
6. Click **OK** to save the configuration.
7. Click the close button **X** in the window title bar to close the window without saving the changes.

### 5.30 Advanced Mode: VCA Scheduled

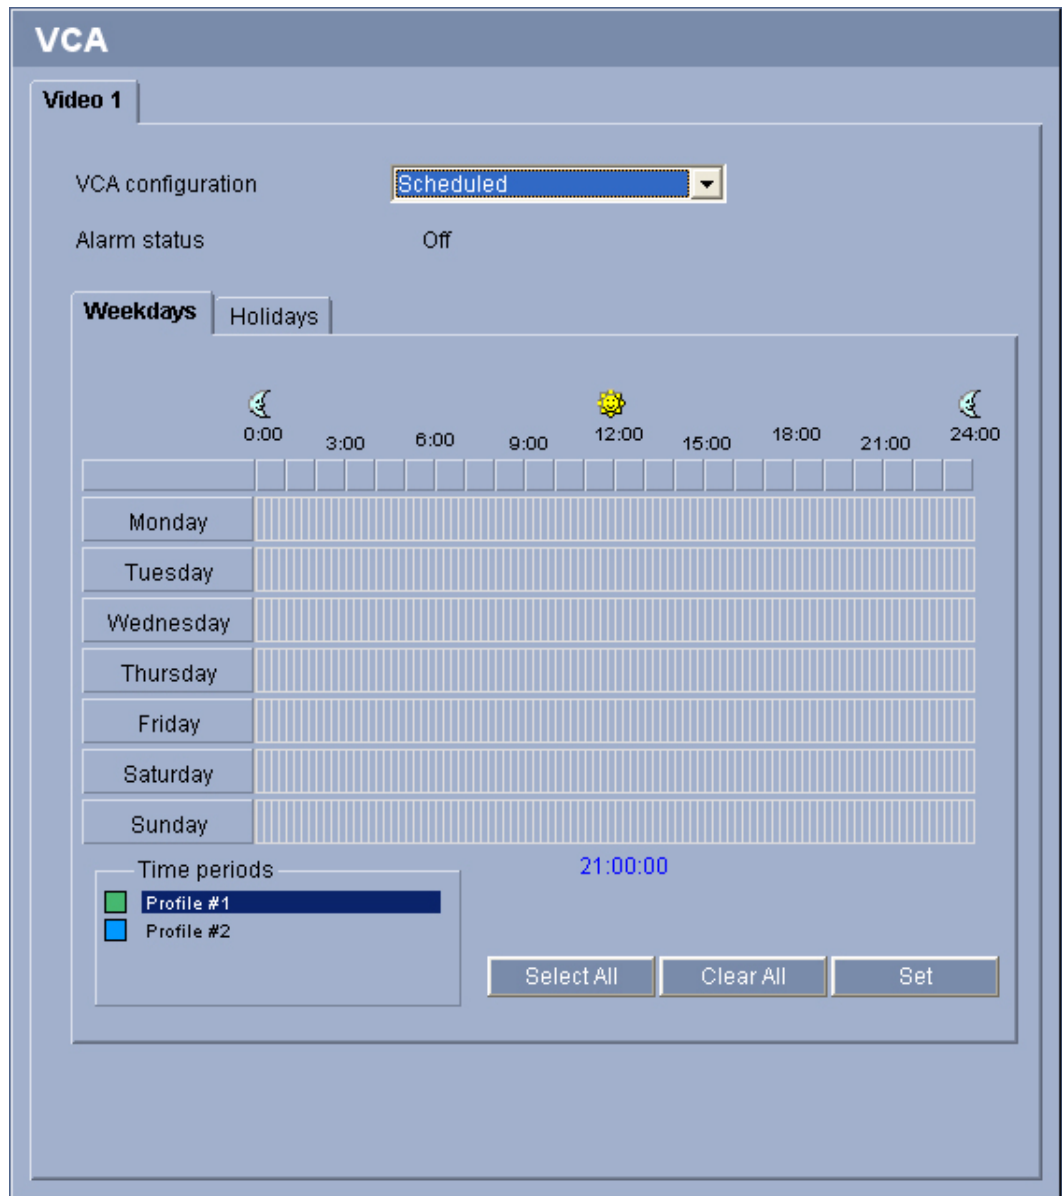

This configuration allows you to link the created VCA profile with the days and times at which the video content analysis is to be active.

You can link any number of 15-minute intervals with the VCA profiles for each day of the week. Moving the mouse cursor over the table displays the time below it. This aids orientation. In addition to the normal weekdays, you can define holidays that are not in the standard weekly schedule on which recordings are to apply. This allows you to apply a schedule for Sundays to other days with dates that fall on varying weekdays.

1. Click the profile you want to link in the **Time periods** field.
2. Click in a field in the table, hold down the mouse button and drag the cursor over all the periods to be assigned to the selected profile.
3. Use the right mouse button to deselect any of the intervals.
4. Click the **Select All** button to link all time intervals to the selected profile.
5. Click the **Clear All** button to deselect all of the intervals.
6. When you are finished, click the **Set** button to save the settings in the unit.

### Holidays

You can define holidays on which a profile should be active that are different to the standard weekly schedule. This allows you to apply a schedule for Sundays to other days with dates that fall on varying weekdays.

1. Click the **Holidays** tab. Any days that have already been selected will be shown in the table.
2. Click the **Add** button. A new window will open.
3. Select the desired date from the calendar. You can select several consecutive calendar days by holding down the mouse button. These will later be displayed as a single entry in the table.
4. Click **OK** to accept the selection. The window will close.
5. Assign the individual holidays to the VCA profiles, as described above.

### Deleting Holidays

You can delete holidays you have defined yourself at any time.

1. Click the **Delete** button. A new window will open.
2. Click the date you wish to delete.
3. Click **OK**. The item will be deleted from the table and the window will close.
4. The process must be repeated for deleting additional days.

## 5.31 Advanced Mode: VCA Event Triggered

**VCA**

**Video 1**

VCA configuration

Alarm status Off

Configuration

Trigger

Trigger active

Trigger inactive  ✓

Delay (s)

This configuration allows you stipulate that the video content analysis is only to be activated when triggered by an event. As long as no trigger is activated, the **Silent MOTION+** configuration in which metadata is created is active; this metadata facilitates searches of recordings, but does not trigger an alarm.

### Trigger

You can select one of the physical alarms on the device's alarm inputs or one of the virtual alarms as a trigger. A virtual alarm is created using software, with RCP+ commands or alarm scripts, for example.



### NOTICE!

For more information, please see the **Alarm Task Script Language** document and the RCP+ documentation. You can find these documents on the product CD supplied (see *Section 3.1 Scope of Delivery, page 11*).

**Trigger active**

Select the VCA configuration here that is to be enabled via an active trigger. A green check mark to the right of the list field indicates that the trigger is active.

**Trigger inactive**

Select the VCA configuration here that is to be activated if the trigger is not active. A green check mark to the right of the list field indicates that the trigger is inactive.

**Delay (s)**

Select the delay period here for the reaction of the video content analysis to trigger signals. A delay period may be useful in avoiding false alarms or frequent triggering, for example. During the delay period, the **Silent MOTION+** configuration is always enabled.

## 5.32 Advanced Mode: Audio Alarm

The VideoJet X10 can create alarms on the basis of audio signals. You can configure signal strengths and frequency ranges in such a way that false alarms, for example due to machine noise or background noise, are avoided.

**NOTICE!**

First set up normal audio transmission before you configure the audio alarm here (see *Section 5.20 Advanced Mode: Audio*, page 50).

**Audio alarm**

Select **On** if you want the device to generate audio alarms.

**Name**

The name makes it easier to identify the alarm in extensive video monitoring systems, for example with the VIDOS and Bosch Video Management System programs. Enter a unique and clear name here.



**CAUTION!**

Do not use any special characters, for example **&**, in the name. Special characters are not supported by the system's internal recording management and may therefore result in the Player or Archive Player being unable to play back the recording.

**Threshold**

Set up the threshold on the basis of the signal visible in the graphic. You can set the threshold using the slide control or, alternatively, you can move the white line directly in the graphic using the mouse.

**Sensitivity**

You can use this setting to adapt the sensitivity to the sound environment. You can effectively suppress individual signal peaks. A high value represents a high level of sensitivity.

**Signal Ranges**

You can exclude particular signal ranges in order to avoid false alarms. For this reason the total signal is divided into 13 tonal ranges (mel scale). Check or uncheck the boxes below the graphic to include or exclude individual ranges.

**5.33**

**Advanced Mode: Alarm E-Mail**

**Alarm E-Mail**

Send alarm e-mail:

Mail server IP address:

SMTP user name:

SMTP password:

Format:

Attach JPEG from camera:  1

Destination address:

Sender name:

Test e-mail:

As an alternative to automatic connecting, alarm states can also be documented by e-mail. In this way it is possible to notify a recipient who does not have a video receiver. In this case, the VideoJet X10 automatically sends an e-mail to a previously defined e-mail address.

**Send alarm e-mail**

Select **On** if you want the unit to automatically send an alarm e-mail in the event of an alarm.

**Mail server IP address**

Enter the IP address of a mail server that operates on the SMTP standard (Simple Mail Transfer Protocol). Outgoing e-mails are sent to the mail server via the address you entered. Otherwise leave the box blank (**0.0.0.0**).

**SMTP user name**

Enter a registered user name for the chosen mailserver here.

**SMTP password**

Enter the required password for the registered user name here.

**Format**

You can select the data format of the alarm message.

- **Standard (with JPEG)**  
E-mail with attached JPEG image file.
- **SMS**  
E-mail in SMS format to an e-mail-to-SMS gateway (for example to send an alarm by cellphone) without an image attachment.

**CAUTION!**

When a cellphone is used as the receiver, make sure to activate the e-mail or SMS function, depending on the format, so that these messages can be received.

You can obtain information on operating your cellphone from your cellphone provider.

---

**Attach JPEG from camera**

Click the checkbox to specify that JPEG images are sent from the camera. An enabled video input is indicated by a check mark.

**Destination address**

Enter the e-mail address for alarm e-mails here. The maximum address length is 49 characters.

**Sender name**


Enter a unique name for the e-mail sender, for example the location of the unit. This will make it easier to identify the origin of the e-mail.

**Test e-mail**

You can test the e-mail function by clicking the **Send Now** button. An alarm e-mail is immediately created and sent.



## 5.34 Advanced Mode: Alarm Task Editor

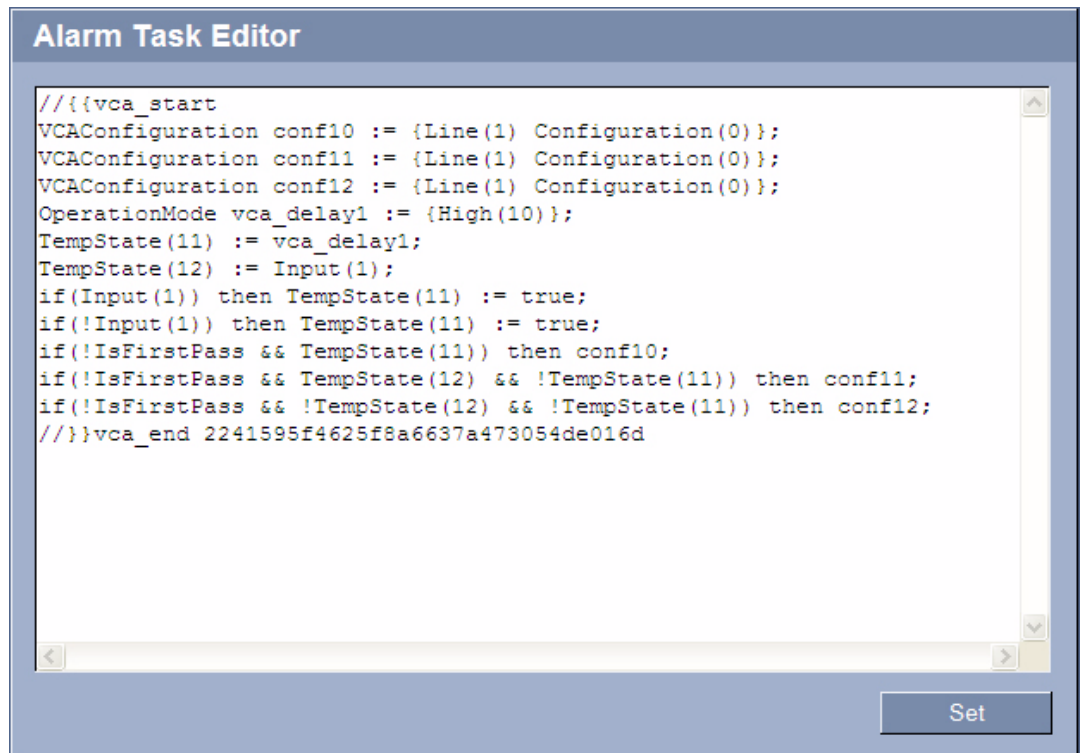

### CAUTION!



Editing scripts on this page overwrites all settings and entries on the other alarm pages. This procedure cannot be reversed.

In order to edit this page, you must have programming knowledge and be familiar with the information in the **Alarm Task Script Language** document. You can find the document on the product CD supplied (see *Section 3.1 Scope of Delivery, page 11*).

As an alternative to the alarm settings on the various alarm pages, you can enter your desired alarm functions in script form here. This will overwrite all settings and entries on the other alarm pages.

1. Click the **Examples** link under the **Alarm Task Editor** field to see some script examples. A new window will open.
2. Enter new scripts in the **Alarm Task Editor** field or change existing scripts in line with your requirements.
3. When you are finished, click the **Set** button to transmit the scripts to the unit. If the transfer was successful, the message **Script successfully parsed** is displayed over the text field. If it was not successful, an error message will be displayed with further information.

## 5.35 Advanced Mode: Alarm Inputs

| Alarm Inputs  |             |      |         |
|---------------|-------------|------|---------|
| Alarm input 1 | Active high | Name | Input 1 |
| Alarm input 2 | Active high | Name | Input 2 |
| Alarm input 3 | Active high | Name | Input 3 |
| Alarm input 4 | Active high | Name | Input 4 |

Set

You can configure the alarm inputs of the VideoJet X10.

### Alarm input

Select **Active high** if the alarm is to be triggered when the contact closes. Select **Active low** if the alarm is to be triggered when the contact opens.

### Name

You can enter a name for each alarm input, which is then displayed below the icon for the alarm input on the **LIVEPAGE** if configured correctly (see *Section 5.15 Advanced Mode: LIVEPAGE Functions, page 43*).

## 5.36 Advanced Mode: Relay

| Relay          |          |          |          |          |
|----------------|----------|----------|----------|----------|
| Idle state     | Open     | Open     | Open     | Open     |
| Operating mode | Bistable | Bistable | Bistable | Bistable |
| Relay follows  | Off      | Off      | Off      | Off      |
| Relay name     | Relay 1  | Relay 2  | Relay 3  | Relay 4  |
| Trigger relay  | Relay 1  | Relay 2  | Relay 3  | Relay 4  |

Set

You can configure the switching behavior of the relay outputs. For each relay, you can specify an open switch relay (normally closed contact) or a closed switch relay (normally open contact).

You can also specify whether an output should operate as a bistable or monostable relay. In bistable mode, the triggered state of the relay is maintained. In monostable mode, you can set the time after which the relay will return to the idle state.

You can select different events that automatically activate an output. It is possible, for example, to turn on a floodlight by triggering a motion alarm and then turning the light off again when the alarm has stopped.

### Idle state

Select **Open** if you want the relay to operate as an NO contact, or select **Closed** if the relay is to operate as an NC contact.

**Operating mode**

Select an operating mode for the relay.

For example, if you want an alarm-activated lamp to stay on after the alarm ends, select **Bistable**. If you wish an alarm-activated siren to sound for ten seconds, for example, select **10 s**.

**Relay follows**

If required, select a specific event that will trigger the relay. The following events are possible triggers:

- **Off**  
Relay is not triggered by events
- **Connection**  
Trigger whenever a connection is made
- **Video alarm**  
Trigger by interruption of the video signal
- **Motion alarm**  
Trigger by motion alarm, as configured on the **VCA** page (see *Section 5.31 Advanced Mode: VCA Event Triggered*, page 69)
- **Local input**  
Trigger by the corresponding external alarm input
- **Remote input**  
Trigger by remote station's corresponding switching contact (only if a connection exists)

**NOTICE!**

The numbers in the lists of selectable events relate to the corresponding connections on the unit, **Video alarm 1**, for example to the **Video In** connection.

**Relay name**

You can assign a name for the relay here. The name is shown on the button next to **Trigger relay**. The Livepage can also be configured to display the name under the relay icon.

**Trigger relay**

Click the button to trigger the relay manually (for testing or to operate a door opener, for example).

## 5.37

**Advanced Mode: COM1**

**COM1**

Serial port function: Terminal

Camera ID: 1

Baud rate: 9600 bps

Data bits: 8

Stop bits: 1

Parity check: None

Interface mode: RS232

Set

You can configure the serial interface parameters (orange terminal block) to meet your requirements.

**NOTICE!**

If the VideoJet X10 is working in multicast mode (see *Section 5.40 Advanced Mode: Multicasting, page 81*), the first remote location to establish a video connection to the unit is also assigned the transparent data connection. However, after about 15 seconds of inactivity the data connection is automatically terminated and another remote location can exchange transparent data with the unit.

**Serial port function**

Select a controllable unit from the list. If you wish to use the serial port to transmit transparent data, select **Transparent**. Select **Terminal** if you wish to operate the unit from a terminal.

**NOTICE!**

After selecting a unit, the remaining parameters in the window are set automatically and should not be changed.

**Camera ID**

If necessary, enter the ID of the peripheral you wish to control (for example a dome camera or pan/tilt head).

**Baud rate**

Select the value for the transmission rate in bps.

**Data bits**

The number of data bits per character cannot be changed.

**Stop bits**

Select the number of stop bits per character.

**Parity check**

Select the type of parity check.

**Interface mode**

Select the desired protocol for the serial interface.

## 5.38 Advanced Mode: Network

### Network

DHCP

Automatic IP assignment

Ethernet

IP address

Subnet mask

Gateway address

DNS server address

[Details <<](#)

Video transmission

HTTP browser port

HTTPS browser port

RCP+ port 1756

Telnet support

Interface mode ETH 1

Interface mode ETH 2

Network MSS (Byte)

iSCSI MSS (Byte)

DynDNS

Enable DynDNS

Host name

User name

Password

Force registration now

Status DynDNS function switched off

The settings on this page are used to integrate the VideoJet X10 into an existing network. Some changes only take effect after the unit is rebooted. In this case, the **Set** button changes to **Set and Reboot**.

1. Make the desired changes.
2. Click the **Set and Reboot** button. The VideoJet X10 is rebooted and the changed settings are activated.

**CAUTION!**

If you change the IP address, subnet mask or gateway address, the VideoJet X10 is only available under the new addresses after the reboot.

---

**Automatic IP assignment**

If a DHCP server is employed in the network for the dynamic assignment of IP addresses, you can activate acceptance of IP addresses automatically assigned to the VideoJet X10.

Certain applications (VIDOS, Bosch Video Management System, Archive Player, Configuration Manager) use the IP address for the unique assignment of the unit. If you use these applications, the DHCP server must support the fixed assignment between IP address and MAC address, and must be appropriately set up so that, once an IP address is assigned, it is retained each time the system is rebooted.

**IP address**

Enter the desired IP address for the VideoJet X10 in this field. The IP address must be valid for the network.

**Subnet mask**

Enter the appropriate subnet mask for the selected IP address here.

**Gateway address**

If you want the unit to establish a connection to a remote location in a different subnet, enter the IP address of the gateway here. Otherwise leave the box blank (**0.0.0.0**).

**DNS server address**

The unit can use a DNS server to trigger an address specified as a name. Enter the IP address of the DNS server here.

**Video transmission**

If the unit is operated behind a firewall, **TCP (HTTP port)** should be selected as the transfer protocol. For use in a local network, select **UDP**.

---

**CAUTION!**

Multicast operation is only possible with the UDP protocol. The TCP protocol does not support multicast connections.

The MTU value in UDP mode is 1,514 bytes.

---

**HTTP browser port**

Select a different HTTP browser port from the list if required. The default HTTP port is 80. If you want to allow only secure connections via HTTPS, you must deactivate the HTTP port. In this case, select **Off**.

**HTTPS browser port**

If you wish to allow browser access on the network via a secure connection, select an HTTPS browser port from the list if necessary. The default HTTPS port is 443. Select the **Off** option to deactivate HTTPS ports; only unsecured connections will now be possible.

The VideoJet X10 uses the TLS 1.0 encryption protocol. You may have to activate this protocol via your browser configuration. You must also activate the protocol for the Java applications (via the Java control panel in the Windows control panel).

**NOTICE!**

If you want to allow only secure connections with SSL encryption, you must select the **Off** option for each of the parameters **HTTP browser port**, **RCP+ port 1756** and **Telnet support**. This deactivates all unsecured connections. Connections will then only be possible via the HTTPS port.

You can activate and configure encryption of the media data (video, audio and metadata) on the **Encryption** page (see *Section 5.42 Advanced Mode: Encryption, page 84*).

**RCP+ port 1756**

To exchange connection data, you can activate the unsecured RCP+ port 1756. If you want connection data to be transmitted only when encrypted, select the **Off** option to deactivate the port.

**Telnet support**

If you want to allow only secure connections with encrypted data transmission, you must select the **Off** option to deactivate Telnet support. The unit will then no longer be accessible using the Telnet protocol.

**Interface mode ETH 1**

If necessary, select the Ethernet link type for interface **ETH 1**. Depending on the unit connected, it may be necessary to select a special operation type.

**Interface mode ETH 2**

If necessary, select the Ethernet link type for interface **ETH 2**. Depending on the unit connected, it may be necessary to select a special operation type.

**Network MSS (Byte)**

You can set the maximum segment size for the IP packet's user data. This gives you the option to adjust the size of the data packets to the network environment and to optimize data transmission. Please comply with the MTU value of 1,514 bytes in UDP mode.

**iSCSI MSS (Byte)**

You can specify a higher MSS value for a connection to the iSCSI system than for the other data traffic via the network. The potential value depends on the network structure. A higher value is only useful if the iSCSI system is located in the same subnet as the VideoJet X10.

**Enable DynDNS**

DynDNS.org is a DNS hosting service that stores IP addresses in a database ready for use. It allows you to select the VideoJet X10 via the Internet using a host name, without having to know the current IP address of the unit. You can enable this service here. To do this, you must have an account with DynDNS.org and you must have registered the required host name for the unit on that site.

**NOTICE!**

Information about the service, registration process and available host names can be found at DynDNS.org.

**Host name**

Enter the host name registered on DynDNS.org for the VideoJet X10 here.

**User name**

Enter the user name you registered at DynDNS.org here.

### Password

Enter the password you registered at DynDNS.org here.

### Force registration now

You can force the registration by transferring the IP address to the DynDNS server. Entries that change frequently are not provided in the Domain Name System. It is a good idea to force the registration when you are setting up the device for the first time. Only use this function when necessary and no more than once a day, to avoid the possibility of being blocked by the service provider. To transfer the IP address of the VideoJet X10, click the **Register** button.

### Status

The status of the DynDNS function is displayed here for information purposes. You cannot change any of these settings.

## 5.39 Advanced Mode: Advanced

**Advanced**

SNMP

SNMP

1. SNMP host address

2. SNMP host address

SNMP traps

802.1x

Authentication

Identity

Password

RTSP

RTSP port

The settings on this page are used to implement advanced settings for the network. Some changes only take effect after the unit is rebooted. In this case, the **Set** button changes to **Set and Reboot**.

1. Make the desired changes.
2. Click the **Set and Reboot** button. The VideoJet X10 is rebooted and the changed settings are activated.

### SNMP

The VideoJet X10 supports the SNMP V2 (Simple Network Management Protocol) for managing and monitoring network components, and can send SNMP messages (traps) to IP addresses. The unit supports SNMP MIB II in the unified code. If you wish to send SNMP traps, enter the IP addresses of one or two required target devices here.



If you select **On** for the **SNMP** parameter and do not enter an SNMP host address, the VideoJet X10 does not send them automatically, but only replies to SNMP requests. If you enter one or two SNMP host addresses, SNMP traps are sent automatically. Select **Off** to deactivate the SNMP function.

**1. SNMP host address / 2. SNMP host address**

If you wish to send SNMP traps automatically, enter the IP addresses of one or two required target units here.

**SNMP traps**

You can select which traps are to be sent.

1. Click **Select**. A list is opened.
2. Click the checkboxes to select the required traps. All the checked traps will be sent.
3. Click **Set** to accept the selection.

**Authentication**

If a RADIUS server is employed in the network for managing access rights, authentication must be activated here to allow communication with the unit. The RADIUS server must also contain the corresponding data.

To configure the unit, you must connect the VideoJet X10 directly to a computer using a network cable. This is because communication via the network is not enabled until the **Identity** and **Password** parameters have been set and successfully authenticated.

**Identity**

Enter the name that the RADIUS server is to use for identifying the VideoJet X10.


**Password**

Enter the password that is stored in the RADIUS server.

**RTSP port**

If necessary, select a different port for the exchange of the RTSP data from the list. The standard RTSP port is 554. Select **Off** to deactivate the RTSP function.

**5.40 Advanced Mode: Multicasting**

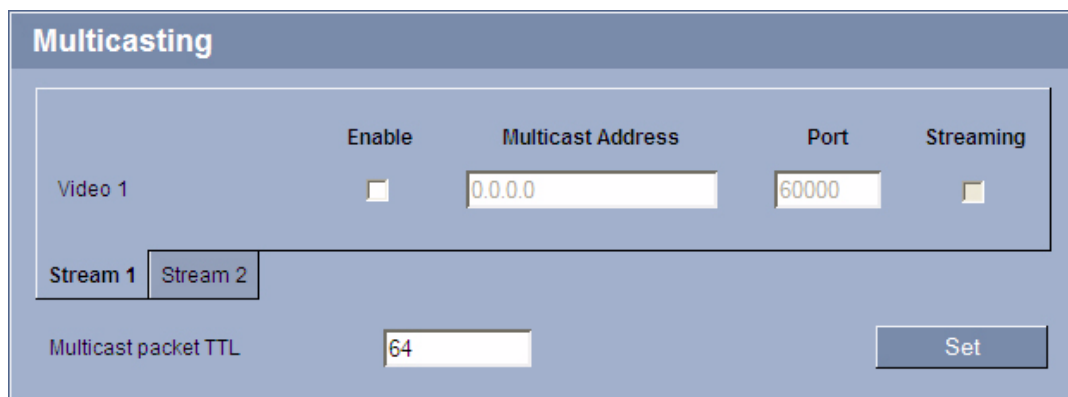

In addition to a 1:1 connection between an encoder and a single receiver (unicast), the VideoJet X10 can enable multiple receivers to receive the video signal from an encoder simultaneously. The device either duplicates the data stream itself and then distributes it to multiple receivers (Multi-unicast) or it sends a single data stream to the network, where the data stream is simultaneously distributed to multiple receivers in a defined group (Multicast).

You can enter a dedicated multicast address and port for each stream. You can switch between the streams by clicking the appropriate tabs.

**NOTICE!**

Multicast operation requires a multicast-enabled network that uses the UDP and the Internet Group Management IGMP protocols. Other group management protocols are not supported. The TCP protocol does not support multicast connections.

A special IP address (class D address) must be configured for multicast operation in a multicast-enabled network.

The network must support group IP addresses and the Internet Group Management Protocol (IGMP V2). The address range is from 225.0.0.0 to 239.255.255.255.

The multicast address can be the same for multiple streams. However, it will be necessary to use a different port in each case so that multiple data streams are not sent simultaneously using the same port and multicast address.

**NOTICE!**

The settings must be made individually for each stream.

**Enable**

To enable simultaneous data reception on several receivers you need to activate the multicast function. To do this, check the box. You can then enter the multicast address.

**Multicast Address**

Enter a valid multicast address for each stream to be operated in multicast mode (duplication of the data streams in the network).

With the setting **0.0.0.0** the encoder for the relevant stream operates in multi-unicast mode (copying of data streams in the unit). The VideoJet X10 supports multi-unicast connections for up to five simultaneously connected receivers.

**NOTICE!**

Duplication of data places a heavy demand on the unit and can lead to impairment of the image quality under certain circumstances.

**Port**

Assign a different port to each data stream if there are simultaneous data streams at the same multicast address.

Enter the port address of the required stream here.

**Streaming**

Click the checkbox to activate multicast streaming mode for the relevant stream. An enabled stream is indicated by a check mark.

For normal multicast operation, streaming is typically not required.

**Multicast packet TTL**

You can enter a value to specify how long the multicast data packets are active on the network. This value must be greater than one if multicast is to be run via a router.

## 5.41 Advanced Mode: JPEG Posting

You can save individual JPEG images on an FTP server at specific intervals. You can then retrieve these images at a later date to reconstruct alarm events if required.

### Image size

Select the resolution you wish the JPEG images to have:

- **Small**  
176 × 144/120 pixels (QCIF)
- **Medium**  
352 × 288/240 pixels (CIF)
- **Large**  
704 × 576/480 pixels (4CIF)

### File name

You can select how file names will be created for the individual images that are transmitted.

- **Overwrite**  
The same file name is always used and any existing file will be overwritten with the current file.
- **Increment**  
A number from 000 to 255 is added to the file name and automatically incremented by 1. When it reaches 255 it starts again from 000.
- **Date/time suffix**  
The date and time are automatically added to the file name. When setting this parameter, ensure that the unit's date and time are always correctly set. Example: the file snap011005\_114530.jpg was stored on October 1, 2005 at 11:45 and 30 seconds.

### Posting interval

Enter the interval in seconds at which the images will be sent to an FTP server. Enter zero if you do not want any images to be sent.

### FTP server IP address

Enter the IP address of the FTP server on which you wish to save the JPEG images.

### FTP server login

Enter your login name for the FTP server.

### FTP server password

Enter the password that gives you access to the FTP server.

**Path on FTP server**

Enter the exact path on which you wish to post the images on the FTP server.

**NOTICE!**

The creation of JPEG images has a lower priority than video encoding and image analysis. This can result in JPEG images being created with a delay of up to several seconds after the triggering event. If reliable, real-time recording of the alarm is required, ensure that the encoder has enough computing power available.

**5.42****Advanced Mode: Encryption**

A special license, with which you will receive a corresponding activation key, is required to encrypt user data. You can enter the activation key to release the function on the **Licenses** page (see *Section 5.44 Advanced Mode: Licenses, page 86*).

**5.43****Advanced Mode: Maintenance**

| Maintenance     |                                 |                                       |   |
|-----------------|---------------------------------|---------------------------------------|---|
| Firmware        | <input type="text"/>            | <input type="button" value="Browse"/> | <input type="button" value="Upload"/>   |
| Progress        | <input type="text" value="0%"/> |                                       |   |
| Configuration   | <input type="text"/>            | <input type="button" value="Browse"/> | <input type="button" value="Upload"/>   |
|                 |                                 |                                       | <input type="button" value="Download"/> |
| SSL certificate | <input type="text"/>            | <input type="button" value="Browse"/> | <input type="button" value="Upload"/>   |
| Maintenance log |                                 |                                       | <input type="button" value="Download"/> |

**Firmware**

The VideoJet X10 is designed in such a way that its functions and parameters can be updated with firmware. To do this, transfer the current firmware package to the unit via the selected network. It will then be automatically installed there.

In this way, a VideoJet X10 can be serviced and updated remotely without a technician having to change the installation on site.

You obtain the current firmware from your customer service or from the download area at [www.boschsecurity.com](http://www.boschsecurity.com).

**CAUTION!**

Before launching the firmware upload make sure that you have selected the correct upload file. Uploading the wrong files can result in the unit no longer being addressable, in which case you must replace the unit.

You should never interrupt the installation of firmware. An interruption can lead to the flash-EPROM being incorrectly programmed. This in turn can result in the unit no longer being addressable, in which case it will have to be replaced. Even changing to another page or closing the browser window leads to an interruption.

1. First store the firmware file on your hard drive.
2. Enter the full path of the firmware file in the field or click **Browse** to locate and select the file.

3. Next, click **Upload** to begin transferring the file to the unit. The progress bar allows you to monitor the transfer.

The new firmware is unpacked and the Flash EPROM is reprogrammed. The time remaining is shown by the message **going to reset Reconnecting in ... seconds**. The unit reboots automatically once the upload has successfully completed.

If the **Connect** LED lights up red, the upload has failed and must be repeated. To perform the upload you must now switch to a special page:

1. In the address bar of your browser, enter **/main.htm** after the IP address of the VideoJet X10 (for example **192.168.0.10/main.htm**).
2. Repeat the upload.

### Configuration

You can save configuration data for the VideoJet X10 on a computer and then load saved configuration data from a computer to the unit.

#### Upload

1. Enter the full path of the file to upload or click **Browse** to select the required file.
2. Make certain that the file to be loaded comes from the same unit type as the unit you want to configure.
3. Next, click **Upload** to begin transferring the file to the unit. The progress bar allows you to monitor the transfer.

Once the upload is complete, the new configuration is activated. The time remaining is shown by the message **going to reset Reconnecting in ... seconds**. The unit reboots automatically once the upload has successfully completed.

#### Download

1. Click the **Download** button. A dialog box opens.
2. Follow the on-screen instructions to save the current settings.

### SSL certificate

To be able to work with an SSL encrypted data connection, both ends of a connection must hold the relevant certificates. You can upload the SSL certificate, comprising one or multiple files, onto the VideoJet X10.

If you wish to upload multiple files onto the VideoJet X10, you must select them consecutively.



#### NOTICE!

The certificate must be created in the format \*.pem so that it can be accepted by the unit.

- 
1. Enter the full path of the file to upload or click **Browse** to select the required file.
  2. Next, click **Upload** to begin transferring the file to the unit.
  3. Once all files have been successfully uploaded, the unit must be rebooted. In the address bar of your browser, enter **/reset** after the IP address of the VideoJet X10 (for example **192.168.0.10/reset**).

The new SSL certificate is valid.

### Maintenance log

You can download an internal maintenance log from the unit to send it to Customer Service for support purposes. Click **Download** and select a storage location for the file.

## 5.44 Advanced Mode: Licenses

### Licenses

Installation code

Activation key

Installed licenses

You can enter the activation key to release additional functions or software modules.



### NOTICE!

The activation key cannot be deactivated again and is not transferable to other units.

## 5.45 Advanced Mode: System Overview

| System Overview         |  |
|-------------------------|--|
| Hardware version        | F0000541                               |
| Firmware version        | 27500400                               |
| Device type             | VideoJet X10                           |
| IP address              | 160.10.32.36                           |
| Audio option            | Yes                                    |
| Storage medium attached | No                                     |
| Initiator name          | iqn.2005-12.com.bosch:unit00075f71de64 |
| MAC address             | 00-07-5F-71-DE-64                      |
| Major version number    | 4.00                                   |
| Build number            | 27                                     |

The data on this page are for information purposes only and cannot be changed. Keep a record of this information in case technical assistance is required.



### NOTICE!

You can select all required text on this page with the mouse and copy it to the clipboard with the [Ctrl]+[C] key combination, for example if you want to send it via e-mail.

## 5.46 Function Test

The VideoJet X10 offers a variety of configuration options. You should therefore check that it is functioning correctly after installation and configuration.

The function test is the only way to ensure that the VideoJet X10 operates as expected in the event of an alarm.

Your check should include the following functions:

- Can the VideoJet X10 be called up remotely?
- Does the VideoJet X10 transmit all the required data?
- Does the VideoJet X10 respond to alarm events as required?
- Do the recordings occur as intended?
- Is it possible to control peripherals if necessary?





## 6 Operation

### 6.1 Operation with Microsoft Internet Explorer

A computer with Microsoft Internet Explorer (version 6.0 or higher) can receive live images from the VideoJet X10, control cameras or other peripherals and replay stored video sequences.

#### System Requirements

- Computer with Windows XP or Windows Vista operating system
- Network access (Intranet or Internet)
- Microsoft Internet Explorer (version 6.0 or higher)
- Screen resolution 1,024 × 768 pixels
- 16- or 32-bit color depth
- Installed Sun JVM
- For playing back recordings: connection to storage medium



---

#### NOTICE!

Also note the information in the **System Requirements** document on the product CD supplied. If necessary, you can install the required programs and controls from the product CD supplied (see *Section 3.1 Scope of Delivery, page 11*).

The Web browser must be configured to enable Cookies to be set from the IP address of the unit.

In Windows Vista, deactivate protected mode on the **Security** tab under **Internet Options**.

You can find notes on using Microsoft Internet Explorer in the online Help in Internet Explorer.

---

#### Installing MPEG ActiveX

Suitable MPEG ActiveX software must be installed on the computer to allow the live video images to be played back. If necessary, you can install the program from the product CD supplied.

1. Insert the product CD into the computer's CD-ROM drive. If the CD does not start automatically, open the root directory of the CD in Windows Explorer and double-click **MPEGAx.exe**.
2. Follow the on-screen instructions.

## Establishing the Connection

Before you can operate the VideoJet X10 within your network, it must have a valid IP address for your network and a compatible subnet mask.

The following default address is preset at the factory: **192.168.0.1**

1. Start the Web browser.
2. Enter the IP address of the VideoJet X10 as the URL. The connection is established and after a short time you will see the **LIVEPAGE** with the video image.



## 6.2 The LIVEPAGE

Once the connection is established, the Web browser displays the **LIVEPAGE**. It shows the live video image on the right of the browser window. Depending on the configuration, various text overlays may be visible on the live video image (see *Section 5.13 Advanced Mode: Display Stamping, page 40*).

Other information may be shown next to live video image on the **LIVEPAGE**. The display depends on the settings on the **LIVEPAGE Functions** page (see *Section 5.15 Advanced Mode: LIVEPAGE Functions, page 43*).

### Maximum Number of Connections

If you do not connect, the unit may have reached its maximum number of connections. Depending on the unit and network configuration, each VideoJet X10 can have up to 25 Web browser connections or up to 50 connections via VIDOS or Bosch Video Management System.

### Protected VideoJet X10

If the VideoJet X10 is password protected against unauthorized access, the Web browser displays a corresponding message and prompts you to enter the password when you attempt to access protected areas.



### NOTICE!

A VideoJet X10 offers the option to limit the extent of access using various authorization levels (see *Section 5.11 Advanced Mode: Password, page 38*).

---

1. Enter the user name and associated password in the corresponding text fields.
2. Click **OK**. If the password is entered correctly, the Web browser displays the page that was called up.

### Protected Network

If a RADIUS server is employed in the network for managing access rights (802.1x authentication), the VideoJet X10 must be configured accordingly, otherwise no communication is possible (see *Section Authentication, page 81*).

### Image Selection

You can view the image of the camera in different displays.

- ▶ Click one of the tabs **Stream 1**, **Stream 2** or **M-JPEG** below the video image to toggle between the different displays of the camera image.

### View Control

Control options for peripherals (for example a pan/tilt head or dome camera) depend on the type of unit installed and on the configuration of the VideoJet X10.

If a controllable unit is configured and connected to the VideoJet X10, the controls for the peripheral are displayed next to the video image.



1. To control a peripheral, click the appropriate controls.
2. Move the mouse cursor over the video image. Additional options for controlling peripherals are displayed with the mouse cursor.

### Digital I/O




The alarm icons **Input 1** to **Input 4** are for information purposes and indicate the status of an alarm input: When an alarm is triggered, the corresponding icon lights up blue. The unit's configuration determines whether the alarm is displayed, as well as additional details (see *Section 5.15 Advanced Mode: LIVEPAGE Functions, page 43*).

### Triggering Relay

You can switch connected units using the relays in the VideoJet X10 (for example lights or door openers).

- ▶ To activate this, click the icon for the corresponding relay next to the video image. The icon will be red when the relay is activated.

### System Log / Event Log

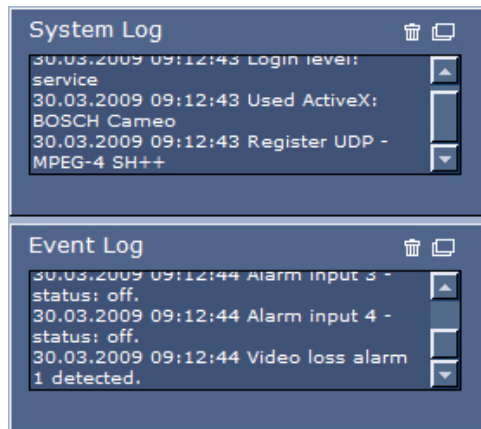

The **System Log** field contains information about the operating status of the VideoJet X10 and the connection. You can save these messages automatically in a file (see *Section 5.15 Advanced Mode: LIVEPAGE Functions, page 43*).

Events such as the triggering or end of alarms are shown in the **Event Log** field. You can save these messages automatically in a file (see *Section 5.15 Advanced Mode: LIVEPAGE Functions, page 43*).

1. If you want to delete the entries, click the delete icon in the top right-hand corner of the relevant field.
2. If you want to view a detailed log, click the icon in the top right-hand corner of the relevant field. A new window will open.

### Audio Function

Depending on the configuration, the VideoJet X10 can send and receive audio signals. All users who are connected by browsers receive the audio signals sent by the VideoJet X10. Audio signals can only be sent to the VideoJet X10 by the user who connects to the unit first.

1. On the **LIVEPAGE**, click anywhere next to the video image to remove the focus from the ActiveX.
2. Hold down the **F12** key to make a voice connection to the VideoJet X10. The browser's status bar displays the message **Send Audio ON**.
3. Release the **F12** key when you want to stop sending audio signals to the VideoJet X10. The status bar in Internet Explorer displays the message **Send Audio OFF**.



### NOTICE!

When the connection maintaining voice contact with the VideoJet X10 is broken, the next user to make a connection to the VideoJet X10 can send audio data to the VideoJet X10.

## 6.3 Saving Snapshots

You can save individual images from the video sequence currently shown on the **LIVEPAGE** in JPEG format on your computer's hard drive. The icon for recording single images is only visible if the unit is configured to enable this process (see *Section Allow snapshots, page 44*).

- ▶ Click the icon. The image is saved at a resolution of 704 × 576 pixels (4CIF). The storage location depends on the configuration of the VideoJet X10 (see *Section Path for JPEG and MPEG files, page 44*).



## 6.4 Recording Video Sequences

You can save sections of the video sequence currently shown on the **LIVEPAGE** on your computer's hard drive. The icon for recording video sequences is only visible if the unit is configured to enable this process (see *Section Allow local recording, page 44*).

1. Click the icon to start recording. The storage location depends on the configuration of the VideoJet X10 (see *Section Path for JPEG and MPEG files, page 44*). A red dot in the icon indicates that recording is in progress.



2. Click the icon again to stop recording.



### NOTICE!

You can play back saved video sequences using the Player from Bosch Security Systems, which can be installed from the product CD supplied (see *Section 3.1 Scope of Delivery, page 11*).

### Image Resolution

Sequences are saved at the resolution that has been preset in the configuration for the encoder (see *Section 5.19 Advanced Mode: Encoder Profile, page 47*).

## 6.5 Running Recording Program

The hard drive icon below the camera images on the **LIVEPAGE** changes during an automatic recording.




A moving graphic will appear to indicate a running recording. If no recording is taking place, a static icon is displayed.

## 6.6 The RECORDINGS Page

The **RECORDINGS** page for playing back recorded video sequences can be accessed from the **LIVEPAGE** and from the **SETTINGS** menu.

The **RECORDINGS** link is only visible if a storage medium has been selected (see *Section 5.21 Advanced Mode: Storage Management, page 51*).

- ▶ Click the **RECORDINGS** link in the navigation bar in the upper section of the window. The playback page appears.

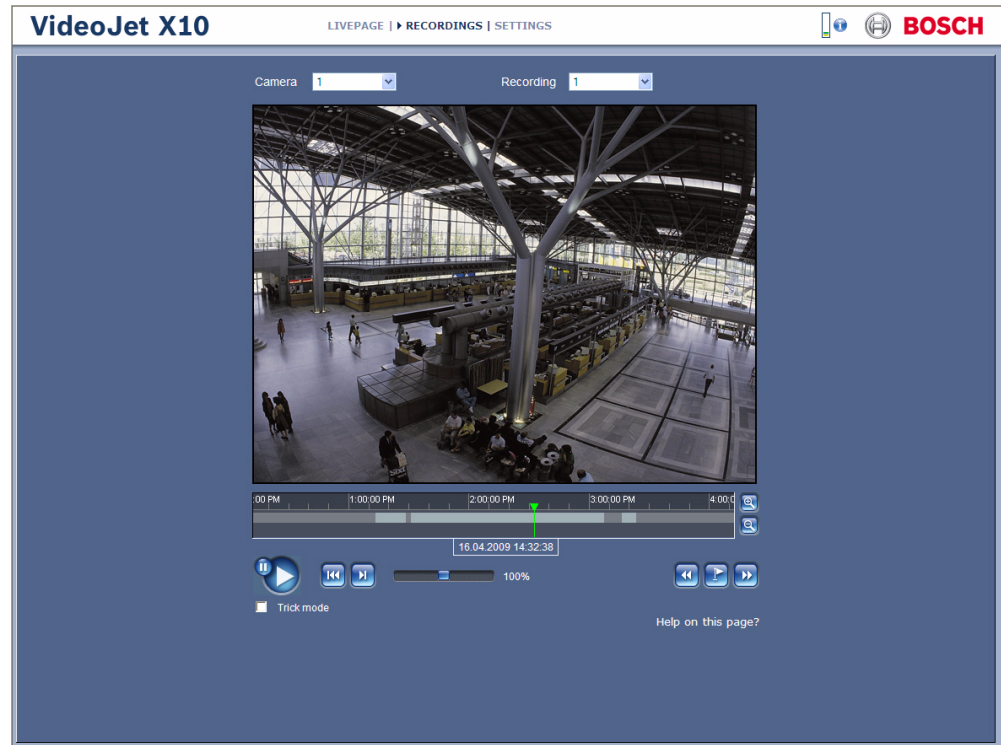


### Camera

Here you can select the camera from which you want to view the recordings. Playback of the recordings starts immediately in the video window.

### Recording

Here you can select the recording that you want to view. Playback of the recording starts immediately in the video window.

### Controlling a Playback

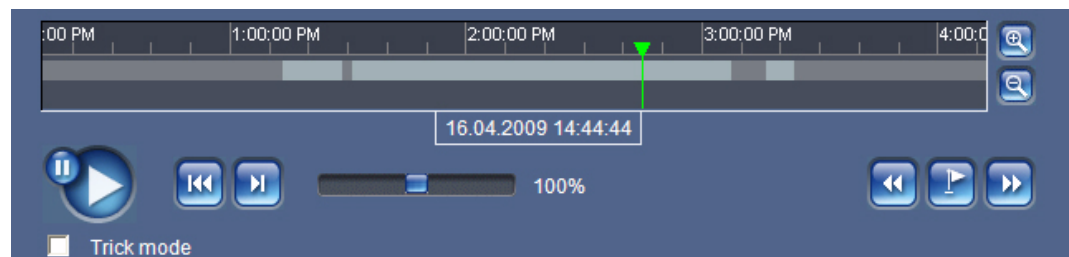

You will see a time bar below the video image for quick orientation. A green arrow above the bar indicates the position of the image currently being played back within the sequence.

The time bar offers various options for navigation.

Red bars indicate the points in time where alarms were triggered. Drag the green arrow to navigate to these points quickly.

1. You can change the time interval by clicking the zoom keys (magnifying glass icons). The display can span a range from two months to a few seconds.
2. Drag the green arrow to the point in time at which playback should begin. The date and time display below the bar provides orientation to the second.

### Buttons

You can control playback by means of the buttons below the video image. The buttons have the following functions:



Start or pause playback




Jump to the start of the active video sequence or to the previous sequence



Jump to the start of the next video sequence

### Slide Control

You can use the slide control to control playback speed.

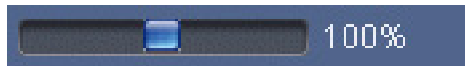

### Bookmarks

In addition, you can set markers in the sequences, so-called bookmarks, and jump directly to these. These bookmarks are indicated as small yellow arrows above the time interval. Use the bookmarks as follows:



Jump to the previous bookmark



Set bookmark



Jump to the following bookmark

- ▶ Right-click a bookmark to delete it.



### NOTICE!

Bookmarks are only valid while you are in the **RECORDINGS** page; they are not saved with the sequences. As soon as you leave the page all bookmarks are deleted.

### Trick Mode

If you are using a mouse with a scroll wheel, you can view recordings frame by frame in trick mode. To do this, place the mouse cursor in the timeline below the timescale and turn the scroll wheel. Playback is automatically stopped (paused) during scrolling. Trick mode requires



significantly higher memory capacity and computing power. For this reason, the number of cameras used in this mode can be restricted in the Configuration Manager program.

## 6.7 Installing the Player

You can play back saved video sequences using the Player from Bosch Security Systems, which can be installed from the product CD supplied (see *Section 3.1 Scope of Delivery, page 11*).



### NOTICE!

In order to play back saved sequences using the Player, suitable MPEG ActiveX software must be installed on the computer.

- 
1. Insert the CD into the computer's CD-ROM drive. If the CD does not start automatically, open the CD in Windows Explorer and double-click the **index.html** file to start the menu.
  2. From the list field at the top, select the language you require and click **Tools** in the menu.
  3. Click the **Archive Player** option. The installation will start. Follow the instructions in the installation program. The Archive Player will be installed at the same time as the Player.
  4. After successful installation, you will find two new icons on your desktop for the Player and the Archive Player.
  5. Start the Player by double-clicking the **Player** icon.

## 6.8 Hardware Connections Between Video Servers

A VideoJet X10 with a camera connected to it can be used as a sender and a compatible MPEG-4 hardware decoder (such as the VIP XD) with a connected monitor as a receiver using an Ethernet network connection. In this way it is possible to cover long distances without the need for major installation or cabling work.

**NOTICE!**

The sender and receiver must be located in the same subnet to establish a hardware connection.

---

**Installation**

Compatible video servers are designed to connect to one another automatically, provided they are correctly configured. They only need to be part of a closed network. Proceed as follows to install the units:

1. Connect the units to the closed network using Ethernet cables.
  2. Connect them to the power supply.
- 

**NOTICE!**

Make sure that the units are configured for the network environment and that the correct IP address for the remote location to be contacted in the event of an alarm is set on the **Alarm Connections** configuration page (see *Section 5.27 Advanced Mode: Alarm Connections*, page 59).

---

**Connecting**

There are three options for establishing a connection between a sender and a compatible receiver in a closed network:

- an alarm,
  - a terminal program, or
  - Internet Explorer.
- 

**NOTICE!**

Connecting with a Web browser is described in the manual of the relevant unit that is to be used as the receiver, for example VIP XD.

---

**Connecting on Alarm**

With the appropriate configuration, a connection between a sender and a receiver is made automatically when an alarm is triggered (see *Section 5.27 Advanced Mode: Alarm Connections*, page 59). After a short time the live video image from the sender appears on the connected monitor.

This option can also be used to connect a sender and a compatible receiver using a switch connected to the alarm input. You do not need a computer to make the connection in this case.

**Connecting with a Terminal Program**

Various requirements must be met in order to operate with a terminal program (see *Section 8.9 Communication with Terminal Program, page 110*).

1. Start the terminal program and enter the command **1** in the main menu to switch to the **IP** menu.
2. Enter the command **4** in the **IP** menu to change the remote IP address, then enter the IP address of the unit you wish to connect to.
3. Enter the command **0** to return to the main menu and then enter the command **4** to switch to the **Rcp+** menu.
4. In the **Rcp+** menu, enter the command **5** to activate the automatic connection.

**Closing the Connection with a Terminal Program**

1. Start the terminal program and enter the command **4** in the main menu to switch to the **Rcp+** menu.
2. In the **Rcp+** menu, enter the command **5** to deactivate the automatic connection.

## 6.9 Operation Using Software Decoders

The VideoJet X10 video server combines with VIDOS to provide a high-performance system solution.

VIDOS is a software package for operating, controlling and managing CCTV installations (such as surveillance systems) at remote locations. It runs under Microsoft Windows operating systems. It is primarily designed for decoding video, audio and control data received from a remote sender.

Many options are provided for operation and configuration when using a VideoJet X10 with VIDOS. Please refer to the software documentation for more details.

Another program that supports the VideoJet X10 is Bosch Video Management System. Bosch Video Management System is an IP video security solution that enables the seamless management of digital video, audio and data over any IP network. It was developed for use with Bosch CCTV products as one component of an extensive video security management system. It allows you to integrate your existing components into a simple-to-control system or into the entire Bosch range, benefiting from a complete security solution based on the latest technology and years of experience.

The VideoJet X10 video server is also designed for use with the DiBos 8 digital recorder. DiBos 8 records up to 32 video and audio streams and is available as IP software or hybrid DVR with additional analog camera and audio inputs. DiBos supports the most diverse functions on the VideoJet X10 video server, for example relay activation, remote control of peripherals and remote configuration. DiBos 8 can use the alarm inputs for event triggering and, on release of the MOTION+ motion detector, record the activated cells to enable intelligent motion search.

## 7 Maintenance and Upgrades

### 7.1 Testing the Network Connection

You can use the **ping** command to check the connection between two IP addresses. This allows you to test whether a unit in the network is active.

1. Open the DOS command prompt.
2. Type **ping** followed by the IP address of the unit.

If the unit is found, the response appears as **Reply from ...** followed by the number of bytes sent and the transmission time in milliseconds. If not, the unit cannot be accessed over the network. This might be because:

- The unit is not correctly connected to the network. Check the cable connections in this case.
- The unit is not correctly integrated into the network. Check the IP address, subnet mask and gateway address.

### 7.2 Unit Reset

You can use the Factory Reset button to restore the unit to its original settings. Any changes to the settings are overwritten by the factory defaults. A reset may be necessary, for example, if the unit has invalid settings that prevent it from functioning as desired.



#### CAUTION!

All configured settings will be discarded during a reset.

If necessary, back up the current configuration using the **Download** button on the **Maintenance** configuration page (see *Section 5.43 Advanced Mode: Maintenance, page 84*).

---



#### NOTICE!

After a reset, the unit can only be addressed via the factory default IP address. The IP address can be changed as described in the **Installation** chapter (see *Section 4.5 Setup Using the Configuration Manager, page 25*).

---

1. If necessary, back up the current configuration using the **Download** button on the **Maintenance** configuration page (see *Section 5.43 Advanced Mode: Maintenance, page 84*).
2. Using a pointed object, press the Factory Reset button located below the orange terminal block until the **Connect** LED flashes red (see *Section 3.4 Connections on the Front Panel, page 16*). All settings will revert to their defaults.
3. Change the IP address of the VideoJet X10 if necessary.
4. Configure the unit to meet your requirements.

## 7.3 Repairs



### **CAUTION!**


Never open the housing of the VideoJet X10.  
The unit does not contain any user-serviceable parts.

Ensure that all maintenance or repair work is carried out only by qualified personnel (electrical engineers or network technology specialists). In case of doubt, contact your dealer's technical service center.

## 7.4 Transfer and Disposal

The VideoJet X10 should only be passed on together with this installation and operating manual.

Your Bosch product is designed and manufactured with high-quality materials and components which can be recycled and reused.

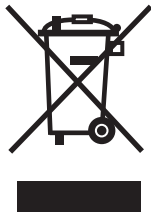

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

In the European Union, there are separate collection systems for used electrical and electronic products. Please dispose of this equipment at your local community waste collection/recycling center.

## 8 Appendix

### 8.1 Troubleshooting

If you are unable to resolve a malfunction, please contact your supplier or systems integrator, or go directly to Bosch Security Systems Customer Service.

You can view a range of information about your unit version on the **System Overview** page (see *Section 5.45 Advanced Mode: System Overview, page 86*). Make a note of this information before contacting Customer Service. You can download an internal maintenance log from the unit on the **Maintenance** page if you wish to send it to Customer Service by e-mail (see *Section Maintenance log, page 85*).

The following tables are intended to help you identify the causes of malfunctions and correct them where possible.

## 8.2 General Malfunctions

| Malfunction  | Possible causes   | Recommended solution  |
|--|---|---|
| No connection between the unit and terminal program. | Incorrect cable connections.                                      | Check all cables, plugs, contacts, terminals and connections.   |
|  | The computer's serial interface is not connected.                 | Check the other serial interface.   |
|  | Interface parameters do not match.                                | If necessary select a different interface and make sure that the computer's interface parameters match those of the unit. Try the following standard parameters: 19,200 baud, 8 data bits, no parity, 1 stop bit. Next, disconnect the unit from the power supply and reconnect it again after a few seconds. |
| No image transmission to remote station.             | Camera error.   | Connect local monitor to the camera and check the camera function.  |
|  | Faulty cable connections.   | Check all cables, plugs, contacts and connections.  |
| No connection established, no image transmission.    | The unit's configuration.   | Check all configuration parameters.   |
|  | Faulty installation.  | Check all cables, plugs, contacts and connections.  |
|  | Wrong IP address.   | Check the IP addresses (terminal program).  |
|  | Faulty data transmission within the LAN.                          | Check the data transmission with <b>ping</b> .  |
|  | The maximum number of connections has been reached.               | Wait until there is a free connection and then call the sender again.   |
| No audio transmission to remote station.             | Hardware fault.   | Check that all connected audio units are operating correctly.   |
|  | Faulty cable connections.   | Check all cables, plugs, contacts and connections.  |
|  | Incorrect configuration.  | Check audio parameters on the <b>Audio</b> configuration and <b>LIVEPAGE Functions</b> pages.   |
|  | The audio voice connection is already in use by another receiver. | Wait until the connection is free and then call the sender again.   |



| <b>Malfunction</b>  | <b>Possible causes</b>   | <b>Recommended solution</b>  |
|---|--|--|
| The unit does not report an alarm.                              | Alarm source is not selected.  | Select possible alarm sources on the <b>Alarm Inputs</b> configuration page.   |
|   | No alarm response specified.   | Specify the desired alarm response on the <b>Alarm Connections</b> configuration page, change the IP address if necessary. |
| Control of cameras or other units is not possible.              | The cable connection between the serial interface and the connected unit is not correct. | Check all cable connections and ensure all plugs are properly fitted.  |
|   | The interface parameters do not match those of the other unit connected.                 | Make sure that the settings of all units involved are compatible.  |
| The unit is not operational after a firmware upload.            | Power failure during programming by firmware file.                                       | Have the unit checked by Customer Service and replace if necessary.  |
|   | Incorrect firmware file.   | Enter the IP address of the unit followed by <b>/main.htm</b> in your Web browser and repeat the upload.                   |
| Placeholder with a red cross instead of the ActiveX components. | JVM not installed on your computer or not activated.                                     | Install Sun JVM from the product CD.   |
| Web browser contains empty fields.                              | Active proxy server in network.  | Create a rule in the local computer's proxy settings to exclude local IP addresses.  |

## 8.3 Malfunctions with iSCSI Connections

| Malfunction   | Possible causes  | Recommended solution  |
|---|--|---|
| After connecting to the iSCSI destination, no LUNs are displayed.           | Incorrect LUN mapping during iSCSI system configuration.                           | Check the iSCSI system configuration and reconnect.                             |
| After connecting to the iSCSI destination, "LUN FAIL" appears below a node. | The LUN list could not be read, as it was assigned to the wrong network interface. | Check the iSCSI system configuration and reconnect.                             |
| LUN mapping is not possible.  | Some iSCSI systems do not support the use of an initiator extension.               | Delete the initiator extension on the <b>Identification</b> configuration page. |

## 8.4 LEDs

The VideoJet X10 network video server has a number of LEDs on its front and rear panels that show the operating status and can give indications of possible malfunctions:

### Power On LED

|                    |                               |
|--------------------|-------------------------------|
| Does not light up: | VideoJet X10 is switched off. |
| Lights up green:   | VideoJet X10 is switched on.  |

### SFP LED

|                    |                         |
|--------------------|-------------------------|
| Does not light up: | No connection.          |
| Lights up yellow:  | Connection established. |
| Flashes yellow:    | Data being transmitted. |

### ETH 1 LED

|                    |  |
|--------------------|--|
| Does not light up: | No network connection.                   |
| Lights up yellow:  | Network connection established.          |
| Flashes yellow:    | Data being transmitted over the network. |

### ETH 2 LED

|                    |  |
|--------------------|--|
| Does not light up: | No network connection.                   |
| Lights up yellow:  | Network connection established.          |
| Flashes yellow:    | Data being transmitted over the network. |

### Connect LED


|                  |   |
|------------------|---|
| Lights up red:   | Startup in progress.  |
| Lights up green: | Startup complete, VideoJet X10 is operational.                        |
| Flashes green:   | Video connection established.   |
| Flashes red:     | VideoJet X10 is faulty, for example following failed firmware upload. |

### HDD LED

|                    |                       |
|--------------------|-----------------------|
| Does not light up: | No hard drive fitted. |
| Lights up orange:  | Hard drive fitted.    |
| Flashes orange:    | Hard drive activity.  |

## 8.5 Processor Load


If the VideoJet X10 is accessed via the Web browser, you will see the processor load indicator in the top right of the window next to the manufacturer's logo.

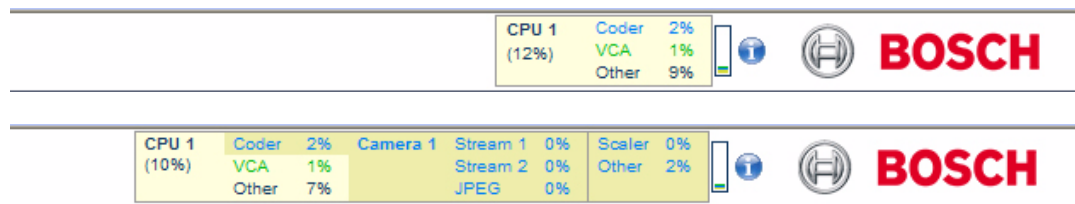

You can obtain additional information to help you when troubleshooting or fine tuning the unit. The values indicate the proportions of the individual functions on the encoder load, shown as percentages. The JPEG parameter relates to snapshots and M-JPEG. The scaler converts the input format 4CIF to the other formats configured.

1. Move the cursor over the graphic indicator. Some additional numerical values are also displayed.
2. Click the graphic indicator. Further details are displayed.

## 8.6 Network Connection

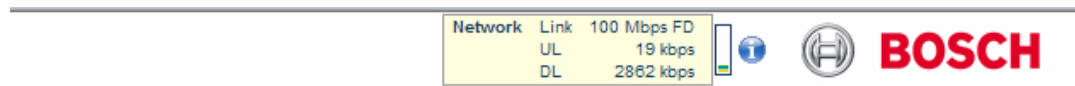

You can display information about the network connection. To do this, move the cursor over the **i** icon.

|      |  |
|------|--|
| Link | Ethernet link type                           |
| UL   | Uplink, speed of the outgoing data traffic   |
| DL   | Downlink, speed of the incoming data traffic |

## 8.7 Serial Interface

Options for using the serial interface include transferring transparent data, controlling connected units or operating the unit with a terminal program.

The serial interface supports the RS-232, RS-422 and RS-485 transmission standards. The mode used depends on the current configuration (see *Section 5.37 Advanced Mode: COM1, page 76*). Connection is via the terminal block.

## 8.8 Terminal Block

The terminal block has several contacts for:

- 4 alarm inputs
- 4 relay outputs
- Serial data transmission

### Pin Assignment

The pin assignment of the serial interface depends on the interface mode used (see *Section 5.37 Advanced Mode: COM1, page 76*).

| Contact | RS-232 mode         | RS-422 mode                | RS-485 mode |
|---------|---------------------|----------------------------|-------------|
| CTS     | CTS (clear to send) | RxD- (receive data minus)  | Data-       |
| TXD     | TxD (transmit data) | TxD- (transmit data minus) |             |
| RTS     | RTS (ready to send) | TxD+ (transmit data plus)  | Data+       |
| RXD     | RxD (receive data)  | RxD+ (receive data plus)   |             |
| GND     | GND (ground)        | –                          | –           |

| Contact | Function                  |
|---------|---------------------------|
| IN1     | Input alarm 1             |
| IN2     | Input alarm 2             |
| IN3     | Input alarm 3             |
| IN4     | Input alarm 4             |
| GND     | Ground                    |
| R1      | Relay output 1            |
| R2      | Relay output 2            |
| R3      | Relay output 3            |
| R4      | Relay output 4            |
| RM1     | LED remote indicator      |
| RM2     | LED remote indicator      |
| BP      | Backup power supply       |
| GND     | Ground                    |
| +       | 10 to 30 V (power supply) |
| –       | Ground                    |

Connect each alarm input to a ground contact (GND) when connecting alarm inputs.

For the RM1 and RM2 contact specifications, see *Section Remote Indication of the Connection Status, page 23*.

For the backup power supply specifications, see *Section Backup Power Supply, page 24*.

## 8.9 Communication with Terminal Program

### Data Terminal

If a VideoJet X10 cannot be found in the network or the connection to the network is interrupted, you can connect a data terminal to the VideoJet X10 for initial setup and setting of important parameters. The data terminal consists of a computer with a terminal program. You require a serial transmission cable with a 9-pin Sub-D plug to connect to the computer and open ends for connection to the terminal block of the VideoJet X10 (see *Section Pin Assignment, page 109*).

HyperTerminal, a communications accessory included with Microsoft Windows, can be used as the terminal program.



### NOTICE!

Information on installing and using HyperTerminal can be found in the manuals or in the online help for Microsoft Windows.

---

1. Disconnect the VideoJet X10 from the Ethernet network before working with the terminal program.
2. Connect the serial interface of the VideoJet X10 using any available serial interface on the computer.

### Configuring the Terminal

Before the terminal program can communicate with the VideoJet X10, the transmission parameters must be matched. Make the following settings for the terminal program:

- 19,200 bps
- 8 data bits
- No parity check
- 1 stop bit
- No protocol

### Command Inputs

After the connection has been established, you must log on to the VideoJet X10 to access the main menu. Other submenus and functions can be accessed using the on-screen commands.

1. If necessary, turn off the local echo so that entered values are not repeated on the display.
2. Enter one command at a time.
3. When you have entered a value, such as the IP address, check the characters you have entered before pressing Enter to transfer the values to the VideoJet X10.

### Assigning an IP Address

Before you can operate a VideoJet X10 in your network you must first assign it an IP address that is valid for your network.

The following default address is preset at the factory: **192.168.0.1**

1. Start a terminal program such as HyperTerminal.
2. Enter the user name **service**. The terminal program displays the main menu.
3. Enter command **1** to open the **IP** menu.

```

-----
| VideoJet-X10_20_40
-----
' 0' Exit menu IP      (* = reset after change necessary)
' 1' local IP        (*) 192.168.0.1
' 2' local subnet mask (*) 255.255.255.0
' 3' local gateway   (*) 0.0.0.0
' 4' remote IP       0.0.0.0
' 5' ntp server       0.0.0.0
' 6' ntp mode         1 (SNTP)
' 7' DHCP enabled    (*) NO
' 8' igmp version    (*) Auto
' 9' alarm IP ...
' a' discover ...
' b' iscsi ...
' c' http port        80
' d' https port       443
' e' ftp server IP    0.0.0.0
' f' syslog host IP  0.0.0.0
-----

```

4. Enter **1** again. The terminal program displays the current IP address and prompts you to enter a new IP address.
5. Enter the desired IP address and press Enter. The terminal program displays the new IP address.
6. Use the displayed commands for any additional settings you require.



#### NOTICE!

You must reboot to activate the new IP address, a new subnet mask or a gateway IP address.

#### Reboot

Briefly interrupt the power supply to the VideoJet X10 for a reboot (disconnect the power supply unit from the mains supply and switch on again after a few seconds).

#### Additional Parameters

You can use the terminal program to check other basic parameters and modify them where necessary. Use the on-screen commands in the various submenus to do this.

## 8.10 Copyrights

The firmware 4.0 uses the fonts "Adobe-Helvetica-Bold-R-Normal--24-240-75-75-P-138-ISO10646-1" and "Adobe-Helvetica-Bold-R-Normal--12-120-75-75-P-70-ISO10646-1" under the following copyright:

Copyright 1984-1989, 1994 Adobe Systems Incorporated.

Copyright 1988, 1994 Digital Equipment Corporation.

Permission to use, copy, modify, distribute and sell this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notices appear in all copies and that both those copyright notices and this permission notice appear in supporting documentation, and that the names of Adobe Systems and Digital Equipment Corporation not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.

This software is based in part on the work of the Independent JPEG Group.



## 9 Specifications

### 9.1 Unit

|                        |   |
|------------------------|---|
| Operating voltage      | 10 to 30 V DC,<br>power supply via external unit  |
| Power consumption      | Approx. 16 W with full equipment  |
| LAN interfaces         | 2 × Ethernet 10/100 Base-T, automatic adjustment,<br>half/full duplex, RJ45   |
| Data interfaces        | 1 × RS-232/RS-422/RS-485, bidirectional, push-in terminal<br>2 × USB 2.0, 2.5 W max. each   |
| SFP slot               | 1 × 1 Gbps, for mini-GBIC modules   |
| CF slot                | 1 × CompactFlash type I and II, for standard CF cards   |
| Alarm inputs           | 4 × push-in terminals (non-isolated closing contact),<br>maximum activation resistance 10 Ohm   |
| Relay outputs          | 4 × push-in terminal, 30 V <sub>p-p</sub> , 2 A (SELV), 8 contacts  |
| Video input            | 1 × BNC socket<br>0.7 to 1.2 V <sub>p-p</sub> , 75 Ohm, PAL/NTSC  |
| Audio input            | 1 × 3.5 mm stereo socket<br>5.5 V <sub>p-p</sub> max., impedance 9 kOhm typ.  |
| Audio output           | 1 × 3.5 mm stereo socket,<br>3.0 V <sub>p-p</sub> max. at impedance 10 kOhm typ.,<br>1.7 V <sub>p-p</sub> max. at impedance 16 Ohm typ.   |
| Displays               | 2 × LED (video link, hard drive) on front panel,<br>4 × LED (operating voltage, 2 × network connection,<br>SFP connection) on the rear panel  |
| Thermal value          | 55 BTU/h with full equipment  |
| Operating conditions   | Temperature: -30 to +60 °C / -22 to +140 °F<br>relative humidity: 0 to 95%, non-condensing<br>units with a hard drive: elevation 0 to 3,000 m / 1.86 miles  |
| Approvals              | IEC 60950; UL 60950; AS/NZS 3548 Class B; EN 50130-4;<br>EN 50121-4; EN 55103-1; EN 55022; EN 55024;<br>EN 60068-2-1 Ab; EN 60068-2-2 Bb; EN 60068-2-6 Fc;<br>EN 60068-2-14 Na; EN 60068-2-30 Db; EN 61000-3-2;<br>EN 61000-3-3; FCC 47 CFR Chapter 1 Part 15 |
| Dimensions (H × W × D) | 61 × 160 × 178 mm / 2.4 × 6.3 × 7.0 in,<br>including BNC connections  |
| Weight                 | Approx. 1.5 kg / 3.3 lb, including HDD  |

## 9.2 Protocols/Standards

|                              |  |
|------------------------------|--|
| Video standards              | PAL, NTSC  |
| Video coding protocols       | H.264 Baseline Profile, MPEG-4, M-JPEG, JPEG   |
| Video data rate              | 9.6 kbps to 6 Mbps   |
| Image resolutions (PAL/NTSC) | 704 × 576/480 pixels (4CIF/D1)<br>704 × 288/240 pixels (2CIF)<br>464 × 576/480 pixels (2/3 D1)<br>352 × 576/480 pixels (1/2 D1)<br>352 × 288/240 pixels (CIF)<br>176 × 144/120 pixels (QCIF) |
| Total delay                  | 120 ms (PAL/NTSC, MPEG-4,<br>no network delay)   |
| Image refresh rate           | 25/30 ips max.   |
| Network protocols            | RTP, Telnet, UDP, TCP, IP, HTTP, HTTPS, DHCP, IGMP V2,<br>IGMP V3, ICMP, RTSP, FTP, ARP, SNMP, SNMP (V1, MIB-II),<br>802.1x  |
| Audio coding protocol        | G.711, 300 Hz to 3.4 kHz   |
| Audio sampling rate          | 8 kHz  |
| Audio data rate              | 80 kbps  |

## 10 Glossary

### Symbols

---

10/100/1000 Base-T IEEE-802.3 specification for 10, 100 or 1000 Mbps Ethernet

---

802.1x The IEEE 802.1x standard provides a general method for authentication and authorization in IEEE-802 networks. Authentication is carried out via the authenticator, which checks the transmitted authentication information using an authentication server (*see* RADIUS server) and approves or denies access to the offered services (LAN, VLAN or WLAN) accordingly.

#### A

---

ARP Address Resolution Protocol: a protocol for mapping MAC and IP addresses

#### B

---

Baud Unit of measurement for the speed of data transmission

---

bps Bits per second, the actual data rate

---

BVIP Bosch Video over IP unit

#### C

---

CF CompactFlash; interface standard, for digital storage media amongst other things. Used in computers in the form of CF cards, digital cameras and Personal Digital Assistants (PDA).

---

CIF Common Intermediate Format, video format with 352 × 288/240 pixels

#### D

---

DHCP Dynamic Host Configuration Protocol: uses an appropriate server to enable dynamic assignment of an IP address and other configuration parameters to computers on a network (Internet or LAN).

---

DNS Domain Name System, mainly used for converting domain names to IP addresses

---

DynDNS DNS hosting service that works according to RFC 2845 and stores the IP addresses of its clients in a database, ready for use

#### F

---

FTP File Transfer Protocol

---

Full duplex Simultaneous data transmission in both directions (sending and receiving)

#### G

---

GBIC GigaBit Interface Converter; applied in network technology to render interfaces flexible, for converting an electrical interface into an optical interface, for example. This enables flexible operation of an interface as a Gigabit Ethernet via twisted-pair cables or fiber optic cables.

---

GOP Group of Pictures

---

## H

---

|       |   |
|-------|---|
| HTTP  | Hypertext Transfer Protocol: protocol for transmitting data over a network                                  |
| HTTPS | Hypertext Transfer Protocol Secure: encrypts and authenticates communication between Web server and browser |

---

## I

---

|                   |   |
|-------------------|---|
| ICMP              | Internet Control Message Protocol   |
| ID                | Identification: a machine readable character string   |
| IEEE              | Institute of Electrical and Electronics Engineers   |
| IGMP              | Internet Group Management Protocol  |
| Internet Protocol | The main protocol used on the Internet, normally in conjunction with the Transfer Control Protocol (TCP): TCP/IP                            |
| IP                | <i>See</i> Internet Protocol  |
| IP address        | A 4-byte number uniquely defining each unit on the Internet. It is usually written in dotted decimal notation, for example "209.130.2.193". |
| iSCSI             | Storage over IP process for storage networks; specifies how storage protocols are operated over IP  |
| ISDN              | Integrated Services Digital Network   |

---

## J

---

|      |   |
|------|---|
| JPEG | An encoding process for still images (Joint Photographic Experts Group) |
|------|---|

---

## K

---

|      |   |
|------|---|
| kbps | Kilobits per second, the actual data rate |
|------|---|

---

## L

---

|                    |   |
|--------------------|---|
| LAN                | <i>See</i> Local Area Network   |
| Local Area Network | A communications network serving users within a limited geographical area such as a building or university campus. It is controlled by a network operating system and uses a transfer protocol. |
| LUN                | Logical Unit Number; logical drive in iSCSI storage systems   |

---

## M

---

|        |  |
|--------|--|
| MAC    | Media Access Control   |
| MIB    | Management Information Base; a collection of information for remote servicing using the SNMP protocol  |
| MPEG-2 | Improved video/audio compression standard, compression on highest level allows images in studio quality; now established as broadcast standard |

---

---

|        |   |
|--------|---|
| MPEG-4 | A further development of MPEG-2 designed for transmitting audiovisual data at very low transfer rates (for example over the Internet) |
| MSS    | Maximum Segment Size; maximum byte figure for the user data in a data packet  |

---

## N

---

|          |   |
|----------|---|
| Net mask | A mask that explains which part of an IP address is the network address and which part is the host address. It is usually written in dotted decimal notation, for example "255.255.255.192".  |
| NTP      | Network Time Protocol; a standard for synchronizing computer system clocks via packet-based communication networks. NTP uses the connectionless network protocol UDP. This was developed specifically for enabling time to be reliably transmitted over networks with variable packet runtime (Ping). |

---

## O

---

|    |   |
|----|---|
| OF | Optical Fiber; now used predominantly as the transmission medium for line-borne telecommunication processes (glass fiber cable) |
|----|---|

---

## P

---

|            |                               |
|------------|-------------------------------|
| Parameters | Values used for configuration |
|------------|-------------------------------|

---

## Q

---

|      |   |
|------|---|
| QCIF | Quarter CIF, video format with 176 × 144/120 pixels |
|------|---|

---

## R

---

|                  |   |
|------------------|---|
| RADIUS server    | Remote Authentication Dial-In User Service: a client/server protocol for the authentication, authorization and accounting of users with dial-up connections on a computer network. RADIUS is the de-facto standard for central authentication of dial-up connections via Modem, ISDN, VPN, Wireless LAN (see 802.1x) and DSL. |
| RFC 868          | A protocol for synchronizing computer clocks over the Internet  |
| RS-232/-422/-485 | Standards for serial data transmission  |
| RTP              | Real-Time Transport Protocol; a transmission protocol for real-time video and audio   |
| RTSP             | Real-Time Streaming Protocol; network protocol for controlling the continuous transmission of audiovisual data (streams) or software over IP-based networks   |

---

## S

---

|      |  |
|------|--|
| SFP  | Small Form-factor Pluggable; small, standardized module for network connections, designed as a plug connector for high-speed network connections |
| SNIA | Storage Networking Industry Association; association of companies for defining the iSCSI standard  |
| SNMP | Simple Network Management Protocol; a protocol for network management, for managing and monitoring network components                            |

---

---

|             |   |
|-------------|---|
| SNTP        | Simple Network Time Protocol; a simplified version of NTP ( <i>see</i> NTP)             |
| SSL         | Secure Sockets Layer; an encryption protocol for data transmission in IP-based networks |
| Subnet mask | <i>See</i> Net mask   |

---

**T**

---

|        |   |
|--------|---|
| TCP    | Transmission Control Protocol   |
| Telnet | Login protocol with which users can access a remote computer (Host) on the Internet                           |
| TLS    | Transport Layer Security; TLS 1.0 and 1.1 are the standard advanced developments of SSL 3.0 ( <i>see</i> SSL) |
| TTL    | Time-To-Live; life cycle of a data packet in station transfers  |

---

**U**

---

|     |                          |
|-----|--------------------------|
| UDP | User Datagram Protocol   |
| URL | Uniform Resource Locator |
| UTP | Unshielded Twisted Pair  |

---

**W**

---

|                   |   |
|-------------------|---|
| WAN               | <i>See</i> Wide Area Network  |
| Wide Area Network | A long distance link used to extend or connect remotely located local area networks |

---

# 11

## Index

### A

- Activating the recording 58
- Activation key 86
- Alarm 17, 41, 92
- Alarm e-mail 71
- Alarm input 22
- Alarm inputs 74
- Alarm message 41
- Alarm script 69
- Alarm sensors 55
- Audio connections 16, 20
- Audio input 16
- Audio output 16
- Audio settings 35, 50
- Audio stream on alarm 61
- Audio transmission 35, 43, 51
- Auto-connect 61

### B

- Basic mode 29
- Baud rate 76
- Bookmarks 96
- Browser window 91

### C

- Camera 76
- Camera name 31, 37
- Camera selection 91
- Cameras 20
- Car battery 24
- CF card 17, 21
- Changes 30
- Changes in light level 64
- Checking network 101
- Closing contact 22
- COM1 76
- CompactFlash 17, 21
- Configuration 27, 85
- Configuration download 85
- Configuration mode 29
- Connect on alarm 59
- Connecting 27, 98
- Contrast 46
- Control 76
- Control functions 92
- Control signals 43
- Controlling a playback 95
- Conventions 7

### D

- Danger 9
- Data bits 76
- Data interface 22
- Data terminal 110
- Date 39
- Date format 39
- Daylight saving time 39
- Default 49, 55, 62, 63
- Default profile 49
- Deleting recordings 53
- Device ID 37
- Device name 31, 37

- DHCP server 33
- Display stamping 40
- Dome camera 22
- Dual Streaming 13, 47
- DynDNS 79

### E

- Echo 110
- Electromagnetic compatibility 8
- E-mail 71
- Encoder load 108
- Encoding 13
- Encryption protocol 78
- EPROM 84
- Establishing the connection 28, 90
- Event log 44, 93

### F

- False alarms 64
- Firewall 60, 78
- Firmware upload 84
- Formatting 53
- Front panel connections 16
- FTP server 83
- Function test 87

### G

- Gateway 33, 78
- GBIC module 17
- General password 60

### H

- Holidays 58, 68
- HTTP port 78
- HTTPS port 78

### I

- Identification 8, 31, 37
- IEEE 802.1x 81
- IGMP 82
- Image quality 82
- Image resolution 94
- Image selection 91
- Initiator name 38
- Installation 9
- Installation conditions 19
- Installation location 19
- Interface 108
- Interface mode 76
- Internal clock 39
- IP address 33, 78, 111
- iSCSI settings 52

### J

- JPEG image size 83
- JPEG posting 83
- JPEG posting interval 83

### L

- Language 42
- Licenses 86
- Live video images 27, 89
- Livepage 43
- Low Voltage Directive 8
- Low-pass filter 46

**M**

Main functions 15  
 Maintenance 9  
 Manufacturer logo 41  
 Media-replay 95  
 Milliseconds 41  
 Motion detector 62  
 Motion detector defaults 62, 63  
 Motion detector object size 65  
 Motion detector sensitivity 65  
 MPEG ActiveX 27, 89, 97  
 MTU value 78, 79  
 Multicast address 82  
 Multicast connection 78, 82  
 Multicast function 13  
 Multicasting 81  
 Multi-unicast 81

**N**

Navigation 30  
 Network 20, 33, 77, 80  
 Network connection 17, 25, 108  
 Number of connections 28, 91

**O**

OF 21  
 Operation 9, 89  
 Overview of functions 13

**P**

Parameters 26, 111  
 Parity check 76  
 Password 29, 31, 32, 38, 91  
 Peripheral device control 92  
 Picture settings 46  
 Pin assignment 109  
 Playback 95  
 Playback button 96  
 Player 97  
 Port 78, 82  
 Post-alarm profile 55  
 Post-alarm time 55  
 Power off 25  
 Power on 25  
 Power supply 9, 17, 25  
 Power switch 25  
 Pre-alarm time 55  
 Processor load 108  
 Processor load indicator 108  
 Product name 41  
 Profile configuration 48  
 Profiles 34, 47  
 Protocol 76

**R**

RADIUS 81  
 Rear panel connections 17  
 Reboot 26, 111  
 Receiver 13  
 Receiver password 60  
 Recording media 52  
 Recording profiles 54  
 Recording program 94  
 Recording scheduler 57

Recording status 58  
 Recording video sequences 94  
 Reflections of light 64  
 Regulations 7  
 Relay 17, 23  
 Relay output 74  
 Relay outputs 23  
 Remote control 14  
 Remote indication 23  
 Remote LED 23  
 Repair 9, 102  
 Reset 17, 101  
 Router 82

**S**

Safety 9  
 Saturation 46  
 Saving event log 44  
 Saving system log 44  
 Scaler 108  
 Scope of delivery 11  
 Screen resolution 12, 27, 89  
 Select Area 66  
 Select area 65, 66  
 Selecting a profile 47  
 Sensor fields 65, 66  
 Serial interface 17  
 Serial number 8  
 Serial port function 76  
 SFP 17, 21  
 Signal source 22  
 SMS 72  
 Snapshots 14, 94  
 SNMP 80  
 SNTP server 33, 40  
 Software decoder 100  
 Source type 45  
 SSL certificate 85  
 SSL encryption 61  
 Standard recording profile values 55  
 Stop bits 76  
 Storage media 52  
 Storage medium 36, 51  
 Streaming 82  
 Subnet mask 33, 78  
 Summer time 39  
 Symbols 7  
 Synchronize 32, 39  
 System log 44, 45, 93  
 System requirements 12, 27, 89

**T**

Tamper detection 65  
 Target data rate 49  
 TCP 60, 78  
 Terminal 76  
 Termination 45  
 Test 87  
 Time 24, 32, 39, 40  
 Time server 32, 40  
 Time server IP address 33, 40  
 Time server protocol 32, 40  
 Time signal 32, 40



Time zone 39  
TLS 78  
Transmission parameters 110  
Transmission protocol 60, 78  
Transmission rate 76  
Transmission standards 22, 108  
Transparent 76  
Traps 81  
Trick mode 96  
Trigger 22  
Trigger relay 75  
TTL 82

**U**

UDP 60, 78  
Unicast 81  
Unit date 39  
Unit identification 31, 37  
Unit name 31, 37  
Unit reset 101  
Unit time 32, 39  
URL 28, 90  
USB interface 16  
User name 31, 38

**V**

Value 46  
VCR 45  
Video content analysis 62  
Video input 45  
Video sensor 62  
VRM 52

**W**

Watermarking 41





**Bosch Sicherheitssysteme GmbH**

Robert-Koch-Straße 100

85521 Ottobrunn

Germany

Telefon 089 6290-0

Fax 089 6290-1020

**[www.boschsecurity.com](http://www.boschsecurity.com)**

© Bosch Sicherheitssysteme GmbH, 2009