

Panasonic

Flat-Bed Multi-Function Laser Fax

Operating Instructions

Model No. **KX-FLB756AL**



Please read these operating instructions before using the unit and save for future reference.

This model is designed to be used in Australia and New Zealand.

**TO USE IN NEW ZEALAND,
CHANGE THE LOCATION SETTING**
(feature #74 on page 66).

Thank you for purchasing a Panasonic facsimile.

Things you should keep a record of

Attach your sales receipt here.

For your future reference

Date of purchase _____	Serial number _____ (found on the rear of the unit)
Dealer's name and address _____	
Dealer's telephone number _____	

This model is designed to be used in Australia and New Zealand according to the location setting feature.

The default setting is Australia. To use in New Zealand, change the setting (feature #74 on page 66).

Caution:

- Do not rub or use an eraser on the printed side of recording paper, as the print may smear.

Warning:

- If any other device is connected on the same line, this unit may disturb the network condition of the device.

Note:

- A suffix in the model number is omitted in these instructions.

Trademarks:

- Microsoft, Windows and Windows NT are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Pentium is a registered trademark or trademark of Intel Corporation in the United States and/or other countries.
- All other trademarks identified herein are the property of their respective owners.

Copyright:

- This manual is copyrighted by Panasonic Communications Co., Ltd. (PCC) and its licensee. Under the copyright laws, this manual may not be reproduced in any form, in whole or part, without the prior written consent of PCC and its licensee.

© Panasonic Communications Co., Ltd. 2003

For Australian users

Warning:

- Please ensure that a separate telephone, not dependent on local power, is available for emergency use.
- This equipment will be inoperable when mains power fails.
- When a failure occurs which results in the internal parts becoming accessible, disconnect the power supply cord immediately and return this unit to an authorised service centre.
- Disconnect the telephone connection before disconnecting power connection prior to relocating the equipment, and reconnect the power first.
- To minimize the possibility of lightning damage, when you know that a thunderstorm is coming, we recommend that you:
 - A. Unplug the telephone line cord from the phone jack.
 - B. Unplug the power supply cord from the AC power outlet.
- No "000" or other calls can be made from this device during a mains power failure.
- The earcap on the handset is magnetised and may retain metallic objects.

For New Zealand users

Warning:

- WHEN A FAILURE OCCURS WHICH RESULTS IN THE INTERNAL PARTS BECOMING ACCESSIBLE, DISCONNECT THE POWER SUPPLY CORD IMMEDIATELY AND RETURN THIS UNIT TO AN AUTHORISED SERVICE CENTRE.
- DISCONNECT THE TELECOM CONNECTION BEFORE DISCONNECTING THE POWER CONNECTION PRIOR TO RELOCATING THE EQUIPMENT, AND RECONNECT THE POWER FIRST.
- NO "111" OR OTHER CALLS CAN BE MADE FROM THIS DEVICE DURING A MAINS POWER FAILURE.

IMPORTANT NOTICE

Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.

Notice:

- The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
- This equipment shall not be set to make automatic calls to the Telecom "111" Emergency Service.
- This equipment should not be used under any circumstances which may constitute a nuisance to other Telecom customers.
- Not all telephones will respond to incoming ringing when connected to the extension socket.

Important information (for Australian users)

Instructions to customer

Installation

Attached to this apparatus is an approval label. This label is evidence that it is a "Permitted Attachment" which has been authorised to be connected to your telephone service.

Conditions relating to connection and operation of this Permitted Attachment are contained in Telecommunications General By-Law 220 (5).

You are authorised to install this Permitted Attachment yourself by plugging it into the line socket of any regular telephone. You may connect it in place of your existing telephone or to any spare telephone socket installed in your premises.

To disconnect your existing telephone you must first remove its plug from the line socket. You can then insert the plug of your Permitted Attachment into the socket and use your equipment.

If the plug of your existing telephone cannot be readily removed, you will have to remove the screw securing it. To do this proceed as follows:

1. Loosen screw "A" sufficiently to remove the socket cover. (See Fig. 1.)
2. Remove screw "B" and withdraw the plug. (See Fig. 2.)
3. Replace screw "B". (See Fig. 3.) Ensure that it screws completely into the socket recess. (If the screw is too long, increase the hole depth or replace the screw with one 5 mm shorter.)
4. Replace socket cover and tighten screw "A". (See Fig. 4.)

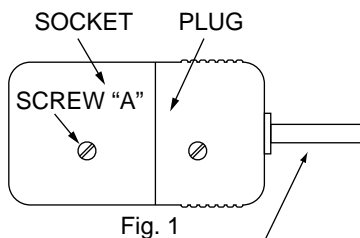


Fig. 1

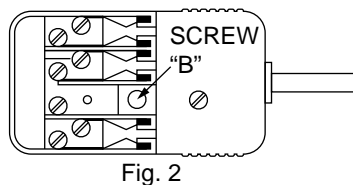


Fig. 2

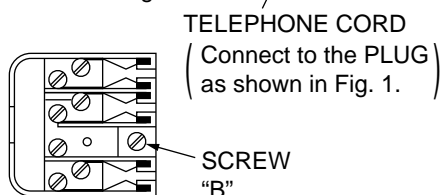


Fig. 3

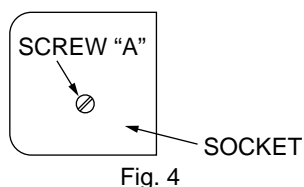


Fig. 4

If you are satisfied with the operation of your telephone service after plugging in your Permitted Attachment, your installation is completed.

You will be unable to connect this Permitted Attachment if your telephone service consists only of a wall phone or an old style telephone which is not connected by means of a modern plug and socket. In such cases a new socket will need to be installed.

Should the Permitted Attachment not operate when plugged into a socket, it is either faulty or unsuitable for operation with your telephone service. It should be returned to the store where purchased.

Service difficulties

If at any time a fault occurs on your telephone service carry out the following checks before you call for service:

- Disconnect the Permitted Attachment and try using the service with the normal telephone.
- If the telephone service then operates satisfactorily, the fault is in your Permitted Attachment. Leave the Permitted Attachment disconnected and report the fault to its supplier or agent to arrange for repair.
- If when using the telephone the service is still faulty, report the fault to "Service Difficulties and Faults" for attention.

You are required to keep this Permitted Attachment in good working order while it is connected to your telephone service. Its construction or internal circuit must not be modified in any way without permission.

Important safety instructions

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from power outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near liquid—for example, near a bath tub, washbowl, sink, etc. Damp basements should also be avoided. The unit should be kept away from heat sources such as heaters, kitchen stoves, etc. It also should not be placed in rooms where the temperature is less than 5°C or greater than 35°C.
5. Place the unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. For safety purposes this unit is equipped with a grounded plug. If you do not have this type of outlet, please have one installed. Do not defeat this safety feature by tampering with the plug.
9. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
10. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
11. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
12. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorised service centre when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
13. Unplug this unit from the wall outlet and refer servicing to an authorised service centre when the following conditions occur:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorised service centre.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
14. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
15. Do not use this unit to report a gas leak, when in the vicinity of the leak.

**SAVE THESE
INSTRUCTIONS**

Safety instructions

CAUTION:

Installation

- After moving the unit from cold areas to warmer areas, let the unit adjust to the warmer temperature and do not connect the unit for about 30 minutes. If the unit is connected too soon after a sudden climate change, condensation may form inside the unit causing malfunction.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

WARNING:

- To prevent the risk of fire or electrical shock, do not expose this product to rain or any type of moisture.


OTHER INFORMATION:

- Keep the unit away from electrical noise generating devices, such as fluorescent lamps and motors.
- The unit should be kept free from dust, high temperature and vibration.
- The unit should not be exposed to direct sunlight.
- Do not place heavy objects on top of this unit.
- Do not touch the plug with wet hands.
- Wipe the outer surface of the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder.

CAUTION:

Laser radiation

- The printer of this unit utilises a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

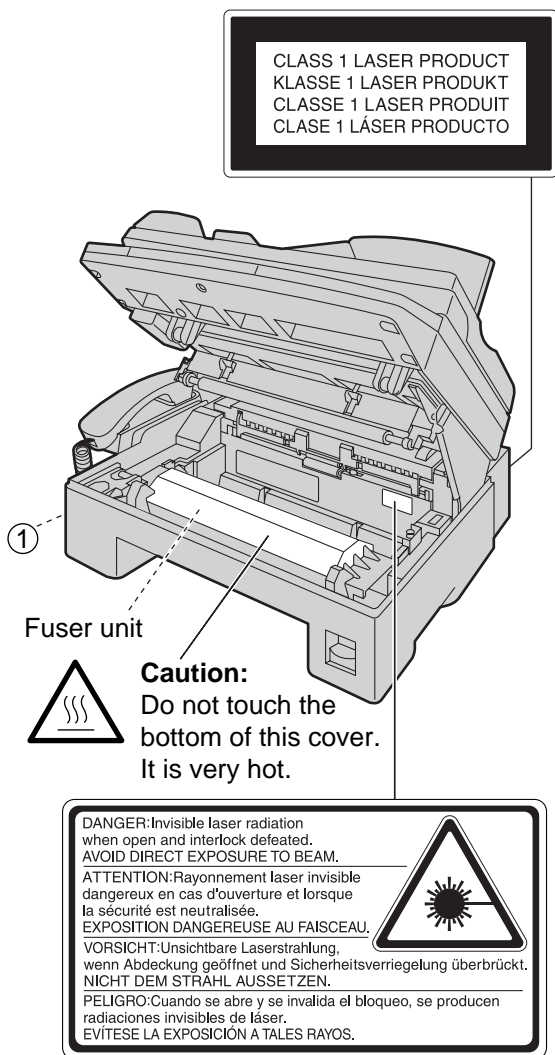

Fuser unit

- The fuser unit is inside of the unit and gets hot. Do not touch it when removing the jammed paper or cleaning the lower glass.

Toner cartridge

- Be careful of the following when you handle the toner cartridge:
 - Do not leave the toner cartridge out of the protection bag for a long time. It will decrease the toner life.


- If you ingest any toner, drink several glasses of water to dilute your stomach contents, and seek immediate medical treatment.
- If any toner comes into contact with your eyes, flush them thoroughly with water, and seek medical treatment.
- If any toner comes into contact with your skin, wash the area thoroughly with soap and water.
- If you inhale any toner, move to an area with fresh air and consult local medical personnel.

Drum unit

- Read the instructions on pages 16 and 17 before you begin installation of the drum unit. After you have read them, open the drum unit protection bag. The drum unit contains a photosensitive drum. Exposing it to light may damage the drum. Once you have opened the protection bag:
 - Do not expose the drum unit to light for more than 5 minutes.
 - Do not touch or scratch the green drum surface.
 - Do not place the drum unit near dust or dirt, or in a high humidity area.
 - Do not expose the drum unit to direct sunlight.

Static electricity

- To prevent static electricity damage to the interface connectors (parallel and USB), ADF jack or other electrical components inside the unit, touch a grounded metal surface, such as the metal part under the parallel interface connector before touching the components.

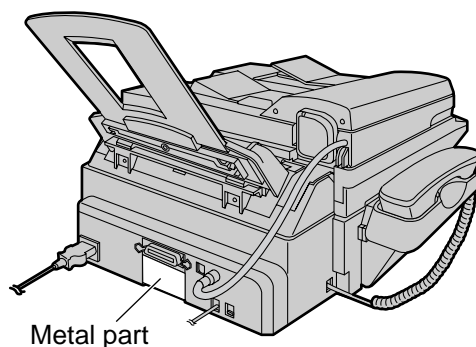


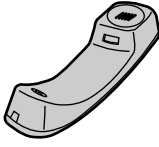


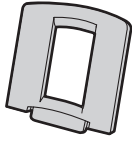

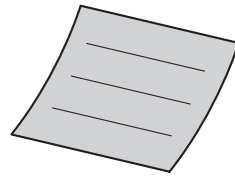

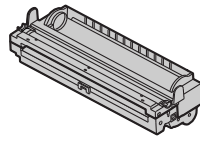
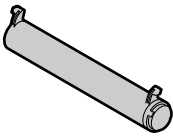


Safety instructions

FOR BEST PERFORMANCE:

- In the printing process, heat is used to fuse toner onto the page. As a result, it is normal for the machine to produce an odour during and shortly after printing. Be sure to use this unit in an area with proper ventilation.
- To extend the life of the drum unit, the unit should never be turned OFF immediately after printing. Leave the power turned ON for a minimum of 30 minutes after printing.
- Store unused paper in the original packaging, in a cool and dry place. Not doing so may affect print quality.
- Do not cover slots or openings on the unit. Inspect the air circulation vents regularly and remove any dust build-up with a vacuum cleaner (①).
- When replacing the toner cartridge or drum unit, do not allow dust, water, or liquids to come in contact with the drum. This may affect print quality.

Included accessories

<p>Power cord1</p> 	<p>Telephone line cord1 (for Australian users)</p> 	<p>Telephone line cord1 (for New Zealand users)</p> 
<p>Handset1</p> 	<p>Handset cord1</p> 	<p>Paper stacker1</p> 
<p>Paper tray1</p> 	<p>Operating instructions1</p> 	<p>Quick start sheet1</p> 
<p>CD-ROM1</p> 	<p>Drum unit1</p> 	
<p>Toner cartridge1 (complementary starter toner cartridge)</p>  <p>This cartridge can print approx. 800 sheets of A4 size paper with a 5% image area. Refer to image area on page 83. Please purchase a Panasonic replacement toner cartridge Model No. KX-FA76A for continuous use of your unit.</p>		

- If any items are missing or damaged, check with the place of purchase.
- Save the original carton and packing materials for future shipping and transportation of the unit.

Accessory information

Model No.	Item	Usage	Specifications
KX-FA76A	Toner cartridge	For replacement, see page 74.	See page 83.
KX-FA78A	Drum unit	For replacement, see page 74.	See page 83.

Table of Contents

Initial Preparation

Accessories	Included accessories	9
	Accessory information	9
Help Button	Help function	12
Finding the Controls	Overview	13
	Location	14
Setup	Connecting the document cover.	15
	Unlocking the shipping lock	15
	Toner cartridge and drum unit	16
	Paper stacker and paper tray	18
	Recording paper	19
	Connections	20
	Date and time, your logo and fax number	21
Volume	Adjusting volume	25

Telephone

Automatic Dialling	Storing names and telephone numbers into one-touch dial	26
	Storing names and telephone numbers into navigator directory	27
	Editing a stored entry.	28
	Erasing a stored entry	28
	Making a phone call using one-touch dial and navigator directory	29
Caller ID	Caller ID service from your phone company	30
	Viewing and calling back using caller information	31
	Erasing caller information	32
	Storing caller information into one-touch dial and navigator directory	33

Fax

Sending Faxes	Sending a fax manually.	34
	Documents you can send	36
	Sending a fax using one-touch dial and navigator directory	37
	Broadcast transmission.	38
Receiving Faxes	Setting the unit to receive faxes	42
	TEL mode (answering all calls manually).	44
	FAX ONLY mode (all calls are received as faxes)	45
	Using the unit with an answering machine	46
	Extension telephone	48
Distinctive Ring	Using with the ring detection feature	48

Copy

Copying	Making a copy	49
----------------	-------------------------	----

Multi-Function Station Software

Setup (PC)	Connecting to a computer	51
	Installing Multi-Function Station software	52
	Activating Multi-Function Station software	53
Printing (PC)	Using the fax machine as a printer	54
Scanning (PC)	Using the fax machine as a scanner	57
Remote Control (PC)	Operating the fax machine from your computer	58
PC Fax	Fax sending/receiving using Multi-Function Station software	59

Programmable Features

Features Summary	Programming	61
	Basic features	62
	Advanced features	64

Help

Error Messages	Reports	67
	Display	68
Operations	When a function does not work, check here	70
	If a power failure occurs	73
Replacement	Replacing the toner cartridge and the drum unit	74
Jams	Recording paper jam	76
	Document jams - sending	78
Cleaning	White plate and glasses	78
	Document feeder rollers	80

General Information

Printed Reports	Reference lists and reports	81
Specifications	Technical data about this product	82
Index	Program index	84
	Index	85

Help Button

Help function

You can print a quick reference for assistance as follows.

1 Press **HELP**.

Display:

PRESS NAVI. [◀ ▶] & SET

2 Press **◀** or **▶** until the desired item is displayed.

1. How to set the date, time, your logo and fax number.

QUICK SET UP PRESS SET

2. How to program the features.

FEATURE LIST PRESS SET

3. How to store names in the directory and how to dial them.

DIRECTORY PRESS SET

4. Help with problems receiving faxes.

FAX RECEIVING PRESS SET

5. How to use the copier function.

COPIER PRESS SET

6. List of available reports.


REPORTS PRESS SET

7. How to use the Caller ID service.

CALLER ID PRESS SET


3 Press **SET**.

PRINTING

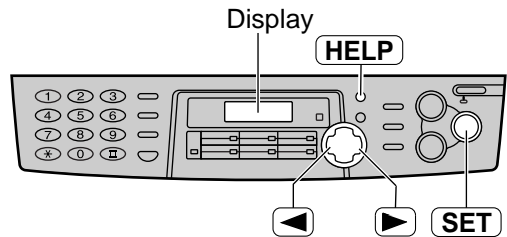


Overview

Front view

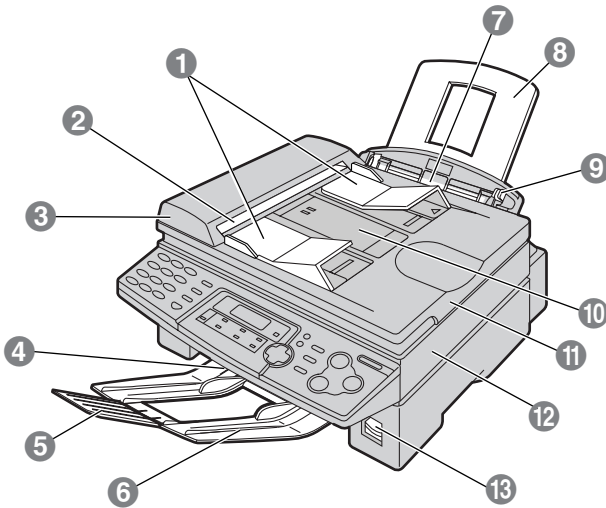

- ① Document guides
- ② Document exit
- ③ ADF (Auto Document Feeder) cover
- ④ Recording paper exit
- ⑤ Paper stacker extender
- ⑥ Paper stacker
The paper stacker may not be shown in all illustrations.
- ⑦ Recording paper entrance
- ⑧ Paper tray
- ⑨ Recording paper guides
- ⑩ Document entrance
- ⑪ Document cover
- ⑫ Printer cover
- ⑬ Printer cover open button


Rear view

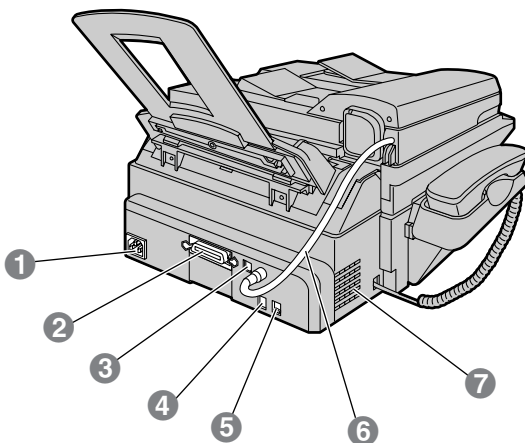

- ① Power inlet
- ② Parallel interface connector
- ③ USB interface connector
- ④ Telephone line jack
- ⑤ External telephone jack
- ⑥ ADF (Auto Document Feeder) cable
- ⑦ Speaker

Finding the Controls

Location

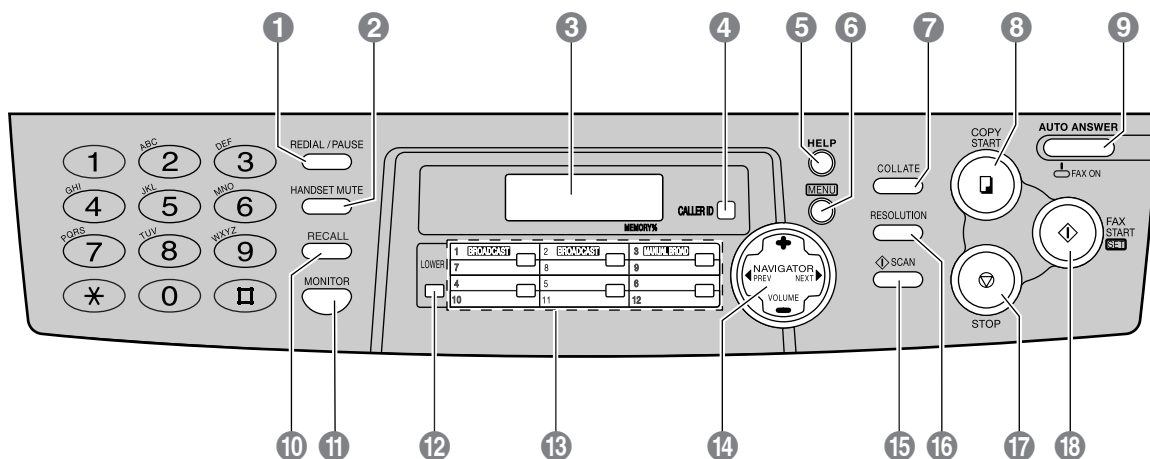

1 REDIAL/PAUSE

- To redial the last number dialed.
- To insert a pause during dialling.

2 HANDSET MUTE

- To mute your voice to the other party during a conversation. Press this button again to resume the conversation.

3 Display

4 CALLER ID

- To use caller ID service (p. 31, 33).

5 HELP

- To print a quick reference (p. 12).

6 MENU

- To initiate or exit programming.

7 COLLATE

- To make a collated copy (p. 50).

8 COPY START

- To initiate copying (p. 49).

9 AUTO ANSWER

- To turn on/off the auto answer setting (p. 42, 43).

10 RECALL

- To access special telephone services such as call waiting or for transferring extension calls.

11 MONITOR

- To initiate dialling.

12 LOWER

- To select stations 7–12 for one-touch dial (p. 26, 29, 37).

13 One-touch keys

- To use one-touch dial (p. 26, 29, 37).
- To transmit to multiple entries (p. 38, 41).

14 NAVIGATOR, VOLUME

- To adjust volume (p. 25).
- To search for a stored name (p. 29, 37).
- To select the features or feature settings during programming (p. 61).
- To navigate to the next operation.

15 SCAN

- To scan the document into memory (p. 34, 35, 50).
- To use the fax machine as a scanner when connecting to a computer (p. 57).

16 RESOLUTION

- To select a resolution (p. 34, 49).

17 STOP


- To stop an operation or cancel programming.

18 FAX START, SET


- To initiate fax transmission or reception.
- To store a setting during programming.

Connecting the document cover

- 1 Gently insert the two tabs on the document cover into the slots on the unit (1), then close the document cover (2).

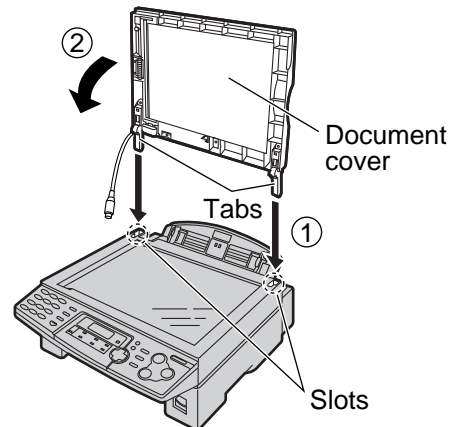


- 2 Connect the ADF cable to the jack on the back of the unit.
 - The arrow (⇨) on the ADF cable must be facing down.

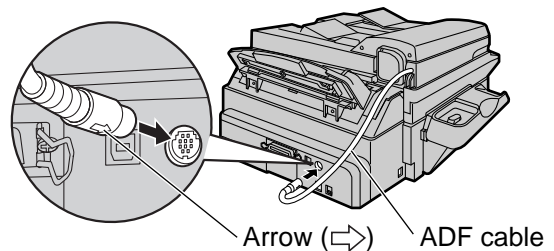


Unlocking the shipping lock

The shipping lock is used to avoid damaging the scanner when it is being transported. Before using the unit, unlock the shipping lock.

- 1 Press down the printer cover open button then open the printer cover.

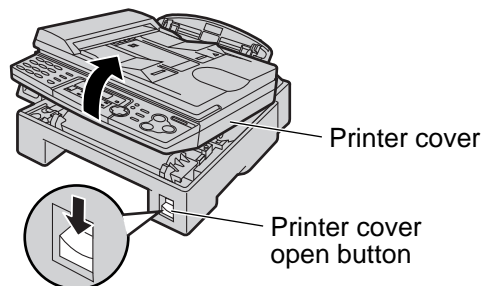


- 2 Slide down the shipping lock.
 - The label for unlocking the shipping lock is attached to the unit. Remove and read it.

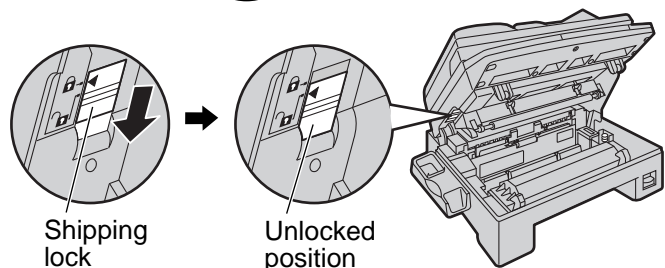

- 3 Close the printer cover by pushing down on both sides until locked.

Caution:

- Whenever transporting the unit, be sure to slide up the shipping lock to lock it.

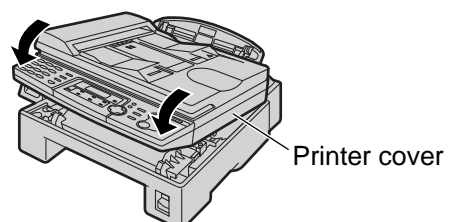


Setup

Toner cartridge and drum unit


Caution:

- Read the instructions below before you begin installation. After you have read them, open the drum unit protection bag. The drum unit contains a photosensitive drum. Exposing it to light may damage the drum. Once you have opened the protection bag:
 - Do not expose the drum unit to light for more than 5 minutes.
 - Do not touch or scratch the green drum surface.
 - Do not place the drum unit near dust or dirt, or in a high humidity area.
 - Do not expose the drum unit to direct sunlight.
- Do not leave the toner cartridge out of the protection bag for a long time. It will decrease the toner life.


- 1** Before opening the protection bag of the new toner cartridge, shake it vertically more than 5 times.

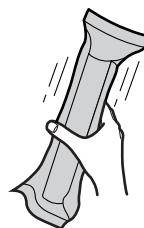


- 2** Remove the toner cartridge and drum unit from the protection bags. Peel off the seal from the toner cartridge (①). Remove the protection bar from the drum unit (②).

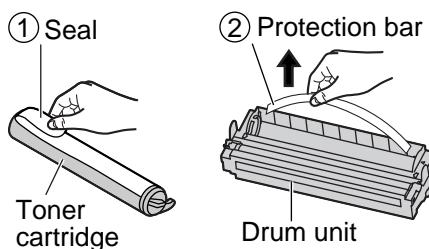


- 3** With "Panasonic" face up on the toner cartridge, match the red arrows on the cartridge and the drum unit.

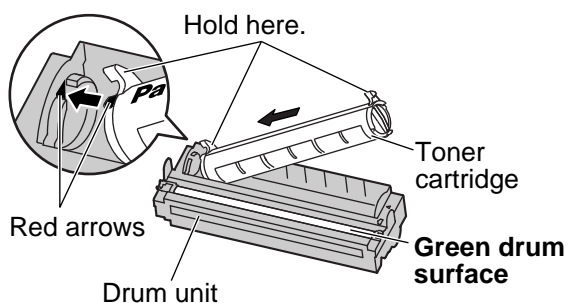


- 4** Slide the tab on the toner cartridge into the slot of the drum unit.

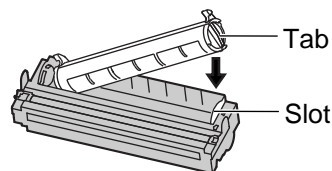


- 5** Firmly press down on the right side of the toner cartridge to snap into position.

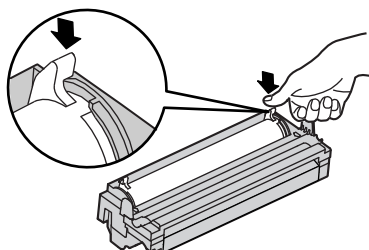


- 6** Turn the two levers on the toner cartridge with firm pressure.

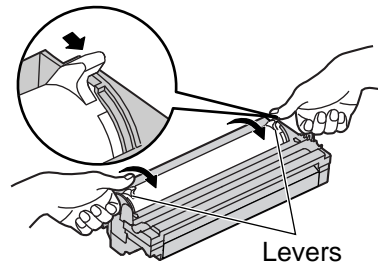


- 7** The toner cartridge is installed correctly when the triangles match.

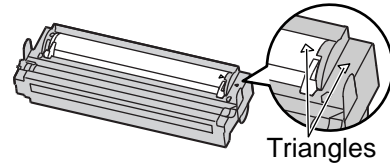


- 8** Press down the printer cover open button then open the printer cover.

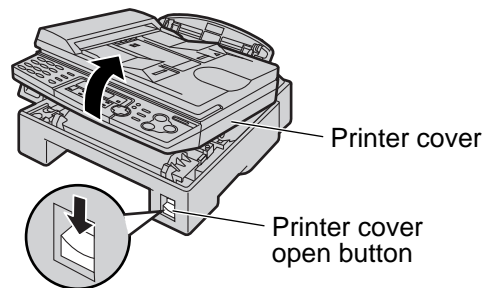


- 9** Install the drum and toner unit by holding the tabs.
● If the lower glass is dirty, clean it with a soft and dry cloth.

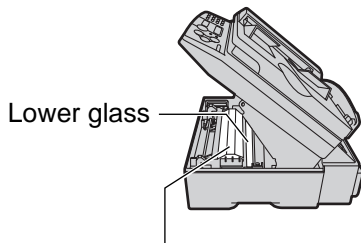

Caution: Do not touch the bottom of this cover when cleaning the lower glass. It is very hot.

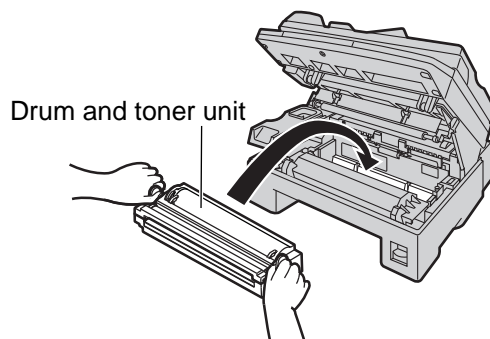

- 10** Close the printer cover by pushing down on both sides until locked.

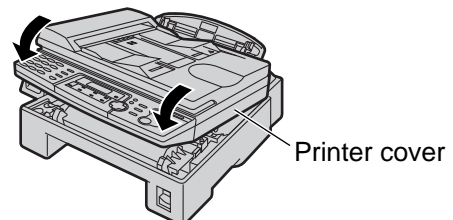

Toner save feature

- If you want to save on toner consumption, set the toner save setting to on (feature #79 on page 66). The toner cartridge will last approx. 40% longer. This feature may lower the print quality.


Setup

Paper stacker and paper tray

Paper stacker


Line up the slots in the paper stacker with the pegs on the bottom of the unit, then slide until locked. Open the paper stacker extender when using legal size paper.

- The paper stacker can hold up to approx. 100 sheets of printed paper. Remove the printed paper before the paper stacker becomes full.

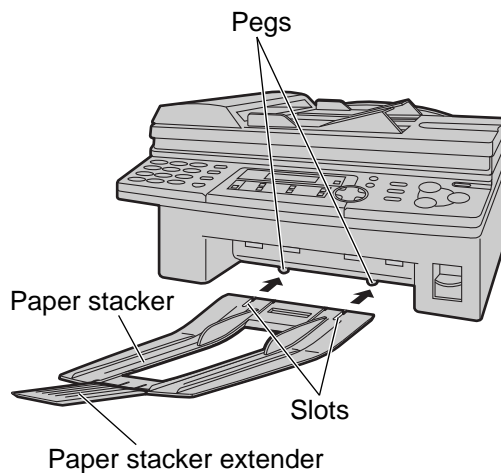

Paper tray

Insert the paper tray into the slot on the back of the unit.

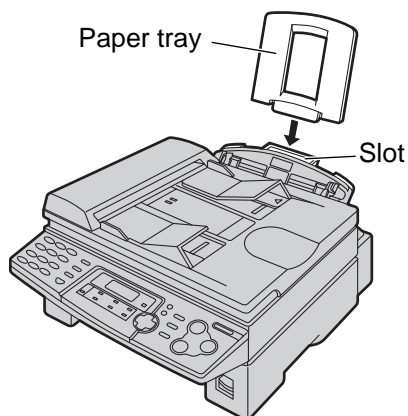

Note for installation:

- Do not place the unit in an area where the paper tray may be obstructed (i.e. by a wall etc.).
- Recording paper will be ejected from the front of the unit. Do not place anything in front of the unit.


Recording paper

A4, letter or legal size recording paper can be used for fax messages. The unit can hold up to 150 sheets of 60–75 g/m² paper or 120 sheets of 90 g/m² paper. See the note for paper specifications on page 83.

- The unit is set for A4 size paper by default. If you want to use letter or legal size paper, change the setting (feature #16 on page 63).



- 1** Pinch the right side of the recording paper guides, then slide it open to its full width.

Right side of the recording paper guides

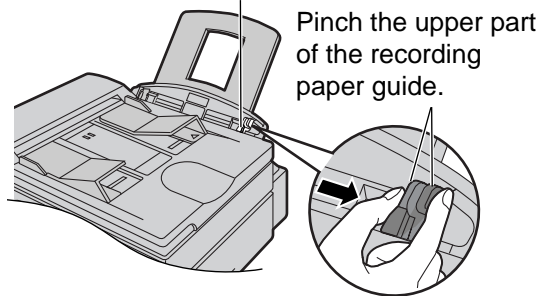

- 2** Fan the stack of paper to prevent a paper jam.


- 3** Insert the paper into the recording paper entrance.
 - The paper should not be over the tab.
 - If the paper is not inserted correctly, readjust the paper, or the paper may jam.

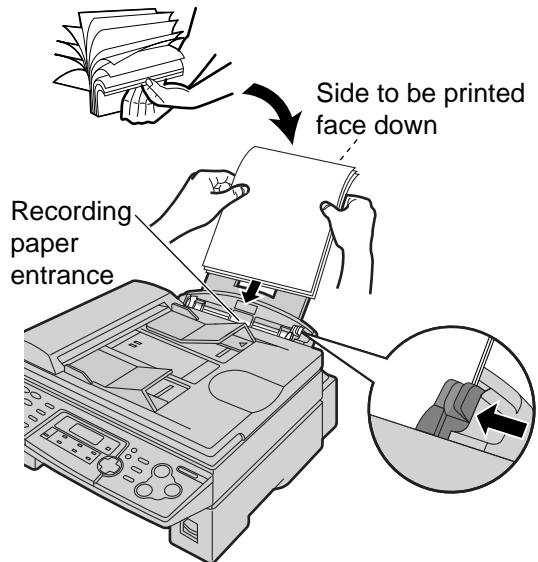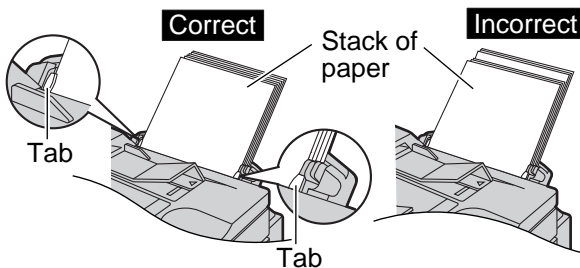

- 4** Adjust the width of the guides to the size of the recording paper by sliding the right side of the guides.


Adding paper

1. Remove all of the paper.
2. Add paper to the stack of paper you removed and straighten.
3. Follow steps 1 to 4 above.

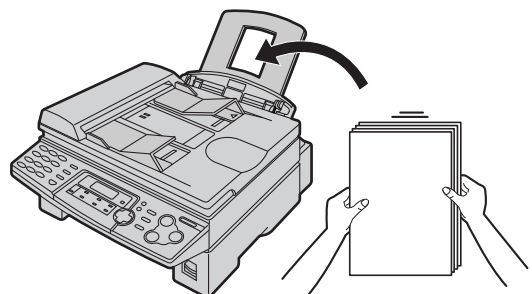

Connections

- 1 Connect the handset cord.
 - The jack on the longer, uncoiled end of the handset cord should be connected to the unit.
- 2 Connect the telephone line cord.
- 3 Connect the power cord.
 - When the power is turned on for the first time, the unit will print some basic information.

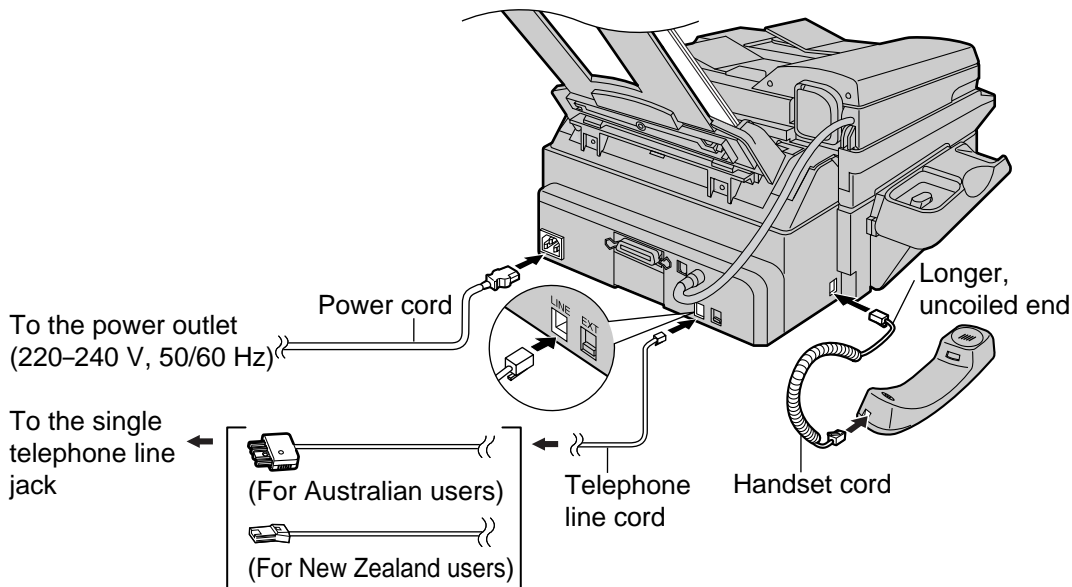


This model is designed to be used in Australia and New Zealand. **TO USE IN NEW ZEALAND, CHANGE THE LOCATION SETTING** (feature #74 on page 66).

Caution:

- When you operate this product, the power outlet should be near the product and easily accessible.
- Use the telephone line cord included in this unit.
- Do not extend the telephone line cord.

Note:

- You can connect an answering machine or extension telephone to this unit (p. 46–48).
- When the power is turned on and the display shows the following, unlock the shipping lock (p. 15).

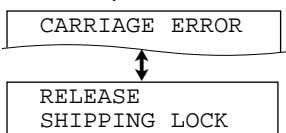


To use the fax machine with a computer on the same line

- We recommend you use separate wall jacks for the fax machine and the computer.
- Set the fax machine to TEL mode (p. 44).
- The device which has the shortest ring setting will answer the call first.
- If the computer provides a port for a telephone line, connect the fax machine to this port on the computer.

Date and time, your logo and fax number

You should program the date and time, your logo and facsimile telephone number. This information will be printed on each page transmitted from your unit.

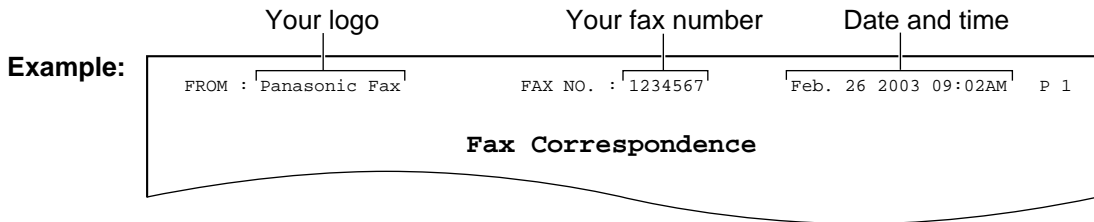

Setting the date and time

1 Press **MENU**.

Display: SYSTEM SET UP
PRESS NAVI. [◀ ▶]

2 Press **◀** or **▶** until the following is displayed.

SET DATE & TIME
PRESS SET

3 Press **SET**.

Cursor
Example: M: 01 / D: 01 / Y: 03
TIME: 12:00AM

4 Enter the correct month/day/year by selecting 2 digits for each, using the dial keypad.

Example: 10 August, 2003

Press **0 8 1 0 0 3**.

M: 08 / D: 10 / Y: 03
TIME: 12:00AM

5 Enter the correct hour/minute by selecting 2 digits for each, using the dial keypad.

Press ***** to select "AM" or "PM".

Example: 10:15PM

1. Press **1 0 1 5**.


M: 08 / D: 10 / Y: 03
TIME: 10:15AM

2. Press ***** until "PM" is displayed.

M: 08 / D: 10 / Y: 03
TIME: 10:15PM

6 Press **SET**.
• The next feature will be displayed.

7 Press **MENU**.

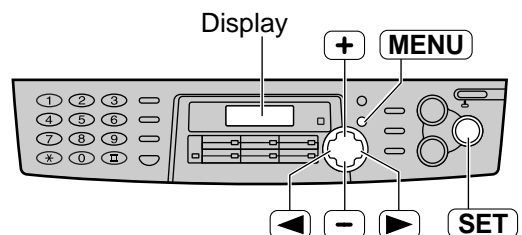

Note:

- You can enter the number by pressing **+** or **-** in steps 4 and 5. In this case, press **▶** to move the cursor.
- The accuracy of the clock is approximately ± 60 seconds a month.

To correct a mistake

- Press **◀** or **▶** to move the cursor to the incorrect number, and make the correction.

Setup

Setting your logo

The logo can be your company, division or name.

1 Press **MENU**.

Display: SYSTEM SET UP
PRESS NAVI. [◀ ▶]

2 Press **◀** or **▶** until the following is displayed.

YOUR LOGO
PRESS SET

3 Press **SET**.

LOGO=

4 Enter your logo, up to 30 characters, using the dial keypad. See page 23 for details.

Example: "Bill"

1. Press **2** 2 times.

Cursor
LOGO=B

2. Press **4** 6 times.

LOGO=Bi

3. Press **5** 6 times.

LOGO=Bi1

4. Press **▶** to move the cursor to the next space and press **5** 6 times.


LOGO=Bi11

5 Press **SET**.
• The next feature will be displayed.

6 Press **MENU**.

Note:

- You can enter your logo by pressing **+** or **-** in step 4. In this case, press **▶** to move the cursor (see page 23 for details).

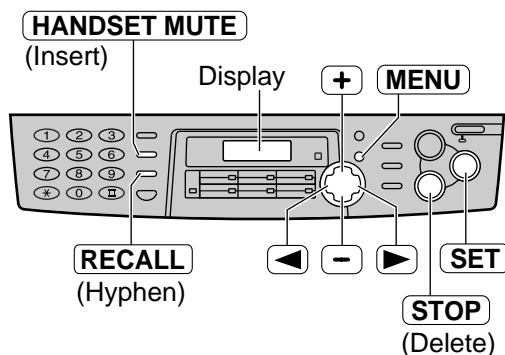

To change capital or lower-case letters

Pressing the **▣** key will change to capital or lower-case alternatively.

1. Press **2** 2 times.

LOGO=B

2. Press **4** 3 times.

LOGO=Bi

3. Press **▣**.

LOGO=Bi

4. Press **5** 3 times.

LOGO=Bi1

To correct a mistake

- Press **◀** or **▶** to move the cursor to the incorrect character, and make the correction.

To delete a character

- Move the cursor to the character you want to delete and press **STOP**.

To insert a character

1. Press **◀** or **▶** to move the cursor to the position to the right of where you want to insert the character.
2. Press **HANDSET MUTE** to insert a space and enter the character.

To select characters with the dial keypad


Pressing the dial keys will select a character as shown below.

Keys	Characters
1	1 [] { } + - / = , . _ ` : ; ?
2	A B C a b c 2
3	D E F d e f 3
4	G H I g h i 4
5	J K L j k l 5
6	M N O m n o 6
7	P Q R S p q r s 7
8	T U V t u v 8
9	W X Y Z w x y z 9
0	0 () < > ! " # \$ % & ¥ * @ ^ ' →
⇄	To change capital or lower-case letter.
RECALL	Hyphen button (To insert a hyphen.)
HANDSET MUTE	Insert button (To insert one character or one space.)
STOP	Delete button (To delete a character.)
▶	▶ key (To move the cursor to the right.) To enter another character using the same number key, move the cursor to the next space.
◀	◀ key (To move the cursor to the left.)


To select characters using **+** or **-**

Instead of pressing the dial keys, you can select characters using **+** or **-**.

1. Press **+** or **-** until the desired character is displayed.
2. Press **▶** to move the cursor to the next space.
 - The character displayed in step 1 is inserted.
3. Return to step 1 to enter the next character.

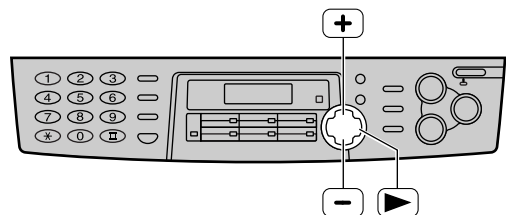

Display order of characters

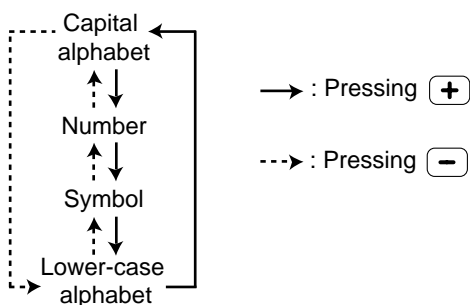

Setup

Setting your facsimile telephone number

1 Press **MENU**.

Display: SYSTEM SET UP
PRESS NAVI. [◀ ▶]

2 Press **◀** or **▶** until the following is displayed.

YOUR FAX NO.
PRESS SET

3 Press **SET**.


NO. =

4 Enter your facsimile telephone number, up to 20 digits, using the dial keypad.

Example: NO. =1234567

5 Press **SET**.
• The next feature will be displayed.

6 Press **MENU**.

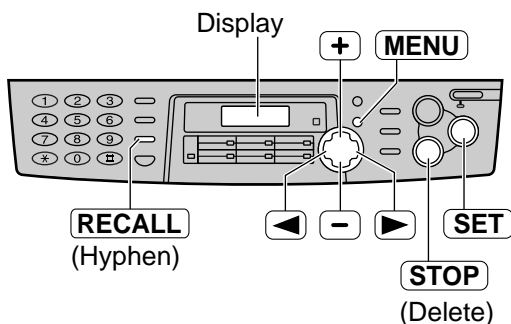

Note:

- You can enter your facsimile telephone number by pressing **+** or **-** in step 4. In this case, press **▶** to move the cursor.
- The ***** button replaces the digit with a "+" and the **#** button replaces it with a space.
Example (using the dial keypad): +64 9 1234567
Press ***** **6** **4** **#** **9** **#** **1** **2** **3** **4** **5** **6** **7**.
- To enter a hyphen in a telephone number, press **RECALL**.

To correct a mistake

- Press **◀** or **▶** to move the cursor to the incorrect number, and make the correction.

To delete a number

- Move the cursor to the number you want to delete and press **STOP**.

Adjusting volume

Ringer volume

4 levels (high/middle/low/off) are available.

While the unit is idle, press **+** or **-**.

To turn the ringer off:

1. Press **-** repeatedly until the following is displayed.

Display:

RINGER OFF= OK? YES : SET/NO : STOP

2. Press **SET**.


RINGER OFF

- To turn the ringer back on, press **+**.

While the ringer volume is set to off:

When a call is received, the unit will not ring and will display the following.

INCOMING CALL

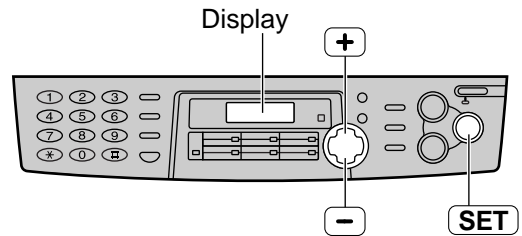

Ringer pattern

- You can select one of three ringer patterns. Change the setting (feature #17 on page 63). The ringer pattern you selected will sound when the unit receives a call.

Handset receiver volume

3 levels (high to low) are available.

While using the handset, press **+** or **-**.

Monitor volume

8 levels (high to low) are available.

While using the monitor, press **+** or **-**.

Automatic Dialling

Storing names and telephone numbers into one-touch dial

For rapid access to frequently dialled numbers, the unit provides 12 entries for one-touch dial.

- Stations 1 to 3 can be used alternatively as broadcast keys (p. 38).

- 1** Press **MENU** repeatedly until the following is displayed.

Display:

DIRECTORY SET PRESS STATION OR
↑
DIRECTORY SET PRESS NAVI. [◀ ▶]

- 2** For stations 1–3:
Press one of the station keys.

Example:

STATION 1 DIAL MODE [±]

Press **SET** to go to the next prompt.

For stations 4–6:

Press one of the station keys.

For stations 7–12:

Press **LOWER**, then press one of the station keys.

- 3** Enter the name, up to 10 characters (see page 23 for instructions).

Example:

NAME=John STORE:PRESS SET

- 4** Press **SET**.

Example:

<S01>=

- 5** Enter the telephone number, up to 30 digits, using the dial keypad.

Example:

<S01>=1114497


- If you want to enter a hyphen, press **RECALL**.

- 6** Press **SET**.

REGISTERED
↓
DIRECTORY SET PRESS STATION OR
↑
DIRECTORY SET PRESS NAVI. [◀ ▶]

- To program other entries, repeat steps 2 to 6.

- 7** Press **STOP** to exit the program.

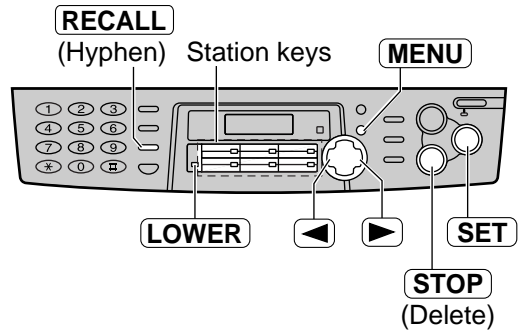

Helpful hint:

- You can confirm the stored entries on the telephone number list (p. 81).

Note:

- A hyphen or a space entered in a telephone number counts as two digits.

To correct a mistake

- Press **◀** or **▶** to move the cursor to the incorrect character/number, and then make the correction.

To delete a character/number

- Move the cursor to the character/number you want to delete, and press **STOP**.

Storing names and telephone numbers into navigator directory

For rapid access to frequently dialled numbers, the unit provides the navigator directory (100 entries).

- 1** Press **MENU** repeatedly until the following is displayed.

Display:

DIRECTORY SET PRESS STATION OR



DIRECTORY SET PRESS NAVI. [◀ ▶]

- 2** Press **◀** or **▶**.

NAME= STORE:PRESS SET

- 3** Enter the name, up to 10 characters (see page 23 for instructions).

Example:

NAME=Alice STORE:PRESS SET

- 4** Press **SET**.

NO. =

- 5** Enter the telephone number, up to 30 digits, using the dial keypad.

Example:

NO. =5552233

- If you want to enter a hyphen, press **RECALL**.

- 6** Press **SET**.


REGISTERED



NAME= STORE:PRESS SET

- To program other entries, repeat steps 3 to 6.

- 7** Press **MENU** to exit the program.

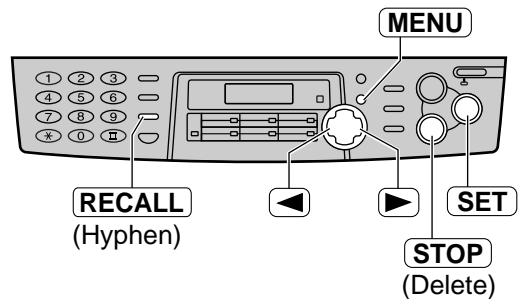

Helpful hint:

- You can confirm the stored entries on the telephone number list (p. 81).

Note:

- When the following is displayed in step 6, you can store only 5 more entries.

REGISTERED SPACE= 5 DIRS.

- If there is no space to store new entries, the following is displayed in step 6. Erase unnecessary entries (p. 28).

REGISTERED DIRECTORY FULL

- A hyphen or a space entered in a telephone number counts as two digits.

To correct a mistake

- Press **◀** or **▶** to move the cursor to the incorrect character/number, and then make the correction.

To delete a character/number

- Move the cursor to the character/number you want to delete, and press **STOP**.

Automatic Dialling

Editing a stored entry

You can edit a name or number that is stored in one-touch dial and navigator directory.

1 Press or .

Display: `DIRECTORY [+ -]`

2 Press or until the desired entry is displayed.

Station key number for one-touch dial

Example: `Mary <S02>`
`0123456`

↓

`Mary <S02>`
`EDIT:PRESS MENU`

↓

`Mary <S02>`
`SEND:PRESS SET`

3 Press **MENU**.

Example: `NAME=Mary`
`EDIT=* DELETE=#`

4 Press to select "EDIT".

Example: `NAME=Mary`
`STORE:PRESS SET`

• If you do not need to edit the name, skip to step 6.

5 Edit the name (see page 23 for instructions).


6 Press **SET**.

Example: `<S02>=0123456`

• If you do not need to edit the telephone number, skip to step 8.

7 Edit the telephone number. For further details, see page 28.

8 Press **SET**.

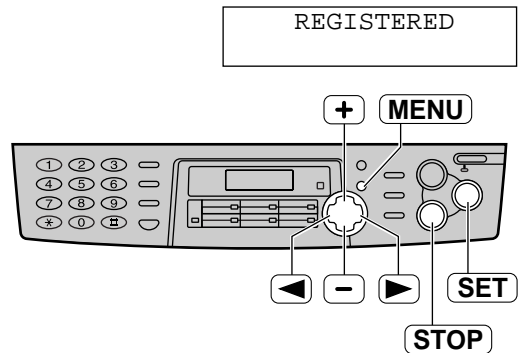

Erasing a stored entry

You can erase an entry stored in one-touch dial and navigator directory.

1 Press or .

Display: `DIRECTORY [+ -]`

2 Press or until the desired entry is displayed.

Example: `Peter`
`9876543`

↓

`Peter`
`EDIT:PRESS MENU`

↓

`Peter`
`SEND:PRESS SET`

3 Press **MENU**.

Example: `NAME=Peter`
`EDIT=* DELETE=#`

4 Press to select "DELETE".

`DELETE OK?`
`YES:SET/NO:STOP`

• To cancel erasing, press **STOP**.

5 Press **SET**.

`DELETED`

• The stored name and number are erased.

Making a phone call using one-touch dial and navigator directory

Before using this feature, program the desired names and telephone numbers into one-touch dial and navigator directory (p. 26, 27).

Using one-touch dial

- 1** Press **MONITOR** or lift the handset.

Display: TEL=
PRESS STATION OR

↓

TEL=
PRESS NAVI. [◀ ▶]


- 2** For stations 1–6:
Press the desired station key.

Example: TEL=<John>

For stations 7–12:

Press **LOWER**, then press the desired station key.

- The unit will start dialling automatically.

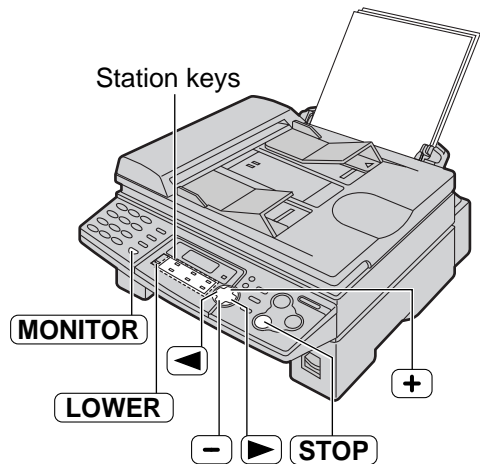

Using the directory

- 1** Press **◀** or **▶**.

DIRECTORY [+ -]

- 2** Press **+** or **-** until the desired entry is displayed.

Example:

Lisa
2233445

↓

Lisa
EDIT:PRESS MENU

↓

Lisa
SEND:PRESS SET

- If the desired name has not been stored, press **STOP** and dial the number manually.

- 3** Press **MONITOR** or lift the handset.
- The unit will start dialling automatically.

To search for a name by initial

Example: "Lisa"

1. Press **◀** or **▶**.
2. Press **+** or **-** to enter the directory.
3. Press **5** repeatedly until any name with the initial "L" is displayed (see the character table on page 23).
 - To search for symbols (not letters or numbers), press *****.
4. Press **+** until "Lisa" is displayed.
 - To stop the search, press **STOP**.
 - To make a call, press **MONITOR** or lift the handset.

Caller ID service from your phone company

This unit is compatible with the Caller ID service offered by your local telephone company. To use this feature, you must subscribe to the Caller ID service.

How Caller ID is displayed

The calling party's telephone number or name will be displayed after the first ring. You then have the option of whether or not to answer the call depending on the caller.

The unit will automatically store the caller information (telephone number, name and the time of the call). You can view the caller information (p. 31) and print the caller ID list (p. 81).

Note:

- If the unit is connected to a PBX (Private Branch Exchange) system, you may not receive the caller information. Consult your PBX supplier.
- If the unit cannot receive caller information, the following will be displayed.

OUT OF AREA

The caller dialed from an area which does not provide Caller ID service.

PRIVATE CALLER

The caller requested not to send caller information.

Note for Australian users:

- Although Telstra and Optus do not currently send caller name information, the caller's name will be displayed as stored in the directory, when a call from that caller is received.
- The area code will need to be stored with the 8-digit telephone number.

Note for New Zealand users:

- Although Telecom New Zealand and TelstraClear do not currently send caller name information, the caller's name will be displayed as stored in the directory, when a call from that caller is received.
- Your telephone service provider may charge you for a local call when it is dialled with an area code prefix. If the charge for local call is unacceptable, only the 7-digits of the local number should be dialled from your telephone. Do not dial the "0" prefix or the area code digit.

To confirm caller information using the Caller ID list

The unit will store information for the most recent 30 callers.

— To print manually, see page 81.

— To print automatically after every 30 new calls, activate feature #26 (p. 65).

Viewing and calling back using caller information

You can easily view caller information and call back.

Important:

- Calling back will not be possible in the following cases:
 - The telephone number includes data other than numbers (i.e. * or #).
 - The caller information does not include a telephone number.

1 Press **CALLER ID**.

Example:

2 NEW CALLS PRESS NAVI. [+ -]

(2 new calls are received)


2 Press **+** to search from the most recent caller information.

Press **-** to search from the oldest caller information.

- To send a fax using the scanner glass, see page 35.

3 Press **MONITOR** or lift the handset to call back the displayed party.

- The unit will start dialling automatically.
- To send a fax using the auto document feeder – insert the document **FACE DOWN** into the feeder and press **FAX START** (p. 34).

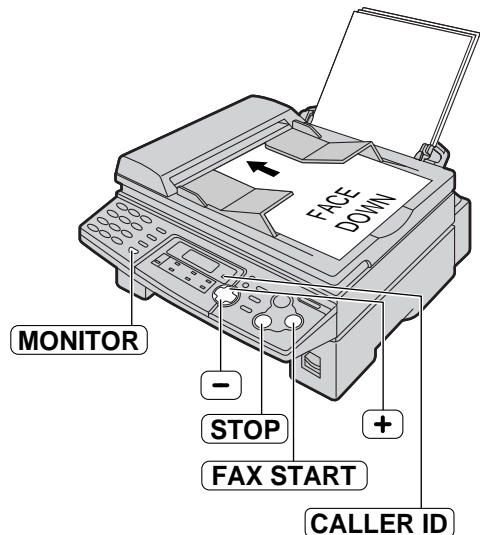

Note:

- Telstra, Optus, Telecom New Zealand and TelstraClear do not currently send caller name information.

To display the caller's telephone number

Press **CALLER ID** after step 2.

Example (for Australian users):

SAM LEE Jul. 20 11:20AM	↔	3456789012 Jul. 20 11:20AM ✓
----------------------------	---	---------------------------------

This means this call has already been viewed or answered.

Example (for New Zealand users):

3456789012 Jul. 20 11:20AM	↔	NO NAME RCVD Jul. 20 11:20AM ✓
-------------------------------	---	-----------------------------------

Display while viewing

NO NAME RCVD

 When the unit could not receive a name.

NO CALLER DATA

 When no calls have been received.

To stop viewing

Press **STOP** after step 2.

Erasing caller information

- 1** Press **MENU** repeatedly until the following is displayed.

Display: CALLER SET UP
PRESS SET

- 2** Press **SET**.

CALL LIST ERASE
PRESS SET

- 3** Press **SET**.


ERASE ALL OK?
YES: SET/NO: STOP

- To cancel erasing, press **STOP**, then **MENU**.

- 4** Press **SET**.

ERASE COMPLETED

- 5** Press **STOP** to exit the program.

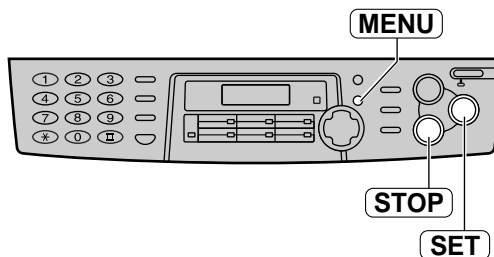

Storing caller information into one-touch dial and navigator directory

Important:

- This feature is not available in the following cases:
 - The telephone number includes data other than numbers (i.e. * or #).
 - The caller information does not include a telephone number.

1 Press **CALLER ID**.

Example:

2 NEW CALLS PRESS NAVI. [+ -]

2 Press **+** or **-** until the desired entry is displayed.

Example:

134567890 Apr. 14 11:50AM

3 Press **MENU**.

Example:

PRESS STATION OR

↑↓

PRESS NAVI. [◀ ▶]

4 For stations 1–3:
Press the desired station key.

Example:

STATION 1 DIAL MODE [±]

Press **SET**.

NAME= STORE:PRESS SET

Press **SET**.

Example:

<S01>=134567890

For stations 4–6:
Press the desired station key.

NAME= STORE:PRESS SET

Press **SET**.

Example:

<S04>=134567890

For stations 7–12:
Press **LOWER**, then press the desired station key.

NAME= STORE:PRESS SET

Press **SET**.

Example:

<S09>=134567890

For navigator directory:

Press **◀** or **▶**.

NAME= STORE:PRESS SET


Press **SET**.

Example:

NO.=134567890

5 Press **SET**.

REGISTERED

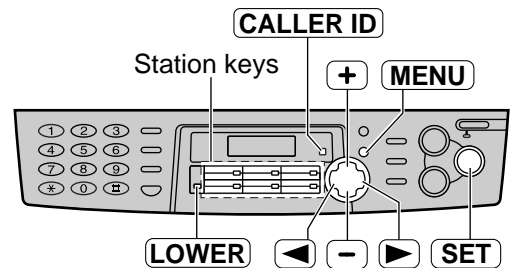

Note:

- You can confirm the stored entries on the telephone number list (p. 81).
- The unit can only store a name of up to 10 characters long.
- To edit a name and number, see page 28.
- If you enter a new entry into a station key, the previous entry will be overwritten.
- If you use stations 1–3 as broadcast keys, you cannot store caller information for stations 1–3.
- Telstra, Optus, Telecom New Zealand and TelstraClear do not currently send caller name information.

Sending Faxes

Sending a fax manually

Using the auto document feeder

Confirm that there are no documents on the scanner glass.

- 1 Adjust the width of the document guides to the size of the document.
- 2 Insert the document (up to 15 pages) **FACE DOWN** into the feeder until the unit grasps the document and a single beep is heard.

Display:

- 3 If necessary, press **RESOLUTION** repeatedly to select the desired setting (see below).

- 4 Press **MONITOR** or lift the handset.

↑↓

- 5 Dial the fax number.

Example:

- 6 **When a fax tone is heard:**
Press **FAX START**, and replace the handset if you are using it.
OR


When the other party answers your call:
Lift the handset and ask them to press their start button. When the fax tone is heard, press **FAX START** and replace the handset.

To select the resolution

Select the desired resolution according to the type of document.

- **“STANDARD”**: For printed or typewritten originals with normal-sized characters.
- **“FINE”**: For originals with small printing.
- **“SUPER FINE”**: For originals with very small printing. This setting only works with other compatible fax machines.
- **“PHOTO”**: For originals containing photographs, shaded drawings, etc.

- Using the “FINE”, “SUPER FINE” or “PHOTO” setting will increase transmission time.
- If the resolution setting is changed during feeding, it will be effective from the next sheet.

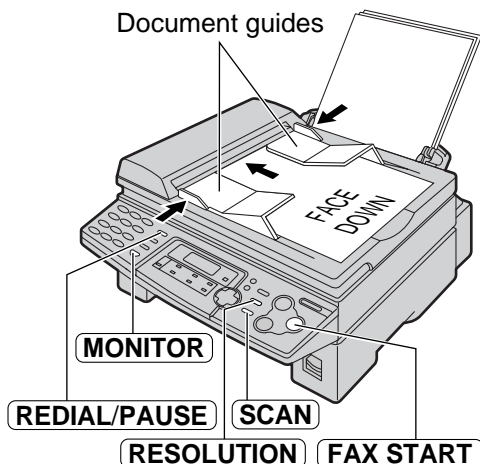

Note:

- Do not open the document cover when sending a fax with the auto document feeder.

To redial the last number

Press **REDIAL/PAUSE**, then press **FAX START**.

- If the line is busy, the unit will automatically redial the number up to 2 times.
- During redial, the following will be displayed.

To transmit more than 15 pages at a time

Insert the first 15 pages of the document. Add the other pages (up to 15 at a time) before the last page feeds into the unit.

Convenient way to send a fax

You can dial the fax number before inserting the document. This is convenient if the other party's number is indicated on the document.

1. Enter the fax number.
 - The handset must be on the cradle.
2. Insert the document.
3. Press **FAX START**.

Sending from memory

• Quick scan feature

You can scan the document into memory before sending.

1. Insert the document.
2. Enter the fax number.
3. Press **(SCAN)**.

• Transmitting reservation (Dual Access) feature

You can send the document even when the unit is just receiving a fax or sending a fax from memory.

1. Insert the document during fax reception or fax memory transmission.
2. Enter the fax number using the dial keypad, one-touch dial or navigator directory.
3. Press **(SCAN)** or **(FAX START)**.

- The document will be fed into the unit and scanned into memory. The unit will then transmit the data.

If the document exceeds the memory capacity (p. 82), sending will be cancelled. Transmit the entire document manually.

Note:

- Transmitting reservation (Dual Access) feature is not available when using the scanner glass.

Using the scanner glass

By using the scanner glass, you can send a page from booklets or small sized paper that cannot be sent with the auto document feeder.

Confirm that there are no documents in the auto document feeder.

- 1 Open the document cover.
- 2 Place the document **FACE DOWN** on the scanner glass, matching the top edge of the document to the “▽” mark on the unit.
- 3 Close the document cover.
 - If the original is a thick book, do not close the document cover.
- 4 If necessary, press **(RESOLUTION)** repeatedly to select the desired setting (p. 34).
- 5 Enter the fax number.

Example: NO. =5678901

- To send a single page, skip to step 9.
- To send multiple pages, go to the next step.

- 6 Press **(SCAN)** to scan the document into memory.

Example: PAGES=01 01%
STANDARD

↓
NEXT: PRESS SCAN
SEND: PRESS START

- 7 Place the next page on the scanner glass.


- 8 Press **(SCAN)**.

NEXT: PRESS SCAN
SEND: PRESS START

- To send more pages, repeat steps 7 and 8.

- 9 Press **(FAX START)**.

CONNECTING.

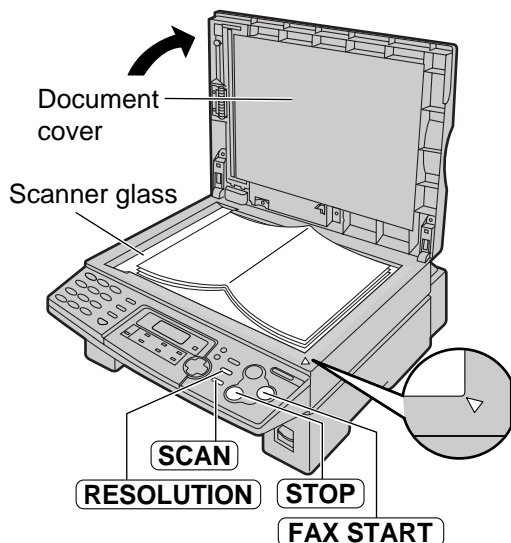

■ Note for the auto document feeder and the scanner glass

To stop transmission

Press **(STOP)**.

Sending report for confirmation

This report will provide you with a printed record of transmission results. To use this feature, activate feature #04 (p. 62). For the communication message in the result column, see page 67.


Journal report

The unit stores the 30 most recent fax communication results. To print manually, see page 81. To print automatically after every 30 new fax communications, activate feature #22 (p. 64). For the communication message in the result column, see page 67.

Sending Faxes

Documents you can send

Using the auto document feeder

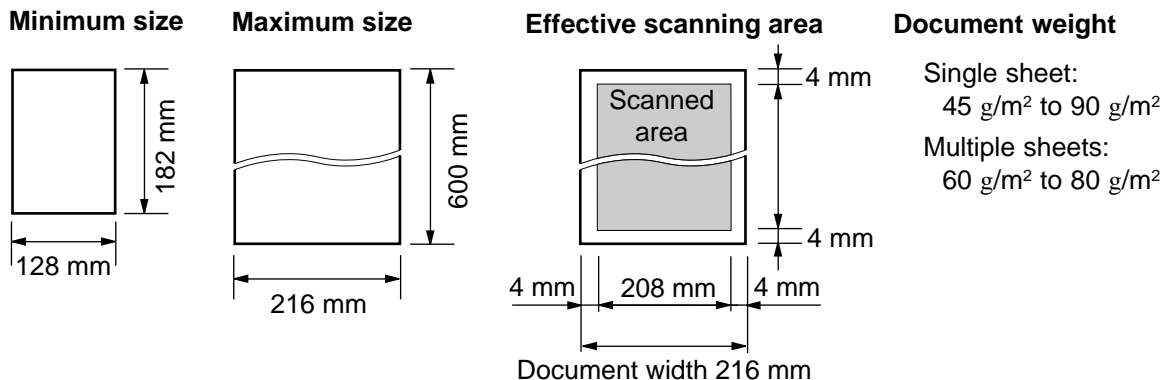


Note:

- Remove clips, staples or other similar fasteners.
- Do not send the following types of documents: (Use the scanner glass for fax transmission.)
 - Chemically treated paper such as carbon or carbonless duplicating paper
 - Electrostatically charged paper
 - Badly curled, creased or torn paper
 - Paper with a coated surface


Using the scanner glass

Effective scanning area on the scanner glass is changed depending on the setting of the paper size (feature #16 on page 63).

When the paper size is set to “A4”:

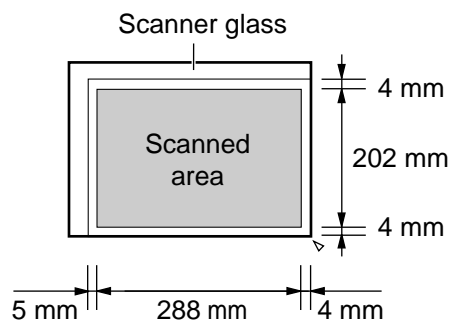

When the paper size is set to “LETTER”:

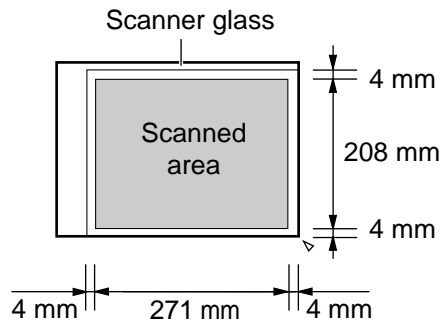

■ Note for the auto document feeder and the scanner glass

- Check that ink, paste or correction fluid has dried completely.
- Do not send the following types of documents: (Use copies for fax transmission.)
 - Paper with a faint image
 - Paper with printing on the opposite side that can be seen through the other side (i.e. newspaper)
- To transmit the document with a width of less than A4 size (210 mm), we recommend transmitting the document using the scanner glass.

Sending a fax using one-touch dial and navigator directory

Before using this feature, program the desired names and telephone numbers into one-touch dial and navigator directory (p. 26, 27).

- 1 Adjust the width of the document guides to the size of the document.
- 2 Insert the document (up to 15 pages) **FACE DOWN** into the feeder until the unit grasps the document and a single beep is heard.
 - **Confirm that there are no documents on the scanner glass.**

Display:

- 3 If necessary, press **RESOLUTION** repeatedly to select the desired setting (p. 34).

- 4 Enter the fax number.
Using stations 1–6:
Press the desired station key.

Using stations 7–12:


Press **LOWER**, then press the desired station key.

Using navigator directory:

Press **◀** or **▶**, then press **+** or **-** to display the desired entry.

- For further details about using the directory, see page 29.

- 5 Press **FAX START**.

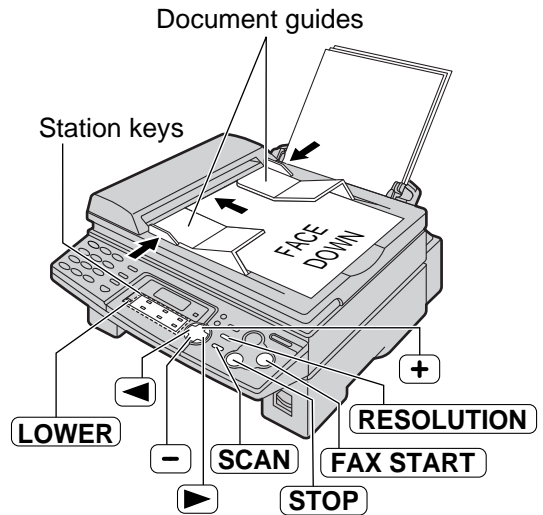

Note:

- Do not open the document cover when sending a fax with the auto document feeder.

To send a fax using the scanner glass

- **Confirm that there are no documents in the auto document feeder.**

1. Open the document cover.
2. Place the document **FACE DOWN**, then close the document cover.
3. Enter the fax number (see step 4 above).
 - To send a single page, skip to step 7.
 - To send multiple pages, go to the next step.
4. Press **SCAN** to scan the document into memory.
5. Place the next page.
6. Press **SCAN**.
 - To send more pages, repeat steps 5 and 6.
7. Press **FAX START**.

Fax auto redial

If the line is busy or if there is no answer, the unit will automatically redial the number up to 2 times.

- This feature is also available for delayed transmission (feature #25 on page 64).
- During redial, the following will be displayed.

- To cancel redialing, press **STOP**.

If your unit does not send a fax

- Confirm the stored telephone number on the display and check that the number dialled is answered by the other party's machine (p. 29).
- The connecting tone will be heard during dialling to tell you the status of the other party's machine (feature #76 on page 66).

Sending Faxes


Broadcast transmission

This feature is useful for sending the same document to selected parties (up to 20 entries). First program the entries, then see page 41 for transmission.


- The broadcast function utilises stations 1–3. The one-touch dial function will be cancelled.
- **BROADCAST** key 1 and 2 can accept one-touch dial and navigator entries.
- **MANUAL BROADCAST** key can also accept manual dialling entries.

Programming entries into the broadcast memory

1 Press **MENU** repeatedly until the following is displayed.

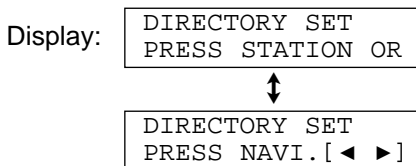

2 For **BROADCAST** 1–2:
Press the desired **BROADCAST** key.




Press **+** or **-** to select "BROADCAST".




For **MANUAL BROADCAST**:


Press **MANUAL BROAD**.




Press **+** or **-** to select "MANUAL BROAD".



3 Press **SET**.



4 Program entries.
Using stations 1–6:
Press the desired station key.



Using stations 7–12:


Press **LOWER**, then press the desired station key.

Using navigator directory:

Press **+** or **-** until the desired entry is displayed and press **SET**.


Using the dial keypad (only for MANUAL BROAD):

Enter the fax number and press **SET**.

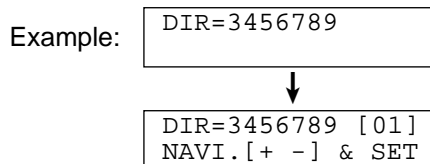


- To program other entries, repeat this step (up to 20 entries).

5 Press **SET** after programming all of the desired entries.

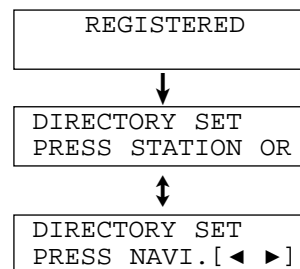

- To program another broadcast key, repeat steps 2 to 5.

6 Press **STOP** to exit the program.

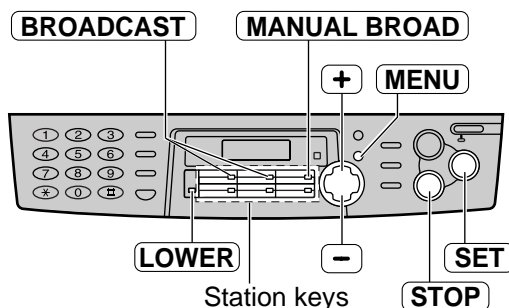

Note:

- If you program the wrong entry, press **STOP** after step 4 to erase the entry.
- Confirm the stored entries by printing a broadcast programming list (p. 81).

Adding a new entry into the broadcast memory

1 Press **◀** or **▶**.

Display:

DIRECTORY [+ -]

2 Press **+** or **-** until the following is displayed.

Example:

<BROADCAST1> EDIT:PRESS MENU

↓

<BROADCAST1> SEND:PRESS SET

3 Press **MENU**.

<BROADCAST1> ADD=* DELETE=#

4 Press ***** to select "ADD".

5 Press **+** or **-** until the desired entry you want to add is displayed.

Example (Navigator):

Mary 15843724123

Example (Station 2):

Peter <S02> 19265532168

6 Press **SET**.


REGISTERED

↓
Example:

Nikki 13852179365

- To add other entries, repeat steps 5 and 6 (up to 20 entries).

7 Press **STOP** to exit the program.

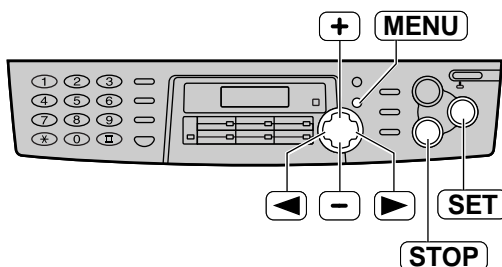

Sending Faxes

Erasing a stored entry in the broadcast memory

1 Press **◀** or **▶**.

Display:

DIRECTORY	[+ -]
-----------	-------

2 Press **+** or **-** until the following is displayed.

Example:

<BROADCAST1> EDIT:PRESS MENU
↑
<BROADCAST1> SEND:PRESS SET

3 Press **MENU**.

<BROADCAST1> ADD=* DELETE=#

4 Press **▣** to select "DELETE".

5 Press **+** or **-** until the desired entry you want to erase is displayed.

Example (Navigator):

Dick 13281432968

Example (Station 3):

Sam	<S03>
19876543210	

• To cancel erasing, press **STOP**.

6 Press **SET**.

DELETE OK? YES:SET/NO:STOP

7 Press **SET**.


DELETED

Example:

Bob 0123456

• To erase other entries, repeat steps 5 to 7.


8 Press **STOP** to exit the program.

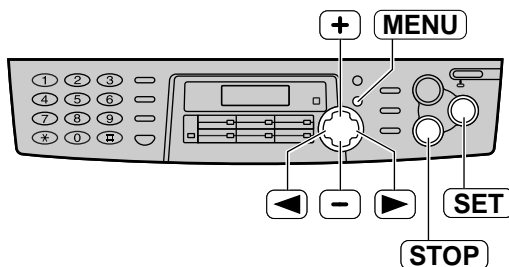


Sending the same document to pre-programmed parties

- 1 Insert the document FACE DOWN into the feeder.
 - Confirm that there are no documents on the scanner glass.
 - If necessary, press **RESOLUTION** repeatedly to select the desired setting (p. 34).

- 2 Press the desired **BROADCAST** (1–2) or **MANUAL BROAD**.
 - You can also use the navigator key. Press **▶**, then press **+** or **-** until the desired key name is displayed, and press **FAX START**.

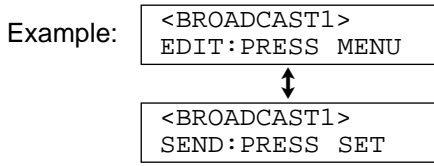

- The document will be fed into the unit and scanned into memory. The unit will then transmit the data to each entry, calling each number sequentially.
- After transmission, the stored document will be erased automatically, and the unit will automatically print a broadcast sending report.

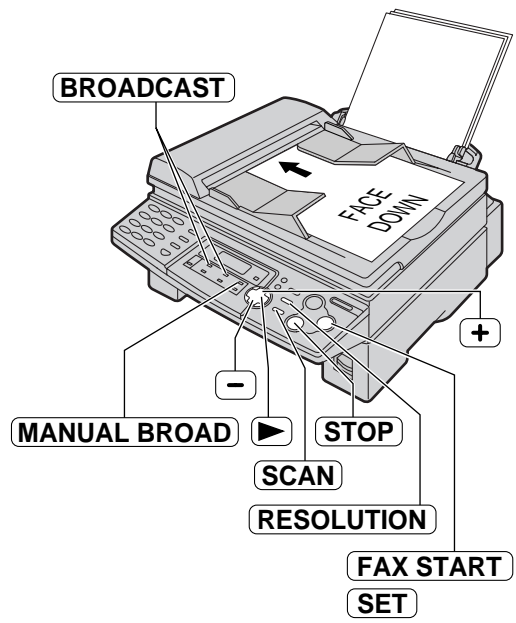

- Note:**
- Do not open the document cover when sending a fax with the auto document feeder.
 - If you select the “FINE”, “SUPER FINE” or “PHOTO” resolution, the number of pages that the unit can transmit will decrease.
 - If the document exceeds the memory capacity (p. 82), sending will be cancelled.
 - If one of the entries is busy or does not answer, it will be skipped. All skipped entries will be redialled up to 2 times after all of the other entries have been called.

To send the same document using the scanner glass


- Confirm that there are no documents in the auto document feeder.
1. Open the document cover.
 2. Place the document FACE DOWN, then close the document cover.
 3. Press the desired **BROADCAST** (1–2) or **MANUAL BROAD**.
 - To send a single page, skip to step 6.
 - To send multiple pages, go to the next step.
 4. Place the next page.
 5. Press **SCAN**.
 - To send more pages, repeat steps 4 and 5.
 6. Press **FAX START**.

To cancel the broadcast setting

1. Press **STOP** while the unit displays the following.



- The display will show the following.



2. Press **SET**.


Receiving Faxes

Setting the unit to receive faxes

Use only as a fax


With answering machine

How you want the unit to receive calls

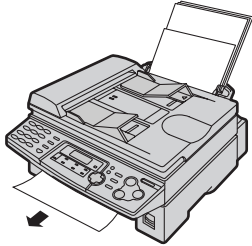

You have a separate telephone line just for faxes.


External telephone answering machine (not included)

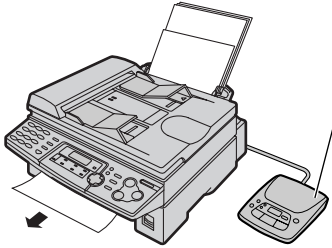

You want to use the fax machine with an answering machine.

Set the unit this way.

FAX ONLY mode (p. 45)
Turn AUTO ANSWER on by pressing **AUTO ANSWER**.

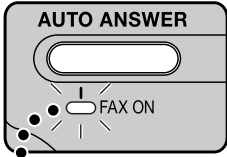

ON

Activating an answering machine (p. 46)
Connect an external telephone answering machine and change the ring setting of the answering machine to less than 4.


This is how the unit will operate.

When receiving calls:
All incoming calls will be answered as faxes.

When receiving phone calls:
The answering machine will record voice messages.

When receiving faxes:
The fax machine will disconnect the answering machine and receive documents.

Mostly phone calls

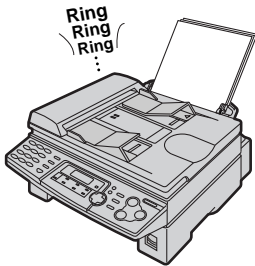


You plan to answer the calls yourself.



TEL mode (p. 44)

Turn AUTO ANSWER off by pressing **AUTO ANSWER**.

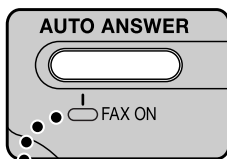

OFF



When receiving calls:

You have to answer all calls manually. To receive a fax document, press **FAX START** for each fax you are receiving.

Other option

Remote fax activation

You can also receive a fax using an extension telephone. While hearing a fax calling tone with an extension telephone, press ***#9** (pre-selected fax activation code) to receive a fax (p. 48).

Receiving Faxes

TEL mode (answering all calls manually)


Activating TEL mode

If the FAX ON light is on, turn it off by pressing

AUTO ANSWER.

Display:

TEL MODE

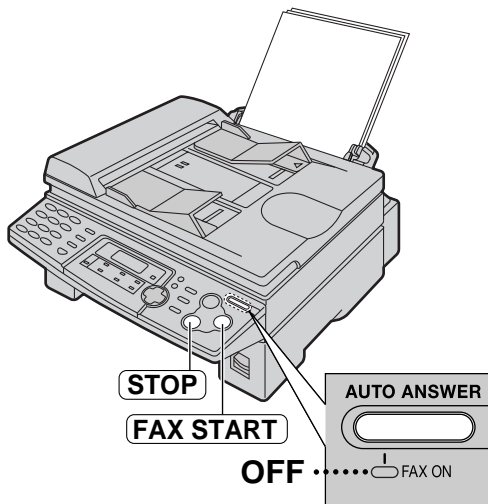

Receiving a fax manually

- 1 When the unit rings, lift the handset to answer the call.
- 2 When:
 - document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,press **FAX START**.

CONNECTING.....

- 3 Replace the handset.
 - The unit will start fax reception.

Note:

- If you do not answer the call within 10 rings, the unit will temporarily switch to fax reception. The other party can then send a fax.

To stop receiving

Press **STOP**.

Auto reduction feature

If the other party sends a document that is longer than your recording paper, your unit will reduce the receiving document to the proper size and print it. If you want to print the original size, set feature #37 to off (p. 65).

Fax reception in memory

When a printing problem is detected, the unit will temporarily store the received document into memory. While the document is in memory:

- The display will show an error message and the following alternately.

FAX IN MEMORY

- Slow beeps will sound if feature #44 is set to on (p. 65).
- Follow the instructions on pages 68 and 69 to solve the problem.
- For memory capacity, see page 82.

FAX ONLY mode --- --- (all calls are received as faxes)

Activating FAX ONLY mode

If the FAX ON light is off, turn it on by pressing **AUTO ANSWER**.


Display: FAX ONLY MODE

- When receiving calls, the unit will automatically answer all calls and only receive fax documents.


Note:

- The number of rings before a call is answered in FAX ONLY mode can be changed (feature #06 on page 62).
- This mode should not be used with a telephone line which is used for both phone calls and faxes. Fax communication will be attempted even if someone is trying to call you. We recommend the following setup:

Example:

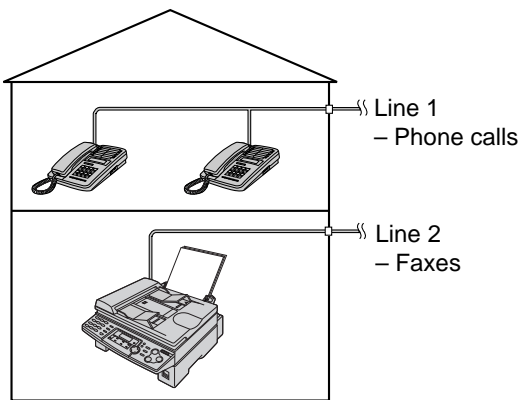

Only a fax machine is connected.

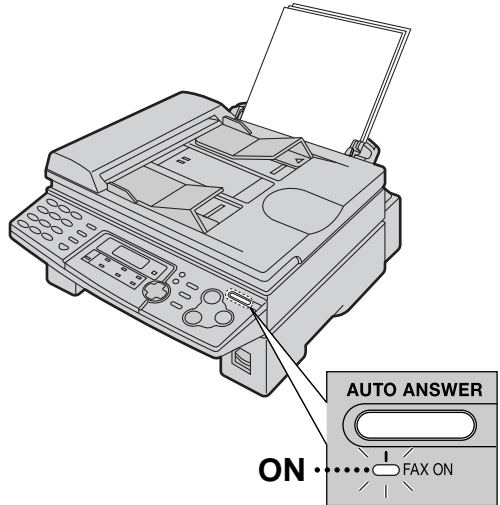


Receiving Faxes

Using the unit with an answering machine

Setting up the fax machine and an answering machine

- 1 Connect the answering machine.

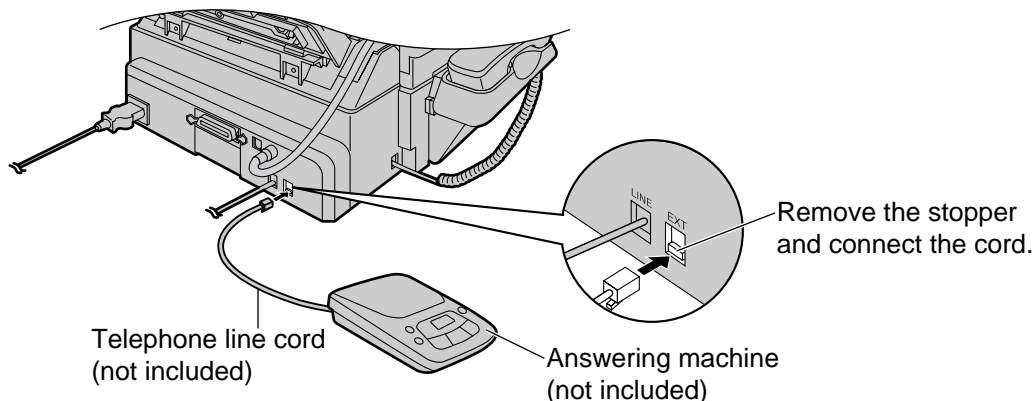

- 2 Set the number of rings on the answering machine to less than 4.
 - This will allow the answering machine to answer the call first.
- 3 Record a greeting message on the answering machine.

Example: *"This is (your name, business and/or telephone number). We are unable to answer the phone right now. To send a fax, start transmission. To leave a message, please speak after the beep. Thank you."*

 - We recommend you record a message up to 10 seconds long, and do not pause for more than 4 seconds during the message. Otherwise, both machines will not function correctly.
- 4 Activate the answering machine.
- 5 Set the fax machine to the desired receiving mode (p. 44, 45).
 - If you set to FAX ONLY mode, **change the ring setting in FAX ONLY mode to more than 4 (feature #06 on page 62)**. Using FAX ONLY mode will allow you to receive faxes if the answering machine is full.
- 6 Check the remote access code of the answering machine and program the same code into the remote operation ID of the fax machine. See feature #12 on page 63.

How the fax machine and answering machine work

Receiving phone calls

The answering machine will record voice messages automatically.

Receiving faxes

The fax machine will receive documents automatically when the machine detects a fax calling tone.

Receiving a voice message and fax document in one call

The caller can leave a voice message and send a fax document during the same call. Inform the caller of the following procedure beforehand:

1. The caller calls your fax machine.
 - The answering machine will answer the call.
2. The caller can leave a message after the greeting message.
3. The caller presses ***#9** (pre-selected fax activation code).
 - The fax machine will activate the fax function.
4. The caller presses the start button to send a document.

Note:

- The fax activation code can be changed in feature #41 (p. 65).
- Every time the fax machine receives a document, a silent pause or fax tone may be recorded on the answering machine.

Receiving Faxes / Distinctive Ring

Extension telephone

If you use the fax machine with an extension telephone, you can receive fax documents using the extension telephone. You do not have to press **FAX START** on the fax machine.


Important:

- Use a touch tone telephone as the extension telephone and enter the fax activation code **firmly**.

1 When the extension telephone rings, lift the handset of the extension telephone.

2 When:
— document reception is required,
— a fax calling tone (slow beep) is heard, or
— no sound is heard,
press ***#9** (pre-selected fax activation code) **firmly**.

3 Hang up the handset.
• The fax machine will start reception.

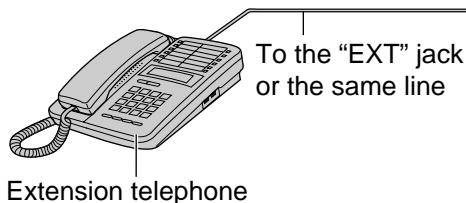

Note:

- You can change the fax activation code in feature #41 (p. 65).

Using with the ring detection feature

This feature is only for use if you subscribe to a distinctive ring pattern service from your telephone company. For more information on the availability of this service in your area, please contact your telephone company before setting this feature on your unit. In Australia, this service is called "Fax Stream Duet". In New Zealand, this service is called "FaxAbility".

The distinctive ring service gives you an additional phone number on a single telephone line, with a different ringing pattern.

When you wish to use the additional phone number as a facsimile telephone number, set the ring pattern detection feature to ON. When the unit detects a call matching the distinctive ring pattern, it will activate the fax function.

1 Press **MENU**.

Display: SYSTEM SET UP
PRESS NAVI. [◀ ▶]

2 Press **#**, then **3 1**.

RING DETECTION
=OFF [±]

3 Press **+** or **-** to select "ON".


RING DETECTION
=ON [±]

- If this feature is not required, select "OFF".

4 Press **SET**.

SETUP ITEM []

5 Press **MENU**.

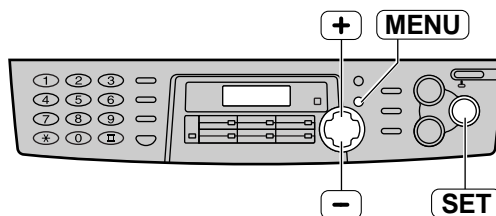

Making a copy

The unit can make single or multiple copies (up to 99).

1 Using the auto document feeder

- Confirm that there are no documents on the scanner glass.

1. Adjust the width of the document guides to the size of the document.
2. Insert the document (up to 15 pages) FACE DOWN into the feeder until the unit grasps the document and a single beep is heard.

Display:

STANDARD

Using the scanner glass

- Confirm that there are no documents in the auto document feeder.

1. Open the document cover.
2. Place the document FACE DOWN on the scanner glass, matching the top edge of the document to the “▽” mark on the unit.
3. Close the document cover.
 - If the original is a thick book, do not close the document cover.

2 If necessary, press **RESOLUTION** repeatedly to select the desired setting (see below).

3 Press **COPY START**.



100% FINE [01]
COPY:PRESS START

- If necessary, enter the number of copies (up to 99).

4 Press **COPY START**.
● The unit will start copying.

Note:

- Do not open the document cover when making a copy with the auto document feeder.
- Any transmittable document can be copied (p. 36).
- To make a clear copy from transparencies, be sure to use the scanner glass. Place a blank sheet of paper on the top of the transparency, and leave the document cover open during copying.

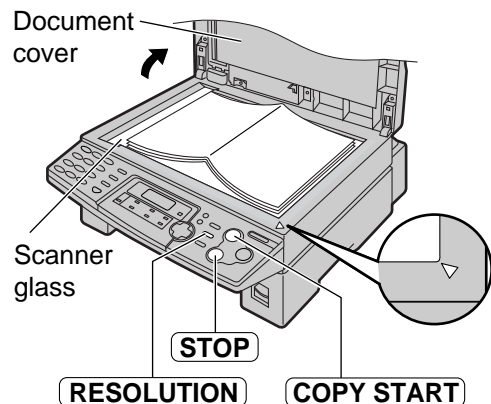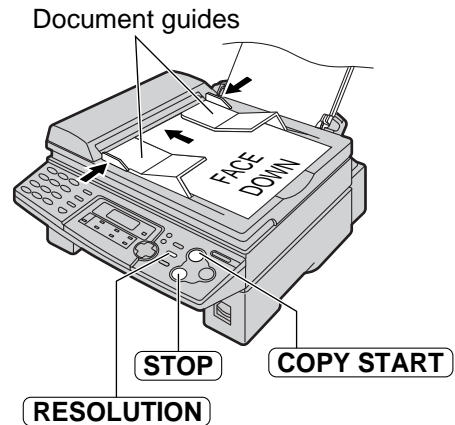

To select the resolution

Select the desired resolution according to the type of document.

- “FINE”: For printed or typewritten originals with small printing.
- “SUPER FINE”: For originals with very small printing.
- “PHOTO”: For originals containing photographs, shaded drawings, etc.

- If you select “STANDARD”, copying will be done using “FINE” mode.
- You can also select the resolution after pressing **COPY START** in step 3. Press **RESOLUTION** repeatedly to select the desired setting.

To stop copying

Press **STOP**.

Copying

To enlarge a document


The unit can enlarge copies to as much as 200% of the original by changing the enlargement rate 5% at a time.

After step 3 on page 49, press **+** repeatedly to select the desired enlargement rate, then press **COPY START**.


- **When using the auto document feeder**, the unit will only enlarge the center of the upper part of the document. To make an enlarged copy of the bottom of the document, turn the document around, and then make a copy.
- **When using the scanner glass**, the unit will only enlarge the right bottom corner of the document starting from the "▽" mark on the unit.

Example: 150% enlarged copy

Using the auto document feeder:

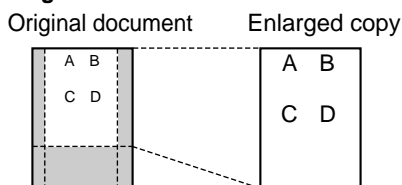

Using the scanner glass:

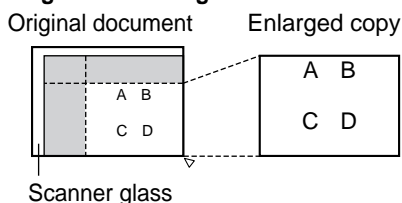


To reduce a document

The unit can reduce copies to as little as 50% of the original by changing the reduction rate 5% at a time.

After step 3 on page 49, press **-** repeatedly to select the desired reduction rate, then press **COPY START**.

Example: 70% reduced copy

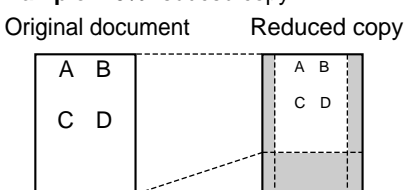


To collate multiple copies

The unit can collate multiple copies in the same order as the original document pages.

■ Using the auto document feeder

1. After step 3 on page 49, press **COLLATE** until the following is displayed.

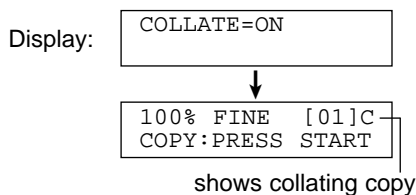


2. Press **COPY START**.

■ Using the scanner glass


1. After step 3 on page 49, press **COLLATE**.

2. Press **COPY START**.

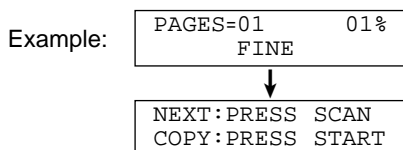

3. Place the next page.
4. Press **SCAN**.
 - To copy more pages, repeat steps 3 and 4.
5. Press **COPY START**.

Example: Making 2 copies of a 4-page original document

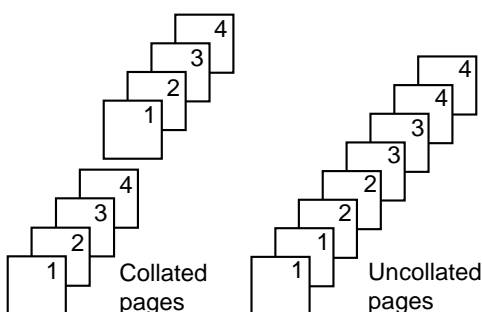

Note:

- The unit will store the documents into memory while collating the copies. If memory becomes full while storing, the unit will only print out the stored pages.
- After copying, the collating feature will turn off automatically.

Connecting to a computer


Panasonic Multi-Function Station software enables your fax machine to carry out the following functions:

- Printing on plain paper, transparencies, labels and envelopes
- Scanning documents and converting an image into text with Readiris OCR software
- Scanning from other applications for Microsoft® Windows® that support TWAIN scanning
- Storing, editing or erasing entries in directories using your PC
- Programming the basic and advanced features using your PC
- Sending, receiving fax documents using your PC

To run Multi-Function Station software, you need the following:


- OS: Works with Windows 95/98/Me/2000/XP and Windows NT® 4.0
- CPU:
 - Windows 95/98: Pentium® 90 MHz or higher processor
 - Windows Me: Pentium 150 MHz or higher processor
 - Windows NT4.0: Pentium 133 MHz or higher processor
 - Windows 2000: Pentium 166 MHz or higher processor
 - Windows XP: Pentium 300 MHz or higher processor
- Memory minimum:
 - Windows 95/98/NT4.0: 24 MB (32 MB or more is recommended.)
 - Windows Me: 32 MB (64 MB or more is recommended.)
 - Windows 2000: 64 MB
 - Windows XP: 128 MB
- Hard disk: More than 50 MB available space
- Other: Parallel (IEEE1284) port or USB port, and CD-ROM drive

- **When using an IEEE1284 compliant parallel cable:
Parallel cable (amphenol 36 pin) must be purchased separately.**

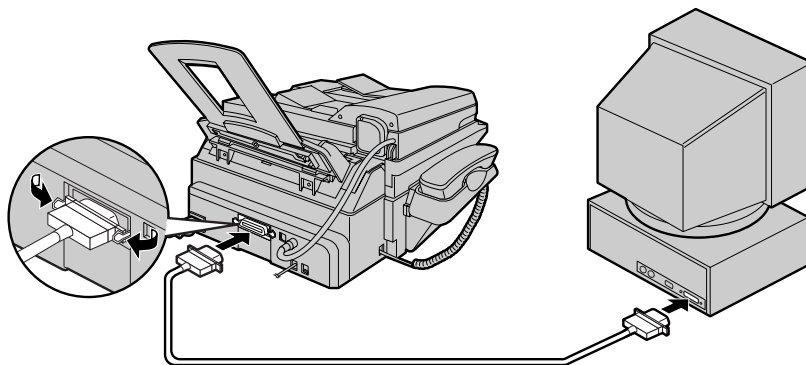

- **When using a USB cable (Windows 95/NT4.0 do not offer USB support):
USB cable must be purchased separately.**

After connecting the USB cable, you must set the cable type to “USB” (feature #15 on page 63).

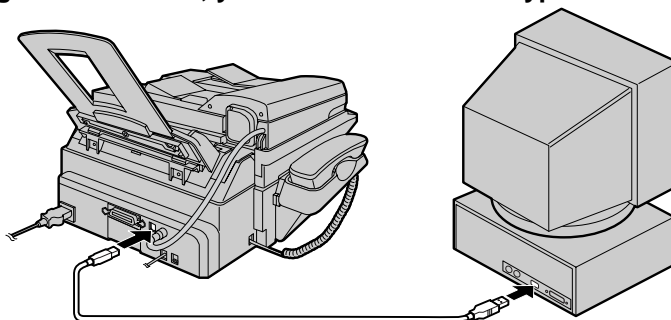

Note:

- If you want to replace the parallel cable with a USB cable and vice versa, see page 73.

Setup (PC)

Installing Multi-Function Station software

- 1 Connect the fax machine to the PC (page 51).
 - To use via USB connection, you must set the cable type to “USB” (feature #15 on page 63). The default setting is “PARALLEL”.


- 2 Start Windows 95/98/Me/NT4.0/2000/XP and close all other applications.

- The following dialogue box will appear. Click **[Cancel]** to close it.



- You must be logged in as an administrator in Windows NT4.0/2000/XP

- 3 Insert the included CD-ROM into your CD-ROM drive.
 - The **[Choose Setup Language]** dialogue box will appear. Select the desired language that you want to use with this software from the drop-down list. Click **[OK]**. The installation will automatically start.
 - If the **[Choose Setup Language]** dialogue box does not appear: The installation will automatically start.
 - If the installation does not start automatically: Click **[Start]**. Choose **[Run...]**. Type “d:\setup” (where “d:” is the drive letter of your CD-ROM drive). Click **[OK]**. (If you are not sure what the drive letter is for your CD-ROM drive, use Windows Explorer and look for the CD-ROM drive.)

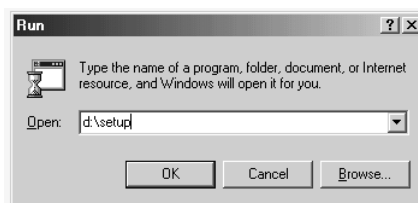

The installation will start.

- 4 Follow the instructions on the screen until all files have been installed.
 - Readiris OCR software can also be installed. For details about OCR software, see page 57.
 - If the fax machine is not connected to your computer, the **[Port Selection]** dialogue box will appear. Select the port number that you want to use. If the fax machine is connected to your computer, the port number will be automatically detected.

To uninstall the software

1. Click **[Start]**.
2. Point to **[Settings]**, then click **[Control Panel]**.
3. Double-click **[Add/Remove Programs]**.
4. Select **[Panasonic Multi-Function Station]** from the list.
5. Click **[Add/Remove...]** (Windows 95/98/Me/NT4.0) / **[Change/Remove...]** (Windows 2000/XP), then follow the instructions on the screen.


Important notice for USB cable users

- If you use a USB cable with Windows XP, the following message may appear: “The software you are installing for this hardware has not passed Windows Logo testing to verify its compatibility with Windows XP”
You can continue the installation with no problem.

- The screens shown in these instructions are from Windows Me.
- The screens may differ slightly from those of the actual product.
- The screens are subject to change for improvement without notice.

Activating Multi-Function Station software =====

- 1 Click [**Start**] in Windows.
- 2 Point to [**Programs**], point to [**Panasonic Multi-Function Station**] and click [**Launcher**].
 - [**Launcher**] will appear.

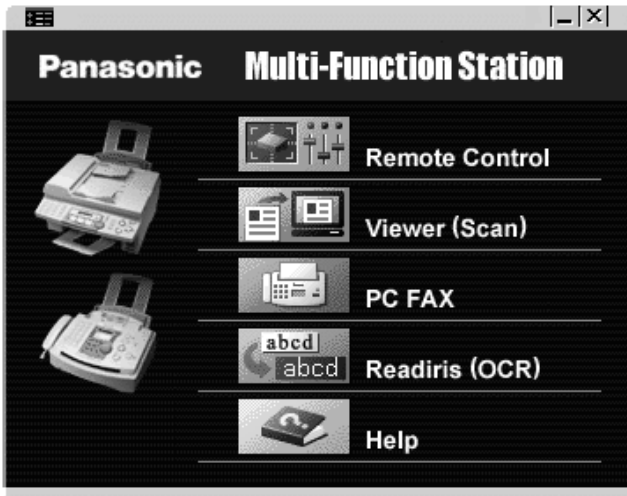

Remote Control (p. 58)

- To store, edit or erase entries in directories.
- To program the basic and advanced features.
- To view or erase items in the journal report or Caller ID list.
- To store caller information into directories.

Viewer (Scan) (p. 57)

- To display the images which support TIFF, JPEG, PCX, DCX and BMP formats.
- To create an image file by scanning the document set in the fax machine.

PC FAX (p. 59)

- To transmit a document created on the PC.
- To display a document received on the PC.

Readiris (OCR) (p. 57)

- To convert an image into editable text data.

Help

- For detailed instructions on Multi-Function Station.

Note:

- Each time Windows is started, the status monitor appears in the task tray on your computer. If there are any problems with the fax machine, it will display an error message on your computer.
- You can confirm if the fax machine is connected to your computer on the status monitor.
- Multi-function features (printing, scanning, etc.) may not function properly in the following situations:
 - When the fax machine is connected to a PC that was custom-built by the user.
 - When the fax machine is connected to the PC via a PCI card or other expansion card.
 - When the fax machine is connected to another piece of hardware (such as a USB hub or interface adapter) and not connected directly to the PC.

Printing (PC)


Using the fax machine as a printer

You can print not only on plain paper but also on special media (transparencies/labels/envelopes).

Printing from Windows applications

You can print a file created in a Windows application. For example, to print from Microsoft Word, proceed as follows:

- 1 Open the document you want to print.
- 2 Select **[Print...]** from the **[File]** menu.
 - The **[Print]** dialogue box will appear. For details about the **[Print]** dialogue box, click **[?]**, then click the desired item.

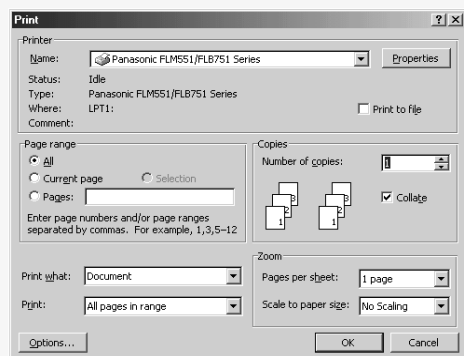

- 3 Select **[Panasonic FLM551/FLB751 Series]** as the active printer from the drop-down list.
 - If you want to change the printer setting, click **[Properties]**.
- 4 Set the printing information.
- 5 Click **[OK]**.
 - The fax machine will start printing.

Note:

- To load paper, see page 19.
- For details about the paper specifications, see pages 55, 56 and 83.

Setting the printer properties

You can change the printer setting in the **[Paper]** tab in step 3. We recommend that you test paper (especially special sizes and types of paper) on the fax machine before purchasing large quantities.

- Paper size
 - A4:** 210 mm x 297 mm
 - Letter:** 216 mm x 279 mm
 - Legal:** 216 mm x 356 mm
 - COM10:** 105 mm x 241 mm
 - DL:** 110 mm x 220 mm
- Orientation
 - Portrait:** To print in tall format.
 - Landscape:** To print in wide format.
- Media choice
 - Plain Paper (Standard):** For standard printing. The toner save feature will be off.
 - Plain Paper (Toner Save ON):** To save on toner consumption. The print quality may be lowered.
 - Transparency:** To print on a transparency.

Transparencies


Use transparencies designed for laser printing. Using transparencies incorrectly and/or transparencies not designed for Laser Printers may jam and/or cause damage to your machine which will not be covered by the warranty.

- **Load transparency sheets one page at a time for printing. Print side must face down.**
- **Remove each transparency after printing and place it on a flat surface to cool and to prevent it from curling.**
- Close the paper stacker extender (p. 18) while printing to prevent transparencies from curling.
- Do not re-use transparencies that have already been fed through the fax machine. This includes transparencies that have been fed through and ejected without being printed on.
- Some types of transparencies have instructions recommending which side to print on. If the print quality is poor, try printing on the other side.

Labels

Use labels designed for laser printing. Using incorrect labels may jam and/or cause damage to your machine which will not be covered by the warranty.

- **Load label sheets one page at a time for printing. Print side must face down.**
- **Remove each label after printing.**
- Do not use the following types of labels:
 - Labels that are wrinkled, damaged or separated from the backing sheet.
 - Any sheet of labels that has spaces in it where some of the labels have been removed.
 - Labels that do not completely cover the backing sheet (see below).

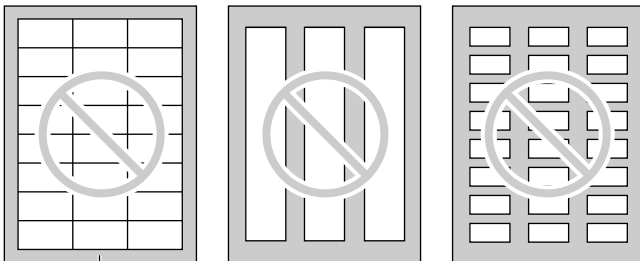

Backing sheet


Printing (PC)

Envelopes


Use envelopes designed for laser printing. Using incorrect envelopes may jam and/or cause damage to your machine which will not be covered by the warranty. We recommend the following:

- High quality envelopes of 90 g/m² paper,
- Envelopes that have thin, sharply creased leading edges, and
- Envelopes that have diagonal seams as shown.

- You can load up to 10 envelopes of 90 g/m² paper at a time for printing. Print side must face down.
- Remove each envelope after printing.
- Wrinkles may occur in some cases, even if high quality envelopes are used.
- Avoid printing in high humidity, above 70% relative humidity (RH). High humidity may cause the envelope to curl, pick up excess toner or seal the envelope.
- Avoid printing below 10 °C with less than 30% RH, or it may cause light printing.
- Store envelopes away from moisture and humidity, where they can lay flat and their edges will not be bent or damaged. The humidity should not exceed 70% RH.

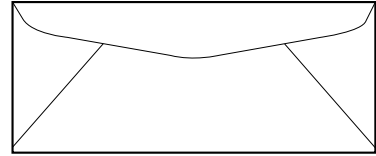

Insert envelopes as shown.

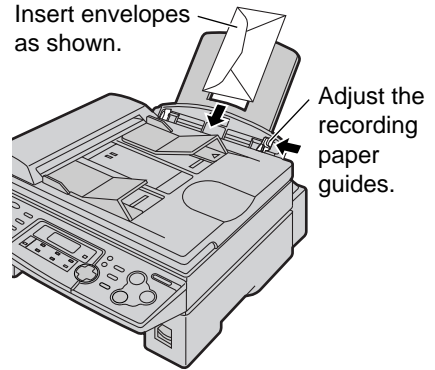

Do not use envelopes with any of the following characteristics (using these may result in paper jams):

- Irregularly shaped envelopes
- Envelopes with curls, wrinkles, nicks, twists, dog-ears or other damage
- Envelopes with side seam construction
- Highly textured envelopes, or envelopes with extremely shiny surfaces
- Envelopes that seal by removing a peel-off strip
- Envelopes with more than one flap to be sealed
- Self-adhesive envelopes
- Envelopes that are baggy or not sharply creased
- Embossed envelopes
- Envelopes that have previously been printed on
- Envelopes that include cotton and/or fibre material



Side seam construction



Peel-off strip



Multiple flaps



Twist



Curl



Bent-edge



Wave




Dog-ear



Self adhesive

Do not attempt to print on any of the following types of envelopes (these may cause damage to the fax machine):

- Envelopes with clasps, snaps or tie strings
- Envelopes with transparent windows
- Envelopes that use encapsulated types of adhesive that do not require moistening but rely on pressure to seal them



Clasp



Transparent window

Using the fax machine as a scanner

Using Multi-Function Viewer

- 1 Using the auto document feeder**
Insert the document (up to 15 pages) FACE DOWN in the fax machine.

Using the scanner glass

Place the document FACE DOWN on the scanner glass of the fax machine.

- 2** Press **[SCAN]**.
 - The **[Panasonic FLM551/FLB751 Series]** dialogue box will appear.
 - If the dialogue box does not appear, check the connection of the PC and the fax machine.
- 3** If necessary, change the setting of **[Scan Configuration]**, **[Custom Scan Settings]**, **[Contrast]** and **[Paper]**.

- 4** Click **[Scan]**.
 - The scanned image will be displayed in the **[Multi-Function Viewer]** window after scanning.
 - To save the scanned image, select **[Save]** from the **[File]** menu.
 - To cancel scanning while the document is being scanned, click **[Cancel]**.

Note:

- You can display the images which support TIFF, JPEG, PCX, DCX and BMP formats.
- You can move, copy and delete a file or page.

Readiris OCR software

With OCR software, you can convert an image into text data that can be edited with word processor software. Readiris OCR software can be installed when installing Multi-Function Station software. To use this software, click the **[OCR]** icon in the **[Multi-Function Viewer]** window or select **[Readiris (OCR)]** from **[Launcher]**. For detailed instructions about OCR, select **[Help]**.

Using other applications

Multi-Function Station includes a TWAIN compliant scanner driver. You can also scan using other applications that support TWAIN scanning. For example, to scan from Imaging for Windows, proceed as follows:

- 1 Using the auto document feeder**
Insert the document (up to 15 pages) FACE DOWN in the fax machine.

Using the scanner glass

Place the document FACE DOWN on the scanner glass of the fax machine.

- 2** Start Imaging for Windows.
- 3** Select **[Select Scanner...]** (Windows 95/98/Me/NT4.0) / **[Select Device...]** (Windows 2000) from the **[File]** menu, then select the **[Panasonic FLM551/FLB751 Series]** in the dialogue box.

- 4** Select **[Scan New...]** (Windows 95/98/Me/NT4.0) / **[Acquire Image...]** (Windows 2000) from the **[File]** menu, or click the **[Scan New]** icon in the tool bar.

- The **[Panasonic FLM551/FLB751 Series]** dialogue box will appear.
- If the dialogue box will not appear, check the connection of the PC and the fax machine.

- 5** If necessary, change the setting of **[Scan Configuration]**, **[Custom Scan Settings]**, **[Contrast]** and **[Paper]**.

- 6** Click **[Scan]**.
 - The scanned image will be displayed in the **[Imaging for Windows]** window after scanning.
 - To cancel scanning while the document is being scanned, click **[Cancel]**.

Remote Control (PC)

Operating the fax machine from your computer ≡


You can easily operate the following functions from your computer.

- Storing, editing or erasing entries in directories (p. 26–28, 38–40)
- Programming the basic and advanced features (p. 62–66)
- Viewing or erasing items in the journal report (p. 35)
- Storing the journal report as PC file
- Viewing or erasing items in the Caller ID list (p. 30)
- Storing caller information into directories (p. 33)
- Storing the Caller ID list as PC file

1 Start Multi-Function Station.

2 Select **[Remote Control]**.

- The **[Multi-Function Remote Control]** window will appear.

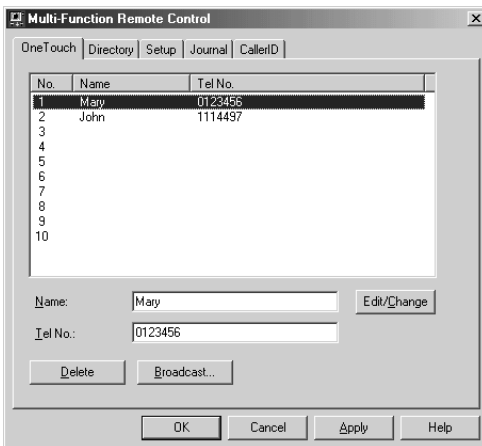

3 Select the desired tab.

- The latest data in the fax machine will be displayed.

4 Perform the desired operation.

- For details about each function, click **[Help]**.
- To stop the operation, click **[Cancel]**.

5 Click **[OK]**.

- The new data will be transferred to the fax machine and the window will close.
- You can also click **[Apply]** to continue the next operation without closing the window.

Note:

- Some of the basic and advanced features cannot be programmed from your computer.


Fax sending/receiving using Multi-Function Station software

Sending a PC document as a fax message from your PC


You can access the fax function from a Windows application using Multi-Function Station software.

For example, to send a document created from Microsoft Word, proceed as follows:

- 1 Open the document you want to send.
- 2 Select **[Print...]** from the **[File]** menu.
 - The **[Print]** dialogue box will appear.

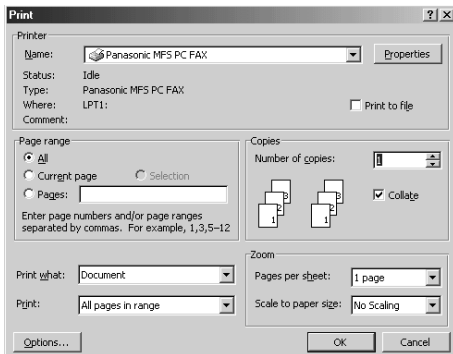

- 3 Select **[Panasonic MFS PC FAX]** as the active printer.
- 4 Click **[OK]**.
 - The **[Send a fax]** dialogue box will appear.

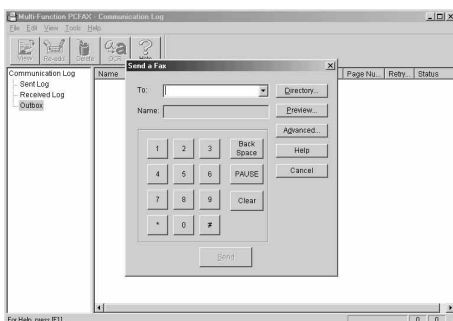

- 5 Enter the fax number using the keypad display or the directory.

- 6 Click **[Send]**.
 - The document will be sent through the fax machine from your PC.

Note:


- To stop transmission, press **[STOP]** on the fax machine.
- If the document exceeds the memory capacity of your fax machine, sending will be cancelled.

Receiving a fax into your PC

You can receive a fax on your computer. The received fax document is saved as an image file (TIFF-G4 format).

1 Start Multi-Function Station.

2 Select **[PC FAX]**.

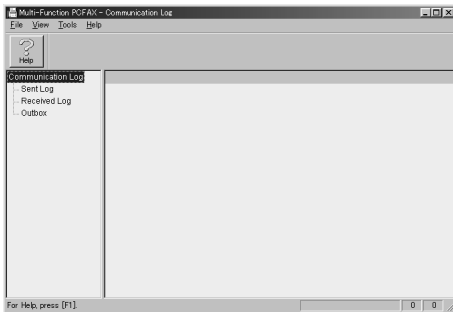

3 When a fax call is received, your PC will receive a document through the fax machine.


Note:

- You can view, print or transfer the received document using your PC.
- If Multi-Function PC FAX has not started, the received document will be printed on the fax machine.

Viewing a received document

1. Select **[PC FAX]**.

2. Select **[Received Log]** in **[Communication Log]**.

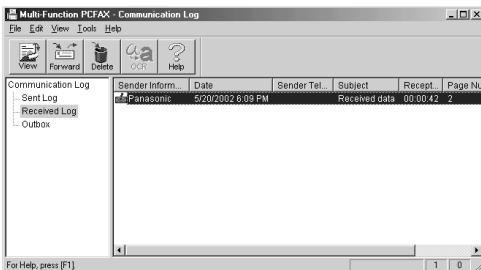

3. Click the item you want to view.

4. Click **[File]** in the menu bar, then select **[View]**, or click **[View]** in the toolbar.


- The received fax will be displayed.

If you do not want to be disturbed by incoming faxes while using the PC

You can change the setting to receive a fax directly on the fax machine.

1. Click **[Tools]** in the menu bar, then click **[Function Setup]**.

- The **[Function Setup]** dialogue box will appear.

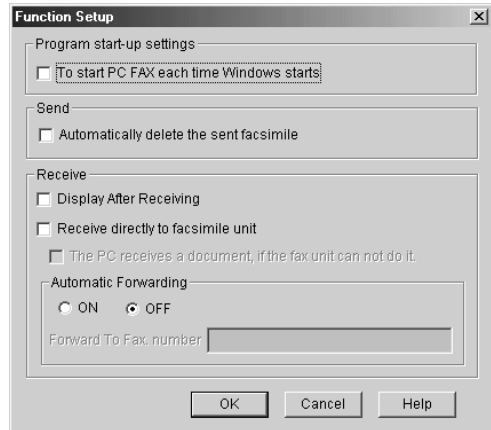

2. Click **[Receive directly to facsimile unit]**.

3. Click **[OK]**.

If the fax machine's memory stores a received fax document

You can load the document into your PC.

1. Select **[PC FAX]**.

2. Select **[Received Log]** in **[Communication Log]**.

3. Click **[File]** in the menu bar, then click **[Receive a fax]**.

Programming

The unit provides various programming features. Program the desired settings by referring to the programming tables (p. 62–66).

General programming method

1 Press **MENU**.

Display:

SYSTEM SET UP
PRESS NAVI. [◀ ▶]

2 Select the feature you wish to program.
For basic features (p. 62, 63):

Press **◀** or **▶** until the desired feature is displayed.

For advanced features (p. 64–66):

Press **◀** or **▶** until the following is displayed:

ADVANCED MODE
PRESS SET

then press **SET** and press **◀** or **▶** until the desired feature is displayed.

- The current setting of the feature will be displayed.


3 Press **+** or **-** until the desired setting is displayed.

- This step may be slightly different depending on the feature.

4 Press **SET**.

- The setting you selected is set, and the next feature will be displayed.

5 To exit programming, press **MENU**.

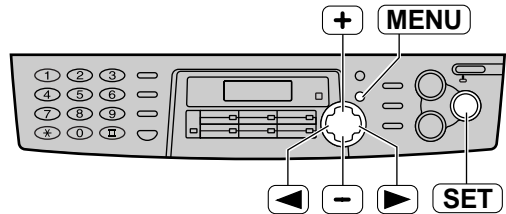

Programming by entering the program code number directly

You can select a feature by directly entering the program code (# and 2-digit number) instead of using **◀** or **▶** in step 2.

1. Press **MENU**.
2. Press **#** and the 2-digit code number.
3. Follow steps 3 to 5 above.

- See programming tables for code numbers (p. 62–66).

To cancel programming

Press **MENU** to exit the program.

Features Summary

Basic features

How to set the basic features

1. Press **MENU**.
2. Press **◀** or **▶** until the desired feature is displayed.
3. Press **+** or **-** until the desired setting is displayed.
4. Press **SET**.
5. Press **MENU**.

Note:

- Step 3 may be slightly different depending on the feature.
- See page 61 for more details.

Programming table

For the settings column, the bold type indicates the default setting.

Code	Feature & Display	Settings	How the unit operates
#01	Setting the date and time <div style="border: 1px solid black; padding: 2px; width: fit-content;">SET DATE & TIME PRESS SET</div>	/	See page 21 for details.
#02	Setting your logo <div style="border: 1px solid black; padding: 2px; width: fit-content;">YOUR LOGO PRESS SET</div>	/	See page 22 for details.
#03	Setting your facsimile telephone number <div style="border: 1px solid black; padding: 2px; width: fit-content;">YOUR FAX NO. PRESS SET</div>	/	See page 24 for details.
#04	Printing the sending report <div style="border: 1px solid black; padding: 2px; width: fit-content;">SENDING REPORT =ERROR [±]</div> To print and check the sending report for fax transmission results (p. 35).	ERROR	"ERROR": The sending report will be printed only when fax transmission fails. "ON": The sending report will be printed out after every transmission.
		ON	
		OFF	
#06	Changing the ring setting in FAX ONLY mode <div style="border: 1px solid black; padding: 2px; width: fit-content;">FAX RING COUNT RINGS=2 [±]</div> To change the number of rings before the unit answers a call in FAX ONLY mode.	2, 3, 4, 5, 6, 7, 8, 9	If you are using the unit with an answering machine, set to more than 4 (p. 46).

Features Summary

Code	Feature & Display	Settings	How the unit operates
#12	Securing the remote operation for the answering machine <div style="border: 1px solid black; padding: 2px; width: fit-content;"> REMOTE TAM ACT. =OFF [±] </div> <p>If you are using the unit with an answering machine, activate this feature, and set the remote activation ID to secure the remote operation for the answering machine.</p>	ON / ID=11	To select "ON" and enter ID: 1. Press MENU . 2. Press ◀ or ▶ and select this feature. 3. Press + or - to select "ON". 4. Press SET . 5. Enter your ID from 1 to 5 digits, using 0–9, * and #. 6. Press SET . 7. Press MENU .
		OFF	
#13	Setting the dialling mode (For Australian users only) <div style="border: 1px solid black; padding: 2px; width: fit-content;"> DIALLING MODE =TONE [±] </div> <p>If you cannot dial, change the setting depending on your telephone line service.</p>	TONE	"TONE": For tone dial service. "PULSE": For rotary pulse dial service.
		PULSE	
#15	Selecting the cable type to connect to the PC <div style="border: 1px solid black; padding: 2px; width: fit-content;"> PC INTERFACE =PARALLEL [±] </div> <p>If you use Multi-Function Station, change the setting depending on the cable connected to your computer.</p>	PARALLEL	"PARALLEL": IEEE1284 compliant parallel cable "USB": USB cable ● When the setting is changed, the fax machine adjusts to new setting. Please wait.
		USB	
#16	Setting the recording paper size <div style="border: 1px solid black; padding: 2px; width: fit-content;"> PAPER SIZE =A4 [±] </div>	LETTER	"LETTER": Letter size paper "A4": A4 size paper "LEGAL": Legal size paper
		A4	
		LEGAL	
#17	Setting the ringer pattern <div style="border: 1px solid black; padding: 2px; width: fit-content;"> RINGER PATTERN =A [±] </div>	A, B, C	You can select the ringer pattern. The selected ringer pattern will sound during setting.

Features Summary

Advanced features

How to set the advanced features

1. Press **MENU**.
2. Press **◀** or **▶** until the following is displayed:
3. Press **+** or **-** until the desired setting is displayed.
4. Press **SET**.
5. Press **MENU**.

```

ADVANCED MODE
PRESS SET
    
```

then press **SET** and press **◀** or **▶** until the desired feature is displayed.

Note:

- Step 3 may be slightly different depending on the feature.
- See page 61 for more details.

Programming table

For the settings column, the bold type indicates the default setting.

Code	Feature & Display	Settings	How the unit operates
#22	Setting the journal report to print automatically <div style="border: 1px solid black; padding: 2px; width: fit-content;"> AUTO JOURNAL =ON [±] </div>	ON	"ON": The unit will print the journal report automatically after every 30 new fax communications (p. 35).
		OFF	
#23	Sending document overseas <div style="border: 1px solid black; padding: 2px; width: fit-content;"> OVERSEAS MODE =ERROR [±] </div> If you have difficulty sending an overseas fax, activate this feature before starting transmission. This feature makes sending documents easier as the transmission speed is slowed down.	NEXT FAX	"NEXT FAX": This setting is effective only for the next attempted fax transmission. After transmission, the unit will return to the previous setting. "ERROR": When the previous fax transmission fails and you redial the same number. • This feature is not available for broadcast transmission. • The calling charge may be higher.
		ERROR	
		OFF	
#25	Sending a fax at a specific time <div style="border: 1px solid black; padding: 2px; width: fit-content;"> DELAYED SEND =OFF [±] </div> This feature allows you to take advantage of low-cost calling hours offered by your telephone company. • The setting can be reserved to take place up to 24 hours in advance.	ON	To send a document: 1. Insert the document into the auto document feeder. 2. Follow steps 1 and 2 above. 3. Press + or - to select "ON". 4. Press SET . 5. Enter the fax number. 6. Press SET . 7. Enter the transmission start time. Press * to select "AM" or "PM". 8. Press SET . 9. Press MENU . • To cancel after programming, press STOP then SET .
		OFF	

Features Summary

Code	Feature & Display	Settings	How the unit operates
#26	Setting the Caller ID list to print automatically <div style="border: 1px solid black; padding: 2px; width: fit-content;"> AUTO CALL. LIST =ON [±] </div>	ON	"ON": The unit will print the Caller ID list automatically after every 30 new calls (p. 30).
		OFF	
#31	Setting the Distinctive Ring pattern <div style="border: 1px solid black; padding: 2px; width: fit-content;"> RING DETECTION =OFF [±] </div>	ON	See page 48 for details.
		OFF	
#37	Receiving other size documents <div style="border: 1px solid black; padding: 2px; width: fit-content;"> AUTO REDUCTION =ON [±] </div> To receive a fax document that is longer than your recording paper.	ON	"ON": The unit will fit a received document onto your recording paper.
		OFF	"OFF": The unit will print the original size.
#39	Changing the display contrast <div style="border: 1px solid black; padding: 2px; width: fit-content;"> LCD CONTRAST =NORMAL [±] </div>	NORMAL	"NORMAL": For normal contrast "DARKER": Used when the display contrast is too light.
		DARKER	
#41	Changing the fax activation code <div style="border: 1px solid black; padding: 2px; width: fit-content;"> FAX ACTIVATION =ON [±] </div> If you use an extension telephone and wish to use it to receive a fax, activate this feature, and enter the code (p. 48). ● This code is also used to receive a voice message and a fax in the same call (p. 47).	ON / CODE=*#9	<ol style="list-style-type: none"> 1. Follow steps 1 and 2 on page 64. 2. Press + or - to select "ON". 3. Press SET. 4. Enter your code from 2 to 4 digits, using 0–9, # and *. 5. Press SET. 6. Press MENU. ● Do not enter "0000".
		OFF	
#44	Setting the memory reception alert <div style="border: 1px solid black; padding: 2px; width: fit-content;"> RECEIVE ALERT =ON [±] </div> To alert you with a beeping sound when a document which has been received is stored into memory due to some existing problem.	ON	If you are alerted by a slow beeping sound, clear the printing problem and make sure the unit is supplied with enough paper to print the stored document. The beeps will stop.
		OFF	

Features Summary

Code	Feature & Display	Settings	How the unit operates
#58	Setting the original mode <div style="border: 1px solid black; padding: 2px; width: fit-content;">ORIGINAL =NORMAL [±]</div> To send or copy a document with faint or dark writing, set this feature before starting transmission or copying.	NORMAL	"NORMAL": Used for normal writing. "LIGHT": Used for faint writing. "DARKER": Used for dark writing.
		LIGHT	
		DARKER	
#68	Setting the Error Correction Mode (ECM) <div style="border: 1px solid black; padding: 2px; width: fit-content;">ECM SELECTION =ON [±]</div> To send a fax even if there is static interference on the telephone line.	ON	This feature is available when the transmitting/receiving stations are ECM compatible.
		OFF	
#74	Setting the location where you use this unit <div style="border: 1px solid black; padding: 2px; width: fit-content;">LOCATION =AUSTRALIA [±]</div> This setting must match your location.	AUSTRALIA	"AUSTRALIA": To use in Australia "NEW ZEALAND": To use in New Zealand
		NEW ZEALAND	
#76	Setting the connecting tone <div style="border: 1px solid black; padding: 2px; width: fit-content;">CONNECTING TONE =ON [±]</div> If you often have trouble when sending a fax, this feature allows you to hear connecting tones: fax tone, ring back tone and busy tone.	ON	You can confirm the status of the other party's machine. <ul style="list-style-type: none"> ● If the ring back tone continues, the other party's machine may not be a facsimile or may have run out of paper. Check with the other party. ● The connecting tone volume cannot be adjusted.
		OFF	
#79	Saving on toner consumption <div style="border: 1px solid black; padding: 2px; width: fit-content;">TONER SAVE =OFF [±]</div>	ON	"ON": The toner cartridge will last longer. <ul style="list-style-type: none"> ● This feature may lower the print quality.
		OFF	
#80	Resetting advanced features to their default settings <div style="border: 1px solid black; padding: 2px; width: fit-content;">SET DEFAULT RESET=NO [±]</div>	YES	<ol style="list-style-type: none"> 1. Follow steps 1 and 2 on page 64. 2. Press + or - to select "YES". 3. Press SET. 4. Press SET again. 5. Press MENU.
		NO	

Reports

If your unit cannot send a fax, check the following:

- The number you dialled is correct.
- The other party's machine is a facsimile.

If the problem remains, correct it by following the communication message printed on the sending and journal reports (p. 35).

COMMUNICATION ERROR

(CODE: 40–42, 46–72, FF)

- A transmission or reception error occurred. Try again or check with the other party.

COMMUNICATION ERROR

(CODE: 43, 44)

- A line problem occurred. Connect the telephone line cord to a different jack and try again.
- An overseas transmission error occurred. Try using the overseas mode of feature #23 (p. 64).

DOCUMENT JAMMED

- The document is jammed. Remove the jammed document (p. 78).

ERROR-NOT YOUR UNIT

(CODE: 54, 59, 70)

- A transmission or reception error occurred because of a problem with the other party's fax machine. Check with the other party.

MEMORY FULL

- The document was not received as a result of the memory being full.

NO DOCUMENT

- The document was not fed into the unit properly. Reinsert the document and try again.

OTHER FAX NOT RESPONDING

- The other party's fax machine is busy or has run out of recording paper. Try again.
- The document was not fed properly. Reinsert the document and try again.
- The other party's fax machine rings too many times. Send the fax manually (p. 34, 35).
- The other party's machine is not a facsimile. Check with the other party.
- The number you dialled is not in service.

PRESSED THE STOP KEY

- **STOP** was pressed and fax communication was cancelled.

THE COVER WAS OPENED

- The printer cover was opened. Close it and try again.

OK

- Fax communication was successful.

Error Messages

Display

If the unit detects a problem, one or more of the following messages will appear on the display.

Display message	Cause & solution
CALL SERVICE	<ul style="list-style-type: none"> There is something wrong with the unit. Contact our service personnel.
CARRIAGE ERROR	<ul style="list-style-type: none"> The shipping lock is locked. Unlock the shipping lock (p. 15). If the display messages still remain after unlocking, there is something wrong with the carriage sensor. Contact our service personnel.
RELEASE SHIPPING LOCK	
CHANGE DRUM	<ul style="list-style-type: none"> There is something wrong with the drum unit. Replace the drum unit and the toner cartridge (p. 74).
CHECK ADF CABLE	<ul style="list-style-type: none"> The ADF cable is not connected correctly. Check the connection (p. 15).
CHECK DOCUMENT	<ul style="list-style-type: none"> The document was not fed into the unit properly. Reinsert the document. If misfeeding occurs frequently, clean the document feeder rollers (p. 80) and try again.
CHECK DRUM	<ul style="list-style-type: none"> The drum unit is not inserted properly. Reinsert it correctly (p. 16).
CHECK MEMORY	<ul style="list-style-type: none"> The memory (telephone numbers, parameters, etc.) has been erased. Re-program.
CLOSE ADF COVER	<ul style="list-style-type: none"> The ADF cover is open. Close it.
COVER OPEN	<ul style="list-style-type: none"> The printer cover is open. Close it.
DATA IN MEMORY	<ul style="list-style-type: none"> You tried to change the cable type setting (feature #15 on page 63), while the fax machine has a document in memory. Finish sending faxes, print out the document in memory (p. 44) or cancel the delayed transmission (feature #25 on page 64) and try again.
DIRECTORY FULL	<ul style="list-style-type: none"> There is no space to store new entries in navigator directory. Erase unnecessary entries (p. 28).
FAILED PICK UP	<ul style="list-style-type: none"> Recording paper was not fed into the unit properly. Reinsert the recording paper (p. 77).
FAX IN MEMORY	<ul style="list-style-type: none"> The unit has a document in memory. See the other displayed message instructions to print out the document.
FAX MEMORY FULL	<ul style="list-style-type: none"> The memory is full of received documents due to a lack of recording paper or a recording paper jam. Install paper (p.19) or clear the jammed paper (p. 76). When performing memory transmission, the document being stored exceeds the memory capacity of the unit. Transmit the entire document manually.

Error Messages

Display message	Cause & solution
LINE IN USE	<ul style="list-style-type: none"> You cannot change the cable type setting (feature #15 on page 63) while the line is in use. Hang up and try again.
MEMORY FULL	<ul style="list-style-type: none"> When making a copy, the document being stored exceeds the memory capacity of the unit. Press STOP to clear the message. Divide the document into sections.
MODEM ERROR	<ul style="list-style-type: none"> There is something wrong with the modem circuit. Contact our service personnel.
NO FAX REPLY	<ul style="list-style-type: none"> The other party's fax machine is busy or has run out of recording paper. Try again.
OUT OF PAPER	<ul style="list-style-type: none"> Recording paper is not installed or the unit has run out of paper. Install paper (p. 19). Recording paper is not fed into the unit properly. Reinstall paper (p. 19).
PAPER JAMMED	<ul style="list-style-type: none"> A recording paper jam occurred. Clear the jammed paper (p. 76).
PC FAIL OR BUSY	<ul style="list-style-type: none"> The cable or the PC power cord is not connected correctly. Check the connections (p. 51). The software is not running on the PC. Restart the software and try again.
PLEASE WAIT	<ul style="list-style-type: none"> The unit is warming up. Wait for a while.
REDIAL TIME OUT	<ul style="list-style-type: none"> The other party's fax machine is busy or has run out of recording paper. Try again.
REMOVE DOCUMENT	<ul style="list-style-type: none"> The document is jammed. Remove the jammed document (p. 78). Attempted to transmit a document longer than 600 mm. Press STOP to remove the document. Divide the document into two or more sheets and try again.
TONER EMPTY	<ul style="list-style-type: none"> The toner cartridge is empty. Replace the toner cartridge (p. 74).
TONER LOW	<ul style="list-style-type: none"> The remaining toner is low. Replace the toner cartridge as soon as possible (p. 74). We recommend you replace the drum unit every third time you replace the toner cartridge. To check the drum life and quality, please print the printer test list (p. 81).
TRANSMIT ERROR	<ul style="list-style-type: none"> A transmission error occurred. Try again.
WRONG PAPER	<ul style="list-style-type: none"> The fax message was printed on paper which is shorter than A4 size paper. Use the appropriate size paper (p. 19).

When a function does not work, check here

General

I cannot make and receive calls.

- The power cord or telephone line cord is not connected. Check the connections (p. 20).
- If you used a splitter to connect the unit, remove the splitter and connect the unit to the wall jack directly. If the unit operates properly, check the splitter.

I cannot make calls.

- The dialling mode setting is wrong. Change the setting of feature #13 (p. 63). (Australian users only)

The unit does not work.

- Disconnect the unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your telephone company.

The unit does not ring.

- The ringer volume is set to off. Adjust it (p. 25).

The other party complains they only hear a fax tone and cannot talk.

- FAX ONLY mode is set. Tell the other party the number is only used for faxes.
- Change to TEL mode (p. 44).

The **REDIAL/PAUSE** button does not function properly.

- If this button is pressed during dialling, a pause will be inserted. If pressed immediately after a dial tone is obtained, the last number dialled will be redialled.

During programming, I cannot enter the code or ID number.

- All or part of the numbers are the same. Change the number of features #12 (p. 63) and #41 (p. 65).

The unit beeps.

- Recording paper has run out. Press **STOP** to stop the beeps and install paper.

Fax – sending

I cannot send documents.

- The telephone line cord is connected to the “EXT” jack on the unit. Connect to the “LINE” jack (p. 20).
- The other party’s fax machine is busy or has run out of recording paper. Try again.
- The other party’s machine is not a facsimile. Check with the other party.
- The other party’s fax machine rings too many times. Send the fax manually (p. 34, 35).

The other party complains that letters on their received document are distorted or not clear.

- If your line has special telephone services such as call waiting, the service may have been activated during fax transmission. Connect the unit to a line that does not have these services.
- The extension telephone on the same line is off the hook. Hang up the extension telephone and try again.
- Try copying the document. If the copied image is clear, there may be something wrong with the other party’s machine.

The other party complains that dirty patterns or black lines appear on their received document.

- The white plate or scanner glass is dirty. Clean them (p. 78).

I cannot send a fax overseas.

- Use the overseas transmission mode of feature #23 (p. 64).
- Add two pauses at the end of the telephone number or dial manually.

Fax – receiving

I cannot receive documents.

- The telephone line cord is connected to the “EXT” jack on the unit. Connect to the “LINE” jack (p. 20).

I cannot receive documents automatically.

- The receiving mode is set to TEL mode. Set to FAX ONLY mode (p. 45).
- The time taken to answer the call is too long. Decrease the number of rings of feature #06 (p. 62).

The display shows the following, but faxes are not received.

CONNECTING

- The incoming call is not a fax. Change the receiving mode to TEL mode (p. 44).

A blank sheet is ejected.

- The other party placed the document in their fax machine the wrong way. Check with the other party.

A white line or a dirty pattern appears on your recording paper.

- The white plate, scanner glass or lower glass are dirty. Clean them (p. 78–80).

The printing quality is poor.

- The other party sent a faint document. Ask them to send a clearer copy of the document.
- Some paper has instructions recommending which side to print on. Try turning the paper over.
- You may have used paper with a cotton and/or fibre content that is over 20%, such as letterhead or resume paper.
- The remaining toner is low. Replace the toner cartridge (p. 74).
- We recommend you replace the drum unit every third time you replace the toner cartridge (p. 74). To check the drum life and quality, please print the printer test list (p. 81).
- The toner save mode of feature #79 is on (p. 66).


The other party complains that they cannot send a document.

- The memory is full of received documents due to a lack of recording paper or a recording paper jam. Install paper (p. 19) or clear the jammed paper (p. 76).


Receiving mode

I cannot select the desired receiving mode.

- If you want to set FAX ONLY mode:
 - Press **AUTO ANSWER** to turn on the FAX ON light.

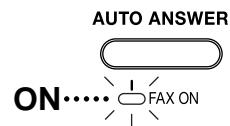

- If you want to set TEL mode:
 - Press **AUTO ANSWER** to turn off the FAX ON light.



The other party complains that they cannot send a document.

- The unit is not set to FAX ONLY mode. Press **AUTO ANSWER** to turn on the FAX ON light.

Copying


The unit does not make a copy.

- You cannot make a copy during programming. Make the copy after programming or stop programming.

A black line, a white line or a dirty pattern appears on the copied document.

- The white plate, scanner glass or lower glass are dirty. Clean them (p. 78–80).

The printing quality is poor.



- Some paper has instructions recommending which side to print on. Try turning the paper over.
- You may have used paper with a cotton and/or fibre content that is over 20%, such as letterhead or resume paper.
- The remaining toner is low. Replace the toner cartridge (p. 74).
- We recommend you replace the drum unit every third time you replace the toner cartridge (p. 74). To check the drum life and quality, please print the printer test list (p. 81).
- The toner save mode of feature #79 is on (p. 66).
- When you make a copy from transparencies, be sure to use the scanner glass. Place a blank sheet of paper on the top of the transparency, and leave the document cover open during copying (p. 49).

Using an answering machine

I cannot receive documents automatically.

- Your greeting message on the answering machine is too long. Shorten the message. Record a message up to 10 seconds long.
- The answering machine rings too many times. Set to 1 or 2 rings.

I cannot receive voice messages.

- Check if the answering machine is turned on and connected to the fax machine properly (p. 46).
- Set the number of rings on the answering machine to 1 or 2.

I cannot retrieve recorded voice messages on the answering machine from a remote location.

- You did not program your remote access code into your fax machine correctly. Program the same code that is programmed on the answering machine on the fax machine with feature #12 (p. 63).

I pressed the remote access code to access the answering machine remotely, but the line was disconnected.

- The code may include “#” which is used for certain features provided by telephone companies. Change the code on the answering machine to another number which does not include “#”. Also change the code of the fax machine with feature #12 (p. 63).

Callers complain that they cannot send a document.

- Your answering machine has run out of recording tape. Rewind the tape to record messages.
- You set the answering machine to only give a greeting message.

Multi-Function Station

I cannot open a TIFF file.

- You must change the compression format of the file.

Example: To convert an image using Imaging for Windows.

1. Click **[Start]**, point to **[Programs]** — **[Accessories]**, then click **[Imaging]**.
2. Open the TIFF file that you cannot open in **[Multi-Function Viewer]**.
3. Select **[Properties]** from the **[Page]** menu.
— The **[Page Properties]** dialogue box will appear.
4. Click the **[Compression]** tab, then select **[CCITT Group 3 (1d) Modified Huffman]** from the drop-down list.
5. Click **[OK]**.
— The compression format of the file is now changed.

[Launcher] disappears.

- Look in the tool bar. If you do not find the **[Launcher]** icon, it is closed. If you do find the icon, it is just minimized. Click the icon in the tool bar.

I cannot recognize the last part of an entry in the list of the [One Touch], [Directory], [Journal] or [Caller ID].

- Put the cursor on the line between the buttons. The cursor changes shape and you can expand the area by dragging or double-clicking.

When I exit Multi-Function Station, the [Multi-Function Viewer] window does not close.

- The **[Multi-Function Viewer]** window can be operated separately. Click the **[X]** button to close the window.

I cannot scan.

- When scanning at a high resolution, a large amount of available memory is required. If your PC warns of insufficient memory, close all other applications and try again.
- The fax machine is in use. Try again later.
- There is not enough space on the hard disk. Delete unnecessary files and try again.
- Restart the PC, and try again.
- Check the connection of the PC and the fax machine (p. 51).
- You attempted to scan a document longer than the paper size which you set in the **[Panasonic FLM551/FLB751 Series]** dialogue box. Change the setting or divide the document into the appropriate paper size, and try again.

The document does not feed into the fax machine.

- Remove the document and reinsert it.

Even after clicking [Cancel], scanning continues.

- Please wait. It may take a while for the cancel request to be accepted.

Multi-Function Station does not work properly.

- Click the **[X]** button to exit Multi-Function Station, and restart. If Multi-Function Station still does not close, restart the PC.
- If you connect the USB cable to USB hub, connect it to the USB port of your computer directly.

- Confirm the BIOS setting of your computer. For parallel connection, select ECP, Bi-directional or an equivalent parallel port mode. For USB connection, select USB port mode. Please refer to your PC operating instructions or consult the manufacturer.

- If you have any other multifunction softwares installed on your computer, uninstall them.

I want to replace the parallel cable with a USB cable and vice versa.

- You must change the printer properties.
 1. Replace the cables.
 2. Set the connection type (parallel or USB) by using the fax machine according to the cable type you use (feature #15 on page 63).
 3. Click **[Start]**, point to **[Settings]**, then click **[Printers]**.
 4. Right-click **[Panasonic FLM551/FLB751 Series]** and click **[Properties]**.
 - The **[Panasonic FLM551/FLB751 Series Properties]** dialogue box will appear.
 5. Click the **[Details]** (Windows 98/Me) / **[Ports]** (Windows 2000/XP) tab, select the connection type, then click **[OK]**.
 - If Multi-Function Station does not work correctly, uninstall the software, then re-install it.

Note for Australian users:

- Panasonic Australia operates a toll free Customer Care Centre. Please call 132600 for assistance.
Or visit the website www.panasonic.com.au.

Note for New Zealand users:

- Panasonic New Zealand operates a toll free Customer Support Centre. Please call 0800-Panasonic (0800-726276) for assistance.

If a power failure occurs

- The unit will not function.
- The unit is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.
- Fax transmission and reception will be interrupted.

- If any fax documents are stored in the memory, they will be lost. When power is restored, a power down report will be printed out stating which contents in the memory have been erased.

Replacement

Replacing the toner cartridge and the drum unit ≡≡≡

When the display shows the following, replace the toner cartridge.

TONER LOW

or

TONER EMPTY

We recommend you replace the drum unit every third time you replace the toner cartridge. To check the drum life and quality, please print the printer test list (p. 81).

To ensure that the unit operates properly, we recommend the use of **Panasonic toner cartridge (Model No. KX-FA76A) and drum unit (Model No. KX-FA78A)**. See page 9 for accessory information.

- **We cannot be responsible for any damage to the unit or degradation of print quality which may occur from the use of a non-Panasonic toner cartridge and drum unit.**


Caution:

- **The drum unit contains a photosensitive drum. Exposing it to light may damage the drum.**
Once you have opened the protection bag:
 - Do not expose the drum unit to light for more than 5 minutes.
 - Do not touch or scratch the green drum surface.
 - Do not place the drum unit near dust or dirt, or in a high humidity area.
 - Do not expose the drum unit to direct sunlight.
- **Do not unplug the fax machine to prevent loss of fax documents in memory.**
- **Do not leave the toner cartridge out of the protection bag for a long time. It will decrease the toner life.**
- **Do not pour any toner into the toner cartridge.**


- 1** Before opening the protection bag of the new toner cartridge, shake it vertically more than 5 times.




- 2** Remove the new toner cartridge from the protection bag. Peel off the seal from the toner cartridge.

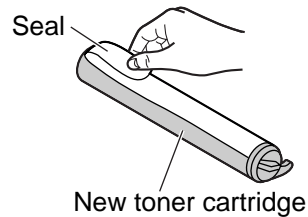


- 3** Press down the printer cover open button then open the printer cover.

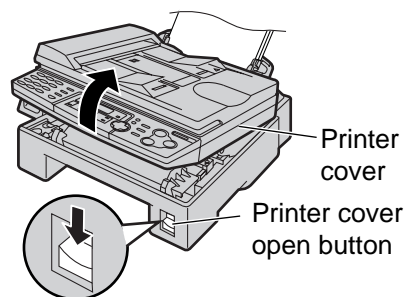


- 4** Tap on the used toner cartridge several times to allow the remaining toner to fall into the drum unit. Remove the drum and toner unit by holding the two tabs.
- If you replace the toner cartridge and the drum unit at the same time, skip to step 7.

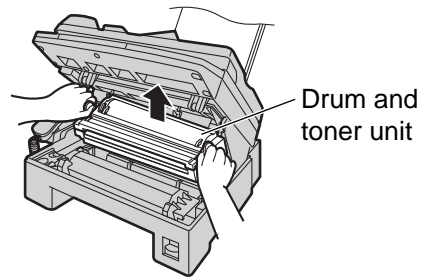

- 5** Turn the two levers on the used toner cartridge firmly.

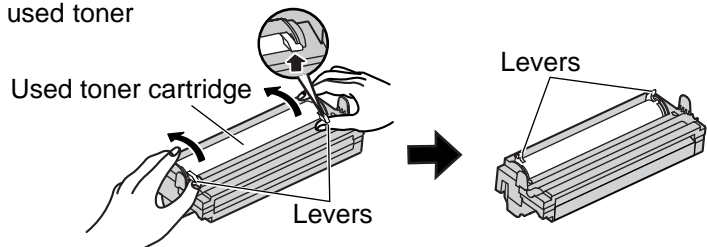


- 6** Pull up the right edge of the used toner cartridge (①). Remove the cartridge from the drum unit (②).
- The toner may stick to the cartridge and the drum unit. Be careful when handling. See page 7 for details.
 - Do not drop the toner on the green drum surface.
 - Put the used toner cartridge into the protection bag.

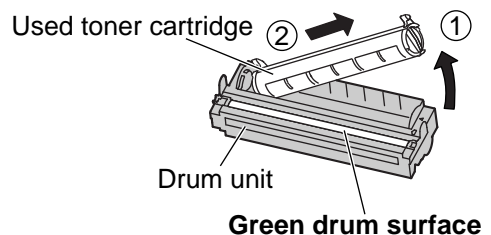


- 7** If you replace the drum unit at the same time, remove the new drum unit from the protection bag. Remove the protection bar from the drum unit.


With "Panasonic" face up on the toner cartridge, match the red arrows on the cartridge and the drum unit.

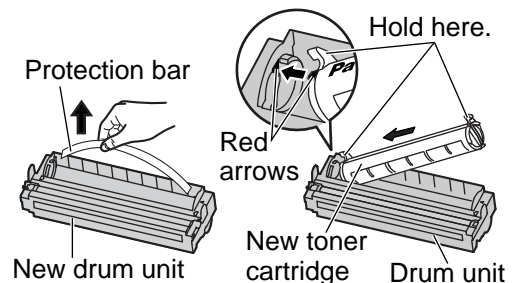

- 8** Slide the tab on the toner cartridge into the slot of the drum unit.

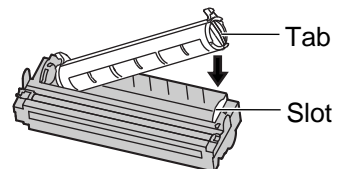


- 9** Firmly press down on the right side of the toner cartridge to snap into position.

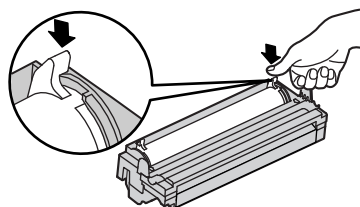


Replacement / Jams

10 Turn the two levers on the toner cartridge with firm pressure.

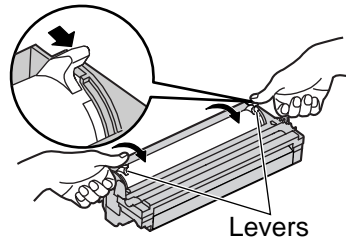


11 The toner cartridge is installed when the triangles match.

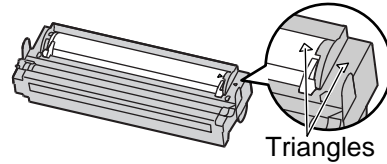


12 Install the drum and toner unit by holding the tabs.


- If the lower glass is dirty, clean it with a soft and dry cloth.

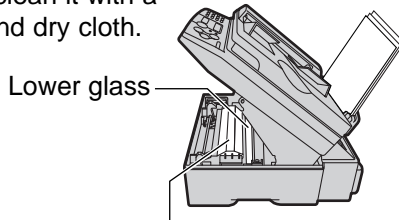

Caution:
Do not touch the bottom of this cover when cleaning the lower glass. It is very hot.

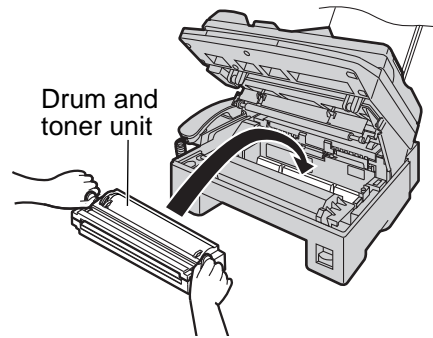

13 Close the printer cover by pushing down on both sides until locked.

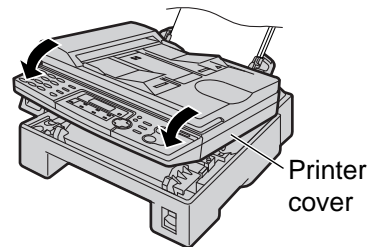

Waste disposal method

- Waste material may be dumped or incinerated under conditions which meet all country and local environmental regulations.


Recording paper jam

When the recording paper has jammed in the unit

The display will show the following.


PAPER JAMMED

1 Press down the printer cover open button then open the printer cover.

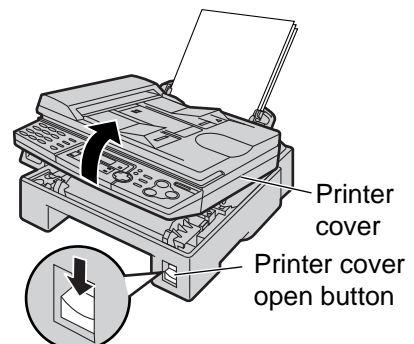


2 When the recording paper has jammed near the drum and toner unit:

Remove the jammed paper carefully by pulling it toward you.

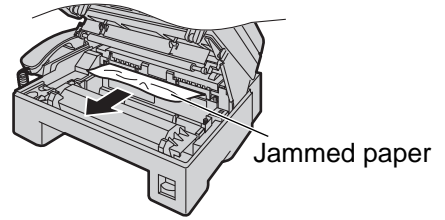


When the recording paper has jammed near the recording paper exit (Fuser unit):

Remove the recording paper (①), then remove the drum and toner unit to allow the jammed paper to pull free from the rear cabinet (②).

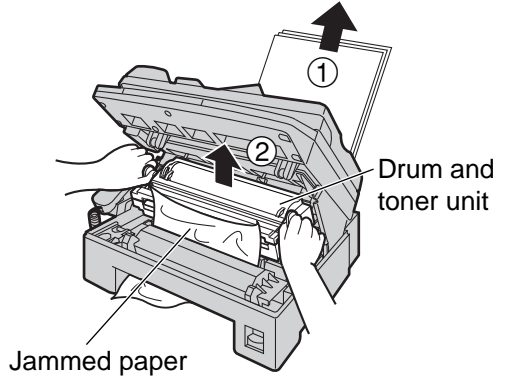


Remove the jammed paper from fuser unit by pulling it upwards carefully.

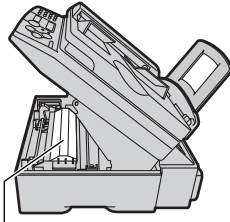

Caution:

Do not touch the bottom of this cover. It is very hot.

- 3** Close the printer cover by pushing down on both sides until locked (①). Straighten and reinsert the recording paper into the recording paper entrance (②).

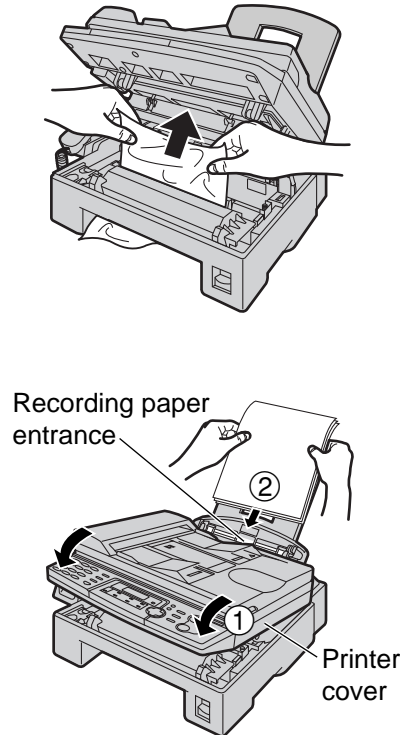


When the recording paper is not fed into the unit properly

The display will show the following.

FAILED PICK UP



Remove the recording paper. Straighten and reinsert it into the recording paper entrance.

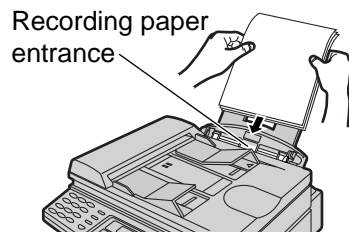

Jams / Cleaning

Document jams - sending

- 1** Lift, and hold open the ADF cover.
 - Do not pull out the jammed document forcibly before lifting the ADF cover.
- 2** Remove the jammed document carefully.
 - If you cannot remove the jammed document, open the document cover, remove the document, then close the document cover.

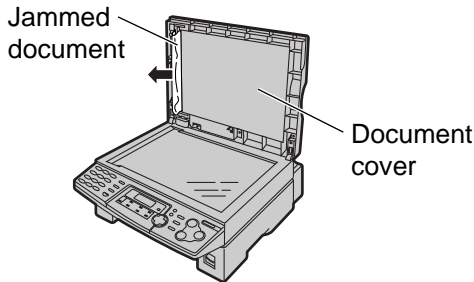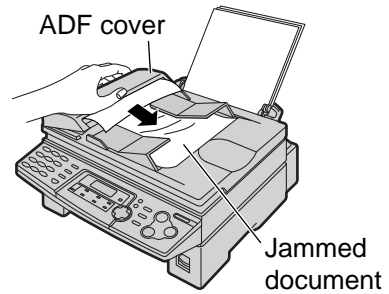


- 3** Close the ADF cover.

White plate and glasses

If a black line, a white line or a dirty pattern appears on your recording paper, on your original, or on the fax document received by the other party, clean the white plate, scanner glass and lower glass.


White plate and scanner glass

- 1** Open the document cover.
- 2** Clean the white plate and scanner glass with a soft and dry cloth.
- 3** Close the document cover.

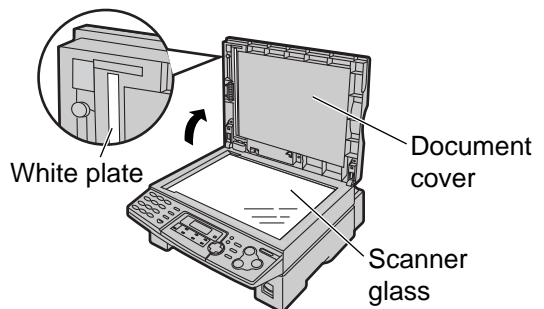

Attaching the white sheet to the document cover

If the white sheet is detached from the document cover when cleaning, place the white sheet on the scanner glass with the fastener facing up, matching the top edge of the white sheet to the “▽” mark on the unit, and close the document cover.

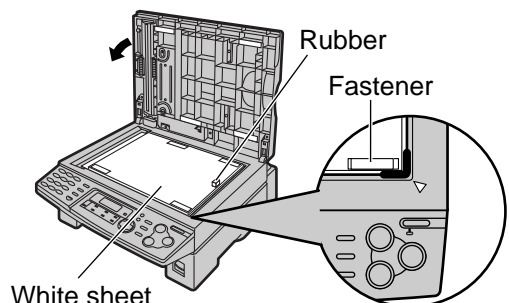

Lower glass


Caution:

- Be careful when handling the drum and toner unit. See the caution for the drum unit on page 74 for details.
- Do not use paper products, such as paper towels or tissues, to clean the inside of the unit.




The area near the lower glass is hot. We recommend to clean the lower glass after the unit cools.


- 1** Disconnect the power cord and the telephone line cord.

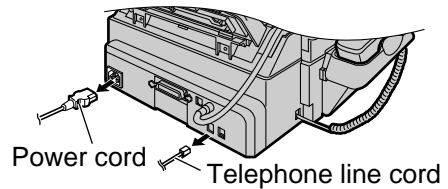

- 2** Press down the printer cover open button then open the printer cover.

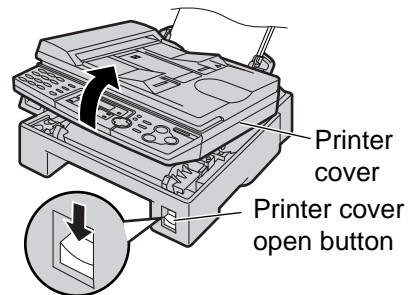

- 3** Remove the drum and toner unit by holding the two tabs.

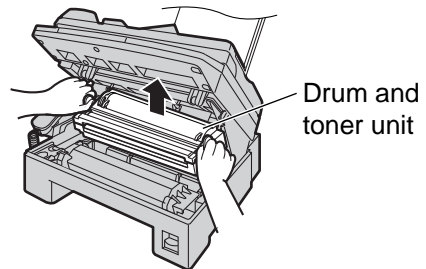


- 4** Clean the lower glass with a soft and dry cloth.




Caution:

Do not touch the bottom of this cover when cleaning the lower glass. It is very hot.

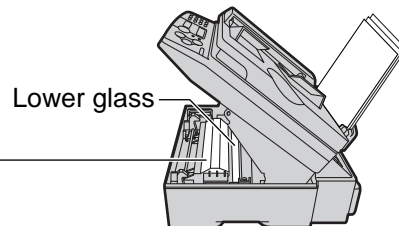


- 5** Reinstall the drum and toner unit by holding the tabs.

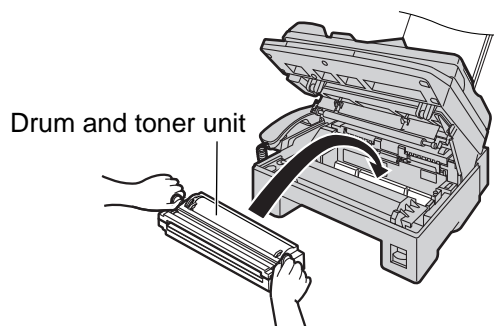


Cleaning

- 6** Close the printer cover by pushing down on both sides until locked.

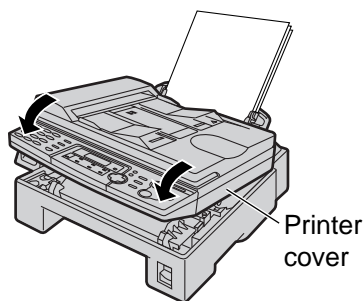


- 7** Reconnect the power cord and the telephone line cord.

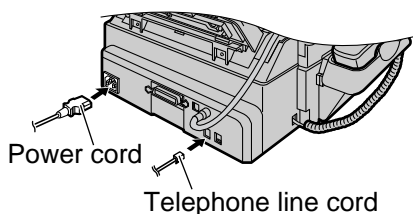


Document feeder rollers

If misfeeding of your original occurs frequently, clean the document feeder rollers.


- 1** Lift, and hold open the ADF cover.

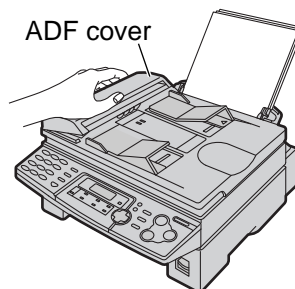

- 2** Clean the document feeder rollers with a soft and dry cloth.

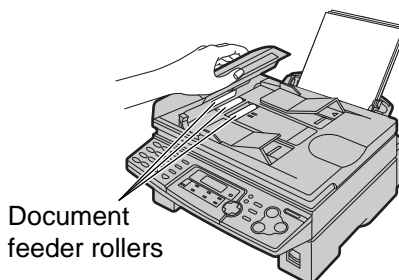

- 3** Close the ADF cover.

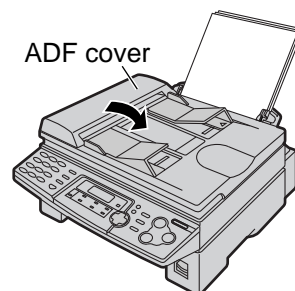

Reference lists and reports

You can print out the following lists and reports for your reference.

Setup list: provides you with the current settings of the basic and advanced programming features (p. 62–66).

Telephone number list: provides you with names and telephone numbers which are stored in one-touch dial and navigator directory.

Journal report: keeps records of fax transmission and reception. This report will be printed automatically after every 30 fax communications (feature #22 on page 64).

Broadcast programming list: provides you with entries which are stored in the broadcast feature (p. 38).

Printer test list: allows you to check the print quality of your unit. If the test print has a dirty pattern, or blurred points or lines, clean the lower glass (p. 79). If printing quality is still poor, replace the toner cartridge and drum unit.

Caller ID list: keeps records of the last 30 callers after subscribing to a Caller ID service. This report will be printed automatically after every 30 callers (feature #26 on page 65).

- 1** Press **MENU** repeatedly until the following is displayed.

Display: PRINT REPORT
PRESS NAVI. [◀ ▶]

- 2** Press **◀** or **▶** until the desired item is displayed.

SETUP LIST
PRESS SET

TEL NO. LIST
PRESS SET

JOURNAL REPORT
PRESS SET

BROADCAST LIST
PRESS SET

PRINTER TEST
PRESS SET


CALLER ID LIST
PRESS SET

- 3** Press **SET** to start printing.

PRINTING

- To stop printing, press **STOP**.
- After printing, the printed item will be displayed.

- 4** Press **MENU**.

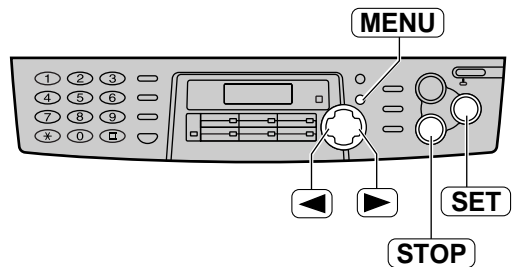

Specifications

Technical data about this product

Applicable lines:	Public Switched Telephone Network
Document size:	Max. 216 mm in width / Max. 600 mm in length
Effective scanning width:	208 mm
Effective printing width:	A4: 202 mm Letter/Legal: 208 mm
Transmission time*:	Approx. 4 s/page (ECM-MMR Memory transmission)**
Scanning density:	Horizontal: 11.8 pels/mm Vertical: 3.9 lines/mm – in standard resolution 11.8 lines/mm – in fine/super fine/photo resolution
Halftone level:	64-level
Scanner type:	Contact Image Sensor (CIS)
Printer type:	Laser Printer
Data compression system:	Modified Huffman (MH), Modified READ (MR), Modified Modified READ (MMR)
Modem speed:	33,600 / 31,200 / 28,800 / 26,400 / 24,000 / 21,600 / 19,200 / 16,800 / 14,400 / 12,000 / 9,600 / 7,200 / 4,800 / 2,400 bps; Automatic Fallback
Operating environment:	10 °C – 32.5 °C, 20% – 80% RH (Relative Humidity)
Dimensions (H x W x D):	217 mm x 443 mm x 461 mm
Mass (Weight):	Approx. 9.2 kg
Power consumption:	Standby: Approx. 7 W Transmission: Approx. 17 W Reception: Approx. 250 W Copy: Approx. 250 W Maximum: Approx. 900 W (When the fuser unit turns on)
Power supply:	220 – 240 V AC, 50/60 Hz
Memory capacity:	Approx. 150 pages of memory transmission/reception (Based on the ITU-T No. 1 Test Chart in standard resolution.)
Laser diode properties:	Laser output: Max. 5 mW Wave length: 760 nm – 800 nm Emission duration: Continuous
Print speed:	Approx. 10 ppm (pages per minute)
Printing resolution:	600 x 600 dpi


* Transmission speed depends upon the contents of the pages, resolution, telephone line conditions and capability of the other party's machine.

** Transmission speed is based upon the ITU-T No. 1 Test Chart. If the capability of the other party's machine is inferior to your unit, the transmission time may be longer.

Note:

- Any details given in these instructions are subject to change without notice.
- The pictures and illustrations in these instructions may vary slightly from the actual product.

ITU-T No. 1 Test Chart

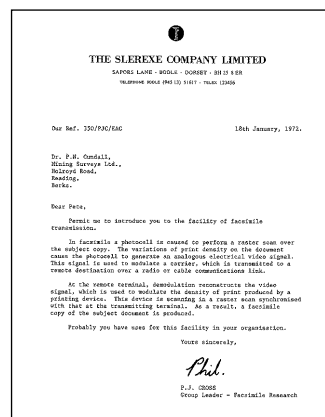

- Paper specifications:**
- Plain paper/Transparency: A4: 210 mm x 297 mm
 Letter: 216 mm x 279 mm
 Legal: 216 mm x 356 mm
- Envelope: COM10: 105 mm x 241 mm
 DL: 110 mm x 220 mm

Note:

- Do not use the following types of paper:
 - Paper with a cotton and/or fibre content that is over 20%, such as letterhead paper or paper used for resumes
 - Extremely smooth or shiny paper, or paper that is highly textured
 - Coated, damaged or wrinkled paper
 - Paper with irregularities, such as tabs or staples
 - Paper which has dust, lint or oil stains
 - Paper that will melt, vaporize, discolour, scorch or emit dangerous fumes, near 200 °C, such as vellum paper. These materials may transfer onto the fusing roller and cause damage.
 - Moist paper
 - Inkjet paper
- Some paper only accepts print on one side. Try using the other side of the paper if you are not happy with the print quality or if misfeeding occurs.
- For proper feeding and best print quality, we recommend using long-grained paper.
- Do not use paper of different types or thickness at the same time. This may cause a paper jam.
- Avoid double-sided printing.
- Do not use paper printed from this unit for double-sided printing with other copiers or printers. This may cause a paper jam.
- To avoid curling, do not open paper packs until you are ready to use the paper. Store unused paper in the original packaging, in a cool and dry location.

■ Toner life

Toner life depends on the amount of content in a received, copied or printed document. The following is the approximate relationship between image area and toner life for Model No. KX-FA76A toner cartridge. Toner life varies in actual usage.

5% image area

10% image area

15% image area

Specifications	
Main unit specifications	
1. Applicable Lines:	Public switched telephone network
2. Compatibility:	ITU-TS G3
3. Effective Scanning Width:	Max. 200mm
4. Recording Paper Size:	Letter: 216 279mm Legal: 216 356mm
5. Effective Printing Width:	200mm
6. Transmission Time:	Approx. 30sec/page(G3 Normal mode,PS) Approx. 47sec/page(G3 Original mode,PS) Approx. 15sec/page(G3 Original mode,PS)
7. Fax Redial Times:	Up to 15times
8. Telephone Redial Times:	Up to 15times
9. Scanning Density:	Horizontal: 8dots/cm Vertical: 3.95lines/mm-Standard mode 7.2lines/mm-File or HalfTone mode
10. Scanner Type:	Contact image sensor

Approx. 2,000 sheets of A4 size paper can be printed.

Specifications	
Main unit specifications	
1. Applicable Lines:	Public switched telephone network
2. Compatibility:	ITU-TS G3
3. Effective Scanning Width:	Max. 200mm
4. Recording Paper Size:	Letter: 216 279mm Legal: 216 356mm
5. Effective Printing Width:	200mm
6. Transmission Time:	Approx. 20sec/page(G3 Normal mode,PS) Approx. 47sec/page(G3 Original mode,PS) Approx. 15sec/page(G3 Original mode,PS)
7. Fax Redial Times:	Up to 15times
8. Telephone Redial Times:	Up to 15times
9. Scanning Density:	Horizontal: 8dots/cm Vertical: 3.95lines/mm-Standard mode 7.2lines/mm-File or HalfTone mode
10. Scanner Type:	Contact image sensor
11. Printer Type:	Electrostatic/LED array printer
12. Data Compression System:	Modified Huffman(MH), Modified READ(MR)
13. Modem Speed:	9600/7200/4800/2400bps
14. Operating Environment:	10-32.5 °C 20-80%RH
15. Dimensions(W x D):	291 146 489mm
16. Mass(M):	Approx. 2kg
17. Power Consumption:	Standby: 12-40W Transmission: 12-40W Copy: 24-30W Maximum: 60W
*Transmission Time: Transmission time apply to test data using ITU-TS No. 1 test chart. Between the same media at maximum speed and may vary in actual usage.	

Approx. 1,000 sheets of A4 size paper can be printed.

Specifications	
Main unit specifications	
1. Applicable Lines:	Public switched telephone network
2. Compatibility:	ITU-TS G3
3. Effective Scanning Width:	Max. 200mm
4. Recording Paper Size:	Letter: 216 279mm Legal: 216 356mm
5. Effective Printing Width:	200mm
6. Transmission Time:	Approx. 30sec/page(G3 Normal mode,PS) Approx. 47sec/page(G3 Original mode,PS) Approx. 15sec/page(G3 Original mode,PS)
7. Fax Redial Times:	Up to 15times
8. Telephone Redial Times:	Up to 15times
9. Scanning Density:	Horizontal: 8dots/cm Vertical: 3.95lines/mm-Standard mode 7.2lines/mm-File or HalfTone mode
10. Scanner Type:	Contact image sensor
11. Printer Type:	Electrostatic/LED array printer
12. Data Compression System:	Modified Huffman(MH), Modified READ(MR)
13. Modem Speed:	9600/7200/4800/2400bps
14. Operating Environment:	10-32.5 °C 20-80%RH
15. Dimensions(W x D):	291 146 489mm
16. Mass(M):	Approx. 1.7kg
17. Power Consumption:	Standby: 12-40W Transmission: 12-40W Copy: 24-30W Maximum: 60W
*Transmission Time: Transmission time apply to test data using ITU-TS No. 1 test chart. Between the same media at maximum speed and may vary in actual usage.	
Main specifications	
1. Scan Width:	16-241mm
2. Resolution:	2 252 dots/in
3. No. of Lines:	4-24
4. Paper Size:	100-202mm x field
5. Paper Weight:	5-50g without
6. Paper Compatibility:	Print, non-synthetic, off-white material, 60-120g/m ² weight, 0.08mm thickness, 0.01mm grain, heated to 200 °C for 0.1 second
7. Cutting Dimensions:	0.25mm of material contained a long grain.
8. Cut Edge Conditions:	Not to be cut.
9. Not to be cut:	Not all available cut toward side to be available.
10. Duplex:	Not available.
11. Packing:	Polyethylene moisture proof film wrap
NOTE: The specifications are subject to change without notice.	

Approx. 650 sheets of A4 size paper can be printed.

Note:

- The image area changes with the depth, thickness and size of the characters.
- If you change the toner save setting to on, the toner cartridge will last approx. 40% longer.

■ Drum life

The included drum unit or Model No. KX-FA78A can print approx. 6,000 sheets of A4 size paper regardless of the content of the image area.

Program index

Basic features

Code/Feature name

#01	Date and time	21
#02	Your logo.....	22
#03	Your fax number	24
#04	Sending report	35, 62
#06	Fax ring setting	62
#12	Remote activation ID	63
#13	Dialling mode (For Australian users only)	63
#15	Cable selection	63
#16	Paper size.....	63
#17	Ringer pattern.....	25, 63

Advanced features

Code/Feature name

#22	Journal report	35, 64
#23	Overseas mode	64
#25	Delayed transmission	64
#26	Caller ID list	65
#31	Ring detection.....	65
#37	Auto reduction	65
#39	Display contrast	65
#41	Remote fax activation code	47, 65
#44	Fax receiving alert	65
#58	Original mode	66
#68	ECM selection	66
#74	Location	66
#76	Connecting tone	66
#79	Toner save	66
#80	Reset advanced features.....	66

Index

- A**
 - Accessories9
 - (Paper stacker)18
 - (Paper tray)18
 - Advanced features64–66
 - Alert
 - (Memory reception) (Feature #44) . .65
 - Answering machine46
 - Auto document feeder34, 49
 - Auto reduction (Feature #37) . . .44, 65
- B**
 - Basic features62, 63
 - Broadcast transmission38
 - Buttons / Keys
 - (AUTO ANSWER)44, 45
 - (BROADCAST)38, 41
 - (CALLER ID)31, 33
 - (COLLATE)50
 - (Delete)22
 - (HELP)12
 - (Insert)22
 - (LOWER)26, 29, 37
 - (MANUAL BROAD)38, 41
 - (MONITOR)29
 - (REDIAL)34
 - (RESOLUTION)34, 49
 - (SCAN)34, 35, 50, 57
 - (Station)26, 29, 37
- C**
 - Cable selection (Feature #15) . .51, 63
 - Caller ID30
 - (Calling back)31
 - (Storing)33, 58
 - Caller ID list (Feature #26)30, 65
 - Character table23
 - Cleaning78–80
 - Communication messages67
 - Connecting tone (Feature #76) . . .66
 - Connections20, 51
 - Copy49
 - (Collation)50
 - (Enlarge)50
 - (Reduce)50
- D**
 - Date and time (Feature #01) . . .21, 62
 - Delayed transmission (Feature #25) .64
 - Dialling mode (Feature #13)63
 - Display
 - (Contrast)(Feature #39)65
 - (Error messages)68, 69
 - Distinctive ring service
 - (Feature #31)48, 65
 - Document size36
 - Drum life83
 - Drum unit16, 74
- E**
 - ECM selection (Feature #68)66
 - Envelope56
 - Error messages67–69
 - Extension telephone48
- F**
 - Facsimile telephone number
 - (Feature #03)24, 62
 - Fax Ability48
 - Fax activation code
 - (Feature #41)47, 65
 - Fax auto redial37
 - FAX ONLY mode45
 - Fax receiving42, 43
 - Fax Stream Duet48, 65
- H**
 - Help12, 53
- J**
 - Jams
 - (Document)78
 - (Paper)76, 77
 - Journal report (Feature #22) . . .35, 64
- L**
 - Label55
 - Location setting (Feature #74)66
 - Logo (Feature #02)22, 62
- M**
 - Memory reception44
 - Multi-Function Station software
 - (Activating)53
 - (Installing)52
- N**
 - Navigator directory
 - (Making a phone call)29
 - (Selecting characters)23
 - (Sending faxes)37
 - (Storing)27, 58
- O**
 - OCR software57
 - One-touch dial
 - (Making a phone call)29
 - (Sending faxes)37
 - (Storing)26, 58
 - Original mode (Feature #58)66
 - Overseas mode (Feature #23)64

- P**
 - Paper size (Feature #16)63
 - Parallel cable51
 - Power failure73
 - Printer54
 - Printing paper size54, 83
- R**
 - Receiving alert (Feature #44)65
 - Receiving setting42, 43
 - Recording paper19
 - Remote activation ID (Feature #12) . .63
 - Remote control58
 - Reports
 - (Broadcast programming)81
 - (Broadcast sending)41
 - (Caller ID)30, 58, 65
 - (Journal)35, 58, 81
 - (Power down)73
 - (Printer test)81
 - (Sending)35
 - (Setup)81
 - (Telephone number)81
 - Reset (Feature #80)66
 - Resolution34, 49
 - Ring detection (Feature #31)65
 - Ring setting
 - (FAX ONLY)(Feature #06)62
 - Ringer pattern (Feature #17)25, 63
- S**
 - Scanner57
 - Scanner glass35, 49
 - Sending
 - (Broadcast)41
 - (Manually)34, 35
 - (Navigator directory)37
 - (One-touch dial)37
 - (Quick scan)35
 - Sending report (Feature #04)35, 62
 - Set default (Feature #80)66
 - Shipping lock15, 68
 - Storing
 - (Broadcast)38, 58
 - (Navigator directory)27, 58
 - (One-touch dial)26, 58
- T**
 - TEL mode44
 - Toner cartridge16, 74
 - Toner life83
 - Toner save (Feature #79)17, 66
 - Transparency55
- U**
 - USB cable51
- V**
 - Viewer57
 - Volume25

Panasonic Communications Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

PFQX1948ZA KM0703DH0