

TRM6.1


Installation & Operation



Hafler®
trans•ana►

DESIGNED AND
ASSEMBLED IN THE
USA

MONITORING SYSTEM

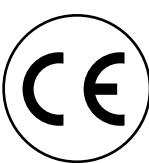

Declaration of Conformity

Application of Council Directive: 73/23/EEC (low voltage directive)

Standard(s) to which Conformity is Declared: EN55103-1

EN55103-2

EN60065 (safety)

Manufacturer's Name: Hafler

Manufacturer's Address: 546 South Rockford Drive, Tempe, Arizona 85281, U.S.A.

Importer's Name:

Importer's Address:

Type of Equipment: 2-channel Audio Power Amplifier/Speaker

Model No.: TRM6.1

Serial Number:

Year of Manufacture: 1998 1999 2000 2001 2002

*I, the undersigned, hereby declare that the equipment specified above conforms
to the above Directive(s) and Standard(s)*

Place: Hafler



Date: 12/01/98

James C. Strickland
James C. Strickland, VP Engineering

PERFORMANCE SPECIFICATIONS


TRM6.1

Free Field Frequency Response	55Hz–21kHz, $\pm 2\text{dB}$
Peak Acoustic Output	$\geq 119\text{dB}$ (per pair w/music @ 1m)
Total Harmonic Distortion (THD)	<0.5%, 150Hz–21kHz (90dB @ 1m on axis)
High Frequency Driver	1" (25mm) Vifa Soft Dome
Low Frequency Driver	6.5" (165mm) Polypropylene Cone/ Inverted Nitrile Rubber Surround Magnetically Shielded
Cabinet	0.26 ft ³ (7.3 liters) Vented
Front Panel:	Power Switch System LED (Power/Clip/Thermal)
Rear Panel:	XLR Balanced Input RCA Unbalanced Jack Unbalanced/Balanced DIP Switch Input Sensitivity DIP Switches Bass Rolloff DIP Switches Bass Shelving DIP Switches Treble Shelving DIP Switches IEC Standard Line Input / AC Line Fuse
Dimensions	8.875"W x 13.25"H x 11.50"D (22.54cm x 33.65cm x 29.21cm)
Net Weight	23 lbs. (10.43kg)

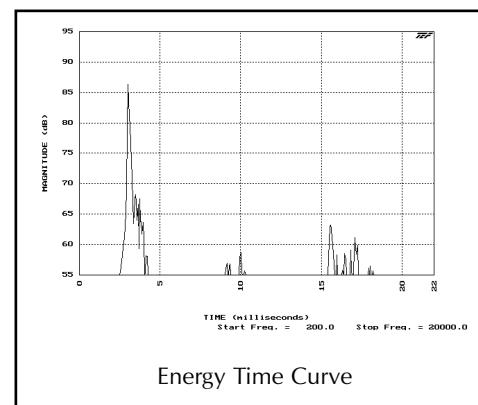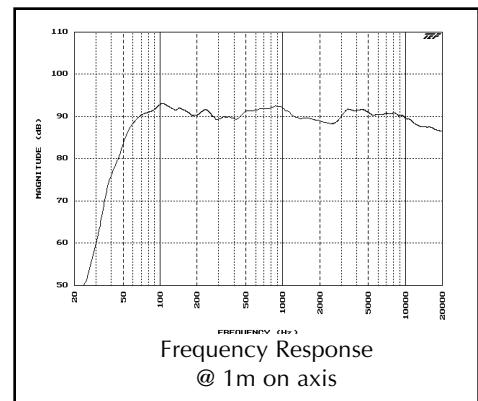


AMPLIFIER SECTION

Power Rating	FTC (20Hz–20kHz, 0.1% THD) 35 Watts RMS @ 6 ohms (high frequency) 50 Watts RMS @ 4 ohms (low frequency)
Signal-to-Noise	>100dB
CMRR	>70dB typical @ 1kHz
Input Impedance	47k Ω per phase balanced, 47k Ω unbalanced
Input Sensitivity Range	500mV to 3V (unbalanced) 275mV to 1.5V (per phase balanced) (+4dB, +1dB, -2dB, -5dB, -8dB, -11dB) +33dB max. to +18dB min.
Gain	Idle Power: 11W / 150mA @ 115 VAC Idle Power: 11W / 75mA @ 230 VAC Normal Operation: 55W / 600mA @ 120 VAC Normal Operation: 54W / 310mA @ 230VAC Full Power: 139W / 1.37A @ 120VAC Full Power: 130W / 680mA @ 230VAC

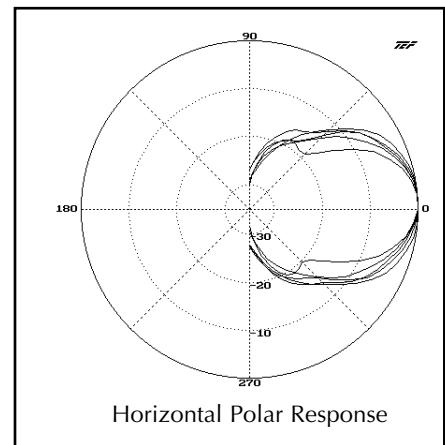

CROSSOVER SECTION

Crossover Frequency	3.2kHz
Crossover Slope	24dB/octave Linkwitz-Riley
Subsonic Filter	Selectable 30Hz or 60Hz @ 12dB/octave
Bass Shelving	30Hz to 200Hz, $\pm 4\text{dB}$ (+4dB, +2dB, 0dB, -2dB, -4dB)
Treble Shelving	5kHz to 20kHz, $\pm 4\text{dB}$ (+4dB, +2dB, 0dB, -2dB, -4dB)

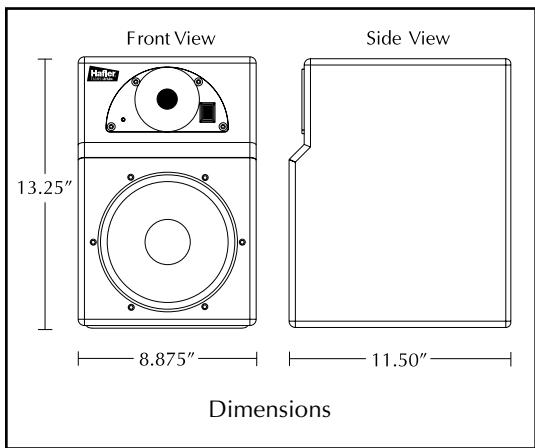

Specifications are subject to change without notice.

NOTICE - IMPORTANT SAFETY INFORMATION



**WARNING: TO PREVENT FIRE OR SHOCK HAZARD
DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.**

1. READ INSTRUCTIONS

All the safety and operating instructions of your Hafler equipment should be read before power is applied to the equipment.

2. RETAIN OWNER'S MANUAL

These safety and operating instructions should be retained for future reference.

3. HEED WARNINGS

All warnings on the equipment and in the operating instructions are important and should be followed.

4. FOLLOW INSTRUCTIONS

All operating and use instructions are important and should be followed.

5. HEAT

The equipment should be kept away from areas of high temperature, i.e., heater vents, radiators, stoves/ovens, fireplaces, etc.

6. VENTILATION

The equipment should be used in an area suitable for proper ventilation. Care should be taken not to impede airflow in and around the cabinet.

7. WATER AND MOISTURE

The equipment should not be used in or around water, such as a bathtub, sink, or swimming area. Also, the equipment should not be used in areas prone to flooding, such as a basement.

8. POWER SOURCES

The equipment should be connected only to a power source of the same voltage and frequency as that listed on the rear panel above the power cord entry point.

9. POWER CORD PROTECTION

Power cords should be arranged so they do not interfere with the movement of objects in the room: people, fan blades, utility carts, etc. Also, care should be taken that the cord is not pinched or cut, and placed so it is not in danger of being pinched or cut, as in under a rug, around a tight corner, etc.

10. POWER CORD GROUNDING

The power supply cord is of a three wire grounded type, designed to reduce the risk of electric shock sustained from a live cabinet. It is assumed to be of suitable length for most uses of the equipment. The use of extension cords and power strips is discouraged unless they are of suitable rating to deliver the required total current for safe operation of all connected equipment. Furthermore, extension cords or power strips must provide the same three wire

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

grounded connection. It is important that the blades of the equipment's plug be able to fully insert into the mating receptacle.

Never remove the round grounding pin on the plug in an attempt to mate to a two wire ungrounded receptacle: use a grounding adaptor with the grounding tab or wire suitably connected to earth ground.

11. NON-USE PERIODS

During periods of extended non-use, the power cord should be unplugged from the power source.

12. CLEANING

The equipment should be cleaned only as detailed in the operating instructions.

13. OBJECT AND LIQUID ENTRY

Care should be taken so that objects and/or liquids, such as cleaning fluids or beverages, are not spilled into the enclosure of the equipment.

14. DAMAGE REQUIRING SERVICE

Hafler equipment should be serviced by qualified service personnel when:

- A. The power supply cord or plug has been damaged, or
- B. Objects have fallen onto, or liquid has been spilled into the equipment, or
- C. The equipment has been exposed to rain, or
- D. The equipment does not appear to operate normally or exhibits a marked change in performance, or
- E. The equipment has been dropped, or the enclosure has been damaged.

15. SERVICING

The user should not attempt to service the equipment beyond that which is described in the operating instructions. All other service should be referred to qualified service personnel.

16. CARTS AND STANDS

The equipment should be used with carts or stands only of sufficient strength and stability for the use intended. An equipment and cart combination should be moved with care. Quick stops and starts, excessive force, and uneven surfaces may cause the equipment and cart combination to topple.

ADVERTENCIA – INFORMACION DE SEGURIDAD IMPORTANTE



1. LEA LAS INSTRUCCIONES

Todas las instrucciones de seguridad y operación de su equipo Hafler, deben ser leídas antes de que el equipo sea conectado eléctricamente.

2. CONSERVE EL MANUAL DEL PROPIETARIO

Estas instrucciones de seguridad y operación, deben ser conservadas para futuras referencias.

3. CUADROS DE ADVERTENCIAS

Todas las advertencias en el equipo y en las instrucciones de operación, son importantes y deben ser seguidas.

4. SIGA LAS INSTRUCCIONES

Todas las instrucciones de uso y operación son importantes y deben ser seguidas.

5. CALOR

El equipo debe ser mantenido lejos de áreas de alta temperatura, como por ejemplo: ventilaciones de calentadores, radiadores, estufas/hornos, hogueras, etc.

6. VENTILACION

El equip debe ser usado en áreas con ventilación adecuada. Deben er tornadas las precauciones necesarias para no impedir el flujo de aire dentro y alrededor del aparato.

7. AGUA Y HUMEDAD

El equipo no debe ser usado en el agua ó alrededor de ésta, tales como en una bañera, tanque o áreas de nado. También, el equipo no debe ser usado en áreas propensas a inundaciones, tales como en un sótano.

8. FUENTES DE PODER

El equipo debe ser conectado a una fuente de poder del mismo voltaje y frecuencia que el indicado en el panel trasero sobre el punto de entrada del cable de corriente.

9. PROTECCION DEL CABLE DE CORRIENTE

Los cables de corriente deben ser dispuestos de forma tal que no interfieran con el movimiento de objetos en la sala: personas, aspas de ventilación, carretillas, etc. También, es necesario tener cuidado de que el cable no esté punzado o cortado, y debe estar ubicado de forma tal que esto no ocurra, como podría suceder debajo de una alfombra o al pasar el cable por una esquina aguda, etc.

10. ATERRAMIENTO DEL CABLE DE CORRIENTE

El cable de corriente es del tipo aterrado de tres hilos, diseñado para reducir el riesgo de una descarga eléctrica procedente de un chasis energizado. Se asume que su longitud es suficiente para la mayoría de usos del equipo. El uso de extensiones y multi-

enchufes no es recomendado, a menos que tengan el amperaje adecuado para poder suministrar la corriente requerida para la operación segura de todo el equipo conectado. Aun más, las extensiones deben proveer de la misma conexión aterrada de tres hilos. Es importante que el enchufe se pueda introducir completamente en el receptáculo. Nunca remova el pin de aterramiento en un intento por conectar el cable en un receptáculo de dos hilos no aterreado: use un adaptador de aterramiento que esté adecuadamente conectado a un punto de tierra.

11. PERIODOS SIN USO

Durante períodos prolongados sin uso del equipo, el cable de corriente debe ser desconectado de la fuente de electricidad.

12. LIMPIEZA

El equip debe ser limpiado solo en la forma que se detalla en las instrucciones de operación.

13. INTRODUCCIÓN DE OBJETOS Y LIQUIDO

Deben ser tomadas precauciones con el fin de que objetos y/o líquidos, tales como fluidos de limpieza y gaseosas, no sean derramados dentro del chassis del aparato.

14. DAÑOS QUE REQUIEREN DE SERVICIO

Los equipos Hafler deben ser llevados a servicio por personal calificado cuando:

- A. El cable de corriente ó el enchufe haya sido dañado, ó
- B. Objetos ó líquido hayan sido introducidos ó derramado en el equipo, ó
- C. El equipo haya sido expuesto a lluvia, ó
- D. El equipo aparenta no operar normalmente ó exhibe un marcado cambio en su desempeño, ó
- E. El equipo se ha caído, o el chassis ha sido golpeado.

15. SERVICIO

El usuario no deberá intentar darle servicio al equipo más allá de lo que está descrito en el instructivo de operación. Todo lo demás, deberá ser referido a servicio por personal calificado.

16. CARRETILLAS Y SOPORTES

El equipo podrá ser usado con carretillas y soportes que tengan la fortaleza y estabilidad suficiente para el uso previsto.

La combinación equipo/carretilla deberá ser movida con cuidado. Rápidas paradas y arranques, excesiva fuerza y superficies imparejas, pueden causar el volcamiento del conjunto de carretilla/equipo.

ATTENTION: INFORMATIONS IMPORTANTES DE SÉCURITÉ



1. LIRE LES INSTRUCTIONS

Le mode d'emploi et les mesures de sécurité de votre équipement Hafler devraient être consultés avant sa mise en marche.

2. CONSERVER LE GUIDE DE L'UTILISATEUR

Le mode d'emploi et les mesures de sécurité devraient être conservés pour des références futures.

3. CONSIDÉRATIONS DE MISE EN GARDE

Le mode d'emploi et les mises en garde concernant cet équipement sont de grande importance et devraient être suivis.

4. SUIVRE LE MODE D'EMPLOI

Le mode d'emploi et les conseils d'utilisation sont importants et devraient être suivis.

5. CHALEUR

Le matériel devrait être préservé loin de toute source de chaleur: radiateurs, cuisinière/fours, cheminées,...etc.

6. VENTILATION

Le matériel devrait être utilisé dans un endroit à bonne ventilation. Il reste nécessaire de respecter la circulation de flux d'air à l'intérieur et autour du meuble.

7. EAU ET HUMIDITÉ

Le matériel ne devrait pas être utilisé près d'une source d'eau, telle qu'une baignoire, un évier, ou une aire de baignade. De plus, le matériel ne devrait pas être utilisé dans des lieux sujets aux inondations, tels que les sous-sols.

8. SOURCES D'ÉNERGIE

Le matériel devrait seulement être relié à une source d'énergie de même voltage et fréquence que celle indiquée sur le tableau arrière, au dessus de la fiche d'entrée de la prise de courant.

9. PROTECTION DE LA PRISE DE COURANT

La prise de courant devrait être arrangée de façon à ne pas interférer avec le déplacement d'objets (chariots, pales de ventilateurs...etc.) ou de personnes à l'intérieur de la pièce. D'autre part, il faudrait faire très attention à ce que la prise ne soit pas percée ou coupée, ou disposée de façon à risquer de l'être, comme sous un tapis, autour d'un angle pointu...etc.

10. PRISE DE COURANT À TROIS FICHES

La prise de courant est composée de trois fiches, désignées à réduire le risque de décharge électrique de l'appareil.

Elle devrait être de longueur suffisante pour la plupart des utilisations de ce matériel. L'utilisation de rallonge et d'adaptateur est déconseillée à moins d'être en mesure de fournir la charge

électrique requise à un fonctionnement sans risque, de tout matériel relié.

11. PÉRIODES DE NON-UTILISATION

Durant les périodes de non-utilisation, la prise de courant ne devrait pas être branchée à une source d'énergie.

12. NETTOYAGE

Le matériel devrait être nettoyé en respectant les instructions indiquées.

13. PENETRATION DES LIQUIDES

Un attention particulière est exigée quant à la dispersion de liquides tels que les produits de nettoyage et boissons, de façon à éviter toute pénétration dans l'enceinte du matériel.

14. DÉGÂT NÉCESSITANT UNE RÉVISION

Le matériel Hafler devrait être révisé par des personnes qualifiées de service après-vente, lorsque:

A. Les fiches ou la prise de courant ont été endommagé, ou:

B. Des objets sont tombés sur le matériel, ou des liquides s'y sont dispersés, ou:

C. Le matériel a été exposé à la pluie, ou:

D. Le matériel ne semble pas fonctionner correctement, ou affiche un changement de performance, ou:

E. Le matériel a été renversé à terre, ou l'enceinte a été endommagée.

15. REVISION

L'utilisateur ne devrait pas essayer de réviser le matériel en allant plus loin que ce qui a été décrit dans le mode d'emploi. Toute autre révision devrait être confiée à un personnel qualifié.

16. CHARRIOTS ET MEUBLES

Le matériel devrait être utilisé avec des charriots et meubles de qualité et stabilité suffisante à son utilisation préconçue.

L'ensemble du matériel et du chariot devrait être déplacé avec précaution. Des mises en marche et arrêts brusques, des collisions excessives ainsi que des surfaces inégales peuvent renverser l'ensemble du matériel et du chariot.

ACHTUNG – WICHTIGE SICHERHEITS – INFORMATIONEN



1. INSTRUKTIONEN LESEN

Alle Sicherheits- und Operationshinweise Ihres Hafler Equipments sollten vor der Inbetriebnahme gelesen werden.

2. BETRIEBSANLEITUNG AUFBEWAHREN

Bewahren Sie die Bedienungsanleitung sorgfältig auf, damit Sie in dieser auch in Zukunft nachschlagen können.

3. WARNUNGEN BEACHTEN

Alle Warnungen des Gerätes und der Bedienungsanleitung sind extrem wichtig und müssen befolgt werden.

4. INSTRUKTIONEN BEACHTEN

Alle Operations- und Gebrauchshinweise sind extrem wichtig und müssen beachtet werden.

5. HITZE

Das Equipment sollte fern von Hitze ausstrahlenden Geräten aufgestellt werden, wie z.B. Heizungen, Öfen etc.

6. VENTILATION

Das Equipment sollte so aufgestellt werden, daß eine ausreichende Ventilation gewährt wird.

7. WASSER UND FEUCHTIGKEIT

Das Equipment sollte nicht im oder in der Nähe von Wasser benutzt werden, wie z.B. in Schwimmbädern, Saunen etc. Es sollte ebenfalls nicht in Überschwemmunggefährdeten Gebieten aufgestellt werden, wie z.B. Kellerräumen.

8. STROMANSCHLUß

Das Equipment darf nur an eine Stromversorgung angeschlossen werden, die die gleichen Parameter aufweist, welche auf der Rückseite, über em Anschlußterminal des Gerätes, aufgelistet sind.

9. SCHUTZ DER ZULEITUNG

Die Zuleitungen sollten so verlegt werden, daß diese nicht in den Bewegungsbereich anderer Möbelstücke oder Personen hereinragen. Achten Sie darauf, das das Kabel nicht gequetscht oder durchschnitten wird, wie z.B. unter Schränken oder an scharfen Kanten etc.

10. MASSEANSCHLUß

Das dreidrige Anschlubkabel ist mit einem Erdungsleiter ausgestattet, welcher die Risiken eines Elektroschocks verringert. Das Kabel hat eine Länge, welche für die meisten Anwendungen völlig ausreicht. Wenn Sie Verlängerungskabel benutzen, achten Sie darauf, das dies die erforderlichen Ströme bertragen können. Benutzen Sie immer dreidrige Verlängerungskable.

Der Blitz mit dem Pfeil, in einem gleichschenkligen Dreieck, soll den benutzer vor unisolierter "gefährlicher Spannung" innerhalb des Gerätes warnen.

Das Ausrufezeichen, in einem gleichschenkligen Dreieck, soll den Benutzer darauf aufmerksam machen, daß dem Gerät wichtige Operations - und Service - Informationen beigelegt sind.

11. ZEITRÄUME IN DENE DAS GERÄT NICHT GENUTZT WIRD

Wird das Gerät über einen längeren Zeitraum nicht genutzt (z.B. Urlaub), ziehen Sie bitten den Netzstecker aus der Steckdose.

12. REINIGEN

Reinigen Sie das Gerät nur, wie in der Bedienungsanleitung detailliert beschrieben.

13. EINDRINGEN VON FREMDKÖRPERN

Achten Sie darauf, daß weder Fremdkörper, noch Flüssigkeiten in das Gerät eindringen.

14. ERFORDERLICHER REPARATURSERVICE

Hafler Equipment sollte nur von qualifizierten Service-Technikern instand gesetzt werden, wenn:

- A. Das Stromversorgungskabel beschädigt wurde
- B. Eine Flüssigkeit in das Gerät eingedrungen ist
- C. Das Gerät Regen ausgesetzt wurde
- D. Das Gerät nicht mehr ordnungsgemäß funktioniert, ggf. nicht mehr die volle Leistung abgibt
- E. Das Gerät runtergefallen ist oder das Gehäuse beschädigt wurde

15. SERVICE

Der Benutzer sollte nur den Service ausführen, der in der Bedienungsanleitung für den Benutzer freigegeben wird. Den weiterführenden Service sollte nur von qualifizierten Technikern durchgeführt werden.

16. AUFSTELLUNG

Das Equipment sollte so aufgestellt werden, daß der gewählte Untergrund die erforderliche Stabilität aufweist, so daß eine gefahrlose Nutzung gewährleistet wird.

Das Equipment und der Untergrund sollte mit äußerster Vorsicht bewegt werden. Bei schnellen Bewegungen oder starkem Abbremsen, kann es zum Umkippen des Equipments kommen.

NOTARE – IMPORTANTI INFORMAZIONI SULLA SICUREZZA



Il simbolo del fulmine in un triangolo equilatero vuole avvertire della presenza di tensioni elevate non isolate e di valore sufficiente per costituire rischio di shock elettrico alle persone.

Il punto esclamativo contenuto in un triangolo equilatero vuole avvertire l'utente della presenza di parti di servizio e di manutenzione che sono dettagliate nel manuale di istruzioni.

1. LEGGETE LE ISTRUZIONI

Tutte le istruzioni riguardanti la sicurezza ed il funzionamento devono essere lette prima di applicare tensione all'apparato.

2. CONSERVATE IL MANUALE

Queste istruzioni riguardanti la sicurezza ed il funzionamento devono essere conservate come riferimento futuro.

3. AVVERTENZE

Tutte le avvertenze poste sull'apparato e sul libretto di istruzioni sono importanti e devono essere seguite.

4. SEGUIRE LE ISTRUZIONI

Tutte le istruzioni operative e di funzionamento devono essere seguite.

5. TEMPERATURA

L'apparato deve essere mantenuto lontano da tutte le zone ad alta temperatura, termosifoni, termoconvettori, stufe e fornì, caminetti ed altro.

6. VENTILAZIONE

L'apparato deve essere posizionato in aree convenienti per una corretta ventilazione. Prestare attenzione che sia consentita circolazione d'aria attorno e dentro il cabinet.

7. ACQUA E POLVERE

L'apparato deve essere posizionato lontano da zone contenenti acqua, come vasche a bagno, acquari e piscine. Inoltre non deve essere impiegato in aree soggette ad allagamento, come le cantine.

8. REQUISITI DI ALIMENTAZIONE

L'apparato deve essere connesso solo ad un'alimentazione della stessa tensione e frequenza di quanto scritto sulla parte posteriore del telaio.

9. PROTEZIONE DEL CAVO DI ALIMENTAZIONE

Il cavo di alimentazione deve essere posizionato in modo di non interferire con il movimento di oggetti nella stanza: persone, ventilatori, carrelli, ecc...prestate attenzione anche che il cavo non sia tagliato o spellato e che non possa tagliarsi e spellarsi.

10. MESSA A TERRA

Il cavo di alimentazione è del tipo a tre fili con terra ed è progettato per ridurre il rischio di shock elettrici. Si presume che sia della lunghezza sufficiente per la maggior parte degli impieghi. L'impiego di prolungh e adattatori è sconsigliato se questi non garantiscono la potenza sufficiente per i corretto funzionamento degli apparati connessi. È altresì importante che vengano sempre impiegate prolungh con la configurazione a tre fili con terra.

11. PERIODI DI NON UTILIZZO

Durante lunghi periodi di non utilizzo, staccare il cavo di alimentazione.

12. PULIZIA

L'apparato deve essere pulito solo come indicato dalle istruzioni.

13. INGRESSO DI OGGETTI E LIQUIDI

Si deve prestare attenzione che oggetti e liquidi, come fluidi detergenti e bibite, non vengano versati all'interno dell'apparato.

14. RIPARAZIONI

Gli apparati Hafler devono essere riparati da personale qualificato quando:

- Il cavo di alimentazione o la spina sono danneggiati
- Oggetti sono caduti all'interno del telaio o quando del liquido è entrato
- Quando l'apparato è stato esposto a pioggia
- Quando l'apparato non sembra funzionare normalmente o quando esibisce un cambiamento di prestazioni o
- Quando è caduto o il telaio è stato danneggiato

15. ASSISTENZA

L'utente non deve tentare di prestare assistenza all'apparato, se non per quanto espresso nelle istruzioni. Tutti gli altri interventi devono essere effettuati da un tecnico specializzato.

16. CARRELLI E STAND

L'apparato deve essere impiegato su carrelli o stand solo se questi sono sufficientemente solidi e stabili per la funzione a cui si vuole dedicarli.

La combinazione di carrello ed apparato deve essere mossa con cautela. Fermate e partenze improvvise, forze eccessiva e superfici irregolari, possono ribaltare la combinazione carrello e apparato.

TABLE OF CONTENTS

PERFORMANCE SPECIFICATIONS	i
Frequency Response Graph		
Energy Time Curve Graph		
Horizontal Polar Response Graph		
Dimensions		
SAFETY PRECAUTIONS	ii
INTRODUCTION	1
TECHNICAL DESIGN FEATURES	1
FRONT & REAR PANEL VIEWS	4
INSTALLATION		
Location	5
Determining Acoustic Center	6
Input Switch	6
XLR Wiring Configurations	6
SCHEMATIC DIAGRAMS		
Schematic Diagram	7
PC Board Layout	12
OPERATION		
Input Sensitivity	13
Bass Roll Off	13
Bass Shelving	14
Treble Shelving	14
AC Line	14
Power Switch	14
Status LED	15
Rubber Pad	15
Break-In and Warm-Up	15
Cleaning and Maintenance	15
SERVICE REFERENCE		
Parts List	16
Functional Block Diagram	19
Circuit Operation	20
Calibration	20
Input Circuit	21
Tweeter Crossover	21
Woofer Crossover	22
Thermal Protection	22
Clipping Indicator	23
On Indicator	23
Tweeter Replacement	24
Woofer Replacement	24
Amplifier Replacement	25
Transformer Replacement	25
WARRANTY	26

INTRODUCTION

Thank you and congratulations on your purchase of the HAFLER TRM6.1 reference monitor, the world's finest brand in professional audio equipment.

The **TRM6.1** (Trans•ana Reference Monitor) is a bi-amplified, two-way near field monitor offering unmatched quality and performance in a truly professional grade product. The TRM6.1 is great for Professional Studios, Digital Work Stations, Broadcast Booths, and Home Project Studios.

Although we realize a professional such as yourself already knows a thing or two about pro audio, we urge you to read this manual to at least humor our technical writer. For ease of use, this manual is organized into three main sections: **Installation, Operation, and Service Reference**. "Installation" covers the set-up of your new HAFLER equipment in the system. "Operation" covers the controls and how to use them for optimum performance. "Service Reference" contains field service information useful for technicians and engineers.

TECHNICAL DESIGN FEATURES

The TRM6.1 amplifiers utilize our trans•ana circuit topology employing MOSFETs in the output stage resulting in superior sound quality.

An active 4th order Linkwitz-Riley crossover sends frequencies above 3.2kHz to a 35-watt amplifier driving a proprietary wave guide tweeter, and frequencies below 3.2kHz to a 50-watt amplifier driving an 6" transducer. The high frequency channel features up to ± 4 dB of Treble shelving, while the low frequency channel features up to ± 4 dB of Bass shelving. In addition, the low frequency channel includes an active 2nd order subsonic filter selectable to limit harmful frequencies below 30Hz or 60Hz. Monitoring the status of both channels is done with an LED indicating Power On, Clipping and Thermal.


The high frequency transducer is a Ferrofluid cooled 1" (25mm) soft dome hemispherical tweeter utilizing a rigid but lightweight silk diaphragm. A Phase Lens and axis-symmetric exponential waveguide improve the transition of sound-waves from planar to spherical which result in excellent high frequency dispersion and coherent on-axis frequency response. The low frequency transducer is a proprietary 6.5" (165mm) steel basket woofer utilizing a 20 mil polypropylene cone with a 20 mil dust cap. The suspension consists of a nitrile rubber surround and an extended collar flat spider. The motor is constructed from a 1.25" diameter voice coil on an anodized aluminum former with an extended vented pole piece. The 33 oz. ferrite magnet is magnetically shielded to suppress stray leakage flux to only 4"...well within the confines of the monitor's walls, making it great for use near CRT monitors.

The cabinet is made from acoustically dead 19mm MDF, internally lined with damping material, and features a rear firing radiused Aerovent for reduced turbulence. The outside features a semi-gloss finish and includes a rubber pad on the underside to control vibration.



MEHSA

(Maximum Efficiency HeatSink Application) MEHSA is a proprietary process that yields up to 5 times better heat transfer than traditional FET mounting techniques using the exact same components. A multi-layer insulated metal substrate operating with minimal thermal resistance spreads heat both downward and outward to quickly dissipate heat from each device across the heatsink. This process combined with our DSM technology and MOSFET devices allow us to squeeze more watts per cubic inch from every output device as well as provide consistent thermal stability.

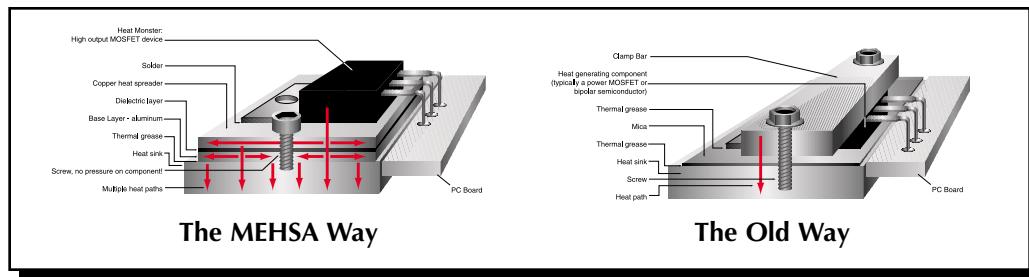

THE RESULT: Better reliability through faster heat dissipation.



Trans•ana

Trans•ana (TRANSconductance Active Nodal Amplifier) is a circuit that allows the audio signal to pass through the amplifier at low voltage. The signal is directly level-shifted to the fixed high voltage rails via a pair of driver transistors. Signal linearity is assured by an active node formed by the driver transistors at ultrasonic frequencies. This allows amplifier performance similar to Trans•nova which is highly stable and linear while utilizing the advantages of a non-floating power supply.

THE RESULT: An extended frequency band width accurately supplied to the output stages of the amplifier.



MOSFET Devices

HAFLER is one of the few manufacturers in the sound community to utilize MOSFET devices in both the power supply and output stages. **MOSFET** (Metal Oxide Semiconductor Field Effect Transistor) devices offer several important inherent advantages over the 30-year-old technology of bi-polar design. These advantages include: thermal stability, fast switching speed, ultra low output impedance and wide bandwidth linearity. In addition, MOSFETs operate very similarly to vacuum tubes in that they are more linear than bipolar transistors. However, MOSFETs can deliver the midrange clarity without the limitations of transient response and high frequency phase shifting normally associated with tube operation.

THE RESULT: Thermal stability, fast switching speed, ultra low output impedance and wide bandwidth linearity.

Tweeter



Wave Guide

The wave guide is a proprietary axis-symmetrical form of horn mounted to the tweeter to increase efficiency. The wave guide improves the transition of sound waves (from planar to spherical) smoothly from the throat of the wave guide to the mouth. The unique shape and smooth surfaces improve the tweeter's off-axis frequency response as well as provide coherent on-axis response.


THE RESULT: Improves dispersion for a wider "sweet spot."

Woofer



Shielded Magnet

A shielded magnet is used to reduce the radiation of high-strength magnetic fields from the woofer's motor assembly. Suppression is accomplished by attaching a "bucking" magnet to the motor assembly in order to keep stray leakage flux within the monitor cabinet. This type of shielding prevents color and image distortion when placing the woofer in close proximity to direct view (CRT) television receivers and computer monitors.

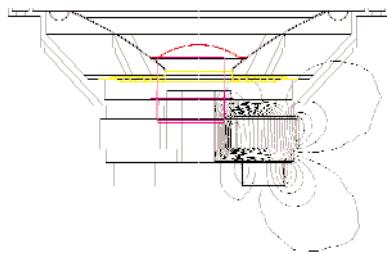

THE RESULT: Prevents distortion in TV and computer monitors.

Cabinet




Phase Coherent


Each monitor is Phase Coherent in order to assure proper arrival times of all frequencies in the near field environment. This is accomplished by aligning both transducer's voice coils on a common ZDP (Zero Delay Plane) axis. The cabinet baffle positions the woofer forward and the waveguide displaces the tweeter back with an additional 39ms delay in the high frequency amplifier to precisely "tweak" the tweeter onto its ZDP axis. This allows the acoustic center, located midway between the high and low frequency transducers, to coherently deliver a flat frequency and phase response around the crossover point.

THE RESULT: Delivers a flat frequency and phase response.

Front Panel View

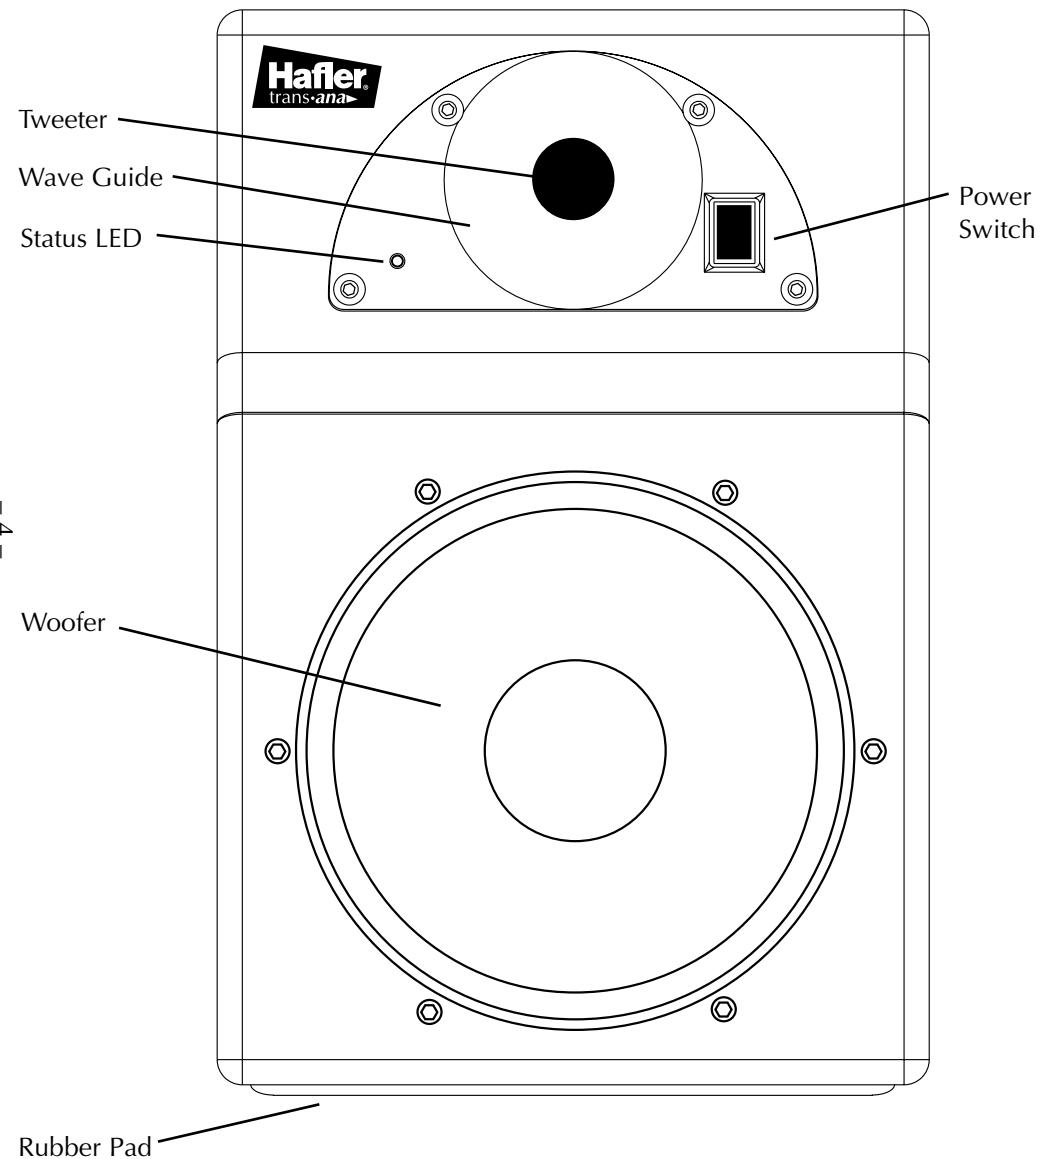


Rear Panel View

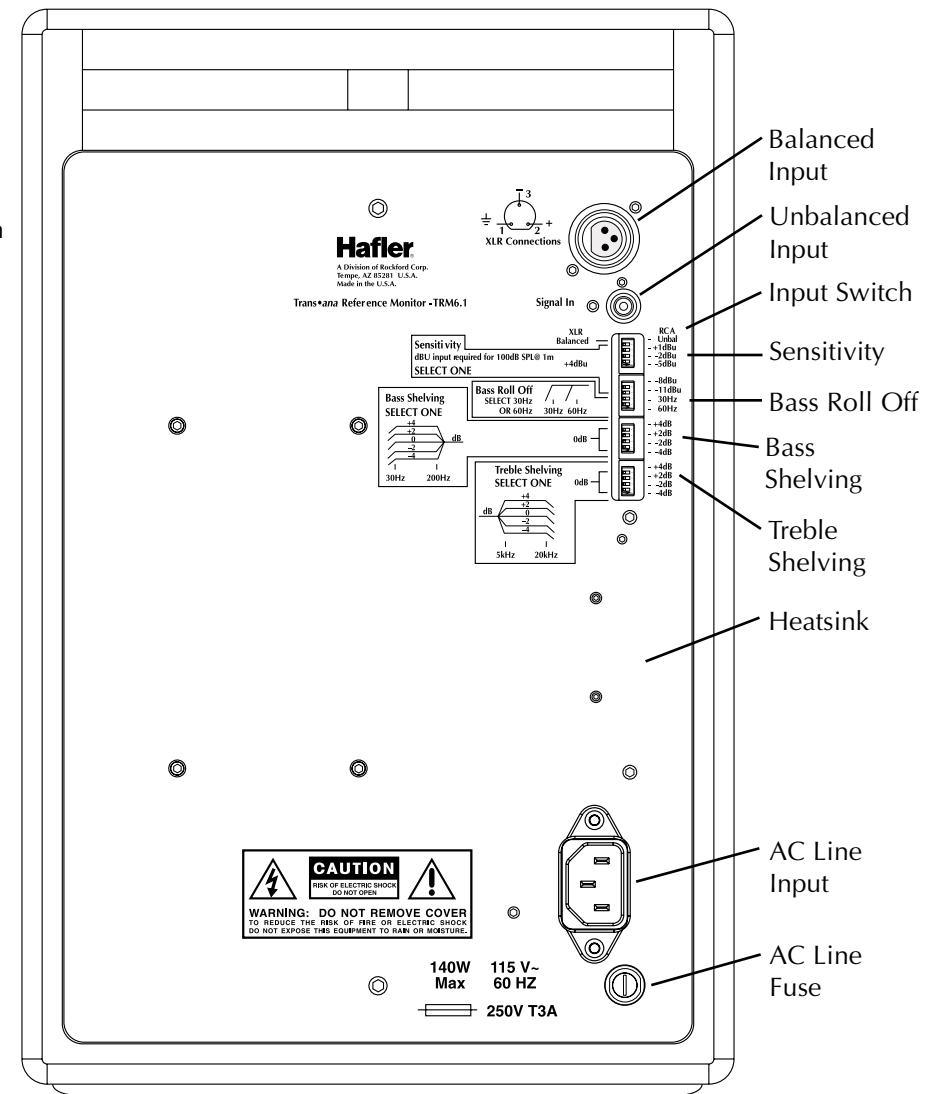


INSTALLATION

LOCATION

The location of your reference monitors in addition to the acoustics of the listening room will influence the system frequency response. In the near field environment, our ears are more sensitive to direct sound rather than the reverberation of sound. Below are some recommendations for the initial set-up which may help you optimize performance in complex acoustic environments. ***In any configuration, keep the rear of the monitor at least 5" (12.7cm) away from any wall or obstruction to reduce excessive boundary "loading" of the woofer vent and to optimize heat sink cooling.***

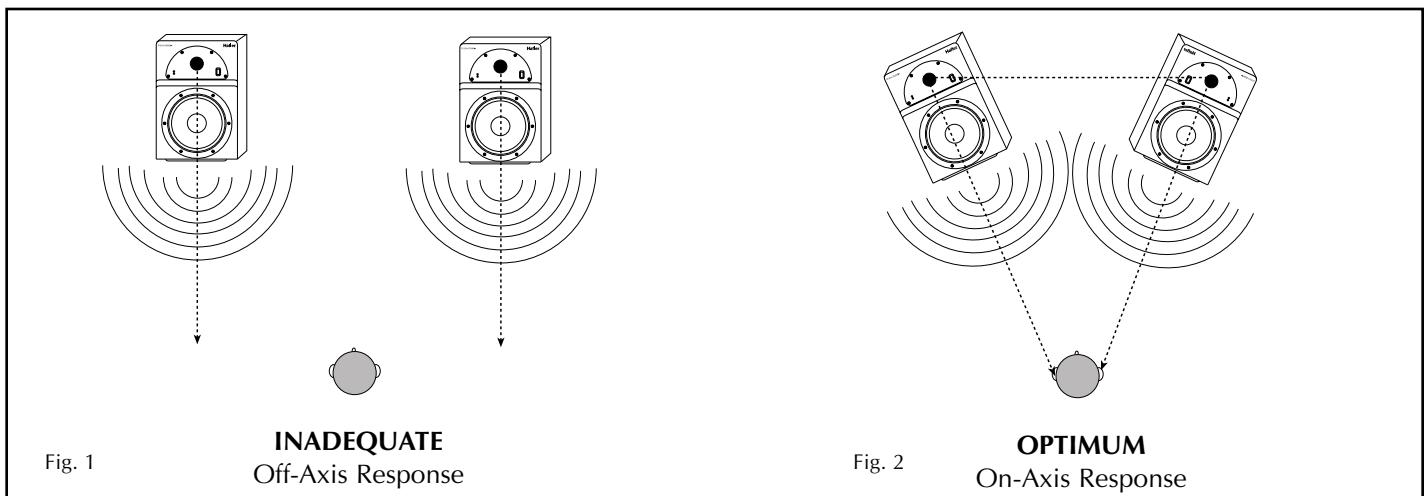


Aiming the monitors directly forward (Fig. 1) may cause response problems resulting in inadequate stereo imaging. Aiming the monitors toward you and spaced equally like a triangle (Fig. 2) provides the best imaging and produces the flattest frequency response.

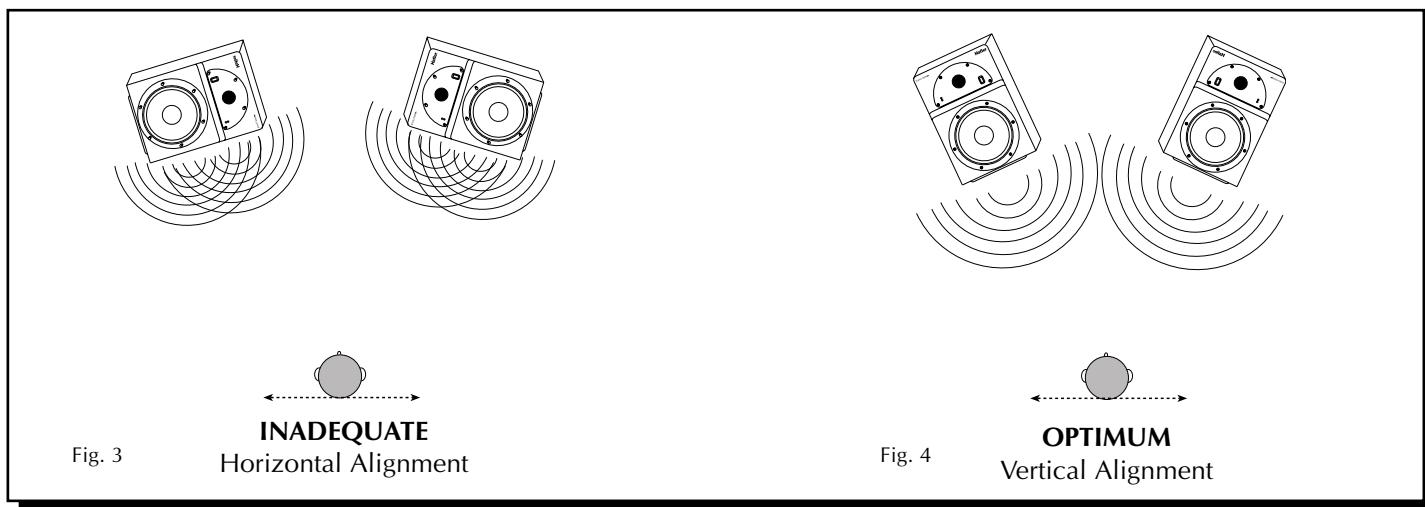

If you frequently move your chair from *side to side* in front of your mixing console, positioning the tweeter and woofer in horizontal alignment (Fig. 3) can create complex lobing patterns. Minimizing this effect can be achieved by placing the tweeter and woofer in vertical alignment (Fig. 4). If it is essential to position the monitors horizontally, place them with the tweeters toward the inside.


DETERMINING ACOUSTIC CENTER

Finding the "Acoustic Center" is accomplished by positioning the monitors so coherent arrival of the transducers occurs at ear level. The Acoustic Center is located 3 to 4 feet in front of the monitor, measuring perpendicularly from the center point of the cabinet (midway between the woofer and tweeter). Our tests have shown that a flat phase and frequency response occurs just above and below the Acoustic Center with the minimum and maximum height spanning between the tweeter dome and woofer dust cap.

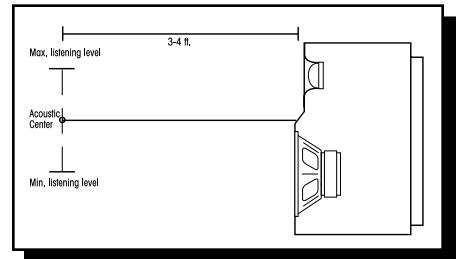

INPUT SWITCH

The unbalanced input uses a conventional RCA phone jack. Move the input switch ON (->) to use this jack. The balanced input jack is an XLR plug. The XLR jack is connected according to the IEC and AES standard. Move the input switch OFF (<->) to use this jack.

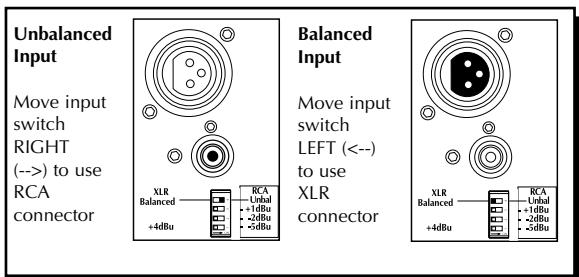

MOUNTING

The monitor may be mounted on a wall or ceiling, using suitable mounting hardware. The base of the monitor includes mounting inserts designed for use with "OmniMount Systems®" or equivalent mounting products¹.

If you mount the monitors to a wall or ceiling, you must take special care to mount them securely to prevent them from falling and causing damage or injury. Make sure that the mounting hardware (fasteners and connectors) and the surface you are mounting to are each capable of securely holding the monitor in place even if it is struck or moved. Make sure the mounting hardware, fasteners, and connectors are rated for an object at least as heavy and bulky as the monitor.



OmniMount Part #
100 ST-MP / 100 STX-MP





OmniMount Part #
100 WB / 100 WBX

¹ "OmniMount Systems®" is a registered trademark of OmniMount Systems, 1501 West 17th Street, Tempe, Arizona 85281-6255, TEL (602) 829-8000 FAX (602) 756-9000.

OmniMount Systems is not affiliated with Hafler or Rockford Corporation.

XLR WIRING CONFIGURATIONS


Using the balanced XLR input is recommended for installations where long cable runs are used or when the potential for stray electromagnetic fields from other wires exists. There is a balanced and unbalanced method in which the XLR inputs can be used. The first method is an XLR Balanced Input using 3-conductor cable. The balanced signals carried on pins 2 and 3 are equal in amplitude and opposite in phase. Pin 1 is the ground and shield. In this configuration, noise common on both phases of signal are effectively "canceled" out. The second method is an XLR Unbalanced Input using 2-conductor cable with the signal carried in the center conductor and the ground carried on the shield. Many popular mixers use unbalanced outputs and can be used with the XLR balanced input. However, in this type of configuration we recommend using twisted pair cable or short cable length to prevent residual ground noise.

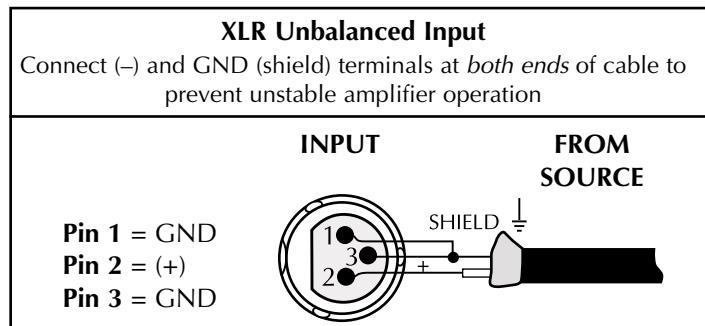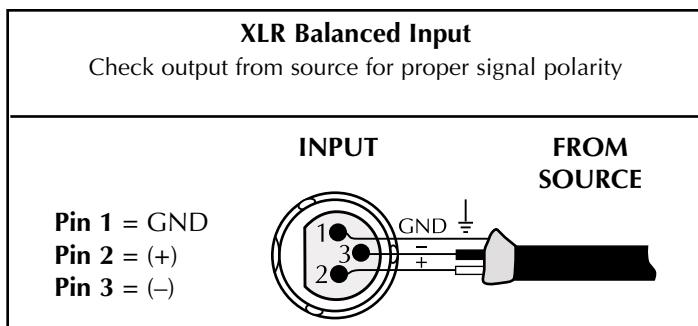

SCHEMATIC DIAGRAM


NOTES: Unless specified otherwise

1. All resistors in ohms.
2. All capacitors in microfarads.
3. Channel 1 only shown.

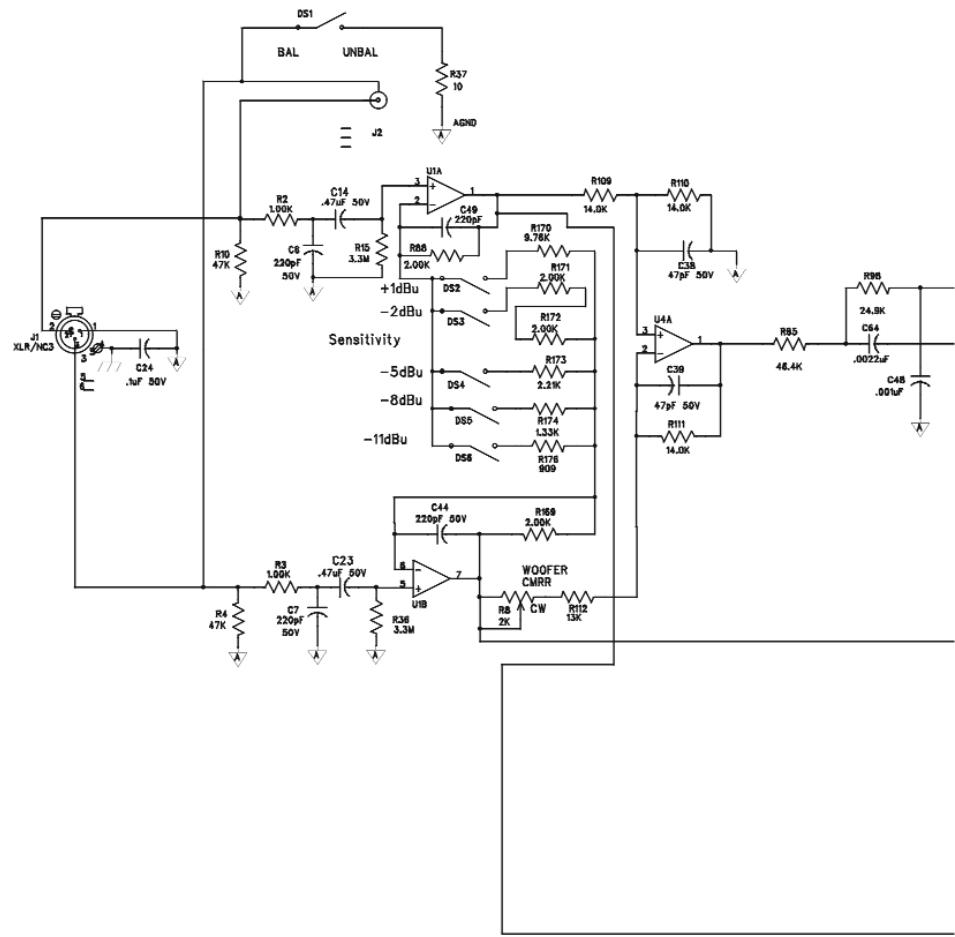




Qualified Service Personnel Only

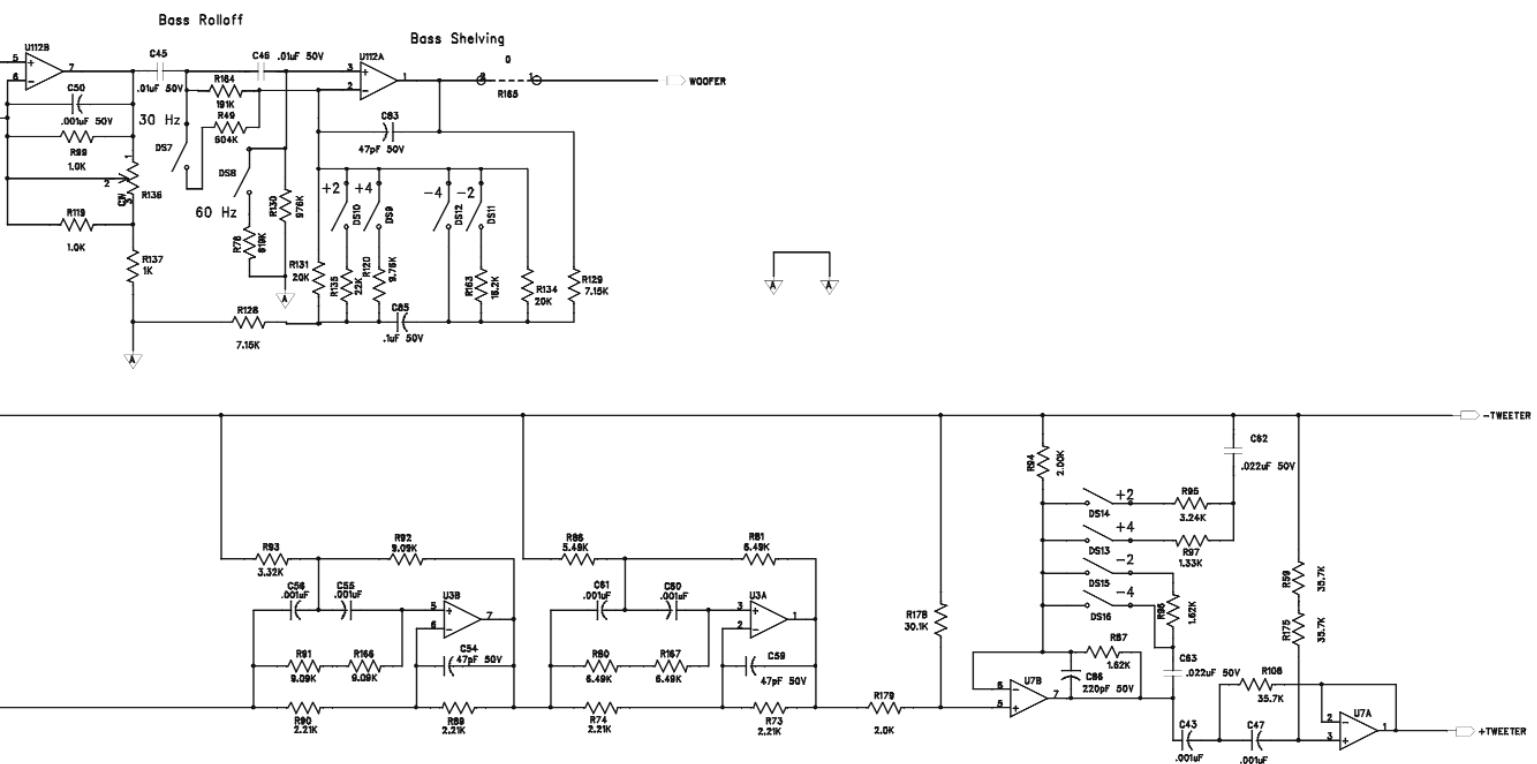

SCHEMATIC DIAGRAM


NOTES: Unless specified otherwise

1. All resistors in ohms.
2. All capacitors in microfarads.
3. Channel 1 only shown.

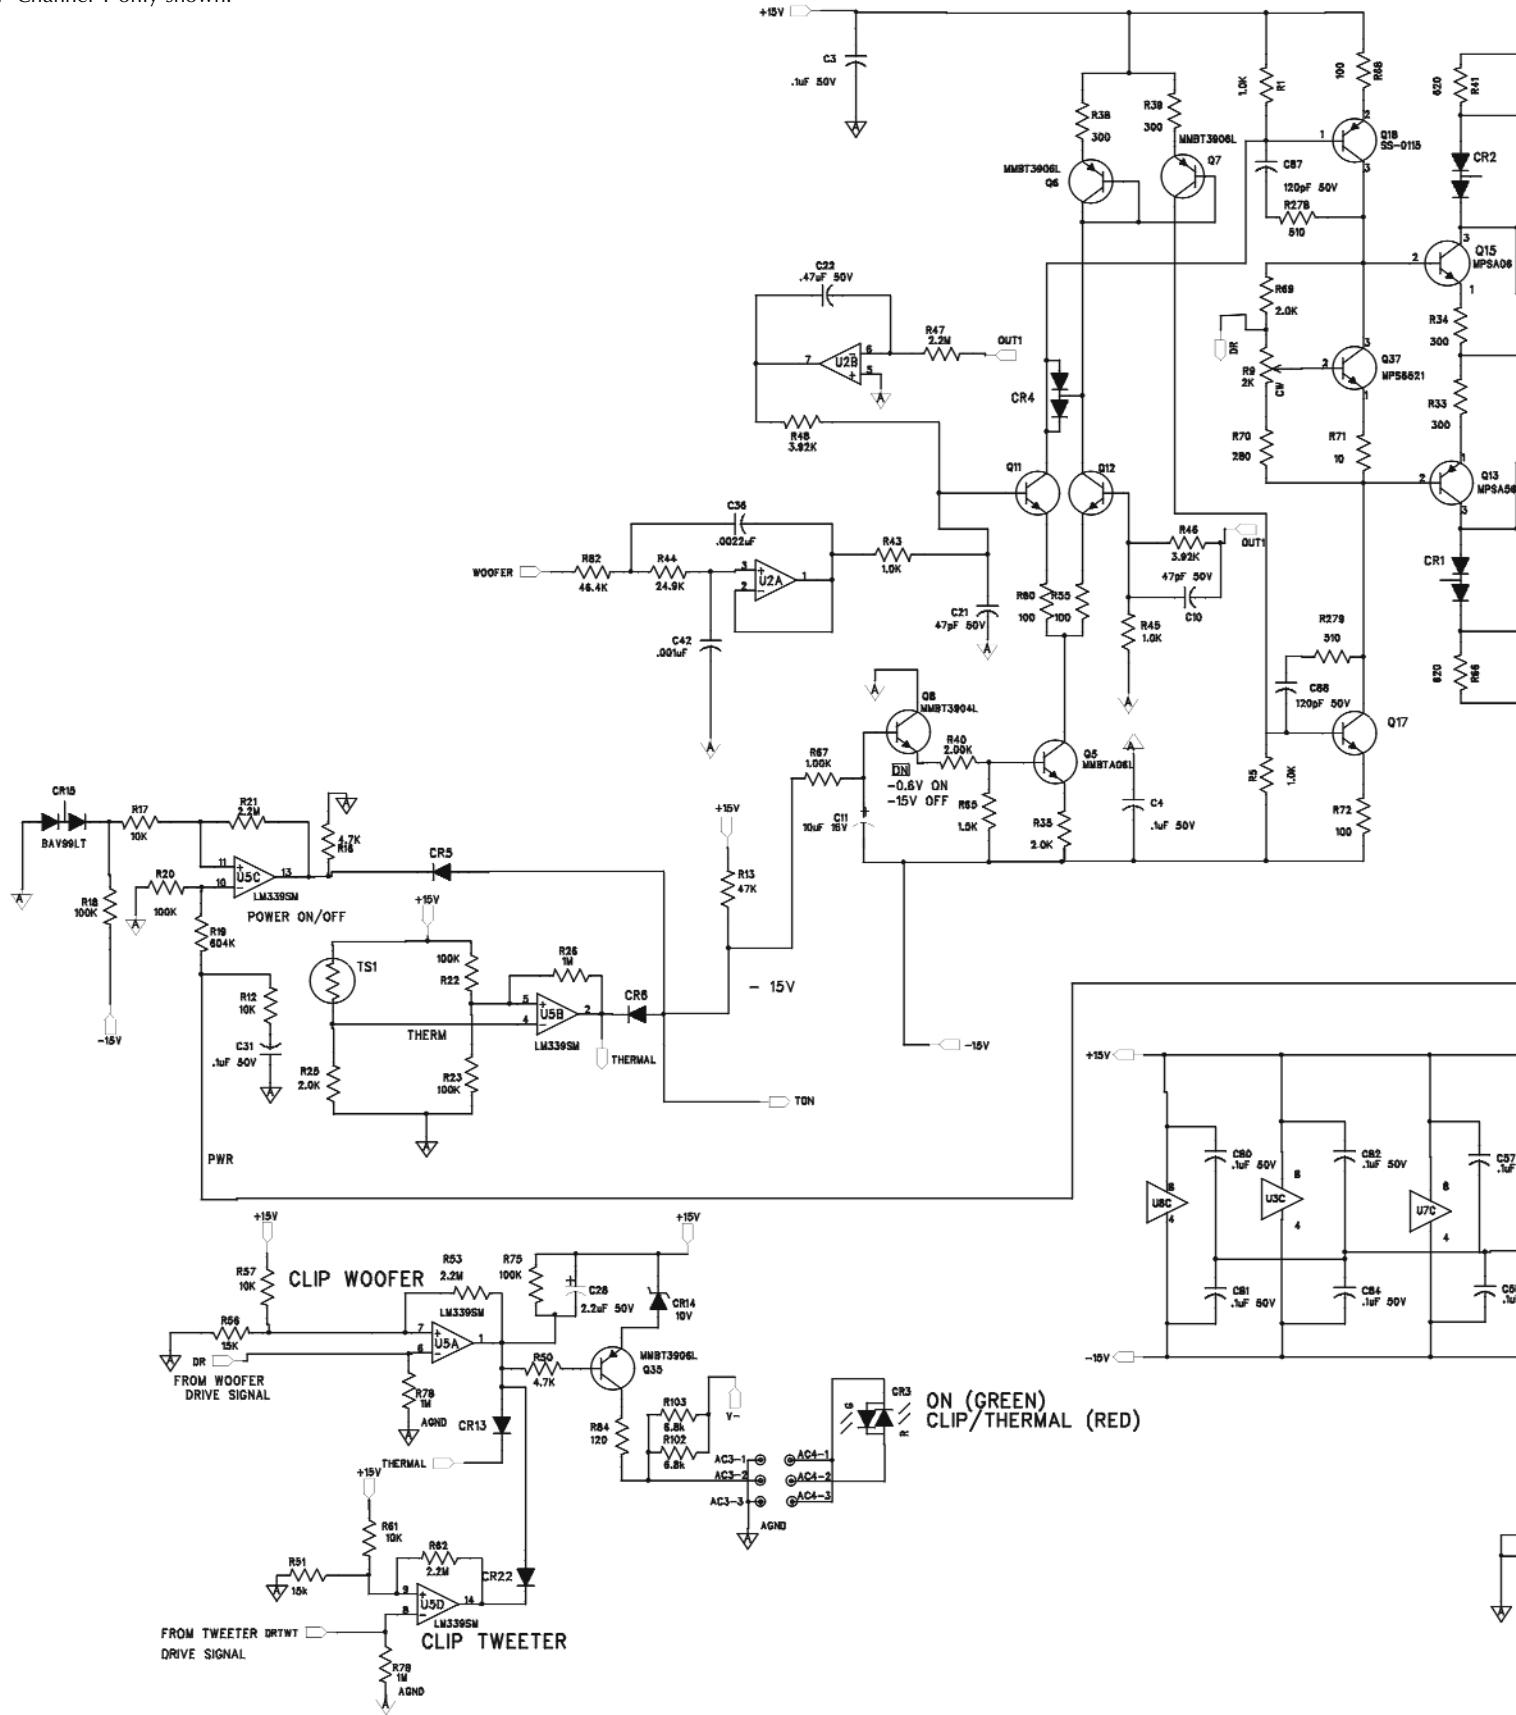



Qualified Service Personnel Only

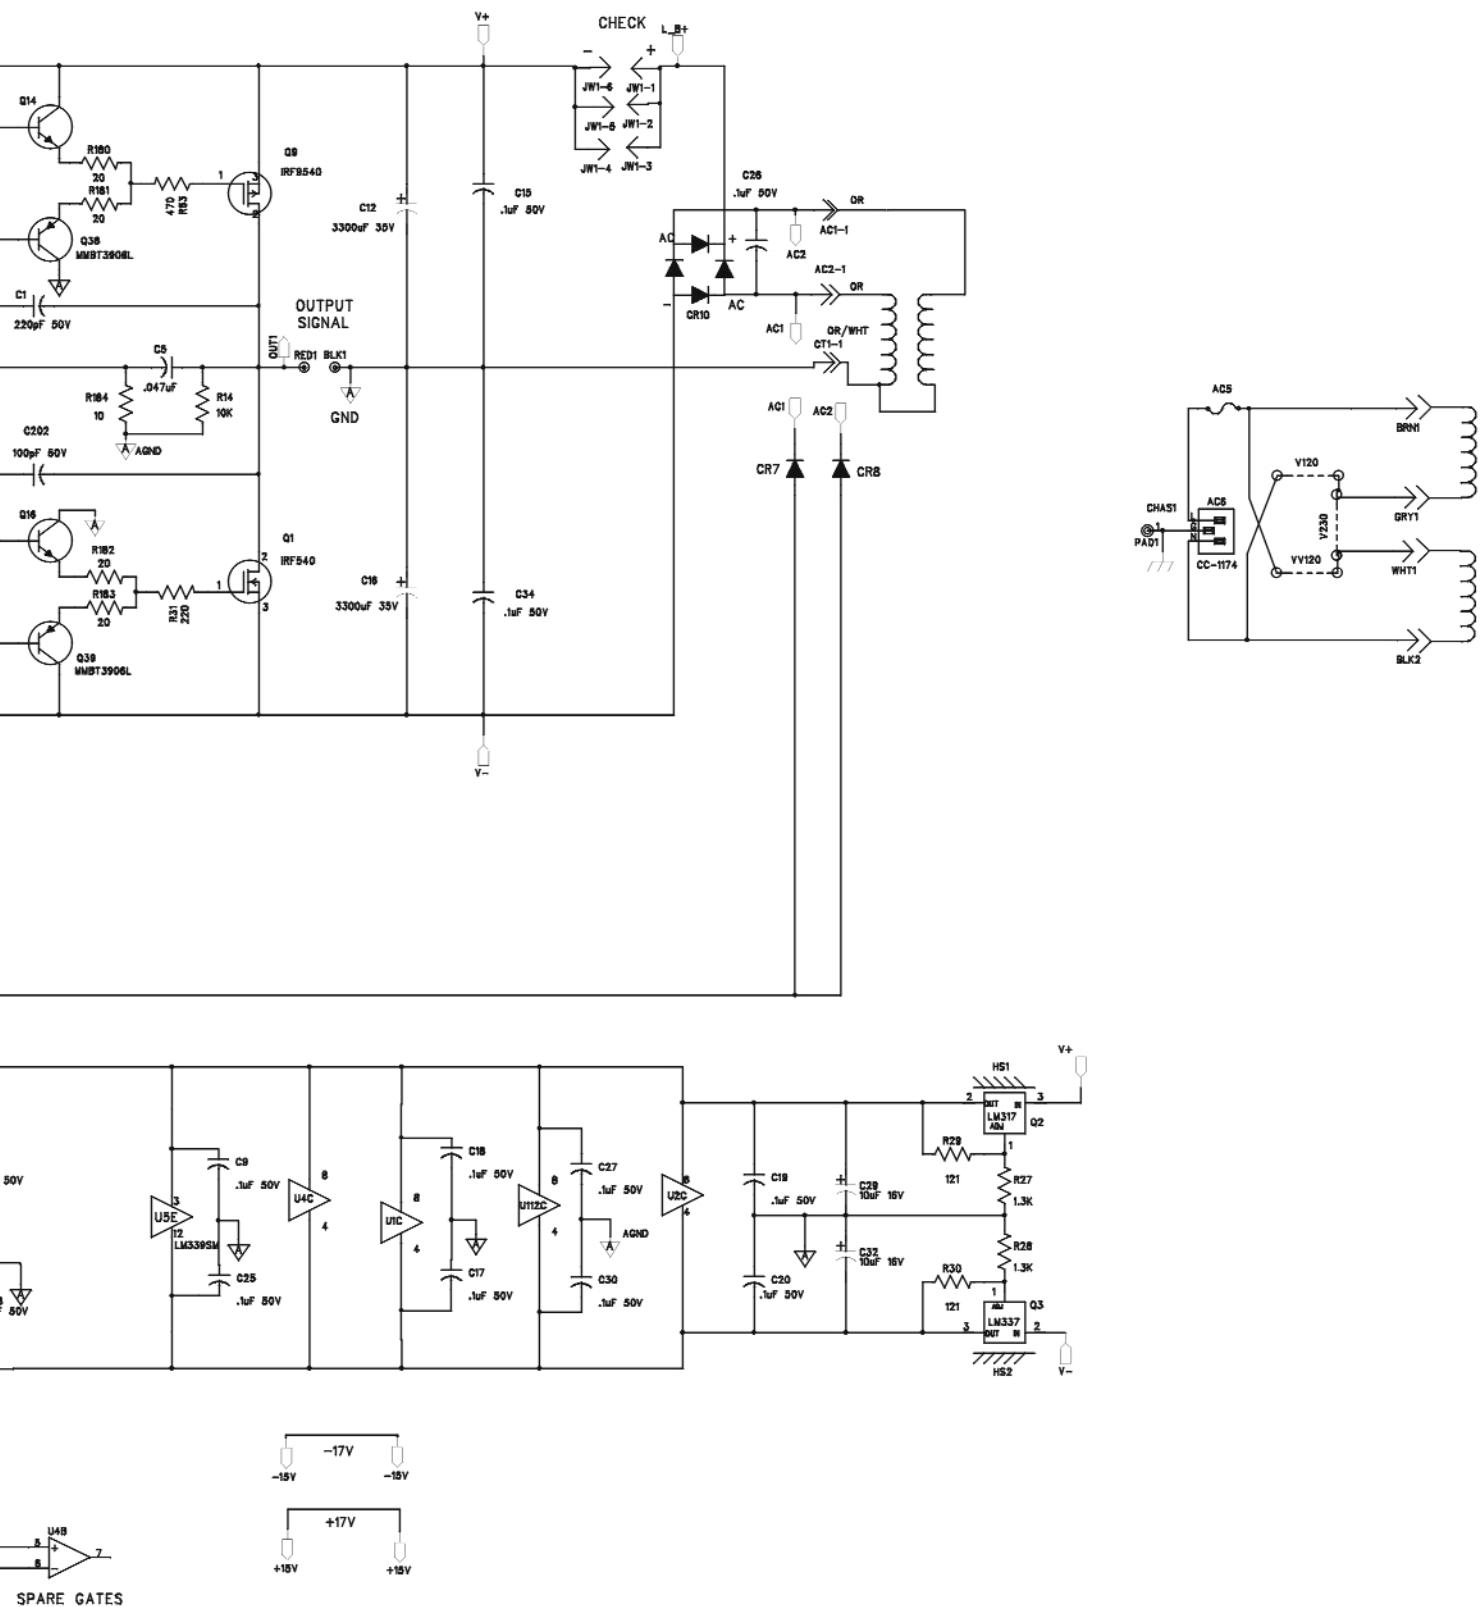


SCHEMATIC Diagram



Qualified Service Personnel Only

NOTES: Unless specified otherwise


1. All resistors in ohms.
2. All capacitors in microfarads.
3. Channel 1 only shown.

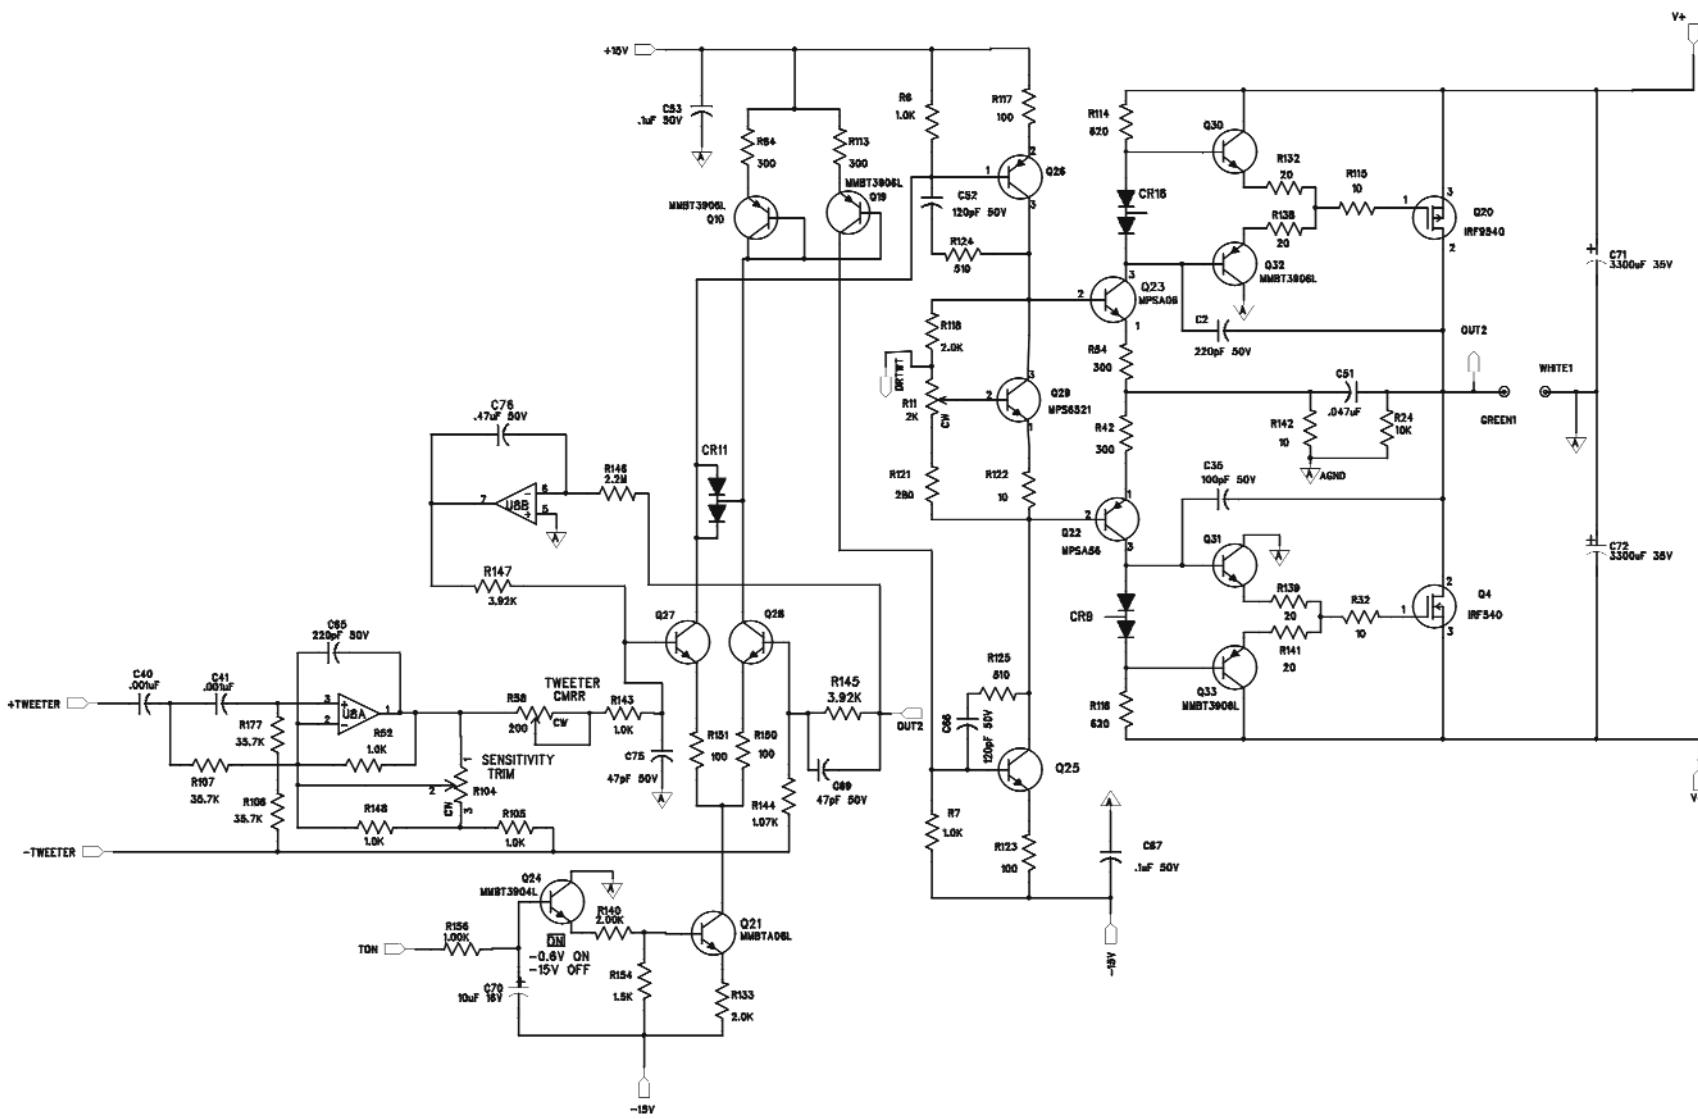

PC BOARD LAYOUT



Qualified Service Personnel Only

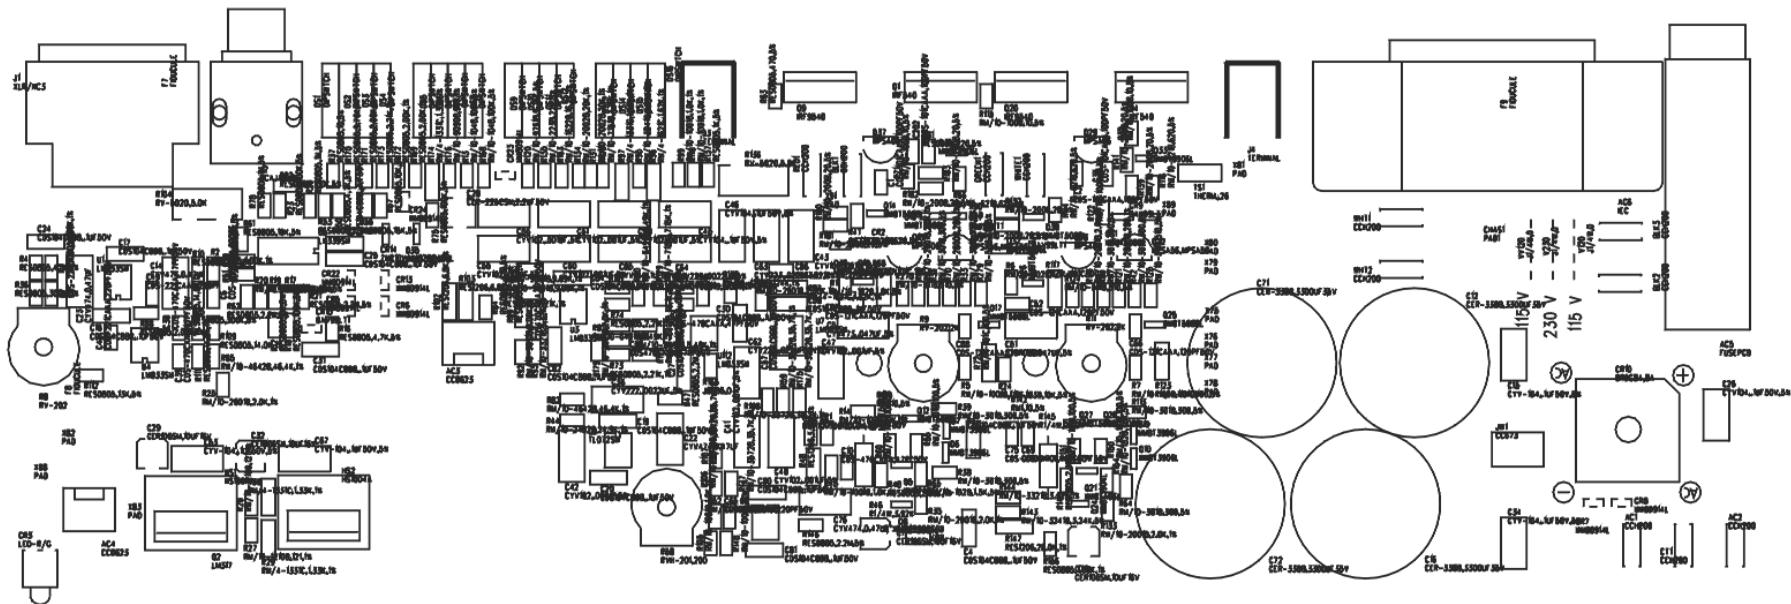

ROCKFORD/HAFLER PC-2328-B


SILKSCREEN COMPONENT SIDE

OPERATION

NOTE: When using the INPUT SENSITIVITY, select only one switch configuration at a time. Engaging multiple switch configurations (i.e., moving two or more switches ON) may cause undesirable operation and is NOT RECOMMENDED.

INPUT SENSITIVITY


The Input Sensitivity adjustment is used to match the monitor with signal levels from a variety of mixing consoles. The Input Sensitivity uses DIP switches to match input levels over a 15dB range and are marked +1dB, -2dB, -5dB, -8dB, and -11dB. These numbers indicate the input in dBu required to produce an output of 100dB SPL @ 1 meter. When all switches are in the OFF (left) position, the monitor is matched to +4dB input level. In the +4dB switch setting, the monitor is less sensitive to the input signal. In the -11dB switch setting, the monitor is more sensitive to the input signal.

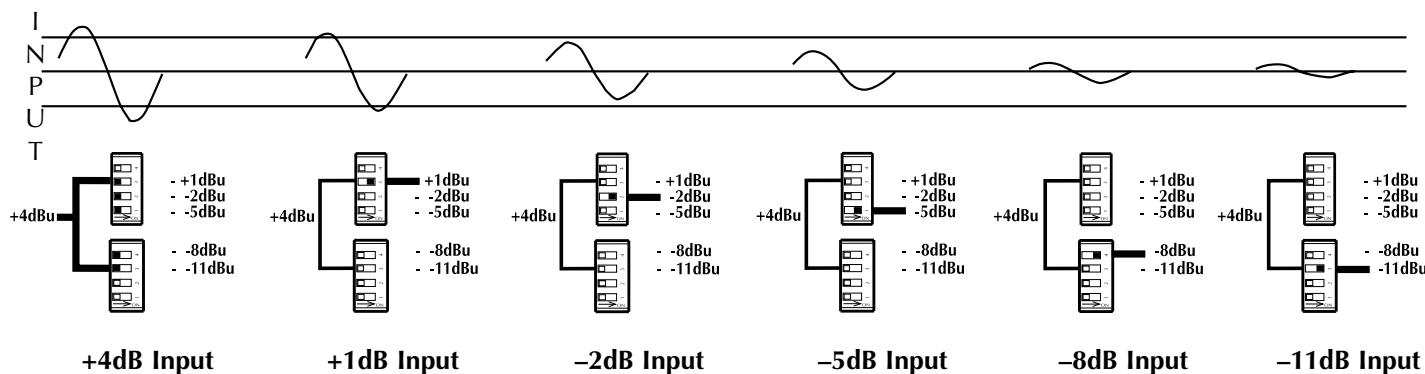


NOTE: When using the Bass Roll Off, select only the 30Hz or 60Hz filter. Engaging both switch configurations at one time (both switches ON) may cause undesirable operation and is NOT RECOMMENDED.

BASS ROLL OFF

The Bass Roll Off is a subsonic filter used to limit harmful frequencies sent to the low frequency transducer to prevent overexcursion. The filter is selectable to electronically limit frequencies below 30Hz or 60 Hz at a 12 dB/octave roll off. When both switches are in the OFF (left) position, the amplifier has an electrical -3dB down point of 28Hz. For optimum operation select only one switch configuration at a time.

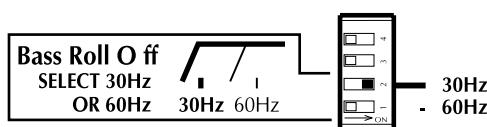

30Hz Subsonic Filter

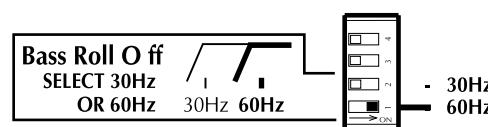


60Hz Subsonic Filter

NOTE: When using the BASS SHELVING & TREBLE SHELVING, select only one switch configuration at a time. Engaging multiple switch configurations (i.e., moving two or more switches ON) may cause undesirable operation and is NOT RECOMMENDED.


BASS SHELVING

Bass Shelving is used to match the low frequency response of the monitor to the acoustic environment. Bass Shelving uses DIP switches to control frequencies from 40Hz to 200Hz over an 8dB range and are marked +4dB, +2dB, -2dB, and -4dB. When all switches are in the OFF (left) position, the bass level is at 0dB.

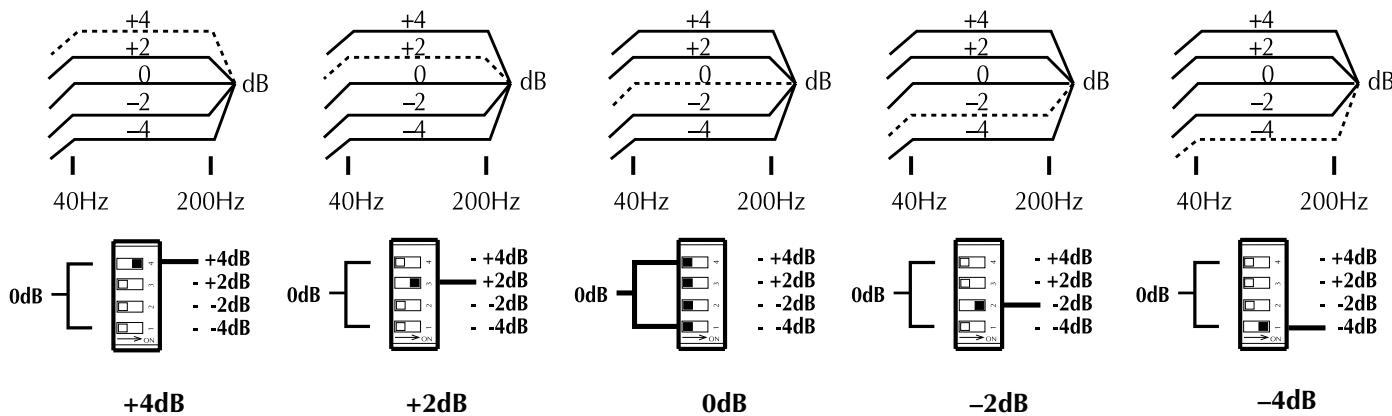

TREBLE SHELVING

Treble Shelving uses DIP switches to control frequencies from 5kHz to 20kHz over an 8dB range and are marked +4dB, +2dB, -2dB, and -4dB. When all switches are in the OFF (left) position, the treble level is at 0dB.

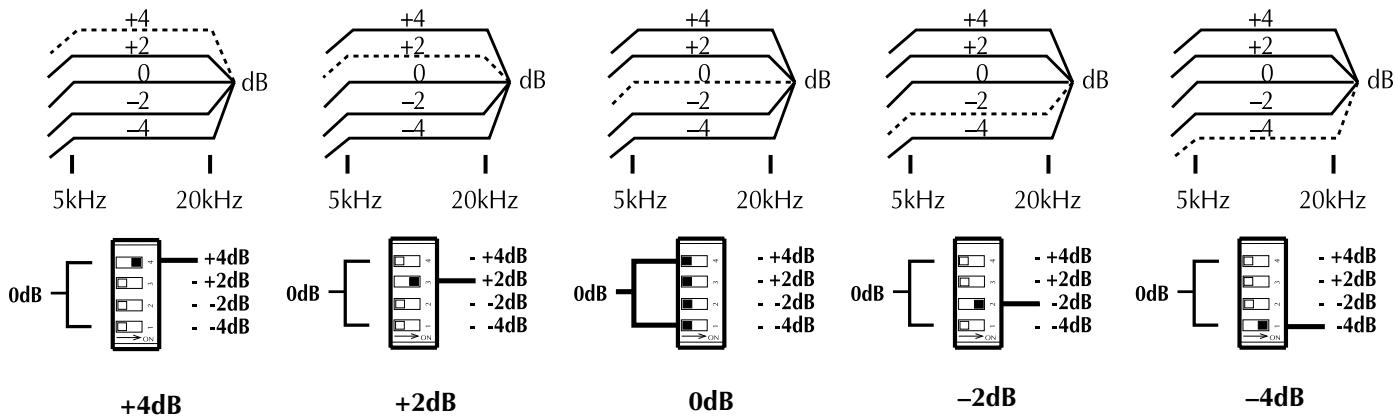

AC LINE

The TRM6.1 operates from a 115 VAC/60Hz power line. The TRM6.1CE operates from a 230 VAC 50/60Hz power line. Connection is made by a 16 gauge, IEC Type 320, grounded line cord. For safety considerations only a properly grounded (earthed) receptacle should be used. If a grounded circuit is not available, do not break off the ground pin; use the proper adapter plug for a two wire receptacle with the grounding plug suitably connected to earth ground.

! IMPORTANT: The power line fuse is mounted on the rear panel. If this fuse blows, replace it only with the same type and rating as indicated in the parts list.

POWER SWITCH

The POWER switch is located on the front panel. The LED will illuminate GREEN, indicating the respective amplifiers are on. It is possible to leave the power switch in the ON position and switch the monitor remotely through a power distribution block or switched outlet. When doing so, make sure the switch is rated for the current required by the monitor.

! Standard practice is to turn the amplifier on last and off first when switching components to prevent sending damaging transients to the speakers.

! Es costumbre encender el amplificador de último y apagarlo de primero cuando se estan encendiendo/ apagando otros equipos, para así evitar el envío de transientes dañinas a los parlantes.

! Il est de pratique courante de commencer par tourner l'amplificateur sur "off" et de terminer par "on," lorsqu'il s'agit de prévenir l'envoie de passages nuisible aux haut-parleurs.

! Der Verstärker sollte als letztes Gerät eingeschaltet und als erstes Gerät wieder ausgeschaltet werden, um eine Beschädigung der Lautsprecher durch spannungsspitzen zu vermeiden.

! L'uso comune consiglia l'accensione dell'amplificatore per ultimo e lo spegnimento per primo quando si accendono i vari componenti, per evitare l'invio di transitori danneggianti agli altoparlanti.

STATUS LED

Amplifier operation is monitored internally and has a status LED. This indicator can be used for system troubleshooting in case of aberrant behavior.

LED – Monitors the status of the amplifiers.

COLOR	STATUS
GREEN	Power on*
FLASHING RED	Clipping
RED	Thermal

*Indicates the amplifier is on regardless of input signal

RUBBER PAD

A large rubber pad is supplied to eliminate annoying buzzes and rattles when placing the monitors on mixing consoles or similar mounting surfaces. Attach the pad to the underside of the monitor in the following manner:

- Thoroughly clean area where pad will be positioned (i.e., with isopropyl alcohol)
- Remove paper liner from rubber pad (avoid touching adhesive with fingers)
- Position pad in desired location
- Press pad firmly to insure good contact

BREAK-IN and WARM-UP


We recommend initially breaking in the woofer for approximately 8 hours with musical information to establish the monitor's natural bass response. To achieve the best sonic performance and image stability from the internal amplifiers, we recommend letting them warm up for 1 hour before beginning any critical listening.

CLEANING and MAINTENANCE

There is no requirement for regular maintenance on the electronic components of the monitor. If the cabinet or woofer becomes soiled, it can be cleaned using a damp, soft cloth. If the monitor is located in a particularly dusty environment, cleaning the inside with compressed air or vacuuming every 18 to 24 months is sufficient.

Q3	Regulator LM337	SS-1376		Components marked with this symbol are safety critical and should only be replaced with identical components.
Q30	XSTR MMBT5088L NPN	SS-0114		Los componentes marcados con el simbolo son imprescindibles para la protección del equipo, por lo cual que solo sean reemplazados por los mismos componentes.
Q31	XSTR MMBT5088L NPN	SS-0114		Los componentes marcados con el simbolo son imprescindibles para la protección del equipo, por lo cual que solo sean reemplazados por los mismos componentes.
Q32	XSTR MMBT3906LT1 PNP	SS-0791		Les composants marqués du symbole sont indispensables à la sécurité et ne peuvent être remplacés qu'avec des composants identiques.
Q33	XSTR MMBT3906LT1 PNP	SS-0791		Les composants marqués du symbole sont indispensables à la sécurité et ne peuvent être remplacés qu'avec des composants identiques.
Q35	XSTR MMBT3906LT1 PNP	SS-0791		Bauteile, die mit einem gekennzeichnet sind, sind sehr wichtig und dürfen nur mit den orginal Ersatzteilen ausgetauscht werden.
Q37	XSTR MPS6521	SS-209		Bauteile, die mit einem gekennzeichnet sind, sind sehr wichtig und dürfen nur mit den orginal Ersatzteilen ausgetauscht werden.
Q38	XSTR MMBT3906LT1 PNP	SS-0791		Bauteile, die mit einem gekennzeichnet sind, sind sehr wichtig und dürfen nur mit den orginal Ersatzteilen ausgetauscht werden.
Q39	XSTR MMBT3906LT1 PNP	SS-0791		I componenti contrassegnati da sono critici per la sicurezza e devono essere rimpiazzati solo con ricambi di valore identico.
Q5	XSTR MMBTA06L	SS-102SM		I componenti contrassegnati da sono critici per la sicurezza e devono essere rimpiazzati solo con ricambi di valore identico.
Q6	XSTR MMBT3906LT1 PNP	SS-0791		I componenti contrassegnati da sono critici per la sicurezza e devono essere rimpiazzati solo con ricambi di valore identico.
Q7	XSTR MMBT3906LT1 PNP	SS-0791		I componenti contrassegnati da sono critici per la sicurezza e devono essere rimpiazzati solo con ricambi di valore identico.
Q8	XSTR MMBT3904LT1 NPN	SS-0792		I componenti contrassegnati da sono critici per la sicurezza e devono essere rimpiazzati solo con ricambi di valore identico.
U1	OPAMP TL072CD	SS-143SM		
U112	OPAMP TL072CD	SS-143SM		
U2	OPAMP TL072CD	SS-143SM		
U3	OPAMP TL072CD	SS-143SM		
U4	OPAMP TL072CD	SS-143SM		
U5	COMPTR QUAD LM339	SS-730SM		
U7	OPAMP TL072CD	SS-143SM		
U8	OPAMP TL072CD	SS-143SM		
DS1	SW SIDE ACT DIP 4 POS	SW-1649		
DS12	SW SIDE ACT DIP 4 POS	SW-1649		
DS4	SW SIDE ACT DIP 4 POS	SW-1649		
DS8	SW SIDE ACT DIP 4 POS	SW-1649		
J1	CONN XLR NEUTRIK NC3FAH-2-0	CC-2339		
J2	RCA JACK, SINGLE WHITE, GOLD	CCH-232		
JW1	SH 2X3 JUMPER	CC-648		
JW1	HDR 6 PIN DUAL ROW	CC-673		
V120	RES 0 OHM 1/4W (JUMPER WIRE)	RMP/4-0000-03		
VV120	RES 0 OHM 1/4W (JUMPER WIRE)	RMP/4-0000-03		
	6.5" Woofer	FG26387WP		
	1" Tweeter	SPK10424		
	TRM6 MEHSA Bar	WP-2439		
AC6	CONN IEC POWER INLET	CC-1174		
CHASS1	HARNESS P1000 CHASSIS GND	FA-1401-A		
	FUSE 3A 3AG SLO BLO	FS-003SB		
	FUSE HOLDER CAP 3AG	FS-1175		
	FUSE HOLDER BODY PC MOUNT	FS-1176		
TS1	THERMISTOR 10K EPOXY	SS-0426-066		
	Power Switch	SHW9840		
	IEC Linecord	WIR9856		
	Transformer	TT-2326-E		
MODEL: TRM6.1CE (230 VAC 50/60 Hz)				
RES 0 OHM 1/4W (JUMPER WIRE) RMP/4-0000-03 FUSEHOLDER CAP 5X20mm FS-1269-A 5X20mm 0.8A SLO-BLO FUSE FS-1484-A European Linecord <HAR> WIR10138				

TRM6.1 FUNCTIONAL BLOCK DIAGRAM

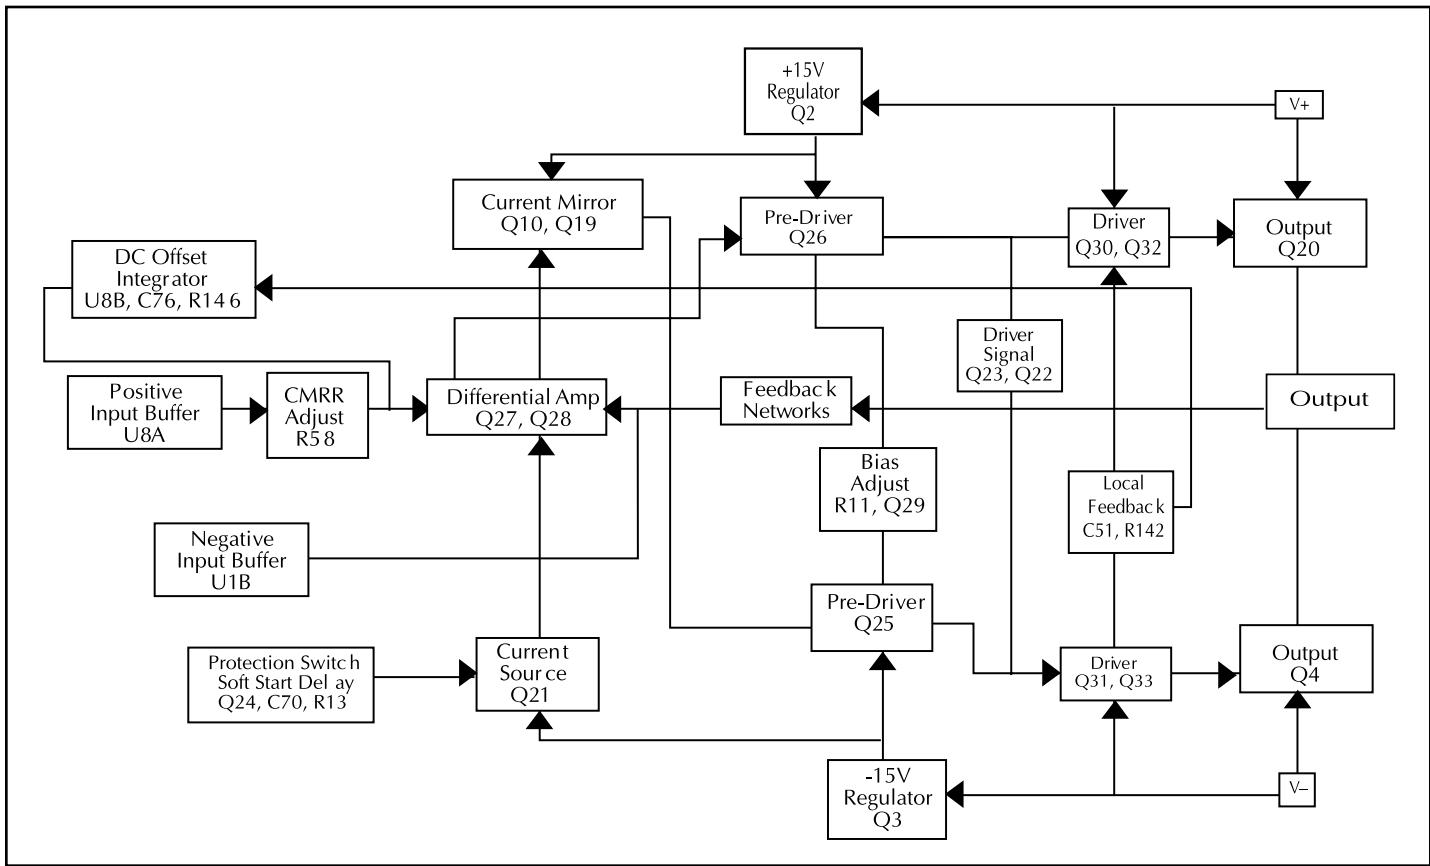

SERVICE REFERENCE

CIRCUIT OPERATION



Qualified Service Personnel Only

trans•ana Implementation

The transistor Q24 is configured to operate as a switch that controls the constant current source Q21 of the differential amplifier Q27 and Q28. Switch Q24 is under the control of the thermal and turn-on circuits, and provides a Soft Start turn-on ramp according to the charging time of C70 through R13 and R156.

U8B is configured as a DC servo-integrator to null the output offset voltage. Class AB bias current is established by Q29, and adjusted by R11.

The positive and negative input signals are conveyed to the pre-driver transistors Q25 and Q26 by the differential amplifier Q27 and Q28, and by current mirror Q10 and Q19. Drivers Q22 and Q23 make the transition from the low-voltage front-end circuit to the high-voltage output stage. Buffer transistors Q30 and Q32 enhance the front-end drive current, and drive the positive output MOSFET Q20. The same is true for buffer transistors Q31 and Q33 and negative output MOSFET Q4.

CALIBRATION



WARNING: Only a competent technician should attempt the following procedure.

Bias:

The bias control establishes the quiescent Class AB output current of the amplifier. The bias should not need readjustment from the factory setting; however, if the amplifier is repaired and the output devices have been changed, calibrating the bias is necessary. **Disconnect the power to the amplifier before removing the heatsink assembly from the speaker cabinet.** To adjust the bias, remove the jumper JW1 and connect an ammeter across the exposed pins. Adjust trimpots **R11 and R9 fully counter-clockwise before reapplying power to the unit.** After the Soft Start turn-on has settled, note the ammeter reading. Adjust R11 until an additional 50mA is created. Then adjust R9 until another 50mA is added to the ammeter reading. Replace jumper JW1.


Input Circuit

The input signal is connected to the amplifier through the balanced XLR connector J1, or the unbalanced RCA connector J2. Balanced/unbalanced switch DS1 will ground the inverting input buffer, allowing operation with an unbalanced signal on either connector. Input buffers U1A and U1B provide a stable input impedance, dominated by R10 and R4. The input circuit gain is set by switches DS2-DS6. Each switch inserts a different divider resistor for the feedback resistors R88 and R169, resulting in up to 15dB of additional input gain when DS6 is closed. Trimpot R8 adjusts the common-mode-rejection of the woofer channel.


The non-inverting input signal from U1A pin 1, and the inverting input signal from U1B pin 7, are summed together to form an unbalanced signal at U4A pin 1.



Qualified Service Personnel Only

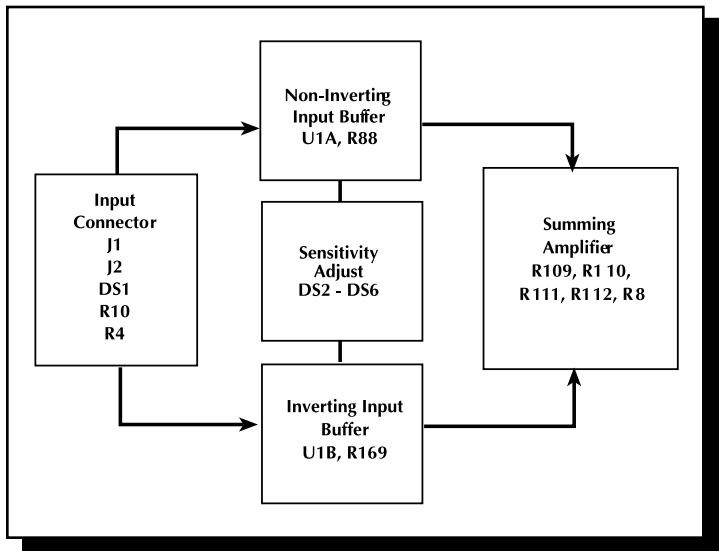


Tweeter Crossover

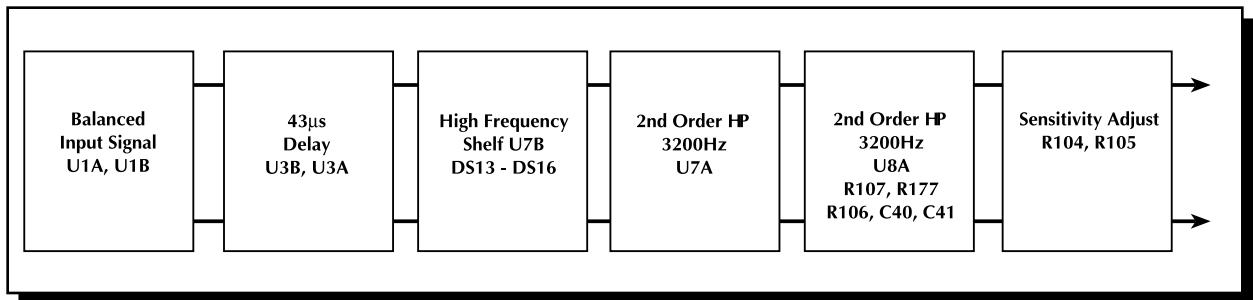


The balanced input signal at U1A pin 1 and U1B pin 7 connects to a 2-stage 39 μ s delay, using U3A and U3B. This is followed by the high-frequency shelf circuit at U7B. Switches DS13-DS16 add various reactive components to the feedback network of U7B, resulting in +4dB, +2dB, -2dB, or -4dB of gain shelving above 5kHz. The next stage at U7A is a 3.2kHz 2nd order high-pass filter. The last stage consists of another 3.2kHz 2nd order high-pass filter, bringing the overall tweeter crossover response to a 4th order 24dB/octave slope. The final components before the tweeter amplifier (R104 and R105) can provide up to 2dB of additional gain to the tweeter channel.

Woofer Crossover

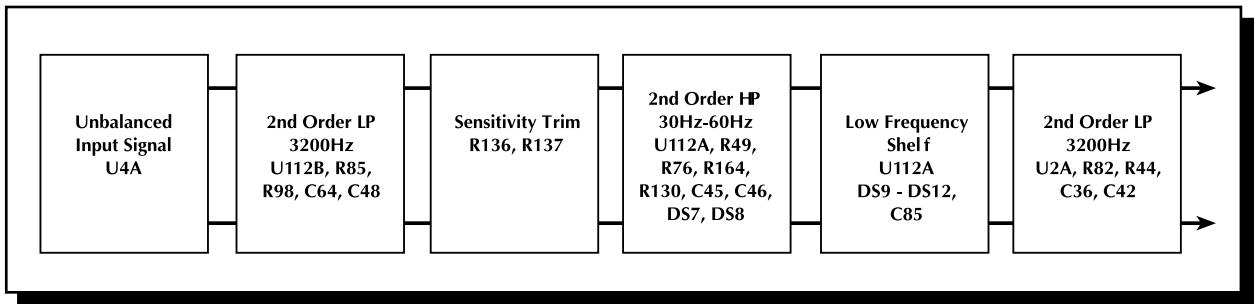

The input signal at U4A pin 1 connects to the 3200Hz 2nd order low-pass filter at U112B. Approximately 2dB of additional gain can be added to this stage by adjusting R136 against the divider resistor, R137. The next stage is a 30Hz–60Hz switchable sub-sonic high-pass filter. This is followed by an adjustable low-frequency shelving filter which defaults at +6dB gain, according to the feedback resistors R129 and R134, and dividers R131 and R128. DS9–DS12 will switch in various reactive feedback networks to accomplish +4dB, +2dB, -2dB, or -4dB of gain shelving below 200Hz. The last stage is another 3200Hz 2nd order low-pass filter at U2A, which cascades with the previous filter at U112B to produce an overall 4th order slope of 24dB/octave for the woofer amplifier.


Thermal Protection

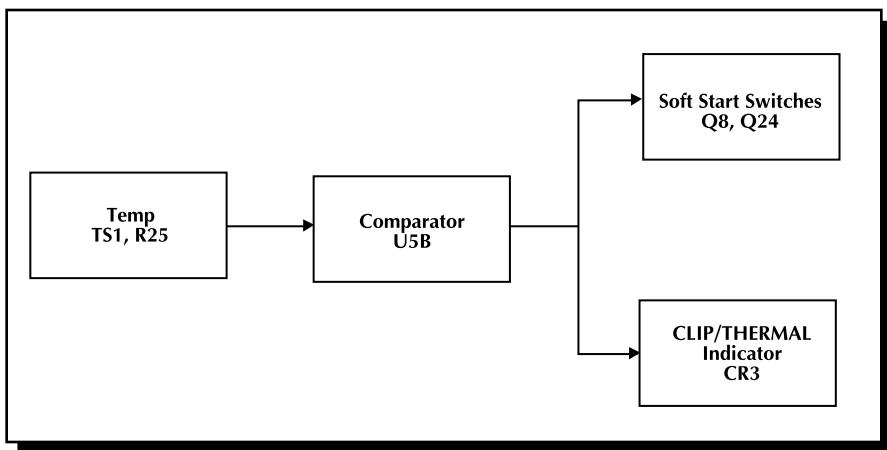

The thermal protection is activated, and shuts down audio operation, when the amplifier heatsink reaches an excessively high temperature. The voltage divider R22 and R23 establishes the reference voltage on pin 5 of U5B. The control voltage on pin 4 is established by the voltage divider TS1 and R25. TS1 is a NTC (Negative Temperature Coefficient) thermistor mounted on the heatsink. As TS1 warms and the resistance falls, the voltage on pin 4 rises. When the voltage on pin 4 exceeds the voltage on pin 5, the output on pin 2 goes low, shutting down the Soft Start switches Q8 and Q24, and lighting the CLIP/THERMAL indicator red.


Clipping Indicator

 Qualified Service Personnel Only

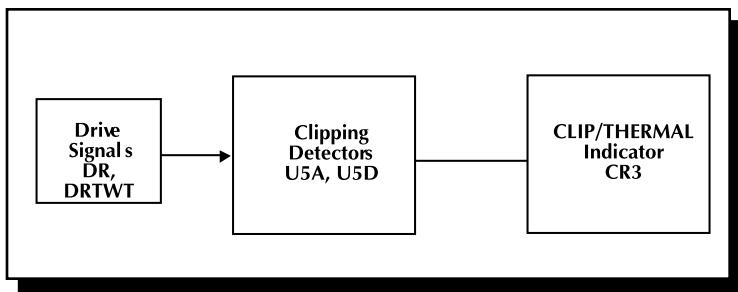

The CLIP indicators are driven by the comparator U5A and U5D. The voltage divider R56, R57, and R51, R61 establishes the reference voltage for the Clipping detector at pin 7 of U5A and pin 9 of U5D. Excessive drive signal at pin 6 or pin 8 will trigger its comparator low and light the CLIP/THERMAL indicator red.

On Indicator

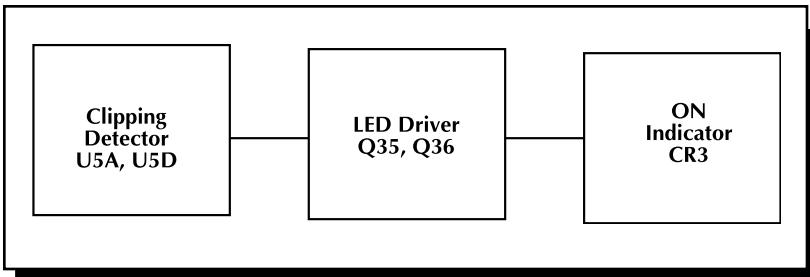

The bicolor LED, CR3, will remain green unless a THERMAL or CLIP condition is detected. The outputs of comparators U5A and U5D will be high, and Q35 will be off, allowing current to flow through the green LED of CR3 from ground to -17V.



Qualified Service Personnel Only

TWEETER REPLACEMENT

1. Remove (4) screws from wave guide using a 3/32" Allen Wrench
2. Remove wave guide assembly from enclosure
3. Disconnect the LED harness (**FIG. 1**)
4. Disconnect the (2) speaker wires from the tweeter (**FIG. 2**)
5. Disconnect the (2) power switch wires (**FIG. 3**)
6. Unclip the tweeter from wave guide (4 catch fingers)
7. Position the replacement tweeter into wave guide
8. Snap the tweeter into wave guide
9. Follow steps 1-5 in reverse order to install wave guide assembly

⚠ CAUTION: Reconnect wires as indicated in each diagram!



Wave Guide Assembly

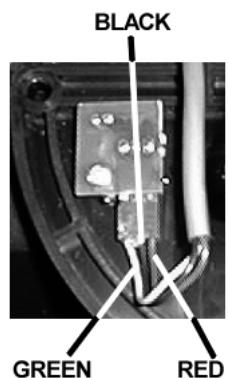


FIG. 1
LED Harness

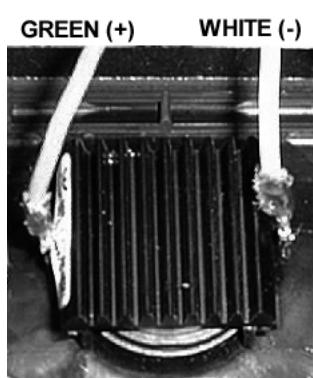


FIG. 2
Tweeter Replacement #SPK10424



FIG. 3
Power Switch

WOOFER REPLACEMENT

1. Remove (4) screws from woofer using a 3/32" Allen Wrench
2. Remove woofer from enclosure
3. Disconnect (2) speaker wires (**FIG. 4**)
4. Follow steps 1-3 in reverse order to install new woofer

⚠ CAUTION: Reconnect wires as indicated in each diagram!



FIG. 4
Woofer Replacement



Qualified Service Personnel Only

AMPLIFIER REPLACEMENT

1. Remove (2) screws from back using a 3/32" Allen Wrench (**FIG. 5**)
2. Disconnect PCB mounted LED harness (**FIG. 6**)
3. Disconnect PCB mounted tweeter speaker wires (**FIG. 7**)
4. Disconnect PCB mounted woofer speaker wires (**FIG. 7**)
5. Disconnect PCB mounted transformer primary wires (**FIG. 8**)
6. Disconnect PCB mounted transformer secondary wires (**FIG. 8**)
7. Disconnect PCB mounted power switch wires (**FIG. 8**)

⚠ CAUTION: Reconnect wires as indicated in diagram!

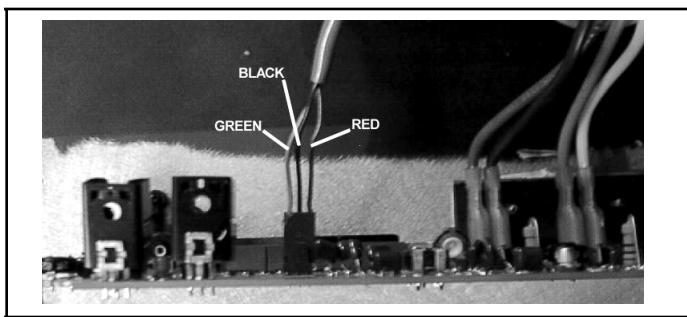


FIG. 6
PCB Mounted LED Harness

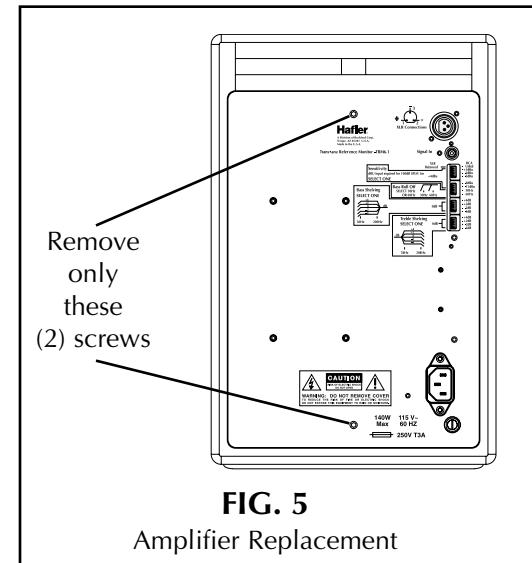


FIG. 5

Amplifier Replacement

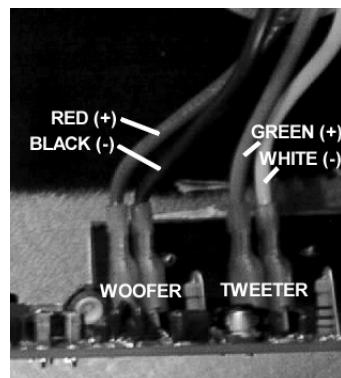


FIG. 7
PCB Mounted Speaker Wires


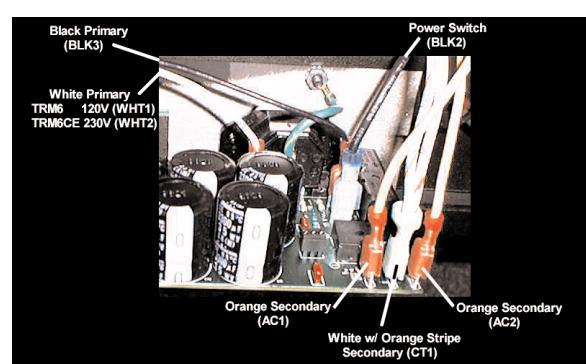


FIG. 8
Transformer / Power Switch Wires

TRANSFORMER REPLACEMENT

The TRM6.1 is available both 120V and 230V versions. If it is necessary to perform service on the amplifier, be sure to check connections to the transformer before re-applying power and/or re-assembling the unit.

⚠ CAUTION: Reconnect wires as indicated in diagram!

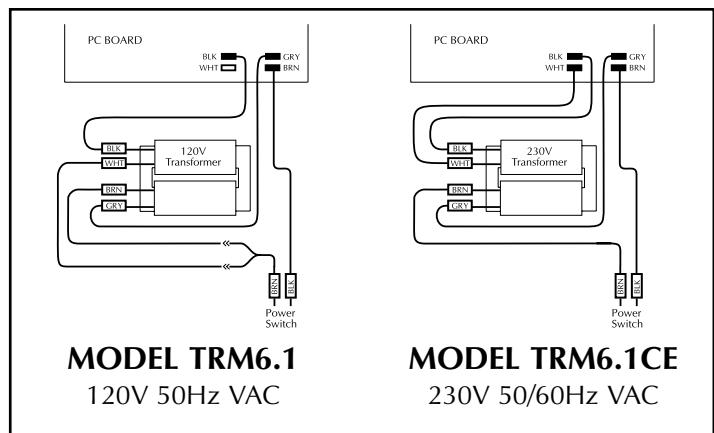

MODEL TRM6.1
120V 50Hz VAC

MODEL TRM6.1CE
230V 50/60Hz VAC

SERVICE POLICY AND LIMITED WARRANTY

Rockford Corporation (Hafler Division) offers a limited warranty on Hafler products on the following terms:

- **Length of Warranty**

1 year on Reference Monitors

- **What is Covered**

This warranty applies only to products sold to the original owner and is non-transferable. This warranty only applies to units sold in the continental United States. You are required to have a copy of the receipt stating the customer's name, dealer name, product purchased and date of purchase.

- **Products found to be defective during the warranty period** will be repaired or replaced (with product deemed to be equivalent) at Hafler's discretion.

- **What is NOT Covered**

1. Damage caused by accident, abuse, improper operations, water, theft
2. Service performed by anyone other than Hafler or an Authorized Hafler service center
3. Any product purchased outside the United States (please contact your local dealer)
4. Shipping charges to get the unit to Hafler
5. Any product which has had the serial number defaced, altered, or removed

- **Limit on Implied Warranties**

Any implied warranties including warranties of fitness for use and merchantability are limited in duration to the period of the express warranty set forth above. Some states do not allow limitations on the length of an implied warranty, so this limitation may not apply. No person is authorized to assume for Hafler any other liability in connection with the sale of the product.

- **How to obtain service or technical support**

Please call 1-800-669-9899 for Rockford/Hafler support. You must obtain an RA # (return authorization number) to return any products to Hafler. You are responsible for shipment of product to Hafler.

Rockford Corporation
Hafler Division
2055 E. 5th Street
Tempe, Arizona 85281



HAFLER

A DIVISION OF

ROCKFORD CORPORATION

546 SOUTH ROCKFORD DRIVE

TEMPE, ARIZONA 85281 U.S.A.

1.866.GOHAFLER

480.967.3565

WWW.HAFLER.COM

MADE IN THE USA

This product is designed, developed and assembled in the USA by a dedicated group of American workers. The majority of the components used in the construction of this product are produced by American companies. However, due to the global nature of their manufacturing facilities and the electronics parts industry in general, some parts may be manufactured in other countries.