


Service Manual

Combination-VCR

Omnivision

VHS

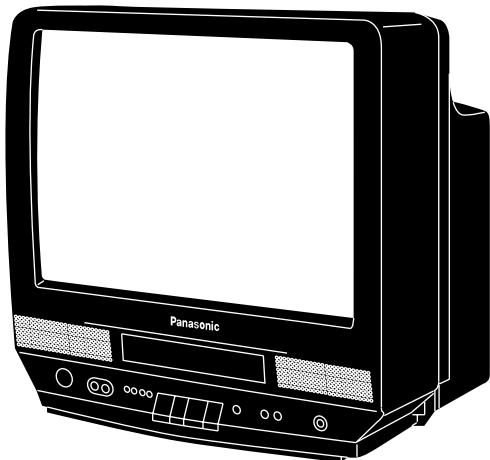

- PV-M1327
- PV-M1347
- PV-M1357W
- VV1307
- VV1317W
- PV-M2037
- PV-M2047
- VV2007
- VV2017W

SPECIFICATIONS

ITEM	SPECIFICATION						ITEM	SPECIFICATION					
	1	2	3	4	5	6		1	2	3	4	5	6
VCR	Head: 2 rotary heads helical scanning system	o	o	-	-	-	Tape Speed	SP: 1-5/16 i.p.s (33.35 mm/sec), LP: 21/32 i.p.s (16.67 mm/sec), SLP: 7/16 i.p.s (11.12 mm/sec)	ooooooo				
	4 rotary heads helical scanning system	-	-	o	-	-		Record/Playback Time: 8 Hrs with 160 min. type tape used in SLP mode FF/REW Time: Less than 3 min. (120 min. type tape)	ooooooo				
	Input Level: VIDEO IN Jack (Phono type) 1.0 Vp-p 75Ω unbalanced	o	o	o	o	o	Tape Format	Tape width 1/2" (12.7 mm) high density tape	ooooooo				
	Signal-to-Noise Ratio: SP: more than 43 dB	o	o	o	o	o		LP/SLP: more than 41 dB	ooooooo				
	Horizontal Resolution: Color/Monochrome: more than 230 lines	o	o	o	o	o	FM Radio	87.5 ~ 108.1 MHz	- - oo - o				
	Head: Normal Mono: 1 stationary head	o	o	o	o	o		Input Level: AUDIO IN Jack (Phono type) -10 dBv 50kΩ unbalanced	ooooooo				
	Frequency Response: Normal Mono: SP: 100 Hz ~ 8 kHz	o	o	o	o	o	DISPLAY	LP: 100 Hz ~ 6 kHz	ooooooo				
	SLP: 100 Hz ~ 5 kHz	o	o	o	o	o		Picture Tube	13 inch measured diagonal 90° deflection	ooo - - -			
	Signal-to-Noise Ratio: Normal Mono: SP: more than 42 dB	o	o	o	o	o	Power	LP/SLP: more than 40 dB	ooooooo				
	Wow and Flutter: Normal Mono: SP: Less than 0.2% WRMS	o	o	o	o	o		LP: Less than 0.3% WRMS	ooooooo				
	SLP: Less than 0.4% WRMS	o	o	o	o	o	GENERAL	SLP: Less than 0.4% WRMS	ooooooo				
Tuner	Broadcast Channels: VHF 2 ~ 13, UHF 14 ~ 69	o	o	o	o	o		CATV Channels: Midband A through I (14 ~ 22)	15-3/16"(386mm) (W) X 15-7/8"(402.5mm) (H) X 16-11/16"(424mm) (D)	o	o	-	-
	Superband J through W (23 ~ 36)	o	o	o	o	o		Hyperband AA ~ EEE (37 ~ 64)	15-3/16"(386mm) (W) X 15-3/16"(385mm) (H) X 16-11/16"(424mm) (D)	-	o	-	-
	Lowband A-5 ~ A-1 (95 ~ 99)	o	o	o	o	o		Special CATV channel 5A (01)	20-3/10"(515mm) (W) X 19-4/5"(503mm) (H) X 19-1/10"(484mm) (D)	-	-	o	-
	Ultraband 65 ~ 94, 100 ~ 125	o	o	o	o	o		Ultraband 65 ~ 94, 100 ~ 125	20-3/10"(515mm) (W) X 19-4/5"(505mm) (H) X 19-1/10"(484mm) (D)	-	-	o	-
									27.4 lbs. (12.4 kg)	o	o	-	-
									26.0 lbs. (11.8 kg)	-	o	-	-
									49.95 lbs. (22.67 kg)	-	-	o	-
									50.12 lbs. (22.75 kg)	-	-	o	-
									50.67 lbs. (23 kg)	-	-	o	-

1. PV-M1327
2. VV1307/VV1317W
3. PV-M1347/PV-M1357W
4. PV-M2037
5. VV2007/VV2017W
6. PV-M2047

Weight and dimensions shown are approximate.
Specifications are subject to change without notice.

Panasonic®/Quasar®

©1996 Matsushita-Kotobuki Electronics Industries LTD.
All rights reserved. Unauthorized copying and distribution
is a violation of law.

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Use Marks shown in the chart below to distinguish the different models included in this Service Manual.

MODEL	MARK	MODEL	MARK
PV-M1327	A	PV-M2037	F
VV1307	B	VV2007	G
VV1317W	C	VV2017W	H
PV-M1347	D	PV-M2047	I
PV-M1357W	E	NOT USED	Z

TABLE OF CONTENTS

SAFETY PRECAUTIONS	1-1
X-RADIATION	1-1
PREVENTION OF ESD TO ES DEVICES	1-2
OPERATION GUIDE	1-3
SERVICE NOTES	1-7
IC, Transistor and Chip Part Information	1-16
DISASSEMBLY/ASSEMBLY PROCEDURES	
Disassembly/Assembly	
Procedures of Cabinet Parts	2-1
Disassembly/Assembly	
Procedures of Mechanism	2-7
Disassembly/Assembly	
Procedures of Cassette Up Ass'y	2-16
ADJUSTMENT PROCEDURES	
Service Fixtures and Tools	2-18
Mechanical Adjustment	2-19
Electrical Adjustment	2-26
Test Points and Control Location	2-34
SCHEMATIC DIAGRAMS	
Schematic Diagram	
and Circuit Board Layout Notes	3-1
Junction Schematic Diagram	3-2
Stereo Amp Schematic Diagram	3-4
Main I (Power Supply/System Control /Servo/Operation) Schematic Diagram	3-7
Main II (Signal Process/OSD /Audio/Audio Amp) Schematic Diagram	3-11
Main III (TV Y/C Process) Schematic Diagram	3-15
Main IV (Power Supply) Schematic Diagram	3-19
TV Stereo Schematic Diagram	3-19
TV Main Schematic Diagram	3-23
CRT Schematic Diagram	3-25
UHF/VHF Tuner/TV Demodulator Schematic Diagram	3-27
Head Amp Schematic Diagram	3-31
Interconnection Schematic Diagram	3-37

CIRCUIT BOARD LAYOUT

Head Amp C.B.A.	4-1
TV Stereo C.B.A.	4-2
Stereo Amp C.B.A.	4-2
Junction C.B.A.	4-3
Main (Power Supply/Signal Process/OSD /Audio/Audio Amp/TV Y/C Process /System Control/Servo/Operation) C.B.A.	4-4
TV Main C.B.A.	4-12
CRT C.B.A.	4-14
Signal Waveform	4-15

BLOCK DIAGRAMS

Power Supply Block Diagram	5-1
Video Signal Path Block Diagram	5-2
Audio Signal Path Block Diagram	5-3
TV Stereo/Stereo Amp Block Diagram	5-5
System Control Block Diagram	5-7
Servo Block Diagram	5-8
TV Y/C Process/OSD/CCV /TV Main Block Diagram	5-10
Troubleshooting Hints	5-13

EXPLODED VIEWS

1. Mechanism (Top) Section	6-1
2. Mechanism (Bottom) Section	6-2
3. Cassette Up Compartment Section	6-3
4. Chassis Frame Section (1)	6-4
5. Chassis Frame Section (2)	6-5
6. Packing Parts and Accessories Section	6-6

REPLACEMENT PARTS LISTS

Before Replacing Parts, Read the Following	7-1
Mechanical Replacement Parts List	7-2
Electrical Replacement Parts List	7-4

SAFETY PRECAUTIONS

GENERAL GUIDELINES

1. IMPORTANT SAFETY NOTICE

- There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Layout, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent X-RADIATION, shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.
2. An Isolation Transformer should always be used during the servicing of Combination VCR whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks. It will also protect Combination VCR from being damaged by accidental shorting that may occur during servicing.
 3. When servicing, observe the original lead dress, especially the lead dress in the high voltage circuits. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
 4. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers, shield, and isolation R-C combinations are properly installed.
 5. Before turning the receiver on, measure the resistance between B+ line and chassis ground. Connect (-) side of an ohmmeter to the B+ lines, and (+) side to chassis ground. Each line should have more resistance than specified, as follows :

B+ Line	Minimum Resistance
130V	1K ohm (Hot chassis ground)
27V	180 ohms (Cold chassis ground)
17V	110 ohms (Cold chassis ground)

6. When the TV set is not used for a long period of time, unplug the power cord from the AC outlet.
7. Potentials, as high as 25.0KV (Model: A, B, C, D, E) or 30.0KV (Model: F, I) or 29.0KV (Model: G, H) are present when this TV set is in operation. Operation of the TV set without the rear cover involves the danger of a shock hazard from the TV set power supply. Servicing should not be attempted by anyone who is not thoroughly familiar with the precautions necessary when working on high voltage equipment. Always discharge the anode of the picture tube to the CRT ground of receiver before handling the tube.
8. After servicing make the following leakage current checks to prevent the customer from being exposed to shock hazards.

LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. For physically operated power switches, turn power on. Otherwise skip step 2.
3. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the receiver, such as screwheads, connectors, etc. When the exposed metallic part has a return path to the chassis, the reading should be between 1 M ohm and 12 M ohms. When the exposed metal does not have a return path to the chassis, the reading must be infinity.

LEAKAGE CURRENT HOT CHECK

1. Plug the AC cord directly into the AC outlet. Do not use a isolation transformer for this check.
2. Connect a 1.5K ohms, 10 watts resistor, in parallel with a 0.15 micro farad capacitor, between each exposed metallic part on the set and a good earth ground , as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volt RMS. A leakage current tester (Simpson Model 229 equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliampere. In case a measurement is outside of the limits specified, there is a possibility of shock hazard, and the receiver should be repaired and rechecked before it is returned to the customer.

Hot-Check Circuit

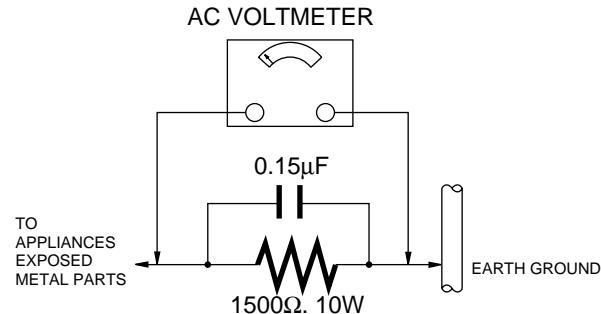


Figure 1

X-RADIATION

WARNING :

1. The potential source of X-Radiation in TV sets is the High Voltage section and the picture tube.
2. When using a picture tube test fixture for service, ensure that the fixture is capable of handling 25.0KV (Model: A, B, C, D, E) or 30.0KV (Model: F, I) or 29.0KV (Model: G, H) without causing X-Radiation.

NOTE :

It is important to use an accurate periodically calibrated high voltage meter.

1. Reduce the brightness to minimum.
2. Set the SERVICE switch to SERVICE .
3. Measure the High Voltage. The meter reading should indicate 23.5 +/- 1.5KV (Model: A, B, C, D, E) or 28.5 +/- 1.5KV (Model: F, I) or 27.5 +/- 1.5KV (Model: G, H). If the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.
4. To prevent an X-Radiation possibly, it is essential to use the specified picture tube.

HORIZONTAL OSCILLATOR DISABLE CIRCUIT TEST

SERVICE WARNING :

The test must be made as a final check before set is returned to the customer.

1. With the rear cover removed, supply about a 120V AC power source to the set, turn on the set.
2. Set the customer controls to normal operating positions.
3. Short between TP891 and TP892 on the Main circuit board with a jumper wire. Confirm that the picture goes out of horizontal sync.
4. If this does not occur, the horizontal oscillator disable circuit is not operating. Follow the Repair Procedures of horizontal oscillator disable circuit before the set is returned to customer.

REPAIR PROCEDURES OF HORIZONTAL OSCILLATOR DISABLE CIRCUIT

1. Connect a DC voltmeter between capacitor C513 (+) on the Main circuit board and chassis ground.
2. If approximately +21.9V is not present at that point when 120V AC is applied, find the cause. Check R503, R5505, C5507, C513 and D503.
3. Carefully check above specified parts and related circuits and parts. When the circuit is repaired, try the horizontal oscillator disable circuit test again.

CIRCUIT EXPLANATION

HORIZONTAL OSCILLATOR DISABLE CIRCUIT

The positive DC voltage, supplied from the D503 cathode for monitoring high voltage, is applied to the IC5301 Pin11 through R503 and R5504. Under normal conditions, the voltage at IC5301 Pin 11 is less than approx 3V. If the high voltage at Flyback Tr Pin 6 exceeds the specified voltage, the positive DC voltage which is supplied from the D503 cathode also increases. The increased voltage is applied to IC5301 Pin11 through R503 and R5504. Due to the increased voltage at IC5301 Pin11, the horizontal oscillator frequency increases, the picture goes out of horizontal sync, the beam current decreases and the picture becomes dark in order to keep X-radiation under specification.

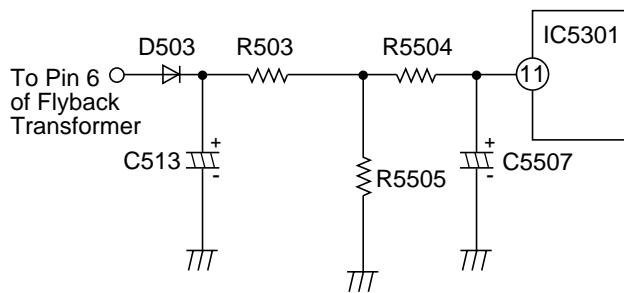


Figure 2

PREVENTION OF ELECTRO-STATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors are semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION:

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

"NOTE to CATV system installer :


This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical."

OPERATION GUIDE




Location of Controls


Remote Control Buttons

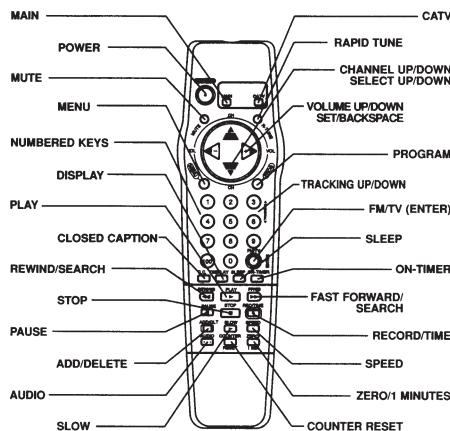


Front View of the Combination VCR

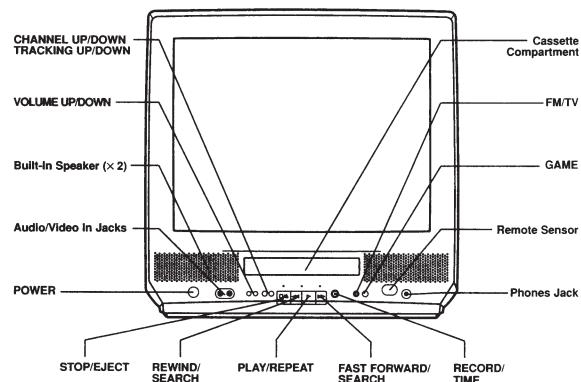

Indicators on the Front Panel

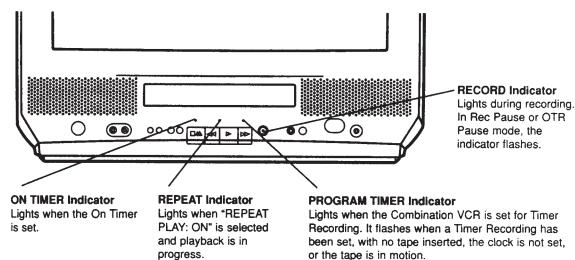


Rear View of the Combination VCR

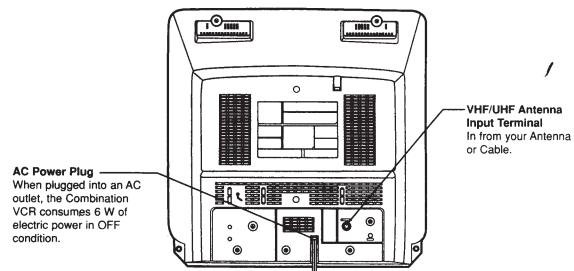

One Time Setup

Check list before you begin.

Your Combination VCR is connected to an Antenna, or Cable system.

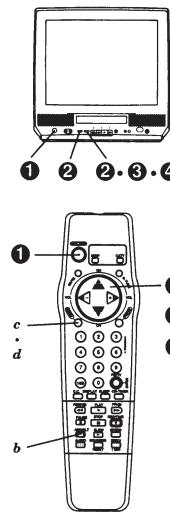

To Set Language, Channels, and Clock

When the Combination VCR power is first turned on the channel auto set and set clock screens appear automatically.

- Push POWER to turn the Combination VCR on.
- Push Δ , ∇ , or \blacktriangleright for on-screen displays in English, Spanish or French.
 - If you choose the wrong language, please see the "Reset all Combination VCR Memory Functions" section.
 - If you use a cable box, the cable box must be left on for auto channel set.
- Important: If you use a cable box, turn it on and select PBS station in your time zone. Push \blacktriangle to start Channel Auto Set and Clock Auto Set.
 - These on-screen displays will appear in sequence.
 - CH AUTO SET PROCEEDING
 - CH AUTO SET COMPLETED
 - AUTO CLOCK SET PROCEEDING

- Case 1: If the displayed time and D.S.T. are incorrect, in the rare event that you live within broadcast range of two PBS stations in two different time zones, the Combination VCR may recognize the wrong PBS station. To correct this situation, do the following:
- Make a note of the SETTING CH number shown on-screen and push \blacktriangle to exit.
 - Change the setting channel from the Combination VCR channel memory. (See the Add or Delete a Channel section on the next page.)
 - Push MENU to display the menu.
 - Push Δ , ∇ , \blacktriangleright to select "CLOCK," and then push MENU to display the SET UP CHANNEL screen.
 - If you use a cable box and have multiple PBS stations, tune the cable box to a different PBS station and try auto clock set again using the menu.
 - Push \blacktriangle to select "AUTO SET," and then push \blacktriangleright to set and to start.

- Case 2: If AUTO CLOCK SET IS INCOMPLETE appears, please set the clock manually.
- Push Δ , ∇ , \blacktriangleright to enter the month, day, year, time, and D.S.T. (Daylight Saving Time).
 - To Make Corrections, push \blacktriangleright repeatedly to move back or forward to the desired item.
 - Push MENU to start the clock. Then, push Δ , ∇ , \blacktriangleright to select "DST:ON." Now, push MENU to exit the MAIN MENU.

- 4 (Case 1) Confirm that displayed time is correct and push \blacktriangle to exit.

- If the displayed time and D.S.T. are incorrect, in the rare event that you live within broadcast range of two PBS stations in two different time zones, the Combination VCR may recognize the wrong PBS station. To correct this situation, do the following:
- Make a note of the SETTING CH number shown on-screen and push \blacktriangle to exit.
 - Change the setting channel from the Combination VCR channel memory. (See the Add or Delete a Channel section on the next page.)
 - Push MENU to display the menu.
 - Push Δ , ∇ , \blacktriangleright to select "CLOCK," and then push MENU to display the SET UP CHANNEL screen.
 - If you use a cable box and have multiple PBS stations, tune the cable box to a different PBS station and try auto clock set again using the menu.
 - Push \blacktriangle to select "AUTO SET," and then push \blacktriangleright to set and to start.

Using the Δ , ∇ , \blacktriangleright keys

Whenever a menu or program screen is displayed, CHANNEL UP/DOWN and VOLUME UP/DOWN on the remote control function as Δ , ∇ , \blacktriangleright only. For VOLUME UP/DOWN functions, use the buttons on the Combination VCR.

NOTES

Auto clock set will be performed when the Combination VCR is turned on. If you have a cable box and you want auto clock set to be performed, the cable box must be left on and tuned to the PBS channel at the time the Combination VCR power is turned off.

If for any reason the time is changed manually, automatic time correction will not occur.


- Case 2) If AUTO CLOCK SET IS INCOMPLETE appears, please set the clock manually.

- Push MENU to display the SET CLOCK screen.
- Push Δ , ∇ , \blacktriangleright to enter the month, day, year, time, and D.S.T. (Daylight Saving Time).
- To Make Corrections, push \blacktriangleright repeatedly to move back or forward to the desired item.
- Push MENU to start the clock. Then, push Δ , ∇ , \blacktriangleright to select "DST:ON." Now, push MENU to exit the MAIN MENU.

To Change or Re-enter One Time Setup Items

To Change the OSD Language

- Push MENU to display the MAIN MENU.
- Push Δ , ∇ , \blacktriangleright to select the language selection icon.
- Push MENU repeatedly to change the language as shown.

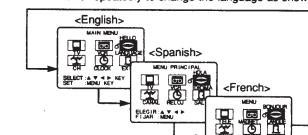

- 4 Push Δ , ∇ , \blacktriangleright to select "EXIT," and then push MENU to exit the MAIN MENU.

To Replace Channels in Memory

In case, you have cable installed, etc.

- 1 Push MENU to display the MAIN MENU.

- 2 Push Δ , ∇ , \blacktriangleright to select "CH," and then push MENU to display the SET UP CHANNEL screen.

- 3 Push Δ , ∇ repeatedly to select "ANTENNA SYSTEM," and then push \blacktriangleright to enter your antenna system (TV or CATV).

- 4 Push \blacktriangle to select AUTO SET, and then push \blacktriangleright to start.

- To exit this mode, push MENU.

- Then, push Δ , ∇ , \blacktriangleright to select "EXIT." Now, push MENU to exit the MAIN MENU.

To Set or Reset the Clock

In case the clock is wrong, or a power failure occurred.

- Push MENU to display the MAIN MENU.
- Push Δ , ∇ , \blacktriangleright to select "CLOCK," and then push MENU to display the SET CLOCK screen.
- Push Δ , ∇ , \blacktriangleright to select "MANUAL SET," and then \blacktriangleright to display the SET CLOCK screen.
- Please do steps b and c at the top of this page.

To Add or Delete a Channel

- Select a channel using the NUMBERED keys to add or the CH \blacktriangle to delete.

- Push the ADD/DLT to add or delete the channel.

- To select a channel once it's deleted, use the NUMBERED keys.




- This Combination VCR will accurately maintain its calendar up to Dec. 31, 2008, 11:59PM.
Normal TV or Cable channels are automatically selected and placed in memory depending on how your Combination VCR is hooked up.



Picture Adjustment

- Check list before you begin.
- All connections are made.
 - Your Combination VCR is plugged in.

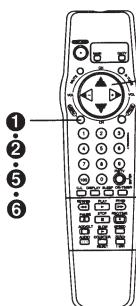

- 1 Push MENU to display the MAIN MENU.
- 2 Push Δ ∇ \leftarrow \rightarrow to select "TV," and then push MENU to display the SET UP TV screen.
- 3 Push Δ to select "VIDEO ADJUST," and then push \rightarrow to display the VIDEO ADJUST screen.
- 4 Push Δ repeatedly to select the desired adjust item, and then push \leftarrow \rightarrow to adjust. (See description below.)

Picture Adjustment

COLOR Control

To adjust the intensity of the colors.

TINT Control

To adjust for the most natural flesh tones.

BRIGHT Control

To adjust the brightness of the picture.

PICTURE Control

To adjust the intensity of the picture by adjusting contrast and color level at the same time and in the proper balance.

SHARPNESS Control

To adjust the sharpness of the picture.

To Reset Picture Controls to the Factory Setting

Push Δ ∇ and \rightarrow to select and set NORMAL.



- 5 Push MENU twice to exit the VIDEO ADJUST mode.

If no button is pushed within 5 minutes, the video adjust overlay disappears.

- 6 Push Δ ∇ \leftarrow \rightarrow to select "EXIT," and then push MENU to exit the MAIN MENU.

FM Radio

- Check list before you begin.
- All connections are made.
 - Your Combination VCR is plugged in.



FM Radio Feature

The Combination VCR has an FM radio with built-in antenna, 9 station preset, and a band range of 87.5-108.1 MHz. You can even set the On Timer to wake up to your favorite music station.

- 1 Push FM/TV on the remote control or Combination VCR to select FM Radio mode.

This screen changes to a black screen after 10 seconds.



To Memorize Stations

- a Push NUMBERED keys (1-9) in FM Radio mode.

- b Push Δ ∇ to select desired radio station. (Each push changes the frequency by 200 KHz.)

- c Push ADD/DLT to memorize the desired station.

To memorize other positions, repeat steps a-c.

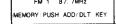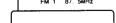


- 2 Push the Numbered key (1-9) to select a memorized channel (see above).
- 3 Push FM/TV on the remote control or Combination VCR again to exit the FM Radio mode.

To Select Audio Mode for FM Radio

Push AUDIO in FM Radio mode to select "STEREO" or "MONO". Arrow points to current mode.


< Example >

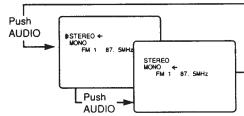

- NOTES**
- * You can not record FM radio stations on the Video Cassette tape.
 - * You may get improved FM reception for some stations by repositioning the Combination VCR.
 - * You can not set to FM Radio mode in the Playback, Recording, and Back OSD screens (MENU, PROGRAM, ON-TIMER, and VCR Plus+).

Push AUDIO

Push AUDIO

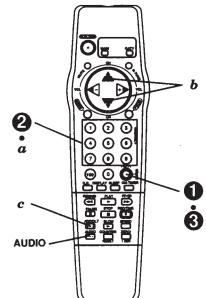

- NOTES**
- * You can not record FM radio stations on the Video Cassette tape.
 - * You may get improved FM reception for some stations by repositioning the Combination VCR.
 - * You can not set to FM Radio mode in the Playback, Recording, and Back OSD screens (MENU, PROGRAM, ON-TIMER, and VCR Plus+).

CC Closed Caption System

This multi-use system not only allows the hearing impaired to enjoy selected programs, but also makes useful information from TV stations available to everyone.

- Check list before you begin.
- All connections are made.
 - Your Combination VCR is plugged in.

- C.C.** Push C.C. repeatedly to select the desired Caption Mode (see "Caption Mode description" below).
Selected mode is displayed on screen.
Each push of C.C. will change the Caption Mode as shown at right:



Closed Caption Modes to Choose From

Caption Mode: CAPTION C1 or C2

A narration of selected TV programs will be displayed on the screen. Check your TV program listings for C.C. (Closed Captioned) broadcasts.

Caption Mode: TEXT C1 or C2

The top half of the screen will be blocked out. When the TV station broadcasts text, such as program listings, special information, etc., it will appear in this space.

Caption Mode: OFF

Narration will not appear on the screen even if a closed caption or text broadcast is received.

- The closed caption or text signal may be broadcast over C1, C2, or both. Also, text contents can vary so you may wish to try different settings.

Caption On Mute Feature

This feature allows you to turn off the sound and, at the same time, display Closed Caption narration. Perfect for when you need silence, but would like to continue enjoying the program.

- 1 Push C.C. until CAPTION OFF is displayed on screen.
- 2 Push MENU to display the MAIN MENU.

- 3 Push Δ ∇ \leftarrow \rightarrow to select "TV," and then push MENU to display the SET UP TV screen.

- 4 Push \rightarrow repeatedly to select the desired caption on mute mode, and then push MENU to exit the SET UP TV screen.

Each push of \rightarrow will change the display as shown at right.

- 5 Push Δ ∇ \leftarrow \rightarrow to select "EXIT," and then push MENU to exit the MAIN MENU.

- 6 Push MUTE to instantly mute the sound. The closed caption narration is displayed on the screen.

- Push MUTE again to resume normal sound and picture.
- Not all programs have Closed Caption information, therefore, narration may not be displayed.

Recording and Playing Back a Closed Caption/Text Program

Record: Your Combination VCR will automatically record the Closed Caption/Text signal. Just follow normal recording operation.

Playback: To display the Closed Caption narration or Text during playback, simply push C.C. until desired Caption Mode is displayed.

Playback a Tape

- Check list before you begin.

- All connections are made.

- Your Combination VCR is plugged in.

Insert a cassette.

- Combination VCR power comes on automatically.

- 1 Push PLAY on the remote control or Combination VCR to start playback.

- Playback begins automatically if cassette has no record tab.

- 2 Push STOP on the remote control or Combination VCR to stop playback.

- 3 Push STOP/EJECT on the Combination VCR to eject the cassette.

- You may eject a cassette with power on or off.

To Find a Particular Scene During Playback

- REW or FF** Push REW or FF on the remote control or Combination VCR to quickly locate a scene.

- SP mode tapes have a search speed of 8 times SLP mode (27 times the normal speed).
- Some noise bars will appear during search.

Special Effects During Playback

These features work best in SP or SLP mode. The sound will be muted.

Slow Motion Playback

Push SLOW to start slow motion playback. Push PLAY or SLOW to release.

Still (Freeze) Frame Picture

Push PAUSE to freeze and release the picture.

- To reduce picture noise, first push SLOW. Then, use the 3 or 6 NUMBERED keys on the remote control or CH UP/DOWN on the Combination VCR to clear up the picture, then push PAUSE.

Frame by Frame Advance

While in Still mode, push SLOW repeatedly or hold down to advance the still picture one frame at a time. Push PAUSE or PLAY to release.

(After the Combination VCR is in Still or Slow mode for 3 minutes, it will switch to the Stop mode automatically to protect the tape and the video head.)

Features for a Quality Picture

Digital Auto Tracking

This feature continuously analyzes the signal and adjusts for optimum picture quality.

Manual Tracking Control

Use during Playback and Slow Motion mode to reduce picture noise. Push 3 or 6 NUMBERED keys on the remote control or CH UP/DOWN on the Combination VCR to clear up the picture.

To return to Auto Tracking, push POWER off and then on again.

V-Lock Control

In Still mode the 3 or 6 NUMBERED keys on the remote control or CH UP/DOWN on the Combination VCR operate as a V-Lock control to reduce jitter. Push one of these keys until the picture is stabilized.


PanaBlack™ Picture Tube

This Combination VCR uses a PanaBlack™ picture tube for better color reproduction and picture contrast.



Record On a Tape

- Check list before you begin.
- All connections are made.
 - Your Combination VCR is plugged in.

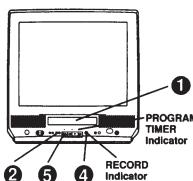

- 1 Insert a cassette with record tab.
- 2 Push **CH UP/DOWN** or **NUMBERED** keys on the remote control to select a channel.
- 3 Push **SPEED** until the desired speed appears on-screen.
SP = Standard Play
LP = Long Play
SLP = Super Long Play
- 4 Push **REC/TIME** on the remote control to start recording.

- One Touch Timer Recording (OTR)**
The Combination VCR stops recording at a preset time. In step 4, push REC/TIME repeatedly to set the length of the recording. Each push will change the time as shown.
- | | | | |
|------------|---------------|------|------|
| Normal Rec | → 3:00 → 1:00 | | |
| 4:00 | 3:00 | 2:00 | 1:30 |
- PROGRAM TIMER indicator lights on the front panel.

- 5 Push **STOP** on the remote control to stop recording.
- While it is possible to change the tape speed when you are recording, there will be some distortion on the tape where the change occurred.
- Recording time can be displayed by pushing DISPLAY in OTR mode.
- After the Combination VCR has been in Rec Pause mode for 5 minutes, it will stop automatically to protect the tape and video head.

Selecting the Input Mode

You can select the input mode in one of two ways.

- a. Push **▲▼**. The display will change in the order below.
- b. Push **MENU** to display "1 → 2 → 3 (CATV) (TV)" and then push **MENU** to display the SET UP TV screen.
- c. Push **▲▼** to select "INPUT SELECT," and then push **▶** repeatedly to select "TUNER" or "LINE."




Timer Recording

Cancel a Timer Recording:

(Recording is in progress)
Hold down **STOP** for a few seconds to cancel the timer recording.


- Any future daily or weekly recordings will be performed as programmed.

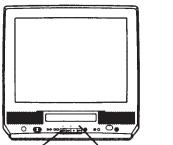

Replace Program Contents:

(Recording is not in progress)

- 1 Do steps 1 and 2 on previous page. All currently set programs will be displayed on-screen.
- 2 Push **▲▼** repeatedly to select the desired timer recording, and then push **▶** to display the settings.
- 3 Push **▲▼** repeatedly to select, and then push **▶** to enter replacement information.
- 4 Push **PROG** three times to exit this mode and return to the normal TV screen.

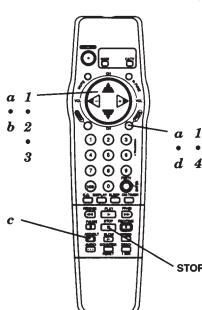

Review or Clear Program Contents:

(Recording is not in progress)


- a. Do steps 1 and 2 on previous page. All currently set programs will be displayed on-screen.
- b. Push **▲▼** repeatedly to select the desired program number.
- c. Push the **ADD/DLT** to clear the program.
- d. Push **PROG** twice to exit this mode and return to the normal TV screen.

- NOTES**
- If "PLEASE PREPARE FOR TIMER REC" appears and/or the PROGRAM TIMER indicator flashes, check that a cassette with record tab is loaded and the Combination VCR is in Stop mode.
 - If the start times of two programs overlap, the lower numbered program will have priority.
 - If the start time for a timer recording comes up during a normal recording or One Touch Recording, the timer recording will not be performed.
 - If there is a power interruption of more than one minute, the recording may not be performed or continue.
 - If "INCOMPLETE" appears after all items have been set, check all entries and make necessary corrections.

Timer Recording

Your Combination VCR can be set up to do a recording while you are away or otherwise occupied. Up to 8 programs can be placed in memory. You can choose to record one time, daily, or weekly.

- Check list before you begin.
- All connections are made.
 - Your Combination VCR is plugged in.
 - The clock is set.
 - The tape is long enough.
 - The record tab is in place.

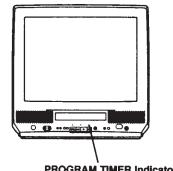

- 1 Push **PROG** to display the "SET PROGRAM" screen.

- 2 Push **▲▼** to select "TIMER PROGRAM," and then push **▶** to display the program screen.
- + If a program is already in memory, push **▲▼** repeatedly, and then **▶** to select an unused program number.

- 3 Push **▲▼** and **▶** to select and set one of the following:
1-31 = One time recording
DAILY = Same time MON - FRI
WEEKLY = Same time once a week

Example
SELECT **▲▼** / Selection Order
Today's Date
WEEKLY WEEKLY (MON) (SUN)

- 4 Push **▲▼** and **◀▶** to select and set each of the remaining items at right.

Remaining items:
• STOP time
• CHannel number, or LINE for outside source recording
• Speed (SP, LP, SLP)

To Make Corrections
Repeatedly push **◀** to move the cursor to the right, or **▶** to move to the left to the incorrect entry and make the correction.

- 5 Push **PROG** to end the program.

This screen appears for confirmation.

To Enter More Programs
Push **▲▼** and **▶** to select and set a blank program number, and then repeat steps 3 and 4.

- 6 Push **PROG** twice to return to the normal screen.

The PROGRAM TIMER indicator lights on the front panel.

If you're using a cable box, make sure that it is tuned to the desired channel and the power is left on for timer recording.

Two minutes before the timer recording starts, "TIMER REC WILL START SOON" will appear on-screen.

SPECIAL Special VCR Features

Check list before you begin.

- All connections are made.
- Your Combination VCR is plugged in.



VCR Lock Feature

When activated, this feature prohibits all operations except for timer recording and tape eject. This feature is used to keep children from operating the Combination VCR.


Hold down **STOP/EJECT** on the Combination VCR for 7 seconds during Stop or Power OFF mode.

VCR LOCK ACTIVATED

To Cancel the VCR Lock feature,
Hold down **STOP/EJECT** on the Combination VCR for 7 seconds again during Stop or Power OFF mode.

- VCR Lock mode is cancelled automatically after 24 hours as long as the clock is set.
- This feature cannot be activated or cancelled when a timer or one touch recording is in progress.

VCR LOCK OFF

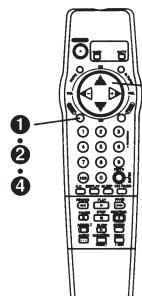

Warning Beeper Feature

When you select BEEPER ON, a short warning will sound each time an invalid entry or incomplete operation is made.

- 1 Push **MENU** to display the MAIN MENU.

MAIN MENU

- 2 Push **▲▼◀▶** to select "VCR," and then push **MENU** to display the SET UP VCR screen.

SET UP VCR

- 3 Push **▲▼** to select "BEEPER," and then push **▶** to select "ON" or "OFF."

BEEPER


- 4 Push **MENU** to end, and then push **▲▼◀▶** to select "EXIT." Now, push **MENU** to exit the MAIN MENU.

MAIN MENU

MTS Broadcast/TV Stereo System

- Check list before you begin.
- All connections are made.
 - Your Combination VCR is plugged in.

IMPORTANT NOTE:
This stereo system is designed for TV viewing only. Recording and playback will always be in monaural.

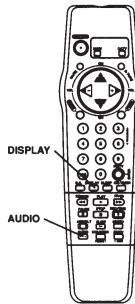

Receivable Broadcast Types

The following are possible broadcast types with their accompanying on-screen displays. The signal being received is indicated with an “*” mark while the selected audio mode is indicated with an arrow. To change the audio mode for these broadcasts, follow the “Select Audio Mode for TV Viewing” section. (below)

Push DISPLAY to display the broadcast signal currently being received.

MTS Stereo and SAP broadcasts

Multi-channel Television Sound Stereo (main language) and Secondary Audio Program (sub language) broadcasts are being received simultaneously. Select the STEREO or SAP audio mode as desired.

STOP 12:00AM WNET 0:00:00
STEREO ← SLP
MONO ← SLP

MTS Stereo broadcast

Multi-channel Television Sound Stereo broadcast is being received. Select the STEREO audio mode.

STOP 12:00AM WNET 0:00:00
STEREO ← SLP
MONO ← SLP

SAP broadcast

Secondary Audio Program (sub language) broadcast is being received. Select SAP audio mode for the sub language.

STOP 12:00AM WNET 0:00:00
STEREO ← SLP
MONO ← SLP

MONO broadcast

Normal monaural sound broadcast is being received.

STOP 12:00AM WNET 0:00:00
STEREO ← SLP
MONO ← SLP

Select Audio Mode for TV Viewing



Push AUDIO to select the desired audio mode as described above. (Arrow shows selection.)
• Each push of AUDIO will change the audio mode as shown below.


< Example >

Push AUDIO →
STOP 12:00AM WNET 0:00:00
STEREO ← SLP
MONO ← SLP
Push AUDIO →
STOP 12:00AM WNET 0:00:00
STEREO ← SLP
MONO ← SLP
Push AUDIO →
STOP 12:00AM WNET 0:00:00
STEREO ← SLP
MONO ← SLP

VCR Plus+ Setup

Easy Taping.

In order for the Combination VCR to read the VCR Plus+ code, some setup is required. A Guide (VCR Plus+) channel number is assigned to each local broadcast and cable station. Because this number sometimes differs from the channel your TV receives the station on, it is necessary to program the Combination VCR with local channel information.

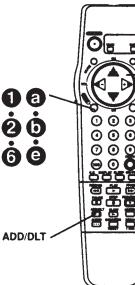

VCR Plus+ Channel Setup

For Connection Type B only

• Before you begin, complete the Channel Setup Preparations below.

Important Note: If your Combination VCR Connection type changes, from Type A to B, repeat step 4 of previous page, select “NO”.

- a Push MENU to display the MAIN MENU.
- b Push ▲▼◀▶ to select “CH,” and then push MENU to display the SET UP CHANNEL screen.
- c Push ▲▼ to select “VCR Plus+ CH SET UP,” and then push ▶ to display the “VCR Plus+ CH SET UP” screen.

IMPORTANT NOTE: For step “d” use the list you prepared at left. You may leave lines blank if you don’t receive that station, or if the GUIDE CH number and the CATV (or TV) CH numbers are the same.

- d Push ▶ to move the shaded area to the right side.

Then, push ▲▼ to change the CATV (or TV) CH number.

Next, push □ to set the CATV (or TV) CH number.

Now, push ▲▼ to continue. Repeat this operation until the list is complete.

To Make Corrections

Push ▲▼ and ▶ to select the incorrect CATV or TV CH number. Then, push ▲▼ to change, or ADD/DLT to delete the channel.

- e Push MENU twice to exit the VCR Plus+ CH SET UP. Then, push ▲▼◀▶ to select “EXIT.” Now, push MENU to exit the MAIN MENU.

< EXAMPLE ONLY >

Broadcast or Cable Station Name	Assigned Guide (VCR Plus+) channel no.	Channel no. your TV receives the station on
HBO	33	15
Nickelodeon	38	20
CBS	34	04
FOX	11	

- Make each entry within 5 minutes or the Combination VCR will leave this mode.

• Once local channels have been programmed, they will stay in memory, even in the case of a power failure.

NOTES

VCR Plus+ Setup

Easy Taping.


VCR Plus+ programming allows you to set most items of a timer recording by simply entering a special code (PlusCode) found in TV GUIDE magazine as well as the TV listings in selected newspapers. In order for your Combination VCR to do a VCR Plus+ recording, or a timer recording of cable stations, some setup is required.

At first, choose your Connection Type.

(Then, follow the instructions under the diagram.)

Connection Type A

<CABLE BOX → COMBINATION VCR>

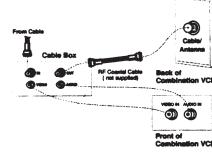


If your system looks like this, do the following.

- 1 Complete the “Cable Box Setup” section at right.
- 2 Go directly to VCR Plus+ Programming.

Connection Type B

<CABLE or ANTENNA → COMBINATION VCR>

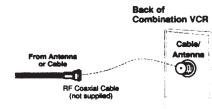

If your system looks like this, do the following.

- 1 Skip the “Cable Box Setup” section at right.
- 2 Complete the “VCR Plus+ Channel Setup” section.
- 3 Turn to VCR Plus+ Programming.

VCR Plus+ and PlusCode are trademarks of Gemstar Development Corporation. The VCR Plus+ system is manufactured under license from Gemstar Development Corporation.

Cable Box Setup For Connection Type A (see left) only

- 1 Push MENU to display the MAIN MENU.

Push ▲▼◀▶ to select “CH,” and then push MENU to display the SET UP CHANNEL screen.

- 2 Push ▲▼ to select “CABLE BOX SET UP,” and then ▶ to set.

Select YES if all channels are received via the cable box (connection “A” at left). Then, go to step 5.

- 3 Push ▲▼ to select “YES” or “NO,” and then ▶ to set.
Select YES if all channels are received via the cable box (connection “A” at left). Then, go to step 5.
Select NO if your cable connection “B” at left. Push MENU to exit.

- 4 Push ▲▼ to select “CABLE BOX OUTPUT CHANNEL NUMBER,” and then ▶ to enter.

If necessary, refer to your cable box manual:
• If you are using Audio/Video jack connection for your cable box, select and set “VIDEO OUT” as the output channel.

This display appears for 5 seconds. (Channel shown is example only)

- 5 Push ▲▼ to select Cable box output channel number, and then ▶ to enter.

Push MENU to exit this mode and then, push ▲▼◀▶ to select “EXIT.” Now, push MENU to exit from the MAIN MENU.

Go directly to VCR Plus+ Programming

VCR Plus+ Programming

Easy Taping.

Before you begin, make sure...

The clock is set.

VCR Plus+ Set Up is complete.

- 1 Push PROG to display the “SET PROGRAM” screen.

...SET PROGRAM
SET PROGRAM
SELECT A KEY
SET B KEY
END PROG KEY

- 2 Push ▲▼ to select “VCR Plus+ PROGRAM,” and then ▶ to display the PlusCode screen.

ENTER PLUSCODE NUMBER
USING 0-9 KEYS
END PROG KEY

- 3 Push NUMBERED keys to enter the PlusCode number from your local TV listings.

ENTER PLUSCODE NUMBER
123456
USING 0-9 KEYS
BACKSPACE ⌄ KEY
ENTER PROG KEY

- 4 Push PROG to lock in your program.

TO SELECT PUSH 1, 2 OR 3
END PROG KEY

- 5 Push the 1, 2, or 3 key to select the program type.

DATE SAT 10 OCT 12:00P 125
START 10:00P
STOP 11:00P
CH 125
SPEED SLOW SPEED
PUSH SPEED KEY
CANCEL ADD/DLT KEY
PROG KEY

- 6 Push PROG three times to complete the program.

LEAVE CABLE BOX POWER ON FOR TIMER RECORDING
* This display appears if you use a cable box.

Use normal Timer Recording steps if:

- the PlusCode for a program is not listed.
- you anticipate the program, such as a sporting event, to run over the scheduled stop time.

See Timer Recording:

- cancel a timer recording in progress.
- replace program contents.
- review or clear program contents once set.

- For a list of publications that carry the PlusCode numbers in your area, call 1-800-258-4827.
• You can obtain unlisted PlusCode numbers by calling 1-800-454-7587. Call costs approximately \$.95 per minute.
• Avoid overlapping program times.
• An on-screen display will indicate if an invalid PlusCode number has been entered.
• An on-screen display will indicate when all timer programs are full.

SERVICE NOTES

Simplified Fault Finding Data

Simplified Self-Diagnostic System facilitates finding the cause of the fault. 4 digit fault code will be displayed on TV screen. The Simplified Fault finding data is stored in the Memory IC (IC6004). This data is cleared after it is displayed and then, the POWER button is pressed back on.

- With power turned off, press FF and REW buttons on unit together for over 3 seconds.

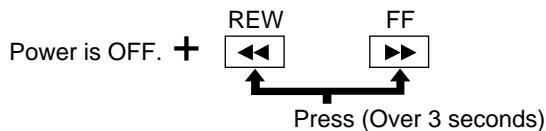


Fig. 1-1

- TV power goes on and the unit goes into service mode. Fault code indication (4 digit number) will be displayed.

Code Digit Position

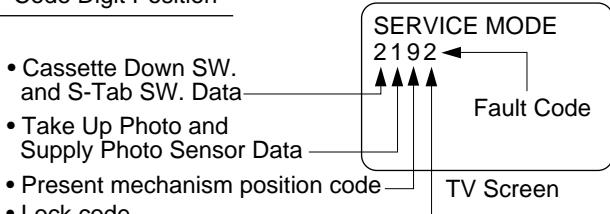


Fig. 1-2

Explanation of Codes	Code No.			
S-Tab SW. Data	1			
• S-Tab SW. is off. • S-Tab SW. is on.	2			
Take Up and Supply Photo Sensor Data	1			
• No light detected at either sensor. • Take Up Photo Sensor detected at beginning of tape. • Supply Photo Sensor detected at end of tape. • Light detected at both sensors.	2			
Present Mechanism Position Code	3	1	2	3
Mechanism Position is indicated. (Refer to Fig. 1-4.)	4	4	5	6
		7	8	9
		A	B	C
		B	C	D
Lock Code		0	1	2
• VCR is not in shut-off condition. • Reel lock. • Cylinder lock. • Exceeds loading/unloading time. (Mechanism Lock) • Exceeds Cassette loading/unloading time. (Cassette Lock) Tape Unloading (direction) Tape Loading (direction)		3	4	5
		1	2	4
		2	4	4

Fig. 1-3

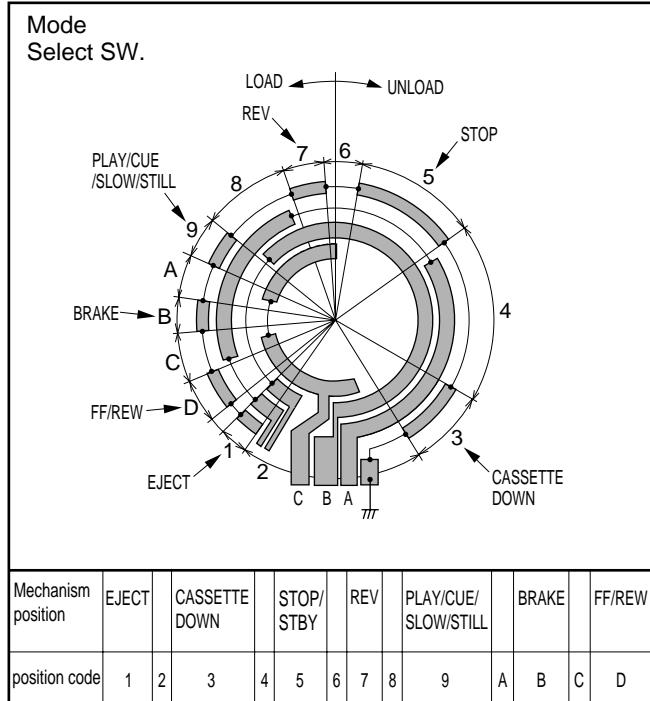


Fig. 1-4

Note:

When 1 to 4 listed in Lock code occurs, the VCR stops and all VCR function buttons except for power become non-operational.

- Press any operation button except for POWER on either the unit, or the remote to detect that a key has been pressed.
The 1st digit changes to "0" only when key is detected.

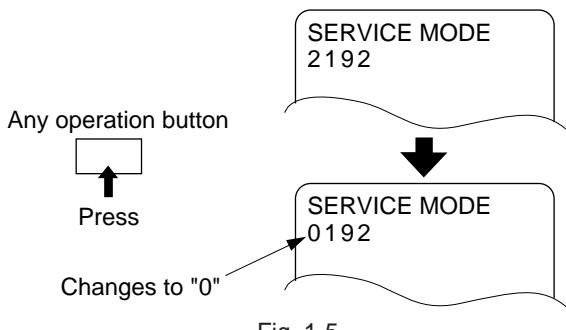


Fig. 1-5

Service Position

The Basic Service Position does not require the use of Extension Cables. However, for more extensive servicing, Extension Cables should be used.

1. Basic Service Position

Service Position	Purpose
Service Position (1)	Mechanism check Mechanical adjustment Electrical adjustment
Service Position (2)	Main C.B.A. check TV Main C.B.A. check

CAUTION:

HOT CIRCUIT (Primary circuit) exists on the Main C.B.A. and TV Main C.B.A.
Use extreme care to prevent accidental shock when servicing.

Note:

When disassembling/assembling, refer to "Disassembly/Assembly Procedures of Cabinet" section.

Service Position (1)

1. Remove Rear Cover, VCR Unit, (Stereo Amp C.B.A.: Model I), and Top Shield Plate Ass'y.
2. Then, place VCR Unit as shown.

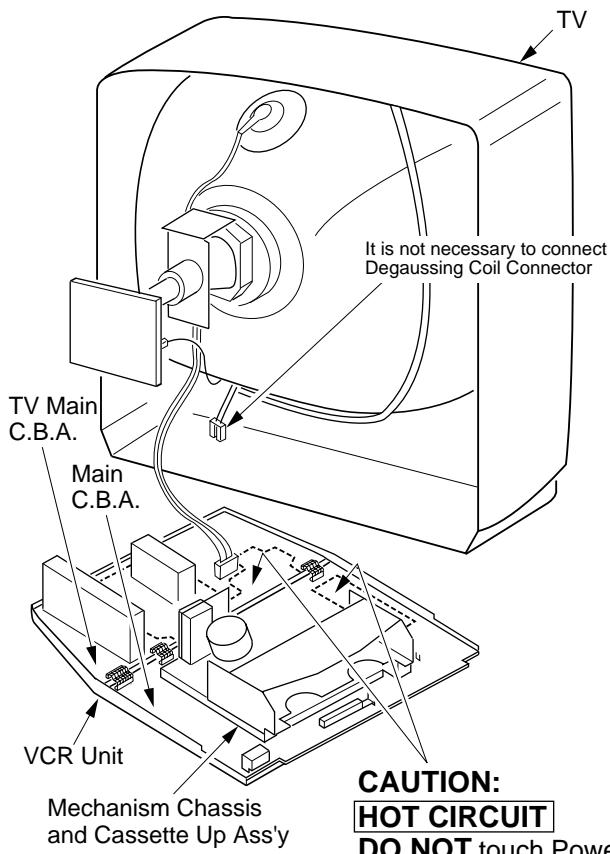


Fig. 2-1

Service Position (2)

1. Remove Rear Cover, VCR Unit, (Stereo Amp C.B.A.: Model I), and Top Shield Plate Ass'y.
2. Place VCR Unit as shown.
In order to stabilize VCR Unit, place it on a slanted support, such as a loose-leaf binder etc.

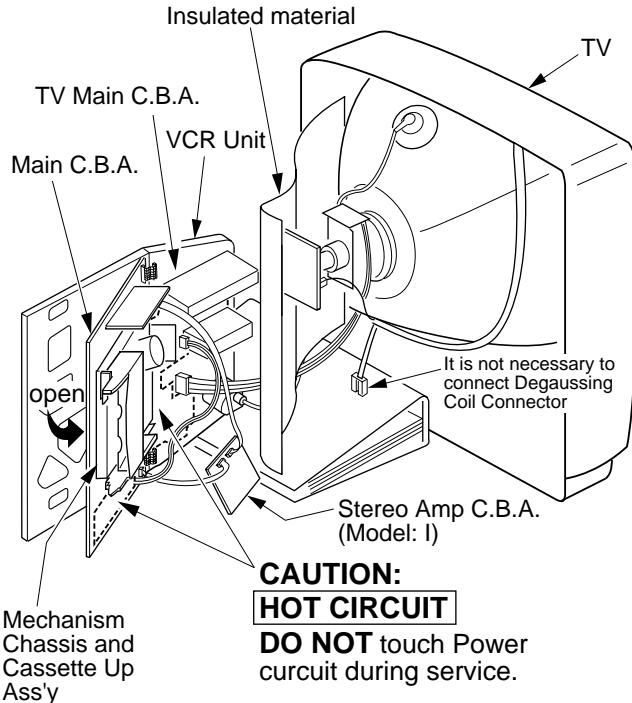


Fig. 2-2

2. Service Position with Extension Cable Kit

In Service Position with Extension Cable Kit, mechanism check from the Bottom Side of Mechanism Chassis and Capstan Stator Unit (Capstan Motor Drive, Loading Motor Drive Circuit) check with power on condition can be performed.

Service Position

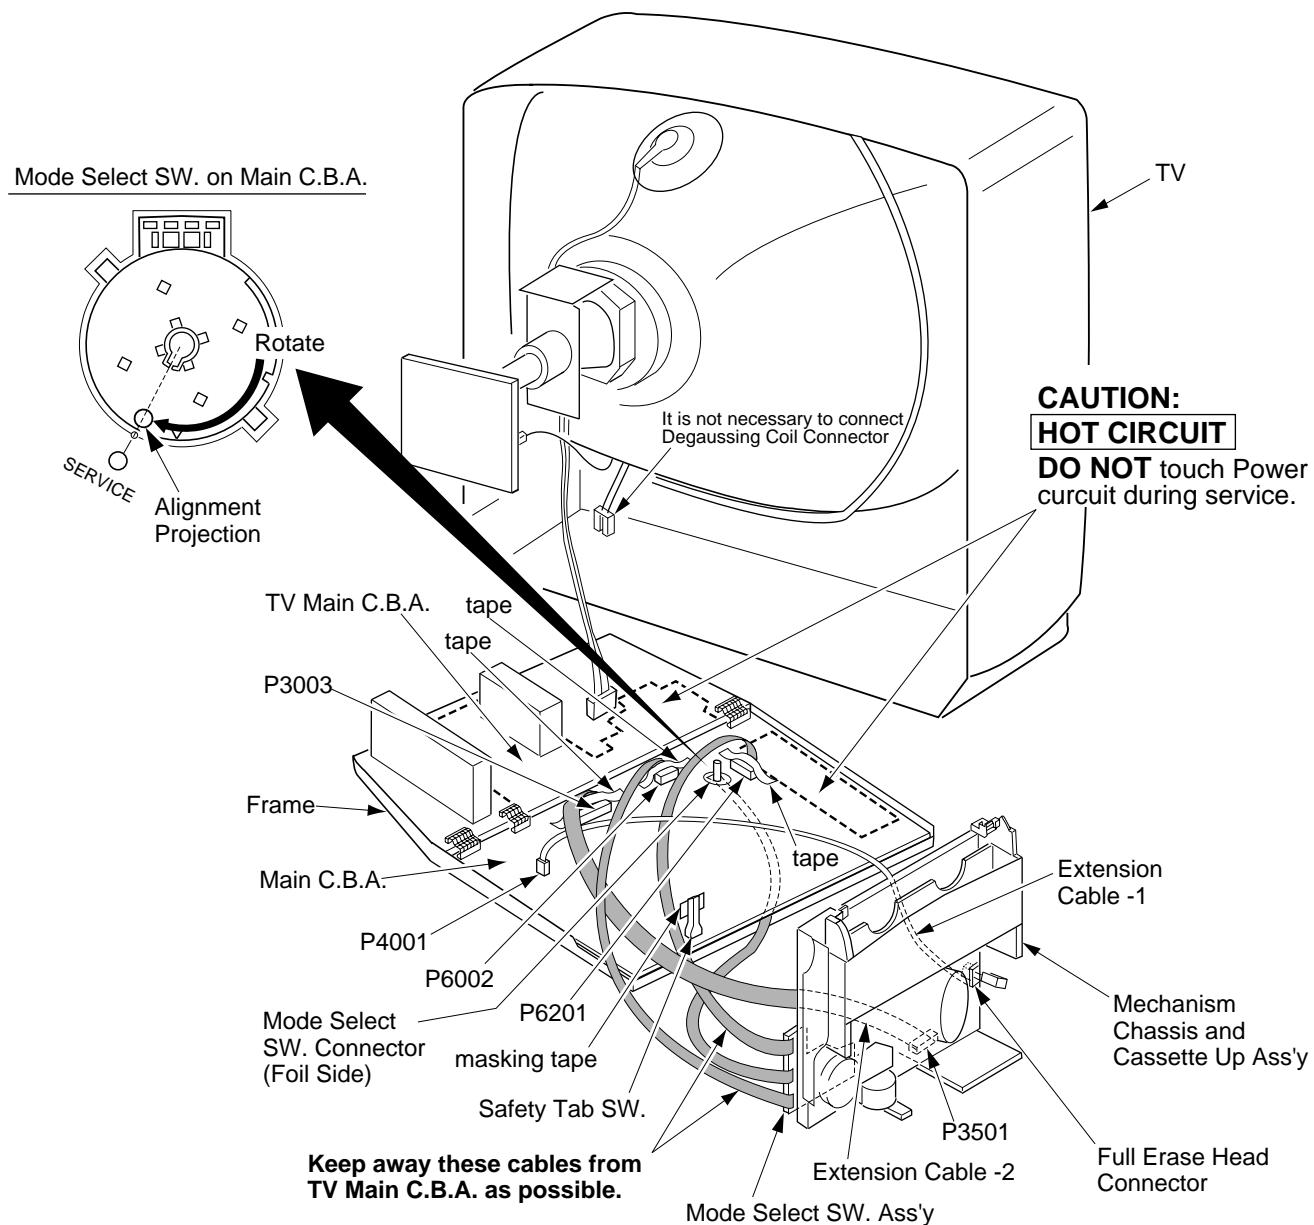


Fig. 3-1

CAUTION:

HOT CIRCUIT (Primary circuit) exists on the Main C.B.A. and TV Main C.B.A.
Use extreme care to prevent accidental shock when servicing.

Note:

When disassembling/assembling, refer to "Disassembly/Assembly Procedures of Cabinet" section.

Extension Cable Kit (VUZS0002)

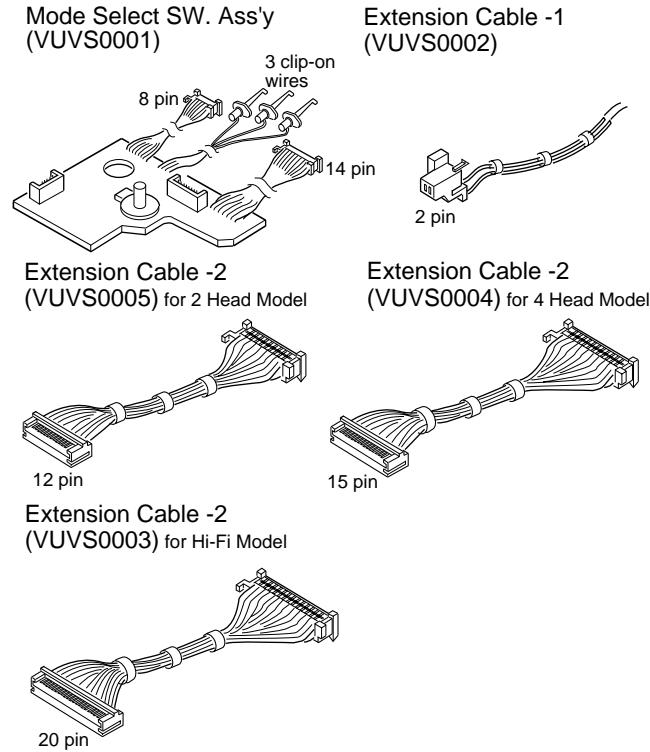


Fig. 3-2

Note:

3 types of Extension Cable -2 are included in this kit. Since there is a difference in the number of P3501 Head Amp C.B.A. pins between 2 Head, 4 Head, and Hi-Fi models, be sure to use the proper cable.

How to place the unit into Service Position with Extension Cables

1. Remove Rear Cover, VCR Unit, (Stereo Amp C.B.A.: Model I), Top Shield Plate Ass'y, Mechanism Chassis, and Cassette Up Ass'y.
2. Connect the Extension Cables as follows:

- Extension Cable -1: Full Erase Head Connector on the Mechanism Chassis Unit ~ P4001 on the Main C.B.A.

Note: No change in performance if pins are reversed.

- Extension Cable -2: P3501 on the Head Amp C.B.A.
~ P3003 on the Main C.B.A.


- Mode Select SW. Ass'y: a) 3 Clip-on Wires ~ Mode Select SW. Connector on the Main C.B.A.

Red Wire	1 Pin (Not Used)
Orange Wire	~ 2 pin
Yellow Wire	~ 3 pin
	~ 4 pin

- b) 8 Pin Connector ~ P6002 on the Main C.B.A.

- c) 14 Pin Connector ~ P6201 on the Main C.B.A.

- d) Set Mode Select SW. on the Mode Select SW. Ass'y to EJECT position and install onto Mechanism Chassis.

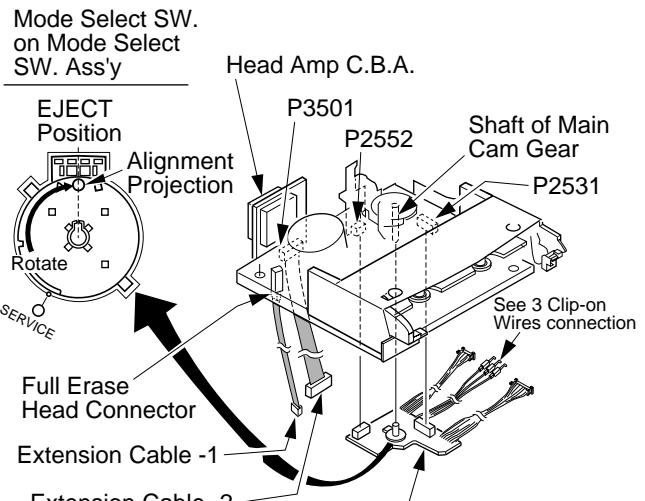

3 Clip-on Wires connection

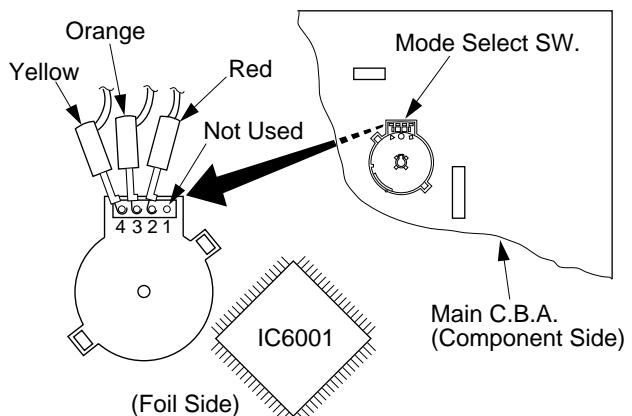


Fig. 3-3

3. Place the VCR Unit as shown in Fig. 3-1.
4. Secure the Extension Cables with tape as shown

in Fig. 3-1. When recording, cover the Safety Tab SW. with masking tape to turn this SW. on.

Note:

To avoid damaging the connectors on Main C.B.A., it is necessary to secure connectors with tape as shown in Fig. 3-1.

5. Set Mode Select SW. on the Main C.B.A. to Service Position.
 6. Plug the AC plug into an AC outlet.
 7. Insert a cassette.
- The power comes on, the tape is fully loaded, and the unit goes into the STOP Mode.
8. Place a jumper between TP6001 and GND to place the unit in Service Mode.
 9. Check and/or repair the unit.
 10. Press the STOP/EJECT button to eject the cassette.

Note:

When inserting a cassette again, remove the jumper between TP6001 and GND and insert the cassette. Then, reconnect the jumper.

11. After servicing, remove the jumper between TP6001 and GND to release the unit from Service Mode.

Note:

When disassembling/assembling, refer to "Disassembly/Assembly Procedures of Cabinet" section.

How to Remove a jammed Tape

Manual Method

When a tape jam is encountered, check the tape loading condition and use the following procedure to remove a tape jam.

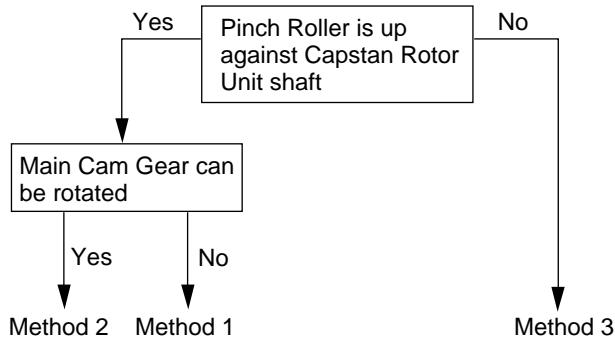


Fig. 4-1

Method -1:

1. While releasing 2 Locking Tabs (A) of Opener Piece, pull the Opener Piece up as far as you can.
2. Move the pin of Pinch Arm Unit out of the groove of the Main Cam Gear so that the Pinch Roller is separated from the shaft of the Capstan Rotor Unit.

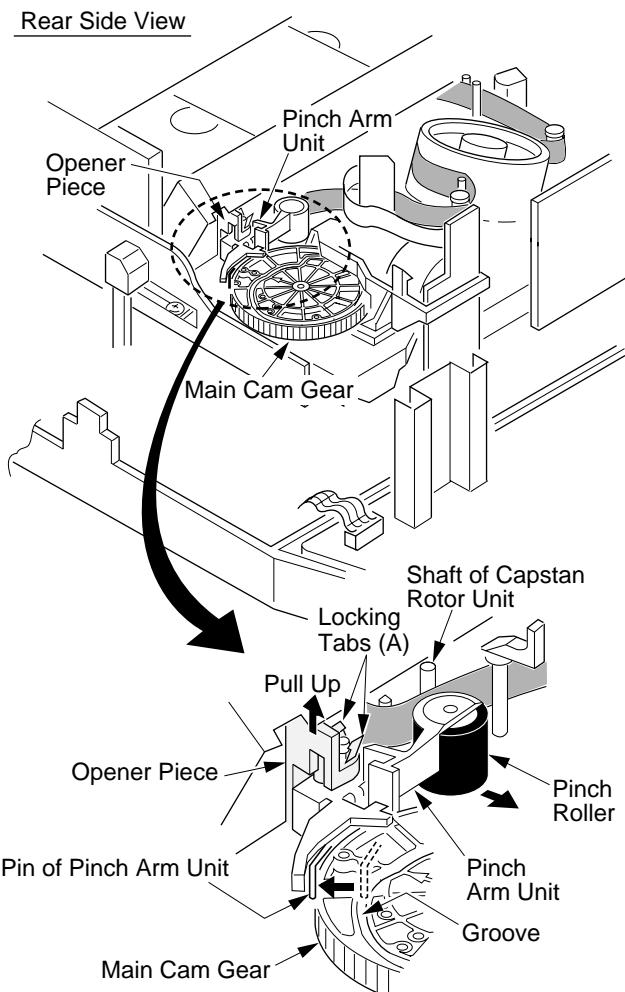


Fig. 4-2

3. Remove the tape from the tape path.
4. Rewind the tape into the cassette by rotating the Center Clutch Unit counterclockwise.
5. Unhook Spring (A) of the Drive Rack Unit.
6. Remove Screw (A).
7. Lift the Drive Rack Unit up so that the slot clears the guide tab. While pulling the Drive Rack Unit out far enough so that it clears the Drive Rack Arm, slide the Drive Rack Unit as indicated by the arrow to remove the cassette tape from the Cassette Up Ass'y.
9. Check the cause of mechanical trouble and repair.

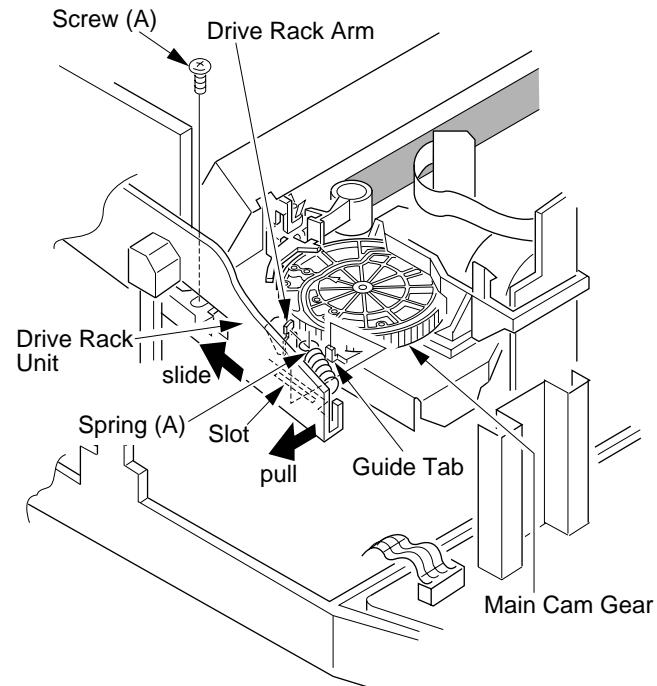


Fig. 4-3

Method -2:

1. Rotate Main Cam Gear clockwise with needlenose pliers, etc. so that the Pinch Roller is separated from the shaft of the Capstan Rotor Unit.
2. Perform Step 3 through Step 8 of Method -1.

Method -3:

1. Perform Step 3 through Step 8 of Method -1.

Note:

After repairing mechanical trouble, make sure that all gear alignments are correct, especially the Wiper Arm Unit and Drive Rack Unit of Cassette Up Ass'y.

Electrical Method

Electrical method can only be performed when the mechanism is moved by rotating the Main Cam Gear.

CAUTION:

If loading dose not start in approx. 2 seconds after DC Power Supply is applied, DO NOT continue to apply DC Power Supply. Instead, perform "Manual Method."

Method -1:

1. Remove the solder as shown and apply +10.0 VDC Power Supply (DC + to Portion "a," DC - to Portion "c").
2. When the Loading Posts reach the fully unloaded position, remove the Power Supply.

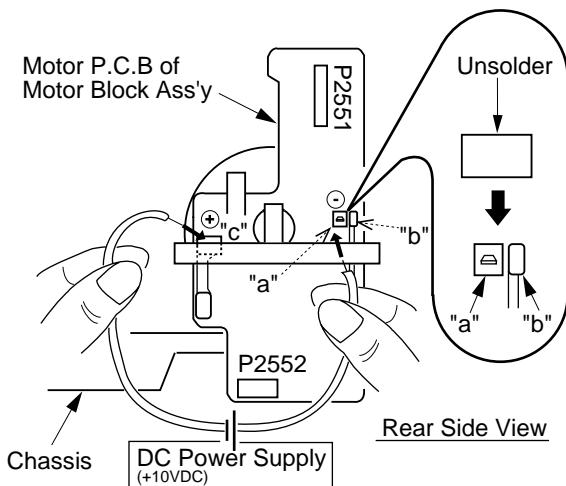


Fig. 5-1

Note:

Be careful not to let the DC Power Supply Unit GND contact the chassis GND. This may damage the Loading Motor Drive IC (IC 2501).

Be sure to apply DC + to Portion "a" of Motor P.C.B. If DC + is applied to Portion "b", the Loading Motor Drive IC (IC2501) may be damaged.

4. Rewind the tape into the cassette by turning the Center Clutch Unit counterclockwise.
5. Eject the cassette by applying +10.0VDC Power Supply again.
6. After completing the removal procedure, solder Portion "a" and Portion "b".

Method -2:

1. Locate the Jumper (J6004) on the System Control Section of the Main C.B.A. and cut it near the center.

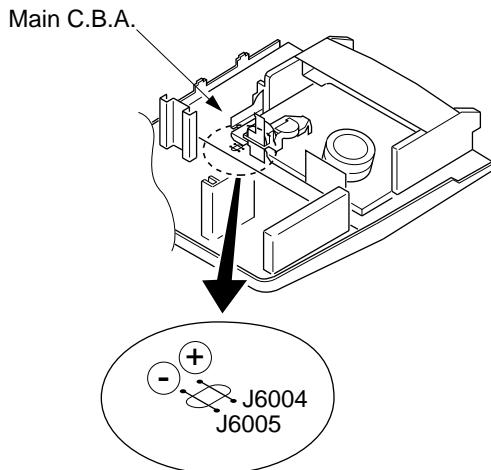


Fig. 5-2

2. Apply +10.0VDC Power Supply to the jumpers. When the Loading Posts reach the fully unloaded position, remove the Power Supply.

Note:

Be careful not to let the DC Power Supply Unit GND contact the chassis GND. This may damage the Loading Motor Drive IC (IC 2501).

Be sure to apply DC + to Portion "a" of J6004.

If DC + is applied to Portion "b" of J6004, the Loading Motor Drive IC (IC2501) may be damaged.

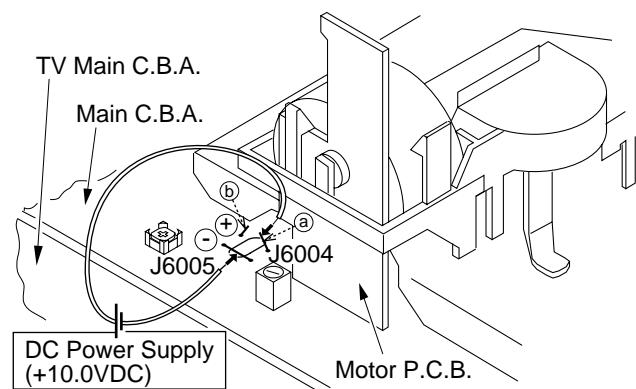



Fig. 5-3

4. Rewind the tape into the cassette by turning the Center Clutch Unit counterclockwise.
5. Eject the cassette by applying +10.0VDC Power Supply again.
6. After completing the removal procedure, resolder Jumper (J6004).


Wire and Lead position Diagram

After servicing, make sure that all wires and leads are placed in their original position. It is important for the best operation of the unit.


(Model : A, B, C, D, E)

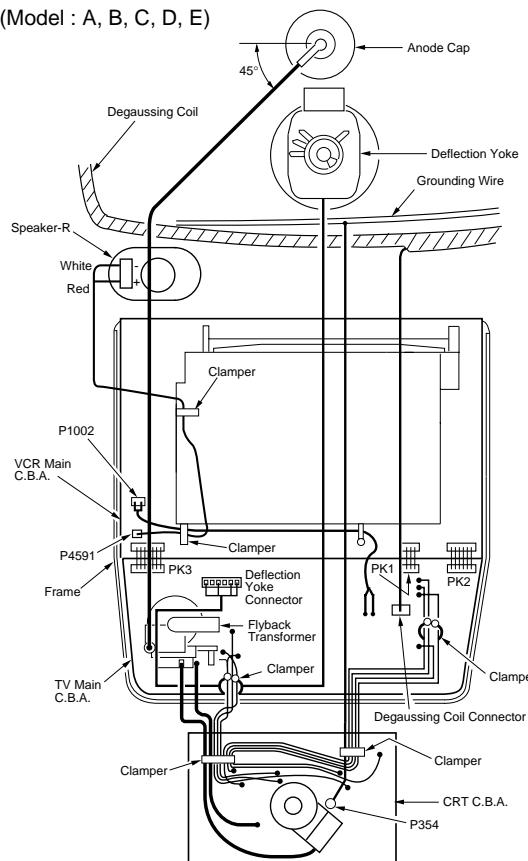

(Model : F, G, H)

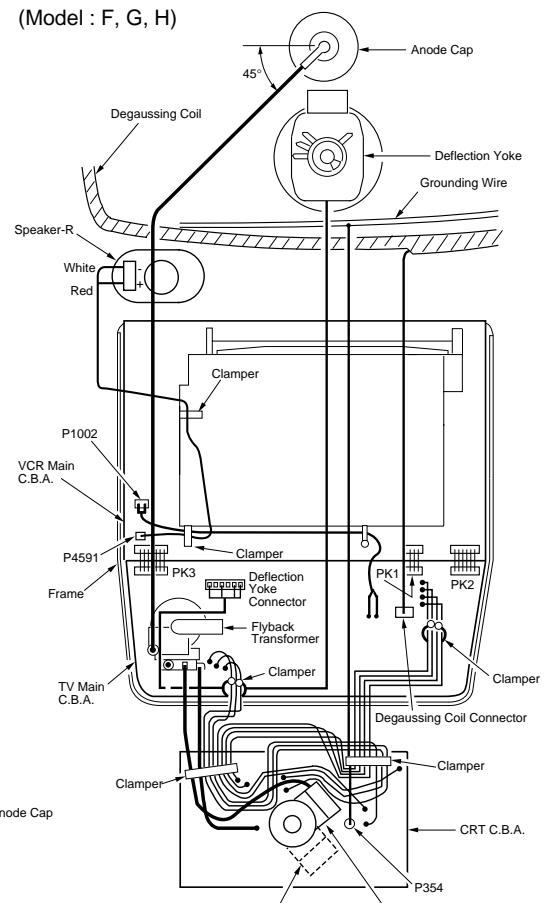

(Model : I)

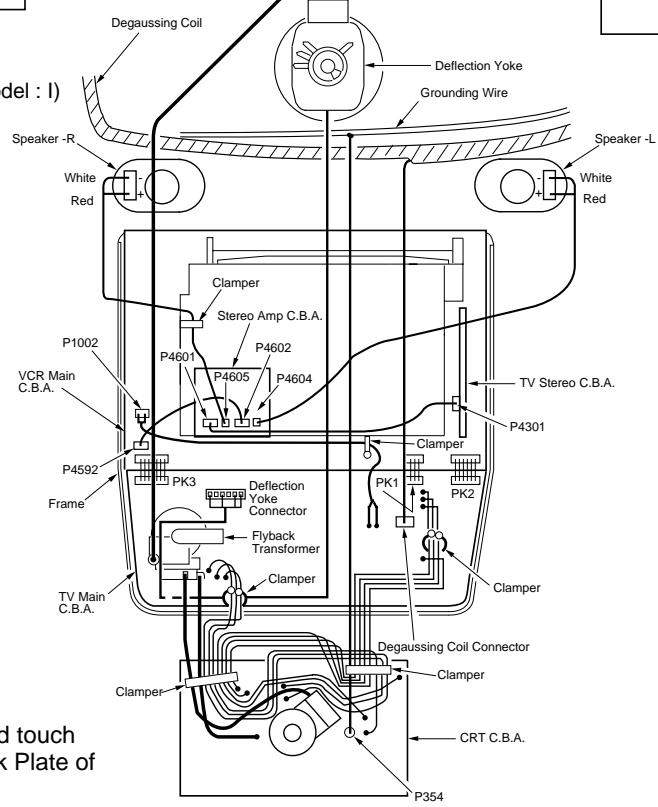

Note:

No lead wires or flat cables should touch any heating parts or the Heat Sink Plate of IC451, IC801, or Q551.

Fig. 6

Cylinder Rotation in STOP mode

The cylinder will continue to rotate for approximately 5 minutes after the STOP button is pressed in Play mode etc. Eject the tape in order to stop the cylinder.

Black Screws on the Chassis

Black Screws are used on the Mechanism Chassis to identify screws that require adjustment.

Variable Voltage Isolation Transformer

An Isolation Transformer should always be used during the servicing of Combination VCR whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks. It will also protect Combination VCR from being damaged by accidental shorting that may occur during servicing.

Also, when troubleshooting the above type of Power Supply Circuit, a variable isolation transformer is required in order to increase the input voltage slowly.

Special Note

All integrated circuits and many other semiconductor devices are electrostatically sensitive and therefore require the special handling techniques described under the "ELECTROSTATICALLY SENSITIVE (ES) DEVICES" section of this service manual.

Replacement Procedure for Leadless (Chip) Components

The following procedures are recommended for the replacement of the leadless components used in this unit.

1. Preparation for replacement

a. Soldering Iron

Use a pencil-type soldering iron that uses less than 30 watts.

b. Solder

Eutectic Solder (Tin 63%, Lead 37%) is recommended.

c. Soldering time

Do not apply heat for more than 4 seconds.

d. Preheating

Leadless capacitor must be preheated before installation. – (266°F ~ 302°F)
(130°C ~150°C) for about two minutes.

Note:

- a. Leadless components must not be reused after removal.
- b. Excessive mechanical stress and rubbing of the component electrode must be avoided.

2. Removing the leadless component

Grasp the leadless component body with tweezers and alternately apply heat to both electrodes. When the solder on both electrodes is melted, remove the leadless component with a twisting motion.

Note:

- a. Do not attempt to lift the component off the board until the component is completely disconnected from the board by a twisting action.
- b. Be careful not to break the copper foil on the printed circuit board.

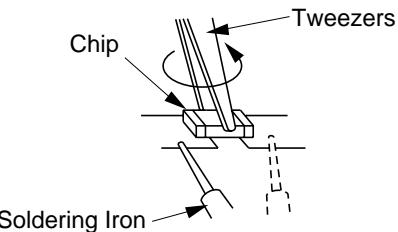


Fig. 7-1

3. Installing the leadless component

a. Presolder the contact points on the circuit board.

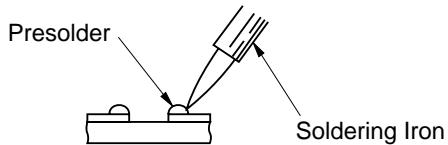


Fig. 7-2

b. Press the part downward with tweezers and solder both electrodes as shown below.

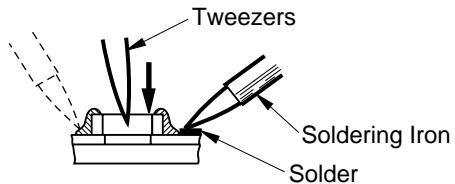


Fig. 7-3

Note:

Do not glue the replacement leadless component to the circuit board.

Hot Circuit

Primary circuit exists on the Main C.B.A. and TV Main C.B.A. This circuit is identified as "HOT" on the C.B.A. and in the Service Manual. Use extreme care to prevent accidental shock when servicing.

Service Mode

In order to inhibit detection of the Supply & Takeup Photo Transistors, Reel Sensor, and Cylinder Lock, place a jumper between TP6001 and GND.

In this mode, Mechanism movement can be confirmed. When removing Cassette Up Ass'y or loading mechanism manually, it can be confirmed without a cassette.

To release from this mode, remove the jumper between TP6001 and GND.

Defeating the Auto Tracking

To defeat the Auto Tracking Function, place the instrument in the STOP mode and place a jumper between TP6003 and TP6009 on the Main C.B.A. The tracking will be placed in the neutral position.

How to set Tracking to the Neutral Position

Ejecting the cassette tape and then, reinserting it will reset the tracking to the Neutral position.

How to reset all Combination VCR Memory functions

To reset (clear) the select language, channel auto set and set clock functions to their initial power on condition (power on, **no** cassette inserted), hold down the PLAY and REWIND buttons on the unit together for more than 5 seconds.
Power will shut off.

Method for Manual Loading / Unloading of Mechanism

Turn the Main Cam Gear counterclockwise (for loading) or clockwise (for unloading) using needlenose pliers etc.

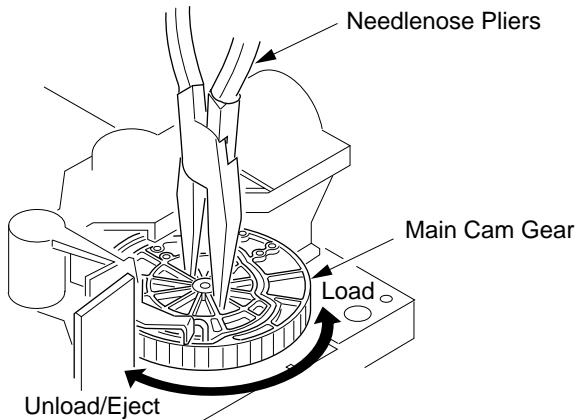


Fig. 8-1

When loading without a cassette, press Portion "a" on both sides of the Holder Unit of Cassette Up Ass'y so that the Lever clears Tab and Hole.

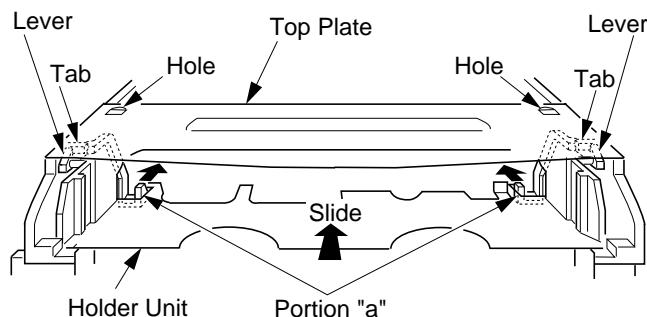


Fig. 8-2

Model No. Identification Mark











Use Marks shown in the chart below to distinguish the different models included in this Service Manual.

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-M2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z

Note:



Refer to Item 5 of Schematic Diagrams and Circuit Board Layout Notes, for mark "Z."

IC, TRANSISTOR AND CHIP PART INFORMATION

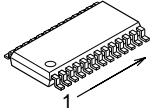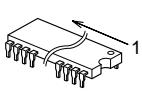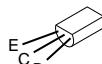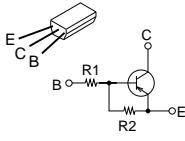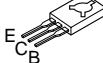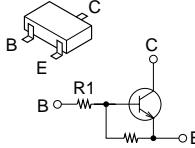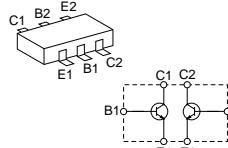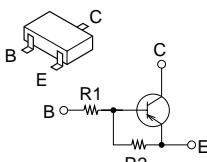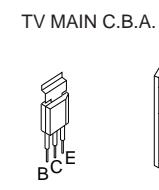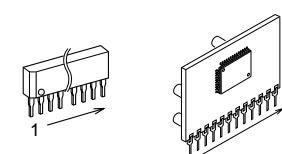
GENERAL C.B.A./ASS'Y PARTS					CRT C.B.A.
					
UPC4570C, MN3885S, AN3361SB, AN3371SB	LC8643125957, TC4053BP, 24LC01B/PS1	AN5265, AN3809K	2SC945A, 2SA733, 2SC1473	DTA143ES (R1=47K, R2=OPEN), DTA144ES (R1=47K, R2=47K)	2SC3063
VCR MAIN C.B.A.					
					
AN5367FB, AN3475FBP, MN675058A5P2	UN2213(R1=47K, R2=47K), UN2212(R1=22K, R2=22K), UN2215 (R1=10K, R2=OPEN)	IMX1	2SD601, 2SD601A, 2SB709	T4101, VLTS0304	2SD2375, 2SC3852, 2SC4533LP.KT, 2SC5130LF608
				UN2112(R1=22K, R2=22K), UN2115 (R1=10K, R2=OPEN)	2SD1458, 2SD636, 2SB641, 2SD2259
2SD2653H	STR30130	2SD1555LBMTV, 2SD2499LBMA	LA7837	AN7420	VCRS0214

HOW TO READ THE IDENTIFICATION MARK OF CHIP COMPONENTS.

MARKING	PART NO.	MARKING	PART NO.
A	2SB709	6B	UN2112
N9	MA372J	8C	UN2213
X1	IMX1		

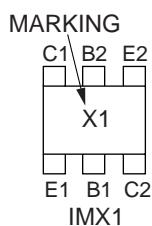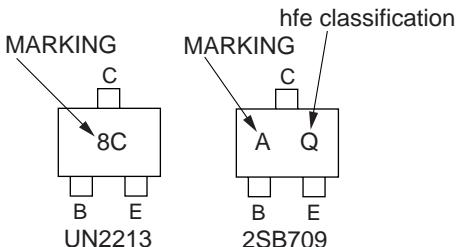

HOW TO READ THE VALUES OF THE CYLINDRICAL TYPE CHIP COMPONENTS.

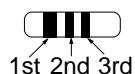

The widest color band must be read first for value.

(a) RESISTOR

There are two types (ERD10LLJ... and ERD10TLJ...) of chip parts.

- 1) ERD10LLJ : Refer to above type.
- 2) ERD10TLJ : The narrow color band must be read first for value.

If this part is included in the parts list, be sure that the color band is read properly when servicing.

(b) CAPACITOR

Because of the width of the color bands, the reading direction cannot be specified. However, the color band can be read on either side. Be sure to confirm the value using the schematic diagram.

CAUTION :

Once chip parts are removed, they must not be reused. Always use a new part when installing a chip part.

DISASSEMBLY/ASSEMBLY PROCEDURES

DISASSEMBLY/ASSEMBLY PROCEDURES OF CABINET

Disassembly Flowchart

Perform all disassembly procedures in the order described in the "Disassembly Flowchart" shown below. When reassembling, use the reverse procedure.

CAUTION:

Disconnect AC plug before disassembly.

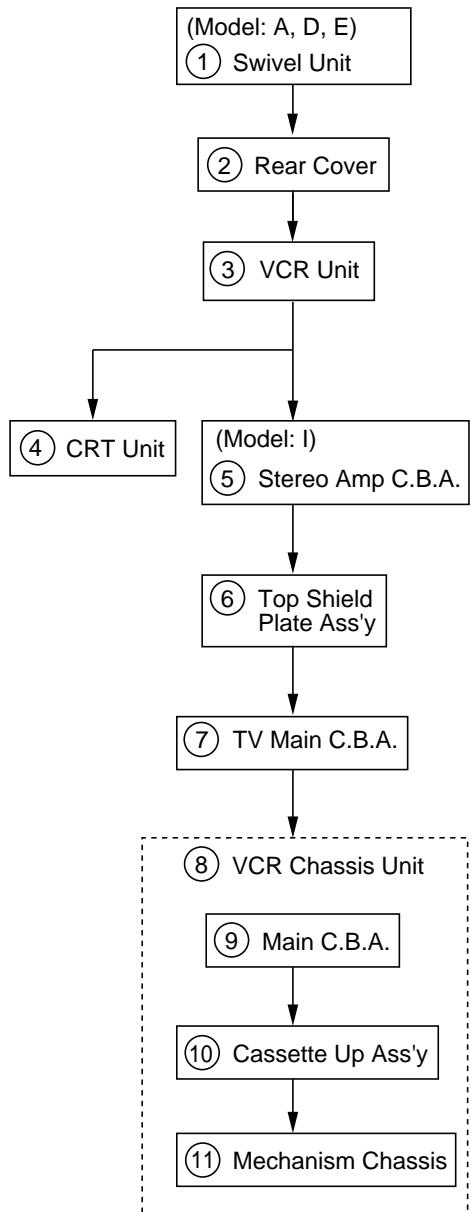


Fig. D1

Swivel Unit (Model: A, D, E)

Disassembly Procedure

1. While pushing one of the Locking Tabs (A) outward, pull that portion of the Swivel Unit free from the unit.
2. Repeat step 1 for other Locking Tabs (A) to remove the Swivel Unit.

Bottom View

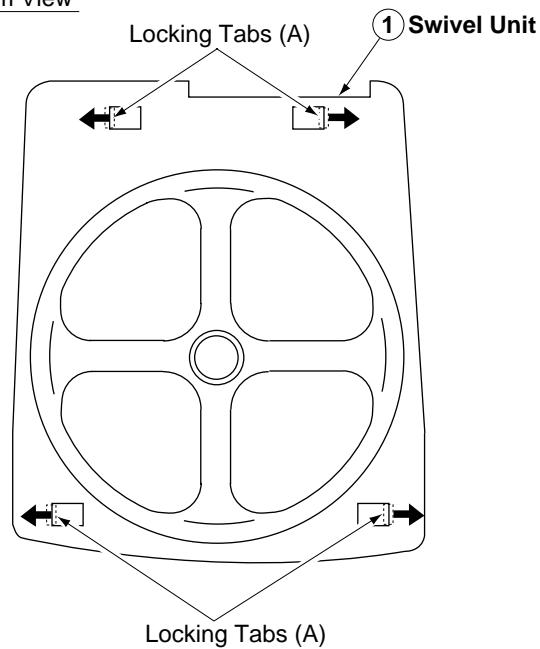


Fig. D2

Rear Cover

Disassembly Procedure

Remove 7 Screws (A). Then, pull the Rear Cover away.

(Model: A, B, C, D, E)

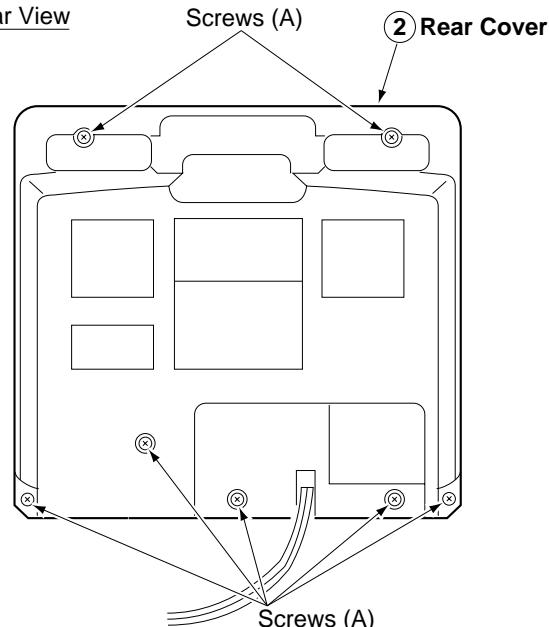


Fig. D3-1

(Model: F, G, H, I)

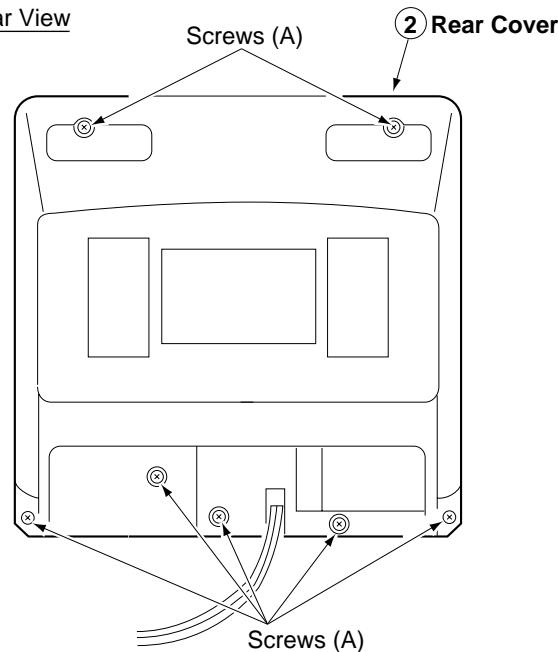


Fig. D3-2

VCR Unit

Disassembly Procedure

1. Discharge the Anode to the CRT Ground. Then, remove the Anode Cap.

2. Disconnect the Connector P354 from the CRT C.B.A.

3. Carefully pull out the CRT C.B.A. from the CRT Unit.

4. Disconnect the Deflection Yoke Connector and the Degaussing Coil Connector from the Main C.B.A.

5. (Model : A, B, C, D, E, F, G, H)

Disconnect the Connector P4591 on the Main C.B.A. and remove the leads from the clamps.

(Model : I)

Disconnect 2 Connectors P4604 and P4605 on the Stereo Amp C.B.A. and remove the leads from the clamps.

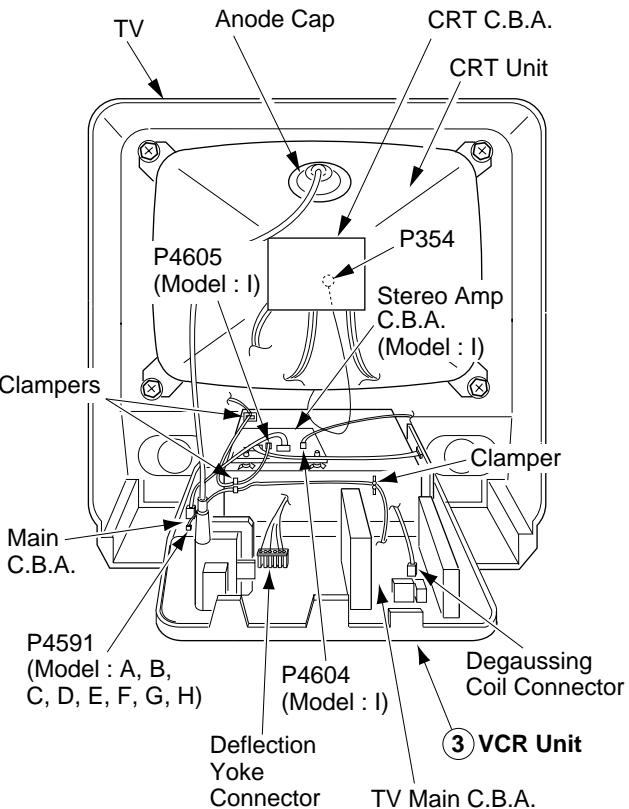


Fig. D4-1

6. (Model: A, B, C, D, E)

Slightly lift up the rear side of the VCR Unit to release Tabs (B).

(Model: F, G, H, I)

Slightly lift up the rear side of the VCR Unit to release Tabs (B) and (C).

7. Slide the VCR Unit out as far as it will go.

Then, lift up the VCR Unit to release 3 Guide Tabs (A) and remove the VCR Unit all the way out from the TV cavity.

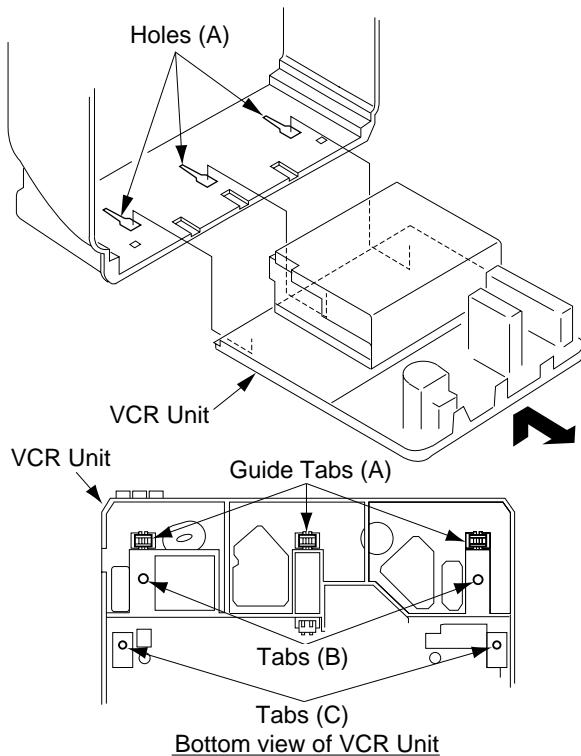


Fig. D4-2

CRT Unit

Disassembly Procedure

Remove 4 Screws with Washers (A). Then, pull out the CRT Unit.

Note:

Place the Unit face down on a soft cloth before removing the CRT Unit.

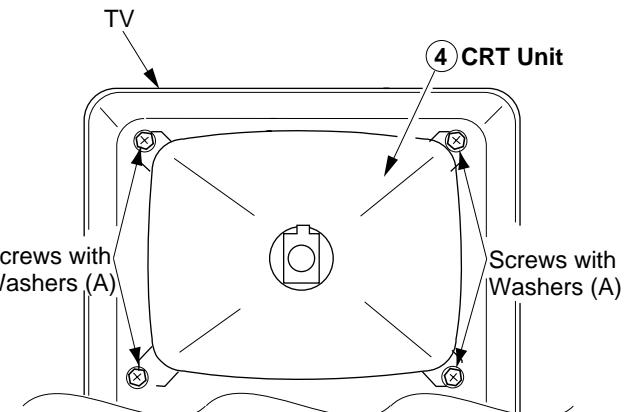


Fig. D5

Reassembly Notes

1. Installation of VCR Unit

- 1) When installing the VCR Unit, swing the Cassette Door-Lid all the way open until the Cassette Door tab clears the Opener Lever.
- 2) Make sure that all guide tabs are aligned properly. Then, press the VCR unit in.

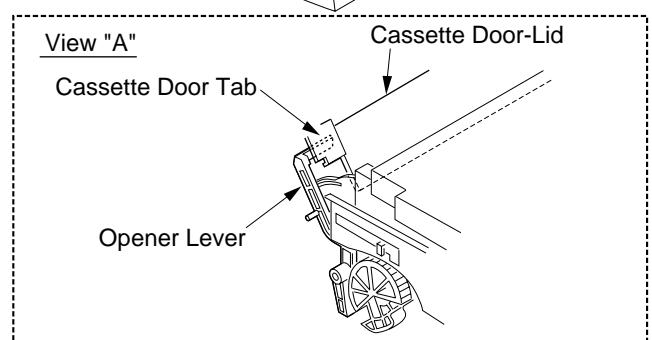
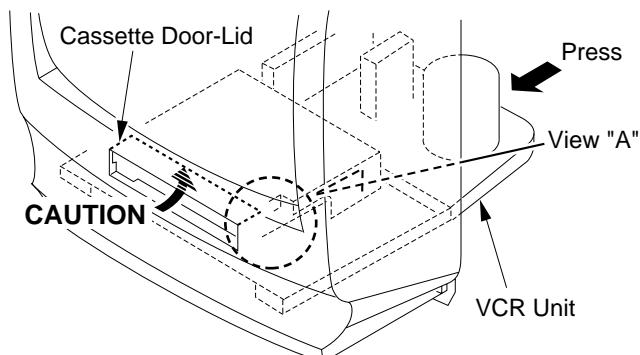


Fig. D4-3

Stereo Amp C.B.A. (Model: I)

Disassembly Procedure

1. Disconnect 2 Connectors P4592 on the Main C.B.A. and P4301 on the TV Stereo C.B.A.
2. Release 3 Clampers (A) on the TV Stereo C.B.A. Then, remove the Stereo Amp C.B.A.

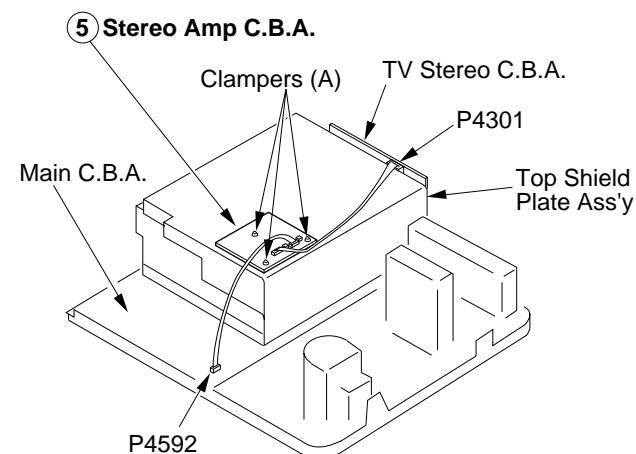


Fig. D6

Top Shield Plate Ass'y

Disassembly Procedure

1. Release the 2 Clampers (B) on the Top Shield Plate Ass'y and remove the leads from the clampers.
2. Remove 3 Screws (B). Then, remove the Top Shield Plate Ass'y.

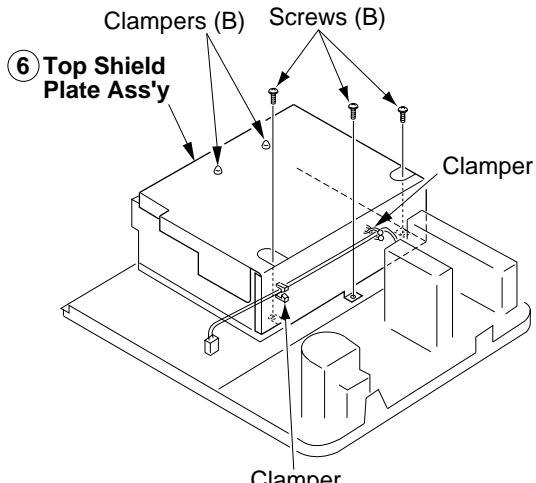


Fig. D7-1

Reassembly Notes

1. When installing the Top Shield Plate Ass'y, make sure the 2 Clampers (B) on the Cassette Up Ass'y are turned in the direction shown.
If not, the Top Shield Plate Ass'y cannot be installed.

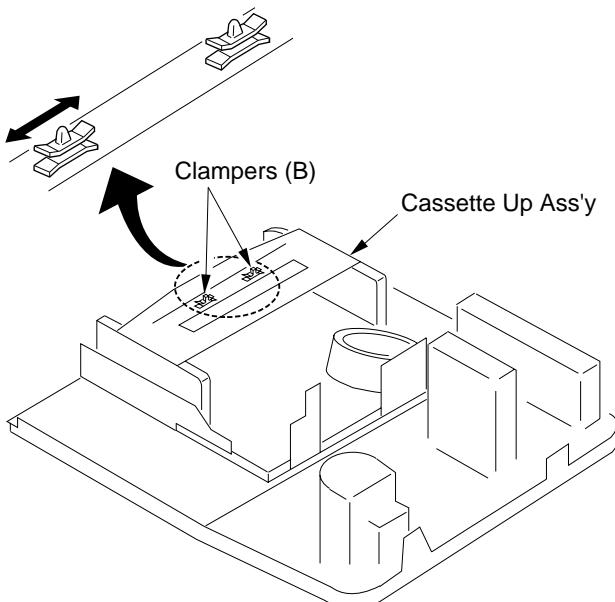


Fig. D7-2

TV Main C.B.A.

Disassembly Procedure

1. Disconnect Connector P1002 on the Main C.B.A.
2. Disconnect 3 Connectors PK1, PK2, and PK3 on the TV Main C.B.A.

Note :

When disconnecting or connecting 3 Connectors PK1, PK2, and PK3, take extreme care not to break them.

3. Remove the TV Main C.B.A. by releasing 2 Locking Tabs (B) and A/C Cord from the frame.

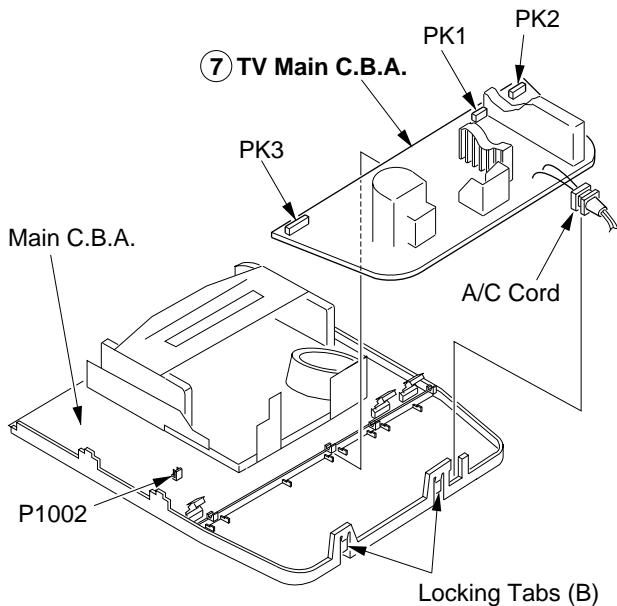


Fig. D8

VCR Chassis Unit

Disassembly Procedure

- Slide the Holder Unit (refer to "Method for Manual Loading/ Unloading of Mechanism" in Service Notes) to remove 2 Screws (C).
- (Model: A, B, C, D, E)
Remove 3 Screws (D) and Screw (E).
(Model: F, G, H, I)
Remove 2 Screws (D) and Screw (E).
- Remove 2 Screws with Washers (B).

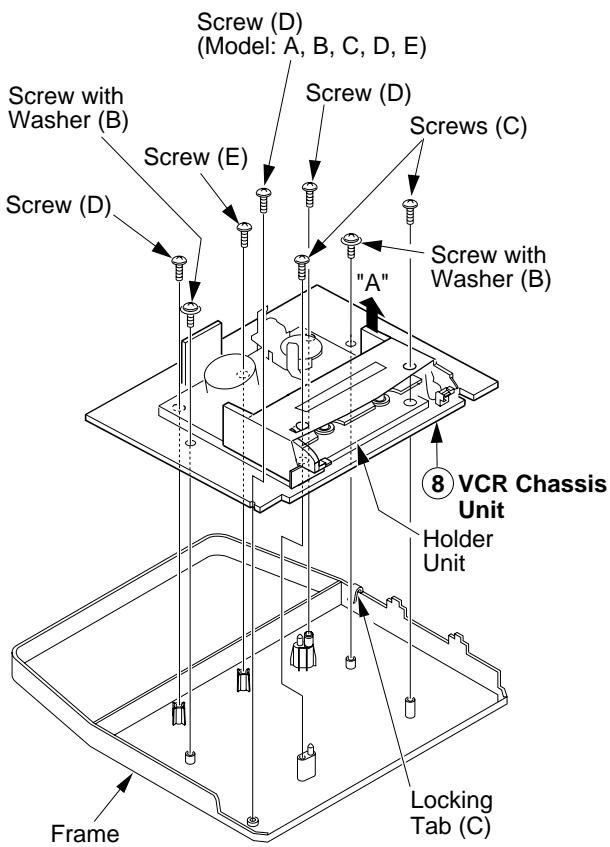


Fig. D9

- While pushing Locking Tab (C) outward, lift the right side of the Cassette Up Ass'y (Portion "A"). Then, lift the VCR Chassis Unit out of the Frame.

Note:

Work carefully so as not to break tab.

Main C.B.A.

Disassembly Procedure

- Disconnect 4 Connectors of P2531, P2552, P3501 and P4001.
- Carefully lift the Mechanism Chassis Unit straight out from the Main C.B.A.

Note:

Work carefully so as not to break Sensor LED, when lifting the Mechanism Chassis Unit.

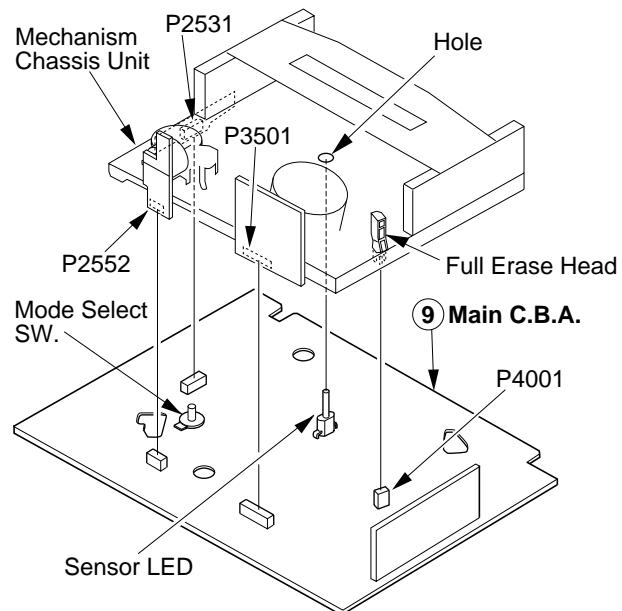


Fig. D10-1

Reassembly Notes

- Make sure that the Mode Select SW. on the Main C.B.A. is in EJECT position before installing the Mechanism Chassis Unit onto the Main C.B.A. If not, rotate the Mode Select SW. until the alignment projection is in the EJECT Position.

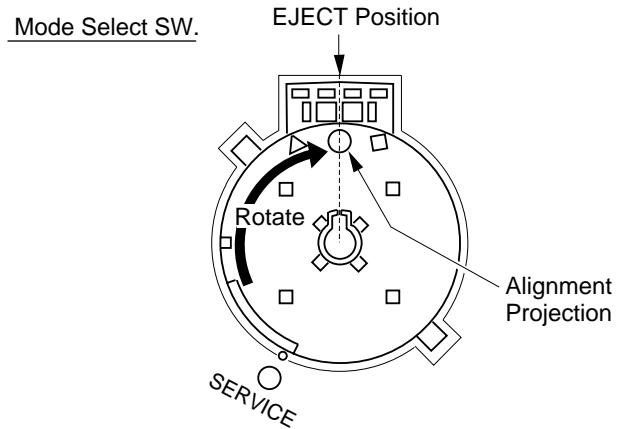


Fig. D10-2

- Be sure to install the Mechanism Chassis Unit straight onto the Main C.B.A. so that the Sensor LED clears the hole in the Mechanism Chassis Unit.
- Be sure that 4 Connectors (P2531, P2552, P3501, and P4001) are aligned and seated securely.

Cassette Up Ass'y

Disassembly Procedure

1. Slide the Holder Unit (refer to "Method for Manual Loading/ Unloading of Mechanism" in Service Notes) to remove 2 Screws (F).
2. Remove Screw (G).
3. Unhook Spring (A).
4. Slide the Cassette Up Ass'y towards the front to release Tab (C). Then, lift it up and remove.

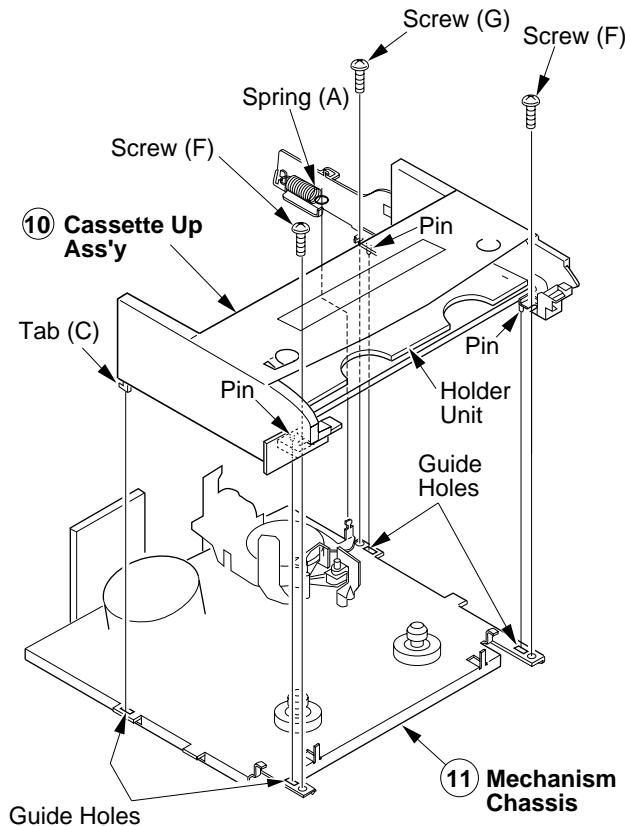


Fig. D11

Reassembly Notes

1. Installation of Cassette Up Ass'y

- 1) Confirm that the 3 pins and Tab (C) under the Cassette Up Ass'y are in each of the 4 Guide Holes on the Mechanism Chassis when installing the Cassette Up Ass'y. Then, slide the Cassette Up Ass'y towards the back.
- 2) Tighten 2 Screws (F) and Screw (G). Be careful not to tighten them too much, or the Cassette Up Ass'y may be bent outward.

DISASSEMBLY/ASSEMBLY PROCEDURES OF MECHANISM

Disassembly Method

This chart indicates Step/Location No. of Parts to be serviced and prior steps to gain access items to be serviced when disassembling. When reassembling, perform the step(s) in the reverse order.

Step /Loc. No.	Part	Prior Step(s)	Step /Loc. No.	Part	Prior Step(s)	Step /Loc. No.	Part	Prior Step(s)	Step /Loc. No.	Part	Prior Step(s)
①	Cylinder Unit	-----	⑪	Main Lever Drive Arm	3, 4, 5, 7, 8, 9	㉑	Loading Post Base-S Unit	16	㉓	S Loading Arm Unit	30
②	Upper Cylinder Unit	-----	⑫	T Brake Unit	9	㉒	Loading Post Base-T Unit	9, 20	㉔	Center Clutch Unit	-----
③	Opener Piece	-----	⑬	Changing Lever A	9	㉓	Capstan Rotor Unit	-----	㉕	Changing Gear Spring	32
④	Pinch Arm Unit	3	⑭	T Reel Table	9, 12, 13	㉔	Capstan Holder Unit	23	㉖	Changing Gear	32, 33
⑤	Motor Block Ass'y	-----	⑮	Full Erase Head	-----	㉕	SS Brake Arm Unit	-----	㉗	Changing Lever-B	32, 33, 34
⑥	Audio Control Head Unit	5	⑯	Tension Arm Unit	-----	㉖	Junction C.B.A.	-----	㉘	Idler Arm Unit	32, 33, 34
⑦	Main Cam Gear	3, 4, 5	⑰	S Spring Arm	-----	㉗	Capstan Stator Unit	23, 25, 26	㉙	Loading Rack	9, 30
⑧	Drive Rack Arm	3, 4, 5, 7	⑱	S Reel Table	16, 17	㉘	Sub Rotor	23, 25, 26, 27	㉚	Grounding Plate Unit	-----
⑨	Main Lever	-----	⑲	S Brake Arm Unit	9, 16, 17, 18	㉙	PCB Holder	23, 25, 26, 27	㉛	FG Head	-----
⑩	P5 Arm Unit	9	㉐	Main Lever Guide	9	㉚	T Loading Arm Unit	-----	---	---	---

Step/Loc. No.: Order of steps in procedure.


Part : Part to be removed or installed.

Prior Step(s) : Steps to be completed prior to the current step.

Note: When the mechanical parts surrounded by rectangle are removed or replaced, be sure to perform necessary adjustment or alignment procedures according to the mechanical adjustment procedures section and disassembly/assembly procedures of mechanism section.

Perform all disassembly and alignments procedures in EJECT Position.

TOP VIEW

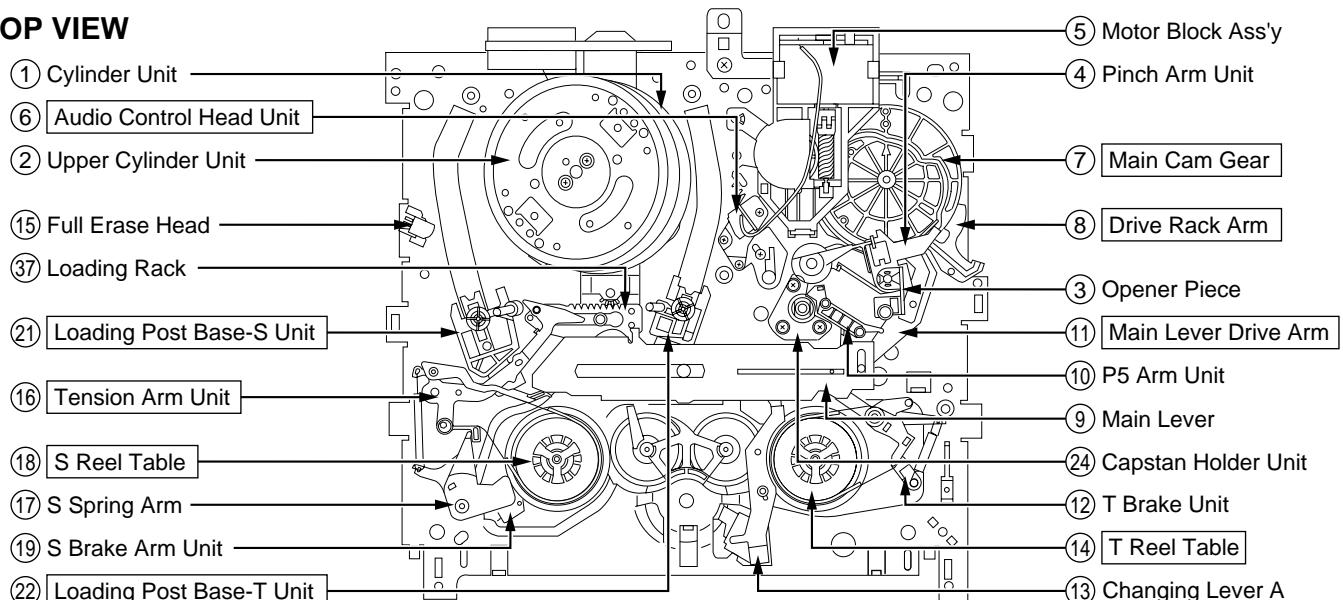

BOTTOM VIEW

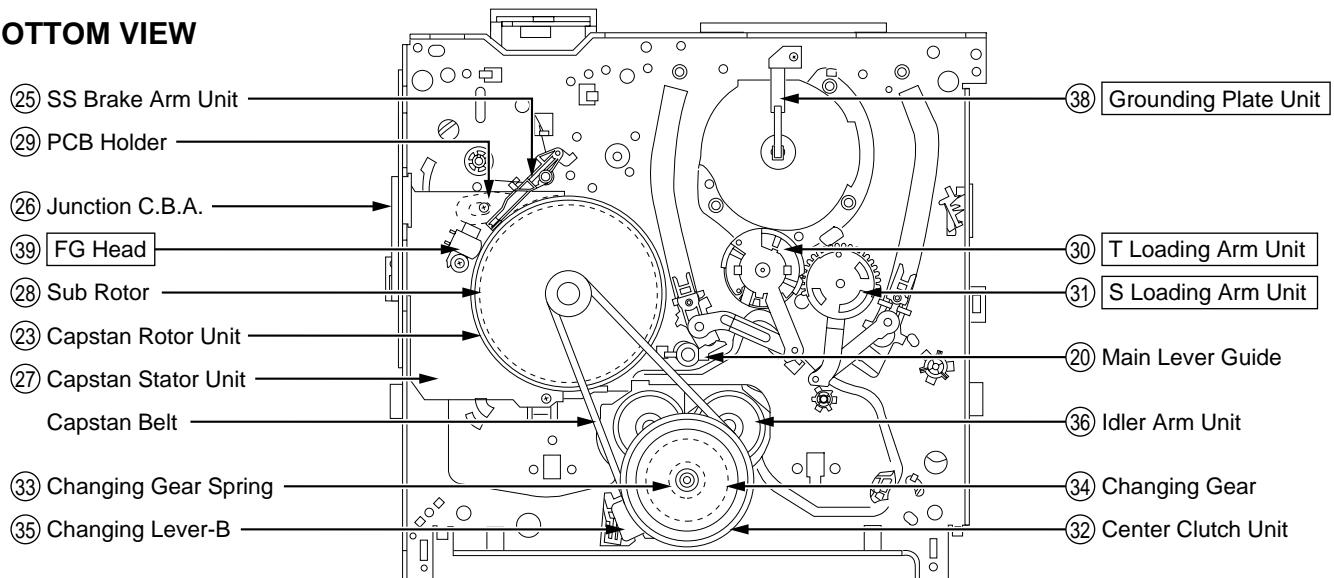


Fig. J1

Cylinder Unit

Disassembly Procedure

1. Remove 3 Screws (A) and 2 Screws with Washers (A). Then, lift the Cylinder Unit and the Head Amp C.B.A. out from the mechanism.
2. Unsolder P3502 and P3503. Then, remove the Head Amp C.B.A.

Note:

Use extreme care when removing or replacing the Cylinder Unit. Do not touch the Video Heads during servicing.

CAUTION:

When removing the Cylinder Unit, avoid touching IC2601 on the Head Amp C.B.A. because it is **HOT** during operation.

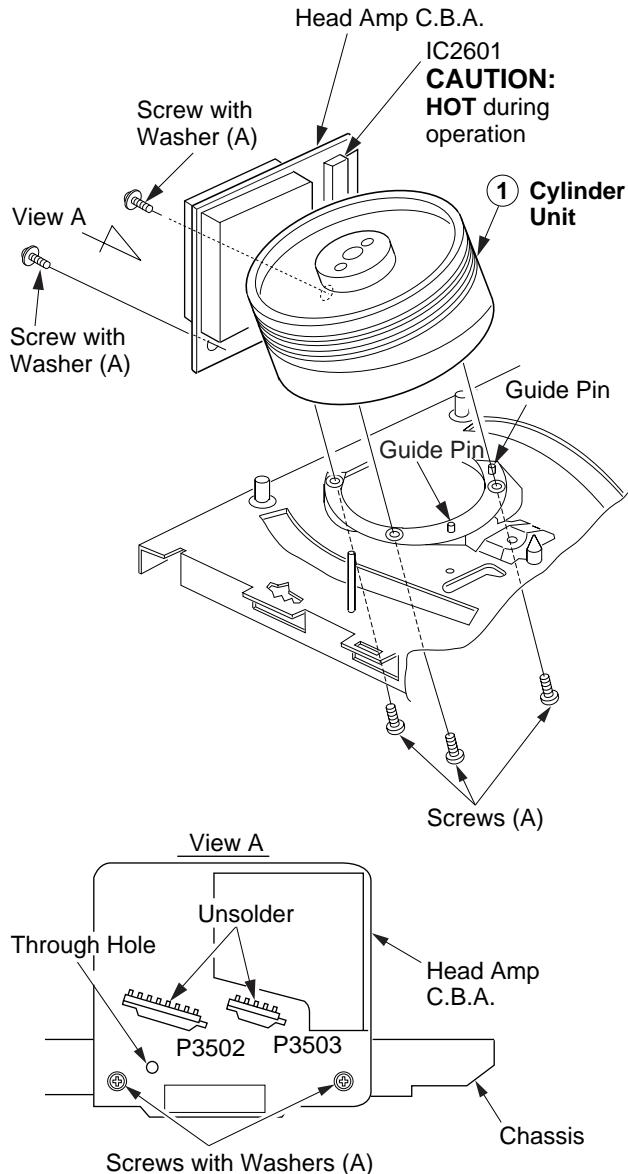


Fig. J2-1

Reassembly Notes

1. Use extreme care when removing or replacing the Cylinder Unit. Do not touch the Video Heads during servicing.
2. **Installation of Cylinder Unit**
 - 1) Install the Cylinder Unit so that the 2 holes on the lower surface of the Cylinder Unit fit over the 2 Guide Pins on the Cylinder Base and loosely secure it with 3 Screws (A).
 - 2) Install the Head Amp C.B.A. so that the hole on the Head Amp C.B.A. lines up with the hole on the chassis and secure it with 2 Screws with Washers (A).
 - 3) Position the Cylinder Unit so that foil patterns of connectors (P3502 and P3503) and Head Amp C.B.A. are aligned, and tighten 3 Screws (A).
 - 4) Solder connectors (P3502 and P3503).
3. **Adjustment of Grounding Plate Unit**
 - 1) After installing, make sure that the Grounding Plate Unit, on the bottom side of mechanism chassis, is positioned on the right side of the Cylinder shaft so that the center line of the plate is just less than 1.0 mm measured from the center of the Cylinder shaft. If required, adjust the plate position by loosening Black Screw (A). Never install the Grounding Plate Unit on the left side of the Cylinder shaft. Incorrect positioning will cause cylinder buzz.

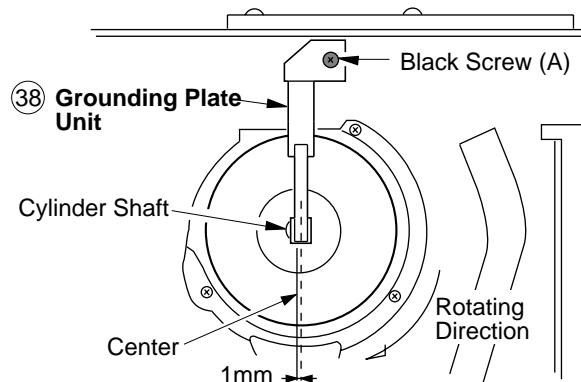


Fig. J2-2

- 2) After installing, perform the "Tape Interchangeability Adjustment/Confirmation Procedures."

Upper Cylinder Unit

Disassembly Procedure

1. Remove 2 Screws with Washers (B).
2. Carefully lift the Upper Cylinder Unit from the shaft.

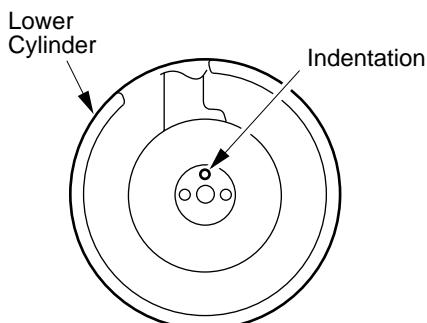
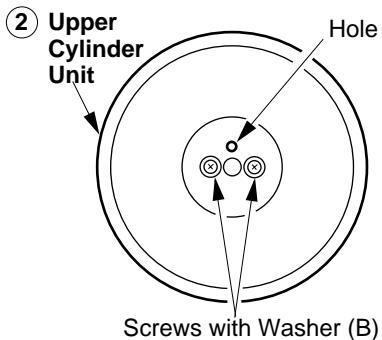


Fig. J3

Note:

Use extreme care when removing or replacing the Upper Cylinder Unit. Do not touch the Video Heads during servicing.

Reassembly Notes

1. Use extreme care when removing or replacing the Cylinder Unit. Do not touch the Video Heads during servicing.
2. **Alignment of Upper Cylinder Unit**
 - 1) When installing, make sure that the hole on the Upper Cylinder is aligned with the indentation on the Lower Cylinder.
 - 2) After installing, perform the "Tape Interchangeability Adjustment/Confirmation Procedures."

Opener Piece, Pinch Arm Unit, Motor Block Ass'y, and Audio Control Head Unit

Disassembly Procedure

1. Remove the Opener Piece by pulling it upward while releasing 2 Locking Tabs (A).
2. Pull up on the Pinch Arm Unit.
3. Release 3 Locking Tabs (B) and remove Screw with Washer (C). Then, remove the Motor Block Ass'y and Audio Control Head Unit.

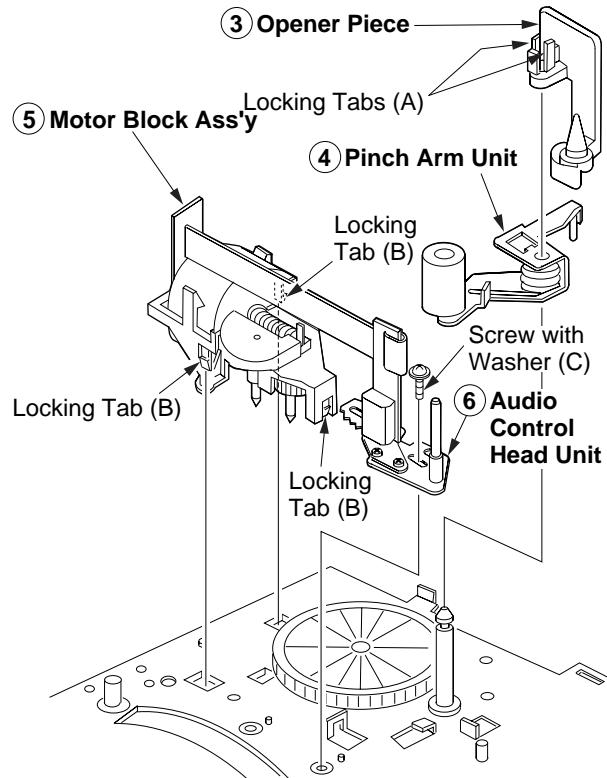


Fig. J4

Reassembly Notes

1. **Installation of Audio Control Head Unit**
 - 1) Install the Audio Control Head Unit before Motor Block Ass'y.
 - 2) After installing, perform the "Tape Interchangeability Adjustment/Confirmation Procedures."

Main Cam Gear and Drive Rack Arm

Disassembly Procedure

1. Remove the Main Cam Push Nut. (Refer to Note.)
2. Pull up on the Main Cam Gear.
3. Turn the Drive Rack Arm fully counterclockwise as shown.
4. Pull up on the Drive Rack Arm.

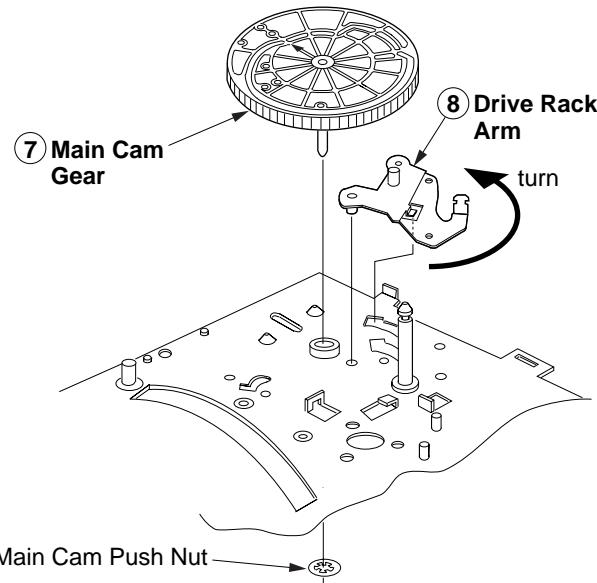


Fig. J5-1

Note:

When removing the Main Cam Push Nut, use a screwdriver etc.

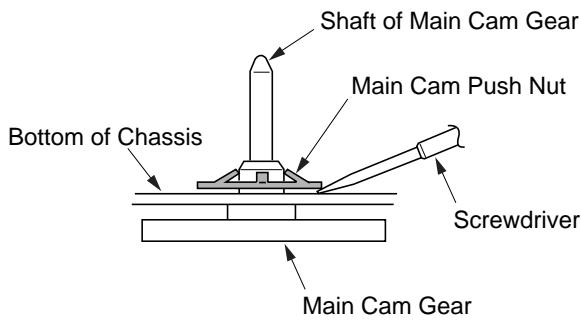


Fig. J5-2

Reassembly Notes

1. Alignment of Main Cam Gear and Drive Rack Arm

- 1) Install the Drive Rack Arm so that the hole (A) is aligned with the hole on chassis as shown (Through hole (A)).
- 2) Install the Main Cam Gear so that the 2 holes (B) marked "E" are aligned with the hole on chassis as shown (Through hole (B)). ("E" indicates the EJECT position.)

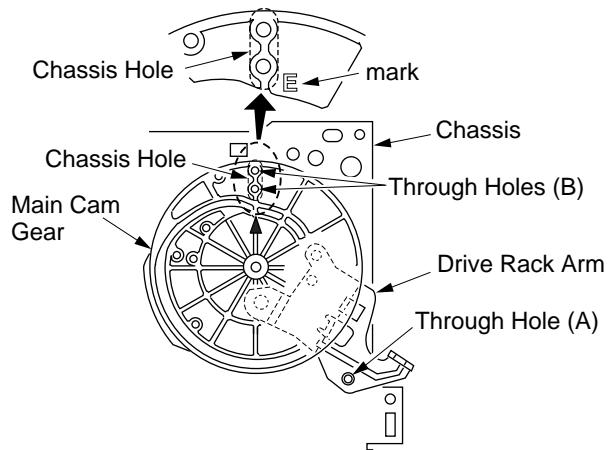


Fig. J5-3

2. Installation of Main Cam Gear and Main Cam Push Nut

- 1) Position the chassis upside down placing a Support under the Main Cam Gear.
Install the Main Cam Push Nut with Needlenose Pliers etc. so that it is flush with the chassis.

There may be some slight scratches on the Shaft of Main Cam Gear, when removing the Main Cam Gear. In case that the Main Cam Gear can be installed securely without tottering, it is fine to use the one. If any tottering, replace a new one.

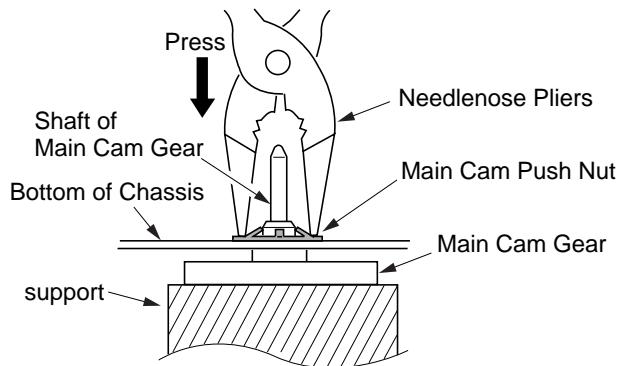


Fig. J5-4

3. Main Cam Push Nut is not reusable. If removed, install a new one.

Main Lever

Disassembly Procedure

1. Release 2 Locking Tabs (C) and Locking Tab (D). Then, remove the Main Lever.

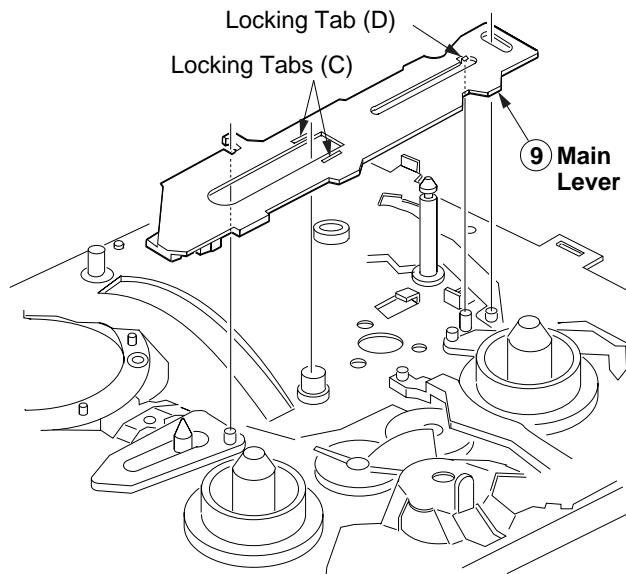


Fig. J6-1

Reassembly Notes

1. Confirmation of Main Lever

- 1) Confirm that bosses and shafts are set properly after installation of Main Lever.

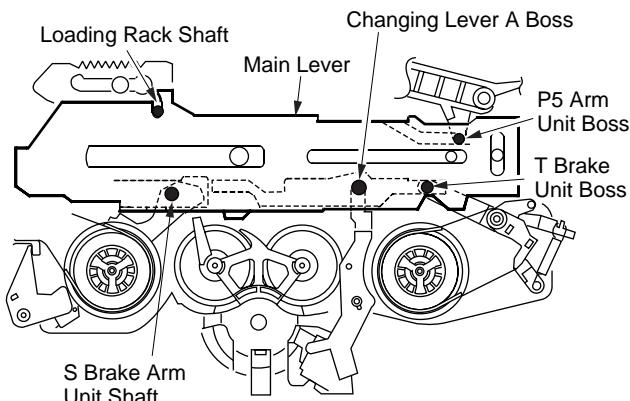


Fig. J6-2

P5 Arm Unit and Main Lever Drive Arm

Disassembly Procedure

1. Pull up on the P5 Arm Unit.
2. Turn the Main Lever Drive Arm fully counterclockwise as shown.
3. Pull up on the Main Lever Drive Arm.

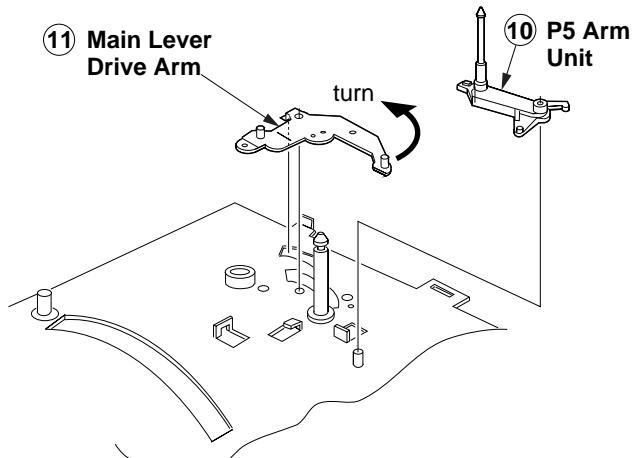


Fig. J7-1

Reassembly Notes

1. Alignment of Main Lever Drive Arm

- 1) Install the Main Lever Drive Arm so that the hole (C) is aligned with the hole on the Chassis as shown (Through hole (C)).

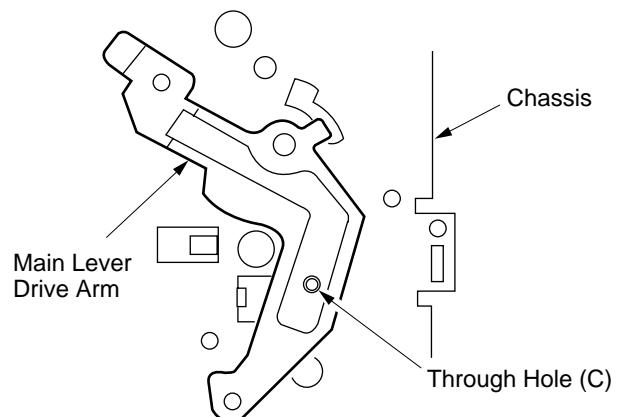


Fig. J7-2

T Brake Unit, Changing Lever A, and T Reel Table

Disassembly Procedure

1. Remove the T Brake Unit while releasing Locking Tab (E) located under the chassis.
2. Remove Cut Washer (A). Then, pull up on the Changing Lever A and remove.
3. Pull up on the T Reel Table.

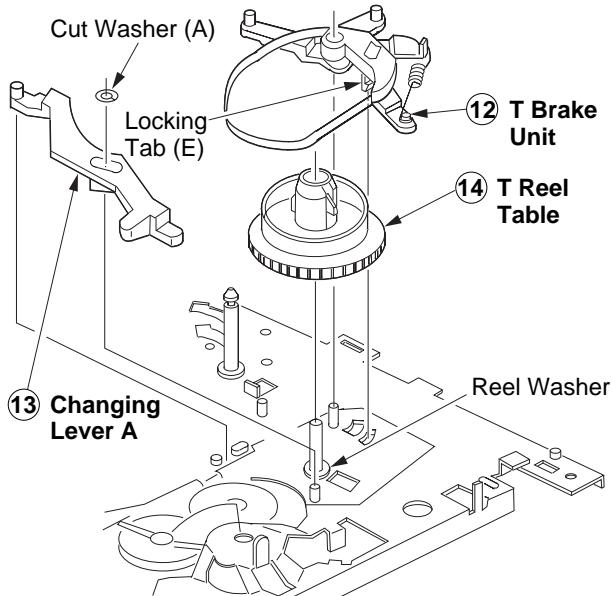


Fig. J8-1

Reassembly Notes

1. How to distinguish between S Reel Table and T Reel Table

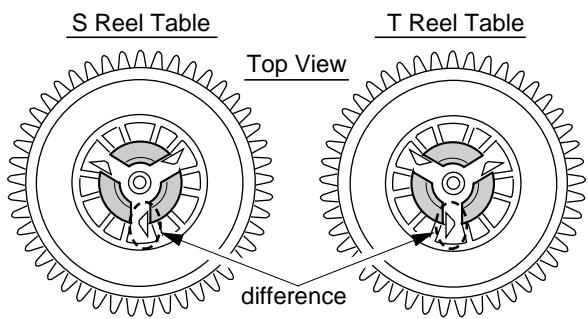


Fig. J8-2

2. Adjustment of T Reel Table

- 1) After installing, perform the "Reel Table Height Adjustment Procedures."
3. Be careful not to lose the Reel Washer under the T Reel Table.
4. Cut Washer (A) is not reusable. If removed, install a new one.

Full Erase Head, Tension Arm Unit, S Spring Arm, and S Reel Table

Disassembly Procedure

1. Turn the Full Erase Head fully counterclockwise as shown. Then remove it.
2. Unhook Spring (A).
3. Remove the Tension Arm Unit by pulling it up while releasing 2 Locking Tabs (F).
4. Remove the S Spring Arm while releasing Locking Tab (G).
5. Pull up on the S Reel Table.

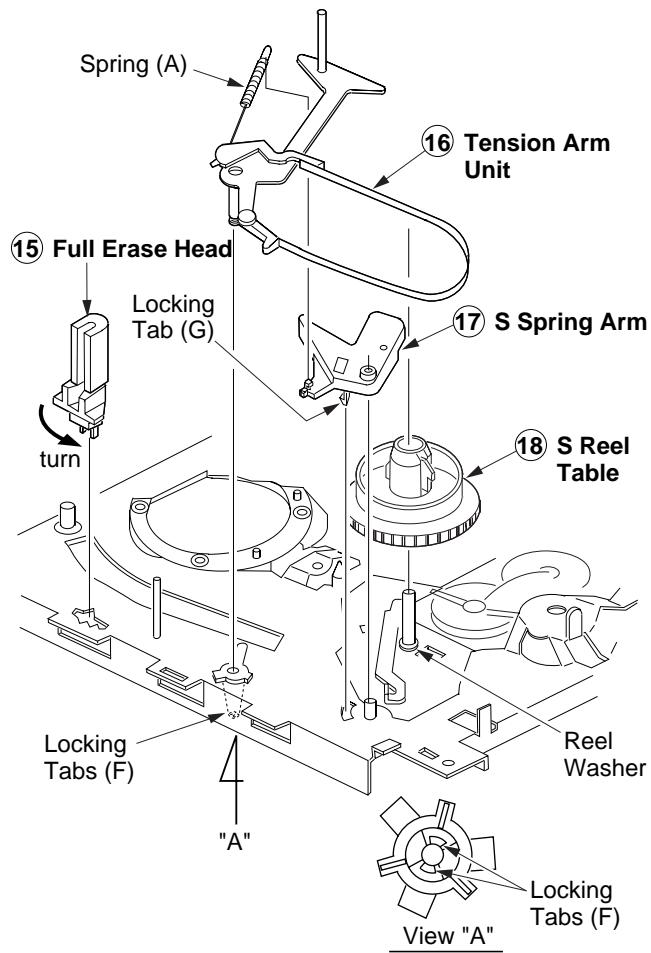


Fig. J9

Reassembly Notes

1. Adjustment of S Reel Table

- 1) After installing, perform the "Reel Table Height Adjustment Procedures".
2. Be careful not to lose the Reel Washer under the S Reel Table.
3. Adjustment of Tension Arm Unit
 - 1) After installing, perform the "Tension Post Adjustment Procedures."

S Brake Arm Unit, Main Lever Guide, Loading Post Base -S, and Loading Post Base -T Unit

Disassembly Procedure

1. Remove the S Brake Arm Unit while releasing 2 Locking Tabs (H).
2. Remove the Main Lever Guide while releasing Locking Tab (I).
3. Slide the Loading Post Base -S and T Units to the end of the guide slots to remove.

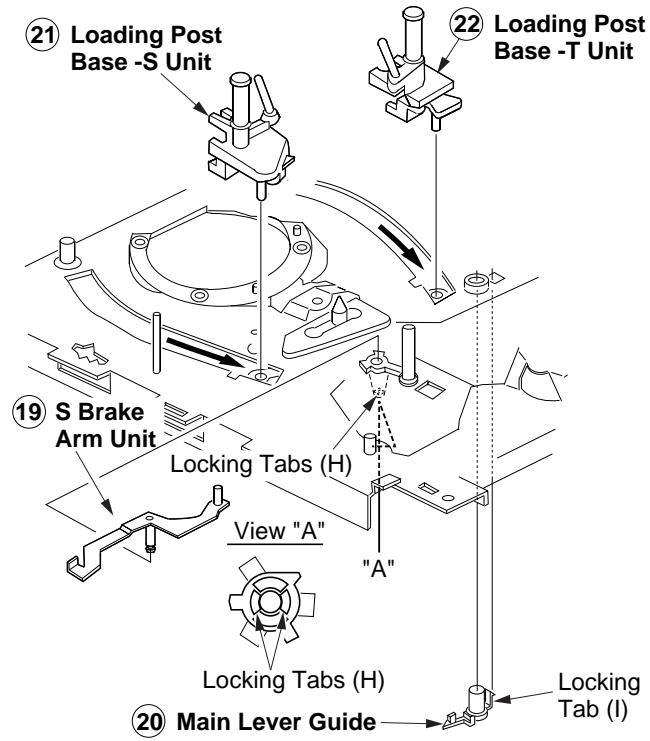


Fig. J10

Reassembly Notes

1. **Adjustment of Loading Post Base -S Unit and Loading Post Base -T Unit**
 - 1) After installing, perform the "P2 and P3 Post Height Adjustment Procedures" and "Tape Interchangeability Adjustment/Confirmation Procedures."

Capstan Rotor Unit, Capstan Holder Unit, and SS Brake Arm Unit

Disassembly Procedure

1. Remove the Capstan Belt.
2. Cut the Stopper with a cutter to remove.
3. Pull up on the Capstan Rotor Unit.
4. Remove 3 Screws (B). Then remove the Capstan Holder Unit.
5. Unhook Spring (B).
6. Turn the SS Brake Arm Unit so that the Tab (A) lines up with the niche. Then, remove the SS Brake Arm Unit.

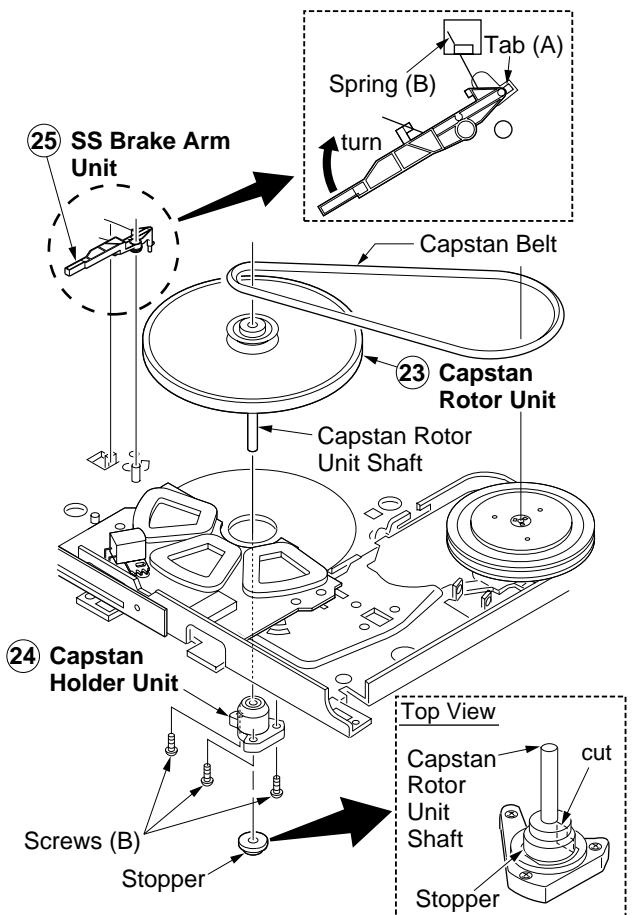


Fig. J11-1

Reassembly Notes

1. **Installation of Capstan Rotor Unit**
 - 1) Insert the Capstan Rotor Unit Shaft to the hole of the Capstan Holder Unit.
 - 2) Place a support under the Capstan Rotor Unit shaft. Install the Stopper. Be careful not to scratch the shaft or Capstan Holder Unit.
 - 3) Remove the support. Press the top end of the shaft down so that the Stopper is properly positioned. You should be able to move the shaft up and down slightly when properly positioned.

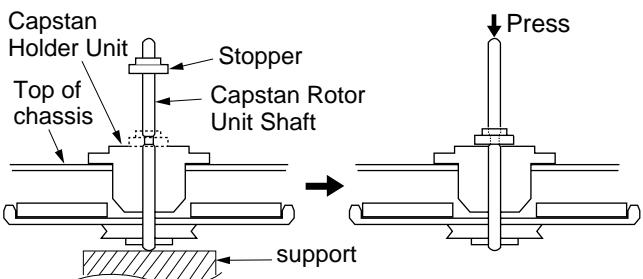


Fig. J11-2

2. **Capstan Rotor Kit**

Capstan Rotor Unit, Capstan Holder Unit, and Stopper are supplied as a Capstan Rotor Kit only. (Kit No. VXP50382K) They are not reusable. If removed, install a new one. Because even invisible scratches on the Shaft of Capstan Rotor Unit and the Capstan Holder Unit, made when cutting the Stopper, could cause unstable tape path running.

Junction C.B.A., Capstan Stator Unit, Sub Rotor, and PCB Holder

Disassembly Procedure

1. Remove 2 Screws (C).
2. Unsolder P2532 on the Junction C.B.A. Then, remove the Junction C.B.A.
3. Remove Screw (D) and 2 Screws with Washers (D), (E). Then, remove Capstan Stator Unit, Sub Rotor, and PCB Holder.

CAUTION:

When removing Capstan Stator Unit, avoid touching IC2501 on the Capstan Stator Unit because it is **HOT** during operation.

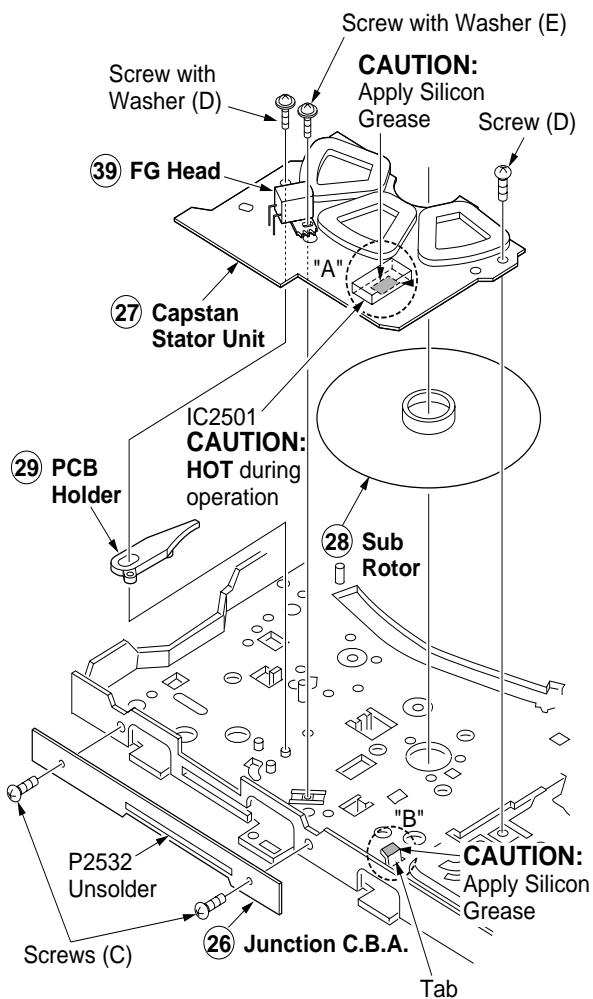


Fig. J12-1

Reassembly Notes

1. Application of Silicon Grease

CAUTION

When installing the IC2501 or Capstan Stator Unit, be sure to apply Silicon Grease (VFK1301) as shown. Be careful not to touch other parts with greased portion to prevent grease depletion.

Silicon Grease Application

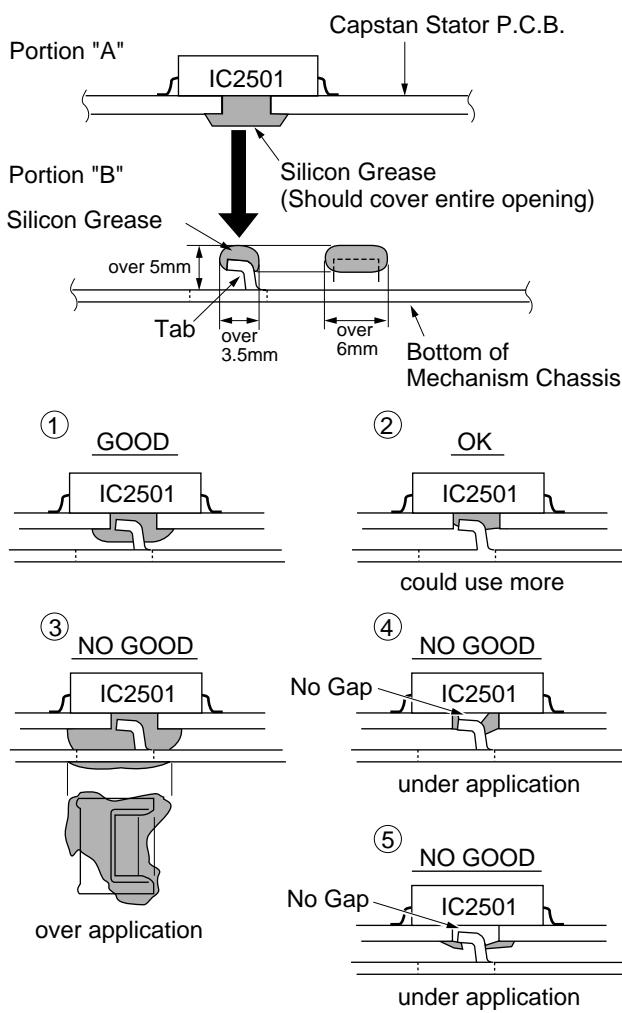


Fig. J12-2

2. Capstan Stator Kit

- 1) Capstan Stator Unit, Capstan Rotor Unit, Capstan Holder Unit, and Stopper are supplied as a Capstan Stator Kit only (Kit No. VEMS0316K). However, IC2501(AN3845SC) is available separately as a replacement part. Capstan Rotor Unit, Capstan Holder Unit, and Stopper are not reusable. Install all new parts. Because even invisible scratches on the Capstan Rotor Unit shaft and the Capstan Holder Unit, made when cutting the Stopper, could cause tape path instability.
3. Adjustment of FG Head
 - 1) After installing, perform the "FG Head gap Adjustment" procedures.

T Loading Arm Unit and S Loading Arm Unit Disassembly Procedure

1. Remove the T Loading Arm Unit by pulling it up while releasing Locking Tab (J).
2. Pull up on the S Loading Arm Unit.

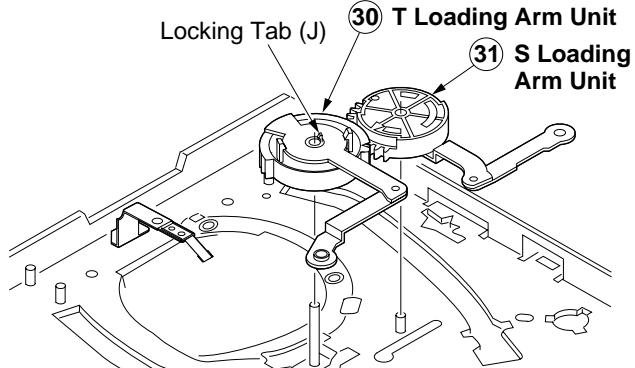


Fig. J13-1

Reassembly Notes

1. Alignment of T Loading Arm Unit and S Loading Arm Unit
 - 1) Slide the Loading Rack so that the holes on it and the holes on chassis line up properly.
 - 2) Install the S Loading Arm Unit onto the Chassis.
 - 3) Install the T Loading Arm Unit so that the triangle-shaped indent is aligned with the arrow on the S Loading Arm Unit as shown. Confirm that each of holes on the T Loading Arm Unit, Chassis, and the Loading Rack are through holes.

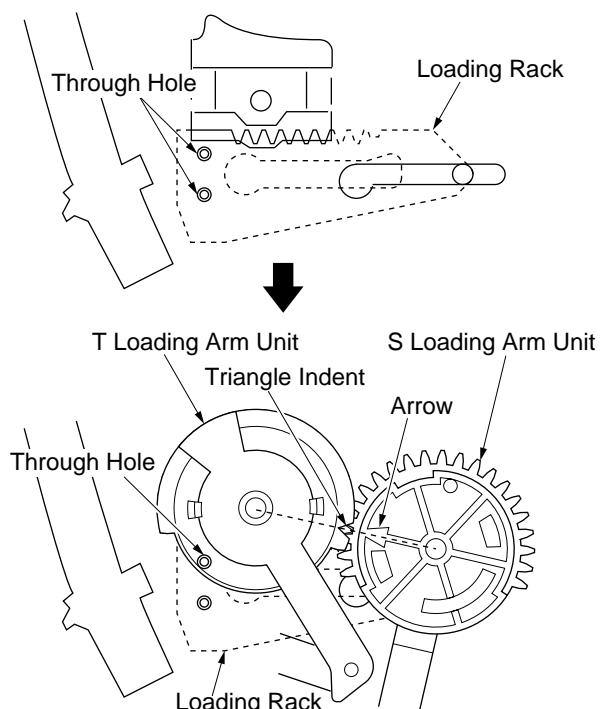


Fig. J13-2

Center Clutch Unit, Changing Gear Spring, Changing Gear, Changing Lever-B, and Idler Arm Unit

Disassembly Procedure

1. Remove Cut Washer (B). Then remove the Center Clutch Unit, Changing Gear Spring, and Changing Gear.
2. Remove Changing Lever-B while releasing 2 Locking Tabs (K).
3. Pull up on the Idler Arm Unit.

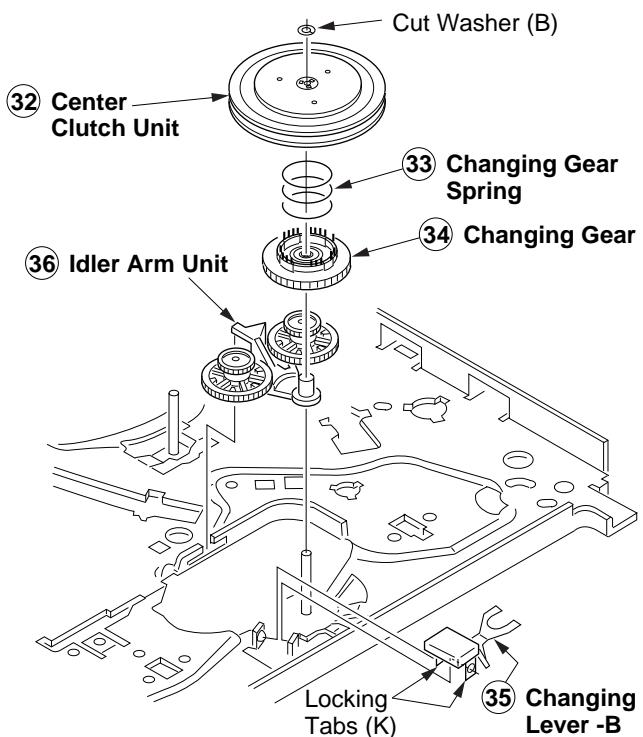


Fig. J14-1

Reassembly Notes

1. Installation of Center Clutch Unit
 - 1) Fit the Center Clutch Unit into the Changing Gear as shown.

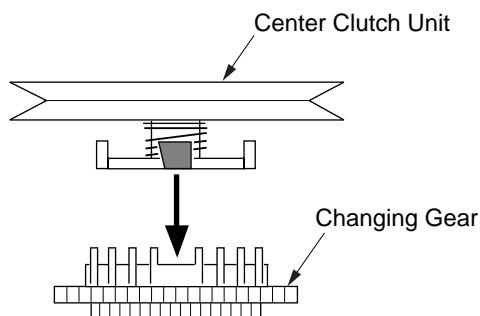


Fig. J14-2

2. Cut Washer (B) is not reusable. If removed, install a new one.

Loading Rack Unit

Disassembly Procedure

1. Slide the Loading Rack Unit as indicated by the arrow. Then, pull up on the Loading Rack Unit.

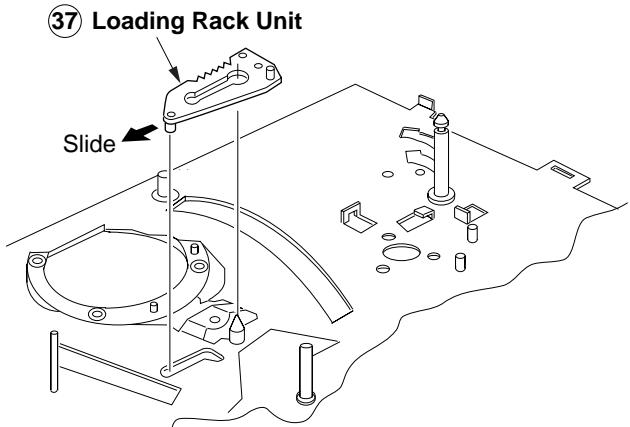


Fig. J15

DISASSEMBLY/ASSEMBLY PROCEDURES OF CASSETTE UP ASS'Y

Top Plate, Wiper Arm Unit, and Holder Unit

Disassembly Procedure

1. Remove Top Plate by releasing 2 Locking Tabs (A) on the left side and 2 Locking Tabs (B) on the right side of the Top Plate.
2. Remove Wiper Arm Unit by releasing 2 Locking Tabs (C). Then, remove the Holder Unit.

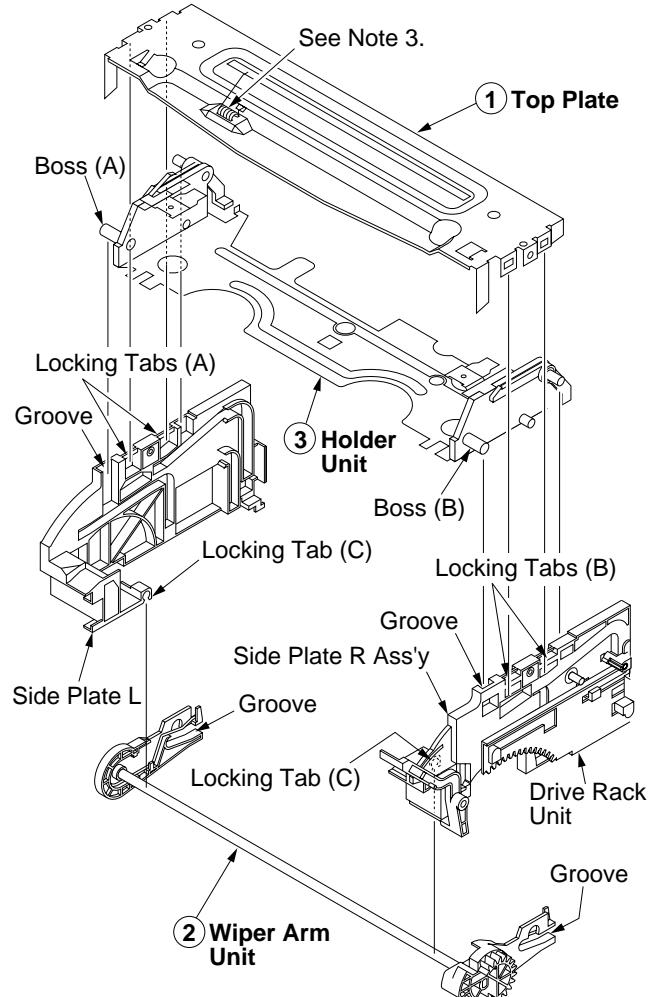


Fig. K1-1

Reassembly Notes

1. Alignment of Wiper Arm Unit and Drive Rack Unit

- 1) Slide the Drive Rack Unit to the far right as indicated by the arrow.
- 2) Install the Wiper Arm Unit so that the hole on the Wiper Arm Unit is aligned with the hole on the Drive Rack Unit.

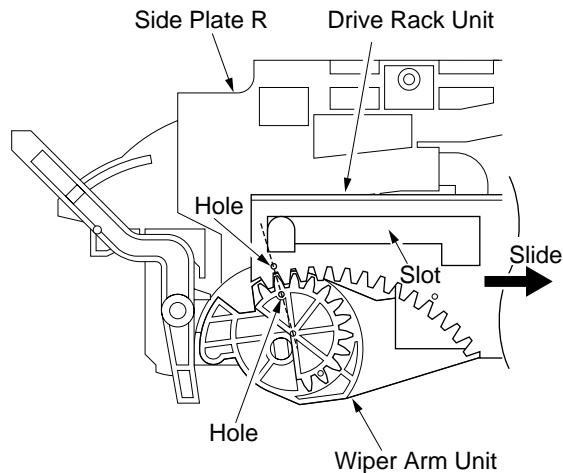


Fig. K1-2

2. Installation of Holder Unit

- 1) Turn the Wiper Arm Unit so that the grooves on each end are aligned with the grooves on Side Plate L and R.
- 2) Insert Holder Unit boss (A) and (B) into the grooves.
- 3) Finally, in the EJECT Position, confirm that the protrudence on the Wiper Arm Unit is aligned with the indentation on the Drive Rack Unit.

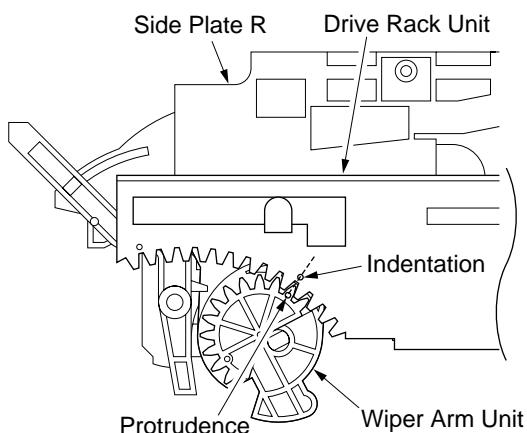


Fig. K1-3

3. As an ESD countermeasure, make sure the spring is in contact with Top Cover.

Sensor Cover, Opener Lever, and Drive Rack Unit

Disassembly Procedure

1. Remove the Sensor Cover by releasing Locking Tab (D).
2. Remove the Opener Lever by releasing Locking Tab (E). Then remove the Drive Rack Unit.

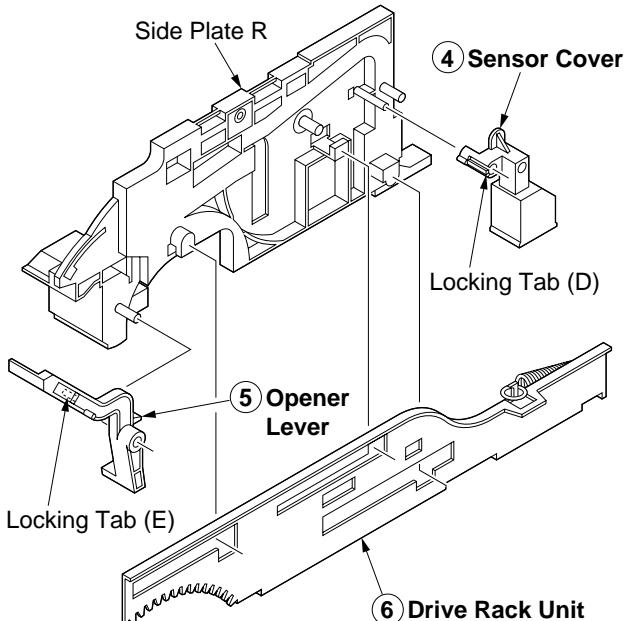
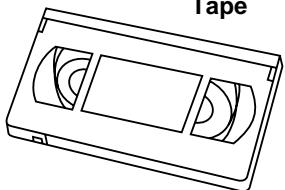
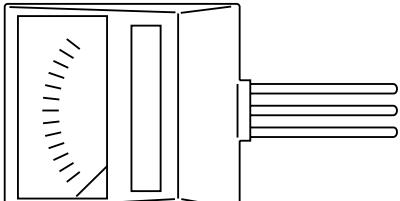
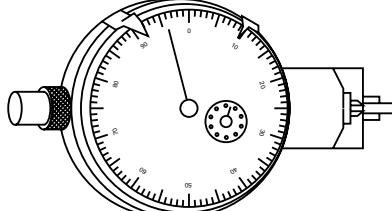
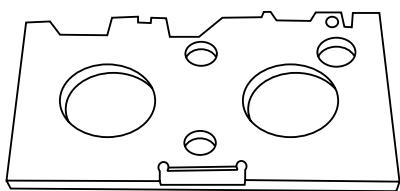
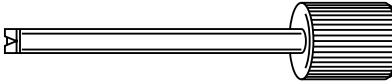
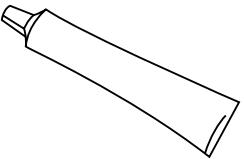
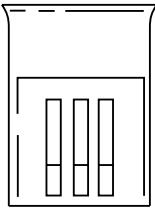
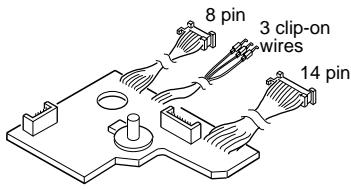
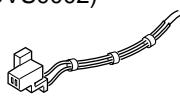
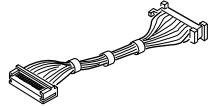


Fig. K2

ADJUSTMENT PROCEDURES

SERVICE FIXTURES AND TOOLS

VFMS0003H6  <p>VHS Alignment Tape</p> <table border="1"> <tr> <td>Video</td> <td>Color Bar & Monoscope</td> </tr> <tr> <td>Audio</td> <td>6kHz(MONO)</td> </tr> </table>	Video	Color Bar & Monoscope	Audio	6kHz(MONO)	Back Tension Meter <p>(Made in USA., Purchase Locally)</p> 	VFKS0009  <p>Reel Table Height Fixture</p>
Video	Color Bar & Monoscope					
Audio	6kHz(MONO)					
VFKS0010  <p>Post Adjustment Plate</p>	VFKS0081  <p>Grease</p>	VFK0329  <p>Post Adjustment Driver</p>				
VFK1301  <p>Silicon Grease</p>	VFK27  <p>Head Cleaning Stick</p>	VFK0330  <p>H-Position Adjustment Driver</p>				
VUZS0002 <p>Mode Select SW. Ass'y (VUVS0001)</p>  <p>8 pin 3 clip-on wires 14 pin</p>	<p>Extension Cable -1 (VUVS0002)</p>  <p>Extension Cable -2 (VUVS0005) for 2 Head Model</p> 	<p>Extension Cable -2 (VUVS0004) for 4 Head Model</p>  <p>Extension Cable -2 (VUVS0003) for Hi-Fi Model</p> 				
TSM10032-2  <p>Permalloy Magnetic Strip</p> <p>(Model: F, G, H, I)</p>						

MECHANICAL ADJUSTMENT

CLEANING PROCEDURE FOR THE UPPER CYLINDER UNIT

1. While slowly turning the Upper Cylinder Unit counterclockwise by hand, gently rub the Video Heads with a Head Cleaning Stick (VFK27) moistened with Ethanol. When using a Cleaning Cassette, make sure to use "DRY" type only and be aware that excessive use can shorten head life.

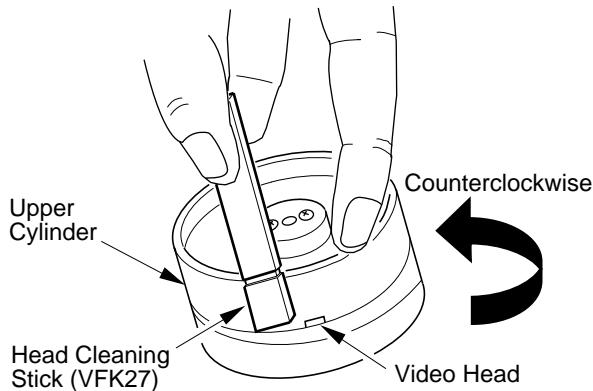


Fig. M1

Note:

- 1) Do not rub vertically or apply excess pressure to the Video Heads.
Do not turn the Upper Cylinder Unit clockwise while cleaning.
- 2) After cleaning, use a Dry Head Cleaning Stick (VFK27) to remove any Ethanol remaining on the cylinder tape path. Otherwise, tape damage will occur.

ADJUSTMENT PROCEDURES

TENSION POST ADJUSTMENT

Purpose:

To maintain a constant tape tension so that the tape runs with stability by performing preliminary adjustment.

Symptom of Misadjustment:

- 1) If the adjusted value is below the specification, the tape tension is not sufficient, thus causing a tape slack.
- 2) If the adjusted value is above the specification, the tape tension is too high, thus causing tape damage.

Equipment Required:

2 mm Hex. Wrench (Purchase Locally)

1. Remove the Cassette Up Ass'y.
2. Plug the AC plug into an AC outlet.
3. Place the unit in the Service Mode. Refer to "Service Mode" in the "Service Notes" section of this manual.
The power comes on and the unit goes into the PLAY Mode.
4. Using a (2 mm) Hex. Wrench, adjust the nut on the Tension Adjust Piece (counterclockwise only) so that there is a space of 1 mm between the left edge of the P1 Post and the right edge of the Tension Post. Make sure that the center of the Hex. Wrench hole is within Area "A".
5. After adjustment, remove the Hex. Wrench.
6. Press the STOP/EJECT button to place the unit in the EJECT Mode.
7. Release the unit from the Service Mode. Refer to "Service Mode" in the "Service Notes" section of this manual.

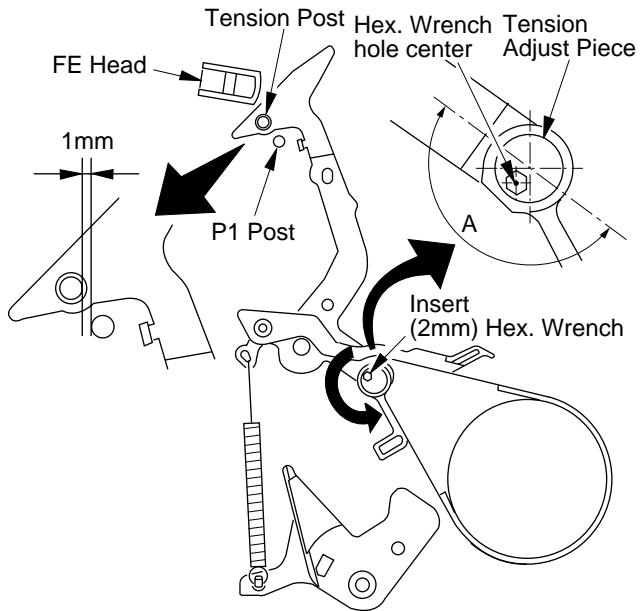


Fig. M2

BACK TENSION CONFIRMATION

Purpose:

To fine adjust the Back Tension so that the tape runs smoothly with a constant tension.

Symptom of Misadjustment:

- 1) If the tape tension is less than the specified value, the tape cannot come into proper contact with the Video Heads, resulting in poor picture playback.
- 2) If the tape tension is too high, the tape will soon be damaged.

Measurement Procedure

Equipment Required:

Back Tension Meter (Made in U.S.A., Purchase Locally)
VHS Cassette Tape (120-Minute Tape)

Specification $25 \pm 2.5\text{g}$

1. Play back a T120 cassette tape from the beginning for approx. 10 to 20 seconds to stabilize tape movement.
 2. Insert a Tension Meter into tape path and measure the back tension.
 3. If the reading is out of specification, make sure that there is no dust or foreign material between the Tension Band of Tension Arm Unit and the Reel Table.
- If cleaning does not correct the tension measurement, replace the Tension Spring and the Tension Arm Unit.


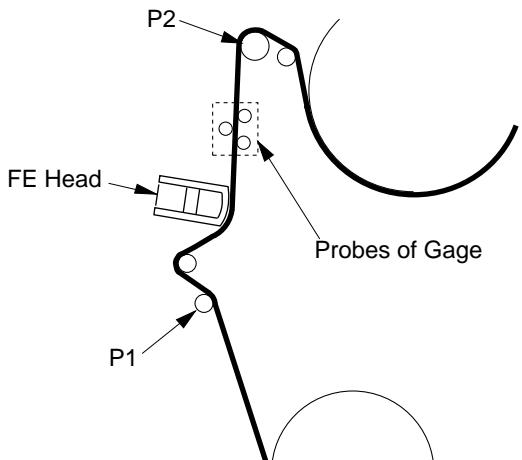


Fig. M3-1

Note:

- 1) Be sure that the three probes of the meter are all in solid contact with the tape, but not touching any other parts of the mechanism.
- 2) It is recommended that measurements be repeated at least three (3) times because the tension meter is very sensitive to external vibrations.

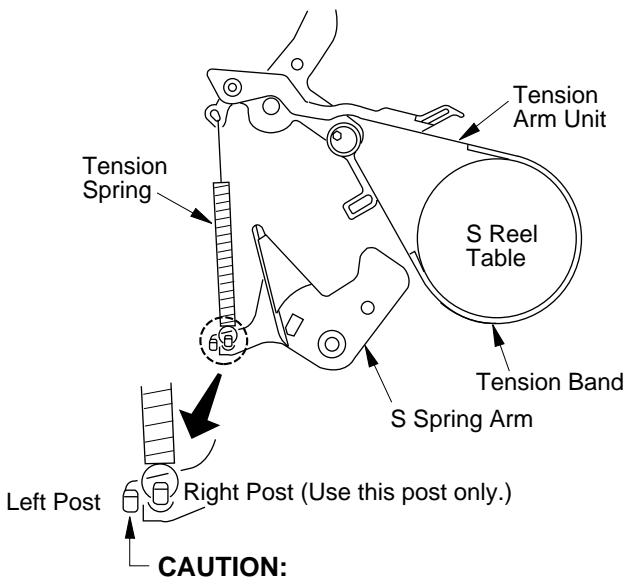

CAUTION:

The Left Post will be deleted on running change basis.
DO NOT attach the Spring to the Left Post.

Fig. M3-2

REEL TABLE HEIGHT ADJUSTMENT

Purpose:

To align the height of Supply and Take-Up Reel Tables properly.

Symptom of Misadjustment:

If the height of the Reel Table is not properly aligned, the tape will eventually be damaged.

Equipment Required:

Post Adjustment Plate (VFKS0010)
Reel Table Height Fixture (VFKS0009)

Specification 0 +/- 0.2mm

1. Remove the Cassette Up Ass'y.
2. Position the Post Adjustment Plate over the reels.
3. Place the reel table height fixture on the Post Adjustment Plate so that the foot of the fixture sits in the cutout portion of the Post Adjustment Plate. Then zero the fixture.

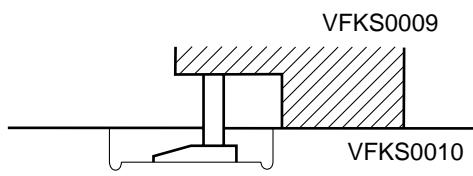


Fig. M4-1

4. Measure to the top edge of each reel table. The height should be 0 +/- 0.2 mm. If the height is not within the specification, add or remove Reel Washers (under the reel table) as necessary.

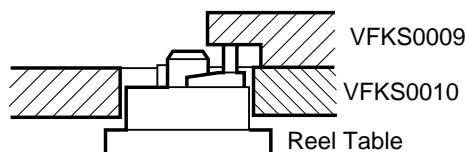


Fig. M4-2

Note:

Reel Washers are available in one size (0.25 mm) only.

FG HEAD GAP ADJUSTMENT

Purpose:

To properly pick up the FG Signal.

Symptom of Misadjustment:

If the FG Signal is not properly picked up, Servo Operation cannot be achieved.

Equipment Required:

Oscilloscope

Specification 0.13 +/- 0.02mm

1. Remove the VCR Chassis Unit and then place it upside down.
2. Remove the Main C.B.A.
3. Slightly loosen Black Screw (A). Then set the Screwdriver (#1 or #2 Phillips Driver) into the Hole (A). Turn the screwdriver counterclockwise until the FG Head touches the rotor. Then turn it slightly clockwise to the clearance as specified.
4. Tighten Black Screw (A).
5. Reinstall the Main C.B.A.

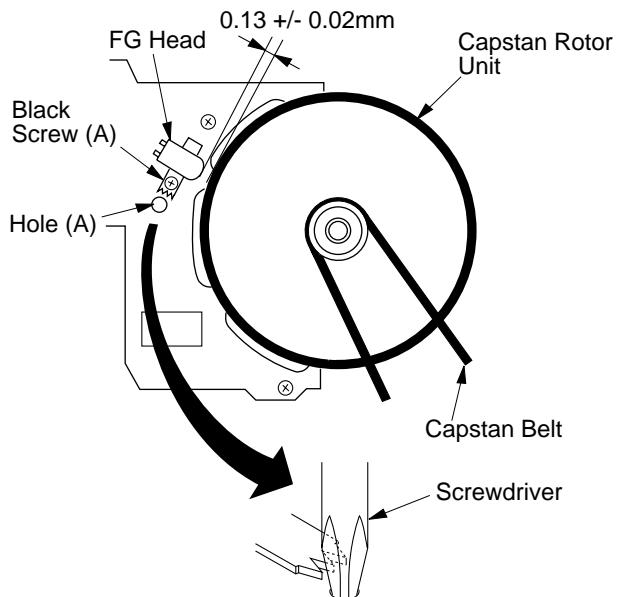


Fig. M5

Note:

Do not touch the outside circumference of the rotor surface with any tool and keep magnetic material away from the rotor magnet (especially metal particles).

Confirmation of Signal Level

- 1) Supply a Video Signal to the Video Input Jack.
- 2) Insert a cassette tape and place the unit in SLP recording mode.
- 3) Connect the oscilloscope to Pin 7 of P2502 on the Capstan Stator Unit.
Confirm that the signal level is greater than 10mVp-p.

P2 AND P3 POST HEIGHT ADJUSTMENT (PRELIMINARY ADJUSTMENT)

Purpose:

To properly align the position of the tape with the Cylinder Lead so that the tape runs with stability.

Symptom of Misadjustment:

- 1) Since the Envelope Waveform Signal cannot be tracked properly, the Playback picture will be poor.
- 2) Since the tape does not run smoothly, the tape will eventually be damaged.
- 3) Tape interchangeability is poor.

Equipment Required:

Post Adjustment Plate (VFKS0010)
Reel Table Height Fixture (VFKS0009)
Post Adjustment Driver (VFK0329)

1. Remove the Cassette Up Ass'y.
2. Position the Post Adjustment Plate over the reels.
3. Place the fixture on the Post Adjustment Plate and zero the fixture (DO NOT use the cut-out portion of the post adjustment plate.)

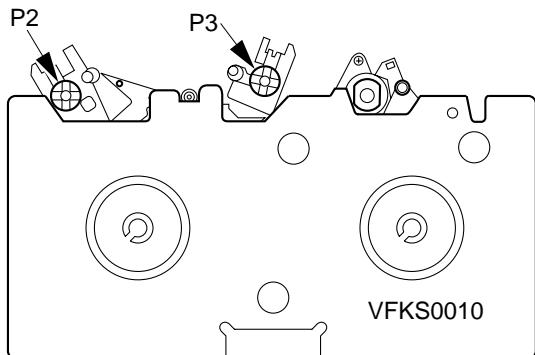


Fig. M6-1

4. Lower each post below the top edge of the Post Adjustment Plate. Then, raise each post until it contacts the foot of the Reel Table Height Fixture. For proper adjustment, the foot of that should be positioned as shown.

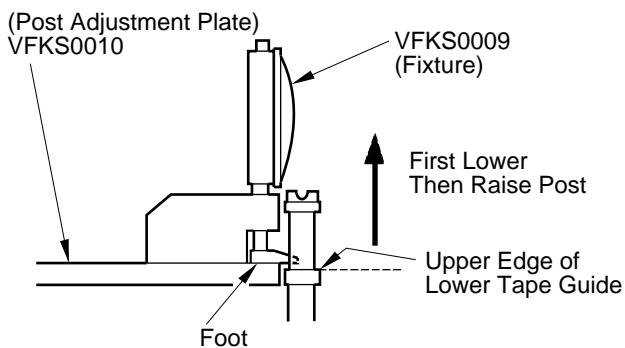


Fig. M6-2

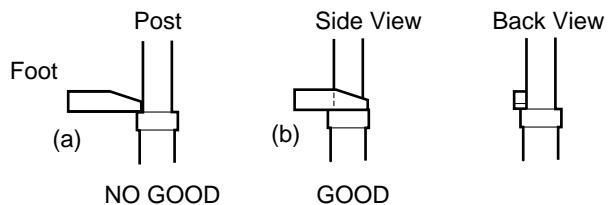


Fig. M6-3

CAUTION:

- 1) Overtightening P2 and P3 posts may cause the threads to strip.
- 2) Upon completion of this procedure, perform the "Envelope Output Adjustment/Confirmation Procedures."

TAPE INTERCHANGEABILITY ADJUSTMENT/CONFIRMATION (FINAL ADJUSTMENT)

Note:

To perform these adjustment/confirmation procedures, set the tracking to the neutral position.

Equipment Required:

Dual Trace Oscilloscope
VHS Alignment Tape (VFMS0003H6)
Post Adjustment Driver (VFK0329)
H-Position Adjustment Driver (VFK0330)

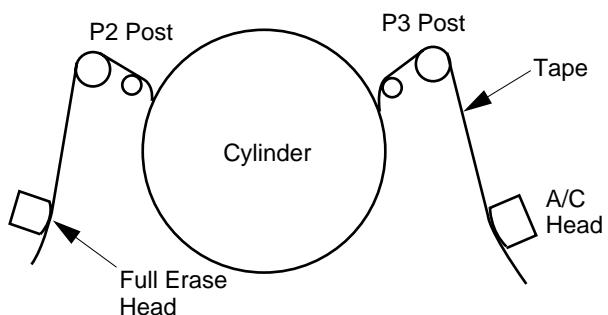


Fig. M7-2

1. ENVELOPE OUTPUT ADJUSTMENT/ CONFIRMATION

Purpose:

To achieve a satisfactory picture and secure precise tracking.

Symptom of Misadjustment:

If the envelope is output poorly, much noise will appear in the picture. Then the tracking will lose precision and the playback picture will be distorted by any slight variation of the tracking control circuit.

Equipment Required:

Post Adjustment Driver (VFK0329)

1. Connect the oscilloscope to TP3002 on the Video Signal Process Section of the Main C.B.A. Use TP6205 as a trigger.
2. Place a jumper between TP6003 and +5V(TP6009) on the System Control Section of the Main C.B.A. to defeat Auto Tracking.
3. Eject the tape and insert it again to access the Neutral Tracking position.
4. Play back the alignment tape.
5. With Post Adjust Driver, adjust P2 and P3 post height so that the envelope waveform ($V_1/V_{\text{max.}}$ is 0.7 or more.) becomes as flat as possible (No envelope drop). If the envelope drop appears on the left-half of the waveform, adjust P2 post height. If the envelope drop appears on the right-half of the waveform, adjust P3 post height.

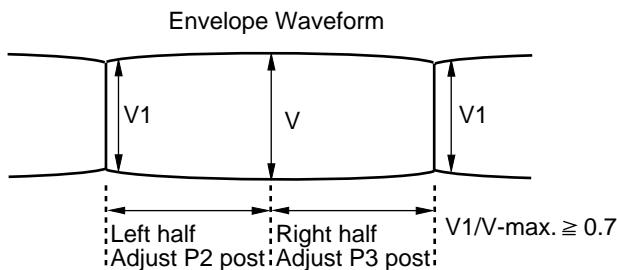


Fig. M7-1

Note:

To confirm adjustment, press the Tracking Control Up or Down button on remote control. Make sure that the envelope waveform remains flat. If not, readjust P2 and/or P3 post heights.

6. After adjustment, confirm that the tape travels without curling at P2 and P3 posts.
7. Remove the jumper after completing the adjustment procedure.

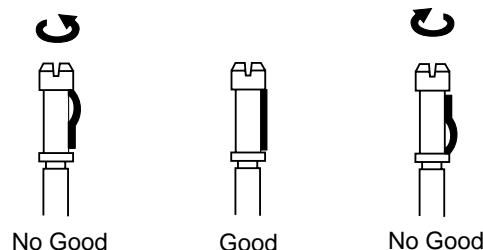


Fig. M7-3

Note:

Overtightening P2 and P3 posts may cause the threads to strip.

2. A/C HEAD TILT CONFIRMATION

Purpose:

To confirm that the tape runs smoothly. In particular, confirm that the tape properly picks up the Audio Signal at the upper part of the head and the Control Signal at the lower part of the head.

Symptom of Misadjustment:

If the tilt of the A/C Head is poorly adjusted, the tape will eventually be damaged. An intermittent Blue screen may be seen in Playback.

1. Play back a T120 cassette tape and check that the tape travels smoothly between the upper and lower guides of the P4 post.
2. If necessary, adjust Black Screw (B) clockwise until the tape begins to curl at the lower edge of the P4 post. Then adjust the screw counterclockwise until the curling is eliminated.

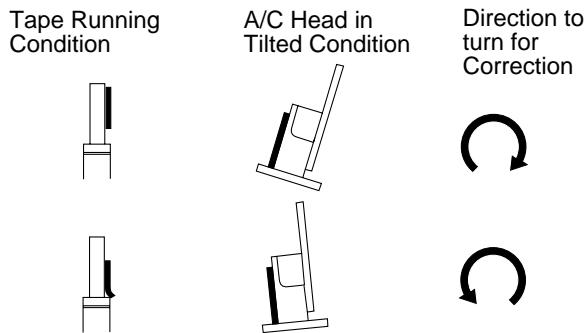


Fig. M8

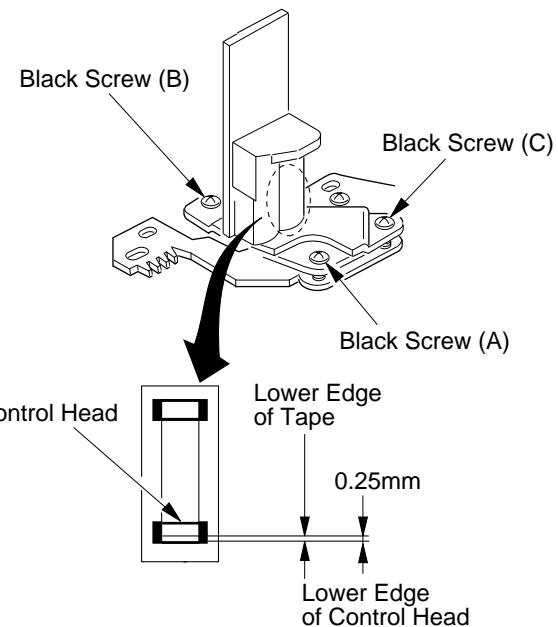


Fig. M9

4. A/C HEAD AZIMUTH ADJUSTMENT

Purpose:

To adjust the position and height of the A/C Head so that it meets the tape tracks properly.

Symptom of Misadjustment:

If the position of the A/C Head is not properly adjusted, the Audio S/N Ratio is poor.

1. Connect the oscilloscope to TP4002 on the Audio Amp Section of the Main C.B.A.
2. Play back the 6kHz Monaural Audio portion of the alignment tape.
3. Adjust Black Screw (C) on the A/C Head base so that the output level is at maximum.

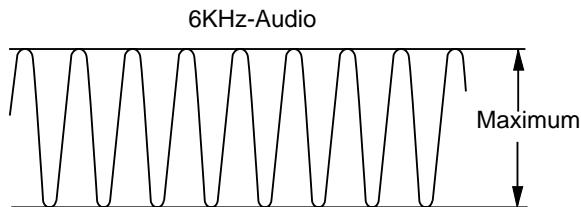


Fig. M10

4. Confirm the height of the A/C Head is proper. If not, readjust Black Screws (A) and (B).

3. A/C HEAD HEIGHT CONFIRMATION

The height of the A/C Head replacement part is preset at the factory.

Purpose:

To be sure the tape runs properly along the Control Head.

Symptom of Misadjustment:

If the control signal is not properly picked up, Servo Operation cannot be achieved. A Blue screen will be seen in Playback.

This confirmation is required when the A/C Head is replaced.

1. Play back a T120 cassette tape and check that the lower edge of the tape runs approximately 0.25 mm above the lower edge of the A/C Head.
2. If necessary, adjust Black Screws (A) and (B) clockwise to lower the tape or counterclockwise to raise.

5. A/C HEAD HORIZONTAL POSITION ADJUSTMENT

Purpose:

To adjust the Horizontal Position of the A/C Head.

Symptom of Misadjustment:

If the Horizontal Position of the A/C Head is not properly adjusted, a maximum envelope cannot be obtained at the Neutral Position of the Tracking Control Circuit.

Place a jumper between TP6003 and +5V(TP6009) on the System Control Section of the Main C.B.A. to defeat Auto Tracking.

1. Eject the tape and insert it again to access the Neutral Tracking position. Connect the oscilloscope to TP3002 on the Video Signal Process Section of the Main C.B.A. Use TP6205 as a trigger.
2. Play back the alignment tape and confirm that the RF envelope appears.
3. If adjustment is required, loosen the Black Screw (D) and tighten it lightly. Set the H-Position Adjustment Driver into the Hole (A). Then slowly turn the fixture either clockwise or counterclockwise so that the envelope is at maximum.
4. Before finding the center of the maximum period of the envelope, rotate the fixture back and forth slightly to confirm the limits on either side of the maximum period.
5. Push the Tracking Control Up Button (on the Remote Control) several times (count the number of times pushed) until the maximum envelope is reduced to 1/2.
6. Reset the tracking to the neutral position by ejecting the tape and reinserting it. Push the Tracking Control Down Button (on the Remote Control) several times (count the number of times pushed) until the maximum envelope is reduced to 1/2.
7. If the number of pushing is not the same, then loosen the Black Screw (D) and set the H-Position Adjustment Driver into the Hole (A) to find the center point. Then repeat the above procedure to determine the center point.
8. Tighten Black Screw (D).
9. Remove the jumper between TP6003 and +5V(TP6009).

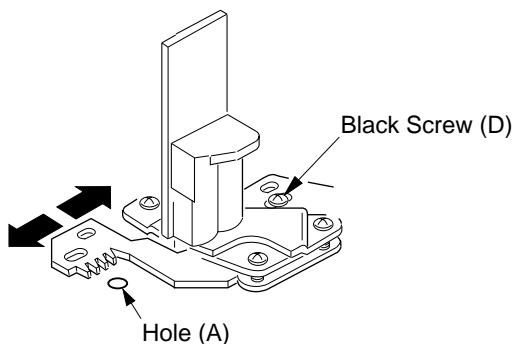


Fig. M11

Note:

Old type of H-Position Adjustment Driver (VFK0136) can be used for this adjustment.

ELECTRICAL ADJUSTMENT PROCEDURES

TEST EQUIPMENT

To do all of these electrical adjustments, the following equipment is required.

1. Dual-Trace Oscilloscope
Voltage Range : 0.001 to 50V/Div.
Frequency Range : DC to 50MHz
Probes : 10:1, 1:1
2. NTSC Video Pattern Generator
3. DVM(Digital Volt Meter)
Voltage Range : 0.01 to 50V
4. Plastic Tip Driver and Non-Metal Driver
5. Isolation Transformer (Variable)
6. VHS Alignment Tape (VFMS0003H6)
7. Degaussing Coil
8. White Pattern Generator
9. White Balance Meter

HOW TO READ THE ADJUSTMENT PROCEDURES

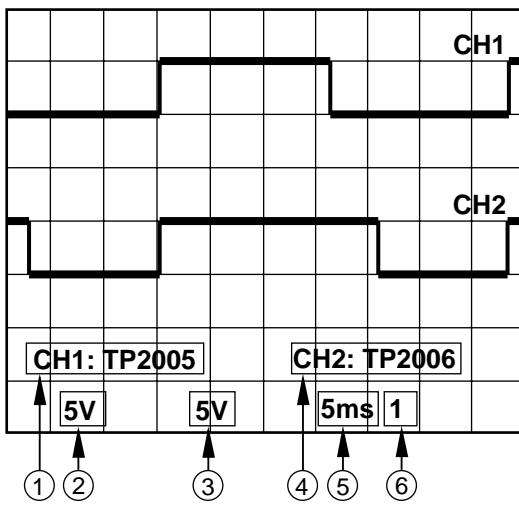


Fig. E1

EVR (Electronic Variable Register) Adjustment with the remote control

This unit has electronic technology using I²C Bus concept. The following control functions are adjusted by using "On Screen Displays" and the remote control instead of adjusting mechanical controls (VR).

Control functions	Range	Default
SUB COLOR	C0 – FF, 00 – 3F	00
SUB TINT	E0 – FF, 00 – 1F	00
SUB BRIGHT	C0 – FF, 00 – 3F	F0
SUB SHARPNESS	E0 – FF, 00 – 1F	00
R CUT -OFF	00 – 7F	1E
G CUT -OFF	00 – FF	3C
B CUT -OFF	00 – FF	3C
G DRIVE	00 – 7F	40
B DRIVE	00 – 7F	40
SUB CONTRAST	00 – 0F	06
H CENTER	00 – 0F	08
V SIZE	00 – 7F	40

Fig. E2-1 Control Functions

HOW TO ENTER EVR ADJUSTMENT MODE

Press and hold STOP, FF, and VOL DOWN button together on the unit over 5 seconds with no cassette inserted. The adjustment overlay will appear.

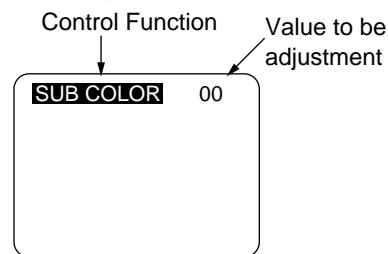


Fig. E2-2

HOW TO ADJUST

1. Press CH UP/DOWN key on the remote control to select control function to be adjusted.

Important Note:

Make a note of the original value of the controls before modifying in case the wrong control is adjusted.

2. Press VOL UP/DOWN key on the remote control so that the shaded area moves to the value.

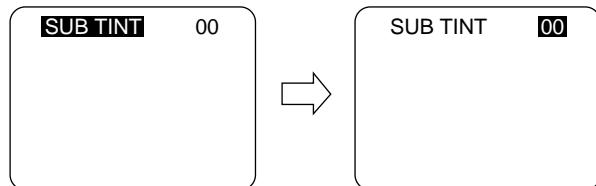


Fig. E2-3

- Press CH UP/DOWN key on the remote control to adjust the value of the selected control.

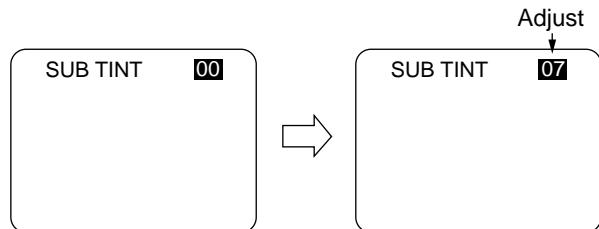


Fig. E2-4

Note:

You can select a desired channel by using the numbered keys on the remote control in EVR adjustment mode.

- Press VOL UP/DOWN key on the remote control so that the shaded area moves to the control function.

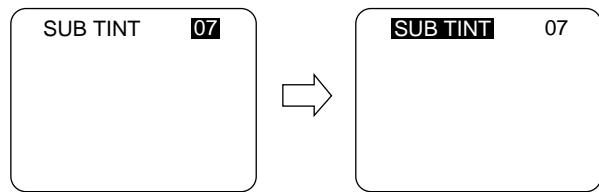


Fig. E2-5

- Press CH UP/DOWN key on the remote control to select a control function for the next adjustment if necessary.

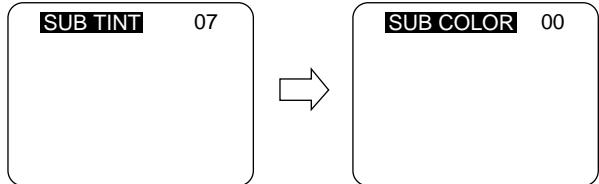


Fig. E2-6

PG SHIFTER ADJUSTMENT

Purpose:

Determine the Video Head Switching Point during Playback.

Symptom of Misadjustment:

May cause Head Switching Noise and/or Vertical Jitter.

Test Point : TP3001 (Main C.B.A.)
TP6205 (Main C.B.A.)
Adjustment : R6201 (Main C.B.A.)
Specification : $T = 6 \pm 1H$ (0.38 \pm 0.06msec.)
Mode : SP Playback
Equipment : Oscilloscope,
VHS Alignment Tape (VFMS0003H6)

- Connect the channel-1 scope probe to TP3001 and the channel-2 scope probe to TP6205. Trigger from channel-2.
- Playback the VHS alignment tape and adjust the R6201 (PG SHIFTER) so that the leading edge of the head switching pulse is placed $6H \pm 1H$ (0.38 \pm 0.06msec.) before the start of the vertical sync pulse.

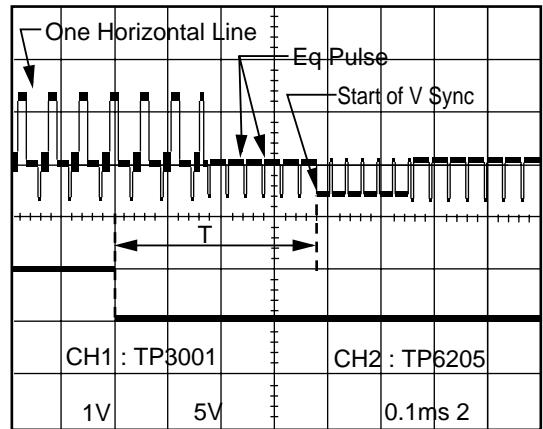


Fig. E3

How to release from EVR adjustment MODE

Press and hold STOP, FF, and VOL DOWN button on the unit together over 5 seconds again or press power off and on.

SEPARATION ADJUSTMENT (Model: I)

Purpose:

To separate the L and R Channels of Stereo Signal.

Symptom of Misadjustment:

The L and R Channels of Stereo Signal will not be separated properly resulting in no stereophonic effect.

Test Point : TP4202 (TV Stereo C.B.A.)

Adjustment : R4901 (TV Stereo C.B.A.)

Specification: minimum level

INPUT : Antenna Input Terminal

MTS (ONLY L CH)

300Hz +/- 5Hz

14% or 7% Modulating

Mode : STOP

Equipment : Oscilloscope, MTS/SAP Signal Generator

1. Connect the RF OUTPUT of the MTS/SAP Signal Generator to the Antenna Input Terminal.
2. Connect the Oscilloscope to TP4202(R CH) on the TV Stereo C.B.A.
3. Adjust R4901 on the TV Stereo C.B.A. so that the signal level is minimum.

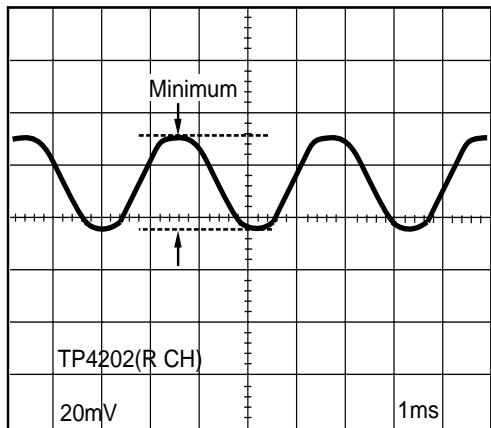


Fig. E4

FM VCO ADJUSTMENT (Model: I)

Purpose:

To set VCO free run frequency.

Symptom of Misadjustment:

Even when stereophony is received, only monaural sound will be output.

Test Point : Pin 4 of P4201,

TP9201 (TV Stereo C.B.A.)


Adjustment : R9206 (TV Stereo C.B.A.)

Specification: 38.10kHz +/- 50Hz


Mode : -----

Equipment : Frequency Counter

1. Disconnect Connector PK2 on the TV Main C.B.A.
2. Connect Pin 4 of P4201 to GND.

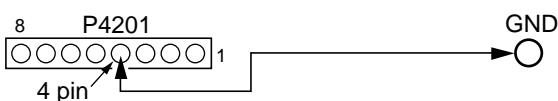

3. Connect TP9201 to GND through a resistor (3.3k ohm). Then, connect Frequency Counter to TP9201.

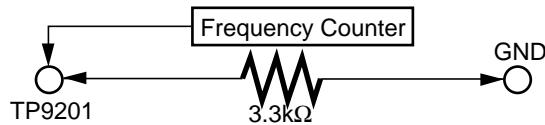

4. Adjust R9206 (FM VCO) so that the frequency is 38.10kHz +/- 50Hz.
5. Connect Connector PK2 after this adjustment is complete.

SUB CONTRAST ADJUSTMENT

Purpose:

To set the optimum sub contrast level.

Symptom of Misadjustment:

The picture is too dark or too light.

Test Point : Pin 5 of PK5 (TV Main C.B.A.) or TP49 (CRT C.B.A.)

Adjustment : SUB CONTRAST (EVR)

Specification: 3.0 +/- 0.1Vp-p

Input : Video Input Jack

Crosshatch Pattern Signal 1Vp-p (75 ohm terminated)

Mode : STOP

Equipment : Oscilloscope

1. Reset the control levels to the factory-set levels using the remote control as follows.
 - 1) Press the MENU key to display the MAIN menu.
 - 2) Select "TV" and then, press the MENU key to display the SET UP TV menu.
 - 3) Press the CH UP/DOWN key to select the VIDEO ADJUST. Then, press the VOL UP key to display the VIDEO ADJUST mode.
 - 4) Press the CH UP/DOWN key to select "NORMAL." Then, press the VOL UP key to return the levels to the factory-settings.
2. Supply a Crosshatch Pattern Signal to the Video Input Jack.
3. Connect the Oscilloscope to Pin 5 of PK5 on the TV Main C.B.A. or TP49 on the CRT C.B.A.
4. Select SUB BRIGHT in EVR adjustment mode. Then, after making a note of the original value, adjust to the minimum (C0).
5. Select SUB CONTRAST in EVR adjustment mode and adjust so that the level A is 3.0 +/- 0.1Vp-p.
6. Select SUB BRIGHT in EVR adjustment mode and reset to the original value.

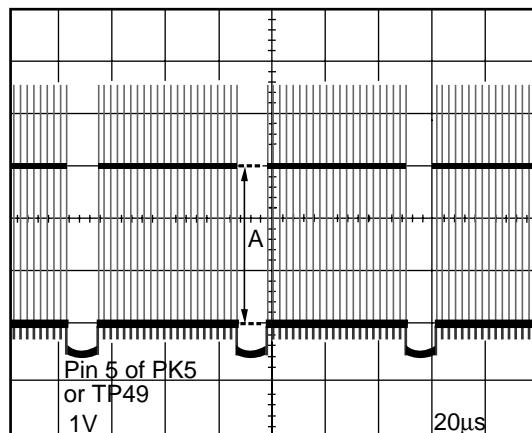


Fig. E5

FOCUS, SCREEN, CUT OFF, DRIVE ADJUSTMENT

Purpose:

To set the optimum Focus and Screen.

Symptom of Misadjustment:

The picture is out of Focus and there will be an improper screen color mix.

Test Point : TP50 (CRT C.B.A.)

Adjustment : FOCUS CONTROL (Flyback Transformer),
SCREEN CONTROL (Flyback Transformer),
SUB BRIGHT (EVR),
B DRIVE (EVR),
R DRIVE (EVR),
B CUT -OFF (EVR),
G CUT -OFF (EVR),
R CUT -OFF (EVR)

Specification: Refer to descriptions below.

Input : Video Input Jack
Mode : STOP
Equipment : Oscilloscope

- Supply a Monoscope Pattern Signal to the Video Input Jack.
- Connect the Oscilloscope to TP50 on the CRT C.B.A. (Use TP47E for GND.)
- Select SUB BRIGHT and move the shaded area to the value in EVR adjustment mode.
- Adjust the FOCUS CONTROL on the Flyback Transformer so that the center of picture is the sharpest.
- Press DISPLAY key (Service Switch) on the remote control for collapse scan.
- Turn the SCREEN CONTROL on the Flyback Transformer fully counterclockwise.
- Adjust SUB BRIGHT in EVR adjustment mode so that the level A becomes 150 ± 5 VDC (Model: A, B, C, D, E) or 170 ± 5 VDC (Model: F, G, H, I).

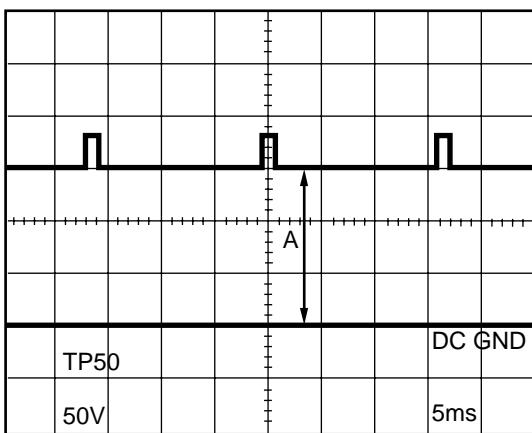


Fig. E6

- Turn the SCREEN CONTROL on the Flyback Transformer clockwise carefully and stop at the point where any color is first observed.
- Select B CUT -OFF, G CUT -OFF or R CUT -OFF in EVR adjustment mode and adjust colors which are not observed in step 8 so that the horizontal line is white.
- Press DISPLAY key on the remote control again to return for full frame scan.
- Select SUB BRIGHT in EVR adjustment mode and adjust so that the picture has adequate brightness.
- Select G DRIVE and B DRIVE in EVR adjustment mode and adjust so that the entire screen is white.

Note:

Before pressing DISPLAY key on the remote control for collapse scan, select the desired control function and move the shaded area to the value.

SUB COLOR/SUB TINT ADJUSTMENT

Purpose :

To set the standard color phase.

Symptom of Misadjustment :

Color phase will be shifted.

Test Point : Pin 5 of PK5 (TV Main C.B.A.) or TP49 (CRT C.B.A.)

Adjustment : SUB COLOR (EVR),
SUB TINT (EVR)

Specification: A = 1.6 ± 0.15 Vp-p

Input : Video Input Jack
Mode : STOP
Equipment : Oscilloscope

- Reset the control levels to the factory-set levels using the remote control. (Refer to Step 1 in the SUB CONTRAST ADJUSTMENT.)
- Supply the Rainbow Color Bar signal to Video Input Jack.
- Select SUB BRIGHT in EVR adjustment mode. Then, after making a note of the original value, adjust to the minimum (C0).
- Connect the Oscilloscope to Pin 5 of PK5 on the TV Main C.B.A. or TP49 on the CRT C.B.A.
- Select SUB TINT in EVR adjustment mode and adjust so that level B is maximum. (level A and C should be equal in amplitude.)
- Select SUB COLOR in EVR adjustment mode and adjust so that the level B is 1.6 ± 0.15 Vp-p.

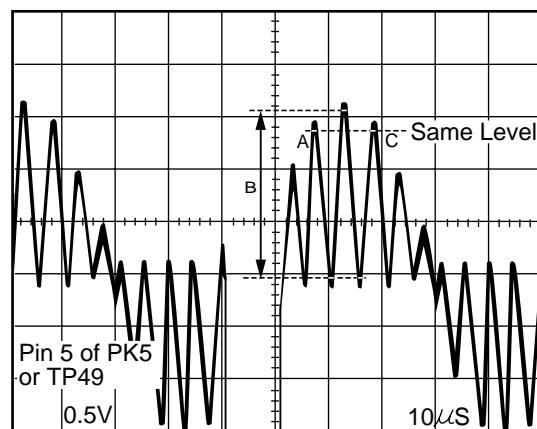


Fig. E7-1

7. Select SUB TINT in EVR adjustment mode and adjust so that level A and B should be equal in amplitude.

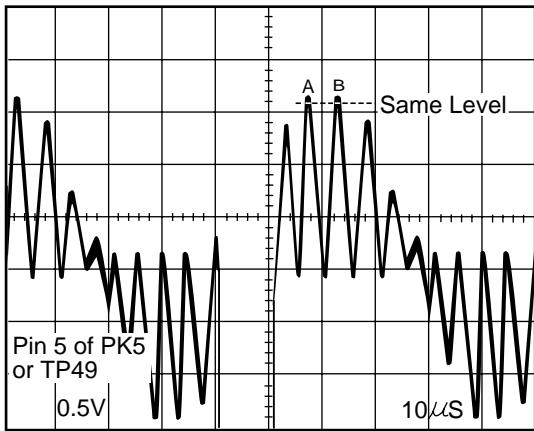


Fig. E7-2

8. Select SUB BRIGHT in EVR adjustment mode and reset to the original value.

PURITY ADJUSTMENT

Purpose:

To set the uniform white over the whole screen.

Symptom of Misadjustment:

The white screen will vary from area to area.

Adjustment : Pair of 4-Pole Convergence Magnet Rings, Pair of 6-Pole Convergence Magnet Rings, Pair of Purity Magnet Rings, Deflection Yoke (CRT Unit)

Specification : Refer to descriptions below.

Input : Video Input Jack
Crosshatch Pattern Signal,
White Pattern Signal

Mode : STOP

Equipment : Oscilloscope, Degaussing Coil

1. Remove the wedges from the CRT.
2. Slide the Deflection Yoke forward to the end of the CRT neck.
(Model: A, B, C, D, E, G, H)
Set the Convergence Yoke as specified.
3. Power the unit "ON" and degauss the CRT by the Degaussing Coil.
4. Supply the Crosshatch Pattern Signal to Video Input Jack.
5. Turn the pair of 4-Pole Convergence Magnet Rings so that B and R at the center of CRT overlap each other.
6. Turn the pair of 6-Pole Convergence Magnet Rings so that B and R which overlapped each other in Step 5 overlap G.
7. Supply a White Pattern Signal to Video Input Jack.
8. Select G CUT -OFF in EVR adjustment mode and adjust it to become to the minimum level. Turn the Pair of Purity Magnet Rings so that the distorted color areas are approximately across from each other.
Slide the Deflection Yoke back slightly (without rotating it) until the distorted color areas disappear from the screen.

9. Supply a Crosshatch Pattern Signal to Video Input Jack again. Confirm that the Center Bar is at the horizontal center line of the CRT and the V-Center Bar is at the vertical center line of the CRT. Then, tighten the Expansion Screw.
10. Press DISPLAY key (Service Switch) on the remote control for collapse scan. Select G CUT -OFF in EVR adjustment mode and Adjust so that the horizontal line is white.
11. Press DISPLAY key on the remote control again to return for full frame scan. Make sure that the entire screen is white. If not, adjust G DRIVE and B DRIVE in EVR adjustment mode.

Note:

Before pressing DISPLAY key on the remote control for collapse scan, select the desired control function and move the shaded area to the value.

(Model: A, B, C, D, E, G, H)

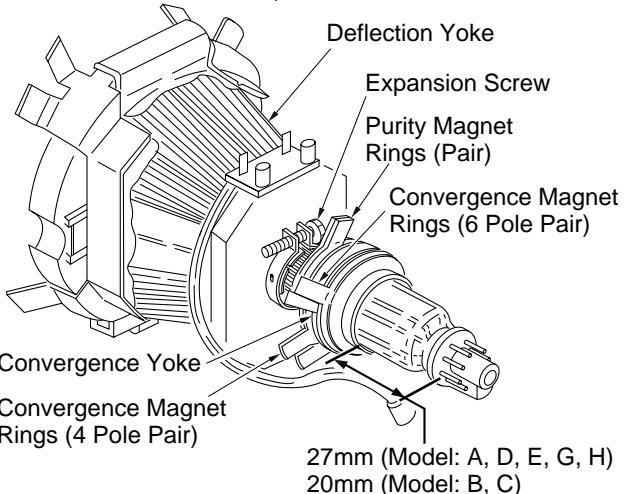


Fig. E8-1

(Model: F, I)

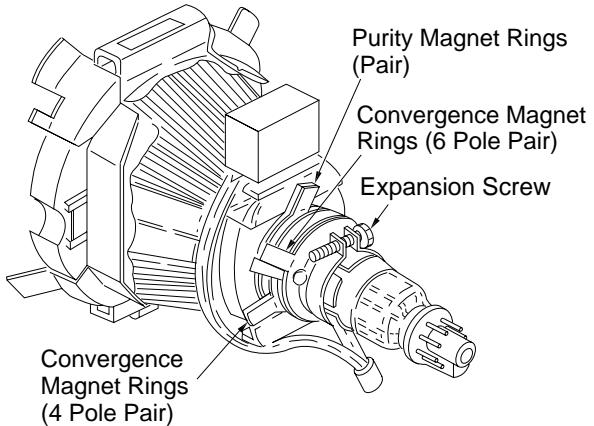


Fig. E8-2

STATIC CENTRAL CONVERGENCE ADJUSTMENT

Purpose:

To set the uniform convergence over the whole screen.

Symptom of Misadjustment:

The convergence on the screen will vary from the center portion to the surrounding edges.

Adjustments : Pair of 4-Pole Convergence Magnet Rings,
Pair of 6-Pole Convergence Magnet Rings

Specification: Refer to descriptions below.

Input : Video Input Jack
Crosshatch Pattern Signal
Mode : STOP
Equipment : Oscilloscope

1. Supply a Crosshatch Pattern Signal to the Video Input Jack.
2. Turn the Pair of 4 - Pole Convergence Magnet Rings so that B and R, at center of CRT, overlap each other.
3. Turn the Pair of 6 - Pole Convergence Magnet Rings so that B and R, that overlapped each other in step 2 overlaps G.

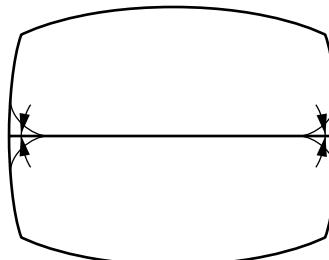


Fig. E9-2

4. Insert three wedges to maintain the correct Crosshatch Pattern Position.

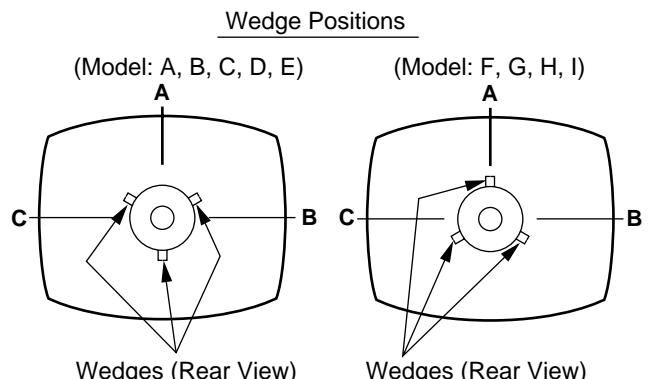


Fig. E9-3

DYNAMIC CONVERGENCE ADJUSTMENT

Purpose:

To set the uniform convergence over the whole screen.

Symptom Misadjustment:

The convergence on the screen will vary at the sides of the CRT.

Adjustment : Deflection Yoke (CRT Unit)

Specification: Refer to descriptions below.

Input : Video Input Jack
Crosshatch Pattern Signal,
White Pattern Signal
Mode : STOP
Equipment : Oscilloscope

1. Supply a Crosshatch Pattern Signal to the Video Input Jack.
2. Hold the Deflection Yoke and wiggle it up and down to produce the correct Crosshatch Pattern position.

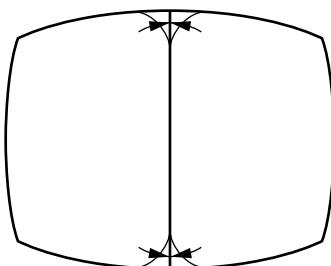


Fig. E9-1

(Confirmation of white)

1. Supply a White Pattern Signal to the Video Input Jack.
2. Confirm that the purity is still correct.
3. If the purity is not acceptable, readjust the purity.
4. (Model: F, G, H, I)
If the convergence error is more than 1.5mm (0.06 inch) from the green dot at each corner, adjust the convergence at that corner with a Permalloy Magnetic Strip. Insert a permalloy strip into the gap between the Deflection Yoke and the CRT along a diagonal line of the CRT bell. Adjust it for the best possible convergence. Use one Permalloy Magnetic Strip in each corner if necessary.
Permalloy Magnetic Strip Part Number (TSM10032-2).

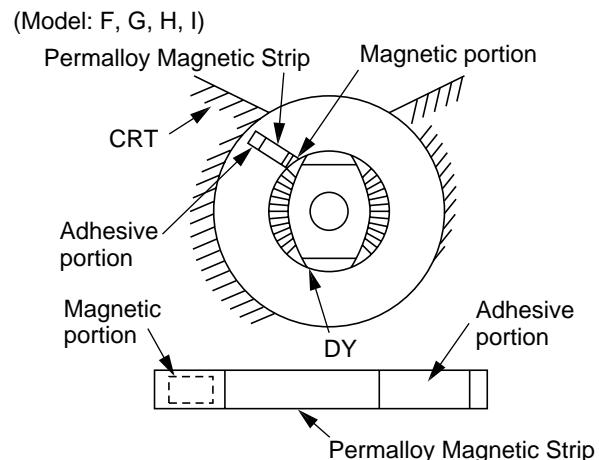


Fig. E9-4

V. HEIGHT/H. POSITION ADJUSTMENT

Purpose :

To set the standard vertical and horizontal picture size.

Symptom of Misadjustment :

The picture size is on the vertical and horizontal axis is abnormal.

**Adjustment : V SIZE (EVR),
H CENTER (EVR)**

Specification: Refer to below.

Mode	:	STOP
Input	:	Video Input Jack Monoscope Pattern Signal
Mode	:	STOP

(Model: A, B, C, D, E)

1. Supply a Monoscope Pattern Signal to the Video Input Jack.
2. Select V SIZE in EVR adjustment mode and adjust so that the top 3rd line is just in view.
3. Confirm that the 10th dotted line is in view and that the 11th line is out of view.
If the lines are not positioned correctly, readjust V SIZE so that the top 3rd line is within +/-2mm from the top edge of the screen. Confirm that the 10th dotted line is in view and that the 11th line is out of view.
4. Select H CENTER in EVR adjustment mode and adjust so that A is approximately equal to width B.

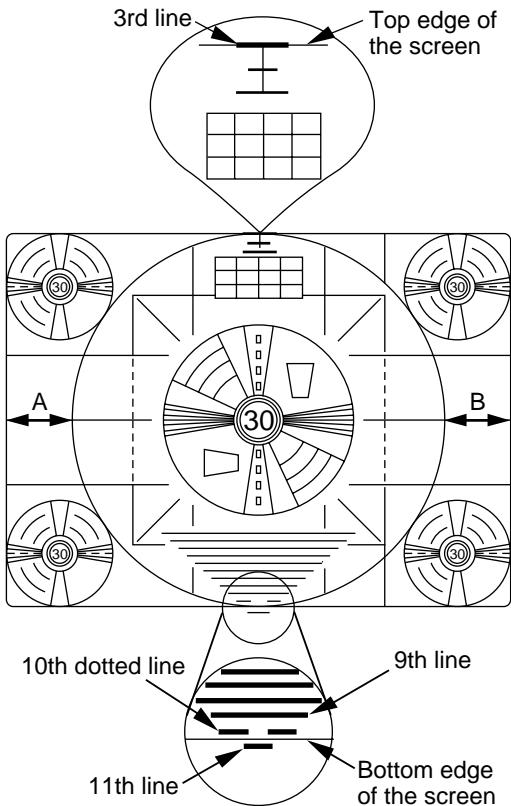


Fig. E10-1

(Model: F, G, H, I)

1. Supply a Monoscope Pattern Signal to the Video Input Jack.
2. Select V SIZE in EVR adjustment mode and adjust so that the top 4th line is just in view.
3. Confirm that the bottom 3rd line is in view and that the bottom 4th line is out of view.
If the lines are not positioned correctly, readjust V SIZE so that the 11th line is just in view.
4. Select H CENTER in EVR adjustment mode and adjust so that A is approximately equal to width B.

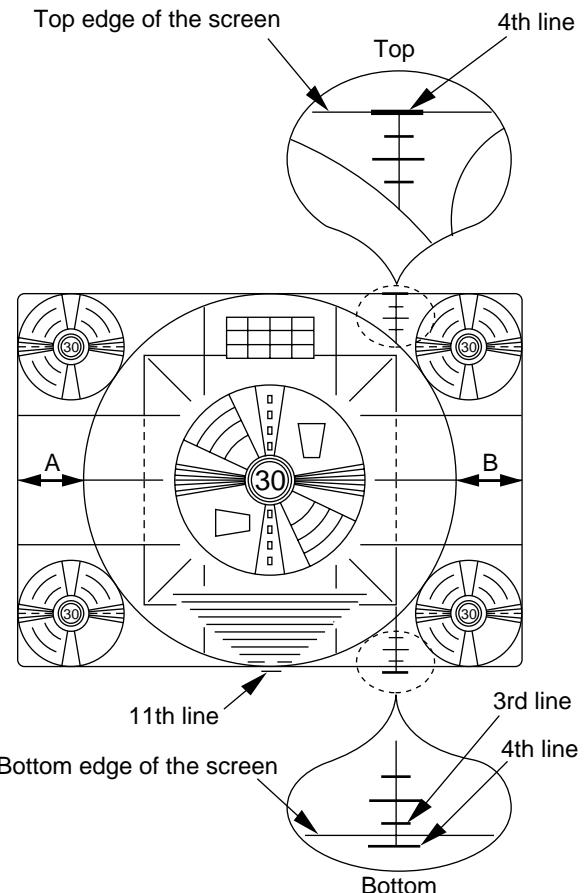


Fig. E10-2

WHITE BALANCE ADJUSTMENT

Purpose:

To set the standard white level for each color temperature.

Symptom of Misadjustment :

White becomes bluish or reddish.

Adjustment : G DRIVE (EVR),
B DRIVE (EVR),
R CUT -OFF (EVR),
G CUT -OFF (EVR),
B CUT -OFF (EVR)

Specification: Refer to descriptions below.

Input : Video Input Jack
Mode : STOP
Equipment : Oscilloscope, White Balance Meter

Method 1

1. Supply a White Pattern Signal to the Video Input Jack.
2. Press DISPLAY key (Service Switch) on the remote control for collapse scan.
3. Turn the SCREEN CONTROL on Flyback Transformer fully counterclockwise.
4. Turn the SCREEN CONTROL on the Flyback Transformer clockwise carefully and stop at the point where any color is first observed.
5. Select B CUT -OFF, G CUT -OFF or R CUT -OFF in EVR adjustment mode and adjust colors which are not observed in step 4 so that the horizontal line is white.
6. Press DISPLAY key on the remote control again to return for full frame scan.
7. Place the photo sensor foot for "JUST FIT" to the CRT.
8. Select SUB BRIGHT in EVR adjustment mode and adjust so that the White Balance Meter (High-Light White, G Meter) is 80 micro A (Model: A, B, C, D, E) or 40 micro A (Model: F, G, H, I).
9. Select G DRIVE and B DRIVE in EVR adjustment mode and adjust so that the White Balance Meter (both G and B Meters) is 0 micro A.
10. Select SUB BRIGHT in EVR adjustment mode and adjust so that the White Balance Meter (CUT-OFF White, R Meter) is 50 micro A.
11. Select G CUT -OFF and B CUT -OFF in EVR adjustment mode and adjust so that the White Balance Meter (both G and B Meter) is 0 micro A.
12. Repeat the step 9 and 10 until both G and B read 0 micro A in the High-Light and Low-Light Modes.

Note:

Before pressing DISPLAY key on the remote control for collapse scan, select the desired control function and move the shaded area to the value.

Method 2 (Alternative to Method 1)

1. Supply a White Pattern Signal to the Video Input Jack.
 2. Select G DRIVE and B DRIVE in EVR adjustment mode and adjust so that the entire screen is white.
 3. Select SUB BRIGHT in EVR adjustment mode. Then, after making a note of the original value, adjust to the minimum (C0).
 4. Select B CUT -OFF, G CUT -OFF or R CUT -OFF in EVR adjustment mode and adjust colors which are not observed so that the entire screen is white.
 5. Select SUB BRIGHT in EVR adjustment mode and set it and confirm that the screen is tracking the White Pattern properly.
- Repeat the above steps 2 to 4 until the screen is properly tracking the White Pattern.

SUB BRIGHTNESS ADJUSTMENT

Purpose :

To set the optimum brightness level.

Symptom of Misadjustment :

The picture is too white or too black.

Note:

Perform this adjustment in a darkened room.

Adjustment : SUB BRIGHT (EVR)


Specification: Refer to descriptions below.

Mode : STOP


1. Reset the control levels to the factory-set levels using the remote control. (Refer to Step 1 in the SUB CONTRAST ADJUSTMENT.)
2. Do not input any signal to the unit.
3. Set INPUT SELECT item to LINE in SET UP TV menu to display black screen.
4. Select SUB BRIGHT in EVR adjustment mode, and adjust so that the black screen starts to turn grey (lighting only).

TEST POINTS AND CONTROL LOCATION


Main C.B.A. (Model: A ,B, C, D, E)

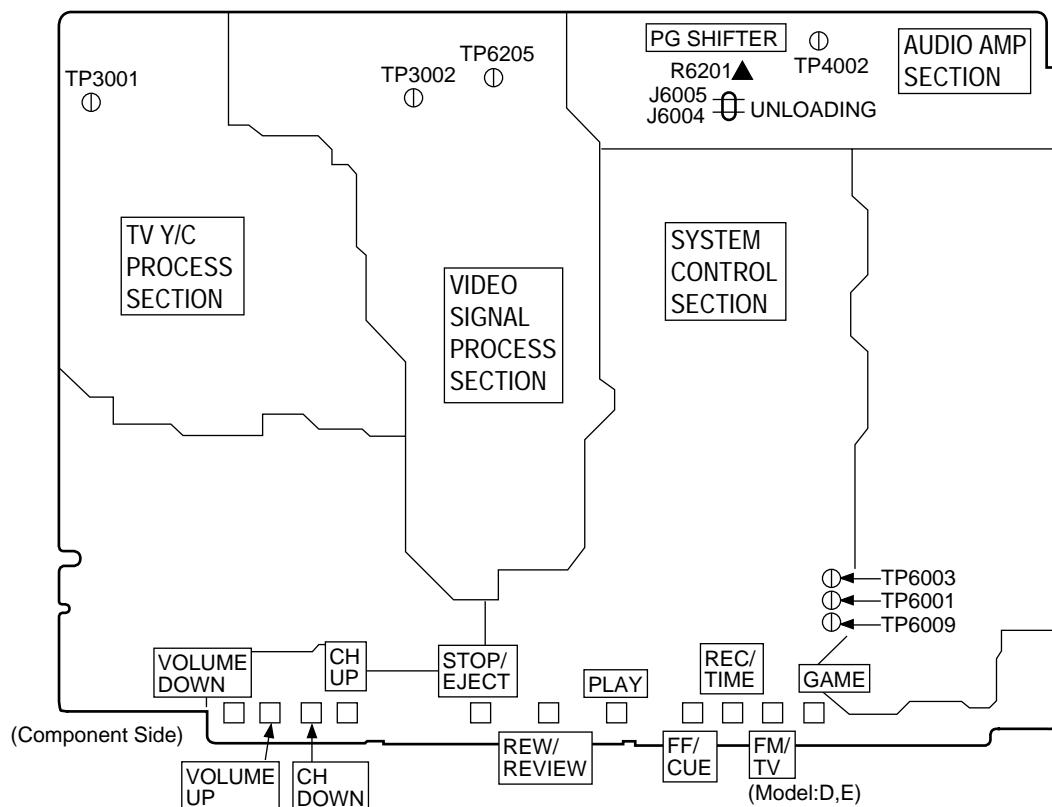

CRT C.B.A.

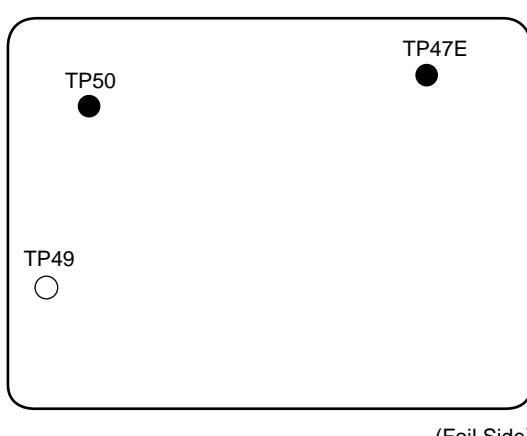

TV Stereo C.B.A. (Model: I)

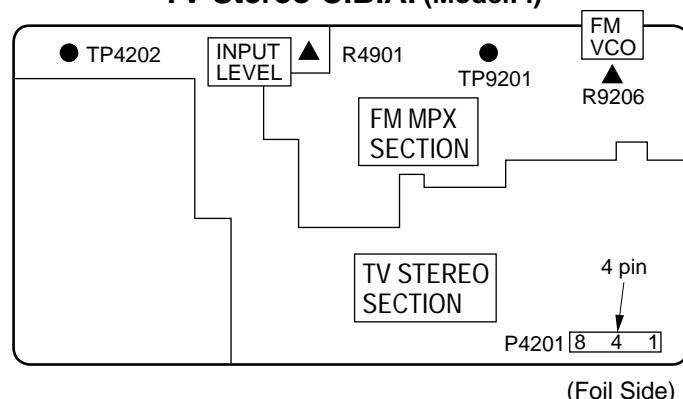


Test Point Information


- Test Point with a Test Pin.
- ◎ Test Point with a jumper wire across a hole in the P.C.B.
- Test Point with no Test Pin.

Function of important Test Points on Main C.B.A.	
TP3001	Video signal
TP3002	REC/PB video envelope signal
TP4002	Normal Audio signal
TP6001	Service Test Point (inhibit sensors)
TP6003	defeat auto tracking function (connect to +5V(TP6009))
TP6009	+5V
TP6205	Head SW.

Main C.B.A. (Model: F, G, H, I)

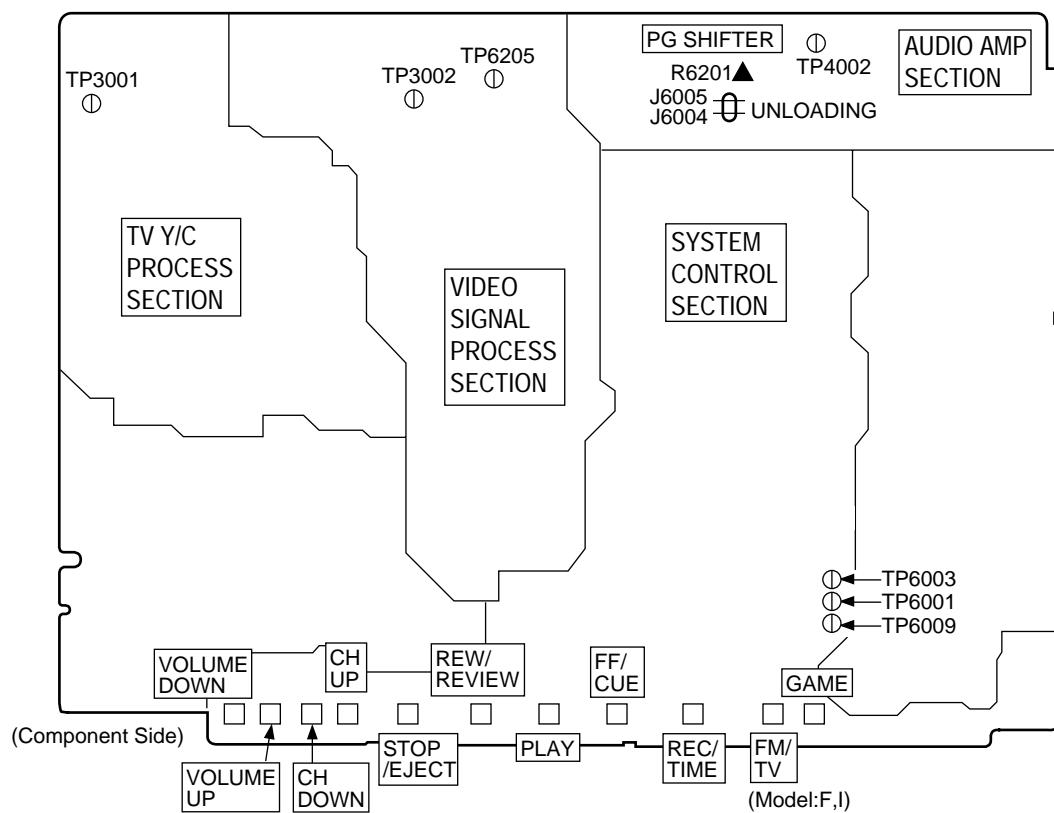

TV Main C.B.A.

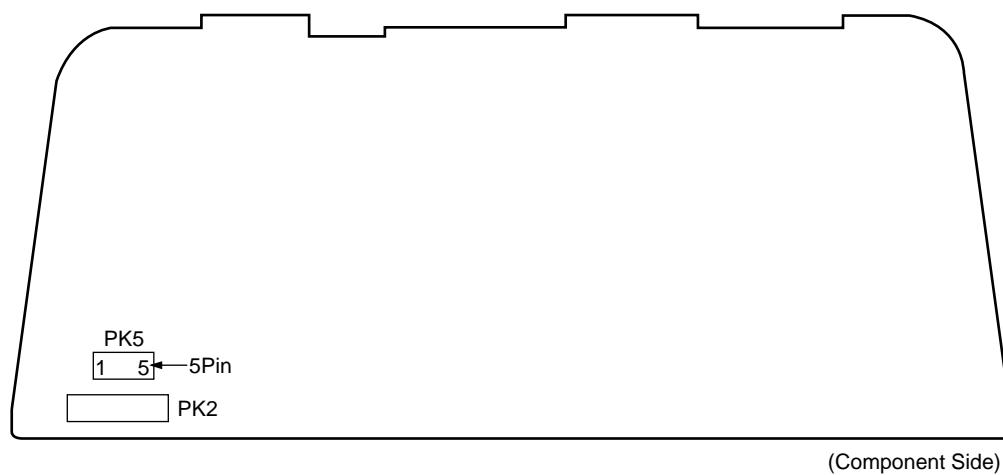

SCHEMATIC DIAGRAMS

SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES

Important safety notice

Components identified by the sign  have special characteristics important for safety. When replacing any of these components. Use only the specified parts.

Replacement parts

1. Do not use the part number shown on this drawing for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since this drawing was prepared.
2. To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list section of the service manual.
3. Parts different in shape or size may be used.
However, only interchangeable parts will be supplied as service replacement parts.

Test point information

-  : Test point with a jumper wire across a hole in P.C.B.
-  : Test point with a component lead on the foil side.
-  : Test point with no test pin.
-  : Test point with a test pin.

How to read Schematic and C.B.A. Diagrams

1. The Mark "■" indicates leaded component.

Example: ■ R1002

2. Voltage Measurement

- a. Color bar signal in SP mode.
- b. ---: Unmeasurable or not necessary to measure.

3. Indication for Zener Voltage of Zener Diodes

The Zener Voltage of Zener Diodes are indicated as such on Schematic Diagrams.

Example:
(6.2V).....Zener Voltage

4. How to identify Connectors on Schematic Diagrams


Each connector is labeled with a Connector No. and Pin No. Indicating what it is connected to, in other words, its counter part.

Connections between large P.C.B.s and small circuit boards are illustrated on the large P.C.B. Schematics.

Use the interconnection schematic diagram to find the connection between associated connectors.


Example:

The connections between C.B.A.s are as shown below.

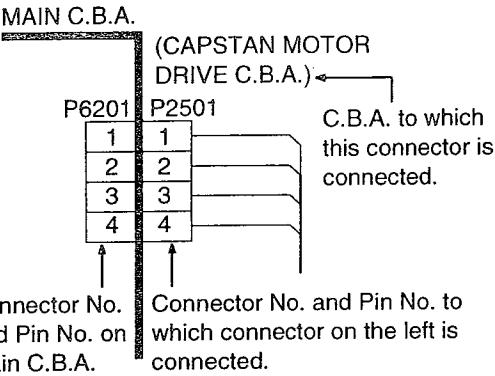

5. Parts enclosed in dashed lines marked "Z" are not used in any models included in this service manual.

Example:

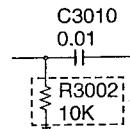

Comparison chart of models & marks used in Schematic and C.B.A. Diagrams


MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not used in any models	Z

Note : Refer to item 5 for mark "Z".

MAIN II (SIGNAL PROCESS/OSD/AUDIO AMP) SCHEMATIC DIAGRAM


NOTE:

FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOT
REFER TO BEGINNING OF SCHEMATIC SECTION.

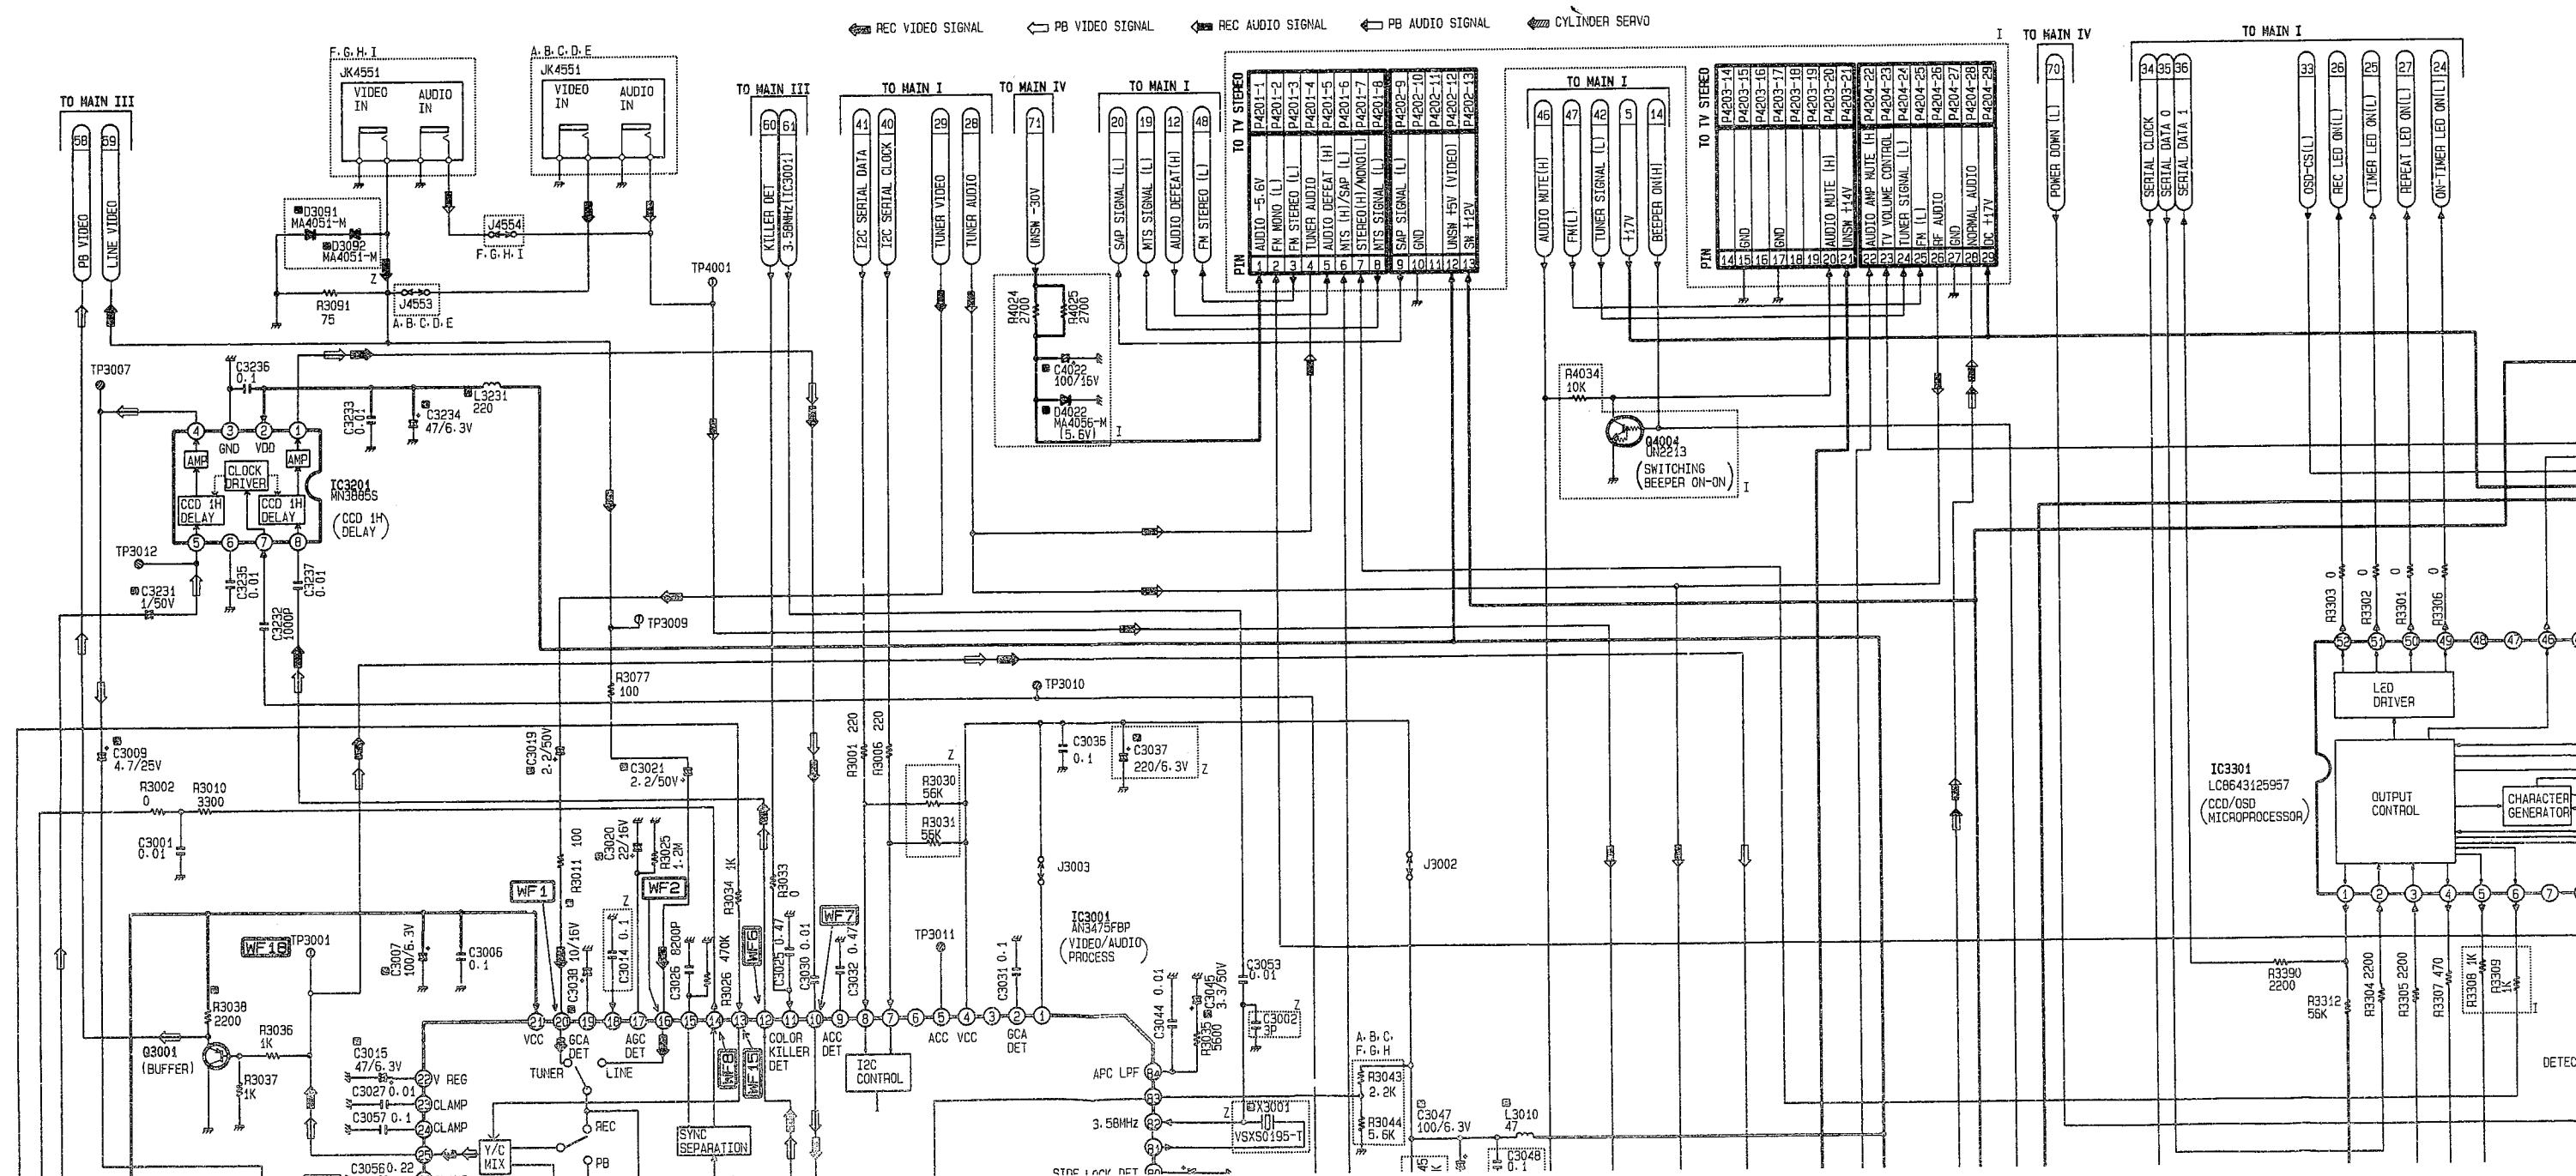

IC3001 VIDEO/AUDIO PROCESS IC-BLOCK DIAGRAM, AN3475FBP


REC VIDEO SIGNAL PB VIDEO SIGNAL REC AUDIO SIGNAL PB AUDIO SIGNAL

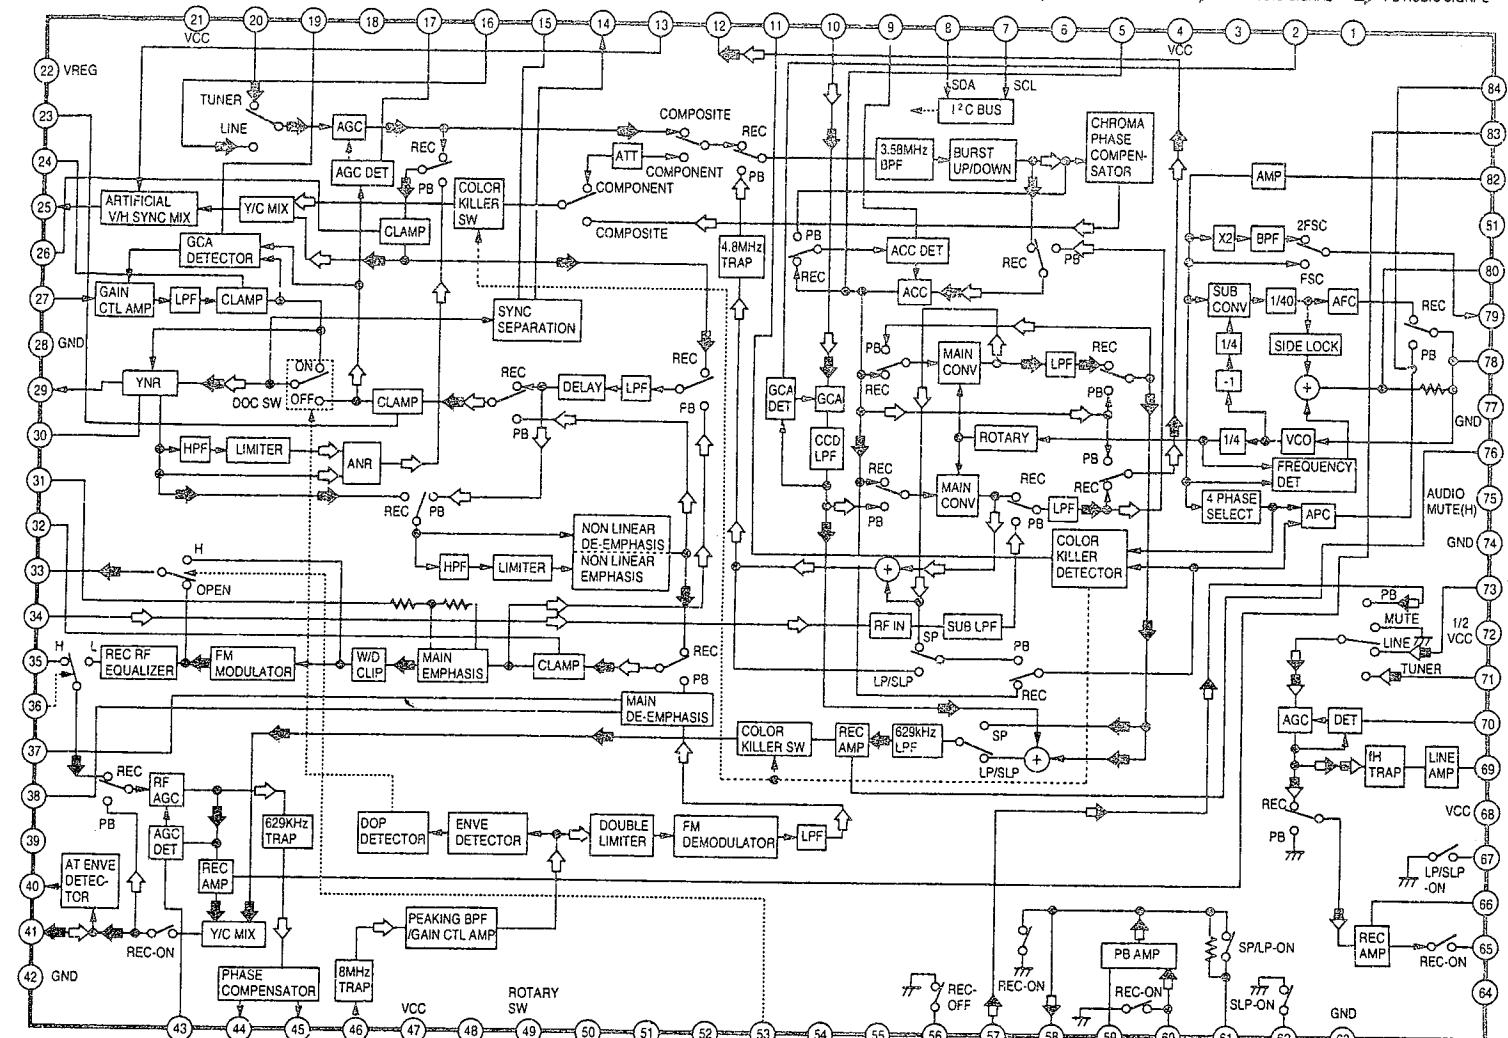

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z

OR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

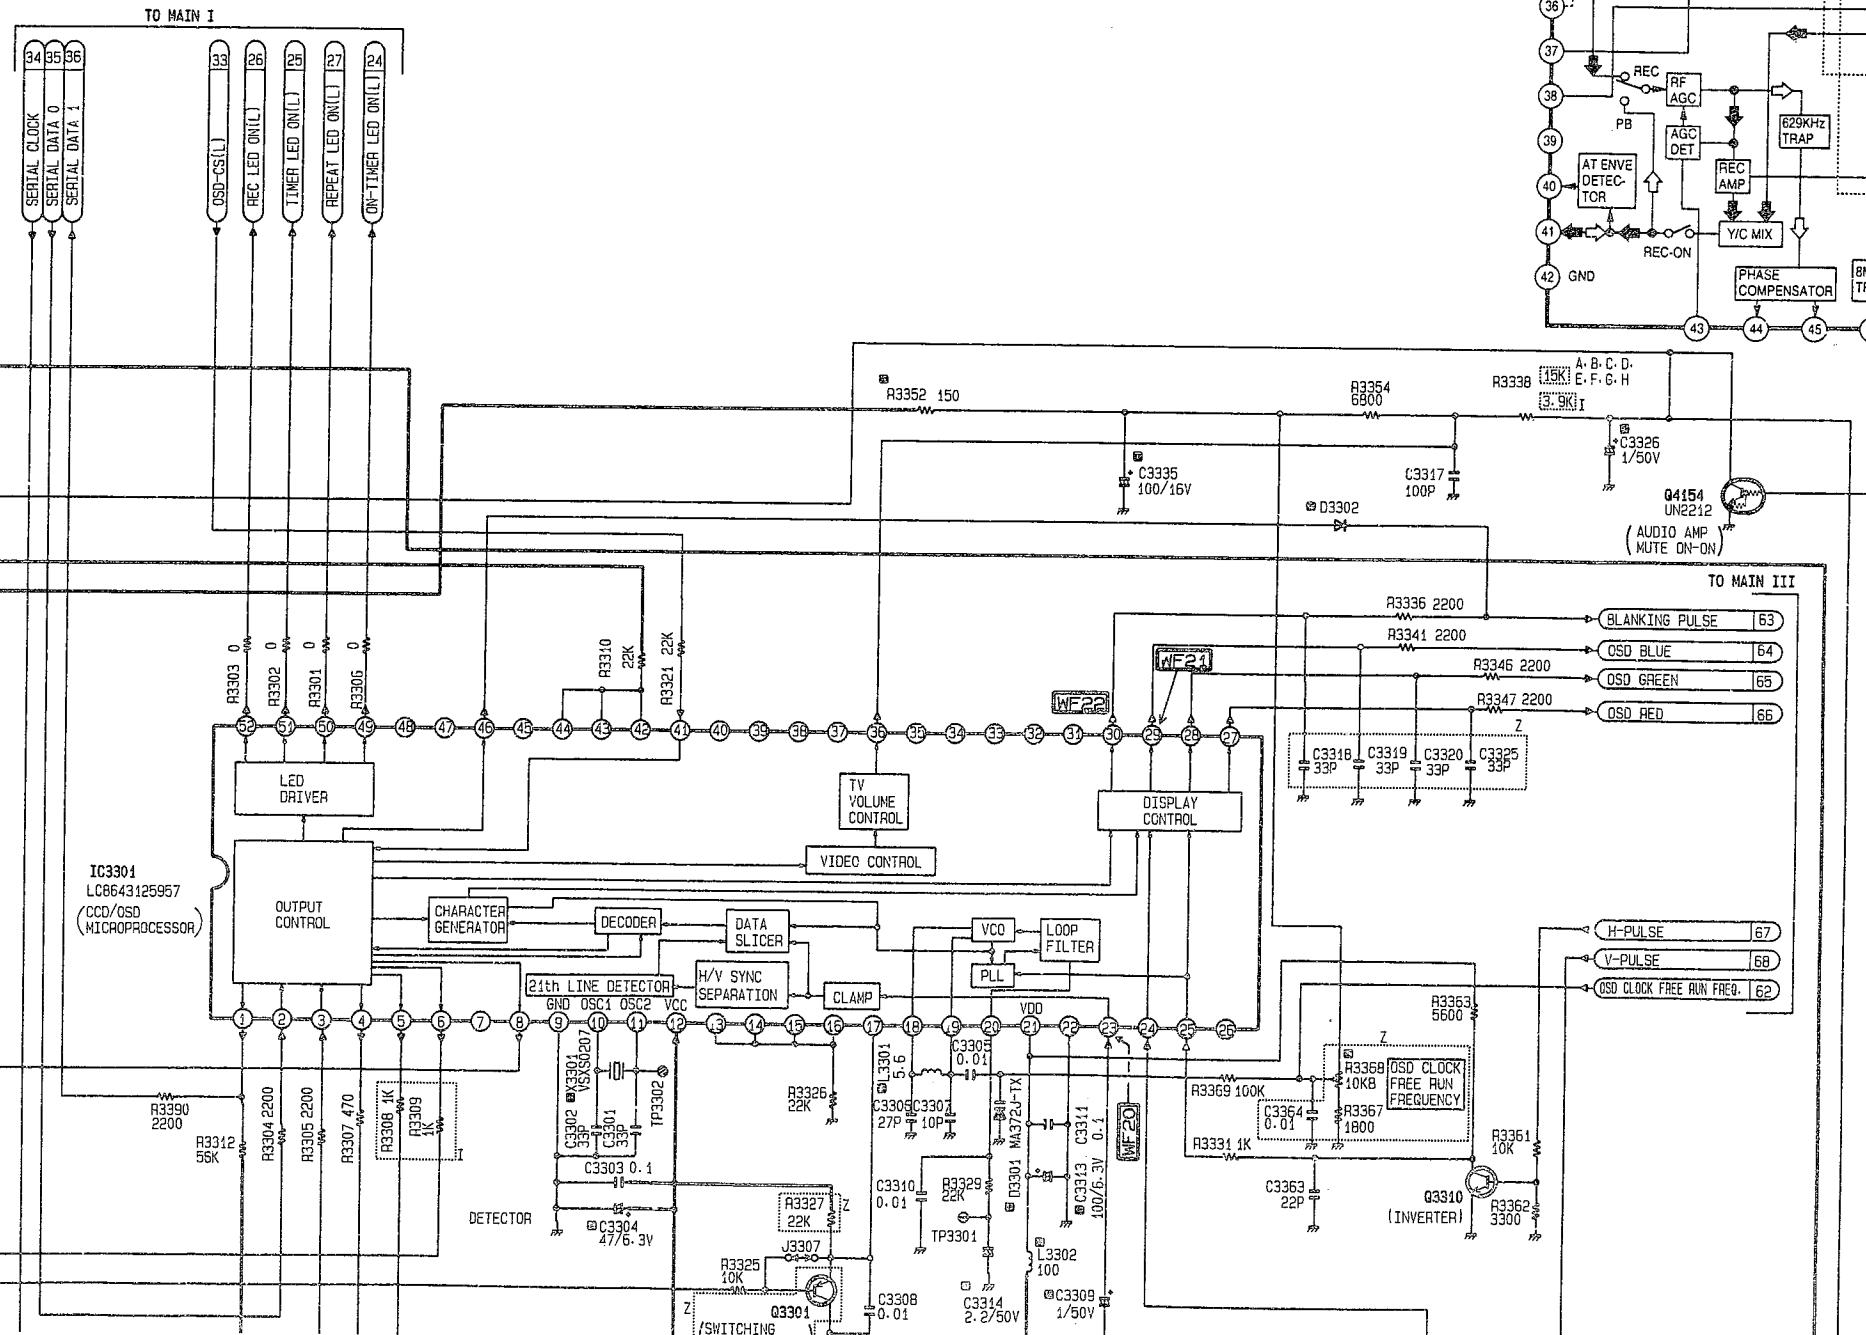

MAIN II VOLTAGE CHART


MODE	PIN NO.	REC	PLAY	MODE	PIN NO.	REC	PLAY	MODE	PIN NO.	REC	PLAY	
IC3001	1	5.1	5.1	IC3201	1	3.4	3.4	Q3311	E	1.7	1.7	
	2	3.3	3.3		2	5.1	5.1		C	0	0	
	3	---	---		3	0	0		B	1.0	1.0	
	4	5.1	5.1		4	3.2	3.2	Q3314	E1	1.5	1.5	
	5	4.3	4.3		5	2.9	3.4		E2	1.5	1.5	
	6	---	---		6	-2.7	-2.7		C1	5.1	5.1	
	7	4.2	4.2		7	2.1	2.1		C2	1.7	1.7	
	8	4.0	4.0		8	3.0	3.0		B1	2.1	2.1	
	9	2.2	2.2		10	4.2	4.2		B2	1.9	1.9	
	10	2.8	2.8		11	0.8	0.8		Q3315	E	1.7	1.7
	11	0.8	0.8		12	2.8	2.8		C	5.0	5.0	
	13	0.4	0.4		13	0	0		B	5.1	5.1	
	14	0.5	0.5		14	0	0	Q4001	E	5.1	5.1	
	15	1.0	1.0		15	3.1	3.9		C	-20.2	5.1	
	16	3.1	3.9		16	2.4	2.4		B	5.1	4.3	
	17	2.3	1.8		17	5.1	5.1	Q4002	E	-21.0	0	
	18	3.1	3.1		18	0	0		C	0	0	
	19	2.6	2.6		19	2.6	2.6		B	-14.1	0	
	20	3.1	3.4		20	5.1	5.1	Q4003	E	0.6	0.6	
	21	5.1	5.1		21	2.0	2.0		C	0.6	0.6	
	22	2.0	2.0		22	0.6	0.6		B	0	0	
	23	2.5	2.5		23	0.6	0.6					


STEREO AMP SCHEMATIC DIAGRAM (I)

 REC AUDIO SIGNAL PB AUDIO SIGNAL

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN  HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

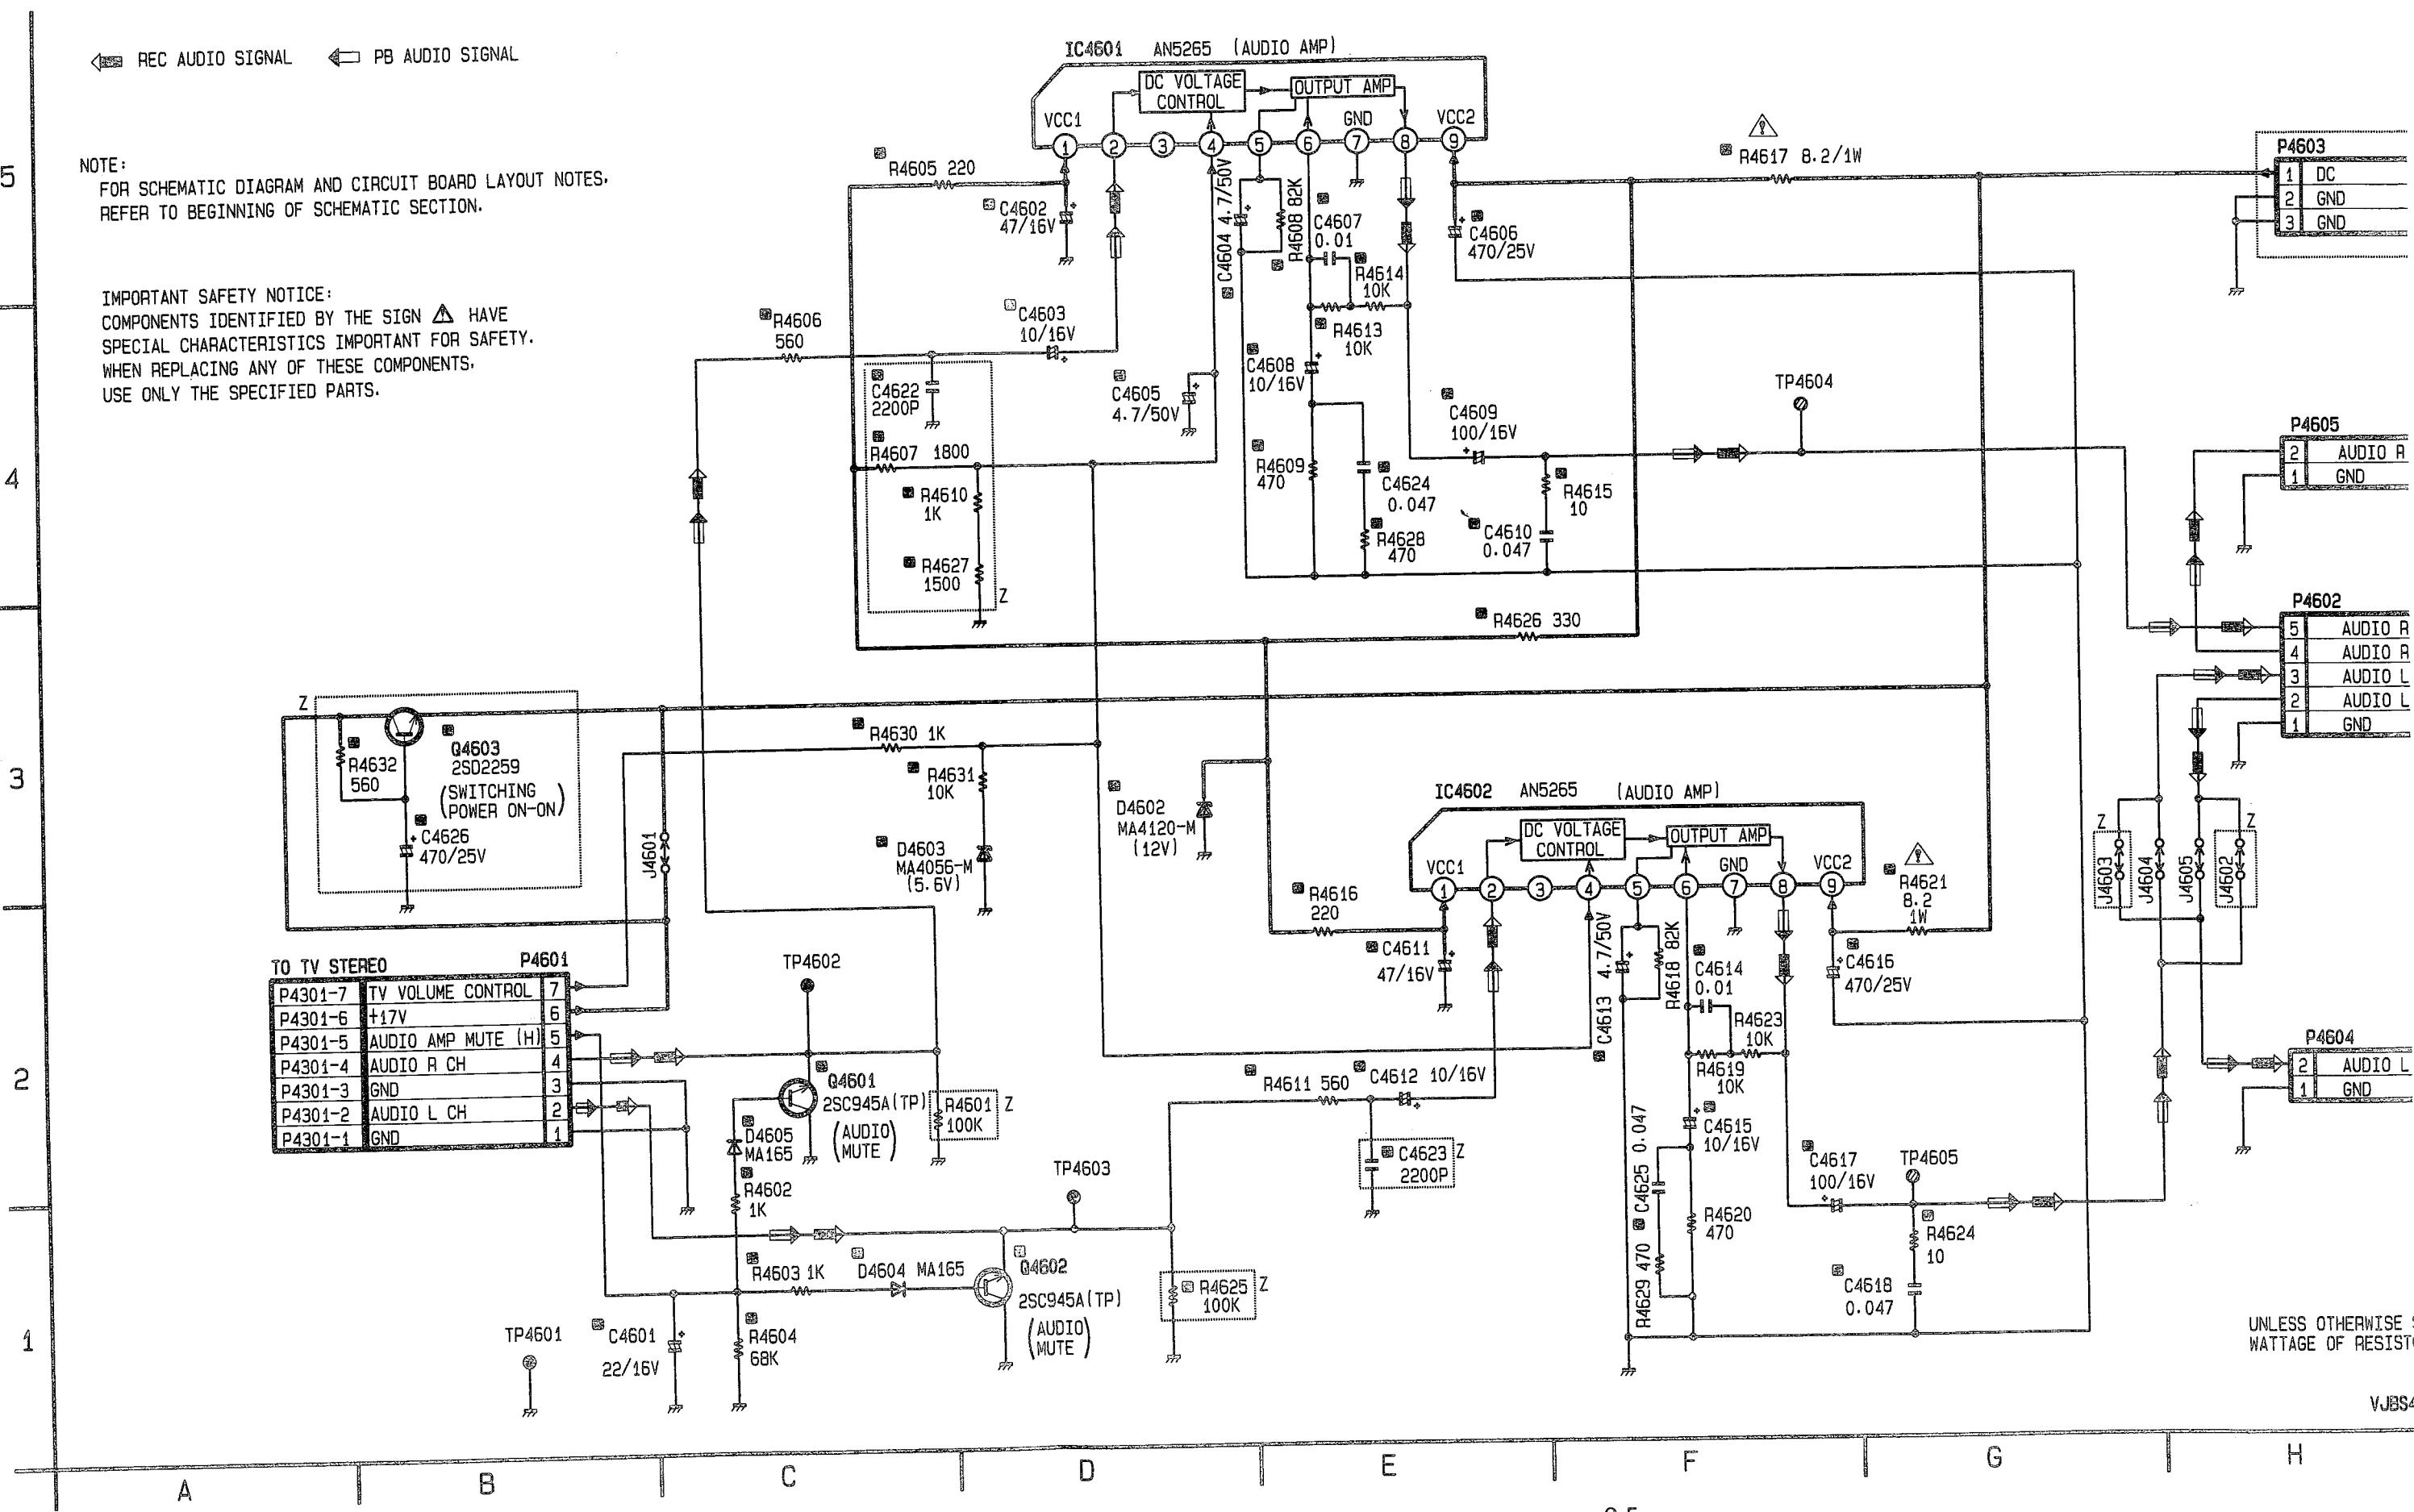

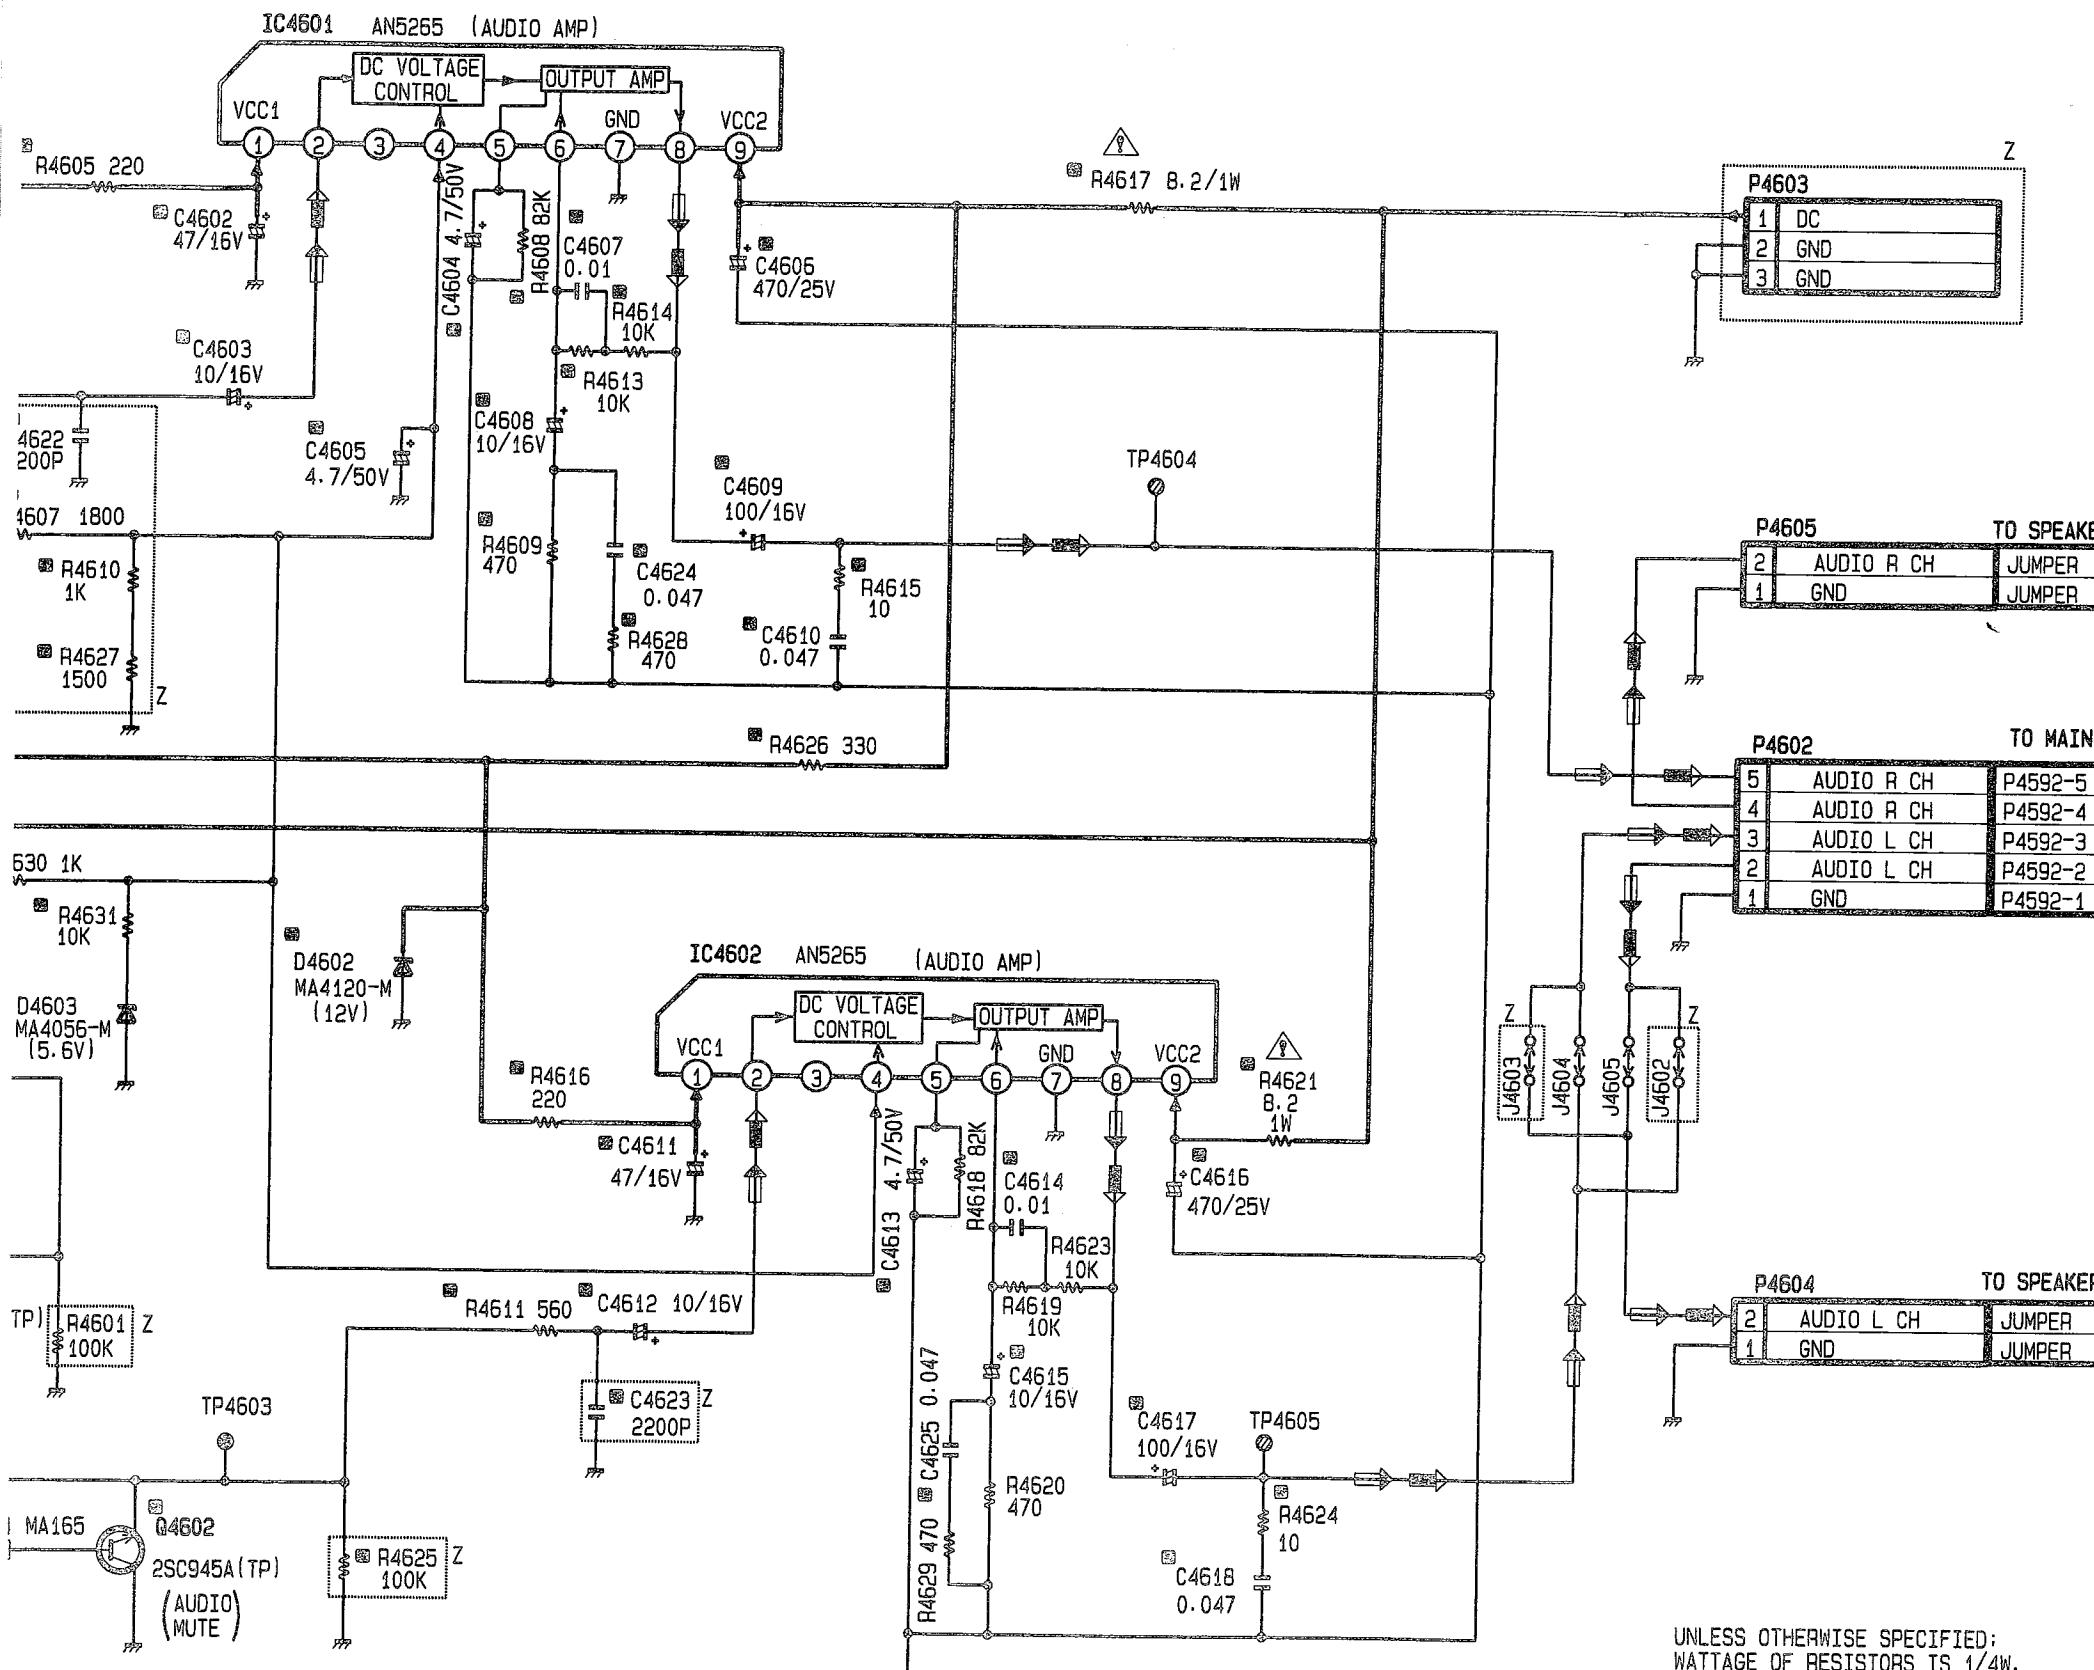

STEREO AMP
VOLTAGE CHART


MODE PIN NO.	REC	PLAY
IC4601		
1	9.8	9.8
2	2.6	2.6
3	---	---
4	2.5	2.5
5	6.8	6.8
6	6.9	6.9
7	0	0
8	7.1	7.1
9	16.1	16.1
IC4602		
1	9.8	9.8
2	2.6	2.6
3	---	---
4	2.5	2.5
5	6.8	6.8
6	6.9	6.9
7	0	0
8	7.1	7.1
9	16.1	16.1
Q4601		
E	0	0
C	0	0
B	0	0
Q4602		
E	0	0
C	0	0
B	0	0
TP4601	0	0
TP4602	0	0
TP4603	0	0
TP4604	6.2	6.2
TP4605	6.2	6.2

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z

MAIN I (POWER SUPPLY/SYSTEM CONTROL/SERVO) SCHEMATIC DIAGRAM

NOTE:
FOR SCHEMATIC DIAGRAM AN
REFER TO BEGINNING OF SC

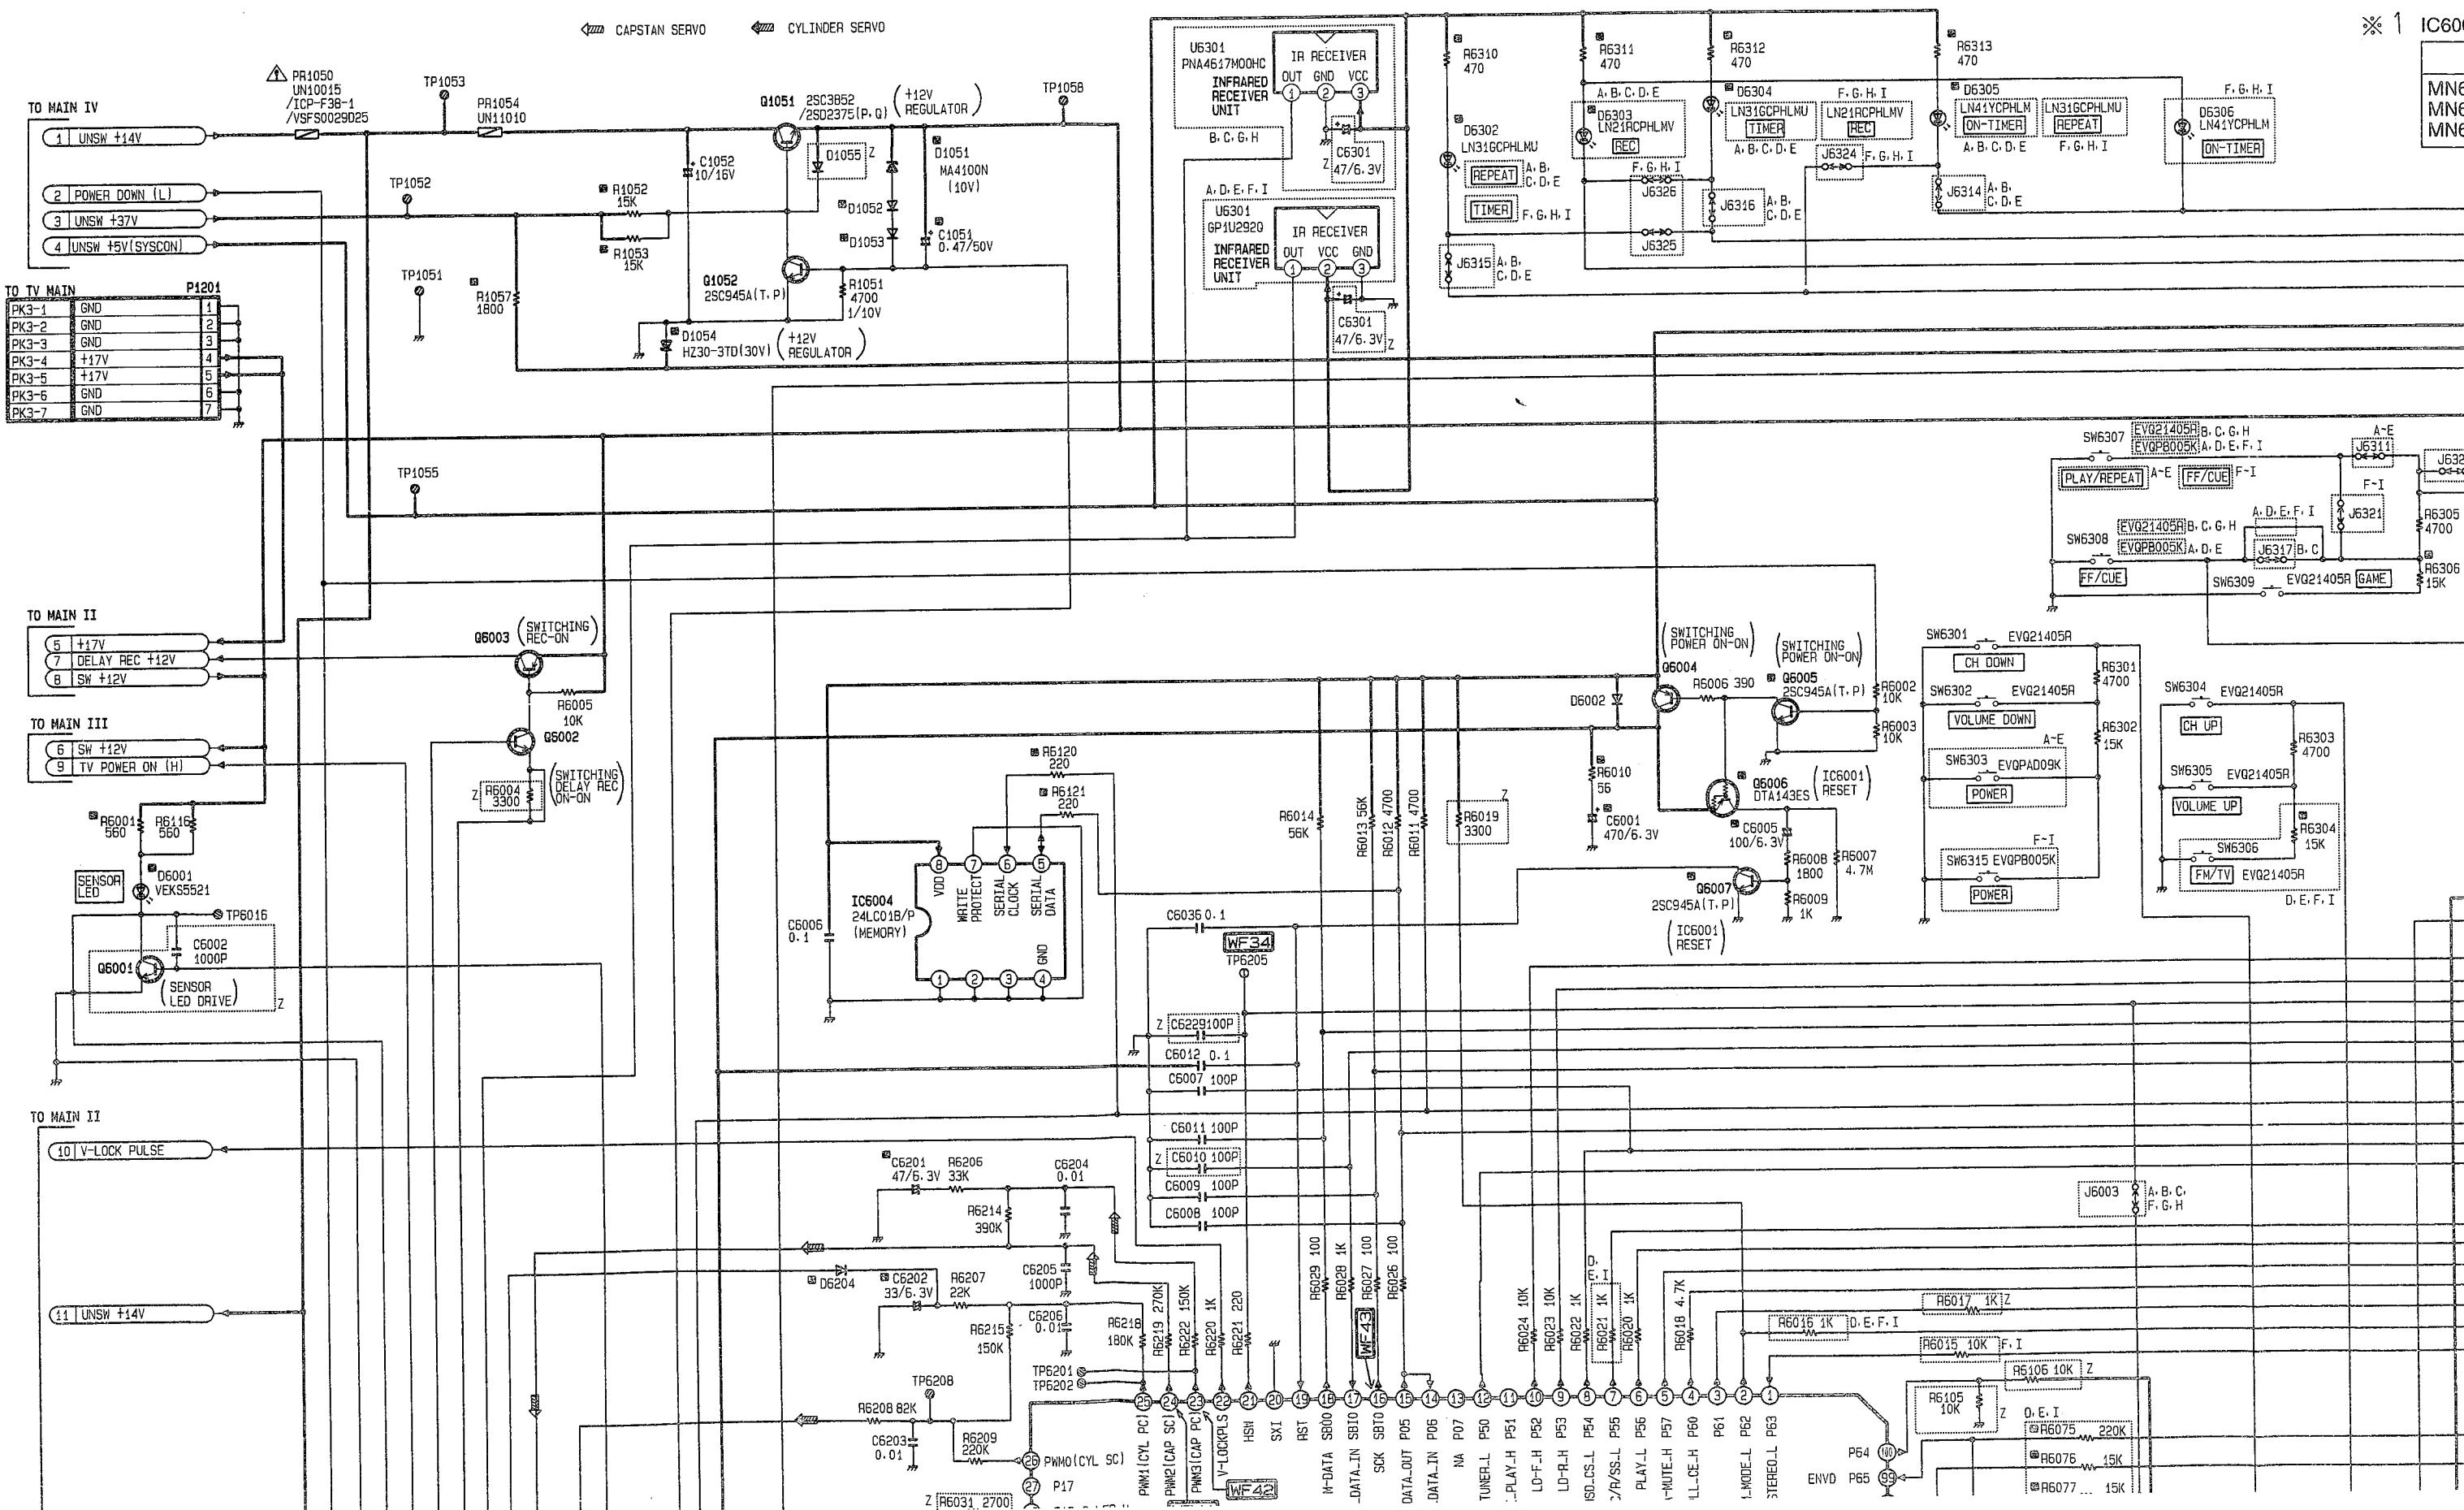

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

※ 1 IC6001 replacement note:


products	replacement parts
MN675058A5P2	MN675058A5P2
MN675058A5P1	
MN675058A5P	

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z

IC6001 KEY MATRIX

TERMINAL VOLTAGE	0~0.9V	1.0~2.5V	2.6~4.1V
KEY DATA 0 (PIN 88)	CH DOWN	VOLUME DOWN	POWER
KEY DATA 1 (PIN 87)	CH UP	VOLUME UP	FM/TV
KEY DATA 2 (PIN 86)	PLAY	FF/CUE	GAME
KEY DATA 3 (PIN 85)	STOP /EJECT	REC /TIME	REW /REVIEW

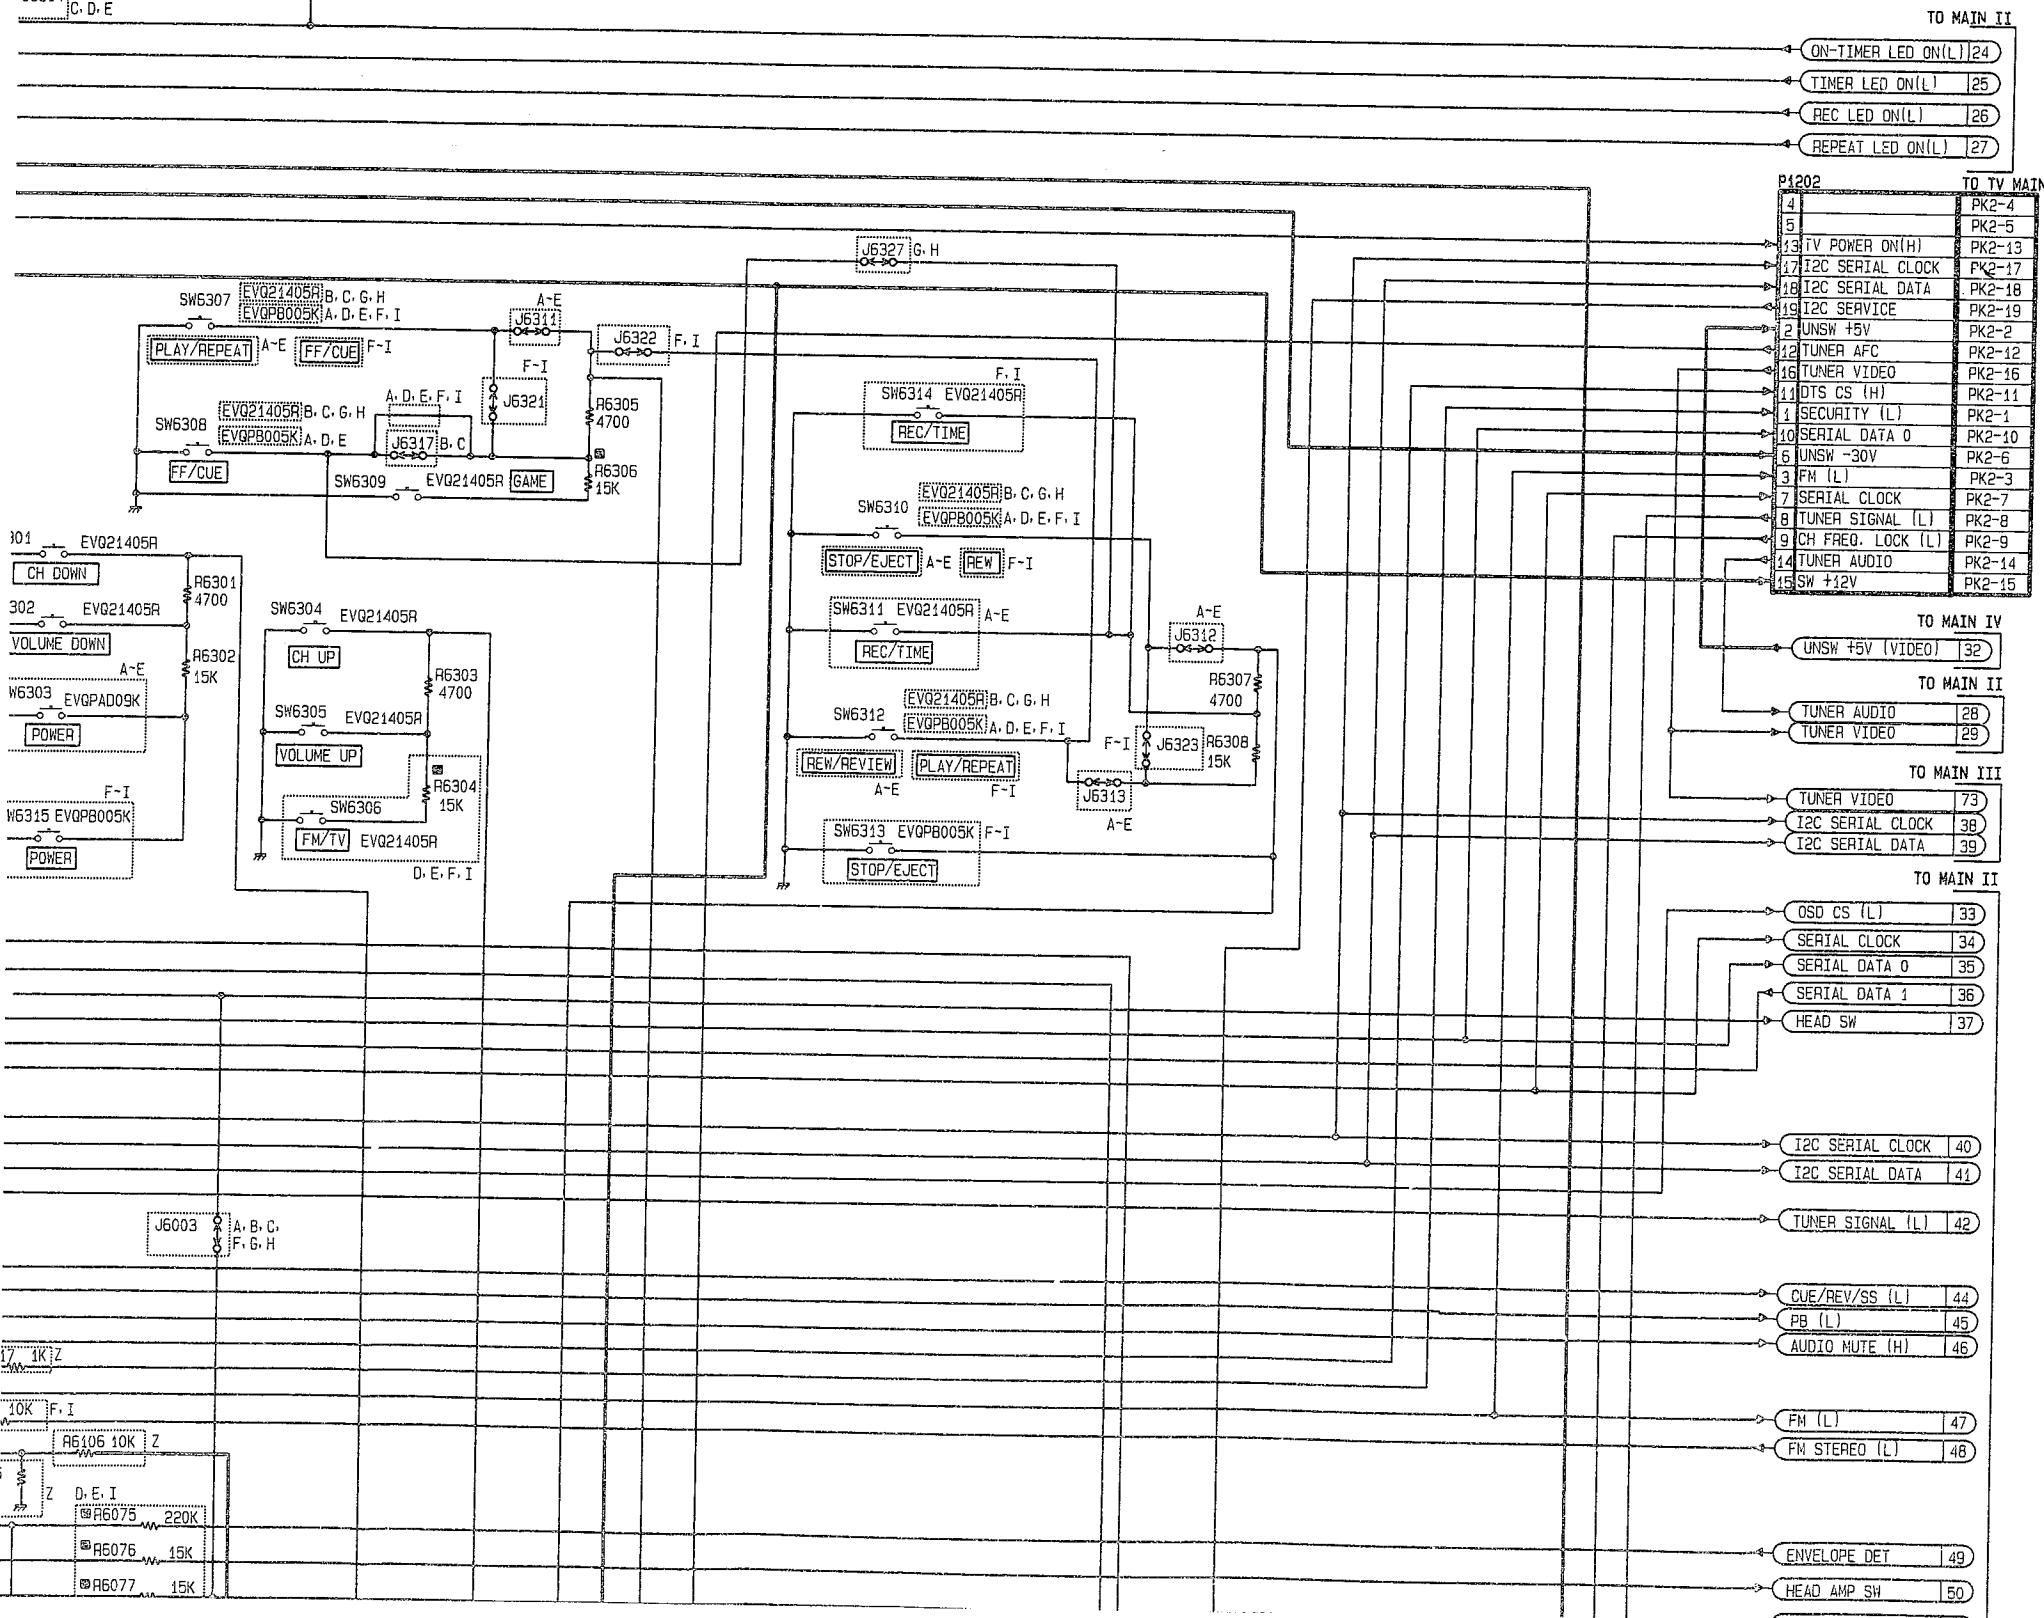



I/O CHART FOR IC6001(MN675058A5P2)

PIN NO.	I/O	FUNCTION	PIN NO.	I/O	FUNCTION
1	I	FM STEREO SIGNAL (L)	52	I	MTS SIGNAL (L)
2	O	FM MODE (L)	53	I	SAP SIGNAL (L)
3	---	(Not used)	54	I	I'C SERVICE (L)
4	O	DTS-CS (H)	55	I	TV SIGNAL (L)
5	O	AUDIO MUTE (H)	56	I	POWER DOWN (L)
6	O	PB (L)	57	I	PG SHIFTER
7	O	CUE/REV/SS (L)	58	O	AMP
8	O	OSD-CS (L)	59	I	AMP SW
9	O	LOADING MOTOR REVERSE (H)	60	I	AMP -
10	O	LOADING MOTOR FORWARD (H)	61	I	AMP +
11	I	PB HI-FI AUDIO (H)	62	I	CAP FG
12	O	TUNER SIGNAL (L)	63	O	CAP FG
13	---	(Not used)	64	I	CAP FG
14	I	I'C SERIAL DATA	65	--	GND
15	O	I'C SERIAL DATA	66	I	CYL PG/FG
16	O	SERIAL CLOCK	67	O	V-REF 1
17	I	SERIAL DATA 1	68	I	V-REF 2
18	O	SERIAL DATA 0	69	I	FM (L)
19	I	RESET	70	O	CONTROL PULSE (-)
20	--	GND	71	O	CONTROL PULSE (+)
21	O	HEAD SW	72	--	VDD
22	O	V-LOCK PULSE	73	I	CTL AMP
23	O	CAP PHASE ERROR	74	--	GND
24	O	CAP SPEED ERROR	75	O	PB CTL PULSE
25	O	CAP PHASE ERROR	76	I	V-SYNC
26	O	CAP SPEED ERROR	77	I	2 HEAD (H)/Hi-Fi (M)/4 HEAD (L)
27	O	(Not used)	78	I	VCR PLUS (H)GUIDE PLUS AND STAR SITE (M)NORMAL (L)
28	O	SENSOR LED ON (H)	79	I	AFC
29	O	TV POWER ON (H)	80	I	ENVELOPE VOLTAGE
30	O	AUDIO DEFEAT (H)	81	I	SUPPLY PHOTO TR (L)
31	O	(Not used)	82	I	TAKEUP PHOTO TR (L)
32	--	GND	83	I	SUPPLY REEL PULSE
33	I	OSC 1	84	I	TAKEUP REEL PULSE/SERVICE (L)
34	O	OSC 2	85	I	KEY DATA 3
35	--	VDD	86	I	KEY DATA 2
36	O	+12V POWER ON (H)	87	I	KEY DATA 1
37	O	VIDEO DELAY REC (H)	88	I	KEY DATA 0
38	O	CAP TORQUE LIMIT 2	89	I	HV STEREO (L)
39	O	Hi-Fi HEAD SW	90	I	DEMO (L)
40	O	H ROLL ACCELERATION	91	I	TUNER SIGNAL (L)
41	O	FORCED ACCELERATION	92	I	CH FREQUENCY LOCK (L)
42	O	CAP REV(H)/STOP(M)/FWD(L)	93	I	SAFETY TAB BROKEN (H)
43	O	CAP TORQUE LIMIT 1	94	I	MODE SW POSITION C
44	O	BEEPER ON (H)	95	I	MODE SW POSITION B
45	O	BEEPER	96	I	MODE SW POSITION A
46	O	(Not used)	97	O	ROTARY SW
47	I	IR DATA	98	O	HEAD AMP SW
48	O	3.5MHz	99	I	ENVELOPE DET
49	O	I'C SERIAL CLOCK	100	--	(Not used)
50	O	AUDIO AMP MUTE (H)			
51	O	SPATIALIZER CONTROL (H)(DE)			

MAIN I VOLTAGE CHART


MODE PIN NO.	STOP	REC	PLAY	FF	REW
IC6001					
1	5.1	5.1	5.1	5.1	5.1
2	5.1	5.1	5.1	5.1	5.1
3	---	---	---	---	---
4	0.3	0.3	0.3	0.3	0.3
5	0.2	0.2	0.2	0.2	0.2
6	5.1	5.1	0.1	5.1	5.1
7	5.1	5.1	5.1	5.1	5.1
8	4.1	4.1	4.1	4.1	4.1
9	0	0	0	0	0
10	0	0	0	0	0
11	5.1	5.1	5.1	5.1	5.1
12	5.1	5.1	5.1	5.1	5.1
13	---	---	---	---	---
14	3.9	3.9	3.9	3.9	3.9
15	3.9	3.9	3.9	3.9	3.9
16	4.5	4.5	4.5	4.5	4.5
17	5.1	5.1	5.1	5.1	5.1
18	4.7	4.7	4.7	4.7	4.7
19	5.1	5.1	5.1	5.1	5.1
20	0	0	0	0	0
21	2.6	2.6	2.6	2.6	2.6
22	0.1	0.1	0.1	0.1	0.1
23	2.7	2.7	2.7	2.7	2.7
24	0	2.6	2.6	2.6	2.6
25	1.9	2.3	2.3	2.6	2.6
26	2.6	2.6	2.6	2.6	2.6
27	---	---	---	---	---
28	---	---	---	---	---
29	0	0	0	0	0
30	5.1	5.1	5.1	5.1	5.1
31	---	---	---	---	---
32	0	0	0	0	0
33	2.6	2.6	2.6	2.6	2.6
34	2.6	2.6	2.6	2.6	2.6
Q1051					
E	12.1	12.1	12.1	12.1	12.1
C	13.5	13.5	13.5	13.5	13.5
B	12.6	11.6	12.6	12.6	12.6
Q1052					
E	0	0	0	0	0
C	12.6	11.6	12.6	12.6	12.6
B	0.7	0.7	0.7	0.7	0.7

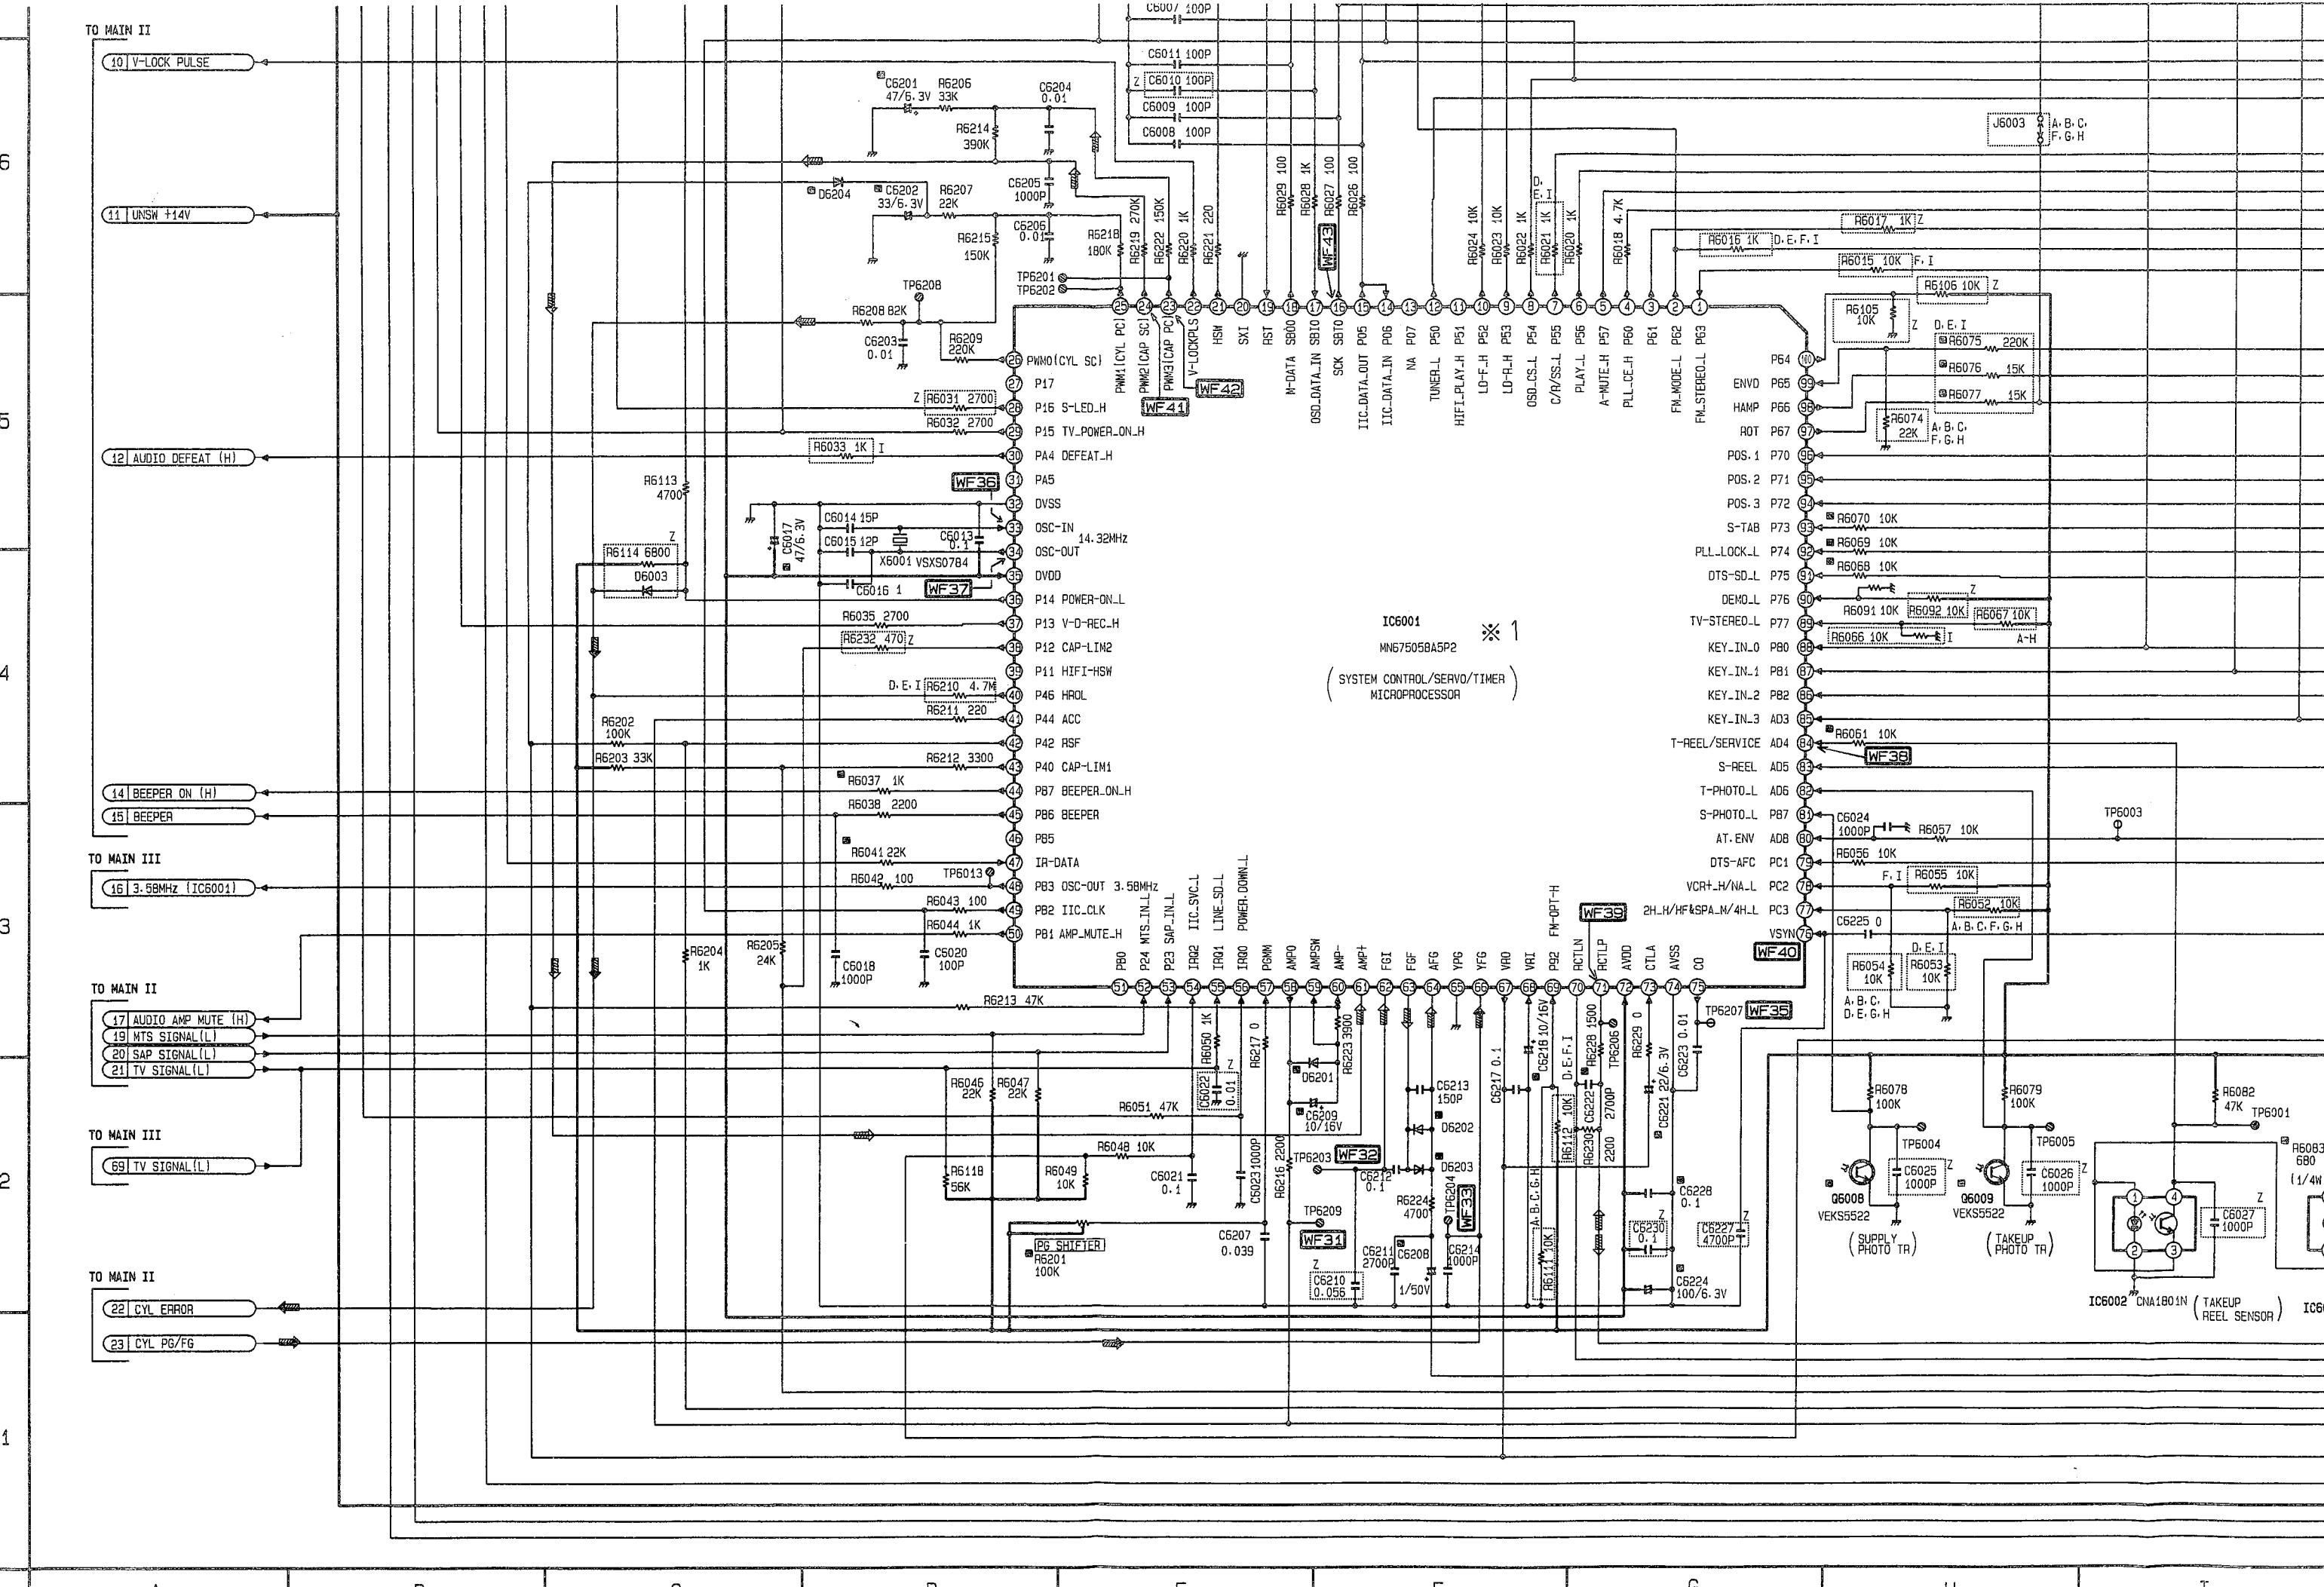


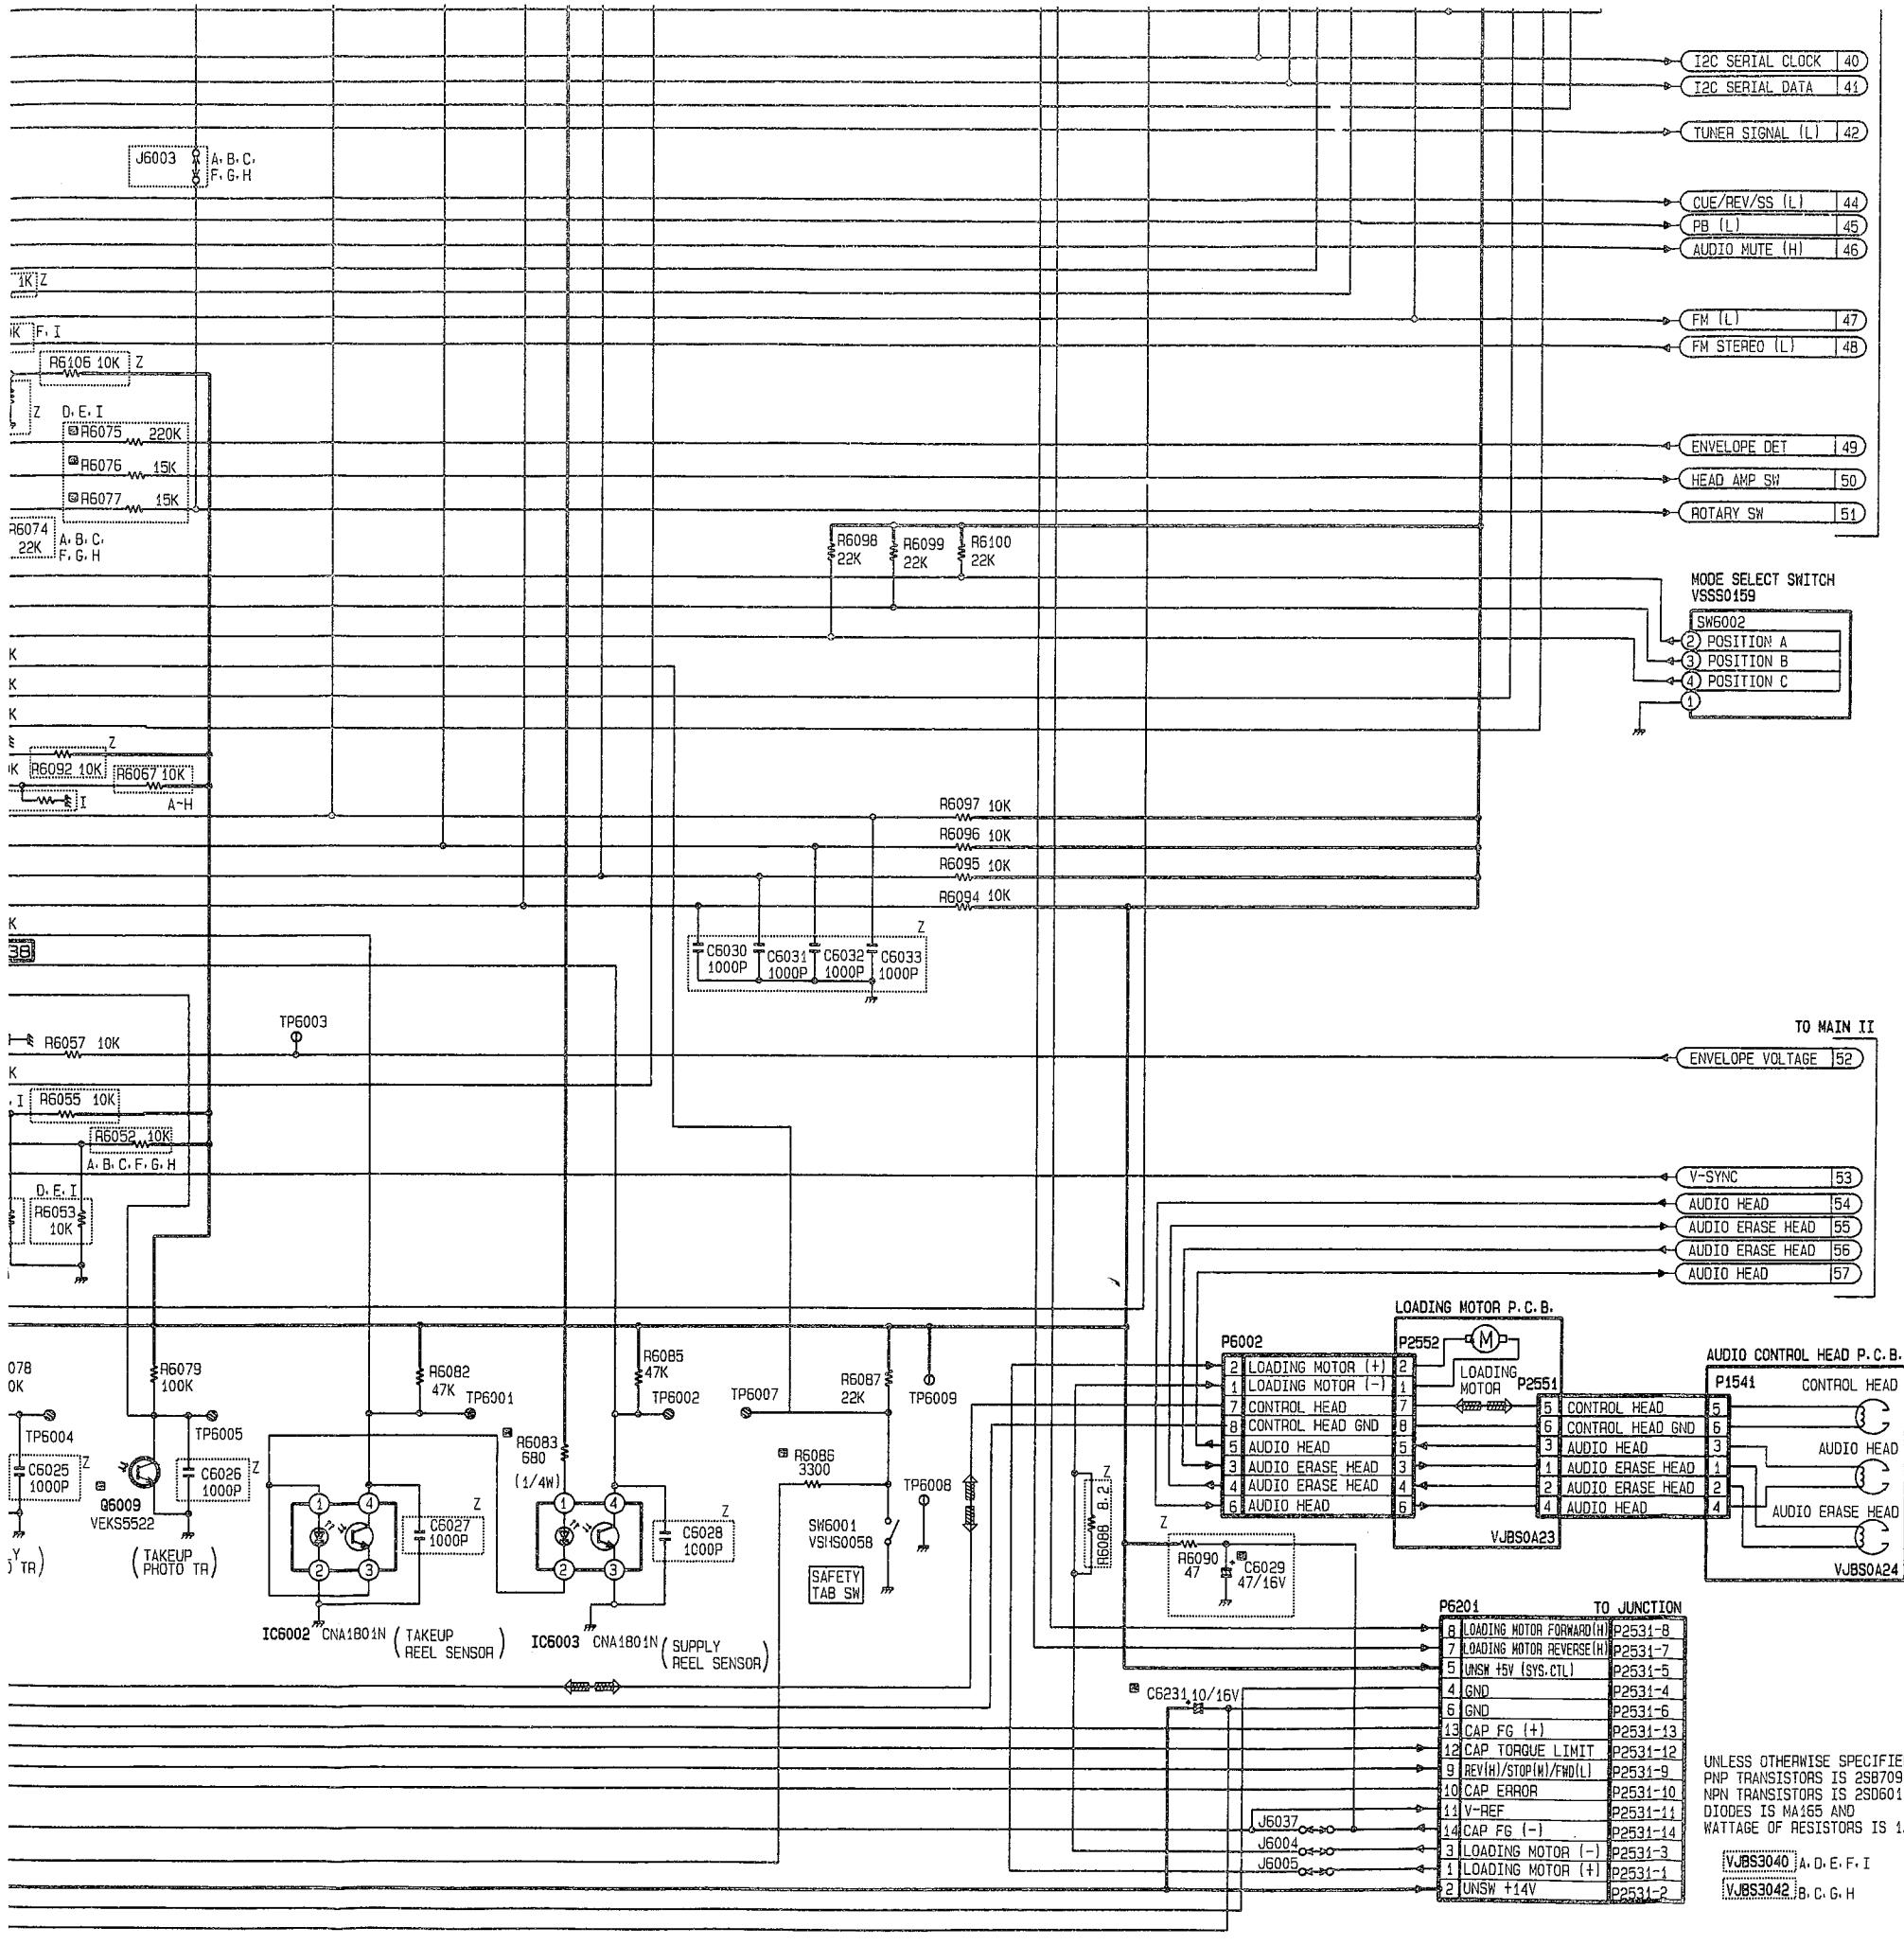


12	5.1	5.1	5.1	5.1	5.1
13	---	---	---	---	---
14	3.9	3.9	3.9	3.9	3.9
15	3.9	3.9	3.9	3.9	3.9
16	4.5	4.5	4.5	4.5	4.5
17	5.1	5.1	5.1	5.1	5.1
18	4.7	4.7	4.7	4.7	4.7
19	5.1	5.1	5.1	5.1	5.1
20	0	0	0	0	0
21	2.6	2.6	2.6	2.6	2.6
22	0.1	0.1	0.1	0.1	0.1
23	2.7	2.7	2.7	2.7	2.7
24	0	2.6	2.6	2.6	2.6
25	1.9	2.3	2.3	2.6	2.6
26	2.6	2.6	2.6	2.6	2.6
27	---	---	---	---	---
28	---	---	---	---	---
29	0	0	0	0	0
30	5.1	5.1	5.1	5.1	5.1
31	---	---	---	---	---
32	0	0	0	0	0
33	2.6	2.6	2.6	2.6	2.6
34	2.6	2.6	2.6	2.6	2.6
35	5.1	5.1	5.1	5.1	5.1
36	0	0	0	0	0
37	0	5.1	0	0	0
38	---	---	---	---	---
39	---	---	---	---	---
40	2.2	2.2	2.2	2.2	2.2
41	1.1	2.4	2.4	2.4	2.4
42	2.6	0.1	0.1	0.1	5.0
43	5.0	5.0	5.0	5.0	5.0
44	2.6	2.6	2.6	2.6	2.6
45	2.6	2.6	2.6	2.6	2.6
46	---	---	---	---	---
47	5.0	5.0	5.0	5.0	5.0
48	2.6	2.6	2.6	2.6	2.6
49	4.1	4.1	4.1	4.1	4.1
50	0	0	0	0	0
51	---	---	---	---	---
52	5.1	5.1	5.1	5.1	5.1
53	5.1	5.1	5.1	5.1	5.1
54	5.1	5.1	5.1	5.1	5.1
55	0.8	0.8	0.8	0.8	0.8
56	5.2	5.2	5.2	5.2	5.2
57	3.0	3.0	3.0	3.0	3.0
58	2.4	2.4	2.4	2.4	2.4
59	2.6	2.6	2.6	2.6	2.6
60	2.6	2.6	2.6	2.6	2.6
61	2.6	2.6	2.6	2.6	2.6
62	2.6	2.6	2.6	2.6	2.6
63	2.6	2.6	2.6	2.6	2.6
64	2.6	2.6	2.6	2.6	2.6
65	0	0	0	0	0
66	1.2	1.2	1.2	1.2	1.2
67	2.6	2.6	2.6	2.6	2.6
68	2.6	2.6	2.6	2.6	2.6
69	5.1	5.1	5.1	5.1	5.1
70	2.6	2.6	2.6	2.6	2.6
71	2.6	2.6	2.6	2.6	2.6
72	5.1	5.1	5.1	5.1	5.1
73	2.6	2.6	2.6	2.6	2.6
74	0	0	0	0	0
75	2.6	2.6	2.6	2.6	2.6
76	0.5	0.5	0.5	0.5	0.5
77	5.1	5.1	5.1	5.1	5.1
78	5.1	5.1	5.1	5.1	5.1
79	2.6	2.6	2.6	2.6	2.6
80	3.7	3.7	5.1	3.7	3.7
81	5.1	5.1	5.1	5.1	5.1
82	5.1	5.1	5.1	5.1	5.1
83	---	---	---	---	---
84	---	---	---	---	---
85	5.1	5.1	5.1	5.1	5.1
86	5.1	5.1	5.1	5.1	5.1
87	5.1	5.1	5.1	5.1	5.1
88	5.1	5.1	5.1	5.1	5.1
89	0	0	0	0	0
90	0	0	0	0	0
91	5.1	5.1	5.1	5.1	5.1
92	0.1	0.1	0.1	0.1	0.1
93	0	0	0	0	0
94	5.2	5.2	5.2	5.2	5.2

JUNCTION SCHEMATIC DIAGRAM

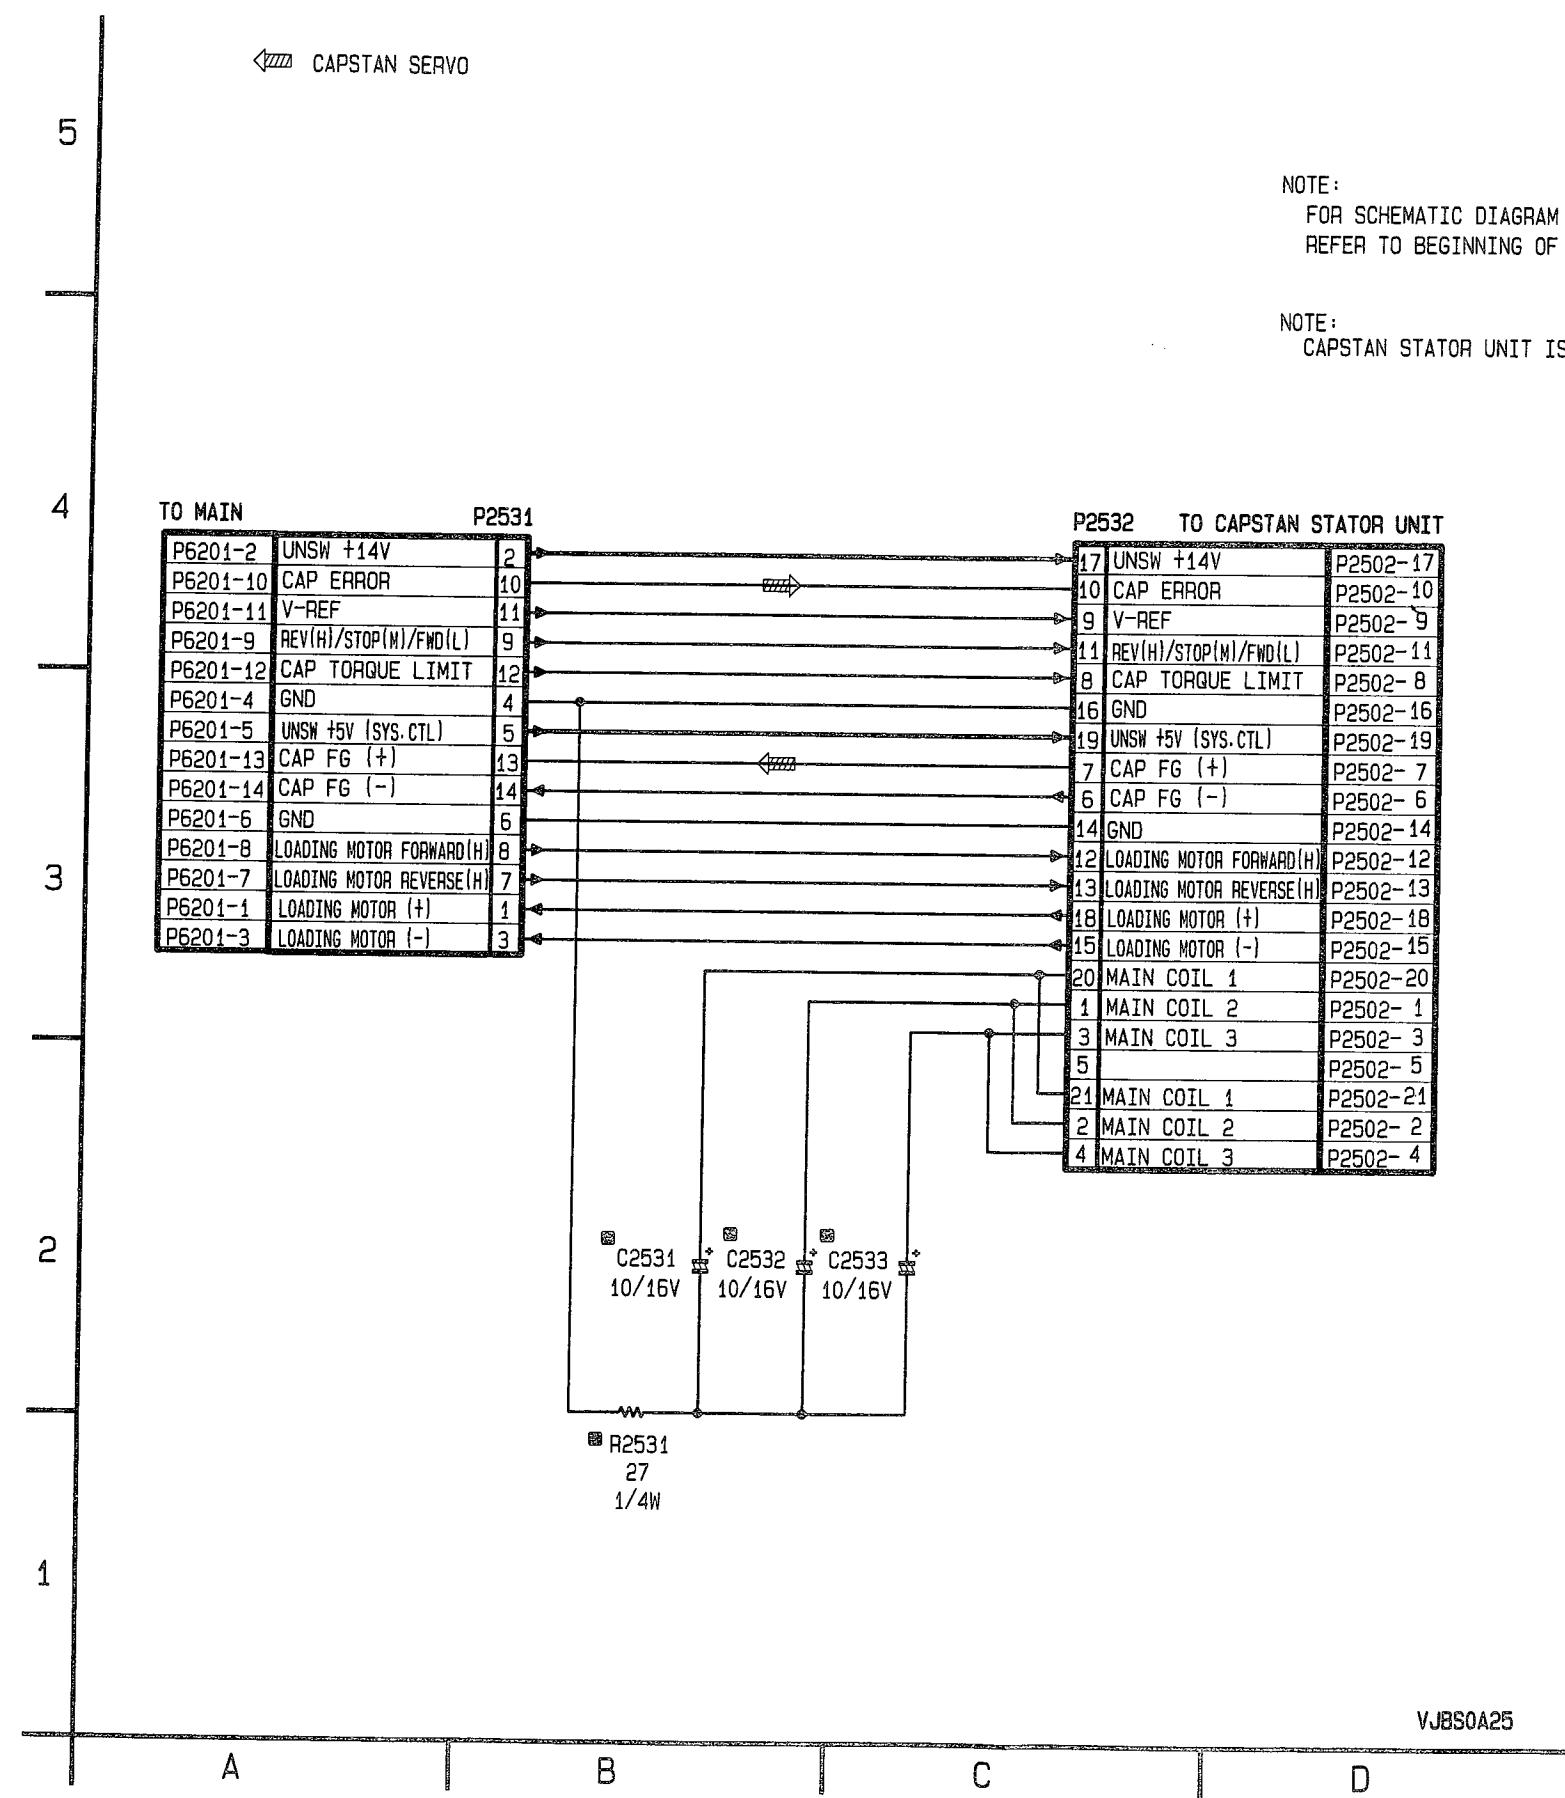

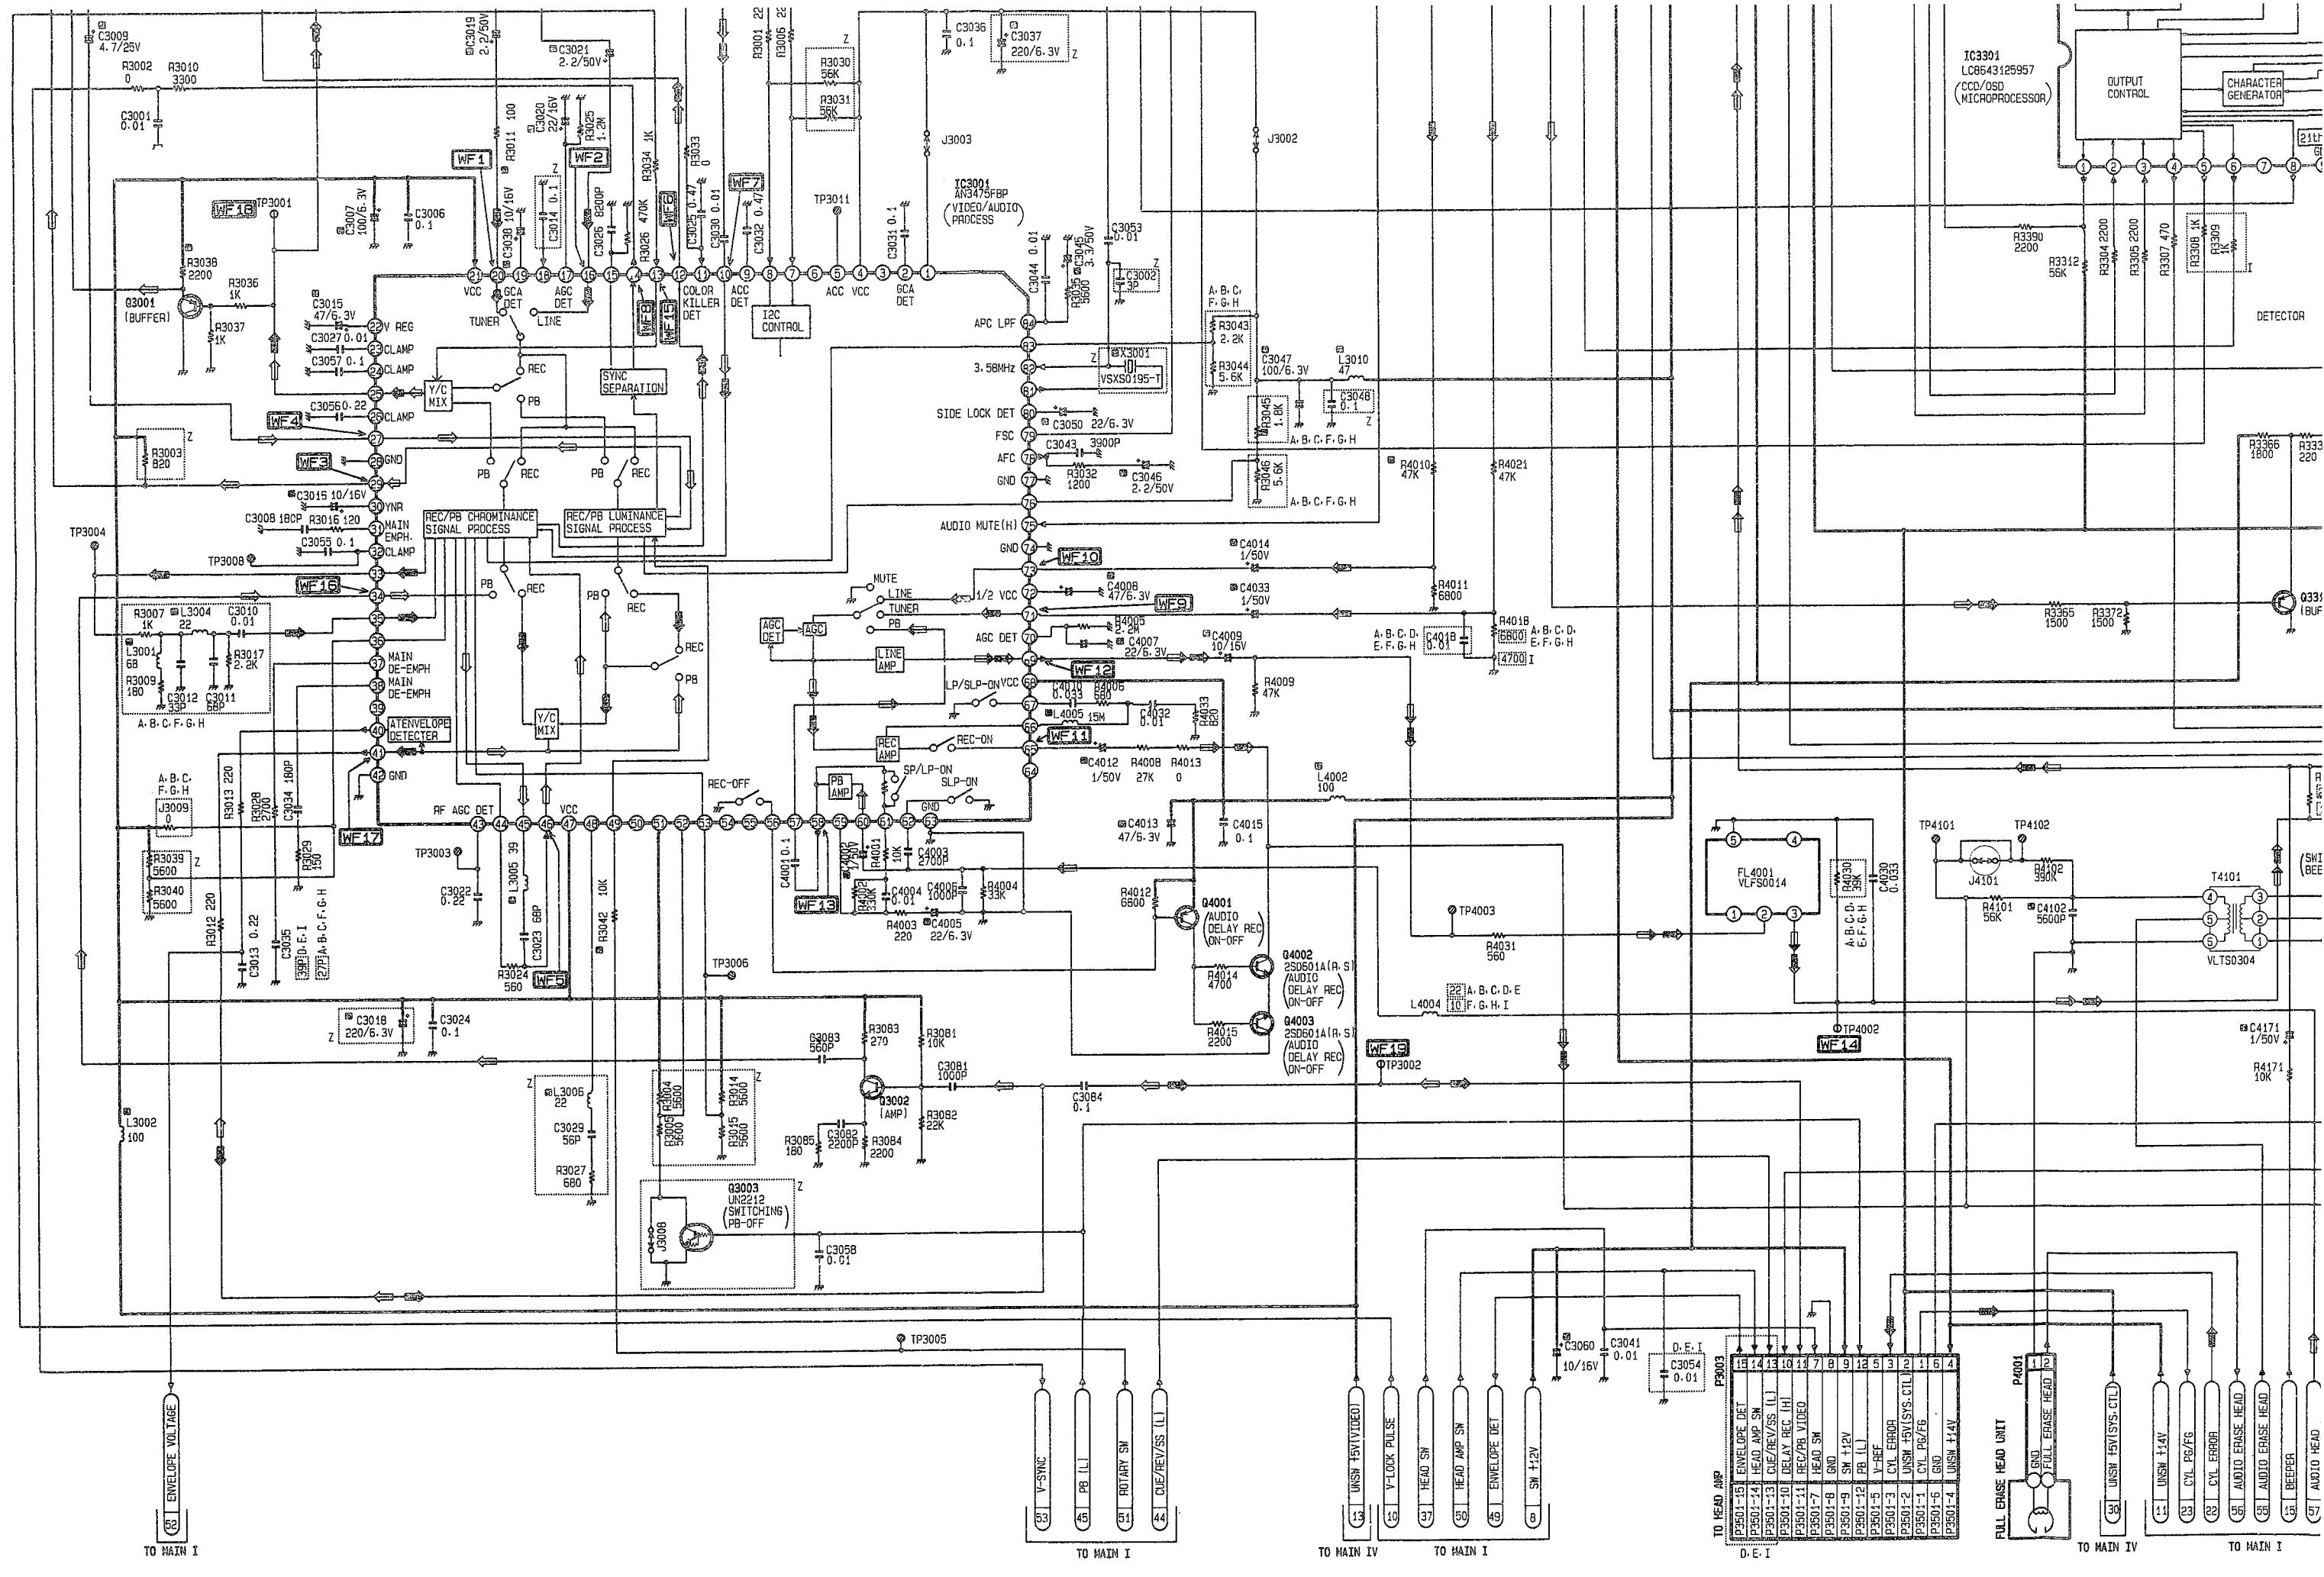

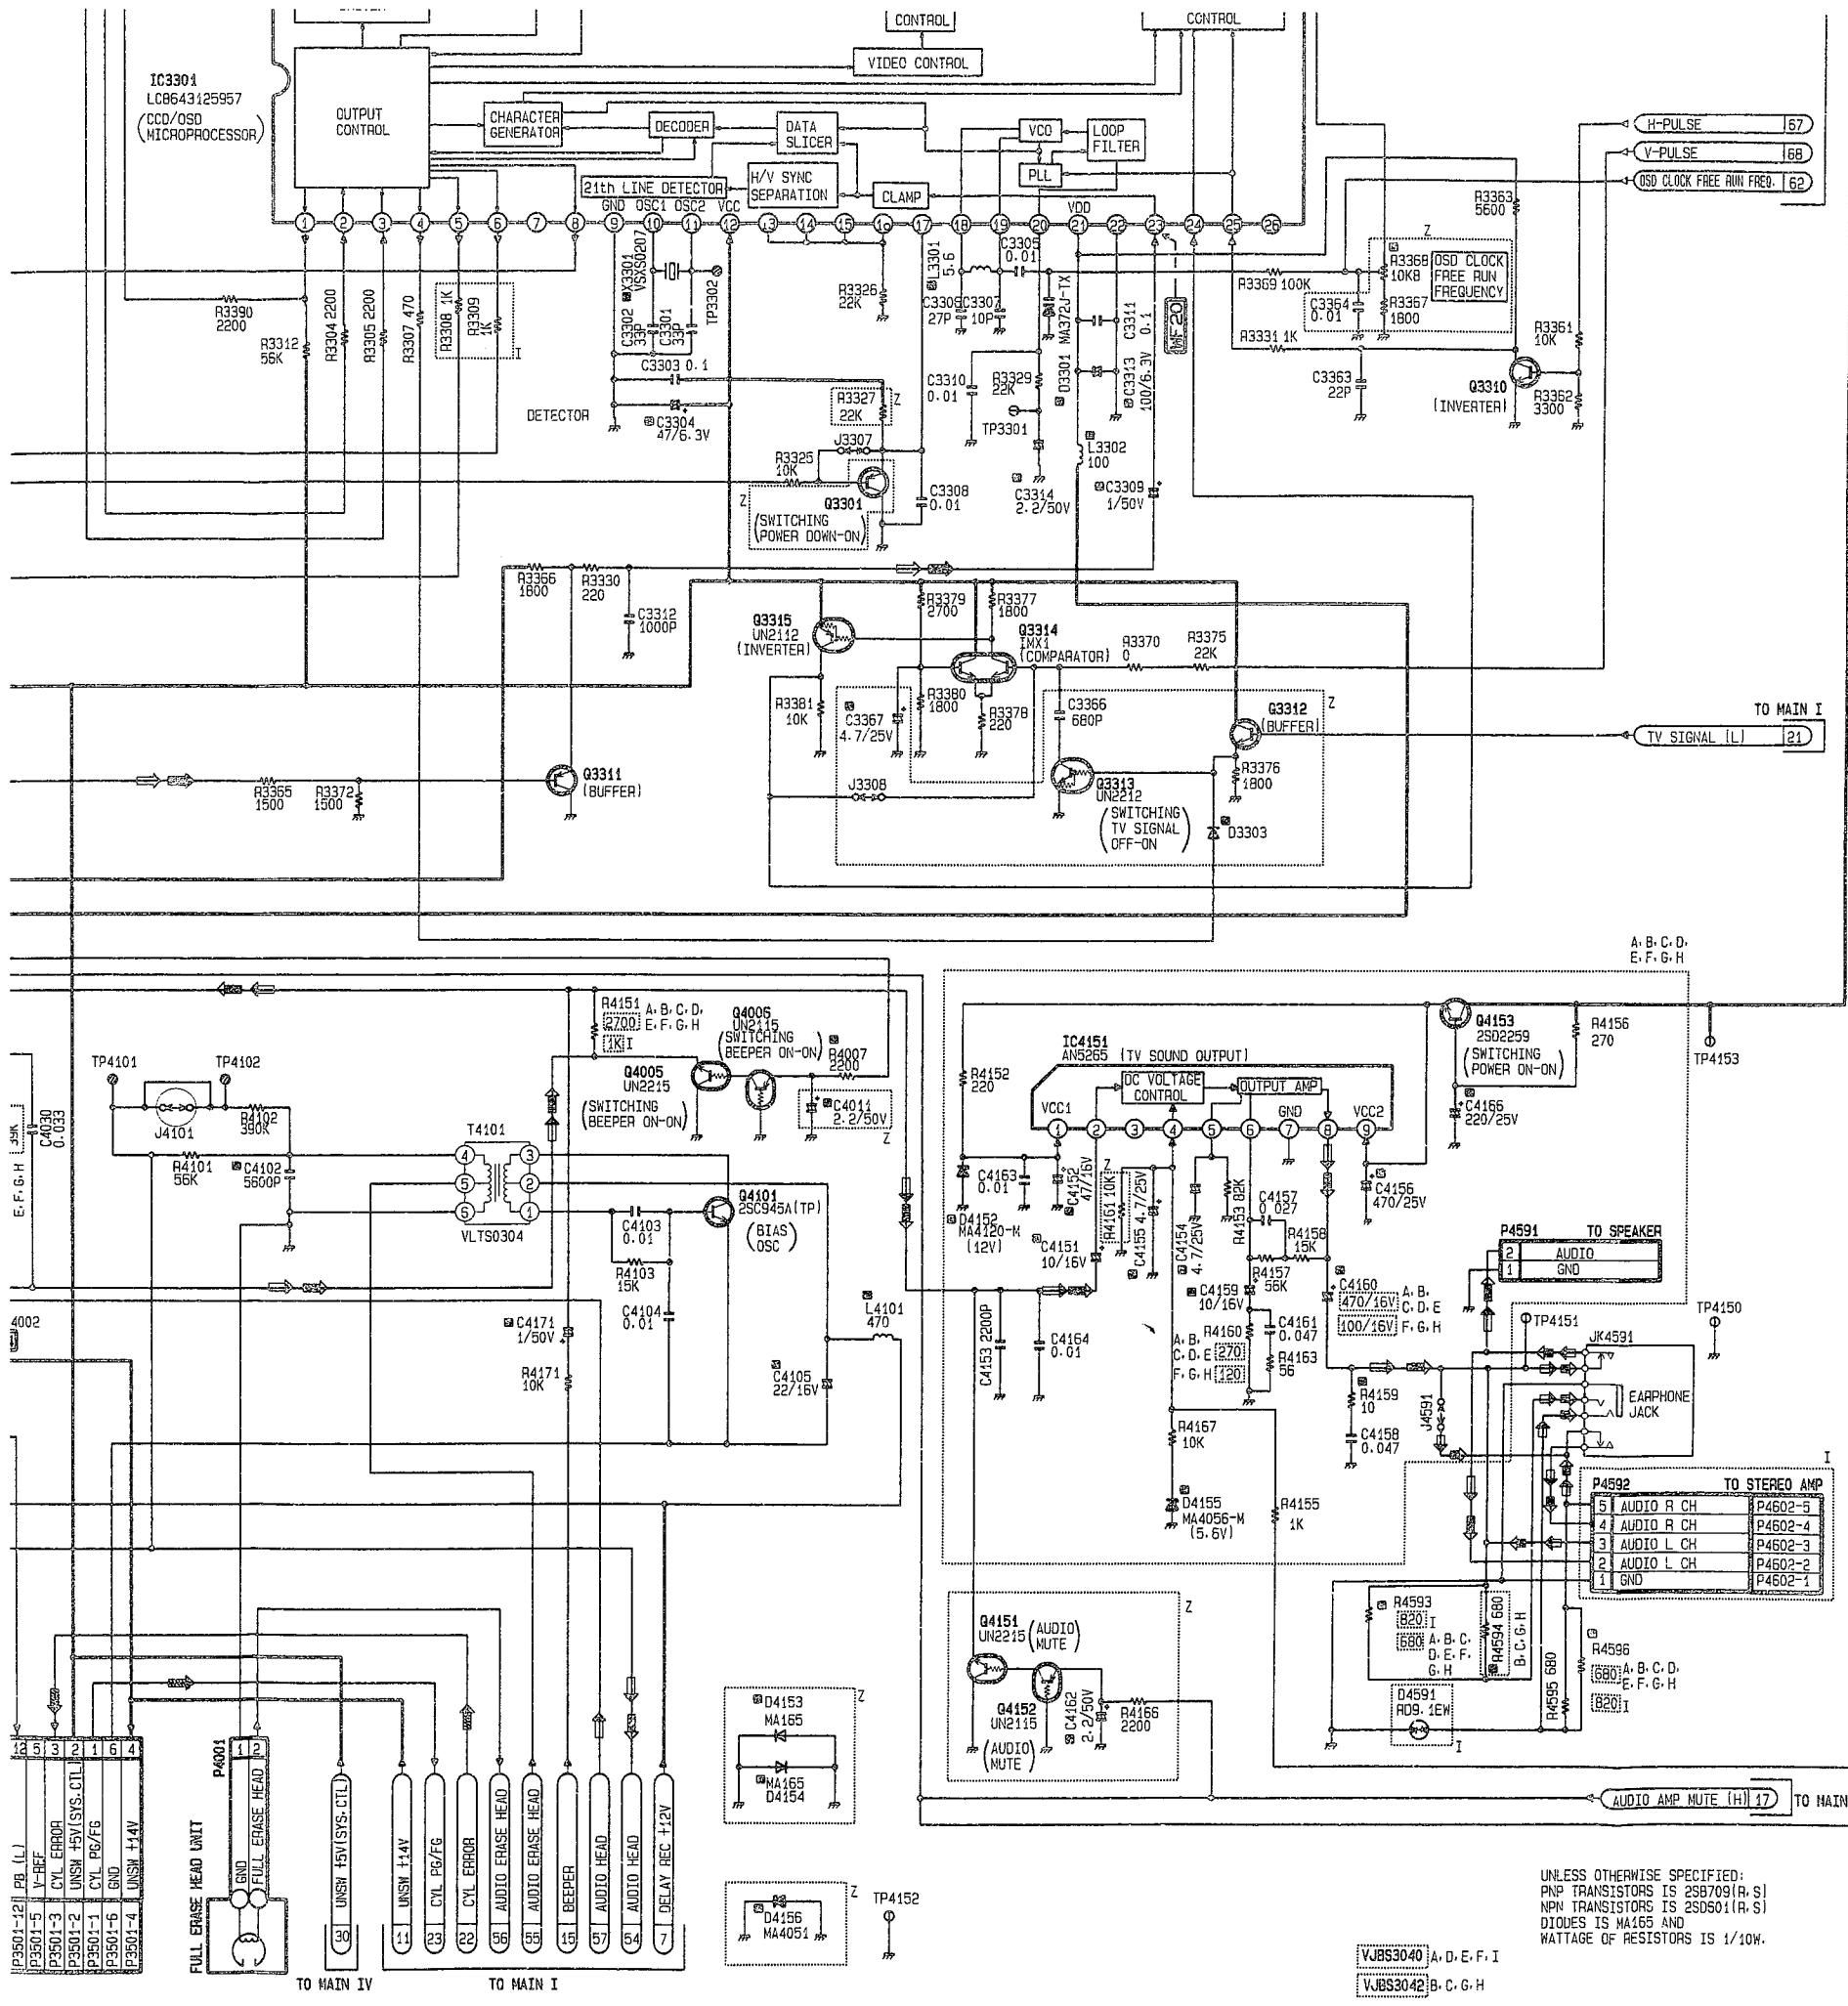


MAIN III (TV Y/C PROCESS) SCHEMATIC DIAGRAM


NOTE:

FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

IMPORTANT SAFETY NOTICE
COMPONENTS IDENTIFIED E
SPECIAL CHARACTERISTICS
WHEN REPLACING ANY OF T
USE ONLY THE SPECIFIED


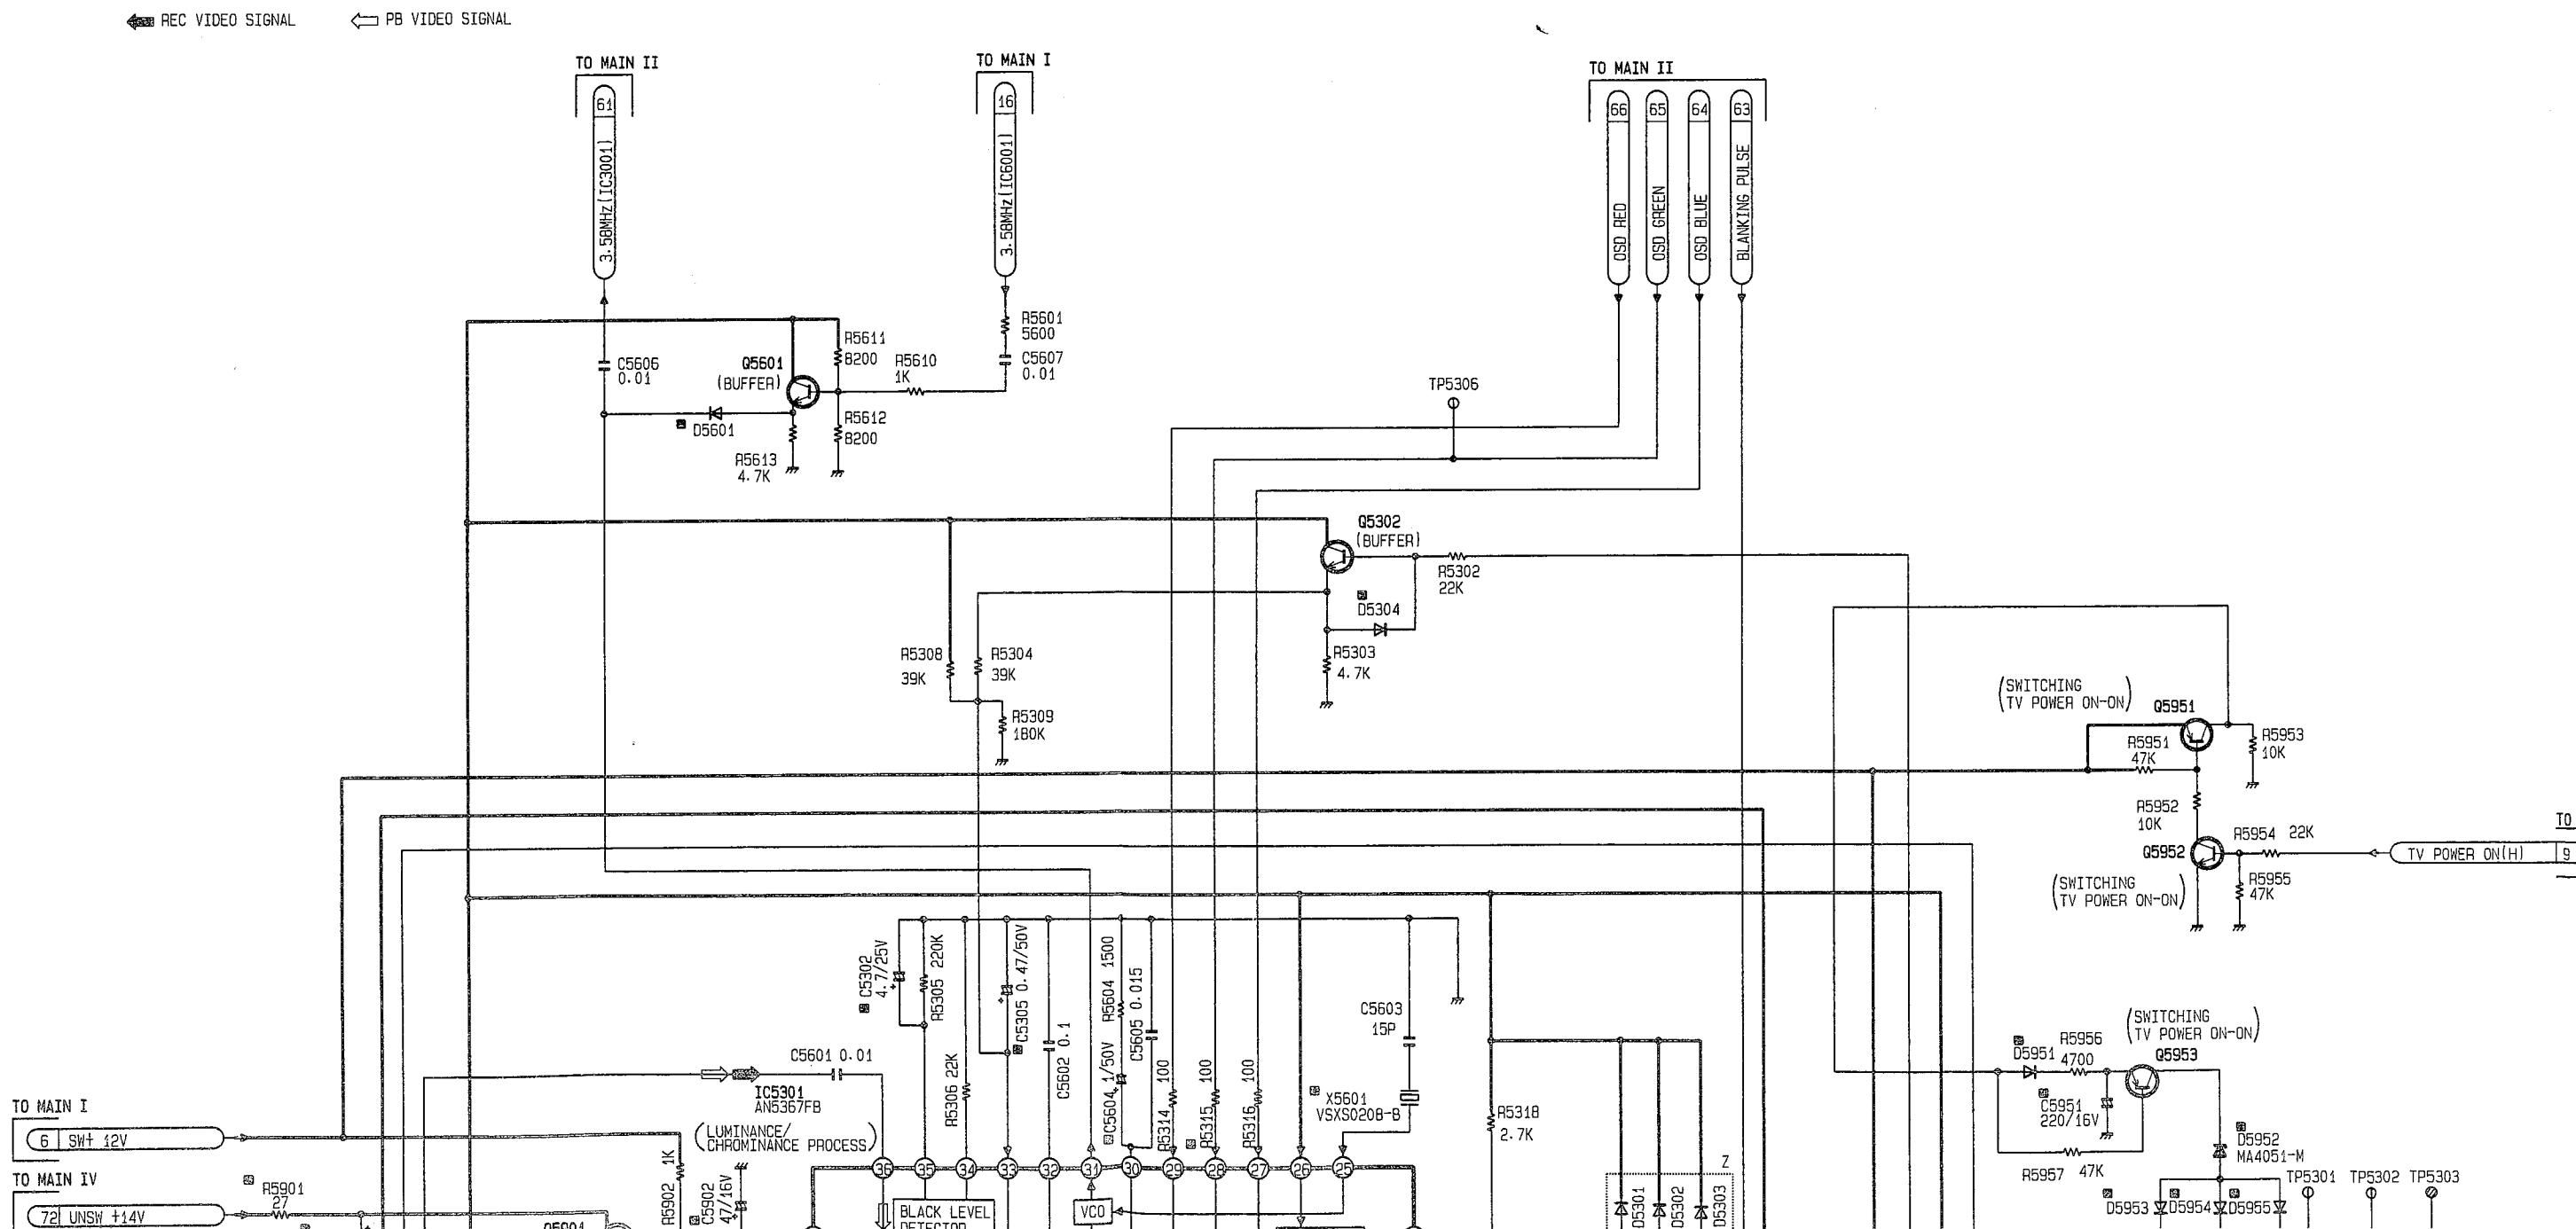


IC5301 LUMINANCE/CHROMINANCE PROCESS IC-BLOCK DIAGRAM, AN5367FB

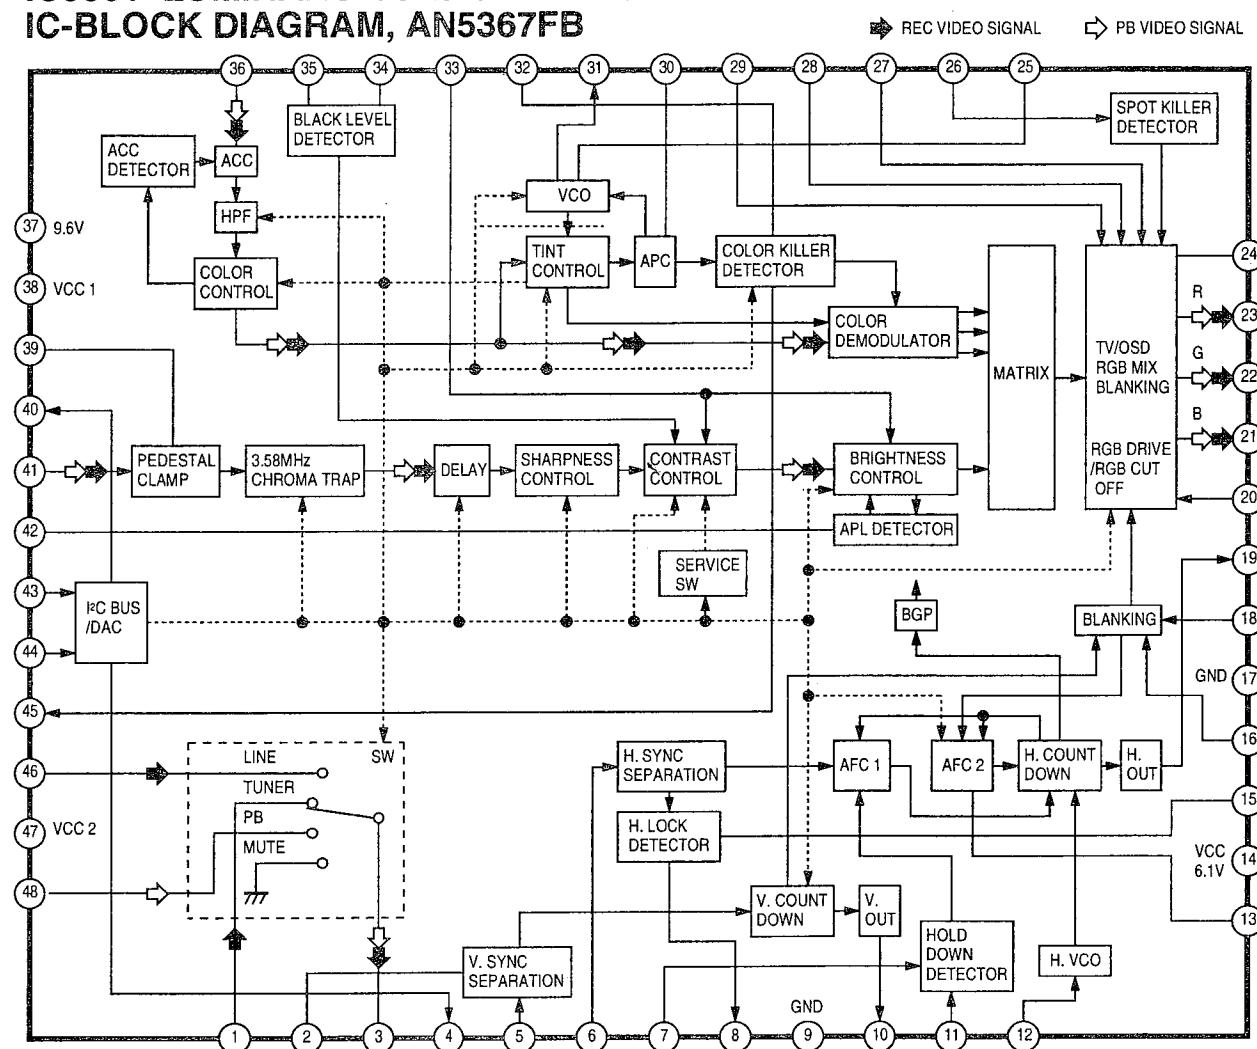

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

JUT NOTES,

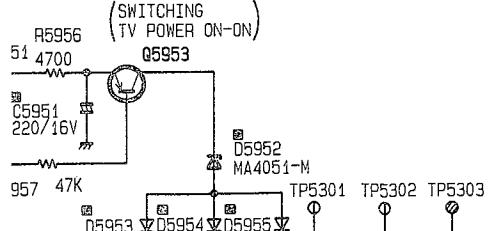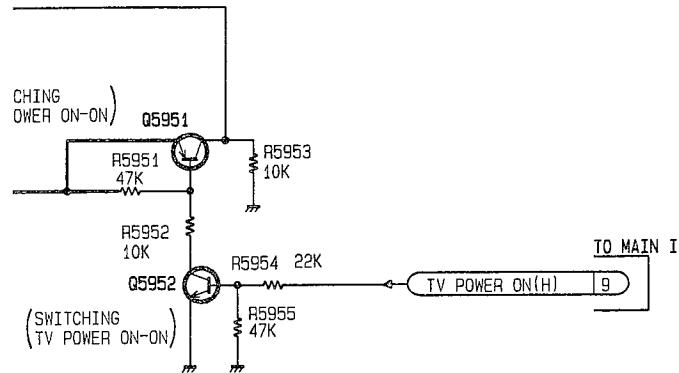


MAIN III VOLTAGE CHART




MODE PIN NO.	REC	PLAY
IC5301		
1	2.7	2.7
2	2.5	2.5
3	3.4	3.4
4	3.1	3.1
5	2.1	2.1
6	2.1	2.1
7	6.2	6.2

MODE PIN NO.	REC	PLAY
Q5301		
E	2.7	2.7
C	9.2	9.2
B	3.4	3.4
Q5302		
E	6.3	6.3
C	9.2	9.2
R	6.9	6.9

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G

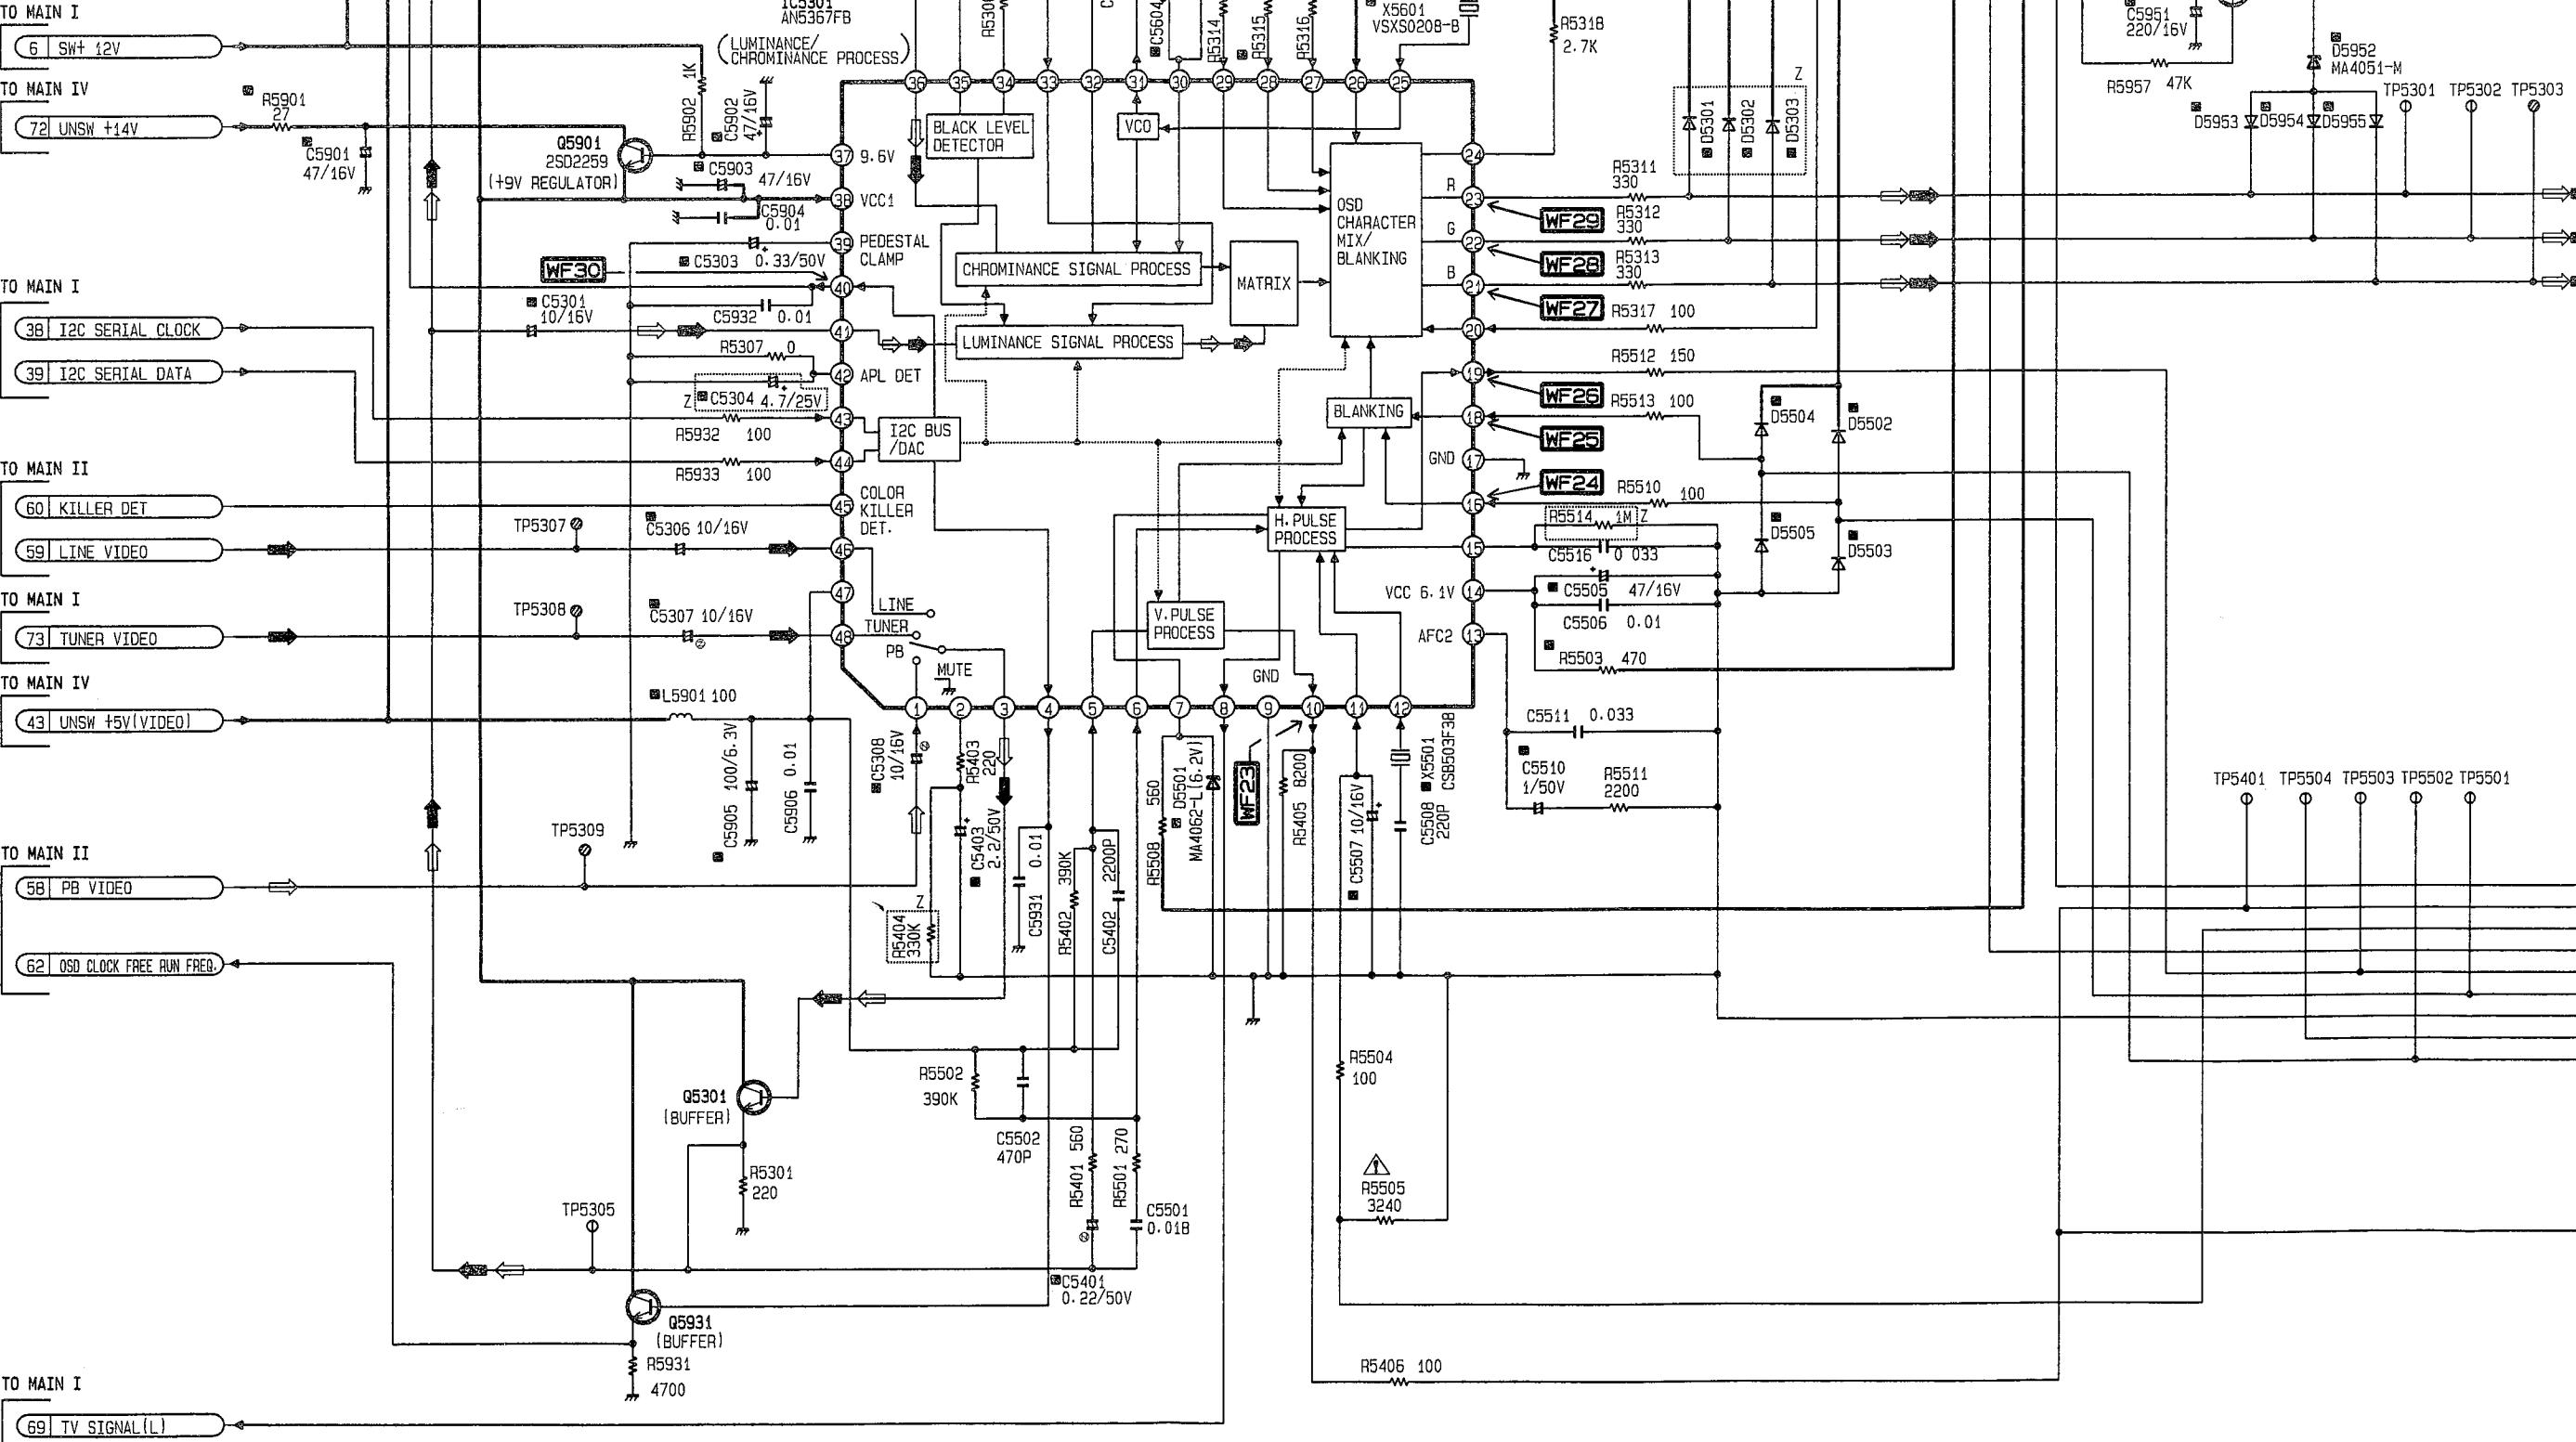

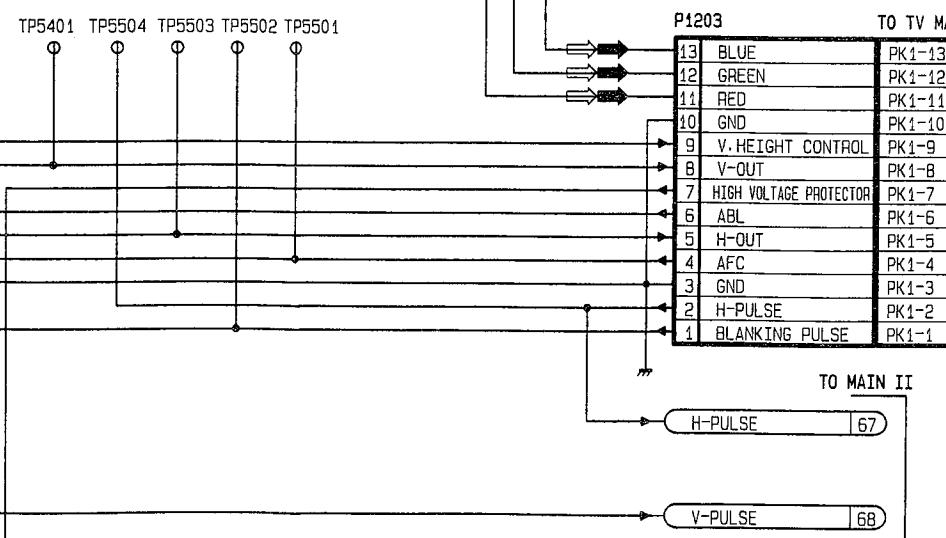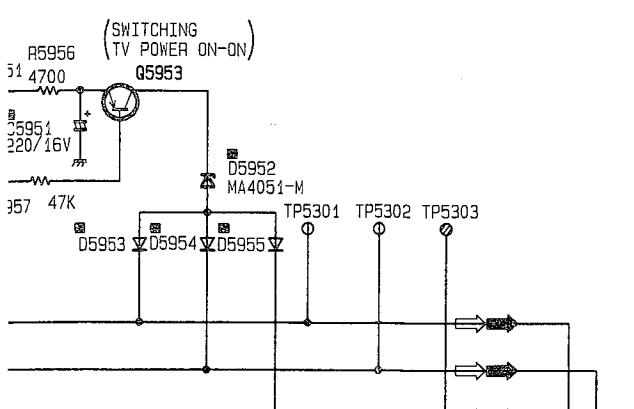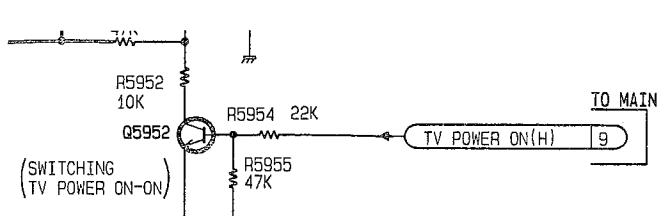

UNLESS OTHERWISE SPECIFIED:
PNP TRANSISTORS IS 2SB709(R, S),
NPN TRANSISTORS IS 2SD501(R, S),
DIODES IS MA165 AND
WATTAGE OF RESISTORS IS 1/10W.

[VJBS3040] A, D, E, F, I
[VJBS3042] B, C, G, H

H I J K

MAIN III VOLTAGE CHART

MODE PIN NO.	REC	PLAY
IC5301		
1	2.7	2.7
2	2.5	2.5
3	3.4	3.4
4	3.1	3.1
5	2.1	2.1
6	2.1	2.1
7	6.2	6.2
8	0	0
9	0	0
10	3.8	3.8
11	4.9	4.9
12	2.8	2.8
13	4.2	4.2
14	6.4	6.4
15	4.3	4.3
16	0.6	0.6
17	0	0
18	0.6	0.6
19	2.2	2.2
20	0	0
21	3.7	3.7
22	3.7	3.7
23	3.7	3.7
24	6.0	6.0
25	2.7	2.7
26	9.2	9.2
27	0	0
28	0	0
29	0	0
30	5.8	5.8
31	3.3	3.3
32	3.7	3.7
33	6.3	6.3
34	0	8.3
35	0	4.9
36	4.3	4.3
37	9.7	9.7
38	0	0
39	2.3	2.3
40	2.1	2.1
41	2.0	2.0
42	0	0
43	4.9	4.9
44	4.9	4.9
45	0.4	0.4
46	2.5	2.5
47	5.1	5.1
48	2.7	2.7


MODE PIN NO.	REC	PLAY
Q5301		
E	2.7	2.7
C	9.2	9.2
B	3.4	3.4
Q5302		
E	6.3	6.3
C	9.2	9.2
B	6.9	6.9
Q5601		
E	4.6	4.6
C	9.2	9.2
B	4.0	4.0
Q5901		
E	9.2	9.2
C	11.9	11.9
B	9.8	9.8
Q5931		
E	2.5	2.5
C	9.2	9.2
B	3.1	3.1
Q5951		
E	12.1	12.1
C	12.0	12.0
B	11.3	11.3
Q5952		
E	0	0
C	0.1	0.1
B	0.6	0.6
Q5953		
E	11.3	11.3
C	-4.9	-4.9
B	12.3	12.3
TP5301	3.6	3.6
TP5302	3.6	3.6
TP5303	3.6	3.6
TP5305	2.7	2.7
TP5306	4.4	4.4
TP5307	0	0
TP5308	1.3	1.3
TP5309	1.6	1.6
TP5401	3.8	3.8
TP5501	0.6	0.6
TP5502	0.6	0.6
TP5503	0	0
TP5504	0	0

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z

MAIN IV (POWER SUPPLY) SCHEMATIC DIAGRAM

HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

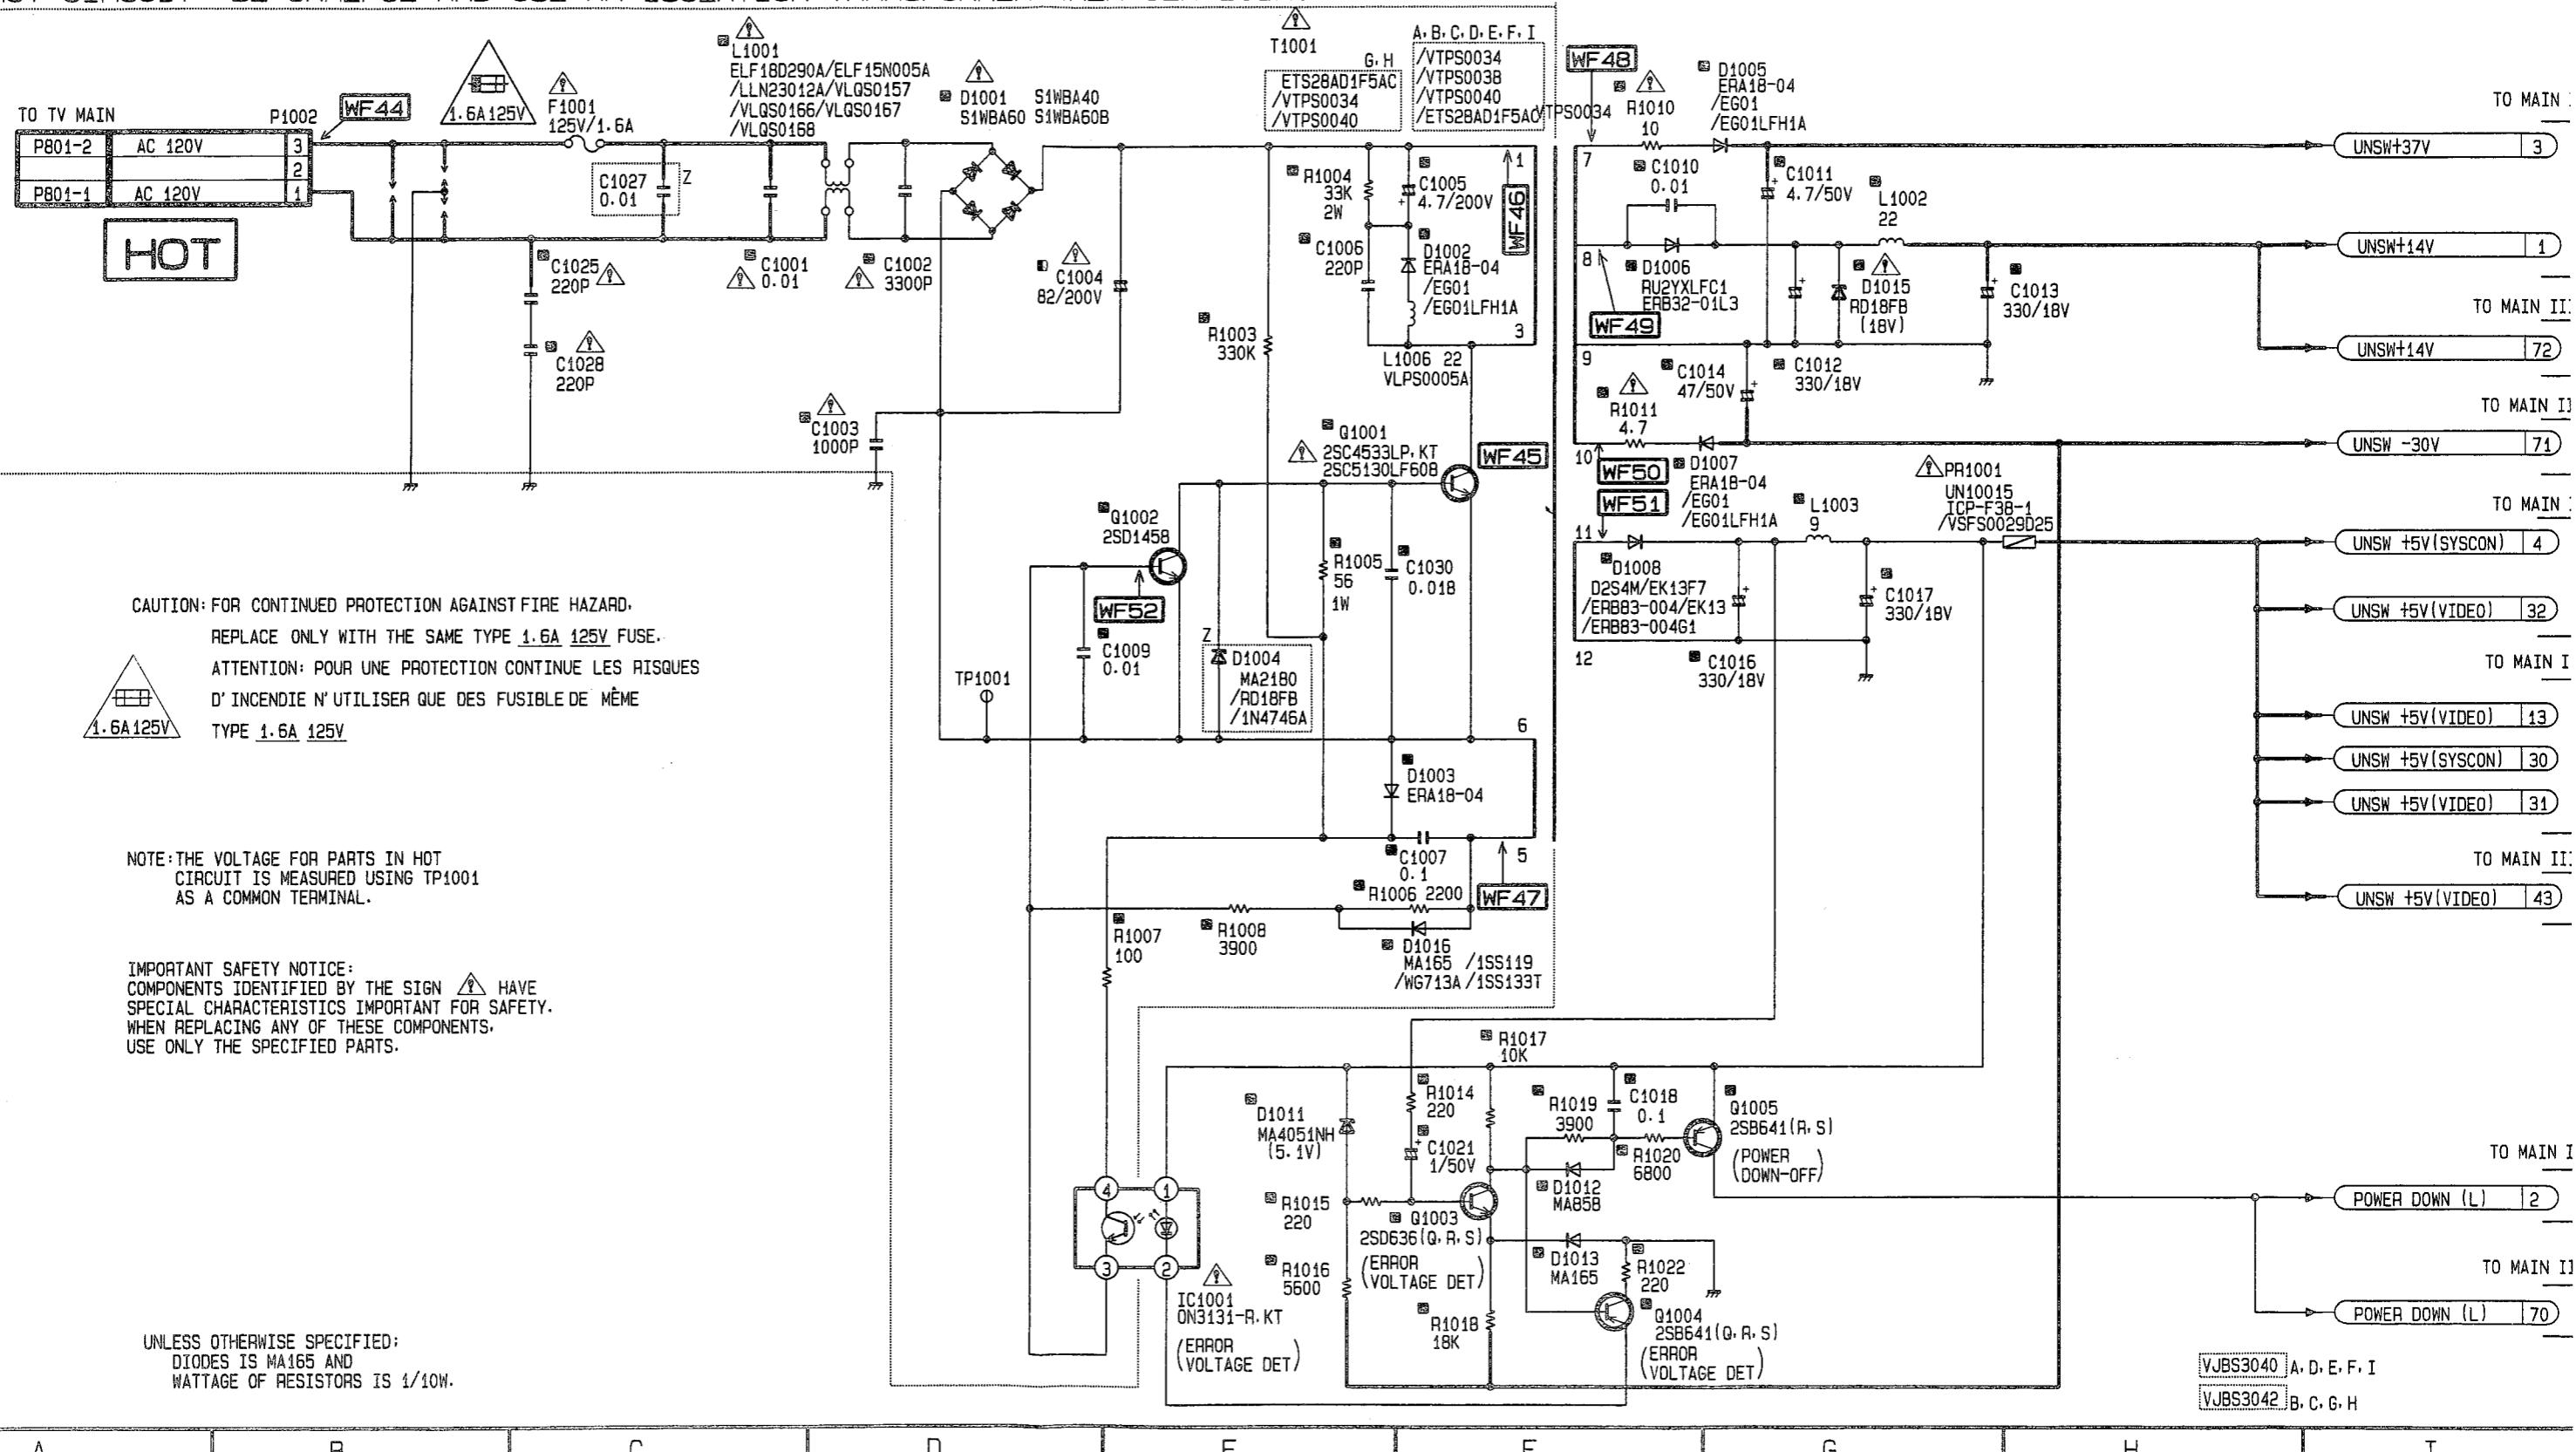

A

B

C

D

E

F


G

H

I

NOTE:

FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

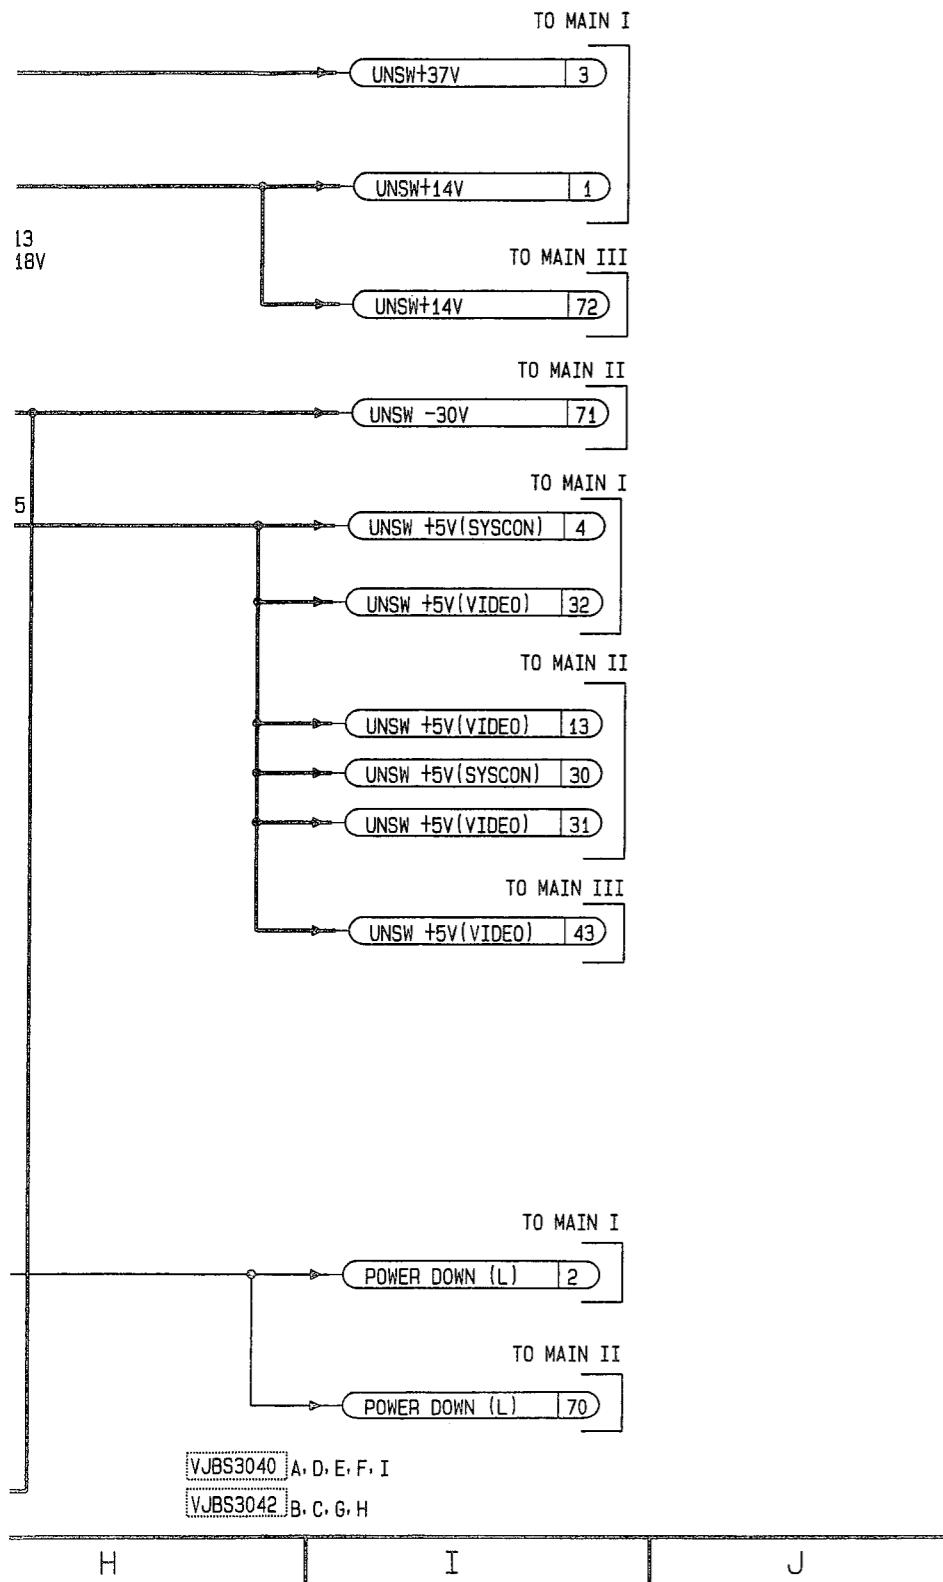

**MAIN IV
VOLTAGE CHART**

MODE PIN NO.	REC	PLAY
IC1001		
1	5.1	5.1
2	4.4	4.4
3	2.2	2.2
4	0.6	0.6
Q1001		
E	0	0
C	133.5	133.5
B	0.3	0.3
Q1002		
E	0	0
C	0.3	0.3
B	0.6	0.6
Q1003		
E	-0.6	-0.6
C	4.1	4.1
B	0	0
Q1004		
E	4.4	4.4
C	0.1	0.1
B	4.1	4.1
Q1005		
E	5.1	5.1
C	5.1	5.1
B	4.7	4.7
TP1001	0	0

**COMPARISON CHART
OF MODELS & MARKS**

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z

H

I

J

TV STEREO SCHEMATIC DIAGRAM (I)

REC AUDIO SIGNAL PB AUDIO SIGNAL


TO MAIN		P4201
PIN-1	AUDIO -5.6V	1
PIN-2	FM MONO (L)	2
PIN-3	FM STEREO (L)	3
PIN-4	TUNER AUDIO	4
PIN-5	AUDIO DEFEAT (H)	5
PIN-6	MTS(H)/SAP(L)	6
PIN-7	STEREO(H)/MONO(L)	7
PIN-8	MTS SIGNAL (L)	8

TO MAIN		P4202
PIN-9	SAP SIGNAL (L)	9
PIN-10	GND	10
PIN-11		11
PIN-12	UNSW +5V (VIDEO)	12
PIN-13	SW +12V	13


TO MAIN		P4203
PIN-14	GND	14
PIN-15	GND	15
PIN-16	GND	16
PIN-17	GND	17
PIN-18		18
PIN-19		19
PIN-20	AUDIO MUTE (H)	20
PIN-21	UNSW +14V	21

TO MAIN		P4204
PIN-22	AUDIO AMP MUTE (H)	22
PIN-23	TV VOLUME CONTROL	23
PIN-24	TUNER SIGNAL (L)	24
PIN-25	FM (L)	25
PIN-26	RF AUDIO	26
PIN-27	GND	27
PIN-28	AUDIO	28
PIN-29	DC +17V	29


IC4901 VCRS0214 (MTS/SAP AUDIO PROCESS)

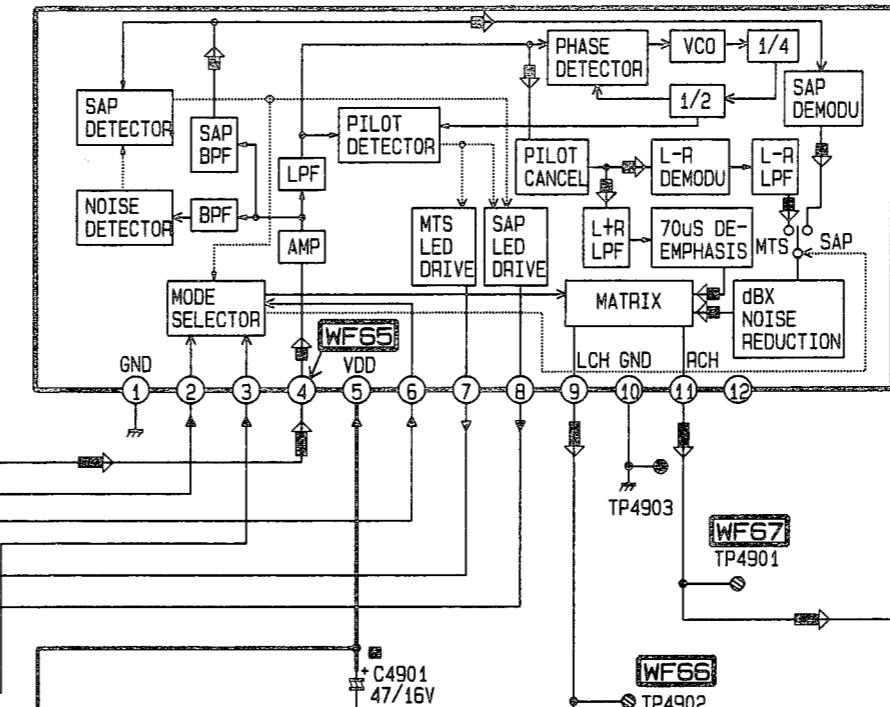


IC9201 AN7420 (FM SIGNAL PROCESS)

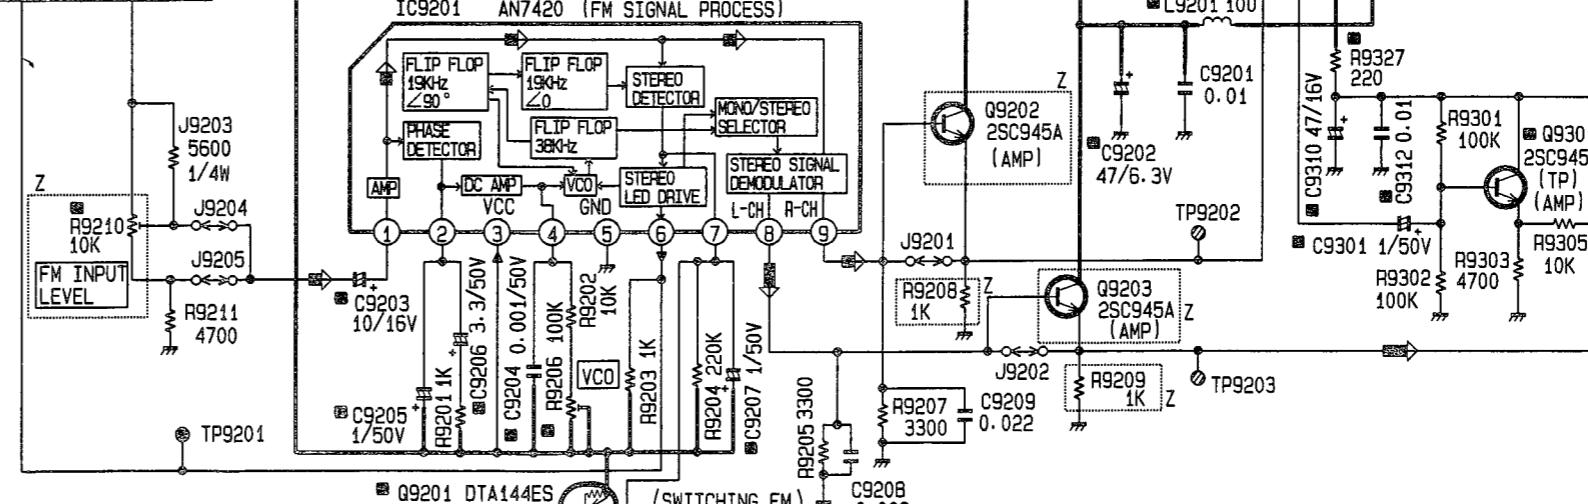

J9301 Z

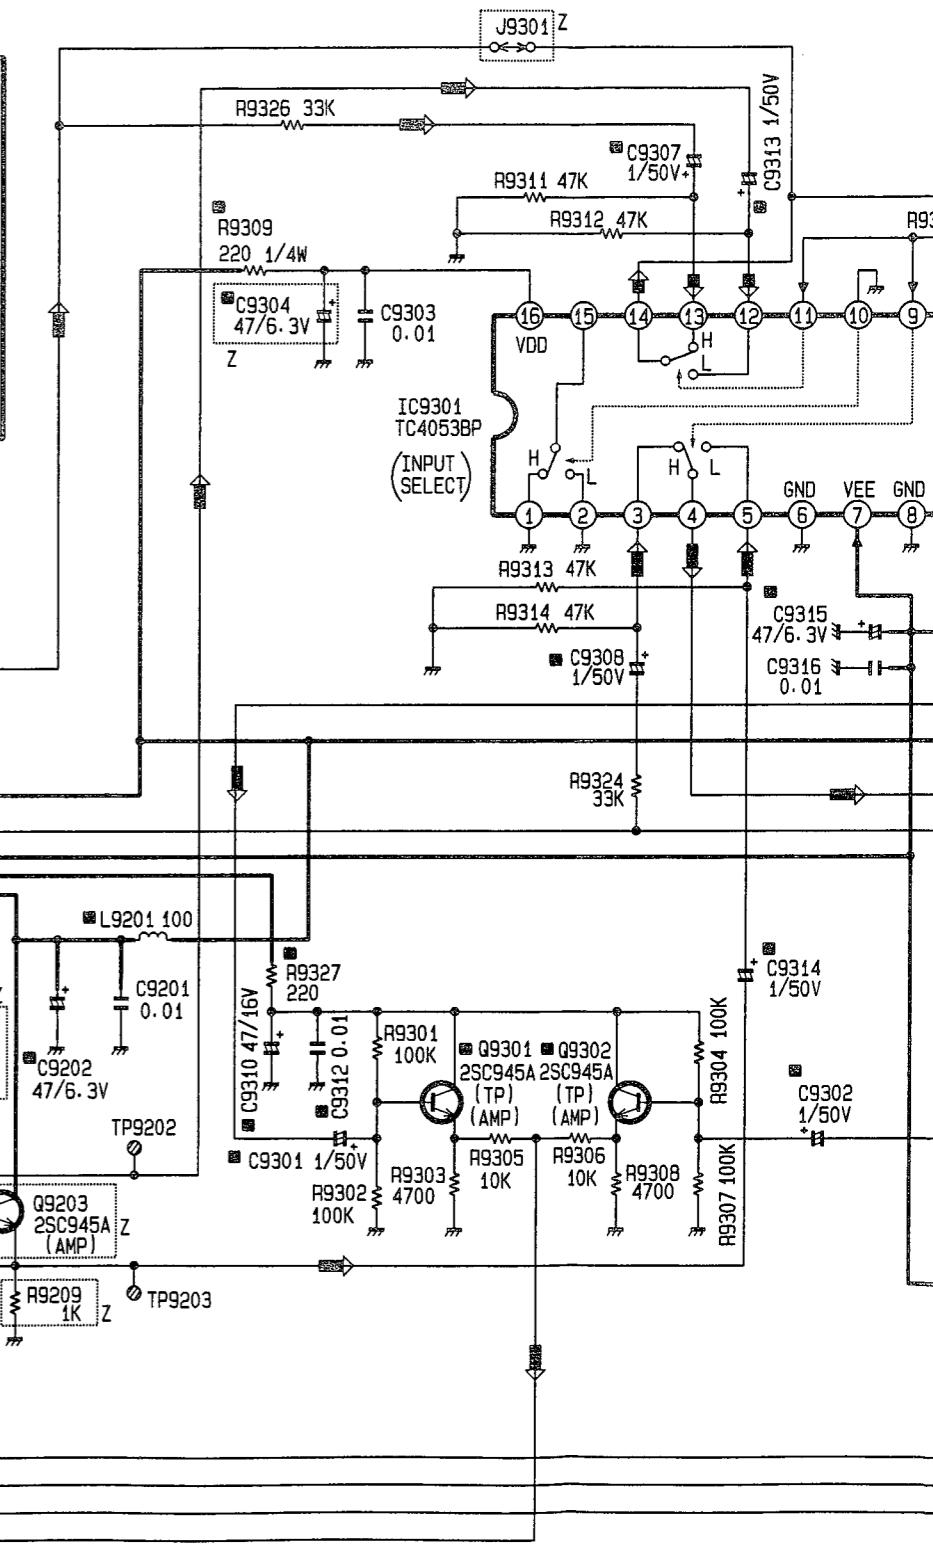

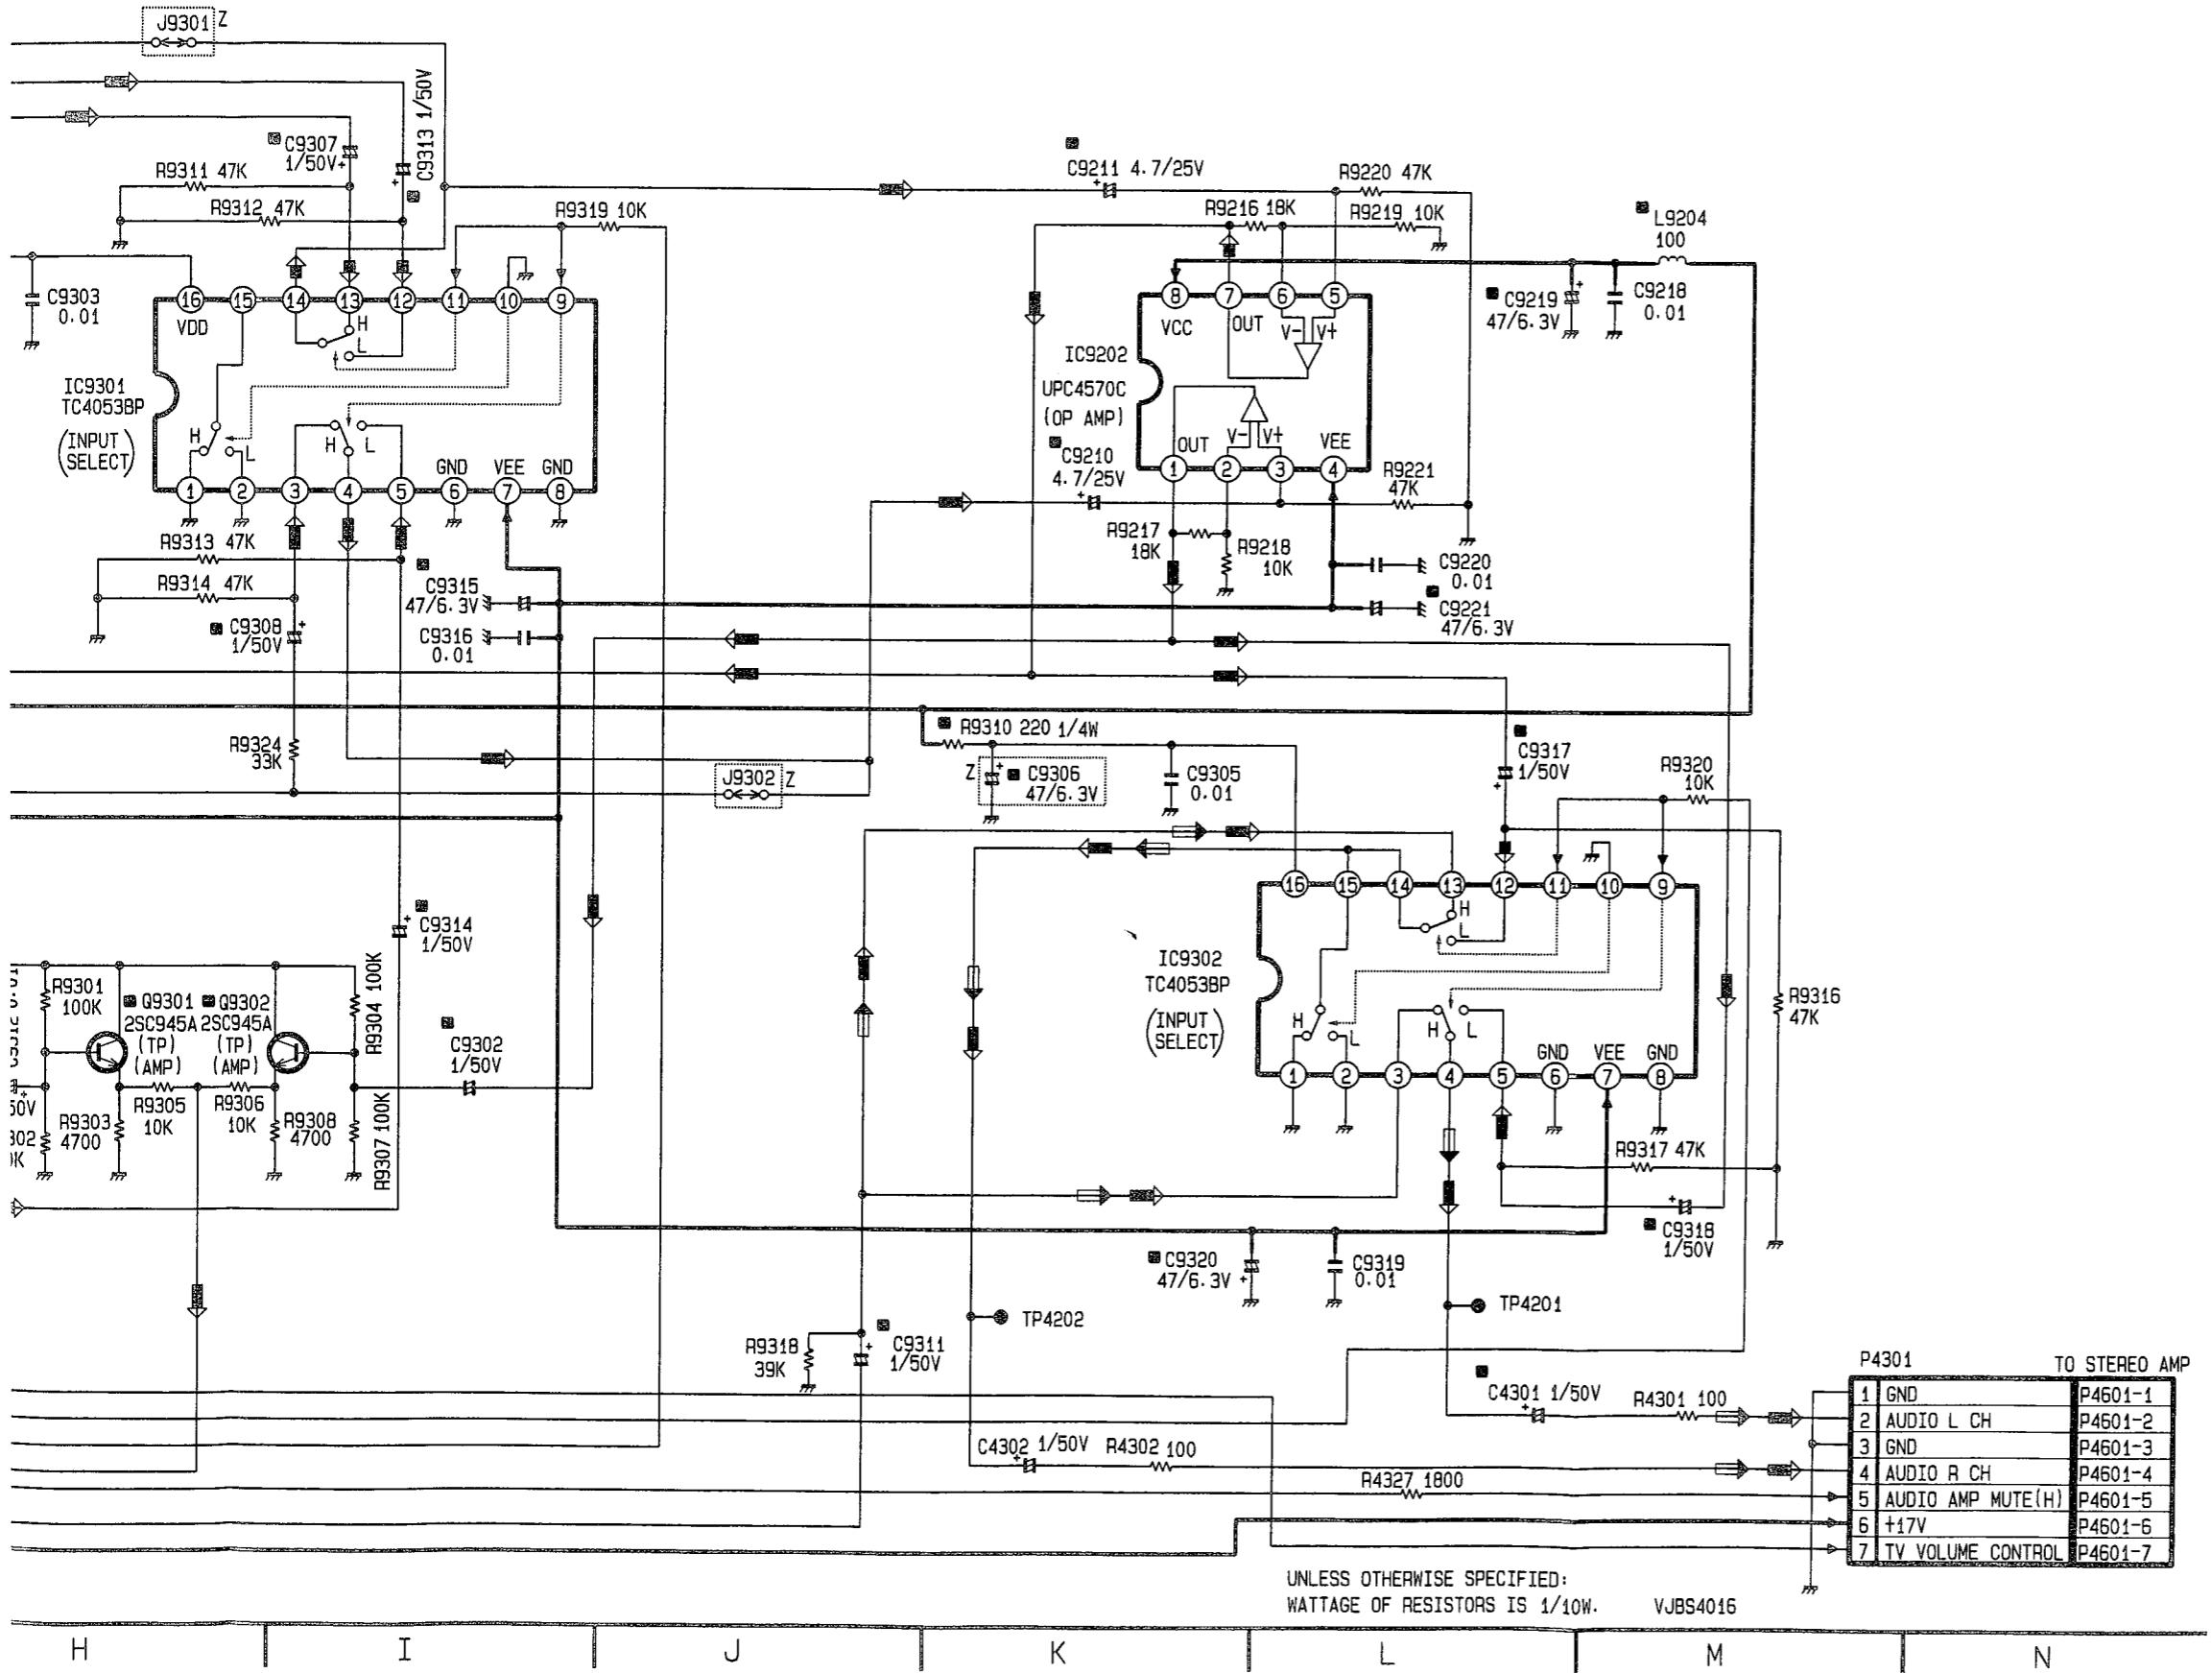


TV STEREO VOLTAGE CHART

MODE PIN NO.	REC	PLAY
IC4901		
IC9302		
1	0	0
2	0	0
3	0	0
4	0	0
5	12.1	12.1
6	5.1	5.1
7	5.1	5.1
8	5.1	5.1
9	4.5	4.5
10	0	0
11	4.5	4.5
12	---	---
IC9201		
1	3.1	3.1
2	3.7	3.7
3	5.1	5.1
4	4.2	4.2
5	0	0
6	5.1	5.1
7	4.5	4.5
8	2.8	2.8
9	2.8	2.8
Q4306		
E	12.1	12.1
C	-5.2	-5.2
B	11.7	11.7
Q9201		
E	5.1	5.1
C	4.4	4.4
B	5.1	5.1
Q9301		
E	4.9	4.9
C	11.6	11.6
B	5.6	5.6
Q9302		
E	4.9	4.9
C	11.6	11.6
B	5.5	5.5
TP4201	0	0
TP4202	0	0
TP4901	4.5	4.5
TP4902	4.5	4.5
TP4903	0	0
TP9201	5.1	5.1
TP9202	2.8	2.8
TP9203	2.8	2.8

TV MAIN / CRT SCHEMATIC DIAGRAM


NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN  HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

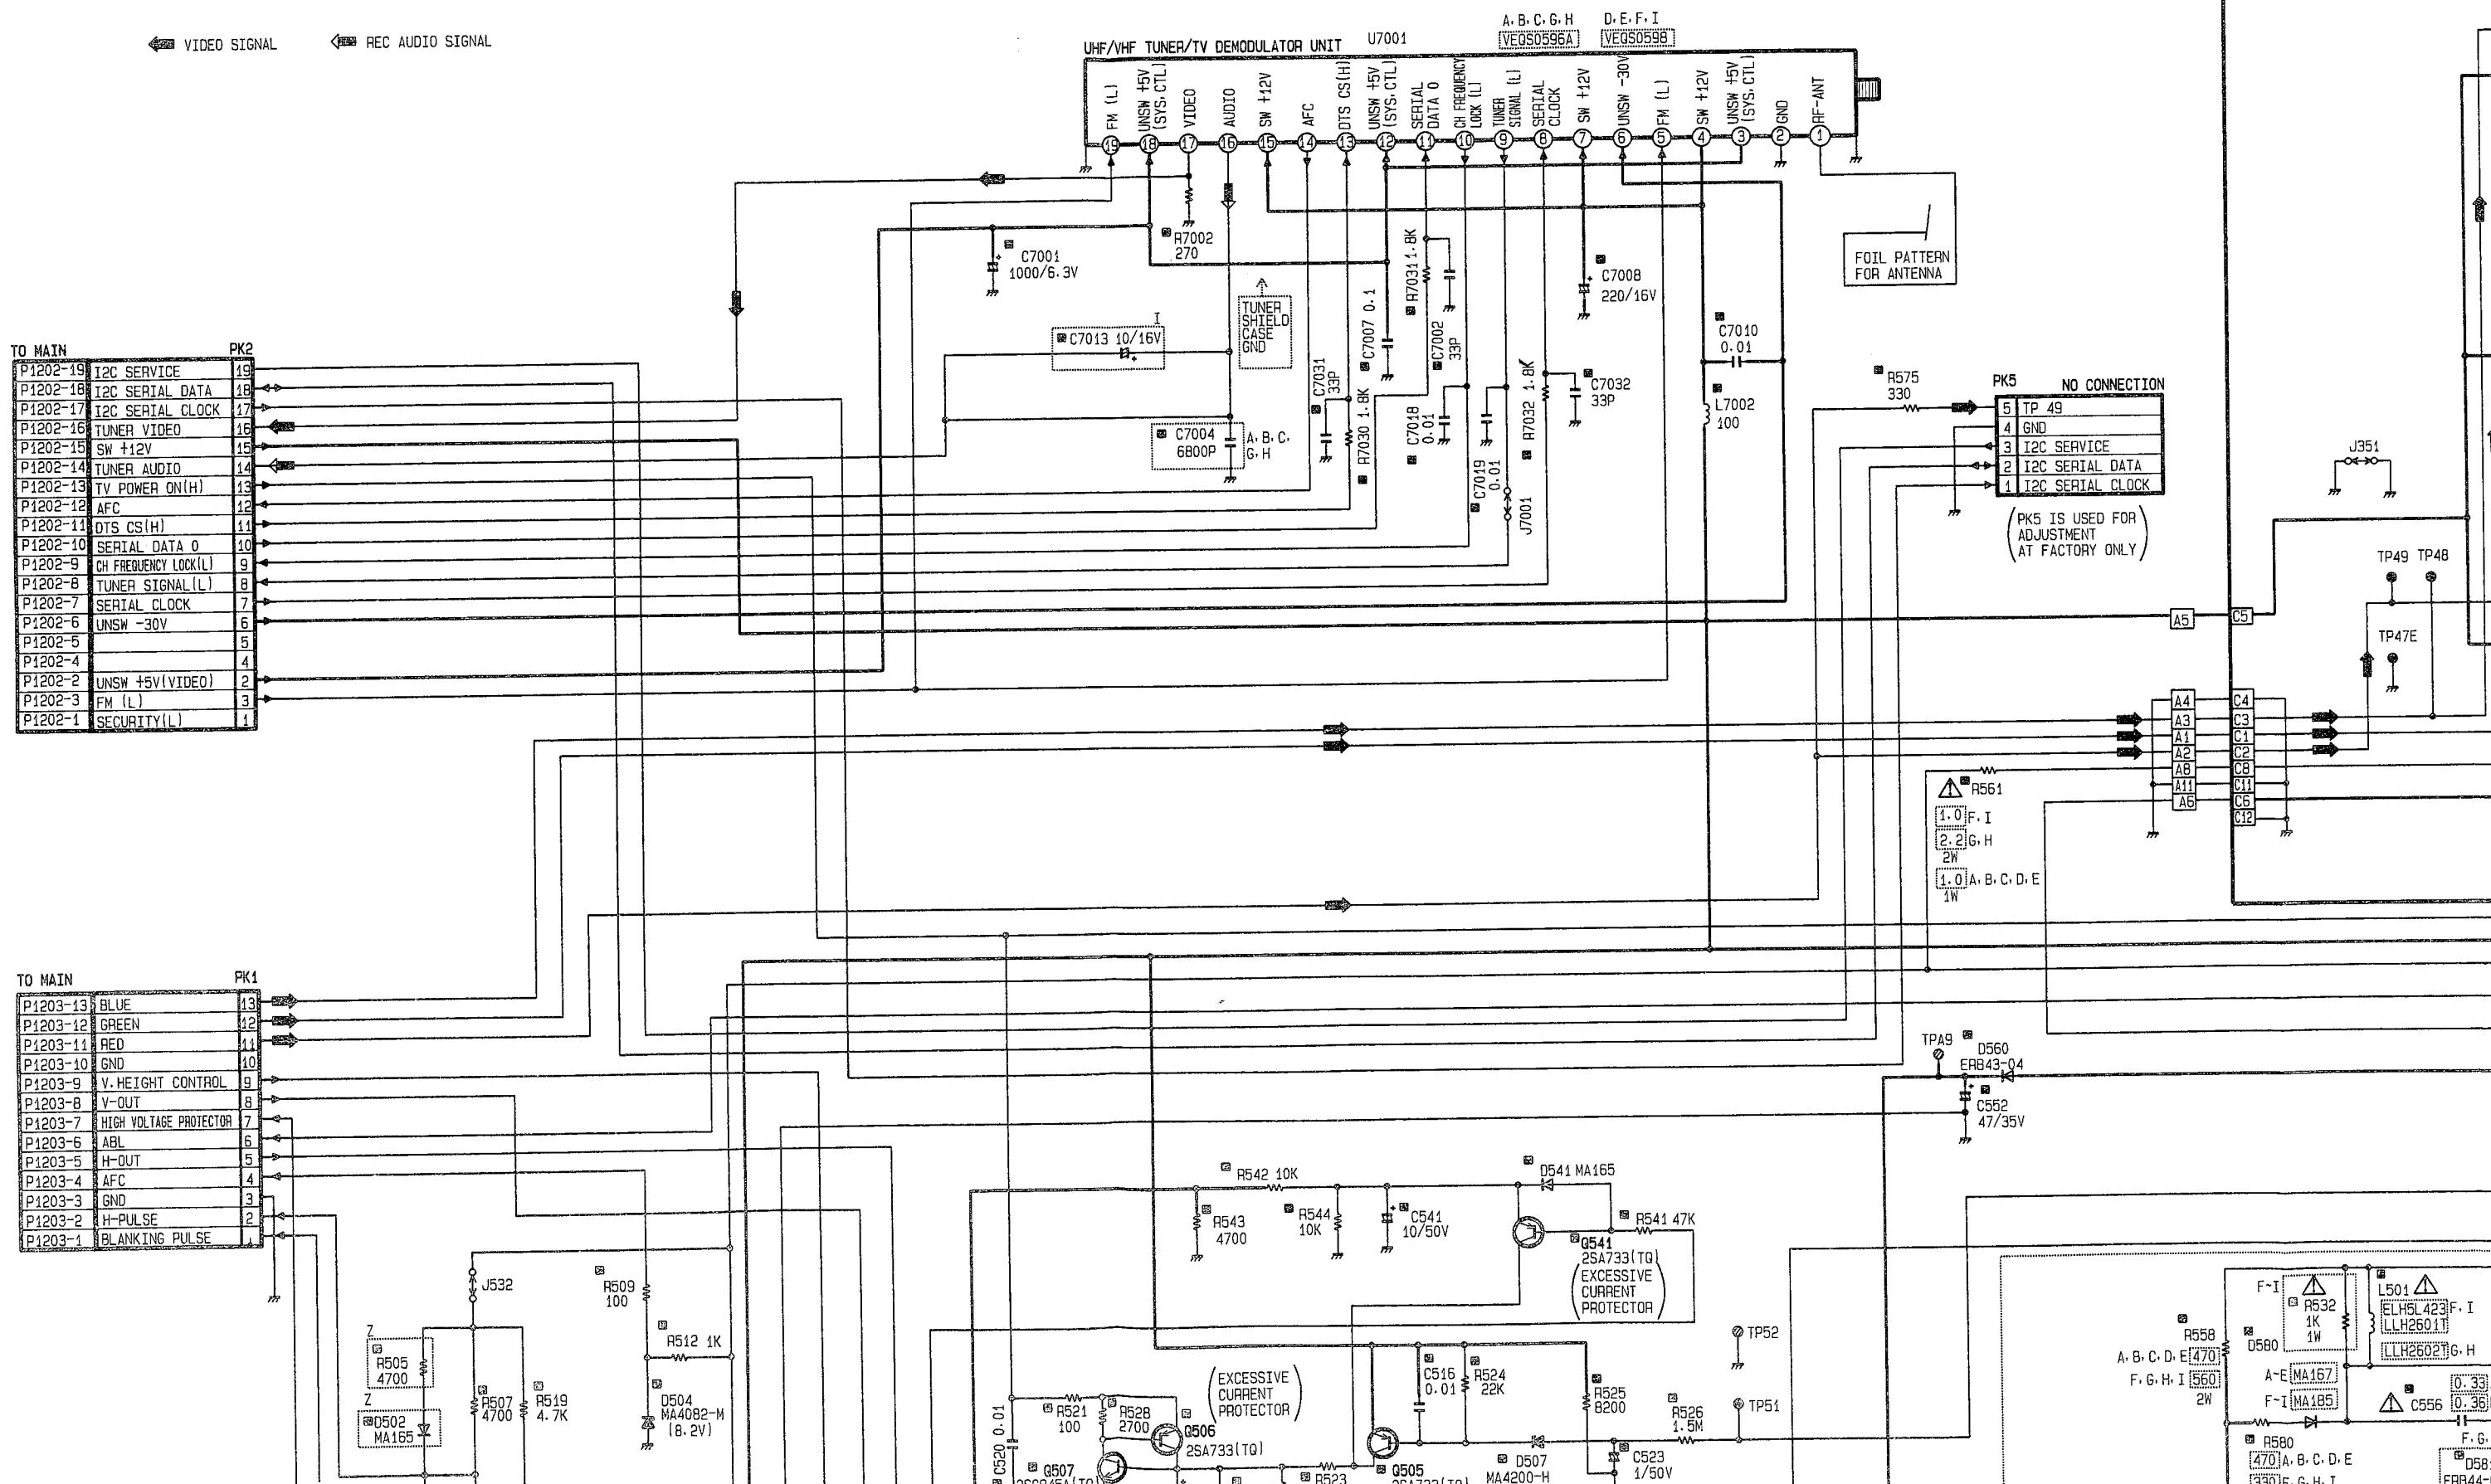

⚠ HAVE
FOR SAFETY.
VENTS.

CRT C, B, A

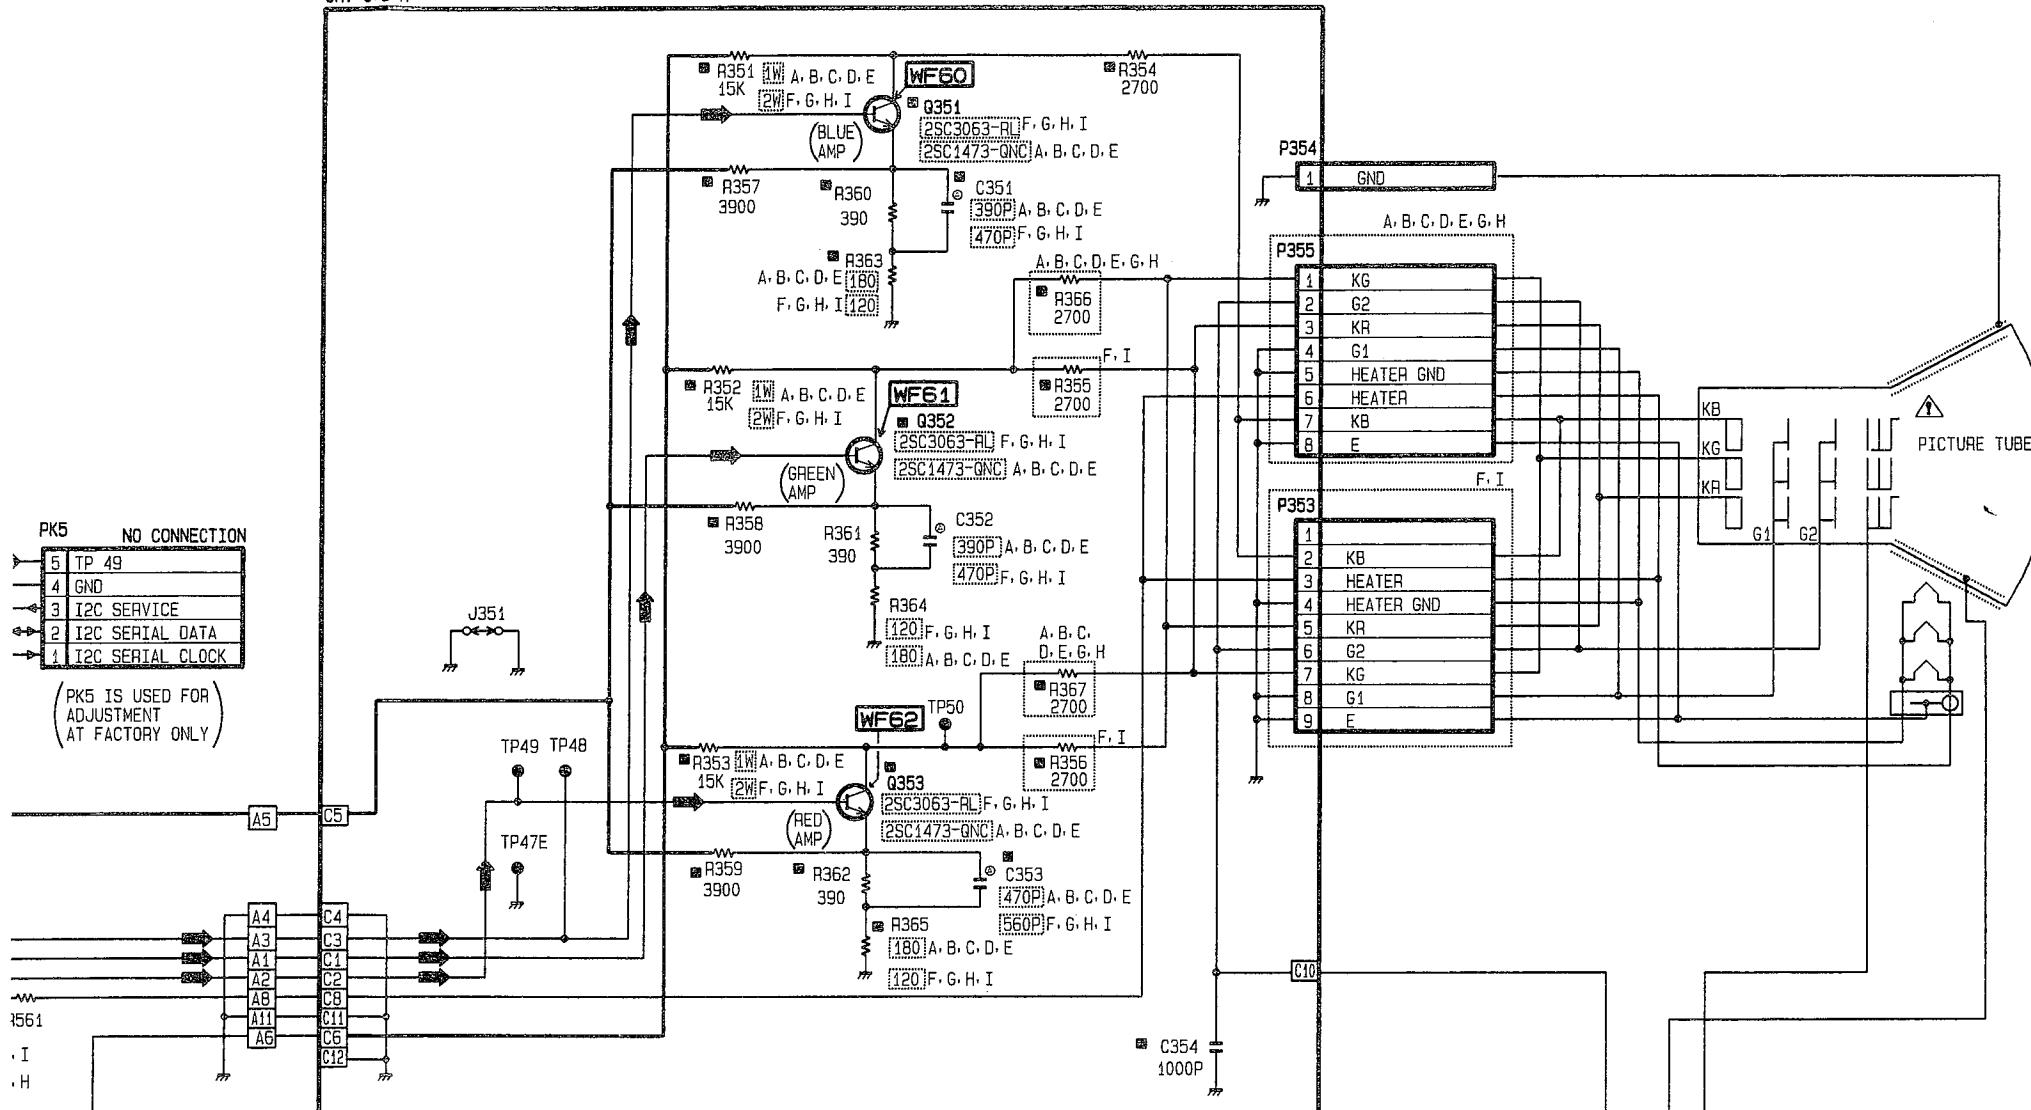

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z


TV MAIN
VOLTAGE CHART


MODE	PIN NO.	REC	PLAY
IC451			
1	10.4	10.4	
2	3.8	3.8	
3	5.1	5.1	
4	0	0	
5	0	0	
6	0	0	
7	5.1	5.1	
8	24.5	24.5	
9	1.9	1.9	
10	1.3	1.3	
11	0	0	
12	11.8	11.8	
13	24.9	24.9	
IC801			
1	0	0	
2	125.9	125.9	
3	131.0	131.0	
4	125.2	125.2	
5	0	0	

CRT
VOLTAGE CHART

MODE	PIN NO.	REC	PLAY
Q351			
E	3.7	3.7	
C	137.0	137.0	
B	4.0	4.0	
Q352			
E	3.5	3.5	
C	143.0	143.0	
B	3.8	3.8	
Q353			
E	3.7	3.7	
C	138.5	138.5	
B	4.0	4.0	
TP47E	0	0	
TP48	4.0	4.0	
TP49	4.0	4.0	
TP50	139.0	139.0	


Q431	E	0	0
C	0	0	
B	2.1	2.1	
Q501	E	0	0
C	71.8	71.8	
B	0	0	
Q505	E	12.1	12.1
C	0	0	
B	12.0	12.0	
Q506	E	2.9	2.9
C	0	0	
B	2.9	2.9	
Q507	E	0	0
C	2.9	2.9	
B	0	0	
Q541	E	16.7	16.7
C	0	0	
B	14.3	14.3	
Q551	E	0	0
C	920.0	920.0	

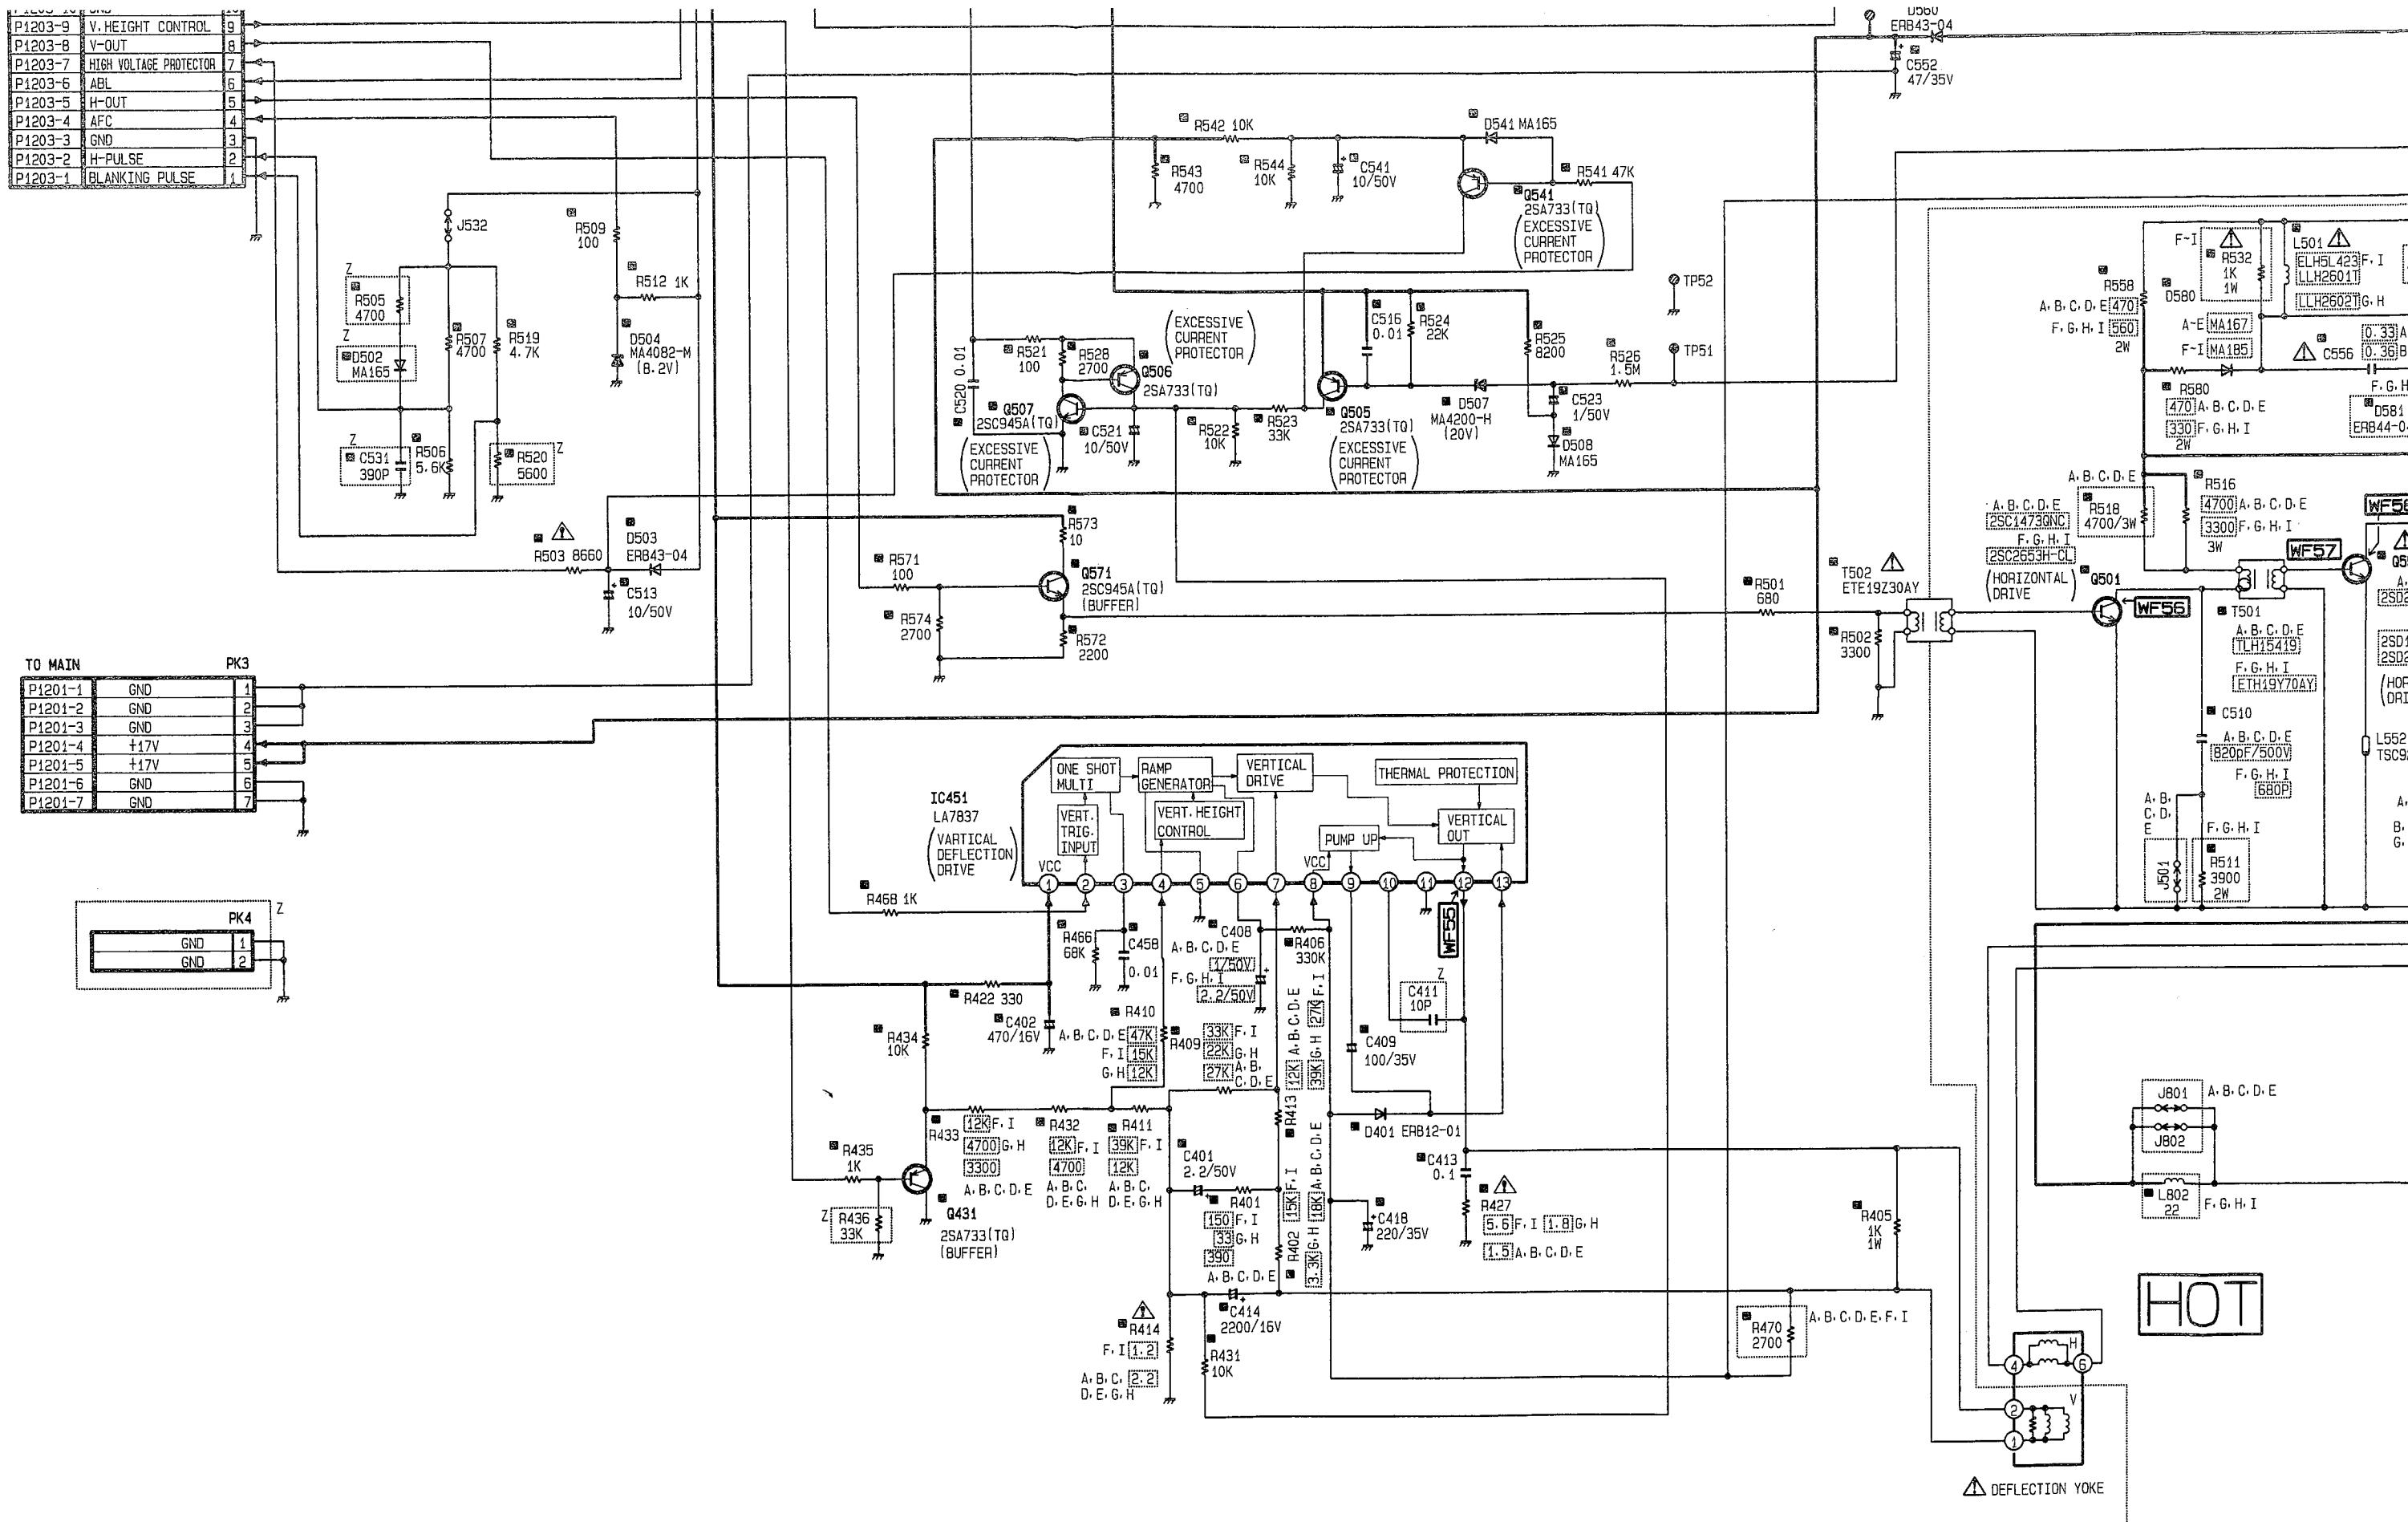

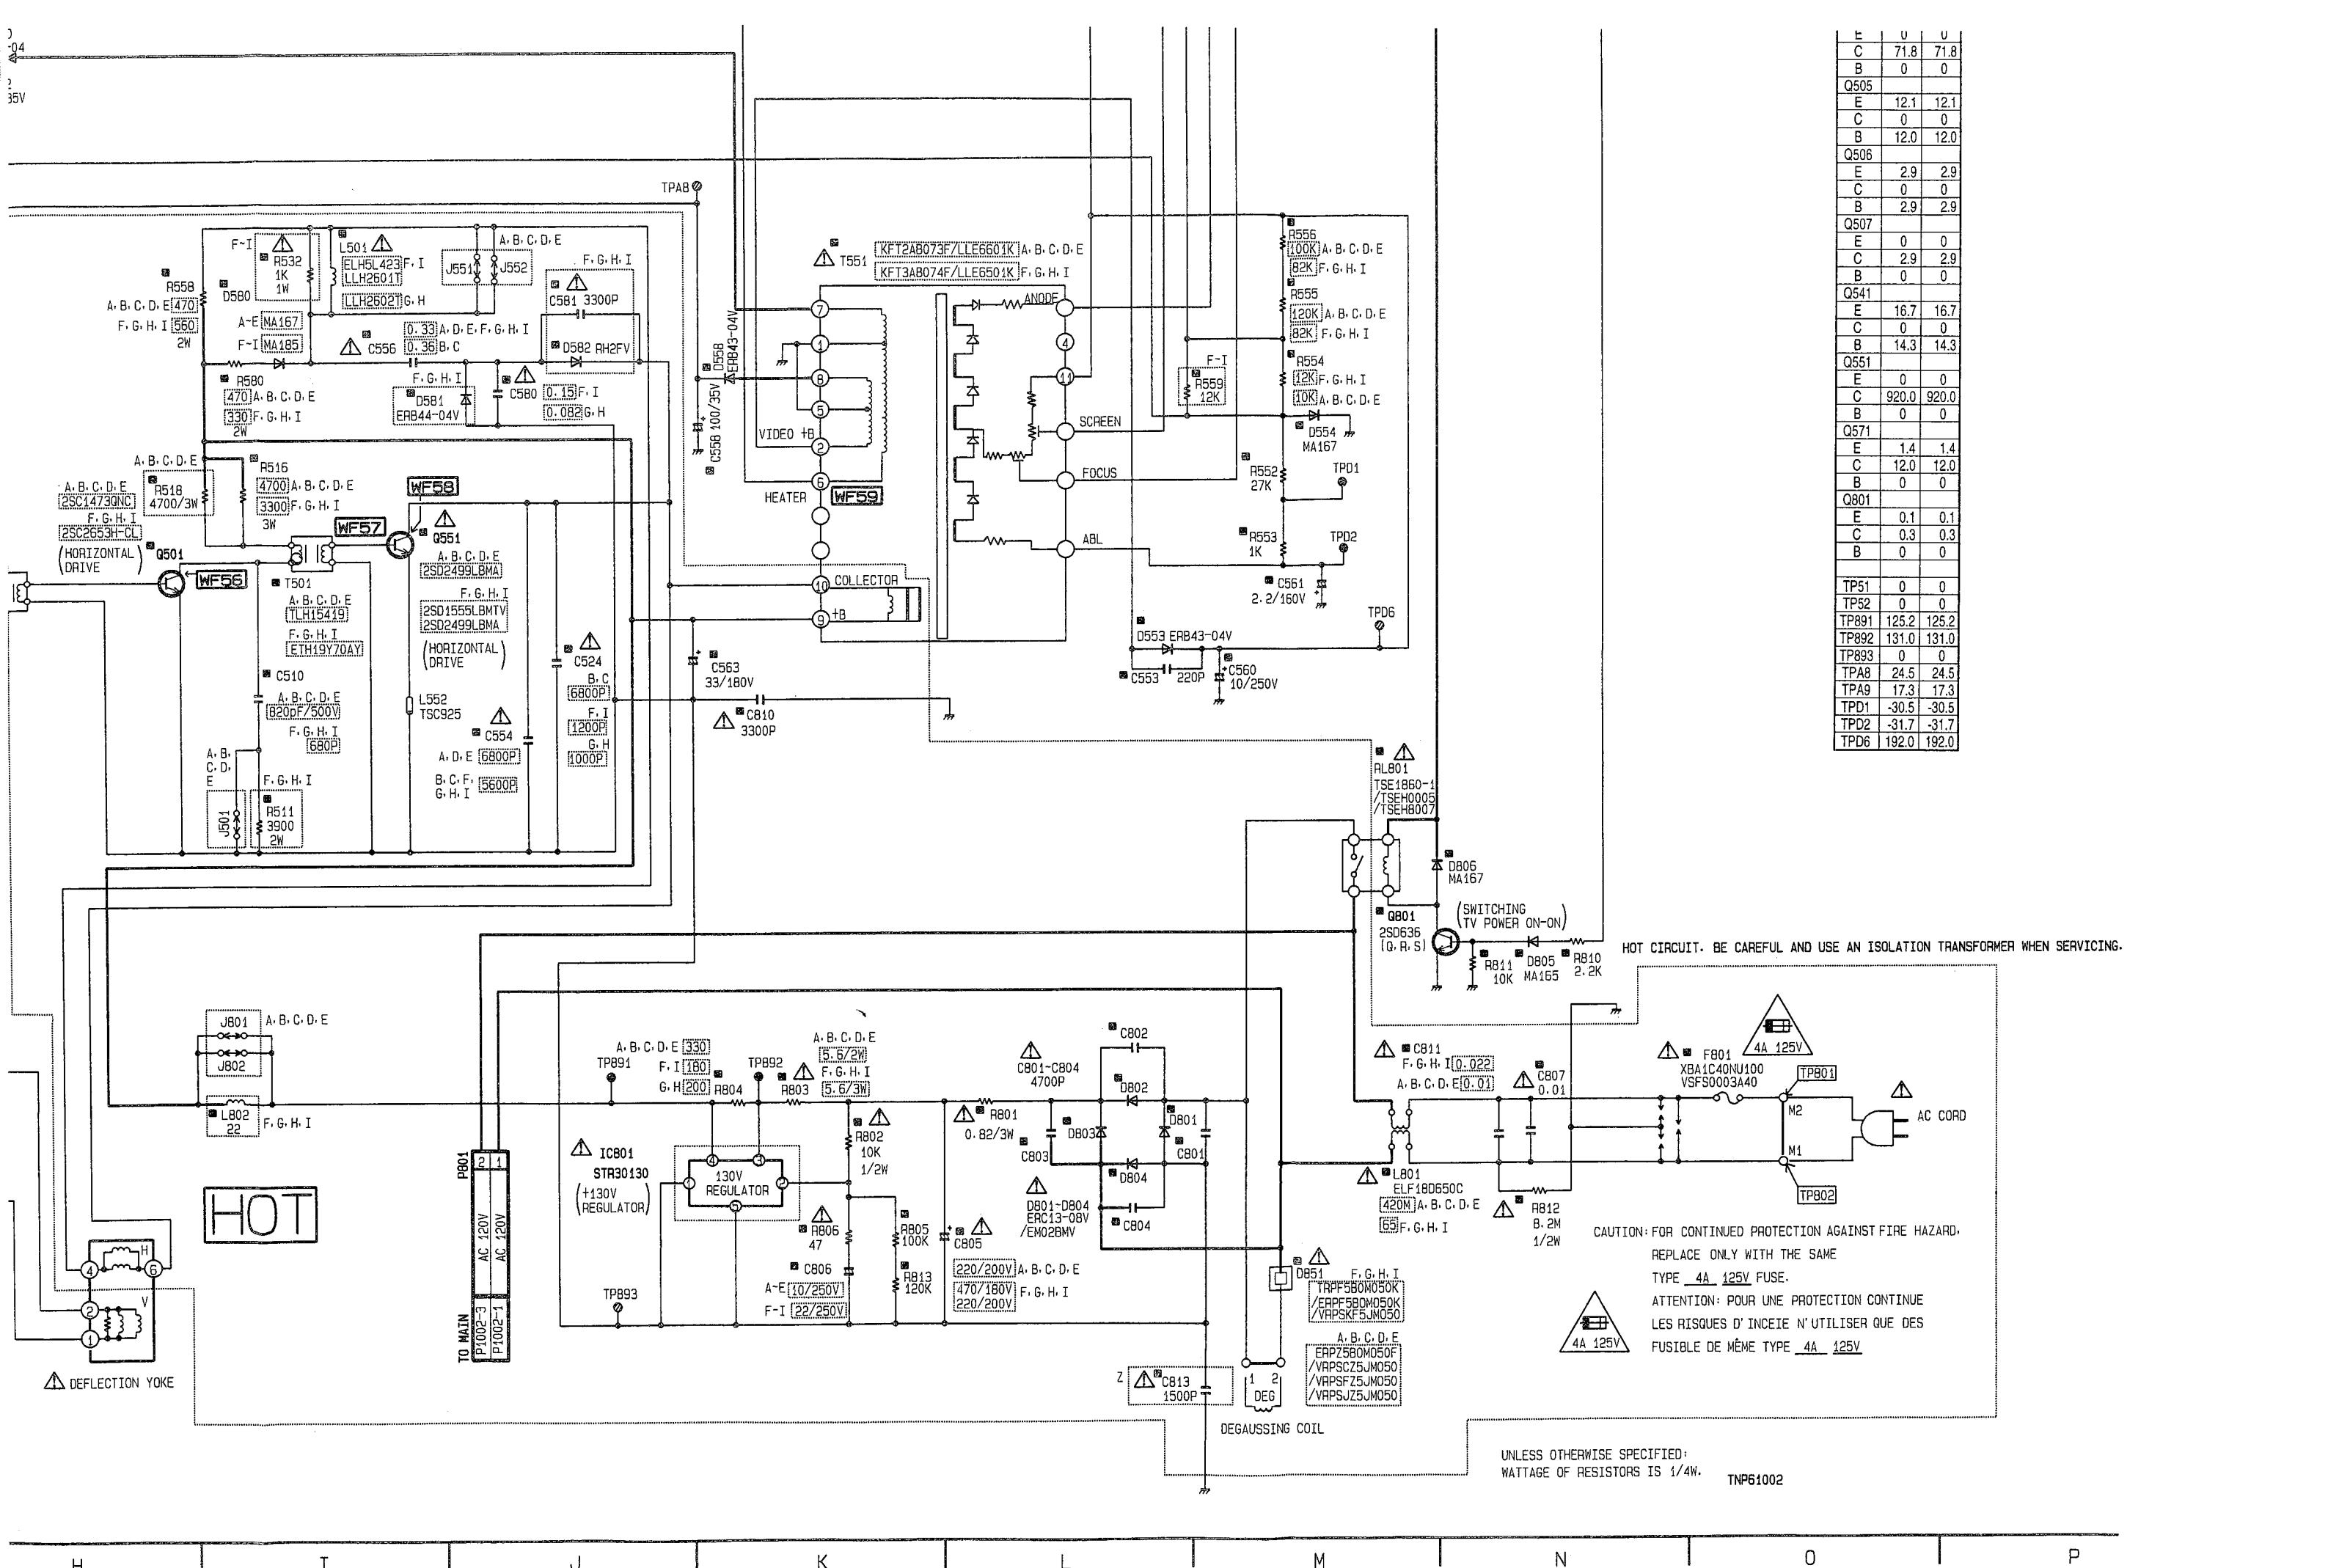


UHF/VHF TUNER/TV DEMODULATOR SCHEMATIC DIAGRAM (A,B,C,G,H)

"FOR REFERENCE ONLY"

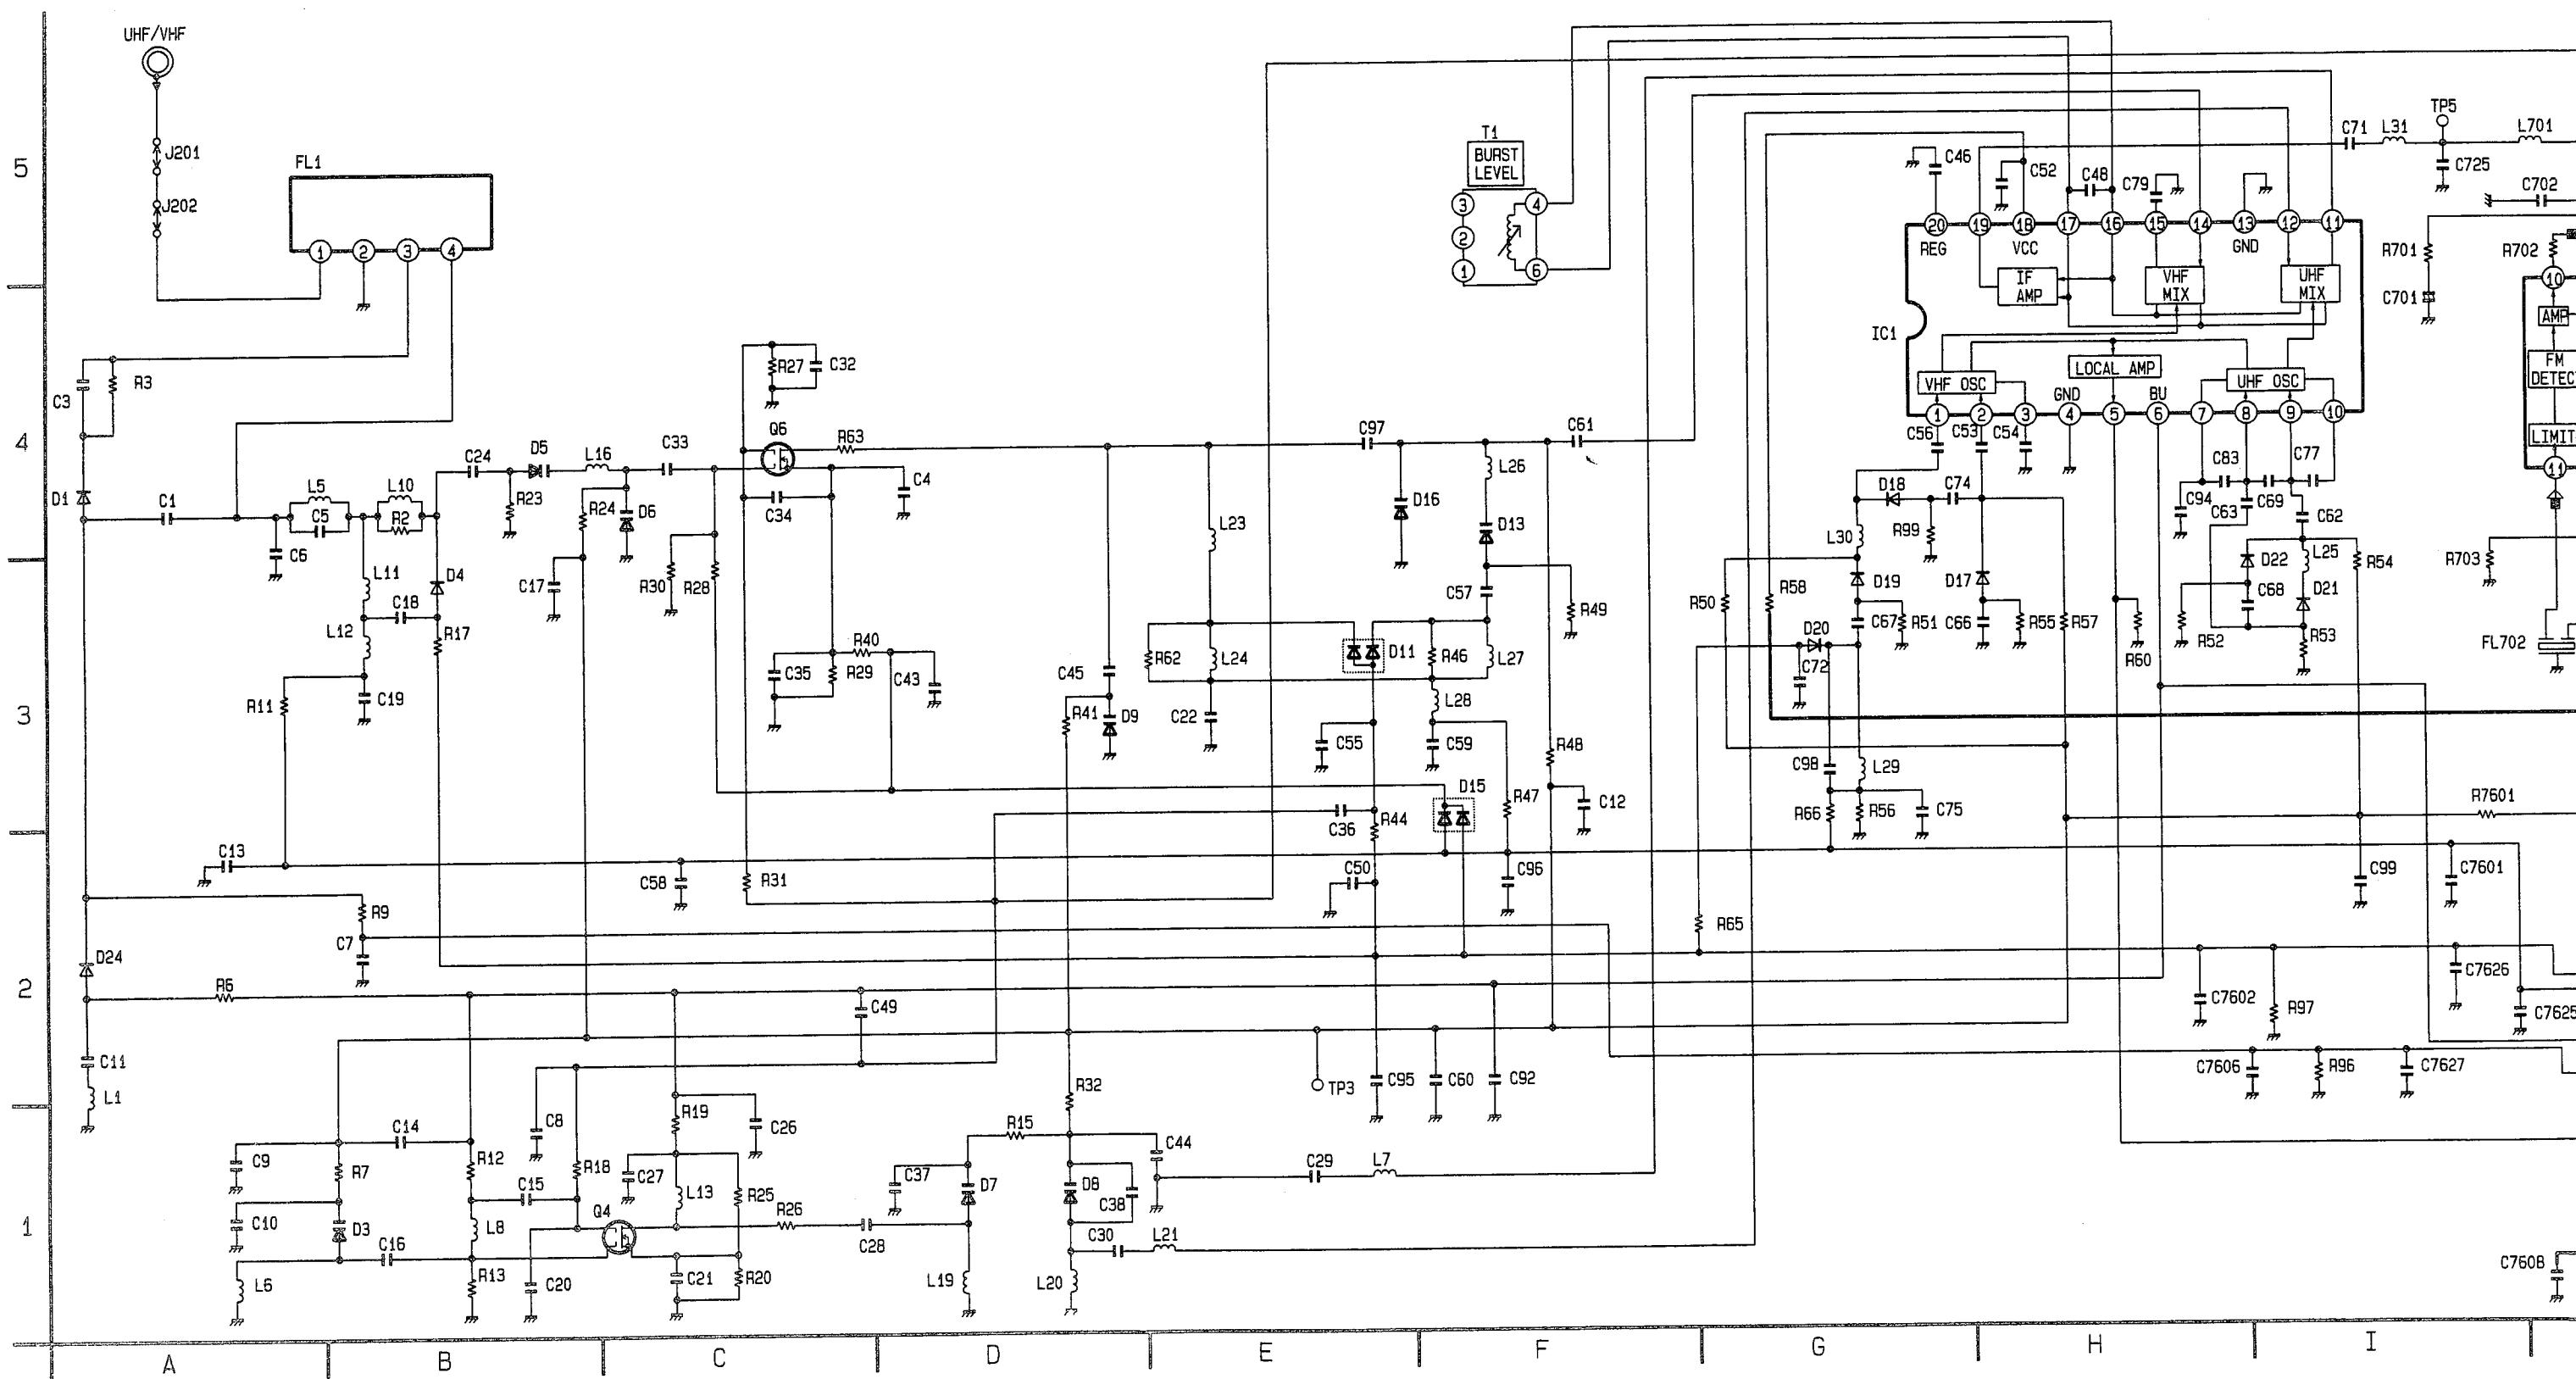

E ONLY

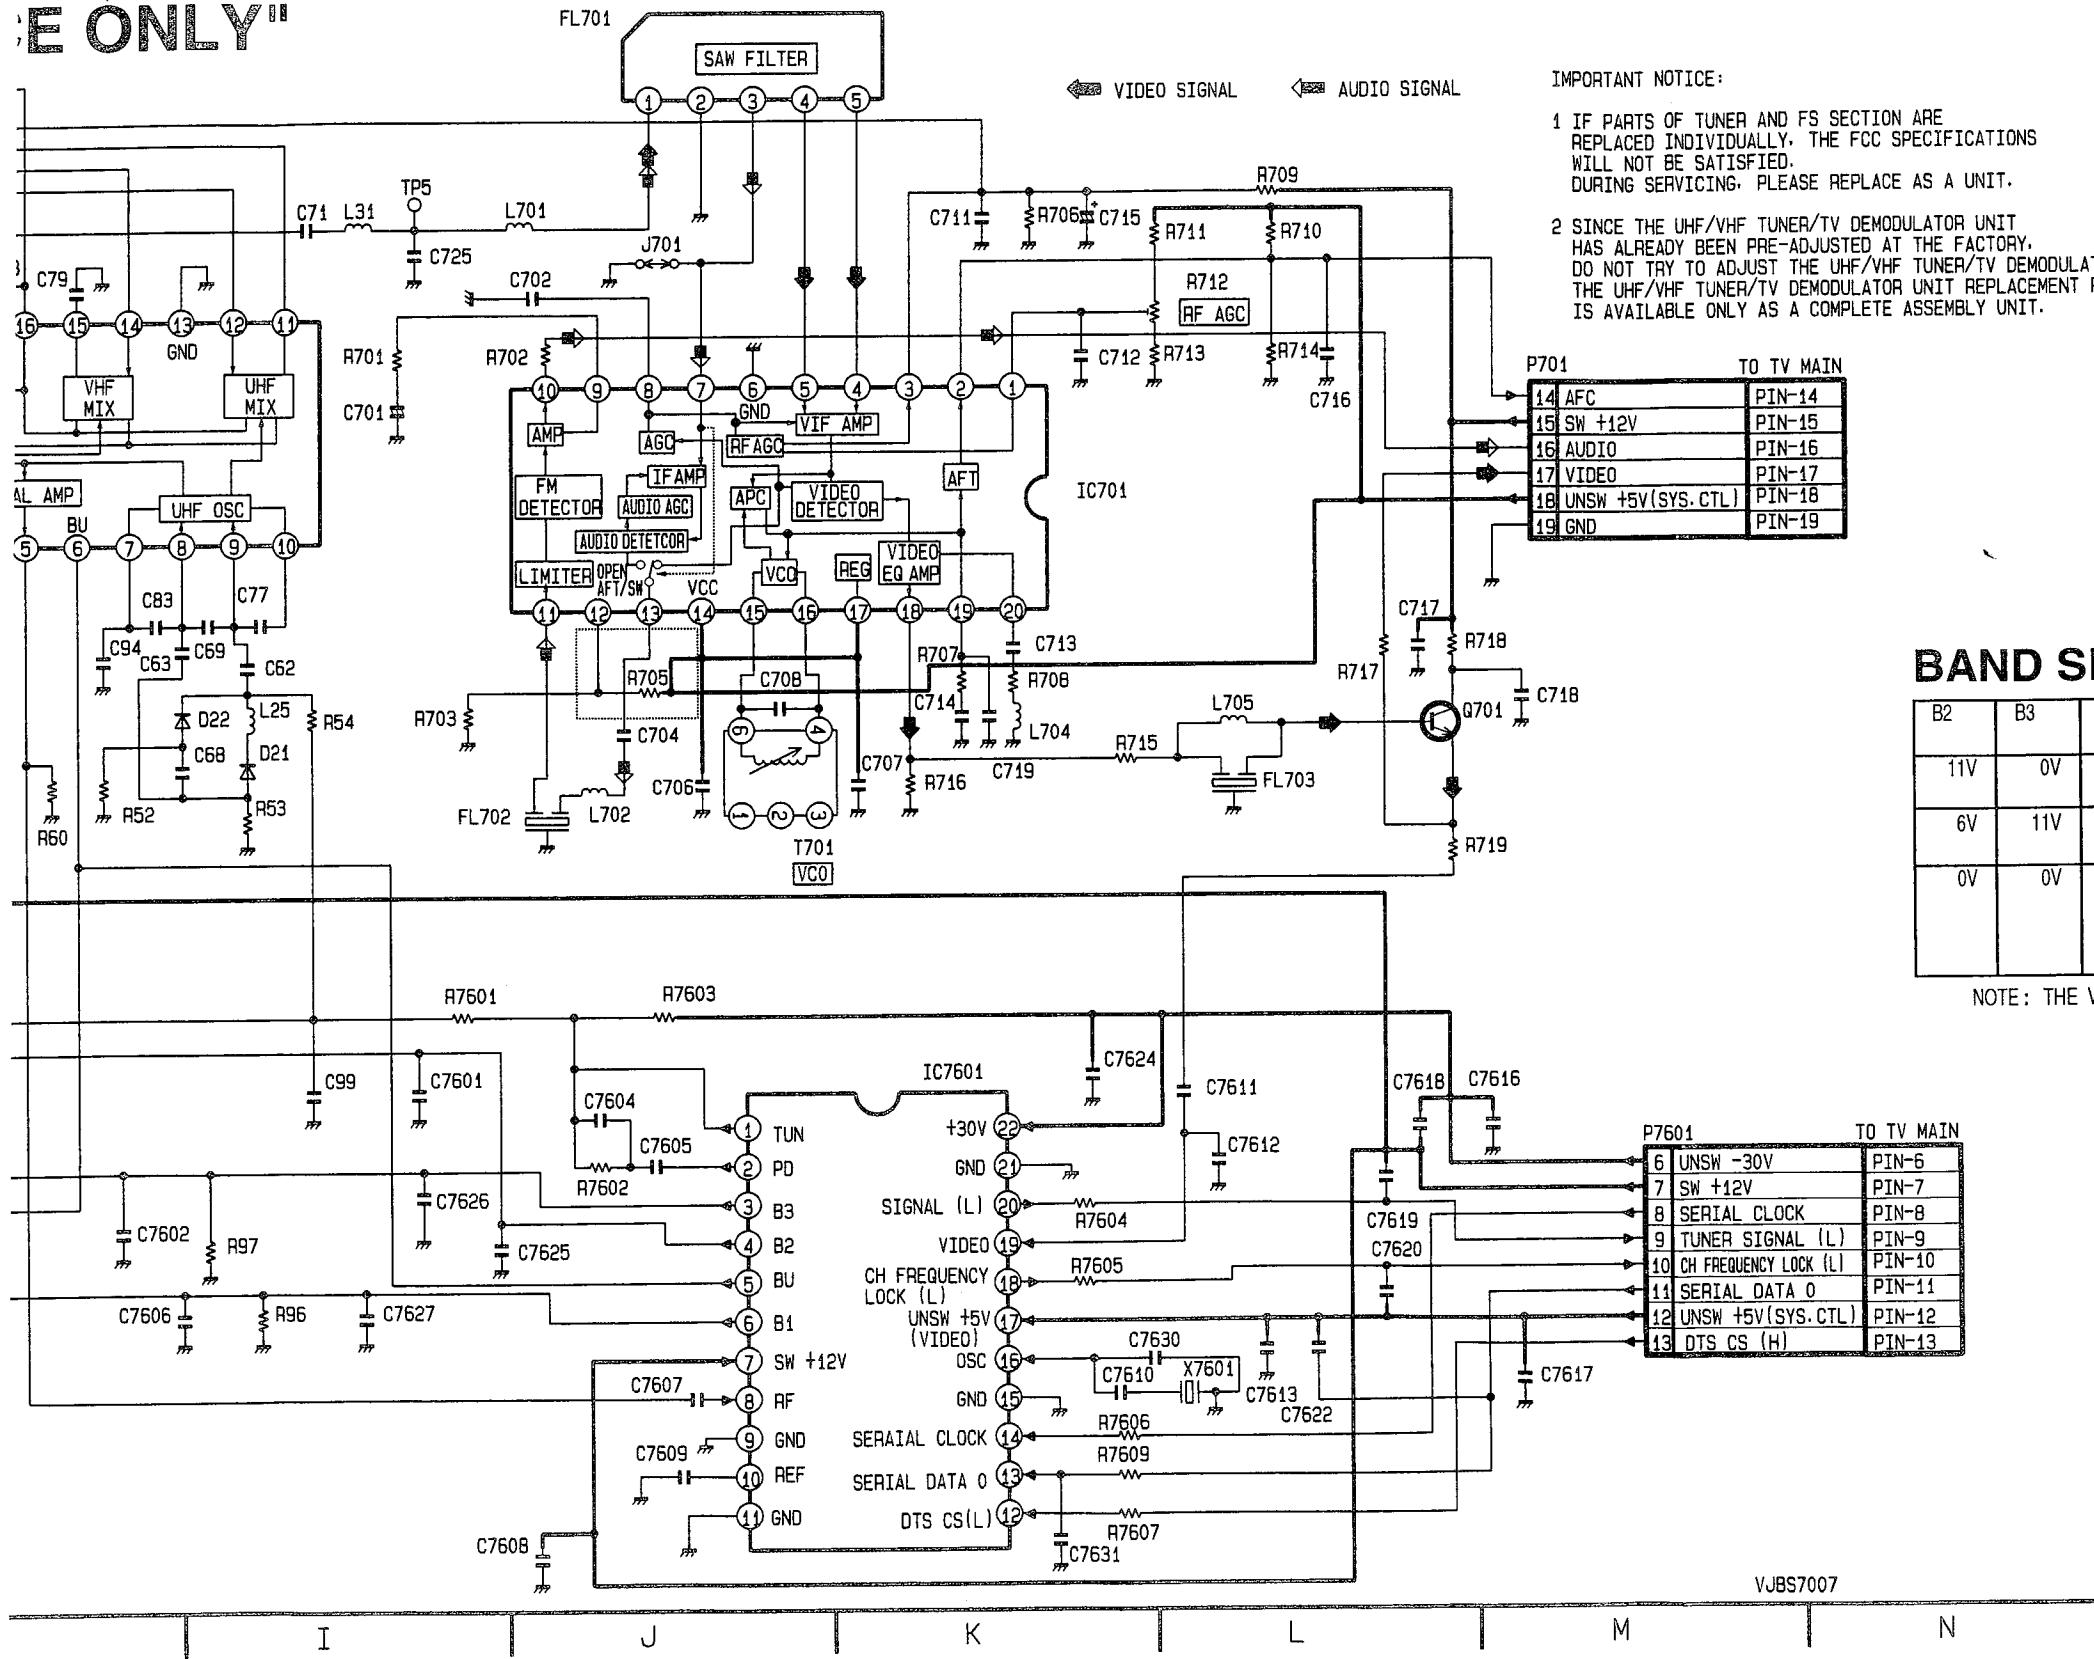

IMPORTANT NOTICE:

- 1 IF PARTS OF TUNER AND FS SECTION ARE REPLACED INDIVIDUALLY, THE FCC SPECIFICATIONS WILL NOT BE SATISFIED. DURING SERVICING, PLEASE REPLACE AS A UNIT.
- 2 SINCE THE UHF/VHF TUNER/TV DEMODULATOR UNIT HAS ALREADY BEEN PRE-ADJUSTED AT THE FACTORY, DO NOT TRY TO ADJUST THE UHF/VHF TUNER/TV DEMODULATOR UNIT. THE UHF/VHF TUNER/TV DEMODULATOR UNIT REPLACEMENT PART IS AVAILABLE ONLY AS A COMPLETE ASSEMBLY UNIT.

NOTE:


FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.


BAND SELECTION CHART

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z


VIDEO SIGNAL AUDIO SIGNAL

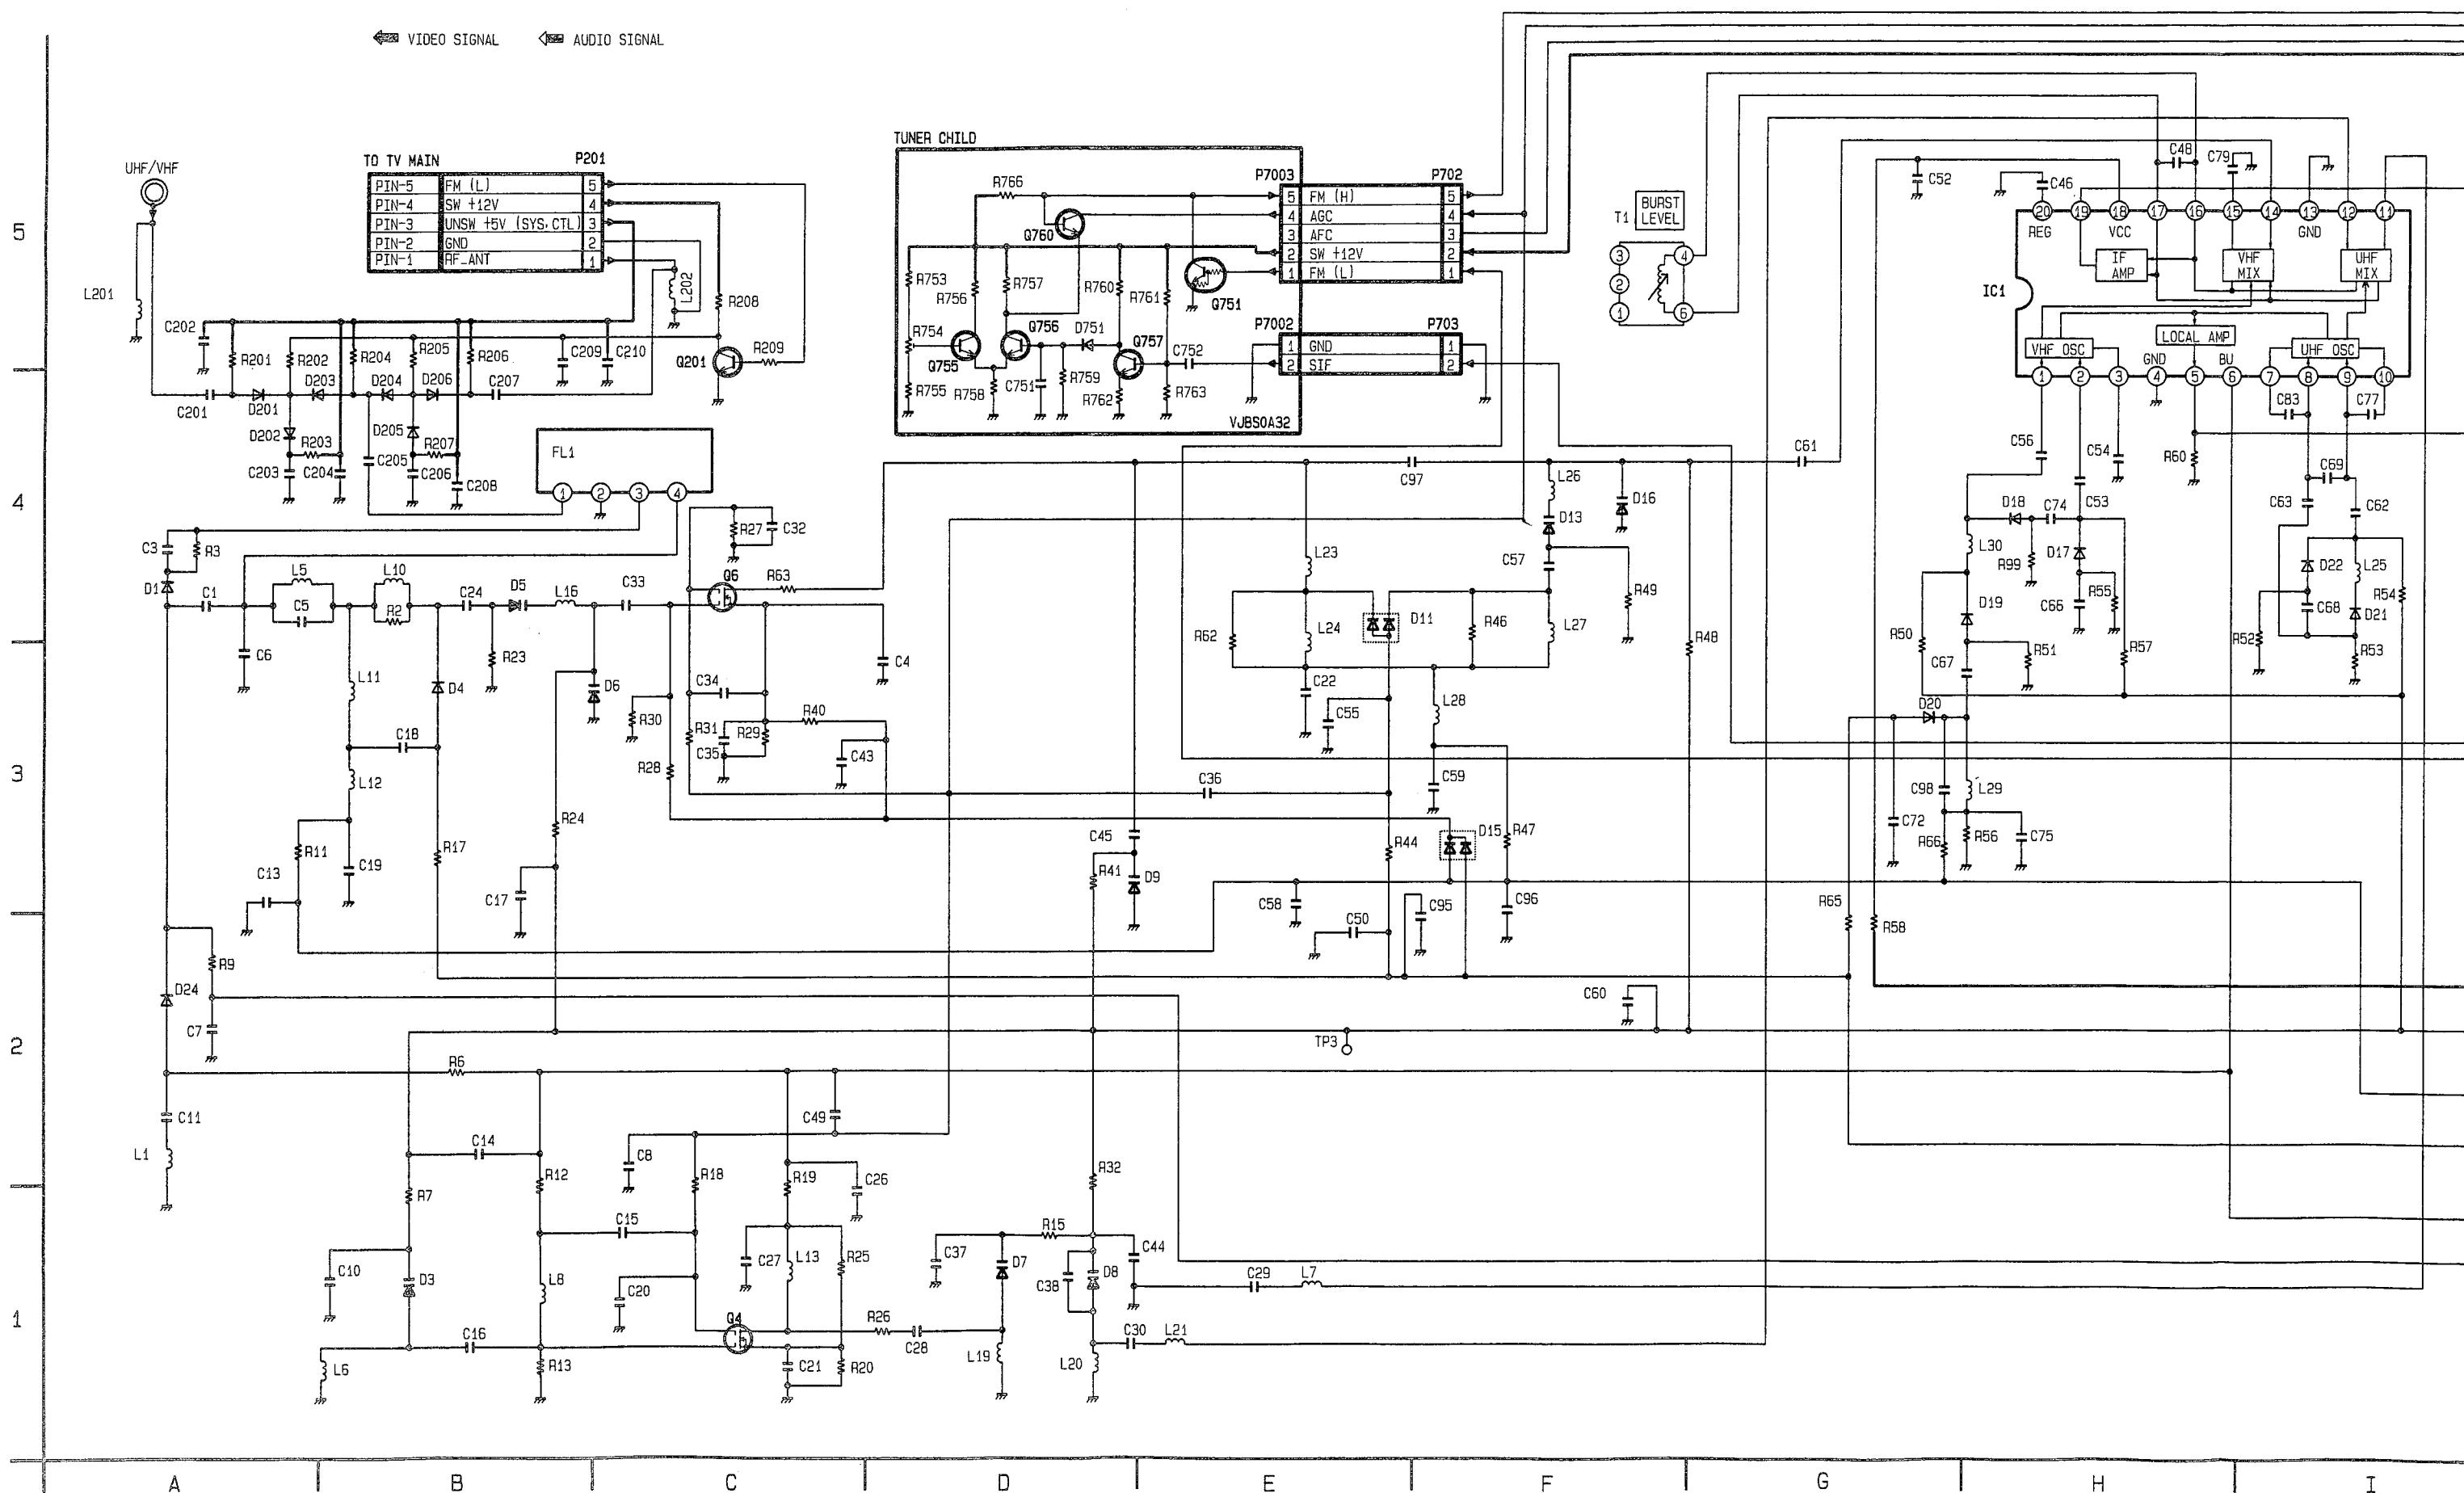

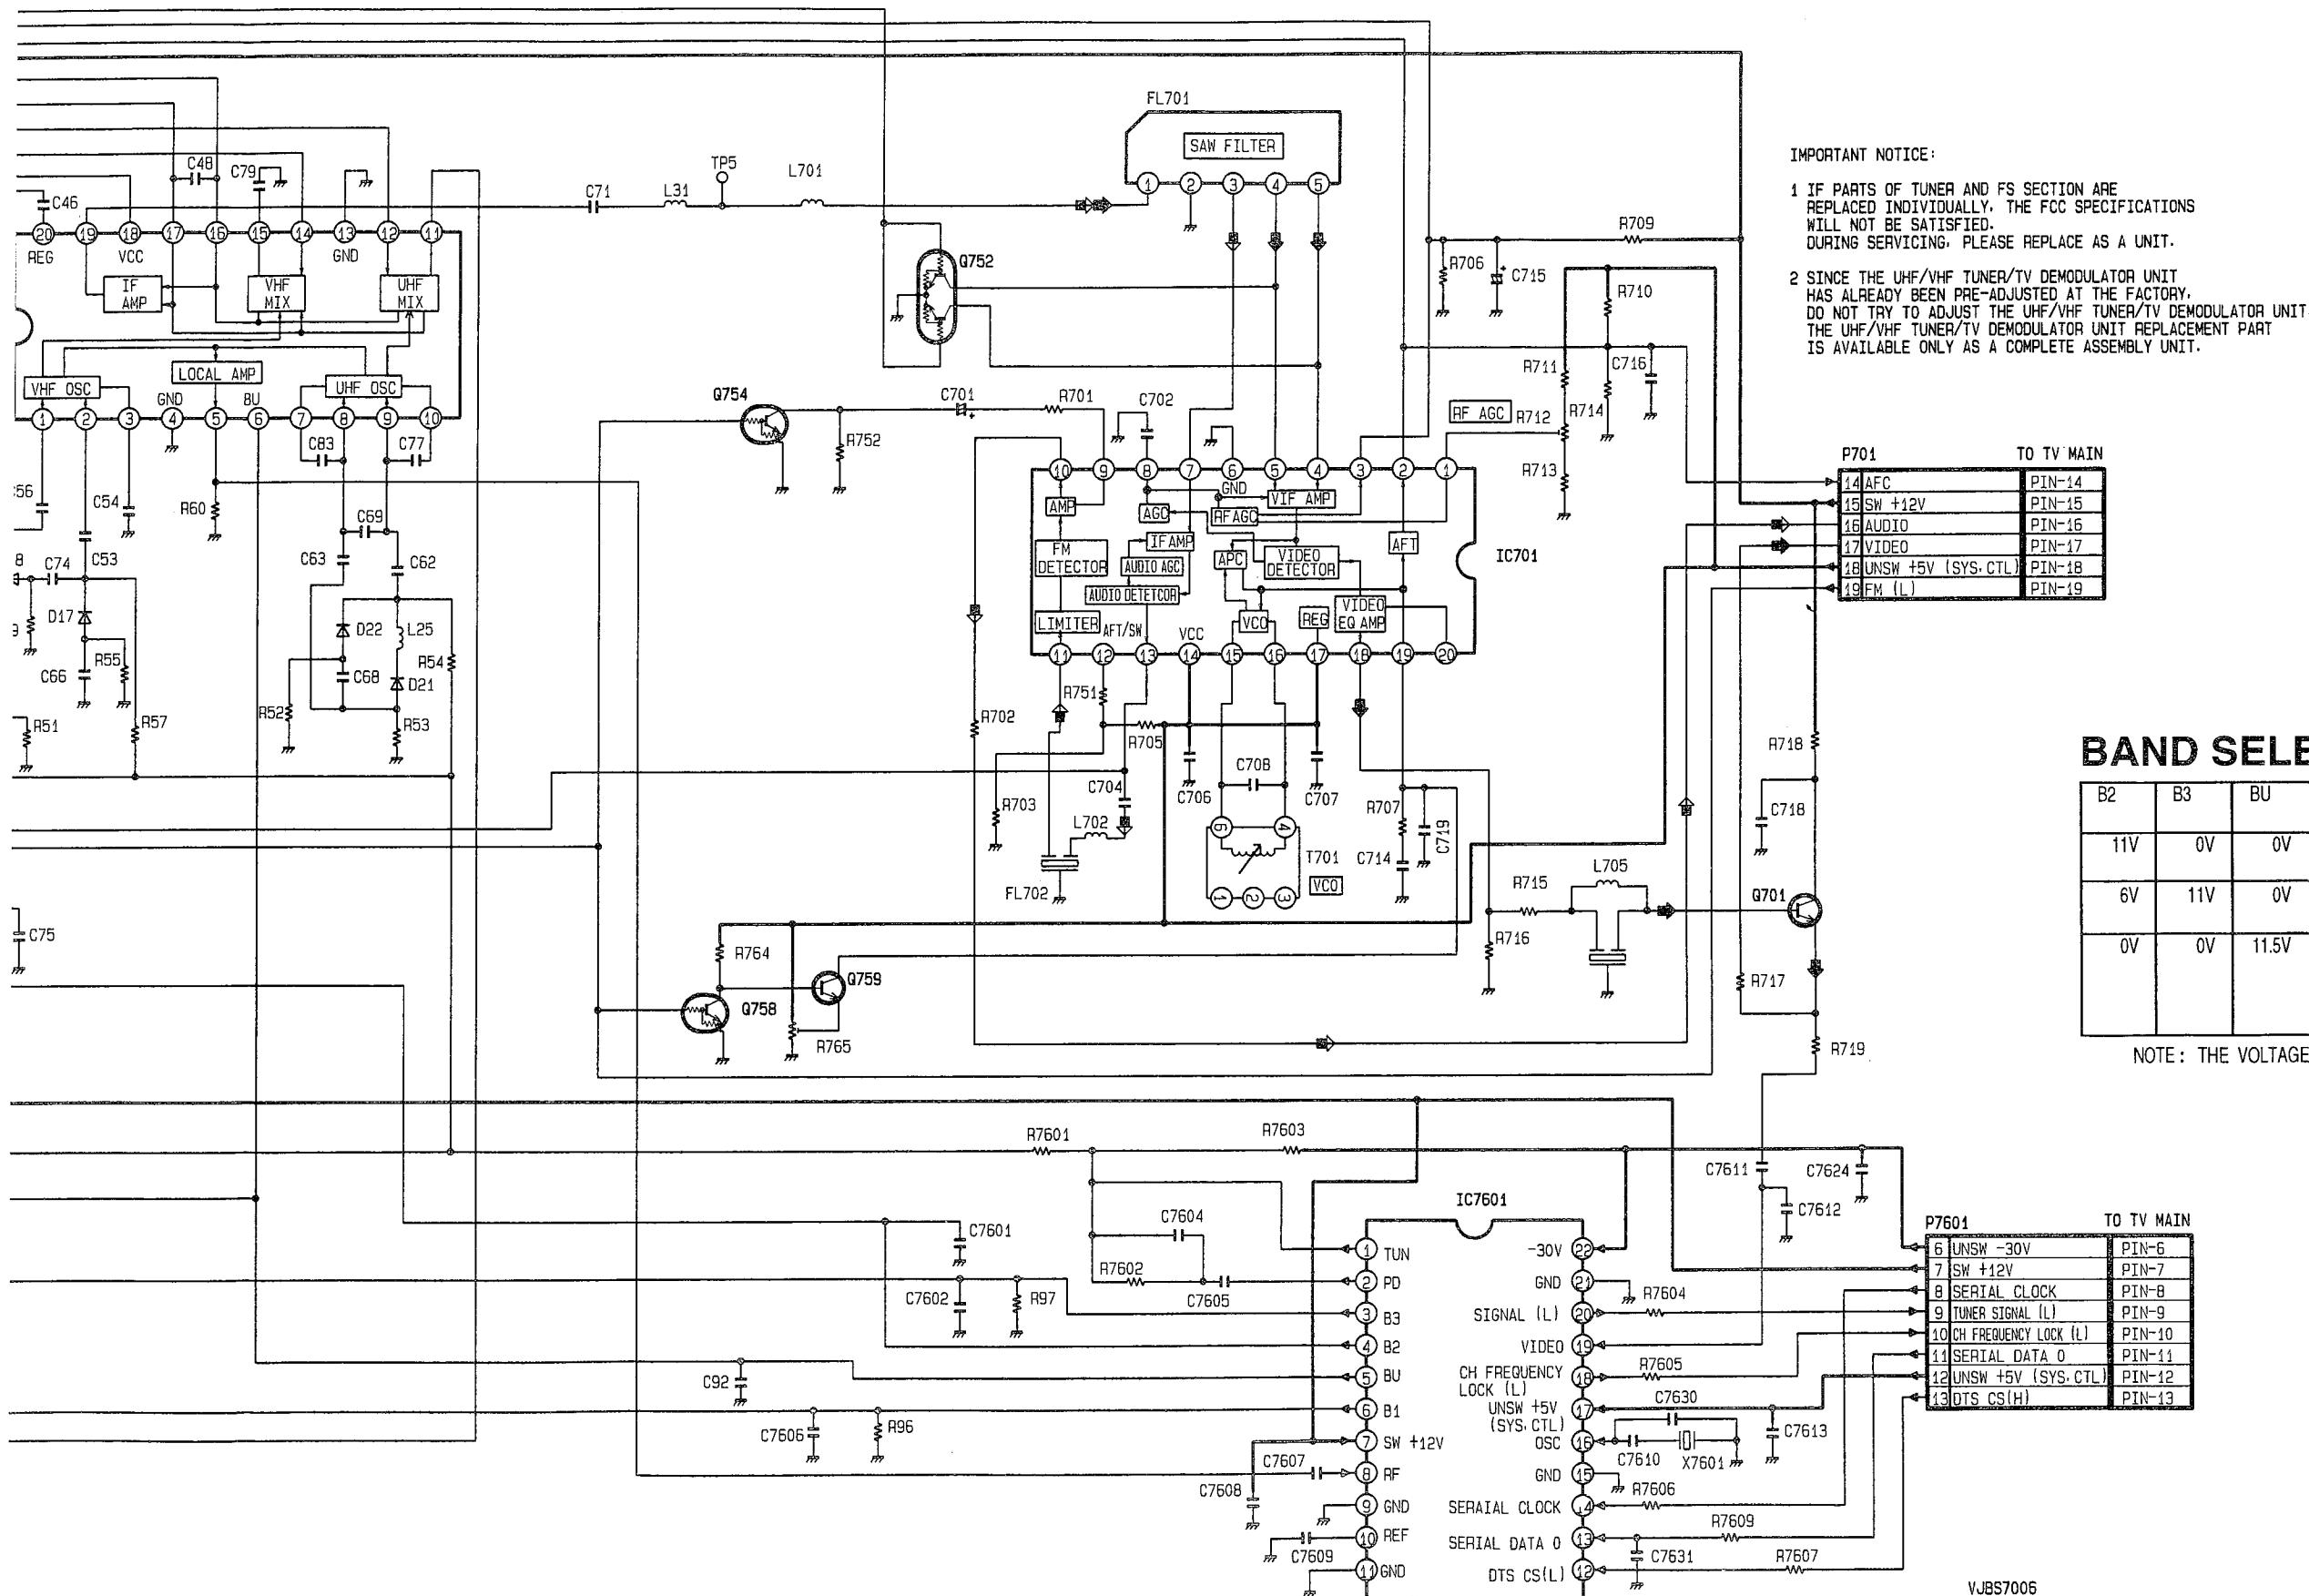


HEAD AMP SCHEMATIC DIAGRAM (A,B,C,F,G,H)

REC VIDEO SIGNAL PB VIDEO SIGNAL CYLINDER SERVO

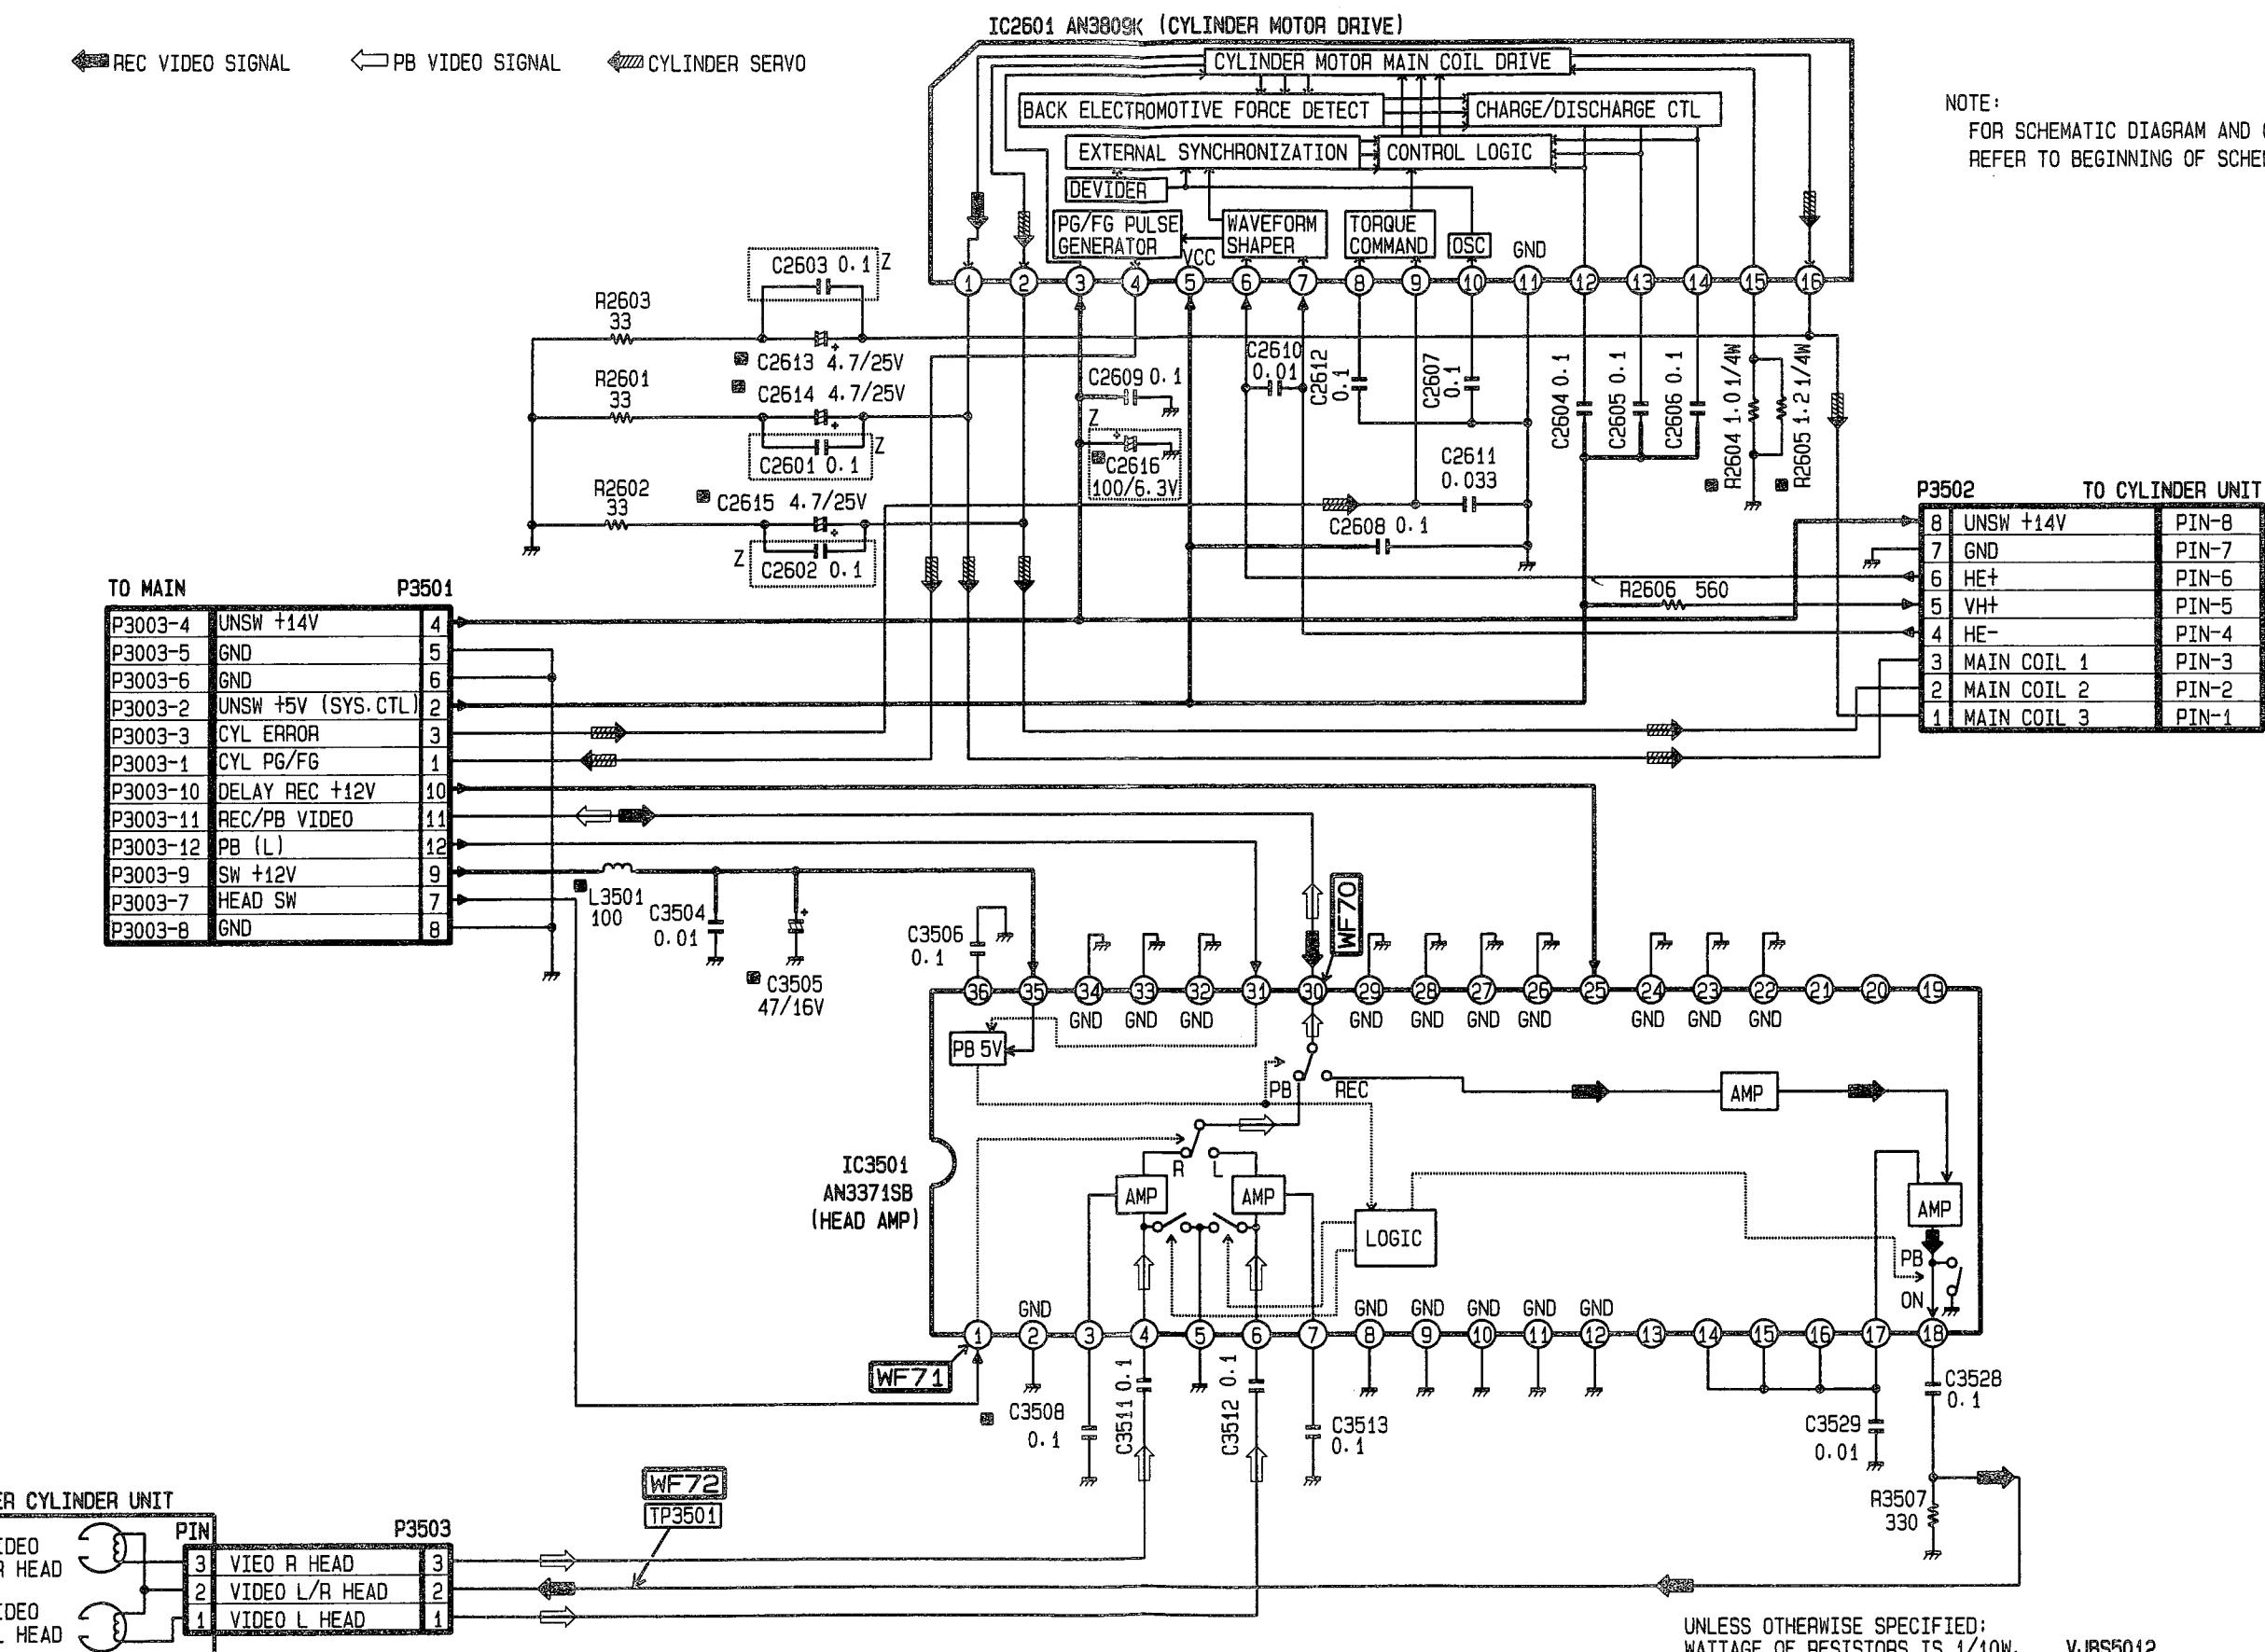

NOTE:

FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

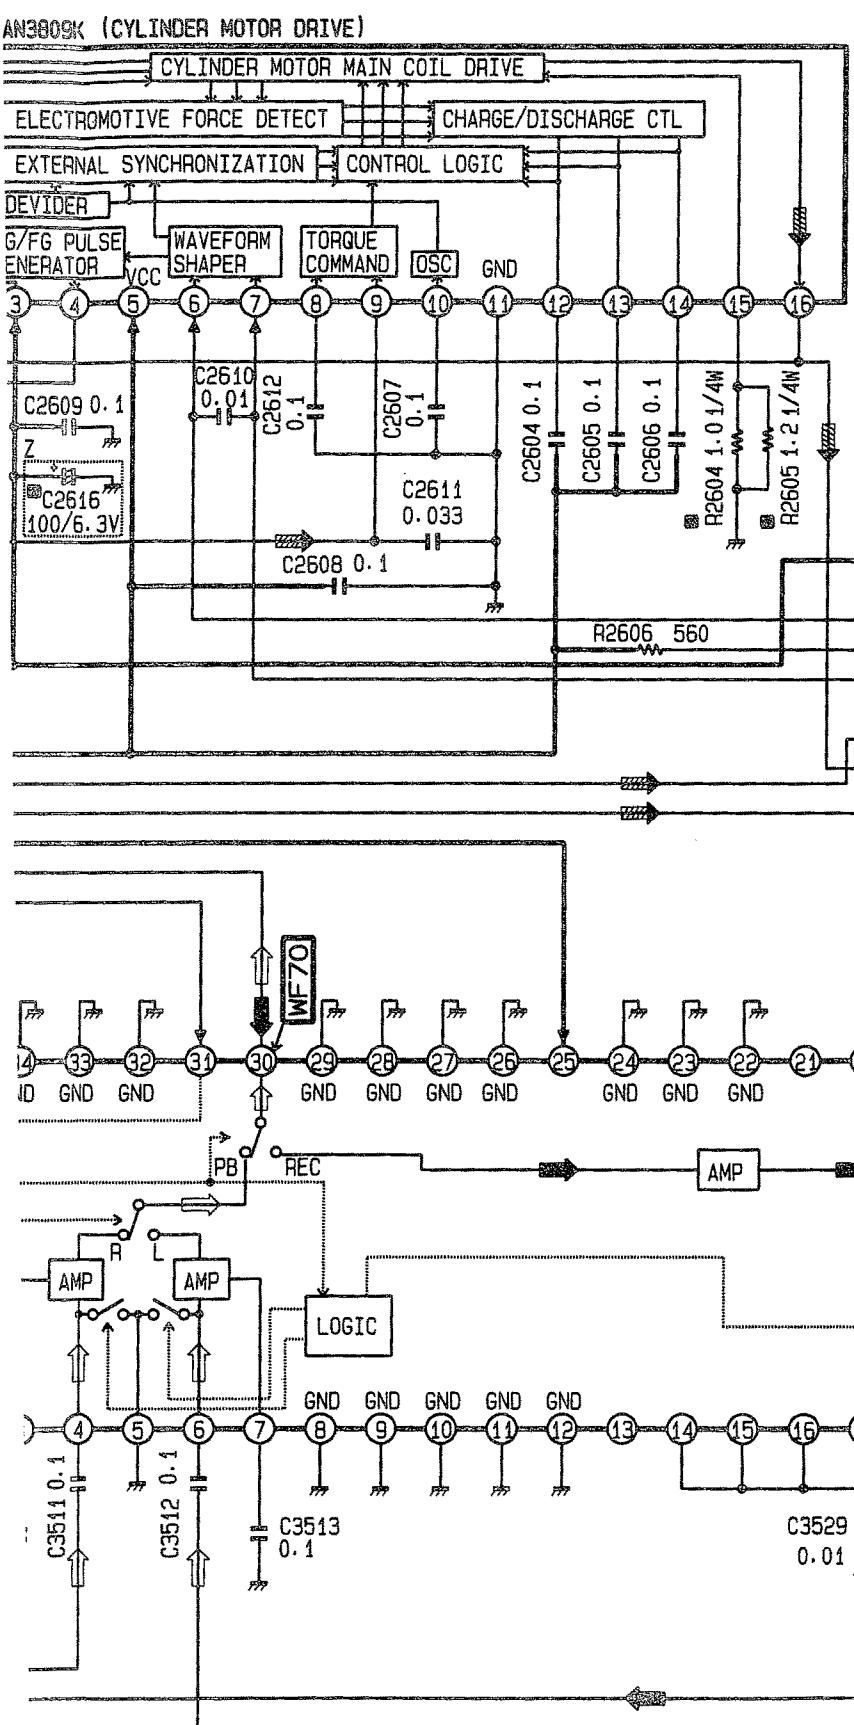

UNLESS OTHERWISE SPECIFIED:
WATTAGE OF RESISTORS IS 1/10W.

VJBS5012

E

F

G

HEAD AMP VOLTAGE CHART

MODE PIN NO.	STOP	REC	PLAY	FF	REW
IC2601					
1	13.0	13.0	13.0	13.0	13.0
2	13.0	13.0	13.0	13.0	13.0
3	13.5	13.5	13.5	13.5	13.5
4	1.2	1.2	1.2	1.2	1.2
5	5.1	5.1	5.1	5.1	5.1
6	0.9	0.9	0.9	0.9	0.9
7	1.0	1.0	1.0	1.0	1.0
8	0.7	0.7	0.7	0.7	0.7
9	2.6	2.6	2.6	2.6	2.6
10	1.5	1.5	1.5	1.5	1.5
11	0	0	0	0	0
12	3.9	3.9	3.9	3.9	3.9
13	3.9	3.9	3.9	3.9	3.9
14	3.9	3.9	3.9	3.9	3.9
15	0.1	0.1	0.1	0.1	0.1
16	13.2	13.2	13.2	13.2	13.2
IC3501					
1	2.6	2.6	2.6	2.6	2.6
2	0	0	4.2	0	0
3	0.3	0.3	1.4	0.3	0.3
4	0	0	0.7	0	0
5	0	0	0	0	0
6	0	0	0.7	0	0
7	0.2	0.2	1.4	0.2	0.2
8	0	0	0	0	0
9	0	0	0	0	0
10	0.2	0.2	2.2	0.2	0.2
11	0	0	0	0	0
12	0	0	0	0	0
13
14	0.2	0.2	2.2	0.2	0.2
15
16	0	6.3	0	0	0
17	0	6.3	0	0	0
18	0	6.3	0	0	0
19
20
21
22	0	0	0	0	0
23	0	0	0	0	0
24	0	0	0	0	0
25	0.5	11.9	0.5	0.5	0.5
26	0	0	0	0	0
27	0	0	0	0	0
28	0	0	0	0	0
29	0	0	0	0	0
30	2.7	2.7	2.3	2.7	2.7
31	5.1	5.1	0.1	5.1	5.1
32	0	0	0	0	0
33	0	0	0.2	0.2	0.2
34	0	0	0	0	0
35	12.0	12.0	12.0	12.0	12.0
36	0.1	0.1	5.0	0.1	0.1
TP3501	0	0	0	0	0


COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VW1307	B
VW1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VW2007	G
VW2017W	H
PV-M2047	I
Not Used	Z

HEAD AMP SCHEMATIC DIAGRAM (D,E,I)

REC VIDEO SIGNAL PB VIDEO SIGNAL CYLINDER SERVO


TO MAIN		P3501
P3003-4	UNSW +14V	4
P3003-5	GND	5
P3003-6	GND	6
P3003-2	UNSW +5V (SYS. CTL)	2
P3003-3	CYL ERROR	3
P3003-1	CYL PG/FG	1
P3003-10	DELAY REC +12V	10
P3003-13	CUE/REV/SS (L)	13
P3003-11	REC/PB VIDEO	11
P3003-12	PB (L)	12
P3003-14	HEAD AMP SW	14
P3003-15	ENVELOPE DET	15
P3003-9	SW +12V	9
P3003-7	HEAD SW	7
P3003-8	GND	8

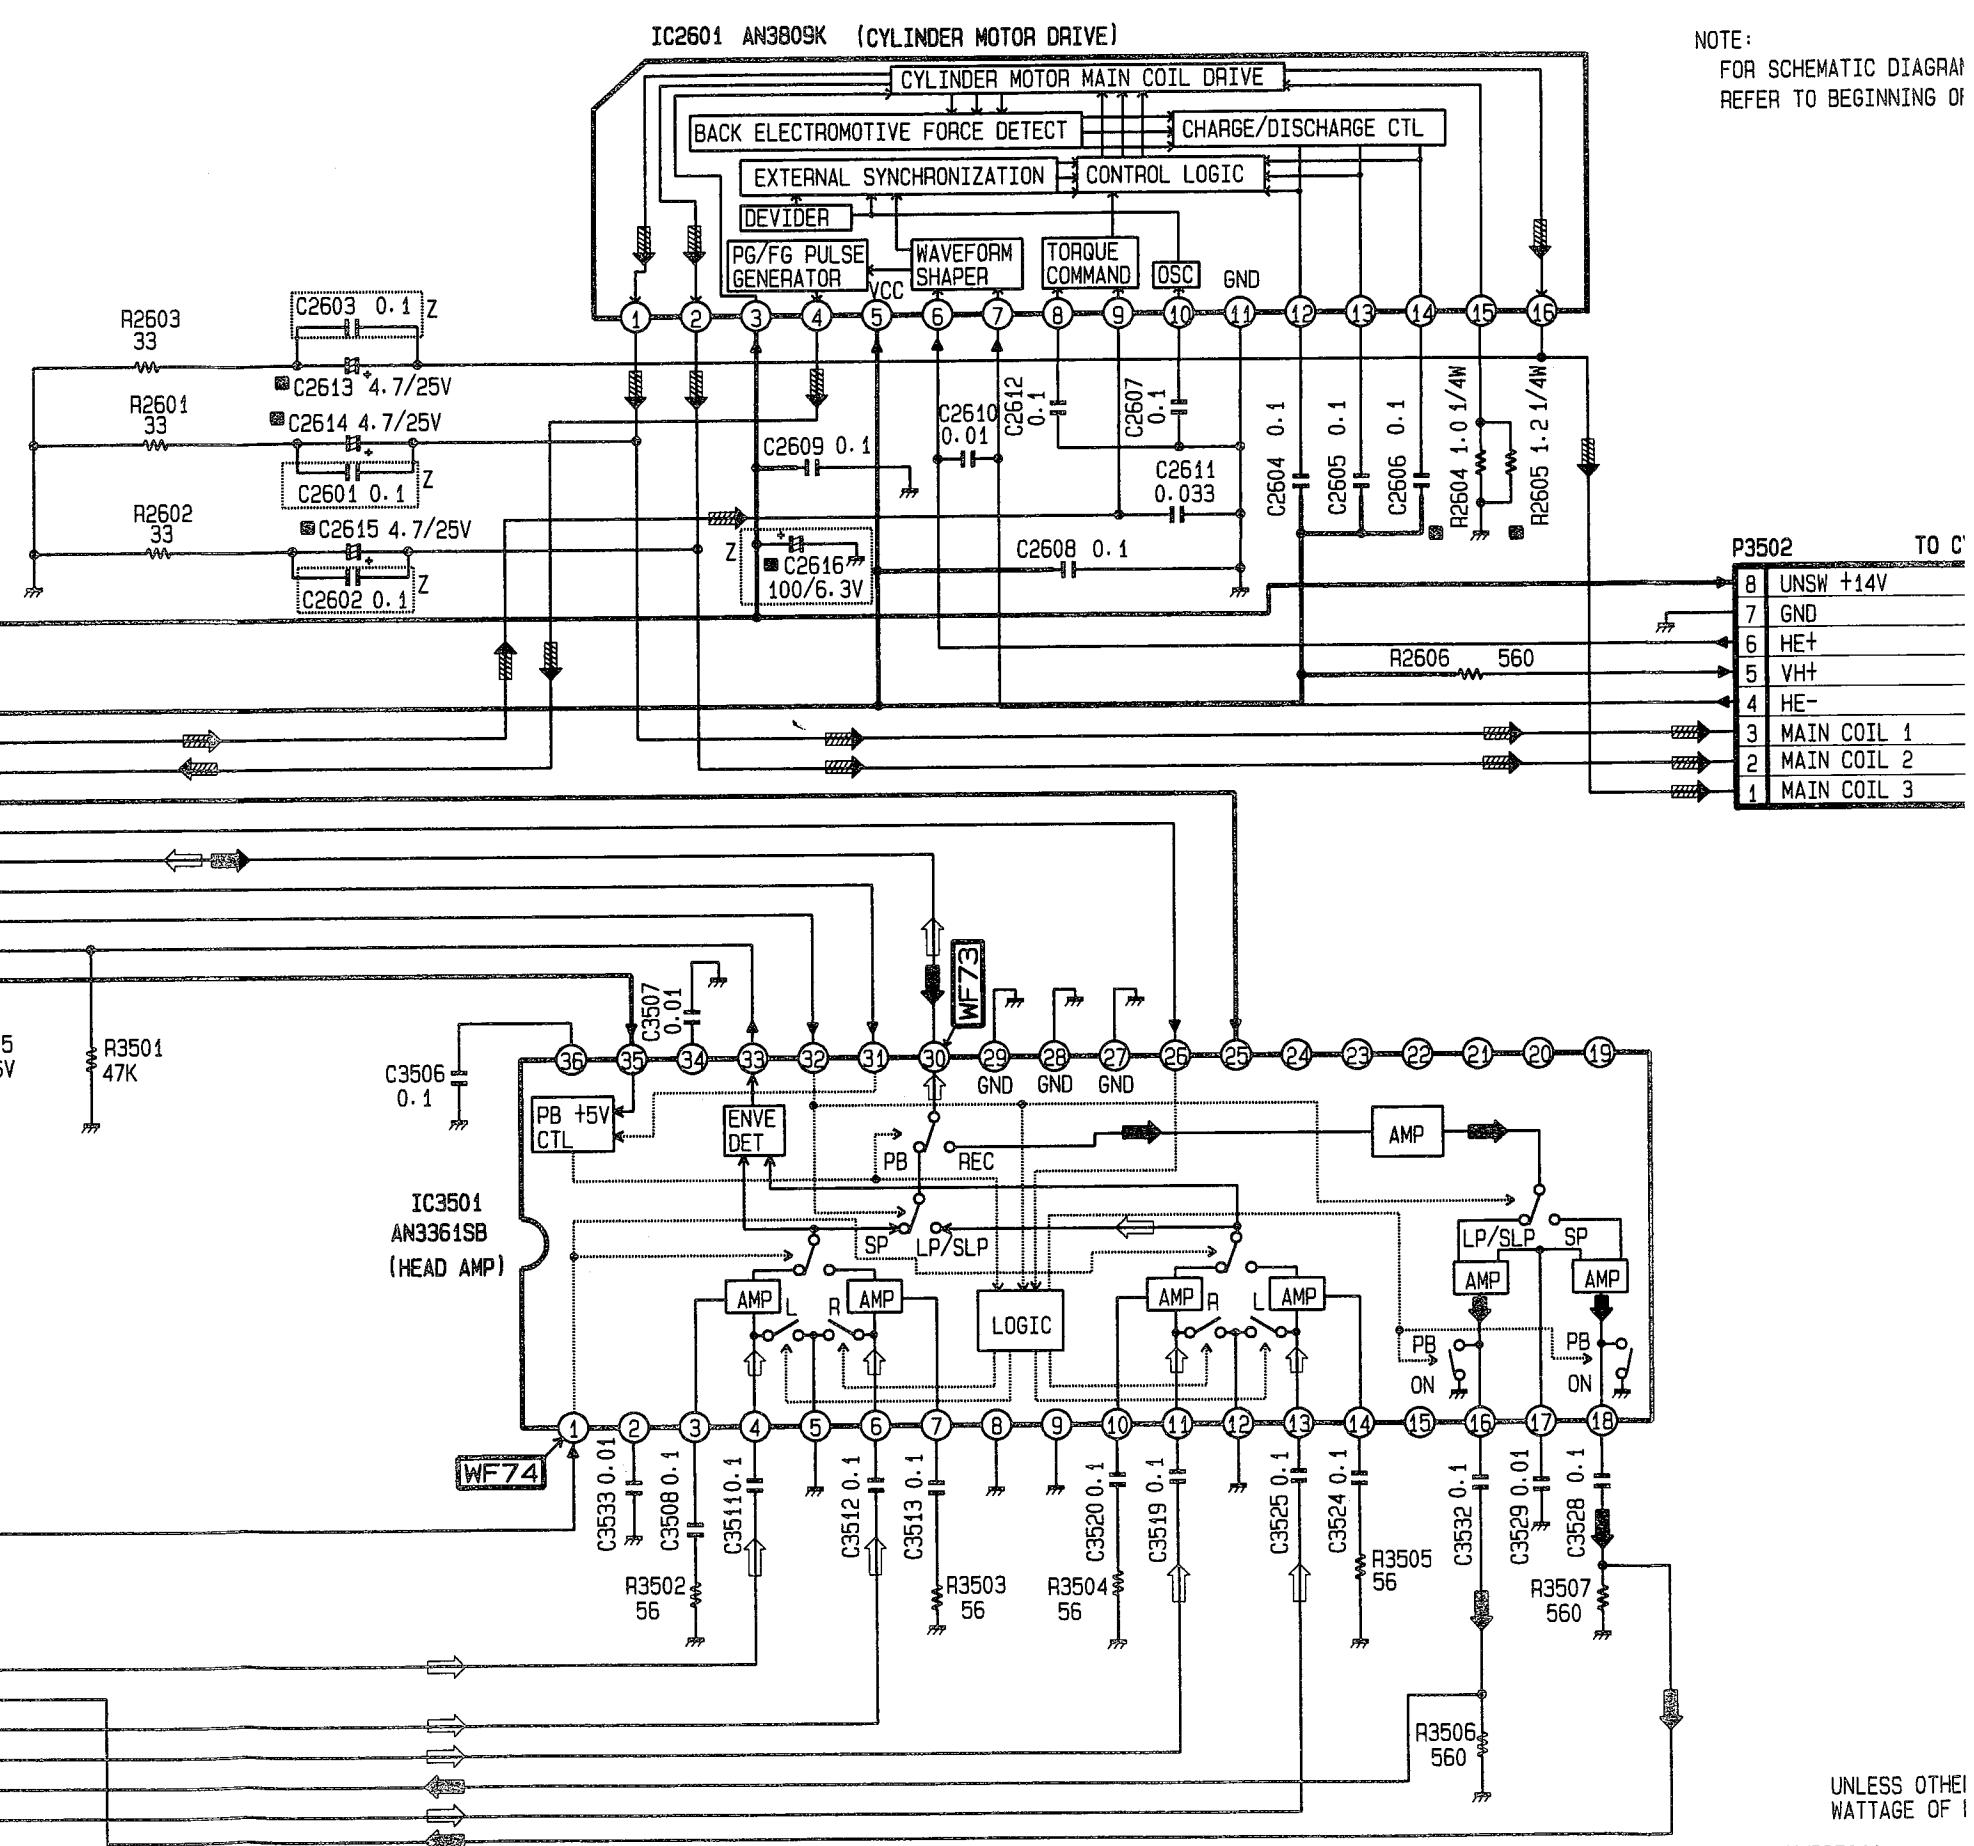


UPPER CYLINDER UNIT

PIN	VIDEO SP L HEAD	VIDEO SP R HEAD	VIDEO LP/SLP R HEAD	VIDEO LP/SLP L/R HEAD	VIDEO LP/SLP L HEAD
6	VIDEO SP L HEAD				
5	VIDEO SP L/R HEAD				
4	VIDEO SP R HEAD				
3	VIDEO LP/SLP R HEAD				
2	VIDEO LP/SLP L/R HEAD				
1	VIDEO LP/SLP L HEAD				


IC2601 AN3809K (CYLINDER MOTOR DRIVE)

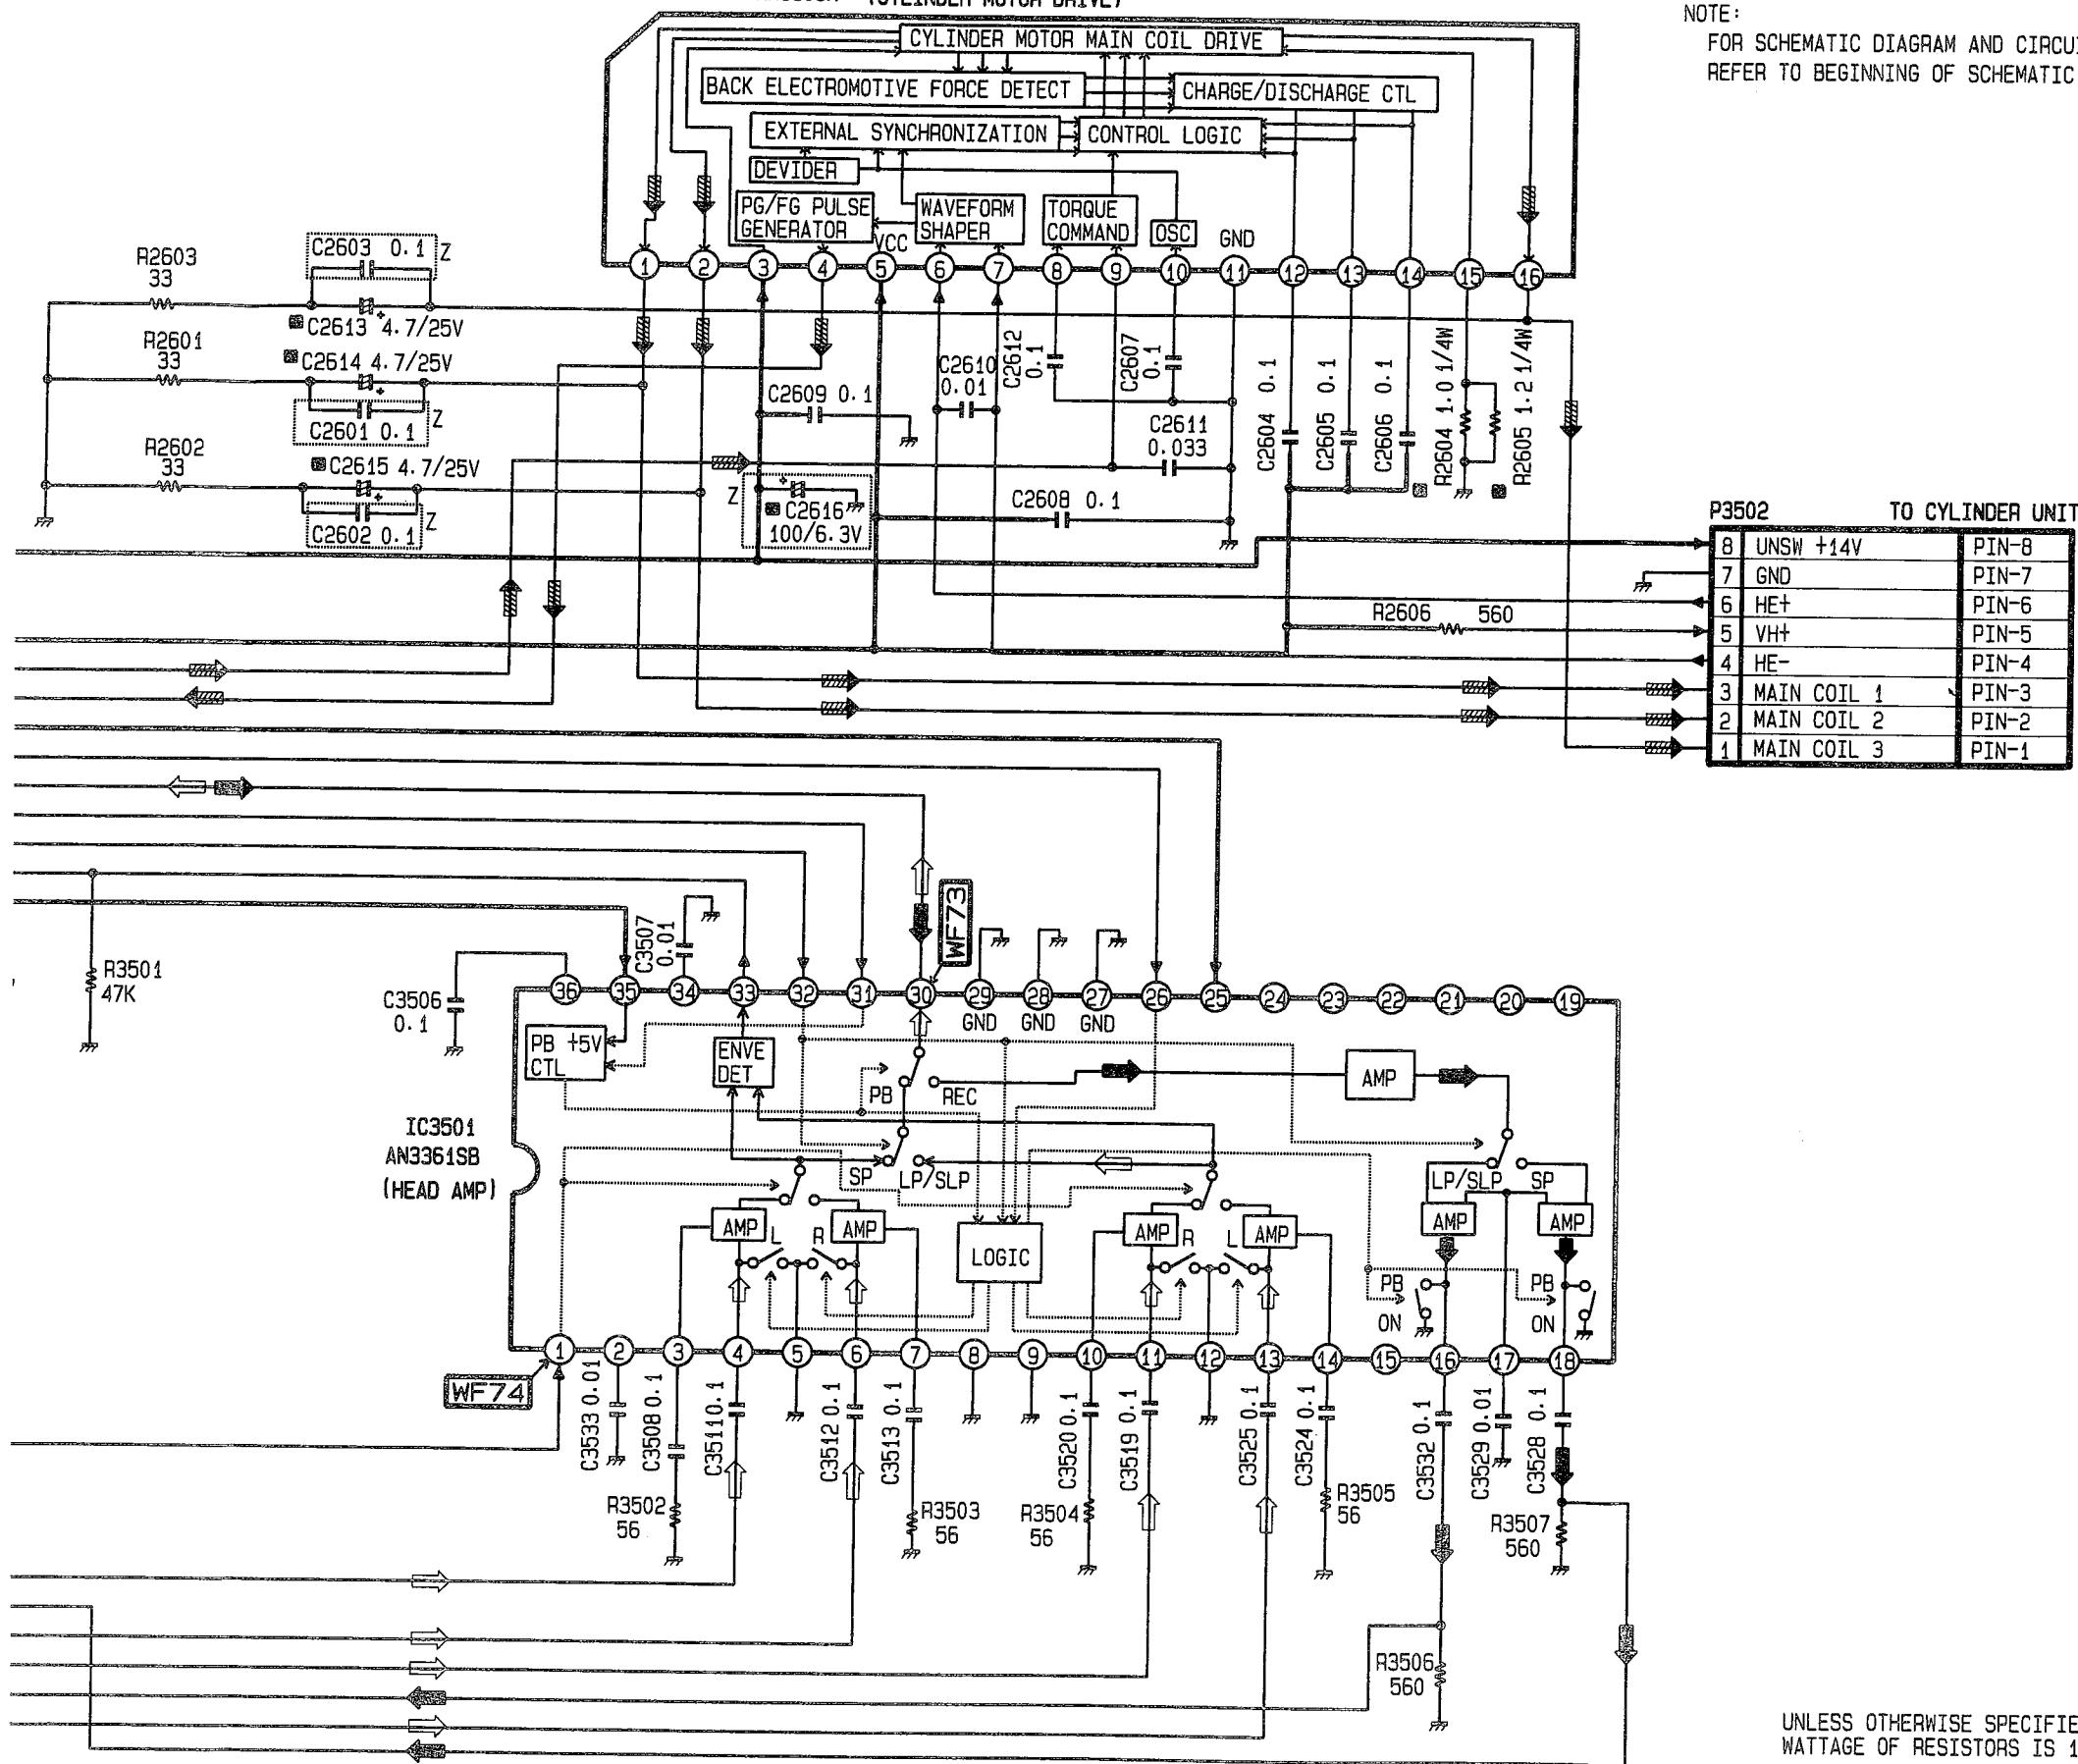

INTERCONNECTION SCHEMATIC DIAGRAM

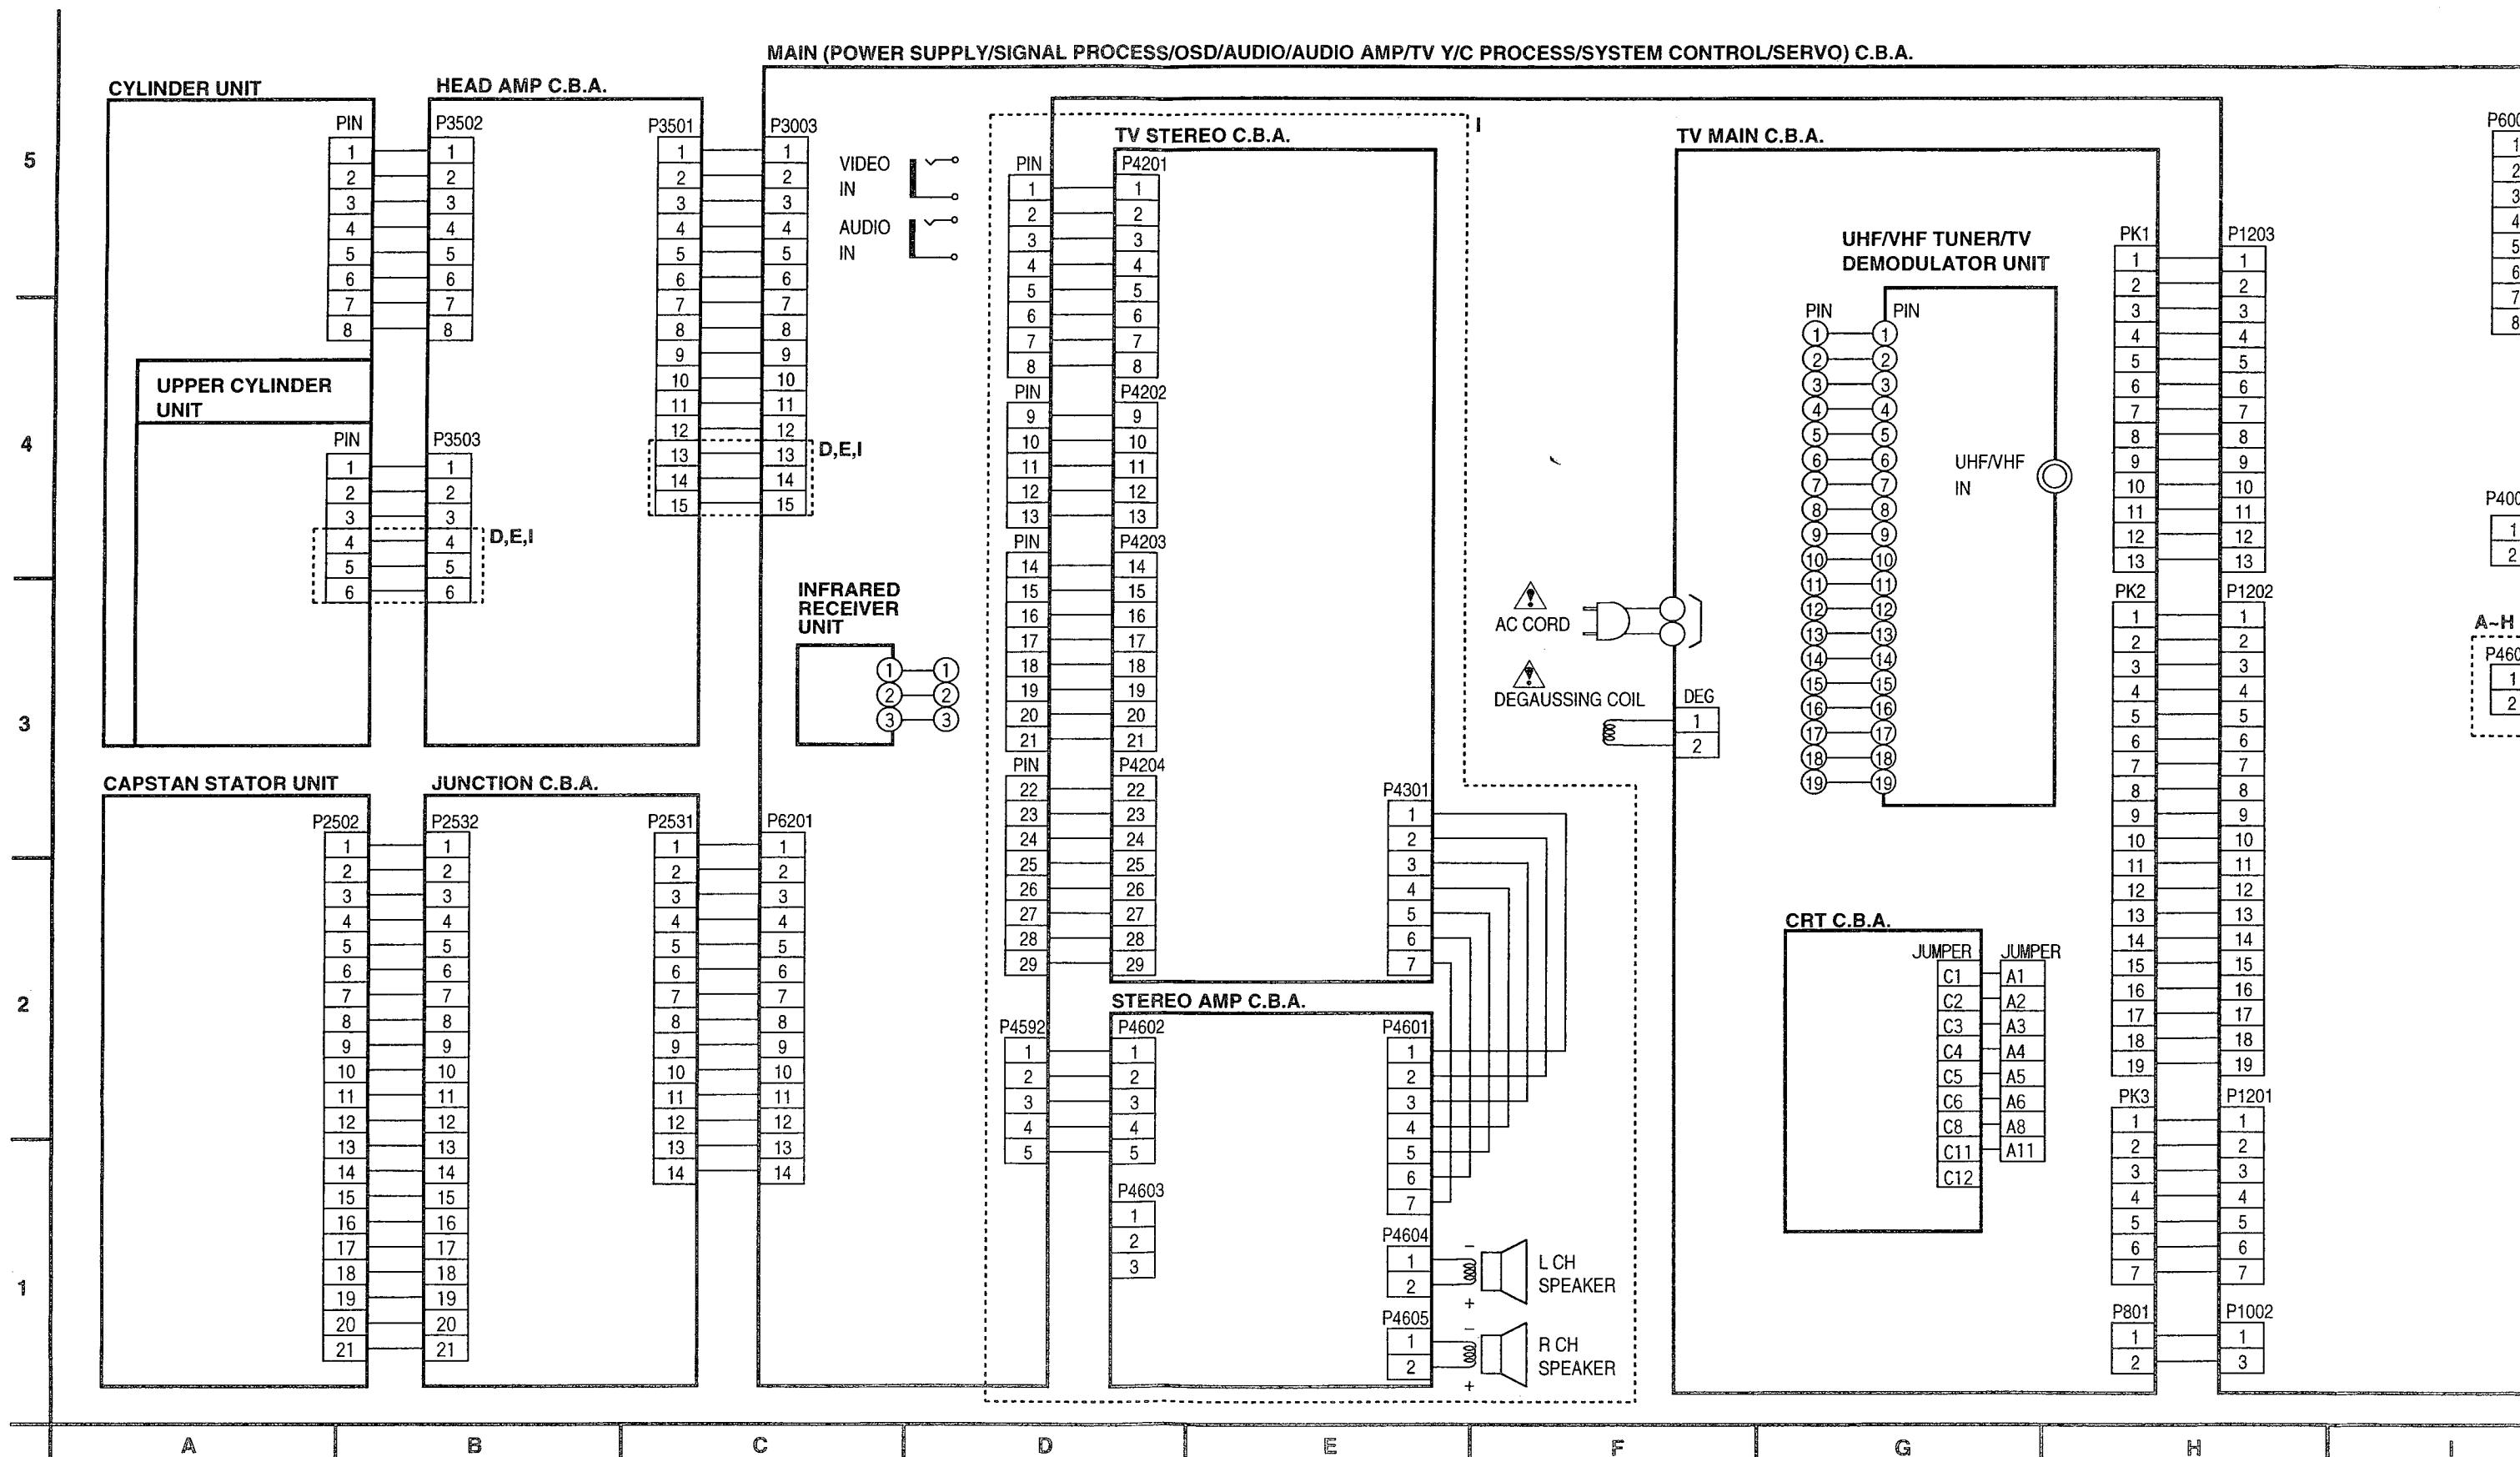

I SUPPLY/SIGNAL PROCESS/OSD/AUDIO/AUDIO AMP/TV Y/C PROCESS/SYSTEM CONTROL/SERVO) C.B.A.

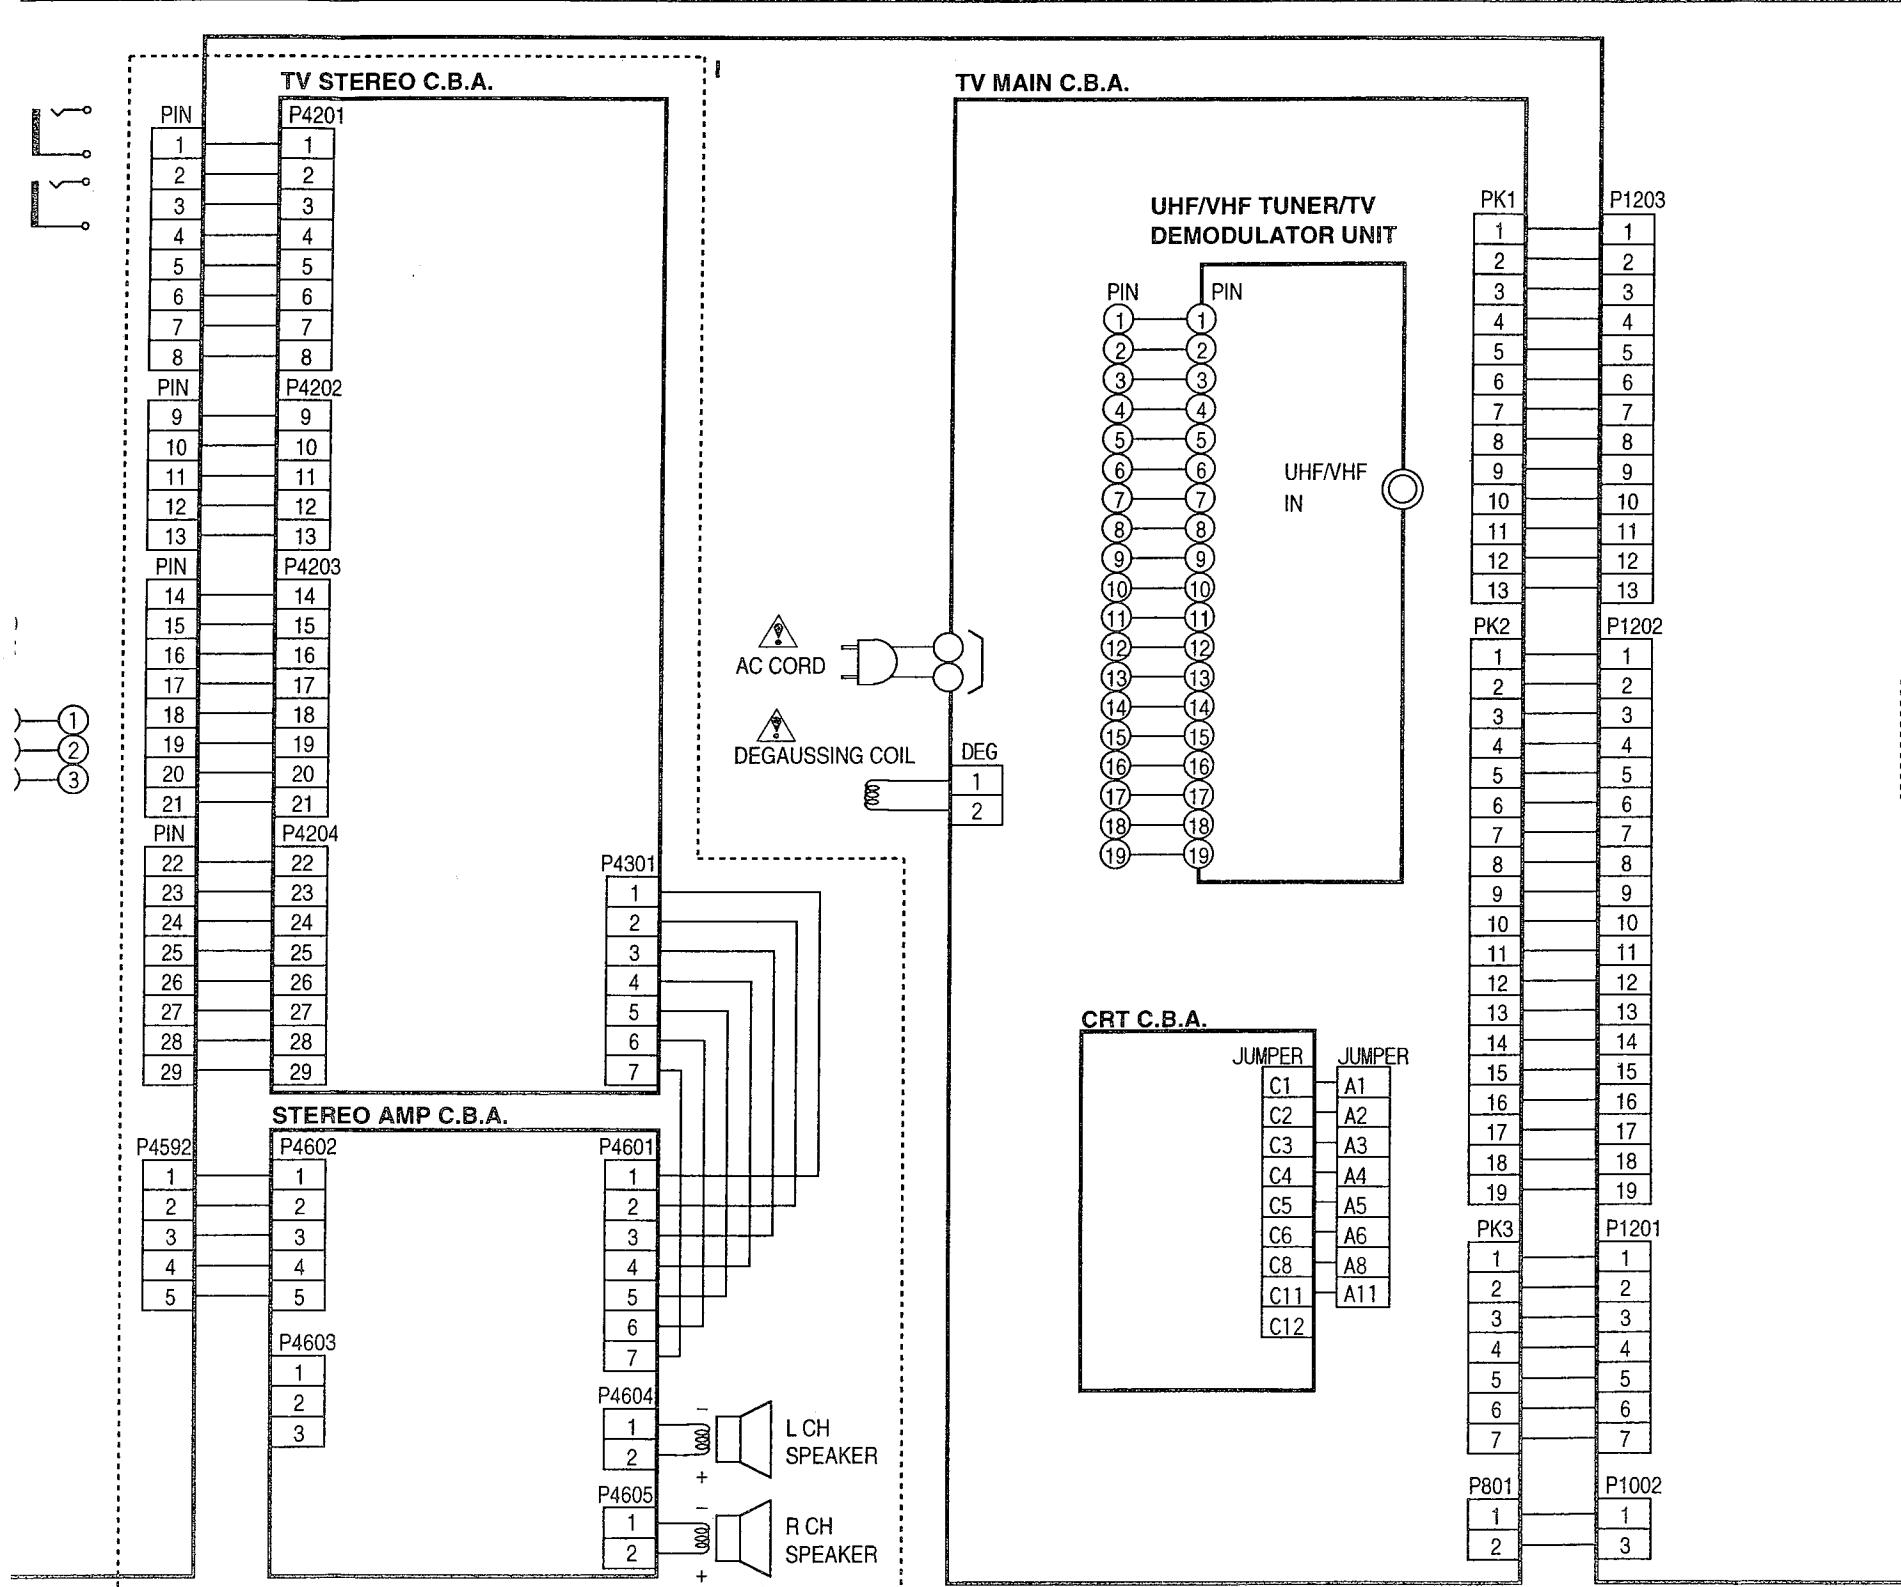

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z


IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE:
CAPSTAN STATOR UNIT IS SUPPLIED AS A CAPSTAN STATOR KIT ONLY.

CIRCUIT BOARD LAYOUT

HEAD AMP C.B.A. VEPS5012Z1 (A,B,C,F,G,H)

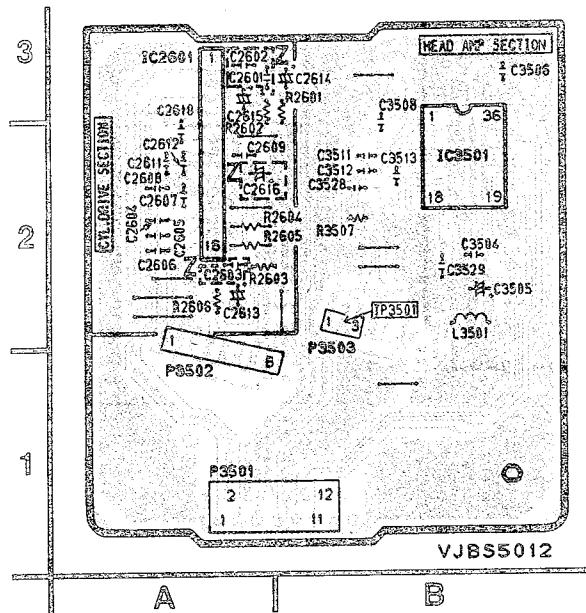

HEAD AMP	
IC	
IC2601	A-3
IC3501	B-2
CONNECTOR	
P3501	A-1
P3502	A-1
P3503	B-2
TEST POINT	
TP3501	B-2

LEADLESS COMPONENT PARTS LOCATION GUIDE


HEAD AMP C.B.A.

R2601	B-3	C2605	A-2	C3506	B-3
R2602	A-3	C2606	A-2	C3508	B-3
R2603	A-2	C2607	A-2	C3511	B-2
R2606	A-2	C2608	A-2	C3512	B-2
R3507	B-2	C2609	A-2	C3513	B-2
C2601	A-3	C2610	A-3	C3528	B-2
C2602	A-3	C2611	A-2	C3529	B-2
C2603	A-2	C2612	A-2		
C2604	A-2	C3504	B-2		

NOTE:

FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

HEAD AMP C.B.A. VEPS5011Z1 (D,E,I)

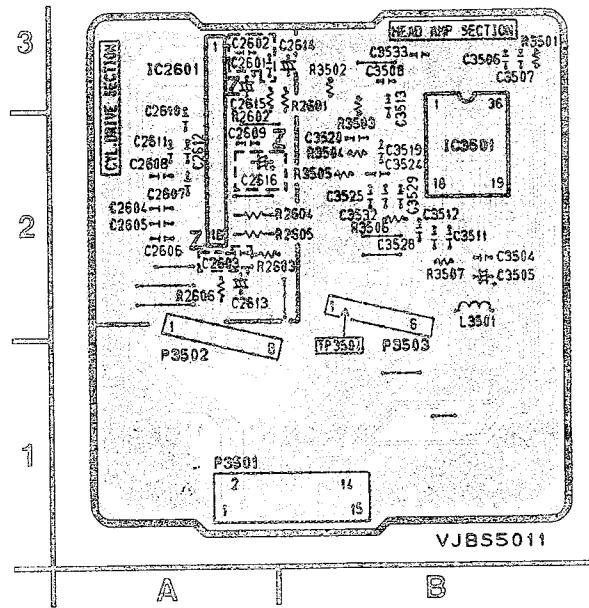


HEAD AMP	
IC	
IC2601	A-3
IC3501	B-2
CONNECTOR	
P3501	A-1
P3502	A-1
P3503	B-1
TEST POINT	
TP3501	B-1

LEADLESS COMPONENT PARTS LOCATION GUIDE

HEAD AMP C.B.A.

R2601	B-3	C2603	A-2	C3508	B-3
R2602	A-3	C2604	A-2	C3509	B-3
R2603	A-2	C2605	A-2	C3511	B-2
R2606	A-2	C2606	A-2	C3512	B-2
R3501	B-3	C2607	A-2	C3513	B-2
R3502	B-3	C2608	A-2	C3519	B-2
R3503	B-2	C2609	A-2	C3520	B-2
R3504	B-2	C2610	A-3	C3524	B-2
R3505	B-2	C2611	A-2	C3525	B-2
R3506	B-2	C2612	A-2	C3528	B-2
R3507	B-2	C3504	B-2	C3529	B-2
C2601	A-3	C3506	B-3	C3532	B-2
C2602	A-3	C3507	B-3	C3533	B-3

TV STEREO C.B.A. VEPS4016A1 (I)

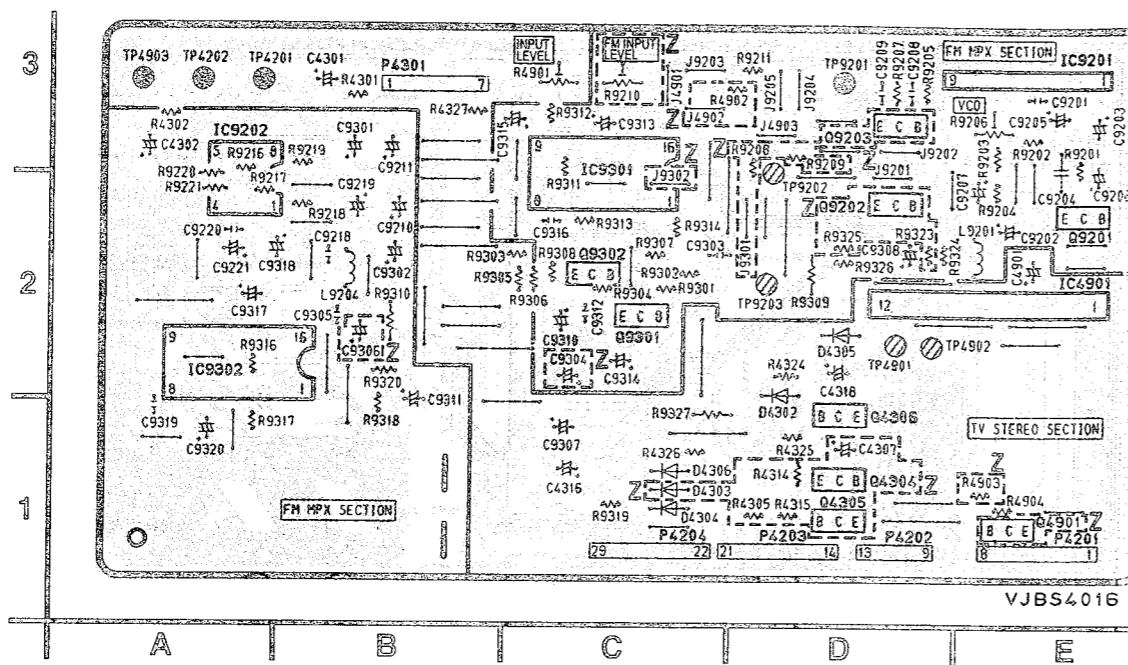


TV STEREO	
TRANSISTOR	
04304	D-1
04305	D-1
04306	D-1
04901	E-1
09201	E-2
09202	D-2
09203	D-3
09301	C-2
09302	C-2
TEST POINT	
TP4201	A-3
TP4202	A-3
TP4901	D-2
TP4902	D-2
TP4903	A-3
R9201	E-3
R9202	E-3
TP9201	D-3
TP9202	D-2
TP9203	D-2
ADJUSTMENT	
R4901	C-3
R9206	E-3
R9210	C-3

TV STEREO	
CONNECTOR	
P4201	E-1
P4202	D-1
P4203	D-1
P4204	C-1
P4301	B-3
TEST POINT	
TP4201	A-3
TP4202	A-3
TP4901	D-2
TP4902	D-2
TP4903	A-3
R9201	E-3
R9202	E-3
TP9201	D-3
TP9202	D-2
TP9203	D-2
ADJUSTMENT	
IC4901	E-2
IC9201	E-3
IC9202	A-3
IC9301	C-3
IC9302	A-2

LEADLESS COMPONENT PARTS LOCATION GUIDE TV STEREO C.B.A.

R4301	B-3	R9211	D-3	R9317	A-1
R4302	A-3	R9216	A-3	R9318	B-1
R4305	D-1	R9217	A-2	R9319	C-1
R4314	D-1	R9218	B-2	R9320	B-2
R4315	D-1	R9219	B-3	R9323	D-2
R4324	D-2	R9220	A-2	R9324	D-2
R4325	D-1	R9221	A-2	R9325	D-2
R4326	C-1	R9301	C-2	R9326	D-2
R4327	B-3	R9302	C-2	C9201	E-3
R4902	C-3	R9303	B-2	C9208	D-3
R4903	E-1	R9304	C-2	C9209	D-3
R4904	E-1	R9305	B-2	C9218	B-2
R9201	E-3	R9306	C-2	C9220	A-2
R9202	E-3	R9307	C-2	C9303	C-2
R9203	E-3	R9308	C-2	C9305	B-2
R9204	E-2	R9311	C-2	C9312	C-2
R9205	D-3	R9312	C-3	C9316	C-2
R9207	D-3	R9313	C-2	C9319	A-1
R9208	D-3	R9314	C-2		
R9209	D-3	R9316	A-2		

STEREO AMP C B.A. VEPS4014A1 (I)

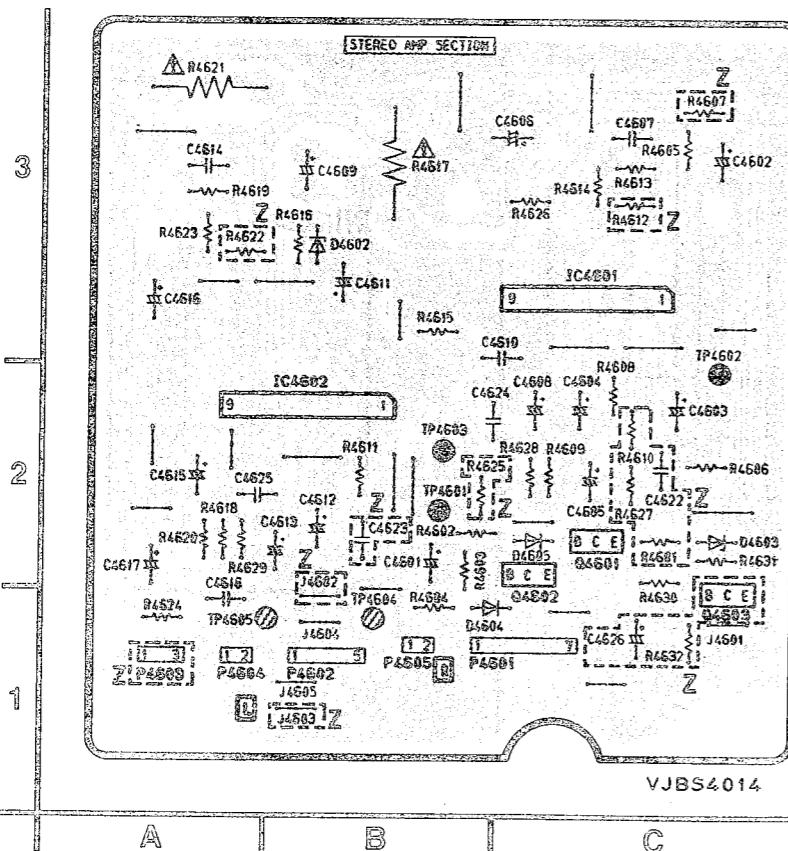


STEREO AMP	
TRANSISTOR	
04601	C-2
04602	C-1
04603	C-1
IC	
IC4601	C-3
IC4602	B-2
CONNECTOR	
P4601	B-1
P4602	B-1
P4603	A-1
P4604	A-1
P4605	B-1
TEST POINT	
TP4601	B-2
TP4602	C-3
TP4603	B-2
TP4604	B-1
TP4605	A-1

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

COMPARISON CHART OF MODELS & MARKS


MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z

JUNCTION C.B.A. VEPS0A25A

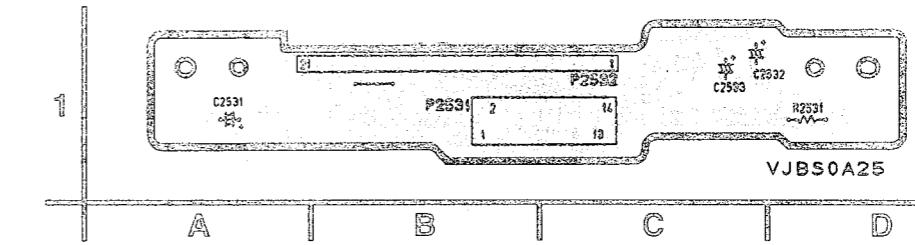


MAIN (POWER SUPPLY/SIGNAL PROCESS/OSD/AUDIO AMP/TV Y/C PROCESS/SYSTEM CONTROL/SERVO) C.B.A. VEPS3040E1 (A) /VEPS3040C1 (D,E) /VEPS3040F1 (F,G)

HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

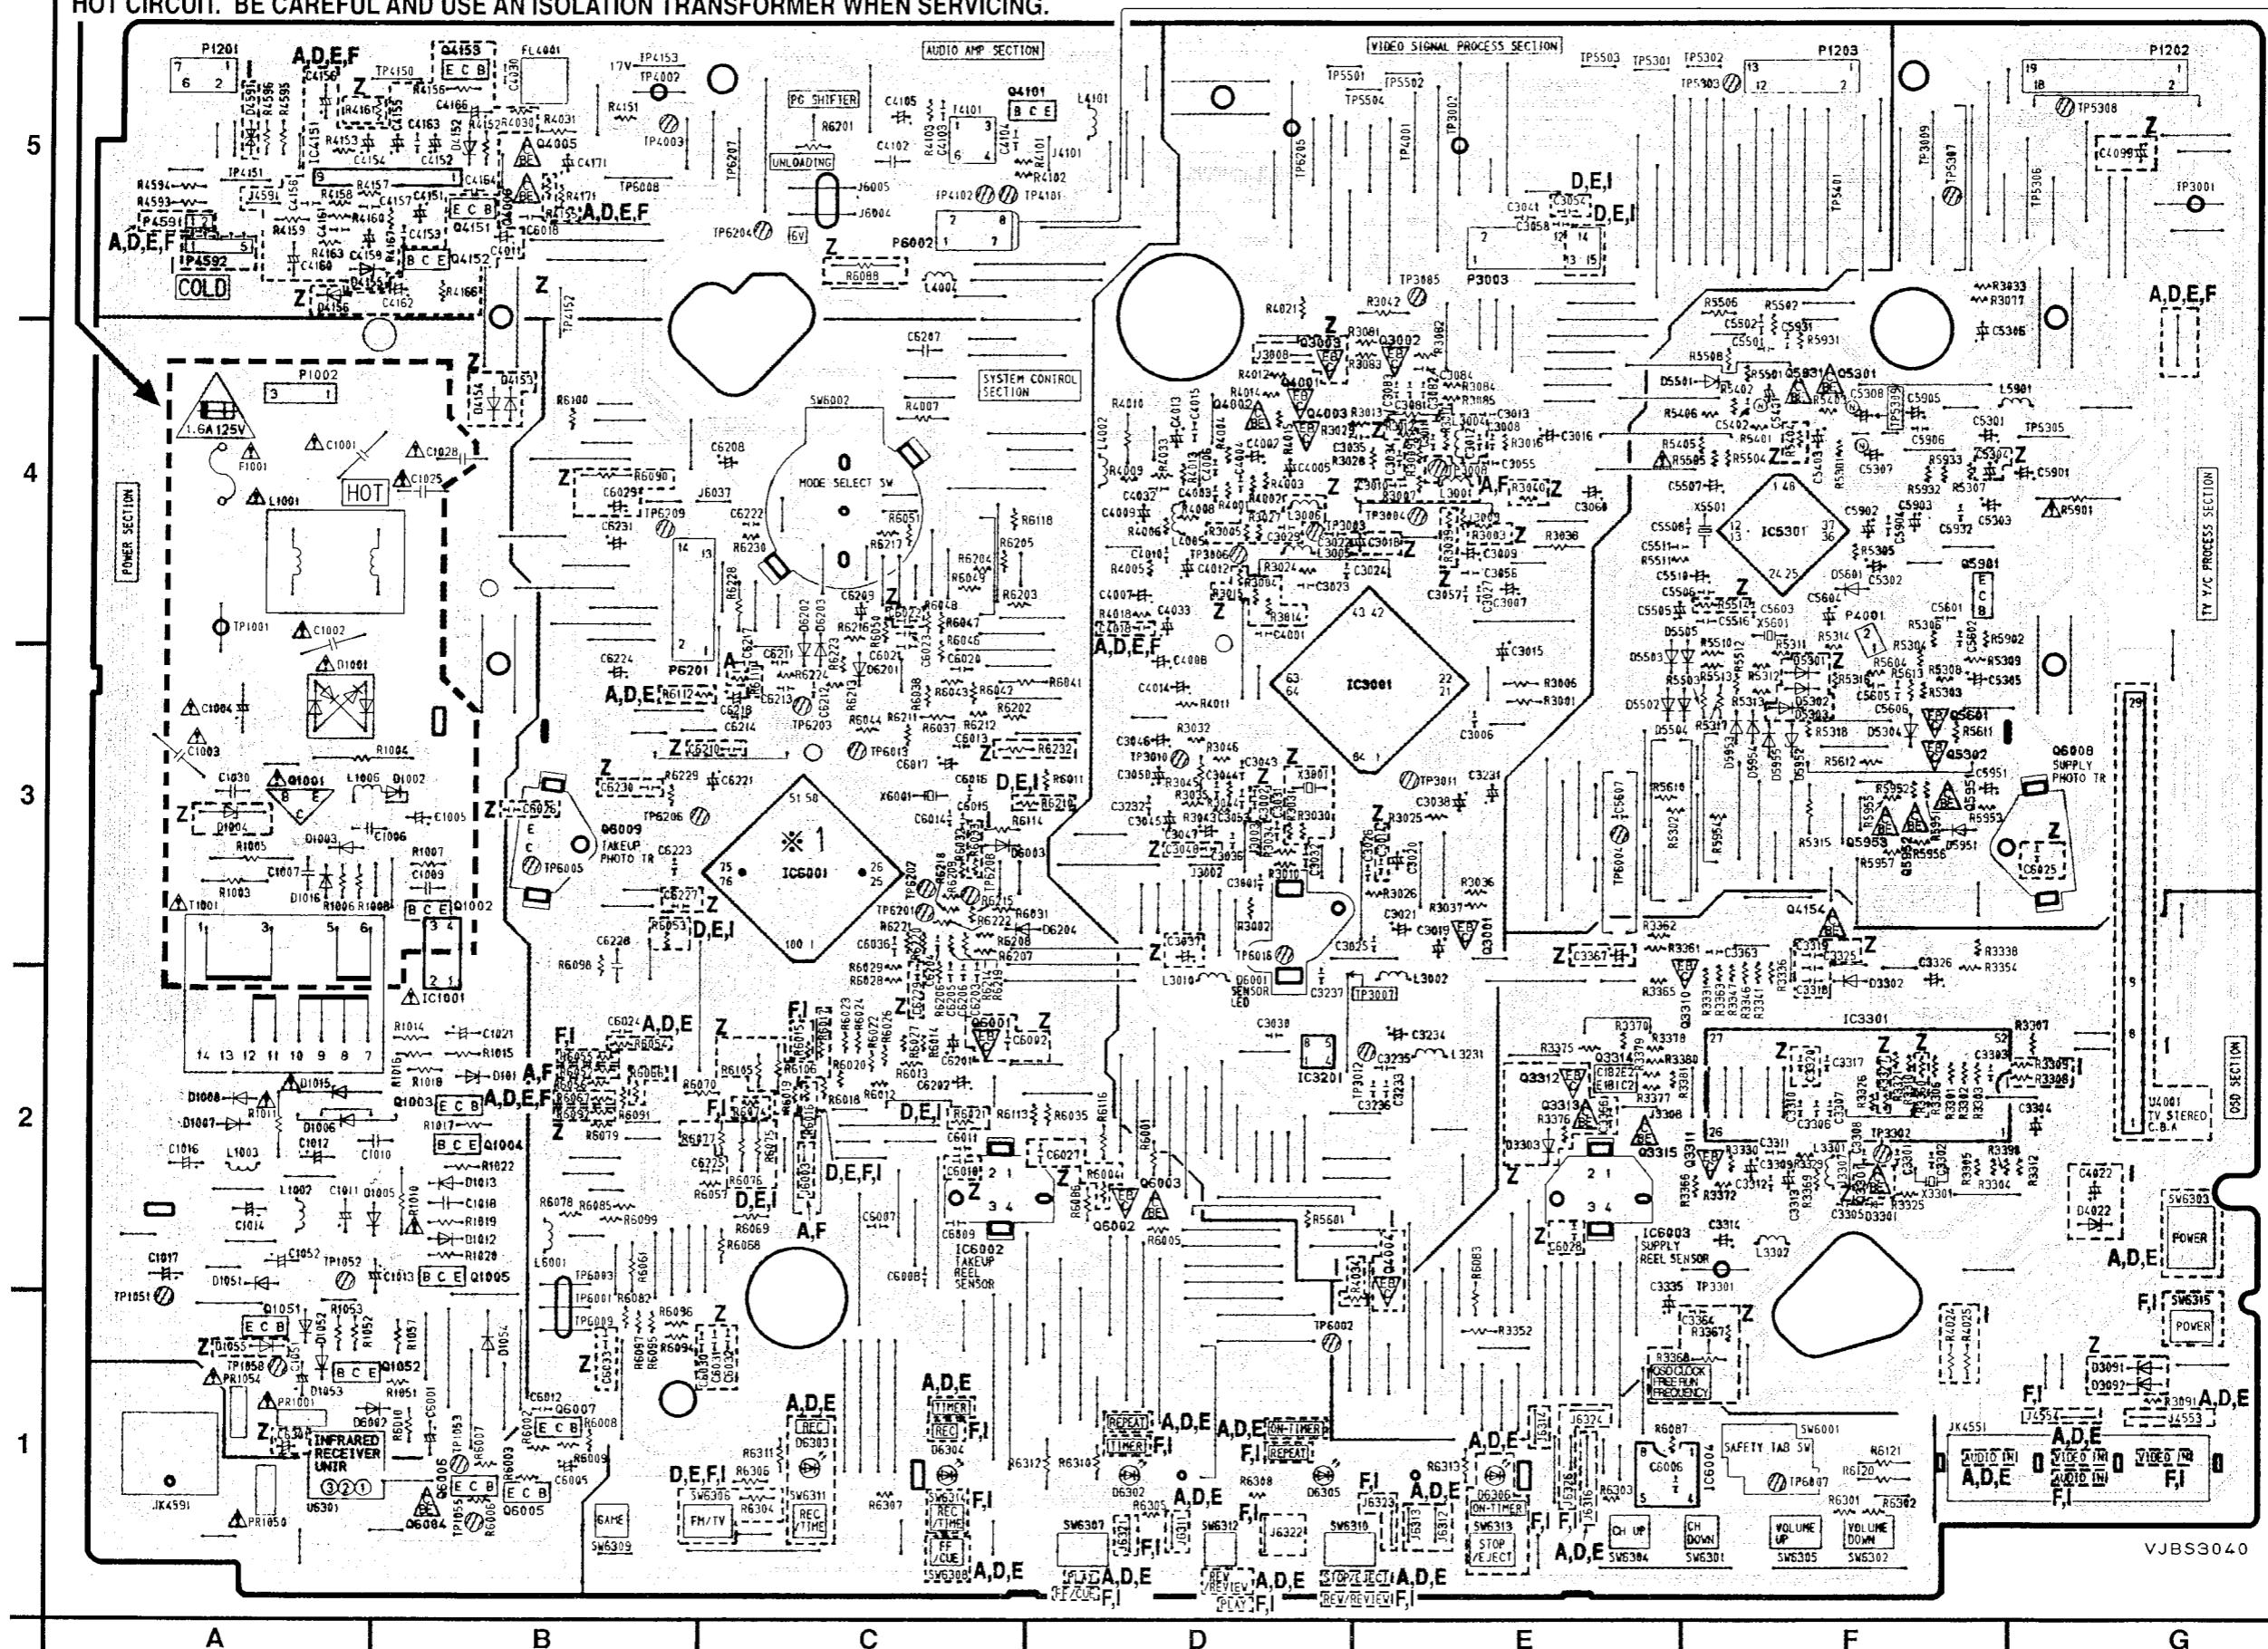

LOADING MOTOI

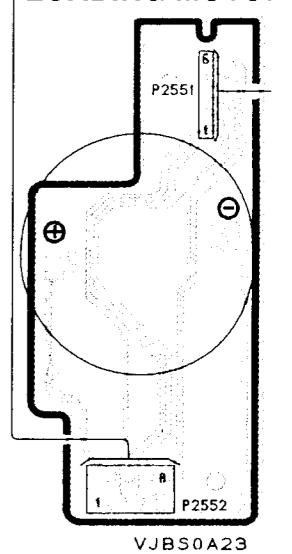

AUDIO CONT
HEAD P.C.B.



VJBS0A24

NOTE:
FOR SCHEMATIC C
REFER TO BEGINN

IMPORTANT SAFETY
COMPONENTS IDENT
SPECIAL CHARACTE
WHEN REPLACING A
USE ONLY THE SPE

* 1 IC6001 repl
produ
MN675058
MN675058
MN675058

40B1 (F)

40A1 (I)

R.P.C.B.

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z

ROL

DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES.
ING OF SCHEMATIC SECTION.

NOTICE:
IFIED BY THE SIGN HAVE
RISTICS IMPORTANT FOR SAFETY.
NY OF THESE COMPONENTS
CIFIED PARTS.

acement note:



cts	replacement parts
A5P2	MN675058A5P2
A5P1	
A5P	

MAIN	
TRANSISTOR	
Q1001	A-3
Q1002	B-3
Q1003	B-2
Q1004	B-2
Q1005	B-2
Q1051	A-1
Q1052	B-1
Q3001	E-3
Q3002	E-4
Q3003	E-4
Q3004	E-4
Q3005	E-4
Q3006	E-4
Q3007	E-4
Q3008	E-4
Q3009	E-5
Q3010	E-5
Q3011	E-5
Q3012	E-5
Q3013	E-5
Q3014	E-5
Q3015	E-5
Q3016	E-5
Q3017	E-5
Q3018	E-5
Q3019	E-5
Q3020	E-5
Q3021	E-5
Q3022	E-5
Q3023	E-5
Q3024	E-5
Q3025	E-5
Q3026	E-5
Q3027	E-5
Q3028	E-5
Q3029	E-5
Q3030	E-5
Q3031	E-5
Q3032	E-5
Q3033	E-5
Q3034	E-5
Q3035	E-5
Q3036	E-5
Q3037	E-5
Q3038	E-5
Q3039	E-5
Q3040	E-5
Q3041	E-5
Q3042	E-5
Q3043	E-5
Q3044	E-5
Q3045	E-5
Q3046	E-5
Q3047	E-5
Q3048	E-5
Q3049	E-5
Q3050	E-5
Q3051	E-5
Q3052	E-5
Q3053	E-5
Q3054	E-5
Q3055	E-5
Q3056	E-5
Q3057	E-5
Q3058	E-5
Q3059	E-5
Q3060	E-5
Q3061	E-5
Q3062	E-5
Q3063	E-5
Q3064	E-5
Q3065	E-5
Q3066	E-5
Q3067	E-5
Q3068	E-5
Q3069	E-5
Q3070	E-5
Q3071	E-5
Q3072	E-5
Q3073	E-5
Q3074	E-5
Q3075	E-5
Q3076	E-5
Q3077	E-5
Q3078	E-5
Q3079	E-5
Q3080	E-5
Q3081	E-5
Q3082	E-5
Q3083	E-5
Q3084	E-5
Q3085	E-5
Q3086	E-5
Q3087	E-5
Q3088	E-5
Q3089	E-5
Q3090	E-5
Q3091	E-5
Q3092	E-5
Q3093	E-5
Q3094	E-5
Q3095	E-5
Q3096	E-5
Q3097	E-5
Q3098	E-5
Q3099	E-5
Q3100	E-5
Q3101	E-5
Q3102	E-5
Q3103	E-5
Q3104	E-5
Q3105	E-5
Q3106	E-5
Q3107	E-5
Q3108	E-5
Q3109	E-5
Q3110	E-5
Q3111	E-5
Q3112	E-5
Q3113	E-5
Q3114	E-5
Q3115	E-5
Q3116	E-5
Q3117	E-5
Q3118	E-5
Q3119	E-5
Q3120	E-5
Q3121	E-5
Q3122	E-5
Q3123	E-5
Q3124	E-5
Q3125	E-5
Q3126	E-5
Q3127	E-5
Q3128	E-5
Q3129	E-5
Q3130	E-5
Q3131	E-5
Q3132	E-5
Q3133	E-5
Q3134	E-5
Q3135	E-5
Q3136	E-5
Q3137	E-5
Q3138	E-5
Q3139	E-5
Q3140	E-5
Q3141	E-5
Q3142	E-5
Q3143	E-5
Q3144	E-5
Q3145	E-5
Q3146	E-5
Q3147	E-5
Q3148	E-5
Q3149	E-5
Q3150	E-5
Q3151	E-5
Q3152	E-5
Q3153	E-5
Q3154	E-5
Q3155	E-5
Q3156	E-5
Q3157	E-5
Q3158	E-5
Q3159	E-5
Q3160	E-5
Q3161	E-5
Q3162	E-5
Q3163	E-5
Q3164	E-5
Q3165	E-5
Q3166	E-5
Q3167	E-5
Q3168	E-5
Q3169	E-5
Q3170	E-5
Q3171	E-5
Q3172	E-5
Q3173	E-5
Q3174	E-5
Q3175	E-5
Q3176	E-5
Q3177	E-5
Q3178	E-5
Q3179	E-5
Q3180	E-5
Q3181	E-5
Q3182	E-5
Q3183	E-5
Q3184	E-5
Q3185	E-5
Q3186	E-5
Q3187	E-5
Q3188	E-5
Q3189	E-5
Q3190	E-5
Q3191	E-5
Q3192	E-5
Q3193	E-5
Q3194	E-5
Q3195	E-5
Q3196	E-5
Q3197	E-5
Q3198	E-5
Q3199	E-5
Q3200	E-5
Q3201	E-5
Q3202	E-5
Q3203	E-5
Q3204	E-5
Q3205	E-5
Q3206	E-5
Q3207	E-5
Q3208	E-5
Q3209	E-5
Q3210	E-5
Q3211	E-5
Q3212	E-5
Q3213	E-5
Q3214	E-5
Q3215	E-5
Q3216	E-5
Q3217	E-5
Q3218	E-5
Q3219	E-5
Q3220	E-5
Q3221	E-5
Q3222	E-5
Q3223	E-5
Q3224	E-5
Q3225	E-5
Q3226	E-5
Q3227	E-5
Q3228	E-5
Q3229	E-5
Q3230	E-5
Q3231	E-5
Q3232	E-5
Q3233	E-5
Q3234	E-5
Q3235	E-5
Q3236	E-5
Q3237	E-5
Q3238	E-5
Q3239	E-5
Q3240	E-5
Q3241	E-5
Q3242	E-5
Q3243	E-5
Q3244	E-5
Q3245	E-5
Q3246	E-5
Q3247	E-5
Q3248	E-5
Q3249	E-5
Q3250	E-5
Q3251	E-5
Q3252	E-5
Q3253	E-5
Q3254	E-5
Q3255	E-5
Q3256	E-5
Q3257	E-5
Q3258	E-5
Q3259	E-5
Q3260	E-5
Q3261	E-5
Q3262	E-5
Q3263	E-5
Q3264	E-5
Q3265	E-5
Q3266	E-5
Q3267	E-5
Q3268	E-5
Q3269	E-5
Q3270	E-5
Q3271	E-5
Q3272	E-5
Q3273	E-5
Q3274	E-5
Q3275	E-5
Q3276	E-5
Q3277	E-5
Q3278	E-5
Q3279	E-5
Q3280	E-5
Q3281	E-5
Q3282	E-5
Q3283	E-5
Q3284	E-5
Q3285	E-5
Q3286	E-5
Q3287	E-5
Q3288	E-5
Q3289	E-5
Q3290	E-5
Q3291	E-5
Q3292	E-5
Q3293	E-5
Q3294	E-5
Q3295	E-5
Q3296	E-5
Q3297	E-5


MAIN (POWER SUPPLY / SIGNAL PROCESS / OSD / AUDIO AMP / TV Y/C PROCESS / SYSTEM CONTROL / SERVO) C.B.A. VEPS3042B1 (B,C) / VEPS3042A1 (G,H)

HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

LOADING MOTOR P.C.B.

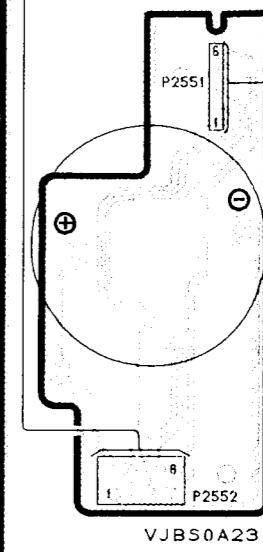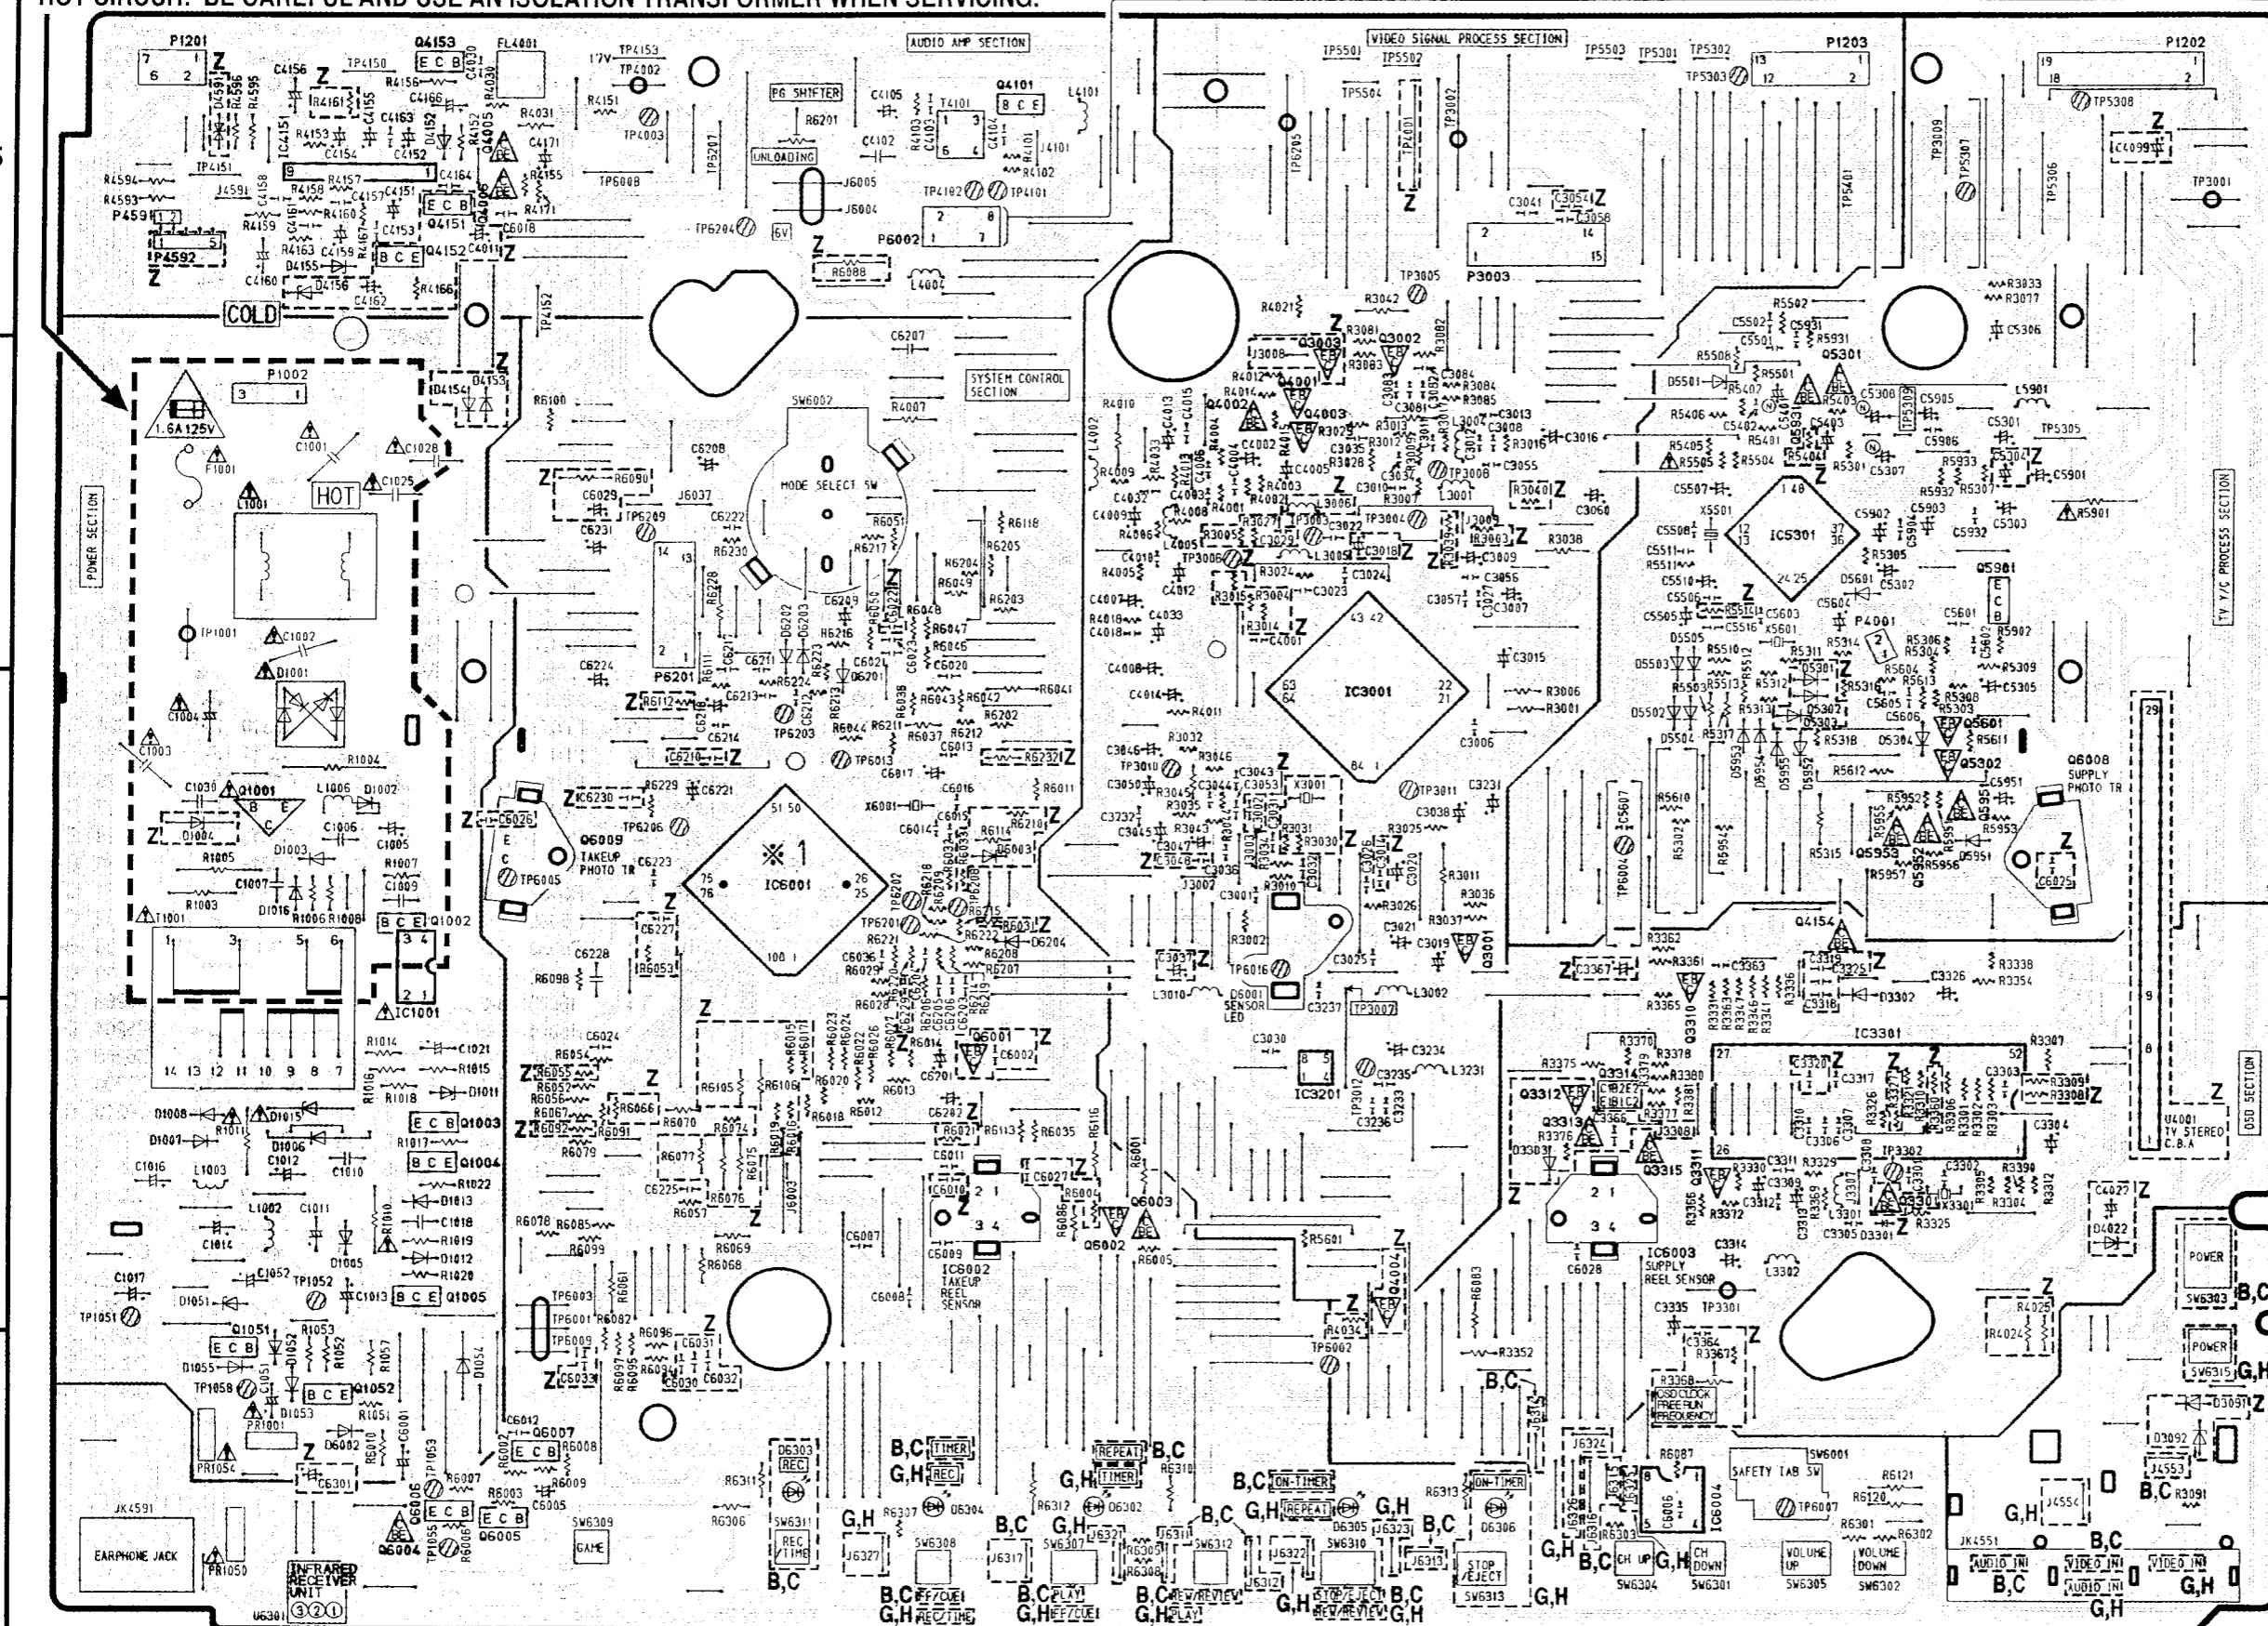

AUDIO CONTROL HEAD P.C.B.

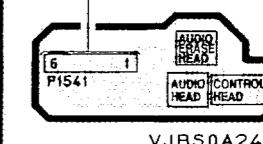

VJBS0A24

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD
REFER TO BEGINNING OF SCHEMATIC SECTION.

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

* 1 IC6001 replacement note:

products	replacement parts
MN675058A5P2	
MN675058A5P1	
MN675058A5P	

042A1 (G,H)

DR P.C.B.

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z

ITROL

IC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
BINNING OF SCHEMATIC SECTION.

TY NOTICE:
NTIFIED BY THE SIGN HAVE
TERISTICS IMPORTANT FOR SAFETY.
ANY OF THESE COMPONENTS.
PECIFIED PARTS.

placement note:

ucts	replacement parts
8A5P2	MN675058A5P2
8A5P1	
8A5P	

MAIN	
TRANSISTOR	
Q1001	A-3
Q1002	B-3
Q1003	B-2
Q1004	B-2
Q1005	B-2
Q1051	A-1
Q1052	B-1
Q3001	E-3
Q3002	E-4
Q3003	D-4
Q3301	F-2
Q3310	F-2
Q3311	F-2
Q3312	E-2
Q3313	E-2
Q3314	E-2
Q3315	E-2
Q4001	D-4
Q4002	D-4
Q4003	D-4
Q4004	E-2
Q4005	B-5
Q4006	B-5
Q4101	C-5
Q4151	B-5
Q4152	B-5
Q4153	B-5
Q4154	F-3
Q5301	F-3
Q5302	F-3
Q5601	F-3
Q5901	F-4
Q5931	F-4
Q5951	F-3
Q5952	F-3
Q5953	F-3
Q6001	C-2
Q6002	D-2
Q6003	D-2
Q6004	B-1
Q6005	B-1
Q6006	B-1
Q6007	B-1
Q6008	G-3
Q6009	B-3

MAIN	
IC	
IC1001	B-2
IC3001	D-3
IC3201	D-2
IC3301	F-2
IC4151	A-5
IC5301	F-4
IC6001	C-3
IC6002	C-2
IC6003	E-2
IC6004	F-1

MAIN	
ADJUSTMENT	
R3368	E-1
R6201	C-5


MAIN	
CONNECTOR	
P1002	A-4
P1201	A-5
P1202	G-5
P1203	F-5
P3003	E-5
P4001	F-4
P4591	A-5
TP5301	E-5
TP5302	F-5
TP5303	E-5
TP5306	G-5
TP5307	F-5
TP5308	G-5
TP5309	F-4
TP5401	F-5
TP5501	D-5
TP5502	E-5
TP5503	E-5
TP5504	D-5
TP6001	B-2
TP6002	D-1
TP6003	B-2
TP6004	E-3
TP6005	B-3
TP6007	F-1
TP6008	B-5
TP6009	B-1
TP6013	C-3
TP6016	D-3
TP6201	C-3
TP6202	C-3
TP6203	C-3
TP6204	C-5
TP6205	D-5
TP6206	B-3
TP6207	C-5
TP6208	C-3
TP6209	B-4

LEADLESS COMPONENT PARTS LOCATION GUIDE

MAIN C.B.A.	Q3001	E-3	R3081	D-5	R4021	D-5	R5954	F-3	R6096	B-1	C3041	E-5	C5602	F-4
	Q3002	E-4	R3082	E-3	R4030	B-5	R5955	F-3	R6097	B-1	C3043	D-3	C5603	F-4
	Q3003	D-4	R3083	D-4	R4033	D-4	R5956	F-3	R6098	B-3	C3044	D-3	C5605	F-3
	Q3301	F-2	R3084	E-4	R4034	D-2	R5957	F-3	R6099	B-2	C3048	D-3	C5606	F-3
	Q3310	F-2	R3085	E-4	R4101	D-5	R6002	B-1	R6100	B-4	C3053	D-3	C5607	E-3
	Q3311	F-2	R3091	G-1	R4102	D-5	R6003	B-1	R6111	C-3	C3054	E-5	C5904	F-4
	Q3312	E-2	R3301	F-2	R4103	C-5	R6004	D-2	R6112	B-3	C3055	E-4	C5906	F-4
	Q3313	E-2	R3302	F-2	R4151	B-5	R6005	D-2	R6113	C-2	C3056	E-4	C5931	F-5
	Q3314	E-2	R3303	F-2	R4153	A-5	R6006	B-1	R6118	C-4	C3057	E-4	C5932	F-4
	Q3315	E-2	R3304	F-2	R4155	B-5	R6007	B-1	R6202	C-3	C3058	E-5	C6002	C-2
	Q4001	D-4	R3305	F-2	R4157	A-5	R6008	B-1	R6203	C-4	C3081	E-4	C6006	E-1
	Q4002	D-4	R3306	F-2	R4158	A-5	R6009	B-1	R6204	C-3	C3082	E-4	C6007	C-2
	Q4003	D-4	R3307	G-2	R4160	A-5	R6011	D-3	R6205	C-3	C3083	E-4	C6008	C-2
	Q4004	E-2	R3308	G-2	R4161	A-5	R6012	C-2	R6206	B-3	C3084	E-3	C6009	C-2
	Q4005	B-5	R3309	G-2	R4163	A-5	R6013	C-2	R6207	C-3	C3232	D-3	C6010	C-2
	Q4006	B-5	R3310	F-2	R4166	B-5	R6014	C-2	R6208	C-3	C3233	E-2	C6011	C-2
	Q4154	F-3	R3312	G-2	R4167	B-5	R6015	C-2	R6209	C-3	C3235	E-2	C6012	B-1
	Q5301	F-3	R3321	F-2	R4171	B-5	R6016	C-2	R6210	D-3	C3236	E-2	C6013	C-3
	Q5302	F-3	R3325	F-2	R5301	F-4	R6017	C-2	R6211	C-3	C3237	D-2	C6014	C-3
	Q5601	F-3	R3326	F-2	R5302	E-3	R6018	C-2	R6212	C-3	C3301	F-2	C6015	C-3
	Q5931	F-4	R3327	F-2	R5303	F-3	R6019	C-2	R6213	C-3	C3302	F-2	C6016	C-3
	Q5951	F-3	R3329	F-2	R5304	F-4	R6020	C-2	R6214	C-2	C3303	F-2	C6018	B-5
	Q5952	F-3	R3330	F-2	R5305	F-4	R6021	C-2	R6215	C-3	C3305	F-2	C6020	C-4
	Q5953	F-3	R3331	F-2	R5306	F-4	R6022	C-2	R6216	C-4	C3306	F-2	C6021	C-4
	Q6001	C-2	R3336	F-2	R5307	F-4	R6023	C-2	R6217	C-4	C3307	F-2	C6022	C-4
	Q6002	D-2	R3338	F-3	R5308	F-3	R6024	C-2	R6218</td					

TV MAIN C.B.A. LRM61002XZ (A) /LRM61002ZZ (B) /LRM61002ZA (C) /LRM61002YZ (D) /LRM61002YA (E) /LRM61002BZ (F)
/LRM61002CZ (G) /LRM61002CA (H) /LRM61002AZ (I)

HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING

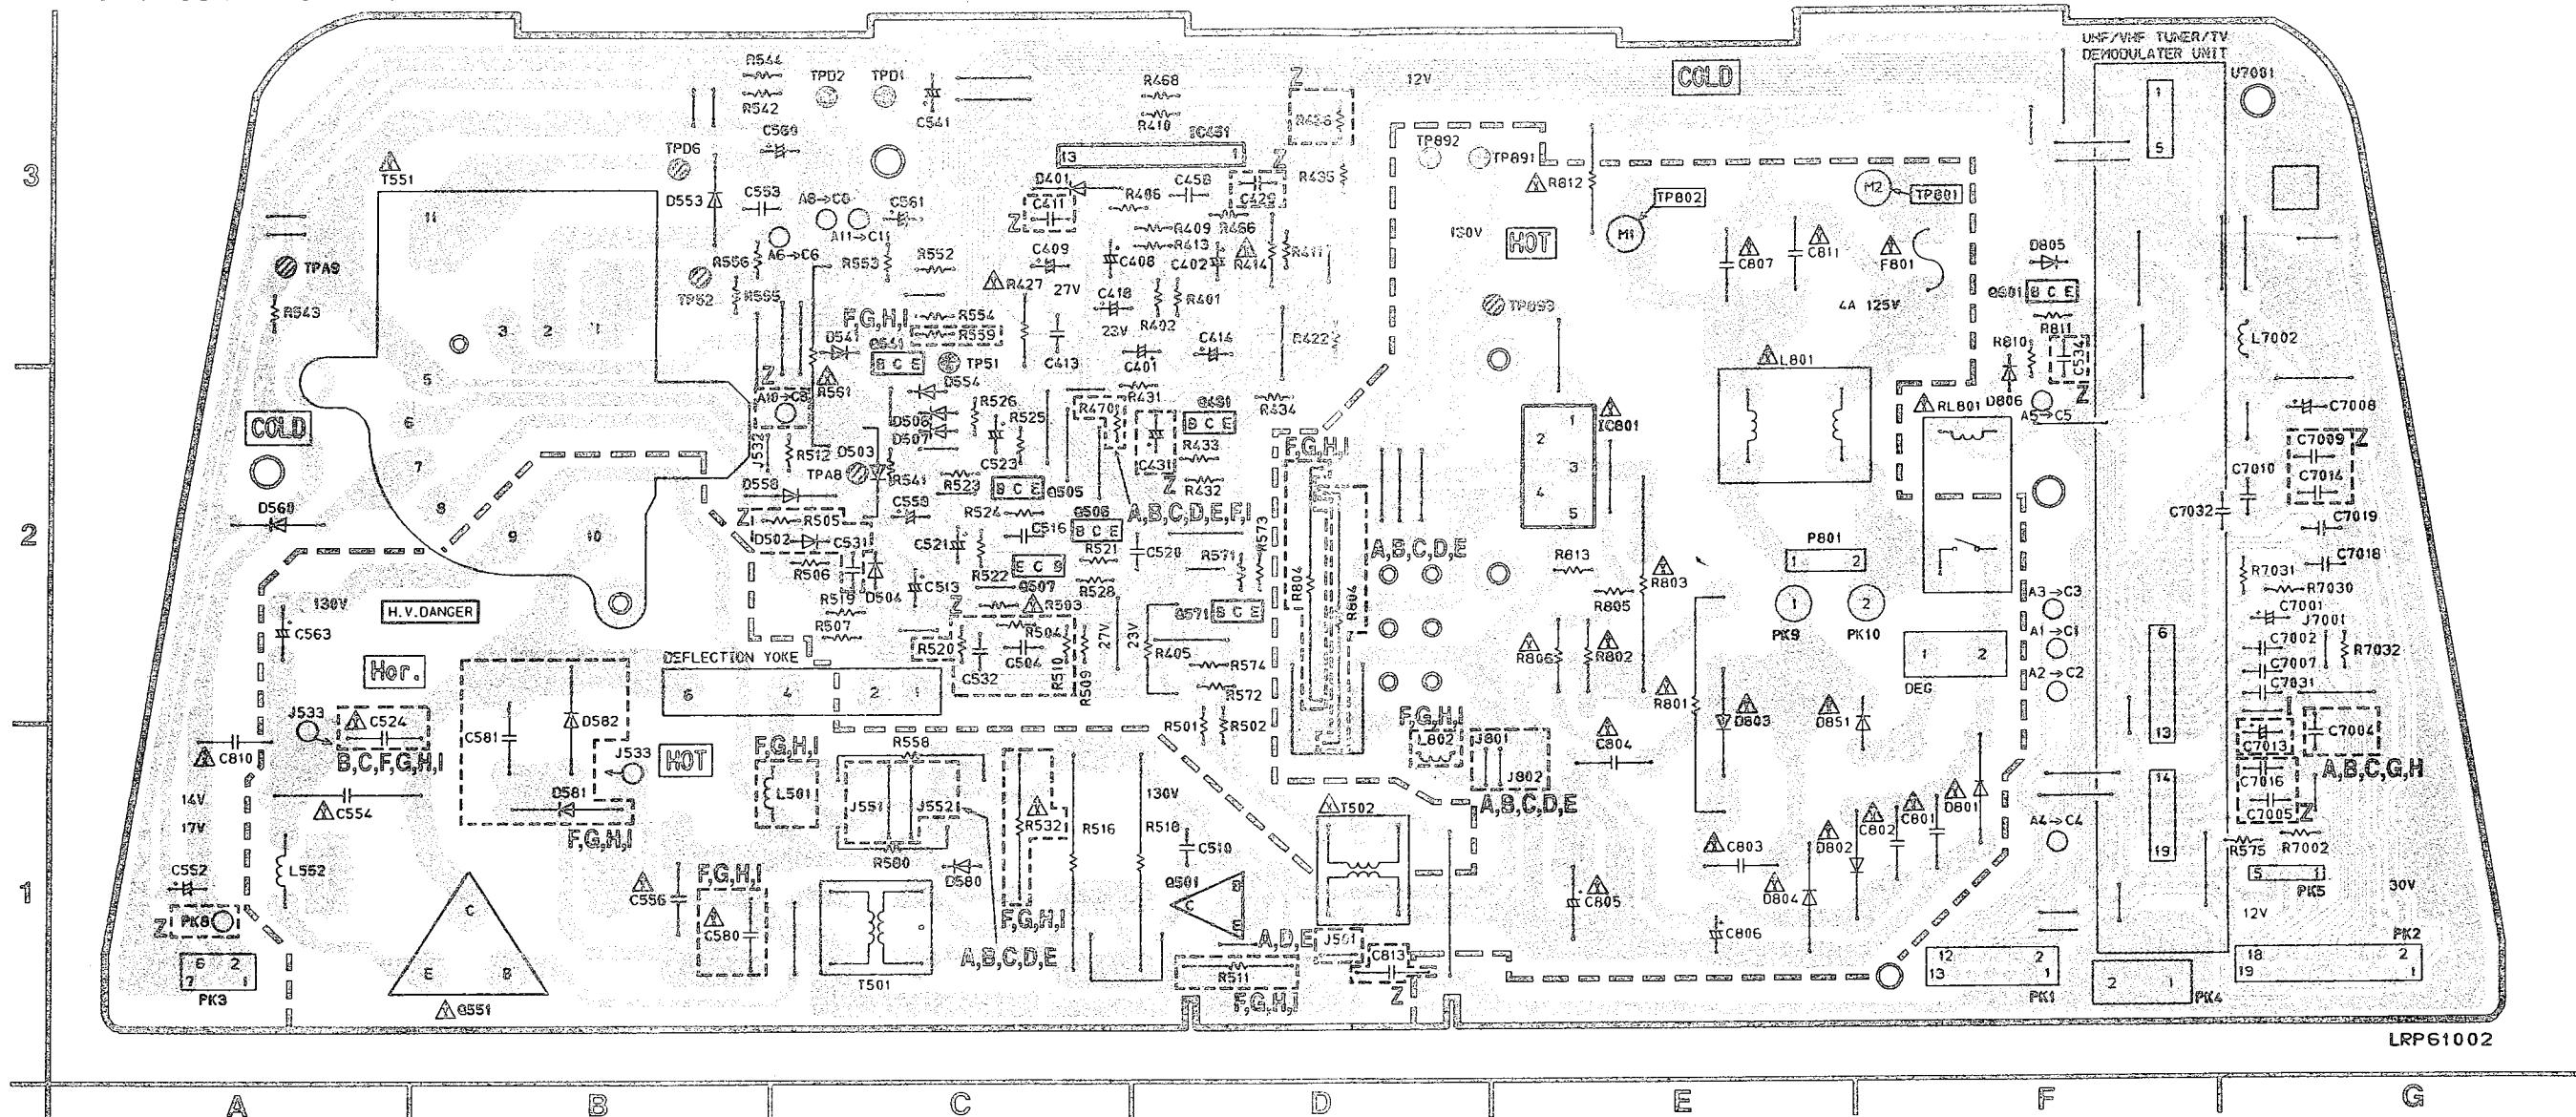

TV MAIN	
TRANSISTOR	
Q431	D-2
Q501	D-1
Q505	C-2
Q506	C-2
Q507	C-2
Q541	C-3
Q551	B-1
Q571	D-2
Q801	F-3
IC	
IC451	D-3
IC801	E-2

TV MAIN	
	CONNECTOR
A1	F-2
A2	F-2
A3	F-2
A4	F-1
A5	F-2
A6	C-3
A8	C-3
A10	B-2
A11	C-3
P801	E-2
PK1	F-1
PK2	G-1
PK3	A-1
PK4	F-1
PK5	G-1


TEST POINT	
TP51	C-3
TP52	B-3
TP801	F-3
TP802	E-3
TP891	E-3
TP892	D-3
TP893	D-3
TPA8	C-2
TPA9	A-3
TPD1	C-3
TPD2	C-3
TPD6	B-3

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN  HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS:
USE ONLY THE SPECIFIED PARTS.

**CRT C.B.A LRP23007YZ (A,D,E) /LRP23007ZZ (B,C)
/LRP23007AZ (F,I) /LRP23007BZ (G,H)**

CAUTION: WHEN SERVICING THIS C.B.A., AVOID TOUCHING HIGH VOLTAGE COMPONENTS.

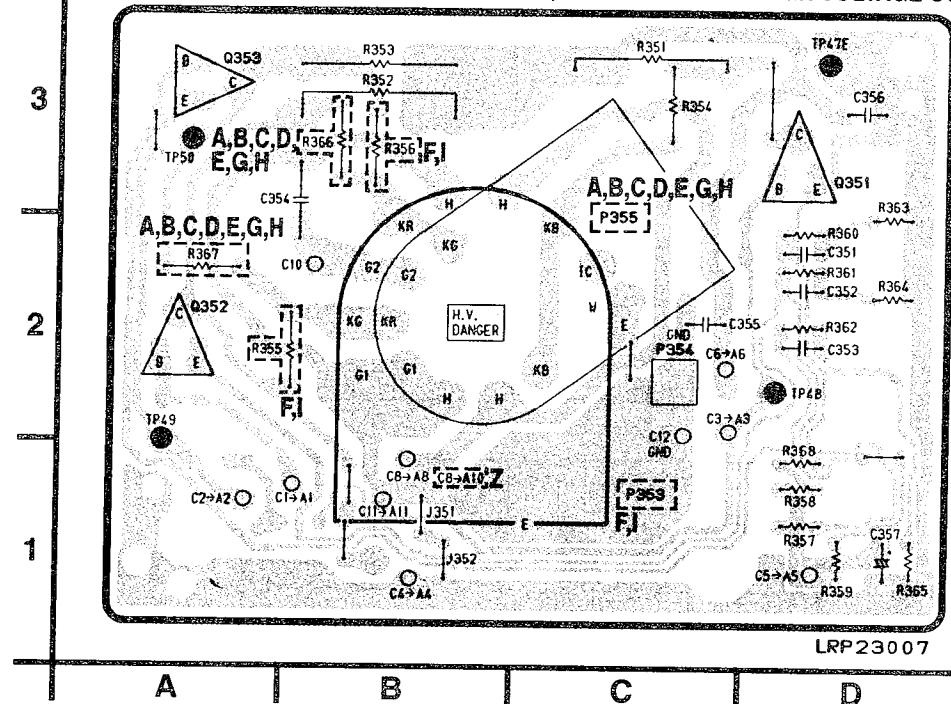

LRP23007











CRT	
TRANSISTOR	
Q351	D-3
Q352	A-2
Q353	A-3
CONNECTOR	
C1	B-1
C2	A-1
C3	C-2
C4	B-1
C5	D-1
C6	C-2
C8	B-1
C10	B-2
C11	B-1
C12	C-2
P353	C-1
P354	C-2
P355	C-3
TEST POINT	
TP47E	D-3
TP48	D-2
TP49	A-2
TP50	A-3

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VV2007	G
VV2017W	H
PV-M2047	I
Not Used	Z

SIGNAL WAVEFORM

How to Read Waveforms

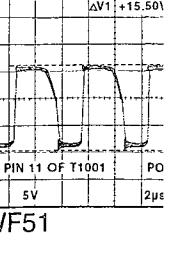
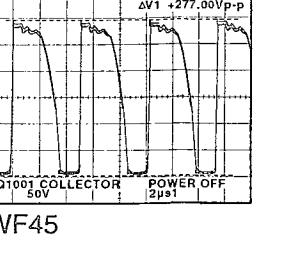
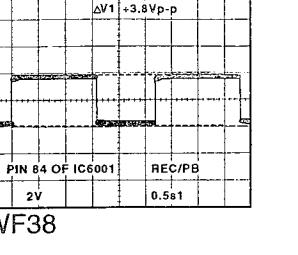
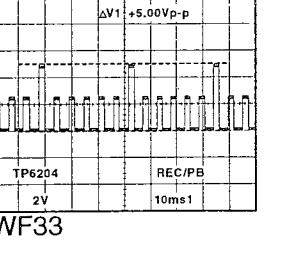
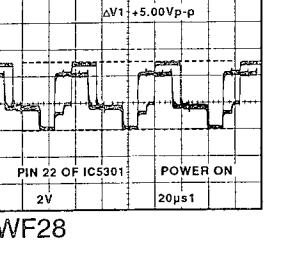
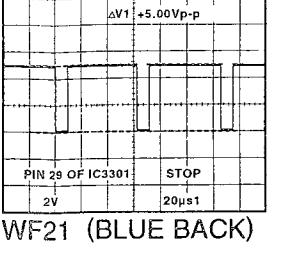
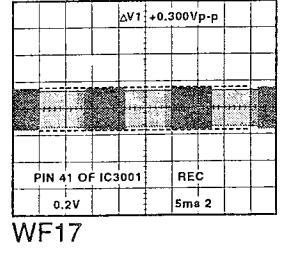
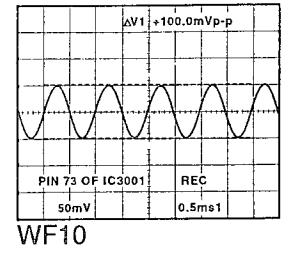
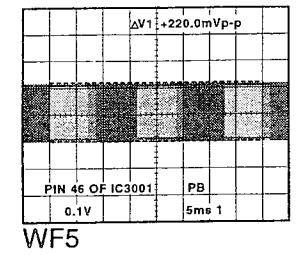
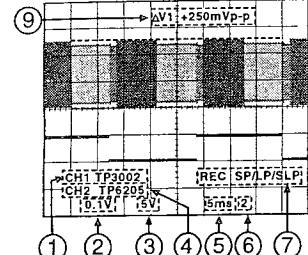


WF1

- ① Connecting Point
- ② Volts/Div
- ③ Volts/Div
- ④ Connecting Point
- ⑤ Time/Div
- ⑥ Trigger Channel of the scope
(1:CH1,2:CH2)
- ⑦ Operation Mode of VCR
- ⑧ Waveform Point on Schematic
- ⑨ ΔV_1 :Peak to Peak

WF5

MAIN C.B.A.

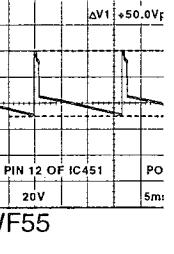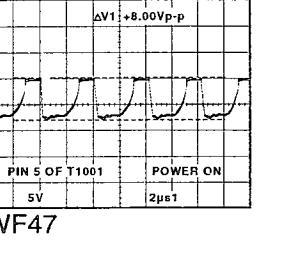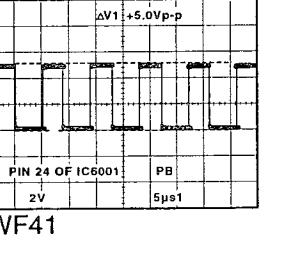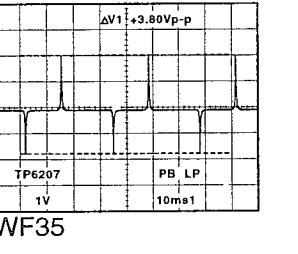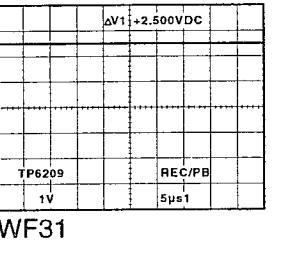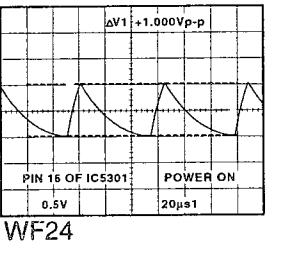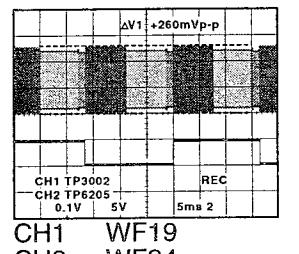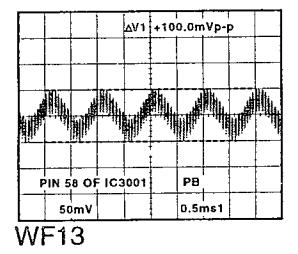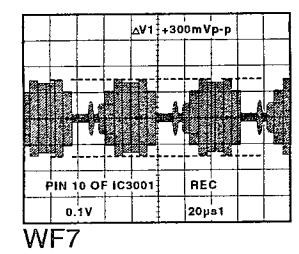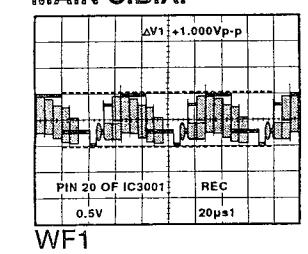

WF1

WF7

WF13

WF19

WF34











WF31

WF35

WF41

WF47

WF55

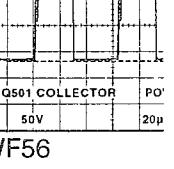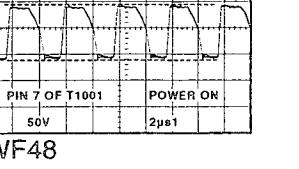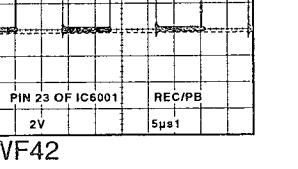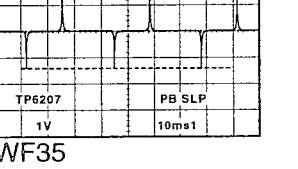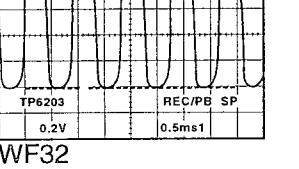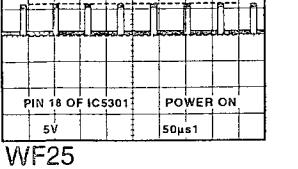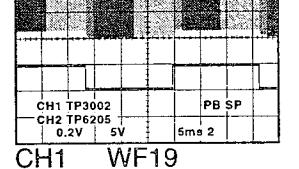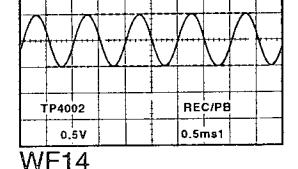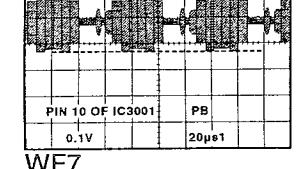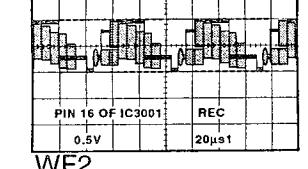

WF2

WF7

WF14

WF19

WF34











WF32

WF35

WF42

WF48

WF56

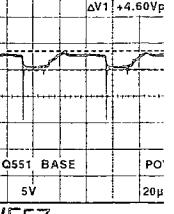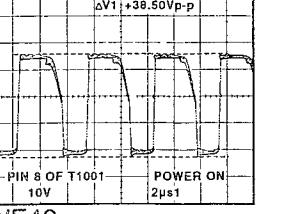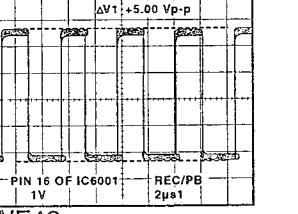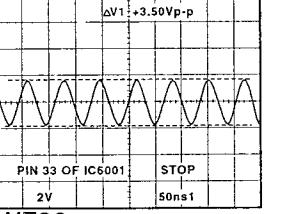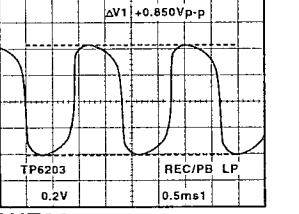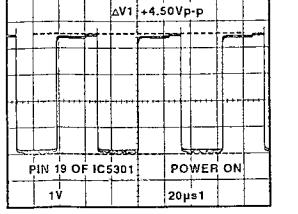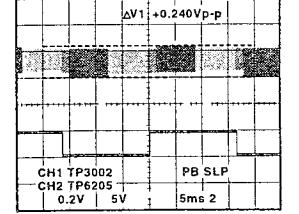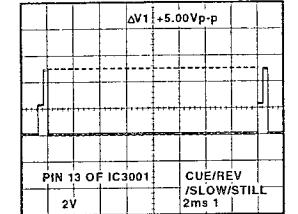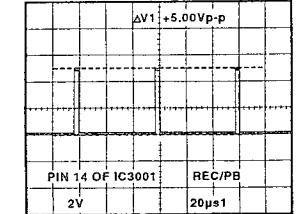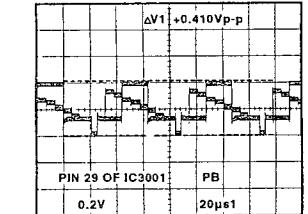

WF3

WF8

WF15

WF19

WF34








WF32

WF36


WF43

WF49


WF57

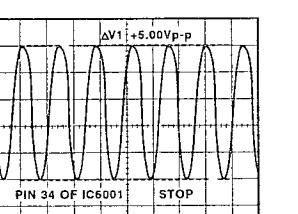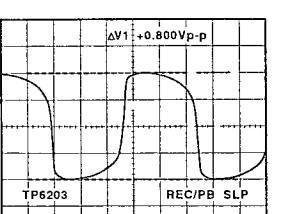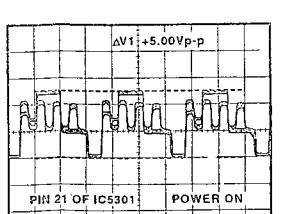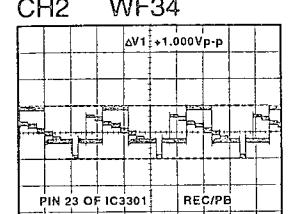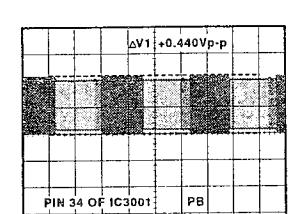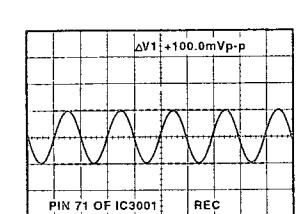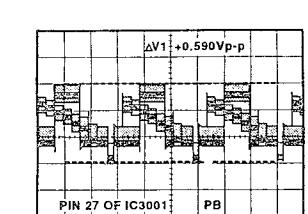


**HEAD AMP C.B.A.
(D,E,I)**

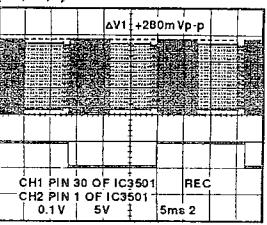

CH1 WF66
CH2 WF67

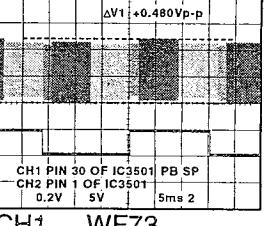


CH1 WF66
CH2 WF67

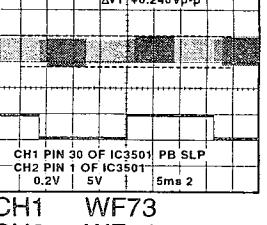


CH1 WF73
CH2 WF74


CRT C.B.A.

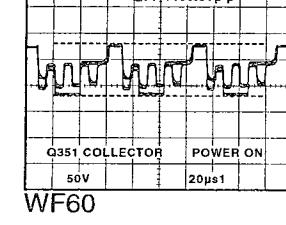

**HEAD AMP C.B.A.
(A,B,C,F,G,H)**

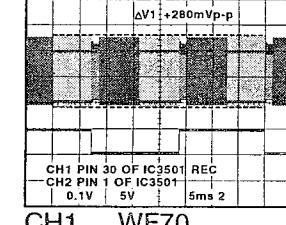

CH1 WF70
CH2 WF71

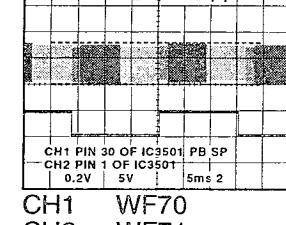


CH1 WF75
CH2 WF74


**COMPARISON CHART
OF MODELS & MARKS**

MODEL	MARK
PV-M1327	A
VW1307	B
VW1317W	C
PV-M1347	D
PV-M1357W	E
PV-2037	F
VW2007	G
VW2017W	H
PV-M2047	I
Not Used	Z

TV STEREO C.B.A. (I)

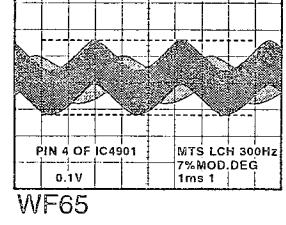


CH1 WF72
CH2 WF71

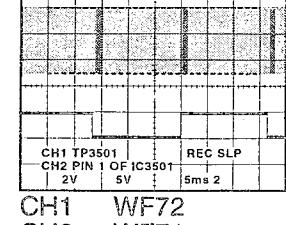


CH1 WF72
CH2 WF71

BLOCK DIAGRAMS


POWER SUPPLY BLOCK DIAGRAM

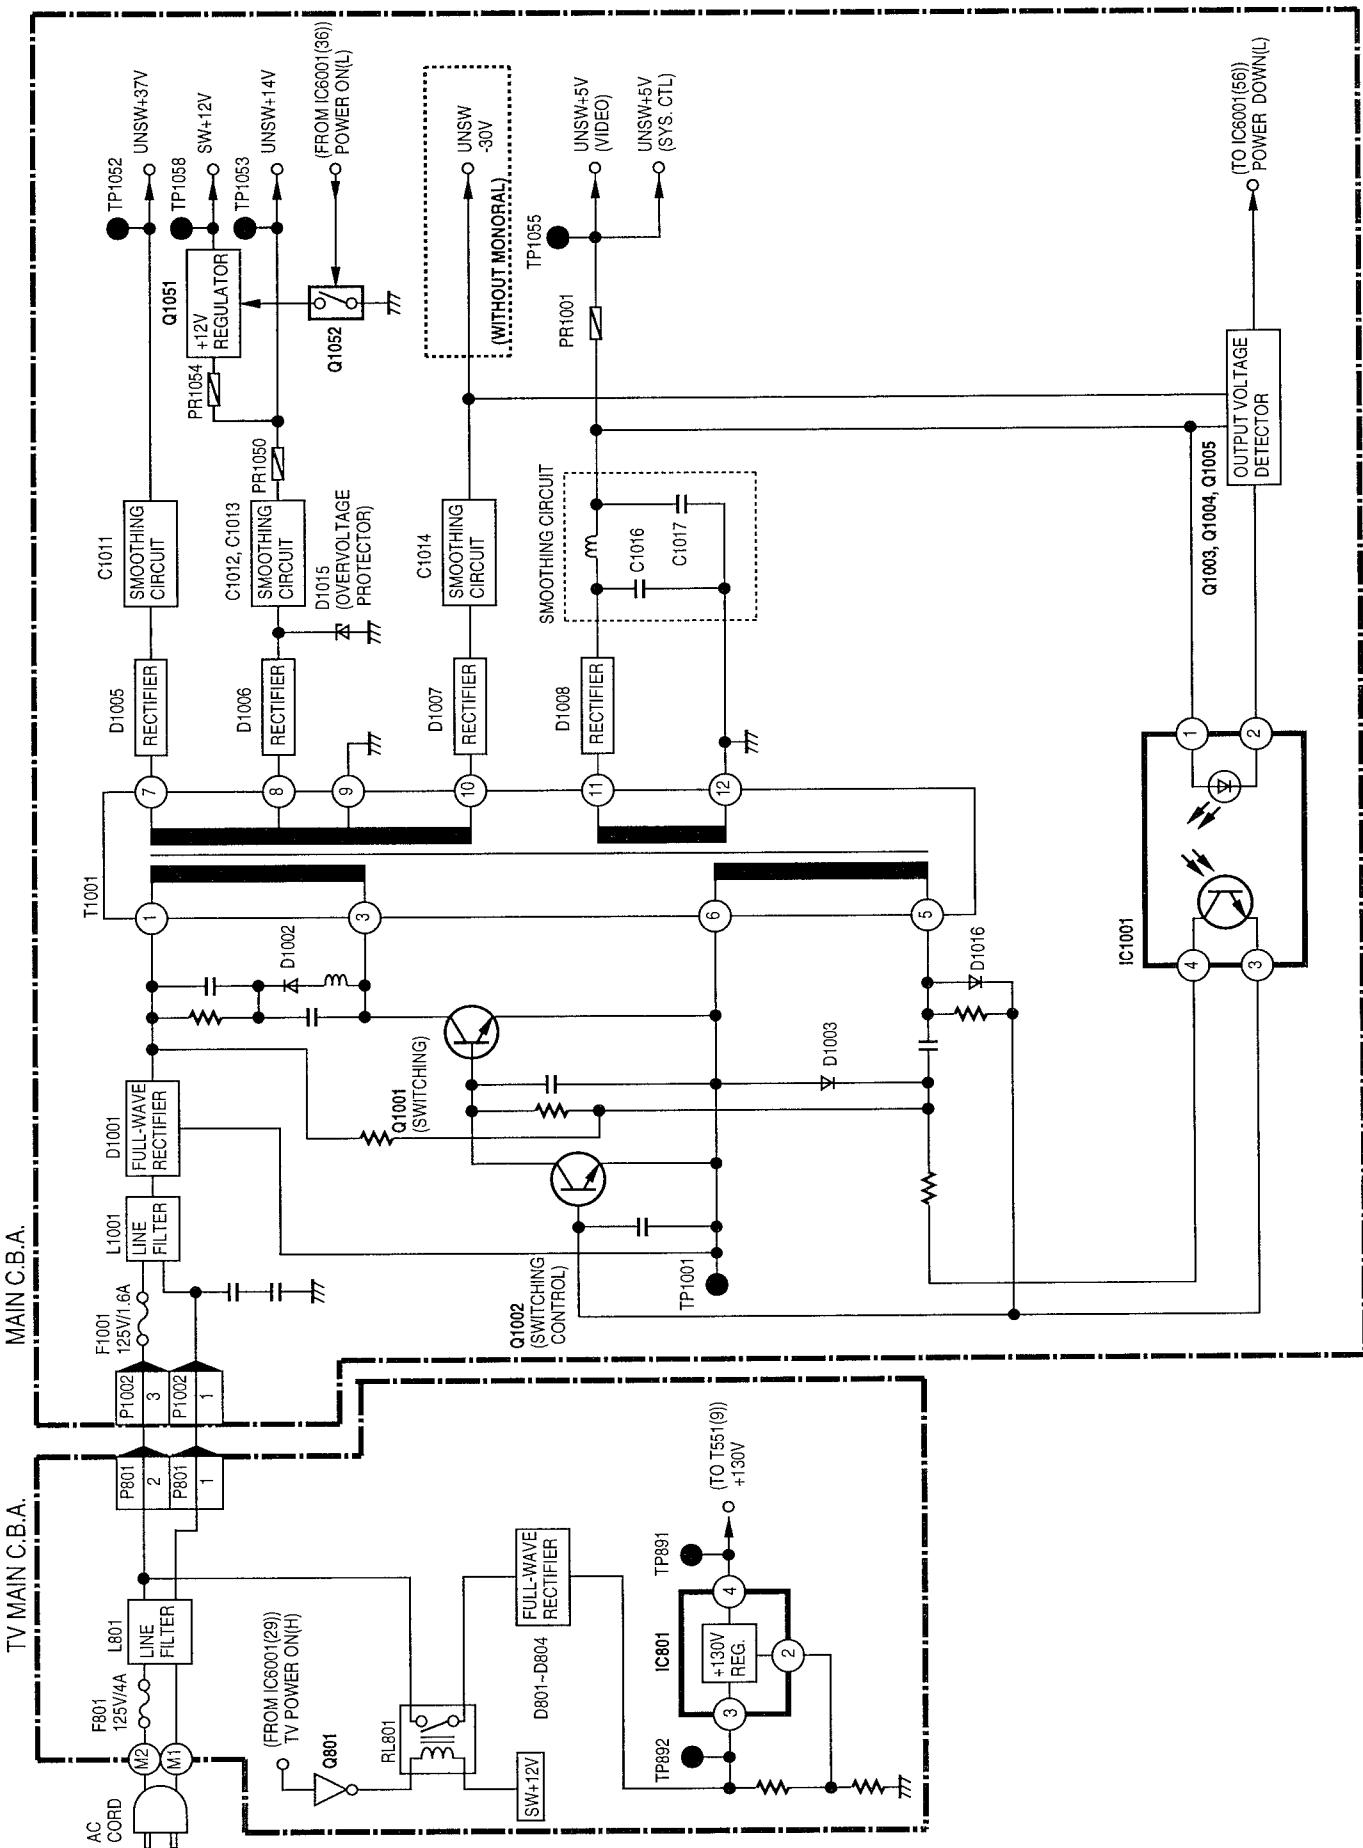


VIDEO SIGNAL PATH BLOCK DIAGRAM

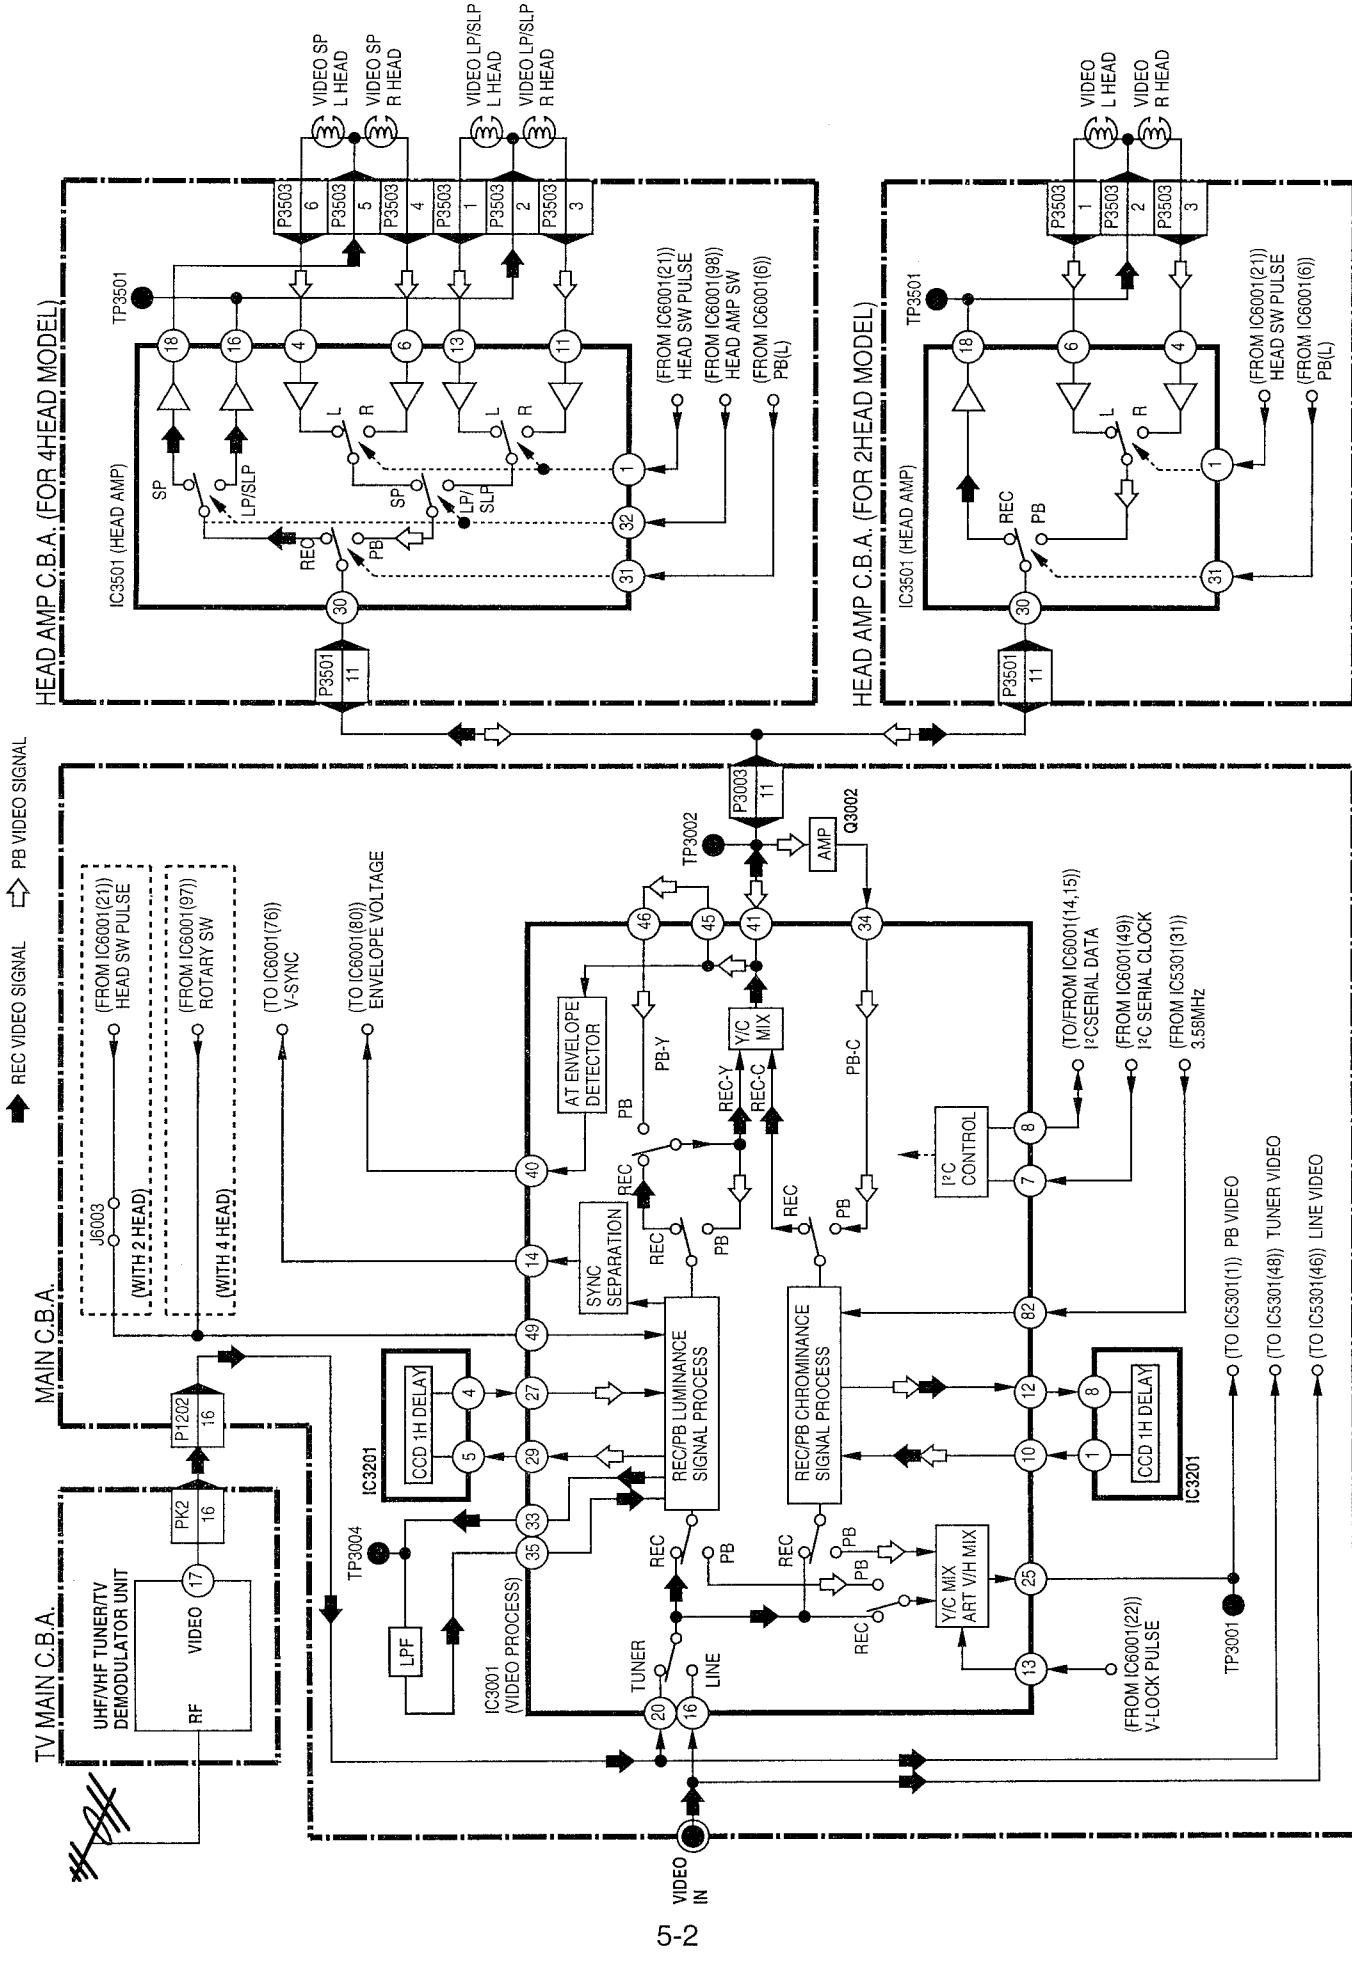


AUDIO SIGNAL PATH BLOCK DIAGRAM

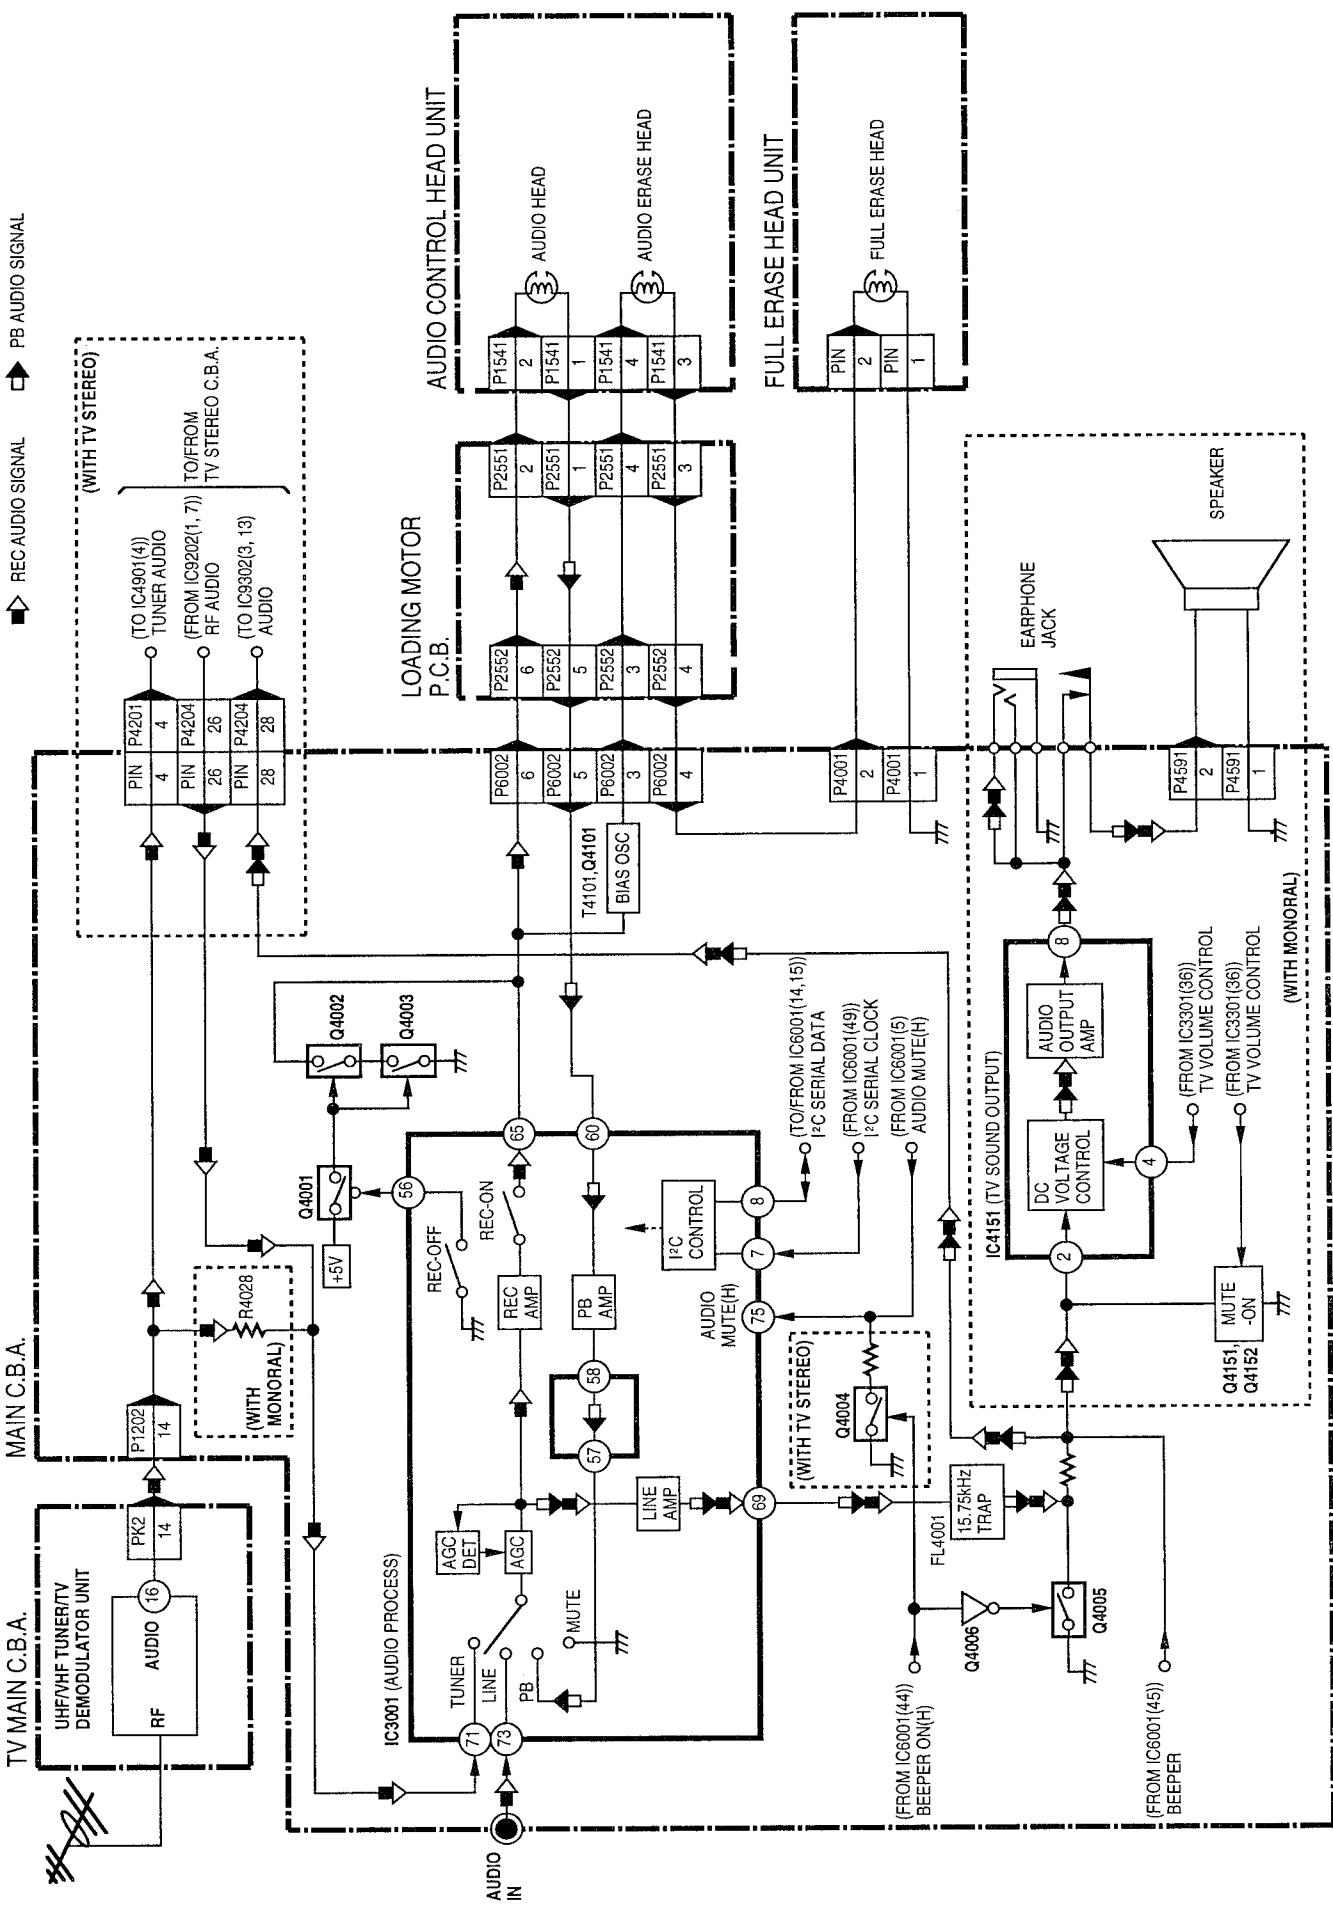


IC3001 VIDEO/AUDIO PROCESS IC-BLOCK DIAGRAM, AN3475FBP

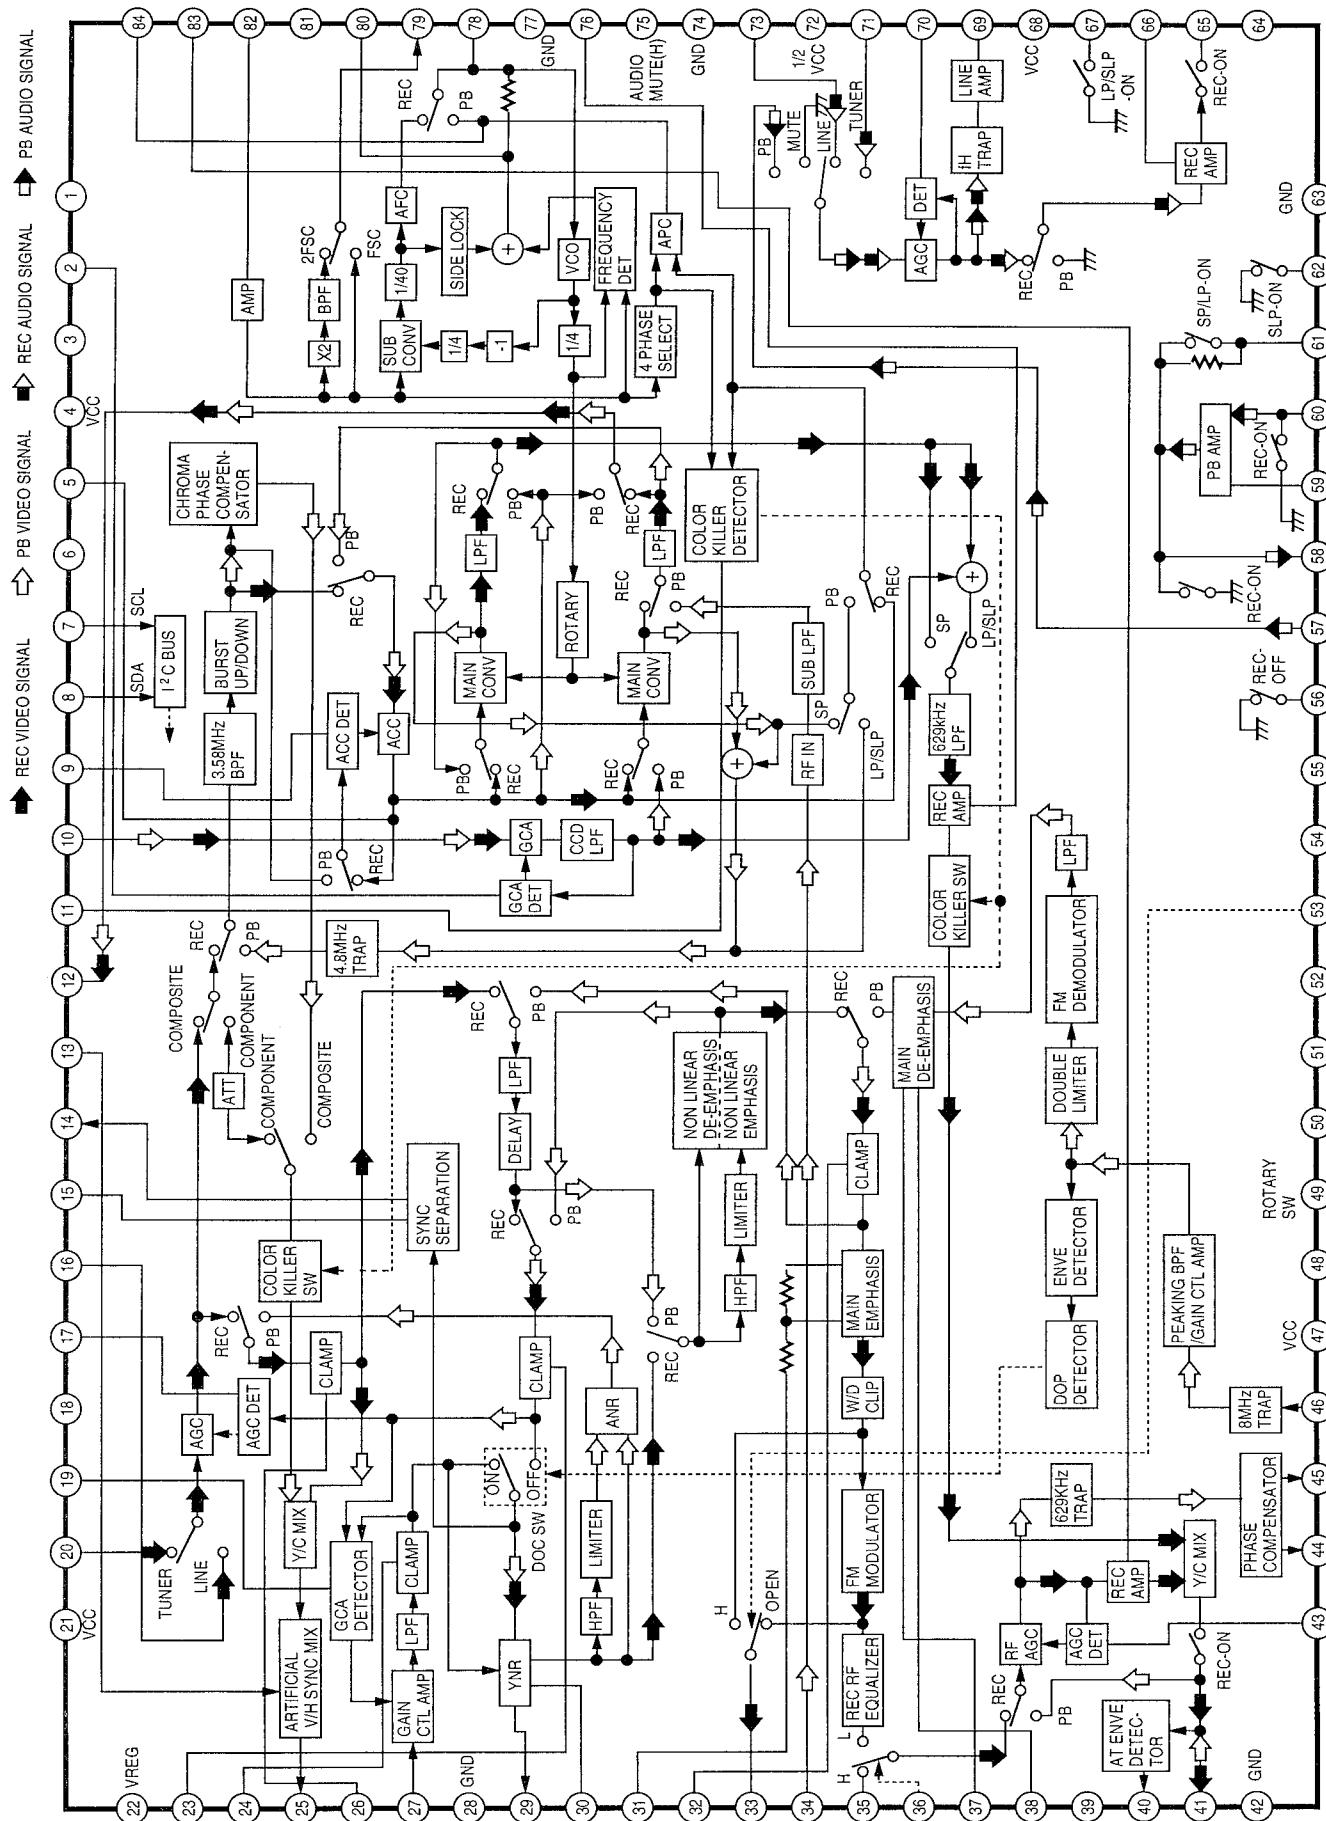


TV STEREO/STEREO AMP BLOCK DIAGRAM

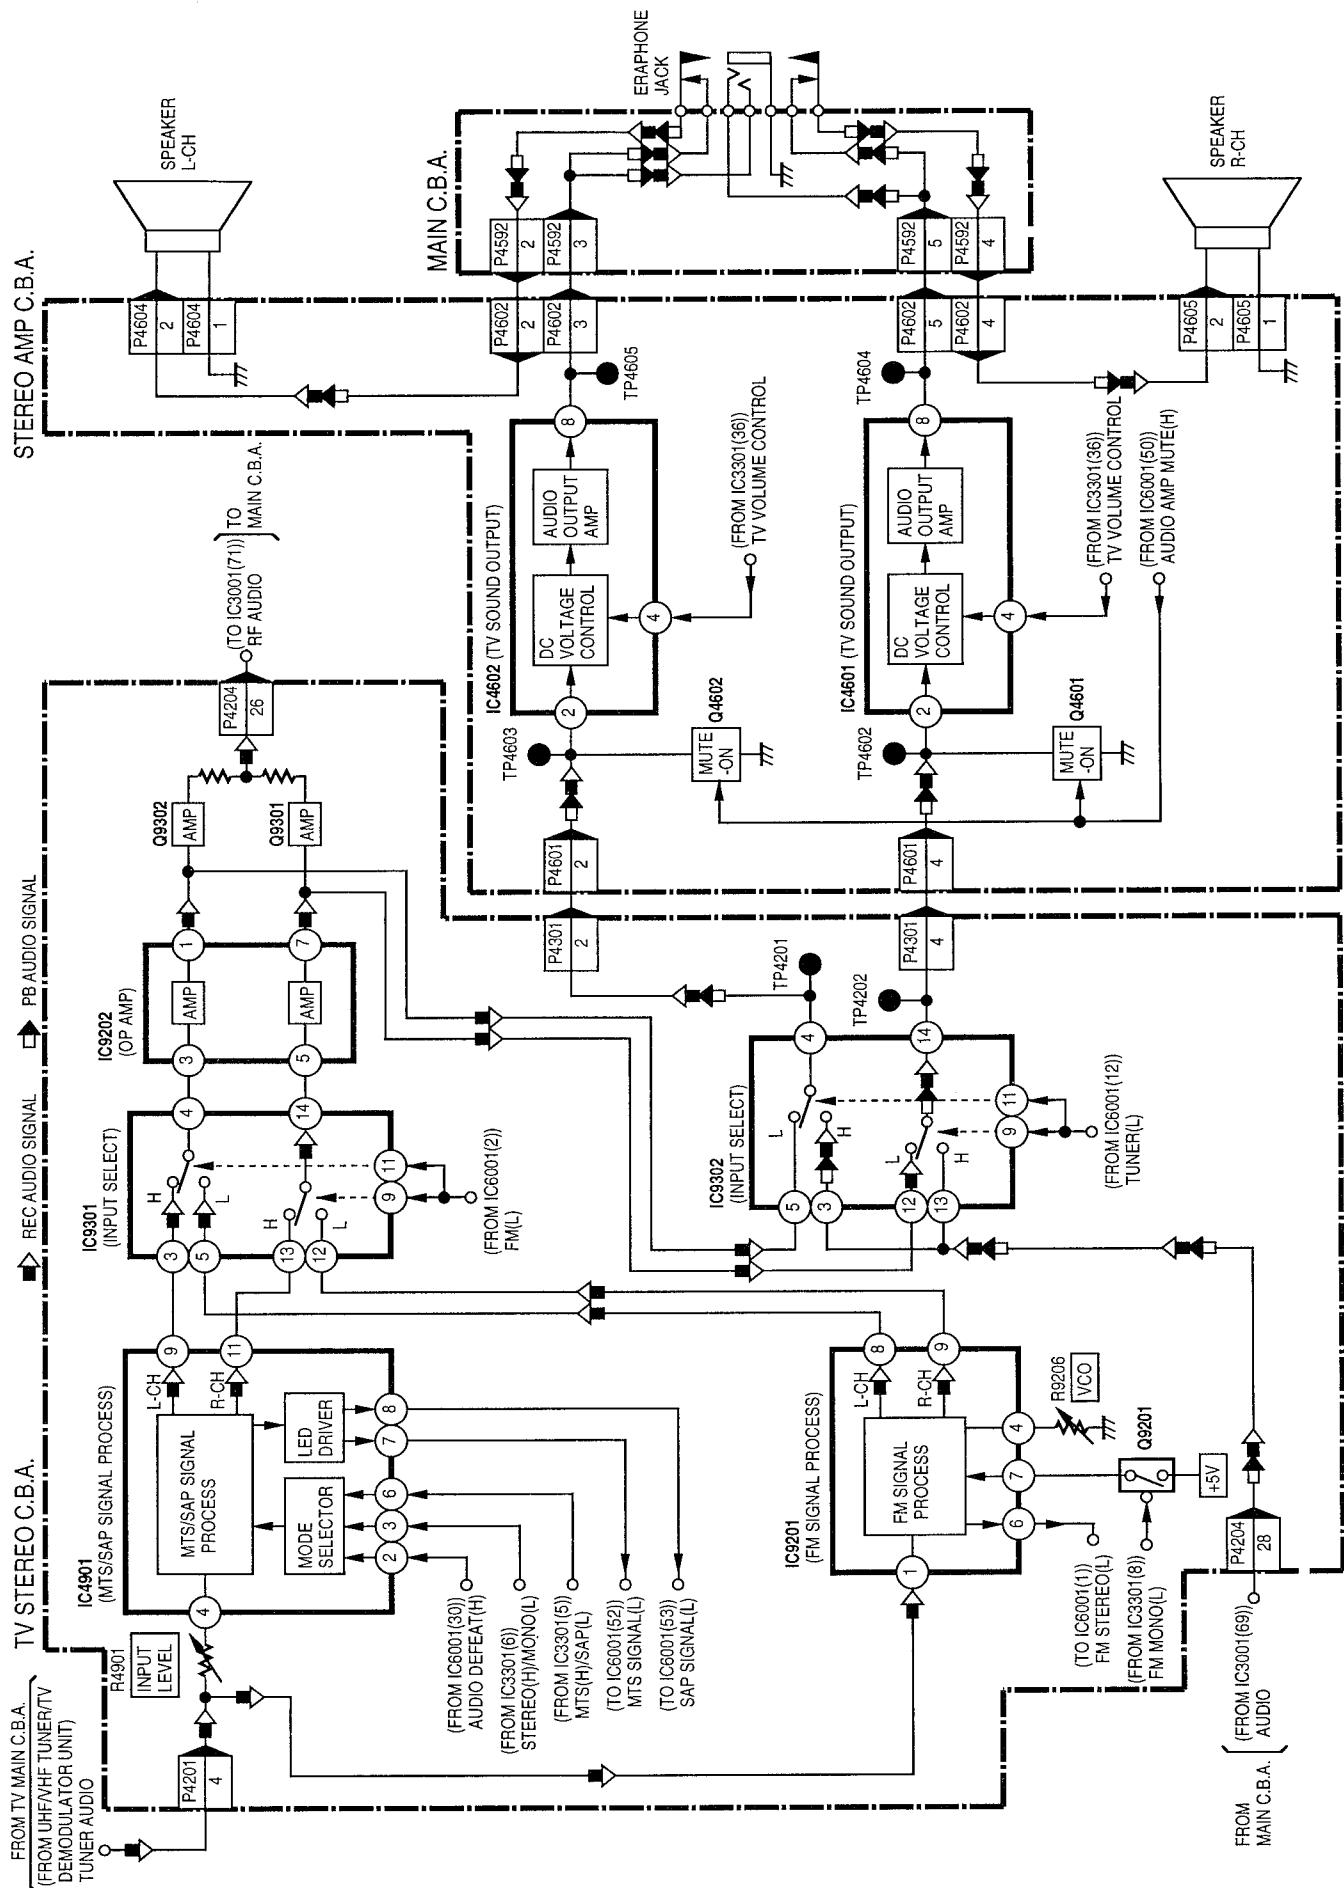


IC4901 MTS/SAP AUDIO PROCESS IC-BLOCK DIAGRAM, VCRS0214

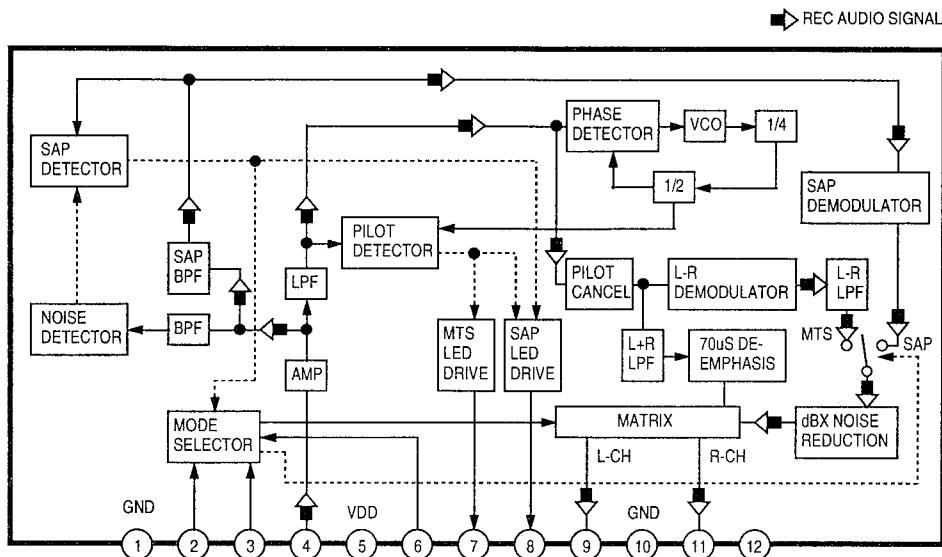


IC9201 FM STEREO MULTIPLEX DEMODULATOR IC-BLOCK DIAGRAM, AN7420

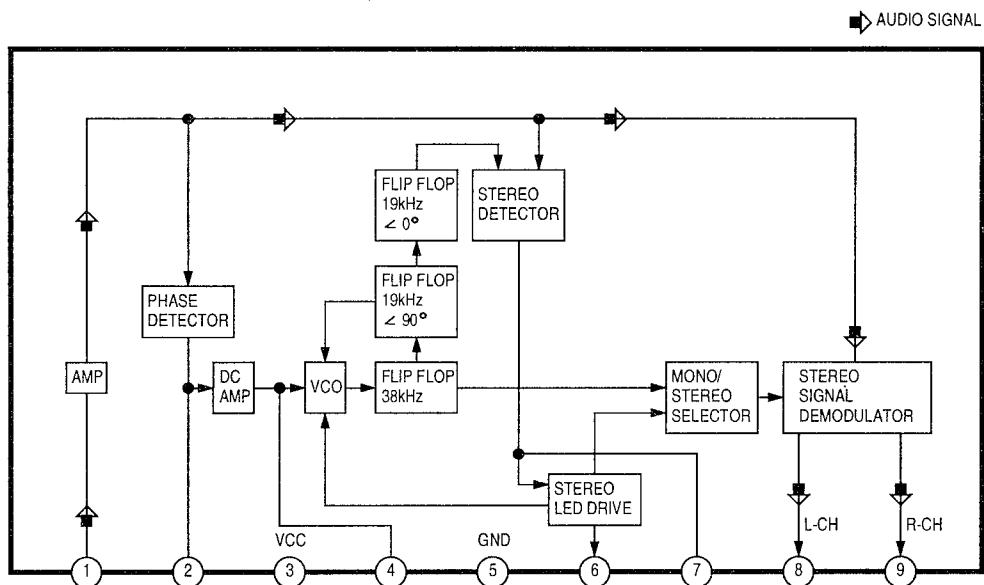


SYSTEM CONTROL BLOCK DIAGRAM

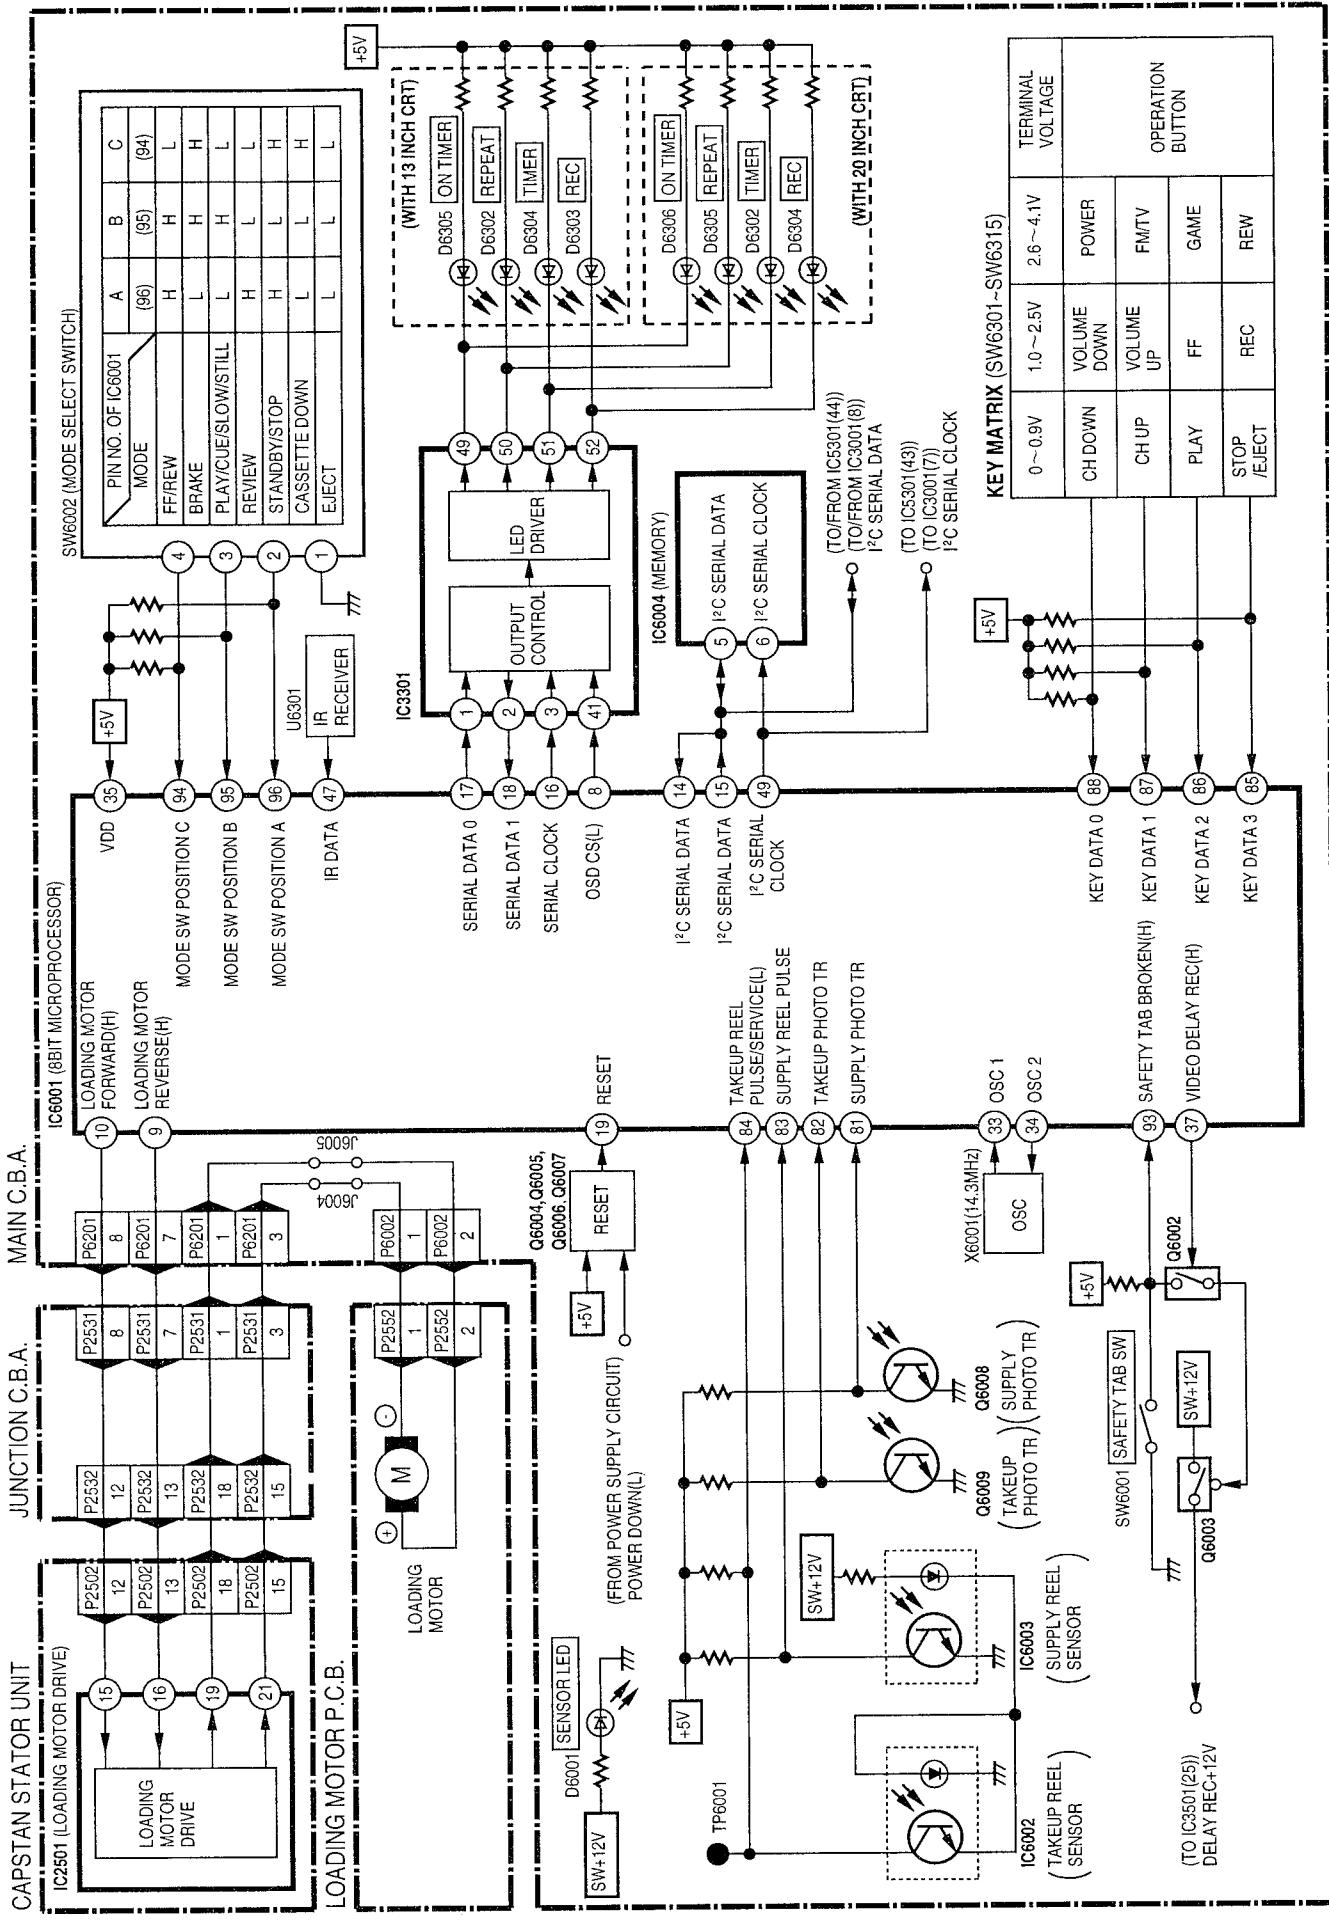


SERVO BLOCK DIAGRAM

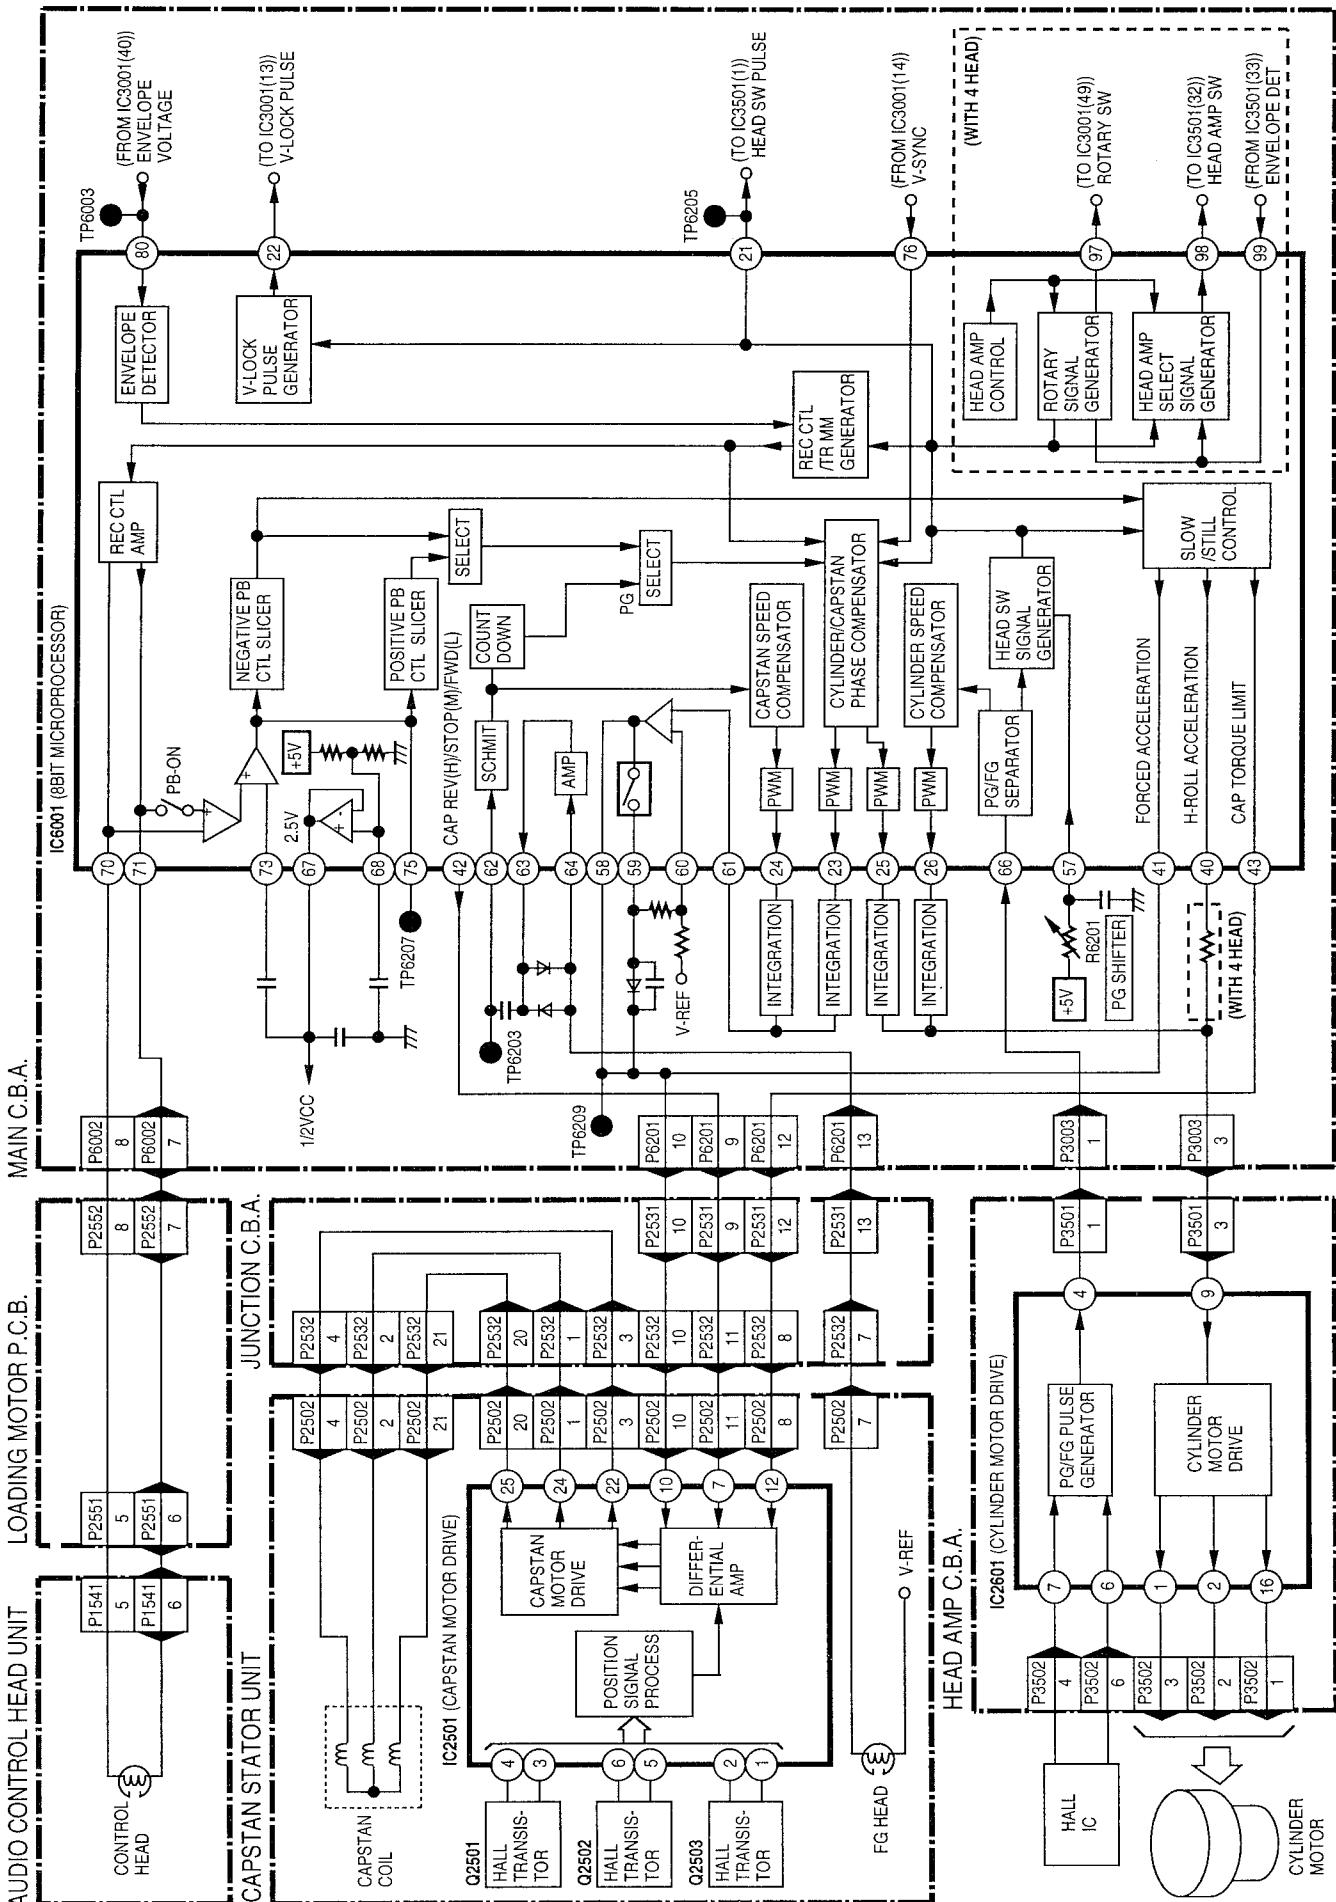


IC2601 CYLINDER MOTOR DRIVE IC-BLOCK DIAGRAM, AN3809K

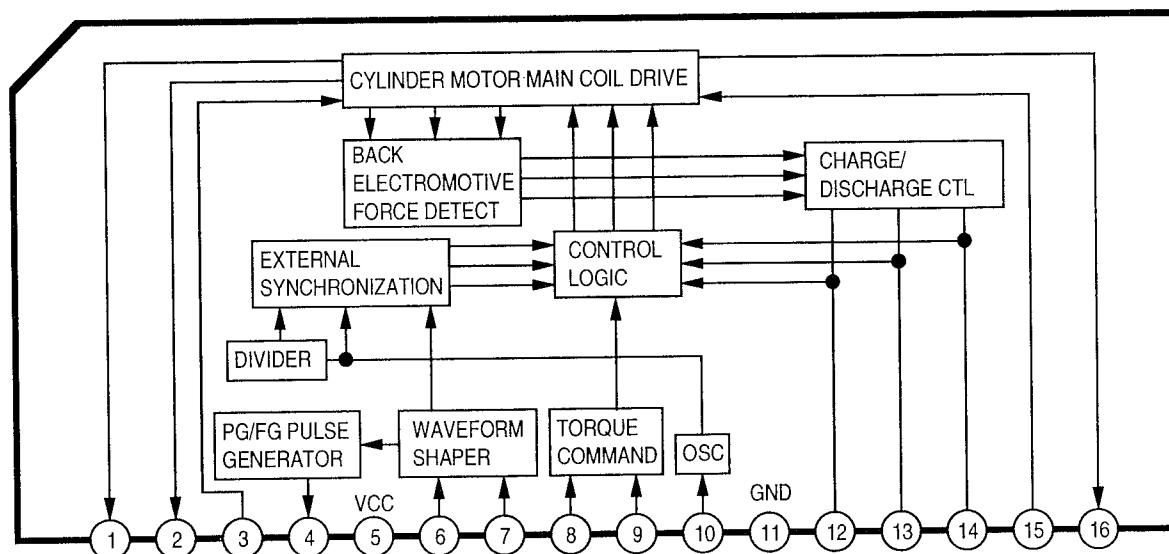

TV Y/C PROCESS/OSD/CCV/TV MAIN BLOCK DIAGRAM

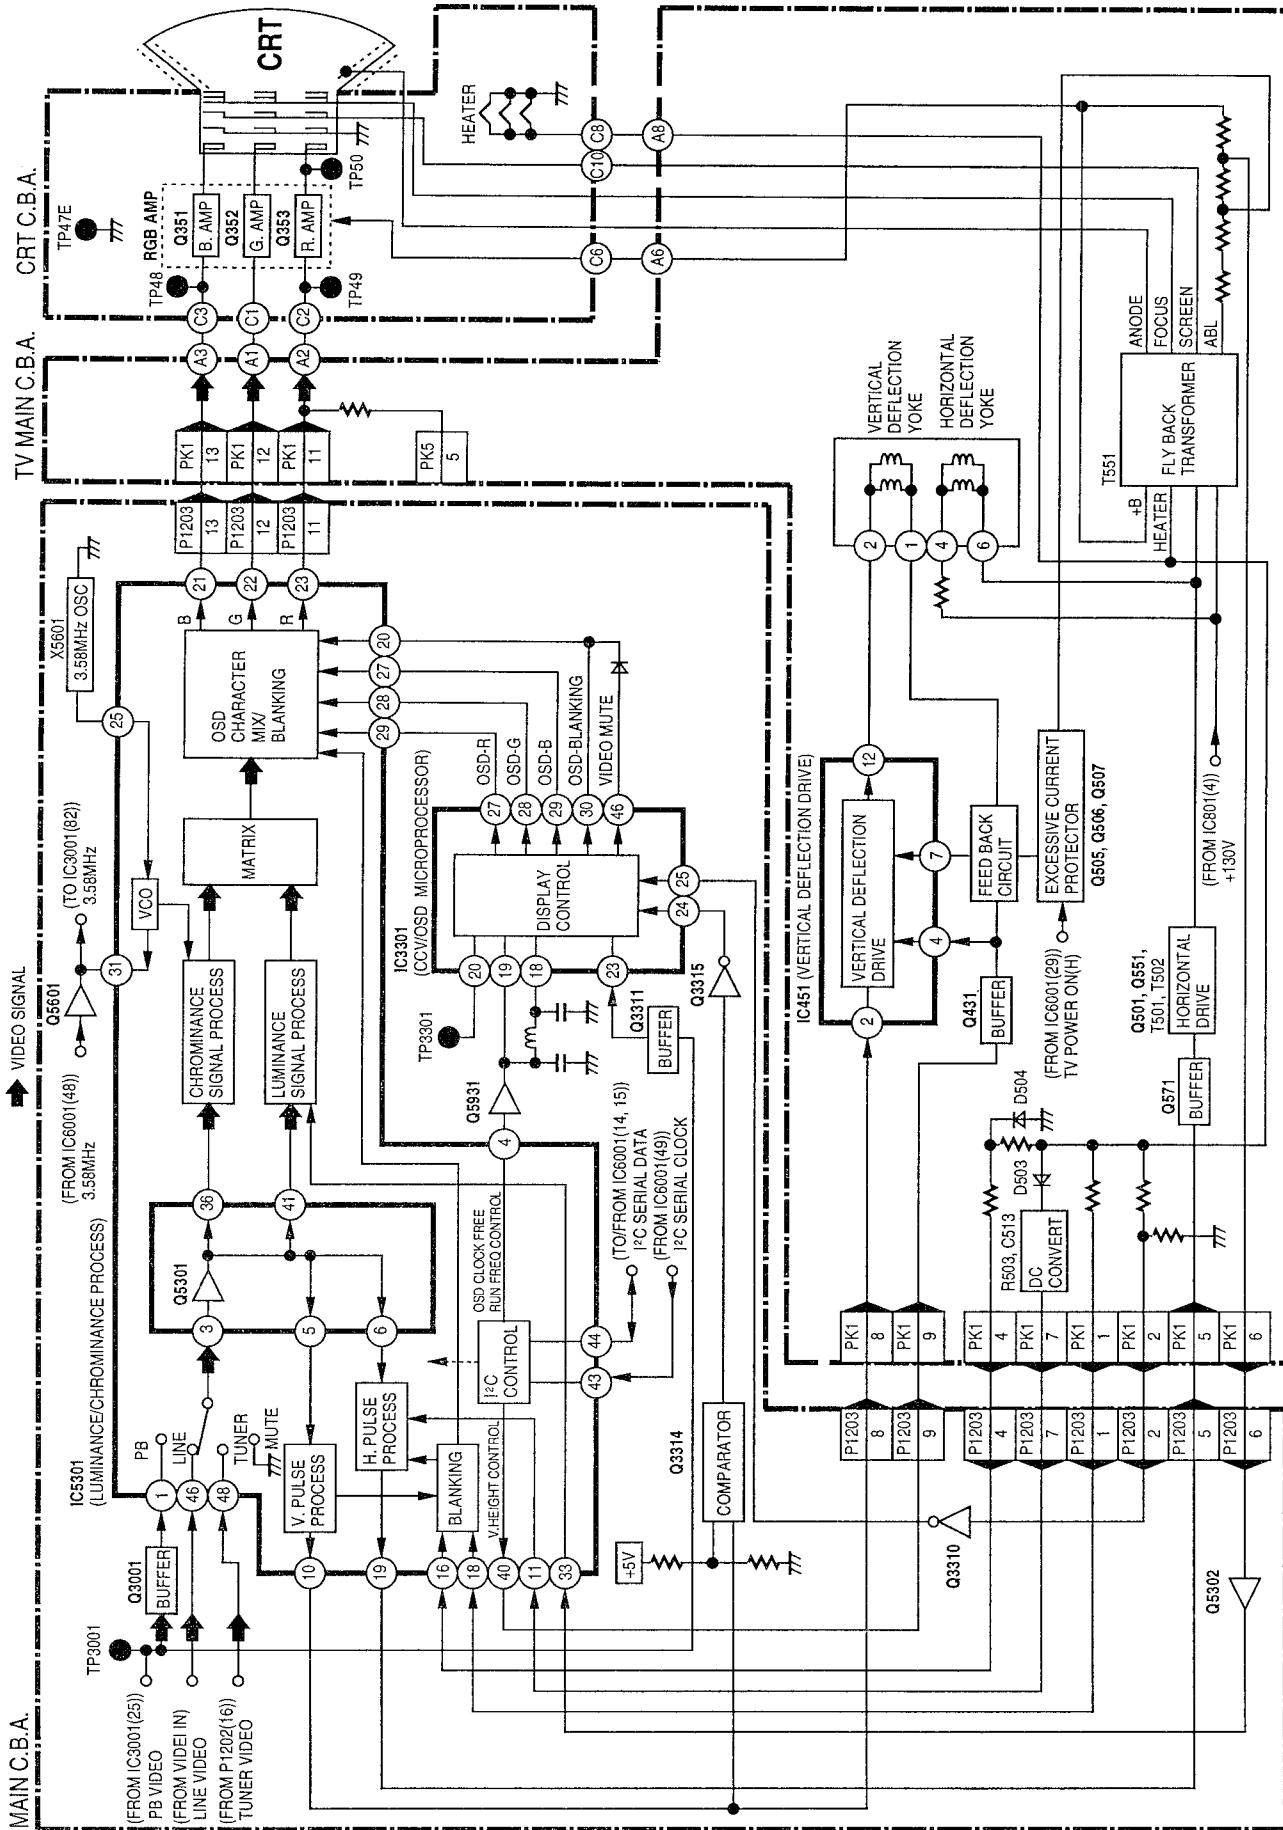


IC5301 LUMINANCE/CHROMINANCE PROCESS IC-BLOCK DIAGRAM, AN5367FB

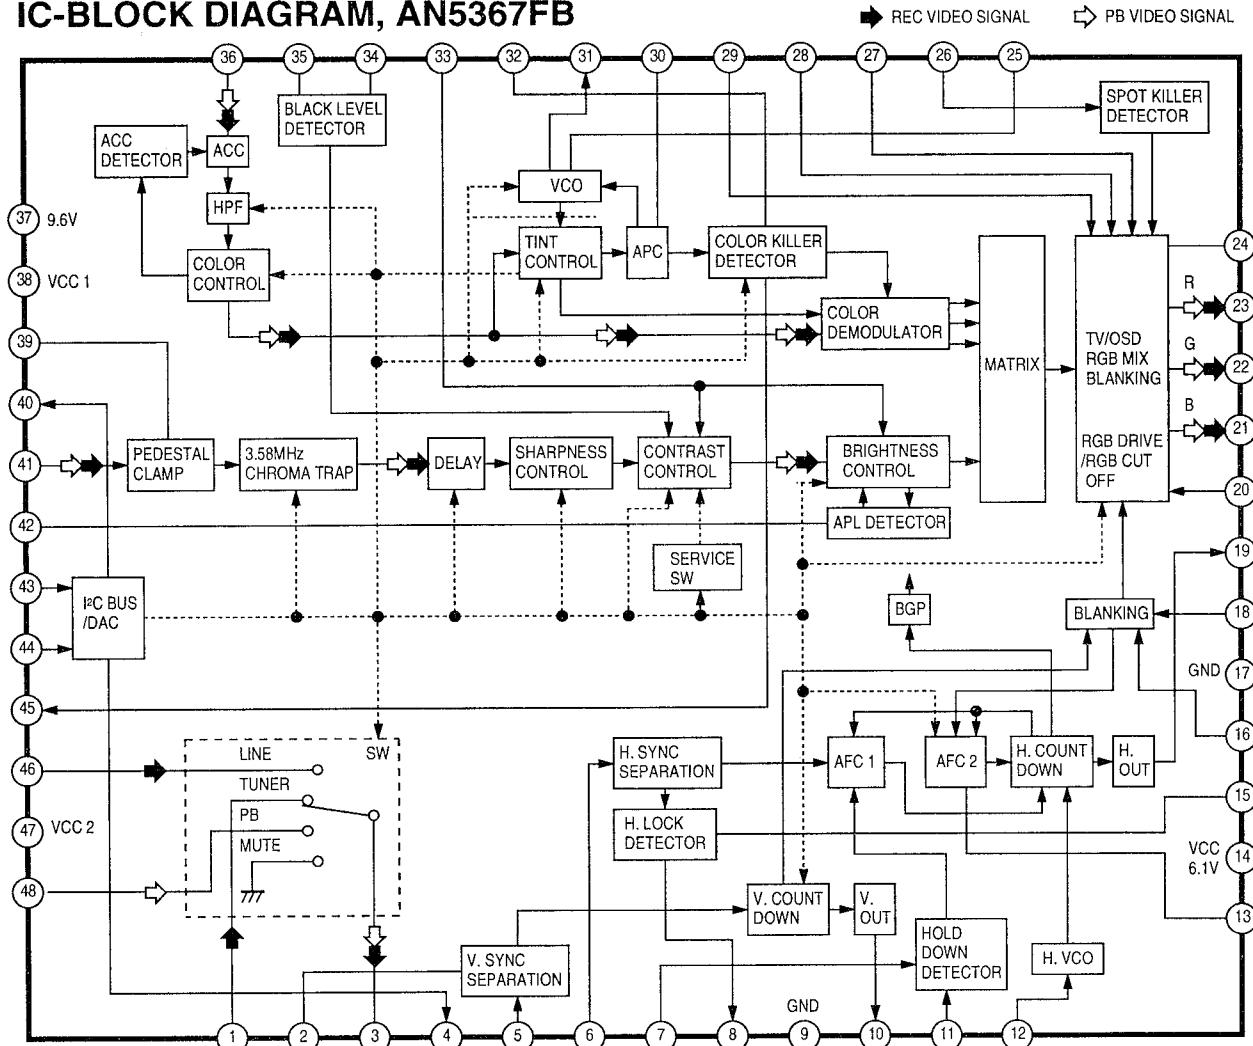


THE FOLLOWING CONTROL FUNCTIONS ARE ADJUSTED BY USING I₂C BUS .

SUB COLOR
SUB TINT
SUB BRIGHT
SUB SHARPNESS
R CUT-OFF
G CUT-OFF
B CUT-OFF
G DRIVE
B DRIVE
SUB CONTRAST
H CENTER
V SIZE

IC451 VERTICAL DEFLECTION DRIVE IC-BLOCK DIAGRAM, LA7837

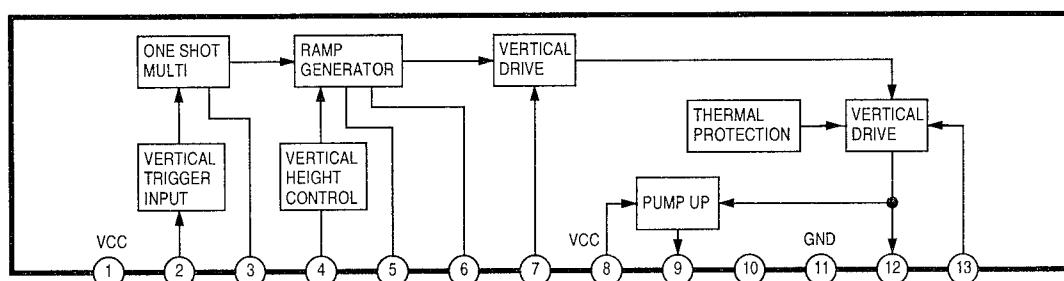


**IC3301 8BIT MICRO PROCESSOR OSD/CCV
IC-BLOCK DIAGRAM, LC8643125957**

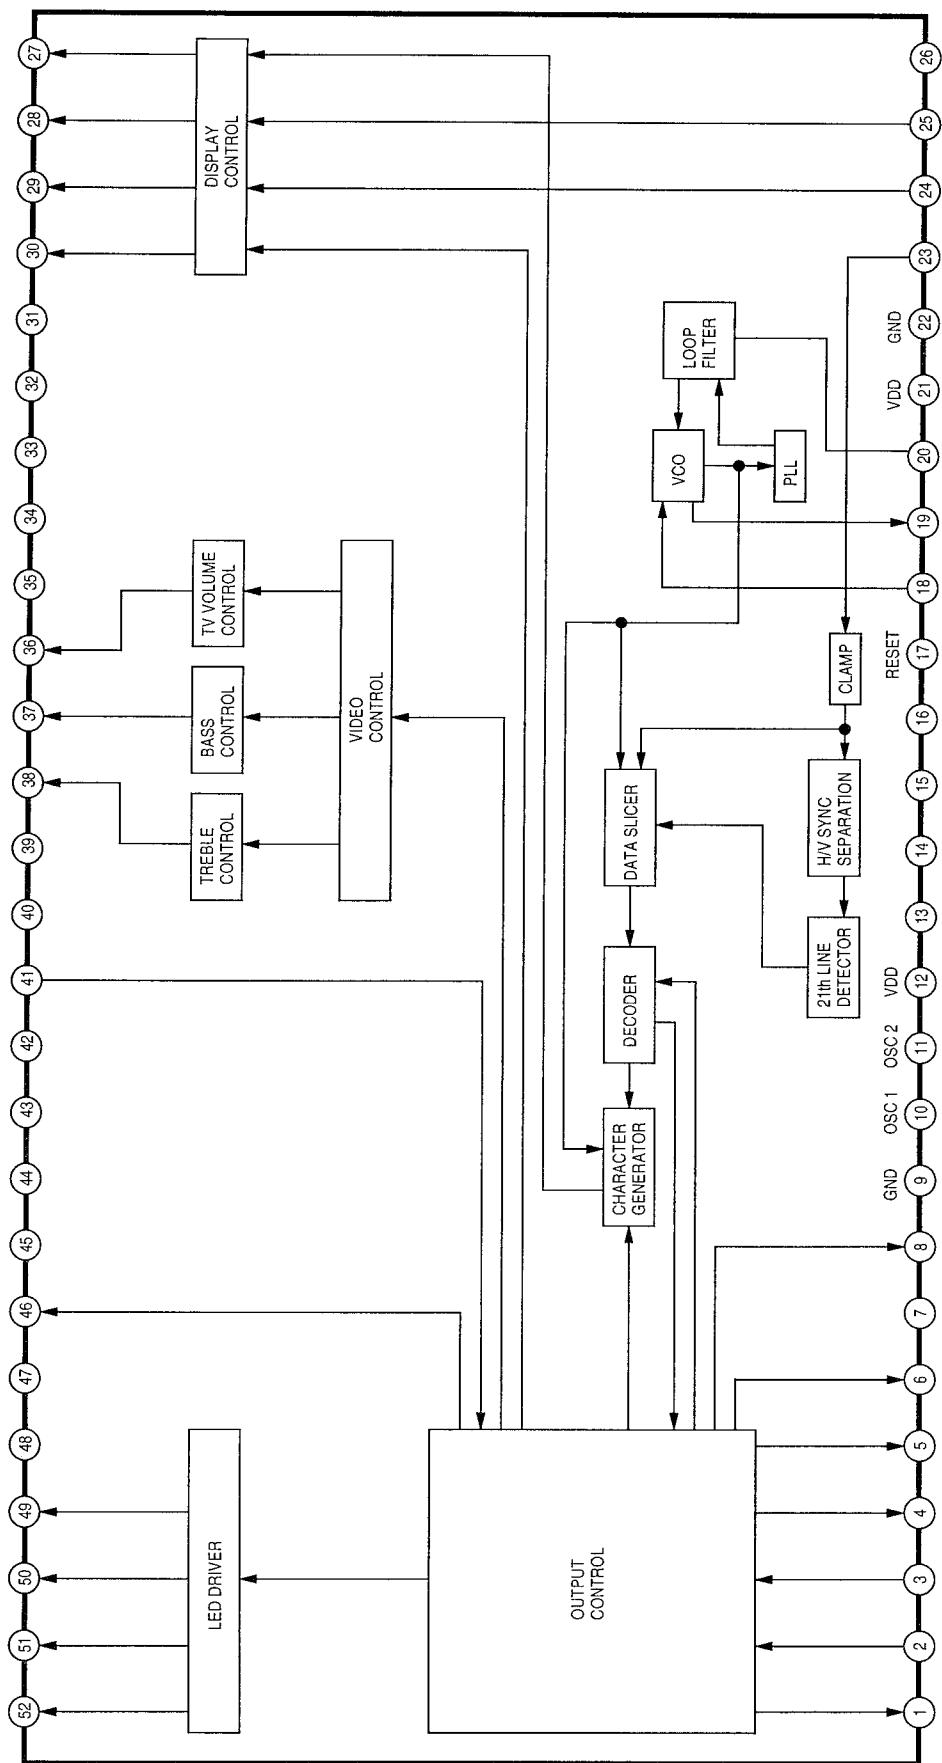

TROUBLESHOOTING HINTS

Power Supply Section

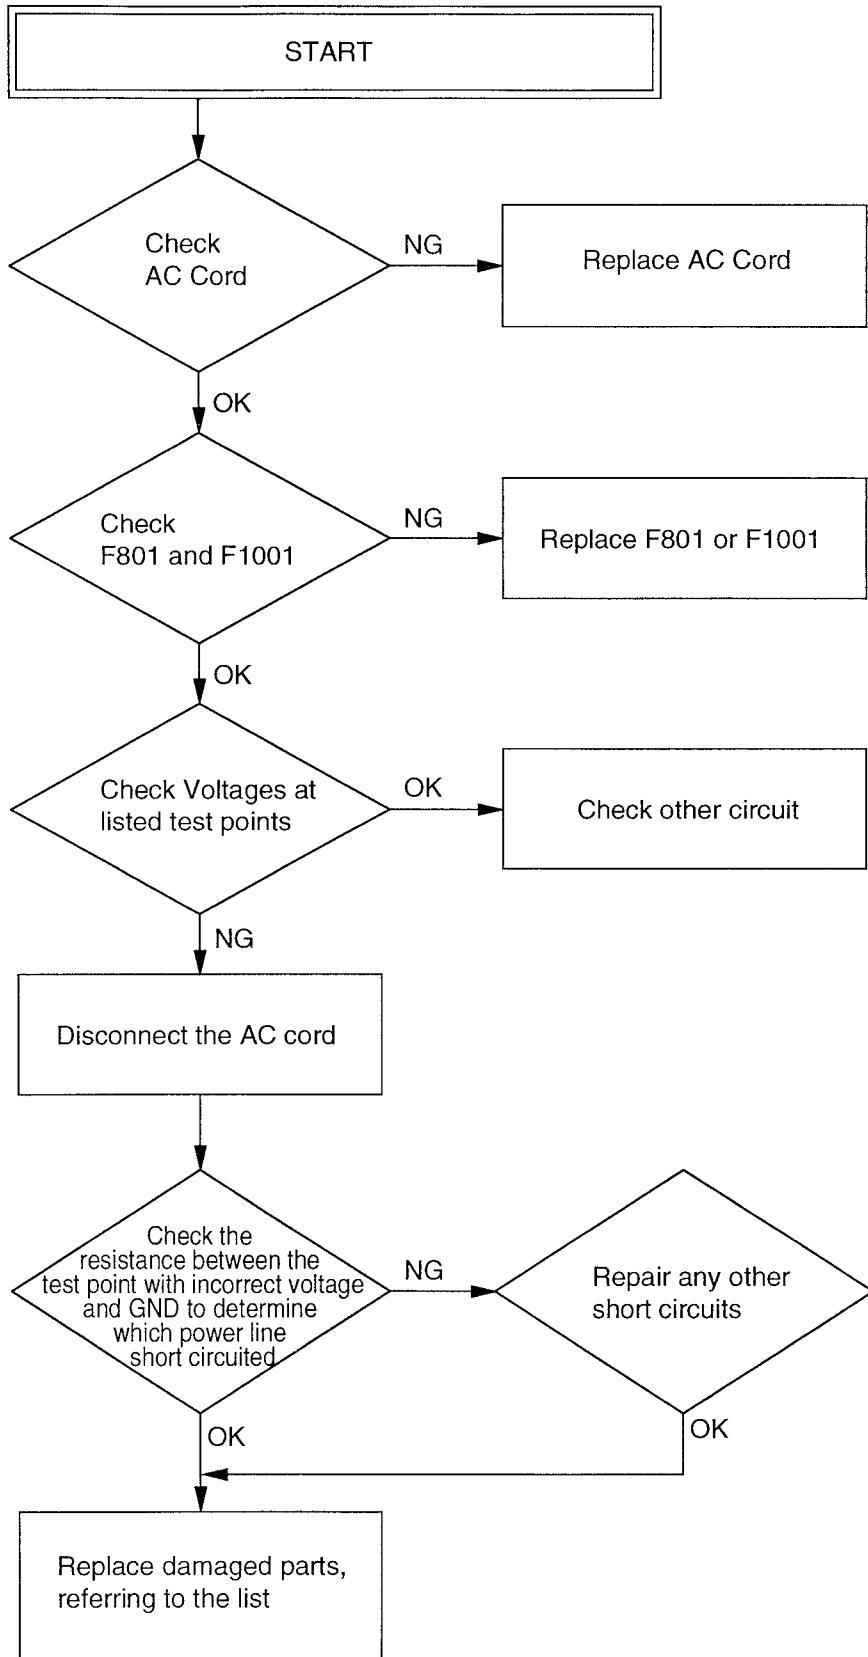

Voltage and Resistance of Power Line

Test Points (Main C.B.A.)	Voltage	Resistance
TP1052 (DC+37V)	36.5V	More than 500 ohm
TP1053 (DC+14V)	13.5V	More than 30 ohm
C1014(negative side) (DC-30V)	-30.7V	More than 500 ohm
TP1055 (DC+5V)	5.2V	More than 25 ohm
Q1005(collector) (Power Down (L))	5.2V	More than 500 ohm
TP1058 (DC+12V)	12.0V	More than 30 ohm

VOLTAGE: STOP mode under normal conditions.

RESISTANCE: Between Test points and GND with power off
under normal conditions.

Note: The Voltages and Resistance listed are approximate.

When power line is short circuited, check the following parts. Replace if necessary.

(1). SHORT CIRCUIT AND REPLACEMENT PARTS ON POWER LINE.

	CONDITION OF SHORT CIRCUIT	DAMAGEABLE PARTS BY SHORT CIRCUIT
(1)	5V → GND	*PR1001, *D1008, Q1005
(2)	37V → GND	*D1005, *R1010
(3)	14V → GND 12V → GND	D1006, *D1015, Q1051, *Q1052 D1051, D1052, D1053, *PR1050, *PR1054
(4)	-30V → GND	*R1011, *D1007,
(5)	37V → 14V	D1006, *D1015, Q1051, *Q1052 D1051, D1052, D1053, *PR1050, *PR1054
(6)	-30V → 5V	REPLACE THE ALL OF PARTS OF (1) AND (4)
(7)	14V → 12V	*Q1051, *Q1052, D1051, D1052, D1053, *PR1050, *PR1054
(8)	37V → POWER DOWN(L)	*Q1005, D1005, R1010

*NOTE1: When a short circuit occurs supplying the Power for a long time will cause the fuse to blow.

*NOTE2: Parts with * mark are the most susceptible to damage in case of short circuit. Please check them first.

(2). IN CASE OF FUSE(F1001) BLOW.

Replace Parts F1001, Q1001, Q1002, D1001(very rarely has problems), C1016, C1028, D1015.

Cause → It may be caused by a short circuit of 5V or 14V.


(3). JUST AFTER TURNING POWER ON, ABNORMAL NOISE CAN BE HEARD FROM POWER SUPPLY CIRCUIT.

Replace Parts D1015, D1008, D1007, R1011, C1016.


Cause → It may be caused by a short circuit of 5V, -30V, 14V.

In this condition, supplying the Power for a long time will causes the fuse to blow.

Video Section

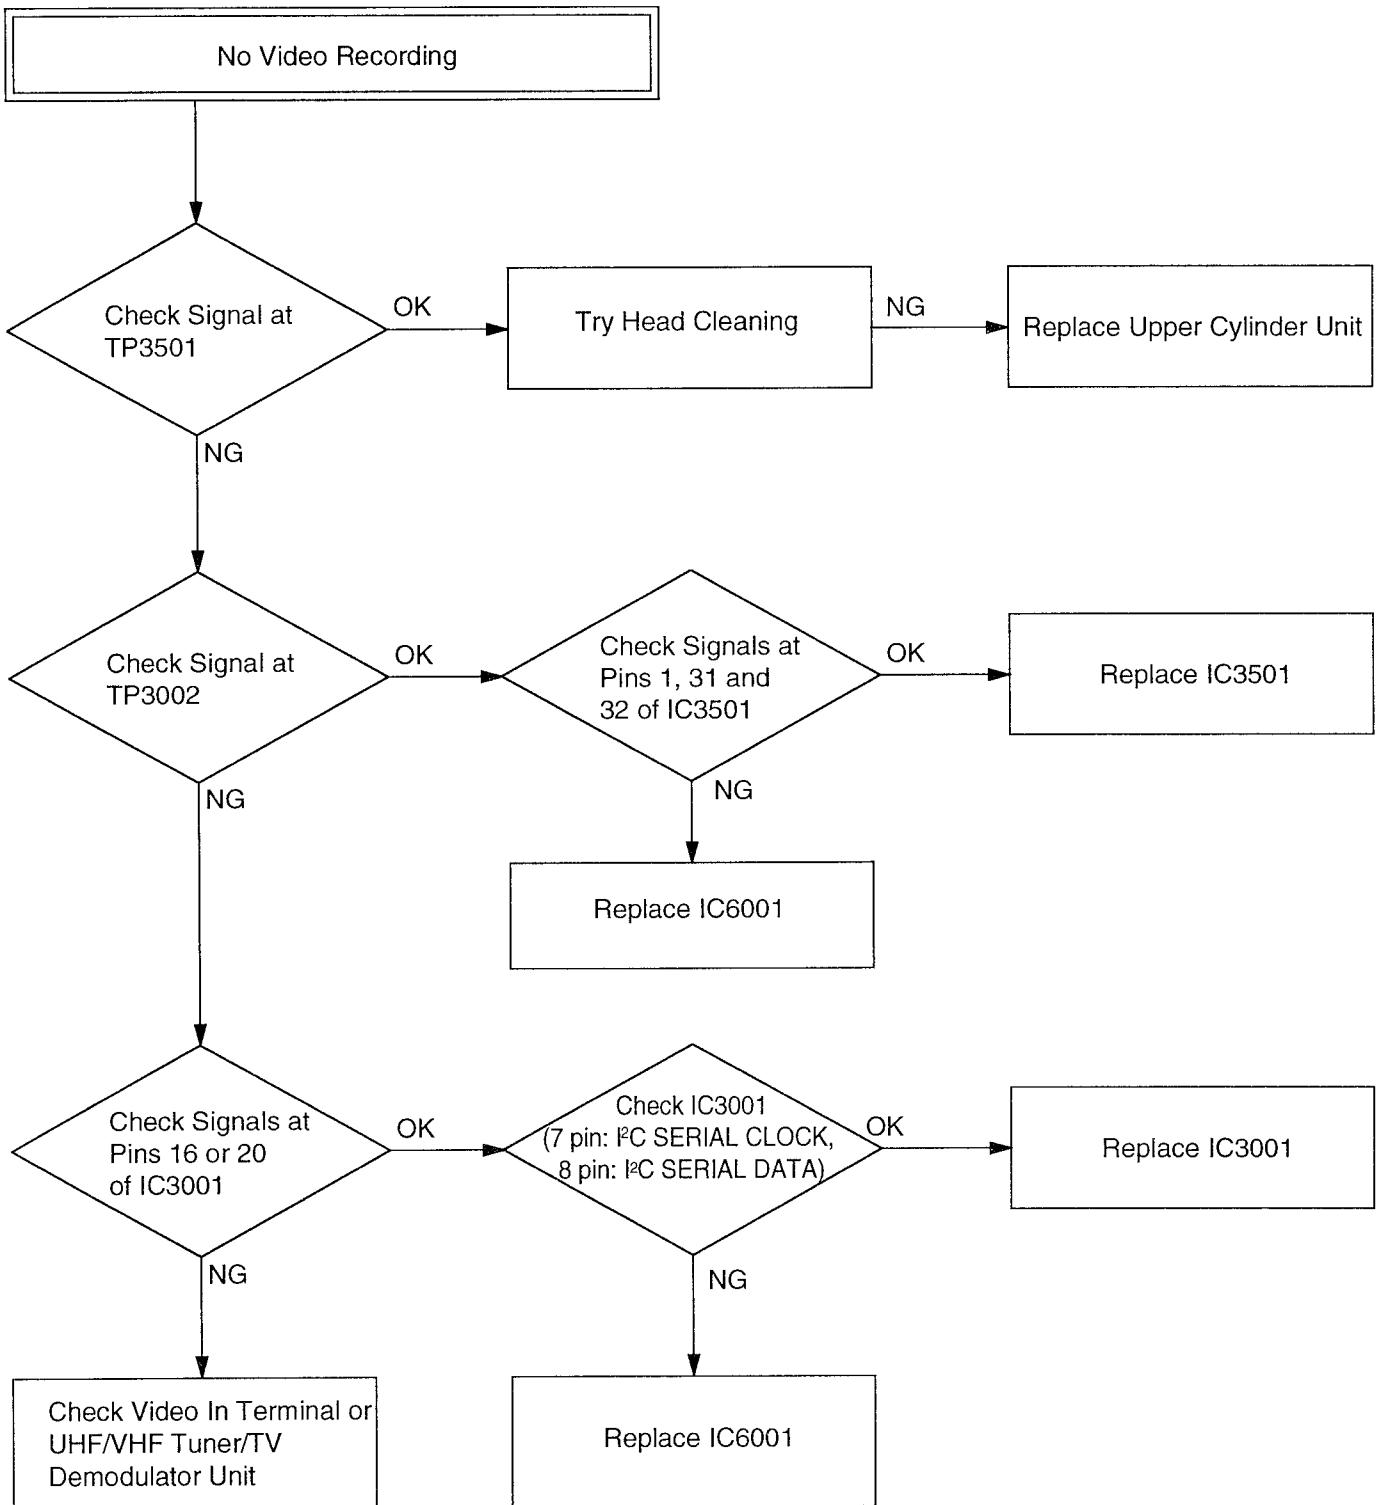

Video Section

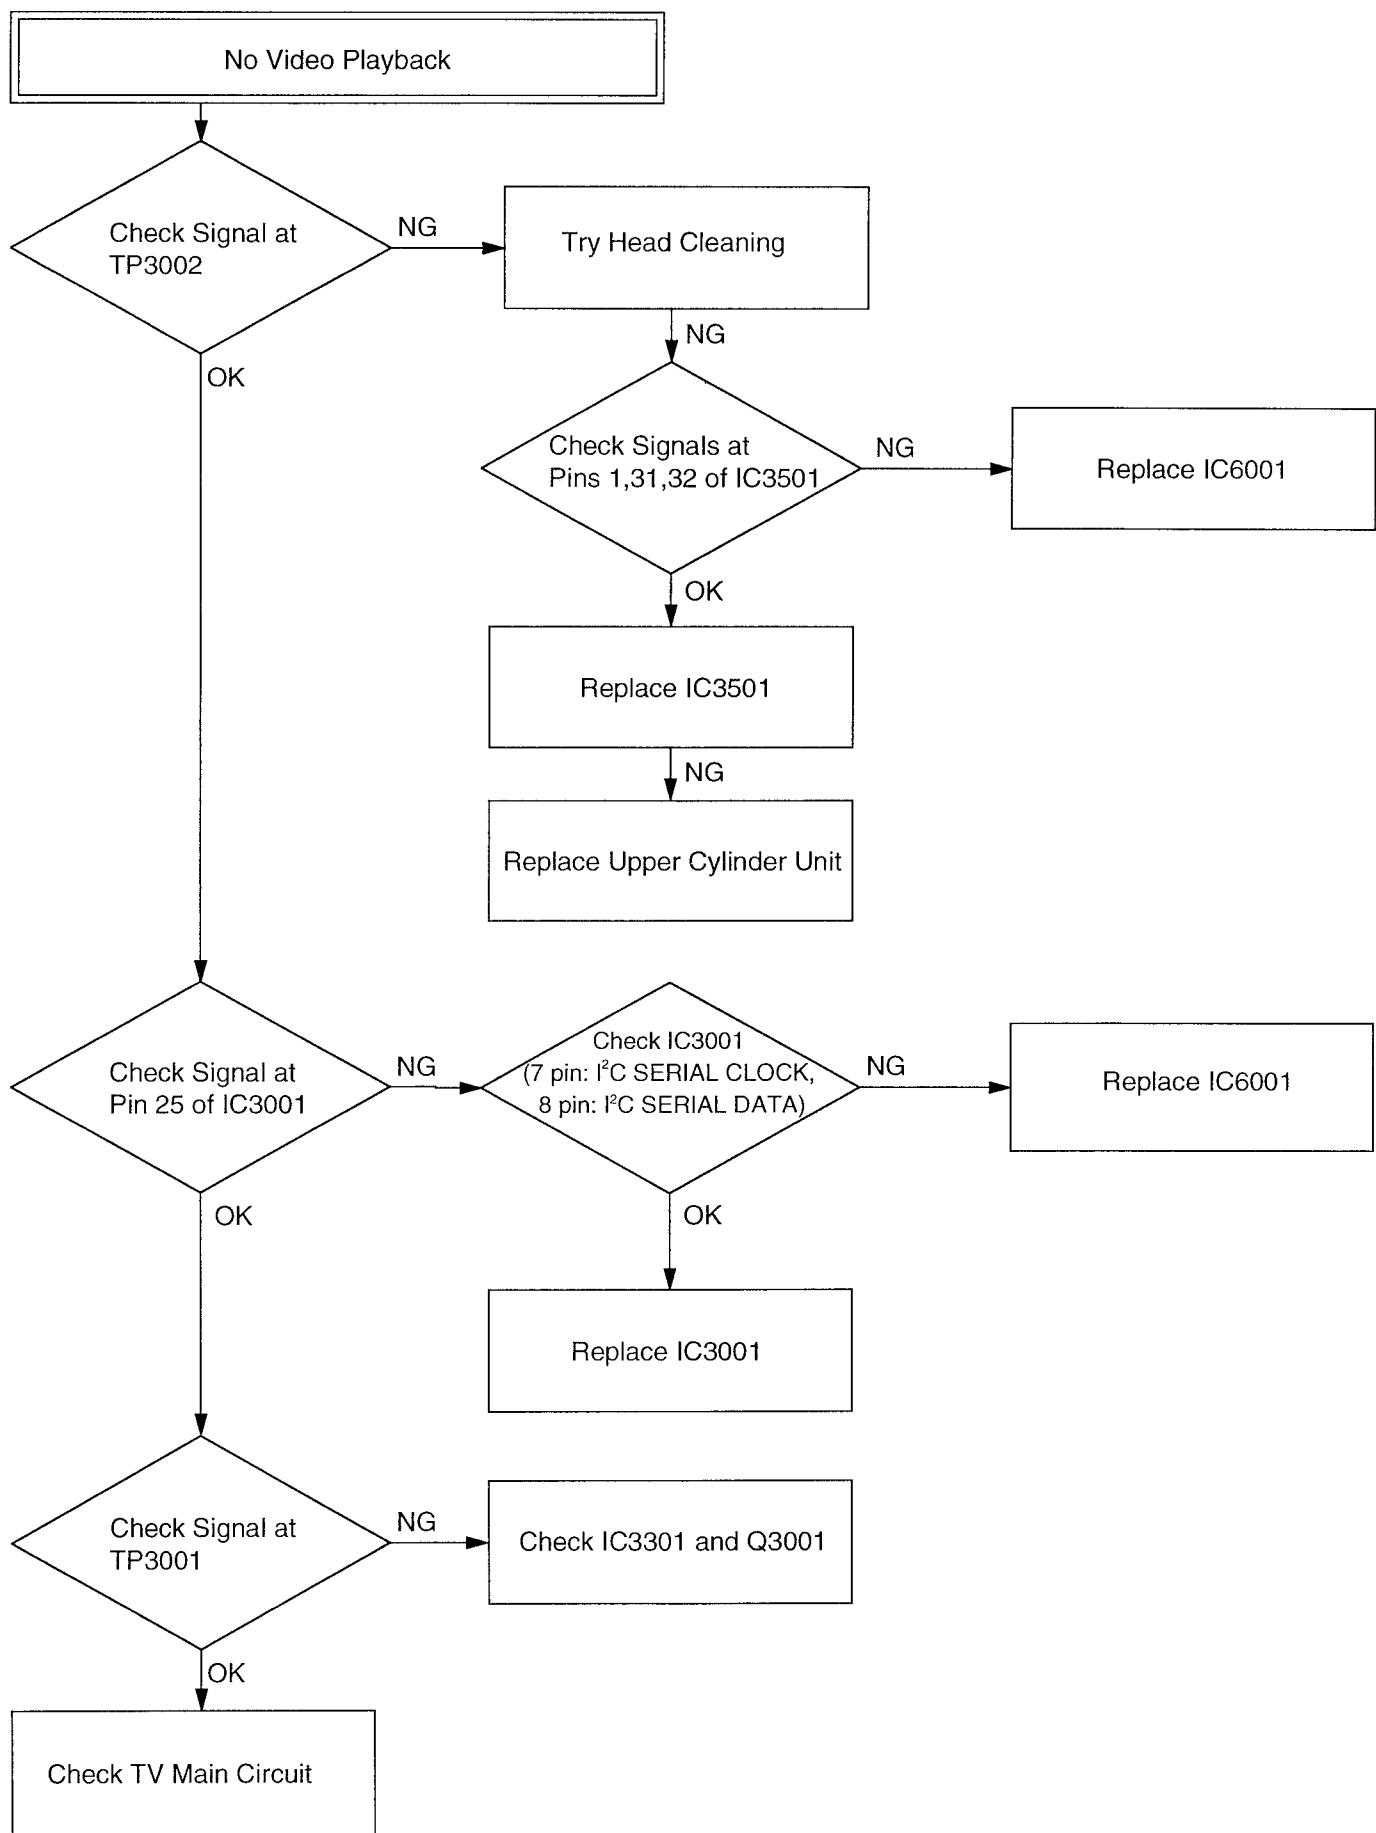

DISASSEMBLY/ASSEMBLY PROCEDURES

DISASSEMBLY/ASSEMBLY PROCEDURES OF CABINET

Disassembly Flowchart

Perform all disassembly procedures in the order described in the "Disassembly Flowchart" shown below. When reassembling, use the reverse procedure.

CAUTION:

Disconnect AC plug before disassembly.

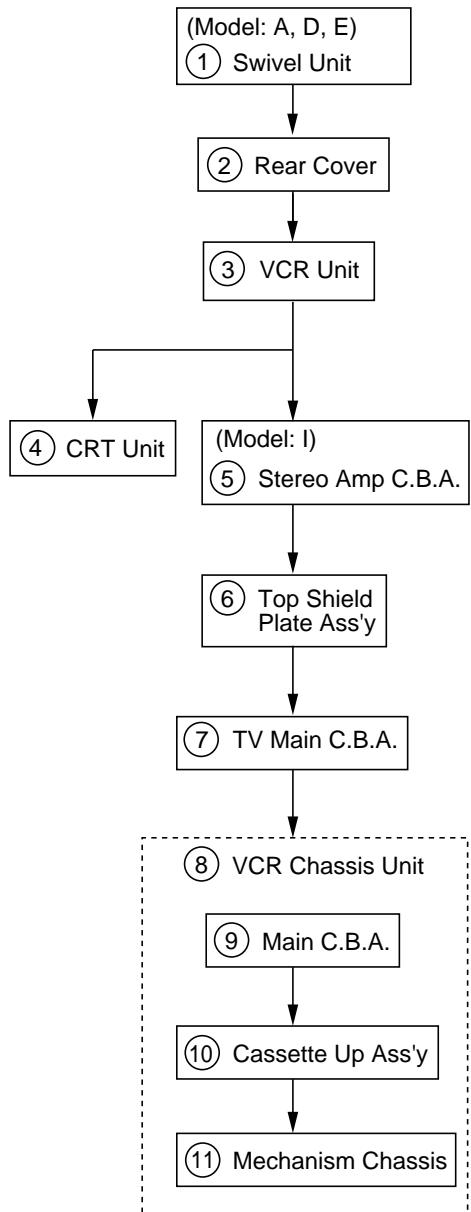


Fig. D1

Swivel Unit (Model: A, D, E)

Disassembly Procedure

1. While pushing one of the Locking Tabs (A) outward, pull that portion of the Swivel Unit free from the unit.
2. Repeat step 1 for other Locking Tabs (A) to remove the Swivel Unit.

Bottom View

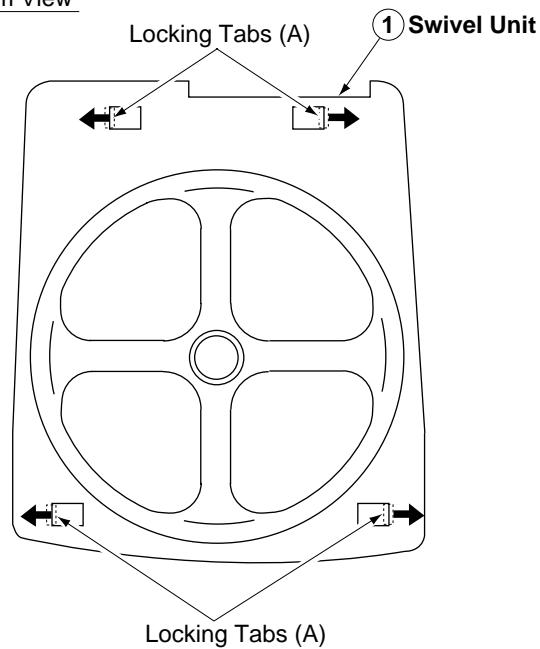


Fig. D2

Rear Cover

Disassembly Procedure

Remove 7 Screws (A). Then, pull the Rear Cover away.

(Model: A, B, C, D, E)

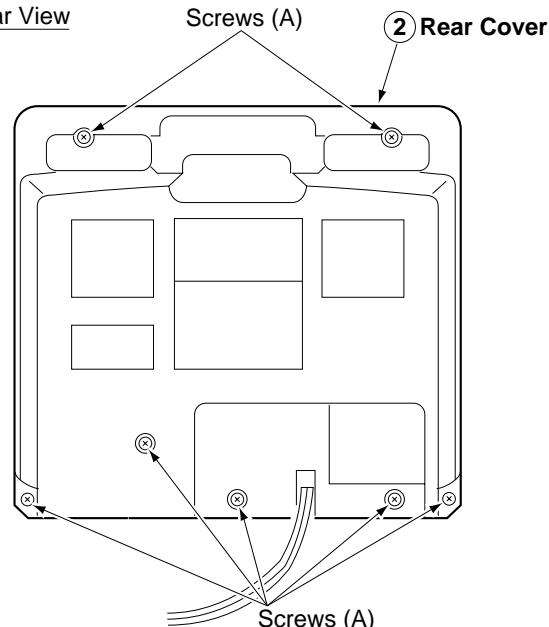


Fig. D3-1

(Model: F, G, H, I)

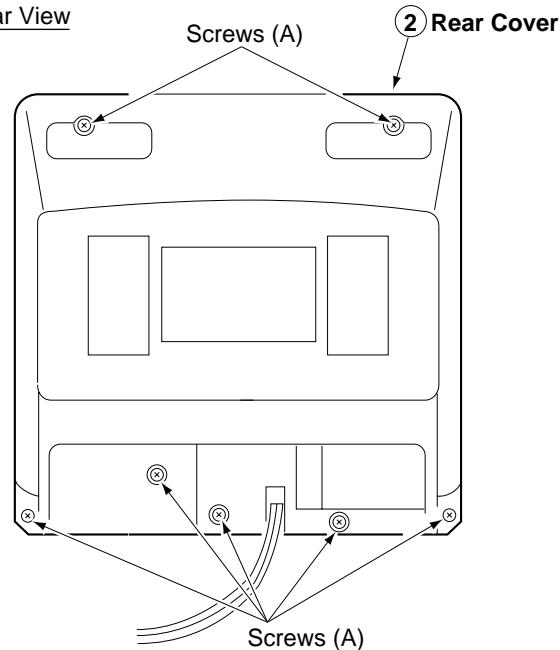


Fig. D3-2

VCR Unit

Disassembly Procedure

1. Discharge the Anode to the CRT Ground. Then, remove the Anode Cap.

2. Disconnect the Connector P354 from the CRT C.B.A.

3. Carefully pull out the CRT C.B.A. from the CRT Unit.

4. Disconnect the Deflection Yoke Connector and the Degaussing Coil Connector from the Main C.B.A.

5. (Model : A, B, C, D, E, F, G, H)

Disconnect the Connector P4591 on the Main C.B.A. and remove the leads from the clamps.

(Model : I)

Disconnect 2 Connectors P4604 and P4605 on the Stereo Amp C.B.A. and remove the leads from the clamps.

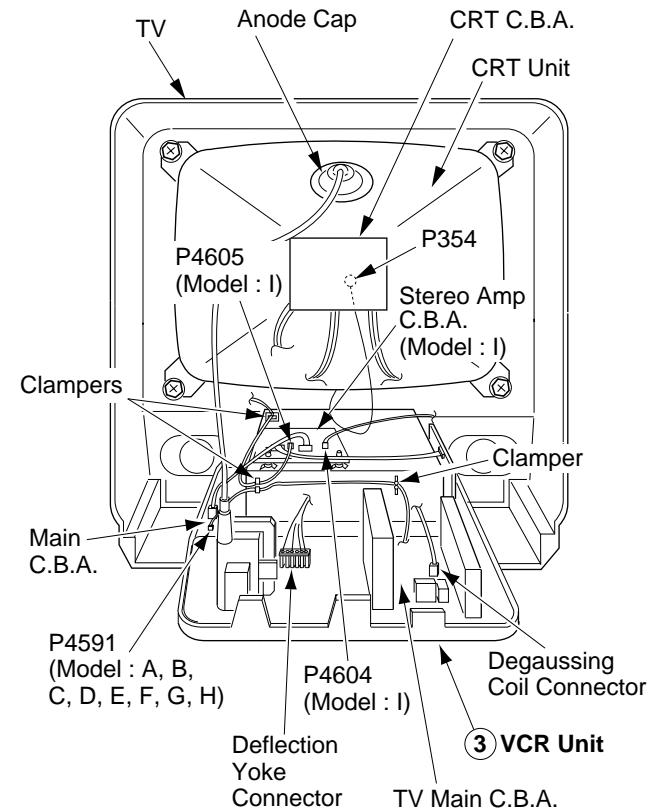


Fig. D4-1

6. (Model: A, B, C, D, E)

Slightly lift up the rear side of the VCR Unit to release Tabs (B).

(Model: F, G, H, I)

Slightly lift up the rear side of the VCR Unit to release Tabs (B) and (C).

7. Slide the VCR Unit out as far as it will go.

Then, lift up the VCR Unit to release 3 Guide Tabs (A) and remove the VCR Unit all the way out from the TV cavity.

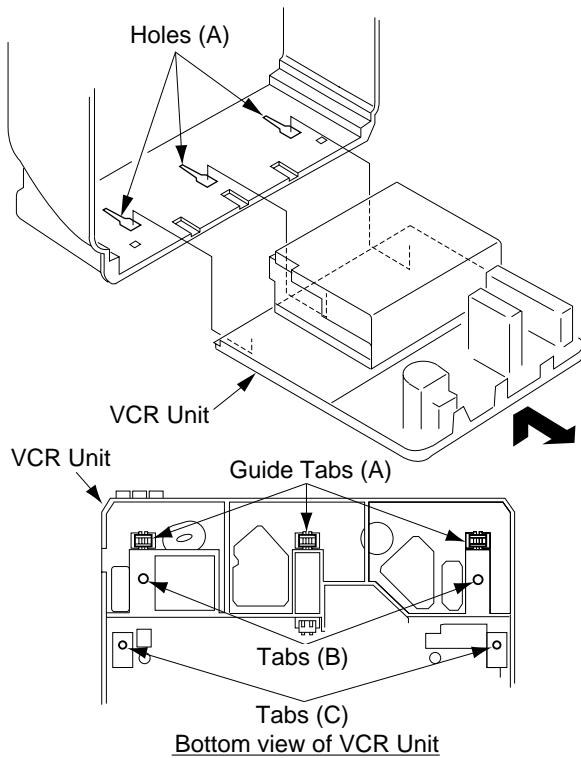


Fig. D4-2

Reassembly Notes

1. Installation of VCR Unit

- 1) When installing the VCR Unit, swing the Cassette Door-Lid all the way open until the Cassette Door tab clears the Opener Lever.
- 2) Make sure that all guide tabs are aligned properly. Then, press the VCR unit in.

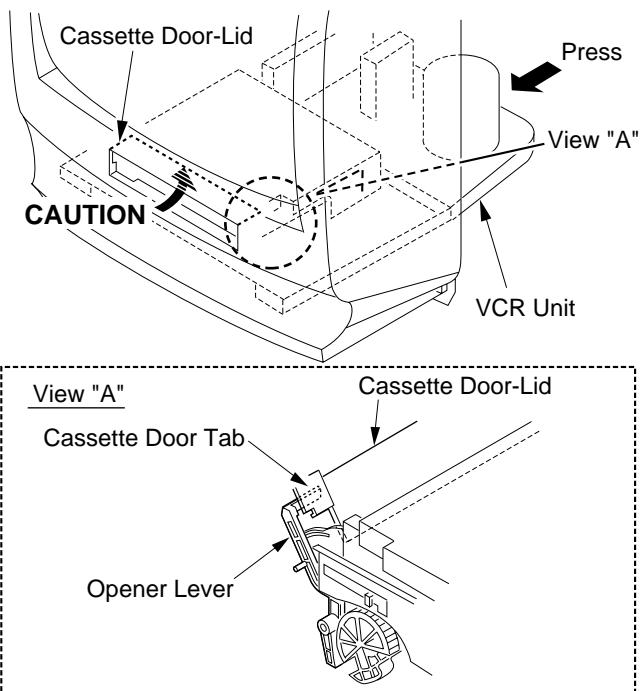


Fig. D4-3

CRT Unit

Disassembly Procedure

Remove 4 Screws with Washers (A). Then, pull out the CRT Unit.

Note:

Place the Unit face down on a soft cloth before removing the CRT Unit.

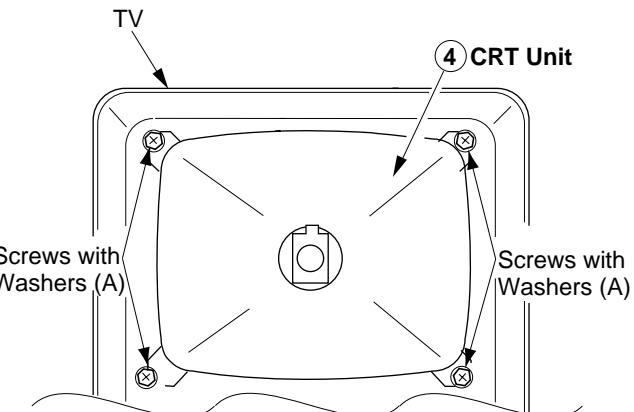


Fig. D5

Stereo Amp C.B.A. (Model: I)

Disassembly Procedure

1. Disconnect 2 Connectors P4592 on the Main C.B.A. and P4301 on the TV Stereo C.B.A.
2. Release 3 Clampers (A) on the TV Stereo C.B.A. Then, remove the Stereo Amp C.B.A.

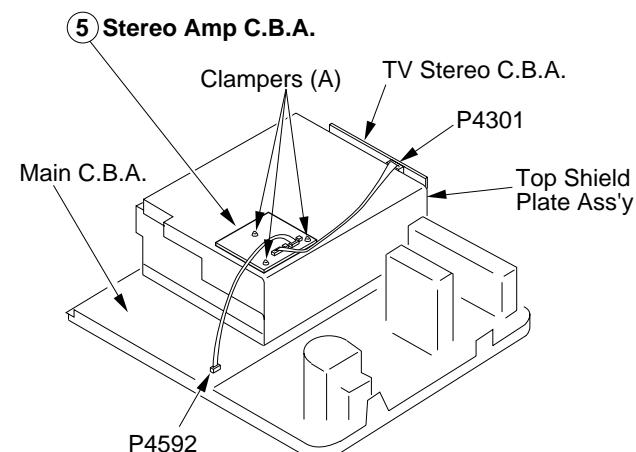


Fig. D6

Top Shield Plate Ass'y

Disassembly Procedure

1. Release the 2 Clampers (B) on the Top Shield Plate Ass'y and remove the leads from the clampers.
2. Remove 3 Screws (B). Then, remove the Top Shield Plate Ass'y.

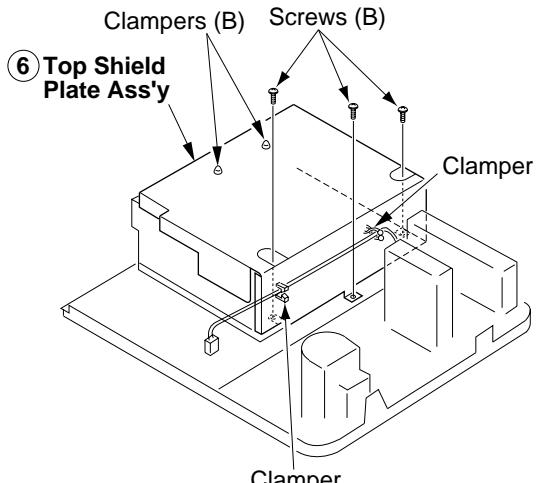


Fig. D7-1

Reassembly Notes

1. When installing the Top Shield Plate Ass'y, make sure the 2 Clampers (B) on the Cassette Up Ass'y are turned in the direction shown.
If not, the Top Shield Plate Ass'y cannot be installed.

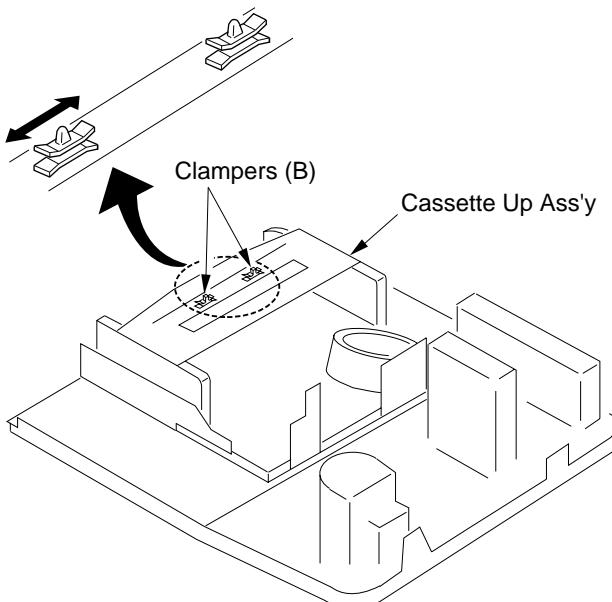


Fig. D7-2

TV Main C.B.A.

Disassembly Procedure

1. Disconnect Connector P1002 on the Main C.B.A.
2. Disconnect 3 Connectors PK1, PK2, and PK3 on the TV Main C.B.A.

Note :

When disconnecting or connecting 3 Connectors PK1, PK2, and PK3, take extreme care not to break them.

3. Remove the TV Main C.B.A. by releasing 2 Locking Tabs (B) and A/C Cord from the frame.

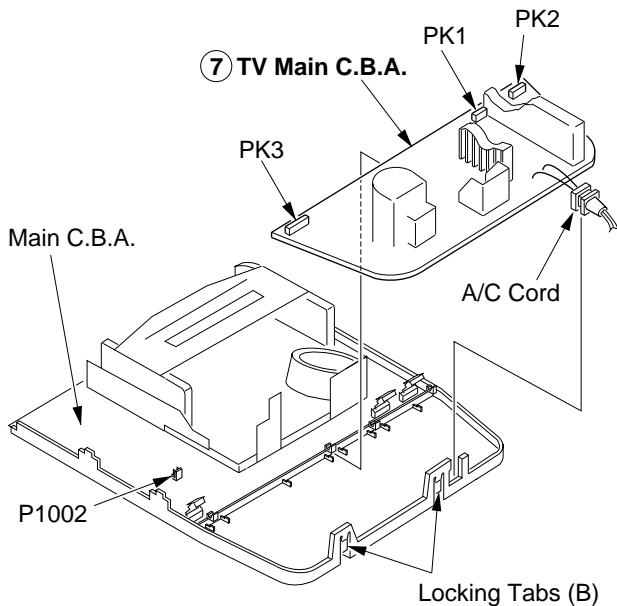


Fig. D8

VCR Chassis Unit

Disassembly Procedure

- Slide the Holder Unit (refer to "Method for Manual Loading/ Unloading of Mechanism" in Service Notes) to remove 2 Screws (C).
- (Model: A, B, C, D, E)
Remove 3 Screws (D) and Screw (E).
(Model: F, G, H, I)
Remove 2 Screws (D) and Screw (E).
- Remove 2 Screws with Washers (B).

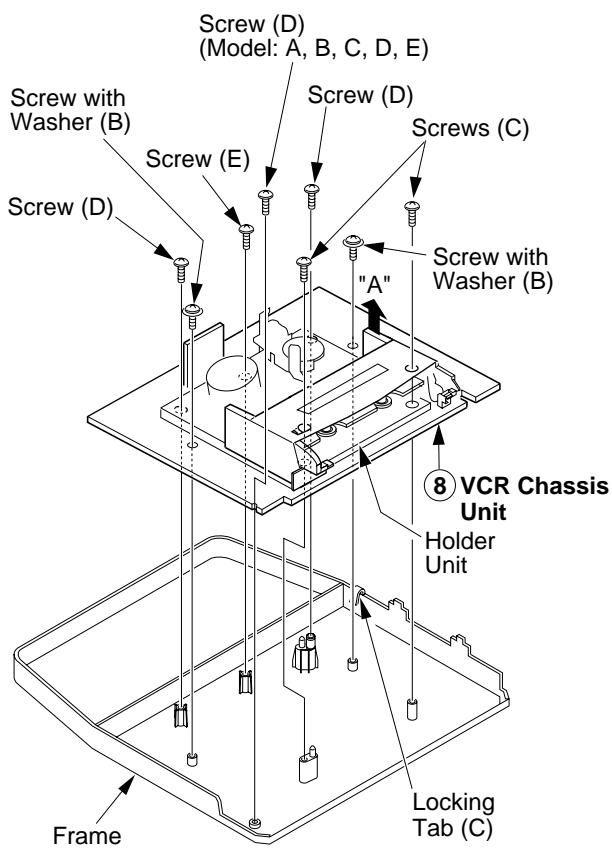


Fig. D9

- While pushing Locking Tab (C) outward, lift the right side of the Cassette Up Ass'y (Portion "A"). Then, lift the VCR Chassis Unit out of the Frame.

Note:

Work carefully so as not to break tab.

Main C.B.A.

Disassembly Procedure

- Disconnect 4 Connectors of P2531, P2552, P3501 and P4001.
- Carefully lift the Mechanism Chassis Unit straight out from the Main C.B.A.

Note:

Work carefully so as not to break Sensor LED, when lifting the Mechanism Chassis Unit.

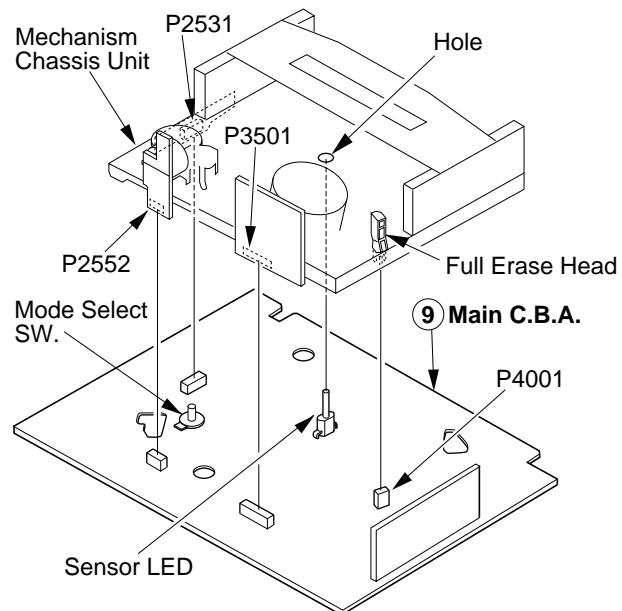


Fig. D10-1

Reassembly Notes

- Make sure that the Mode Select SW. on the Main C.B.A. is in EJECT position before installing the Mechanism Chassis Unit onto the Main C.B.A. If not, rotate the Mode Select SW. until the alignment projection is in the EJECT Position.

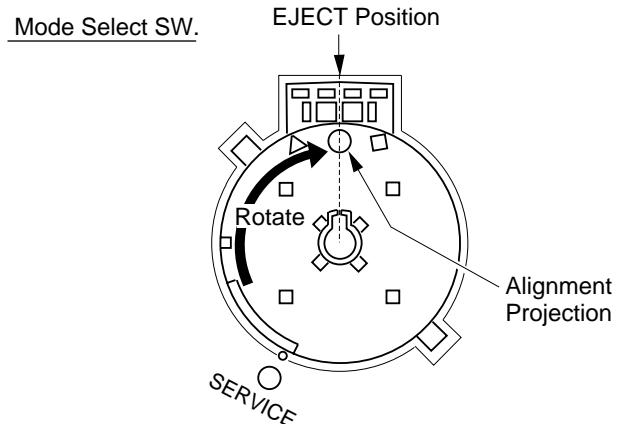


Fig. D10-2

- Be sure to install the Mechanism Chassis Unit straight onto the Main C.B.A. so that the Sensor LED clears the hole in the Mechanism Chassis Unit.
- Be sure that 4 Connectors (P2531, P2552, P3501, and P4001) are aligned and seated securely.

Cassette Up Ass'y

Disassembly Procedure

1. Slide the Holder Unit (refer to "Method for Manual Loading/ Unloading of Mechanism" in Service Notes) to remove 2 Screws (F).
2. Remove Screw (G).
3. Unhook Spring (A).
4. Slide the Cassette Up Ass'y towards the front to release Tab (C). Then, lift it up and remove.

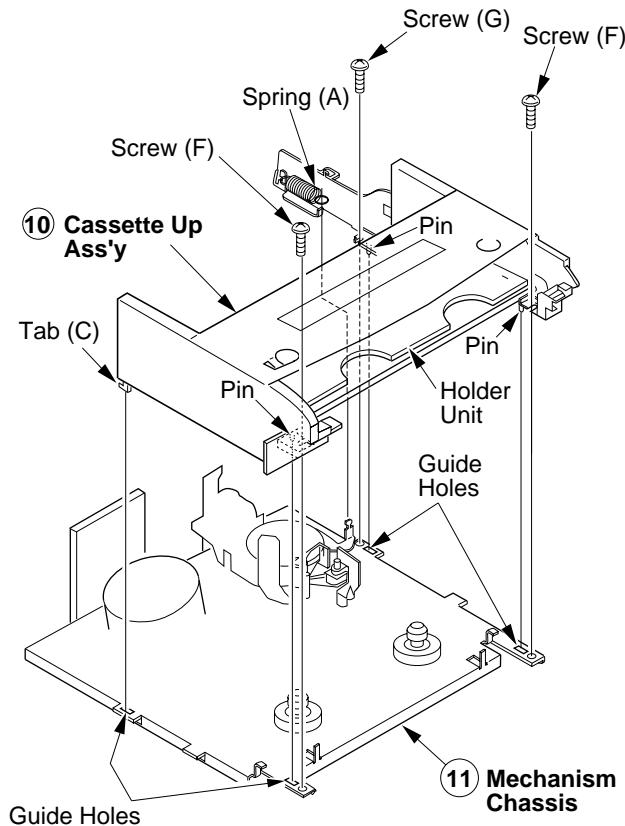


Fig. D11

Reassembly Notes

1. Installation of Cassette Up Ass'y

- 1) Confirm that the 3 pins and Tab (C) under the Cassette Up Ass'y are in each of the 4 Guide Holes on the Mechanism Chassis when installing the Cassette Up Ass'y. Then, slide the Cassette Up Ass'y towards the back.
- 2) Tighten 2 Screws (F) and Screw (G). Be careful not to tighten them too much, or the Cassette Up Ass'y may be bent outward.

DISASSEMBLY/ASSEMBLY PROCEDURES OF MECHANISM

Disassembly Method

This chart indicates Step/Location No. of Parts to be serviced and prior steps to gain access items to be serviced when disassembling. When reassembling, perform the step(s) in the reverse order.

Step /Loc. No.	Part	Prior Step(s)	Step /Loc. No.	Part	Prior Step(s)	Step /Loc. No.	Part	Prior Step(s)	Step /Loc. No.	Part	Prior Step(s)
①	Cylinder Unit	-----	⑪	Main Lever Drive Arm	3, 4, 5, 7, 8, 9	㉑	Loading Post Base-S Unit	16	㉓	S Loading Arm Unit	30
②	Upper Cylinder Unit	-----	⑫	T Brake Unit	9	㉒	Loading Post Base-T Unit	9, 20	㉔	Center Clutch Unit	-----
③	Opener Piece	-----	⑬	Changing Lever A	9	㉓	Capstan Rotor Unit	-----	㉕	Changing Gear Spring	32
④	Pinch Arm Unit	3	⑭	T Reel Table	9, 12, 13	㉔	Capstan Holder Unit	23	㉖	Changing Gear	32, 33
⑤	Motor Block Ass'y	-----	⑮	Full Erase Head	-----	㉕	SS Brake Arm Unit	-----	㉗	Changing Lever-B	32, 33, 34
⑥	Audio Control Head Unit	5	⑯	Tension Arm Unit	-----	㉖	Junction C.B.A.	-----	㉘	Idler Arm Unit	32, 33, 34
⑦	Main Cam Gear	3, 4, 5	⑰	S Spring Arm	-----	㉗	Capstan Stator Unit	23, 25, 26	㉙	Loading Rack	9, 30
⑧	Drive Rack Arm	3, 4, 5, 7	⑱	S Reel Table	16, 17	㉘	Sub Rotor	23, 25, 26, 27	㉚	Grounding Plate Unit	-----
⑨	Main Lever	-----	⑲	S Brake Arm Unit	9, 16, 17, 18	㉙	PCB Holder	23, 25, 26, 27	㉛	FG Head	-----
⑩	P5 Arm Unit	9	㉐	Main Lever Guide	9	㉚	T Loading Arm Unit	-----	㉜	-----	-----

Step/Loc. No.: Order of steps in procedure.


Part : Part to be removed or installed.

Prior Step(s) : Steps to be completed prior to the current step.

Note: When the mechanical parts surrounded by rectangle are removed or replaced, be sure to perform necessary adjustment or alignment procedures according to the mechanical adjustment procedures section and disassembly/assembly procedures of mechanism section.

Perform all disassembly and alignments procedures in EJECT Position.

TOP VIEW

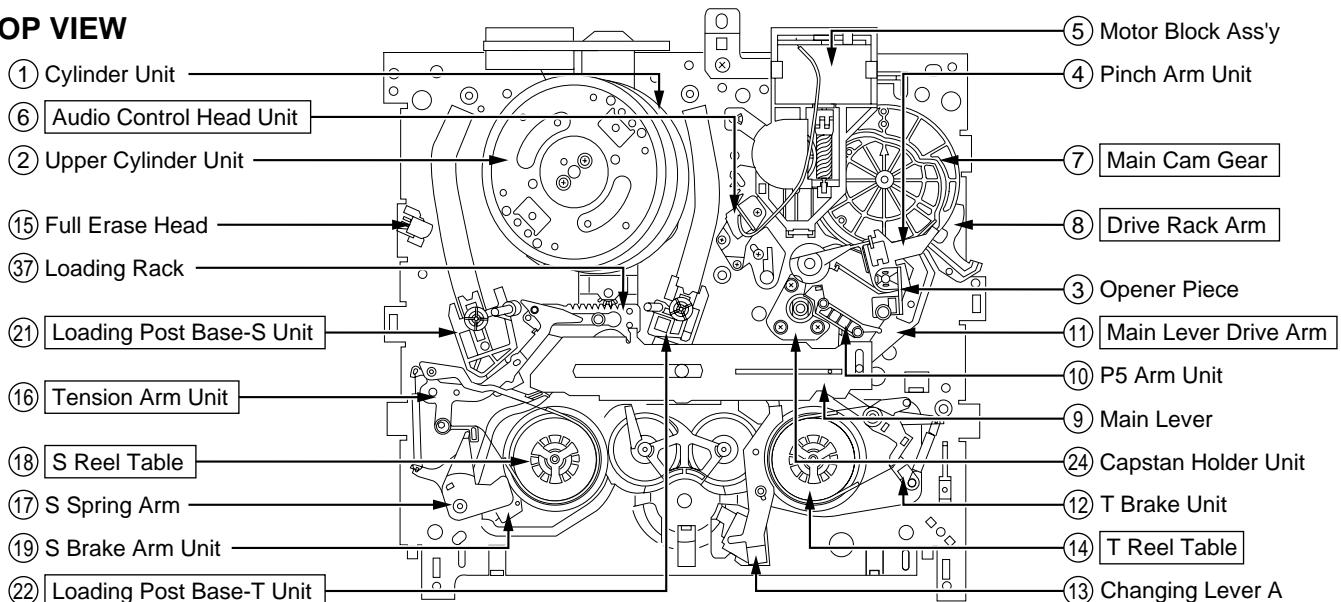

BOTTOM VIEW

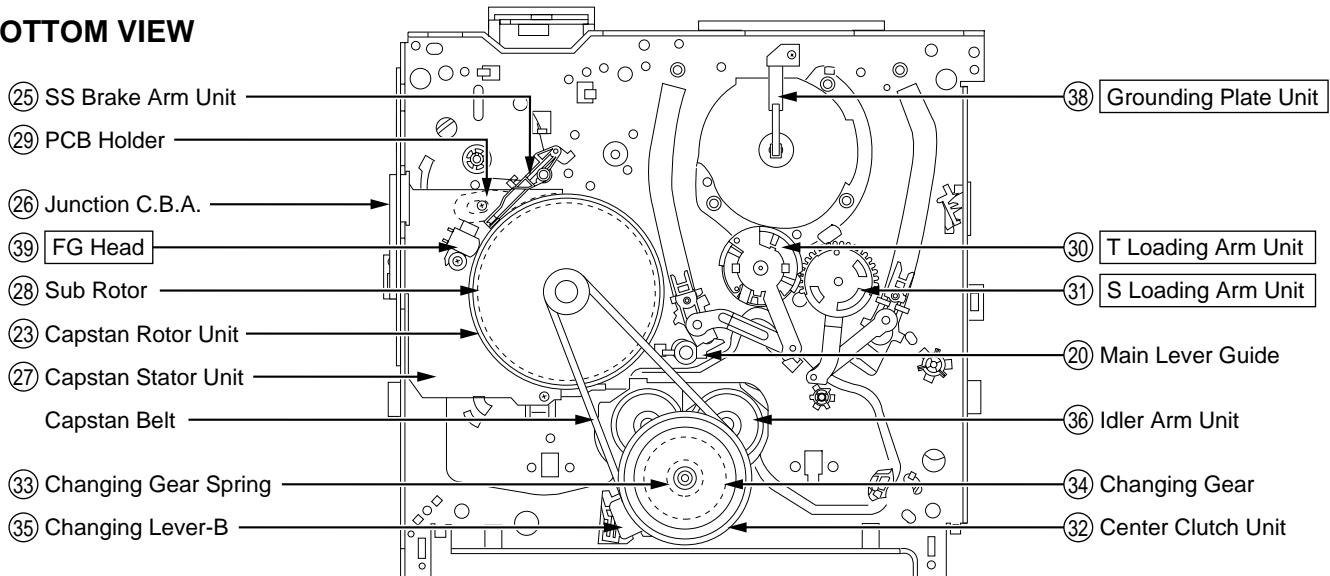


Fig. J1

Cylinder Unit

Disassembly Procedure

1. Remove 3 Screws (A) and 2 Screws with Washers (A). Then, lift the Cylinder Unit and the Head Amp C.B.A. out from the mechanism.
2. Unsolder P3502 and P3503. Then, remove the Head Amp C.B.A.

Note:

Use extreme care when removing or replacing the Cylinder Unit. Do not touch the Video Heads during servicing.

CAUTION:

When removing the Cylinder Unit, avoid touching IC2601 on the Head Amp C.B.A. because it is **HOT** during operation.

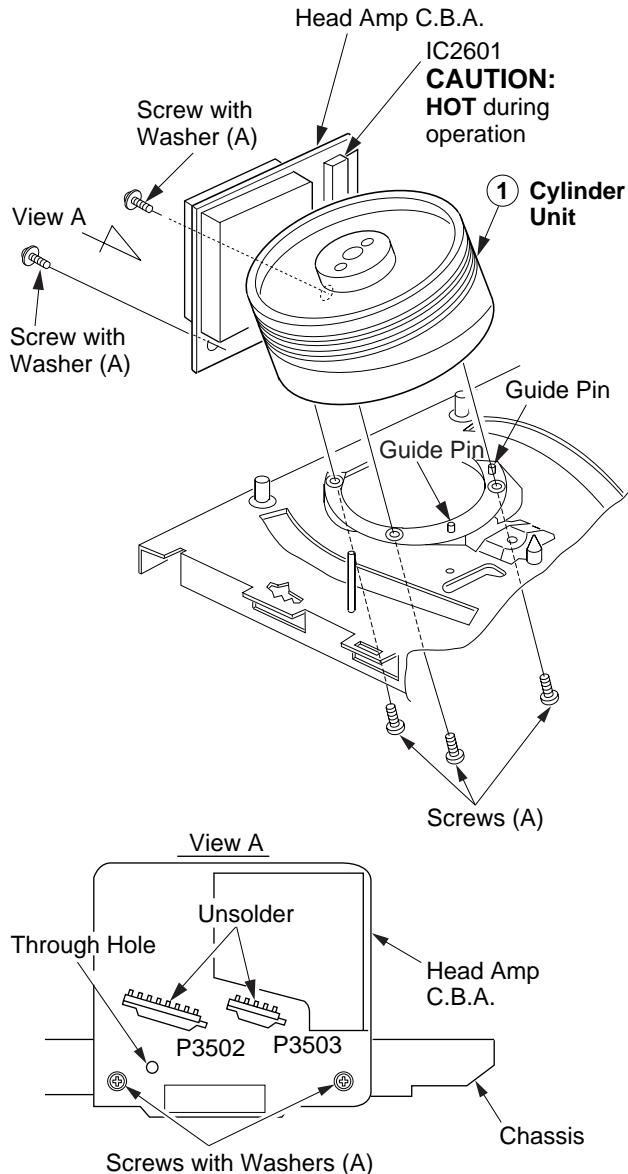


Fig. J2-1

Reassembly Notes

1. Use extreme care when removing or replacing the Cylinder Unit. Do not touch the Video Heads during servicing.
2. **Installation of Cylinder Unit**
 - 1) Install the Cylinder Unit so that the 2 holes on the lower surface of the Cylinder Unit fit over the 2 Guide Pins on the Cylinder Base and loosely secure it with 3 Screws (A).
 - 2) Install the Head Amp C.B.A. so that the hole on the Head Amp C.B.A. lines up with the hole on the chassis and secure it with 2 Screws with Washers (A).
 - 3) Position the Cylinder Unit so that foil patterns of connectors (P3502 and P3503) and Head Amp C.B.A. are aligned, and tighten 3 Screws (A).
 - 4) Solder connectors (P3502 and P3503).
3. **Adjustment of Grounding Plate Unit**
 - 1) After installing, make sure that the Grounding Plate Unit, on the bottom side of mechanism chassis, is positioned on the right side of the Cylinder shaft so that the center line of the plate is just less than 1.0 mm measured from the center of the Cylinder shaft. If required, adjust the plate position by loosening Black Screw (A). Never install the Grounding Plate Unit on the left side of the Cylinder shaft. Incorrect positioning will cause cylinder buzz.

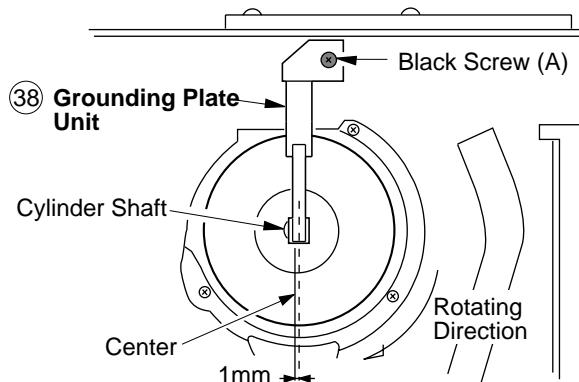


Fig. J2-2

- 2) After installing, perform the "Tape Interchangeability Adjustment/Confirmation Procedures."

Upper Cylinder Unit

Disassembly Procedure

1. Remove 2 Screws with Washers (B).
2. Carefully lift the Upper Cylinder Unit from the shaft.

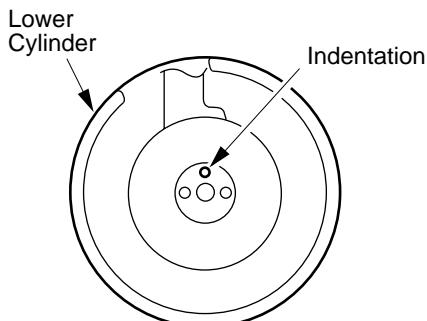
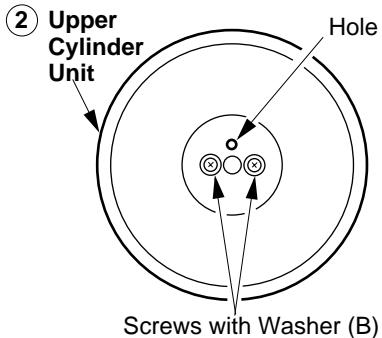


Fig. J3

Note:

Use extreme care when removing or replacing the Upper Cylinder Unit. Do not touch the Video Heads during servicing.

Reassembly Notes

1. Use extreme care when removing or replacing the Cylinder Unit. Do not touch the Video Heads during servicing.
2. **Alignment of Upper Cylinder Unit**
 - 1) When installing, make sure that the hole on the Upper Cylinder is aligned with the indentation on the Lower Cylinder.
 - 2) After installing, perform the "Tape Interchangeability Adjustment/Confirmation Procedures."

Opener Piece, Pinch Arm Unit, Motor Block Ass'y, and Audio Control Head Unit

Disassembly Procedure

1. Remove the Opener Piece by pulling it upward while releasing 2 Locking Tabs (A).
2. Pull up on the Pinch Arm Unit.
3. Release 3 Locking Tabs (B) and remove Screw with Washer (C). Then, remove the Motor Block Ass'y and Audio Control Head Unit.

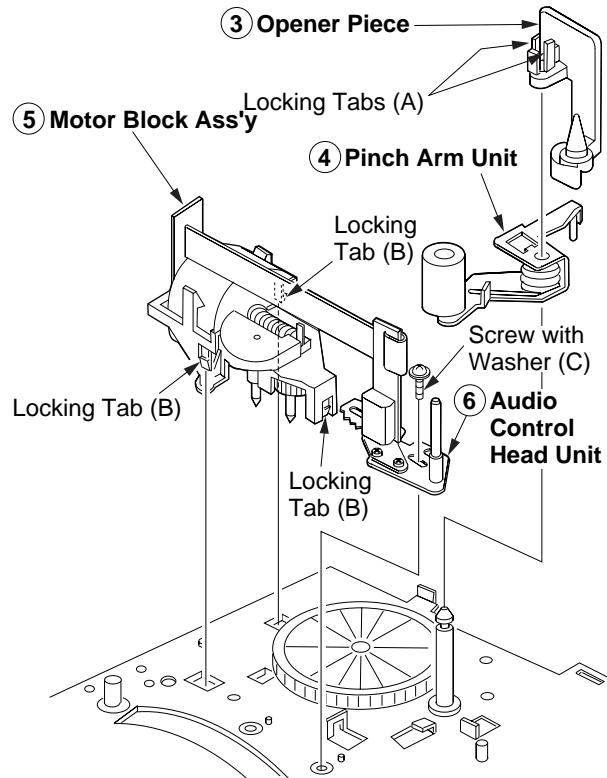


Fig. J4

Reassembly Notes

1. **Installation of Audio Control Head Unit**
 - 1) Install the Audio Control Head Unit before Motor Block Ass'y.
 - 2) After installing, perform the "Tape Interchangeability Adjustment/Confirmation Procedures."

Main Cam Gear and Drive Rack Arm

Disassembly Procedure

1. Remove the Main Cam Push Nut. (Refer to Note.)
2. Pull up on the Main Cam Gear.
3. Turn the Drive Rack Arm fully counterclockwise as shown.
4. Pull up on the Drive Rack Arm.

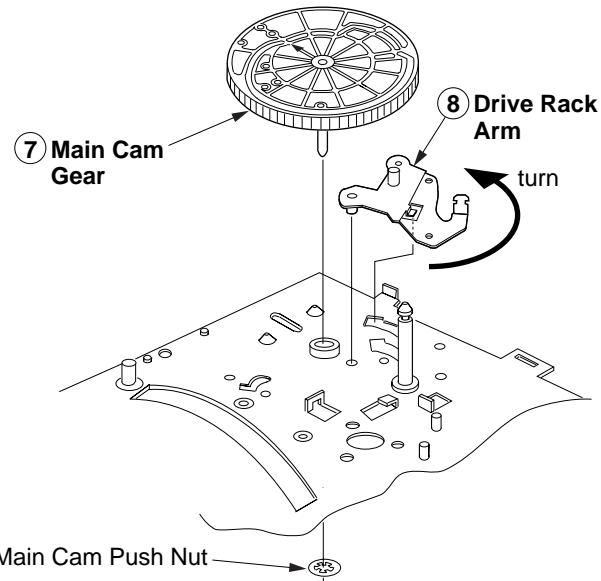


Fig. J5-1

Note:

When removing the Main Cam Push Nut, use a screwdriver etc.

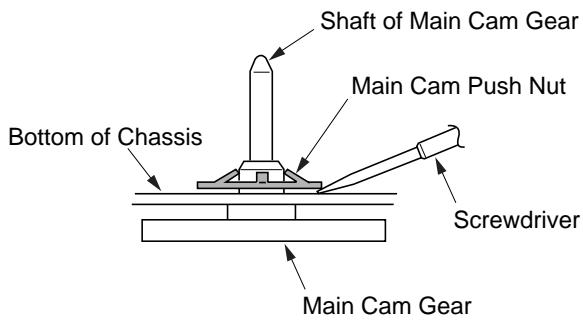


Fig. J5-2

Reassembly Notes

1. Alignment of Main Cam Gear and Drive Rack Arm

- 1) Install the Drive Rack Arm so that the hole (A) is aligned with the hole on chassis as shown (Through hole (A)).
- 2) Install the Main Cam Gear so that the 2 holes (B) marked "E" are aligned with the hole on chassis as shown (Through hole (B)). ("E" indicates the EJECT position.)

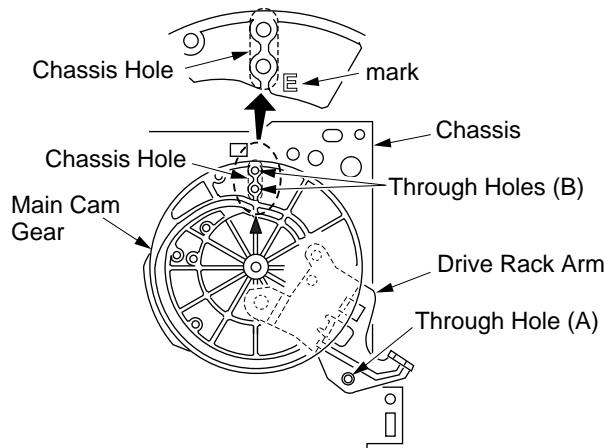


Fig. J5-3

2. Installation of Main Cam Gear and Main Cam Push Nut

- 1) Position the chassis upside down placing a Support under the Main Cam Gear.
Install the Main Cam Push Nut with Needlenose Pliers etc. so that it is flush with the chassis.

There may be some slight scratches on the Shaft of Main Cam Gear, when removing the Main Cam Gear. In case that the Main Cam Gear can be installed securely without tottering, it is fine to use the one. If any tottering, replace a new one.

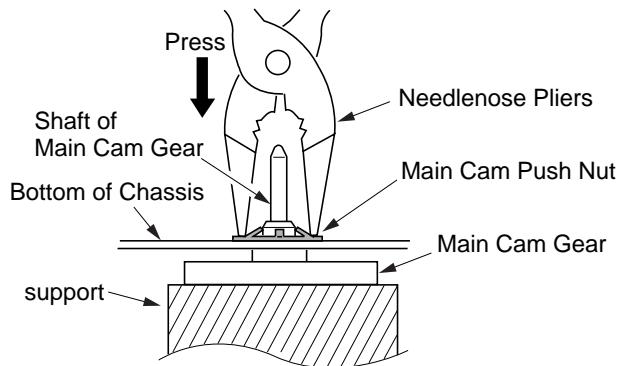


Fig. J5-4

3. Main Cam Push Nut is not reusable. If removed, install a new one.

Main Lever

Disassembly Procedure

1. Release 2 Locking Tabs (C) and Locking Tab (D). Then, remove the Main Lever.

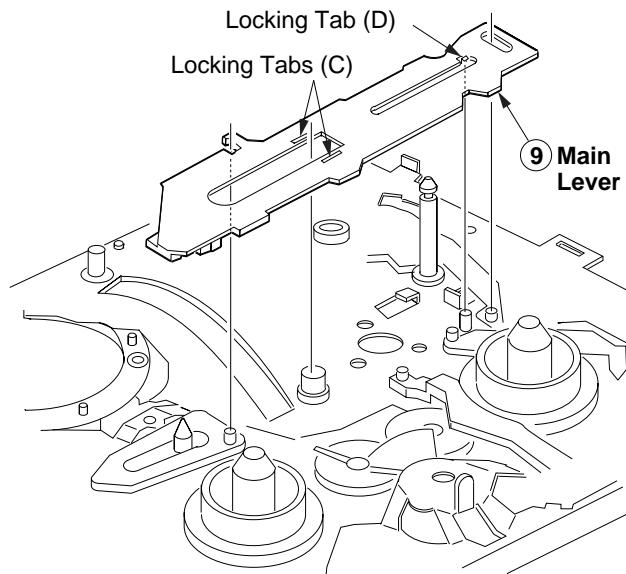


Fig. J6-1

Reassembly Notes

1. Confirmation of Main Lever

- 1) Confirm that bosses and shafts are set properly after installation of Main Lever.

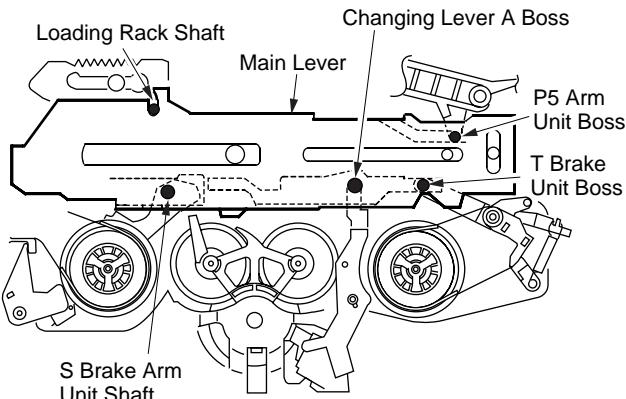


Fig. J6-2

P5 Arm Unit and Main Lever Drive Arm

Disassembly Procedure

1. Pull up on the P5 Arm Unit.
2. Turn the Main Lever Drive Arm fully counterclockwise as shown.
3. Pull up on the Main Lever Drive Arm.

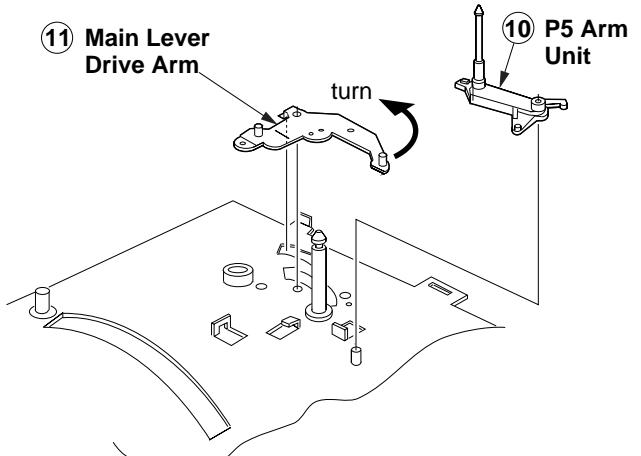


Fig. J7-1

Reassembly Notes

1. Alignment of Main Lever Drive Arm

- 1) Install the Main Lever Drive Arm so that the hole (C) is aligned with the hole on the Chassis as shown (Through hole (C)).

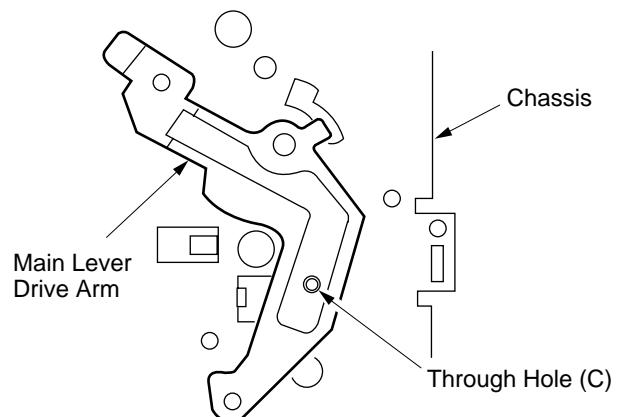


Fig. J7-2

T Brake Unit, Changing Lever A, and T Reel Table

Disassembly Procedure

1. Remove the T Brake Unit while releasing Locking Tab (E) located under the chassis.
2. Remove Cut Washer (A). Then, pull up on the Changing Lever A and remove.
3. Pull up on the T Reel Table.

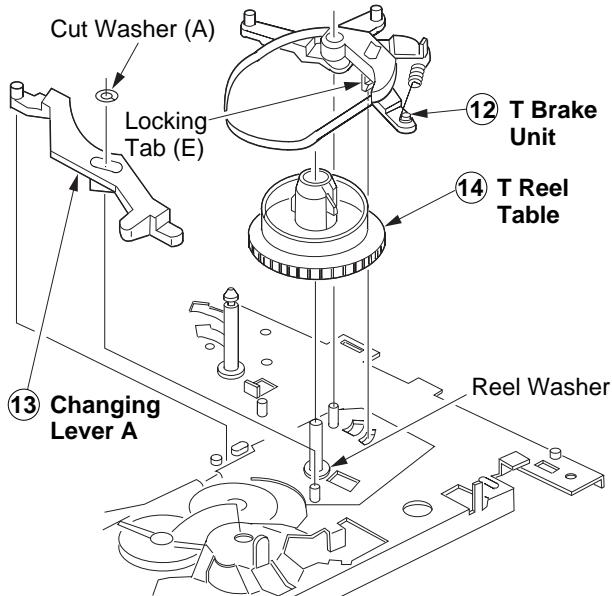


Fig. J8-1

Reassembly Notes

1. How to distinguish between S Reel Table and T Reel Table

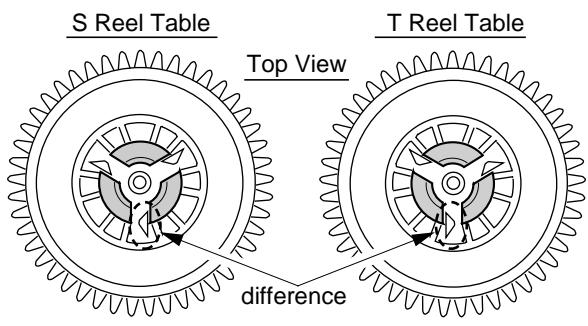


Fig. J8-2

2. Adjustment of T Reel Table

- 1) After installing, perform the "Reel Table Height Adjustment Procedures."
3. Be careful not to lose the Reel Washer under the T Reel Table.
4. Cut Washer (A) is not reusable. If removed, install a new one.

Full Erase Head, Tension Arm Unit, S Spring Arm, and S Reel Table

Disassembly Procedure

1. Turn the Full Erase Head fully counterclockwise as shown. Then remove it.
2. Unhook Spring (A).
3. Remove the Tension Arm Unit by pulling it up while releasing 2 Locking Tabs (F).
4. Remove the S Spring Arm while releasing Locking Tab (G).
5. Pull up on the S Reel Table.

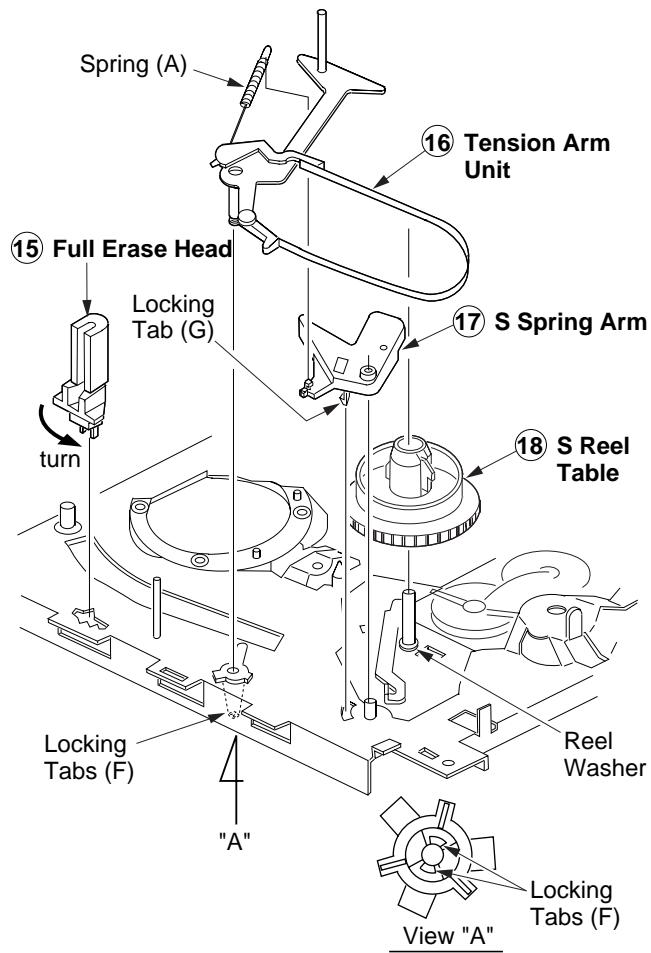


Fig. J9

Reassembly Notes

1. Adjustment of S Reel Table

- 1) After installing, perform the "Reel Table Height Adjustment Procedures".

2. Be careful not to lose the Reel Washer under the S Reel Table.

3. Adjustment of Tension Arm Unit

- 1) After installing, perform the "Tension Post Adjustment Procedures."

S Brake Arm Unit, Main Lever Guide, Loading Post Base -S, and Loading Post Base -T Unit

Disassembly Procedure

1. Remove the S Brake Arm Unit while releasing 2 Locking Tabs (H).
2. Remove the Main Lever Guide while releasing Locking Tab (I).
3. Slide the Loading Post Base -S and T Units to the end of the guide slots to remove.

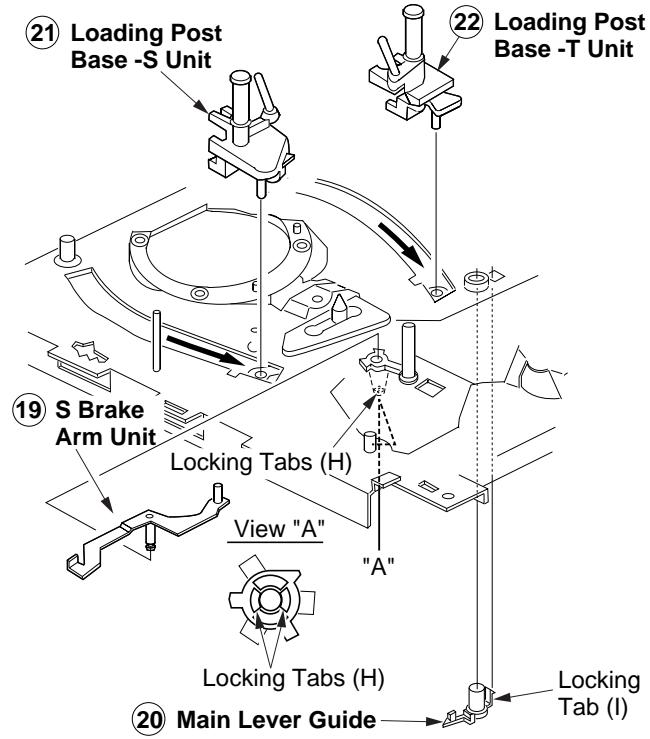


Fig. J10

Reassembly Notes

1. **Adjustment of Loading Post Base -S Unit and Loading Post Base -T Unit**
 - 1) After installing, perform the "P2 and P3 Post Height Adjustment Procedures" and "Tape Interchangeability Adjustment/Confirmation Procedures."

Capstan Rotor Unit, Capstan Holder Unit, and SS Brake Arm Unit

Disassembly Procedure

1. Remove the Capstan Belt.
2. Cut the Stopper with a cutter to remove.
3. Pull up on the Capstan Rotor Unit.
4. Remove 3 Screws (B). Then remove the Capstan Holder Unit.
5. Unhook Spring (B).
6. Turn the SS Brake Arm Unit so that the Tab (A) lines up with the niche. Then, remove the SS Brake Arm Unit.

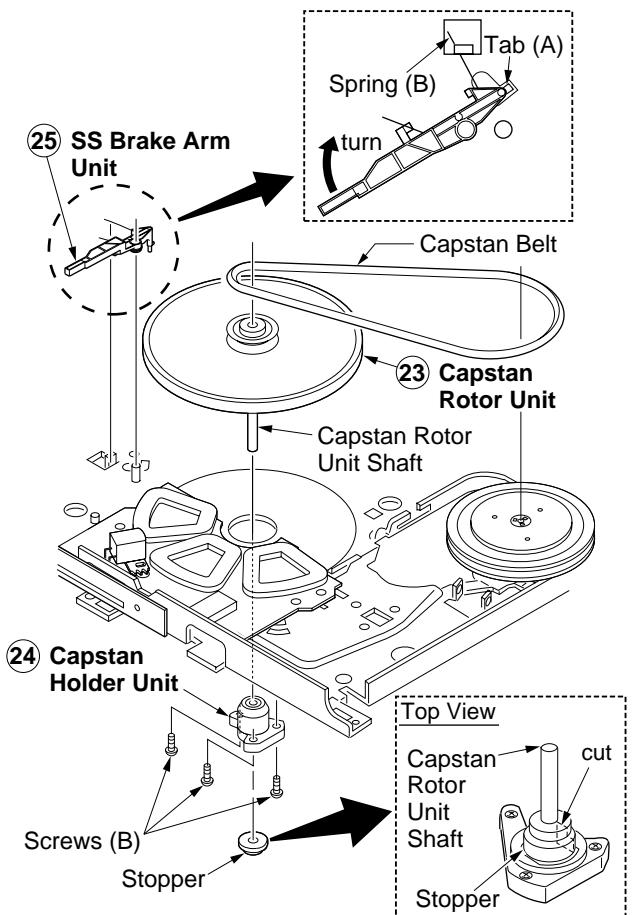


Fig. J11-1

Reassembly Notes

1. **Installation of Capstan Rotor Unit**
 - 1) Insert the Capstan Rotor Unit Shaft to the hole of the Capstan Holder Unit.
 - 2) Place a support under the Capstan Rotor Unit shaft. Install the Stopper. Be careful not to scratch the shaft or Capstan Holder Unit.
 - 3) Remove the support. Press the top end of the shaft down so that the Stopper is properly positioned. You should be able to move the shaft up and down slightly when properly positioned.

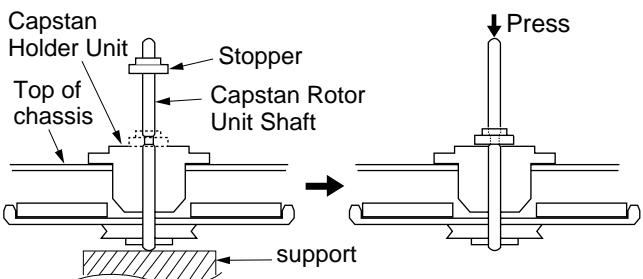


Fig. J11-2

2. **Capstan Rotor Kit**

Capstan Rotor Unit, Capstan Holder Unit, and Stopper are supplied as a Capstan Rotor Kit only. (Kit No. VXP50382K) They are not reusable. If removed, install a new one. Because even invisible scratches on the Shaft of Capstan Rotor Unit and the Capstan Holder Unit, made when cutting the Stopper, could cause unstable tape path running.

Junction C.B.A., Capstan Stator Unit, Sub Rotor, and PCB Holder

Disassembly Procedure

1. Remove 2 Screws (C).
2. Unsolder P2532 on the Junction C.B.A. Then, remove the Junction C.B.A.
3. Remove Screw (D) and 2 Screws with Washers (D), (E). Then, remove Capstan Stator Unit, Sub Rotor, and PCB Holder.

CAUTION:

When removing Capstan Stator Unit, avoid touching IC2501 on the Capstan Stator Unit because it is **HOT** during operation.

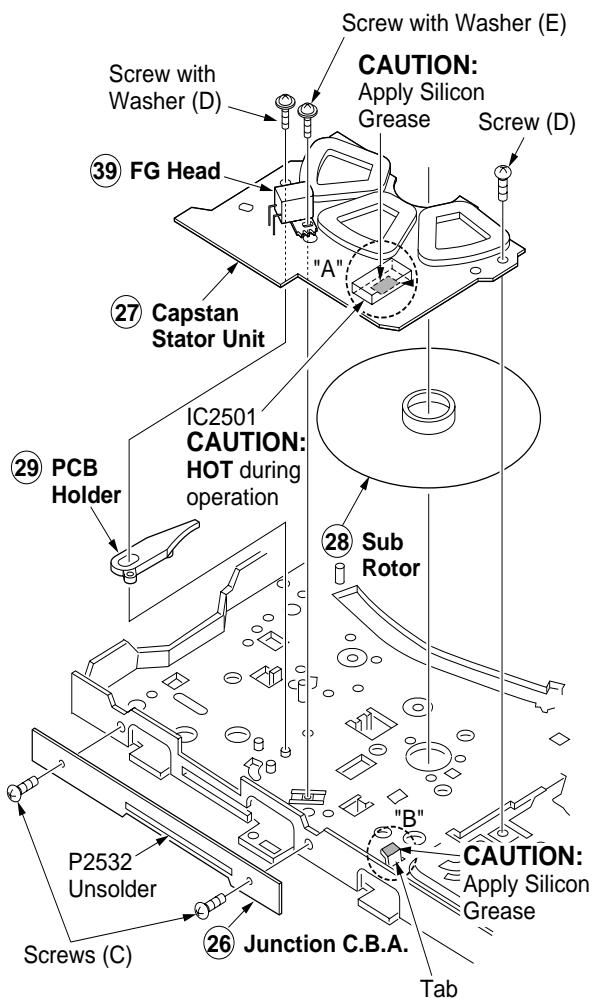


Fig. J12-1

Reassembly Notes

1. Application of Silicon Grease

CAUTION

When installing the IC2501 or Capstan Stator Unit, be sure to apply Silicon Grease (VFK1301) as shown. Be careful not to touch other parts with greased portion to prevent grease depletion.

Silicon Grease Application

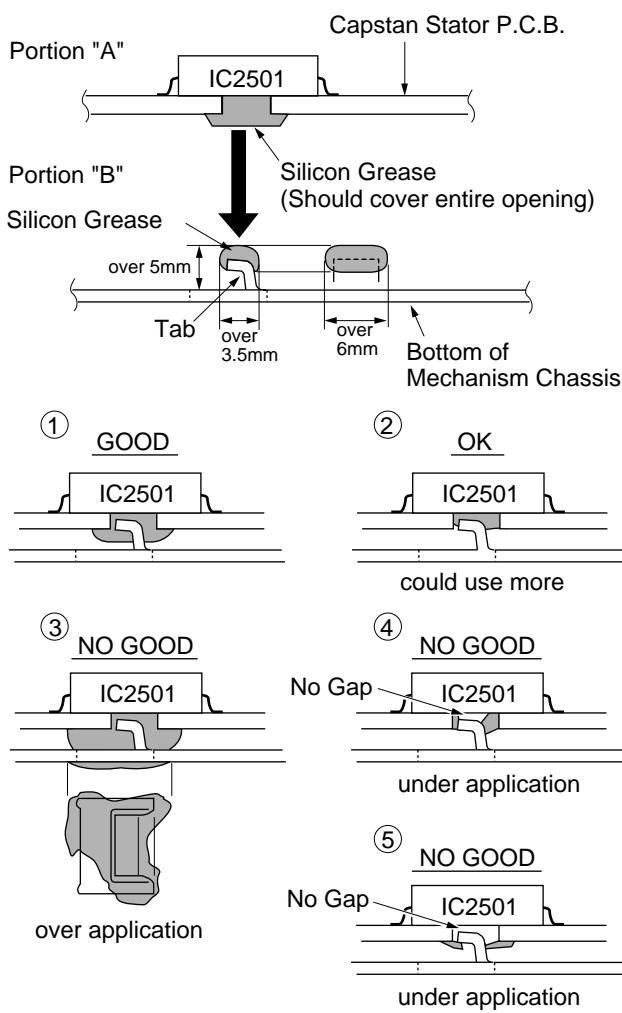


Fig. J12-2

2. Capstan Stator Kit

- 1) Capstan Stator Unit, Capstan Rotor Unit, Capstan Holder Unit, and Stopper are supplied as a Capstan Stator Kit only (Kit No. VEMS0316K). However, IC2501(AN3845SC) is available separately as a replacement part. Capstan Rotor Unit, Capstan Holder Unit, and Stopper are not reusable. Install all new parts. Because even invisible scratches on the Capstan Rotor Unit shaft and the Capstan Holder Unit, made when cutting the Stopper, could cause tape path instability.
3. Adjustment of FG Head
 - 1) After installing, perform the "FG Head gap Adjustment" procedures.

T Loading Arm Unit and S Loading Arm Unit Disassembly Procedure

1. Remove the T Loading Arm Unit by pulling it up while releasing Locking Tab (J).
2. Pull up on the S Loading Arm Unit.

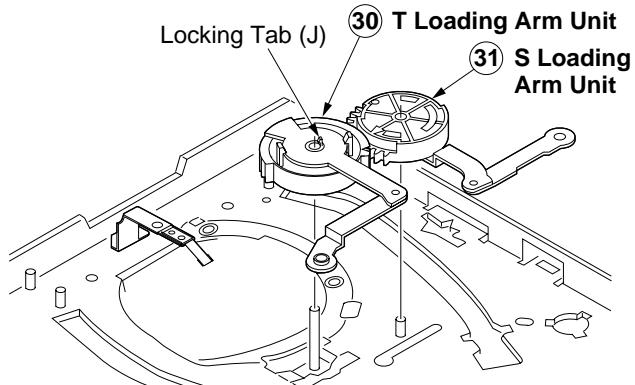


Fig. J13-1

Reassembly Notes

1. Alignment of T Loading Arm Unit and S Loading Arm Unit
 - 1) Slide the Loading Rack so that the holes on it and the holes on chassis line up properly.
 - 2) Install the S Loading Arm Unit onto the Chassis.
 - 3) Install the T Loading Arm Unit so that the triangle-shaped indent is aligned with the arrow on the S Loading Arm Unit as shown. Confirm that each of holes on the T Loading Arm Unit, Chassis, and the Loading Rack are through holes.

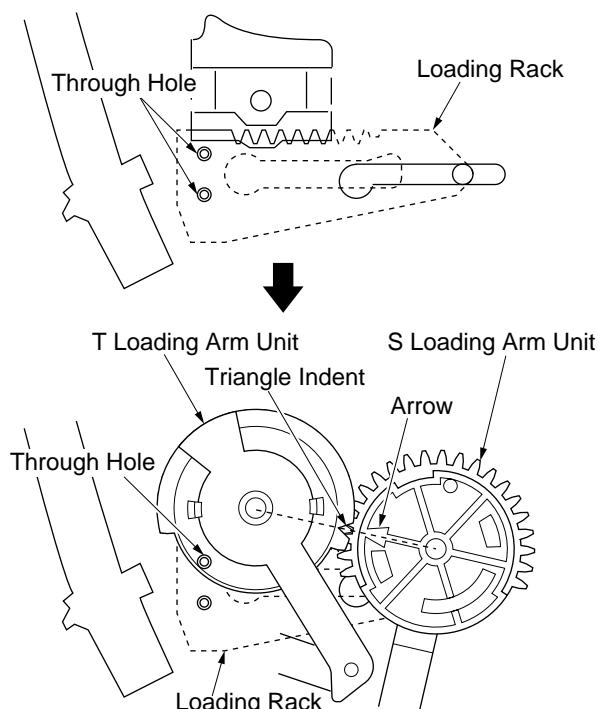


Fig. J13-2

Center Clutch Unit, Changing Gear Spring, Changing Gear, Changing Lever-B, and Idler Arm Unit

Disassembly Procedure

1. Remove Cut Washer (B). Then remove the Center Clutch Unit, Changing Gear Spring, and Changing Gear.
2. Remove Changing Lever-B while releasing 2 Locking Tabs (K).
3. Pull up on the Idler Arm Unit.

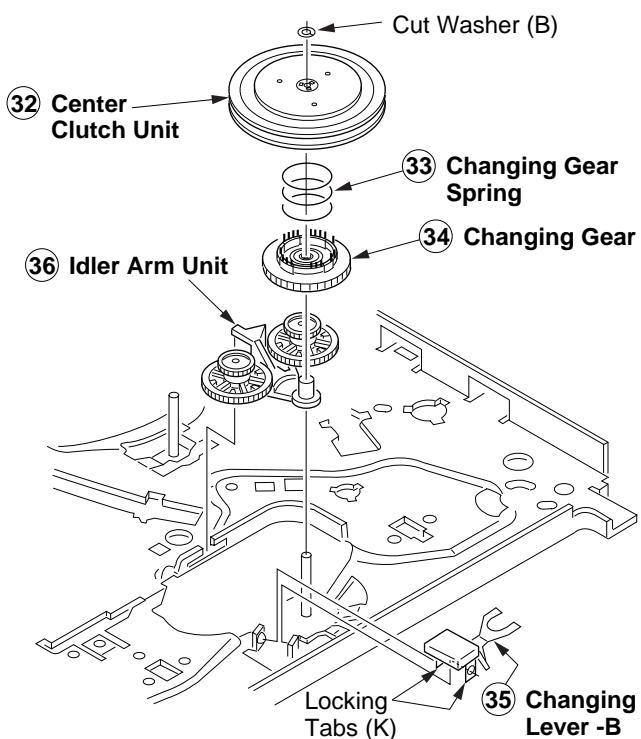


Fig. J14-1

Reassembly Notes

1. Installation of Center Clutch Unit
 - 1) Fit the Center Clutch Unit into the Changing Gear as shown.

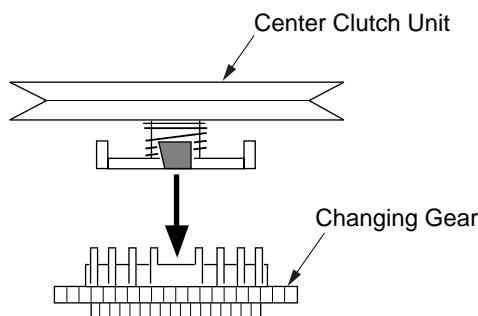


Fig. J14-2

2. Cut Washer (B) is not reusable. If removed, install a new one.

Loading Rack Unit

Disassembly Procedure

1. Slide the Loading Rack Unit as indicated by the arrow. Then, pull up on the Loading Rack Unit.

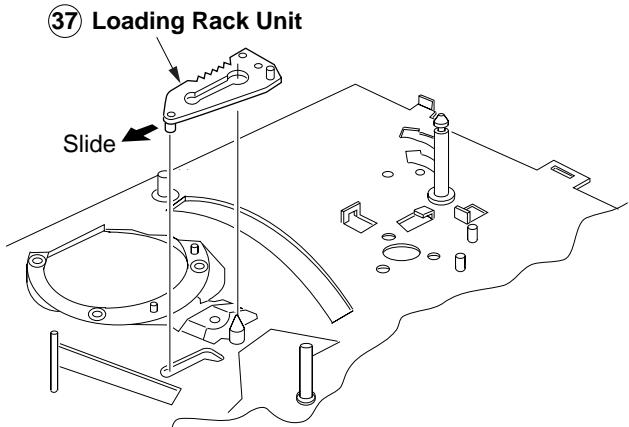


Fig. J15

DISASSEMBLY/ASSEMBLY PROCEDURES OF CASSETTE UP ASS'Y

Top Plate, Wiper Arm Unit, and Holder Unit

Disassembly Procedure

1. Remove Top Plate by releasing 2 Locking Tabs (A) on the left side and 2 Locking Tabs (B) on the right side of the Top Plate.
2. Remove Wiper Arm Unit by releasing 2 Locking Tabs (C). Then, remove the Holder Unit.

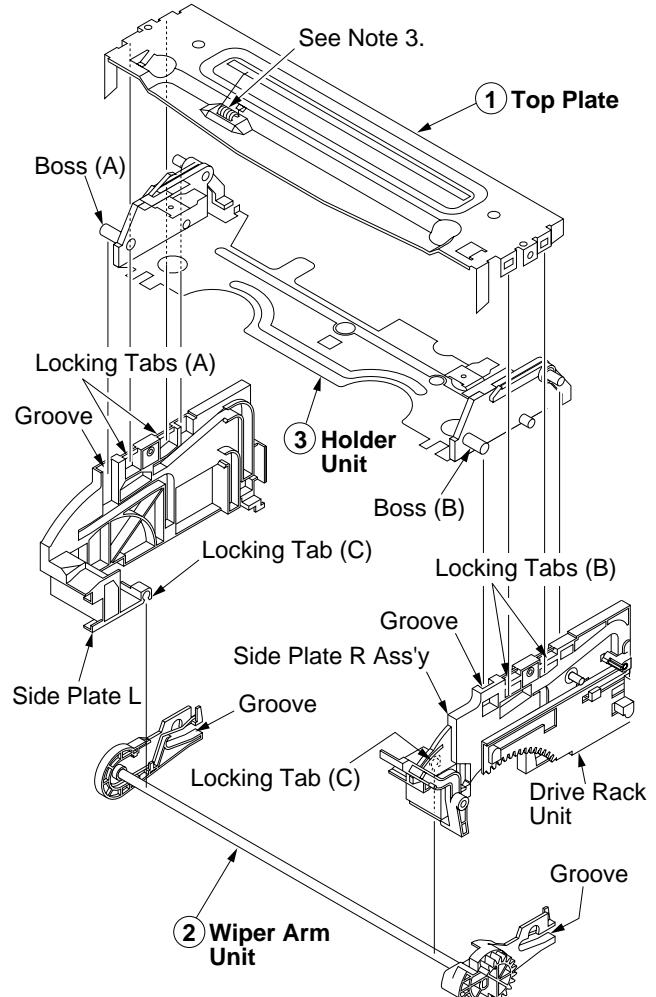


Fig. K1-1

Reassembly Notes

1. Alignment of Wiper Arm Unit and Drive Rack Unit

- 1) Slide the Drive Rack Unit to the far right as indicated by the arrow.
- 2) Install the Wiper Arm Unit so that the hole on the Wiper Arm Unit is aligned with the hole on the Drive Rack Unit.

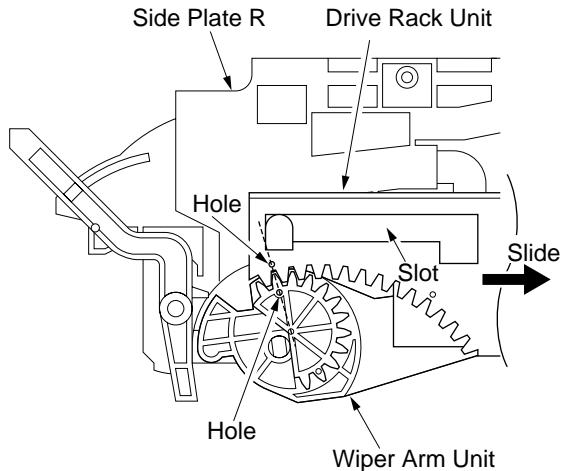


Fig. K1-2

2. Installation of Holder Unit

- 1) Turn the Wiper Arm Unit so that the grooves on each end are aligned with the grooves on Side Plate L and R.
- 2) Insert Holder Unit boss (A) and (B) into the grooves.
- 3) Finally, in the EJECT Position, confirm that the protrudence on the Wiper Arm Unit is aligned with the indentation on the Drive Rack Unit.

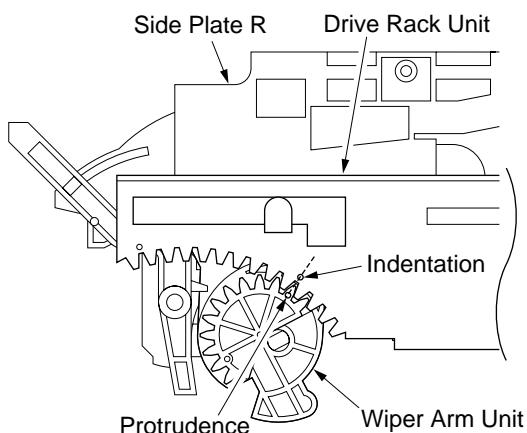


Fig. K1-3

3. As an ESD countermeasure, make sure the spring is in contact with Top Cover.

Sensor Cover, Opener Lever, and Drive Rack Unit

Disassembly Procedure

1. Remove the Sensor Cover by releasing Locking Tab (D).
2. Remove the Opener Lever by releasing Locking Tab (E). Then remove the Drive Rack Unit.

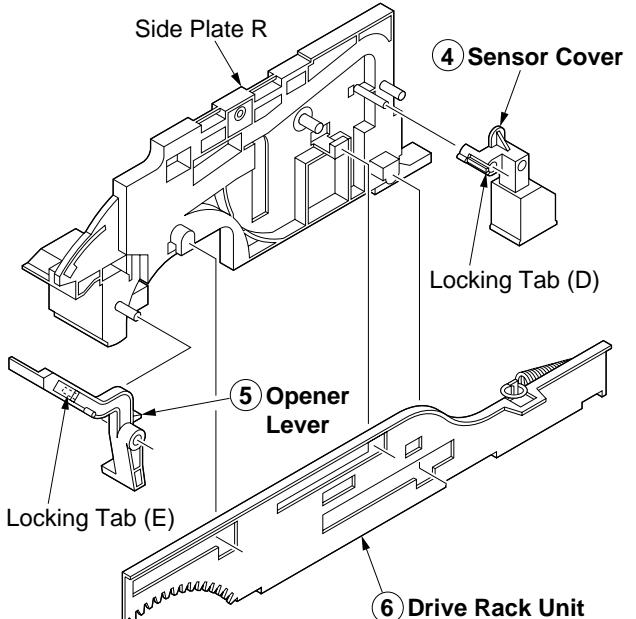


Fig. K2

REPLACEMENT PARTS LISTS

BEFORE REPLACING PARTS, READ THE FOLLOWING:

1. Use only original replacement parts:
To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list.
2. **IMPORTANT SAFETY NOTICE**
Components identified by the sign  have special characteristics important for safety. When replacing any of these components, use only the specified parts.
3. **SPECIAL NOTE**
All integrated circuits and many other semiconductor devices are electrostatically sensitive and therefore require the special handling techniques described under the "ELECTROSTATICALLY SENSITIVE (ES) DEVICES" section of this service manual.
4. Parts with no Ref. No. in "EXPLODED VIEW" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
5. Parts different in shape or size may be used. However, only interchangeable parts will be supplied as service replacement parts.
6. The parts which "AKEI" is indicated in Remarks column will be supplied from AKEI factory.

Mechanical Replacement Notes

1. Section No. of parts shown in Exploded Views are indicated in the Remarks column.
2. Capstan Rotor Unit, Capstan Holder Unit, and Stopper are supplied as Capstan Rotor Kit (Ref No. 51) only.
3. Capstan Stator Unit, Capstan Rotor Unit, Capstan Holder Unit, and Stopper are supplied as a Capstan Stator Kit (Ref No. 52) only. However, IC2501 (AN3845SC) is available separately as a replacement part. When installing the IC2501 or Capstan Stator unit, be sure to apply Silicon Grease (VFK1301). Refer to "Capstan Stator Unit" of "DISASSEMBLY/ASSEMBLY PROCEDURES OF MECHANISM" section.
4. Since the UHF/VHF TUNER/TV DEMODULATOR UNIT (Ref No. E21) has already been pre-adjusted at the factory, do not try to adjust the UHF/VHF TUNER/TV DEMODULATOR UNIT. The UHF/VHF TUNER/TV DEMODULATOR UNIT replacement part is available as a complete assembly unit only.
5. The Infrared Remote Control Unit (Ref No. 123) replacement part is available as a complete assembly unit only. Do not try to disassemble the Infrared Remote Control Unit. However, the battery cover is available separately as a replacement part.
6. Cut Washers (Ref No. 416 and 417) are not reusable. If removed, install a new one.
7. Main Cam Push Nut (Ref No. 414) is not reusable. If removed, install a new one.

Electrical Replacement Notes

1. Item numbers with capital letter E (Example: E1, E2,...) in the Ref. No. column are shown in the exploded views. The E item numbers are also printed on the same page at the top of the column.
2. The parts with "■" mark are supplied individually or as a unit. The parts with "▲" mark are supplied individually or as a unit, and are included in "■" parts listed directly above in the parts list.
3. Unless otherwise specified;
All resistors are in ohms, 1/4W, +/-5%, carbon, K = 1,000 ohm, M = 1,000 kohm.
All capacitors are in microfarads, P = micromicrofarad, +/-10%.
All coils are in microhenries, M = 1,000 microhenry, +/-10%.
4. Abbreviation
RTL: Retention Time Limited
This indicates that the retention time is limited for this item. After the discontinuation of this item in production, it will no longer be available.
NR: Non Repairable Board Ass'y
MGF CHIP: Metal Glaze Film Chip
C CHIP: Ceramic Chip
COMPLX CMP: Complex Component
W FLMPRF: Wirewound Flameproof
C.B.A.: Circuit Board Assembly
P.C.B.: Printed Circuit Board
E.S.D.: Electrostatically Sensitive Devices
5. **SERVICE OF CHIP PARTS**
When servicing chip parts, please use a soldering iron of less than 30 watts. Refer to "IC, TRANSISTOR AND CHIP PART INFORMATION" page.
6. The parts with "●" are 0 ohm resistor. When replacing, a wire can be substituted for a 0 ohm resistor.
7. IC6001 replacement note:

products	replacement parts
MN675058A5P2	MN675058A5P2
MN675058A5P1	
MN675058A5P	

COMPARISON CHART OF MODELS & MARKS


MODEL	MARK
PV-M1327	A
VV1307	B
VV1317W	C
PV-M1347	D
PV-M1357W	E
PV-M2037	F
VV2007	G
VV2017W	H
PV-M2047	I

MECHANICAL REPLACEMENT PARTS LIST

<The complete Exploded Views are shown in this manual.>

EXPLODED VIEWS

① MECHANISM (TOP) SECTION

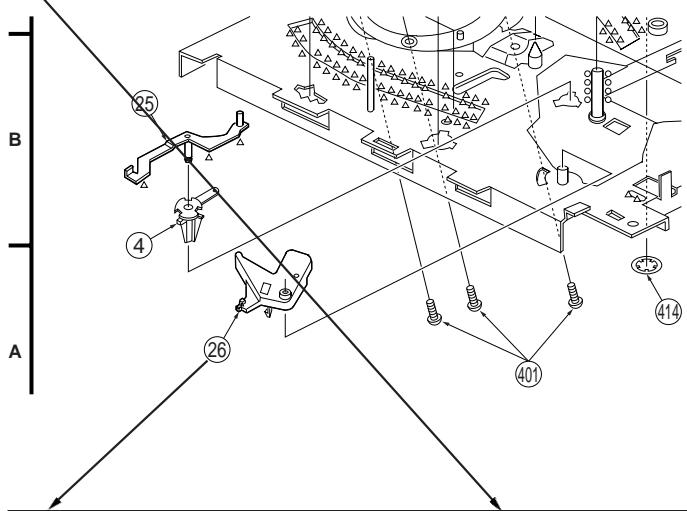

Ref. No.	Part No.	Part Name	Remarks
MECHANISM PARTS ON CHASSIS			
(Section No.)			
1	VBSS0032	FULL ERASE HEAD	1
2	VXKS0851	MOTOR BLOCK ASS'Y	1
3	VDBS0349	TENSION ARM BOSS	1
4	VDBS0351	S BRAKE ARM BOSS	1
5	VMDS0971	OPENER PIECE	1
6	VDGS0428	WORM WHEEL GEAR	1
7	VDGS0429	INTERMEDIATE GEAR	1
8	VDGS0430	MAIN CAM GEAR	1
9	VDRS0054	S REEL TABLE	1
10	VDRS0055	T REEL TABLE	1
11		CYLINDER UNIT	
	VEGS0395	(A,B,C,F,G,H)	1
	VEGS0397	(D,E,I)	1
12	VEHS0559	AUDIO CONTROL HEAD UNIT	1
13		UPPER CYLINDER UNIT	
	VEHS0553	(A,B,C,F,G,H)	1
	VEHS0554	(D,E,I)	1
14	VJSS0882	CONNECTOR 8P	1
15	VJWS6JB100LL	COMMU CABLE W/OUT PLUG,12V	1
16	VXDS0198	LOADING POST BASE-S UNIT	1
17	VXDS0195	LOADING POST BASE-T UNIT	1
18	VXLS1058	PINCH ARM UNIT	1
19	VMLS0978	MAIN LEVER DRIVE ARM	1
20	VXLS1063	P5 ARM UNIT	1
21	VMLS0976	DRIVE RACK ARM	1
22	VMLS0972	CHANGING LEVER A	1
23	VMLS0977	MAIN LEVER	1
24	VXLS1072	LOADING RACK UNIT	1
25	VXLS1061	S BRAKE ARM UNIT	1
26	VMLS0982	S SPRING ARM	1
27	VXLS1062	T BRAKE UNIT	1
28	VMBS1150	T BRAKE SPRING	1
29	VXLS1074	TENSION ARM UNIT	1
30	VMBS1164	TENSION SPRING	1
31	VMCS0078	PCB PLATE	1
35		RUBBER FOOT	
	VKAS0019	(A,D,E)	4
38	TES7612	CASSETTE DOOR SPRING	4
41	VXPS0379	CENTER CLUTCH UNIT	2
42	VMBS1151	CHANGING GEAR SPRING	2
43	VDGS0425	CHANGING GEAR	2
44	VXLS1053	IDLER ARM UNIT	2
45	VMDS0985	PCB HOLDER	2
46	VMDS0982	MAIN LEVER GUIDE	2
47	VMLS0973	CHANGING LEVER B	2

Ref. No.	Part No.	Part Name	Remarks
48		COLOR PICTURE TUBE SUB UNIT	
	TXFVB02135	(A,D,E)	▲ 4 AKEI
	LXQVB2137S	(B,C)	▲ 4 AKEI
	TXFVB02206	(F,I)	▲ 4 AKEI
	LXQVB2207Q	(G,H)	▲ 4 AKEI
49	VXLS1054	S LOADING ARM UNIT	2
50	VXLS1056	T LOADING ARM UNIT	2
51	VXPS0382K	CAPSTAN ROTOR KIT	2
52	VEMS0316K	CAPSTAN STATOR KIT	2
53	VBKS0040	FG HEAD	2
54	VDVS0087	CAPSTAN BELT SQUARE,ELASTOMER	2 2MM
55	VMAS2135	SUB ROTOR	2
56		SHEET,POLYETHYLENE	
	TPE794012	(A,B,C,D,E)	6 AKEI
	TPE794011	(F,G,H,I)	6 AKEI
57	VXBS0061	GROUNDING PLATE UNIT	2
58	VXLS1070	SS BRAKE ARM UNIT	2
59	VMBS1155	SS BRAKE SPRING	2
61	VXYS1172	CASSETTE UP ASS'Y	3
62	VMAS2131	TOP PLATE	3
63	VMBS1159	GROUNDING SPRING	3
64	VMD50976	SIDE PLATE L	3
65	VMD50974	SIDE PLATE R	3
66	VMDS0979	SENSOR COVER	3
67	VMLS0987	OPENER LEVER	3
68	VXLS1064	DRIVE RACK UNIT	3
69	VXAS4404	HOLDER UNIT	3
70	VXLS1065	WIPER ARM UNIT	3
71		FRONT CABINET ASS'Y	
	LXQKY1137P	(A)	4 AKEI
	LXQKY1137Q	(B)	4 AKEI
	LXQKY1137QW	(C)	4 AKEI
	LXQKY1137GP	(D)	4 AKEI
	LXQKY2137GP	(E)	4 AKEI
	LXQKY2207P	(F)	4 AKEI
	LXQKY2207Q	(G)	4 AKEI
	LXQKY2207QW	(H)	4 AKEI
	LXQKY2207GP	(I)	4 AKEI
72		CASSETTE DOOR-LID	
	LKKG688009A	(A)	4 AKEI
	LKKG688010A	(B)	4 AKEI
	LKKG688011A	(C)	4 AKEI
	LKKG688007A	(D)	4 AKEI
	LKKG688008A	(E)	4 AKEI
	LKKG688003A	(F)	4 AKEI
	LKKG688004A	(G)	4 AKEI
	LKKG688006A	(H)	4 AKEI
	LKKG688002A	(I)	4 AKEI
73		REAR COVER	
	LKV60201A	(A,B,D)	4 AKEI
	LKV60202A	(C,E)	4 AKEI
	LKV60101A	(G)	4 AKEI
	LKV60102A	(H)	4 AKEI
		REAR COVER UNIT	
	LXQKV1207GP	(F,I)	4 AKEI
74		REAR COVER PIECE	
	TKK778575	(A,B,C,D,E)	4 AKEI
77		SWIVEL BRACKET	
	LKG60200A	(A,D)	4 AKEI
	LKG60201A	(E)	4 AKEI
78		SWIVEL	
	LKG60100A	(A,D,E)	4 AKEI
81		POWER BUTTON	
	LBX61023A	(A,D)	4 AKEI
	LBX61009A	(B)	4 AKEI
	LBX61027A	(C)	4 AKEI
	LBX61031A	(E)	4 AKEI
	LBX61001A	(F,I)	4 AKEI
	LBX61005A	(G)	4 AKEI
	LBX61017A	(H)	4 AKEI
82		CH VOL BUTTON	
	LBX61025A	(A,D)	4 AKEI
	LBX61010A	(B)	4 AKEI
	LBX61028A	(C)	4 AKEI
	LBX61033A	(E)	4 AKEI
	LBX61003A	(F,I)	4 AKEI
	LBX61006A	(G)	4 AKEI
	LBX61018A	(H)	4 AKEI

Ref. No.	Part No.	Part Name	Remarks
83		VCR BUTTON	
	LBX61026A	(A,D)	4 AKEI
	LBX61011A	(B)	4 AKEI
	LBX61029A	(C)	4 AKEI
	LBX61034A	(E)	4 AKEI
	LBX61004A	(F,I)	4 AKEI
	LBX61007A	(G)	4 AKEI
	LBX61019A	(H)	4 AKEI
84		OPERATION BUTTON UNIT	
	LXQBX1137P	(A)	4 AKEI
	LXQBX1137Q	(B)	4 AKEI
	LXQBX1137QW	(C)	4 AKEI
	LXQBX1137GP	(D)	4 AKEI
	LXQBX2137GP	(E)	4 AKEI
	LXQBX1207P	(F,I)	4 AKEI
	LXQBX1207Q	(G)	4 AKEI
	LXQBX1207QW	(H)	4 AKEI
90		BADGE, ACRYL BUTADIENE STYRENE	
		RESIN	
	TBM153023	(A,D,E)	4 AKEI
	TBM153022	(F,I)	4 AKEI
91		TOP SHIELD PLATE ASS'Y	
	LXQUS1137GP	(A,B,C,D,E)	5 AKEI
	LXQUS1207GP	(F,G,H,I)	5 AKEI
92	LASUSUP5904A	SPEAKER	4 AKEI
93	VEKS5534	SPEAKER LEAD ASS'Y	4
94		DEFLECTION YOKE	
	TLY26333F5	(A,D,E)	▲ 4 AKEI
	OR TLY26391S2		▲ AKEI
	LLY6307K	(B,C)	▲ 4 AKEI
	LLY2303F1	(F,I)	▲ 4 AKEI
	OR LLY6305S1		▲ AKEI
	LLY6306F	(G,H)	▲ 4 AKEI
	OR LLY6306S		▲ AKEI
95		CONVERGENCE MAGNET	
	LLL62001	(A,B,C,D,E,G,H)	4 AKEI
96	LML69002A	CLAMPER	5 AKEI
97	VMS30869	DOUBLE LOCKING SPACER	5
98	TMK77737	CUSHION	5
100		BATTERY COVER	
	VKFS2221	(A,B,D,F,G,I)	6
	VKFS2223	(C,E,H)	6
118		BAG, POLYETHYLENE	
	TPE744031	(A,B,C,D,E)	6 AKEI
	TPE744035	(F,G,H,I)	6 AKEI
119	LMH65001A	DY ADJUSTMENT RUBBER	4 AKEI
121		PACKING CASE,PAPER	
	LPH610105A	(A)	6 AKEI
	LPH610103A	(B)	6 AKEI
	LPH610104A	(C)	6 AKEI
	LPH610101A	(D)	6 AKEI
	LPH610102A	(E)	6 AKEI
	LPH640102A	(F)	6 AKEI
	LPH640103A	(G)	6 AKEI
	LPH640104A	(H)	6 AKEI
	LPH640101A	(I)	6 AKEI
122		FAN BAG	
	VQFS3303	(A)	6 AKEI
	VQFS3308	(B,C)	6 AKEI
	VQFS3304	(D,E)	6 AKEI
	VQFS3301	(F)	6 AKEI
	VQFS3302	(G,H)	6 AKEI
	VQFS3299	(I)	6 AKEI
123		INFRARED REMOTE CONTROL UNIT	
	VSQS1491	(A)	6
	VSQS1485	(B,G)	6
	VSQS1486	(C,H)	6
	VSQS1481	(D,F)	6
	VSQS1482	(E)	6
	VSQS1483	(I)	6
125		TOP CUSHION RIGHT,STYROFOAM	
	LPJ61005A	(A,B,C,D,E)	6 AKEI
126		TOP CUSHION LEFT,STYROFOAM	
	LPJ61006A	(A,B,C,D,E)	6 AKEI
127		TOP CUSHION FRONT-L,STYROFOAM	
	LPJ61001A	(F,G,H,I)	6 AKEI
128		TOP CUSHION FRONT-R,STYROFOAM	
	LPJ61002A	(F,G,H,I)	6 AKEI

ELECTRICAL REPLACEMENT PARTS LIST

(E1, E2, E6, E7, E11, E16, E17)

Ref. No.	Part No.	Part Name	Remarks
PRINTED CIRCUIT BOARD ASSEMBLY			
E1	VEPS3040E1	MAIN C.B.A.	■ E.S.D. RTL AKEI (A)
E1	VEPS3042B1	MAIN C.B.A.	■ E.S.D. RTL AKEI (B,C)
E1	VEPS3040C1	MAIN C.B.A.	E.S.D. RTL AKEI (D,E)
E1	VEPS3040B1	MAIN C.B.A.	■ E.S.D. RTL AKEI (F)
E1	VEPS3042A1	MAIN C.B.A.	■ E.S.D. RTL AKEI (G,H)
E1	VEPS3040A1	MAIN C.B.A.	■ E.S.D. RTL AKEI (I)
E2	VEPS4016A1	TV STEREO C.B.A.	▲ E.S.D. RTL AKEI (I)
E6	VEPS5012Z1	HEAD AMP C.B.A.	■ RTL AKEI (A,B,C,F,G,H)
E6	VEPS5011Z1	HEAD AMP C.B.A.	■ RTL AKEI (D,E,I)
E7	VEPS0A25A	JUNCTION C.B.A.	■ RTL
E11	VEPS4014A1	STEREO AMP C.B.A.	■ RTL AKEI (I)
E16	LRM61002XZ	TV MAIN C.B.A.	■ RTL AKEI (A)
E16	LRM61002ZZ	TV MAIN C.B.A.	■ RTL AKEI (B)
E16	LRM61002ZA	TV MAIN C.B.A.	■ RTL AKEI (C)
E16	LRM61002YZ	TV MAIN C.B.A.	■ RTL AKEI (D)
E16	LRM61002YA	TV MAIN C.B.A.	■ RTL AKEI (E)
E16	LRM61002BZ	TV MAIN C.B.A.	■ RTL AKEI (F)
E16	LRM61002CZ	TV MAIN C.B.A.	■ RTL AKEI (G)
E16	LRM61002CA	TV MAIN C.B.A.	■ RTL AKEI (H)
E16	LRM61002AZ	TV MAIN C.B.A.	■ RTL AKEI (I)
E17	LRP23007YZ	CRT C.B.A.	▲ RTL AKEI (A,D,E)
E17	LRP23007ZZ	CRT C.B.A.	▲ RTL AKEI (B,C)
E17	LRP23007AZ	CRT C.B.A.	▲ RTL AKEI (F,I)
E17	LRP23007BZ	CRT C.B.A.	▲ RTL AKEI (G,H)
MAIN C.B.A.		■	
(A,D,E,F,I)			
INTEGRATED CIRCUITS			
IC1001	0N3131-R.KT	IC, LINEAR ERROR V. DET	▲
IC3001	AN3475FBP	IC, LINEAR VIDEO/AUDIO PROCESS	
IC3201	MN3885S	IC, CCD 1H DELAY	E.S.D.
IC3301	LC8643125957	IC, 8BIT MICROPROCESSOR	E.S.D. AKEI
		OSD/CCV	
IC4151	AN5265	IC, LINEAR AUDIO AMP	
		(A,D,E,F)	
IC5301	AN5367FB	IC, LINEAR Y/C SIGNAL PROCESS	
IC6001	MN675058A5P2	IC, 8BIT MICROPROCESSOR	E.S.D.
IC6002	CNA1801N	REEL SENSOR UNIT	
IC6003	CNA1801N	REEL SENSOR UNIT	
IC6004	24LC01B/PS1	IC, 1K EEPROM MEMORY	E.S.D.
TRANSISTORS			
Q1001	ZSC4533LP.KT		▲
	OR ZSC5130LF608		▲
Q1002	ZSD1458		
Q1003	ZSD636(Q,R,S)		
Q1004	ZSB641(Q,R,S)		
AKEI			
Q1005	ZSB641(R,S)		
Q1051	ZSC3852		
Q1052	ZSC945A(TP)		
Q3001	ZSB709(R,S)	CHIP	
Q3002	ZSD601(R,S)	CHIP	
Q3310	ZSD601(R,S)	CHIP	
Q3311	ZSB709(R,S)	CHIP	
Q3314	IMX1	COMPLX CMP SI NPN CHIP	
Q3315	UN2112	CHIP	
Q4001	ZSB709(R,S)	CHIP	
Q4002	ZSD601A(R,S)	CHIP	
Q4003	ZSD601A(R,S)	CHIP	
Q4004	UN2213	CHIP	
	(I)		
Q4005	UN2215	CHIP	
Q4006	UN2115	CHIP	
Q4101	ZSC945A(TP)		AKEI
Q4153	ZSD2259		
	(A,D,E,F)		
Q4154	UN2212	CHIP	
Q5301	ZSD601(R,S)	CHIP	
Q5302	ZSD601(R,S)	CHIP	
Q5601	ZSD601(R,S)	CHIP	
Q5901	ZSD2259		
Q5931	ZSD601(R,S)	CHIP	
Q5951	ZSB709(R,S)	CHIP	
Q5952	ZSD601(R,S)	CHIP	
Q5953	ZSB709(R,S)	CHIP	
Q6002	ZSD601(R,S)	CHIP	
Q6003	ZSB709(R,S)	CHIP	
Q6004	ZSB709(R,S)	CHIP	
Q6005	ZSC945A(TP)		AKEI
Q6006	DTA143ES		
Q6007	ZSC945A(TP)		AKEI
Q6008	VEKS5522	PHOTO SENSOR UNIT	
Q6009	VEKS5522	PHOTO SENSOR UNIT	
DIODES			
D1001	S1WBA40		▲
	OR S1WBA60		▲
	OR S1WBA60B		▲
D1002	ERA18-04		
D1003	ERA18-04		
D1005	ERA18-04		
D1006	RU2YXLF1		
D1007	ERA18-04		
D1008	EK13		
D1011	MA4051NH	ZENER	5.1V
D1012	MA858		
D1013	MA165		
D1015	RD18FB	ZENER	18V ▲
D1016	MA165		
D1051	MA4100N	ZENER	10V
D1052	MA165		
D1053	MA165		
D1054	HZ30-3TD	ZENER	30V
D3301	MA372J	CHIP	
D3302	MA165		
D4022	MA4056-M	ZENER	5.6V
	(I)		
D4152	MA4120-M	ZENER	12V
	(A,D,E,F)		
D4155	MA4056-M	ZENER	5.6V
	(A,D,E,F)		
D4591	RD9.1EW	ZENER	9.1V
	(I)		
D5304	MA165		
D5501	MA4062-L	ZENER	6.2V
D5502	MA165		
D5503	MA165		
D5504	MA165		
D5505	MA165		
D5601	MA165		
D5951	MA165		
D5952	MA4051-M	ZENER	5.1V
D5953	MA165		
D5954	MA165		
AKEI			

Ref. No.	Part No.	Part Name	Remarks
D5955	MA165		
D6001	VEKS5521	SENSOR LED UNIT	
D6002	MA165		
D6201	MA165		
D6202	MA165		
D6203	MA165		
D6204	MA165		
D6302	LN31GCPHLMU	LED GREEN	
D6303	LN21RCPHLMV	LED RED (A,D,E)	
D6304	LN31GCPHLMU	LED GREEN (A,D,E)	
	LN21RCPHLMV	LED RED (F,I)	
D6305	LN41YCPHLM	LED YELLOW (A,D,E)	
	LN31GCPHLMU	LED GREEN (F,I)	
D6306	LN41YCPHLM	LED YELLOW (F,I)	
		RESISTORS	
R1003	VRESE2TJJ334	1/2W 330K	
R1004	ERG2SJ333H	METAL OXIDE 2W 33K	
R1005	ERG1SJ560P	METAL OXIDE 1W 56	
R1006	ERDS2TJ222	2.2K	
R1007	ERDS2TJ101	100	
R1008	ERDS2TJ392	3.9K	
R1010	ERD25FJ100P	10 ▲	
	OR ERD25FPJ100P	10 ▲	
	OR VRESF4FJ100P	10 ▲	
R1011	ERD25FJ4R7P	4.7 ▲	
	OR ERD25FPJ4R7P	4.7 ▲	
	OR VRESF4FJ4R7P	4.7 ▲	
R1014	ERDS2TJ221	220	
R1015	ERDS2TJ221	220	
R1016	ERDS2TJ562	5.6K	
R1017	ERDS2TJ103	10K	
R1018	ERDS2TJ183	18K	
R1019	ERDS2TJ392	3.9K	
R1020	ERDS2TJ682	6.8K	
R1022	ERDS2TJ221	220	
R1051	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R1052	ERDS2TJ153	15K	
R1053	ERDS2TJ153	15K	
R1057	ERDS2TJ182	1.8K	
R3001	ERDS2TJ221	220	
R3002	ERJ6GEY0R00V	MGF CHIP 1/10W 0 ●	
R3006	ERDS2TJ221	220	
R3007	ERJ6GEYJ102V	MGF CHIP 1/10W 1K (A,F)	
R3009	ERJ6GEYJ181V	MGF CHIP 1/10W 180 (A,F)	
R3010	ERJ6GEYJ332V	MGF CHIP 1/10W 3.3K	
R3011	ERDS2TJ101	100	
R3012	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R3013	ERDS2TJ221	220	
R3016	ERJ6GEYJ121V	MGF CHIP 1/10W 120	
R3017	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K (A,F)	
R3024	ERJ6GEYJ561V	MGF CHIP 1/10W 560	
R3025	ERJ6GEYJ125V	MGF CHIP 1/10W 1.2M	
R3026	ERJ6GEYJ474V	MGF CHIP 1/10W 470K	
R3028	ERJ6GEYJ272V	MGF CHIP 1/10W 2.7K	
R3029	ERJ6GEYJ151V	MGF CHIP 1/10W 150	
R3032	ERJ6GEYJ122V	MGF CHIP 1/10W 1.2K	
R3033	ERJ6GEY0R00V	MGF CHIP 1/10W 0 ●	
R3034	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3035	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R3036	ERJ6GEYJ102V	MGF CHIP +/-2% 1/10W 1K	
R3037	ERJ6GEYJ102V	MGF CHIP +/-2% 1/10W 1K	
R3038	ERDS2TJ222	2.2K	
R3042	ERDS2TJ103	10K	
R3043	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K (A,F)	
R3044	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K (A,F)	

Ref. No.	Part No.	Part Name	Remarks
R3045	ERDS2TJ182		1.8K
R3046	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K (A,F)	
R3077	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R3081	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R3082	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R3083	ERJ6GEYJ271V	MGF CHIP 1/10W 270	
R3084	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R3085	ERJ6GEYJ181V	MGF CHIP 1/10W 180	
R3091	ERJ6GEYJ750V	MGF CHIP 1/10W 75	
R3301	ERJ6GEY0R00V	MGF CHIP 1/10W 0	●
R3302	ERJ6GEY0R00V	MGF CHIP 1/10W 0	●
R3303	ERJ6GEY0R00V	MGF CHIP 1/10W 0	●
R3304	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R3305	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R3306	ERJ6GEY0R00V	MGF CHIP 1/10W 0	●
R3307	ERJ6GEYJ471V	MGF CHIP 1/10W 470	
R3308	ERJ6GEYJ102V	MGF CHIP 1/10W 1K (I)	
R3309	ERJ6GEYJ102V	MGF CHIP 1/10W 1K (I)	
R3310	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R3312	ERJ6GEYJ563V	MGF CHIP 1/10W 56K	
R3321	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R3325	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R3326	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R3329	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R3330	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R3331	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3336	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R3338	ERJ6GEYJ153V	MGF CHIP 1/10W 15K (A,D,E,F)	
	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K (I)	
R3341	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R3346	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R3347	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R3352	ERDS2TJ151	150	
R3354	ERJ6GEYJ682V	MGF CHIP 1/10W 6.8K	
R3361	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R3362	ERJ6GEYJ332V	MGF CHIP 1/10W 3.3K	
R3363	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R3365	ERJ6GEYJ152V	MGF CHIP 1/10W 1.5K	
R3366	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R3369	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R3370	ERJ6GEY0R00V	MGF CHIP 1/10W 0	●
R3372	ERJ6GEYJ152V	MGF CHIP 1/10W 1.5K	
R3375	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R3377	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R3378	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R3379	ERJ6GEYJ272V	MGF CHIP 1/10W 2.7K	
R3380	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R3381	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R3390	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R4001	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4002	ERJ6GEYJ334V	MGF CHIP 1/10W 330K	
R4003	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R4004	ERJ6GEYJ333V	MGF CHIP 1/10W 33K	
R4005	ERJ6GEYJ225V	MGF CHIP 1/10W 2.2M	
R4006	ERJ6GEYJ681V	MGF CHIP 1/10W 680	
R4007	ERDS2TJ222		2.2K
R4008	ERJ6GEYG273V	MGF CHIP +/-2%	1/10W 27K
R4009	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R4010	ERDS2TJ473		47K
R4011	ERJ6GEYJ682V	MGF CHIP	1/10W 6.8K
R4012	ERJ6GEYJ682V	MGF CHIP	1/10W 6.8K
R4013	ERJ6GEY0R00V	MGF CHIP	1/10W 0
R4014	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R4015	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R4018	ERJ6GEYJ682V	MGF CHIP	1/10W 6.8K (A,D,E,F)
	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K (I)
R4021	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R4024	ERDS2TJ272		2.7K (I)
R4025	ERDS2TJ272		2.7K (I)

Ref. No.	Part No.	Part Name	Remarks
R4030	ERJ6GEYJ393V	MGF CHIP	1/10W 39K (A,D,E,F)
R4031	ERDS2TJS61		560
R4033	ERJ6GEYJ3821V	MGF CHIP	1/10W 820
R4034	ERJ6GEYJ103V	MGF CHIP	1/10W 10K (I)
R4101	ERJ6GEYJ563V	MGF CHIP	+ -2% 1/10W 56K
R4102	ERJ6GEYJ394V	MGF CHIP	1/10W 390K
R4103	ERJ6GEYJ153V	MGF CHIP	1/10W 15K
R4151	ERJ6GEYJ272V	MGF CHIP	1/10W 2.7K (A,D,E,F)
	ERJ6GEYJ102V	MGF CHIP	1/10W 1K (I)
R4152	ERDS2TJ221		220 (A,D,E,F)
R4153	ERJ6GEYJ3823V	MGF CHIP	1/10W 82K (A,D,E,F)
R4155	ERJ6GEYJ102V	MGF CHIP	1/10W 1K (A,D,E,F)
R4156	ERDS2TJ271		270 (A,D,E,F)
R4157	ERJ6GEYJ563V	MGF CHIP	1/10W 56K (A,D,E,F)
R4158	ERJ6GEYJ153V	MGF CHIP	1/10W 15K (A,D,E,F)
R4159	ERDS2TJ100		10 (A,D,E,F)
R4160	ERJ6GEYJ272V	MGF CHIP	1/10W 270 (A,D,E)
	ERJ6GEYJ121V	MGF CHIP	1/10W 120 (F)
R4163	ERJ6GEYJ560V	MGF CHIP	1/10W 56 (A,D,E,F)
R4167	ERJ6GEYJ103V	MGF CHIP	1/10W 10K (A,D,E,F)
R4171	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R4593	ERDS2TJ681		680 (A,D,E,F)
	ERDS2TJ821		820 (I)
R4594	ERDS2TJ681		680
R4595	ERDS2TJ681		680
R4596	ERDS2TJ681		680 (A,D,E,F)
	ERDS2TJ821		820 (I)
R5301	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R5302	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R5303	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R5304	ERJ6GEYJ393V	MGF CHIP	1/10W 39K
R5305	ERJ6GEYJ224V	MGF CHIP	1/10W 220K
R5306	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R5307	ERJ6GEY0R00V	MGF CHIP	1/10W 0 ●
R5308	ERJ6GEYJ393V	MGF CHIP	1/10W 39K
R5309	ERJ6GEYJ184V	MGF CHIP	1/10W 180K
R5311	ERJ6GEYJ331V	MGF CHIP	1/10W 330
R5312	ERJ6GEYJ331V	MGF CHIP	1/10W 330
R5313	ERJ6GEYJ331V	MGF CHIP	1/10W 330
R5314	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5315	ERDS2TJ101		100
R5316	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5317	ERDS2TJ101		100
R5318	ERJ6GEYJ272V	MGF CHIP	1/10W 2.7K
R5401	ERJ6GEYJ561V	MGF CHIP	1/10W 560
R5402	ERJ6GEYJ394V	MGF CHIP	1/10W 390K
R5403	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R5405	ERJ6GEYJ3822V	MGF CHIP	1/10W 8.2K
R5406	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5501	ERJ6GEYJ271V	MGF CHIP	1/10W 270
R5502	ERJ6GEYJ394V	MGF CHIP	1/10W 390K
R5503	ERDS2TJ471		470
R5504	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5505	ERJ6ENF3241V	MGF CHIP	+ -1% 1/10W 3.24K ▲ AKEI
R5508	ERJ6GEYJ561V	MGF CHIP	1/10W 560
R5510	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5511	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R5512	ERJ6GEYJ151V	MGF CHIP	1/10W 150
R5513	ERJ6GEYJ101V	MGF CHIP	1/10W 100

Ref. No.	Part No.	Part Name	Remarks
R5601	ERJ6GEYJ562V	MGF CHIP	1/10W 5.6K
R5604	ERJ6GEYJ152V	MGF CHIP	1/10W 1.5K
R5610	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R5611	ERJ6GEYJ822V	MGF CHIP	1/10W 8.2K
R5612	ERJ6GEYJ822V	MGF CHIP	1/10W 8.2K
R5613	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R5901	ERQ12AJ270P	FUSE	1/2W 27 ▲
R5902	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R5931	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R5932	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5933	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5951	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R5952	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R5953	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R5954	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R5955	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R5956	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R5957	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R6001	ERDS2TJS61		560
R6002	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6003	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6005	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6006	ERJ6GEYJ391V	MGF CHIP	1/10W 390
R6007	ERJ6GEYJ475V	MGF CHIP	1/10W 4.7M
R6008	ERJ6GEYJ182V	MGF CHIP	1/10W 1.8K
R6009	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6010	ERDS2TJ560		56
R6011	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6012	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6013	ERJ6GEYJ563V	MGF CHIP	1/10W 56K
R6014	ERJ6GEYJ563V	MGF CHIP	1/10W 56K
R6015	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6016	ERJ6GEYJ102V	MGF CHIP	1/10W 1K (F,I)
R6018	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6020	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6021	ERJ6GEYJ102V	MGF CHIP	1/10W 1K (D,E,I)
R6022	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6023	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6024	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6026	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R6027	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R6028	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6029	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R6032	ERJ6GEYJ272V	MGF CHIP	1/10W 2.7K
R6033	ERJ6GEYJ102V	MGF CHIP	1/10W 1K (I)
R6035	ERJ6GEYJ272V	MGF CHIP	1/10W 2.7K
R6037	ERDS2TJ102		1K
R6038	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R6041	ERDS2TJ223		22K
R6042	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R6043	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R6044	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6046	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6047	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6048	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6049	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6050	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6051	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R6052	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6053	ERJ6GEYJ103V	MGF CHIP	1/10W 10K (A,F)
R6055	ERJ6GEYJ103V	MGF CHIP	1/10W 10K (D,E,I)
R6054	ERJ6GEYJ103V	MGF CHIP	1/10W 10K (A,D,E)
R6055	ERJ6GEYJ103V	MGF CHIP	1/10W 10K (F,I)
R6056	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6057	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6061	ERDS2TJ103		10K
R6066	ERJ6GEYJ103V	MGF CHIP	1/10W 10K (I)
R6067	ERJ6GEYJ103V	MGF CHIP	1/10W 10K (A,D,E,F)

Ref. No.	Part No.	Part Name	Remarks
R6068	ERDS2TJ103		10K
R6069	ERDS2TJ103		10K
R6070	ERDS2TJ103		10K
R6074	ERJ6GEYJ223V	MGF CHIP	1/10W 22K (A, F)
R6075	ERDS2TJ224		220K (D, E, I)
R6076	ERDS2TJ153		15K (D, E, I)
R6077	ERDS2TJ153		15K (D, E, I)
R6078	ERJ6GEYJ104V	MGF CHIP	1/10W 100K
R6079	ERJ6GEYJ104V	MGF CHIP	1/10W 100K
R6082	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R6083	ERDS2TJ681		680
R6085	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R6086	ERDS2TJ332		3.3K
R6087	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6091	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6094	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6095	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6096	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6097	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6098	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6099	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6100	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6111	ERJ6GEYJ103V	MGF CHIP	1/10W 10K (A)
R6112	ERJ6GEYJ103V	MGF CHIP	1/10W 10K (D, E, F, I)
R6113	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6116	ERDS2TJ561		560
R6118	ERJ6GEYJ563V	MGF CHIP	1/10W 56K
R6120	ERDS2TJ221		220
R6121	ERDS2TJ221		220
R6201	EVNCYAA03B15	VARIABLE	100K
R6202	ERJ6GEYJ104V	MGF CHIP	1/10W 100K
R6203	ERJ6GEYJ333V	MGF CHIP	1/10W 33K
R6204	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6205	ERJ6GEYJ243V	MGF CHIP	1/10W 24K
R6206	ERJ6GEYJ333V	MGF CHIP	1/10W 33K
R6207	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6208	ERJ6GEYJ823V	MGF CHIP	1/10W 82K
R6209	ERJ6GEYJ224V	MGF CHIP	1/10W 220K
R6210	ERJ6GEYJ475V	MGF CHIP	1/10W 4.7M (D, E, I)
R6211	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R6212	ERJ6GEYJ332V	MGF CHIP	1/10W 3.3K
R6213	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R6214	ERJ6GEYJ394V	MGF CHIP	1/10W 390K
R6215	ERJ6GEYJ154V	MGF CHIP	1/10W 150K
R6216	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R6217	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R6218	ERJ6GEYJ184V	MGF CHIP	1/10W 180K
R6219	ERJ6GEYJ274V	MGF CHIP	1/10W 270K
R6220	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6221	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R6222	ERJ6GEYJ154V	MGF CHIP	1/10W 150K
R6223	ERJ6GEYJ392V	MGF CHIP	1/10W 3.9K
R6224	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6228	ERDS2TJ152		1.5K
R6229	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R6230	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R6301	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6302	ERJ6GEYJ153V	MGF CHIP	1/10W 15K
R6303	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6304	ERDS2TJ153		15K (D, E, F, I)
R6305	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6306	ERDS2TJ153		15K
R6307	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6308	ERJ6GEYJ153V	MGF CHIP	1/10W 15K
R6310	ERDS2TJ471		470
R6311	ERDS2TJ471		470
R6312	ERDS2TJ471		470
R6313	ERDS2TJ471		470

Ref. No.	Part No.	Part Name	Remarks
CAPACITORS			
C1001	ECKDRS103ZV	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VCKSEMD103PZ	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VCKSEMD103PZ	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VCKSGKD103QZ	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VCKSGMD103QZ	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VCKSTKG103ZY	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VCKSTMG103ZY	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VCKSUKD103MY	CERAMIC	+~20% 125V 0.01 ▲
	OR VCKSUMD103MY	CERAMIC	+~20% 125V 0.01 ▲
C1002	ECKDRS332MED	CERAMIC	+~20% 125V 3300P ▲
	OR ECKMRS332MEY	CERAMIC	+~20% 125V 3300P ▲
	OR VCKSEKD332MY	CERAMIC	+~20% 125V 3300P ▲
	OR VCKSEVD332MY	CERAMIC	+~20% 125V 3300P ▲
	OR VCKSTKG332MX	CERAMIC	+~20% 125V 3300P ▲
	OR VCKSTMG332MX	CERAMIC	+~20% 125V 3300P ▲
	OR VCKSUKD332MX	CERAMIC	+~20% 125V 3300P ▲
	OR VCKSUMD332MX	CERAMIC	+~20% 125V 3300P ▲
C1003	VCKSFKK102MX	CERAMIC	+~20% 125V 1000P ▲
	OR VCKSFMK102MX	CERAMIC	+~20% 125V 1000P ▲
	OR VCKSFMK102MX	CERAMIC	+~20% 125V 1000P ▲
C1004	ECEA2DU820YE	ELECTROLYTIC	200V 82 ▲
	OR VCESR2D820XE	ELECTROLYTIC	200V 82 ▲
C1005	ECEA2DG4R7	ELECTROLYTIC	200V 4.7
C1006	ECKW2H221KB5	CERAMIC	500V 220P
C1007	VCYSBRC104MX	CERAMIC	+20% 16V 0.1
C1009	ECQB1H103JF	POLYESTER	+5% 50V 0.01
C1010	ECQB1H103JF	POLYESTER	+5% 50V 0.01
C1011	ECEA1HU4R7	ELECTROLYTIC	50V 4.7
C1012	ECEA1PEE331	ELECTROLYTIC	18V 330
C1013	ECEA1PEE331	ELECTROLYTIC	18V 330
C1014	ECEA1HGE470	ELECTROLYTIC	50V 47
C1016	ECEA1PEE331	ELECTROLYTIC	18V 330
C1017	ECEA1PEE331	ELECTROLYTIC	18V 330
C1018	ECQB1H104P9	POLYESTER	+100%-0% 50V 0.1
C1021	ECEA1HKG010	ELECTROLYTIC	50V 1
C1025	ECKDRS221MB	CERAMIC	+~20% 125V 220P ▲
	OR ECKMRS221MBY	CERAMIC	+~20% 125V 220P ▲
	OR VCKSEJD221KW	CERAMIC	125V 220P ▲
	OR VCKSELDD221KW	CERAMIC	125V 220P ▲
	OR VCKSHJD221MW	CERAMIC	+~20% 125V 220P ▲
	OR VCKSHLD221MW	CERAMIC	+~20% 125V 220P ▲
	OR VCKSTJG221KW	CERAMIC	125V 220P ▲
	OR VCKSTLG221KW	CERAMIC	125V 220P ▲
	OR VCKSUJD221KW	CERAMIC	125V 220P ▲
	OR VCKSULD221KW	CERAMIC	125V 220P ▲
C1028	ECKDRS221MB	CERAMIC	+~20% 125V 220P ▲
	OR ECKMRS221MBY	CERAMIC	+~20% 125V 220P ▲
	OR VCKSEJD221KW	CERAMIC	125V 220P ▲
	OR VCKSELDD221KW	CERAMIC	125V 220P ▲
	OR VCKSHJD221MW	CERAMIC	+~20% 125V 220P ▲
	OR VCKSHLD221MW	CERAMIC	+~20% 125V 220P ▲
	OR VCKSTJG221KW	CERAMIC	125V 220P ▲
	OR VCKSTLG221KW	CERAMIC	125V 220P ▲
	OR VCKSUJD221KW	CERAMIC	125V 220P ▲
	OR VCKSULD221KW	CERAMIC	125V 220P ▲
C1030	VCYSBRE183KX	CERAMIC	25V 0.018
C1051	ECEA1HUR47	ELECTROLYTIC	50V 0.47
C1052	ECEA1CU100	ELECTROLYTIC	16V 10
C3001	ECUV1H103KBN	C CHIP	50V 0.01
C3003	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
	(D, E, I)		
C3006	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
C3007	ECEA0JKA101	ELECTROLYTIC	6.3V 100
C3008	ECUV1H181JCN	C CHIP	+~5% 50V 180P
C3009	ECEA1EKA4R7	ELECTROLYTIC	25V 4.7
C3010	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
	(A, F)		
C3011	ECUV1H680JCN	C CHIP	+~5% 50V 68P
	(A, F)		
C3012	ECUV1H330JCN	C CHIP	+~5% 50V 33P
	(A, F)		
C3013	ECUV1C224ZFN	C CHIP	+80%-20% 16V 0.22
C3015	ECEA0JKA470	ELECTROLYTIC	6.3V 47
C3016	ECEA1CKS100	ELECTROLYTIC	16V 10
C3019	ECEA1HKA2R2	ELECTROLYTIC	50V 2.2
C3020	ECEA1CKA220	ELECTROLYTIC	16V 22

Ref. No.	Part No.	Part Name			Remarks	
C3021	ECEA1HKA2R2	ELECTROLYTIC	50V	2.2		
C3022	ECUV1C224ZFN	C CHIP	+80%-20%	16V	0.22	
C3023	ECUV1H680JCN	C CHIP	+ -5%	50V	68P	
C3024	ECUV1E104ZFN	C CHIP	+80%-20%	25V	0.1	
C3025	ECUV1C474ZFN	C CHIP	+80%-20%	16V	0.47	
C3026	ECUV1H822KBN	C CHIP	50V	8200P		
C3027	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3030	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3031	ECUV1E104ZFN	C CHIP	+80%-20%	25V	0.1	
C3032	ECUV1C474ZFN	C CHIP	+80%-20%	16V	0.47	
C3034	ECUV1H181JCN	C CHIP	+ -5%	50V	180P	
C3035	ECUV1H270JCN	C CHIP	+ -5%	50V	27P	
(A, F)						
	ECUV1H390JCN	C CHIP	+ -5%	50V	39P	
(D, E, I)						
C3036	ECUV1E104ZFN	C CHIP	+80%-20%	25V	0.1	
C3038	ECEA1KAI00	ELECTROLYTIC	16V	10		
C3041	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3043	ECUV1H392KBN	C CHIP	50V	3900P		
C3044	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3045	ECEA1HKS3R3	ELECTROLYTIC	50V	3.3		
C3046	ECEA1HKS2R2	ELECTROLYTIC	50V	2.2		
C3047	ECEA0JKS101	ELECTROLYTIC	6.3V	100		
C3050	ECEA0JKS220	ELECTROLYTIC	6.3V	22		
C3053	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3054	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
(D, E, I)						
C3055	ECUV1E104ZFN	C CHIP	+80%-20%	25V	0.1	
C3056	ECUV1C224ZFN	C CHIP	+80%-20%	16V	0.22	
C3057	ECUV1E104ZFN	C CHIP	+80%-20%	25V	0.1	
C3058	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3060	ECEA1KAI00	ELECTROLYTIC	16V	10		
C3081	ECUV1H102KBN	C CHIP	50V	1000P		
C3082	ECUV1H222KBN	C CHIP	50V	2200P		
C3083	ECUV1H561JCN	C CHIP	+ -5%	50V	560P	
C3084	ECUV1E104ZFN	C CHIP	+80%-20%	25V	0.1	
C3231	ECEA1HKA010	ELECTROLYTIC	50V	1		
C3232	ECUV1H102KBN	C CHIP	50V	1000P		
C3233	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3234	ECEA0JKA470	ELECTROLYTIC	6.3V	47		
C3235	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3236	ECUV1E104ZFN	C CHIP	+80%-20%	25V	0.1	
C3237	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3301	ECUV1H330JCN	C CHIP	+ -5%	50V	33P	
C3302	ECUV1H330JCN	C CHIP	+ -5%	50V	33P	
C3303	ECUV1E104ZFN	C CHIP	+80%-20%	25V	0.1	
C3304	ECEA0JKS470	ELECTROLYTIC	6.3V	47		
C3305	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3306	ECUV1H270JCN	C CHIP	+ -5%	50V	27P	
C3307	ECUV1H100CCN	C CHIP	+ -0.25P	50V	10P	
C3308	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3309	ECEA1HKS010	ELECTROLYTIC	50V	1		
C3310	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C3311	ECUV1E104ZFN	C CHIP	+80%-20%	25V	0.1	
C3312	ECUV1H102KBN	C CHIP	50V	1000P		
C3313	ECEA0JKS101	ELECTROLYTIC	6.3V	100		
C3314	ECEA1HKS2R2	ELECTROLYTIC	50V	2.2		
C3317	ECUV1H101JCN	C CHIP	+ -5%	50V	100P	
C3326	ECEA1HKS010	ELECTROLYTIC	50V	1		
C3335	ECEA1KAI01	ELECTROLYTIC	16V	100		
C3363	ECUV1H220JCN	C CHIP	+ -5%	50V	22P	
C4001	ECUV1E104KBN	C CHIP	25V	0.1		
C4002	ECEA1HKS010	ELECTROLYTIC	50V	1		
C4003	ECUV1H272KBN	C CHIP	50V	2700P		
C4004	ECUV1H103KBN	C CHIP	50V	0.01		
C4005	ECEA0JKS220	ELECTROLYTIC	6.3V	22		
C4006	ECUV1H102KBN	C CHIP	50V	1000P		
C4007	ECEA0JKS220	ELECTROLYTIC	6.3V	22		
C4008	ECEA0JKS470	ELECTROLYTIC	6.3V	47		
C4009	ECEA1KAI00	ELECTROLYTIC	16V	100		
C4010	ECUV1E333KBN	C CHIP	25V	0.033		
C4012	ECEA1HKA010	ELECTROLYTIC	50V	1		
C4013	ECEA0JKA470	ELECTROLYTIC	6.3V	47		
C4014	ECEA1HKS010	ELECTROLYTIC	50V	1		
C4015	ECUV1E104ZFN	C CHIP	+80%-20%	25V	0.1	
C4018	ECUV1H103KBN	C CHIP	50V	0.01		
(A, D, E, F)						
C4022	ECEA1KAI01	ELECTROLYTIC	16V	100		
(I)						

Ref. No.	Part No.	Part Name			Remarks	
C4030	ECUV1E333KBN	C CHIP	25V	0.033		
C4032	ECUV1H103KBN	C CHIP	50V	0.01		
C4033	ECEA1HKS010	ELECTROLYTIC	50V	1		
C4099	ECEA0JKA221	ELECTROLYTIC	6.3V	220		
(I)						
C4102	ECHS1562JZ3	POLYESTER	+ -5%	100V	5600P	
C4103	ECUV1H103KBN	C CHIP	50V	0.01		
C4104	ECUV1H103KBN	C CHIP	50V	0.01		
C4105	ECEA1CKA220	ELECTROLYTIC	16V	22		
C4151	ECEA1CKA100	ELECTROLYTIC	16V	10		
(A, D, E, F)						
C4152	ECEA1CKA470	ELECTROLYTIC	16V	47		
(A, D, E, F)						
C4153	ECUV1H222KBN	C CHIP	50V	2200P		
(A, D, E, F)						
C4154	ECEA1EKA447	ELECTROLYTIC	25V	4.7		
(A, D, E, F)						
C4155	ECEA1EKA447	ELECTROLYTIC	25V	4.7		
(A, D, E, F)						
C4156	ECA1EM471B	ELECTROLYTIC	25V	470		
(A, D, E, F)						
C4157	ECUV1E273KBN	C CHIP	25V	0.027		
(A, D, E, F)						
C4158	ECUV1E473ZFN	C CHIP	+80%-20%	25V	0.047	
(A, D, E, F)						
C4159	ECEA1CKA100	ELECTROLYTIC	16V	10		
(A, D, E, F)						
C4160	ECA1CM471B	ELECTROLITIC	16V	470		
(A, D, E)						
	ECA1CM101B	ELECTROLITIC	16V	100		
(F)						
C4161	ECUV1E473KBN	C CHIP	25V	0.047		
(A, D, E, F)						
C4163	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
(A, D, E, F)						
C4164	ECUV1H103KBN	C CHIP	50V	0.01		
(A, D, E, F)						
C4166	ECA1EM221B	ELECTROLYTIC	25V	220		
(A, D, E, F)						
C4171	ECEA1HKA010	ELECTROLYTIC	50V	1		
C5301	ECEA1CKA100	ELECTROLYTIC	16V	10		
C5302	ECEA1EKA447	ELECTROLYTIC	25V	4.7		
C5303	ECEA1HKAR33	ELECTROLYTIC	50V	0.33		
C5305	ECEA1HKAR47	ELECTROLYTIC	50V	0.47		
C5306	ECEA1CKA100	ELECTROLYTIC	16V	10		
C5307	ECEA1CKN100	ELECTROLYTIC	16V	10		
C5308	ECEA1CKN100	ELECTROLYTIC	16V	10		
C5401	ECEA1HKNR22	ELECTROLYTIC	50V	0.22		
C5402	ECUV1H222KBN	C CHIP	50V	2200P		
C5403	ECEA1HKA220	ELECTROLYTIC	50V	2.2		
C5501	ECUV1E183KBN	C CHIP	25V	0.018		
C5502	ECUV1H471KBN	C CHIP	50V	470P		
C5505	ECEA1CKA470	ELECTROLYTIC	16V	47		
C5506	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C5507	ECEA1CKA100	ELECTROLYTIC	16V	10		
C5508	ECUV1H221JSN	C CHIP	+ -5%	50V	220P	
C5510	ECEA1HKA010	ELECTROLYTIC	50V	1		
C5511	ECUV1E333KBN	C CHIP	25V	0.033		
C5516	ECUV1E333KBN	C CHIP	25V	0.033		
C5601	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C5602	ECUV1E104KBN	C CHIP	25V	0.1		
C5603	ECUV1H150JCN	C CHIP	+ -5%	50V	15P	
C5604	ECEA1HKA010	ELECTROLYTIC	50V	1		
C5605	ECUV1H153KBN	C CHIP	50V	0.015		
C5606	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C5607	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C5901	ECEA1CKA470	ELECTROLYTIC	16V	47		
C5902	ECEA1CKA470	ELECTROLYTIC	16V	47		
C5903	ECEA1CKA470	ELECTROLYTIC	16V	47		
C5904	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C5905	ECEA0JKA101	ELECTROLYTIC	6.3V	100		
C5906	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C5931	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C5932	ECUV1H103ZFN	C CHIP	+80%-20%	50V	0.01	
C5951	ECA1CM221	ELECTROLYTIC	16V	220		
C6001	ECEA0JU471	ELECTROLYTIC	6.3V	470		
C6005	ECEA0JKA101	ELECTROLYTIC	6.3V	100		
C6006	ECUV1E104ZFN	C CHIP	+80%-20%	25V	0.1	
C6007	ECUV1H101JCN	C CHIP	+ -5%	50V	100P	

Ref. No.	Part No.	Part Name			Remarks
C6008	ECUV1H101JCN	C CHIP	+5%	50V 100P	
C6009	ECUV1H101JCN	C CHIP	+5%	50V 100P	
C6011	ECUV1H101JCN	C CHIP	+5%	50V 100P	
C6012	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C6013	ECUV1E104KBN	C CHIP		25V 0.1	
C6014	ECUV1H150GDN	C CHIP	+2%	50V 15P	
C6015	ECUV1H120JCN	C CHIP	+5%	50V 12P	
C6016	ECUV1H010CCN	C CHIP	+0.25P	50V 1	
C6017	ECEA0JKS470	ELECTROLYTIC	6.3V	47	
C6018	ECUV1H102KBN	C CHIP		50V 1000P	
C6020	ECUV1H101JCN	C CHIP	+5%	50V 100P	
C6021	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C6023	ECUV1H102KBN	C CHIP		50V 1000P	
C6024	ECUV1H102KBN	C CHIP		50V 1000P	
C6036	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C6201	ECEA0JKA470	ELECTROLYTIC	6.3V	47	
C6202	ECEA0JKA330	ELECTROLYTIC	6.3V	33	
C6203	ECUV1H103KBN	C CHIP		50V 0.01	
C6204	ECUV1H103KBN	C CHIP		50V 0.01	
C6205	ECUV1H102KBN	C CHIP		50V 1000P	
C6206	ECUV1H103KBN	C CHIP		50V 0.01	
C6207	ECQ81H393KF	POLYESTER		50V 0.039	
C6208	ECEA1HKA010	ELECTROLYTIC	50V	1	
C6209	ECEA1CKS100	ELECTROLYTIC	16V	10	
C6211	ECUV1H272KBN	C CHIP		50V 2700P	
C6212	ECUV1E104KBN	C CHIP		25V 0.1	
C6213	ECUV1H151KN	C CHIP		50V 150P	
C6214	ECUV1H102KBN	C CHIP		50V 1000P	
C6217	ECUV1E104KBN	C CHIP		25V 0.1	
C6218	ECEA1CKA100	ELECTROLYTIC	16V	10	
C6221	ECEA0JKA220	ELECTROLYTIC	6.3V	22	
C6222	ECUV1H272KBN	C CHIP		50V 2700P	
C6223	ECUV1H103KBN	C CHIP		50V 0.01	
C6224	ECEA0JKA101	ELECTROLYTIC	6.3V	100	
C6225	ERJ6GEYR00V	MFG CHIP	1/10W	0	●
C6228	VCYSBRC104MX	CERAMIC	+20%	16V	0.1
C6231	ECEA1CKA100	ELECTROLYTIC	16V	10	
		FILTERS			
FL4001	VLF50014				
		COILS			
L1001	ELF15N005A	HIGH PASS FILTER	0.5A	18M	▲
	OR ELF18D290A	HIGH PASS FILTER	0.5A	18M	▲
	OR LLN23012A	HIGH PASS FILTER	0.5A	18M	▲
	OR VLQS0157	HIGH PASS FILTER	0.5A	18M	▲
	OR VLQS0166	HIGH PASS FILTER	0.5A	18M	▲
	OR VLQS0167	HIGH PASS FILTER	0.5A	18M	▲
	OR VLQS0168	HIGH PASS FILTER	0.5A	18M	▲
L1002	VLQSW07D220M		+20%	22	
L1003	VLQSW07D9R0M		+20%	9	
L1006	VLPS0005A			22	
L3001	VLQSH02R680K			68	
	(A, F)				
L3002	ELESN101KA			100	
L3004	VLQSH02R220K			22	
	(A, F)				
L3005	VLQSH02R390K			39	
L3010	ELESN470KA			47	
L3231	ELESN221KA			220	
L3301	VLQSH02R5R6J		+5%	5.6	AKEI
L3302	ELESN101KA			100	
L4002	VLQSH02R101K			100	
L4004	VLQSH02R220K			22	
	(A, D, E)				
	VLQSH02R100K			10	
	(F, I)				
L4005	VLQSU06R153K			15M	
L4101	ELESN471KA			470	
L5901	ELESN101KA			100	
		CRYSTAL OSCILLATOR			
X3301	VSXS0207				AKEI
X5501	CSB503F38				
X5601	VSXS0208-B				
X6001	VSXS0784				

Ref. No.	Part No.	Part Name			Remarks
		PIN HEADERS			
P1002	VJPS0303	CONNECTOR 3P			
P1201	VJPS0765	CONNECTOR PLUG 7P			AKEI
P1202	VJPS0768	CONNECTOR PLUG 19P			AKEI
P1203	VJPS0767	CONNECTOR PLUG 13P			AKEI
P3003	VJPS0882	CONNECTOR 12P			
	(A, F)				
	VJPS0884	CONNECTOR 15P			
	(C, D, E, I)				
P4001	VJSS0888	FE CONNECTOR 2P			
P4591	VJPS0268	CONNECTOR 2P			
	(A, D, E, F)				
P4592	VJPS0275	CONNECTOR 5P			
	(C, I)				
P6002	VJPS0881	CONNECTOR 8P			
P6201	VJPS0883	CONNECTOR 14P			
	SWITCHES				
SW6001	VSHS0058	LEAF SWITCH-SAFETY TAB			
SW6002	VSSS0159	MODE SELECT SWITCH			
SW6301	EVQ21405R	PUSH SWITCH			
SW6302	EVQ21405R	PUSH SWITCH			
SW6303	EVQPAD09K	CASSETTE DOWN SWITCH			
	(A, D, E)				
SW6304	EVQ21405R	PUSH SWITCH			
SW6305	EVQ21405R	PUSH SWITCH			
SW6306	EVQ21405R	PUSH SWITCH			
	(C, D, E, F, I)				
SW6307	EVQPB005K	PUSH SWITCH			
SW6308	EVQPB005K	PUSH SWITCH			
	(A, D, E)				
SW6309	EVQ21405R	PUSH SWITCH			
SW6310	EVQPB005K	PUSH SWITCH			
SW6311	EVQ21405R	PUSH SWITCH			
	(C, A, D, E)				
SW6312	EVQPB005K	PUSH SWITCH			
SW6313	EVQPB005K	PUSH SWITCH			
	(C, F, I)				
SW6314	EVQ21405R	PUSH SWITCH			
	(C, F, I)				
SW6315	EVQPB005K	PUSH SWITCH			
	(C, F, I)				
	FUSE & PROTECTOR				
F1001	VSFS0003A16	FUSE	125V	1.6A	▲
	OR VSFS0012A16	FUSE	125V	1.6A	▲
	OR VSFS0028A16	FUSE	125V	1.6A	▲
	OR XBA1C16NU100	FUSE	125V	1.6A	▲
PR1001	ICP-F38-1	IC PROTECTOR	1.5A		▲
	OR UN10015	IC PROTECTOR	1.5A		▲
	OR VSFS0029D25	IC PROTECTOR	1.5A		▲
PR1050	ICP-F38-1	IC PROTECTOR	1.5A		▲
	OR UN10015	IC PROTECTOR	1.5A		▲
	OR VSFS0029D25	IC PROTECTOR	1.5A		▲
PR1054	ICP-F25-1	IC PROTECTOR	1A		▲
	OR UN11010	IC PROTECTOR	1A		▲
	TRANSFORMER				
T1001	ET528AD1F5AC				▲
	OR VTPS0034				▲
	OR VTPS0038				▲
	OR VTPS0040				▲
T4101	VLTS0304				
	PRINTED CIRCUIT BOARD ASSEMBLY				
E2	VEPS4016A1	TV STEREO C.B.A.		▲ E.S.D.	AKEI
	(C, I)				

(E23, E24, E27, E30, E32)

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
MISCELLANEOUS							
JK4551	LJP28009A	FRONT A/V JACK SOCKET	AKEI	D1001	S1WBA40	DIODES	▲
JK4591	LJP68001A	EARPHONE JACK SOCKET	AKEI		OR S1WBA60		▲
E23	VJSS3325	FUSE HOLDER	AKEI		OR S1WBA60B		▲
E24	LMH69003A	LED HOLDER	AKEI	D1002	ERA18-04		
(A,D,E)				D1003	ERA18-04		
E24	LMH69002A	LED HOLDER	AKEI	D1005	ERA18-04		
(F,I)				D1006	RU2YXLF1		
E27	GP1U292Q	INFRARED RECEIVER UNIT		D1007	ERA18-04		
E30	VMTS0035	CUSHION		D1008	EK13		
E32	VMD50038	LED SPACER		D1011	MA4051NH	ZENER	5.1V
(A,D,E)				D1012	MA858		
MAIN C.B.A.							
(B,C,G,H)							
INTEGRATED CIRCUITS							
IC1001	ON3131-R.KT	IC, LINEAR ERROR V. DET	▲	D1013	MA165		
IC3001	AN3475FBP	IC, LINEAR VIDEO/AUDIO PROCESS		D1015	RD18FB	ZENER	18V ▲
IC3201	MN3885S	IC, CCD 1H DELAY	E.S.D.	D1016	MA165		
IC3301	LC8643125957	IC, 8BIT MICROPROCESSOR	E.S.D.	D1051	MA4100N	ZENER	10V
		OSD/CCV	AKEI	D1052	MA165		
IC4151	AN5265	IC, LINEAR AUDIO AMP		D1053	MA165		
IC5301	AN5367FB	IC, LINEAR Y/C SIGNAL PROCESS		D1054	HZ30-3TD	ZENER	30V
IC6001	MN675058A5P2	IC, 8BIT MICROPROCESSOR	E.S.D.	D3301	MA372J	CHIP	AKEI
IC6002	CNA1801N	REEL SENSOR UNIT		D3302	MA165		
IC6003	CNA1801N	REEL SENSOR UNIT		D4152	MA4120-M	ZENER	12V
IC6004	24LC01B/PS1	IC, 1K EEPROM MEMORY	E.S.D.	D4155	MA4056-M	ZENER	5.6V
TRANSISTORS							
Q1001	2SC4533LP_KT		▲	D5304	MA165		
	OR 2SC5130LF608		▲	D5501	MA4062-L	ZENER	6.2V
Q1002	2SD1458			D5502	MA165		
Q1003	2SD636(Q,R,S)			D5503	MA165		
Q1004	2SB641(Q,R,S)			D5504	MA165		
Q1005	2SB641(R,S)			D5505	MA165		
Q1051	2SC3852			D5601	MA165		
Q1052	2SC945A(TP)		AKEI	D5951	MA165		
Q3001	2SB709(R,S)	CHIP		D5952	MA4051-M	ZENER	5.1V
Q3002	2SD601(R,S)	CHIP		D5953	MA165		
Q3310	2SD601(R,S)	CHIP		D5954	MA165		
Q3311	2SB709(R,S)	CHIP		D5955	MA165		
Q3314	IMX1	COMPLX CMP SI NPN CHIP		D6001	VEK55521	SENSOR LED UNIT	
Q3315	UN2112	CHIP		D6002	MA165		
Q4001	2SB709(R,S)	CHIP		D6201	MA165		
Q4002	2SD601AC(R,S)	CHIP		D6202	MA165		
Q4003	2SD601AC(R,S)	CHIP		D6203	MA165		
Q4005	UN2215	CHIP		D6204	MA165		
Q4006	UN2115	CHIP		D6302	LN31GCPHLMU	LED GREEN	
Q4101	2SC945A(TP)		AKEI	D6303	LN21RCPHLMV	LED RED	
Q4153	2SD2259			(B,C)			
Q4154	UN2212	CHIP		D6304	LN31GCPHLMU	LED GREEN	
Q5301	2SD601(R,S)	CHIP		(B,C)			
Q5302	2SD601(R,S)	CHIP		LN21RCPHLMV	LED RED		
Q5601	2SD601(R,S)	CHIP		(G,H)			
Q5901	2SD2259			D6305	LN41YCPHLM	LED YELLOW	
Q5931	2SD601(R,S)	CHIP		(B,C)			
Q5951	2SB709(R,S)	CHIP		LN31GCPHLMU	LED GREEN		
Q5952	2SD601(R,S)	CHIP		(G,H)			
Q5953	2SB709(R,S)	CHIP		R1003	VRE5E2TJ334	1/2W 330K	
Q6002	2SD601(R,S)	CHIP		R1004	ERG2S2J33H	METAL OXIDE	2W 33K
Q6003	2SB709(R,S)	CHIP		R1005	ERG1SJ560P	METAL OXIDE	1W 56
Q6004	2SB709(R,S)	CHIP		R1006	ERDS2TJ222		2.2K
Q6005	2SC945A(TP)		AKEI	R1007	ERDS2TJ101		100
Q6006	DTA143ES			R1008	ERDS2TJ392		3.9K
Q6007	2SC945A(TP)		AKEI	R1010	ERD2SF1100P		10 ▲
Q6008	VEKS5522	PHOTO SENSOR UNIT		OR ERD25FPJ100P			10 ▲
Q6009	VEKS5522	PHOTO SENSOR UNIT		OR VRESF4FJ100P			10 ▲
				R1011	ERD25FJ4R7P		4.7 ▲
					OR ERD25FPJ4R7P		4.7 ▲
					OR VRESF4FJ4R7P		4.7 ▲
				R1014	ERDS2TJ221		220
				R1015	ERDS2TJ221		220
				R1016	ERDS2TJ562		5.6K
				R1017	ERDS2TJ103		10K
				R1018	ERDS2TJ183		18K
				R1019	ERDS2TJ392		3.9K
				R1020	ERDS2TJ682		6.8K
				R1022	ERDS2TJ221		220

Ref. No.	Part No.	Part Name	Remarks
R1051	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R1052	ERDS2TJ153		15K
R1053	ERDS2TJ153		15K
R1057	ERDS2TJ182		1.8K
R3001	ERDS2TJ221		220
R3002	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R3006	ERDS2TJ221		220
R3007	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R3009	ERJ6GEYJ181V	MGF CHIP	1/10W 180
R3010	ERJ6GEYJ332V	MGF CHIP	1/10W 3.3K
R3011	ERDS2TJ101		100
R3012	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R3013	ERDS2TJ221		220
R3016	ERJ6GEYJ121V	MGF CHIP	1/10W 120
R3017	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R3024	ERJ6GEYJ561V	MGF CHIP	1/10W 560
R3025	ERJ6GEYJ125V	MGF CHIP	1/10W 1.2M
R3026	ERJ6GEYJ474V	MGF CHIP	1/10W 470K
R3028	ERJ6GEYJ272V	MGF CHIP	1/10W 2.7K
R3029	ERJ6GEYJ151V	MGF CHIP	1/10W 150
R3032	ERJ6GEYJ122V	MGF CHIP	1/10W 1.2K
R3033	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R3034	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R3035	ERJ6GEYJ562V	MGF CHIP	1/10W 5.6K
R3036	ERJ6GEYJ102V	MGF CHIP	+ -2% 1/10W 1K
R3037	ERJ6GEYJ102V	MGF CHIP	+ -2% 1/10W 1K
R3038	ERDS2TJ222		2.2K
R3042	ERDS2TJ103		10K
R3043	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R3044	ERJ6GEYJ562V	MGF CHIP	1/10W 5.6K
R3045	ERDS2TJ182		1.8K
R3046	ERJ6GEYJ562V	MGF CHIP	1/10W 5.6K
R3077	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R3081	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R3082	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R3083	ERJ6GEYJ271V	MGF CHIP	1/10W 270
R3084	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R3085	ERJ6GEYJ181V	MGF CHIP	1/10W 180
R3091	ERJ6GEYJ750V	MGF CHIP	1/10W 75
R3301	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R3302	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R3303	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R3304	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R3305	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R3306	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R3307	ERJ6GEYJ471V	MGF CHIP	1/10W 470
R3310	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R3312	ERJ6GEYJ563V	MGF CHIP	1/10W 56K
R3321	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R3325	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R3326	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R3329	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R3330	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R3331	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R3336	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R3338	ERJ6GEYJ153V	MGF CHIP	1/10W 15K
R3341	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R3346	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R3347	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R3352	ERDS2TJ151		150
R3354	ERJ6GEYJ682V	MGF CHIP	1/10W 6.8K
R3361	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R3362	ERJ6GEYJ332V	MGF CHIP	1/10W 3.3K
R3363	ERJ6GEYJ562V	MGF CHIP	1/10W 5.6K
R3365	ERJ6GEYJ152V	MGF CHIP	1/10W 1.5K
R3366	ERJ6GEYJ182V	MGF CHIP	1/10W 1.8K
R3369	ERJ6GEYJ104V	MGF CHIP	1/10W 100K
R3370	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R3372	ERJ6GEYJ152V	MGF CHIP	1/10W 1.5K
R3375	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R3377	ERJ6GEYJ182V	MGF CHIP	1/10W 1.8K
R3378	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R3379	ERJ6GEYJ272V	MGF CHIP	1/10W 2.7K
R3380	ERJ6GEYJ182V	MGF CHIP	1/10W 1.8K
R3381	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R3390	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R4001	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R4002	ERJ6GEYJ334V	MGF CHIP	1/10W 330K

Ref. No.	Part No.	Part Name	Remarks
R4003	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R4004	ERJ6GEYJ333V	MGF CHIP	1/10W 33K
R4005	ERJ6GEYJ225V	MGF CHIP	1/10W 2.2M
R4006	ERJ6GEYJ681V	MGF CHIP	1/10W 680
R4007	ERDS2TJ222		2.2K
R4008	ERJ6GEYJ273V	MGF CHIP	+ -2% 1/10W 27K
R4009	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R4010	ERDS2TJ473		47K
R4011	ERJ6GEYJ682V	MGF CHIP	1/10W 6.8K
R4012	ERJ6GEYJ682V	MGF CHIP	1/10W 6.8K
R4013	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R4014	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R4015	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R4018	ERJ6GEYJ682V	MGF CHIP	1/10W 6.8K
R4021	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R4030	ERJ6GEYJ393V	MGF CHIP	1/10W 39K
R4031	ERDS2TJ561		560
R4033	ERJ6GEYJ821V	MGF CHIP	1/10W 820
R4101	ERJ6GEYG563V	MGF CHIP	+ -2% 1/10W 56K
R4102	ERJ6GEYJ394V	MGF CHIP	1/10W 390K
R4103	ERJ6GEYJ153V	MGF CHIP	1/10W 15K
R4151	ERJ6GEYJ272V	MGF CHIP	1/10W 2.7K
R4152	ERDS2TJ221		220
R4153	ERJ6GEYJ823V	MGF CHIP	1/10W 82K
R4155	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R4156	ERDS2TJ271		270
R4157	ERJ6GEYJ563V	MGF CHIP	1/10W 56K
R4158	ERJ6GEYJ153V	MGF CHIP	1/10W 15K
R4159	ERDS2TJ100		10
R4160	ERJ6GEYJ271V	MGF CHIP	1/10W 270
	(C, B, C)		
	ERJ6GEYJ121V	MGF CHIP	1/10W 120
	(G, H)		
R4163	ERJ6GEYJ560V	MGF CHIP	1/10W 56
R4167	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R4171	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R4593	ERDS2TJ681		680
R4594	ERDS2TJ681		680
R4595	ERDS2TJ681		680
R4596	ERDS2TJ681		680
R5301	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R5302	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R5303	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R5304	ERJ6GEYJ393V	MGF CHIP	1/10W 39K
R5305	ERJ6GEYJ224V	MGF CHIP	1/10W 220K
R5306	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R5307	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R5308	ERJ6GEYJ393V	MGF CHIP	1/10W 39K
R5309	ERJ6GEYJ184V	MGF CHIP	1/10W 180K
R5311	ERJ6GEYJ331V	MGF CHIP	1/10W 330
R5312	ERJ6GEYJ331V	MGF CHIP	1/10W 330
R5313	ERJ6GEYJ331V	MGF CHIP	1/10W 330
R5314	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5315	ERDS2TJ101		100
R5316	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5317	ERDS2TJ101		100
R5318	ERJ6GEYJ272V	MGF CHIP	1/10W 2.7K
R5401	ERJ6GEYJ561V	MGF CHIP	1/10W 560
R5402	ERJ6GEYJ394V	MGF CHIP	1/10W 390K
R5403	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R5405	ERJ6GEYJ822V	MGF CHIP	1/10W 8.2K
R5406	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5501	ERJ6GEYJ271V	MGF CHIP	1/10W 270
R5502	ERJ6GEYJ394V	MGF CHIP	1/10W 390K
R5503	ERDS2TJ471		470
R5504	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5505	ERJ6ENF3241V	MGF CHIP	+ -1% 1/10W 3.24K ▲ AKEI
R5508	ERJ6GEYJ561V	MGF CHIP	1/10W 560
R5510	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5511	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R5512	ERJ6GEYJ151V	MGF CHIP	1/10W 150
R5513	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5601	ERJ6GEYJ562V	MGF CHIP	1/10W 5.6K
R5604	ERJ6GEYJ152V	MGF CHIP	1/10W 1.5K
R5610	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R5611	ERJ6GEYJ822V	MGF CHIP	1/10W 8.2K
R5612	ERJ6GEYJ822V	MGF CHIP	1/10W 8.2K
R5613	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K

Ref. No.	Part No.	Part Name	Remarks
R5901	ERQ12AJ270P	FUSE	1/2W 27 ▲
R5902	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R5931	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R5932	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5933	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R5951	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R5952	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R5953	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R5954	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R5955	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R5956	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R5957	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R6001	ERDS2TJ561		560
R6002	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6003	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6005	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6006	ERJ6GEYJ391V	MGF CHIP	1/10W 390
R6007	ERJ6GEYJ475V	MGF CHIP	1/10W 4.7M
R6008	ERJ6GEYJ182V	MGF CHIP	1/10W 1.8K
R6009	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6010	ERDS2TJ560		56
R6011	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6012	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6013	ERJ6GEYJ563V	MGF CHIP	1/10W 56K
R6014	ERJ6GEYJ563V	MGF CHIP	1/10W 56K
R6018	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6020	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6022	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6023	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6024	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6026	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R6027	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R6028	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6029	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R6032	ERJ6GEYJ272V	MGF CHIP	1/10W 2.7K
R6035	ERJ6GEYJ272V	MGF CHIP	1/10W 2.7K
R6037	ERDS2TJ102		1K
R6038	ERJ6GEYJ223V	MGF CHIP	1/10W 2.2K
R6041	ERDS2TJ223		22K
R6042	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R6043	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R6044	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6046	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6047	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6048	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6049	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6050	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6051	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R6052	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6054	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6056	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6057	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6061	ERDS2TJ103		10K
R6067	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6068	ERDS2TJ103		10K
R6069	ERDS2TJ103		10K
R6070	ERDS2TJ103		10K
R6074	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6078	ERJ6GEYJ104V	MGF CHIP	1/10W 100K
R6079	ERJ6GEYJ104V	MGF CHIP	1/10W 100K
R6082	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R6083	ERDS2TJ681		680
R6085	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R6086	ERDS2TJ332		3.3K
R6087	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6091	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6094	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6095	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6096	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6097	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6098	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6099	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6100	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6111	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R6113	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6116	ERDS2TJ561		560
R6118	ERJ6GEYJ563V	MGF CHIP	1/10W 56K
R6120	ERDS2TJ221		220

Ref. No.	Part No.	Part Name	Remarks
R6121	ERDS2TJ221		220
R6201	EVNCYAA03B15	VARIABLE	100K
R6202	ERJ6GEYJ104V	MGF CHIP	1/10W 100K
R6203	ERJ6GEYJ333V	MGF CHIP	1/10W 33K
R6204	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6205	ERJ6GEYJ243V	MGF CHIP	1/10W 24K
R6206	ERJ6GEYJ333V	MGF CHIP	1/10W 33K
R6207	ERJ6GEYJ223V	MGF CHIP	1/10W 22K
R6208	ERJ6GEYJ823V	MGF CHIP	1/10W 82K
R6209	ERJ6GEYJ224V	MGF CHIP	1/10W 220K
R6211	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R6212	ERJ6GEYJ332V	MGF CHIP	1/10W 3.3K
R6213	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R6214	ERJ6GEYJ394V	MGF CHIP	1/10W 390K
R6215	ERJ6GEYJ154V	MGF CHIP	1/10W 150K
R6216	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R6217	ERJ6GEY0R00V	MGF CHIP	1/10W 0 ●
R6218	ERJ6GEYJ184V	MGF CHIP	1/10W 180K
R6219	ERJ6GEYJ274V	MGF CHIP	1/10W 270K
R6220	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R6221	ERJ6GEYJ221V	MGF CHIP	1/10W 220
R6222	ERJ6GEYJ154V	MGF CHIP	1/10W 150K
R6223	ERJ6GEYJ392V	MGF CHIP	1/10W 3.9K
R6224	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6228	ERDS2TJ152		1.5K
R6229	ERJ6GEY0R00V	MGF CHIP	1/10W 0 ●
R6230	ERJ6GEYJ222V	MGF CHIP	1/10W 2.2K
R6301	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6302	ERJ6GEYJ153V	MGF CHIP	1/10W 15K
R6303	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6305	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6306	ERDS2TJ153		15K
R6307	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R6308	ERJ6GEYJ153V	MGF CHIP	1/10W 15K
R6310	ERDS2TJ471		470
R6311	ERDS2TJ471		470
R6312	ERDS2TJ471		470
R6313	ERDS2TJ471		470
		CAPACITORS	
C1001	ECKDRS103ZV	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VKSEKD103PZ	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VKSEMD103PZ	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VKSEVD103PZ	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VKSGKD103QZ	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VKSGMD103QZ	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VKSTKG103ZY	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VKSTMG103ZY	CERAMIC	+80%-20% 125V 0.01 ▲
	OR VCKSUKD103M	CERAMIC	+20% 125V 0.01 ▲
	OR VCKSUMD103MY	CERAMIC	+20% 125V 0.01 ▲
C1002	ECKDRS332MED	CERAMIC	+20% 125V 3300P ▲
	OR CKMR332MEY	CERAMIC	+20% 125V 3300P ▲
	OR VKSEKD332MY	CERAMIC	+20% 125V 3300P ▲
	OR VCKSEVD332MY	CERAMIC	+20% 125V 3300P ▲
	OR VKSTKG332MX	CERAMIC	+20% 125V 3300P ▲
	OR VKSTMG332MX	CERAMIC	+20% 125V 3300P ▲
	OR VCKSUD332MX	CERAMIC	+20% 125V 3300P ▲
	OR VCKSUMD332MX	CERAMIC	+20% 125V 3300P ▲
C1003	VCKSFKK102MX	CERAMIC	+20% 125V 1000P ▲
	OR VCKSFMK102MX	CERAMIC	+20% 125V 1000P ▲
	OR VCKSFVKK102MX	CERAMIC	+20% 125V 1000P ▲
	OR VCKSFK102MX	CERAMIC	+20% 125V 1000P ▲
C1004	ECEA2D820YE	ELECTROLYTIC	200V 82 ▲
	OR VCESR2D820XE	ELECTROLYTIC	200V 82 ▲
C1005	ECEA2DG4R7	ELECTROLYTIC	200V 4.7
C1006	ECKW2H221KB5	CERAMIC	500V 220P
C1007	VCYSBR104MX	CERAMIC	+20% 16V 0.1
C1009	ECQB1H103JF	POLYESTER	+5% 50V 0.01
C1010	ECQB1H103JF	POLYESTER	+5% 50V 0.01
C1011	ECEA1HU4R7	ELECTROLYTIC	50V 4.7
C1012	ECEA1PEE331	ELECTROLYTIC	18V 330
C1013	ECEA1PEE331	ELECTROLYTIC	18V 330
C1014	ECEA1HGE470	ELECTROLYTIC	50V 47
C1016	ECEA1PEE331	ELECTROLYTIC	18V 330
C1017	ECEA1PEE331	ELECTROLYTIC	18V 330
C1018	ECQB1H104P9	POLYESTER	+100%-0% 50V 0.1
C1021	ECEA1HKG010	ELECTROLYTIC	50V 1

Ref. No.	Part No.	Part Name			Remarks
C1025	ECKDRS221MB	CERAMIC	+ -20%	125V 220P	△
	OR ECKMRS221MBY	CERAMIC	+ -20%	125V 220P	△
	OR VCKSEJD221KW	CERAMIC		125V 220P	△
	OR VCKSELDD221KW	CERAMIC		125V 220P	△
	OR VCKSHJD221MW	CERAMIC	+ -20%	125V 220P	△
	OR VCKSHLD221MW	CERAMIC	+ -20%	125V 220P	△
	OR VCKSTJG221KW	CERAMIC		125V 220P	△
	OR VCKSTLG221KW	CERAMIC		125V 220P	△
	OR VCKSUJD221KW	CERAMIC		125V 220P	△
	OR VCKSULD221KW	CERAMIC		125V 220P	△
C1028	ECKDRS221MB	CERAMIC	+ -20%	125V 220P	△
	OR ECKMRS221MBY	CERAMIC	+ -20%	125V 220P	△
	OR VCKSEJD221KW	CERAMIC		125V 220P	△
	OR VCKSELDD221KW	CERAMIC		125V 220P	△
	OR VCKSHJD221MW	CERAMIC	+ -20%	125V 220P	△
	OR VCKSHLD221MW	CERAMIC	+ -20%	125V 220P	△
	OR VCKSTJG221KW	CERAMIC		125V 220P	△
	OR VCKSTLG221KW	CERAMIC		125V 220P	△
	OR VCKSUJD221KW	CERAMIC		125V 220P	△
	OR VCKSULD221KW	CERAMIC		125V 220P	△
C1030	VCYSBRE183KX	CERAMIC		25V 0.018	
C1051	ECEA1HUR47	ELECTROLYTIC		50V 0.47	
C1052	ECEA1CU100	ELECTROLYTIC		16V 10	
C3001	ECUV1H103KBN	C CHIP		50V 0.01	
C3006	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C3007	ECEA0JKS101	ELECTROLYTIC		6.3V 100	
C3008	ECUV1H181JCN	C CHIP	+ -5%	50V 180P	
C3009	ECEA1EKA4R7	ELECTROLYTIC		25V 4.7	
C3010	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3011	ECUV1H680JCN	C CHIP	+ -5%	50V 68P	
C3012	ECUV1H330JCN	C CHIP	+ -5%	50V 33P	
C3013	ECUV1C224ZFN	C CHIP	+80%-20%	16V 0.22	
C3015	ECEA0JKA470	ELECTROLYTIC		6.3V 47	
C3016	ECEA1CKS100	ELECTROLYTIC		16V 10	
C3019	ECEA1HKA2R2	ELECTROLYTIC		50V 2.2	
C3020	ECEA1CKA220	ELECTROLYTIC		16V 22	
C3021	ECEA1HKA2R2	ELECTROLYTIC		50V 2.2	
C3022	ECUV1C224ZFN	C CHIP	+80%-20%	16V 0.22	
C3023	ECUV1H680JCN	C CHIP	+ -5%	50V 68P	
C3024	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C3025	ECUV1C474ZFN	C CHIP	+80%-20%	16V 0.47	
C3026	ECUV1H822KBN	C CHIP		50V 8200P	
C3027	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3030	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3031	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C3032	ECUV1C474ZFN	C CHIP	+80%-20%	16V 0.47	
C3034	ECUV1H181JCN	C CHIP	+ -5%	50V 180P	
C3035	ECUV1H270JCN	C CHIP	+ -5%	50V 27P	
C3036	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C3038	ECEA1CKA100	ELECTROLYTIC		16V 10	
C3041	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3043	ECUV1H392KBN	C CHIP		50V 3900P	
C3044	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3045	ECEA1HKS3R3	ELECTROLYTIC		50V 3.3	
C3046	ECEA1HKS2R2	ELECTROLYTIC		50V 2.2	
C3047	ECEA0JKS101	ELECTROLYTIC		6.3V 100	
C3050	ECEA0JKS220	ELECTROLYTIC		6.3V 22	
C3053	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3055	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C3056	ECUV1C224ZFN	C CHIP	+80%-20%	16V 0.22	
C3057	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C3058	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3060	ECEA1CKA100	ELECTROLYTIC		16V 10	
C3081	ECUV1H102KBN	C CHIP		50V 1000P	
C3082	ECUV1H222KBN	C CHIP		50V 2200P	
C3083	ECUV1H561JCN	C CHIP	+ -5%	50V 560P	
C3084	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C3231	ECEA1HKA010	ELECTROLYTIC		50V 1	
C3232	ECUV1H102KBN	C CHIP		50V 1000P	
C3233	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3234	ECEA0JKS101	ELECTROLYTIC		6.3V 47	
C3235	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3236	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C3237	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3301	ECUV1H330JCN	C CHIP	+ -5%	50V 33P	
C3302	ECUV1H330JCN	C CHIP	+ -5%	50V 33P	
C3303	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C3304	ECEA0JKS470	ELECTROLYTIC		6.3V 47	

Ref. No.	Part No.	Part Name			Remarks
C3305	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3306	ECUV1H270JCN	C CHIP	+ -5%	50V 27P	
C3307	ECUV1H1000CN	C CHIP	+ -0.25P	50V 10P	
C3308	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3309	ECEA1HKS010	ELECTROLYTIC		50V 1	
C3310	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C3311	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C3312	ECUV1H102KBN	C CHIP		50V 1000P	
C3313	ECEA0JKS101	ELECTROLYTIC		6.3V 100	
C3314	ECEA1HKS2R2	ELECTROLYTIC		50V 2.2	
C3317	ECUV1H101JCN	C CHIP	+ -5%	50V 100P	
C3326	ECEA1HKS010	ELECTROLYTIC		50V 1	
C3335	ECEA1CKA101	ELECTROLYTIC		16V 100	
C3363	ECUV1H220JCN	C CHIP	+ -5%	50V 22P	
C4001	ECUV1E104KBN	C CHIP		25V 0.1	
C4002	ECEA1HKS010	ELECTROLYTIC		50V 1	
C4003	ECUV1H272KBN	C CHIP		50V 2700P	
C4004	ECUV1H103KBN	C CHIP		50V 0.01	
C4005	ECEA0JKS220	ELECTROLYTIC		6.3V 22	
C4006	ECUV1H102KBN	C CHIP		50V 1000P	
C4007	ECEA0JKS220	ELECTROLYTIC		6.3V 22	
C4008	ECEA0JKS470	ELECTROLYTIC		6.3V 47	
C4009	ECEA1CKA100	ELECTROLYTIC		16V 10	
C4010	ECUV1E333KBN	C CHIP		25V 0.033	
C4012	ECEA1HKA010	ELECTROLYTIC		50V 1	
C4013	ECEA0JKA470	ELECTROLYTIC		6.3V 47	
C4014	ECEA1HKS010	ELECTROLYTIC		50V 1	
C4015	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C4018	ECUV1H103KBN	C CHIP		50V 0.01	
C4030	ECUV1E333KBN	C CHIP		25V 0.033	
C4032	ECUV1H103KBN	C CHIP		50V 0.01	
C4033	ECEA1HKS010	ELECTROLYTIC		50V 1	
C4102	ECHS1562JZ3	POLYESTER	+ -5%	100V 5600P	
C4103	ECUV1H103KBN	C CHIP		50V 0.01	
C4104	ECUV1H103KBN	C CHIP		50V 0.01	
C4105	ECEA1CKA220	ELECTROLYTIC		16V 22	
C4151	ECEA1CKA100	ELECTROLYTIC		16V 10	
C4152	ECEA1CKA470	ELECTROLYTIC		16V 47	
C4153	ECUV1H222KBN	C CHIP		50V 2200P	
C4154	ECEA1EKA4R7	ELECTROLYTIC		25V 4.7	
C4155	ECEA1EKA4R7	ELECTROLYTIC		25V 4.7	
C4156	ECA1EM471B	ELECTROLYTIC		25V 470	
C4157	ECUV1E273KBN	C CHIP		25V 0.027	
C4158	ECUV1E473ZFN	C CHIP	+80%-20%	25V 0.047	
C4159	ECEA1CKA100	ELECTROLYTIC		16V 10	
C4160	ECA1CM471B	ELECTROLYTIC		16V 470	
	(C, G,)				
	ECA1CM101B	ELECTROLYTIC		16V 100	
	(G, H)				
C4161	ECUV1E473KBN	C CHIP		25V 0.047	
C4163	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C4164	ECUV1H103ZFN	C CHIP		50V 0.01	
C4166	ECA1EM221B	ELECTROLYTIC		25V 220	
C4171	ECEA1HKA010	ELECTROLYTIC		50V 1	
C5301	ECEA1CKA100	ELECTROLYTIC		16V 10	
C5302	ECEA1EKA4R7	ELECTROLYTIC		25V 4.7	
C5303	ECEA1HKAR33	ELECTROLYTIC		50V 0.33	
C5305	ECEA1HKAR47	ELECTROLYTIC		50V 0.47	
C5306	ECEA1CKA100	ELECTROLYTIC		16V 10	
C5307	ECEA1CKN100	ELECTROLYTIC		16V 10	
C5308	ECEA1CKN100	ELECTROLYTIC		16V 10	
C5401	ECEA1HKNR22	ELECTROLYTIC		50V 0.22	
C5402	ECUV1H222KBN	C CHIP		50V 2200P	
C5403	ECEA1HKA2R2	ELECTROLYTIC		50V 2.2	
C5501	ECUV1E183KBN	C CHIP		25V 0.018	
C5502	ECUV1H471KBN	C CHIP		50V 470P	
C5505	ECEA1CKA470	ELECTROLYTIC		16V 47	
C5506	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C5507	ECEA1CKA100	ELECTROLYTIC		16V 10	
C5508	ECUV1H221JSN	C CHIP	+ -5%	50V 220P	
C5510	ECEA1HKA010	ELECTROLYTIC		50V 1	
C5511	ECUV1E333KBN	C CHIP		25V 0.033	
C5516	ECUV1E333KBN	C CHIP		25V 0.033	
C5601	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C5602	ECUV1E104KBN	C CHIP		25V 0.1	
C5603	ECUV1H150JCN	C CHIP	+ -5%	50V 15P	
C5604	ECEA1HKA010	ELECTROLYTIC		50V 1	
C5605	ECUV1H153KBN	C CHIP		50V 0.015	

Ref. No.	Part No.	Part Name			Remarks
C5606	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C5607	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C5901	ECEA1CKA470	ELECTROLYTIC	16V	47	
C5902	ECEA1CKA470	ELECTROLYTIC	16V	47	
C5903	ECEA1CKA470	ELECTROLYTIC	16V	47	
C5904	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C5905	ECEA0JKA101	ELECTROLYTIC	6.3V	100	
C5906	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C5931	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C5932	ECUV1H103ZFN	C CHIP	+80%-20%	50V 0.01	
C5951	ECA1CM221	ELECTROLYTIC	16V	220	
C6001	ECEA0JU471	ELECTROLYTIC	6.3V	470	
C6005	ECEA0JKA101	ELECTROLYTIC	6.3V	100	
C6006	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C6007	ECUV1H101JCN	C CHIP	+-5%	50V 100P	
C6008	ECUV1H101JCN	C CHIP	+-5%	50V 100P	
C6009	ECUV1H101JCN	C CHIP	+-5%	50V 100P	
C6011	ECUV1H101JCN	C CHIP	+-5%	50V 100P	
C6012	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C6013	ECUV1E104KBN	C CHIP	25V	0.1	
C6014	ECUV1H150GCN	C CHIP	+-2%	50V 15P	
C6015	ECUV1H120JCN	C CHIP	+-5%	50V 12P	
C6016	ECUV1H010CCN	C CHIP	+-0.25P	50V 1	
C6017	ECEA0JKS470	ELECTROLYTIC	6.3V	47	
C6018	ECUV1H102KBN	C CHIP	50V	1000P	
C6020	ECUV1H101JCN	C CHIP	+-5%	50V 100P	
C6021	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C6023	ECUV1H102KBN	C CHIP	50V	1000P	
C6024	ECUV1H102KBN	C CHIP	50V	1000P	
C6036	ECUV1E104ZFN	C CHIP	+80%-20%	25V 0.1	
C6201	ECEA0JKA470	ELECTROLYTIC	6.3V	47	
C6202	ECEA0JKA330	ELECTROLYTIC	6.3V	33	
C6203	ECUV1H103KBN	C CHIP	50V	0.01	
C6204	ECUV1H103KBN	C CHIP	50V	0.01	
C6205	ECUV1H102KBN	C CHIP	50V	1000P	
C6206	ECUV1H103KBN	C CHIP	50V	0.01	
C6207	ECQ81H393KF	POLYESTER	50V	0.039	
C6208	ECEA1HKA010	ELECTROLYTIC	50V	1	
C6209	ECEA1KS100	ELECTROLYTIC	16V	10	
C6211	ECUV1H272KBN	C CHIP	50V	2700P	
C6212	ECUV1E104KBN	C CHIP	25V	0.1	
C6213	ECUV1H151KN	C CHIP	50V	150P	
C6214	ECUV1H102KBN	C CHIP	50V	1000P	
C6217	ECUV1E104KBN	C CHIP	25V	0.1	
C6218	ECEA1CKA100	ELECTROLYTIC	16V	10	
C6221	ECEA0JKA220	ELECTROLYTIC	6.3V	22	
C6222	ECUV1H272KBN	C CHIP	50V	2700P	
C6223	ECUV1H103KBN	C CHIP	50V	0.01	
C6224	ECEA0JKA101	ELECTROLYTIC	6.3V	100	
C6225	ERJ6GEY0R00V	MGF CHIP	1/10W	0	●
C6228	VCYSBRC104MX	CERAMIC	+-20%	16V 0.1	
C6231	ECEA1CKA100	ELECTROLYTIC	16V	10	
FILTERS					
FL4001	VLFS0014				
COILS					
L1001	ELF15N005A	HIGH PASS FILTER	0.5A	18M	▲
	OR ELF18D290A	HIGH PASS FILTER	0.5A	18M	▲
	OR LLN23012A	HIGH PASS FILTER	0.5A	18M	▲
	OR VLQS0157	HIGH PASS FILTER	0.5A	18M	▲
	OR VLQS0166	HIGH PASS FILTER	0.5A	18M	▲
	OR VLQS0167	HIGH PASS FILTER	0.5A	18M	▲
	OR VLQS0168	HIGH PASS FILTER	0.5A	18M	▲
L1002	VLQSW07D220M		+-20%	22	
L1003	VLQSW07D9R0M		+-20%	9	
L1006	VLPS0005A			22	
L3001	VLQSH02R680K			68	
L3002	ELESN101KA			100	
L3004	VLQSH02R220K			22	
L3005	VLQSH02R390K			39	
L3010	ELESN470KA			47	
L3231	ELESN221KA			220	
L3301	VLQSH02R5R6J		+-5%	5.6	AKEI
L3302	ELESN101KA			100	
L4002	VLQSH02R101K			100	

Ref. No.	Part No.	Part Name			Remarks
L4004	VLQSH02R220K				22
	(B,C)				
	VLQSH02R100K				10
	(G,H)				
L4005	VLQSU06R153K				15M
L4101	ELESN471KA				470
L5901	ELESN101KA				100
CRYSTAL OSCILLATOR					
X3301	VSX50207				AKEI
X5501	CSB503F38				
X5601	VSXS0208-B				
X6001	VSX50784				
PIN HEADERS					
P1002	VJPS0303	CONNECTOR 3P			
P1201	VJPS0765	CONNECTOR PLUG 7P			AKEI
P1202	VJPS0768	CONNECTOR PLUG 19P			AKEI
P1203	VJPS0767	CONNECTOR PLUG 13P			AKEI
P3003	VJPS0882	CONNECTOR 12P			
P4001	VJSS0888	FE CONNECTOR 2P			
P4591	VJPS0268	CONNECTOR 2P			
P6002	VJPS0881	CONNECTOR 8P			
P6201	VJPS0883	CONNECTOR 14P			
SWITCHES					
SW6001	VSH50058	LEAF SWITCH-SAFETY TAB			
SW6002	VSSS0159	MODE SELECT SWITCH			
SW6301	EVQ21405R	PUSH SWITCH			
SW6302	EVQ21405R	PUSH SWITCH			
SW6303	EVQPAD09K	CASSETTE DOWN SWITCH			
	(B,C)				
SW6304	EVQ21405R	PUSH SWITCH			
SW6305	EVQ21405R	PUSH SWITCH			
SW6307	EVQ21405R	PUSH SWITCH			
SW6308	EVQ21405R	PUSH SWITCH			
SW6309	EVQ21405R	PUSH SWITCH			
SW6310	EVQ21405R	PUSH SWITCH			
SW6311	EVQ21405R	PUSH SWITCH			
	(B,C)				
SW6312	EVQ21405R	PUSH SWITCH			
SW6313	EVQ21405R	PUSH SWITCH			
	(G,H)				
SW6315	EVQPB005K	PUSH SWITCH			
	(G,H)				
FUSE & PROTECTOR					
F1001	VFS50003A16	FUSE	125V	1.6A	▲
	OR VFS0012A16	FUSE	125V	1.6A	▲
	OR VFS0028A16	FUSE	125V	1.6A	▲
	OR XBA1C16NU100	FUSE	125V	1.6A	▲
PR1001	ICP-F38-1	IC PROTECTOR	1.5A	▲	
	OR UN10015	IC PROTECTOR	1.5A	▲	
	OR VSFS0029D25	IC PROTECTOR	1.5A	▲	
PR1050	ICP-F38-1	IC PROTECTOR	1.5A	▲	
	OR UN10015	IC PROTECTOR	1.5A	▲	
	OR VSFS0029D25	IC PROTECTOR	1.5A	▲	
PR1054	ICP-F25-1	IC PROTECTOR	1A	▲	
	OR UN11010	IC PROTECTOR	1A	▲	
TRANSFORMER					
T1001	ETS28AD1F5AC				▲
	OR VTPS0034				▲
	OR VTPS0038				▲
	OR VTPS0040				▲
T4101	VLTS0304				

(E23, E25, E27, E30, E32, E33)

Ref. No.	Part No.	Part Name	Remarks
MISCELLANEOUS			
JK4551	LJP28009A	FRONT A/V JACK SOCKET	AKEI
JK4591	LJP28006A	EARPHONE JACK SOCKET	AKEI
E23	VJS53325	FUSE HOLDER	AKEI
E25	LMH29002A	LED HOLDER	AKEI (B, C)
E25	LMH29001A	LED HOLDER	AKEI (G, H)
E27	PNA4617M00HC	INFRARED RECEIVER UNIT	
E30	VMT50035	CUSHION	
E32	VMD50038	LED SPACER	
E33	VMX50583	LED SPACER	
TV STEREO C.B.A. ▲			
(I)			
INTEGRATED CIRCUITS			
IC4901	VCRS0214	HIC MTS/SAP AUDIO PROCESS	
IC9201	AN7420	IC, LINEAR FM SIGNAL PROCESS	
IC9202	UPC4570C	IC, LINEAR OP AMP	
IC9301	TC4053BP	IC, LOGIC SWITCHING	E.S.D. AKEI
IC9302	TC4053BP	IC, LOGIC SWITCHING	E.S.D. AKEI
TRANSISTORS			
Q4306	ZSA733(TP)		AKEI
Q9201	DTA144ES		
Q9301	ZSC945A(TP)		AKEI
Q9302	ZSC945A(TP)		AKEI
DIODES			
D4302	MA165		
D4304	MA165		
D4305	MA165		
D4306	MA165		
RESISTORS			
R4301	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R4302	ERJ6GEYJ101V	MGF CHIP	1/10W 100
R4324	ERJ6GEYJ124V	MGF CHIP	1/10W 120K
R4325	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R4326	ERJ6GEYJ124V	MGF CHIP	1/10W 120K
R4327	ERJ6GEYJ182V	MGF CHIP	1/10W 1.8K
R4901	EVNDCAA03B14	VARIABLE	10K
R4904	ERJ6GEYR00V	MGF CHIP	1/10W 0 ●
R9201	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R9202	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R9203	ERJ6GEYJ102V	MGF CHIP	1/10W 1K
R9204	ERJ6GEYJ224V	MGF CHIP	1/10W 220K
R9205	ERJ6GEYJ332V	MGF CHIP	1/10W 3.3K
R9206	EVMF6SA00853	VARIABLE	5K
R9207	ERJ6GEYJ332V	MGF CHIP	1/10W 3.3K
R9211	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R9216	ERJ6GEYJ183V	MGF CHIP	1/10W 18K
R9217	ERJ6GEYJ183V	MGF CHIP	1/10W 18K
R9218	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R9219	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R9220	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R9221	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R9301	ERJ6GEYJ104V	MGF CHIP	1/10W 100K
R9302	ERJ6GEYJ104V	MGF CHIP	1/10W 100K
R9303	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R9304	ERJ6GEYJ104V	MGF CHIP	1/10W 100K
R9305	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R9306	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R9307	ERJ6GEYJ104V	MGF CHIP	1/10W 100K
R9308	ERJ6GEYJ472V	MGF CHIP	1/10W 4.7K
R9309	ERDS2TJ221		220
R9310	ERDS2TJ221		220
R9311	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R9312	ERJ6GEYJ473V	MGF CHIP	1/10W 47K

(E39)

Ref. No.	Part No.	Part Name	Remarks
R9313	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R9314	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R9316	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R9317	ERJ6GEYJ473V	MGF CHIP	1/10W 47K
R9318	ERJ6GEYJ393V	MGF CHIP	1/10W 39K
R9319	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R9320	ERJ6GEYJ103V	MGF CHIP	1/10W 10K
R9324	ERJ6GEYJ333V	MGF CHIP	1/10W 33K
R9326	ERJ6GEYJ333V	MGF CHIP	1/10W 33K
R9327	ERDS2TJ221		220
CAPACITORS			
C4301	ECEA1HKA010	ELECTROLYTIC	50V 1
C4302	ECEA1HKA010	ELECTROLYTIC	50V 1
C4316	ECEA1HKA2R2	ELECTROLYTIC	50V 2.2
C4318	ECEA1CKA101	ELECTROLYTIC	16V 100
C4901	ECEA1CKA470	ELECTROLYTIC	16V 47
C9201	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
C9202	ECEA0JKA470	ELECTROLYTIC	6.3V 47
C9203	ECEA1CKA100	ELECTROLYTIC	16V 10
C9204	ECQB1H102JF	POLYESTER	+5% 50V 1000P
C9205	ECEA1HKA010	ELECTROLYTIC	50V 1
C9206	ECEA1HKA3R3	ELECTROLYTIC	50V 3.3
C9207	ECEA1HKA010	ELECTROLYTIC	50V 1
C9208	ECUV1H223KBN	C CHIP	50V 0.022
C9209	ECUV1H223KBN	C CHIP	50V 0.022
C9210	ECEA1EKA4R7	ELECTROLYTIC	25V 4.7
C9211	ECEA1EKA4R7	ELECTROLYTIC	25V 4.7
C9218	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
C9219	ECEA0JKA470	ELECTROLYTIC	6.3V 47
C9220	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
C9221	ECEA0JKA470	ELECTROLYTIC	6.3V 47
C9301	ECEA1HKA010	ELECTROLYTIC	50V 1
C9302	ECEA1HKA010	ELECTROLYTIC	50V 1
C9303	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
C9305	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
C9307	ECEA1HKA010	ELECTROLYTIC	50V 1
C9308	ECEA1HKA010	ELECTROLYTIC	50V 1
C9310	ECEA1CKA470	ELECTROLYTIC	16V 47
C9311	ECEA1HKA010	ELECTROLYTIC	50V 1
C9312	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
C9313	ECEA1HKA010	ELECTROLYTIC	50V 1
C9314	ECEA1HKA010	ELECTROLYTIC	50V 1
C9315	ECEA0JKA470	ELECTROLYTIC	6.3V 47
C9316	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
C9317	ECEA1HKA010	ELECTROLYTIC	50V 1
C9318	ECEA1HKA010	ELECTROLYTIC	50V 1
C9319	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
C9320	ECEA0JKA470	ELECTROLYTIC	6.3V 47
COILS			
L9201	ELESN101KA		100
L9204	ELESN101KA		100
PIN HEADERS			
P4201	VJHS0298	PACK PIN 8P	
P4202	VJHS0295	PACK PIN 5P	
P4203	VJHS0298	PACK PIN 8P	
P4204	VJHS0298	PACK PIN 8P	
P4301	VJPS0286	CONNECTOR 7P	
MISCELLANEOUS			
E39	VMAS1912	P.C.B. SUPPORT ANGLE	

Ref. No.	Part No.	Part Name	Remarks		Ref. No.	Part No.	Part Name	Remarks
		HEAD AMP C.B.A.	■				CAPACITORS	
		(A,B,C,F,G,H)			C2604	ECUV1E104KBN	C CHIP	25V 0.1
					C2605	ECUV1E104KBN	C CHIP	25V 0.1
					C2606	ECUV1E104KBN	C CHIP	25V 0.1
					C2607	ECUV1E104KBN	C CHIP	25V 0.1
					C2608	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C2609	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C2610	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
					C2611	ECUV1E333KBN	C CHIP	25V 0.033
					C2612	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C2613	ECEA1EKA4R7	ELECTROLYTIC	25V 4.7
					C2614	ECEA1EKA4R7	ELECTROLYTIC	25V 4.7
					C2615	ECEA1EKA4R7	ELECTROLYTIC	25V 4.7
					C3504	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
					C3505	ECEA1CKA470	ELECTROLYTIC	16V 47
					C3506	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C3507	ECUV1H103KBN	C CHIP	50V 0.01
					C3508	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C3511	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C3512	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C3513	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C3519	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C3520	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C3524	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C3525	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C3528	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C3529	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
					C3532	ECUV1E104ZFN	C CHIP	+80%-20% 25V 0.1
					C3533	ECUV1H103ZFN	C CHIP	+80%-20% 50V 0.01
							COILS	
L3501	ELESN101KA				L3501	ELESN101KA		100
							PIN HEADERS	
P3501	VJSS0885	CONNECTOR 15P			P3501	VJSS0885	CONNECTOR 15P	
							JUNCTION C.B.A.	■
							RESISTORS	
R2531	ERDS2TJ270				R2531	ERDS2TJ270		27
							CAPACITORS	
					C2531	ECEA1CKA100	ELECTROLYTIC	16V 10
					C2532	ECEA1CKA100	ELECTROLYTIC	16V 10
					C2533	ECEA1CKA100	ELECTROLYTIC	16V 10
							PIN HEADERS	
P2531	VJSS0884	CONNECTOR 14P			P2531	VJSS0884	CONNECTOR 14P	
							STEREO AMP C.B.A.	■
							(I)	
							INTEGRATED CIRCUITS	
IC4601	AN5265	IC, LINEAR AUDIO AMP			IC4601	AN5265	IC, LINEAR AUDIO AMP	
IC4602	AN5265	IC, LINEAR AUDIO AMP			IC4602	AN5265	IC, LINEAR AUDIO AMP	
							TRANSISTORS	
Q4601	ZSC945A(TP)				Q4601	ZSC945A(TP)		AKEI
Q4602	ZSC945A(TP)				Q4602	ZSC945A(TP)		AKEI
							DIODES	
D4602	MA4120-M	ZENER	12V		D4602	MA4120-M	ZENER	12V
D4603	MA4056-M	ZENER	5.6V		D4603	MA4056-M	ZENER	5.6V
D4604	MA165				D4604	MA165		
D4605	MA165				D4605	MA165		

Ref. No.	Part No.	Part Name	Remarks
RESISTORS			
R4602	ERDS2TJ102	1K	
R4603	ERDS2TJ102	1K	
R4604	ERDS2TJ683	68K	
R4605	ERDS2TJ221	220	
R4606	ERDS2TJ561	560	
R4608	ERDS2TJ823	82K	
R4609	ERDS2TJ471	470	
R4611	ERDS2TJ561	560	
R4613	ERDS2TJ103	10K	
R4614	ERDS2TJ103	10K	
R4615	ERDS2TJ100	10	
R4616	ERDS2TJ221	220	
R4617	ERQ1ABJP8R2S	FUSE 1W 8.2 Δ	
R4618	ERDS2TJ823	82K	
R4619	ERDS2TJ103	10K	
R4620	ERDS2TJ471	470	
R4621	ERQ1ABJP8R2S	FUSE 1W 8.2 Δ	
R4623	ERDS2TJ103	10K	
R4624	ERDS2TJ100	10	
R4626	ERDS2TJ331	330	
R4628	ERDS2TJ471	470	
R4629	ERDS2TJ471	470	
R4630	ERDS2TJ102	1K	
R4631	ERDS2TJ103	10K	
CAPACITORS			
C4601	ECA1CM220B	ELECTROLYTIC 16V 22	
C4602	ECA1CM470B	ELECTROLYTIC 16V 47	
C4603	ECA1CM100B	ELECTROLYTIC 16V 10	
C4604	ECA1HM4R7B	ELECTROLYTIC 50V 4.7	AKEI
C4605	ECA1HM4R7B	ELECTROLYTIC 50V 4.7	AKEI
C4606	ECA1EM471B	ELECTROLYTIC 25V 470	
C4607	VCYSBRE103KX	CERAMIC 25V 0.01	AKEI
C4608	ECA1CM100B	ELECTROLYTIC 16V 10	
C4609	ECA1CM101B	ELECTROLITIC 16V 100	
C4610	VCYSBRE473KX	CERAMIC 25V 0.047	AKEI
C4611	ECA1CM470B	ELECTROLYTIC 16V 47	
C4612	ECA1CM100B	ELECTROLYTIC 16V 10	
C4613	ECA1HM4R7B	ELECTROLYTIC 50V 4.7	AKEI
C4614	VCYSBRE103KX	CERAMIC 25V 0.01	AKEI
C4615	ECA1CM100B	ELECTROLYTIC 16V 10	
C4616	ECA1EM471B	ELECTROLYTIC 25V 470	
C4617	ECA1CM101B	ELECTROLITIC 16V 100	
C4618	VCYSBRE473KX	CERAMIC 25V 0.047	AKEI
C4624	ECQB1H473KF	POLYESTER 50V 0.047	
C4625	ECQB1H473KF	POLYESTER 50V 0.047	
PIN HEADERS			
P4601	VEKS5535	P4601 CONNECTOR ASS'Y	
P4602	VEKS5536	P4602 CONNECTOR ASS'Y	
P4604	VJPS0268	CONNECTOR 2P	
P4605	VJPS0268	CONNECTOR 2P	
MISCELLANEOUS			
E40	VMXS0876	P.C.B. SPACER A	AKEI
TV MAIN C.B.A. ■			
INTEGRATED CIRCUITS			
IC451	LA7837	IC, LINEAR VERTICAL OUT	
IC801	STR30130	IC, LINEAR +130V REGULATOR Δ	
TRANSISTORS			
Q431	2SA733(TQ)		AKEI
Q501	2SC1473-QNC (A,B,C,D,E)		
	2SC2653H-CL (F,G,H,I)		
Q505	2SA733(TQ)		AKEI
Q506	2SA733(TQ)		AKEI

Ref. No.	Part No.	Part Name	Remarks
Q507	ZSC945A(TQ)		
Q541	2SA733(TQ)		AKEI
Q551	2SD2499LBMA (A,B,C,D,E)	Δ	AKEI
	2SD1555LBMTV	Δ	
	OR 2SD2499LBMA (F,G,H,I)	Δ	AKEI
Q571	ZSC945A(TQ)		
Q801	2SD636(Q,R,S)		
DIODES			
D401	ERB12-01V		
D503	ERB43-04V		
D504	MA4082-M	ZENER 8.2V	
D507	MA4200-H	ZENER 20V	
D508	MA165		
D541	MA165		
D553	ERB43-04V		
D554	MA167		
D558	ERB43-04V		
D560	ERB43-04V		
D580	MA167 (A,B,C,D,E)		
	MA185 (F,G,H,I)		
D581	ERB44-04V (F,G,H,I)		
D582	RH2FV (F,G,H,I)		
D801	EM02BMV	Δ	AKEI
	OR ERC13-08V	Δ	
D802	EM02BMV	Δ	AKEI
	OR ERC13-08V	Δ	
D803	EM02BMV	Δ	AKEI
	OR ERC13-08V	Δ	
D804	EM02BMV	Δ	AKEI
	OR ERC13-08V	Δ	
D805	MA165		
D806	MA167		
D851	ERPZ5B0M050F	THERMISTOR	Δ
	OR VRPSZC5JM050	THERMISTER	Δ
	OR VRPSZ5JM050	THERMISTOR	Δ
	OR VRPSZ5JM050	THERMISTOR	Δ
	(A,B,C,D,E)		AKEI
	ERPF5B0M050K	THERMISTOR	Δ
	OR TRPF5B0M050K	THERMISTOR	Δ
	OR VRPSKF5JM050	THERMISTOR	Δ
	(F,G,H,I)		AKEI
RESISTORS			
R401	ERDS2TJ391 (A,B,C,D,E)		390
	ERDS2TJ151 (F,I)		150
	ERDS2TJ330 (G,H)		33
R402	ERDS2TJ183 (A,B,C,D,E)		18K
	ERDS2TJ153 (F,I)		15K
	ERDS2TJ332 (G,H)		3.3K
R405	ERG1S1J102P	METAL OXIDE 1W 1K	
R406	ERDS2TJ334		330K
R409	ERDS2TJ273 (A,B,C,D,E)		27K
	ERDS2TJ333 (F,I)		33K
	ERDS2TJ223 (G,H)		22K
R410	ERDS2TJ473 (A,B,C,D,E)		47K
	ERDS2TJ153 (F,I)		15K
	ERDS2TJ123 (G,H)		12K

Ref. No.	Part No.	Part Name	Remarks
R411	ERDS2TJ123	12K	
	(A,B,C,D,E,G,H)		
	ERDS2TJ393	39K	
	(F,I)		
R413	ERDS2TJ123	12K	
	(A,B,C,D,E)		
	ERDS2TJ273	27K	
	(F,I)		
	ERDS2TJ393	39K	
	(G,H)		
R414	ERD25FJ2R2P	2.2 ▲	
	(A,B,C,D,E,G,H)		
	ERD25FJ1R2P	1.2 ▲	
	(F,I)		
R422	ERDS2TJ331	330	
R427	ERD25FJ1R5P	1.5 ▲	
	(A,B,C,D,E)		
	ERD25FJ5R6P	5.6 ▲	
	(F,I)		
	ERD25FJ1R8P	1.8 ▲	
	(G,H)		
R431	ERDS2TJ103	10K	
R432	ERDS2TJ472	4.7K	
	(A,B,C,D,E,G,H)		
	ERDS2TJ123	12K	
	(F,I)		
R433	ERDS2TJ332	3.3K	
	(A,B,C,D,E)		
	ERDS2TJ123	12K	
	(F,I)		
	ERDS2TJ472	4.7K	
	(G,H)		
R434	ERDS2TJ103	10K	
R435	ERDS2TJ102	1K	
R466	ERDS2TJ683	68K	
R468	ERDS2TJ102	1K	
R470	ERDS2TJ272	2.7K	
	(A,B,C,D,E,F,I)		
R501	ERDS2TJ681	680	
R502	ERDS2TJ332	3.3K	
R503	ER0S2TKF8661	METAL FILM +-1%	8.66K ▲
	OR VRESR4TF8661	METAL FILM +-1%	8.66K ▲
R506	ERDS2TJ562	5.6K	
R507	ERDS2TJ472	4.7K	
R509	ERDS2TJ101	100	
R511	ERG2SJ392H	METAL OXIDE	2W 3.9K
	(F,G,H,I)		
R512	ERDS2TJ102	1K	
R516	ERG3ANJ472H	METAL OXIDE	3W 4.7K
	(A,B,C,D,E)		
	ERG3ANJ332H	METAL OXIDE	3W 3.3K
	(F,G,H,I)		
R518	ERG3ANJ472H	METAL OXIDE	3W 4.7K
	(A,B,C,D,E)		
R519	ERDS2TJ472	4.7K	
R521	ERDS2TJ101	100	
R522	ERDS2TJ103	10K	
R523	ERDS2TJ333	33K	
R524	ERDS2TJ223	22K	
R525	ERDS2TJ822	8.2K	
R526	ERDS2TJ155	1.5M	
R528	ERDS2TJ272	2.7K	
R532	ERQ1CJP102S	FUSE	1W 1K ▲
	(F,G,H,I)		
R541	ERDS2TJ473	47K	
R542	ERDS2TJ103	10K	
R543	ERDS2TJ472	4.7K	
R544	ERDS2TJ103	10K	
R552	ERDS2TJ273	27K	
R553	ERDS2TJ102	1K	
R554	ERDS2TJ103	10K	
	(A,B,C,D,E)		
	ERDS2TJ123	12K	
	(F,G,H,I)		
R555	ERDS2TJ124	120K	
	(A,B,C,D,E)		
	ERDS2TJ823	82K	
	(F,G,H,I)		

Ref. No.	Part No.	Part Name	Remarks
R556	ERDS2TJ104		100K
	(A,B,C,D,E)		
	ERDS2TJ823		82K
	(F,G,H,I)		
R558	ERG2ANJ471H	METAL OXIDE	2W 470
	(A,B,C,D,E)		
	ERG2ANJ561H	METAL OXIDE	2W 560
	(F,G,H,I)		
R559	ERDS2TJ123		12K
	(F,G,H,I)		
R561	ERQ1CJP102S	FUSE	1W 1 ▲
	(A,B,C,D,E)		
	ERQ2CJP102S	FUSE	2W 1.0 ▲
	(F,I)		
	ERQ2CJP2R2S	FUSE	2W 2.2 ▲
	(G,H)		
R571	ERDS2TJ101		100
R572	ERDS2TJ222		2.2K
R573	ERDS2TJ100		10
R574	ERDS2TJ272		2.7K
R575	ERDS2TJ331		330
R580	ERG2SJ471H	METAL OXIDE	2W 470
	(A,B,C,D,E)		
	ERG2SJ331H	METAL OXIDE	2W 330
	(F,G,H,I)		
R7002	ERDS2TJ271		270
R7030	ERDS2TJ182		1.8K
R7031	ERDS2TJ182		1.8K
R7032	ERDS2TJ182		1.8K
R801	ERF3AKR82	W FLMPRF	+ -10% 3W 0.82 ▲
	OR KRF3AKR82	W FLMPRF	+ -10% 3W 0.82 ▲
	OR LAR03R82K02	W FLMPRF	+ -10% 3W 0.82 ▲
	OR LAR03R82K05	W FLMPRF	+ -10% 3W 0.82 ▲
R802	ERDS1FJ103P		1/2W 10K ▲
	OR ERDS1FPJ103V		1/2W 10K ▲
	(A,B,C,D,E)		
	ERDS1FPJ103		1/2W 10K ▲
	OR ERDS1FPJ103V		1/2W 10K ▲
	(F,G,H,I)		
R803	ERQ2ABJPSR6S	FUSE	2W 5.6 ▲
	(A,B,C,D,E)		
	ERQ3CJSR6H	FUSE	3W 5.6 ▲
	(F,G,H,I)		
R804	LAR10331J01	W FLMPRF	10W 330
	(A,B,C,D,E)		
	ERF15ZJ181	W FLMPRF	15W 180
	(F,I)		
	ERF15ZJ201		200
	(G,H)		
R805	ERDS2TJ104		100K
R806	ERQ1AJ470P	FUSE	47 ▲
R810	ERDS2TJ222		2.2K
R811	ERDS2TJ103		10K
R812	VRESC2TK825C	SOLID	+ -10% 1/2W 8.2M ▲
	OR VRESC2TK825T	SOLID	+ -10% 1/2W 8.2M ▲
R813	ERDS2TJ124		120K
			CAPACITORS
C401	ECEA1HGE2R2	ELECTROLYTIC	50V 2.2
C402	ECEA1CU471	ELECTROLYTIC	16V 470
C408	ECA1HGE010KB	ELECTROLYTIC	50V 1
	(A,B,C,D,E)		
	ECA1HGE2R2KB	ELECTROLYTIC	50V 2.2
	(F,G,H,I)		AKEI
C409	ECA1VM101B	ELECTROLYTIC	35V 100
C413	ECQB1H104KF	POLYESTER	50V 0.1
C414	ECEA1CU222	ELECTROLYTIC	16V 2200
C418	ECA1VM221B	ELECTROLYTIC	35V 220
C458	ECQB1H103KF	POLYESTER	50V 0.01
C510	ECKW1H821KB5	CERAMIC	500V 820P
	(A,B,C,D,E)		
	ECKW2H681KB5	CERAMIC	500V 680P
	(F,G,H,I)		
C513	ECA1HM100B	ELECTROLYTIC	50V 10
C516	ECKW1H103ZF5	CERAMIC	+80%-20% 50V 0.01
C520	ECKW1H103ZF5	CERAMIC	+80%-20% 50V 0.01
C521	ECA1HM100B	ELECTROLYTIC	50V 10

Ref. No.	Part No.	Part Name		Remarks
C523	ECA1HM010B	ELECTROLYTIC	50V 1	
C524	ECKC3D681KBN	CERAMIC	2KV 680P	△
	OR ECKC3D681KBP	CERAMIC	2KV 680P	△
(C, B, C)				
	ECKC3D122KBN	CERAMIC	2KV 1200P	△
	OR ECKC3D122KBP	CERAMIC	2KV 1200P	△
(C, F, I)				
	ECKC3D102KBN	CERAMIC	2KV 1000P	△
	OR ECKC3D102KBP	CERAMIC	2KV 1000P	△
	OR ECKC3D102KBR	CERAMIC	2KV 1000P	△
(G, H)				
C541	ECA1HM100B	ELECTROLYTIC	50V 10	
C552	ECEA1VU470	ELECTROLYTIC	35V 47	
C553	ECKW2H221KB5	CERAMIC	500V 220P	
C554	ECWH12H682J5	POLYESTER	+ -5% 1200V 6800P	△
	OR TAC51682P500	POLYESTER	+ -5% 1200V 6800P	△
	OR TCHW12H682JS	POLYESTER	+ -5% 1200V 6800P	△
	OR VCFSF16682JB	POLYESTER	+ -5% 1200V 6800P	△
(A, D, E)				
	ECWH12H562J5	POLYESTER	+ -5% 1200V 5600P	△
	OR TAC51562P500	POLYESTER	+ -5% 1200V 5600P	△
	OR TCHW12H562JS	POLYESTER	+ -5% 1200V 5600P	△
	OR VCFSF16562JB	POLYESTER	+ -5% 1200V 5600P	△
(B, C, F, G, H, I)				
C556	ECQF2H334JZ	POLYESTER	+ -5% 500V 0.33	△
	OR VCFSD2D334JB	POLYESTER	+ -5% 500V 0.33	△
(A, D, E, F, G, H, I)				
	ECQF2H364JZA	POLYESTER	+ -5% 500V 0.36	△
	OR VCFSD2D364JB	POLYESTER	+ -5% 500V 0.36	△
(B, C)				
C558	ECA1VM101B	ELECTROLYTIC	35V 100	
C560	ECEA2EU100	ELECTROLYTIC	250V 10	
C561	ECA2CM2R2B	ELECTROLYTIC	160V 2.2	
(A, B, C, D, E)				
	ECEA2CGE2R2	ELECTROLYTIC	160V 2.2	
(F, G, H, I)				
C563	ECEA180V33	ELECTROLYTIC	180V 33	
C580	ECQM2154KZ	POLYESTER	200V 0.15	△
	OR ECQM2154KZB	POLYESTER	200V 0.15	△
(F, I)				
	ECQM2823KZB	POLYESTER	200V 0.082	△
	OR ECMQ2823KZW	POLYESTER	200V 0.082	△
(G, H)				
C581	ECWH12H332JS	POLYESTER	+ -5% 1200V 3300P	
(F, G, H, I)				
C7001	ECA0JM102B	ELECTROLYTIC	6.3V 1000	
C7002	VCYSARH330J	CERAMIC	+ -5% 50V 33P	
C7004	ECKW1H682KBS	CERAMIC	500V 6800P	
(A, B, C, G, H)				
C7007	ECQB1H104P9	POLYESTER	+100% -0% 50V 0.1	
C7008	ECEA1CU221	ELECTROLYTIC	16V 220	
C7010	ECKW1H103ZF5	CERAMIC	+80% -20% 50V 0.01	
C7013	ECEA1CU100	ELECTROLYTIC	16V 10	
(I)				
C7018	ECKW1H103ZF5	CERAMIC	+80% -20% 50V 0.01	
C7019	ECKW1H103ZF5	CERAMIC	+80% -20% 50V 0.01	
C7031	VCYSARH330J	CERAMIC	+ -5% 50V 33P	
C7032	VCYSARH330J	CERAMIC	+ -5% 50V 33P	
C801	ECKM2H472PE7	CERAMIC	+100% -0% 500V 4700P	△
	OR ECKM2H472PU7	CERAMIC	+100% -0% 500V 4700P	△
	OR ECKW2H472PU7	CERAMIC	+100% -0% 500V 4700P	△
C802	ECKM2H472PE7	CERAMIC	+100% -0% 500V 4700P	△
	OR ECKM2H472PU7	CERAMIC	+100% -0% 500V 4700P	△
	OR ECKW2H472PU7	CERAMIC	+100% -0% 500V 4700P	△
C803	ECKM2H472PE7	CERAMIC	+100% -0% 500V 4700P	△
	OR ECKM2H472PU7	CERAMIC	+100% -0% 500V 4700P	△
	OR ECKW2H472PU7	CERAMIC	+100% -0% 500V 4700P	△
C804	ECKM2H472PE7	CERAMIC	+100% -0% 500V 4700P	△
	OR ECKM2H472PU7	CERAMIC	+100% -0% 500V 4700P	△
	OR ECKW2H472PU7	CERAMIC	+100% -0% 500V 4700P	△
C805	ECE52DU221EG	ELECTROLYTIC	200V 220	△
	OR ECET2DR221SW	ELECTROLYTIC	200V 220	△
(A, B, C, D, E)				
	ECES2PU471HG	ELECTROLYTIC	180V 470	△
	OR ECET2PR471SW	ELECTROLYTIC	180V 470	△
	OR EC0S2PP471BB	ELECTROLYTIC	180V 470	△
(F, G, H, I)				

Ref. No.	Part No.	Part Name		Remarks
C806	ECEA2EU100	ELECTROLYTIC	250V 10	
	(C, A, B, C, D, E)			
	ECEA2EU220	ELECTROLYTIC	250V 22	
	(C, F, G, H, I)			
C807	ECKDRS103ZV	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSEKD103PZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSEM103PZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSGKD103QZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSGMD103QZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSTKG103ZY	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSTMG103ZY	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSUKD103MY	CERAMIC	+20% 125V 0.01	△
	OR VCKSUMD103MY	CERAMIC	+20% 125V 0.01	△
	VCKSFKK332MY	CERAMIC	+20% 125V 3300P	△
	OR VCKSFKM332MY	CERAMIC	+20% 125V 3300P	△
	OR VCKSFVK332MY	CERAMIC	+20% 125V 3300P	AKEI
C810	ECKDRS103ZV	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSEKD103PZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSEM103PZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSGKD103QZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSGMD103QZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSTKG103ZY	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSTMG103ZY	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSUKD103MY	CERAMIC	+20% 125V 0.01	△
	OR VCKSUMD103MY	CERAMIC	+20% 125V 0.01	△
C811	ECKDRS103ZV	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSEKD103PZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSEM103PZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSGKD103QZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSGMD103QZ	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSTKG103ZY	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSTMG103ZY	CERAMIC	+80% -20% 125V 0.01	△
	OR VCKSUKD103MY	CERAMIC	+20% 125V 0.01	△
	OR VCKSUMD103MY	CERAMIC	+20% 125V 0.01	△
	COILS			
L501	ELH5L423			△
	OR LLH2601T			△
	(C, F, I)			
	LLH2602T			△
	(C, G, H)			
L552	TSC925			
L7002	ELESN101KA		100	
L801	ELF18D424F	HIGH PASS FILTER	1.4A 5.6M	△
	OR LLN63011A	HIGH PASS FILTER	1.4A 5.6M	△
	OR VLQS0154	HIGH PASS FILTER	1.4A 5.6M	△
	OR VLQS0159	HIGH PASS FILTER	1.4A 5.6M	△
	(C, A, B, C, D, E)			
	ELF18D650C	HIGH PASS FILTER	1.7A 8.2M	△
	OR LLN63021A	HIGH PASS FILTER	1.7A 8.2M	△
	OR VLQS0155	HIGH PASS FILTER	1.7A 8.2M	△
	OR VLQS0158	HIGH PASS FILTER	1.7A 8.2M	△
	(C, F, G, H, I)			
L802	VLQS7A220M		+20%	22
	(C, F, G, H, I)			
	PIN HEADERS			
PK1	VJSS0871	CONNECTOR RECEPTACLE 13P		AKEI
PK2	VJSS0872	CONNECTOR RECEPTACLE 19P		AKEI
PK3	VJSS0869	CONNECTOR RECEPTACLE 7P		AKEI
PK5	VJPS0275	CONNECTOR 5P		
P801	VEKS5531	P1002 CONNECTOR ASS'Y		
	FUSE & PROTECTOR			
F801	VSFS0003A40	FUSE	125V 4A	△
	OR XBA1C40NU100	FUSE	125V 4A	△
	RELAY			
RL801	TSEH0005			△
	OR TSEH8007			△
	OR TSE1860-1			△
	TRANSFORMER			
T501	TLH15419	HORIZONTAL DRIVE TRANSFORMER		
	(C, A, B, C, D, E)			
	ETH19Y70AY	HORIZONTAL DRIVE TRANSFORMER		
	(C, F, G, H, I)			
T502	ETE19Z30AY	HORIZONTAL DRIVE TRANSFORMER		△

(E17, E21, E22, E23, E41, E42, E43, E44, E45, E46, E47, E48, E49)

Ref. No.	Part No.	Part Name	Remarks	
T551	KFT2AB073F	FLYBACK TRANSFORMER	▲	
	OR LLE6601K	FLYBACK TRANSFORMER	▲	
(A,B,C,D,E)				
	KFT3AB074F	FLYBACK TRANSFORMER	▲	
	OR LLE6501K	FLYBACK TRANSFORMER	▲	
(F,G,H,I)				
			PRINTED CIRCUIT BOARD ASSEMBLY	
E17	LRP23007YZ	CRT C.B.A.	▲	AKEI
(A,D,E)				
E17	LRP23007ZZ	CRT C.B.A.	▲	AKEI
(B,C)				
E17	LRP23007AZ	CRT C.B.A.	▲	AKEI
(F,I)				
E17	LRP23007BZ	CRT C.B.A.	▲	AKEI
(G,H)				
			MISCELLANEOUS	
E21	VEQS0596A	TUNER,UHF/VHF NR		
(A,B,C,G,H)				
E21	VEQS0598	TUNER,UHF/VHF NR		
(D,E,F,I)				
E22	TSX7151-N	AC CORD W/PLUG,120V	▲	AKEI
(A,B,D,F,G,I)				
E22	TSX7152-N	AC CORD W/PLUG,120V	▲	AKEI
(C,E,H)				
E23	VJSS3325	FUSE HOLDER		AKEI
E41	TUC76677-1	HEAT SINK PLATE		
(A,B,C,D,E)				
E41	TUC77626	HEAT SINK PLATE		AKEI
(F,G,H,I)				
E42	TUC77616	GROUNDING PLATE		AKEI
(A,B,C,D,E)				
E42	TUC77603-1	GROUNDING PLATE		AKEI
(F,G,H,I)				
E43	TUC77625	HEAT SINK PLATE		AKEI
(F,G,H,I)				
E44	LML69001A	ANODE LEAD CLAMPER		AKEI
E45	TMM76403-1	CLAMPER		
E46	XTV3+10G	TAPPING SCREW,FE		
E47	XTW3+10J	TAPPING SCREW,FE		
E48	XYN3+F10S	SCREW WITH WASHER,FE		
F49	XYN3+F6S	SCREW WITH WASHER,FE		
			CRT C.B.A.	
			▲	
			TRANSISTORS	
Q351	2SC1473-QNC			
(A,B,C,D,E)				
	2SC3063-RL			
(F,G,H,I)				
Q352	2SC1473-QNC			
(A,B,C,D,E)				
	2SC3063-RL			
(F,G,H,I)				
Q353	2SC1473-QNC			
(A,B,C,D,E)				
	2SC3063-RL			
(F,G,H,I)				
			RESISTORS	
R351	ERG1ANJP153V	METAL OXIDE	1W	15K
(A,B,C,D,E)				
	ERG2ANJ153H	METAL OXIDE	2W	15K
(F,G,H,I)				
R352	ERG1ANJP153V	METAL OXIDE	1W	15K
(A,B,C,D,E)				
	ERG2ANJ153H	METAL OXIDE	2W	15K
(F,G,H,I)				

(E50)

