



website <http://www.lgservice.com>

LG

LG Room Air Conditioner

SERVICE MANUAL

**MODELS: AS-H076PB/D/M/WL1
AS-H096PB/D/M/WL1
A-12AH series**

CAUTION

- BEFORE SERVICING THE UNIT, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.
- ONLY FOR AUTHORIZED SERVICE PERSONNEL.

TABLE OF CONTENTS

LG Model Name	3
Safety Precautions	4
Dimensions	8
Symbols used in this Manual	8
Indoor Unit	8
Outdoor Unit	9
Product Specifications	11
Installation	12
Select the Best Location	12
Piping Length and Elevation	12
Preparing Work for Installation	13
Fixing the Indoor Unit	14
Drill a Hole in the wall	14
Flaring Work	15
Connecting the Pipings	16
Connecting the Cables to the Indoor Unit	19
Connecting the Cables to the Outdoor Unit	20
Checking the Drainage	21
Forming the Piping	21
Air Purging	22
Air Purging with Vacuum Pump	22
Front Panel Assembly	24
Test Running	25
Operation	26
Function of Controls	26
Display Function	33
Self-diagnosis Function	34
Remote Control Operations	35
Disassembly	36
Indoor Unit	36
Schematic Diagram	38
Electric control Device	38
Wiring Diagram	39
Components Location	40
Troubleshooting Guide	42
Refrigeration Cycle Diagram	42
2-way, 3-way Valve	43
Cycle Parts	48
Electronic Parts	49
Exploded View	56
Indoor Unit	56
Outdoor Unit	57
Replacement Parts List	59
Indoor	59
Outdoor	60

LG Model Name

2003

1	2	-	3	4	5	6	7	8	9	10
---	---	---	---	---	---	---	---	---	---	----

Code	Type	Code of Model	Meaning																																								
1	Producing Center, Refrigerant	A~Z	L: Chang-won R22 A: Chang-won R410A C: Chang-won R407C T: China K: Turkey R22 E: Turkey R410A H: Thailand N: India Z: Brazil D: Indonesia M: Mexico V: Vietnam S: Out Sourcing																																								
2	Product Type	A~Z	S: Split Type Air Conditioner																																								
3	Cooling/Heating/Inverter	A~Z	C: Cooling only H: Heat pump X: C/O + E/Heater Z: H/P + E/Heater V: AC Inverter C/O N: AC Inverter H/P Q: DC Inverter C/O W: DC Inverter H/P																																								
4, 5	Capacity	0~9	Cooling/Heating Capacity Ex. "09" → 9,000 Btu/h																																								
6	Electric Range	1~9 A~Z	1: 115V/60Hz, 2: 220V/60Hz 3: 208-230V/60Hz 5: 200-220V/50Hz 6: 220-240V/50Hz 7: 110V, 50/60Hz 8: 380-415V/50Hz 9: 380-415V/60Hz A: 220V, 50Hz, 3Phase B: 208~230V, 60Hz, 3Phase C: 575V, 50Hz, 3Phase D: 440~460, 60Hz, 3Phase E: 265V, 60Hz F: 200V, 50/60Hz																																								
7	Chassis	A~Z	Name of Chassis of Unit Ex. LSP → SP Chassis																																								
8	Look	A~Z	Look, Color (Artcool Model)																																								
9	Function	A~Z	<table border="1"> <tr><td>Basic</td><td>A</td></tr> <tr><td>Basic+4Way</td><td>B</td></tr> <tr><td>Plasma Filter</td><td>C</td></tr> <tr><td>Plasma Filter+4 Way</td><td>D</td></tr> <tr><td>Tele+LCD</td><td>E</td></tr> <tr><td>Tele+LCD+Nano plasma+4Way</td><td>F</td></tr> <tr><td>Nano Plasma F+(A/changeove)+A/clean+Low A</td><td>G</td></tr> <tr><td>Nano Plasma F+(A/changeove)+A/clean+4way+Low A</td><td>H</td></tr> <tr><td>Tele+LED+4way</td><td>I</td></tr> <tr><td>Internet</td><td>J</td></tr> <tr><td>Plasma F+4Way+Oxy generator</td><td>K</td></tr> <tr><td>Nano Plasma F+(A/changeove)+A/clean</td><td>L</td></tr> <tr><td>Nano Plasma F+(A/changeove)+A/clean+4way</td><td>M</td></tr> <tr><td>Nano Plasma F+(A/changeove)+A/clean+PTC</td><td>N</td></tr> <tr><td>Nano Plasma F+(A/changeove)+Autoclean+4way+PTC</td><td>P</td></tr> <tr><td>Nano Plasma F+(A/changeove)+A/clean+4way+Low A+PTC</td><td>Q</td></tr> <tr><td>Negative ION+A/Clean</td><td>R</td></tr> <tr><td>(Nano)Plasma+Negative ION+A/Clean</td><td>S</td></tr> <tr><td>4way+(Nano)Plasma F+Negative ION+Healthy dehumidification+A/Clean</td><td>T</td></tr> <tr><td>Nano Plasma F+4Way+(A/changeove)+A/clean+</td><td>U</td></tr> </table>	Basic	A	Basic+4Way	B	Plasma Filter	C	Plasma Filter+4 Way	D	Tele+LCD	E	Tele+LCD+Nano plasma+4Way	F	Nano Plasma F+(A/changeove)+A/clean+Low A	G	Nano Plasma F+(A/changeove)+A/clean+4way+Low A	H	Tele+LED+4way	I	Internet	J	Plasma F+4Way+Oxy generator	K	Nano Plasma F+(A/changeove)+A/clean	L	Nano Plasma F+(A/changeove)+A/clean+4way	M	Nano Plasma F+(A/changeove)+A/clean+PTC	N	Nano Plasma F+(A/changeove)+Autoclean+4way+PTC	P	Nano Plasma F+(A/changeove)+A/clean+4way+Low A+PTC	Q	Negative ION+A/Clean	R	(Nano)Plasma+Negative ION+A/Clean	S	4way+(Nano)Plasma F+Negative ION+Healthy dehumidification+A/Clean	T	Nano Plasma F+4Way+(A/changeove)+A/clean+	U
Basic	A																																										
Basic+4Way	B																																										
Plasma Filter	C																																										
Plasma Filter+4 Way	D																																										
Tele+LCD	E																																										
Tele+LCD+Nano plasma+4Way	F																																										
Nano Plasma F+(A/changeove)+A/clean+Low A	G																																										
Nano Plasma F+(A/changeove)+A/clean+4way+Low A	H																																										
Tele+LED+4way	I																																										
Internet	J																																										
Plasma F+4Way+Oxy generator	K																																										
Nano Plasma F+(A/changeove)+A/clean	L																																										
Nano Plasma F+(A/changeove)+A/clean+4way	M																																										
Nano Plasma F+(A/changeove)+A/clean+PTC	N																																										
Nano Plasma F+(A/changeove)+Autoclean+4way+PTC	P																																										
Nano Plasma F+(A/changeove)+A/clean+4way+Low A+PTC	Q																																										
Negative ION+A/Clean	R																																										
(Nano)Plasma+Negative ION+A/Clean	S																																										
4way+(Nano)Plasma F+Negative ION+Healthy dehumidification+A/Clean	T																																										
Nano Plasma F+4Way+(A/changeove)+A/clean+	U																																										
10	Serial No.	1~9	LG Model Development Serial No. * ARTCOOL COLOR <table border="1"> <tr><td>R</td><td>Mirror</td></tr> <tr><td>W</td><td>White</td></tr> <tr><td>B</td><td>Blue</td></tr> <tr><td>D</td><td>Wood</td></tr> <tr><td>M</td><td>Metal</td></tr> <tr><td>C</td><td>Cherry</td></tr> </table>	R	Mirror	W	White	B	Blue	D	Wood	M	Metal	C	Cherry																												
R	Mirror																																										
W	White																																										
B	Blue																																										
D	Wood																																										
M	Metal																																										
C	Cherry																																										

Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

- Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

⚠ WARNING This symbol indicates the possibility of death or serious injury.

⚠ CAUTION This symbol indicates the possibility of injury or damage to properties only.

- Meanings of symbols used in this manual are as shown below.


	Be sure not to do.
	Be sure to follow the instruction.

⚠ WARNING

■ Installation


Always perform grounding.

- Otherwise, it may cause electrical shock.

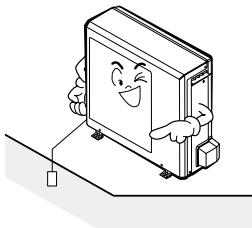

Don't use a power cord, a plug or a loose socket which is damaged.

- Otherwise, it may cause a fire or electrical shock.

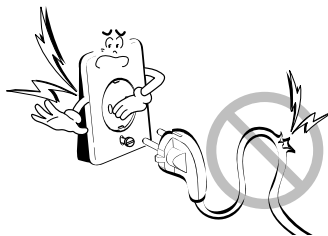


For installation of the product, always contact the service center or a professional installation agency.

- Otherwise, it may cause a fire, electrical shock, explosion or injury.




Securely attach the electrical part cover to the indoor unit and the service panel to the outdoor unit.

- If the electrical part cover of the indoor unit and the service panel of the outdoor unit are not attached securely, it could result in a fire or electric shock due to dust, water, etc.

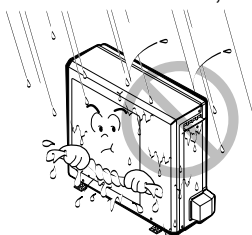


Always install an air leakage breaker and a dedicated switching board.

- No installation may cause a fire and electrical shock.

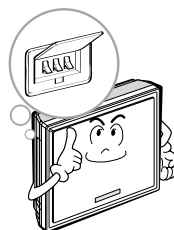


Do not keep or use flammable gases or combustibles near the air conditioner.

- Otherwise, it may cause a fire or the failure of product.

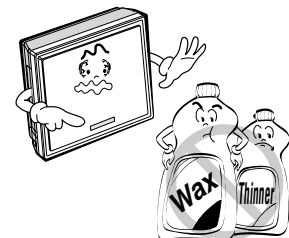


Ensure that an installation frame of the outdoor unit is not damaged due to use for a long time.

- It may cause injury or an accident.

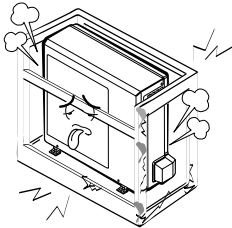


Do not disassemble or repair the product randomly.

- It will cause a fire or electrical shock.

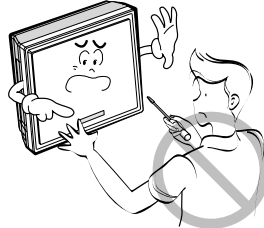

Do not install the product at a place that there is concern of falling down.


- Otherwise, it may result in personal injury.

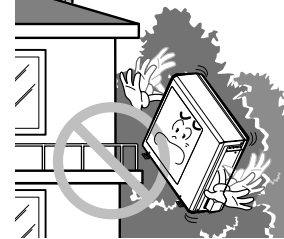

■ Operation


Use caution when unpacking and installing.

- Sharp edges may cause injury.

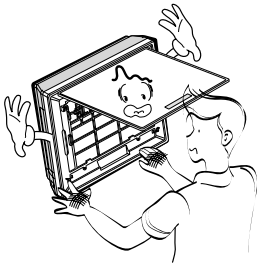


Do not share the outlet with other appliances.

- It will cause an electric shock or a fire due to heat generation.

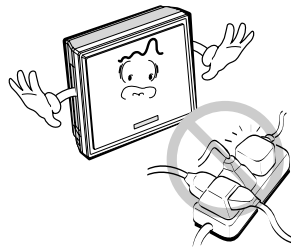


Do not use the damaged power cord.

- Otherwise, it may cause a fire or electrical shock.

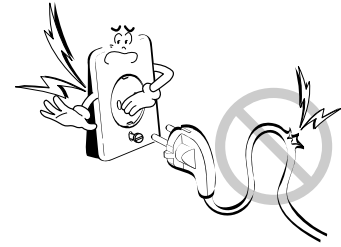


Do not modify or extend the power cord randomly.

- Otherwise, it may cause a fire or electrical shock.

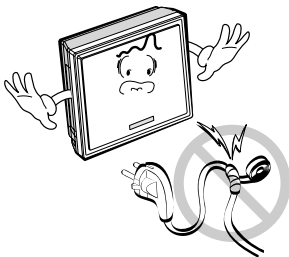

Take care so that the power cord may not be pulled during operation.

- Otherwise, it may cause a fire or electrical shock.

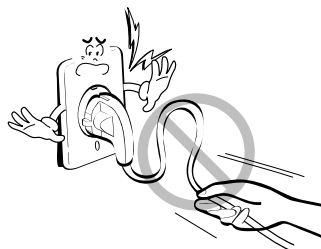


Unplug the unit if strange sounds, smell, or smoke comes from it.

- Otherwise, it may cause electrical shock or a fire.




Keep the flames away.

- Otherwise, it may cause a fire.

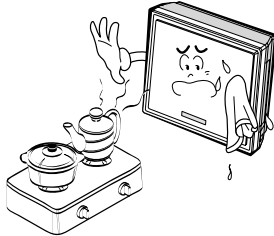


Take the power plug out if necessary, holding the head of the plug and do not touch it with wet hands.

- Otherwise, it may cause a fire or electrical shock.

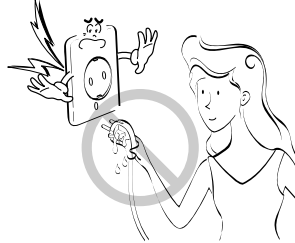

Do not use the power cord near the heating tools.

- Otherwise, it may cause a fire and electrical shock.

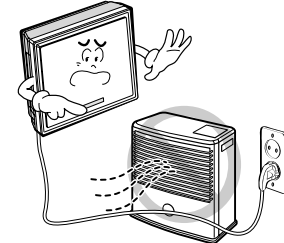


Do not open the suction inlet of the indoor/outdoor unit during operation.

- Otherwise, it may electrical shock and failure.




Do not allow water to run into electrical parts.

- Otherwise, it may cause the failure of machine or electrical shock.

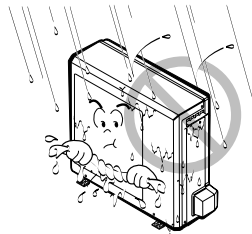

Never touch the metal parts of the unit when removing the filter.

- They are sharp and may cause injury.

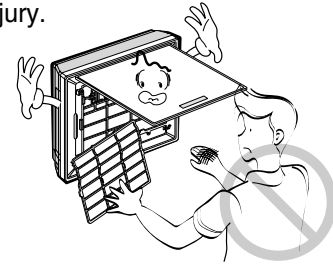


Do not step on the indoor/outdoor unit and do not put anything on it.

- It may cause an injury through dropping of the unit or falling down.



Do not place a heavy object on the power cord.

- Otherwise, it may cause a fire or electrical shock.

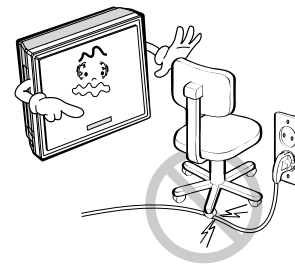


When the product is submerged into water, always contact the service center.

- Otherwise, it may cause a fire or electrical shock.



Take care so that children may not step on the outdoor unit.

- Otherwise, children may be seriously injured due to falling down.

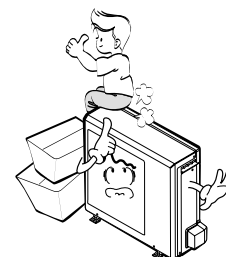


⚠ CAUTION

■ Installation


Install the drain hose to ensure that drain can be securely done.

- Otherwise, it may cause water leakage.

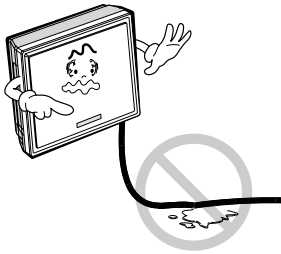


Install the product so that the noise or hot wind from the outdoor unit may not cause any damage to the neighbors.

- Otherwise, it may cause dispute with the neighbors.

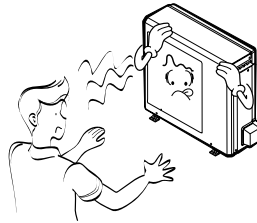

Always inspect gas leakage after the installation and repair of product.


- Otherwise, it may cause the failure of product.

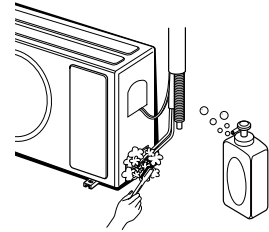

■ Operation


Keep level parallel in installing the product.

- Otherwise, it may cause vibration or water leakage.

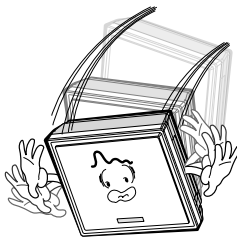


Avoid excessive cooling and perform ventilation sometimes.

- Otherwise, it may do harm to your health.

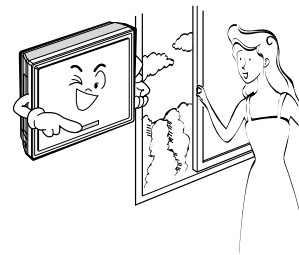


Use a soft cloth to clean. Do not use wax, thinner, or a strong detergent.

- The appearance of the air conditioner may deteriorate, change color, or develop surface flaws.

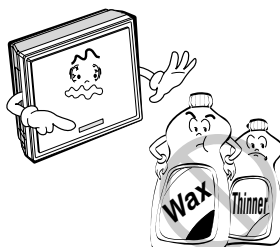

When gas leaks, open the window for ventilation before operating the unit.

- Otherwise, it may cause explosion, and a fire.

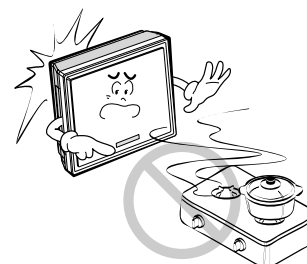

Dimensions

Symbols used in this Manual



This symbol alerts you to the risk of electric shock.




This symbol alerts you to hazards that may cause harm to the air conditioner.

NOTICE


This symbol indicates special notes.

Indoor Unit

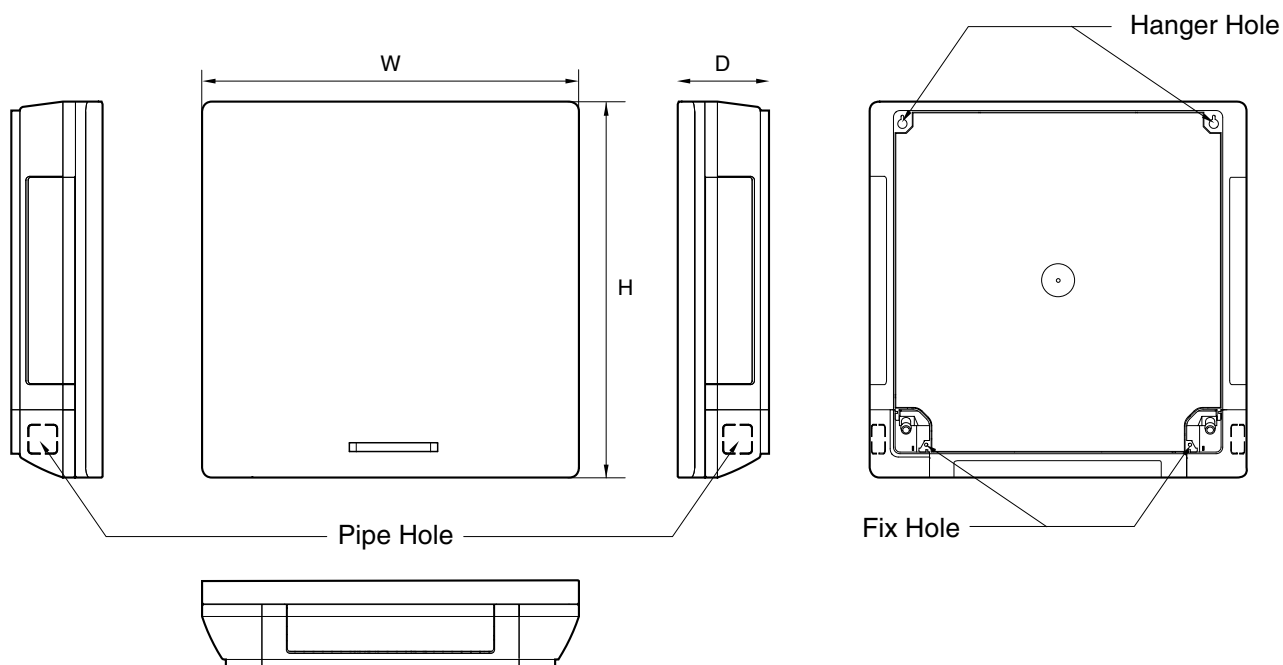


Dimension \ Model		INDOOR UNIT	
		Model	Value
W	mm		570
H	mm		568
D	mm		137

Outdoor Unit

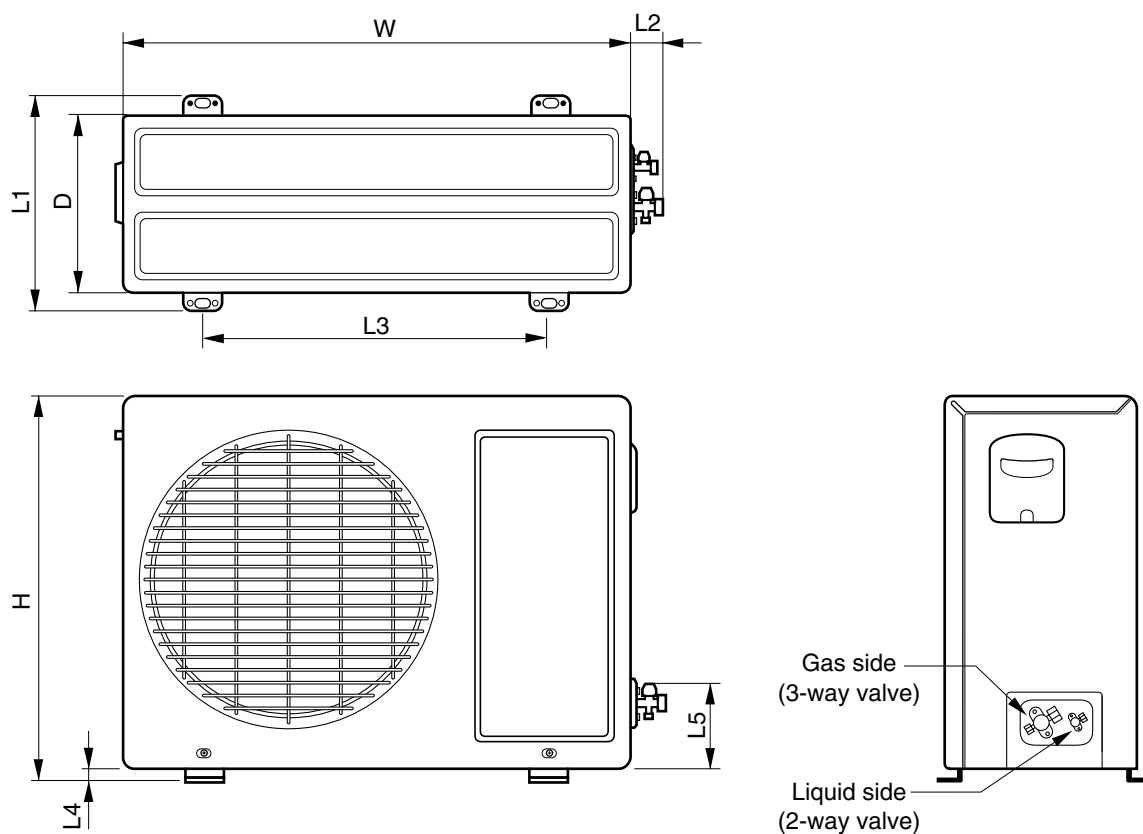

DIM	MODEL	AS-H076PB/D/M/WL1
	unit	
W	mm	575
H	mm	525
D	mm	260
L1	mm	301
L2	mm	73
L3	mm	392
L4	mm	35
L5	mm	100

Dimensions

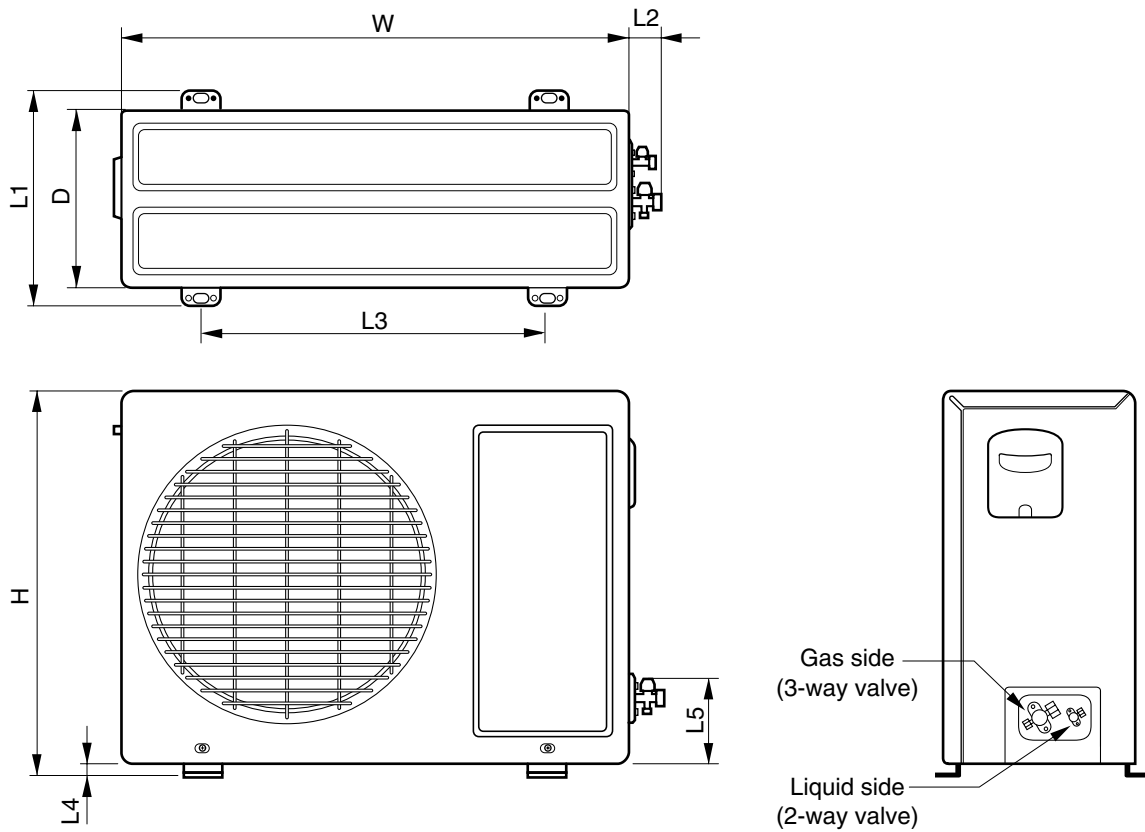

DIM	MODEL	
	unit	AS-H096PB/D/M/WL1, AS-H126PB/D/M/WL1
W	mm	770
H	mm	540
D	mm	245
L1	mm	285
L2	mm	64
L3	mm	518
L4	mm	10
L5	mm	100

Product Specifications

Table-1


Item	Model Name		AS-H076PB/D/M/W/L1	AS-H096PB/D/M/W/L1	A-12AH series
	Unit				
Cooling Capacity	Btu/h		7500	9200	12000
Heating Capacity			7700	9400	12200
Moisture Removal	l/h		1	1.2	1.5
Power Source	Ø, V, Hz		1Ø, 220-240V, 50Hz	1Ø, 220-240V, 50Hz	1Ø, 220-240V, 50Hz
Air Circulation	Indoor	m ³ /min	5.5	6.8	8.3
	Outdoor		20	26	26
Noise Level	Indoor	dB (A)±3	37	39	44
	Outdoor		48	48	48
Input	Cooling	W	685	840	1099
	Heating		705	860	1200
Running Current	Cooling	A	3	3.8	4.9
	Heating		3.1	3.85	5.3
E.E.R.	Cooling	Btu/hW	10.95	10.95	10.92
C.O.P	Heating		3.2	3.2	2.98
Motor Output	Indoor	W	24	24	24
	Outdoor		18	25.5	25.5
Dimensions (W x H x D)	Indoor	mm	570 x 568 x 137	570 x 568 x 137	570 x 568 x 137
	Outdoor		575 x 525 x 260	770 x 540 x 245	770 x 540 x 245
Net. Weight	Indoor	kg	9	9	9
	Outdoor		23	35	35
Refrigerant	g		750(R410A)	870(R410A)	880(R410A)
Airflow Direction Control (Up & Down)			O	O	O
Remocon Type			L.C.D Wireless	L.C.D Wireless	L.C.D Wireless
Service Valve	Liquid	inch(mm)	1/4 (6.35)	1/4 (6.35)	1/4 (6.35)
	Gas		3/8 (9.52)	3/8 (9.52)	1/2 (12.7)
Sleeping Operation			O	O	O
Drain Hose			O	O	O
Connecting Cable(p*mm ²)			3*1.0mm ² + 2*0.75mm ²	3*1.0mm ² + 2*0.75mm ²	3*1.0mm ² + 2*0.75mm ²
Power Cord(p*mm ²)			3*1.0mm ²	3*1.0mm ²	3*1.0mm ²

Installation

Selection of the Best Location

Indoor unit


- Do not have any heat or steam near the unit.
- Select a place where there are no obstacles in front of the unit.
- Make sure that condensation drainage can be conveniently routed away.
Do not install near a doorway.
- Ensure that the space around the left and right of the unit is more than 50cm. The unit should be installed as high on the wall as possible, allowing a minimum of 10cm from ceiling.
- Use a stud finder to locate studs to prevent unnecessary damage to the wall.

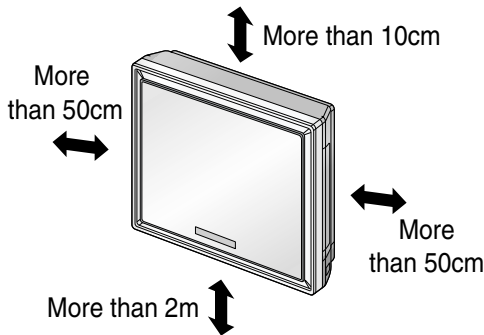

CAUTION: Install the indoor unit on the wall where the height from the floor is more than 2 meter.



Outdoor unit

- If an awning is built over the unit to prevent direct sunlight or rain exposure, make sure that heat radiation from the condenser is not restricted.
- Ensure that the space around the back and sides is more than 10cm. The front of the unit should have more than 70cm of space.
- Do not place animals and plants in the path of the warm air.
- Take the air conditioner weight into account and select a place where noise and vibration are minimum.
- Select a place so that the warm air and noise from the air conditioner do not disturb neighbors.

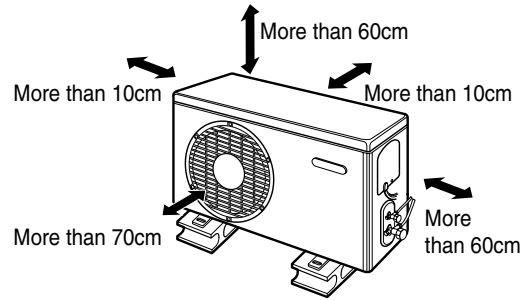

Piping Length and Elevation

Capacity (Btu/h)	Pipe Size		Standard Length (m)	Max. Elevation B (m)	Max. Length A (m)	Additional Refrigerant (g/m)
	GAS	LIQUID				
7k, 8k, 9k	3/8"	1/4"	7.5	7	15	20
12k, 18k-28k	1/2"	1/4"	7.5	7	15	20

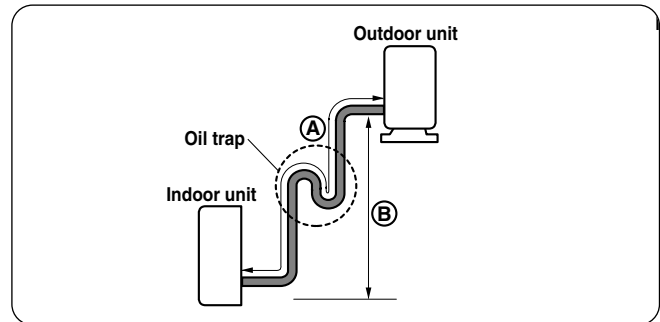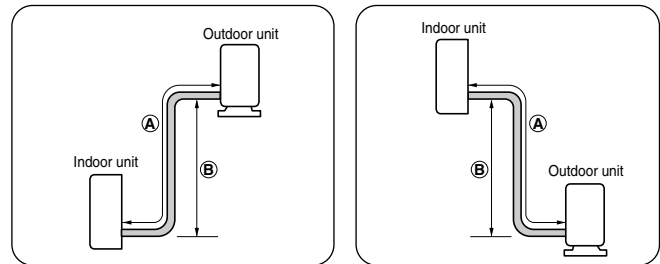

If the piping length is more than 5m


CAUTION:

- Capacity is based on standard length and maximum allowance length is on the basis of reliability.
- Oil trap should be installed every 5~7 meters.

Preparing Work for Installation

Open front panel

1. Push the front panel backward and lift it up to remove the two screws.
2. As soon as you lift the both lower parts of panel front, you can hear the sound from panel front. At this moment panel front is separated
3. After pulling down this panel a bit, separate connecting wire from the product.

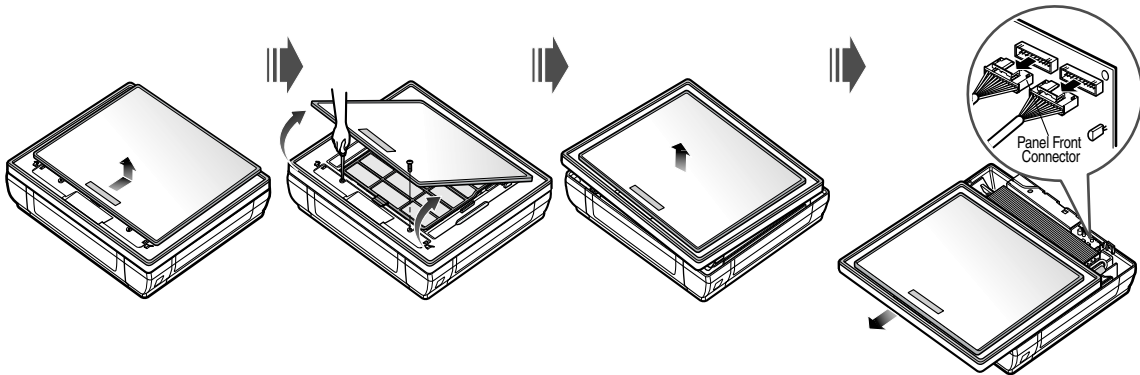


Remove pipe cover and side cover

1. Remove two screws (for fixing pipe cover)
2. Pull up the side cover of desired connecting direction, and then side cover is separated.
3. Pick the pipe hole of the side cover.


CAUTION: After removing the pipe hole, cut the burr for safety.

NOTICE When making pipe path through rear wall, you don't need to pick the pipe hole.

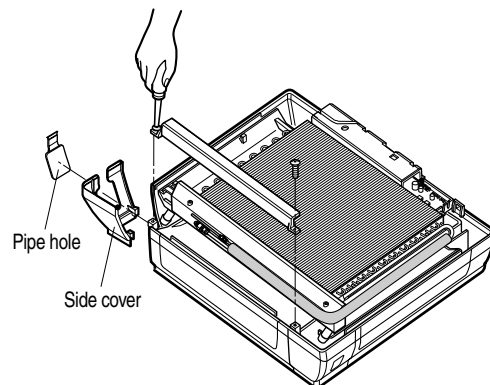

Drain hose junction

1. Remove the rubber stopple in the desired drain direction.
2. Insert drain hose into the handle of drain pan, and join drain hose and connecting hose according to the figure by.

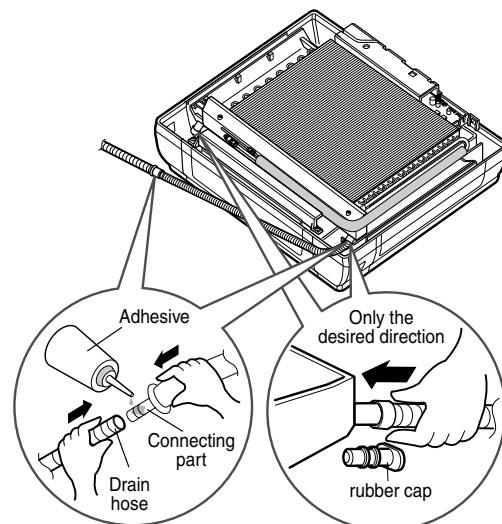


Fixing the Indoor Unit


1. Attach an Installation guide map on the desired surface.




2. Make a hole with a diameter of 6mm and depth of 30-35mm by piercing a screw point.

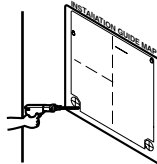


3. Drive the fore plastic anchors into drilled points.

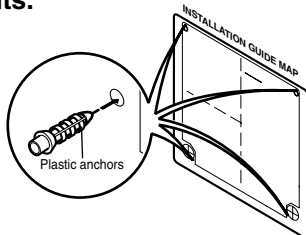


4. Hang the hole of product at the upper screws, and remove the map. (Falling attention)

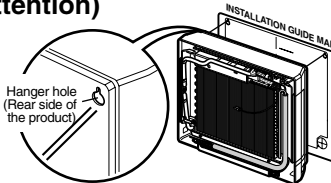


5. Check the fixed product with light power.

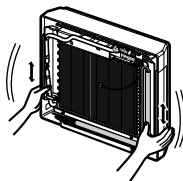


6. Look at suited horizon by horizontal meter on the horizontal setting line, and fix lightly the map by adhesive tape.

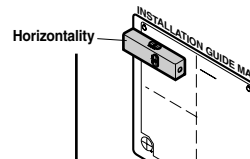


7. Drill the pierced part as a diameter of 50mm for connecting piping. (In case of piercing rear surface)

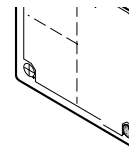

8. First, Drive the two points of the upper parts by screws. (Leave 10mm for hanging the product)

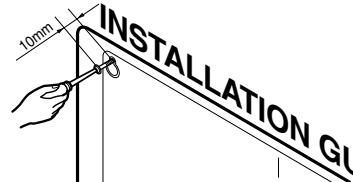


9. Drive the lower parts after facing the hole of product with plastic anchors, and fix completely the upper screws.

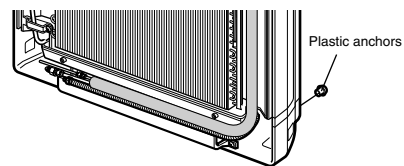

10. In case of nothing wrong, connect the pipe and the wire. (Refer to installation manual)

Drill a Hole in the Wall

- Drill the piping hole with a $\varnothing 50\text{mm}$ hole core drill. Drill the piping hole at either the right or the left with the hole slightly slanted to the outdoor side.

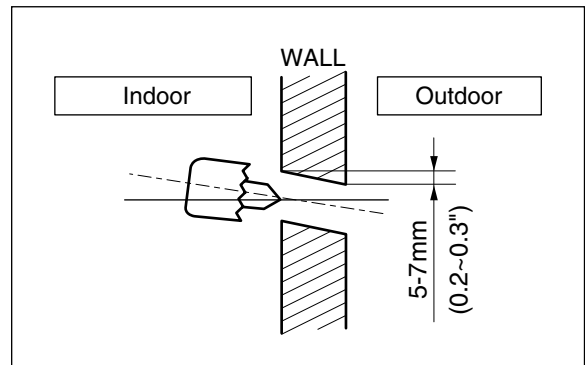


Flaring Work

Main cause for gas leakage is due to defect in flaring work. Carry out correct flaring work in the following procedure.


Cutting the pipes and the cable.

1. Use the piping kit accessory or the pipes purchased locally.
2. Measure the distance between the indoor and the outdoor unit.
3. Cut the pipes a little longer than measured distance.
4. Cut the cable 1.5m longer than the pipe length.

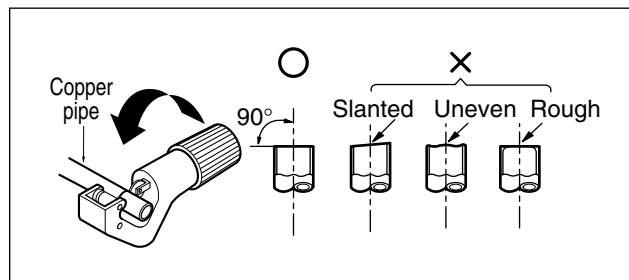


Removing burrs

1. Completely remove all burrs from the cut cross section of pipe/tube.
2. Put the end of the copper tube/pipe in a downward direction as you remove burrs in order to avoid dropping burrs into the tubing.

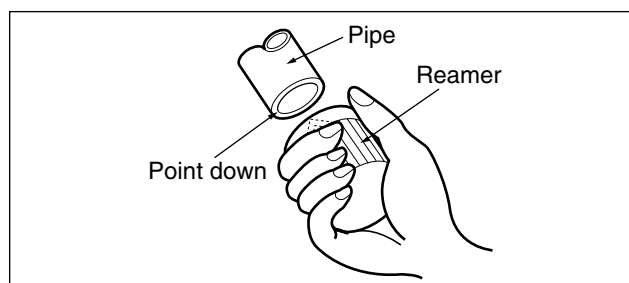

Putting nut on


- Remove flare nuts attached to indoor and outdoor unit, then put them on pipe/tube having completed burr removal.
(not possible to put them on after flaring work)

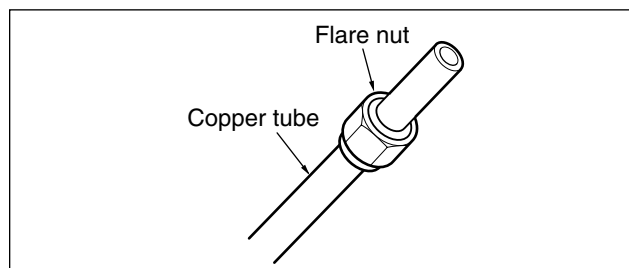

Flaring work


1. Firmly hold copper pipe in a die in the dimension shown in the table below.
2. Carry out flaring work with the flaring tool.

Outside diameter		A
mm	inch	mm
Ø6.35	1/4	0~0.5
Ø9.52	3/8	0~0.5
Ø12.7	1/2	0~0.5
Ø15.88	5/8	0~1.0
Ø19.05	3/4	1.0~1.3

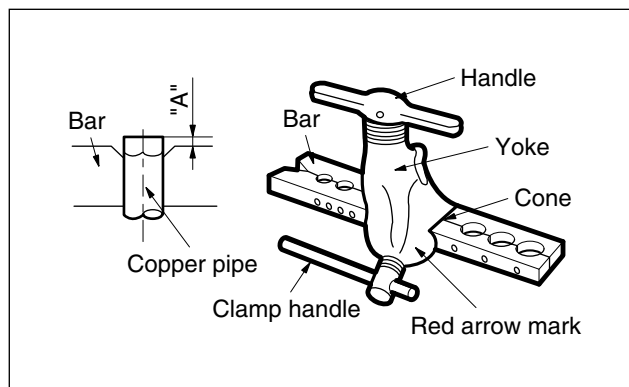

Check

1. Compare the flared work with the figure by.
2. If a flared section is defective, cut it off and do flaring work again.

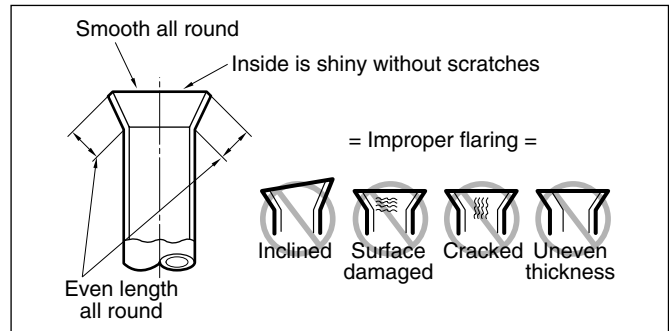


Connecting the Pipings


Indoor

Preparing the indoor unit's piping and drain hose for installation through the wall.

Route the indoor tubing and the drain hose in the direction of rear left or right

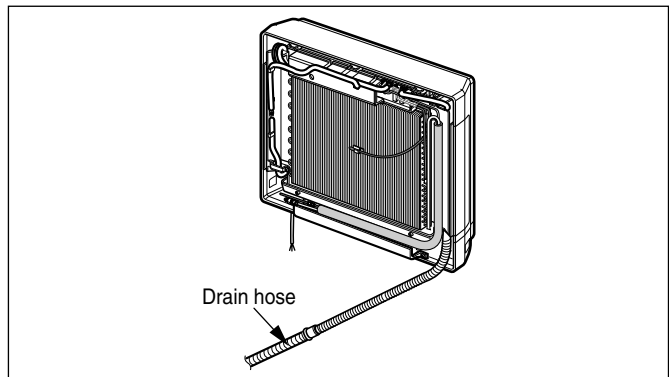

Tape the tubing, drain hose and the connecting cable. Be sure that the drain hose is located at the lowest side of the bundle. Locating at the upper side can cause drain pan to overflow inside the unit.

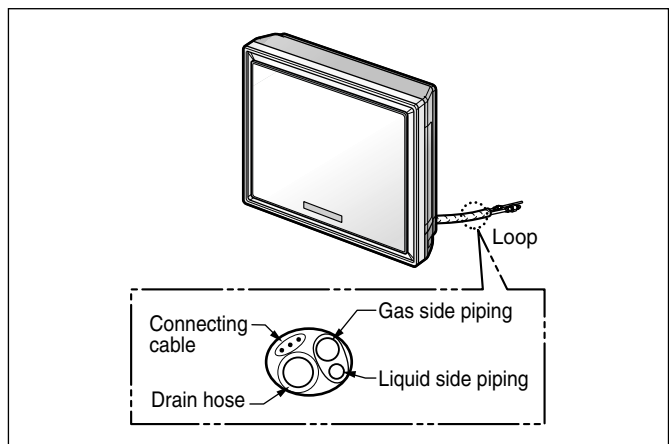

NOTICE If the drain hose is routed inside the room, insulate the hose with an insulation material* so that dripping from "sweating"(condensation) will not damage furniture or floors.




*Foamed polyethylene or equivalent is recommended.

Connecting the pipings with the indoor unit and drain hose with drain pipe

1. Align the center of the pipings and sufficiently tighten the flare nut by hand.
2. Tighten the flare nut with a wrench.


Outside diameter		Torque
mm	inch	kg.m
Ø6.35	1/4	1.8
Ø9.52	3/8	4.2
Ø12.7	1/2	5.5
Ø15.88	5/8	6.6
Ø19.05	3/4	6.6

3. When extending the drain hose at the indoor unit, install the drain pipe.

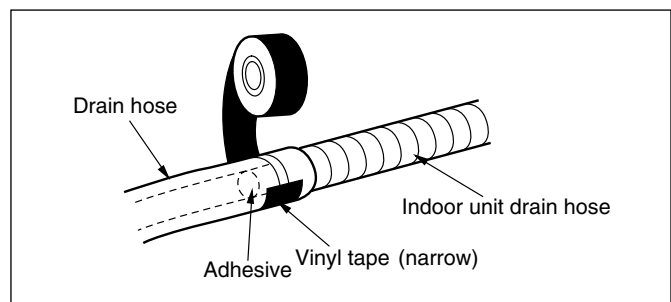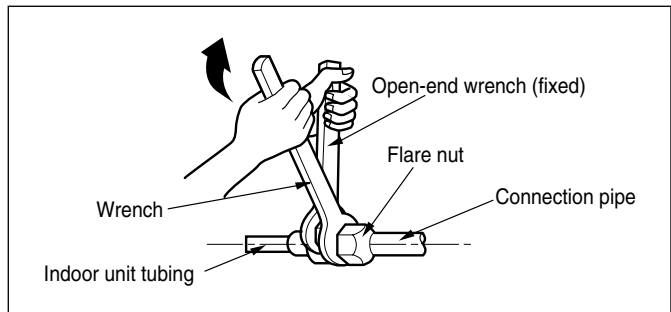
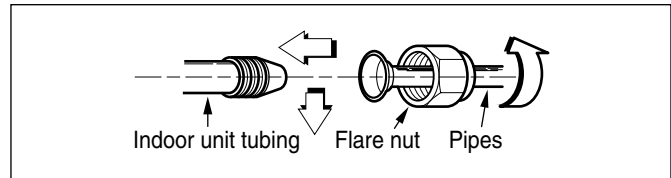


Wrap the insulation material around the connecting portion.

1. Overlap the connection pipe insulation material and the indoor unit pipe insulation material. Bind them together with vinyl tape so that there may be no gap.
2. Wrap the area which accommodates the rear piping housing section with vinyl tape.

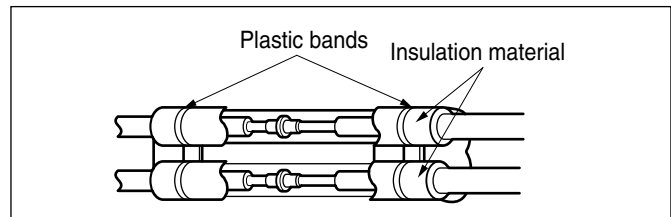


3. Bundle the piping and drain hose together by wrapping them with vinyl tape over the range within which they fit into the rear piping housing section.

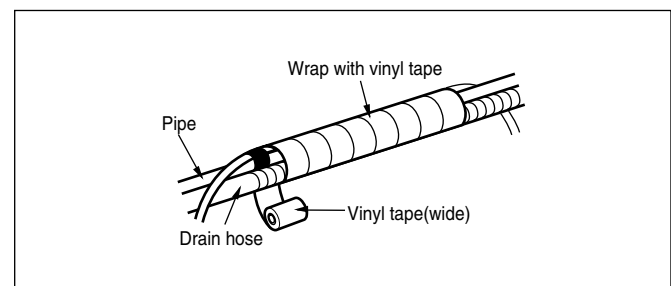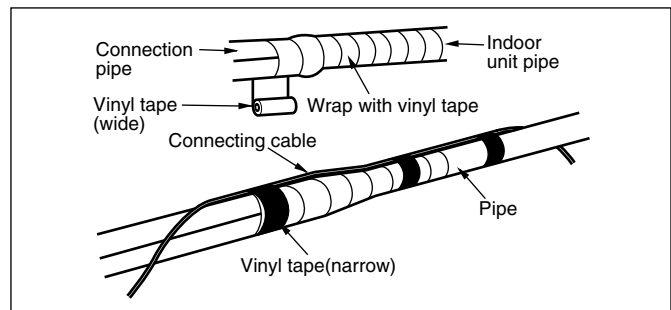

Outdoor


Align the center of the pipings and sufficiently tighten the flare nut by hand.

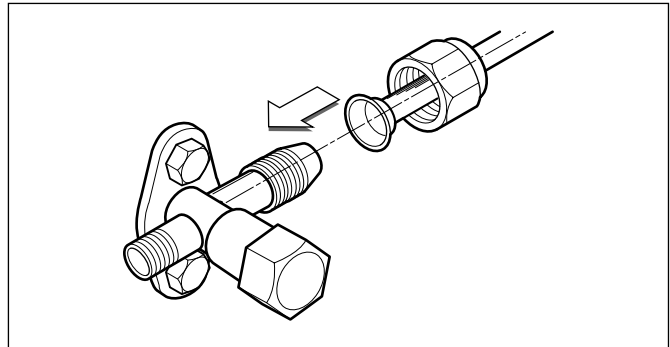

Finally, tighten the flare nut with torque wrench until the wrench clicks.

- When tightening the flare nut with torque wrench, ensure the direction for tightening follows the arrow on the wrench.

Outside diameter		Torque
mm	inch	kg.m
Ø6.35	1/4	1.8
Ø9.52	3/8	4.2
Ø12.7	1/2	5.5
Ø15.88	5/8	6.6
Ø19.05	3/4	6.6

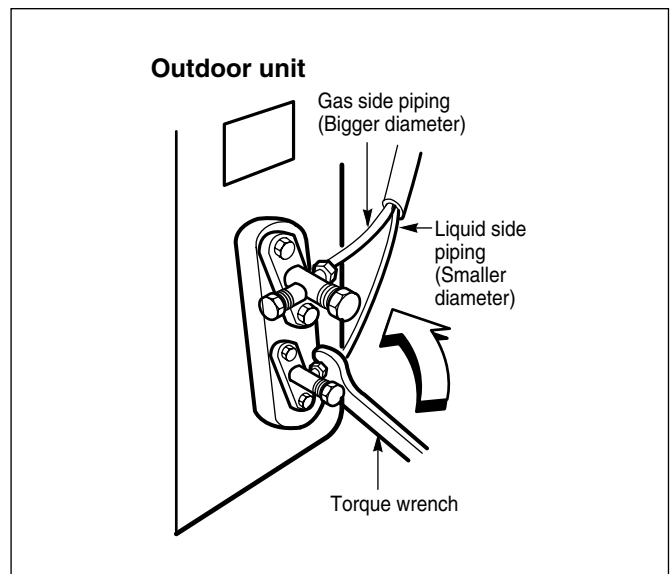

Connecting the Cables to the Indoor Unit.

- Connect the cables to the indoor unit by connecting the wires to the terminals on the control board **dividually according to the outdoor unit connection.** (Ensure that the color of the wires of the outdoor unit and the terminal No. are the same as those of the indoor unit.)
- **Before connecting the cables to the terminal block, remove the cables in the holder of the control cover and do it.**




CAUTION:

- The above circuit diagram is subject to change without notice.
- The earth wire should be longer than the common wires.
- When installing, refer to the circuit diagram behind the panel front of the indoor unit.
- Connect the wires firmly so that they may not be pulled out easily.
- Connect the wires according to color codes, referring to the wiring diagram.




CAUTION: If a power plug is not used, provide a circuit breaker between power source and the unit as shown by.

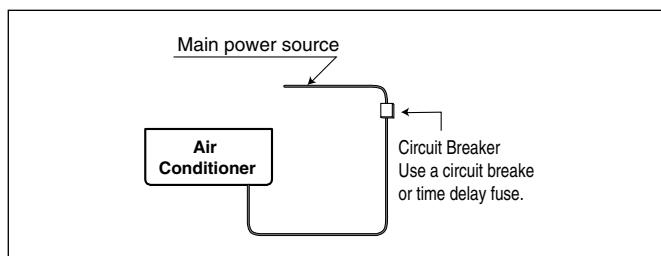


CAUTION: The power cord connected to the "A" unit should be selected according to the following specifications(Type "B" approved by HAR or SAA).

(mm²)

NORMAL CROSS SECTIONAL AREA	Grade					
	5k~9k	12k~14k	18k	24k~28k	30k, 32k	36k, 38k
	0.75	1.0	1.5	2.5	2.5	5.5
Unit(A)	Indoor	Indoor	Indoor	Indoor	Outdoor	Outdoor
Cable Type(B)	H05VV-F	H05VV-F	H05VV-F	H05VV-F	H05RN-F	H05RN-F

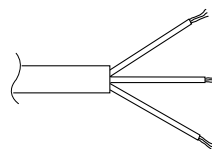


The power connecting cable connecting the indoor and outdoor unit should be selected according to the following specifications (Type "B" approved by HAR or SAA).

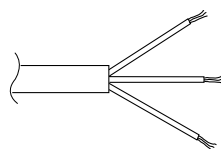


(mm²)

NORMAL CROSS SECTIONAL AREA	Grade			
	5k~9k	12k~14k	18k	24k~28k
	0.75	1.0	1.5	2.5
Cable Type(B)	H07RN-F	H07RN-F	H07RN-F	H07RN-F



NORMAL CROSS-SECTIONAL AREA 0.75mm²

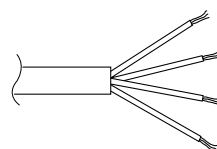


(mm²)

NORMAL CROSS SECTIONAL AREA	Grade	
	30k, 32k	36k, 38k
	0.75	0.75
Cable Type(B)	H07RN-F	H07RN-F

Connecting the Cables to the Outdoor Unit

1. Remove the control cover from the unit by loosening the screw.
Connect the wires to the terminals on the control board individually.
2. Secure the cable onto the control board with the cord clamp.
3. Refix the control cover to the original position with the screw.
4. Use a recognized circuit breaker "A" between the power source and the unit.
A disconnecting device to adequately disconnect all supply lines must be fitted.

Circuit Breaker (A)	Grade			
	7K~18K	~26K	~30K	~38K
	15	20	30	40

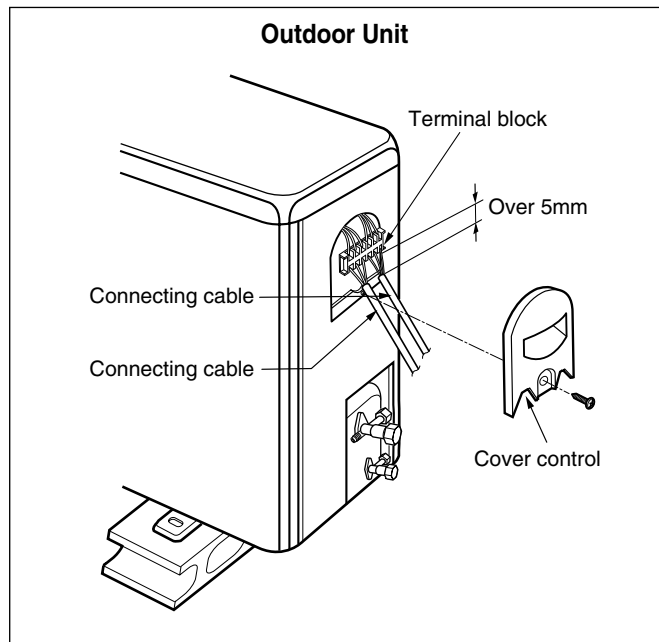


CAUTION: After the confirmation of the above conditions, prepare the wiring as follows:

- 1) Never fail to have an individual power circuit specifically for the air conditioner. As for the method of wiring, be guided by the circuit diagram posted on the inside of control cover.
- 2) The screw which fasten the wiring in the casing of electrical fittings are liable to come loose from vibrations to which the unit is subjected during the course of transportation. Check them and make sure that they are all tightly fastened. (If they are loose, it could cause burn-out of the wires.)
- 3) Specification of power source.
- 4) Confirm that electrical capacity is sufficient.
- 5) See to that the starting voltage is maintained at more than 90 percent of the rated voltage marked on the name plate.
- 6) Confirm that the cable thickness is as specified in the power source specification.
(Particularly note the relation between cable length and thickness. (Refer to page 19)
- 7) Always install an earth leakage circuit breaker in a wet or moist area.
- 8) The following would be caused by voltage drop.
 - Vibration of a magnetic switch, which will damage the contact point, fuse breaking, disturbance of the normal function of the overload.
- 9) The means for disconnection from a power supply shall be incorporated in the fixed wiring and have an air gap contact separation of at least 3mm in each active(phase) conductors.

Checking the Drainage


1. Checking the drainage.

- Pour a glass of water on the evaporator.
- Ensure the water flows through the drain hose of the indoor unit without any leakage and goes out the drain exit.




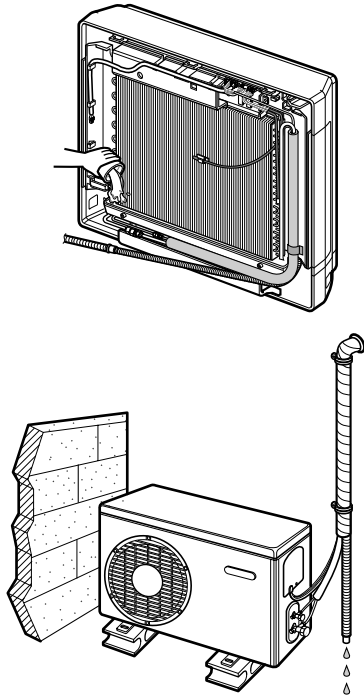


2. Drain piping

- The drain hose should point downward for easy drain flow.

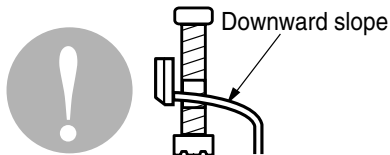

- Do not make drain piping like the following.

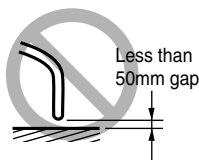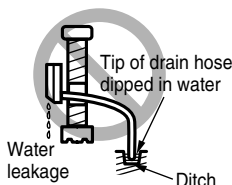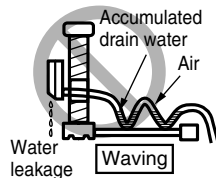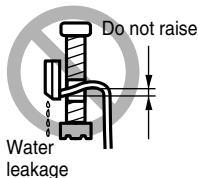


Forming the Piping

1. Form the piping by wrapping the connecting portion of the indoor unit with insulation material and secure it with two kinds of vinyl tapes.

- If you want to connect an additional drain hose, the end of the drain outlet should be routed above the ground. Secure the drain hose appropriately.


2. In cases where the outdoor unit is installed below the indoor unit perform the following.

- Tape the piping, drain hose and connecting cable from down to up.
- Secure the tapped piping along the exterior wall using saddle or equivalent.

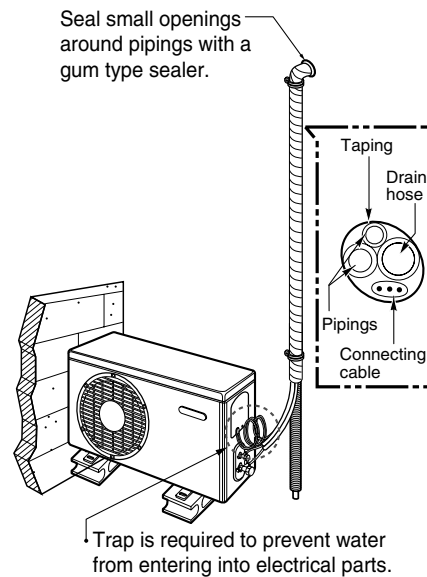

3. In cases where the Outdoor unit is installed above the Indoor unit perform the following.

- Tape the piping and connecting cable from down to up.
- Secure the taped piping along the exterior wall. Form a trap to prevent water entering the room.
- Fix the piping onto the wall by saddle or equivalent.

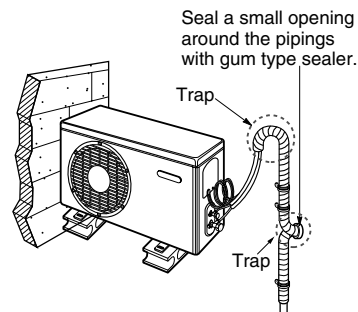

Air Purging

Air and moisture remaining in the refrigerant system have undesirable effects as indicated below.

- Pressure in the system rises.
- Operating current rises.
- Cooling(or heating) efficiency drops.
- Moisture in the refrigerant circuit may freeze and block capillary tubing.
- Water may lead to corrosion of parts in the refrigeration system.

Therefore, the refrigerant system must be leak tested and evacuated to remove any noncondensables and moisture from the system.

Air Purging with Vacuum Pump

1. Preparation

- Check that each tube(both liquid and gas side tubes) between the indoor and outdoor units have been properly connected and all wiring for the test run has been completed. Remove the service valve caps from both the gas and the liquid side on the outdoor unit. Note that both the liquid and the gas side service valves on the outdoor unit are kept closed at this stage.

2. Leak test


- Connect the manifold valve(with pressure gauges) and dry nitrogen gas cylinder to this service port with charge hoses.

CAUTION: Be sure to use a manifold valve for air purging. If it is not available, use a stop valve for this purpose. The "Hi" knob of the manifold valve must always be kept close.

- Pressurize the system to no more than 150 P.S.I.G. with dry nitrogen gas and close the cylinder valve when the gauge reading reached 150 P.S.I.G. Next, test for leaks with liquid soap.


CAUTION: To avoid nitrogen entering the refrigerant system in a liquid state, the top of the cylinder must be higher than its bottom when you pressurize the system. Usually, the cylinder is used in a vertical standing position.

- Do a leak test of all joints of the tubing(both indoor and outdoor) and both gas and liquid side service valves. Bubbles indicate a leak. Be sure to wipe off the soap with a clean cloth.
- After the system is found to be free of leaks, relieve the nitrogen pressure by loosening the charge hose connector at the nitrogen cylinder. When the system pressure is reduced to normal, disconnect the hose from the cylinder.

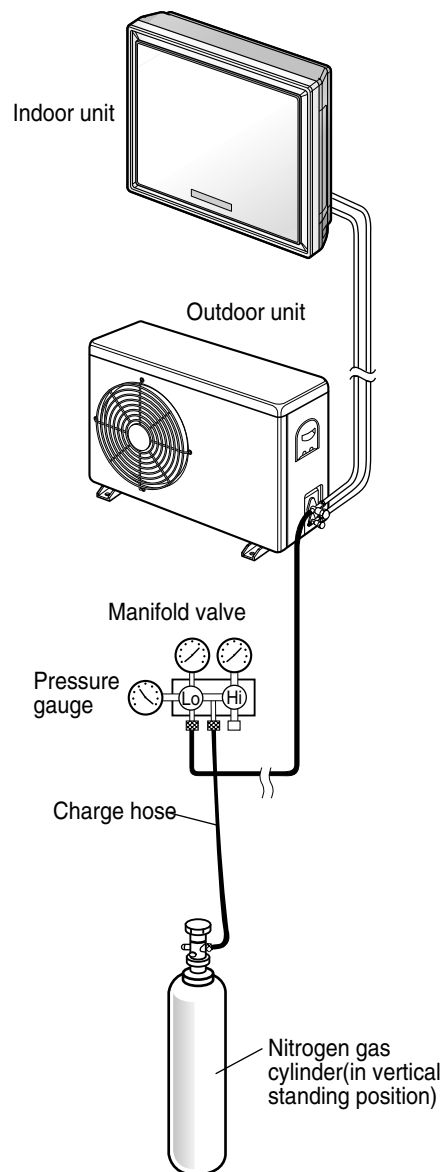

Soap water method

- (1) Remove the caps from the 2-way and 3-way valves.
- (2) Remove the service-port cap from the 3-way valve.
- (3) To open the 2-way valve turn the valve stem counterclockwise approximately 90°, wait for about 2~3 sec, and close it.
- (4) Apply a soap water or a liquid neutral detergent on the indoor unit connection or outdoor unit connections by a soft brush to check for leakage of the connecting points of the piping.
- (5) If bubbles come out, the pipes have leakage.

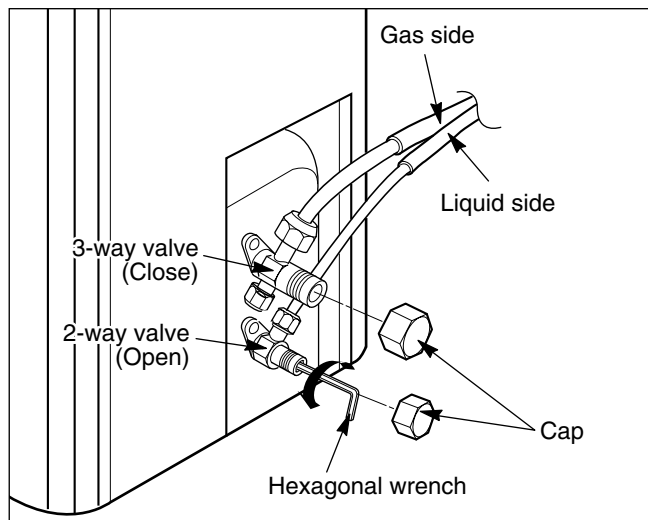

3. Evacuation

- Connect the charge hose end described in the preceding steps to the vacuum pump to evacuate the tubing and indoor unit. Confirm the "Lo" knob of the manifold valve is open. Then, run the vacuum pump. The operation time for evacuation varies with tubing length and capacity of the pump. The following table shows the time required for evacuation.


Required time for evacuation when 30 gal/h vacuum pump is used	
If tubing length is less than 10m (33 ft)	if tubing length is longer than 10m (33 ft)
10 min. or more	15 min. or more

- When the desired vacuum is reached, close the "Lo" knob of the manifold valve and stop the vacuum pump.

4. Finishing the job


- With a service valve wrench, turn the valve stem of liquid side valve counter-clockwise to fully open the valve.
- Turn the valve stem of gas side valve counter-clockwise to fully open the valve.
- Loosen the charge hose connected to the gas side service port slightly to release the pressure, then remove the hose.
- Replace the flare nut and its bonnet on the gas side service port and fasten the flare nut securely with an adjustable wrench. This process is very important to prevent leakage from the system.
- Replace the valve caps at both gas and liquid side service valves and fasten them tight.

This completes air purging with a vacuum pump. The air conditioner is now ready to test run.

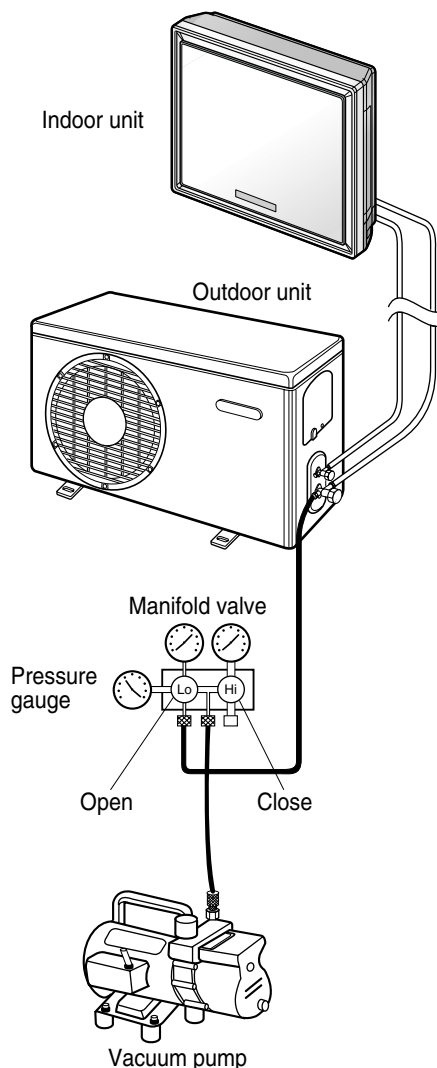


Front Panel Assembly


1. First, Check the side cover assembly exactly, and fix the power cord in the bottom groove of cover side left.

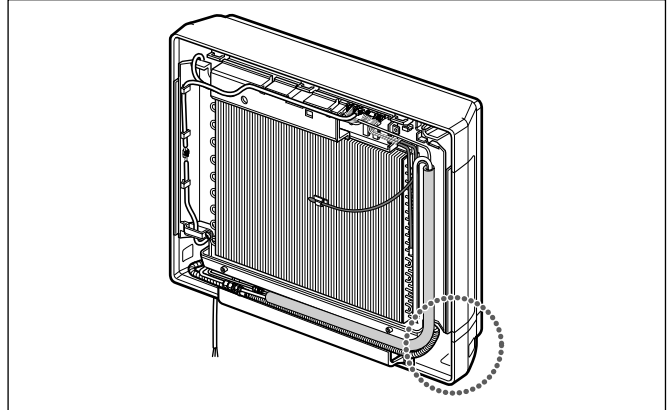

2. Assemble connecting lead wire with controller, fix the upper part of the front panel, and match the lower part of the front panel.

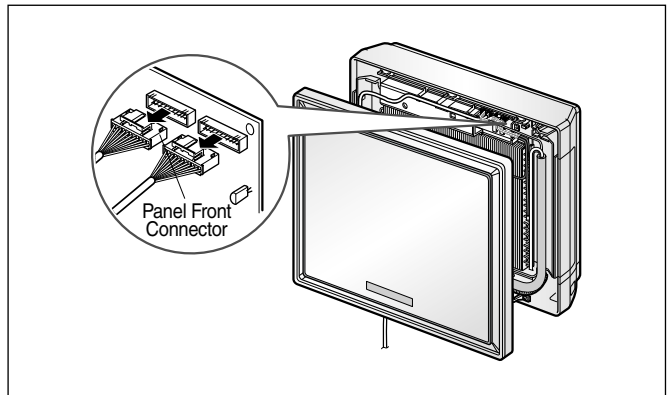

3. Screw up the front panel, and suspend the hook of the front panel in the groove.

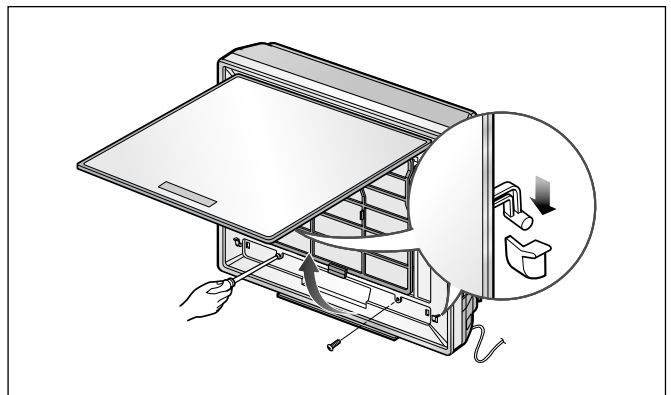


Test Running

1. Check that all tubing and wiring have been properly connected.
2. Check that the gas and liquid side service valves are fully open.

Prepare remote controller


1. Remove the battery cover by pulling it according to the arrow direction.
2. Insert new batteries making sure that the (+) and (-) of battery are installed correctly.
3. Reattach the cover by pushing it back into position.

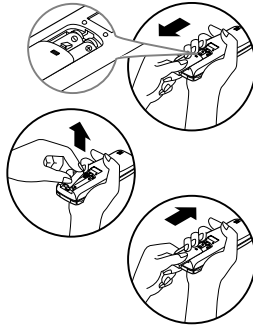

- NOTICE**
- Use 2 AAA(1.5volt) batteries. Do not use rechargeable batteries.
 - Remove the batteries from the remote control if the system is not going to be used for a long time.

Settlement of outdoor unit


- Anchor the outdoor unit with a bolt and nut(ø10mm) tightly and horizontally on a concrete or rigid mount.
- When installing on the wall, roof or rooftop, anchor the mounting base securely with a nail or wire assuming the influence of wind and earthquake.
- In the case when the vibration of the unit is conveyed to the hose, secure the unit with an anti-vibration bushing.

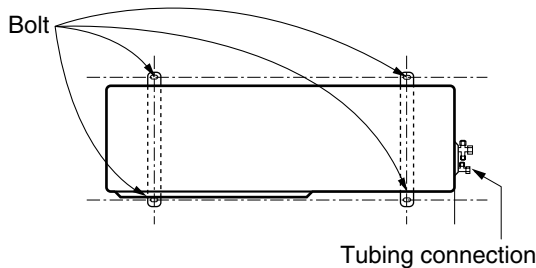

Evaluation of the performance

Operate unit for 15~20 minutes, then check the system refrigerant charge:

1. Measure the pressure of the gas side service valve.
2. Measure the temperature of the intake and discharge of air.
3. Ensure the difference between the intake temperature and the discharge is more than 8°C(46°F) (Cooling) or (Heating).

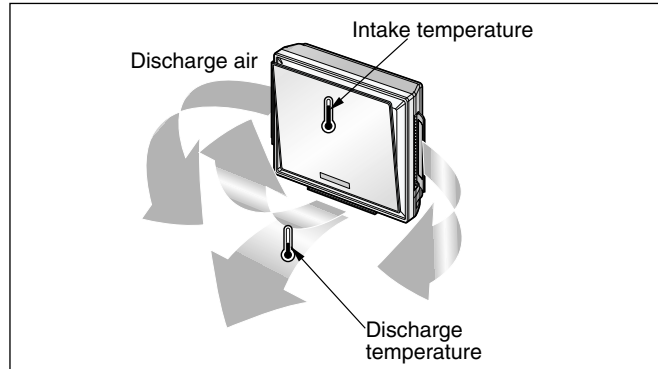

4. For reference; the gas side pressure of optimum condition is as below.(Cooling)

Refrigerant	Outside ambient TEMP.	The pressure of the gas side service valve.
R-22	35°C (95°F)	4~5kg/cm ² G(56.8~71.0 P.S.I.G.)
R-410A	35°C (95°F)	8.5~9.5kg/cm ² G(120~135 P.S.I.G.)

- NOTICE**
- If the actual pressure is higher than shown, the system is most likely over-charged, and charge should be removed. If the actual pressure are lower than shown, the system is most likely undercharged, and charge should be added.

The air conditioner is now ready for use.

PUMP DOWN

This is performed when the unit is to be relocated or the refrigerant circuit is serviced.

Pump Down means collecting all refrigerant in the outdoor unit without loss in refrigerant gas.

CAUTION:

Be sure to perform Pump Down procedure with the unit cooling mode.

Pump Down Procedure

1. Connect a low-pressure gauge manifold hose to the charge port on the gas side service valve.
2. Open the gas side service valve halfway and purge the air from the manifold hose using the refrigerant gas.
3. Close the liquid side service valve(all the way in).
4. Turn on the unit's operating switch and start the cooling operation.
5. When the low-pressure gauge reading becomes 1 to 0.5kg/cm² G(14.2 to 7.1 P.S.I.G.), fully close the gas side valve stem and then quickly turn off the unit. At that time, Pump Down has been completed and all refrigerant gas will have been collected in the outdoor unit.

Operation

Function of Controls

DISPLAY

1) C/O Model (high quality LCD remote controller supplied)

Operation Indicator

- On while in appliance operation, off while in appliance pause

Timer Indicator

- On while in timer mode (on/off) and in sleep timer mode, off when timer mode is completed or canceled.

Comp. Running Indicator

- While in appliance operation, on while in outdoor unit compressor running, off while in compressor off

Plasma Indicator

- On while in plasma mode, off while plasma mode is canceled.

Auto restart Indicator

- On while auto restart mode, off while auto restart mode is canceled.

Auto restart

- In case the power comes on again after a power failure, Auto Restarting Operation is the function to operate procedures automatically to the previous operating conditions.
If you want to use this operation, press the Auto Restart Button.

Power(Forced Operation)

- Operation starts, when this button is pressed and stops when you press the button again.

2) H/P Model (high quality LCD remote controller supplied)

Operation Indicator

- On while in appliance operation, off while in appliance pause

Timer Indicator

- On while in timer mode (on/off) and in sleep timer mode, off when timer mode is completed or canceled

Defrost Indicator

- Off except when hot start during heating mode operation or while in defrost control.

Plasma Indicator

- On while in plasma mode, off while plasma mode is canceled.

Auto restart Indicator

- On while auto restart mode, off while auto restart mode is canceled.

Auto restart

- In case the power comes on again after a power failure, Auto Restarting Operation is the function to operate procedures automatically to the previous operating conditions.
If you want to use this operation, press the Auto Restart Button.

Power(Forced Operation)

- Operation starts, when this button is pressed and stops when you press the button again.

■ Cooling Mode Operation

- When the intake air temperature reaches 0.5°C below the setting temp, the compressor and the outdoor fan stop.
- When it reaches 0.5°C above the setting temp, they start to operate again.
Compressor ON Temp=> Setting Temp+0.5°C
Compressor OFF Temp => Setting Temp-0.5°C
- While in compressor running, operating with the airflow speed set by the remote controller. While in compressor not running, operating with the low airflow speed regardless of the setting.

■ Healthy Dehumidification Mode

- When the dehumidification operation input by the remote controller is received, the intake air temperature is detected and the setting temp is automatically set according to the intake air temperature.
 - $26^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow 25^{\circ}\text{C}$
 - $24^{\circ}\text{C} \leq \text{Intake Air Temp} < 26^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}-1^{\circ}\text{C}$
 - $18^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}-0.5^{\circ}\text{C}$
 - $\text{Intake Air Temp} < 18^{\circ}\text{C} \Rightarrow 18^{\circ}\text{C}$
- While in compressor off, the indoor fan repeats low airflow speed and pause.
- While the intake air temp is between compressor on temp. and compressor off temp., 10-min dehumidification operation and 4-min compressor off repeat
 - Compressor ON Temp. \Rightarrow Setting Temp $+0.5^{\circ}\text{C}$
 - Compressor OFF Temp. \Rightarrow Setting Temp -0.5°C
- In 10-min dehumidification operation, the indoor fan operates with the low airflow speed.

■ Heating Mode Operation

- When the intake air temp reaches $+3^{\circ}\text{C}$ above the setting temp, the compressor is turned off. When below the setting temp, the compressor is turned on.
 - Compressor ON Temp. \Rightarrow Setting Temp.
 - Compressor OFF Temp. \Rightarrow Setting Temp. $+3^{\circ}\text{C}$
- While in compressor on, the indoor fan is off when the indoor pipe temp. is below 26°C , when above 28°C , it operates with the low or setting airflow speed (while in sleep mode, with the medium airflow speed).
- While in compressor off, the indoor fan is off when the indoor pipe temp is below 33°C , when above 35°C , it operates with the low airflow speed.
- If overloaded while in heating mode operation, in order to prevent the compressor from OLP operation, the outdoor fan is turned on/off according to the indoor pipe temp.
- While in defrost control, both of the indoor and outdoor fans are turned off.

■ Defrost Control

- While in heating mode operation in order to protect the evaporator pipe of outdoor unit from freezing, reversed to cooling cycle to defrost the evaporator pipe of the outdoor unit.
- Defrost control is available 30 minutes later since heating mode operation started, and it will not prolong over 6 minutes.
- Deicing starts only when the outdoor pipe temperature falls below -6°C after 30 minutes passed from starting of heating operating and more than 10 minutes operation of compressor.
- Deicing ends after 6 minutes passed from starting of deice operation or when the outdoor pipe temperature rises over 12°C even if before 6 minutes.

■ Fuzzy Operation (C/O Model)

- According to the temperature set by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
 - Compressor ON Temp \Rightarrow Setting Temp $+0.5^{\circ}\text{C}$
 - Compressor OFF Temp \Rightarrow Setting Temp $+0.5^{\circ}\text{C}$
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.

$26^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow 25^{\circ}\text{C}$
 $24^{\circ}\text{C} \leq \text{Intake Air Temp} < 26^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 1^{\circ}\text{C}$
 $22^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 0.5^{\circ}\text{C}$
 $18^{\circ}\text{C} \leq \text{Intake Air Temp} < 22^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}$
 $\text{Intake Air Temp} < 18^{\circ}\text{C} \Rightarrow 18^{\circ}\text{C}$

- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature

■ Fuzzy Operation (H/P Model)

- When any of operation mode is not selected like the moment of the power on or when 3 hrs has passed since the operation off, the operation mode is selected.
- When determining the operation mode, the compressor, the outdoor fan, and the 4 way valve are off and only the indoor fan is operated for 15 seconds. Then an operation mode is selected according to the intake air temp at that moment as follows.
 $24^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow \text{Fuzzy Operation for Cooling}$
 $21^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Fuzzy Operation for Dehumidification}$
 $\text{Intake Air Temp} < 21^{\circ}\text{C} \Rightarrow \text{Fuzzy Operation for Heating}$
- If any of the operation modes among cooling / dehumidification / heating mode operations is carried out for 10 sec or longer before Fuzzy operation, the mode before Fuzzy operation is operated.

1) Fuzzy Operation for Cooling

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
Compressor ON Temp $\Rightarrow \text{Setting Temp} + 0.5^{\circ}\text{C}$
Compressor OFF Temp $\Rightarrow \text{Setting Temp} + 0.5^{\circ}\text{C}$
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
 $26^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow 25^{\circ}\text{C}$
 $24^{\circ}\text{C} \leq \text{Intake Air Temp} < 26^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 1^{\circ}\text{C}$
 $22^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 0.5^{\circ}\text{C}$
 $18^{\circ}\text{C} \leq \text{Intake Air Temp} < 22^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}$
 $\text{Intake Air Temp} < 18^{\circ}\text{C} \Rightarrow 18^{\circ}\text{C}$
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature.

2) Fuzzy Operation for Dehumidification

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
Compressor ON Temp $\Rightarrow \text{Setting Temp} + 0.5^{\circ}\text{C}$
Compressor OFF Temp $\Rightarrow \text{Setting Temp} + 0.5^{\circ}\text{C}$

- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.

$26^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow 25^{\circ}\text{C}$

$24^{\circ}\text{C} \leq \text{Intake Air Temp} < 26^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 1^{\circ}\text{C}$

$22^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 0.5^{\circ}\text{C}$

$18^{\circ}\text{C} \leq \text{Intake Air Temp} < 22^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}$

$\text{Intake Air Temp} < 18^{\circ}\text{C} \Rightarrow 18^{\circ}\text{C}$

- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan repeats the low airflow speed or pause as in dehumidification operation.

3) Fuzzy Operation for Heating

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 3°C or more above the setting temp, the compressor is turned off. When below the setting temp, the compressor is turned on.

Compressor ON Temp \Rightarrow Setting Temp

Compressor OFF Temp \Rightarrow Setting Temp + 3°C

- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.

$20^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow \text{Intake Air Temp} + 0.5^{\circ}\text{C}$

$\text{Intake Air Temp} < 20^{\circ}\text{C} \Rightarrow 20^{\circ}\text{C}$

- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is set to the high or the medium according to the intake air temperature and the setting temperature.

■ Airflow Speed Selection

- The airflow speed of the indoor fan is set to high, medium, low, or chaos by the input of the airflow speed selection key on the remote controller.

■ On-Timer Operation

- When the set time is reached after the time is input by the remote controller, the appliance starts to operate.
- The timer LED is on when the on-timer is input. It is off when the time set by the timer is reached.
- If the appliance is operating at the time set by the timer, the operation continues.

■ Off-Timer Operation

- When the set time is reached after the time is input by the remote controller, the appliance stops operating.
- The timer LED is on when the off-timer is input. It is off when the time set by the timer is reached.
- If the appliance is on pause at the time set by the timer, the pause continues.

■ Off-Timer <=> On-Timer Operation

- When the set time is reached after the on/off time is input by the remote controller, the on/off-timer operation is carried out according to the set time.

■ Sleep Timer Operation

- When the sleep time is reached after <1,2,3,4,5,6,7,0(cancel) hr> is input by the remote controller while in appliance operation, the operation of the appliance stops.
- While the appliance is on pause, the sleep timer mode cannot be input.
- While in cooling mode operation, 30 min later since the start of the sleep timer, the setting temperature increases by 1°C. After another 30 min elapse, it increases by 1°C again.
- When the sleep timer mode is input while in cooling cycle mode, the airflow speed of the indoor fan is set to the low.
- When the sleep timer mode is input while in heating cycle mode, the airflow speed of the indoor fan is set to the medium.

■ Chaos Swing Mode

- By the Chaos Swing key input, the vane automatically operates with the Chaos Swing or they are fixed to the desired direction.

■ Chaos Natural Wind Mode

- When the Chaos Natural Wind mode is selected and then operated, the high, medium, or low speed of the airflow mode is operated for 2~15 sec randomly by the Chaos Simulation.”

■ Jet Cool Mode Operation (C/O Model)

- If the Jet Cool key is input at any operation mode while in appliance operation, the Jet Cool mode operates.
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- During the JET COOL function at any moment, the A/C starts to blow the cool air with side louvers closed at extremely high speed for 30 minutes setting the room temp. automatically to 18°C.

■ Jet Cool Mode Operation (H/P Model)

- While in heating mode or Fuzzy operation, the Jet Cool key cannot be input. When it is input while in the other mode operation (cooling, dehumidification, ventilation), the Jet Cool mode is operated.”
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- During the JET HEAT function at any moment, the A/C starts to blow the hot air with side louvers closed at extremely high speed for 60 minutes setting the room temp. automatically to 30°C.

■ Auto Restarting Operation

- When the power is restored after a sudden power failure while in appliance operation, the mode before the power failure is kept on the memory and the appliance automatically operates in the mode on the memory.
- Operation Mode that is kept on the memory
 - State of Operation ON/OFF

- Operation Mode/Setting Temp/Selected Airflow Speed
- Sleep Timer Mode/Remaining Time of Sleep Timer (unit of hour)

■ Forced Operation

- Operation procedures when the remote control can't be used.
- The operation will be started if the power button is pressed.
- If you want to stop operation, re-press the button.

	Cooling Model	Heat pump Model		
		Room Temp. $\geq 24^{\circ}\text{C}$	$21^{\circ}\text{C} \leq \text{Room Temp.} < 24^{\circ}\text{C}$	Room Temp. $< 21^{\circ}\text{C}$
Operating mode	Cooling	Cooling	Healthy Dehumidification	Heating
Indoor Fan Speed	High	High	High	High
Setting Temperature	22°C	22°C	23°C	24°C

- While in forced operation, the key input by the remote control has no effect and the buzzer sounds 10 times to indicate the forced operation.

■ Test operation

- During the TEST OPERATION, the unit operates in cooling mode at high speed fan, regardless of room temperature and resets in 18 ± 1 minutes.
- During test operation, if remote controller signal is received, the unit operates as remote controller sets. If you want to use this operation, open the front panel upward and Press the power button let it be pressed for about 3 seconds.
- If you want to stop the operation, re-press the button.

■ Protection of the evaporator pipe from frosting

- If the indoor pipe temp is below 0°C in 7 min. after the compressor operates without any pause while in cooling cycle operation mode, the compressor and the outdoor fan are turned off in order to protect the indoor evaporator pipe from frosting.
- When the indoor pipe temp is 7°C or higher after 3 min. pause of the compressor, the compressor and the outdoor fan is turned on according to the condition of the room temperature.

■ Buzzer Sounding Operation


- When the appliance-operation key is input by the remote control, the short "beep-beep-" sounds.
- When the appliance-pause key is input by the remote control, the long "beep—" sounds.
- When a key is input by the remote control while the slide switch on the main unit of the appliance is on the forced operation position, the error sound "beep-beep-beep-beep-beep-" is made 10 times to indicate that the remote control signal cannot be received.

■ Air Cleaner Operation


- When an air cleaner function is selected during Air Conditioner operation
 - Plasma air cleaner function will be operated while in any operation mode with selecting the function.
 - The function is to be stopped while it is operating with selecting the function.
- When an air cleaner function is selected during operation off
 - The function will be only operated.
- When inlet grille of air conditioner is opened during plasma operation, High Voltage Generator(H.V.B) is to be stopped. When inlet grille of air conditioner is closed during plasma operation, High Voltage Generator(H.V.B) will be operated again.

Display Function


1. Heating Model

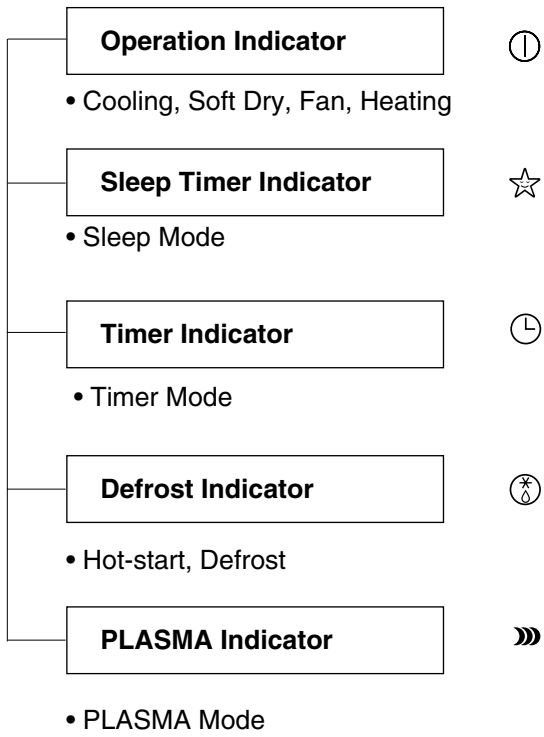

2. Cooling Model

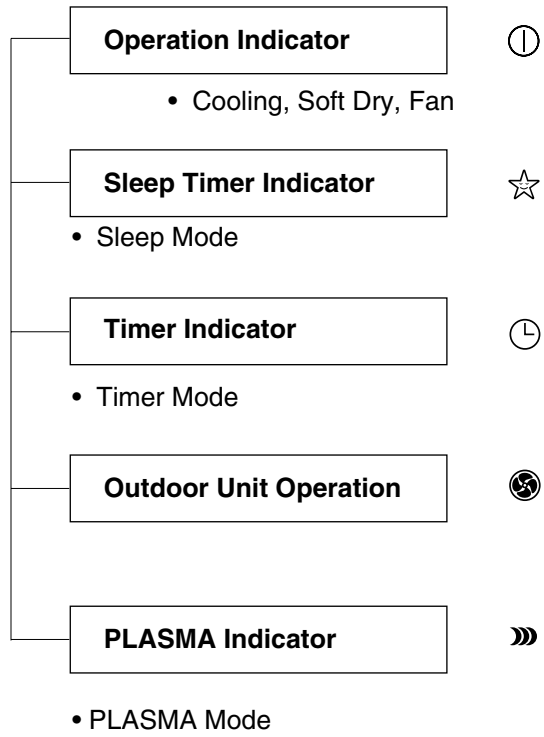



Self-diagnosis Function

Error Code	Error Display LED (Indoor body operation LED)	Error contents	SVC check point
1	 <p>The diagram shows four vertical bars representing pulses. The first pulse is labeled '(once)'. Below the pulses, three double-headed arrows indicate intervals of 3 seconds between each pulse.</p>	<ul style="list-style-type: none"> • Indoor room temperature thermistor open/short • Indoor pipe temperature thermistor open/short. 	<ul style="list-style-type: none"> • Indoor Thermistor assembly check

Remote Control Operations

The controls will look like the following.

Controls

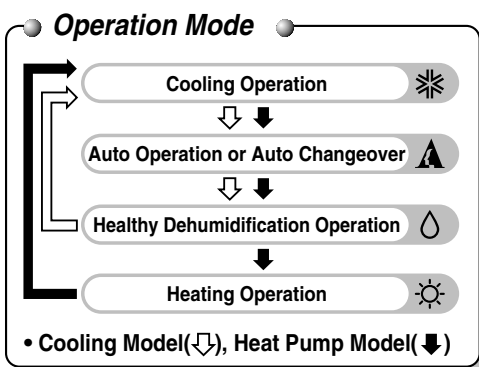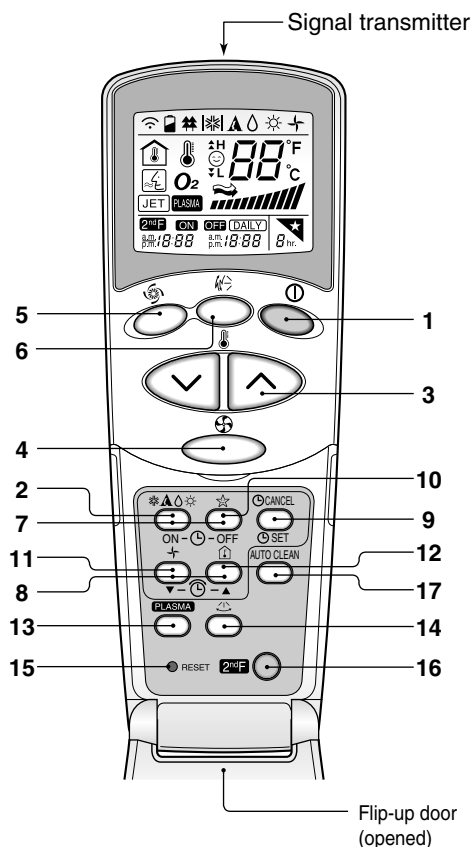

1. START/STOP BUTTON

Operation starts when this button is pressed and stops when the button is pressed again.



2. OPERATION MODE SELECTION BUTTON

Used to select the operation mode.



3. ROOM TEMPERATURE SETTING BUTTONS

Used to select the room temperature.



4. INDOOR FAN SPEED SELECTOR

Used to select fan speed in four steps low, medium, high and CHAOS.



5. JET COOL/HEATING(OPTIONAL)

Used to start or stop the speed cooling. (Speed cooling/heating operates at super high fan speed in cooling/heating mode.)



6. CHAOS SWING BUTTON

Used to stop or start louver movement and set the desired up/down airflow direction.



7. ON/OFF TIMER BUTTONS

Used to set the time of starting and stopping operation.

8. TIME SETTING BUTTONS

Used to adjust the time.

9. TIMER SET/CANCEL BUTTON

Used to set the timer when the desired time is obtained and to cancel the Timer operation.

10. SLEEP MODE AUTO BUTTON

Used to set Sleep Mode Auto operation.

11. AIR CIRCULATION BUTTON

Used to circulate the room air without cooling or heating.

12. ROOM TEMPERATURE CHECKING BUTTON

Used to check the room temperature.

13. NANO PLASMA(OPTIONAL)

Used to start or stop the plasma-purification function.

14. HORIZONTAL AIRFLOW DIRECTION CONTROL BUTTON (OPTIONAL)

Used to set the desired horizontal airflow direction.

15. RESET BUTTON

Used prior to resetting time or after replacing batteries.

16. 2nd F Button

Used prior to using modes printed in blue at the bottom of buttons.

17. AUTO CLEAN(OPTIONAL)

Used to set Auto Clean mode.


Disassembly

Indoor Unit

! WARNING: Disconnect the unit from power supply before making any checks. Be sure the power switch is set to "OFF"


1. To remove the Grille from the Chassis.

- Pull the grille bottom, then remove 2 securing screws.
- Lift the both lower parts of panel front.
- After pull down this panel a bit, separate connecting wire with product.

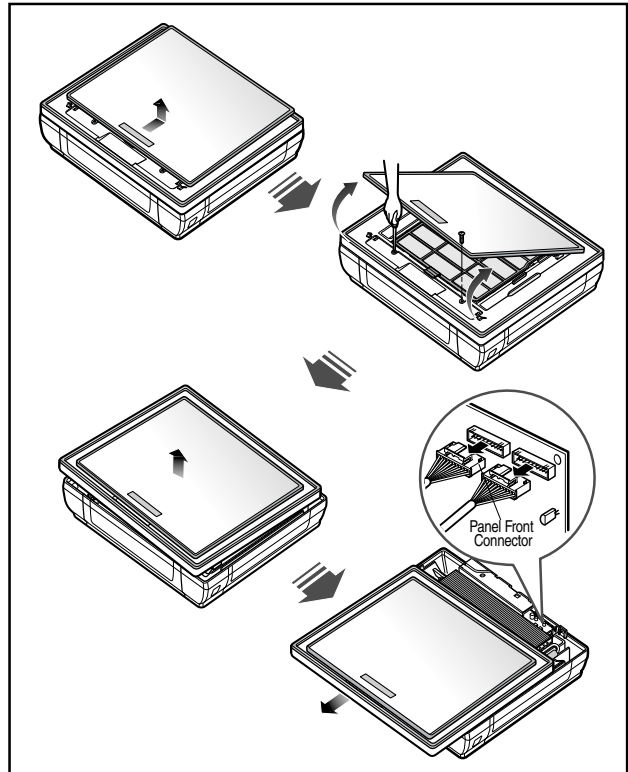


2. To remove the Control Box.

- Before removing the control box, be sure to disconnect the wires from PWB.
- Pull the cover control out from the control box and disconnect other wires.
- Remove securing screws.
- Pull the control box out from the chassis carefully.

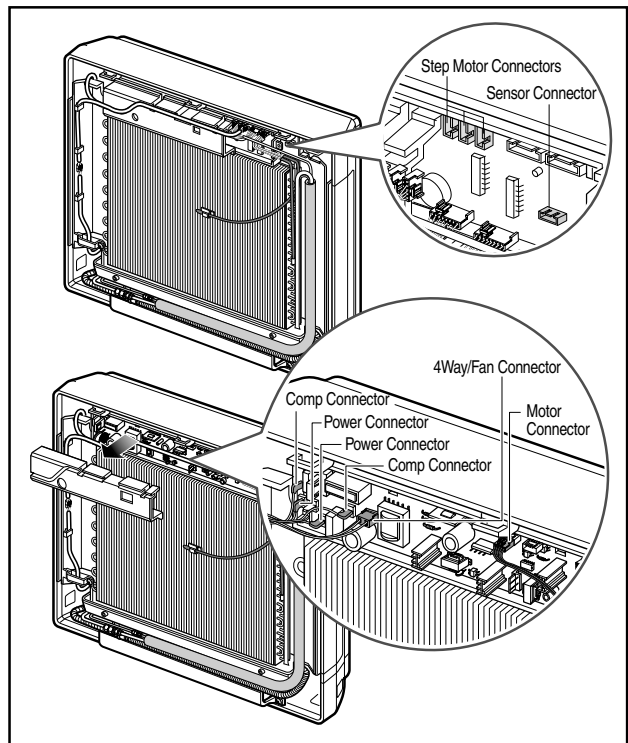


3. To remove the Evaporator.


- Remove 4 screws securing the evaporator.
- Pull the evaporator out from the chassis carefully.

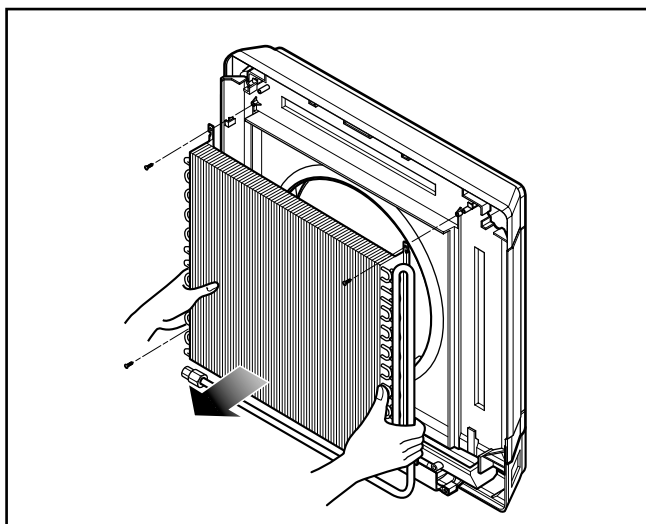**4. Before removing the Turbo Fan.**

- Remove the securing screws from the chassis.
- Pull the pipe cover, top cover and the air guide.

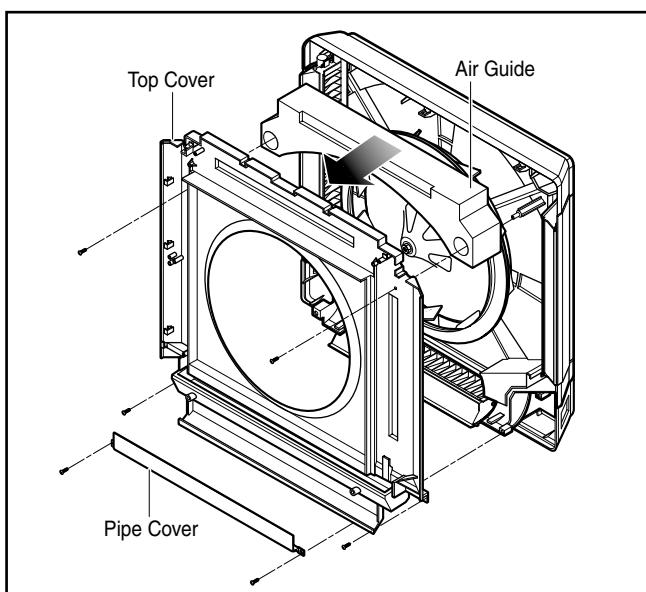
**5. To remove the Motor.**

- Remove the securing bolt from the motor shaft.
- Pull the fan out from the motor shaft.
- Remove 4 screws securing motor mount from the chassis and lift up the motor mount and the bracket.

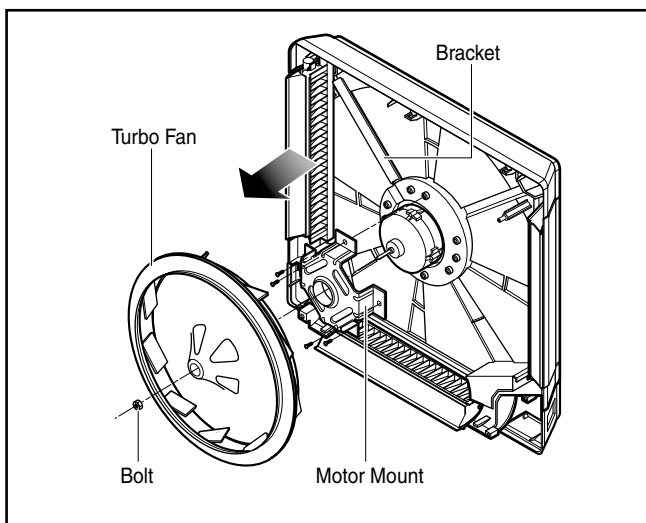


Wiring Diagram

Indoor Unit

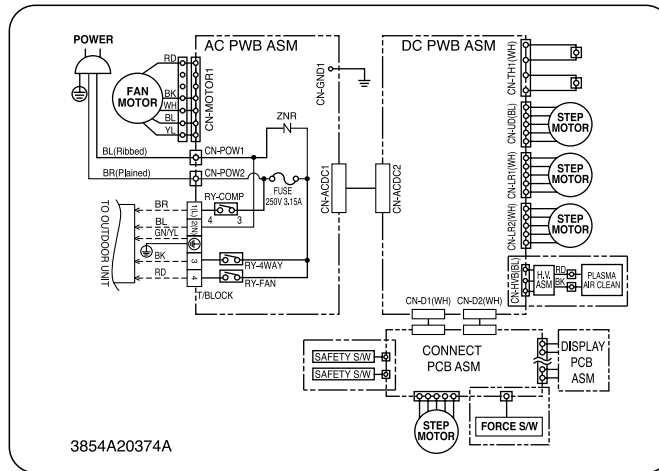


Outdoor Unit

AS-H076PB/D/M/WL1

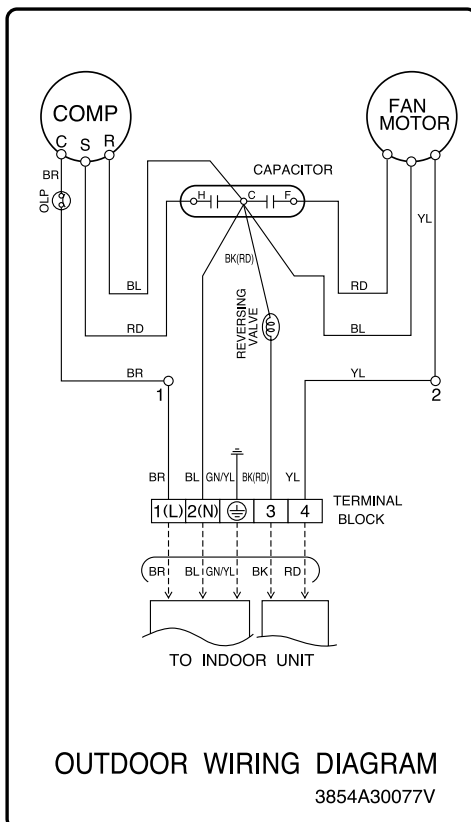


**AS-H096PB/D/M/WL1
AS-H126PB/D/M/WL1**

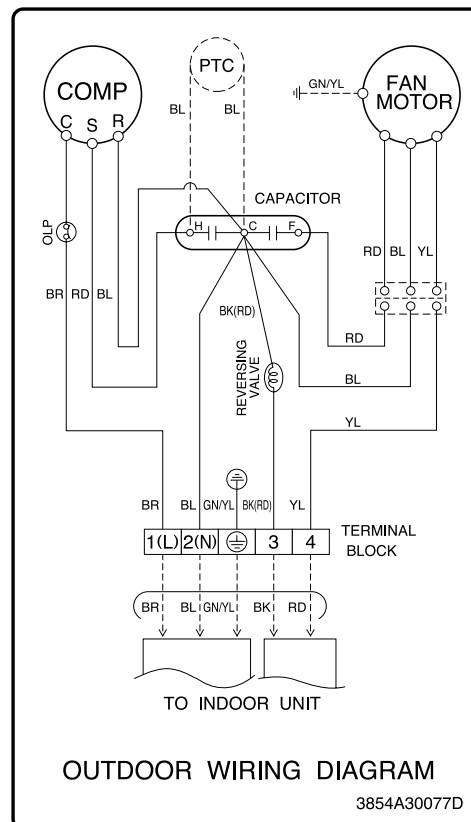

Components Location


MAIN P.W.B ASSEMBLY (AC PART)

- HEAT PUMP MODEL

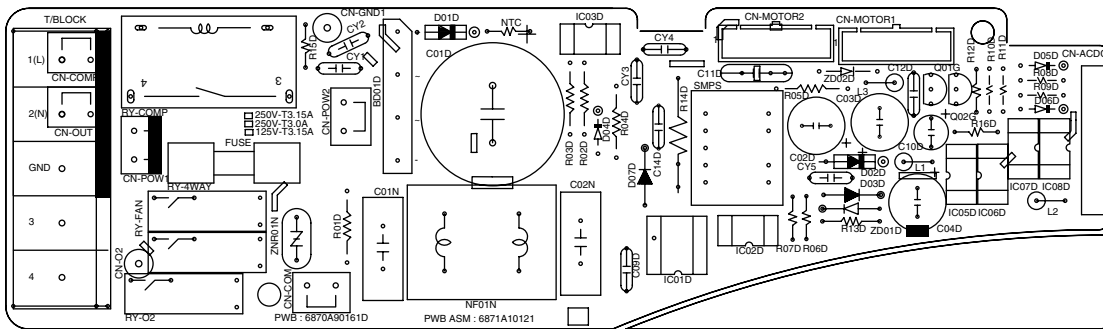


MAIN P.W.B ASSEMBLY (DC PART)

- TOP VIEW

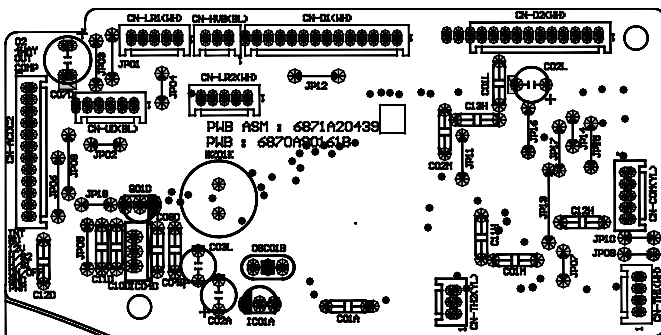


- BOTTOM VIEW

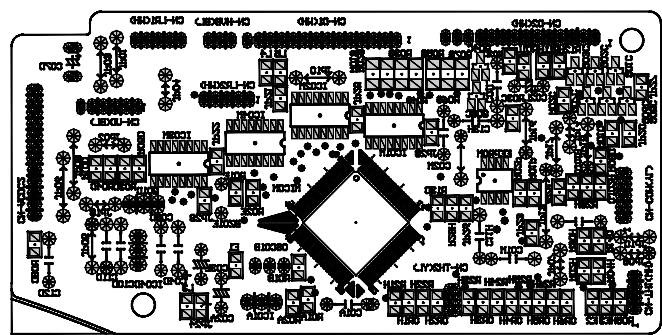


Troubleshooting Guide

Refrigeration Cycle Diagram

(1) Cooling Only Models

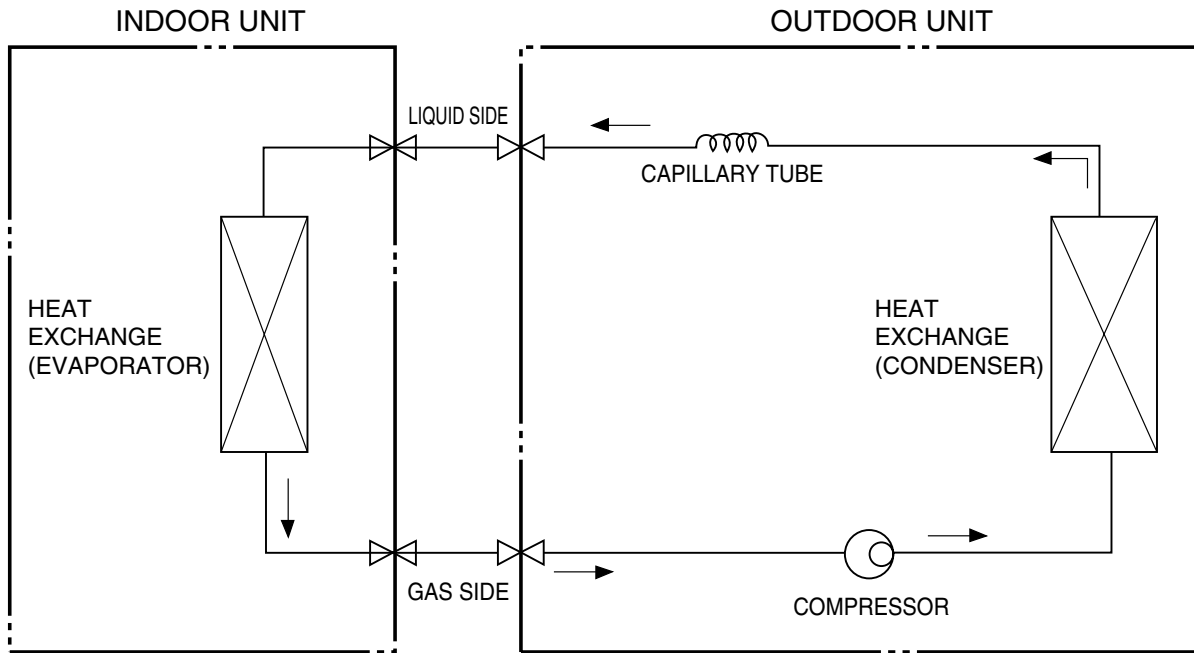


(2) Cooling & Heating Models

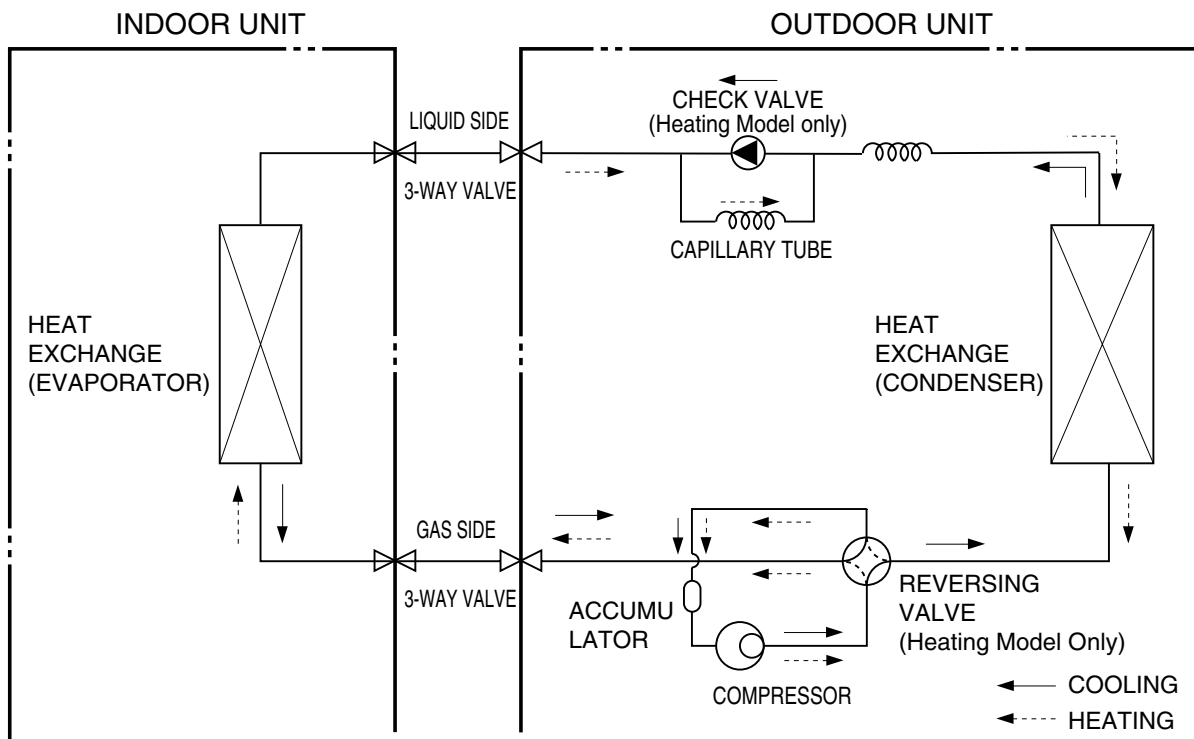

2-way, 3-way Valve

		2-way Valve (Liquid Side)	3-way Valve (Gas Side)	
Works		Shaft position	Shaft position	Service port
Shipping		Closed (with valve cap)	Closed (with valve cap)	Closed (with cap)
1.	Air purging (Installation)	Open (counter-clockwise)	Closed (clockwise)	Open (push-pin or with vacuum pump)
Operation		Open (with valve cap)	Open (with valve cap)	Closed (with cap)
2.	Pumping down (Transferring)	Closed (clockwise)	Open (counter-clockwise)	Open (connected manifold gauge)
3.	Evacuation (Servicing)	Open	Open	Open (with charging cylinder)
4.	Gas charging (Servicing)	Open	Open	Open (with charging cylinder)
5.	Pressure check (Servicing)	Open	Open	Open (with charging cylinder)
6.	Gas releasing (Servicing)	Open	Open	Open (with charging cylinder)

Pumping Down

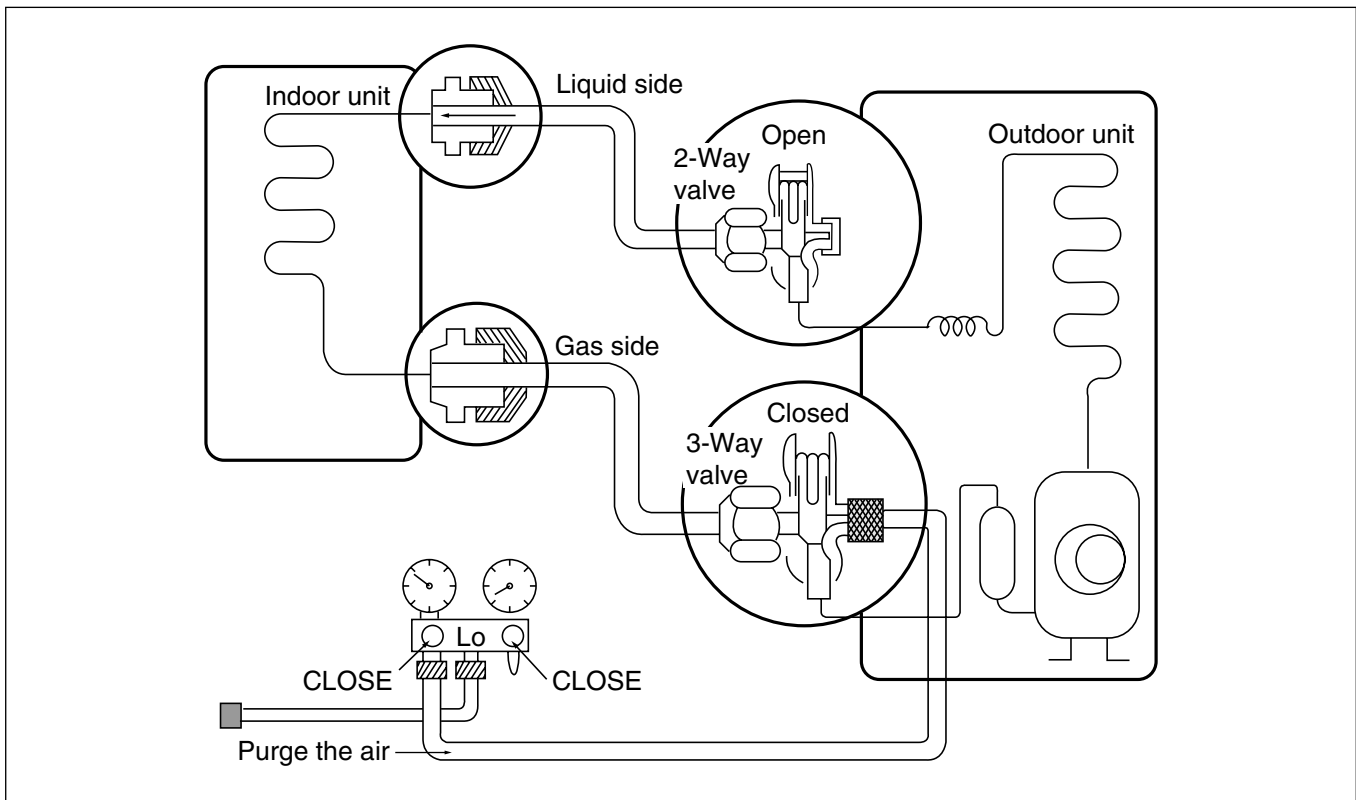


• Procedure

- (1) **Confirm that both the 2-way and 3-way valves are set to the open position.**
 - Remove the valve stem caps and confirm that the valve stems are in the raised position.
 - Be sure to use a hexagonal wrench to operate the valve stems.
- (2) **Operate the unit for 10 to 15 minutes.**
- (3) **Stop operation and wait for 3 minutes, then connect the charge set to the service port of the 3-way valve.**
 - Connect the charge hose with the push pin to the service port.
- (4) **Air purging of the charge hose.**
 - Open the low-pressure valve on the charge set slightly to air purge from the charge hose.
- (5) **Set the 2-way valve to the closed position.**
- (6) **Operate the air conditioner at the cooling cycle and stop it when the gauge indicates $1\text{kg}/\text{cm}^2\text{g}$.**
- (7) **Immediately set the 3-way valve to the closed position.**
 - Do this quickly so that the gauge ends up indicating 3 to $5\text{kg}/\text{cm}^2\text{g}$.
- (8) **Disconnect the charge set, and mount the 2-way and 3-way valve's stem nuts and the service port nut.**
 - Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m .
 - Be sure to check for gas leakage.

Balance Refrigerant of the 3-way Valve

(Gas leakage)

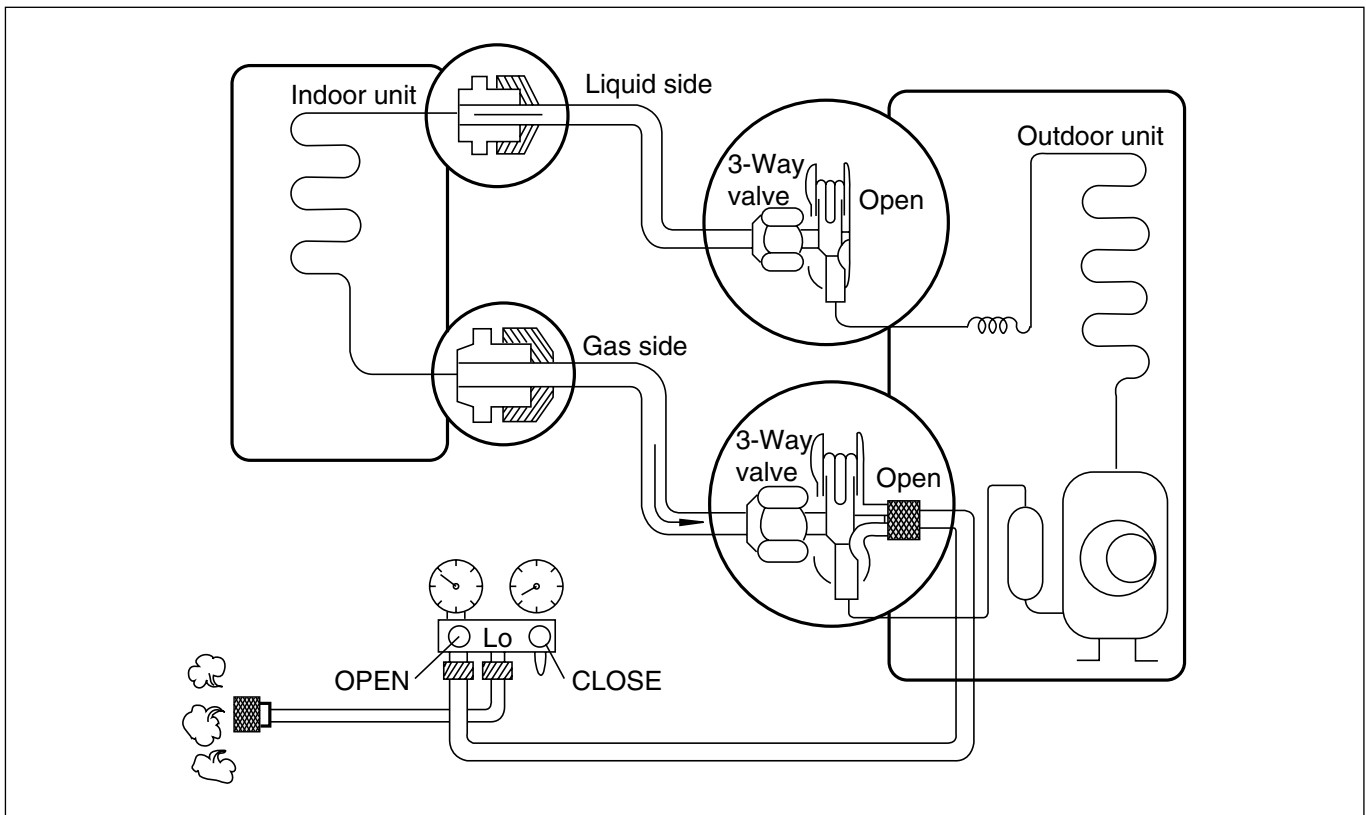


• Procedure

- (1) Confirm that both the 2-way and 3-way valves are set to the back seat.
- (2) Connect the charge set to the 3-way valve's port.
 - Leave the valve on the charge set closed.
 - Connect the charge hose to the service port.
- (3) Open the valve (Lo side) on the charge set and discharge the refrigerant until the gauge indicates 0 kg/cm²G.
 - If there is no air in the refrigerant cycle (the pressure when the air conditioner is not running is higher than 1 kg/cm²G), discharge the refrigerant until the gauge indicates 0.5 to 1 kg/cm²G. If this is the case, it will not be necessary to apply a evacuation.
 - Discharge the refrigerant gradually; if it is discharged too suddenly, the refrigeration oil will also be discharged.

Evacuation

(All amount of refrigerant leaked)

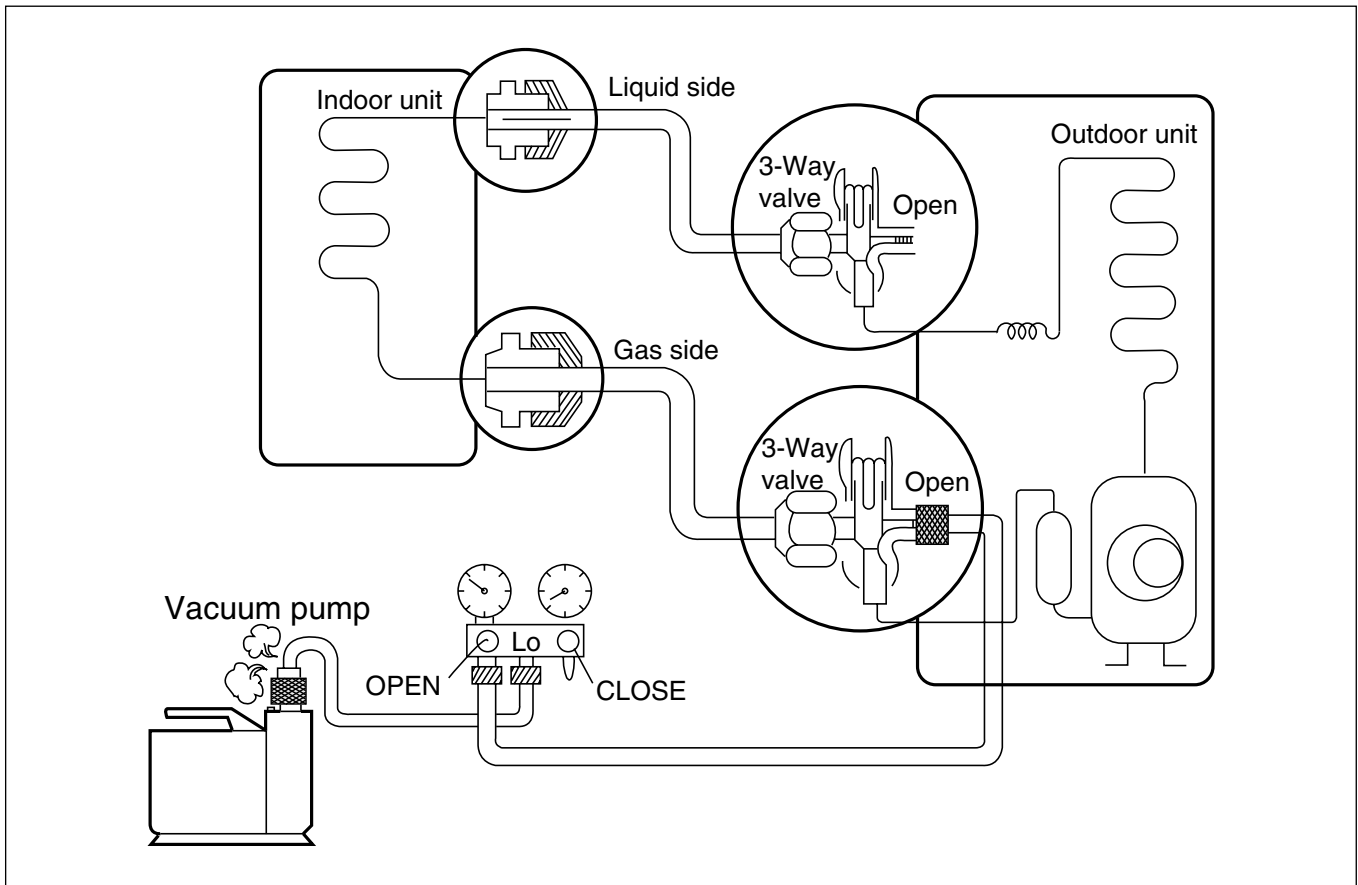


• Procedure

- (1) **Connect the vacuum pump to the center hose of charge set center hose**
- (2) **Evacuation for approximately one hour.**
 - Confirm that the gauge needle has moved toward -76 cmHg (vacuum of 4 mmHg or less).
- (3) **Close the valve (Lo side) on the charge set, turn off the vacuum pump, and confirm that the gauge needle does not move (approximately 5 minutes after turning off the vacuum pump).**
- (4) **Disconnect the charge hose from the vacuum pump.**
 - Vacuum pump oil.
 - If the vacuum pump oil becomes dirty or depleted, replenish as needed.

Gas Charging

(After Evacuation)

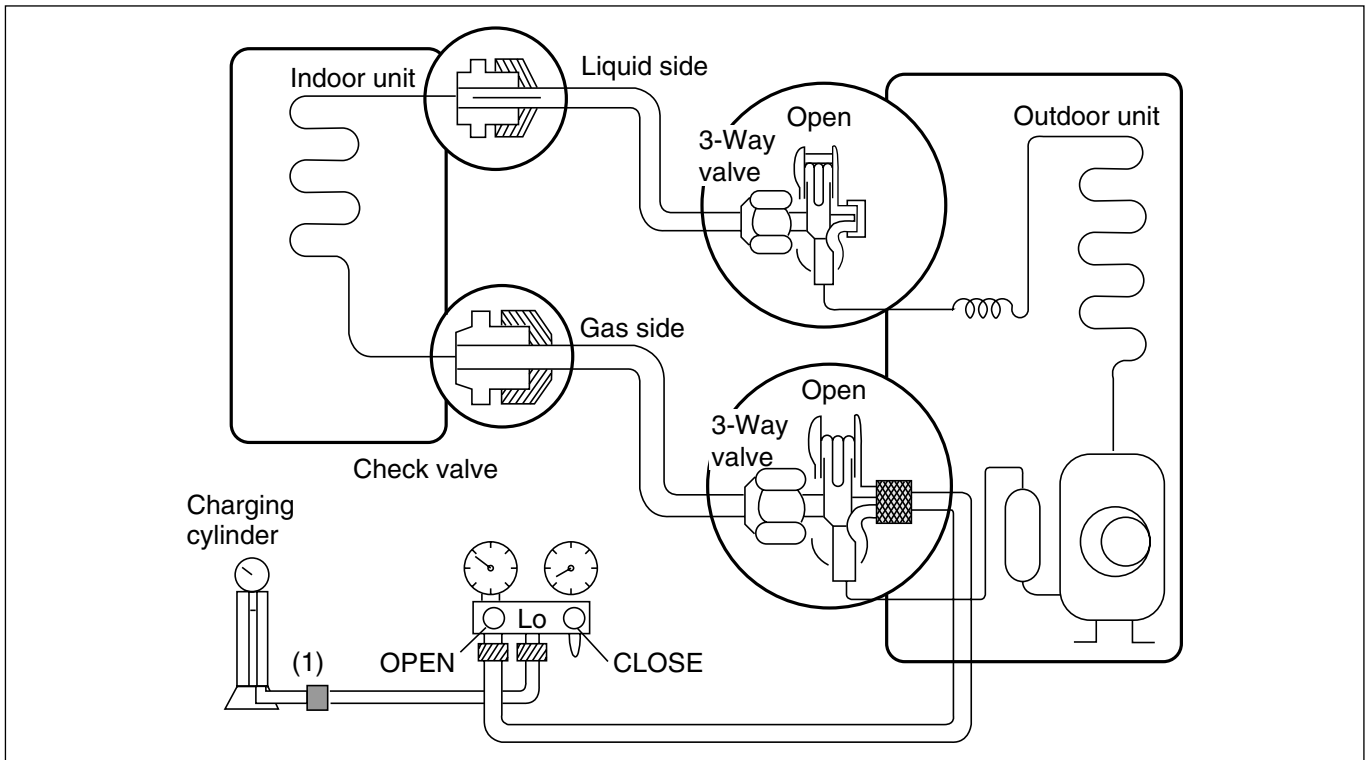

• Procedure

(1) Connect the charge hose to the charging cylinder.

- Connect the charge hose which you disconnected from the vacuum pump to the valve at the bottom of the cylinder.
- If you are using a gas cylinder, also use a scale and reverse the cylinder so that the system can be charged with liquid.

(2) Purge the air from the charge hose.

- Open the valve at the bottom of the cylinder and press the check valve on the charge set to purge the air. (Be careful of the liquid refrigerant). The procedure is the same if using a gas cylinder.

(3) Open the valve (Lo side on the charge set and charge the system with liquid refrigerant.

- If the system can not be charged with the specified amount of refrigerant, it can be charged with a little at a time (approximately 150g each time) while operating the air conditioner in the cooling cycle; however, one time is not sufficient, wait approximately 1 minute and then repeat the procedure (pumping down-pin).

This is different from previous procedures. Because you are charging with liquid refrigerant from the gas side, absolutely do not attempt to charge with larger amounts of liquid refrigerant while operating the air conditioner.

(4) Immediately disconnect the charge hose from the 3-way valve's service port.

- Stopping partway will allow the gas to be discharged.
- If the system has been charged with liquid refrigerant while operating the air conditioner turn off the air conditioner before disconnecting the hose.


(5) Mount the valve stem nuts and the service port nut.

- Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
- Be sure to check for gas leakage.

Cycle Parts

Trouble analysis

1. Check temperature difference between intake and discharge air and operating current.

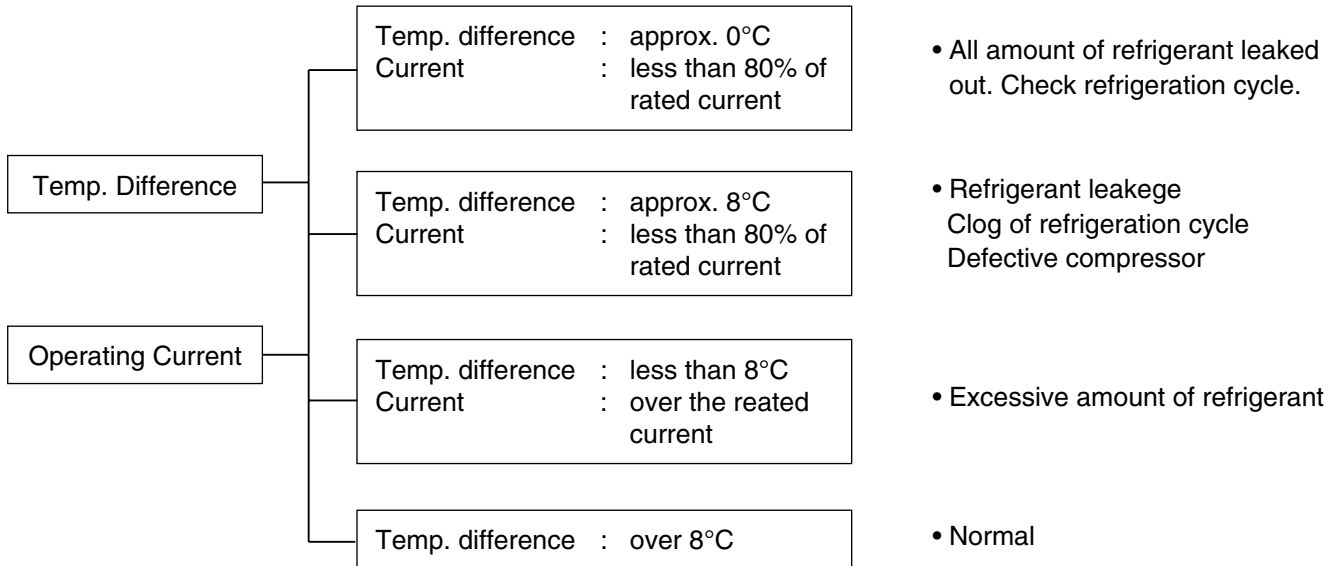

NOTICE

Temperature difference between intake and discharge air depends on room air humidity. When the room air humidity is relatively higher, temperature difference is smaller. When the room air humidity is relatively lower temperature difference is larger.

2. Check temperature and pressure of refrigeration cycle.

Suction pressure (Compared with the normal value)	Temperature (Compared with the normal valve)	Cause of Trouble	Description
Higher	High	Defective compressor Defective 4-way reverse valve	Current is low.
	Normal	Excessive amount of refrigerant	High pressure does not quickly rise at the beginning of operation.
Lower	Higher	Insufficient amount of refrigerant (Leakage)	Current is low.
		Clogging	Current is low.


NOTICE

1. The suction pressure is usually 4.5~6.0 kg/cm²G(Cooling) at normal condition.
2. The temperature can be measured by attaching the thermometer to the low pressure tubing and wrap it with putty.

Electronic Parts


Product does not operate at all.

(* Refer to Electronic Control Device drawing and Schematic diagram.)

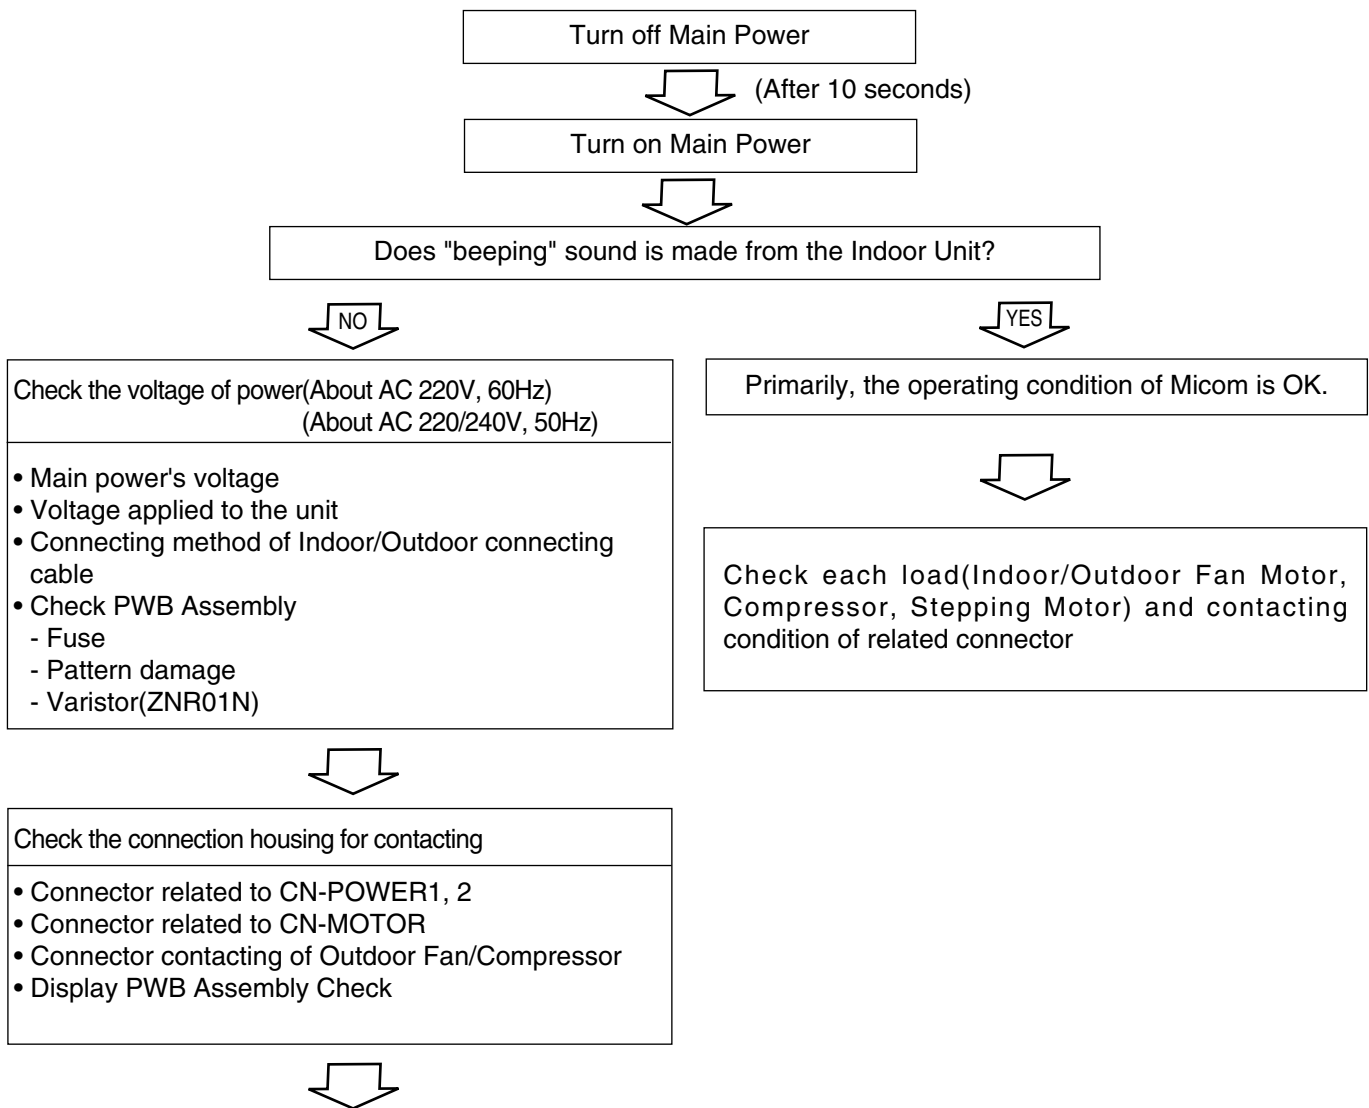

Main PCB Board Operation Check		
Items	Content	Remedy
<ul style="list-style-type: none"> • SMPS Transformer (Indoor unit) - Input Voltage - Output Voltage <li style="text-align: center;">↓ • IC04D(7805) Output <li style="text-align: center;">↓ • IC01A(Reset IC) OSC01B(8MHz) 	<ul style="list-style-type: none"> - About AC220V/240V±10% - Check the power voltage - About DC12V • DC +5V • Voltage of Micom No. 36, (DC +4.5V over) and Soldering condition. 	<ul style="list-style-type: none"> • Replace Trans • Replace IC04D • Replace faulty parts

The product does not operate with the remote controller.

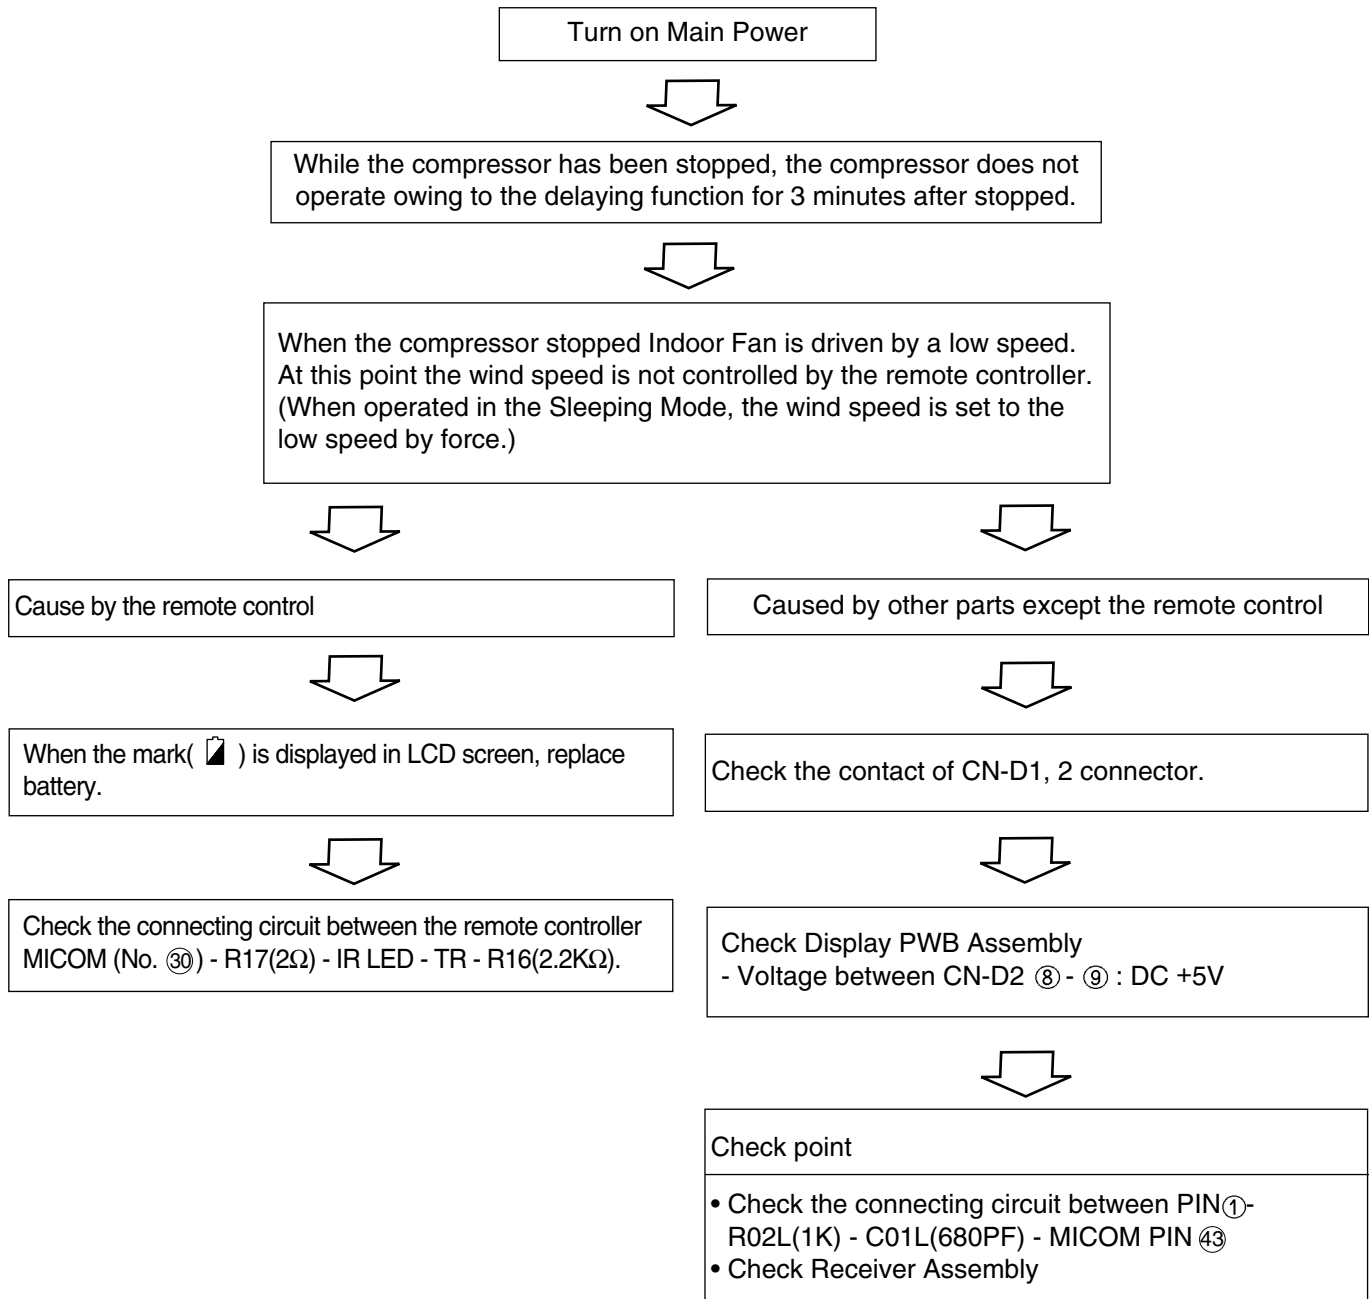

Compressor/Outdoor Fan are unable to drive.

Turn on Main Power



Operate "Cooling Mode(※)" by setting the desired temperature of the remote controller is less than one of the indoor temperature by 1°C at least.



When in Air Circulation Mode, Compressor/Outdoor Fan is stopped.



Check the sensor for indoor temperature is attached as close as to be effected by the temperature of Heat Exchanger(EVA).



When the sensor circuit for indoor temperature and connector are in bad connection or are not engaged, Compressor/Outdoor Fan is stopped.

- Check R02H(12.1k), R04H(6.2k), Micom Pin ②6, ②7
- Check the indoor temperature sensor is disconnected or not(About 10kΩ / at 25°C).



Check Relay(RY - COMP) for driving compressor.

- When the power(About AC220V/240V) is applied to the connecting wire terminal support transferred to compressor, PWB Assembly is normal.
- Check the circuit related to the relay.

Check point	COMP ON	COMP OFF
Between Micom(No. 63) and GND	DC5V	DC0V
Between IC02M(No. 14) and GND	Below DC 1V (app)	About DC12V




Turn off Main Power



- Check the electrical wiring diagram of outdoor side.
- Check the abnormal condition for the component of Compressor/Outdoor Fan Motor.
- Check the "open" or "short" of connecting wires between indoor and outdoor.

When Indoor Fan does not operate.

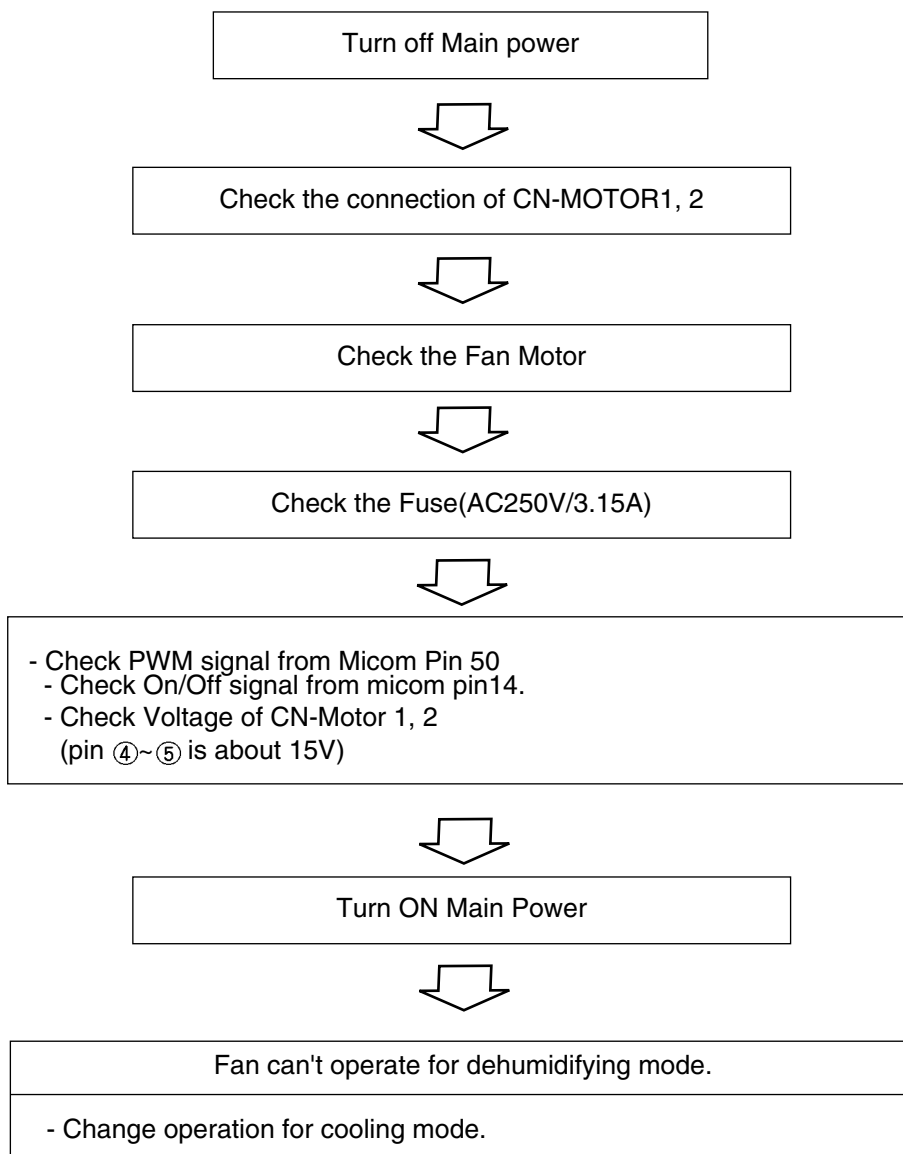

When Louvers do not operate.

- Confirm that the Louver is normally geared with the shaft of Stepping Motor.
- If the regular torque is detected when rotating the Louver with hands ⇒ Normal



- Check the connecting condition of CN-UD, LR1, LR2 Connector.
- Check the soldering condition(on PWB) of CN-UD LR1, LR2 Connector.



Check the operating circuit of the Louvers.


- Confirm that there is DC +12V between pin ① of CN-UD and GND.
- Confirm that there is a soldering short at following terminals.
 - Between ④⑤, ④⑥, ④⑦, ④⑧, ⑤④, ⑤⑤, ⑤⑥, ⑤⑦, ⑤⑧, ⑥⑦, ⑥⑧, ⑥⑨ of MICOM
 - Between ④, ⑤, ⑥, ⑦, ⑩, ⑪, ⑫, ⑬ of IC02M
 - Between ③, ④, ⑤, ⑥, ⑪, ⑫, ⑬, ⑭ of IC03M
 - Between ②, ③, ④, ⑤, ⑫, ⑬, ⑭, ⑮ of IC04M
 - Between ②, ③, ④, ⑤ of CN-UD/LR1/LR2



If there are no problems after above checks

- Confirm the assembly conditions that are catching and interfering parts in the rotation radial of the Louvers.

When Heating does not operate

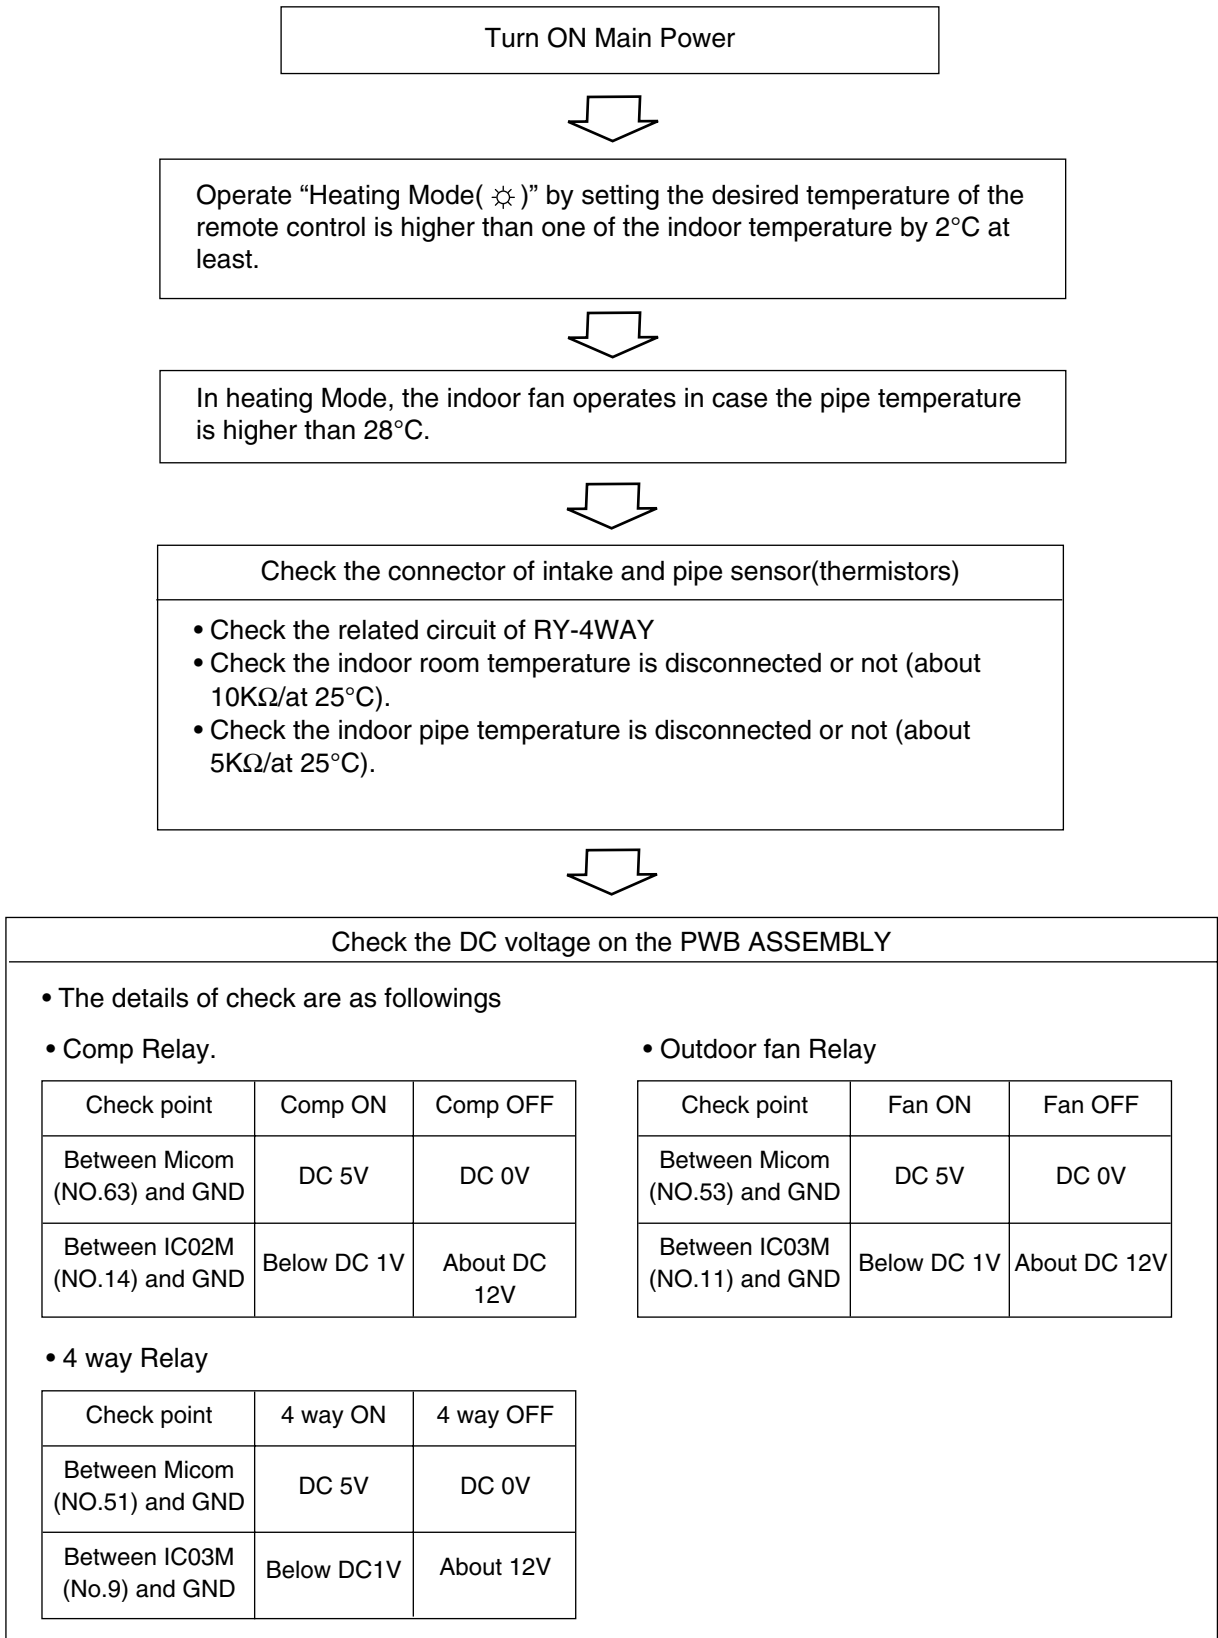




Turn off Main Power




- Check the electrical wiring diagram of outdoor side.
- Check the abnormal condition for the component of Compressor/Outdoor Fan Motor, 4 way.
- Check the "open" or "short" of connecting wires between indoor and outdoor.

Exploded View


Indoor Unit

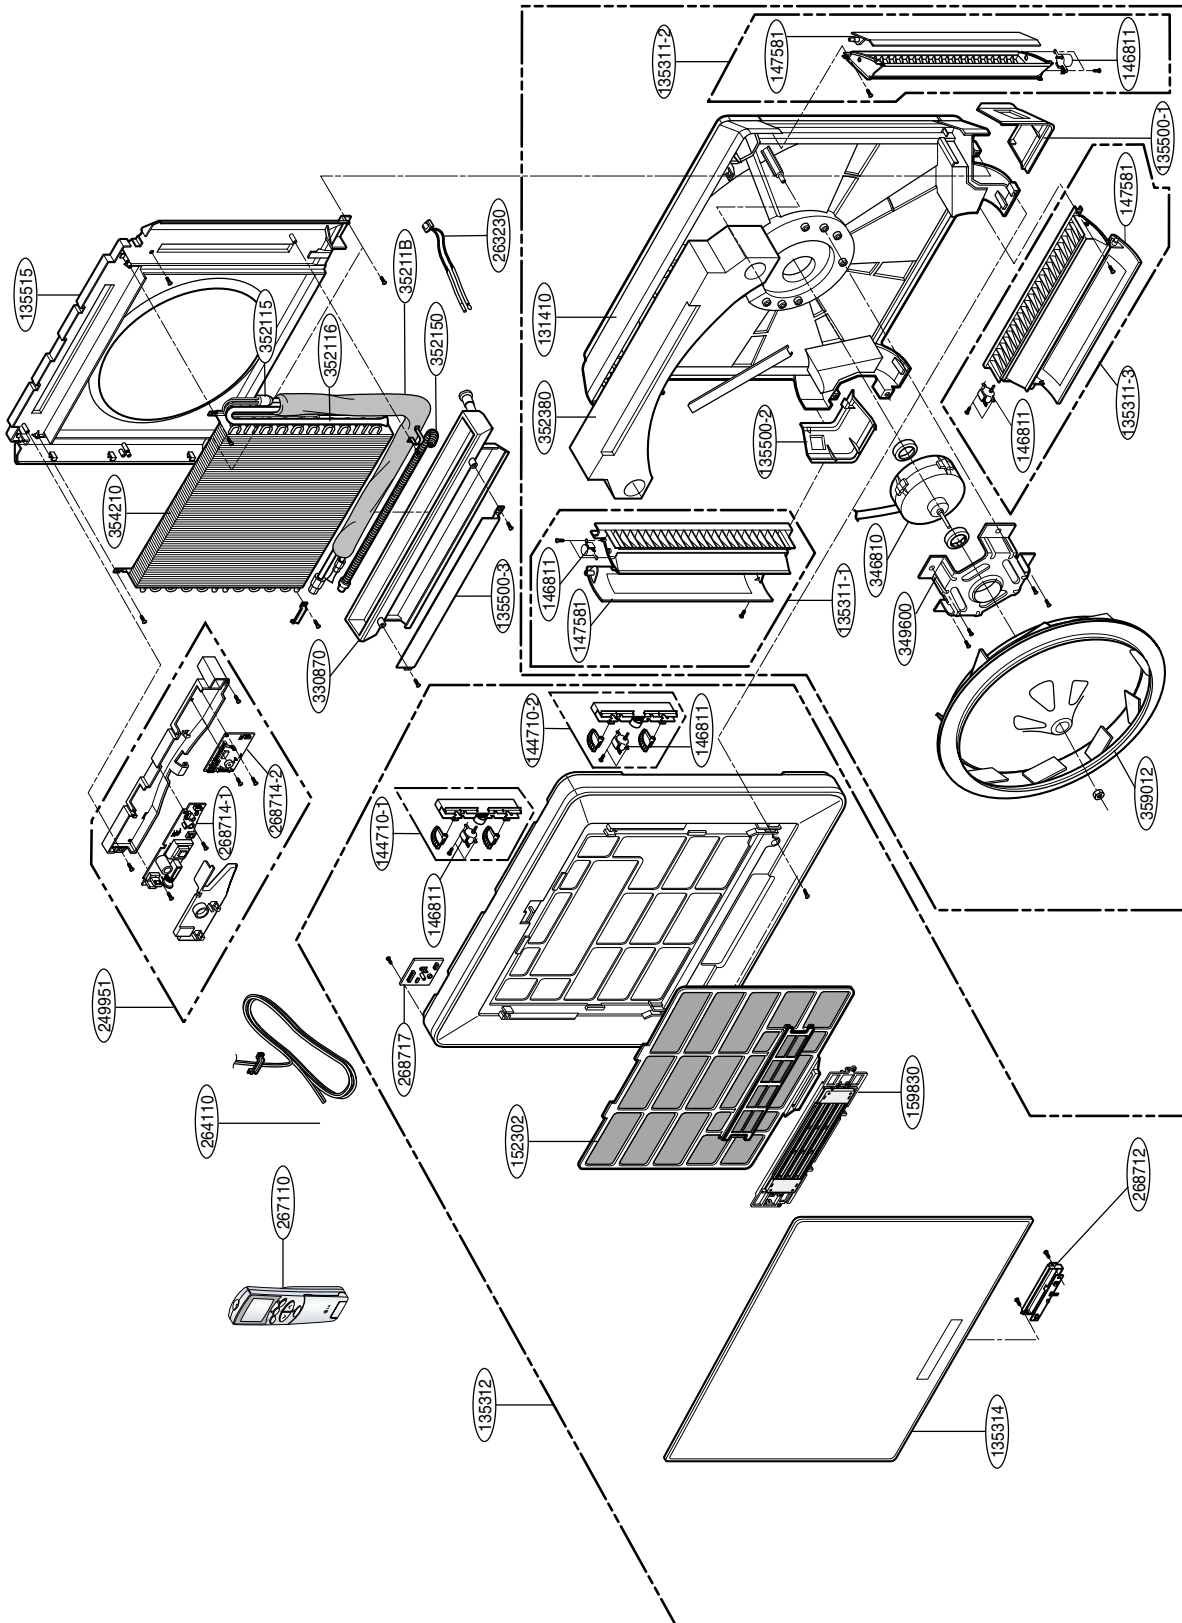

Outdoor Unit (AS-H076PB/D/M/WL1)

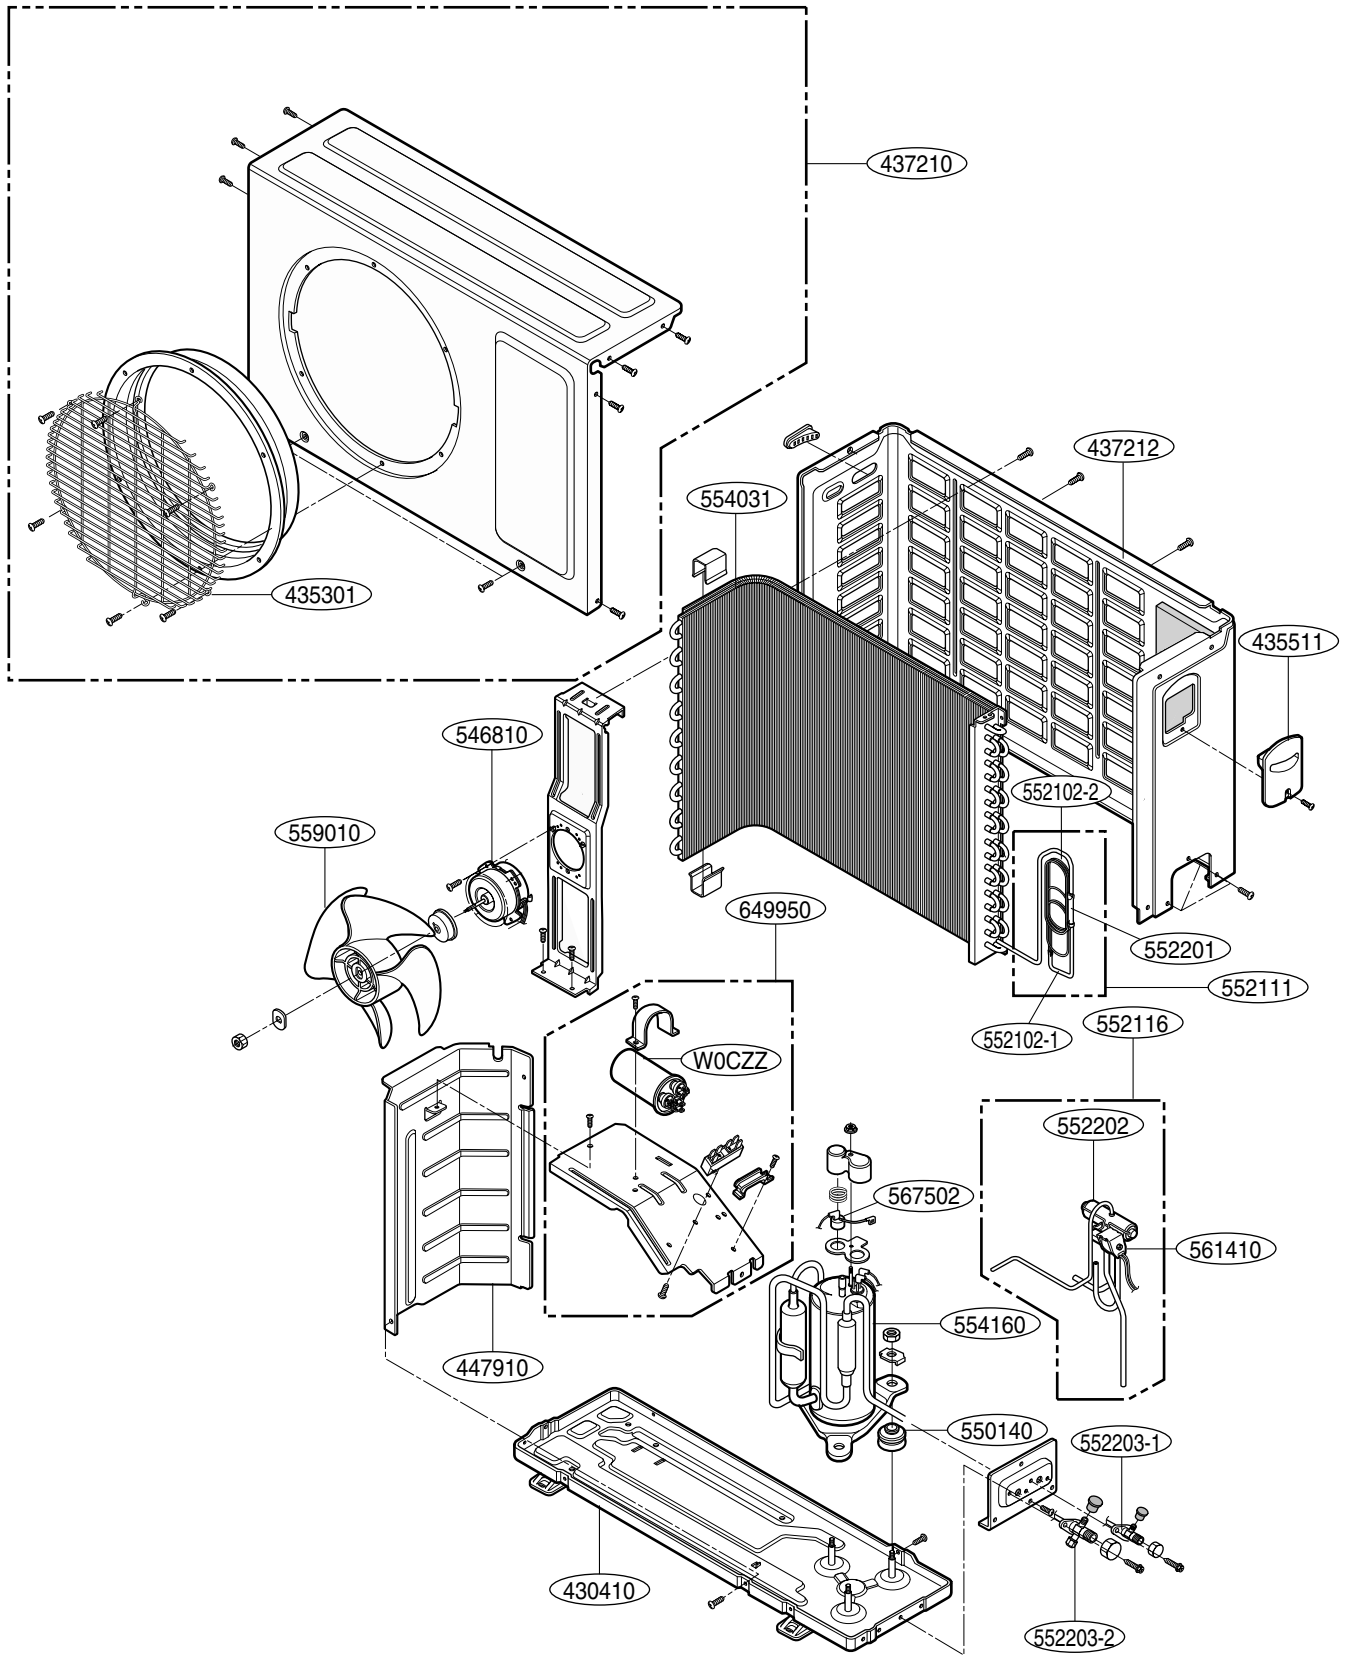

Outdoor Unit (AS-H096PB/D/M/WL1, A-12AH..)

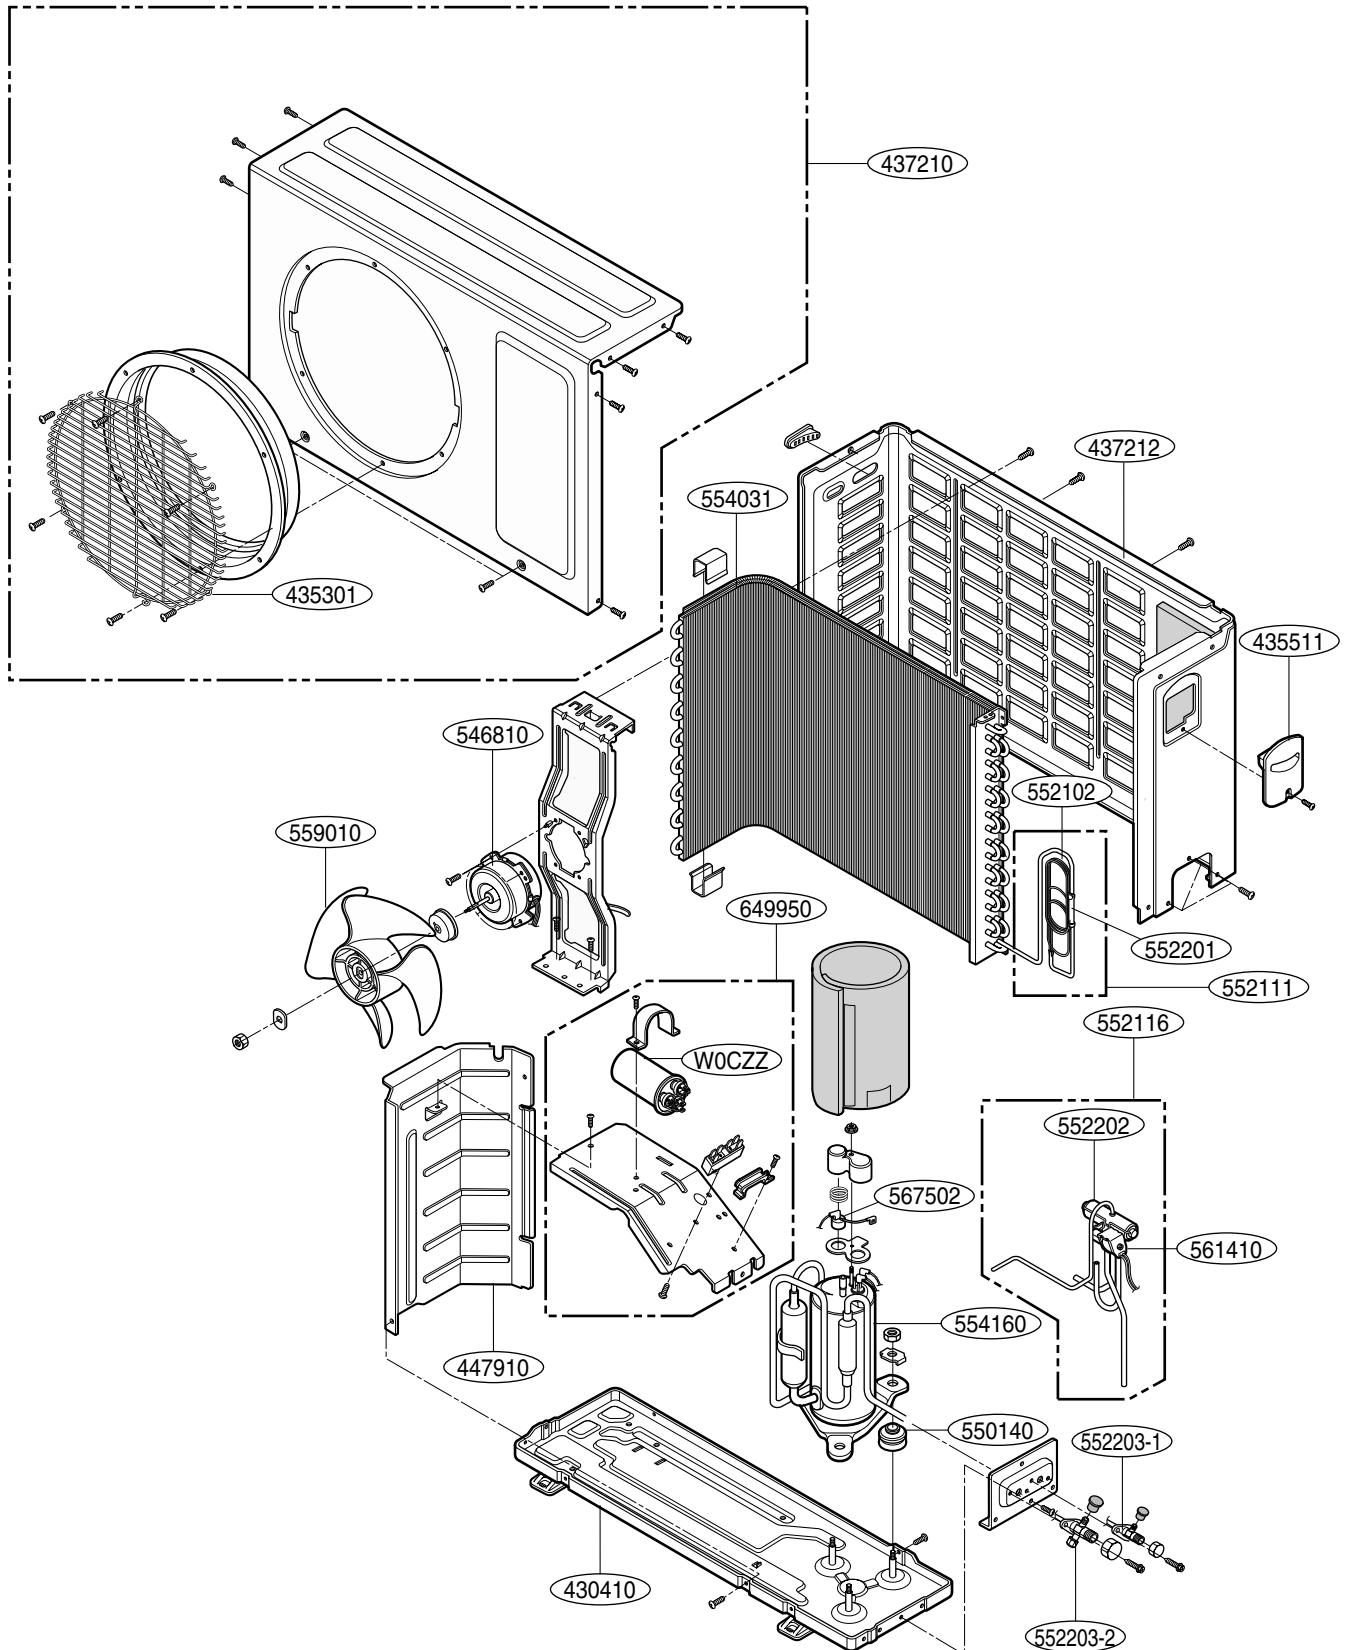

Replacement Parts List

Indoor Unit

LOCATION No.	DESCRIPTION	PART No.			REMARKS
		AS-H076PB/D/M/WL1	AS-H096PB/D/M/WL1	A-12AH series	
131410	CHASSIS ASSEMBLY	3141A20004N	3141A20004D	3141A20004N	R
135303	GRILLE,INLET	3530A20077F	3530A20077F	3530A20077F	R
135311-1	GRILLE ASSEMBLY,DISCHARGE(INDOOR)	3531A20069G	3531A20069G	3531A20069G	R
135311-2	GRILLE ASSEMBLY,DISCHARGE(INDOOR)	3531A20069H	3531A20069H	3531A20069H	R
135311-3	GRILLE ASSEMBLY,DISCHARGE(INDOOR)	3531A20069J	3531A20069J	3531A20069J	R
135312	GRILLE ASSEMBLY,FRONT(INDOOR)	3531A20213E	3531A20213E	3531A20213E	R
135314	GRILLE ASSEMBLY,INLET	3531A20212E	3531A20212E	3531A20212E	R
135500-1	COVER	3550A20123A	3550A20123A	3550A20123A	R
135500-2	COVER	*	*	3550A20124A	R
135500-3	COVER	3550A20060A	3550A20060A	3550A20060A	R
135515	COVER ASSEMBLY, TOP(INDOOR)	3551A20031B	3551A20031B	3551A20031B	R
146811	MOTOR ASSEMBLY,STEP	4681A20055A	4681A20055A	4681A20055A	R
147581	LOUVER,HORIZONTAL	4758A20014B	4758A20014B	4758A20014B	R
152302	FILTER(MECH),A/C	5230A20032A	5230A20032A	5230A20032A	R
159830	AIR CLEANER ASSEMBLY	5983A20007F	5983A20007F	5983A20007F	R
249951	CONTROL BOX ASSEMBLY,INDOOR	4995A20372Q	4995A20372E	4995A20372A	R
263230	THERMISTOR ASSEMBLY	6323A20004N	6323A20004N	6323A20004N	R
264110	POWER CORD ASSEMBLY	6411A20014S	6411A20014S	6411A20014S	R
267110	REMOTE CONTROLLER ASSEMBLY	6711A20073Z	6711A20073Z	6711A20073Z	R
268712	PWB(PCB) ASSEMBLY,DISPLAY	6871A20462A	6871A20462A	6871A20462A	R
268714-1	PWB(PCB) ASSEMBLY,MAIN	6871A10121A	6871A10121A	6871A10121A	R
268714-2	PWB(PCB) ASSEMBLY,MAIN(DC)	6871A20439J	6871A20439D	6871A20439C	R
268717	PWB(PCB) ASSEMBLY,SUB	6871A20363D	6871A20363D	6871A20363D	R
330870	DRAIN PAN ASSEMBLY	3087A30004A	3087A30004A	3087A30004A	R
346810	MOTOR ASSEMBLY,INDOOR	4681A20091A	4681A20091A	4681A20091A	R
352115	TUBE ASSEMBLY,EVAPORATOR IN	*	*	5211A20302B	R
352116	TUBE ASSEMBLY,EVAPORATOR OUT	*	*	5211A20301B	R
35211B	TUBE ASSY,TUBING	5211AR7066F	5211AR7066F	5211AR7066D	R
352150	HOSE ASSEMBLY,DRAIN	5251AR1222R	5251AR1222R	5251AR1222R	R
352380	AIR GUIDE	5238A20020A	5238A20020A	5238A20020A	R
354210	EVAPORATOR ASSEMBLY,FIRST	5421A20072A	5421A20072A	5421A20072A	R
359012	FAN,TURBO	5900A00003A	5900A00003A	5900A00003A	R

NOTE) *Please ensure GCSC since these parts may be changed depending upon the buyer's request.
(GCSC WEBSITE <http://biz@LGservice.com>)

Outdoor Unit

LOCATION No.	DESCRIPTION	PART No.			REMARKS
		AS-H076PB/D/M/WL1	AS-H096PB/D/M/WL1	A-12AH series	
430410	BASE ASSY,OUTDOOR	3041A20016A	3041A20008K	3041A20008K	R
435301	GRILLE,DISCHARGE	*	3530A20006B	3530A20006B	R
435511	COVER ASSEMBLY,CONTROL(OUTDOOR)	3551A30023Q	3551A30023E	3551A30023E	R
437210	PANEL ASSEMBLY,FRONT(OUTDOOR)	3720A10171A	3721A20027B	3721A20027B	R
437212	PANEL ASSY,REAR(OUTDOOR)	3720A10172A	3721A20026B	3721A20026A	R
447910	BARRIER ASSEMBLY,OUTDOOR	4790A10025B	4791A30002A	4791A30002A	R
546810	MOTOR ASSEMBLY,OUTDOOR	4681A20121A	4681A20004S	4681A20004S	R
550140	ISOLATOR,COMP	4H00982E	*	4H00982E	R
552111	TUBE ASSEMBLY,CAPILLARY	5211A21121B	5211A30331Q	5211A20117J	R
552116	TUBE ASSEMBLY,REVERSING	5211A20188U	5211A20160E	5211A20140X	R
552201	VALVE,CHECK	5220AR7182A	5220AR7182A	5220AR7182A	R
552202	VALVE,REVERSING	5220AR3228D	5220AR3228B	5220AR3228D	R
552203-1	VALVE,SERVICE	2H02479P	2H02479H	2H02479H	R
552203-2	VALVE,SERVICE	5220A20001B	5220A20001B	5220A20006B	R
554031	CONDENSER ASSEMBLY,BENT	5403A20045M	5403A20019F	5403A20019V	R
554160	COMPRESSOR SET	2520UGDP2CA	2520UGAP2GA	2520UGHP2AA	R
559010	FAN ASSEMBLY,PROPELLER	5900AR1266A	5901A10004A	5901A10004A	R
561410	COIL ASSEMBLY,REVERSING VALVE	6141A20017A	3A02028Y	6141AR3733R	R
649950	CONTROL BOX ASSEMBLY,OUTDOOR	4995A10032B	4995A20083B	4995A20083Y	R
W0CZZ	CAPACITOR,DRAWING	6120AR2194H	6120AR2194N	2H01451T	R

NOTE) *Please ensure GCSC since these parts may be changed depending upon the buyer's request.
(GCSC WEBSITE <http://biz.LGservice.com>)

