

# 8I845PE-RZ / 8I845PE-RZ-C

Intel® Pentium® 4 Processor Motherboard

## User's Manual

Rev. 1002

12ME-I845PERZ-1002

### **Copyright**

©2004 GIGABYTE TECHNOLOGY CO., LTD

Copyright by GIGA-BYTE TECHNOLOGY CO., LTD. ("GBT"). No part of this manual may be reproduced or transmitted in any form without the expressed, written permission of GBT.

### **Trademarks**

Third-party brands and names are the property of their respective owners.

### **Notice**

Please do not remove any labels on motherboard, this may void the warranty of this motherboard.

Due to rapid change in technology, some of the specifications might be out of date before publication of this booklet.

The author assumes no responsibility for any errors or omissions that may appear in this document nor does the author make a commitment to update the information contained herein.

Declaration of Conformity

Mr. Manufacturer's title  
[fill address]

G.B.I. Technology Trading GmbH  
Autobloggenweg 41, 76287 Rembigen, Germany

do we have the e-mail of  
[fill address]

Mother Board

is it conformity with  
reference to the specification under which conformity is declared  
F 884SPE-RZ

E 884S01

E 884S03

E 884S04

E 884S05

E 884S06

E 884S07

E 884S08

E 884S09

E 884S10

E 884S11

Unit of product of measurement  
[fill address]

Unit of product of measurement  
[fill address]

Unit of product of measurement  
[fill address]

Unit of product of measurement  
[fill address]

Unit of product of measurement  
[fill address]

Unit of product of measurement  
[fill address]

Unit of product of measurement  
[fill address]

Unit of product of measurement  
[fill address]

Unit of product of measurement  
[fill address]

Unit of product of measurement  
[fill address]



1/8/11

See Feb. 20, 2004

Signature: [fill name]

DECLARATION OF CONFORMITY

Per FCC Part 2, Section 2.1077(a)



Responsible Party Name: G.B.I. INC. (U.S.A.)

Address: 17358 Railroad Street  
City of Industry, CA 91748

Phone/Fax No: (818) 854-9338 (818) 854-9339

herby declares that the product

Product Name: Motherboard

Model Number: 8184SPE-RZ

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109

(e), Class B Digital Device

Supplementary Information:

This device complies with part 15 of the FCC Rules. Operation is  
subject to the following two conditions: (1) This device may not  
cause harmful and (2) this device must accept any interference received,  
including that may cause undesired operation.

Representative Person's Name: ERIC LU

Signature: Eric Lu

Date: Feb. 20, 2004

## Preparing Your Computer

Computer motherboards and expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

1. Unplug your computer when working on the inside.
2. Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
3. Hold components by the edges and try not touch the IC chips, leads or connectors, or other components.
4. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.
5. Ensure that the ATX power supply is switched off before you plug in or remove the ATX power connector on the motherboard.



## Installing the motherboard to the chassis

If the motherboard has mounting holes, but they don't line up with the holes on the base and there are no slots to attach the spacers, do not become alarmed you can still attach the spacers to the mounting holes. Just cut the bottom portion of the spacers (the spacer may be a little hard to cut off, so be careful of your hands). In this way you can still attach the motherboard to the base without worrying about short circuits. Sometimes you may need to use the plastic springs to isolate the screw from the motherboard PCB surface, because the circuit wire may be near by the hole. Be careful, don't let the screw contact any printed circuit write or parts on the PCB that are near the fixing hole, otherwise it may damage the board or cause board malfunctioning.

# Table of Contents

Chapter 1 Introduction .....	5
Features Summary .....	5
8B45PE-RZ Series Motherboard Layout .....	6
Block Diagram .....	7
Hardware Installation Process .....	8
Step 1: Install the Central Processing Unit (CPU) .....	8
Step 1-1: CPU Installation .....	9
Step 1-2: CPU Cooling Fan Installation .....	9
Step 2: Install Memory Modules .....	10
Step 3: Install AGP Card .....	11
Step 4: Install I/O Peripherals Cables .....	11
Step 4-1: I/O Back Panel Introduction .....	11
Step 4-2: Connectors Introduction .....	12
Chapter 2 BIOS Setup .....	19
The Main Menu (For example: BIOS Ver.: Fac) .....	19
Standard CMOS Features .....	21
Advanced BIOS Features .....	23
Integrated Peripherals .....	24
Power Management Setup .....	26
PnP/PCI Configurations .....	28
PC Health Status .....	29
Frequency/Voltage Control .....	30
Top Performance .....	31
Load Fail-Safe Defaults .....	32
Load Optimized Defaults .....	32
Set Supervisor/User Password .....	33
Save & Exit Setup .....	34
Exit Without Saving .....	34
Chapter 3 Install Drivers .....	35

# Chapter 1 Introduction

## Features Summary

CPU	<ul style="list-style-type: none"> <li>Socket 478 for Intel® Pentium® 4 (Northwood, Prescott <sup>(Note 1)</sup>) with HT Technology</li> <li>Intel® Pentium® 4 800<sup>(Note 2)</sup>/533/400MHz FSB</li> <li>2nd cache depends on CPU</li> </ul>
Chipset	<ul style="list-style-type: none"> <li>North Bridge: Intel® 82845PE MCH</li> <li>South Bridge: Intel® 82801 (ICH4)</li> </ul>
Memory	<ul style="list-style-type: none"> <li>3 184-pin DDR DIMM sockets, supports up to 2 GB DRAM (Max)</li> <li>Supports DDR400<sup>(Note 3)</sup>/DDR333/DDR266 DIMM</li> <li>Supports only 2.5V DDR SDRAM</li> </ul>
Slots	<ul style="list-style-type: none"> <li>1 AGP slot 4X (1.5V) device support</li> <li>5 PCI slots support 33MHz &amp; PCI 2.2 compliant</li> </ul>
On-Board IDE	<ul style="list-style-type: none"> <li>2 IDE controller provide IDE HDD/CD-ROM (IDE1, IDE2) with PIO, Bus Master (Ultra DMA33/ATA66/ATA100) operation modes</li> <li>Can connect up to 4 IDE devices</li> </ul>
On-Board Floppy	<ul style="list-style-type: none"> <li>1 Floppy port supports 2 FDD with 360K, 720K, 1.2M, 1.44M and 2.88M bytes</li> </ul>
On-Board Peripherals	<ul style="list-style-type: none"> <li>1 Parallel port supports Normal/EPP/ECP mode</li> <li>2 Serial port (COMA/COMB)</li> <li>6 USB 2.0/1.1 ports (2 x Rear, 4 x Front by cable)</li> <li>1 Front Audio connector</li> <li>1 PS/2 Keyboard</li> <li>1 PS/2 Mouse</li> </ul>
On-Board LAN *	<ul style="list-style-type: none"> <li>Built-in RTL8100C chipset *</li> <li>1 RJ45 port *</li> </ul>
On-Board Sound	<ul style="list-style-type: none"> <li>CMedia 9761A CODEC</li> <li>Support 2/4/6 channel</li> <li>Line Out/ Line In / Mic In</li> <li>SPDIF Out /SPDIF In</li> <li>CD In/ AUX_IN/ Game Port</li> </ul>
BIOS	<ul style="list-style-type: none"> <li>Licensed AWARD BIOS</li> <li>Supports Q-Flash™</li> </ul>
I/O Control	<ul style="list-style-type: none"> <li>ITE8712</li> </ul>
Hardware Monitor	<ul style="list-style-type: none"> <li>CPU/System Fan Revolution detect</li> <li>CPU/System Fan Fail Warning</li> <li>CPU Overheat Warning</li> <li>System Voltage Detect</li> </ul>
Additional Features	<ul style="list-style-type: none"> <li>Supports @BIOS™</li> <li>Supports EasyTune 4™</li> </ul>
Overclocking	<ul style="list-style-type: none"> <li>Over Voltage (DDR/AGP/CPU) by BIOS</li> <li>Over Clock (DDR/AGP/CPU) by BIOS</li> </ul>
Form Factor	<ul style="list-style-type: none"> <li>ATX size form factor, 29.5cm x 21cm</li> </ul>


(Note 1) Prescott processors with up to 533MHzFSB are supported.

(Note 2) A Northwood processor with 800MHzFSB can be supported through overclocking in BIOS.

(Note 3) When 800MHzFSB is selected as processor frequency, memory will automatically adjust to DDR400.

\*\*\* For 8I845PE-RZ only.


# 81845PE-RZ Series Motherboard Layout

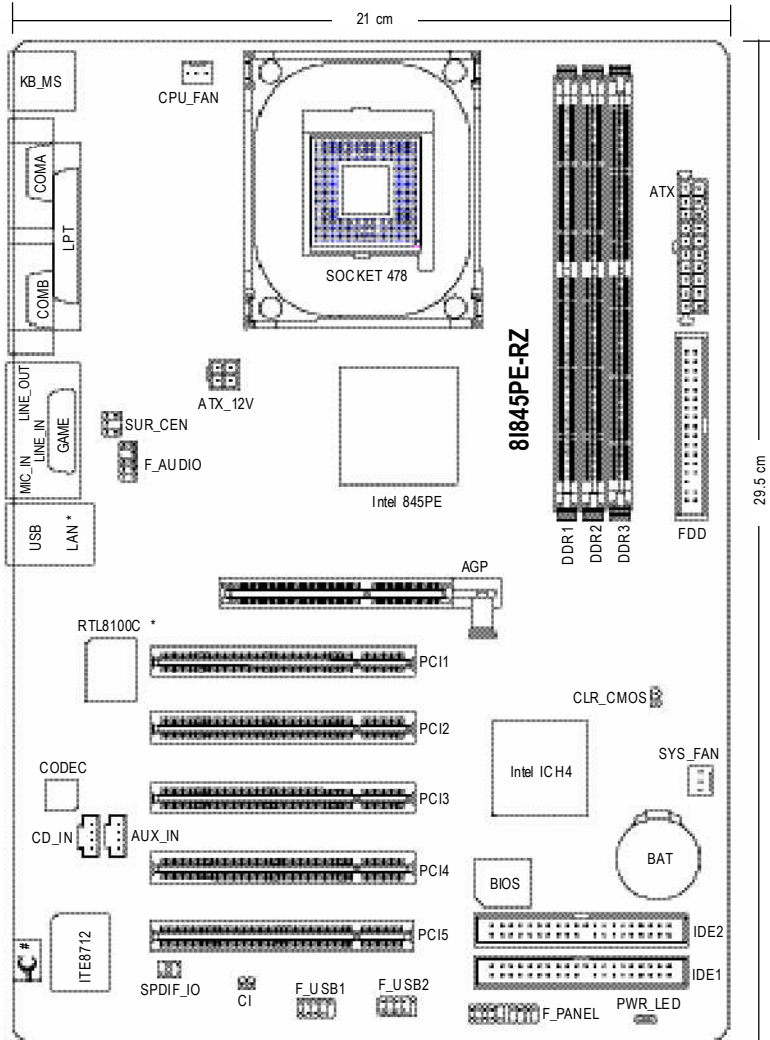

\*\*\* For 81845PE-RZ only.

# For 81845PE-RZ-C only.

# Block Diagram

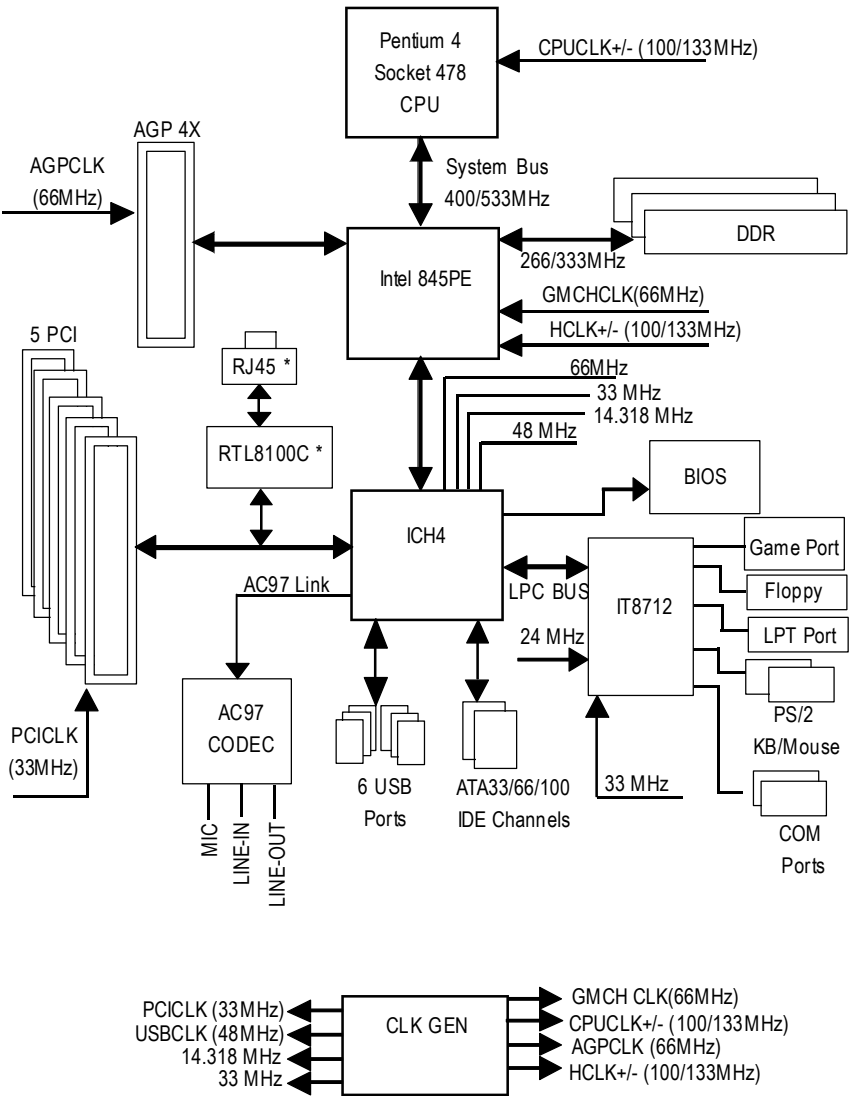


\*\*\* For 8I845PE-RZ only.

## Hardware Installation Process

To set up your computer, you must complete the following steps:

- Step 1- Install the Central Processing Unit (CPU)
- Step 2- Install memory modules
- Step 3- Install expansion cards
- Step 4- Connect ribbon cables, cabinet wires, and power supply

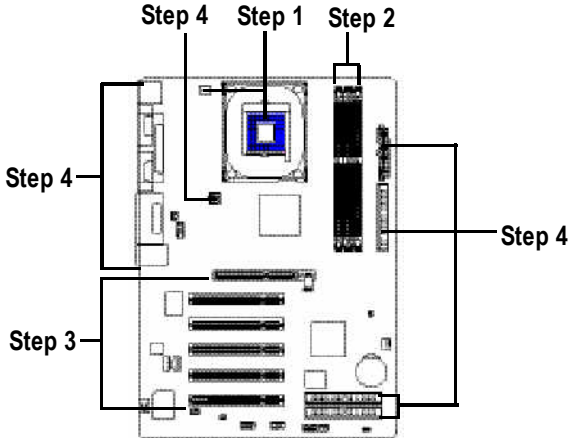

### Step 1: Install the Central Processing Unit (CPU)



CAUTION

Before installing the processor, adhere to the following warning:

1. Please make sure the CPU type is supported by the motherboard.
2. The processor will overheat without the heatsink and/or fan, resulting in permanent irreparable damage.
3. If you do not match the CPU socket Pin 1 and CPU cut edge well, it will cause improper installation. Please change the insert orientation.
4. Apply thermal grease between the processor and cooling fan.
5. Never run the processor without the heatsink properly and firmly attached. Permanent damage will result.
6. Please set the CPU host frequency in accordance with your processor's specifications. We don't recommend you to set the system bus frequency over the CPU's specification because these specific bus frequencies are not the standard specifications for CPU, chipset and most of the peripherals. Whether your system can run under these specific bus frequencies properly will depend on your hardware configurations, including CPU, Memory, Cards...etc.



NOTE

#### HT functionality requirement content :

Enabling the functionality of Hyper-Threading Technology for your computer system requires all of the following platform components:

- CPU: An Intel® Pentium 4 Processor with HT Technology
- Chipset: An Intel® Chipset that supports HT Technology
- BIOS: A BIOS that supports HT Technology and has it enabled
- OS: An operation system that has optimizations for HT Technology



## Step 1-1: CPU Installation

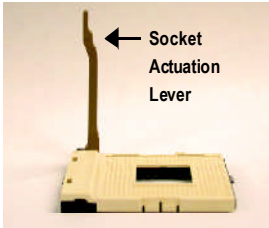


Figure 1.  
Pull the rod to the 90-degree directly.

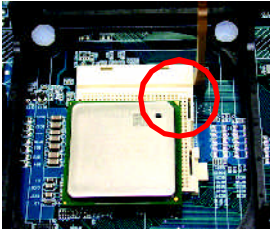


Figure 2.  
Locate Pin 1 in the socket and look for a (golden) cut edge on the CPU upper corner. Insert the CPU into the socket. (Do not force the CPU into the socket.) Then move the socket lever to the locked position while holding pressure on the center of the CPU.

## Step 1-2: CPU Cooling Fan Installation



Figure 1.  
Apply the thermal tape(or grease) to provide better heat conduction between your CPU and cooling fan.



Figure 2.  
Fasten the cooling fan supporting-base onto the CPU socket on the motherboard.

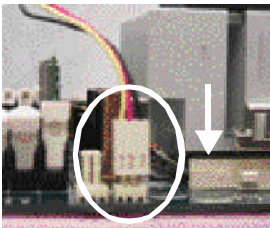


Figure 3.  
Make sure the CPU fan is plugged to the CPU fan connector, than install complete.



## Step 2: Install Memory Modules




Before installing the memory modules, adhere to the following warning:

1. Please note that the DIMM module can only fit in one direction due to the one notch. Wrong orientation will cause improper installation. Please change the insert orientation.
2. Due to (Intel 845PE/GE) chipset architecture limitation, a FSB 533 Pentium 4 processor will support DDR333/DDR266 memory module. A FSB 400 Pentium 4 processor will only support DDR266 memory module.

The motherboard has 3 dual inline memory module (DIMM) sockets. The BIOS will automatically detects memory type and size. To install the memory module, just push it vertically into the DIMM socket. The DIMM module can only fit in one direction due to the notch. Memory size can vary between sockets.

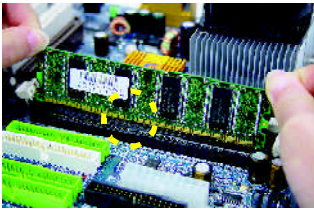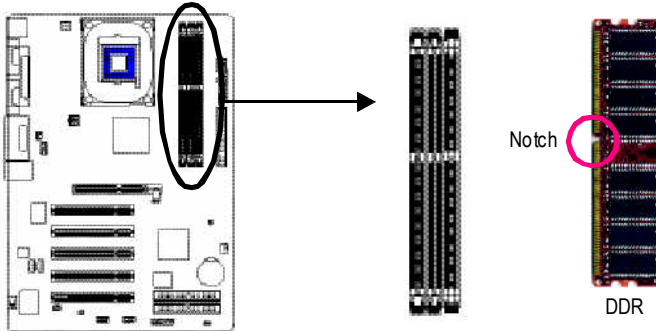

1. The DIMM socket has a notch, so the DIMM memory module can only fit in one direction.

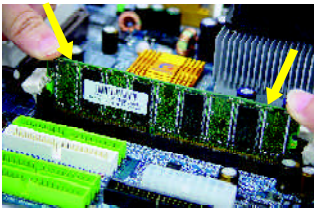

2. Insert the DIMM memory module vertically into the DIMM socket. Then push it down.




3. Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module. Reverse the installation steps when you wish to remove the DIMM module.

## Step 3: Install AGP Card

1. Read the relateAGP card's instruction document before install the AGP card into the computer.
2. If your AGP card has "AGP 4X(1.5V) notch" (show below), please make sure your AGP card is AGP 4X(1.5V).




3. Please carefully pull out the small white- drawable bar at the end of the AGP slot when you try to install/ Uninstall the AGP card. Please align the AGP card to the onboard AGP slot and press firmly down on the slot .Make sure your AGP card is locked by the small white- drawable bar.

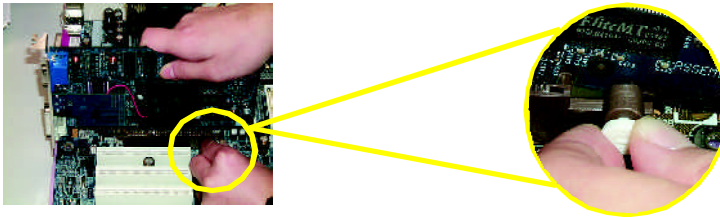

## Step 4: Install I/O Peripherals Cables

### Step 4-1: I/O Back Panel Introduction

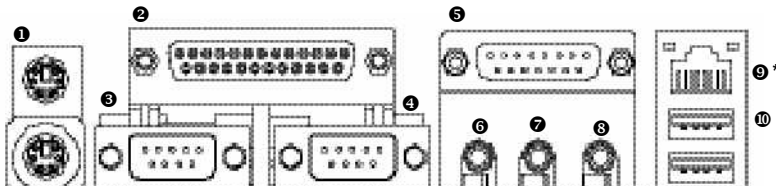

- ❶ **PS/2 Keyboard and PS/2 Mouse connector**  
This connector supports standard PS/2 keyboard and PS/2 mouse.
- ❷ **Parallel port (LPT)**  
Device like printer can be connected to Parallel port.
- ❸/❹ **Serial port (COMA/COMB)**  
Mouse and modem etc. can be connected to Serial port.
- ❺ **Game/MIDI port**  
This connector supports joystick, MIDI keyboard and other relate audio devices.
- ❻ **Line Out jack**  
Connect the stereo speakers or earphone to this connector.
- ❼ **Line In jack**  
Devices like CD-ROM, walkman etc. can be connect to Line In jack.

\*\*\* For 8I845PE-RZ only.

### 8 MIC In jack

Microphone can be connect to MIC In jack.

After installation of the audio driver, you are able to use 2/4/6-channel audio feature by software selection. You can connect "Front speaker" to "Line Out" jack, Connect "Rear speaker" to "Line In" jack and connect "Center/Subwoofer" to "MIC In" jack.


### 9 LAN port \*

LAN is fast Ethernet with 10/100Mbps speed.

### 10 USB port

Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker...etc. Have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

## Step 4-2: Connectors Introduction


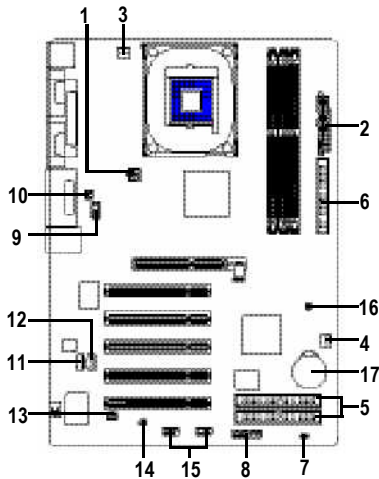


1) ATX_12V	10) SUR_GEN
2) ATX	11) CD_IN
3) CPU_FAN	12) AUX_IN
4) SYS_FAN	13) SPDIF_IO
5) IDE1 / IDE2	14) C1
6) FDD	15) F_USB1 / F_USB2
7) PWR_LED	16) CLR_CMOS
8) F_PANEL	17) BAT
9) F_AUDIO	

\*\*\* For 8I845PE-RZ only.

### 1) ATX\_12V (+12V Power Connector)



This connector (ATX\_12V) supplies the CPU operation voltage (V<sub>core</sub>).  
 If this "ATX\_12V connector" is not connected, system cannot boot

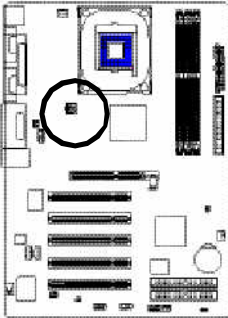

Pin No.	Definition
1	GND
2	GND
3	+12V
4	+12V

### 2) ATX(ATX Power)


AC power cord should only be connected to your power supply unit after ATX power cable and other related devices are firmly connected to the mainboard.

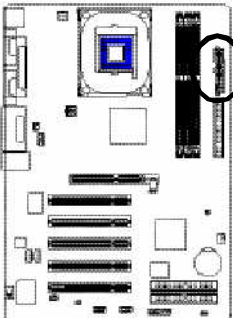

Pin No.	Definition	Pin No.	Definition
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	VCC	14	PS_ON(softon/off)
5	GND	15	GND
6	VCC	16	GND
7	GND	17	GND
8	PowerGood	18	-5V
9	5VSB (stand by +5V)	19	VCC
10	+12V	20	VCC

### 3) CPU\_FAN (CPU Fan Connector)


Please note, a proper installation of the CPU cooler is essential to prevent the CPU from running under abnormal condition or damaged by overheating. The CPU fan connector supports Max. current up to 600 mA.

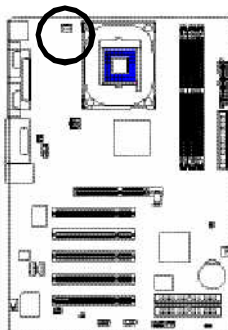

Pin No.	Definition
1	GND
2	+12V
3	Sense

#### 4) SYS\_FAN (System Fan Connector)



This connector allows you to link with the cooling fan on the system case to lower the system temperature.

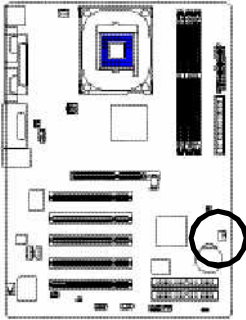

Pin No.	Definition
1	GND
2	+12V
3	Sense

#### 5) IDE1 / IDE2 (IDE1 / IDE2 Connector)



Important Notice: Please connect first hard disk to IDE1 and connect CD-ROM to IDE2. The red stripe of the ribbon cable must be the same side with the Pin1.

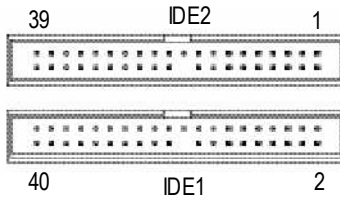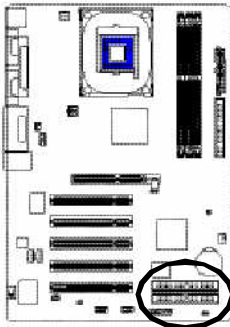

#### 6) FDD (Floppy Connector)


Please connect the floppy drive ribbon cables to FDD. It supports 360K, 1.2M, 720K, 1.44M and 2.88M bytes floppy disk types.

The red stripe of the ribbon cable must be the same side with the Pin1.

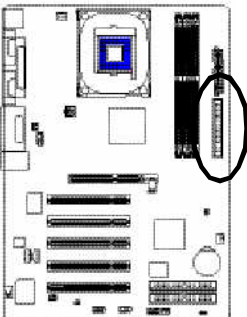

### 7) PWR\_LED



PWR\_LED is connect with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode. If you use dual color LED, power LED will turn to another color.

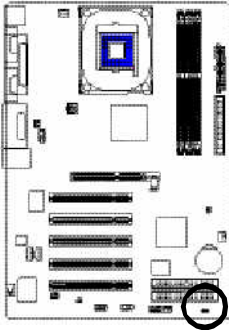

Pin No.	Definition
1	MPD+
2	MPD-
3	MPD-

### 8) F\_PANEL (2 x 10 pins Connector)

Please connect the power LED, PC speaker, reset switch and power switch etc of your chassisfront panel to the F\_PANEL connector according to the pin assignment below.

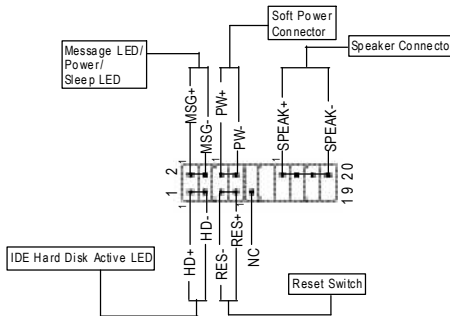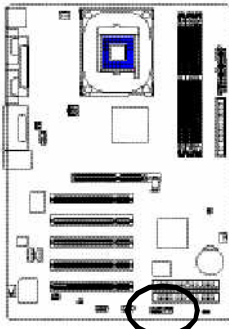


HD (IDE Hard Disk Active LED)	Pin 1:LED anode(+) Pin2:LED cathode(-)
SPK(Speaker Connector)	Pin 1:VCC(+) Pin 2- Pin 3:NC Pin4:Data(-)
RES(Reset Switch)	Open:Normal Operation Close:ResetHardware System
PW(SoftPower Connector)	Open:Normal Operation Close:Power On/Off
MSG (Message LED/Power/Sleep LED)	Pin 1:LED anode(+) Pin2:LED cathode(-)
NC	NC

### 9) F\_AUDIO (Front Audio Connector)

If you want to use Front Audio connector, you must remove 5-6, 9-10 Jumper.


In order to utilize the front audio header, your chassis must have front audio connector. Also please make sure the pin assignment on the cable is the same as the pin assignment on the MB header. To find out if the chassis you are buying support front audio connector, please contact your dealer. Please note, you can have the alternative of using front audio connector or of using rear audio connector to play sound.

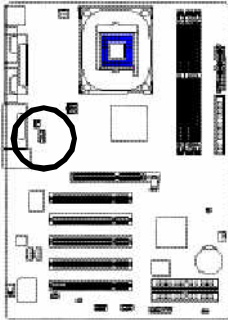

Pin No.	Definition
1	MIC
2	GND
3	REF
4	Power
5	FrontAudio (R)
6	RearAudio (R)
7	Reserved
8	No Pin
9	FrontAudio (L)
10	RearAudio (L)

### 10) SUR\_CEN (Surround Center Connector)


Please contact your nearest dealer for optional SUR\_CEN cable.

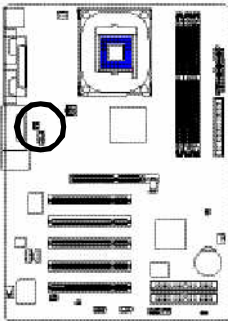

Pin No.	Definition
1	SUROUTL
2	SUROUTR
3	GND
4	No Pin
5	CENTER_OUT
6	BASS_OUT

### 11) CD\_IN (CD In Connector)

Connect CD-ROM or DVD-ROM audio out to the connector.

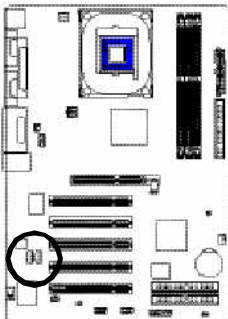


Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R



## 12) AUX\_IN (AUX In Connector)


Connect other device(such as PCI TV Tunner audio out)to the connector.

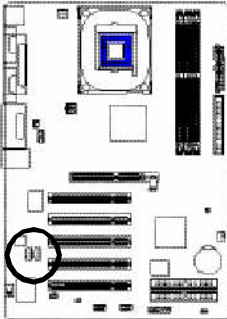

Pin No.	Definiton
1	AUX-L
2	GND
3	GND
4	AUX-R

## 13) SPDIF\_IO (SPDIF In/Out Connector)


The SPDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby Digital Decoder. Use this feature only when your stereo system has digital input function. Be careful with the polarity of the SPDIF\_IO connector. Check the pin assignment carefully while you connect the SPDIF\_IO cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional SPDIF\_IO cable, please contact your local dealer.

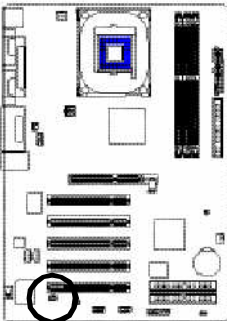

Pin No.	Definiton
1	VCC
2	No Pin
3	SPDIF
4	SPDIFI
5	GND
6	GND

## 14) CI (CASE OPEN)


This 2-pin connector allows your system to enable or disable the "Case Open" item in BIOS, if the system case begin remove.

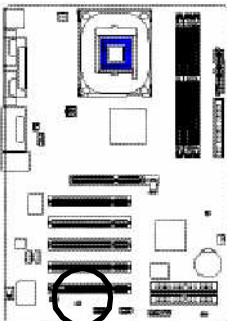

Pin No.	Definiton
1	Signal
2	GND

## 15) F\_USB1 / F\_USB2 (Front USB Connector)


Be careful with the polarity of the front USB connector. Check the pin assignment carefully while you connect the front USB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional front USB cable, please contact your local dealer.

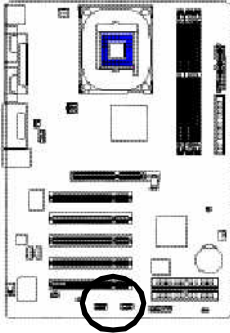

Pin No.	Definition
1	Power
2	Power
3	USB D <sub>x</sub> -
4	USB D <sub>y</sub> -
5	USB D <sub>x</sub> +
6	USB D <sub>y</sub> +
7	GND
8	GND
9	No Pin
10	NC

## 16) CLR\_CMOS (Clear CMOS)


You may clear the CMOS data to its default values by this jumper. To clear CMOS, temporarily short 1-2 pin. Default doesn't include the "Shunter" to prevent from improper use this jumper.

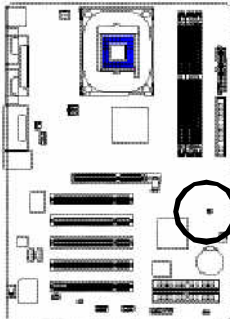

1  Open: Normal

1  Short: Clear CMOS

## 17) BAT (BATTERY)

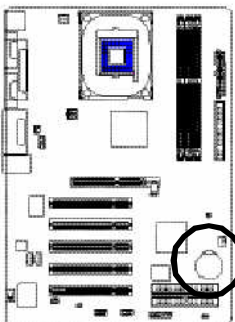

### CAUTION

- ❖ Danger of explosion if battery is incorrectly replaced.
- ❖ Replace only with the same or equivalent type recommended by the manufacturer.
- ❖ Dispose of used batteries according to the manufacturer's instructions.

If you want to erase CMOS...

1. Turn OFF the computer and unplug the power cord.
2. Remove the battery, wait for 30 seconds.
3. Re-install the battery.
4. Plug the power cord and turn ON the computer.

## Chapter 2 BIOS Setup

BIOS Setup is an overview of the BIOS Setup Program. The program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

### ENTERING SETUP

Powering ON the computer and pressing <Del> immediately will allow you to enter Setup. If you require more advanced BIOS settings, please go to "Advanced BIOS" setting menu. To enter Advanced BIOS setting menu, press "Ctrl+F1" key on the BIOS screen.

### CONTROL KEYS

<↑><↓><←><→>	Move to select item
<Enter>	Select Item
<Esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu
<+/PgUp>	Increase the numeric value or make changes
<-/PgDn>	Decrease the numeric value or make changes
<F1>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<F2>	Item Help
<F5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<F6>	Load the file-safe default CMOS value from BIOS default table
<F7>	Load the Optimized Defaults
<F8>	Q-Flash utility
<F9>	System Information
<F10>	Save all the CMOS changes, only for Main Menu

### Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

### Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

## The Main Menu (For example: BIOS Ver. : Fac)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (as figure below) will appear on the screen. The Main Menu allows you to select from eight setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software

<ul style="list-style-type: none"> <li>▶ Standard CMOS Features</li> <li>▶ Advanced BIOS Features</li> <li>▶ Integrated Peripherals</li> <li>▶ Power Management Setup</li> <li>▶ PnP/PCI Configurations</li> <li>▶ PC Health Status</li> <li>▶ Frequency/Voltage Control</li> </ul>	<ul style="list-style-type: none"> <li>Top Performance</li> <li>Load Fail-Safe Defaults</li> <li>Load Optimized Defaults</li> <li>Set Supervisor Password</li> <li>Set User Password</li> <li>Save &amp; Exit Setup</li> <li>Exit Without Saving</li> </ul>
ESC: Quit	↑↓←→: Select Item
F8: Q-Flash	F10: Save & Exit Setup
Time, Date, Hard Disk Type...	



If you can't find the setting you want, please press "Ctrl+F1" to search the advanced option hidden.

- **Standard CMOS Features**  
This setup page includes all the items in standard compatible BIOS.
- **Advanced BIOS Features**  
This setup page includes all the items of Award special enhanced features.
- **Integrated Peripherals**  
This setup page includes all onboard peripherals.
- **PowerManagement Setup**  
This setup page includes all the items of Green function features.
- **PnP/PCI Configuration**  
This setup page includes all the configurations of PCI & PnP ISA resources.
- **PC Health Status**  
This setup page is the System auto detect Temperature, voltage, fan, speed.
- **Frequency/VoltageControl**  
This setup page is control CPU clock and frequency ratio.
- **TopPerformance**  
If you wish to maximize the performance of your system, set "Top Performance" as "Enabled".
- **Load Fail-Safe Defaults**  
Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.
- **Load Optimized Defaults**  
Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.
- **Set Supervisor Password**  
Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.
- **Set User Password**  
Change, set, or disable password. It allows you to limit access to the system.
- **Save & Exit Setup**  
Save CMOS value settings to CMOS and exit setup.
- **Exit Without Saving**  
Abandon all CMOS value changes and exit setup.

# Standard CMOS Features

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
Standard CMOS Features

		Item Help
Date (mm:dd:yy)	Fri, Jan 9 2004	Menu Level▶
Time (hh:mm:ss)	22:31:24	Change the day, month, year
▶ IDE Primary Master	[None]	<Week>
▶ IDE Primary Slave	[None]	Sun. to Sat.
▶ IDE Secondary Master	[None]	<Month>
▶ IDE Secondary Slave	[None]	Jan. to Dec.
Drive A	[1.44M, 3.5"]	<Day>
Drive B	[None]	1 to 31 (or maximum allowed in the month)
Floppy 3 Mode Suport	[Disabled]	<Year>
Holt On	[All, But Keyboard]	1999 to 2098
Base Memory	640K	
Extended Memory	127M	
Total Memory	128M	
↑↓→←: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help F5: Previous Values    F6: Fail-Save Default    F7: Optimized Defaults		

## ☞ Date

The date format is <week>, <month>, <day>, <year>.

- ▶▶ Week     The week, from Sun to Sat, determined by the BIOS and is display only
- ▶▶ Month    The month, Jan. Through Dec.
- ▶▶ Day      The day, from 1 to 31 (or the maximum allowed in the month)
- ▶▶ Year     The year, from 1999 through 2098

## ☞ Time

The times format in <hour> <minute> <second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

## ☞ IDE Primary Master, Slave / IDE Secondary Master, Slave

The category identifies the types of hard disk from drive C to F that has been installed in the computer. There are two types: auto type, and manual type. Manual type is user-definable; Auto type which will automatically detect HDD type.

Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category.

If you select User Type, related information will be asked to enter to the following items. Enter the information directly from the keyboard and press <Enter>. Such information should be provided in the documentation form your hard disk vendor or the system manufacturer.

- ▶▶ Cylinder    Number of cylinders
- ▶▶ Head        Number of heads
- ▶▶ Precomp    Write precomp
- ▶▶ Landing Zone    Landing zone
- ▶▶ Sector     Number of sectors

If a hard disk has not been installed, select NONE and press <Enter>.

## ☞ Drive A / Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

- ▶▶ None            No floppy drive installed
- ▶▶ 360K, 5.25"    5.25 inch PC-type standard drive; 360K byte capacity.
- ▶▶ 1.2M, 5.25"    5.25 inch AT-type high-density drive; 1.2M byte capacity (3.5 inch when 3 Mode is Enabled).
- ▶▶ 720K, 3.5"     3.5 inch double-sided drive; 720K byte capacity
- ▶▶ 1.44M, 3.5"    3.5 inch double-sided drive; 1.44M byte capacity.
- ▶▶ 2.88M, 3.5"    3.5 inch double-sided drive; 2.88M byte capacity.

## ☞ Floppy 3 Mode Support (for Japan Area)

- ▶▶ Disabled        Normal Floppy Drive. (Default value)
- ▶▶ Drive A         Drive A is 3 mode Floppy Drive.
- ▶▶ Drive B         Drive B is 3 mode Floppy Drive.
- ▶▶ Both             Drive A & B are 3 mode Floppy Drives.

## ☞ Halt on

The category determines whether the computer will stop if an error is detected during power up.

- ▶▶ No Errors        The system boot will not stop for any error that may be detected and you will be prompted.
- ▶▶ All Errors        Whenever the BIOS detects a non-fatal error the system will be stopped.
- ▶▶ All, But Keyboard    The system boot will not stop for a keyboard error; it will stop for all other errors. (Default value)
- ▶▶ All, But Diskette    The system boot will not stop for a disk error; it will stop for all other errors.
- ▶▶ All, But Disk/Key    The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

## ☞ Memory

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

### ▶▶ Base Memory

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.

The value of the base memory is typically 512K for systems with 512K memory installed on the motherboard, or 640K for systems with 640K or more memory installed on the motherboard.

### ▶▶ Extended Memory

The BIOS determines how much extended memory is present during the POST.

This is the amount of memory located above 1 MB in the CPU's memory address map.

# Advanced BIOS Features

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
Advanced BIOS Features

First Boot Device	[Floppy]	Item Help
Second Boot Device	[HDD-0]	Menu Level▶
Third Boot Device	[CDROM]	Select Boot Device
Boot Up Floppy Seek	[Disabled]	priority
Password Check	[Setup]	[Floppy]
CPU Hyper-Threading *	[Enabled]	Boot from floppy
Init Display First	[AGP]	[LS120]
		Boot from LS120
		[HDD-0]
		Boot from First HDD
		[HDD-1]
		Boot from Second HDD
↑↓←→: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help F5: Previous Values    F6: Fail-Save Default    F7: Optimized Defaults		



\* # " System will detect automatically and show up when you install the Intel® Pentium® 4 processor with HT Technology.

## First / Second / Third Boot Device

- ▶ Floppy      Select your boot device priority by Floppy.
- ▶ LS120      Select your boot device priority by LS120.
- ▶ HDD-0-3    Select your boot device priority by HDD-0-3.
- ▶ SCSI        Select your boot device priority by SCSI.
- ▶ CDROM      Select your boot device priority by CDROM.
- ▶ ZIP          Select your boot device priority by ZIP.
- ▶ USB-FDD    Select your boot device priority by USB-FDD.
- ▶ USB-ZIP    Select your boot device priority by USB-ZIP.
- ▶ USB-CDROM Select your boot device priority by USB-CDROM.
- ▶ USB-HDD    Select your boot device priority by USB-HDD.
- ▶ LAN          Select your boot device priority by LAN.
- ▶ Disabled    Select your boot device priority by Disabled.

## Boot Up Floppy Seek

During POST, BIOS will determine the floppy disk drive installed is 40 or 80 tracks. 360K type is 40 tracks 720K, 1.2M and 1.44M are all 80 tracks.

- ▶ Enabled      BIOS searches for floppy disk drive to determine it is 40 or 80 tracks. Note that BIOS can not tell from 720K, 1.2M or 1.44M drive type as they are all 80 tracks.
- ▶ Disabled     BIOS will not search for the type of floppy disk drive by track number. Note that there will not be any warning message if the drive installed is 360K. (Default value)

## Password Check

- ▶ System      The system can not boot and can not access to Setup page will be denied if the correct password is not entered at the prompt.
- ▶ Setup        The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt. (Default value)

### ☞ CPU Hyper-Threading

- ▶ Enabled Enables CPU Hyper Threading Feature. Please note that this feature is only working for operating system with multi processors mode supported. (Default value)
- ▶ Disabled Disables CPU Hyper Threading.

### ☞ Init Display First

Select the first initiation of monitor or display from AGP or PCI VGA card.

- ▶ AGP Set Init display first to AGP. (Default value)
- ▶ PCI Set Init display first to PCI.

## Integrated Peripherals

CMOS Setup Utility—Copyright (C) 1984–2004 Award Software  
Integrated Peripherals

		Item Help
On-Chip Primary PCI IDE	[Enabled]	
On-Chip Secondary PCI IDE	[Enabled]	Menu Level▶
IDE1 Conductor Cable	[Auto]	
IDE2 Conductor Cable	[Auto]	[Auto]
USB Controller	[Enabled]	Auto-detect IDE cable type
USB Keyboard Support	[Disabled]	
USB Mouse Support	[Disabled]	
AC97 Audio	[Auto]	[ATA66/100/133]
Onboard H/W LAN *	[Enabled]	Set Conductor cable to ATA66/100/133(80-pins)
Onboard LAN Boot ROM *	[Disabled]	
Onboard Serial Port 1	[3F8/IRQ4]	
Onboard Serial Port 2	[2F8/IRQ3]	
Onboard Parallel Port	[378/IRQ7]	[ATA33]
Parallel Port Mode	[SPP]	Set Conductor cable to ATA33(40-pins)
x ECP Mode Use DMA	3	
Game Port Address	[201]	
Midi Port Address	[330]	
Midi Port IRQ	[10]	
↑↓←→: Move    Enter: Select    +/~/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help F5: Previous Values    F6: Fail-Save Default    F7: Optimized Defaults		

### ☞ On-Chip Primary PCI IDE

- ▶ Enabled Enable onboard 1st channel IDE port. (Default value)
- ▶ Disabled Disable onboard 1st channel IDE port.

### ☞ On-Chip Secondary PCI IDE

- ▶ Enabled Enable onboard 2nd channel IDE port. (Default value)
- ▶ Disabled Disable onboard 2nd channel IDE port.

### ☞ IDE1 Conductor Cable

- ▶ Auto Will be automatically detected by BIOS. (Default value)
- ▶ ATA66/100 Set IDE1 Conductor Cable to ATA66/100 (Please make sure your IDE device and cable is compatible with ATA66/100).
- ▶ ATA33 Set IDE1 Conductor Cable to ATA33 (Please make sure your IDE device and cable is compatible with ATA33).

### ☞ IDE2 Conductor Cable

- ▶ Auto Will be automatically detected by BIOS. (Default value)
- ▶ ATA66/100 Set IDE2 Conductor Cable to ATA66/100 (Please make sure your IDE device and cable is compatible with ATA66/100).
- ▶ ATA33 Set IDE2 Conductor Cable to ATA33 (Please make sure your IDE device and cable is compatible with ATA33).

\*\*\* For 8I845PE-RZ only.



### ☞ **USB Controller**

- ▶▶ Enabled      Enable USB controller. (Default value)
- ▶▶ Disabled     Disable USB controller.

### ☞ **USB Keyboard Support**

- ▶▶ Enabled      Enable USB keyboard support.
- ▶▶ Disabled     Disable USB keyboard support. (Default value)

### ☞ **USB Mouse Support**

- ▶▶ Enabled      Enable USB mouse support.
- ▶▶ Disabled     Disable USB mouse support (Default value)

### ☞ **AC97 Audio**

- ▶▶ Auto          Enable onboard AC'97 audio function. (Default value)
- ▶▶ Disabled     Disable this function.

### ☞ **Onboard H/W LAN \***

- ▶▶ Enabled      Enable onboard H/W LAN function. (Default value)
- ▶▶ Disabled     Disable this function.

### ☞ **Onboard H/W LAN Boot ROM \***

This function decide whether to invoke the boot ROM of the onboard LAN chip.

- ▶▶ Enabled      Enable this function.
- ▶▶ Disabled     Disable this function. (Default Value)

### ☞ **Onboard Serial Port 1**

- ▶▶ Auto          BIOS will automatically setup the port 1 address.
- ▶▶ 3F8/IRQ4     Enable onboard Serial port 1 and address is 3F8. (Default value)
- ▶▶ 2F8/IRQ3     Enable onboard Serial port 1 and address is 2F8.
- ▶▶ 3E8/IRQ4     Enable onboard Serial port 1 and address is 3E8.
- ▶▶ 2E8/IRQ3     Enable onboard Serial port 1 and address is 2E8.
- ▶▶ Disabled     Disable onboard Serial port 1.

### ☞ **Onboard Serial Port 2**

- ▶▶ Auto          BIOS will automatically setup the port 2 address.
- ▶▶ 3F8/IRQ4     Enable onboard Serial port 2 and address is 3F8.
- ▶▶ 2F8/IRQ3     Enable onboard Serial port 2 and address is 2F8. (Default value)
- ▶▶ 3E8/IRQ4     Enable onboard Serial port 2 and address is 3E8.
- ▶▶ 2E8/IRQ3     Enable onboard Serial port 2 and address is 2E8.
- ▶▶ Disabled     Disable onboard Serial port 2.

### ☞ **Onboard Parallel port**

- ▶▶ 378/IRQ7     Enable onboard LPT port and address is 378/IRQ7. (Default value)
- ▶▶ 278/IRQ5     Enable onboard LPT port and address is 278/IRQ5.
- ▶▶ Disabled     Disable onboard LPT port.
- ▶▶ 3BC/IRQ7     Enable onboard LPT port and address is 3BC/IRQ7.

### ☞ **Parallel Port Mode**

- ▶▶ SPP          Using Parallel port as Standard Parallel Port. (Default value)
- ▶▶ EPP          Using Parallel port as Enhanced Parallel Port.
- ▶▶ ECP          Using Parallel port as Extended Capabilities Port.
- ▶▶ ECP+EPP     Using Parallel port as ECP & EPP mode.

\*\*\* For 8I845PE-RZ only.

### ⚙ ECP Mode Use DMA

- ▶▶ 3 Set ECP Mode Use DMA to 3. (Default value)
- ▶▶ 1 Set ECP Mode Use DMA to 1.

### ⚙ Game Port Address

- ▶▶ 201 Set Game Port Address to 201. (Default value)
- ▶▶ 209 Set Game Port Address to 209.
- ▶▶ Disabled Disable this function.

### ⚙ Midi Port Address

- ▶▶ 300 Set Midi Port Address to 300.
- ▶▶ 330 Set Midi Port Address to 330. (Default value)
- ▶▶ Disabled Disable this function.

### ⚙ Midi Port IRQ

- ▶▶ 5 Set Midi Port IRQ to 5.
- ▶▶ 10 Set Midi Port IRQ to 10. (Default value)

## Power Management Setup

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
Power Management Setup

		Item Help
ACPI Suspend Type	[S1(POS)]	Menu Level▶
Power LED in S1 state	[Blinking]	[S1]
Soft-Off by PWR-BTTN	[Instant-Off]	Set suspend type to
PME Event Wake Up	[Enabled]	Power On Suspend under
ModemRingOn	[Enabled]	ACPI OS
Resume by Alarm	[Disabled]	
x Date (of Month) Alarm	Everyday	
x Time (hh:mm:ss) Alarm	0 : 0 : 0	[S3]
Power On by Mouse	[Disabled]	Set suspend type to
Power On by Keyboard	[Disabled]	Suspend to RAM under
x KB Power ON Password	Enter	ACPI OS
AC Back Function	[Soft-Off]	

⬆⬇⬅⬅: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help  
 F5: Previous Values    F6: Fail-Save Default    F7: Optimized Defaults

### ⚙ ACPI Suspend Type

- ▶▶ S1(POS) Set ACPI suspend type to S1. (Default value)
- ▶▶ S3(STR) Set ACPI suspend type to S3.

### ⚙ Power LED in S1 state

- ▶▶ Blinking In standby mode(S1), power LED will blink. (Default value)
- ▶▶ Dual/OFF In standby mode(S1):
  - a. If use single color LED, power LED will turn off.
  - b. If use dual color LED, power LED will turn to another color.

### ⚙ Soft-off by PWR-BTTN

- ▶▶ Instant-off Press power button then Power off instantly. (Default value)
- ▶▶ Delay 4 Sec. Press power button 4 sec to Power off. Enter suspend if button is pressed less than 4 sec.

**⚙️ PME Event Wake Up**

- ▶▶ Disabled      Disable this function.
- ▶▶ Enabled        Enable PME as wake up event. (Default value)

**⚙️ ModemRingOn**

- ▶▶ Disabled      Disable Modem Ring on function.
- ▶▶ Enabled        Enable Modem Ring on function. (Default value)

**⚙️ Resume by Alarm**

You can set "Resume by Alarm" item to enabled and key in Date/time to power on system.

- ▶▶ Disabled      Disable this function. (Default Value)
- ▶▶ Enabled        Enable alarm function to POWER ON system.

If RTC Alarm Lead To Power On is Enabled.

Date (of Month) Alarm :            Everyday, 1~31

Time (hh: mm: ss) Alarm :        (0~23) : (0~59) : (0~59)

**⚙️ Power On By Mouse**

- ▶▶ Disabled      Disabled this function. (Default value)
- ▶▶ Double Click    Double click on PS/2 mouse left button to power on system.

**⚙️ Power On By Keyboard**

- ▶▶ Password      Enter from 1 to 5 characters to set the keyboard power on password.
- ▶▶ Disabled      Disabled this function. (Default value)
- ▶▶ Keyboard 98    If your keyboard have "POWER Key" button, you can press the key to power on your system.

**⚙️ KB Power ON Password**

- ▶▶ Enter          Input password (from 1 to 5 characters) and press Enter to set the keyboard power on password.

**⚙️ ACBack Function**

- ▶▶ Soft-Off        Always in Off state when AC back. (Default value)
- ▶▶ Memory        System power on depends on the status before AC lost.
- ▶▶ Full-On         Always power on the system when AC back.

## PnP/PCI Configurations

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software

PnP/PCI Configurations

PCI 1/PCI 5 IRQ Assignment	[Auto]	Item Help
PCI 2 IRQ Assignment	[Auto]	Menu Level▶
PCI 3 IRQ Assignment	[Auto]	Device(s) using this INT:
PCI 4 IRQ Assignment	[Auto]	Display Cntrlr -Bus 1 Dev 0 Func 0
↑↓←→: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help F5: Previous Values    F6: Fail-Save Default    F7: Optimized Defaults		

### ☞ PCI 1/PCI 5 IRQ Assignment

- ▶▶ Auto    Auto assign IRQ to PCI 1/PCI 5. (Default value)
- ▶▶ 3,4,5,7,9,10,11,12,14,15    Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1/PCI 5.

### ☞ PCI 2 IRQ Assignment

- ▶▶ Auto    Auto assign IRQ to PCI 2. (Default value)
- ▶▶ 3,4,5,7,9,10,11,12,14,15    Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 2.

### ☞ PCI 3 IRQ Assignment

- ▶▶ Auto    Auto assign IRQ to PCI 3. (Default value)
- ▶▶ 3,4,5,7,9,10,11,12,14,15    Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 3.

### ☞ PCI 4 IRQ Assignment

- ▶▶ Auto    Auto assign IRQ to PCI 4. (Default value)
- ▶▶ 3,4,5,7,9,10,11,12,14,15    Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 4.

# PC Health Status

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
PC Health Status

		Item Help
Reset Case Open Status	[Disabled]	
Case Opened	Yes	Menu Level▶
Vcore	1.54V	
DDR25V	2.544V	
+3.3V	3.360V	Don't reset case open status
+12V	11.92V	
Current CPU Temperature	41° C	Clear case open status at next boot
Current CPU FAN Speed	4440 RPM	
Current SYSTEM FAN Speed	0 RPM	
CPU Warning Temperature	[Disabled]	
CPU FAN Fail Warning	[Disabled]	
SYSTEM FAN Fail Warning	[Disabled]	

↑↓←→: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help  
F5: Previous Values    F6: Fail-Save Default    F7: Optimized Defaults

## Reset Case Open Status

- ▶ Disabled      Don't reset case open status. (Default value)
- ▶ Enabled       Clear case open status at next boot.

## Case Opened

If the case is closed, "Case Opened" will show "No".

If the case have been opened, "Case Opened" will show "Yes".

If you want to reset "Case Opened" value, set "Reset Case Open Status" to "Enabled" and save CMOS, your computer will restart.

## Current Voltage (V) Vcore / DDR25V / +3.3V / +12V

- ▶ Detect system's voltage status automatically.

## Current CPU Temperature

- ▶ Detect CPU temperature automatically.

## Current CPU/SYSTEM FAN Speed (RPM)

- ▶ Detect CPU/SYSTEM Fan speed status automatically.

## CPU Warning Temperature

- ▶ 60°C / 140°F      Monitor CPU temperature at 60°C / 140°F.
- ▶ 70°C / 158°F      Monitor CPU temperature at 70°C / 158°F.
- ▶ 80°C / 176°F      Monitor CPU temperature at 80°C / 176°F.
- ▶ 90°C / 194°F      Monitor CPU temperature at 90°C / 194°F.
- ▶ Disabled          Disable this function. (Default value)

## CPU FAN Fail Warning

- ▶ Disabled          Fan warning function disable. (Default value)
- ▶ Enabled           Fan warning function enable.

## SYSTEM FAN Fail Warning

- ▶ Disabled          Fan warning function disable. (Default value)
- ▶ Enabled           Fan warning function enable.

# Frequency/Voltage Control

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
Frequency/Voltage Control

		Item Help
CPU Clock Ratio	[15X]	
CPU Host Clock Control	[Disabled]	Menu Level▶
× CPU Host Frequency (Mhz)	100	
× Fixed PCI/AGP Frequency	Disabled	
Host/DRAM Clock ratio	[Auto]	
Memory Frequency (Mhz)	266	
PCI/AGP Frequency (Mhz)	33/66	

↑↓←→: Move	Enter: Select	+/-/PU/PD: Value	F10: Save	ESC: Exit	F1: General Help
F5: Previous Values	F6: Fail-Save Default	F7: Optimized Defaults			

× Those items will be available when "CPU Host Clock Control" is set to Enabled.

## ☞ CPU Clock Ratio

This setup option will automatically assign by CPU detection.

The option will display "Locked" and read only if the CPU ratio is not changeable.

## ☞ CPU Host Clock Control

Please note that if your system is overlocked and cannot restart, please wait 20secs. for automatic system restart or clear the CMOS setup data and perform a safe restart.

▶ Disabled Disable CPU Host Clock Control. (Default value)

▶ Enabled Enable CPU Host Clock Control.

## ☞ CPU Host Frequency (MHz)

▶ 100MHz ~ 355MHz Set CPU Host Clock from 100MHz to 355MHz.

If you use FSB400 Pentium 4 processor, please set "CPU Clock" to 100MHz. If you use FSB533 Pentium 4 processor, please set "CPU Clock" to 133MHz.

Incorrect using it may cause your system broken. For power End-User use only!

## ☞ Fixed PCI/AGP Frequency

▶ You can choose those mode to adjust PCI/AGP frequency. (Select PCI/AGP frequency asynchronous with CPU frequency).

### Host/DRAM Clock Ratio

(Warning: wrong frequency may make system can boot, clear CMOS to overcome wrong frequency issue)

for FSB(Front Side Bus) frequency=400MHz,

▶▶ 2.66 Memory Frequency = Host clock X 2.66.

▶▶ Auto Set Memory frequency by DRAM SPD data. (Default value)

for FSB(Front Side Bus) frequency=533MHz,

▶▶ 2.0 Memory Frequency = Host clock X 2.0.

▶▶ 2.5 Memory Frequency = Host clock X 2.5.

▶▶ Auto Set Memory frequency by DRAM SPD data. (Default value)


### Memory Frequency (Mhz)

▶▶ The values depend on CPU Host Frequency(Mhz).

### PCI/AGP Frequency(Mhz)

▶▶ The values depend on PCI/AGP Divider.

## Top Performance

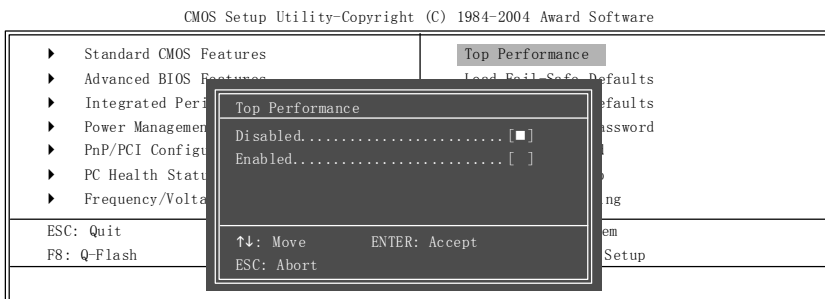


If you wish to maximize the performance of your system, set "Top Performance" as "Enabled".

▶▶ Disabled Disable this function. (Default Value)

▶▶ Enabled Enable Top Performance function.


📌 "Top Performance" will increase H/W working speed. Different system configuration (both H/W component and OS) will effect the result. For example, the same H/W configuration might not run properly with Windows XP, but works smoothly with Windows NT. Therefore, if your system is not perform enough, the reliability or stability problem will appear sometimes, and we will recommend you disabling the option to avoid the problem as mentioned above.

## Load Fail-Safe Defaults

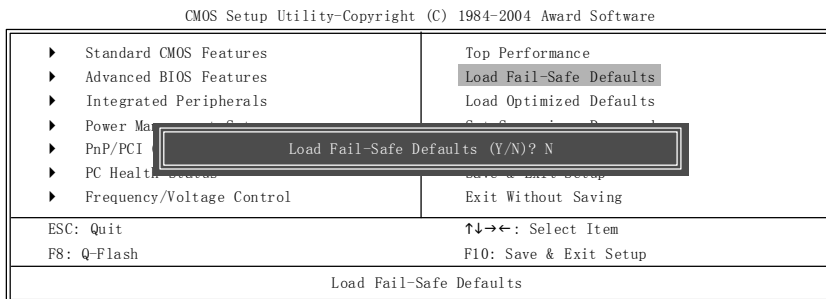

Fail-Safe defaults contain the most appropriate values of the system parameters that allow minimum system performance.


## Load Optimized Defaults

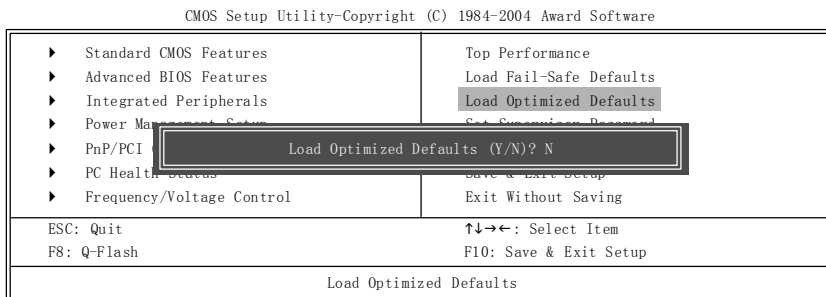

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.



## Set Supervisor/User Password

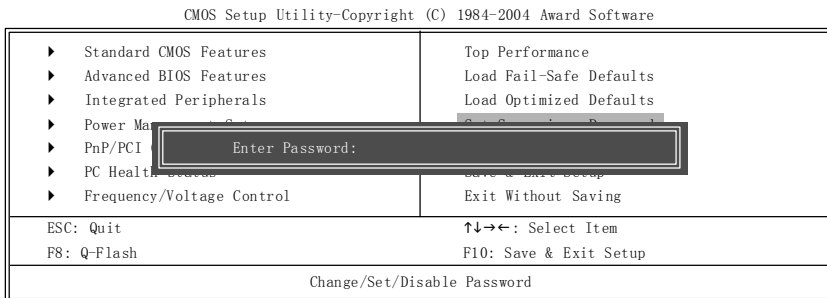

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords:

SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.

## Save & Exit Setup

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software

▶ Standard CMOS Features	Top Performance
▶ Advanced BIOS Features	Load Fail-Safe Defaults
▶ Integrated Peripherals	Load Optimized Defaults
▶ Power Management Setup	Save & Exit Setup
▶ PnP/PCI	Save & Exit Setup
▶ PC Health Status	Save & Exit Setup
▶ Frequency/Voltage Control	Exit Without Saving
ESC: Quit	↑↓→←: Select Item
F8: Q-Flash	F10: Save & Exit Setup
Save Data to CMOS	

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS.

Type "N" will return to Setup Utility.

## Exit Without Saving

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software

▶ Standard CMOS Features	Top Performance
▶ Advanced BIOS Features	Load Fail-Safe Defaults
▶ Integrated Peripherals	Load Optimized Defaults
▶ Power Management Setup	Save & Exit Setup
▶ PnP/PCI	Save & Exit Setup
▶ PC Health Status	Save & Exit Setup
▶ Frequency/Voltage Control	Exit Without Saving
ESC: Quit	↑↓→←: Select Item
F8: Q-Flash	F10: Save & Exit Setup
Abandon all Data	

Type "Y" will quit the Setup Utility without saving to RTC CMOS.

Type "N" will return to Setup Utility.

# Chapter 3 Install Drivers


## Install Drivers




### Pictures below are shown in Windows XP


Insert the driver CD-title that came with your motherboard into your CD-ROM drive, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

## INSTALL CHIPSET DRIVER

This page shows the drivers that need to be installed for the system. Click each item to install the driver manually or switch to the  to install the drivers automatically.

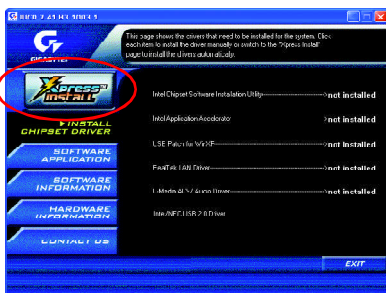


The "Xpress Install" uses the "Click and Go" technology to install the drivers automatically. Just select the drivers you want then click the "GO" button. The  will execute the installation for you by itself.

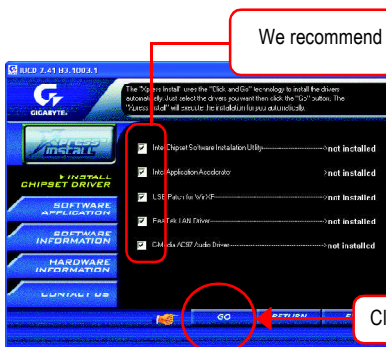

We recommend that you install all components in the list.

Message: Some device drivers will restart your system automatically. After restarting your system the "Xpress Install" will continue to install other drivers.

Click "GO".

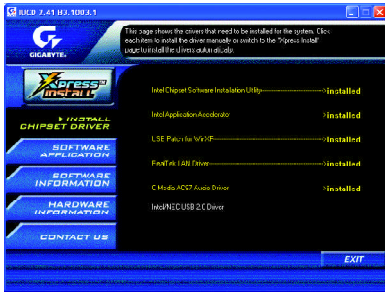

Driver install finished!! you have to reboot system!!

## Item Description

- Intel Chipset Software Installation Utility  
Tell the operating system how the chipset components will be configured.
- Intel Application Accelerator  
Designed to improve performance of the storage sub-system and overall system performance.
- USB Patch for WinXP  
This patch driver can help you to resolve the USB device wake up S3 hang up issue in XP.
- RealTek LAN Driver \*  
RealTek 10/100 LAN driver for 81xx series chips.
- C-Media AC97 Audio Driver  
Install C-Media AC97 audio driver.
- Intel/NEC USB 2.0 Driver  
It is recommended that you use the Microsoft Windows update for the most updated driver for XP/2K.

\*\* For 8I845PE-RZ only.







## CONTACT US

Contact us via the information in this page all over the world.

---

### • Taiwan

Gigabyte Technology Co., Ltd.  
 Address: No.6, Bau Chiang Road, Hsin-Tien, Taipei Hsien,  
 Taiwan, R.O.C.  
 Tel: 886 (2) 8912-4888  
 Fax: 886 (2) 8912-4004  
 Tech. Support:  
<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>  
 Non-Tech. Support (Sales/Marketing issues):  
<http://ggts.gigabyte.com.tw/nontech.asp>  
 Website: <http://www.gigabyte.com.tw>

### • USA

G.B.T. INC.  
 Address: 17358 Railroad St, City of Industry, CA 91748.  
 Tel: 1 (626) 854-9338  
 Fax: 1 (626) 854-9339  
 Tech. Support:  
<http://www.giga-byte.com/TechSupport/ServiceCenter.htm>  
 Non-Tech. Support (Sales/Marketing issues):  
<http://ggts.gigabyte.com.tw/nontech.asp>  
 Website: <http://www.giga-byte.com>

### • Germany

G.B.T. Technology Trading GmbH  
 Tel: 49-40-2533040  
 49-01803-428468 (Tech.)  
 Fax: 49-40-25492343 (Sales)  
 49-01803-428329 (Tech.)  
 Tech. Support:  
<http://de.giga-byte.com/TechSupport/ServiceCenter.htm>  
 Non-Tech. Support (Sales/Marketing issues):  
<http://ggts.gigabyte.com.tw/nontech.asp>  
 Website: <http://www.gigabyte.de>

### • Japan

Nippon Giga-Byte Corporation  
 Website: <http://www.gigabyte.co.jp>

### • U.K

G.B.T. TECH. CO. LTD.  
 Tel: 44-1908-362700  
 Fax: 44-1908-362709  
 Tech. Support:  
<http://uk.giga-byte.com/TechSupport/ServiceCenter.htm>  
 Non-Tech. Support (Sales/Marketing issues):  
<http://ggts.gigabyte.com.tw/nontech.asp>  
 Website: <http://uk.giga-byte.com>

---



---

### • The Netherlands

Giga-Byte Technology B.V.  
 Address: Verdunplein 8 5627 SZ, Eindhoven, The Netherlands  
 Tel: +31 40 290 2088  
 NL Tech.Support : 0900-GIGABYTE (0900-44422983, ☎ 0.2/M)  
 BE Tech.Support : 0900-84034 (☎ 0.4/M)  
 Fax: +31 40 290 2089  
 Tech. Support:  
<http://nz.giga-byte.com/TechSupport/ServiceCenter.htm>  
 Non-Tech. Support (Sales/Marketing issues):  
<http://ggts.gigabyte.com.tw/nontech.asp>  
 Website: <http://www.giga-byte.nl>

### • China

NINGBO G.B.T. Tech. Trading CO., Ltd.  
 Tech. Support:  
<http://cn.giga-byte.com/TechSupport/ServiceCenter.htm>  
 Non-Tech. Support (Sales/Marketing issues):  
<http://ggts.gigabyte.com.tw/nontech.asp>  
 Website: <http://www.gigabyte.com.cn>  
Beijing  
 Tel: 86-10-82856054, 86-10-82856064, 86-10-82856094  
 Fax: 86-10-82856575  
Chengdu  
 Tel: 86-28-85236930  
 Fax: 86-28-85256822  
GuangZhou  
 Tel: 86-20-87586273  
 Fax: 86-20-87544306  
Shanghai  
 Tel: 86-21-64737410  
 Fax: 86-21-64453227  
Shenyang  
 Tel: 86-24-23960918, 86-24-23960893  
Wuhan  
 Tel: 86-27-87854385, 86-27-87854802  
 Fax: 86-27-87854031  
Xian  
 Tel: 86-29-5531943  
 Fax: 86-29-5539821

---