


6H302-48 and 6H303-48 Fast Ethernet User's Guide

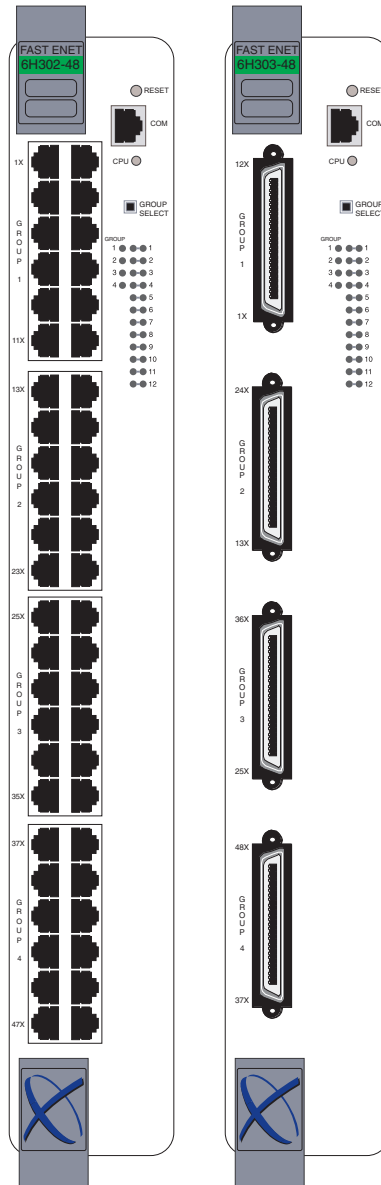

NOTICE

Enterasys Networks reserves the right to make changes in specifications and other information contained in this document and its web site without prior notice. The reader should in all cases consult Enterasys Networks to determine whether any such changes have been made.

The hardware, firmware, or software described in this document is subject to change without notice.

IN NO EVENT SHALL ENTERASYS NETWORKS BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING BUT NOT LIMITED TO LOST PROFITS) ARISING OUT OF OR RELATED TO THIS DOCUMENT, WEB SITE, OR THE INFORMATION CONTAINED IN THEM, EVEN IF ENTERASYS NETWORKS HAS BEEN ADVISED OF, KNEW OF, OR SHOULD HAVE KNOWN OF, THE POSSIBILITY OF SUCH DAMAGES.

Enterasys Networks, Inc.
35 Industrial Way
Rochester, NH 03867

© 2002 by Enterasys Networks, Inc. All Rights Reserved
Printed in the United States of America.

Order Number: 9033387-05 October 2002

LANVIEW is a registered trademark and ENTERASYS NETWORKS, NETSIGHT, SMARTSWITCH, MATRIX, WEBVIEW, and any logos associated therewith, are trademarks of Enterasys Networks, Inc. in the United States and other countries.

All other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies.

FCC NOTICE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment uses, generates, and can radiate radio frequency energy and if not installed in accordance with the operator's manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference in which case the user will be required to correct the interference at his own expense.

WARNING: Changes or modifications made to this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INDUSTRY CANADA NOTICE

This digital apparatus does not exceed the class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

VCCI NOTICE

This is a class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

CLASS A ITE NOTICE

WARNING: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

ENTERASYS NETWORKS, INC. PROGRAM LICENSE AGREEMENT

BEFORE OPENING OR UTILIZING THE ENCLOSED PRODUCT, CAREFULLY READ THIS LICENSE AGREEMENT.

This document is an agreement (“Agreement”) between You, the end user, and Enterasys Networks, Inc. (“Enterasys”) that sets forth your rights and obligations with respect to the Enterasys software program (“Program”) in the package. The Program may be contained in firmware, chips or other media. **UTILIZING THE ENCLOSED PRODUCT, YOU ARE AGREEING TO BECOME BOUND BY THE TERMS OF THIS AGREEMENT, WHICH INCLUDES THE LICENSE AND THE LIMITATION OF WARRANTY AND DISCLAIMER OF LIABILITY. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, RETURN THE UNOPENED PRODUCT TO ENTERASYS OR YOUR DEALER, IF ANY, WITHIN TEN (10) DAYS FOLLOWING THE DATE OF RECEIPT FOR A FULL REFUND.**

IF YOU HAVE ANY QUESTIONS ABOUT THIS AGREEMENT, CONTACT ENTERASYS NETWORKS (603) 332-9400. Attn: Legal Department.

1. LICENSE. You have the right to use only the one (1) copy of the Program provided in this package subject to the terms and conditions of this License Agreement.

You may not copy, reproduce or transmit any part of the Program except as permitted by the Copyright Act of the United States or as authorized in writing by Enterasys.

2. OTHER RESTRICTIONS. You may not reverse engineer, decompile, or disassemble the Program.

3. APPLICABLE LAW. This License Agreement shall be interpreted and governed under the laws and in the state and federal courts of New Hampshire. You accept the personal jurisdiction and venue of the New Hampshire courts.

4. EXPORT REQUIREMENTS. You understand that Enterasys and its Affiliates are subject to regulation by agencies of the U.S. Government, including the U.S. Department of Commerce, which prohibit export or diversion of certain technical products to certain countries, unless a license to export the product is obtained from the U.S. Government or an exception from obtaining such license may be relied upon by the exporting party.

If the Program is exported from the United States pursuant to the License Exception CIV under the U.S. Export Administration Regulations, You agree that You are a civil end user of the Program and agree that You will use the Program for civil end uses only and not for military purposes.

If the Program is exported from the United States pursuant to the License Exception TSR under the U.S. Export Administration Regulations, in addition to the restriction on transfer set forth in Sections 1 or 2 of this Agreement, You agree not to (i) reexport or release the Program, the source code for the Program or technology to a national of a country in Country Groups D:1 or E:2 (Albania, Armenia, Azerbaijan, Belarus, Bulgaria, Cambodia, Cuba, Estonia, Georgia, Iraq, Kazakhstan, Kyrgyzstan, Laos, Latvia, Libya, Lithuania, Moldova, North Korea, the People’s Republic of China, Romania, Russia, Rwanda, Tajikistan, Turkmenistan, Ukraine, Uzbekistan, Vietnam, or such other countries as may be designated by the United States Government), (ii) export to Country Groups D:1 or E:2 (as defined herein) the direct product of the Program or the technology, if such foreign produced direct product is subject to national security controls as identified on the U.S. Commerce Control List, or (iii) if the direct product of the technology is a complete plant or any major component of a plant, export to Country Groups D:1 or E:2 the direct product of the plant or a major component thereof, if such foreign produced direct product is subject to national security controls as identified on the U.S. Commerce Control List or is subject to State Department controls under the U.S. Munitions List.

5. UNITED STATES GOVERNMENT RESTRICTED RIGHTS. The enclosed Product (i) was developed solely at private expense; (ii) contains “restricted computer software” submitted with restricted rights in accordance with section 52.227-19 (a) through (d) of the Commercial Computer Software-Restricted Rights Clause and its successors, and (iii) in all respects is proprietary data belonging to Enterasys and/or its suppliers. For Department of Defense units, the Product is considered commercial computer software in accordance with DFARS section 227.7202-3 and its successors, and use, duplication, or disclosure by the Government is subject to restrictions set forth herein.

6. EXCLUSION OF WARRANTY. Except as may be specifically provided by Enterasys in writing, Enterasys makes no warranty, expressed or implied, concerning the Program (including its documentation and media).

ENTERASYS DISCLAIMS ALL WARRANTIES, OTHER THAN THOSE SUPPLIED TO YOU BY ENTERASYS IN WRITING, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WITH RESPECT TO THE PROGRAM, THE ACCOMPANYING WRITTEN MATERIALS, AND ANY ACCOMPANYING HARDWARE.

7. NO LIABILITY FOR CONSEQUENTIAL DAMAGES. IN NO EVENT SHALL ENTERASYS OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS, PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR RELIANCE DAMAGES, OR OTHER LOSS) ARISING OUT OF THE USE OR INABILITY TO USE THIS ENTERASYS PRODUCT, EVEN IF ENTERASYS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, OR IN THE DURATION OR LIMITATION OF IMPLIED WARRANTIES IN SOME INSTANCES, THE ABOVE LIMITATION AND EXCLUSIONS MAY NOT APPLY TO YOU.

DECLARATION OF CONFORMITY

Application of Council Directive(s): **89/336/EEC**
73/23/EEC

Manufacturer's Name: **Enterasys Networks, Inc.**

Manufacturer's Address: **35 Industrial Way**
PO Box 5005
Rochester, NH 03866-5005

European Representative Address: **Enterasys Networks Ltd.**
Nexus House, Newbury Business Park
London Road, Newbury
Berkshire RG14 2PZ, England

Conformance to Directive(s)/Product Standards: **EC Directive 89/336/EEC**
EC Directive 73/23/EEC
EN 55022
EN 55024
EN 60950
EN 60825

Equipment Type/Environment: **Networking Equipment, for use in a Commercial**
or Light Industrial Environment.

Enterasys Networks, Inc. declares that the equipment packaged with this notice conforms to the above directives.

Contents

Figures	ix
Tables.....	x

ABOUT THIS GUIDE

Using This Guide.....	xi
Structure of This Guide	xii
Related Documents.....	xii
Document Conventions.....	xiii
Getting Help	xiv

1	1.1	Connectivity.....	1-3
	1.2	Runtime IP Address Discovery	1-3
	1.3	Half-Duplex/Full-Duplex Auto-Negotiation	1-3
	1.4	SmartTrunk	1-3
	1.5	Remote Monitoring (RMON)	1-4
	1.6	Broadcast Suppression	1-4
	1.7	Port/VLAN Redirect Functions	1-4
	1.8	Traffic Rate Limiting	1-5
	1.9	Flow Control	1-5
	1.10	GARP Switch Operation.....	1-6
	1.11	802.1 Port Priority	1-6
	1.12	Distributed Chassis Management	1-6
	1.13	Management	1-7
	1.14	Switching Options	1-7
	1.15	Standards Compatibility	1-8
	1.16	LANVIEW Diagnostic LEDs	1-8
2	2.1	SmartTrunk Feature	2-1
	2.2	10BASE-T Network	2-1
	2.3	100BASE-TX Network.....	2-2

3	3.1	Unpacking the Module	3-2
	3.2	Installing Optional FLASH Upgrade	3-2
	3.3	Installing the Module into the Matrix E7 Chassis	3-2
	3.4	Installing the Module into the 6C105 Chassis	3-5
	3.5	Connecting to the Network.....	3-7
	3.5.1	Connecting UTP Cables to the 6H302-48.....	3-7
	3.5.2	Connecting UTP Cables to the 6H303-48.....	3-9
	3.6	Completing the Installation.....	3-11
4	4.1	Using LANVIEW.....	4-1
	4.2	Troubleshooting Checklist.....	4-5
	4.3	Using the RESET Button.....	4-7
A	A.1	6H302-48 / 6H303-48 Specifications	A-1
	A.2	COM Port Pinout Assignments	A-3
	A.3	Regulatory Compliance	A-3
B	B.1	Required Tools.....	B-1
	B.2	Setting the Mode Switches.....	B-2
	B.3	FLASH Upgrade.....	B-4
	B.3.1	Locating the FLASH Module	B-4
	B.3.2	Installing the FLASH Module	B-5

INDEX

Figures

Figure		Page
1-1	6H302-48 and 6H303-48 Modules	1-2
3-1	Installing a Module into the Matrix E7 Chassis.....	3-4
3-2	Installing a Module into the 6C105 Chassis	3-6
3-3	Connecting a Twisted Pair Segment to the 6H302-48	3-8
3-4	Crossover Cable RJ45 Pinouts	3-9
3-5	Straight-Through Cable RJ45 Pinouts.....	3-9
3-6	Connecting a Twisted Pair Segment to the 6H303-48	3-10
4-1	LANVIEW LEDs (both modules)	4-2
4-2	RESET Button (both modules)	4-7
B-1	Mode Switch Location	B-2
B-2	FLASH Module Location	B-4
B-3	Installing the FLASH.....	B-5

Tables

Table		Page
3-1	Contents of Module Carton	3-2
4-1	LANVIEW LEDs	4-3
4-2	Troubleshooting Checklist.....	4-5
A-1	6H302-48 / 6H303-48 Specifications	A-1
A-2	COM Port Pin Assignments	A-3
A-3	Compliance Standards.....	A-3

About This Guide

Welcome to the *6H302-48 and 6H303-48 Fast Ethernet User's Guide*. This guide describes the Fast Ethernet modules and provides information concerning network requirements, installation, and troubleshooting. For information about how to use Local Management to configure and manage the module, refer to the *Matrix E7 Series and SmartSwitch 6000 Series Local Management User's Guide*.

Important Notices

Depending on the firmware version used in the module, some features described in this document may not be supported. Refer to the Release Notes shipped with the module to determine which features are supported.

There are restrictions on the version of firmware required for 6H302-48 modules with a serial number starting with **3655xxxxxx**. The serial number is visible on the top ejector tab of the switch, or by querying the PIC MIB. For firmware in the 5.x track, version **5.03.05** or higher must be used on 6H302-48 modules with a serial number starting with 3655. For the 4.x firmware track, **4.08.41** or higher must be used on 6H302-48 modules with a serial number starting with 3655.

USING THIS GUIDE

Read through this guide to completely understand the module capabilities and how to install the modules.

A general working knowledge of Ethernet and IEEE 802.3 type data communications networks and their physical layer components is helpful when using this module.



NOTE: In this document, the 6H302-48 or 6H303-48 may be referred to as either the “switch”, or the “module”. When information applies to a specific module, the module will be referred to by its name.

A lowercase italic x indicates the generic use of a letter (e.g., xxx indicates any combination of three alphabetic characters).

STRUCTURE OF THIS GUIDE

This guide is organized as follows:

This chapter provides preliminary information to aid in using this manual, lists technology and user guides that may help the user set up and manage the module, and gives instructions on how to get help.

Chapter 1, Introduction, provides an overview of the modules and their features.

Chapter 2, Network Requirements, outlines the network requirements that must be met before installing the module.

Chapter 3, Installation, provides instructions on how to install the module, and connect segments to the modules.

Chapter 4, Troubleshooting, describes the function of the LANVIEW LEDs, which can help to quickly diagnose network/operational problems.

Appendix A, Specifications, contains information on functionality and operating specifications, connector pinouts, environmental requirements, and physical properties.

Appendix B, Mode Switch Bank Settings and Options, describes how to set the Mode Switch and install options.

RELATED DOCUMENTS

The following documents may help to set up and manage the module:

- *Matrix E7 Series and SmartSwitch 6000 Series Local Management User's Guide*
- *Matrix E7 Overview and Setup Guide*
- *6C105 SmartSwitch 6000 Overview and Setup Guide*
- *Ethernet Technology Guide*
- *Cabling Guide*

The manuals listed above can be obtained from the World Wide Web in Adobe Acrobat Portable Document Format (PDF) at the following site:

<http://www.enterasys.com>



NOTE: All documentation for the Enterasys Networks SecureFast VLAN Manager software is contained on the VLAN Manager CD-ROM.

DOCUMENT CONVENTIONS

The guide uses the following conventions:



Note symbol. Calls the reader's attention to any item of information that may be of special importance.



Tip symbol. Conveys helpful hints concerning procedures or actions.



Caution symbol. Contains information essential to avoid damage to the equipment.



Electrical Hazard Warning symbol. Warns against an action that could result in personal injury or death due to an electrical hazard.



Warning symbol. Warns against an action that could result in personal injury or death.

GETTING HELP

For additional support related to the module or this document, contact Enterasys Networks using one of the following methods:

World Wide Web	http://www.enterasys.com/
Phone	(603) 332-9400
Internet mail	support@enterasys.com
FTP	ftp://ftp.enterasys.com
Login	<i>anonymous</i>
Password	<i>your email address</i>

To send comments or suggestions concerning this document, contact the Technical Writing Department via the following email address: **TechWriting@enterasys.com**
Make sure to include the document Part Number in the email message.

Before contacting Enterasys Networks for technical support, have the following information ready:

- Your service contract number
- A description of the failure
- A description of any action(s) already taken to resolve the problem (e.g., changing mode switches, rebooting the unit, etc.)
- The serial and revision numbers of all involved products in the network
- A description of your network environment (layout, cable type, etc.)
- Network load and frame size at the time of trouble (if known)
- The device history (i.e., have you returned the device before, is this a recurring problem, etc.)
- Any previous Return Material Authorization (RMA) numbers

Introduction

This chapter introduces the 6H302-48 and 6H303-48 Fast Ethernet modules.

Important Notice

Depending on the firmware version used in the module, some features described in this document may not be supported. Refer to the Release Notes shipped with the module to determine which features are supported.

There are restrictions on the version of firmware required for 6H302-48 modules with a serial number starting with **3655xxxxxx**. The serial number is visible on the top ejector tab of the switch, or by querying the PIC MIB. For firmware in the 5.x track, version **5.03.05** or higher must be used on 6H302-48 modules with a serial number starting with 3655. For the 4.x firmware track, **4.08.41** or higher must be used on 6H302-48 modules with a serial number starting with 3655.

The 6H302-48 module ([Figure 1-1](#)) features 48 10BASE-T/100BASE-TX switched ports connected through 48 RJ45 front panel connectors.

The 6H303-48 module ([Figure 1-1](#)) features 48 10BASE-T/100BASE-TX switched ports connected through 4 RJ21 front panel connectors.


Each of the fixed front panel ports can operate in either half-duplex or full-duplex mode of operation, as determined by auto-negotiation. Full-duplex can also be manually configured.

Each high-speed network switching module supports IEEE 802.1D switching (bridging). Distributed Chassis Management (DCM) and SecureFast Switching (SFS) functionality is not supported when the modules are installed in the Matrix E7. Distributed Chassis Management and SecureFast Switching functionality is supported when the modules are installed in the 6C105 SmartSwitch 6000 chassis.

The module ports can be configured to control traffic in several ways, including prioritizing traffic flow according to protocol type. The module can also be configured to establish 802.1Q Virtual Local Area Networks (VLANs) and control the flow of frames associated with each VLAN according to priority and Ether type. Detailed information about VLANs is provided in the *Matrix E7 Series and SmartSwitch 6000 Series Local Management User's Guide*.

The module receives power and backplane connectivity when it is inserted into a Matrix E7 or a 6C105 SmartSwitch 6000 chassis.

Figure 1-1 6H302-48 and 6H303-48 Modules

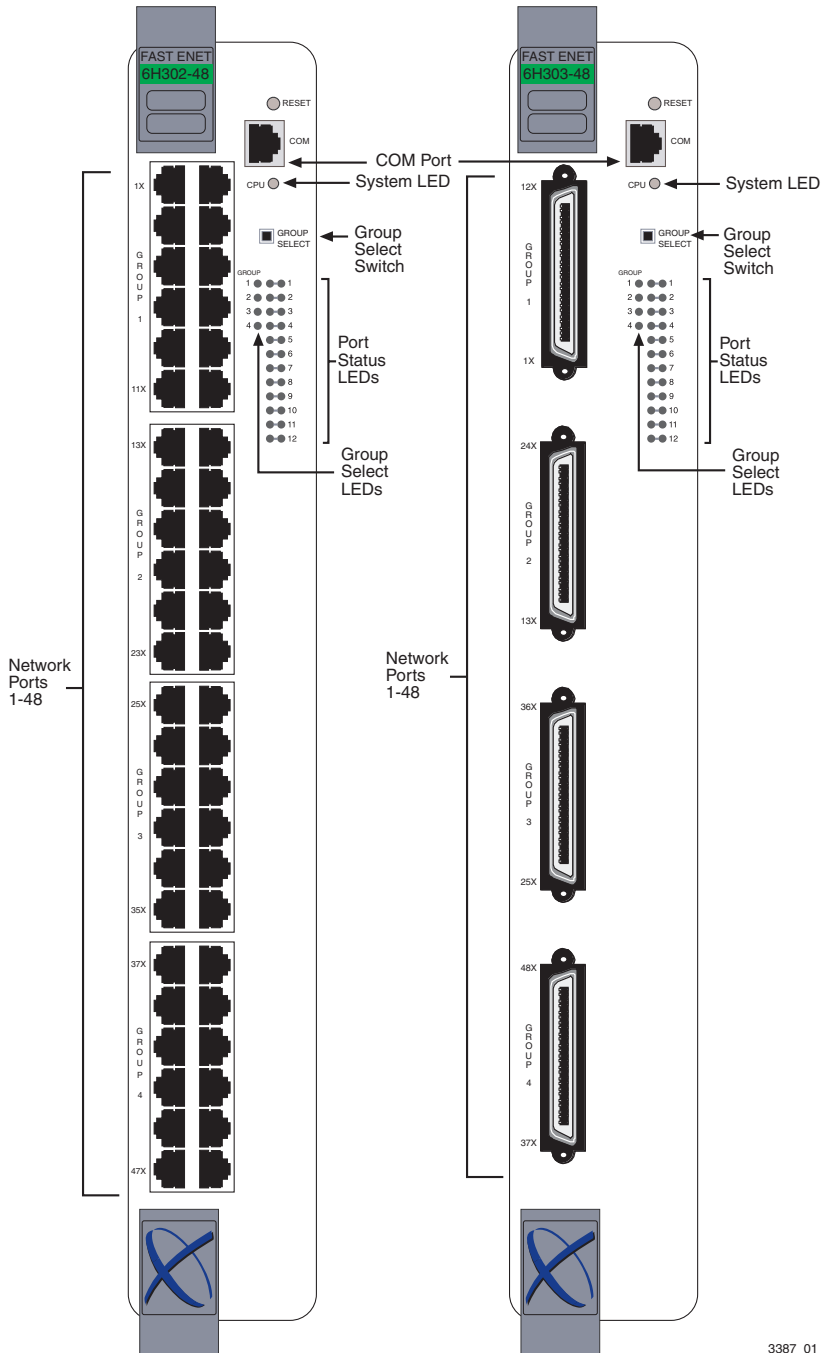

3387_01

1.1 CONNECTIVITY

The module connects to Ethernet networks or workstations through the front panel connectors. The ports support Unshielded Twisted Pair (UTP) cables with an impedance between 85 and 111 ohms at lengths up to 100 meters. The ports are IEEE 802.3 10BASE-T and 100BASE-TX compliant.

1.2 RUNTIME IP ADDRESS DISCOVERY

This feature enables the module to automatically accept an IP address from a Boot Strap Protocol (BootP) server on the network without requiring a user to enter an IP address through Local Management.

When the module is connected to the network and powered up, Runtime IP Address Discovery (RAD) checks the module for an IP address. If one has not yet been assigned (module IP address set to 0.0.0.0), RAD checks to see if any of the module interfaces have a link. If a link is discovered, RAD sends out Reverse Address Resolution Protocol (RARP) and BootP requests to obtain an IP address from a BootP server on the network.

The RAD requests start at an interval of one per second. The interval then doubles after every transmission until an interval of 300 seconds is reached. At this point, the interval remains at 300 seconds. The RAD requests continue until an IP address is received from a RARP or BootP server, or an IP address is entered using Local Management.



NOTE: The module will reboot after RAD is successful.

1.3 HALF-DUPLEX/FULL-DUPLEX AUTO-NEGOTIATION

The fixed front panel ports on the module have the ability to auto-negotiate the ports' mode of operation (half-duplex or full-duplex) between two devices according to IEEE 802.3 standards. During Auto-Negotiation, two devices automatically exchange information "telling" each other their current operating mode. The Auto-Negotiation feature targets the maximum capability that can be reached between the two devices. For example, the module can adjust to full-duplex operation when the device on the other end of the connection can also adjust from half-duplex to full-duplex. If the device on the other end of the connection can only operate in half-duplex mode, then the module simply adjusts to operate in half-duplex mode.

1.4 SMARTTRUNK

Traditional 802.1D Spanning Tree Bridges only allow one active data path between any two switches; all other parallel data paths are in Standby or Blocking mode. If one interface or path should fail, then the other interface automatically comes out of Blocking mode and forwards all of the traffic. This is fine for redundancy purposes. However, it is not the most efficient use of resources.

SmartTrunk, also referred to as SmartTrunking, is Enterasys Networks' terminology for load balancing or load sharing. SmartTrunk provides the ability to take full advantage of the network's redundant bandwidth. SmartTrunk divides network traffic across multiple ports in parallel to provide additional throughput. The SmartTrunk application can be used with any of Enterasys Networks' switch modules (except ATM modules).

For more information about SmartTrunk and how to configure the module, refer to the *Matrix E7 Series and SmartSwitch 6000 Series Local Management User's Guide*.

1.5 REMOTE MONITORING (RMON)

The module supports all nine Ethernet RMON groups. The Statistics, Alarms, Events and History groups are enabled on all ports by default.

Enterasys Networks RMON Actions is a vendor-specific extension of RMON and provides the ability to set an "Action" on any SNMP MIB variable. The Action can be triggered by any RMON Event and/or Alarm. An example of an Action would be to turn off a MIB-2 interface if a broadcast threshold is crossed.

1.6 BROADCAST SUPPRESSION

Broadcast Suppression enables a user to set a desired limit of receive broadcast frames per port/per second to be forwarded out the other ports on the module. Any broadcast frames above this specified limit are dropped. In the event that broadcast frames are being suppressed, multicast and unicast frames continue to be switched.

1.7 PORT/VLAN REDIRECT FUNCTIONS

The port redirect function, also referred to as "Port Mirroring," is a troubleshooting tool used to map traffic from a single source port to a single destination port within the module. This feature allows frames, including those with errors, to be copied and sent to an analyzer or RMON probe. The analyzer or RMON probe will see the data as if it were directly connected to the LAN segment of the source port.

The VLAN redirect function is similar to the port redirect function except that the frames received by the module are redirected to a designated destination port according to the VLAN classification of the frames received. Multiple VLANs can be directed to the same destination port. The VLAN redirect function is only supported when the module is operating as an 802.1Q switch.

1.8 TRAFFIC RATE LIMITING

The Traffic Rate Limiting feature enables the module to control traffic rates on a per-port, per-priority basis. The network administrator can configure a rate limit (from 100 kbps to 1 Gbps) for a given port with an associated list of IEEE 802.1p priorities (which can include one, some, or all of the eight priority levels defined in 802.1p). Each rate limit is specified as an inbound or an outbound limit. The combined rate of all traffic on the port that matches the listed priorities cannot exceed the programmed limit. If the rate exceeds the defined limit, frames are dropped until the rate falls below the limit.

Administrators can configure up to four rate limit rules per port; however, each rule must not include conflicting 802.1p priority values. In order to control inbound and outbound traffic on the same port, two rate limiting rules must be configured (one for inbound and one for outbound). Since the rate limiting operation occurs after the processing of the multi-layer classification rules, the two features can be combined to provide application-aware rate limiting.



NOTE: This Rate Limiting function is not supported on SmartTrunk configured ports.

For more information about the application of the Rate Limiting function, refer to the *Matrix E7 Series and SmartSwitch 6000 Series Local Management User's Guide*.

1.9 FLOW CONTROL

Flow control is a method of managing the flow of frames between two devices. It ensures that a transmitting device does not overwhelm a receiving device with data. This is accomplished by the transmitting device pausing its transmission while the receiving device processes the frames already received.

The module supports Frame based 802.3x flow control. Frame based 802.3x flow control is supported on all Ethernet ports operating in the full-duplex mode. Flow control can be enabled or disabled on a port-by-port basis.

Back pressure flow control is not supported on ports operating in the half-duplex mode.

1.10 GARP SWITCH OPERATION

Some or all ports on the switch may be activated to operate under the Generic Attribute Registration Protocol (GARP) applications, GARP VLAN Registration Protocol (GVRP) and/or GARP Multicast Registration Protocol (GMRP).

GARP is a protocol, or set of rules, that outlines a mechanism for propagating the port state and/or user information throughout a bridged LAN to keep track of users and VLANs on the network fabric. MAC bridges and end users alike can take part in the registration and de-registration of GARP attributes such as VLAN and multicast group membership. For more details on how GVRP and GMRP handle frames under GARP, and how to configure the switch ports to take advantage of this operation, refer to the *Matrix E7 Series and SmartSwitch 6000 Series Local Management User's Guide*.

1.11 802.1 PORT PRIORITY

The 802.1 port priority is used to assign a default priority to the frames received without priority information in their tag header, map prioritized frames to the appropriate transmit queues, and prioritize frames according to protocol type. The 802.1 port priority is part of the IEEE 802.1D standard.

1.12 DISTRIBUTED CHASSIS MANAGEMENT

Installation in the Matrix E7 (6C107) Chassis

From a management perspective, 6x3xx modules in the Matrix E7 chassis can be managed separately by individual IP addresses. Any modules in the Matrix E7 can be selected and managed, however, no overall system wide settings are available.



NOTE: The Matrix E7 chassis does not support Distributed Chassis Management functionality as in the SmartSwitch 6000 chassis. Refer to the Enterasys Networks *Matrix E7 Overview and Setup Guide* and the Release Notes for more information.

Installation in the SmartSwitch 6000 (6C105) Chassis

The SmartSwitch 6000 chassis can be viewed as a single entity with a single IP address. Its systems management functions are distributed to all modules, including the 6H302-48 or 6H303-48. The chassis can be managed using a single IP address, or the modules can be managed separately by individual IP addresses. When the IP address of the chassis is used, system wide settings can be applied from the chassis menu in Local Management, while module settings are applied by selecting the specific module to be modified and changing the settings for that module.

1.13 MANAGEMENT

Management of the module can be either in-band or out-of-band. In-band remote management is possible through any SNMP-compliant Network Management Software, such as Enterasys Networks' NetSight. In-band management using Telnet and Enterasys Networks' Webview is also provided. Out-of-band Local Management is provided through the RJ45 COM port on the front panel using a VT100 terminal or a VT100 terminal emulator.

Local Management provides the ability to manage the module. Refer to the *Matrix E7 Series and SmartSwitch 6000 Series Local Management User's Guide* for more information.

1.14 SWITCHING OPTIONS

The module provides 802.1Q switching between all of the front panel interfaces. In the 802.1Q mode (the default mode of operation), the module functions as an 802.1D switch until VLANs are configured.

IEEE 802.1Q switching allows migration to Virtual Network technologies without requiring the replacement of existing equipment.

1.15 STANDARDS COMPATIBILITY

The 6H302-48 and 6H303-48 modules are fully compliant with the IEEE 802.3, 802.3u, 802.3x, 802.1D, and 802.1Q standards. The modules provide IEEE 802.1D Spanning Tree Algorithm (STA) support to enhance the overall reliability of the network and protect against “loop” conditions. The modules support a wide variety of industry standard MIBs including RFC 1213 (MIB II), RFC 1757 (RMON), RFC 1493 (Bridge MIB), RFC 1354 (FIB MIB), and RFC 1190 (Path MTU Discovery). A full suite of Enterasys Networks Enterprise MIBs provide a wide array of statistical information to enhance troubleshooting. For information on how to extract and compile individual MIBs, contact Enterasys Networks.

1.16 LANVIEW DIAGNOSTIC LEDs

LANVIEW diagnostic LEDs serve as an important troubleshooting aid by providing an easy way to observe the status of individual ports and overall network operations.

Network Requirements

Before installing the module, review the requirements and specifications referred to in this chapter concerning the following:

- SmartTrunk ([Section 2.1](#))
- 10BASE-T Twisted Pair Network ([Section 2.2](#))
- 100BASE-T Twisted Pair Network ([Section 2.3](#))

The network installation must meet the requirements to ensure satisfactory performance of this equipment. Failure to do so will produce poor network performance.



NOTE: The appropriate Local Management User's Guide and *Cabling Guide* referred to in the following sections can be found on the Enterasys Networks World Wide Web site: <http://www.enterasys.com/>

2.1 SMARTTRUNK FEATURE

Before connecting the module to a network so it can take advantage of the SmartTrunk feature, there are certain rules concerning port connections and configurations that must be followed for proper operation. Refer to the appropriate Local Management User's Guide for additional information.

2.2 10BASE-T NETWORK

When connecting a 10BASE-T segment to any of the module ports (1 through 48), ensure that the network meets the Ethernet network requirements of the IEEE 802.3 standard for 10BASE-T. Refer to the *Cabling Guide* for details.



NOTE: If a port is to operate at 100 Mbps, Category 5 cabling must be used. Category 3 cabling does not meet 100 Mbps specifications. For 10 Mbps operation only, Category 3 or Category 5 cabling can be used. Refer to [Section 2.3](#) for information about 100BASE-TX networks and cabling.

2.3 100BASE-TX NETWORK

The fixed front panel ports of the module provide a connection that supports Category 5 UTP cabling. The device at the other end of the twisted pair segment must meet IEEE 802.3u 100BASE-TX Fast Ethernet network requirements for the devices to operate at 100 Mbps. Refer to the *Cabling Guide* for details.



NOTE: The fixed ports of the module support Category 5 UTP cabling with an impedance between 85 and 111 ohms for 100 Mbps operation.

The module is capable of operating at either 10 or 100 Mbps. The module automatically senses the speed of the other device and adjusts its speed accordingly.



ELECTRICAL HAZARD: Only qualified personnel should install the module.



NOTE: Read the Release Notes shipped with the module to check for any exceptions to the supported features and operation documented in this guide.

This chapter provides the instructions to install the 6H302-48 or 6H303-48 module. A Phillips screwdriver is required to install options into the module. Follow the order of the sections listed below to correctly install the module.

- Unpacking the Module ([Section 3.1](#))
- Installing Options ([Section 3.2](#))
- Installing the Module into the Matrix E7 Chassis ([Section 3.3](#))
- Installing the Module into the SmartSwitch 6000 (6C105) Chassis ([Section 3.4](#))
- Connecting to the Network ([Section 3.5](#))
- Completing the Installation ([Section 3.6](#))

3.1 UNPACKING THE MODULE

Unpack the module as follows:

1. Open the box and remove the packing material protecting the module.
2. Verify the contents of the carton as listed in [Table 3-1](#).

Table 3-1 Contents of Module Carton

Item	Quantity
One module, either the 6H302-48 or the 6H303-48	1
Antistatic Wrist Strap	1
Manual Accessory Kit	1

3. Remove the tape seal on the non-conductive bag to remove the module.
4. Perform a visual inspection of the module for any signs of physical damage. Contact Enterasys Networks if there are any signs of damage. Refer to “[Getting Help](#)” for details.

3.2 INSTALLING OPTIONAL FLASH UPGRADE



NOTE: Install any optional equipment before proceeding to [Section 3.3](#).

If the module is to be installed with an optional FLASH upgrade, refer to [Appendix B](#) for complete installation instructions.

3.3 INSTALLING THE MODULE INTO THE MATRIX E7 CHASSIS



CAUTION: Failure to observe static safety precautions could cause damage to the module. Follow static safety handling rules and wear the antistatic wrist strap provided with the Matrix E7 chassis.

Do not cut the non-conductive bag to remove the module. Sharp objects contacting the board or components can cause damage.

The module can be installed in any of the slots that are available.



NOTE: The Matrix E7 (third generation modules) can provide backplane connectivity for the 6x1xx and 6x2xx series (first and second generation modules) in the Matrix E7 chassis. First and second generation boards installed in slots one through five in the Matrix E7 chassis cannot communicate with slots six and seven unless a third generation board (6x3xx) is installed in one of the first five slots. This proxy function provides backplane connectivity for the first or second generation boards to the sixth and seventh slots.

See the *Matrix E7 Overview and Setup Guide* for details.


To install a module, refer to [Figure 3-1](#) and proceed as follows:

1. Remove the blank panel covering the slot in which the module will be installed. All other slots must remain covered to ensure proper airflow and cooling. (Save the blank plate in the event you need to remove the module.)
2. Carefully remove the module from the shipping box. (Save the box and packing materials in the event the module must be reshipped.)
3. Locate the antistatic wrist strap shipped with the module. Attach the antistatic wrist strap to your wrist and plug the cable from the antistatic wrist strap into the ESD grounding receptacle at the upper right corner of the Matrix E7.
4. Remove the module from the plastic bag. (Save the bag in the event the module must be reshipped.) Observe all precautions to prevent damage from Electrostatic Discharge (ESD).



NOTE: Distributed Chassis Management and SecureFast Switching functionality of the 6C105 SmartSwitch 6000 chassis is not supported for any generation of interface modules installed in a Matrix E7 chassis. Refer to the module release notes for specific information on supported functionality.

Figure 3-1 Installing a Module into the Matrix E7 Chassis

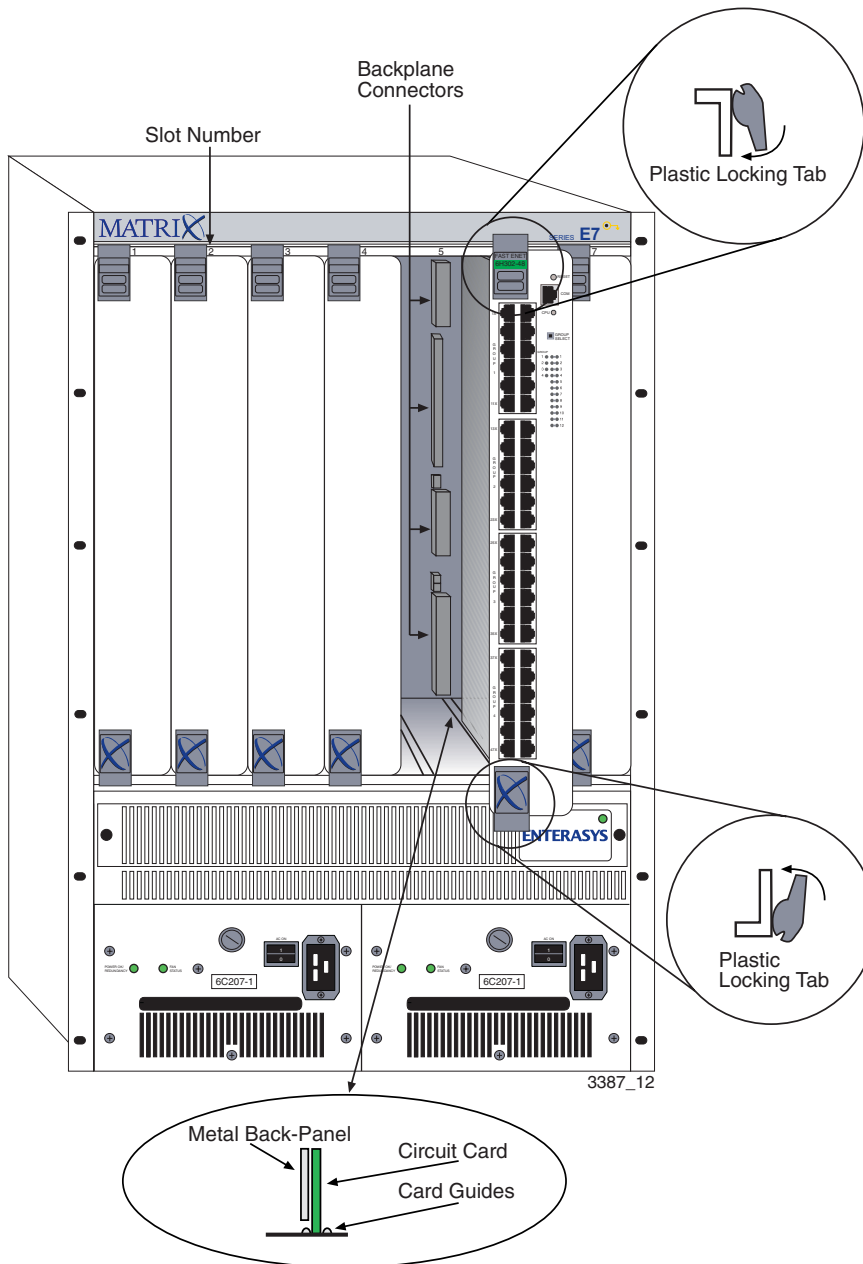

5. Examine the module for damage. If any damage exists, DO NOT install the module. Immediately contact Enterasys Networks. Refer to “[Getting Help](#),” in [About This Guide](#).



CAUTION: To prevent damaging the backplane connectors in the following step, take care that the module slides in straight and properly engages the backplane connectors.

Ensure that the top plastic locking tab lines up with the desired slot number located on the front panel of the chassis. Refer to [Figure 3-1](#).

6. Locate the slot guides that line up with the number of the slot in which the module will be installed. Install the module in the chassis by aligning the module circuit card between the upper and lower metal rail guides of the desired slot, sliding it into the chassis, and locking down the top and bottom plastic locking tabs, as shown in [Figure 3-1](#). Take care that the module slides in straight and properly engages the backplane connectors.
7. If the chassis in which the module is installed was powered down for the installation, turn it back on. Check to see that the CPU LED settles at solid green after a few minutes. If the LED does not turn solid green, see [Chapter 4](#) for details.

3.4 INSTALLING THE MODULE INTO THE 6C105 CHASSIS



CAUTION: Failure to observe static safety precautions could cause damage to the module. Follow static safety handling rules and wear the antistatic wrist strap provided with the 6C105 chassis.


Do not cut the non-conductive bag to remove the module. Sharp objects contacting the board or components can cause damage.

Certain restrictions may apply when installing the module into the 6C105 chassis. Refer to the Release Notes for any updated information concerning installing the 6H302-48 or 6H303-48 modules into the 6C105 chassis. Otherwise, the installation procedure from [Section 3.3](#) can be followed, with the exception of the fact that the 6C105 chassis has only 5 slots as opposed to the 7 slots in the Matrix E7. The module can be installed in any of the slots that are available. To install a module, refer to [Figure 3-2](#) and proceed as in [Section 3.3](#).



NOTE: The Distributed Chassis Management and SecureFast Switching functionality is supported when the modules are installed in a 6C105 SmartSwitch 6000 chassis. Refer to the module release notes for specific information on supported functionality.

Figure 3-2 Installing a Module into the 6C105 Chassis

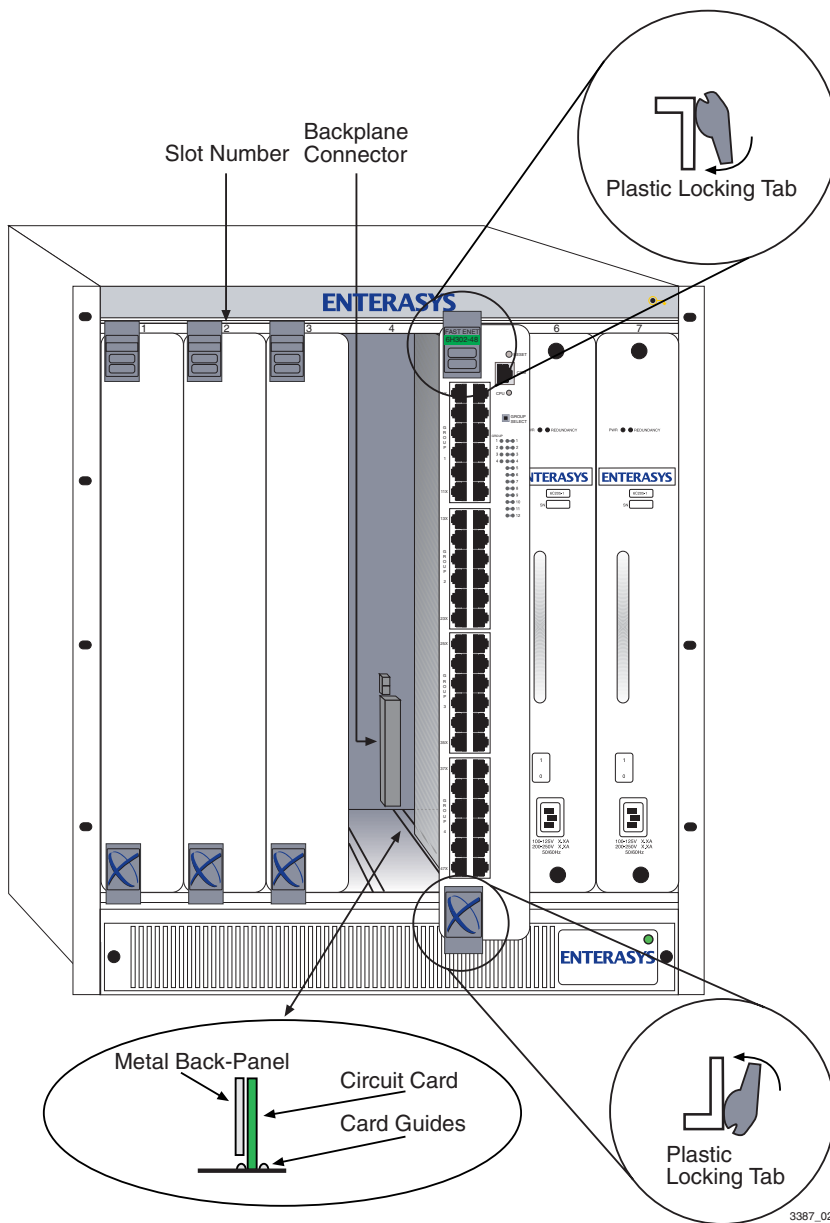

3387_02

3.5 CONNECTING TO THE NETWORK

This section provides the procedures for connecting unshielded twisted pair (UTP) segments from the network or other devices to the 6H302-48 (Section 3.5.1), or the 6H303-48 (Section 3.5.2). For details on how to get manuals, refer to the “[Related Documents](#)” section in [About This Guide](#).



NOTE: If the module is being installed in a network using SmartTrunking, there are rules concerning the network cable and port configurations that must be followed for SmartTrunking to operate properly. Before connecting the cables, refer to the appropriate Local Management User’s Guide for the configuration information.

3.5.1 Connecting UTP Cables to the 6H302-48

The fixed front panel ports of the 6H302-48 are 10/100 RJ45 ports with internal crossovers. When connecting a workstation to these ports, use a straight-through cable. When connecting networking devices to these ports, such as a bridge, repeater, or router, use a crossover cable.




NOTE: All RJ45 front panel ports on the 6H302-48 support Category 5 Unshielded Twisted Pair (UTP) cabling with an impedance between 85 and 111 ohms. Category 3 cable may be used if the connection is going to be used only for 10 Mbps.

Connect a twisted pair segment to the 6H302-48 as follows:



1. Ensure that the device connected to the other end of the segment is powered ON.
2. Connect the twisted pair segment to the 6H302-48 by inserting the RJ45 connector on the twisted pair segment into the desired RJ45 port as shown in [Figure 3-3](#).

Figure 3-3 Connecting a Twisted Pair Segment to the 6H302-48

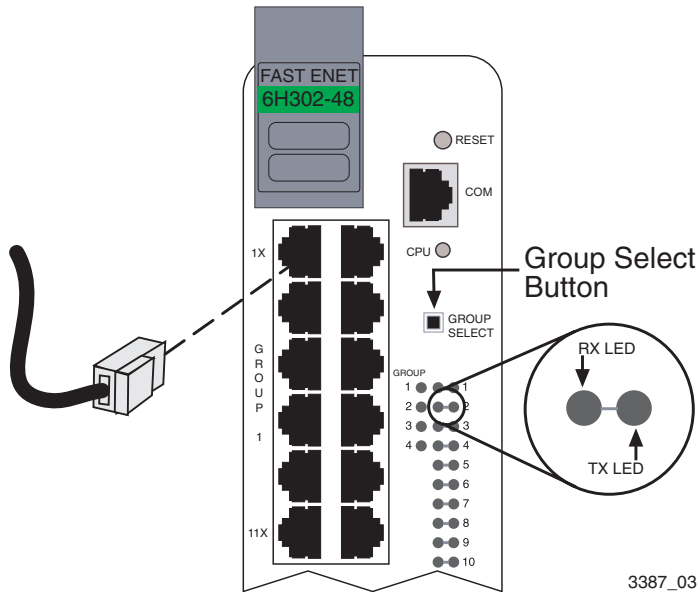

3387_03

3. Verify that a link exists by checking that the port **RX** (Receive) LED is ON (flashing amber, blinking green, or solid green). If the **RX** LED is OFF and the **TX** (Transmit) LED is not blinking amber, perform the following steps until it is on:
 - a. To view the receive and transmit activity on a group of segments, press the **GROUP SELECT** button (see [Figure 3-3](#)) to step to the group of interest (Groups 1 through 4). Each time the **GROUP SELECT** button is pressed, the **GROUP LED** lights up in sequence, indicating which Group is selected. The receive and transmit activity for that group of segments is then indicated by the **RX** and **TX** LEDs for each segment.
 - b. Verify that the cabling being used is Category 5 UTP with an impedance between 85 and 111 ohms. If the port is to operate at 100 Mbps, category 5 cabling must be used.
 - c. Verify that the device at the other end of the twisted pair segment is on and properly connected to the segment.
 - d. Verify that the RJ45 connectors on the twisted pair segment have the proper pinouts ([Figure 3-4](#) and [Figure 3-5](#)) and check the cable for continuity. Typically, a crossover cable is used between a switching or hub device and an end user (computer). A straight-through cable is used between hub devices.

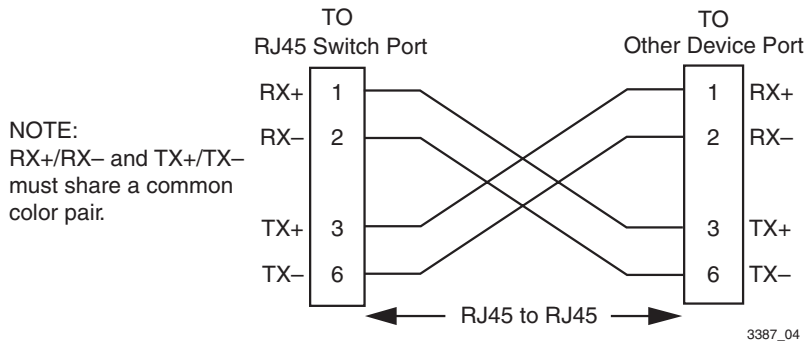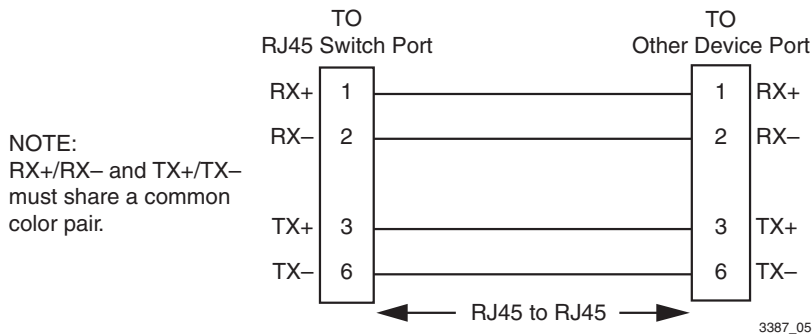Figure 3-4 Crossover Cable RJ45 Pinouts**Figure 3-5 Straight-Through Cable RJ45 Pinouts**

- e. Ensure that the twisted pair connection meets the dB loss and cable specifications outlined in the *Cabling Guide*. Refer to [About This Guide](#) for information on obtaining this document.

If a link is not established, contact Enterasys Networks. Refer to “[Getting Help](#)” in [About This Guide](#) for details.

4. Repeat steps 1 through 3 above, until all connections have been made.


3.5.2 Connecting UTP Cables to the 6H303-48

When facing the front panel of the 6H303-48, the RJ21 connectors from top to bottom represent Ethernet/Fast Ethernet segments 1 through 12, segments 13 through 24, 25 through 36, and 37 through 48, respectively.

To connect a UTP segment to the 6H303-48, proceed as follows:

1. Ensure that the device connected to the other end of the segment is powered ON.
2. If using an RJ21 straight connector, plug it into the appropriate RJ21 port as shown in [Figure 3-6](#).

Figure 3-6 Connecting a Twisted Pair Segment to the 6H303-48

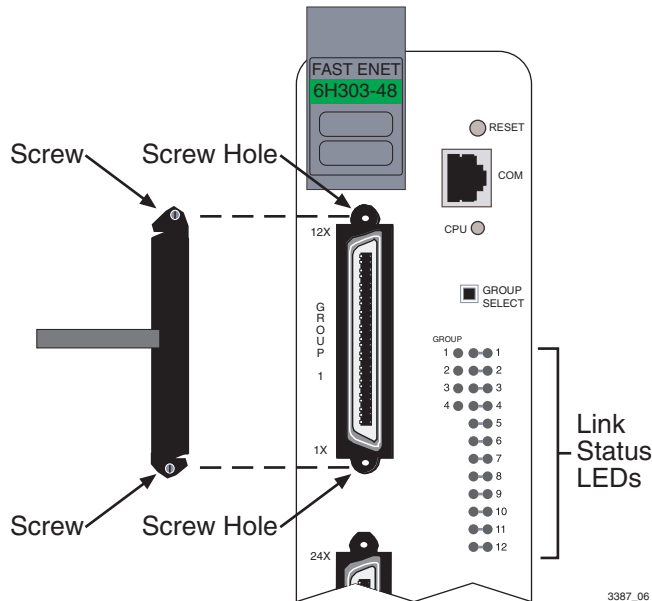

3. Tighten the two screws on the RJ21 connector, as applicable, to secure it to the module.



NOTE: The cable pinouts for a 25-pair cable (RJ21) can be found in the *Cabling Guide*. Refer to “[Related Documents](#)” in [About This Guide](#) for details on how to obtain this document.

4. Verify that a link exists by checking that the port **Link** LEDs are on (flashing amber, blinking green, or solid green). If any of the **Link** LEDs are off, perform the following steps until they are on:
 - a. Verify that the device at the other end of the twisted pair segment is ON and connected to the segment.

- b. Verify that the RJ21 connectors on the twisted pair segment have the proper pinouts and check the cable for continuity.
- c. Check that the twisted pair connection meets the specifications in the *Cabling Guide*.

If a link is not established, contact Enterasys Networks. Refer to “[Getting Help](#)” in [About This Guide](#) for details.

5. Repeat steps 1 through 5, above, until all RJ21 connections are made.

3.6 COMPLETING THE INSTALLATION

After installing the module and making the connections to the network, proceed as follows:

1. If the chassis is installed in a rack that has strain-relief brackets, secure the cables by running the cables along the strain-relief bracket and tying them to the bracket using cable ties.
2. The module is now ready to be configured through Local Management. Refer to the appropriate Local Management User’s Guide for information on how to access and use Local Management. For details on how to get manuals, refer to the “[Related Documents](#)” section in [About This Guide](#).

Troubleshooting

This chapter provides information concerning the following:

- Using LANVIEW (Section 4.1)
- Troubleshooting Checklist (Section 4.2)
- Using the RESET Button (Section 4.3)

4.1 USING LANVIEW

The modules use a built-in visual diagnostic and status monitoring system called LANVIEW. The LANVIEW LEDs (Figure 4-1) allow quick observation of the network status to aid in diagnosing network problems.

Viewing Receive and Transmit Activity

Only one group of segments may be viewed at a time.

To view the receive and transmit activity on a group of segments, press the GROUP SELECT button (see Figure 4-1) to step to the group of interest (Groups 1 through 4). Each time the GROUP SELECT button is pressed, the GROUP LED lights up in sequence, indicating which Group is selected. The receive and transmit activity for that group of segments is then indicated by the RX and TX LEDs for each segment.

Figure 4-1 LANVIEW LEDs (both modules)

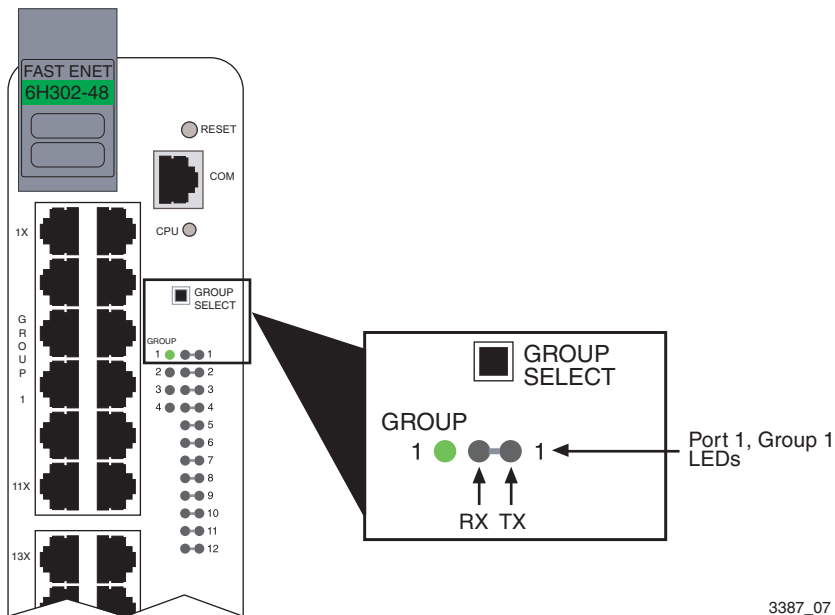


Table 4-1 describes the LED indications and provides recommended actions as appropriate.



NOTE: The terms **flashing**, **blinking**, and **solid** used in Table 4-1 indicate the following:

Flashing indicates an LED is flashing randomly.

Blinking indicates an LED is flashing at a steady rate (approximately 50% on, 50% off).

Solid indicates a steady LED light. No pulsing.

Table 4-1 LANVIEW LEDs

LED	Color	State	Recommended Action
CPU	Off	Power off.	Ensure chassis has adequate power.
	Red	Blinking. Hardware failure has occurred.	Contact Enterasys Networks for technical support.
		Solid. Resetting, normal power up reset.	If the LED remains red for several minutes, contact Enterasys Networks for technical support.
	Amber	Blinking. Crippled.	Contact Enterasys Networks for technical support.
		Solid. Testing.	If the LED remains amber for more than several minutes, contact Enterasys Networks for technical support.
Green	Solid. Functional.	None.	
Amber and Green	Booting. Blinks amber and green while booting.	None.	
RX (Receive)	Off	No link. No activity or port in standby. Port enabled or disabled.	None.
	Green	Solid. Link, port enabled, no activity.	None.
		Blinking. Link, port disabled.	None.
	Amber	Flashing. Link, port enabled, activity.	None.
	Red	Solid. Diagnostic failure.	Contact Enterasys Networks for assistance.

Table 4-1 LANVIEW LEDs (Continued)

LED	Color	State	Recommended Action
TX (Transmit)	Off	Port enabled, and no activity. Should flash green every two seconds indicating BPDUs being sent if STA is enabled and there is a valid link.	1. Ensure that the STA is enabled and that there is a valid link. 2. Contact Enterasys Networks for technical support.
	Green	Flashing. Indicates activity. Rate indicates data rate.	None.
	Amber	Blinking. Port in standby. Port may be disabled due to Spanning Tree.	1. Ensure that the port is not disabled. 2. Contact Enterasys Networks for technical support.
	Red	Flashing. Indicates collision rate.	None, unless there is a high amount of activity. In this case, check for network configuration problems or a defective device.
		Solid. Diagnostic failure.	Contact Enterasys Networks for technical support.

4.2 TROUBLESHOOTING CHECKLIST

If the module is not working properly, refer to [Table 4-2](#) for a checklist of problems, possible causes, and recommended actions to resolve the problem.

Table 4-2 Troubleshooting Checklist

Problem	Possible Cause	Recommended Action
All LEDs are OFF.	Loss of power.	Ensure that the module was installed properly according to the installation instructions in Chapter 3 , and that the host chassis is powered properly.
No Local Management Password screen.	Autobaud is enabled, but the baud rate has not yet been detected.	Press ENTER (RETURN) (may take up to four times).
	Incorrect terminal setup.	Refer to the appropriate Local Management User's Guide for proper setup procedures.
	Improper console cable pinouts.	Refer to Appendix A for proper COM port pinouts.
	Corrupt firmware image, or hardware fault.	If possible, attempt to download the image to the module again. Refer to Section B.2 for instructions to clear NVRAM.
Cannot navigate beyond Password screen.	Improper Community Names Table.	<ol style="list-style-type: none"> 1. Refer to the appropriate Local Management User's Guide for the Community Names Table setup. 2. If the Community Names have been forgotten, refer to Section B.2 for instructions on how to set the mode switch to reset the Community Names to their default values.

Table 4-2 Troubleshooting Checklist (Continued)

Problem	Possible Cause	Recommended Action
Cannot contact the module through in-band management.	IP address not assigned.	Refer to the appropriate Local Management User's Guide for the IP address assignment procedure.
	Port is disabled.	Enable port. Refer to the appropriate Local Management User's Guide for instructions to enable/disable ports.
	No link to device.	<ol style="list-style-type: none"> 1. Verify that all network connections between the network management station and the module are valid and operating. 2. If the problem continues, contact Enterasys Networks for technical support.
Port(s) goes into standby for no apparent reason.	Loop condition detected.	<ol style="list-style-type: none"> 1. Verify that Spanning Tree is enabled. Refer to the appropriate Local Management User's Guide for the instructions to set the type of STA. 2. Review the network design and delete unnecessary loops. 3. If the problem continues, contact Enterasys Networks for technical support.
User parameters (IP address, Device and Module name, etc.) were lost when the module power was cycled or the front panel RESET button was pressed.	<ol style="list-style-type: none"> 1. Position of Mode switch (7), NVRAM Reset, was changed sometime before either cycling power or pressing the RESET button, causing the user-entered parameters to reset to factory default settings. 2. Clear NVRAM was set through Local Management. 	<ol style="list-style-type: none"> 1. Reenter the lost parameters as necessary. Refer to the appropriate Local Management User's Guide for the instructions to configure the device through Local Management. 2. If the problem continues, contact Enterasys Networks for technical support.


4.3 USING THE RESET BUTTON

The RESET button shown in [Figure 4-2](#) resets and re-initializes the module.



CAUTION: Pressing the RESET button resets the device, and all current switching being performed by the module is halted. A network downtime of up to two minutes will result from this action for any devices connected to the module.

Figure 4-2 RESET Button (both modules)

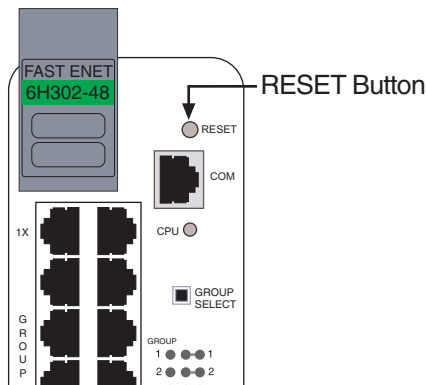

To reset the module processor, press and release the RESET button. The module goes through a reset process for approximately 60 seconds. Additional downtime may result as the module reenters the network.



NOTE: Pressing the RESET button while the module is already in reset mode is not recommended. If the RESET button is pressed while the module is in reset mode, the module will enter an extended diagnostic procedure, which is unnecessary for normal operation. This extended diagnostic procedure takes longer than one minute to complete.

Specifications

This appendix provides operating specifications for the 6H302-48 and 6H303-48 modules. Enterasys Networks reserves the right to change the specifications at any time without notice. If not specified by module name, the statistics are the same for both modules.

A.1 6H302-48 / 6H303-48 SPECIFICATIONS

Table A-1 provides the processors and memory, physical properties, environmental module specifications, and I/O ports for the 6H302-48 and 6H303-48 modules.

Table A-1 6H302-48 / 6H303-48 Specifications

Item	Specification
Processors/Memory	
Processors:	Intel i960 HT RISC processor Power PC
Dynamic Random Access Memory (DRAM):	20 MB
FLASH Memory:	8 MB expandable to 16 MB
Shared Memory:	4 MB
Physical Properties	
Dimensions:	46.43 H x 6.05 W x 29.51 D (cm) 18.28 H x 2.38 W x 11.62 D (in)
Approximate Weight (Unit):	2.04 kg (4.5 lb)
MTBF (Predicted):	
6H302-48	176,149 hours
6H303-48	183,945 hours

Table A-1 6H302-48 / 6H303-48 Specifications (Continued)

Item	Specification
Environmental Requirements	
Operating Temperature:	5°C to 40°C (41°F to 104°F)
Storage Temperature:	-30°C to 73°C (-22°F to 164°F)
Operating Relative Humidity:	5% to 90% (non-condensing)
Input/Output Ports	
6H302-48:	
Ports 1 through 48:	Fast Ethernet 10/100 Mbps (10BASE-T and 100BASE-TX compliant) with 48 RJ45 connectors.
6H303-48:	
Ports 1 through 48:	Fast Ethernet 10/100 Mbps (10BASE-T and 100BASE-TX compliant) with 4 RJ21 connectors (12 ports per connector).

A.2 COM PORT PINOUT ASSIGNMENTS

The COM port is a serial communications port that supports Local Management or connection to a UPS.

Table A-2 shows the COM port pin assignments.

Table A-2 COM Port Pin Assignments

Pin	Signal Name	Input/Output
1	Transmit Data (XMT)	Output
2	Data Carrier Detect (DCD)	Output
3	Data Set Ready (DSR)	Input
4	Receive Data (RCV)	Input
5	Signal Ground (GND)	NA
6	Data Terminal Ready (DTR)	Output
7	Request to Send (RTS)	Input
8	Clear to Send (CTS)	NA

A.3 REGULATORY COMPLIANCE

The 6H302-48 and 6H303-48 modules meet the following safety and electromagnetic compatibility (EMC) requirements:

Table A-3 Compliance Standards

Regulatory Compliance	Standards
Safety	UL 1950, CSA C22.2 No. 950, 73/23/EEC, EN 60825, EN 60950, and IEC 950
Electromagnetic Compatibility (EMC)	FCC Part 15, CSA C108.8, 89/336/EEC, EN 55022, EN 61000-3-2, EN 61000-3-3, EN 55024, AS/NZS 3548, and VCCI V-3

Mode Switch Bank Settings and Options

This appendix covers the following items:

- Required tools ([Section B.1](#))
- Locations, functions, and settings for the mode switches ([Section B.2](#))
- Upgrading the FLASH ([Section B.3](#))

B.1 REQUIRED TOOLS

Use the following tools to perform the procedures provided in this appendix:

- Antistatic wrist strap
- Phillips screwdriver



CAUTION: An antistatic wrist strap is required (provided with the module) to perform the procedures in this appendix. Use the antistatic wrist strap when performing any of the procedures in this appendix to minimize ESD damage to the devices involved.

B.2 SETTING THE MODE SWITCHES



CAUTION: Read the appropriate sections to be fully aware of the consequences when changing switch settings.


Only qualified personnel should change switch settings.

Figure B-1 shows the location of the mode switches and the switch settings for normal operation. These switches are set at the factory and rarely need to be changed.

Switch definitions and positions are as follows:

- Switches 1 through 4 – For Enterasys Networks use only.
- Switch 5 – COM Port Autobaud. The default (OFF) position enables Autobaud sensing on the COM port for Local Management sessions. Changing the switch to the ON position disables Autobaud sensing and sets the COM port to 9600 baud for Local Management sessions.

Figure B-1 Mode Switch Location

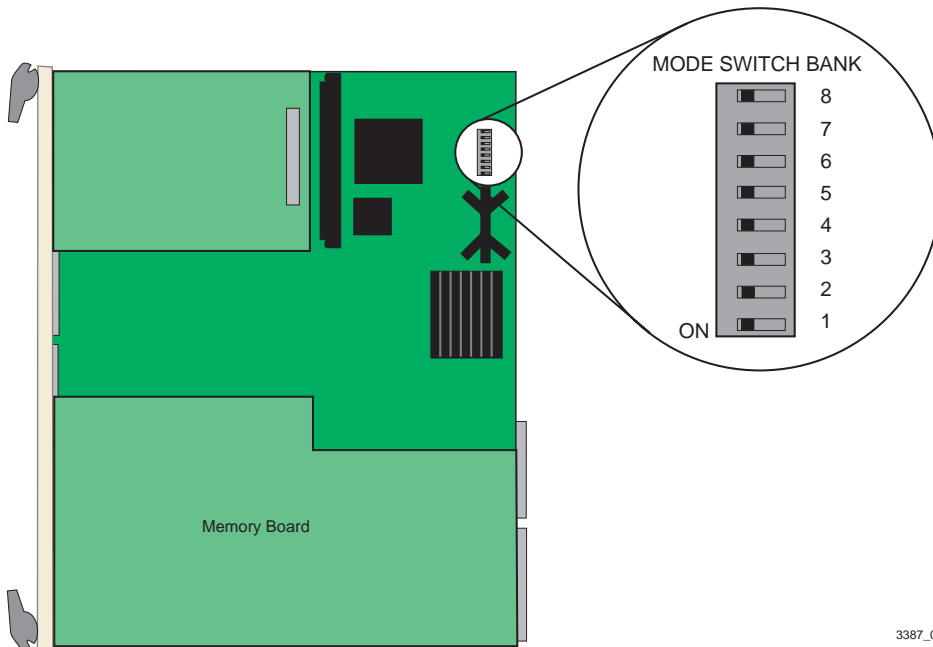

3387_09

- Switch 6 – Forced BootP.



NOTE: After changing the position of Switch 6, DO NOT reapply power to the module until there is a station on the network acting as a BootP server, which contains the downloadable firmware image file.

DO NOT attempt a Forced BootP unless a BootP server has been configured for the module. The BootP server references the location of a station acting as a Trivial File Transfer Protocol (TFTP) server containing the module image file.

When the position of Switch 6 is changed and the power is cycled to the module, the device requests the image file location from the BootP server and uses TFTP to download the image from the TFTP server. If one of these requirements is not met, the module continues to request either the BootP server or the TFTP server until the RESET button on the module is pressed. Once the RESET button is pressed, the module resets after one minute and loads the image stored in FLASH memory.

- Switch 7 – Clear NVRAM. Changing the position of this switch resets NVRAM on the next power-up of the device. All user-entered parameters, such as the IP address, device names, etc., are reset to the factory default settings. Once the module resets, you can either use the factory default settings or reenter your own parameters.
- Switch 8 – Reset Password/Community Names. Changing the position of this switch clears user-entered passwords stored in NVRAM, and restores the factory default passwords on the next power-up of the device. Once the module resets, you can either use the factory default settings or reenter your own passwords.



NOTE: Do not change the position of Switch 8 unless it is necessary to reset the super-user configured passwords to their factory default settings.


B.3 FLASH UPGRADE

FLASH upgrade is available for the switch to expand from 8 to 16 MB. This section explains how to locate and add/replace the FLASH module. For details on getting help, refer to “[Getting Help](#),” in [About This Guide](#).

B.3.1 Locating the FLASH Module

Figure B-2 shows the location of the FLASH module.

Figure B-2 FLASH Module Location

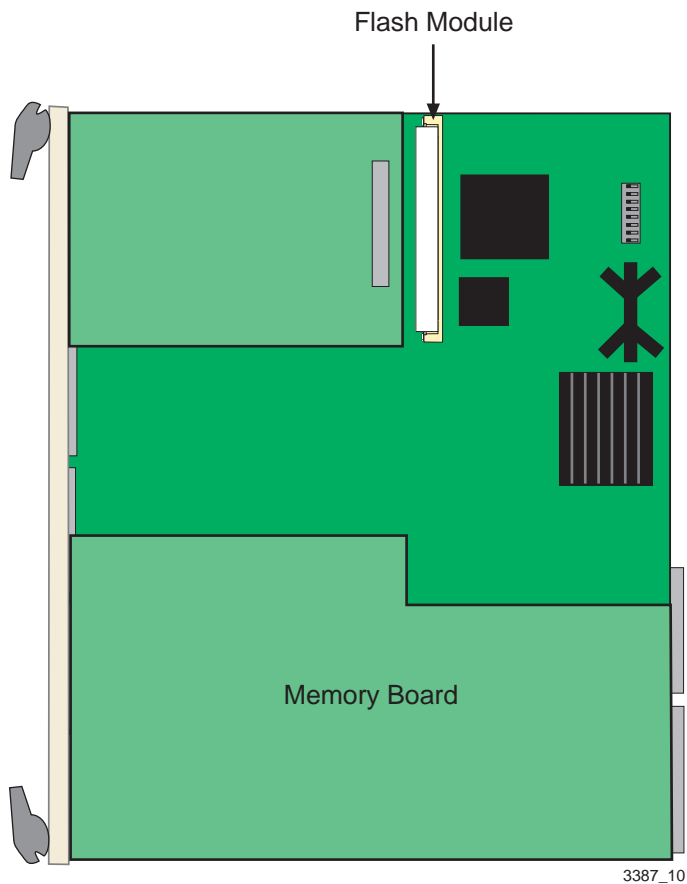

B.3.2 Installing the FLASH Module




CAUTION: Observe all antistatic precautions when handling sensitive electronic equipment.

To install a FLASH module, refer to [Figure B-3](#) and proceed as follows:

1. With the FLASH module oriented as shown in [Figure B-3](#), insert the FLASH module down between the connector.
2. Pivot the FLASH module downward so the connector clips align with the two side notches of the FLASH module and the connector clips lock the FLASH module into place.

Figure B-3 Installing the FLASH

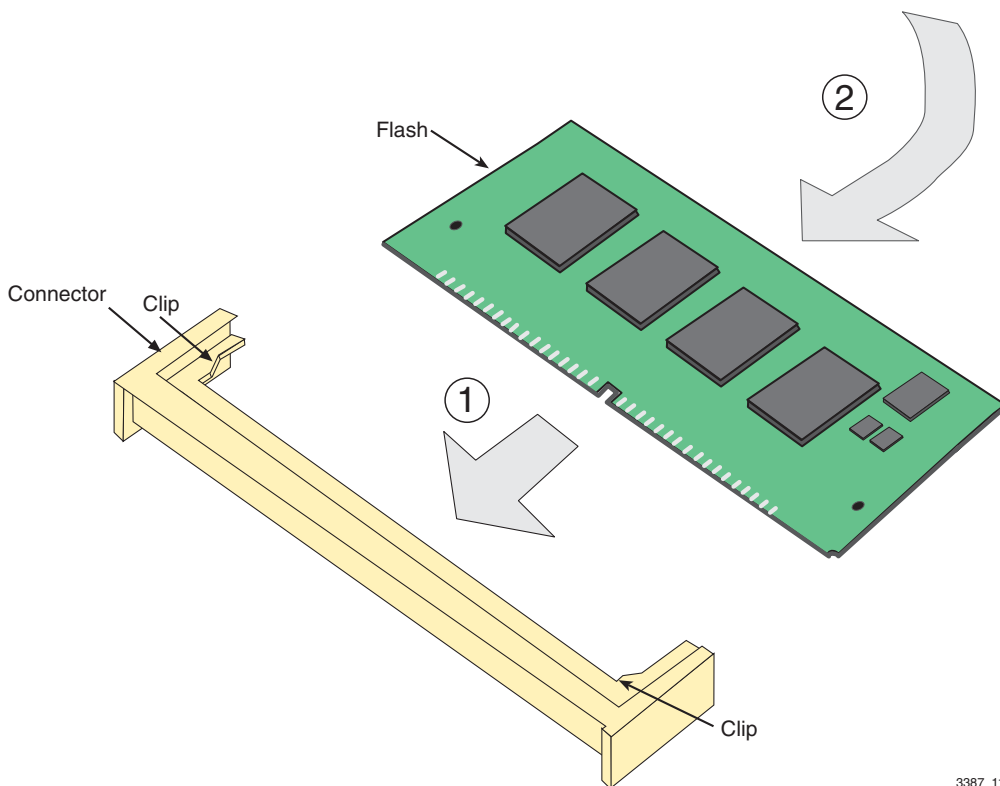

3387_11

Numerics

- 100BASE-TX
 - requirements 2-2
- 10BASE-T
 - connection 3-7, 3-9
 - requirements 2-1
- 802.1p Port Priority
 - introduction to 1-6

A

- Auto-Negotiation 1-3

B

- Broadcast Suppression
 - introduction to 1-4

C

- Cable connections
 - 6H302-48 3-7
 - 6H303-48 3-9
- Cable specifications
 - 100BASE-TX network 2-2
 - 10BASE-T network 2-1
- COM port
 - pin assignments A-3
- Connecting to the network 3-7
- Connectivity
 - introduction to 1-3

D

- Distributed Chassis Management 1-6
 - support 3-3, 3-5
- Document conventions xiii

E

- Electromagnetic Compatibility (EMC)
 - requirements A-3

F

- FLASH
 - installation B-5
 - upgrade 3-2
- Flow Control 1-5

G

- GARP Switch Operation 1-6
- Getting help xiv
- GROUP SELECT button
 - use of the 4-1

I

- Installation
 - connecting to the Network 3-7

L

- LANVIEW LEDs 4-1
- Local Management
 - introduction to 1-7

M

Management
 use of [1-7](#)
Mode Switch
 setting [B-2](#)
Module features [1-1](#)
Module Installation [3-2](#)

P

Pinouts
 crossover [3-9](#)
 straight-through [3-9](#)
Port redirect function
 introduction to [1-4](#)

R

Receive LEDs
 viewing of [4-1](#)
Redirect functions
 port and VLAN
 introduction to [1-4](#)
Regulatory Compliance [A-3](#)
Related manuals [xii](#)
Remote Monitoring (RMON)
 introduction to [1-4](#)
RESET button [4-7](#)
Runtime IP address discovery
 introduction to [1-3](#)

S

Safety requirements [A-3](#)
SecureFast Switching support [3-3](#), [3-5](#)
SmartTrunk
 introduction to [1-3](#)
Specifications [A-1](#)
Standards compatibility [1-8](#)
Switching options
 introduction to [1-7](#)

T

Traffic Rate Limiting [1-5](#)
Transmit LEDs
 viewing of [4-1](#)
Troubleshooting [4-1](#)
 checklist [4-5](#)

U

Unpacking the module [3-2](#)

V

Viewing Receive and Transmit Activity
 instructions for [4-1](#)
VLAN redirect function
 introduction to [1-4](#)