

# Enterasys® SecureStack™ C2

Gigabit Ethernet Switch

---

## Hardware Installation Guide

**C2K122-24**





**Electrical Hazard:** Only qualified personnel should perform installation procedures.

**Riesgo Electrico:** Solamente personal calificado debe realizar procedimientos de instalacion.

**Elektrischer Gefahrenhinweis:** Installationen sollten nur durch ausgebildetes und qualifiziertes Personal vorgenommen werden.

## Notice

Enterasys Networks reserves the right to make changes in specifications and other information contained in this document and its web site without prior notice. The reader should in all cases consult Enterasys Networks to determine whether any such changes have been made.

The hardware, firmware, or software described in this document is subject to change without notice.

IN NO EVENT SHALL ENTERASYS NETWORKS BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING BUT NOT LIMITED TO LOST PROFITS) ARISING OUT OF OR RELATED TO THIS DOCUMENT, WEB SITE, OR THE INFORMATION CONTAINED IN THEM, EVEN IF ENTERASYS NETWORKS HAS BEEN ADVISED OF, KNEW OF, OR SHOULD HAVE KNOWN OF, THE POSSIBILITY OF SUCH DAMAGES.

Enterasys Networks, Inc.  
50 Minuteman Road  
Andover, MA 01810

© 2008 Enterasys Networks, Inc. All rights reserved.

Part Number: 9034087-04 February 2008

ENTERASYS, ENTERASYS NETWORKS, ENTERASYS MATRIX, ENTERASYS SECURESTACK, LANVIEW, NETSIGHT, WEBVIEW, and any logos associated therewith, are trademarks or registered trademarks of Enterasys Networks, Inc., in the United States and other countries.

All other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies.

**Documentation URL:** <http://www.enterasys.com/support/manuals>

**Documentacion URL:** <http://www.enterasys.com/support/manuals>

**Dokumentation im Internet:** <http://www.enterasys.com/support/manuals>

## REGULATORY COMPLIANCE INFORMATION

### FEDERAL COMMUNICATIONS COMMISSION (FCC) NOTICE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment uses, generates, and can radiate radio frequency energy and if not installed in accordance with the operator's manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference in which case the user will be required to correct the interference at his own expense.

**WARNING:** Changes or modifications made to this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### INDUSTRY CANADA NOTICE

This digital apparatus does not exceed the class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

### CLASS A ITE NOTICE

**WARNING:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### CLASE A. AVISO DE ITE

**ADVERTENCIA:** Este es un producto de Clase A. En un ambiente doméstico este producto puede causar interferencia de radio en cuyo caso puede ser requerido tomar medidas adecuadas.

### KLASSE A ITE ANMERKUNG

**WARNHINWEIS:** Dieses Produkt zählt zur Klasse A (Industriebereich). In Wohnbereichen kann es hierdurch zu Funkstörungen kommen, daher sollten angemessene Vorkehrungen zum Schutz getroffen werden.

### PRODUCT SAFETY

This product complies with the following: UL 60950, CSA C22.2 No. 60950, 73/23/EEC, EN 60950, IEC 60950, EN 60825, 21 CFR 1040.10.

### SEGURIDAD DEL PRODUCTO

El producto de Enterasys cumple con lo siguiente: UL 60950, CSA C22.2 No. 60950, 73/23/EEC, EN 60950, IEC 60950, EN 60825, 21 CFR 1040.10.

### PRODUKTSICHERHEIT

Dieses Produkt entspricht den folgenden Richtlinien: UL 60950, CSA C22.2 No. 60950, 73/23/EEC, EN 60950, IEC 60950, EN 60825, 21 CFR 1040.10.

## **ELECTROMAGNETIC COMPATIBILITY (EMC)**

This product complies with the following: 47 CFR Parts 2 and 15, CSA C108.8, 89/336/EEC, EN 55022, EN 61000-3-2, EN 61000-3-3, EN 55024, AS/NZS CISPR 22, VCCI V-3.

## **COMPATIBILIDAD ELECTROMÁGNÉTICA (EMC)**

Este producto de Enterasys cumple con lo siguiente: 47 CFR Partes 2 y 15, CSA C108.8, 89/336/EEC, EN 55022, EN 55024, EN 61000-3-2, EN 61000-3-3, AS/NZS CISPR 22, VCCI V-3.

## **ELEKTRO- MAGNETISCHE KOMPATIBILITÄT ( EMC )**

Dieses Produkt entspricht den folgenden Richtlinien: 47 CFR Parts 2 and 15, CSA C108.8, 89/336/EEC, EN 55022, EN 61000-3-2, EN 61000-3-3, EN 55024, AS/NZS CISPR 22, VCCI V-3.

## **HAZARDOUS SUBSTANCES**

This product complies with the requirements of European Directive, 2002/95/EC, Restriction of Hazardous Substances (RoHS) in Electrical and Electronic Equipment.

## **EUROPEAN WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE) NOTICE**



In accordance with Directive 2002/96/EC of the European Parliament on waste electrical and electronic equipment (WEEE):

1. The symbol above indicates that separate collection of electrical and electronic equipment is required and that this product was placed on the European market after August 13, 2005, the date of enforcement for Directive 2002/96/EC.
2. When this product has reached the end of its serviceable life, it cannot be disposed of as unsorted municipal waste. It must be collected and treated separately.
3. It has been determined by the European Parliament that there are potential negative effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment.
4. It is the users' responsibility to utilize the available collection system to ensure WEEE is properly treated.

For information about the available collection system, please go to <http://www.enterasys.com/services/support/> or contact Enterasys Customer Support at 353 61 705586 (Ireland).

# 产品说明书附件

## Supplement to Product Instructions

部件名称 (Parts)	有毒有害物质或元素 (Hazardous Substance)					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr <sup>6+</sup> )	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
金属部件 (Metal Parts)	×	○	○	○	○	○
电路模块 (Circuit Modules)	×	○	○	○	○	○
电缆及电缆组件 (Cables & Cable Assemblies)	×	○	○	○	○	○
塑料和聚合物部件 (Plastic and Polymeric parts)	○	○	○	○	○	○
电路开关 (Circuit Breakers)	○	○	○	○	○	○

○： 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。  
Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T 11363-2006 standard.

×： 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006 标准规定的限量要求。  
Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T 11363-2006 standard.

对销售之日的所售产品, 本表显示,

凯创供应链的电子信息产品可能包含这些物质。注意: 在所售产品中可能会也可能不会含有所有所列的部件。

This table shows where these substances may be found in the supply chain of Enterasys' electronic information products, as of the date of sale of the enclosed product. Note that some of the component types listed above may or may not be a part of the enclosed product.

除非另外特别的标注, 此标志为针对所涉及产品的环保使用期标志。某些零部件会有一个不同的环保使用期(例如, 电池单元模块)贴在其产品上。

此环保使用期限只适用于产品是在产品手册中所规定的条件下工作。

The Environmentally Friendly Use Period (EFUP) for all enclosed products and their parts are per the symbol shown here, unless otherwise marked. Certain parts may have a different EFUP (for example, battery modules) and so are marked to reflect such. The Environmentally Friendly Use Period is valid only when the product is operated under the conditions defined in the product manual.



## VCCI NOTICE

This is a class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

## BSMI EMC STATEMENT — TAIWAN

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

## SAFETY INFORMATION CLASS 1 LASER TRANSCEIVERS

**SINGLE MODE NETWORK EXPANSION MODULES USE CLASS 1 LASER TRANSCEIVERS.  
READ THE FOLLOWING SAFETY INFORMATION  
BEFORE INSTALLING OR OPERATING THESE MODULES.**

The Class 1 laser transceivers use an optical feedback loop to maintain Class 1 operation limits. This control loop eliminates the need for maintenance checks or adjustments. The output is factory set, and does not allow any user adjustment. Class 1 Laser transceivers comply with the following safety standards:

- 21 CFR 1040.10 and 1040.11 U.S. Department of Health and Human Services (FDA).
- IEC Publication 825 (International Electrotechnical Commission).
- CENELEC EN 60825 (European Committee for Electrotechnical Standardization).

When operating within their performance limitations, laser transceiver output meets the Class 1 accessible emission limit of all three standards. Class 1 levels of laser radiation are not considered hazardous.

When the connector is in place, all laser radiation remains within the fiber. The maximum amount of radiant power exiting the fiber (under normal conditions) is -12.6 dBm or  $55 \times 10^{-6}$  watts.

Removing the optical connector from the transceiver allows laser radiation to emit directly from the optical port. The maximum radiance from the optical port (under worst case conditions) is  $0.8 \text{ W cm}^{-2}$  or  $8 \times 10^3 \text{ W m}^2 \text{ sr}^{-1}$ .

Do not use optical instruments to view the laser output. The use of optical instruments to view laser output increases eye hazard. When viewing the output optical port, power must be removed from the network adapter.

## **DECLARATION OF CONFORMITY**

Application of Council Directive(s): **89/336/EEC**  
**73/23/EEC**

Manufacturer's Name: **Enterasys Networks, Inc.**

Manufacturer's Address: **50 Minuteman Road**  
**Andover, MA 01810**  
**USA**

European Representative Address: **Enterasys Networks, Ltd.**  
**Nexus House, Newbury Business Park**  
**London Road, Newbury**  
**Berkshire RG14 2PZ, England**

Conformance to Directive(s)/Product Standards: **EC Directive 89/336/EEC**  
**EN 55022**  
**EN 61000-3-2**  
**EN 61000-3-3**  
**EN 55024**  
**EC Directive 73/23/EEC**  
**EN 60950**  
**EN 60825**

Equipment Type/Environment: **Networking Equipment, for use in a Commercial**  
**or Light Industrial Environment.**

Enterasys Networks, Inc. declares that the equipment packaged with this notice conforms to the above directives.



# ENTERASYS NETWORKS, INC. FIRMWARE LICENSE AGREEMENT

## BEFORE OPENING OR UTILIZING THE ENCLOSED PRODUCT, CAREFULLY READ THIS LICENSE AGREEMENT.

This document is an agreement (“Agreement”) between the end user (“You”) and Enterasys Networks, Inc. on behalf of itself and its Affiliates (as hereinafter defined) (“Enterasys”) that sets forth Your rights and obligations with respect to the Enterasys software program/firmware installed on the Enterasys product (including any accompanying documentation, hardware or media) (“Program”) in the package and prevails over any additional, conflicting or inconsistent terms and conditions appearing on any purchase order or other document submitted by You. “Affiliate” means any person, partnership, corporation, limited liability company, or other form of enterprise that directly or indirectly through one or more intermediaries, controls, or is controlled by, or is under common control with the party specified. This Agreement constitutes the entire understanding between the parties, and supersedes all prior discussions, representations, understandings or agreements, whether oral or in writing, between the parties with respect to the subject matter of this Agreement. The Program may be contained in firmware, chips or other media.

BY INSTALLING OR OTHERWISE USING THE PROGRAM, YOU REPRESENT THAT YOU ARE AUTHORIZED TO ACCEPT THESE TERMS ON BEHALF OF THE END USER (IF THE END USER IS AN ENTITY ON WHOSE BEHALF YOU ARE AUTHORIZED TO ACT, “YOU” AND “YOUR” SHALL BE DEEMED TO REFER TO SUCH ENTITY) AND THAT YOU AGREE THAT YOU ARE BOUND BY THE TERMS OF THIS AGREEMENT, WHICH INCLUDES, AMONG OTHER PROVISIONS, THE LICENSE, THE DISCLAIMER OF WARRANTY AND THE LIMITATION OF LIABILITY. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT OR ARE NOT AUTHORIZED TO ENTER INTO THIS AGREEMENT, ENTERASYS IS UNWILLING TO LICENSE THE PROGRAM TO YOU AND YOU AGREE TO RETURN THE UNOPENED PRODUCT TO ENTERASYS OR YOUR DEALER, IF ANY, WITHIN TEN (10) DAYS FOLLOWING THE DATE OF RECEIPT FOR A FULL REFUND.

IF YOU HAVE ANY QUESTIONS ABOUT THIS AGREEMENT, CONTACT ENTERASYS NETWORKS, LEGAL DEPARTMENT AT (978) 684-1000.

### **You and Enterasys agree as follows:**

1. **LICENSE.** You have the non-exclusive and non-transferable right to use only the one (1) copy of the Program provided in this package subject to the terms and conditions of this Agreement.
2. **RESTRICTIONS.** Except as otherwise authorized in writing by Enterasys, You may not, nor may You permit any third party to:
  - (i) Reverse engineer, decompile, disassemble or modify the Program, in whole or in part, including for reasons of error correction or interoperability, except to the extent expressly permitted by applicable law and to the extent the parties shall not be permitted by that applicable law, such rights are expressly excluded. Information necessary to achieve interoperability or correct errors is available from Enterasys upon request and upon payment of Enterasys’ applicable fee.
  - (ii) Incorporate the Program, in whole or in part, in any other product or create derivative works based on the Program, in whole or in part.
  - (iii) Publish, disclose, copy, reproduce or transmit the Program, in whole or in part.
  - (iv) Assign, sell, license, sublicense, rent, lease, encumber by way of security interest, pledge or otherwise transfer the Program, in whole or in part.
  - (v) Remove any copyright, trademark, proprietary rights, disclaimer or warning notice included on or embedded in any part of the Program.

3. **APPLICABLE LAW.** This Agreement shall be interpreted and governed under the laws and in the state and federal courts of the Commonwealth of Massachusetts without regard to its conflicts of laws provisions. You accept the personal jurisdiction and venue of the Commonwealth of Massachusetts courts. None of the 1980 United Nations Convention on Contracts for the International Sale of Goods, the United Nations Convention on the Limitation Period in the International Sale of Goods, and the Uniform Computer Information Transactions Act shall apply to this Agreement.

4. **EXPORT RESTRICTIONS.** You understand that Enterasys and its Affiliates are subject to regulation by agencies of the U.S. Government, including the U.S. Department of Commerce, which prohibit export or diversion of certain technical products to certain countries, unless a license to export the Program is obtained from the U.S. Government or an exception from obtaining such license may be relied upon by the exporting party.

If the Program is exported from the United States pursuant to the License Exception CIV under the U.S. Export Administration Regulations, You agree that You are a civil end user of the Program and agree that You will use the Program for civil end uses only and not for military purposes.

If the Program is exported from the United States pursuant to the License Exception TSR under the U.S. Export Administration Regulations, in addition to the restriction on transfer set forth in Section 1 or 2 of this Agreement, You agree not to (i) reexport or release the Program, the source code for the Program or technology to a national of a country in Country Groups D:1 or E:2 (Albania, Armenia, Azerbaijan, Belarus, Cambodia, Cuba, Georgia, Iraq, Kazakhstan, Laos, Libya, Macau, Moldova, Mongolia, North Korea, the People's Republic of China, Russia, Tajikistan, Turkmenistan, Ukraine, Uzbekistan, Vietnam, or such other countries as may be designated by the United States Government), (ii) export to Country Groups D:1 or E:2 (as defined herein) the direct product of the Program or the technology, if such foreign produced direct product is subject to national security controls as identified on the U.S. Commerce Control List, or (iii) if the direct product of the technology is a complete plant or any major component of a plant, export to Country Groups D:1 or E:2 the direct product of the plant or a major component thereof, if such foreign produced direct product is subject to national security controls as identified on the U.S. Commerce Control List or is subject to State Department controls under the U.S. Munitions List.

5. **UNITED STATES GOVERNMENT RESTRICTED RIGHTS.** The enclosed Program (i) was developed solely at private expense; (ii) contains "restricted computer software" submitted with restricted rights in accordance with section 52.227-19 (a) through (d) of the Commercial Computer Software-Restricted Rights Clause and its successors, and (iii) in all respects is proprietary data belonging to Enterasys and/or its suppliers. For Department of Defense units, the Program is considered commercial computer software in accordance with DFARS section 227.7202-3 and its successors, and use, duplication, or disclosure by the Government is subject to restrictions set forth herein.

6. **DISCLAIMER OF WARRANTY.** EXCEPT FOR THOSE WARRANTIES EXPRESSLY PROVIDED TO YOU IN WRITING BY ENTERASYS, ENTERASYS DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON- INFRINGEMENT WITH RESPECT TO THE PROGRAM. IF IMPLIED WARRANTIES MAY NOT BE DISCLAIMED BY APPLICABLE LAW, THEN ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THIRTY (30) DAYS AFTER DELIVERY OF THE PROGRAM TO YOU.

7. **LIMITATION OF LIABILITY.** IN NO EVENT SHALL ENTERASYS OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS, PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR RELIANCE DAMAGES, OR OTHER LOSS) ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM, EVEN IF ENTERASYS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS FOREGOING LIMITATION SHALL APPLY REGARDLESS OF THE CAUSE OF ACTION UNDER WHICH DAMAGES ARE SOUGHT.

THE CUMULATIVE LIABILITY OF ENTERASYS TO YOU FOR ALL CLAIMS RELATING TO THE PROGRAM, IN CONTRACT, TORT OR OTHERWISE, SHALL NOT EXCEED THE TOTAL AMOUNT OF FEES PAID TO ENTERASYS BY YOU FOR THE RIGHTS GRANTED HEREIN.

8. **AUDIT RIGHTS.** You hereby acknowledge that the intellectual property rights associated with the Program are of critical value to Enterasys and, accordingly, You hereby agree to maintain complete books, records and accounts showing (i) license fees due and paid, and (ii) the use, copying and deployment of the Program. You also grant to Enterasys and its authorized representatives, upon reasonable notice, the right to audit and examine during Your normal business hours, Your books, records, accounts and hardware devices upon which the Program may be deployed to verify compliance with this Agreement, including the verification of the license fees due and paid Enterasys and the use, copying and deployment of the Program. Enterasys' right of examination shall be exercised reasonably, in good faith and in a manner calculated to not unreasonably interfere with Your business. In the event such audit discovers non-compliance with this Agreement, including copies of the Program made, used or deployed in breach of this Agreement, You shall promptly pay to Enterasys the appropriate license fees. Enterasys reserves the right, to be exercised in its sole discretion and without prior notice, to terminate this license, effective immediately, for failure to comply with this Agreement. Upon any such termination, You shall immediately cease all use of the Program and shall return to Enterasys the Program and all copies of the Program.

9. **OWNERSHIP.** This is a license agreement and not an agreement for sale. You acknowledge and agree that the Program constitutes trade secrets and/or copyrighted material of Enterasys and/or its suppliers. You agree to implement reasonable security measures to protect such trade secrets and copyrighted material. All right, title and interest in and to the Program shall remain with Enterasys and/or its suppliers. All rights not specifically granted to You shall be reserved to Enterasys.

10. **ENFORCEMENT.** You acknowledge and agree that any breach of Sections 2, 4, or 9 of this Agreement by You may cause Enterasys irreparable damage for which recovery of money damages would be inadequate, and that Enterasys may be entitled to seek timely injunctive relief to protect Enterasys' rights under this Agreement in addition to any and all remedies available at law.

11. **ASSIGNMENT.** You may not assign, transfer or sublicense this Agreement or any of Your rights or obligations under this Agreement, except that You may assign this Agreement to any person or entity which acquires substantially all of Your stock or assets. Enterasys may assign this Agreement in its sole discretion. This Agreement shall be binding upon and inure to the benefit of the parties, their legal representatives, permitted transferees, successors and assigns as permitted by this Agreement. Any attempted assignment, transfer or sublicense in violation of the terms of this Agreement shall be void and a breach of this Agreement.

12. **WAIVER.** A waiver by Enterasys of a breach of any of the terms and conditions of this Agreement must be in writing and will not be construed as a waiver of any subsequent breach of such term or condition. Enterasys' failure to enforce a term upon Your breach of such term shall not be construed as a waiver of Your breach or prevent enforcement on any other occasion.

13. **SEVERABILITY.** In the event any provision of this Agreement is found to be invalid, illegal or unenforceable, the validity, legality and enforceability of any of the remaining provisions shall not in any way be affected or impaired thereby, and that provision shall be reformed, construed and enforced to the maximum extent permissible. Any such invalidity, illegality or unenforceability in any jurisdiction shall not invalidate or render illegal or unenforceable such provision in any other jurisdiction.

14. **TERMINATION.** Enterasys may terminate this Agreement immediately upon Your breach of any of the terms and conditions of this Agreement. Upon any such termination, You shall immediately cease all use of the Program and shall return to Enterasys the Program and all copies of the Program.



---

# Contents

## About This Guide

Who Should Use This Guide .....	xv
How to Use This Guide .....	xv
Related Documents .....	xvi
Conventions Used in This Guide .....	xvii

## Chapter 1: Introduction

Overview .....	1-1
C2K122-24 .....	1-2
High-Speed Stack Connections .....	1-3
Redundant Power Supply Capability .....	1-3
Connectivity .....	1-3
Management .....	1-4
Switch Configuration Using WebView .....	1-4
Switch Configuration Using CLI Commands .....	1-4
Standards Compatibility .....	1-4
LANVIEW Diagnostic LEDs .....	1-4
Getting Help .....	1-5

## Chapter 2: Network Requirements

10BASE-TX Network .....	2-1
100BASE-TX Network .....	2-2
1000BASE-T Network .....	2-2
10GBASE-XX Network .....	2-2

## Chapter 3: Hardware Installation

Considerations Prior to Installation .....	3-2
Required Tools .....	3-2
Unpacking the Switch .....	3-2
Installing Optional XFPs .....	3-3
Preparation .....	3-3
Installing the XFP .....	3-4
Removing the XFP .....	3-4
Installing the Switch on a Flat Surface .....	3-5
Installing the Rubber Feet .....	3-5
Guidelines for Installation .....	3-6
Rack Mounting the Switch .....	3-7
Guidelines for Rackmount Installation .....	3-8
Attaching Brackets and Installing in Rack .....	3-8
Connecting High-Speed Stacking Cables .....	3-9

Configuring Switches in a Stack .....	3-10
About SecureStack C2 Switch Operation in a Stack .....	3-11
Recommended Procedures for New and Existing Stacks .....	3-12
Connecting AC and RPS Power .....	3-13
Stack Initialization Overview .....	3-15
Connecting to Console Port for Local Management .....	3-16
What Is Needed .....	3-16
Connecting to an IBM or Compatible Device .....	3-17
Connecting to a VT Series Terminal .....	3-18
Connecting to a Modem .....	3-19
Connecting to the Network .....	3-20
Connecting UTP Cables .....	3-20
Connecting Fiber-Optic Cables to LC Ports .....	3-23
Completing the Installation .....	3-26
Initial Logon to Switch Management .....	3-26

## **Chapter 4: Troubleshooting**

Using LANVIEW .....	4-2
Troubleshooting Checklist .....	4-5
Using the Password Reset Switch .....	4-7

## **Appendix A: Specifications**

Switch Specifications .....	A-2
Supported XFP Transceiver Interface Options .....	A-3
Console Port Pinout Assignments .....	A-4
Regulatory Compliance .....	A-4

## **Index**

## Figures

1-1	C2K122-24 Stackable Switch.....	1-2
3-1	XFP with LC Connector.....	3-4
3-2	Chassis Bottom, Rubber Feet Placement.....	3-6
3-3	Area Guidelines for Switch Installation on Flat Surface.....	3-7
3-4	Attaching the Rackmount Brackets.....	3-8
3-5	Fastening the Switch to the Rack.....	3-9
3-6	High-Speed Stacking Cable Connections.....	3-10
3-7	Switch Rear View.....	3-14
3-8	DB9 Male Console Port Pinout Assignments.....	3-16
3-9	Connecting an IBM PC or Compatible.....	3-17
3-10	Connecting a VT Series Terminal.....	3-18
3-11	Connecting to a Modem.....	3-19
3-12	Connecting a UTP Cable Segment to RJ45 port.....	3-20
3-13	Four-Wire Crossover Cable RJ45 Pinouts for 10/100BASE-TX.....	3-21
3-14	Four-Wire Straight-Through Cable RJ45 Pinouts for 10/100BASE-TX.....	3-22
3-15	Eight-Wire Crossover Cable RJ45 Pinouts for 10/100/1000BASE-TX.....	3-22
3-16	Eight-Wire Straight-Through Cable RJ45 Pinouts for 10/100/1000BASE-TX.....	3-23
3-17	Cable Connection to LC Fiber-Optic Connectors.....	3-25
4-1	C2K122-24 LANVIEW LEDs.....	4-2
4-2	LANVIEW LEDs.....	4-3
4-3	Password Reset Switch.....	4-7
A-1	Console Port Pinout Assignments.....	A-4

## Tables

1-1	Description of XFPs.....	1-3
2-1	Recommended Cable Types and Specifications.....	2-3
3-1	Contents of Switch Carton.....	3-2
4-1	Troubleshooting Checklist.....	4-5
A-1	Switch Specifications.....	A-2
A-2	Supported XFP Transceivers.....	A-3
A-3	XFP Fiber-Optic Specifications.....	A-3
A-4	Recommended Cable Types and Specifications.....	A-3
A-5	Compliance Standards.....	A-4





---

# About This Guide

This guide provides an overview, installation and troubleshooting instructions, and specifications for the Enterasys<sup>®</sup> SecureStack C2K122-24 stackable Gigabit switch with 10-Gigabit Ethernet uplinks.

For information about the Command Line Interface (CLI) set of commands used to configure and manage the switch, refer to the Enterasys Networks<sup>®</sup> *SecureStack C2 Configuration Guide*.



**Note:** In this guide, the following terms are used:

- *Switch* refers to a C2K122-24, unless otherwise noted.
- *XSP* refers to optional small-form pluggable interface modules that plug into the front panel port slots 25 and 26.

---

## Important Notice

Depending on the firmware version used in the C2K122-24 switch, some features described in this document may not be supported. Refer to the Release Notes shipped with the switch to determine which features are supported.

---

## Who Should Use This Guide

This guide is intended for a network administrator responsible for installing and setting up the stackable switch.



**Electrical Hazard:** Only qualified personnel should perform installation procedures.

**Riesgo Electrico:** Solamente personal calificado debe realizar procedimientos de instalacion.

**Elektrischer Gefahrenhinweis:** Installationen sollten nur durch ausgebildetes und qualifiziertes Personal vorgenommen werden.

## How to Use This Guide

Read through this guide completely to familiarize yourself with its contents to gain an understanding of the features and capabilities of the stackable switch. A general knowledge of data communications networks is helpful when setting up the switch.

This preface provides an overview of this guide and the SecureStack C2 manual set, a brief summary of each chapter and defines the conventions used throughout this guide. To locate information concerning various subjects in this guide, refer to the following table:

For...	Refer to...
An overview of the switch features and how to obtain technical support	Chapter 1, <a href="#">Introduction</a>
Network requirements that must be met before installing the switch	Chapter 2, <a href="#">Network Requirements</a>
Instructions to install the switch on a flat surface or in a standard 19-inch rack and configure the switch in a stacked configuration	Chapter 3, <a href="#">Hardware Installation</a>
Troubleshooting installation problems and diagnosing network/operational problems using the LANVIEW LEDs	Chapter 4, <a href="#">Troubleshooting</a>
Specifications, environmental requirements, and physical properties of the switch and optional XFPs	Appendix A, <a href="#">Specifications</a>

## Related Documents

The documents listed below provide the necessary information to install and configure the switch and can be obtained from the World Wide Web in Adobe Acrobat Portable Document Format (PDF) at the following site:

<http://www.enterasys.com/support/manuals>

- *SecureStack C2 Installation Guide* provides hardware specifications and instructions to install the switch and its options.
- *SecureStack C2 Configuration Guide* describes how to use the Command Line Interface (CLI) to set up and manage the C2 switch.
- *SecureStack C2 Redundant Power System C2RPS-SYS Installation Guide* provides hardware specifications and instructions to install the power supply and its options.
- *Cabling Guide* provides information on dB loss and cable specifications. Unlike the other documents listed above, the *Cabling Guide* is not listed alphabetically on the web site. Instead, it is listed under the *Overview Guides* link.

## Conventions Used in This Guide

The following conventions are used in this guide:



**Note:** Calls the reader's attention to any item of information that may be of special importance.



**Caution:** Contains information essential to avoid damage to the equipment.

**Precaución:** Contiene información esencial para prevenir dañar el equipo.

**Achtung:** Verweist auf wichtige Informationen zum Schutz gegen Beschädigungen.



**Electrical Hazard:** Warns against an action that could result in personal injury or death due to an electrical hazard.

**Riesgo Eléctrico:** Advierte contra una acción que pudiera resultar en lesión corporal o la muerte debido a un riesgo eléctrico.

**Elektrischer Gefahrenhinweis:** Warnung vor sämtlichen Handlungen, die zu Verletzung von Personen oder Todesfällen – hervorgerufen durch elektrische Spannung – führen können!



**Warning:** Warns against an action that could result in personal injury or death.

**Advertencia:** Advierte contra una acción que pudiera resultar en lesión corporal o la muerte.

**Warhinweis:** Warnung vor Handlungen, die zu Verletzung von Personen oder gar Todesfällen führen können!



---

# Introduction

This chapter introduces the C2K122-24 stackable switch.

---

## Important Notice

Depending on the firmware version used in the switch, some features described in this document may not be supported. Refer to the Release Notes shipped with the C2K122-24 to determine which features are supported.

---

## Overview

The C2K122-24 is a stackable switch, which can be adapted and scaled to help meet your network needs. The switch provides 24-Gigabit Ethernet ports and two 10-Gigabit Ethernet interface port slots. The switch provides a management platform and uplink to a backbone for a stacked group of up to eight SecureStack switches. The two built-in XFP (10 Gigabit Small Form Factor Pluggable) interface slots provide you with the option of installing 802.3ae XFP-compliant modules 10GBASE-L/-LR/-ER fiber-optic connections for 10-Gbps high speed uplinks to the network backbone.

The switch also supports the use of a redundant DC power supply to help prevent downtime due to an internal power supply failure in the switch or AC power source.

You can install the switch on a flat surface or into a standard 19-inch rack with user-supplied mounting hardware, and configure the switch functions using the WebView™ application, CLI switching commands, and/or SNMP.

## C2K122-24

The C2K122-24 (Figure 1-1) has several types of front panel port and rear panel connections, which include:

- Twenty four RJ45 ports (10/100/1000 Mbps, 1000BASE-T copper ports).
- XFP slots that provide you with the option of installing XFP MSA compliant modules for 10-Gigabit, 10GBASE-L/-LR/-ER fiber-optic uplink connections.
- Rear panel connectors for high-speed connections in a stack configuration.
- Rear panel Redundant Power Supply connector for a redundant power supply connection. The switch connects to an Enterasys C2RPS-SYS using a C2RPS-PSM Cable.




**Caution:** The C2K122-24 is **not** a PoE-compliant device. **Do not** connect a SecureStack C2 PoE Redundant Power System (C2RPS-POE) to the power connector. Otherwise, damage to the device may result.

**Precaución:** El dispositivo C2K122-24 **no cumple** con el estándar PoE. **No conecte** una fuente de poder redundante (RPS) SecureStack C2 PoE (C2RPS-POE) al cable de corriente directa. De lo contrario, el dispositivo puede dañarse.

The 10/100/1000 Mbps fixed front panel ports can operate in either half-duplex or full-duplex mode, as determined by Auto-Negotiation.

**Figure 1-1 C2K122-24 Stackable Switch**

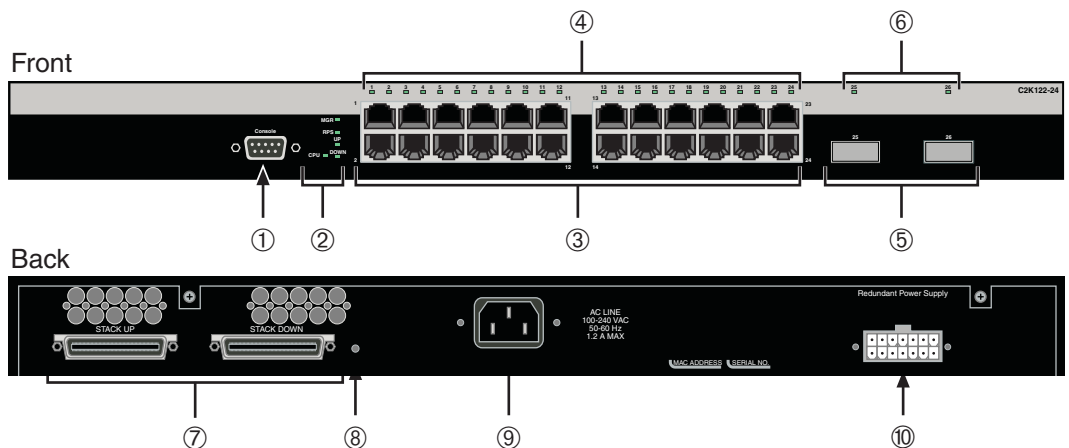

- |  |  |
|--|--|
| 1 DB9 RS232 console port connector         | 6 XFP port status LEDs                       |
| 2 Status LEDs                              | 7 Two ports for stack connections            |
| 3 Twenty-four RJ45, 10/100/1000 Mbps ports | 8 Password Reset switch                      |
| 4 RJ45 port status LEDs                    | 9 AC power input connector                   |
| 5 Two slots for XFP interface modules      | 10 Redundant power supply (RPS) DC connector |

## High-Speed Stack Connections

The switch has rear-panel connectors for high-speed connections in a stack configuration. The high-speed stacking cables used for the connections are optional items and must be ordered separately. There are two types of cables:

- C2CAB-SHORT cables to connect two adjacent switches in the stack, and
- C2CAB-LONG cable to connect from the top switch to the bottom switch in the stack. This cable can also be used in place of the C2CAB-SHORT cable to connect switches that are too far apart due to the physical arrangement of the switches in the stack.

## Redundant Power Supply Capability

The switch has redundant power supply capability when connected to an optional external redundant power supply (RPS). If the internal power supply fails, the RPS assumes the entire load of the switch without interrupting network traffic. The internal power supply and RPS each have their own AC power connection, which enables the connection of each power supply to a different AC power circuit for additional AC power source redundancy.

## Connectivity

You can connect this switch to Gigabit Ethernet networks or workstations by way of the 1000BASE-T compliant fixed-front panel RJ45 connectors and also use two uplink ports that support optional 10-Gigabit fiber-optic XFP transceivers for high-speed uplinks to your network backbone.

At the time of this printing, three versions of the XFP transceivers that are available from Enterasys are described in [Table 1-1](#) on page 1-3. These XFPs meet or exceed the IEEE 802.3ae 10-Gigabit standard. For fiber optic and operating range specifications, refer to [“Supported XFP Transceiver Interface Options”](#) on page A-3.

**Table 1-1 Description of XFPs**

XFP	Function
10GBASE-SR-XFP	Provides one 10GBASE-L Ethernet compliant LC fiber-optic multimode port with a standard LC connector.
10GBASE-LR-XFP	Provides one 10GBASE-LR Ethernet compliant LC fiber-optic single-mode port with a standard LC connector.
10GBASE-ER-XFP	Provides one 10GBASE-ER Ethernet compliant LC fiber-optic single-mode port with a standard LC connector.

## Management

Management of the module can be either in-band or out-of-band. In-band remote management is possible using Telnet, Enterasys Networks' NetSight<sup>®</sup> management application, or the WebView application. Out-of-band management is provided through the DB9 console port on the front panel using a VT100 terminal or a VT100 terminal emulator.

### Switch Configuration Using WebView

Enterasys Networks' HTTP-based Web management application (WebView) is an intuitive web tool for simple management tasks.

### Switch Configuration Using CLI Commands

The CLI commands enable you to perform more complete switch configuration management tasks.

For CLI command set information and how to configure the module, refer to the *SecureStack C2 Configuration Guide*.

## Standards Compatibility

The switches are fully compliant with the IEEE 802.3-2002, 802.3ae-2002, 802.1D-1998, and 802.1Q-1998 standards. The switches provide IEEE 802.1D-1998 Spanning Tree Algorithm (STA) support to enhance the overall reliability of the network and protect against "loop" conditions.

## LANVIEW Diagnostic LEDs

LANVIEW diagnostic LEDs serve as an important troubleshooting aid by providing an easy way to observe the status of individual ports and overall network operations.



## Getting Help

For additional support related to the switch or this document, contact Enterasys Networks using one of the following methods:

---

World Wide Web	<a href="http://www.enterasys.com/services/support/">www.enterasys.com/services/support/</a>
Phone	1-800-872-8440 (toll-free in U.S. and Canada) or 1-978-684-1000  For the Enterasys Networks Support toll-free number in your country: <a href="http://www.enterasys.com/services/support/contact/">www.enterasys.com/services/support/contact/</a>
Internet mail	<a href="mailto:support@enterasys.com">support@enterasys.com</a>  To expedite your message, type <b>[SWITCHING]</b> in the subject line.

---

To send comments concerning this document to the Technical Publications Department:  
[techpubs@enterasys.com](mailto:techpubs@enterasys.com)

Please include the document Part Number in your email message.

---

**Before contacting Enterasys Networks for technical support, have the following information ready:**

- Your Enterasys Networks service contract number
- A description of the failure
- A description of any action(s) already taken to resolve the problem (for example, changing mode switches, rebooting the unit, etc.)
- The serial and revision numbers of all involved Enterasys Networks products in the network
- A description of your network environment (layout, cable type, etc.)
- Network load and frame size at the time of trouble (if known)
- The device history (that is, have you returned the device before, is this a recurring problem, and so forth.)
- Any previous Return Material Authorization (RMA) numbers



## Network Requirements

Before installing the device, review the requirements and specifications in this chapter concerning the following:

For information about...	Refer to page...
<a href="#">10BASE-TX Network</a>	2-1
<a href="#">100BASE-TX Network</a>	2-2
<a href="#">1000BASE-T Network</a>	2-2
<a href="#">10GBASE-XX Network</a>	2-2



**Note:** The network installation must meet the requirements described in this chapter to ensure satisfactory performance of this equipment. Failure to do so will produce poor network performance.



**Note:** The associated switch configuration guide and the *Cabling Guide* referred to in the following sections can be found on the Enterasys Networks World Wide Web site: <http://www.enterasys.com/manuals>

For details about obtaining the manuals, refer to “[Related Documents](#)” on page xvi.

### 10BASE-TX Network

When connecting a 10BASE-TX segment to one of the RJ45 fixed ports (1 through 24), ensure that the network meets the Ethernet network requirements of the IEEE 802.3-2002 standard for 10BASE-TX. Refer to the *Cabling Guide* for details.



**Note:** If a port is to operate at 100 or 1000 Mbps, Category 5 cabling must be used. Category 3 cabling does not meet the 100 or 1000 Mbps specifications. For 10 Mbps operation only, Category 3, Category 4, or Category 5 cabling can be used. Refer to [100BASE-TX Network](#) (page 2-2) and [1000BASE-T Network](#) (page 2-2) for information about 100BASE-TX and 1000BASE-T networks and cabling.

## 100BASE-TX Network

When connecting a 100BASE-TX segment to one of the fixed ports (1 through 24), use Category 5 UTP cabling. The switch at the other end of the twisted pair segment must meet IEEE 802.3-2002 100BASE-TX Fast Ethernet network requirements for the switches to operate at 100 Mbps.



**Note:** When using the fixed ports on the switch for 100 Mbps operation use Category 5 UTP cabling with an impedance between 85 and 111 ohms for 100 Mbps operation.

The fixed switch ports are capable of operating at 10, 100, or 1000 Mbps. This is accomplished by the switch when Auto-Negotiation is enabled. This enables the switch to automatically sense the transmission speed of the other device and adjust for the speed accordingly.

## 1000BASE-T Network

The RJ45 fixed front panel connectors support copper 1000BASE-T compliant connections. When connecting a 1000BASE-T segment to one of the RJ45 fixed ports use Category 5 UTP cabling. The device at the other end of the twisted pair segment must meet IEEE 802.3-2002 1000BASE-T Gigabit Ethernet network requirements for the devices to operate at 1000 Mbps.

## 10GBASE-XX Network

The two optional interface front-panel port slots (25 and 26) support XFP IEEE 802.3ae 10-Gigabit Ethernet (10 GbE) fiber-optic modules. As of the printing of this guide, the 10GBASE-SR-XFP, 10GBASE-LR-XFP, and 10GBASE-ER-XFP are available. These 10-Gigabit Ethernet interfaces are based upon the XFP Multi-source Agreement (MSA). This MSA defines a fiber-optic transceiver module, which conforms to the IEEE 802.3ae 10-Gigabit Ethernet (10 GbE) standard and includes all physical media dependent (PMD) types defined by the IEEE for 802.3ae 10 GbE.

To obtain the maximum benefits of 10 GbE, carefully consider the cabling type (for example, single-mode or multimode fiber) and the performance at a specified wavelength. The performance is characterized by channel insertion loss (cabling attenuation) and modal bandwidth (for multimode fiber).

[Table 2-1](#) provides the cable type, maximum length, and connector type according to each version of XFP. For complete specifications, refer to “[Supported XFP Transceiver Interface Options](#)” on page A-3.

**Table 2-1 Recommended Cable Types and Specifications**

<b>XFP</b>	<b>Type</b>	<b>Max. Length</b>	<b>Connector</b>
10GBASE-SR-XFP	62.5 um MMF 200Mhz/km	33 m (108 ft)	LC
	50 um MMF 400Mhz/km	66 m (217 ft)	LC
	50 um MMF 2000Mhz/km	300 m (884 ft)	LC
10GBASE-LR-XFP	SMF	10 km (6.21 mi)	LC
10GBASE-ER-XFP <sup>1</sup>	SMF	40 km (24.85 mi)	LC

**1. The 10GBASE-ER-XFP requires a minimum of 5 dB attenuation or a cable length of about 10 km.**

The uplinks have one fiber-optic interface with an LC connector. Depending on the XFP and fiber-optic cable used, the signal can be driven to a maximum distance of 33 m (108 ft) to 40 kilometers (24.85 miles).

The device at the other end of the fiber optic connection must be a standards-compliant product with a matching IEEE 802.3ae 10-Gigabit Ethernet (10 GbE) interface transceiver.



## Hardware Installation



**Electrical Hazard:** Only qualified personnel should perform installation procedures.

**Riesgo Electrico:** Solamente personal calificado debe realizar procedimientos de instalacion.

**Elektrischer Gefahrenhinweis:** Installationen sollten nur durch ausgebildetes und qualifiziertes Personal vorgenommen werden.

### Important Notice

Read the Release Notes shipped with the switch to check for any exceptions to the supported features and operation documented in this guide.

This chapter provides instructions to install the C2K122-24. Follow the order of the sections listed below to correctly install the switch.

For information about...	Refer to page...
<a href="#">Considerations Prior to Installation</a>	<a href="#">3-2</a>
<a href="#">Required Tools</a>	<a href="#">3-2</a>
<a href="#">Unpacking the Switch</a>	<a href="#">3-2</a>
<a href="#">Installing Optional XFPs</a>	<a href="#">3-3</a>
<a href="#">Installing the Switch on a Flat Surface</a>	<a href="#">3-5</a>
<a href="#">Connecting High-Speed Stacking Cables</a>	<a href="#">3-9</a>
<a href="#">Configuring Switches in a Stack</a>	<a href="#">3-10</a>
<a href="#">Connecting AC and RPS Power</a>	<a href="#">3-13</a>
<a href="#">Connecting to Console Port for Local Management</a>	<a href="#">3-16</a>
<a href="#">Connecting to the Network</a>	<a href="#">3-20</a>
<a href="#">Completing the Installation</a>	<a href="#">3-26</a>

## Considerations Prior to Installation

When installing the switch, note the following:

- Before starting the installation procedure, notify the network administrator of the installation.
- Follow the installation procedures in the order as presented in this guide.
- Do not connect the switch to the network until you have established the correct IP address.

## Required Tools

A Phillips screwdriver is required to install the switch into a rack.

## Unpacking the Switch

Unpack the switch as follows:

1. Open the carton and remove the packing material protecting the switch.
2. Verify the carton contents with the items listed in [Table 3-1](#).

**Table 3-1 Contents of Switch Carton**

Item	Quantity
Switch device	1
Mounting kit (two mounting brackets and eight M3x6-mm screws for rack mounting)	1
Rubber feet with adhesive backing for installation on a flat surface	4
AC power cord (The type of power cord is country dependent.)	1
This installation guide	1
Customer Release Notes	1
URL notice card	1

3. Remove the tape seal on the non-conductive bag to remove the switch.
4. Perform a visual inspection of the switch for any signs of physical damage. Contact Enterasys Networks if there are any signs of damage. Refer to [“Getting Help”](#) on page 1-5 for details.



## Installing Optional XFPs

This section describes how to install XFPs in port slots 25 and 26. It is recommended that you install any options before installing the switch.



**Warning:** Fiber-optic XFPs use Class 1 lasers. Do not use optical instruments to view the laser output. The use of optical instruments to view laser output increases eye hazard. When viewing the output optical port, power must be removed from the network adapter.

**Advertencia:** Los XFPs de fibra optica usan lasers de clase 1. No se debe usar instrumentos opticos para ver la potencia laser. El uso de los instrumentos opticos para ver la potencia laser incrementa el riesgo a los ojos. Cuando vean el puerto de la potencia optica, la corriente debe ser removida del adaptador de la red.

**Warnhinweis:** XFPs mit Fiber-Optik Technologie benutzen Laser der Klasse 1. Benutzen sie keinesfalls optische Hilfsmittel, um die Funktion des Lasers zu überprüfen. Solche Hilfsmittel erhöhen die Gefahr von Sehschäden. Wenn sie den optischen Port überprüfen möchten stellen Sie sicher, dass die Komponente von der Spannungsversorgung getrennt ist.



**Caution:** Carefully follow the instructions in this manual to avoid damaging the XFP and switch.

The XFP and switch are sensitive to static discharges. Use an antistatic wrist strap and observe all static precautions during this procedure. Failure to do so could result in damage to the XFP and switch. Always leave the XFP in the antistatic bag or an equivalent antistatic container when not installed.

**Precaución:** Siga las instrucciones del manual para no dañar el XFP ni del aparato, puesto que son muy sensible a las descargas de electricidad estática. Utilice la pulsera antiestática y tome todas las precauciones necesarias durante este procedimiento. Si no lo hace, podría dañar el XFP o del aparato. Mientras no esté instalado, mantenga el XFP en su bolsa antiestática o en cualquier otro recipiente antiestático.

## Preparation

Before installing the XFP, proceed as follows:


1. Before removing the XFP from the antistatic packaging, it is recommended that you use an antistatic wrist strap (not supplied) to prevent damage from static discharge. To use the wrist strap, refer to the instructions provided with your antistatic wrist strap.
2. Remove the XFP from its packaging.
3. If there is a protective dust cover (see 5 in [Figure 3-1](#)) in the XFP connector, do not remove it at this time.

## Installing the XFP

To install an XFP that has an LC connector, refer to [Figure 3-1](#), and proceed as follows:

1. Hold the XFP with the top side positioned as shown, and the edge connector facing the port slot.
2. Align the XFP with the port slot.
3. Push the XFP into the port slot until the XFP “clicks” and locks into place.

**Figure 3-1 XFP with LC Connector**

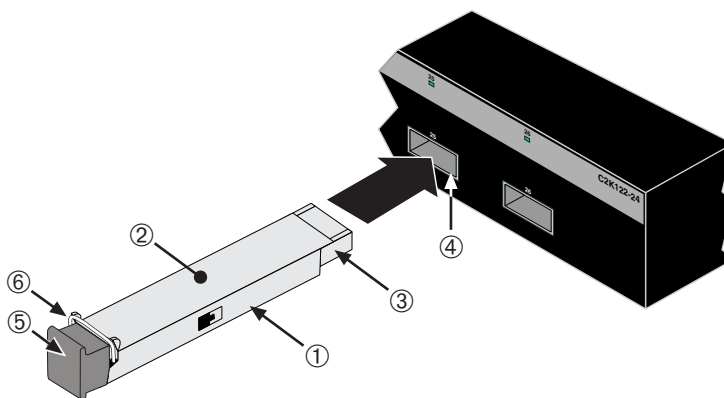

- |                                   |                                 |
|-----------------------------------|---------------------------------|
| 1 XFP                             | 4 Port slot                     |
| 2 XFP, top side                   | 5 Protective dust cover         |
| 3 Edge connector (insertion side) | 6 Wire handle (for XFP release) |

## Removing the XFP



**Caution:** Do NOT remove the XFP from the port slot without releasing it. The XFP is released by pulling down on its wire handle. Attempting to remove the XFP without releasing it can damage the XFP.

The XFP and its host switch are sensitive to static discharges. Use an antistatic wrist strap and observe all static precautions during this procedure. Failure to do so could result in damaging the XFP or host switch. Always leave the XFP in the antistatic bag or an equivalent antistatic container when not installed.

**Precaución:** NO quite el XFP de la ranura sin antes abrir la traba ubicada en la parte frontal del XFP. Si lo hace, puede dañar el XFP, puesto que es muy sensible a las descargas de electricidad estática, al igual que el dispositivo host. Utilice la pulsera antiestática y tome todas las precauciones necesarias durante este procedimiento. Si no lo hace, puede dañar el XFP o el dispositivo host. Mientras no esté instalado, mantenga el XFP en su bolsa antiestática o en cualquier otro recipiente antiestático.

To remove an XFP from a port slot, refer back to [Figure 3-1](#), and proceed as follows:

1. Attach your antistatic wrist strap (refer to the instructions in your antistatic wrist strap package) before removing the XFP.
2. Remove the cable connected to the XFP.
3. Locate the XFP wire handle and pull down on it to release the XFP.
4. Grasp the sides of the XFP and pull it straight out of the port slot.

If storing or shipping an XFP, which has a fiber-optic connector, insert its protective dust cover to protect the ends of the fiber-optic fibers from dust or contamination.


## Installing the Switch on a Flat Surface

When installing the switch on a flat surface, the installation of the rubber feet is recommended to prevent the switch from sliding on a flat surface. Installing the rubber feet is optional if you are installing the switch in a rack. To install the rubber feet, proceed to [“Installing the Rubber Feet”](#) instructions below. For instructions to rack mount the switch, proceed to [“Rack Mounting the Switch”](#) on page 3-7.

### Installing the Rubber Feet

To install the rubber feet, refer to [Figure 3-2](#) and proceed as follows:

1. Place the switch on its back on a sturdy flat surface to gain access to the bottom of the chassis.
2. Remove the four rubber feet from their plastic bag in the shipping box.
3. Locate the four marked locations on the bottom four corners of the chassis.

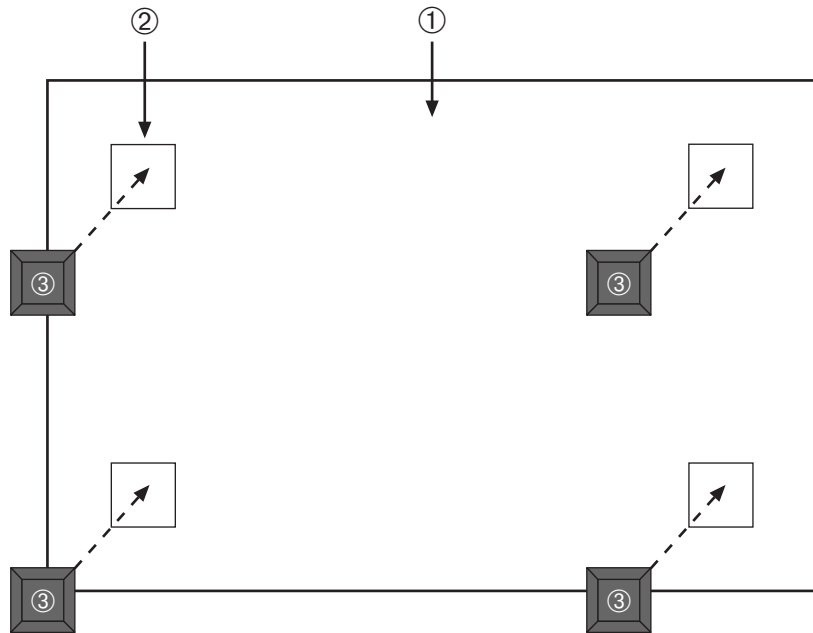**Figure 3-2 Chassis Bottom, Rubber Feet Placement**

- |   |   |
|---|---|
| <p>1 Bottom of chassis as seen when chassis is resting on its back</p> <p>2 Locations to install the rubber feet (four locations)</p> | <p>3 Rubber feet with adhesive backing (four)</p> |
|---|---|

4. Remove the protective strip from the back of one rubber foot and position it on a marked location and press firmly into place. Repeat this procedure to install the remaining three rubber feet in the other three locations.
5. After installing the rubber feet, return the switch to its upright position.



**Note:** If a number of switches are being installed in a stack, repeat steps 1 through 4 to install the rubber feet on each switch before continuing with the installation.

6. Proceed to [“Guidelines for Installation”](#) on page 3-6. For a rackmount installation, proceed to [“Rack Mounting the Switch”](#) on page 3-7.

## Guidelines for Installation

Locate the switch within 152 cm (5 ft) of its power source and on a surface as shown in [Figure 3-3](#). If an optional redundant power system is going to be installed and connected to the 14-pin Redundant Power Supply input connector on the rear of the switch, refer to the installation guide shipped with the redundant power system.




**Caution:** To ensure proper ventilation and prevent overheating, leave a minimum clearance space of 5.1 cm (2.0 in) at the left, right, and rear of the switch.

Do not connect the switch to the AC power source until instructed to do so later in the installation process.

**Precaución:** Para asegurar una buena ventilación y evitar que el sistema se sobrecaliente, deje un espacio mínimo de 5.1 cm (2 pulgadas) con respecto a los lados y a la parte posterior del aparato.

The next step to install the switch is dependent on the type of installation. If installing several switches in a stack, proceed to “[Connecting High-Speed Stacking Cables](#)” on page 3-9. If installing the switch as a standalone device, proceed to “[Connecting AC and RPS Power](#)” on page 3-13 for power connection instructions.

**Figure 3-3 Area Guidelines for Switch Installation on Flat Surface**

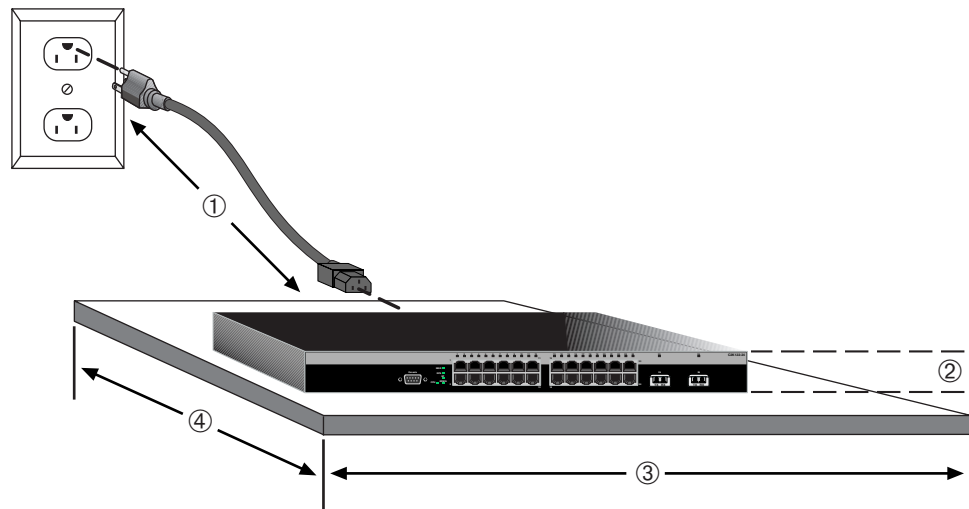

- |   |  |   |  |
|---|--|---|--|
| 1 | Approximately 152 cm (5 ft) from power source  | 3 | 44.5 cm (19.4 in.) for proper ventilation  |
| 2 | 4.45 cm (1.75 in.) per switch. (Vertical clearance depends on number of switches stacked.) | 4 | 419.0 cm (16.5 in.) for proper ventilation |

## Rack Mounting the Switch

To install the switch in a 19-inch rack, you need:

- Two rackmount brackets and mounting screws (rackmount kit) shipped with the switch.
- Four user-supplied screws to attach the switch to a standard 19-inch rack.

## Guidelines for Rackmount Installation

The installation site must be within reach of the network cabling and meet the requirements listed below:

- Appropriate grounded power receptacles must be located within 152 cm (5 ft) of the location.
- A temperature of between 5°C (41°F) and 40°C (104°F) must be maintained at the installation site with fluctuations of less than 10°C (18°F) per hour.



**Note:** To ensure proper ventilation and prevent overheating, leave a minimum clearance space of 5.1 cm (2.0 in.) at the left, right, and rear of the switch.



**Warning:** Before rack-mounting the device, ensure that the rack can support it without compromising stability. Otherwise, personal injury and/or equipment damage may result.

**Advertencia:** Antes de montar el equipo en el rack, asegurarse que el rack puede soportar su peso sin comprometer su propia estabilidad, de otra forma, daño personal o del equipo puede ocurrir.


**Warnhinweis:** Überzeugen Sie sich vor dem Einbau des Gerätes in das Rack von dessen Stabilität, ansonsten könnten Personenschäden oder Schäden am Gerät die Folge sein.

## Attaching Brackets and Installing in Rack

Proceed as follows to install the switch into a 19-inch rack:

1. Attach the rackmount brackets to the switch, as shown in [Figure 3-4](#), using the eight M3 x 6 mm flathead screws shipped with the switch.


**Figure 3-4 Attaching the Rackmount Brackets**

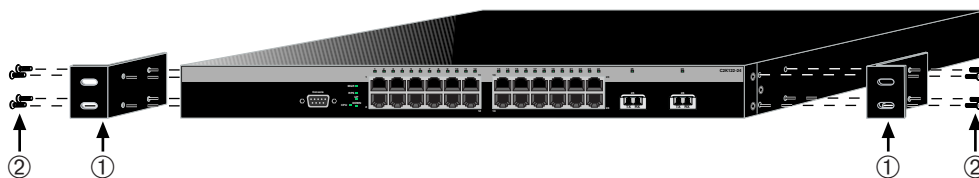

1 Rackmount brackets

2 M3 x 6 mm flathead screws

2. With the mounting brackets attached, position the switch between the vertical frame members of the 19-inch rack as shown in [Figure 3-5](#). Then fasten the switch securely to the frame using four mounting screws (user supplied).

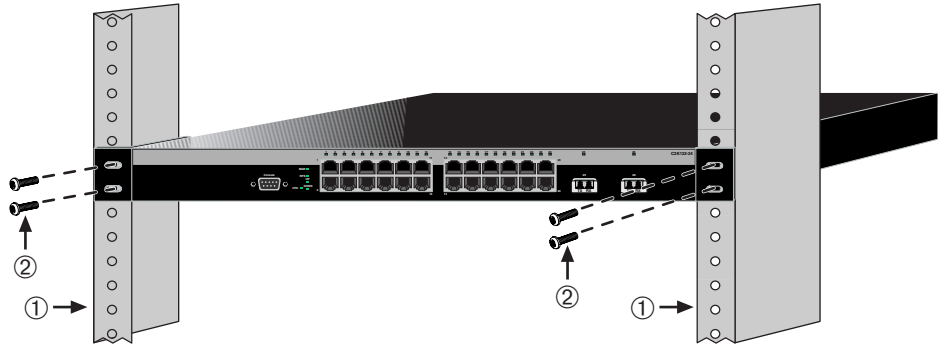**Figure 3-5 Fastening the Switch to the Rack**

1 Rails of 19-inch rack

2 Mounting screws (supplied by user)

3. If you are installing this switch in a stacked configuration, repeat this procedure for each switch until all switches have been installed in the stack, then proceed to [“Connecting High-Speed Stacking Cables”](#) on page 3-9. Otherwise, proceed to [“Connecting AC and RPS Power”](#) on page 3-13.

## Connecting High-Speed Stacking Cables

The stack of switches can be connected in a ring or daisy chain topology. In a ring topology all the switches are connected. The only difference in the cable connections in a daisy chain topology is that one cable is not installed.

Up to 8 switches can be stacked together and connected by high-speed stacking cables. You can add switches and reach up to a maximum of 384 Ethernet ports per stack. The high-speed stacking cables allow the entire stack to operate with a single IP address.




**Note:** The high-speed stacking cables are optional items and must be ordered separately. There are two types of cables:

- C2CAB-SHORT cable (30.6 cm (12 in) long) to connect two adjacent switches in the stack.
- C2CAB-LONG cable (1.0 m (36.2 in) long) to connect from the top switch to the bottom switch in the stack. You only need one C2CAB-LONG cable per stack.

If the stack is in a configuration where the adjacent switches are too far apart for C2CAB-SHORT cables, C2CAB-LONG cables can be used for the connections.

[Figure 3-6](#) shows an example of a four-high stack connected in a ring topology. All STACK DOWN and STACK UP connectors are used in the installation. The high-speed stacking cable connections are from the STACK DOWN connector of one switch to the STACK UP connector of the next switch up in the stack. A high-speed stacking cable connection from the STACK DOWN connector of the switch at the top of the stack to the STACK UP connector at the bottom of the stack completes the ring connection. In a daisy chain topology, one cable is not used.

**Figure 3-6 High-Speed Stacking Cable Connections**

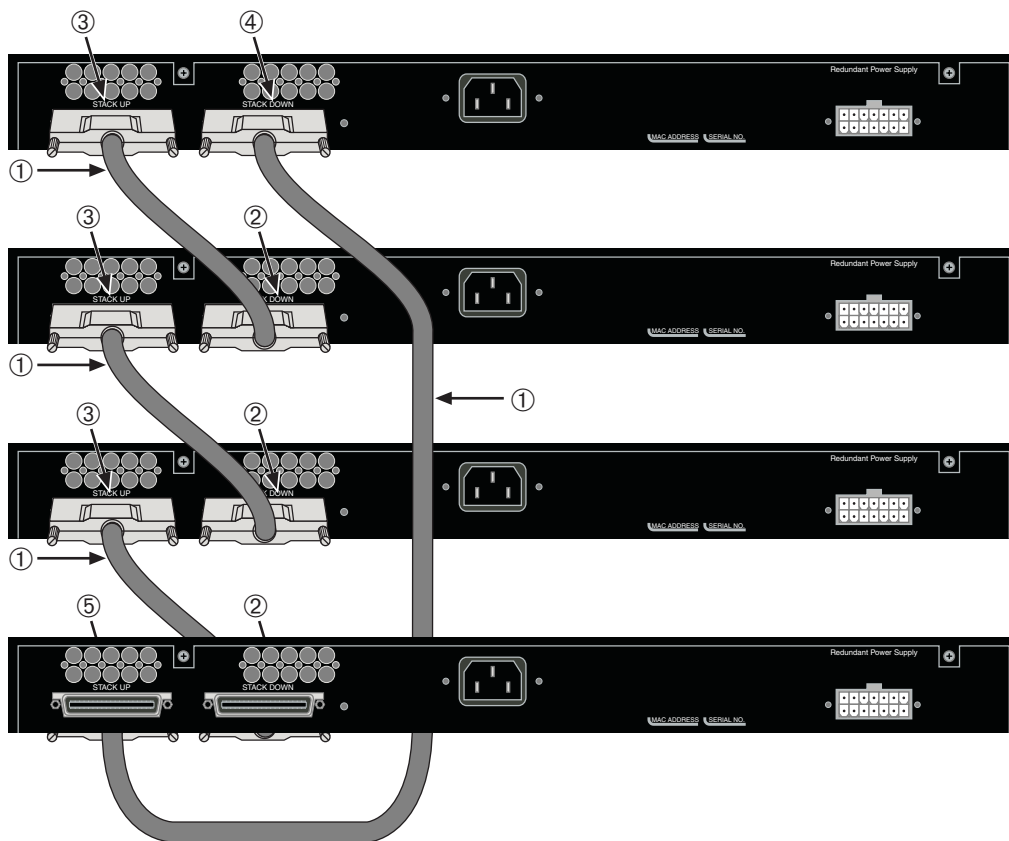

- |                             |   |
|-----------------------------|---|
| 1 High-speed stacking cable | 4 STACK DOWN connector at top of stack  |
| 2 STACK DOWN connector      | 5 STACK UP connector at bottom of stack |
| 3 STACK UP connector        |   |

After connecting the cables to the stacking ports, proceed to [“Configuring Switches in a Stack”](#) on page 3-10 for instructions.

## Configuring Switches in a Stack

The information in the following sections is important to understand SecureStack switch operation in a stack installation.



## About SecureStack C2 Switch Operation in a Stack

The SecureStack C2 products are stackable switches that can be adapted and scaled to help meet your network needs. These switches provide a management platform and uplink to a network backbone for a stacked group of up to eight SecureStack switches.

Once installed in a stack, the switches behave and perform as a single switch. As such, you can start with a single switch and add more switches as your network expands. You can also mix different products in the family in a single stack to provide a desired combination of port types and functions to match the requirements of individual applications. In all cases, a stack of switches performs as one large product, and is managed as a single network entity.

When switches are installed and connected as described back in [“Connecting High-Speed Stacking Cables”](#) on page 3-9, the following occurs during initialization:

- The switch that will manage the stack is automatically established and is referred to as the Manager switch.
- All other switches are established as Member switches in the stack.
- The hierarchy of the switches that will assume the function of backup manager is also determined in case the current manager malfunctions, is powered down, or is disconnected from the stack.
- The console port on the manager switch remains active for out-of-band (local) switch management, but the console port on each member switch is deactivated. This enables you to set the IP address and system password using a single console port. Now each switch can be configured locally using only the manager’s console port, or inband using a remote device and the CLI set of commands described in this section. For procedures used for various types of connections to the Console port, refer to [“Connecting to Console Port for Local Management”](#) on page 3-16.

Once a stack is created (more than one switch is interconnected), the following occurs:

1. Switch (unit) IDs are arbitrarily assigned on a first-come, first-served basis.
2. Switch IDs are saved against each module. Then, every time a board is power-cycled, it will initialize with the same switch ID. This is important for port-specific information (for example: ge.4.12 is the 12th Gigabit Ethernet port on switch # 4).
3. The management election process uses the following precedence to assign a management device:
  - a. Previously assigned / elected management switch
  - b. Management assigned priority (values 1-15)
  - c. Hardware preference level
  - d. Highest MAC Address

## Recommended Procedures for New and Existing Stacks

### Important

The following procedures assume that all switches have a clean configuration from manufacturing. When adding a new switch to an already running stack, it is also assumed that the new switch is using the same firmware image version as other switches in the stack.

### Installing a New Stackable System of Up to Eight Switches

Use the following procedure to install a new stack of up to eight switches out of the box. Before applying power, make **all** physical connections with the stack cables as described in [“Connecting High-Speed Stacking Cables”](#) on page 3-9.

1. Once all of the stack cables have been connected, individually power on each switch from top to bottom (connecting power to a switch is described in [“Connecting AC and RPS Power”](#) on page 3-13).

If the switches are powered on almost simultaneously, the system will automatically select the first one that powers up as the Manager switch and the others as Member switches. The switches are assigned unit IDs in the order that they become fully operational.

You can control the unit ID assignment according to the physical position in a stack. When you power up each switch and allow it to become fully operational before applying power to the next switch, the first one becomes the Manager and all the next switches will join that stack (regardless of Priority, Firmware Revision, or MAC Address). The switches are assigned unit IDs in the order that you power on each switch.



**Note:** Once switch IDs are assigned, they are persistent and will be retained during a power cycle to any or all of the switches.

2. (Optional) If desired, change the management switch using the **set switch** **movemanagement** command as described in the *SecureStack C2 Configuration Guide*.
3. Once the desired Manager switch has been selected, reset the system using the **reset** command as described in the *SecureStack C2 Configuration Guide*.

### Adding a New Switch to an Existing Stack

Use the following procedure to install a new switch to an existing stack configuration. This procedure assumes that the new switch being added has a clean configuration from manufacturing and is running the same firmware image version as other switches in the stack.

1. Ensure that power is off on the new switch being installed.
2. Use one of the following methods to complete the stack cable connections:
  - If the running stack uses a daisy chain topology, make the stack cable connections from the bottom of the stack to the new switch (that is, STACK DOWN port from the bottom switch of the running stack to the STACK UP port on the new switch).
  - If the running stack uses a ring stack topology, break the ring and make the stack cable connections to the new switch to close the ring.
3. Apply power to the new switch.

---

### Important Considerations About Using Clear Config in a Stack

When using the **clear config** command (as described in the *SecureStack C2 Configuration Guide*) to clear configuration parameters in a stack, it is important to remember the following:

- Use **clear config** to clear config parameters without clearing stack switch IDs. This command WILL NOT clear stack parameters and avoids the process of re-numbering the stack.
  - Use **clear config all** when it is necessary to clear all config parameters, including stack switch IDs and switch priority values.
- 

## Connecting AC and RPS Power

### AC Power



**Note:** The power supply in the switch has automatic voltage sensing that allows connection to power sources ranging from 100 to 240 VAC.


To connect a switch to the AC power source, refer to [Figure 3-7](#) and proceed as follows:

1. Plug the power cord into the switch AC power connector.
2. Plug the other end of the power cord into a dedicated grounded AC outlet (not shown). The type of power outlet and power cord are country dependent.



**Note:** If you plan to connect all the switches quickly to allow automatic Manager selection, wait until all switches are fully operational before proceeding to the next step.

If you plan to power up each switch and allow it to become fully operational before applying power to the next switch, proceed to the next step.

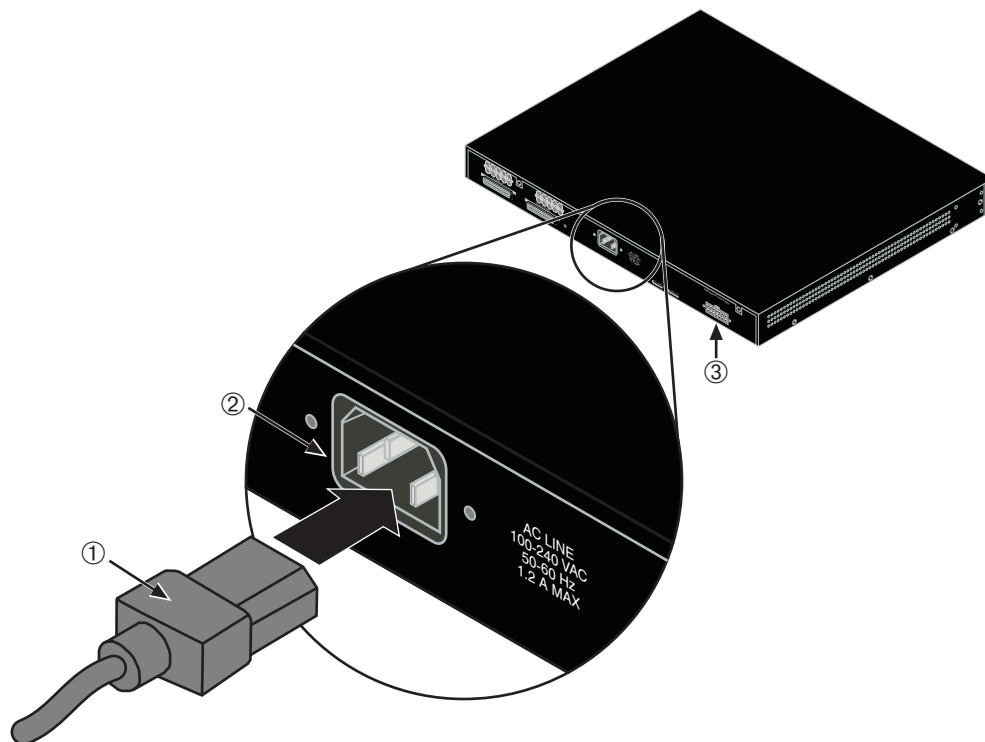**Figure 3-7 Switch Rear View**

1 AC power cord   2 AC power connector   3 Connector for external redundant power supply

3. Observe the power CPU LED (not shown) located on the front panel. During the initialization, the CPU LED will start by illuminating solid amber, then start blinking green, then blinking amber, then blinking green again until the end of the initialization, and then turns solid green.



**Note:** If the CPU LED illuminates solid red, there was a critical failure. For more information about the LED indications and troubleshooting, refer to [Chapter 4](#). If you need additional help, contact Enterasys Networks. Refer to “[Getting Help](#)” on page 1-5 for details.

If the switch is a standalone switch, it will take approximately 30 seconds for the switch to start up. If the switch is a stack Manager, it can take up to 3 minutes or more to start up, depending on the number of Member switches in the stack.

## RPS Power

If you are installing an optional redundant power system (C2RPS-SYS), refer to the installation instructions supplied with the RPS. The switch is connected to a C2RPS-PSM using a C2RPS-PSM Cable.



**Caution:** The C2K122-24 is **not** a PoE-compliant device. **Do not** connect a SecureStack C2 PoE Redundant Power Supply (C2RPS-POE) to the DC power connector. Otherwise damage to the device may result.

**Precaución:** El dispositivo C2K122-24 **no cumple** con el estándar PoE. **No conecte** una fuente de poder redundante (RPS) SecureStack C2 PoE (C2RPS-POE) al cable de corriente directa. De lo contrario, el dispositivo puede dañarse.

If you are installing the switch as a standalone device, proceed to “[Connecting to Console Port for Local Management](#)” on page 3-16. If you are installing the switch in a stack configuration, apply power to each switch in order, according to the procedure you use in “[Configuring Switches in a Stack](#)” on page 3-10.

## Stack Initialization Overview

When you install and connect all the high-speed stacking cables to the switches in the stack before applying power to the switches, the following occurs:

- The switch that will manage (Manager) the stack is automatically established with all other switches established as Member switches in the stack. When the switches complete their initializations, one of the switches in the stack will illuminate its Manager LED, indicating that it is the stack Manager. The Manager LED on each Member switch will be off.
- The hierarchy of the switches that will function as backup Manager is also determined in case the current Manager malfunctions, is powered down, or is disconnected from the stack.
- The Console port on each Member switch is deactivated. Only the Console port on the Manager switch is active for out-of band configuration to set the IP address, password and other configuration settings.

Once you know which switch is the Manager, proceed to “[Connecting to Console Port for Local Management](#)” on page 3-16.

## Connecting to Console Port for Local Management

This section describes how to install an RS232 DTE interface cable to a PC, a VT series terminal, or a modem to an Enterasys C2K122-24 for out-of-band sessions using CLI commands.



**Note:** When switches are connected in a stack configuration and all high-speed stacking cables are connected before powering up the switches, one switch in the stack will be automatically designated as the Manager of the stack and its Console port will remain active. All other switches will become Member switches and their Console ports will be deactivated.

### What Is Needed

The following is a list of user-supplied DTE interface cables that may be needed to connect the DB9 male Console port connector on the switch. The cables are terminated by a DB9 female connector at one end, and by one of three type connectors at the other end, depending on the type connection needed for the remote device. The cables that may be needed are as follows:

- DB9 female-to-DB9 female
- DB9 female-to-DB25 female
- DB9 female-to-DB25 male


Using a DTE modem DB9 female-to-DB9 female cable, you can connect products equipped with a DB9 DTE male console port to an IBM or compatible PC running a VT series emulation software package.

Using a DTE modem DB9 female-to-DB25 female cable, you can connect products equipped with a DB9 DTE male console port to a VT series terminal or VT type terminals running emulation programs for the VT series.

Using a DTE modem DB9 female-to-DB25 male cable, you can connect products equipped with a DB9 DTE male console port to a Hayes compatible modem that supports 9600 baud.

The cable used must connect the Console port Received Data, Pin 2 to the Transmitted Data pin at the other end of the cable. The connection from the Console port Transmitted Data, Pin 3 (must be connected) to the Received Data pin cable connection at the other end of the cable. The DB9 Console port pin assignments are shown in [Figure 3-8](#).

**Figure 3-8 DB9 Male Console Port Pinout Assignments**

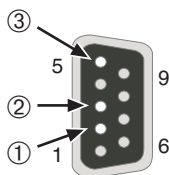

- 1 Pin 2, Received Data (input)
  - 2 Pin 3, Transmitted Data (output)
  - 3 Pin 5, Signal Ground
- All other pins not connected.

## Connecting to an IBM or Compatible Device


To connect an IBM PC or compatible device, running the VT terminal emulation, to an Enterasys switch Console port (Figure 3-9), proceed as follows:

1. Connect the DB9 female connector at one end of the cable (not supplied) to the Console port on the Enterasys switch. (If there is a switch designated as the Manager, connect to its Console port.)
2. Plug the DB9 female connector at the other end of cable into the communications port on the PC.
3. Turn on the PC and configure your VT emulation package with the following parameters:

Parameter	Setting
Mode	7 Bit Control
Transmit	Transmit=9600
Bits Parity	8 Bits, No Parity
Stop Bit	1 Stop Bit

When these parameters are set, the Startup screen will display. Proceed to [“Connecting to the Network”](#) on page 3-20.

**Figure 3-9 Connecting an IBM PC or Compatible**

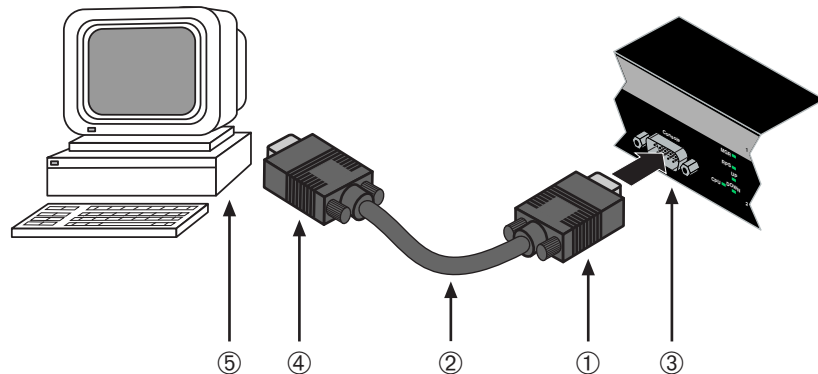

- |                                   |                                    |
|-----------------------------------|------------------------------------|
| 1 DB9 female connector            | 4 DB9 female connector             |
| 2 Serial interface cable          | 5 PC with VT emulation application |
| 3 DB9 male Console port connector |                                    |

## Connecting to a VT Series Terminal


To connect a VT Series terminal to an Enterasys switch Console port (Figure 3-10), use a UTP serial interface cable terminated with a DB9 female connector and a DB25 female connector and proceed as follows:

1. Connect the DB9 female connector at one end of cable to the Console port on the Enterasys switch. (If there is a switch designated as the Manager, connect to its Console port.)
2. Plug the DB25 female connector at the other end of the cable into the port labeled COMM on the VT terminal.
3. Turn on the terminal and access the Setup Directory. Set the following parameters on your terminal:

Parameter	Setting
Mode	7 Bit Control
Transmit	Transmit=9600
Bits Parity	8 Bits, No Parity
Stop Bit	1 Stop Bit

When these parameters are set, the Startup screen will display. Proceed to [“Connecting to the Network”](#) on page 3-20.

**Figure 3-10 Connecting a VT Series Terminal**

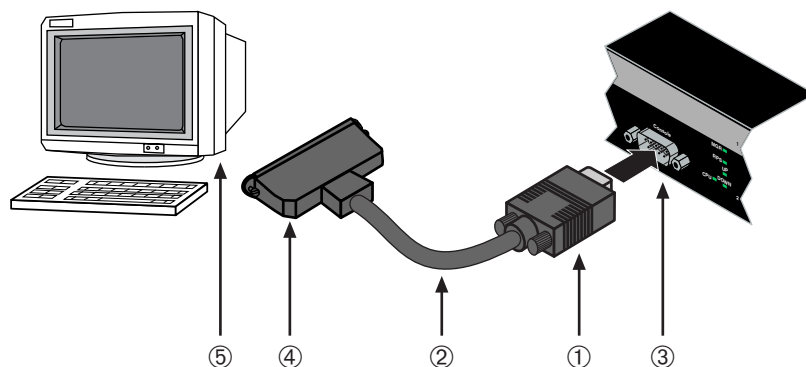

- |                                   |   |
|-----------------------------------|---|
| 1 DB9 female connector            | 4 DB25 female connector                           |
| 2 Serial interface cable          | 5 VT terminal or PC with VT emulation application |
| 3 DB9 male Console port connector |   |



## Connecting to a Modem


To connect a modem to an Enterasys Networks switch modem port (Figure 3-11), use a UTP cable terminated with a DB9 female connector and a DB25 male connector, and proceed as follows:

1. Connect the DB9 female connector at one end of the cable to the Console port on the Enterasys switch. (If there is a switch designated as the Manager, connect to its Console port.)
2. Plug the DB25 male connector at the other end of the cable into the modem communications port.
3. Turn on the modem and make sure the remote modem is ON.
4. With your PC connected to the remote modem, configure your VT emulation package with the following parameters:

Parameter	Setting
Mode	7 Bit Control
Transmit	Transmit=9600
Bits Parity	8 Bits, No Parity
Stop Bit	1 Stop Bit

When these parameters are set, the Startup screen will display. If the switches are in a stacked configuration, proceed to [“Connecting to the Network”](#) on page 3-20.

**Figure 3-11 Connecting to a Modem**

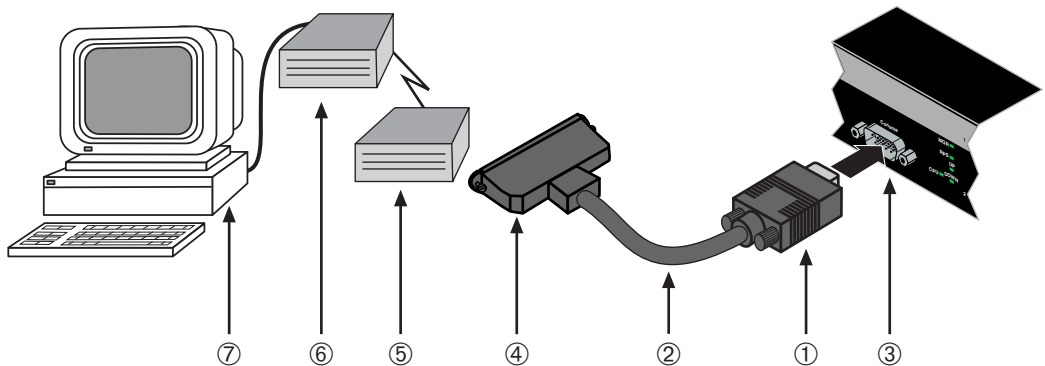

- |                              |                       |                                    |
|------------------------------|-----------------------|------------------------------------|
| 1 DB9 female cable connector | 4 DB25 male connector | 7 PC with VT emulation application |
| 2 Serial interface cable     | 5 Local modem         |                                    |
| 3 DB9 male Console port      | 6 Remote modem        |                                    |

## Connecting to the Network

The following procedures cover the cable connections from the network or other devices to the switch RJ45 ports or any installed optional XFP.

- [Connecting UTP Cables](#) on page 3-20
- [Connecting Fiber-Optic Cables to LC Ports](#) on page 3-23

### Connecting UTP Cables

The fixed RJ45 front panel ports are 10/100/1000 Mbps ports and have internal crossovers. When connecting a workstation to these ports, use a straight-through cable. When connecting networking devices to these ports, such as a bridge, repeater, or router, use a crossover cable.




**Note:** All fixed RJ45 front panel ports support Category 5 Unshielded Twisted Pair (UTP) cabling with an impedance between 85 and 111 ohms. Category 3 cable may be used if the connection is going to be used only for 10 Mbps.

To connect twisted pair segments to the switch, refer to [Figure 3-12](#) and proceed as follows:

1. Ensure that the device to be connected at the other end of the segment is powered ON.
2. Connect the twisted pair segment to the switch by inserting the RJ45 connector on the twisted pair segment into the desired RJ45 port (for example, Port 8).

**Figure 3-12** Connecting a UTP Cable Segment to RJ45 port

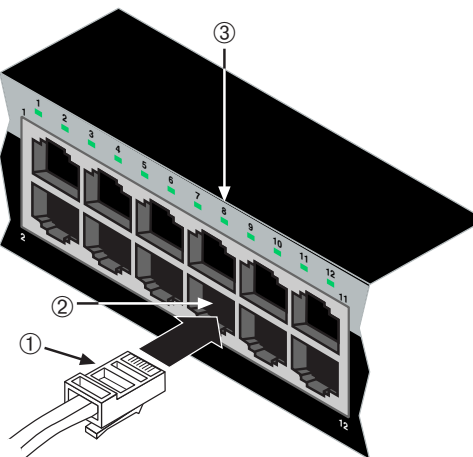


- 1 RJ45 connector
- 2 Port 8

- 3 Port 8 Link/Activity LED

3. Verify that a link exists by checking that the Link/Activity LED is ON (solid green or blinking green). If the Link/Activity LED is OFF, perform the following steps until it is on:
  - a. Verify that the cabling being used is Category 5 or better with an impedance between 85 and 111 ohms with a maximum length of 100 meters (328 feet).
  - b. Verify that the device at the other end of the twisted pair segment is on and properly connected to the segment.
  - c. Verify that the RJ45 connectors on the twisted pair segment have the proper pinouts and check the cable for continuity. Typically, a crossover cable is used between hub devices. A straight-through cable is used to connect between switches or hub devices and an end user (computer). Refer to [Figure 3-13](#) and [Figure 3-14](#) for four-wire RJ45 connections. Refer to [Figure 3-15](#) and [Figure 3-16](#) for eight-wire RJ45 connections.
  - d. Ensure that the twisted pair connection meets the dB loss and cable specifications outlined in the *Cabling Guide*. Refer to [“Related Documents”](#) on page xvi for information on obtaining this document.
4. If a link is not established, contact Enterasys Networks. Refer to [“Getting Help”](#) on page 1-5 for details.

Repeat all steps above until all connections have been made.


**Figure 3-13 Four-Wire Crossover Cable RJ45 Pinouts for 10/100BASE-TX**

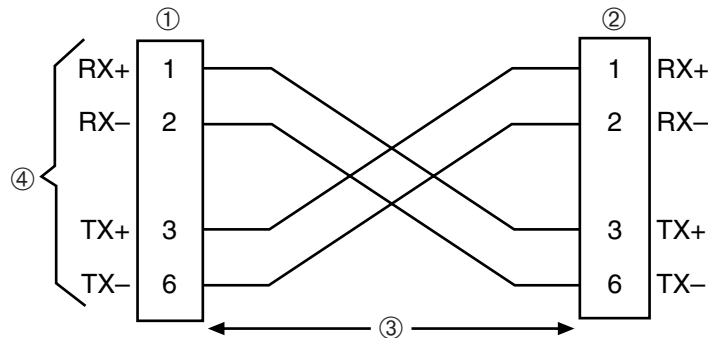

- 1 RJ45 switch port
- 2 Other device port

- 3 RJ45-to-RJ45 crossover cable
- 4 RX+/RX- and TX+/TX-connections  
These connections must share a common color pair.


**Figure 3-14 Four-Wire Straight-Through Cable RJ45 Pinouts for 10/100BASE-TX**

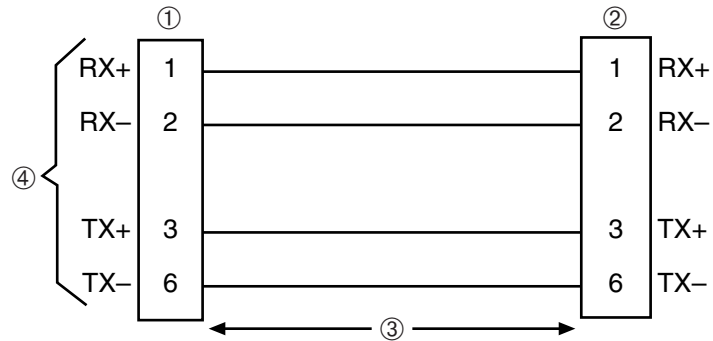

- 1 RJ45 switch port
- 2 Other device port

- 3 RJ45-to-RJ45 straight-through cable
- 4 RX+/RX- and TX+/TX-connections  
These connections must share a common color pair.


**Figure 3-15 Eight-Wire Crossover Cable RJ45 Pinouts for 10/100/1000BASE-TX**

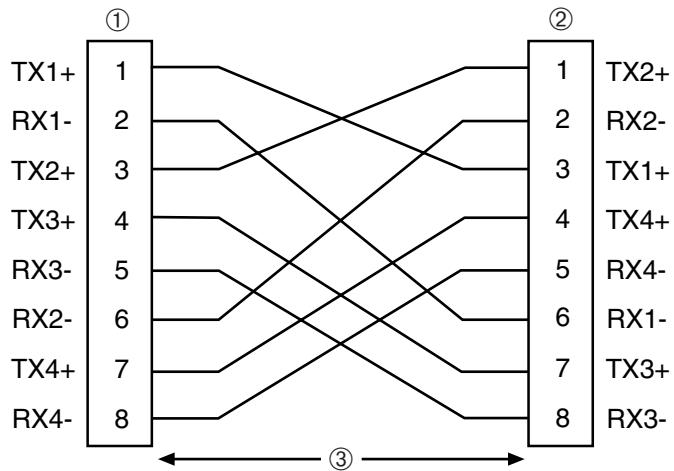

- 1 RJ45 device port
- 2 Other device port

- 3 RJ45-to-RJ45 crossover cable

**Figure 3-16 Eight-Wire Straight-Through Cable RJ45 Pinouts for 10/100/1000BASE-TX**

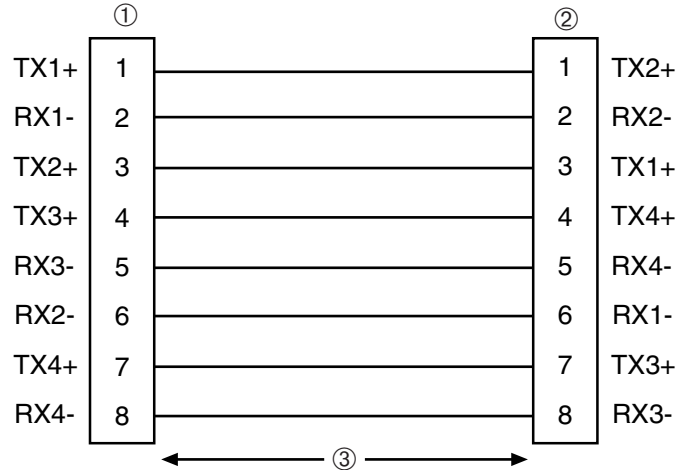

- 1 RJ45 device port  
2 Other device port

3 RJ45-to-RJ45 straight-through cable

## Connecting Fiber-Optic Cables to LC Ports



**Warning:** Fiber-optic XFPs use Class 1 lasers. Do not use optical instruments to view the laser output. The use of optical instruments to view laser output increases eye hazard. When viewing the output optical port, power must be removed from the network adapter.

**Advertencia:** Los XFPs de fibra optica usan lasers de clase 1. No se debe usar instrumentos opticos para ver la potencia laser. El uso de los instrumentos opticos para ver la potencia laser incrementa el riesgo a los ojos. Cuando vean el puerto de la potencia optica, la corriente debe ser removida del adaptador de la red.

**Warnhinweis:** XFPs mit Fiber-Optik Technologie benutzen Laser der Klasse 1. Benutzen sie keinesfalls optische Hilfsmittel, um die Funktion des Lasers zu überprüfen. Solche Hilfsmittel erhöhen die Gefahr von Sehschäden. Wenn sie den optischen Port überprüfen möchten stellen Sie sicher, dass die Komponente von der Spannungsversorgung getrennt ist.

This section describes how to connect

- a 10GBASE-SR multimode fiber-optic connection from the network or devices to an LC port connector of a 10GBASE-SR-XFP, or
- a 10GBASE-LR or -ER single-mode fiber-optic connection from the network or devices to an LC port connector of a 1000BASE-LR-XFP or 1000BASE-ER-XFP, respectively.

Each fiber-optic link consists of two fiber-optic strands within the cable:

- Transmit (TX)
- Receive (RX)

The transmit strand from a device port connects to the receive port of a fiber-optic Gigabit Ethernet device at the other end of the segment. The receive strand of the applicable LC port connects to the transmit port of the fiber-optic Gigabit Ethernet device.

Enterasys recommends labeling fiber-optic cables to indicate receive and transmit ends. Many cables are pre-labeled, providing matching labels or tapes at both ends of each strand of cable.

To connect an LC cable connector to a fixed LC connector of an XFP, refer to [Figure 3-17](#) and proceed as follows:



**Caution:** Do not touch the ends of the fiber-optic strands, and do not let the ends come in contact with dust, dirt, or other contaminants. Contamination of cable ends causes problems in data transmissions. If the ends of the fiber-optic strands become contaminated, use a canned duster to blow the surfaces clean. A fiber-port cleaning swab saturated with optical-grade isopropyl alcohol may also be used to clean the ends.

**Precaución:** No toque los extremos de los cables de fibra óptica y evite su contacto con el polvo, la suciedad o con cualquier otro contaminante. Si los extremos de los cables se ensucian, es posible que la transmisión de datos se vea afectada. Si nota que los extremos de los cables de fibra óptica se ensucian, utilice aire comprimido para limpiarlos. También puede limpiarlos con un estropajo embebido en alcohol isopropílico.

1. Remove the protective covers (not shown) from the front panel LC fiber-optic port (port 22 in this example) and from the connectors on each end of the cable.




**Note:** Leave the protective covers in place when the connectors are not in use to prevent contamination.

2. Insert the LC cable connector into the XFP LC connector until it clicks into place.



**Note:** To remove the LC cable connector, press on its release tab and pull it out of the XFP LC connector.

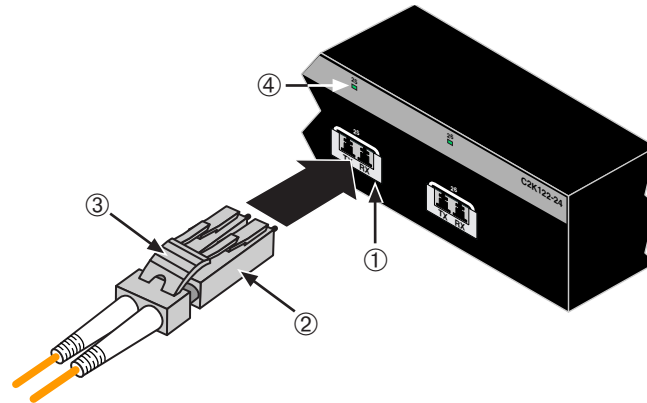**Figure 3-17 Cable Connection to LC Fiber-Optic Connectors**

- |                         |                     |
|-------------------------|---------------------|
| 1 XFP LC port connector | 3 Release tab       |
| 2 LC cable connector    | 4 Link/Activity LED |

3. Plug the other end of the cable into the appropriate port on the other device. Some cables may be terminated at the other end with two separate connectors, one for each fiber-optic strand. In this case, ensure that the transmit fiber-optic strand is connected to the receive port and the receive fiber-optic strand to the transmit port.
4. Verify that a link exists by checking that the port Link/Activity LED is on (blinking green or solid green). If the Link/Activity LED is off, perform the following steps until it is on:
  - a. Verify that the device at the other end of the segment is ON and connected to the segment.
  - b. If there are separate fiber-optic connections on the other device, check the crossover of the cables. Swap the cable connections if necessary.
  - c. Check that the fiber-optic connection meets the dB loss and cable specifications outlined in the Cabling Guide for multimode mode cabling. To obtain this document, refer to [“Related Documents”](#) on page xvi.
  - d. If a link has not been established, refer to [Chapter 4](#) for LED troubleshooting details. If a problem persists, refer to [“Getting Help”](#) on page 1-5 for details on contacting Enterasys Networks for support.
5. Repeat steps 1 through 4, above, until all connections have been made.

## Completing the Installation

After installing the switch and making the connections to the network, access the switch management, as described below.

### Initial Logon to Switch Management

To initially access switch management from your local PC, terminal, or modem connection, proceed as follows at the displayed startup screen:

1. Enter **rw** (Read-Write) for Username.
2. At the Password prompt, press **Enter** (Return).
3. For details on how to configure the switch using the command line interface, refer to the *SecureStack C2 Configuration Guide*. The CLI commands enable you to set a new password and perform more involved management configurations on the switch. One of many capabilities is to reconfigure the stack, reassigning the Manager function to another switch and configuring the order of Member switches that will take over the stack management functions in case the operating Manager is powered down, malfunctions, or is removed from the stack.
4. After the initial configuration, you can also use WebView (Enterasys Networks' embedded web server) for configuration and management tasks.

All the guides associated with the switch are available online at:

<http://www.enterasys.com/support/manuals>

Once you are confident that the installation is successful, route and secure your cables. If you require assistance, contact Enterasys Networks using one of the methods described in “[Getting Help](#)” on page 1-5.



# 4

## Troubleshooting

This chapter provides information concerning the following:

For information about...	Refer to page...
<a href="#">Using LANVIEW</a>	4-2
<a href="#">Troubleshooting Checklist</a>	4-5
<a href="#">Using the Password Reset Switch</a>	4-7

This device contains a battery that is not considered a user replaceable part. If the battery needs to be replaced, contact customer service for repair.




**Caution:** There is a risk of explosion if the battery is replaced with an incorrect type. Dispose of used batteries according to instructions supplied with the batteries.

**Precaucion:** Hay riesgo de explosion si la bateria se reemplaza con el typo incorrecto. Puede tirar la bateria usada en la basura.

## Using LANVIEW

The switch supports the Enterasys Networks built-in LANVIEW LED visual diagnostic and status monitoring system. The location of each C2K122-24 LANVIEW LED is shown in [Figure 4-1](#). The LEDs enable you to quickly observe network status for diagnosing switch and network problems.

**Figure 4-1 C2K122-24 LANVIEW LEDs**

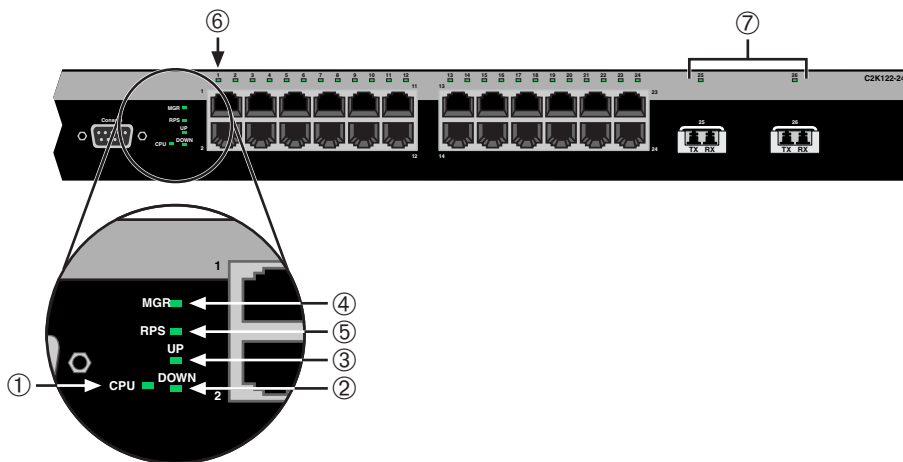

- |   |   |
|---|---|
| 1 CPU LED                                   | 6 Link/Activity LED for 10/100/1000 Mbps, port 1 of the 24 RJ45 ports |
| 2 STACK DOWN LED                            | 7 Link/Activity LEDs for 10-Gbps XFP ports, 25 and 26                 |
| 3 STACK UP LED                              |   |
| 4 RPS LED for redundant power-source status |   |
| 5 Manager LED                               |   |

[Table 4-2](#) describes the LED indications and provides recommended actions as appropriate.



**Note:** The terms **flashing**, **blinking**, and **solid** used in [Table 4-2](#) indicate the following:

**Flashing:** LED is flashing randomly.

**Blinking:** LED is flashing at a steady rate (approximately 50% on, 50% off).

**Solid:** LED is on steady and not pulsing.

Figure 4-2 LANVIEW LEDs

LED	Color	State	Recommended Action
CPU	Off	Power disconnected.	<p>If the LED remains off after connecting AC power or DC power from an RPS, check the following:</p> <ol style="list-style-type: none"> <li>1. Make sure there is power at the power source (AC source and RPS if applicable).</li> <li>2. Replace the power cord with a known good one or check the continuity of the power cord.</li> <li>3. If the switch still does not power up, the system may have a fatal error. Contact Enterasys Networks for technical support.</li> </ol>
	Red	<b>Solid.</b> Boot-up failed.	<p>If the LED remains red for several minutes, the system may have a fatal error. Contact Enterasys Networks for technical support.</p>
	Amber	<b>Solid.</b> Diagnostics are running.	<p>If the LED remains amber for more than several minutes, contact Enterasys Networks for technical support.</p>
		<b>Blinking.</b> Code image is being downloaded.	None.
	Green	<b>Solid.</b> System is fully functional.	None.
		<b>Blinking.</b> Boot-up in process.	None.
DOWN	Off	No valid connection to switch stackup connector.	<ol style="list-style-type: none"> <li>1. Make sure the switch connected to the stackup connector is powered on.</li> <li>2. Replace cable with a known good one.</li> <li>3. If the problem still exists, contact Enterasys Networks for technical support.</li> </ol>
	Green	<b>Solid.</b> Valid connection to switch stackup connector.	None.
		<b>Blinking.</b> Information is being transferred via the high-speed stacking cable.	

**Figure 4-2 LANVIEW LEDs (continued)**

LED	Color	State	Recommended Action
UP	Off	No valid connection to switch stackdown connector.	<ol style="list-style-type: none"> <li>1. Make sure the switch connected to the stackdown connector is powered on.</li> <li>2. Replace cable with a known good one.</li> <li>3. If the problem still exists, contact Enterasys Networks for technical support.</li> </ol>
	Green	<b>Solid.</b> Valid connection to switch stackdown connector. <b>Blinking.</b> Information is being transferred over the high-speed stacking cable.	None.
Manager	Off	Switch is operating as a Member in the stack.	None.
	Green	<b>Solid.</b> Switch is operating as the Manager of the stack.	None.
RPS	Off	RPS not in use. Internal power supply failure.	None. If an RPS is connected to the switch and should be providing power, perform the following: <ol style="list-style-type: none"> <li>1. Ensure the RPS is powered on.</li> <li>2. Ensure that the AC power cord to the RPS is plugged in correctly and that there is power at the AC power source.</li> <li>3. Replace the power cord with a known good one.</li> <li>4. Ensure the DC power cord from the RPS to the switch is plugged in correctly.</li> <li>5. If the problem persists, contact Enterasys Networks for technical support.</li> </ol>
	Amber	<b>Solid.</b> The switch internal power supply failed, and the RPS is providing the proper power to the switch.	None.

**Figure 4-2 LANVIEW LEDs (continued)**

LED	Color	State	Recommended Action
Link/ Activity	Off	1. No link.	None.
		2. No activity or port in standby.	None.
	Green	<b>Solid.</b> Port is linked, but the interface is not receiving any traffic.	None.
		<b>Blinking.</b> Port is linked and traffic is being received or transmitted by the interface.	None.

## Troubleshooting Checklist

If the device is not working properly, refer to [Table 4-1](#) for a checklist of problems, possible causes, and recommended actions to resolve the problem.

**Table 4-1 Troubleshooting Checklist**

Problem	Possible Cause	Recommended Action
All LEDs are OFF.	Loss of power.	Ensure that the switch was installed properly according to the installation instructions in <a href="#">Chapter 3</a> .
		Ensure that the power cords are connected properly to an active power source that meets the AC input specifications for this switch.
		Ensure that the AC power cord is not damaged. Replace the power cord with a known good one.
No local management startup screen.	Incorrect terminal setup.	Refer to the <i>SecureStack C2 Configuration Guide</i> for proper setup procedures.
	Improper Console cable pinouts.	Refer to <a href="#">Appendix A</a> for proper Console port pinouts.
	Corrupt firmware image, or hardware fault.	If possible, attempt to download the image to the device again. Refer to the <i>SecureStack C2 Configuration Guide</i> for details.
Cannot navigate beyond startup screen.	Improper Community Names Table.	Refer to the <i>SecureStack C2 Configuration Guide</i> for the Community Names Table setup.


**Table 4-1 Troubleshooting Checklist (continued)**

Problem	Possible Cause	Recommended Action
Cannot contact the switch through in-band management.	IP address not assigned.	Refer to the <i>SecureStack C2 Configuration Guide</i> for the IP address assignment procedure.
	Port is disabled.	This is normal if the switch is a Member in a stack. If operating as a standalone switch or as the Manager in a stack, enable the port. Refer to the <i>SecureStack C2 Configuration Guide</i> for instructions to enable/disable ports.
	No link to device.	Verify that all network connections between the network management station and the device are valid and operating. If the problem continues, contact Enterasys Networks for technical support.
Port(s) goes into standby for no apparent reason.	Loop condition detected.	Verify that Spanning Tree is enabled. Refer to the <i>SecureStack C2 Configuration Guide</i> for the instructions to set the type of STA. Review the network design and delete unnecessary loops. If the problem continues, contact Enterasys Networks for technical support.
User parameters (IP address, device and module name, etc.) were lost when the switch power was cycled.	Clear NVRAM was set using CLI commands.	Reenter the lost parameters as necessary. Refer to the <i>SecureStack C2 Configuration Guide</i> for the instructions to configure the switch using CLI commands. If the problem continues, contact Enterasys Networks for technical support.

## Using the Password Reset Switch

If you forget the switch login password, use the Password Reset switch as described in the following procedure.

**Figure 4-3 Password Reset Switch**

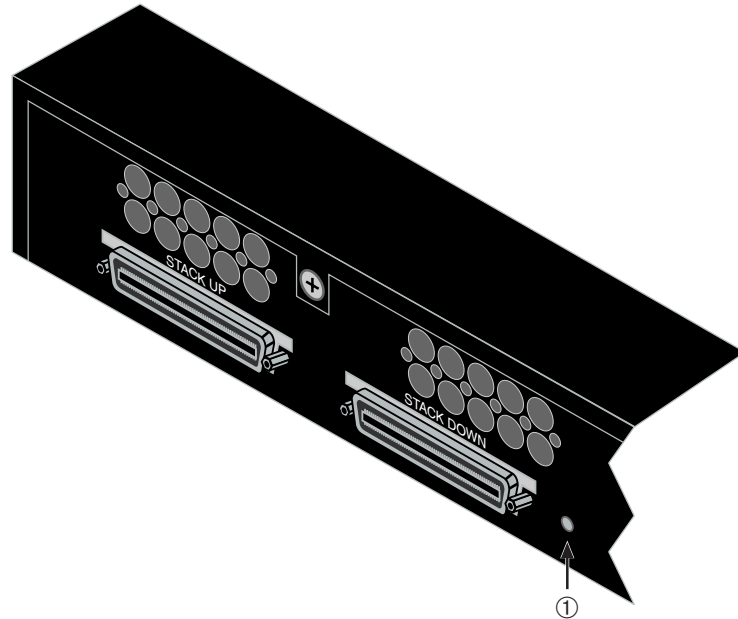

### 1 Password Reset switch

To reset the switch password, refer to [Figure 4-3](#) and proceed as follows:



**Note:** Notify the system manager before changing the password.

1. Press-and-hold the Reset button while the switch is operational. This change of the login password to the default password will be indicated via CLI only.
2. Logon to device management. You can now logon to the switch via the Console port and assign a new password using the command line interface (CLI).
3. To access switch management from your local PC, terminal, or modem connection, refer to the *SecureStack C2 Configuration Guide* for instructions on how to log in and enter a new password. The guide is available online at:

<http://www.enterasys.com/support/manuals>

If you require assistance, contact Enterasys Networks using one of the methods described in [“Getting Help”](#) on page 1-5.







---

## Specifications

This appendix provides information about the following:

For information about...	Refer to page...
<a href="#">Switch Specifications</a>	A-2
<a href="#">Supported XFP Transceiver Interface Options</a>	A-3
<a href="#">Console Port Pinout Assignments</a>	A-4
<a href="#">Regulatory Compliance</a>	A-4

Enterasys Networks reserves the right to change the specifications at any time without notice.

## Switch Specifications

Table A-1 provides the I/O ports, processors and memory, physical, and environmental specifications for the C2K122-24.

**Table A-1 Switch Specifications**

Item	Specification
<b>C2K122-24</b>	
RJ45 ports 1 through 24	Twenty-four, 10BASE-T/100BASE-TX /1000BASE-T compliant ports with auto-sensing and auto-negotiation via RJ45 UTP connectors.
XFP ports 25 and 26	Two slots that support optional XFP MSA compliant small form pluggable modules for 10GBASE fiber-optic connections.
<b>Physical</b>	
Dimensions	4.4 H x 44.1 W x 36.85 D (cm) 1.7 H x 17.4 W x 14.5 D (in)
Approximate Weight	Gross: 6.65 kg (14.63 lb) (shipping carton containing one module) Net: 5.40 kg (11.88 lb) (one module without packaging)
Predicted hours for Mean Time Between Failures (MTBF)	156,424 hours
Heat Dissipation (maximum)	@ 92.0 W, 313.9 Btu/hr
<b>AC Input Specifications</b>	
Input Voltage	100 to 240 VAC
Input Current	1.2 A Max
Frequency	50 to 60 Hz
<b>Environmental</b>	
Operating Temperature	5°C to 40°C (41°F to 104°F)
Storage Temperature	-40°C to 70°C (-40°F to 158°F)
Operating Relative Humidity	5% to 90% (non-condensing)

## Supported XFP Transceiver Interface Options

At the time this manual was printed, three 10GBASE XFP modules are available. The optional XFPs are hot swappable and are IEEE 802.ae compliant.

Table A-2 lists the XFPs and the type of fiber-optic connection and 10GBASE standard that each one supports.

**Table A-2 Supported XFP Transceivers**

XFP	Specification
10GBASE-SR-XFP	Provides one LC fiber-optic multimode port that is compliant with the 10GBASE-L standard.
10GBASE-LR-XFP	Provides one LC fiber-optic single-mode port that is compliant with the 10GBASE-LR standard.
10GBASE-ER-XFP	Provides one LC fiber-optic single-mode port that is compliant with the 10GBASE-ER standard.

Table A-3 provides you with the input/output specifications for each version of XFP.

**Table A-3 XFP Fiber-Optic Specifications**

XFP Module	Output Power	Extinction Ratio	Received Sensitivity	Link Budget
10GBASE-LR-XFP	<0.5 dBm	>4 dB	-10.28 dBm	0 to 9.4 dB
10GBASE-ER-XFP	<4.0 dBm	>3 dB	-10.3 dBm	5 to 11 dB
10GBASE-SR-XFP	<-1 dBm	>3 dB	-11.1 dBm	7.3 dB

Table A-4 provides you with the necessary information to make decisions concerning the cable type, maximum length, and connector type according to each XFP module.

**Table A-4 Recommended Cable Types and Specifications**


XFP Module	Type	Max. Length	Connector
10GBASE-LR-XFP	SMF	10 km (6.21 mi)	LC
10GBASE-ER-XFP <sup>1</sup>	SMF	40 km (24.85 mi)	LC
10GBASE-SR-XFP	62.5 um MMF 200Mhz/km	33 m (108 ft)	LC
	50 um MMF 400Mhz/km	66 m (217 ft)	LC
	50 um MMF 2000Mhz/km	300 m (884 ft)	LC

1. The 10GBASE-ER-XFP requires a minimum of 5 dB attenuation or a cable length of about 10 km.

## Console Port Pinout Assignments

The Console port is a DB9 serial communications port for local access to Local Management. Refer to [Figure A-1](#) for the Console port pin assignments.

**Figure A-1 Console Port Pinout Assignments**

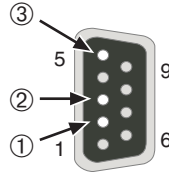

- |   |  |
|---|--|
| <p><b>1</b> Pin 2, Received Data (input)</p> <p><b>2</b> Pin 3, Transmitted Data (output)</p> | <p><b>3</b> Pin5, Signal Ground</p> <p>All other pins not connected.</p> |
|---|--|

## Regulatory Compliance

The C2K122-24 meets the safety and electromagnetic compatibility (EMC) requirements listed in [Table A-5](#):

**Table A-5 Compliance Standards**

Regulatory Compliance	Standards
Safety	UL 60950, CSA C22.2 No. 60950, 73/23/EEC, EN 60950, and IEC 60950. The XFPs support laser connections that meet the EN 60825 and 21 CFR 1040.10 standards.
Electromagnetic Compatibility (EMC)	47 CFR Parts 2 and 15, CSA C108.8, 89/336/EEC, EN 55022, EN 61000-3-2, EN 61000-3-3, EN 55024, AS/NZS CISPR 22, and VCCI V-3.

## Numerics

- 1000BASE-T
  - requirements for [2-2](#)
- 100BASE-TX
  - requirements [2-2](#)
- 10BASE-T
  - connection [3-20](#)
  - requirements [2-1](#)
- 10GBASE-XX
  - requirements for [2-2](#)

## A

- AC input specifications [A-2](#)

## C

- Cable
  - Fiber Budget [A-3](#)
- Cable Specifications
  - 10GBASE-XX network [2-2](#)
- Cable specifications
  - 1000BASE-T network [2-2](#)
  - 100BASE-TX network [2-2](#)
  - 10BASE-T network [2-1](#)
- CLI command
  - introduction to [1-4](#)
- Configuring switches
  - stack configuration [3-10](#)
- Connecting to the network [3-20](#)
- Connectivity
  - introduction to [1-3](#)
- Console port
  - pinout assignments [A-4](#)

## D

- Document conventions [xvii](#)

## E

- Electromagnetic Compatibility (EMC)
  - requirements [A-4](#)
- Enterasys
  - contacting [1-5](#)
  - getting help from [1-5](#)
  - technical support from [1-5](#)

## F

- Fiber budget [A-3](#)

## H

- High-speed stack connections
  - introduction to [1-3](#)

- High-speed stacking cables
  - installation of [3-9](#)

## I

- Installation
  - connecting to the network [3-20](#)
  - high-speed stacking cables [3-9](#)
  - in a rack [3-7](#)
  - new stack [3-12](#)
  - new switch in existing stack [3-12](#)
  - optional XFP [3-3](#)
- Installation site
  - what is needed at the [3-6](#)

## L

- LANVIEW Diagnostic LEDs
  - introduction to [1-4](#)
  - LANVIEW LEDs [4-2](#)
- Link LEDs
  - viewing of [4-2](#)
- Local Management
  - introduction to [1-4](#)

## M

- Management
  - use of [1-4](#)

## P

- Password Reset switch [4-7](#)
- Pinout assignments
  - console port [A-4](#)
  - UTP 4-wire crossover cable [3-21](#)
  - UTP 4-wire straight-through cable [3-22](#)
  - UTP 8-wire crossover cable [3-22](#)
  - UTP 8-wire straight-through cable [3-23](#)
- Power connection
  - AC [3-13](#)
  - RPS DC [3-15](#)

## R

- Rackmount installation
  - guidelines for [3-8](#)
- Receive/transmit LEDs
  - viewing of [4-2](#)
- Redundant power supply capability
  - introduction to [1-3](#)
- Regulatory Compliance [A-4](#)
- Related manuals [xvi](#)

- S**
- Safety requirements [A-4](#)
- Specifications
  - C2K122-24 [A-2](#)
  - XFP [A-3](#)
- Stack initialization
  - Manager switch selection [3-15](#)
- Stack Manager
  - automatic selection of [3-15](#)
- Stack Member
  - automatic selection of [3-15](#)
- Stack operation
  - Member switch selection [3-15](#)
- Stack system
  - installation of a new switch in existing stack [3-12](#)
  - installation of new [3-12](#)
- Standards compatibility [1-4](#)
- Switch
  - overview of [1-1](#)
  - Password reset [4-7](#)
  - specifications for [A-2](#)
- Switch carton
  - contents of [3-2](#)
  - unpacking of [3-2](#)
- Switch operation
  - stack installation [3-11](#)
- T**
- Troubleshooting [4-2](#)
  - checklist [4-5](#)
- U**
- Unpacking the module [3-2](#)
- V**
- Viewing receive and transmit activity
  - instructions for [4-2](#)
- W**
- WebView
  - introduction to [1-4](#)
- X**
- XFP
  - installation of [3-3](#)
  - specifications for [A-3](#)