



# Korn's Bookshop

Dealing in quality e-books on eBay

*Thank you for purchasing an e-book through Korn's Bookshop. If you have any problems or questions you can get in touch with me via email on [books@kornel.com](mailto:books@kornel.com). I hope you are satisfied with your purchase and enjoy your book, happy reading!*

*Check out my other great books by visiting [Korn's Bookshop](#) on eBay.*

### **Please note:**

You may not copy, reproduce or redistribute this e-book in any form for commercial purposes. You are hereby granted a licence to read, store and print this book for personal use only. If you think you may have purchased this book from an unauthorised source either on eBay or elsewhere please contact me for clarification. Kornel Lambert (eBay ID 'korn\_london') is the only permitted distribution agent for these books. Help stamp out piracy!

## NOTICE

This manual was written by the Yamaha Motor Company primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to put an entire mechanic's education into one manual, so it is assumed that persons using this book to perform maintenance and repairs on Yamaha motorcycle has a basic understanding of the mechanical concepts and procedures inherent in motorcycle repair technology. Without such knowledge, attempted repairs or service to this model may render it unfit to use and/or unsafe.

Yamaha Motor Company, Ltd. is continually striving to improve all models manufactured by Yamaha. Modifications and significant changes in specifications or procedures will be forwarded to all Authorized Yamaha dealers and will, where applicable, appear in future editions of this manual.

---

### NOTE:

#### PARTICULARLY IMPORTANT INFORMATION

This material distinguished by the following notation.

---



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



Failure to follow WARNING instructions could result in severe injury or death to the motorcycle operator, a bystander or a person checking or repairing the motorcycle.

### CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the motorcycle.

### NOTE:

A NOTE provides key information to make procedures easier or clearer.

# HOW TO USE THIS MANUAL

This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

- ① The manual is divided into chapters. An abbreviation and symbol in the upper right corner of each page indicate the current chapter. Refer to "SYMBOLS".
- ② Each chapter is divided into sections. The current section title is shown at the top of each page, except in Chapter 3 ("PERIODIC CHECKS AND ADJUSTMENTS"), where the sub-section title(-s) appears.
- ③ Sub-section titles appear in smaller print than the section title.
- ④ To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.
- ⑤ Numbers are given in the order of the jobs in the exploded diagram. A circled number indicates a disassembly step.
- ⑥ Symbols indicate parts to be lubricated or replaced.
- ⑦ A job instruction chart accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- ⑧ Jobs requiring more information (such as special tools and technical data) are described sequentially.

② CLUTCH

① ENG

④

CLUTCH

ENG

**REMOVING THE CLUTCH**

1. Straighten the lock washer tab.  
2. Loosen: <ul style="list-style-type: none; padding-left: 0; margin: 0;><li>•clutch boss nut ①</li></ul>

**NOTE:**  
While holding the clutch boss ② with the universal clutch holder, loosen the clutch boss nut.

**Universal clutch holder ③**  
90890-04086

3. Remove:  
•clutch boss nut ①  
•lock washer ②  
•clutch boss ③  
•thrust washer  
•spacer ⑤  
•bearing ⑥  
•clutch housing ⑦

**NOTE:**  
Insert two 6 mm bolts ⑧ into the spacer and then remove the spacer by pulling on the bolts.

**CHECKING THE FRICTION PLATES**

The following procedure applies to all of the friction plates.

1. Check:  
•friction plate  
•Damage/wear → Replace the friction plates as a set.

2. Measure:  
•friction plate thickness  
•Out of specification → Replace the friction plates as a set.

**NOTE:**  
Measure the friction plate at four places.

**Friction plate thickness**  
2.9 – 3.1 mm  
◀Limit>: 2.8 mm

Order	Job/Part	Qty	Remarks
14	Clutch boss	1	Refer to "REMOVING/INSTALLING THE CLUTCH".
15	Stopper ring	1	
16	Clutch plate	1	
17	Clutch spring plate	1	
18	Clutch spring plate seat	1	
19	Friction plates (narrow)	1	
20	Thrust washer	1	
21	Spacer	1	
22	Bearing	1	
23	Clutch housing	1	
			For installation, reverse the removal procedure.


















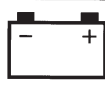




⑤

⑥

③

⑧

⑦

① GEN INFO 	② SPEC 
③ CHK ADJ 	④ ENG 
⑤ CARB 	⑥ CHAS 
⑦ ELEC 	⑧ TRBL SHTG ?
⑨ 	⑩ 
⑪ 	⑫ 
⑬ 	⑭ 
⑮ 	⑯ 
⑰ 	⑱ 
⑲ 	
⑳ 	㉑ 
㉒ 	
㉓ 	㉔ <b>New</b>

## SYMBOLS

The following symbols are not relevant to every vehicle.

Symbols ① to ⑧ indicate the subject of each chapter.

- ① General information
- ② Specifications
- ③ Periodic checks and adjustments
- ④ Engine
- ⑤ Carburetor(-s)
- ⑥ Chassis
- ⑦ Electrical system
- ⑧ Troubleshooting

Symbols ⑨ to ⑯ indicate the following.

- ⑨ Serviceable with engine mounted
- ⑩ Filling fluid
- ⑪ Lubricant
- ⑫ Special tool
- ⑬ Tightening torque
- ⑭ Wear limit, clearance
- ⑮ Engine speed
- ⑯ Electrical data








Symbols ⑰ to ㉒ in the exploded diagrams indicate the types of lubricants and lubrication points.


- ⑰ Engine oil
- ⑱ Gear oil
- ⑲ Molybdenum disulfide oil
- ⑳ Wheel bearing grease
- ㉑ Lithium soap base grease
- ㉒ Molybdenum disulfide grease

Symbols ㉓ to ㉔ in the exploded diagrams indicate the following:

- ㉓ Apply locking agent (LOCTITE®)
- ㉔ Replace the part

# INDEX

<b>GENERAL INFORMATION</b>	
	<b>GEN INFO</b> <b>1</b>
<b>SPECIFICATIONS</b>	
	<b>SPEC</b> <b>2</b>
<b>PERIODIC INSPECTION AND ADJUSTMENTS</b>	
	<b>CHK ADJ</b> <b>3</b>
<b>ENGINE OVERHAUL</b>	
	<b>ENG</b> <b>4</b>
<b>CARBURETORS</b>	
	<b>CARB</b> <b>5</b>
<b>CHASSIS</b>	
	<b>CHAS</b> <b>6</b>
<b>ELECTRICAL</b>	
	<b>ELEC</b> <b>7</b>
<b>TROUBLESHOOTING</b>	<b>?</b>
	<b>TRBL SHTG</b> <b>8</b>

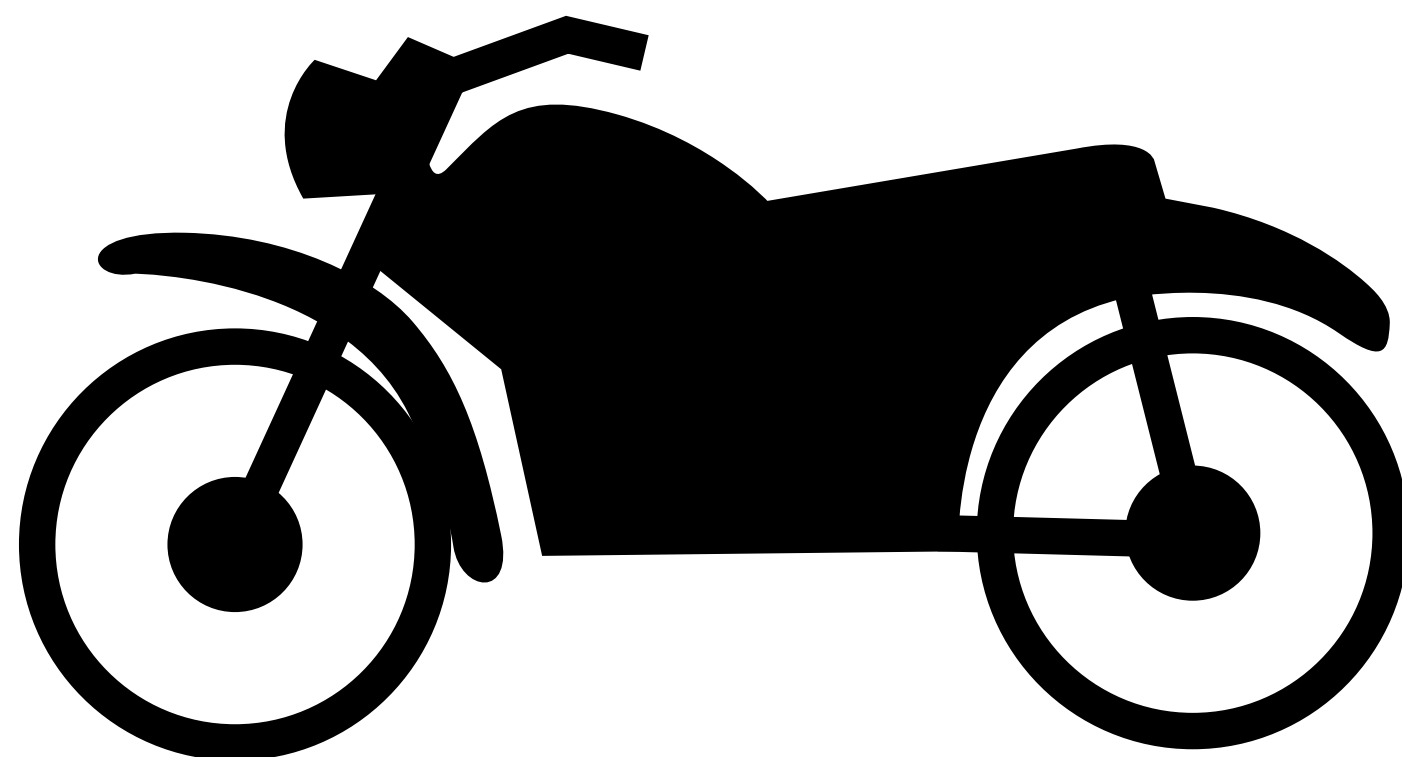

**GEN  
INFO**

**1**


---

## CHAPTER 1. GENERAL INFORMATION

<b>MOTORCYCLE IDENTIFICATION</b> .....	1-1
VEHICLE IDENTIFICATION NUMBER .....	1-1
MODEL CODE .....	1-1
<b>IMPORTANT INFORMATION</b> .....	1-2
PREPARATION FOR REMOVAL AND DISASSEMBLY .....	1-2
REPLACEMENT PARTS .....	1-2
GASKETS, OIL SEALS AND O-RINGS .....	1-2
LOCK WASHERS/PLATES AND COTTER PINS .....	1-3
BEARINGS AND OIL SEALS .....	1-3
CIRCLIPS .....	1-3
<b>CHECKING OF THE CONNECTIONS</b> .....	1-4
<b>SPECIAL TOOLS</b> .....	1-5

## MOTORCYCLE IDENTIFICATION

GEN  
INFO

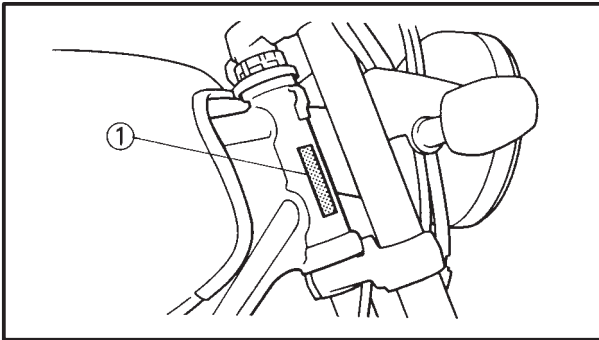


EAS00014

### GENERAL INFORMATION MOTORCYCLE IDENTIFICATION

EAS00017

#### VEHICLE IDENTIFICATION NUMBER (For E)

The vehicle identification number ① is stamped into the right side of the steering head.

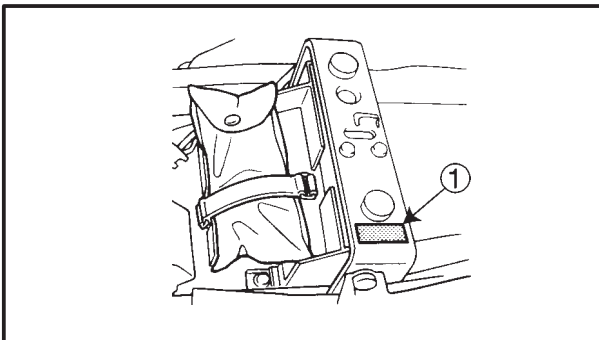


EAS00018

#### MODEL CODE

The model code label ① is affixed to the frame. This information will be needed to order spare parts.



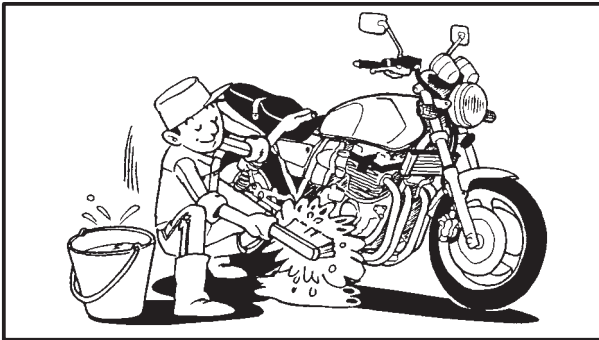

EAS00020


## IMPORTANT INFORMATION PREPARATION FOR REMOVAL AND DIS- ASSEMBLY

1. Before removal and disassembly, remove all dirt, mud, dust, and foreign material.
  
2. Use only the proper tools and cleaning equipment.  
Refer to "SPECIAL TOOLS".
3. When disassembling, always keep mated parts together. This includes gears, cylinders, pistons and other parts that have been "mated" through normal wear. Mated parts must always be reused or replaced as an assembly.
4. During disassembly, clean all of the parts and place them in trays in the order of disassembly. This will speed up assembly and allow for the correct installation of all parts.
5. Keep all parts away from any source of fire.

EAS00021

## REPLACEMENT PARTS

Use only genuine Yamaha parts for all replacements. Use oil and grease recommended by Yamaha for all lubrication jobs. Other brands may be similar in function and appearance, but inferior in quality.

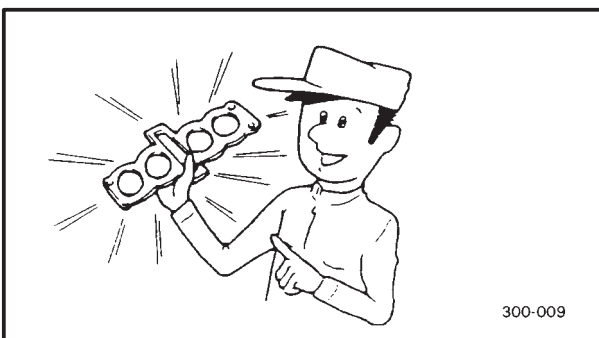


EAS00022

## GASKETS, OIL SEALS AND O-RINGS

1. When overhauling the engine, replace all gaskets, seals and O-rings. All gasket surfaces, oil seal lips and O-rings must be cleaned.
2. During reassembly, properly oil all mating parts and bearings and lubricate the oil seal lips with grease.


# IMPORTANT INFORMATION

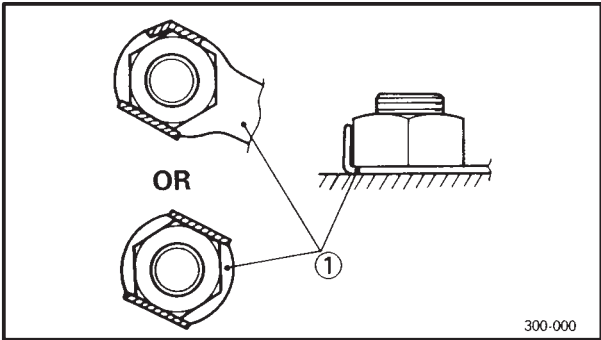

EAS00023

## LOCK WASHERS/PLATES AND COTTER PINS

After removal, replace all lock washers/plates ① and cotter pins. After the bolt or nut has been tightened to specification, bend the lock washer tabs and the cotter pin ends along a flat of the bolt or nut.

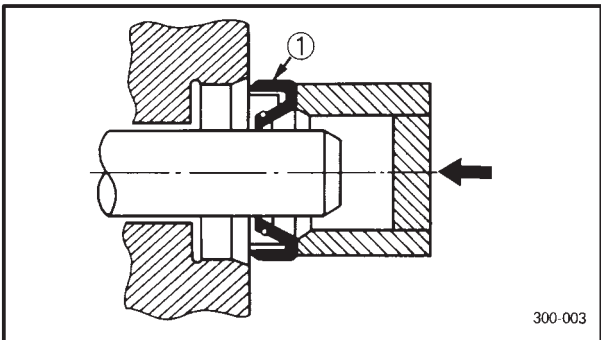

EAS00024


## BEARINGS AND OIL SEALS

1. Install bearings and oil seals so that the manufacturer's marks or numbers are visible. When installing oil seals, lubricate the oil seal lips with a light coat of lithium soap base grease. Oil bearings liberally when installing, if appropriate.


① Oil seal

### CAUTION:

Do not spin the bearing with compressed air because this will damage the bearing surfaces.

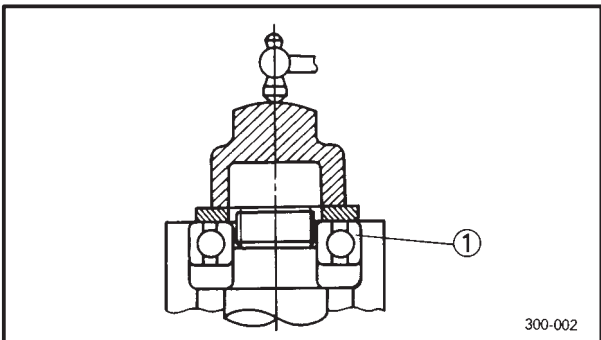

① Bearing

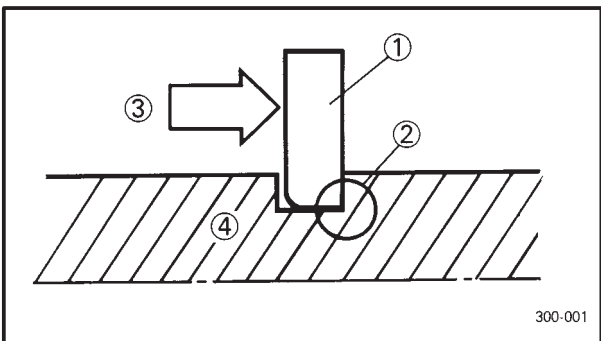

EAS00025

## CIRCLIPS

Before reassembly, check all circlips carefully and replace damaged or distorted circlips. Always replace piston pin clips after one use. When installing a circlip ①, make sure that the sharp-edged corner ② is positioned opposite the thrust ③ that the circlip receives.

④ Shaft


EAS00026

## CHECKING THE CONNECTIONS

Check the leads, couplers, and connectors for stains, rust, moisture, etc.

1. Disconnect:

- Lead
- Coupler
- Connector

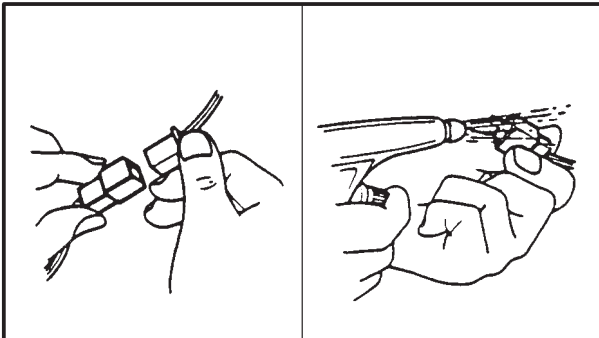


2. Check:

- Lead
- Coupler
- Connector

Moisture → Dry with an air blower.

Rust/stains → Connect and disconnect several times.

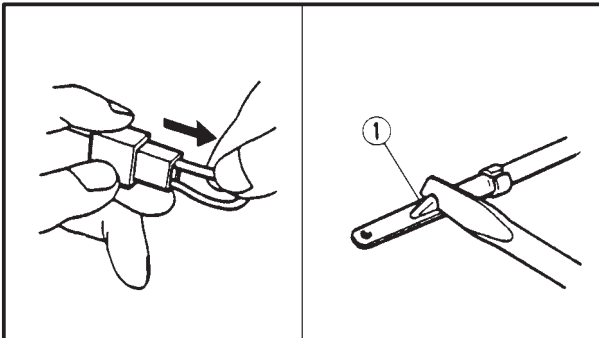

3. Check:


- All connections

Loose connection → Connect properly.

**NOTE:** \_\_\_\_\_

If the pin ① on the terminal is flattened, bend it up.

\_\_\_\_\_

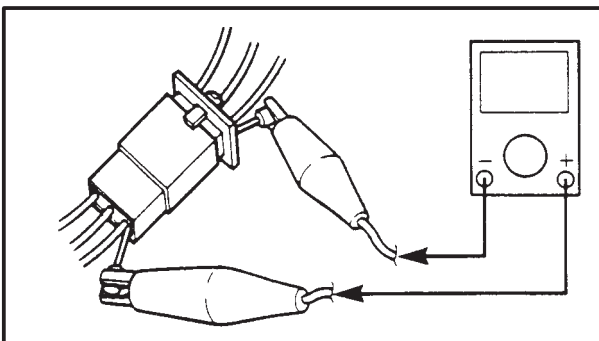

4. Connect:

- Lead
- Coupler
- Connector


**NOTE:** \_\_\_\_\_

Make sure that all connections are tight.

\_\_\_\_\_

5. Check:

- Continuity
- (with a pocket tester)

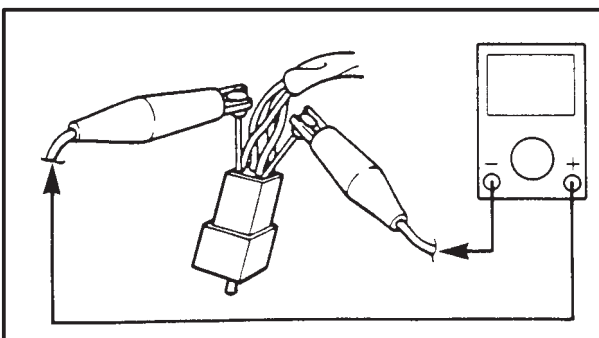

	<b>Pocket tester</b> 90890-03112
---	-------------------------------------

**NOTE:** \_\_\_\_\_









- If there is no continuity, clean the terminals.
  - When checking the wire harness, perform steps (1) to (3).
  - As a quick remedy, use a contact revitalizer available at most part stores.
- \_\_\_\_\_

EB104000

## SPECIAL TOOLS









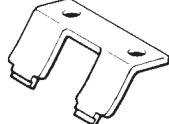
The following special tools are necessary for complete and accurate tune-up and assembly. Use only the appropriate special tools as this will help prevent damage caused by the use of inappropriate tools or improvised techniques.

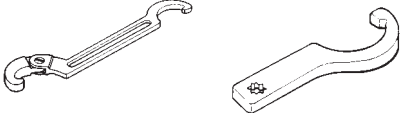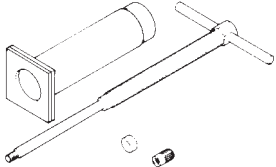When placing an order, refer to the list provided below to avoid any mistakes.

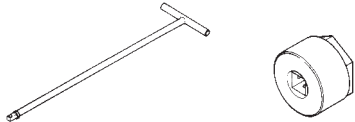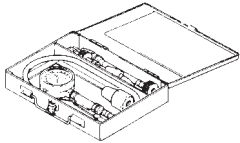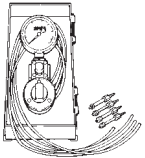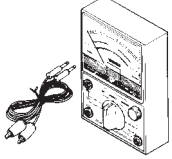Tool No.	Tool name/Function	Illustration
90890-01268 90890-01403	Exhaust & steering nut wrench Ring nut wrench These tools are used to loosen and tighten the steering ring nut.	
90890-01304	Piston pin puller  This tool is used to remove the piston pins.	
90890-01312	Fuel level gauge  This tool is used to measure the fuel level in the float chamber.	
90890-01367 90890-01374	Fork seal driver weight Fork seal driver attachment (ø43) These tools are used when installing the fork seal.	
90890-01326 90890-01327	T-handle Damper rod holder These tools are used to hold the damper rod assembly when loosening or tightening the damper rod assembly bolt.	
90890-03081 90890-04082	Compression gauge Adapter  These tools are used to measure engine compression.	
90890-03094	Vacuum gauge  This guide is used to synchronize the carburetors.	
90890-03112	Pocket tester  This tool is used to check the electrical system.	

## SPECIAL TOOLS

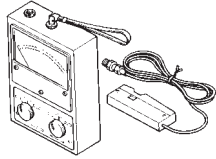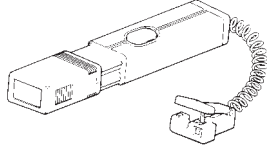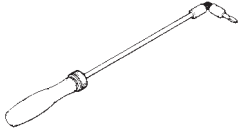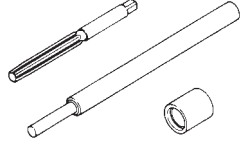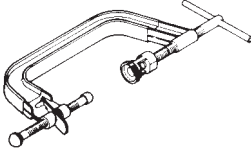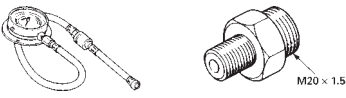
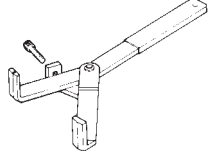



Tool No.	Tool name/Function	Illustration
90890-03113	<p>Engine tachometer</p> <p>This tool is used to check engine speed.</p>	
90890-03141	<p>Timing light</p> <p>This tool is used to check the ignition timing.</p>	
90890-03158	<p>Carburetor angle driver</p> <p>This tool is used to turn the pilot screw when adjusting the engine idling speed.</p>	
90890-04016	<p>Valve guide reamer, remover and installer (5.5 mm)</p> <p>These tools are used to rebore, remove and install the valve guide.</p>	
90890-04019	<p>Valve spring compressor</p> <p>This tool is used to remove or install the valve assemblies.</p>	
90890-03153 90890-03124	<p>Oil pressure gauge</p> <p>Oil pressure adaptor B</p> <p>These tools are used to measure the engine oil pressure.</p>	
90890-04086	<p>Clutch holding tool</p> <p>This tool is used to hold the clutch boss when removing or installing the clutch boss nut.</p>	
90890-04101	<p>Valve lapper</p> <p>This tool is used for removing and installing the valve lifter and for lapping the valve.</p>	
90890-04110	<p>Tappet adjusting tool</p> <p>This tool is necessary to replace valve adjusting pads.</p>	

## SPECIAL TOOLS

**GEN  
INFO**

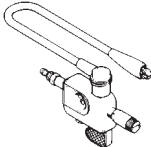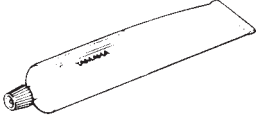

Tool No.	Tool name/Function	Illustration
90890-06754	Ignition checker  This tool is used to check the ignition system components.	 A technical drawing of an ignition checker tool, which consists of a long, thin metal rod with a hook-like end and a specialized probe tip.
90890-85505	Yamaha bond No. 1215  This bond is used to seal two mating surfaces (e.g., crankcase mating surfaces).	 A technical drawing of a tube of Yamaha bond No. 1215, showing its cylindrical shape and a small nozzle at one end.

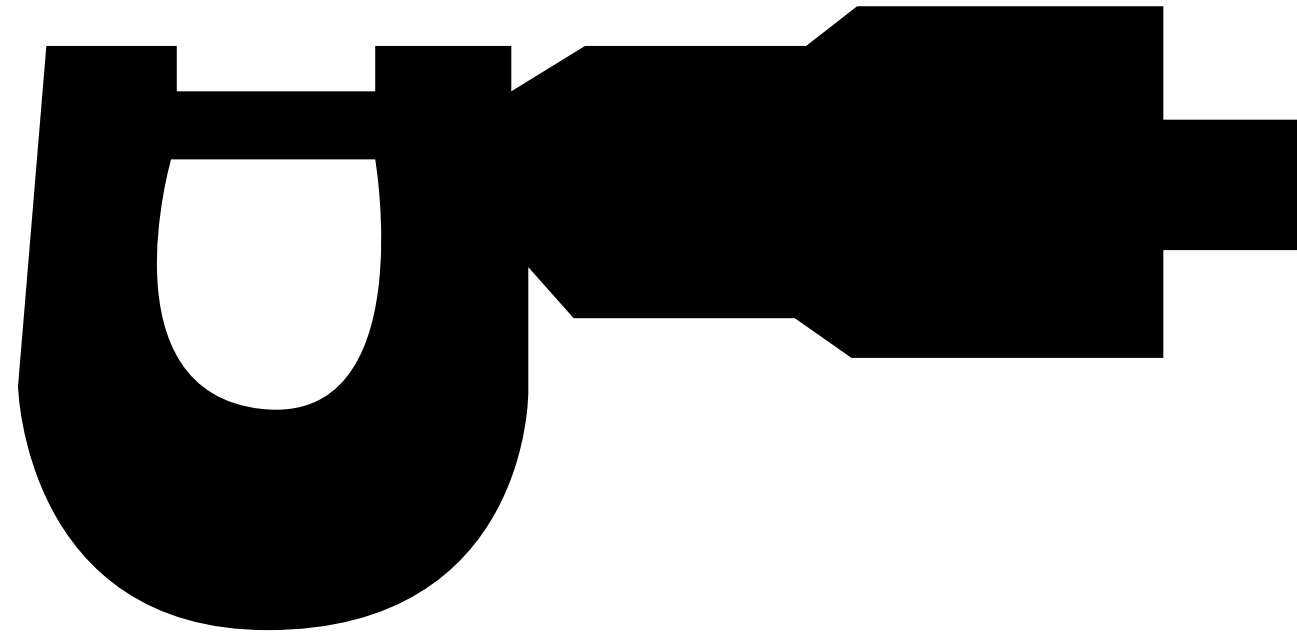

**SPEC**

**2**

---

## **CHAPTER 2. SPECIFICATIONS**

<b>GENERAL SPECIFICATIONS</b> .....	2-1
<b>MAINTENANCE SPECIFICATIONS</b> .....	2-4
ENGINE .....	2-4
CHASSIS .....	2-14
ELECTRICAL .....	2-18
<b>CONVERSION TABLE</b> .....	2-20
<b>GENERAL TIGHTENING TORQUES</b> .....	2-20
<b>LUBRICATION POINT AND GRADE OF LUBRICANT</b> .....	2-21
ENGINE .....	2-21
CHASSIS .....	2-22
<b>LUBRICATION DIAGRAMS</b> .....	2-23
<b>CABLE ROUTING</b> .....	2-26





SPECIFICATIONS

GENERAL SPECIFICATIONS

Model	XJR1300(L)
Model code:	5EA2/5EA3/5EA4
Dimensions:	
Overall length	2175 mm (GB) (D) (NL) (B) (F) (E) (P) (I) (GR) (SF) (AUS)
Overall width	2250 mm (N) (SF) (G) (A)
Overall height	775 mm
Seat height	1115 mm
Wheelbase	775 mm
Minimum ground clearance	1500 mm
Minimum turning radius	120 mm
	2800 mm
Basic weight:	
With oil and full fuel tank	253 kg
Engine:	
Engine type	Air-cooled 4-stroke, DOHC
Cylinder arrangement	Forward-inclined parallel 4-cylinder
Displacement	1250 cm <sup>3</sup>
Bore × stroke	79.0 × 63.8 mm
Compression ratio	9.7: 1
Compression pressure (STD)	1050 kPa (10.5 kg/cm <sup>2</sup> , 10.5 bar) at 400 r/min
Starting system	Electric starter
Lubrication system:	Wet sump
Oil type or grade:	SE or higher grade
Engine oil <p style="text-align: center;">Temp. °C</p> <p style="text-align: center;">-20 -10 0 10 20 30 40</p> <p style="text-align: center;">11750703</p>	
Engine oil	
Periodic oil change	3.0 L
With oil filter replacement	3.35 L
Total amount	4.2 L
Oil cooler capacity (including all routes)	0.2 L
Air filter:	Dry type element
Fuel:	
Type	Regular unleaded gasoline
Fuel tank capacity	21 L
Fuel reserve amount	4.5 L

## GENERAL SPECIFICATIONS

**SPEC**


Model	XJR1300(L)
<b>Carburetor:</b> Type/quantity Manufacturer	BS36/4 MIKUNI
<b>Spark plug:</b> Type × quantity Manufacturer Spark plug gap	DPR8EA-9/X24EPR-U9 × 4 NGK/DENSO 0.8 ~ 0.9 mm
<b>Clutch type:</b>	Wet, multiple-disc
<b>Transmission:</b> Primary reduction system Primary reduction ratio Secondary reduction system Secondary reduction ratio Transmission type Operation Gear ratio   1st 2nd 3rd 4th 5th	Spur gear 98/56 (1.750) Chain drive 38/17 (2.235) Constant mesh 5-speed Left foot operation 40/14 (2.857) 36/18 (2.000) 33/21 (1.571) 31/24 (1.292) 29/26 (1.115)
<b>Chassis:</b> Frame type Caster angle Trail	Double cradle 25.5° 100 mm
<b>Tire:</b> Type Size            front rear Manufacturer front rear Type            front rear	Tubeless 120/70ZR17 (58W) 180/55ZR17 (73W) MICHELIN/DUNLOP/BRIDGESTONE MICHELIN/DUNLOP/BRIDGESTONE MACADAM 90X/D207F/BT57F MACADAM 90X/D207/BT57R
<b>Tire pressure (cold tire):</b> Maximum load-except motorcycle Loading condition A * front rear Loading condition B * front rear High-speed riding front rear	207 kg 0 ~ 90 kg 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar) 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar) 90 ~ 207 kg 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar) 290 kPa (2.9 kg/cm <sup>2</sup> , 2.9 bar) 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar) 290 kPa (2.9 kg/cm <sup>2</sup> , 2.9 bar)

\*Load is the total weight of cargo, rider, passenger, and accessories.

## GENERAL SPECIFICATIONS

**SPEC**










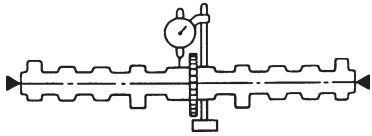




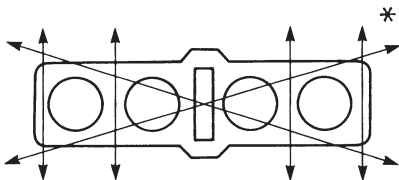


Model	XJR1300(L)
<b>Brake:</b> Front brake      type operation Rear brake      type operation	Dual disc brake Right hand operation Single disc brake Right foot operation
<b>Suspension:</b> Front suspension Rear suspension	Telescopic fork Swingarm
<b>Shock absorber:</b> Front shock absorber Rear shock absorber	Coil spring/Oil Damper Coil spring/Gas-oil damper
<b>Wheel travel:</b> Front wheel travel Rear wheel travel	130 mm 110 mm
<b>Electrical:</b> Ignition system Generator system Battery type Battery capacity	T.C.I. (Digital) A.C. generator GT14B-4 12 V 12AH
<b>Headlight type:</b>	Halogen bulb
<b>Bulb wattage × quantity:</b> Headlight Auxiliary light Tail/brake light Flasher light Meter light Neutral indicator light High beam indicator light Oil level indicator light Turn indicator light	12 V 60 W/55 W × 1 12 V 4 W × 1 12 V 5 W/21 W × 2 12 V 21 W × 4 12 V 1.7 W × 4 12 V 1.7 W × 1 12 V 3.4 W × 1 12 V 1.7 W × 1 12 V 1.7 W × 2

# MAINTENANCE SPECIFICATIONS

**SPEC**



## MAINTENANCE SPECIFICATIONS ENGINE

Model	Standard	Limit
Cylinder head: Warp limit 		0.1 mm
Cylinder: Bore size Taper limit Out of round limit Wear limit	79.00 × 79.01 mm    	 0.05 mm 0.05 mm 79.1 mm
Camshaft: Drive method Cam cap inside diameter Camshaft outside diameter Shaft-to-cap clearance Cam dimensions  Intake    "A" "B" "C" Exhaust "A" "B" "C" Camshaft runout limit 	Chain drive (Center) 25.000 × 25.021 mm 24.967 × 24.980 mm 0.020 × 0.054 mm  35.95 × 36.05 mm 28.248 × 28.348 mm 7.95 × 8.05 mm 35.95 × 36.05 mm 28.248 × 28.348 mm 7.95 × 8.05 mm 	     35.85 mm 28.15 mm  35.85 mm 28.15 mm  0.03 mm

# MAINTENANCE SPECIFICATIONS

**SPEC**












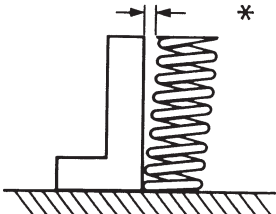














Model	Standard	Limit
<b>Cam chain:</b>		
Cam chain type/No. of links	79RH2015/156	
Cam chain adjustment method	Automatic	
<b>Valve, valve seat, valve guide:</b>		
Valve clearance (cold)	IN	
	EX	
<b>Valve dimensions:</b>		
Head Dia.	Face Width	Seat Width
"A" head diameter	"B" face width	"C" seat width
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	IN
EX	EX	EX
IN	IN	
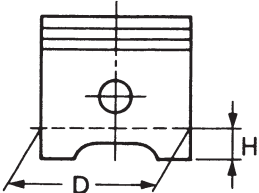
# MAINTENANCE SPECIFICATIONS

**SPEC**







Model	Standard	Limit
<b>Valve spring:</b> Inner spring Free length Set length (valve closed) Compressed pressure (installed) Tilt limit 	IN 39.65 mm EX 39.65 mm IN 32.8 mm EX 32.8 mm IN 61.7 × 72.5 N (6.29 × 7.39 kg) EX 61.7 × 72.5 N (6.29 × 7.39 kg) IN  EX 	37.5 mm 37.5 mm     2.5 /1.7 mm 2.5 /1.7 mm
Direction of winding (top view) Outer spring Free length Set length (valve closed) Compressed pressure (installed) Tilt limit Direction of winding (top view) 	IN Clockwise EX Clockwise IN 41.1 mm EX 41.1 mm IN 34.8 mm EX 34.8 mm IN 130.4 × 154.0 N (13.3 × 15.7 kg) EX 130.4 × 154.0 N (13.3 × 15.7 kg) IN  EX  IN Counterclockwise EX Counterclockwise	  39 mm 39 mm     2.5 /1.7 mm 2.5 /1.7 mm  
<b>Piston:</b> Piston to cylinder clearance Piston size "D" 	0.015 × 0.040 mm 78.970 × 78.985 mm	0.15 mm 
Measuring point "H" Piston off-set Piston off-set direction Piston pin bore inside diameter Piston pin outside diameter	2 mm 1 mm IN side 18.004 × 18.015 mm 17.991 × 18.000 mm	    

# MAINTENANCE SPECIFICATIONS

**SPEC**

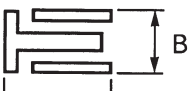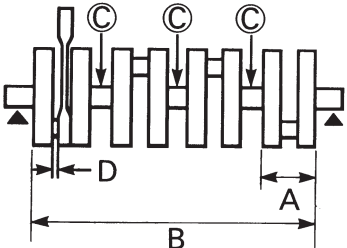

Model	Standard	Limit
<p>Piston rings: Top ring:</p>  <p>Type Dimensions (B × T) End gap (installed) Side clearance (installed)</p> <p>2nd ring:</p>  <p>Type Dimensions (B × T) End gap (installed) Side clearance (installed)</p> <p>Oil ring:</p>  <p>Dimensions (B × T) End gap (installed) Side clearance</p>	<p>Barrel 1.00 × 3.05 mm 0.20 0.35 mm 0.045 0.080 mm</p> <p>Taper 1.2 × 3.0 mm 0.35 0.50 mm 0.03 0.07 mm</p> <p>2.5 × 2.9 mm 0.2 0.5 mm 0.050 0.155 mm</p>	<p>⊗ ⊗ 0.6 mm 0.1 mm</p> <p>⊗ ⊗ 0.75 mm 0.1 mm</p> <p>⊗ ⊗ ⊗</p>
<p>Connecting rod: Oil clearance</p>	<p>0.017 0.040 mm</p>	<p>0.08 mm</p>
<p>Crankshaft:</p>  <p>Crank width "A" Assembly width "B" Runout limit "C" Big end side clearance "D" Journal oil clearance</p>	<p>62.25 63.85 mm 382.0 383.2 mm 0.02 mm 0.160 0.262 mm 0.030 0.064 mm</p>	<p>⊗ ⊗ ⊗ 0.5 mm 0.09 mm</p>





## MAINTENANCE SPECIFICATIONS

**SPEC**



Model	Standard	Limit
Lubrication system:		
Oil filter type	Paper type	∞
Oil pump type	Trochoid type	∞
Tip clearance	0.12 × 0.17 mm	0.2 mm
Housing and rotor clearance	0.03 × 0.08 mm	0.15 mm
Side clearance	0.03 × 0.08 mm	0.15 mm
Bypass valve setting pressure	180 × 220 kPa (1.8 × 2.2 kg/cm <sup>2</sup> , 1.8 × 2.2 bar)	∞
Relief valve operating pressure	480 × 580 kPa (4.8 × 5.8 kg/cm <sup>2</sup> , 4.8 × 5.8 bar)	∞
Oil pressure (hot)	80 kPa (0.8 kg/cm <sup>2</sup> , 0.8 bar) at 1000 r/min	∞
Pressure check location	MAIN GALLERY	∞

# MAINTENANCE SPECIFICATIONS

**SPEC**



## Tightening torques

Part to be tightened	Part name	Thread size	Q'ty	Tightening torque		Remarks
				Nm	m(kg)	
Camshaft cap	Bolt	M6 × 1.0	18	12	1.2	
Oil gallery bolt	Screw	M6 × 1.0	1	7	0.7	
Spark plug	–	M12 × 1.25	4	18	1.8	
Cylinder head	Cap nut	M10 × 1.25	12	35	3.5	
Cylinder head cover	Bolt	M6 × 1.0	8	10	1.0	
Cylinder	Stud bolt	M8 × 1.25	1	8	0.8	
Cylinder	Nut	M8 × 1.25	3	20	2.0	
Cylinder	Nut	M6 × 1.0	6	10	1.0	
Connecting rod	Nut	M8 × 0.75	8	36	3.6	
Cam sprocket	Bolt	M7 × 1.0	4	20	2.0	
Timing chain tensioner	Bolt	M6 × 1.0	2	10	1.0	
Timing chain tensioner cap bolt	Bolt	M11 × 1.0	1	20	2.0	
Chain guide (upper)	Bolt	M6 × 1.0	4	10	1.0	
Chain guide (intake)	Plug	M10 × 1.25	1	10	1.0	
Oil pump	Screw	M6 × 1.0	2	10	1.0	
Oil pump	Bolt	M6 × 1.0	3	10	1.0	
Oil strainer housing	Bolt	M6 × 1.0	2	10	1.0	
Oil filter case	Union bolt	M20 × 1.5	1	15	1.5	
Oil pan	Bolt	M6 × 1.0	17	10	1.0	
Drain bolt (engine oil)	Plug	M14 × 1.5	1	43	4.3	
Oil gallery blind plug	Plug	M16 × 1.5	1	8	0.8	
Drain filter	Screw	M5 × 0.8	1	7	0.7	
Oil delivery pipe (oil pan)	Bolt	M6 × 1.0	4	10	1.0	
Oil delivery pipe (oil cooler)	Bolt	M6 × 1.0	4	10	1.0	
Oil cooler	Bolt	M6 × 1.0	2	10	1.0	
Oil cooler cover	Bolt	M6 × 1.0	4	8	0.8	
Oil delivery pipe (clamp)	Bolt	M6 × 1.0	1	10	1.0	
Intake manifold	Bolt	M6 × 1.0	8	10	1.0	
Air filter case cap	Bolt	M5 × 0.8	4	5	0.5	
Air filter case	Bolt	M6 × 1.0	3	7	0.7	
Exhaust pipe	Nut	M8 × 1.25	8	25	2.5	
Muffler and stay	Bolt	M8 × 1.25	2	20	2.0	
Exhaust chamber	Bolt	M10 × 1.25	1	25	2.5	
Exhaust pipe and exhaust chamber	Screw	M8 × 1.25	4	20	2.0	
Exhaust chamber and muffler	Bolt	M8 × 1.25	2	20	2.0	
Exhaust pipe blind plug (CO test)	Bolt	M6 × 1.0	4	10	1.0	
Bearing holder (main axle)	Screw	M6 × 1.0	3	12	1.2	
Timing plate cover	Bolt	M6 × 1.0	4	7	0.7	
Crankcase cover (right)	Screw	M5 × 0.8	2	4	0.4	
Clutch cover	Bolt	M6 × 1.0	11	10	1.0	
Drive sprocket cover	Bolt	M6 × 1.0	3	10	1.0	
Clutch release cylinder	Bolt	M6 × 1.0	3	10	1.0	
Crankcase	Bolt	M6 × 1.0	16	12	1.2	

## MAINTENANCE SPECIFICATIONS


**SPEC**




Part to be tightened	Part name	Thread size	Q'ty	Tightening torque		Remarks
				Nm	m(kg)	
Crankcase	Bolt	M8 × 1.25	17	24	2.4	
Crankcase	Bolt	M10 × 1.25	5	35	3.5	
Main gallery	Plug	M20 × 1.5	3	12	1.2	
Oil baffle plate	Bolt	M5 × 0.8	3	4	0.4	
Stopper plate	Bolt	M6 × 1.0	1	10	1.0	
Bearing housing	Screw	M6 × 1.0	3	10	1.0	
HY-VO chain guide	Bolt	M6 × 1.0	2	10	1.0	
Clutch boss	Nut	M20 × 1.5	1	70	7.0	
Clutch pressure plate	Bolt	M6 × 1.0	6	8	0.8	
Push lever comp.	Bolt	M6 × 1.0	2	10	1.0	
Drive sprocket	Nut	M22 × 1.5	1	85	8.5	
Shift shaft stopper	Screw	M8 × 1.25	1	22	2.2	
Stopper plate (Starter clutch idle gear shaft)	Screw	M6 × 1.0	2	7	0.7	
Stopper lever	Bolt	M6 × 1.0	1	10	1.0	
Side plate	Screw	M5 × 0.8	1	4	0.4	
Shift arm	Bolt	M6 × 1.0	1	10	1.0	
Shift lod	Nut	M6 × 1.0	2	8	0.8	
A.C. generator	Bolt	M8 × 1.25	2	25	2.5	
Oil level sensor	Bolt	M6 × 1.0	2	10	1.0	
Rotor	Bolt	M10 × 1.25	1	45	4.5	




Tightening sequence  
Cylinder head

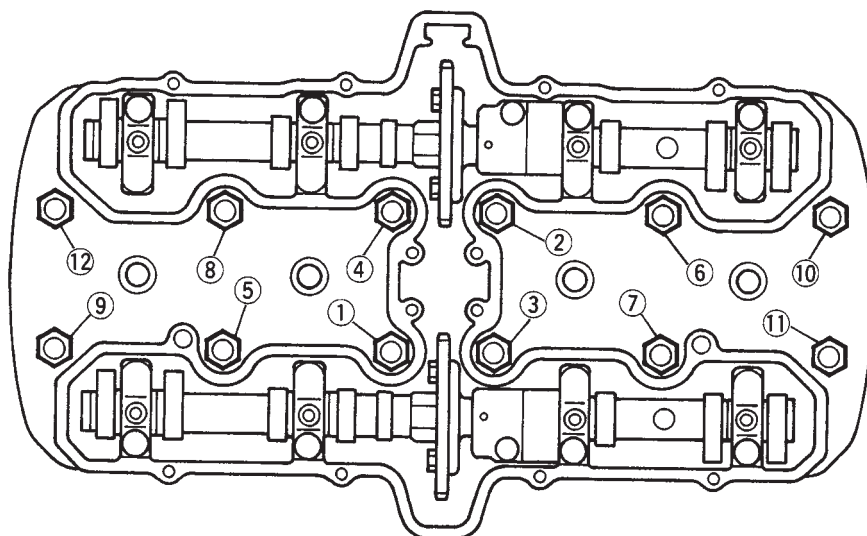

Crankcase

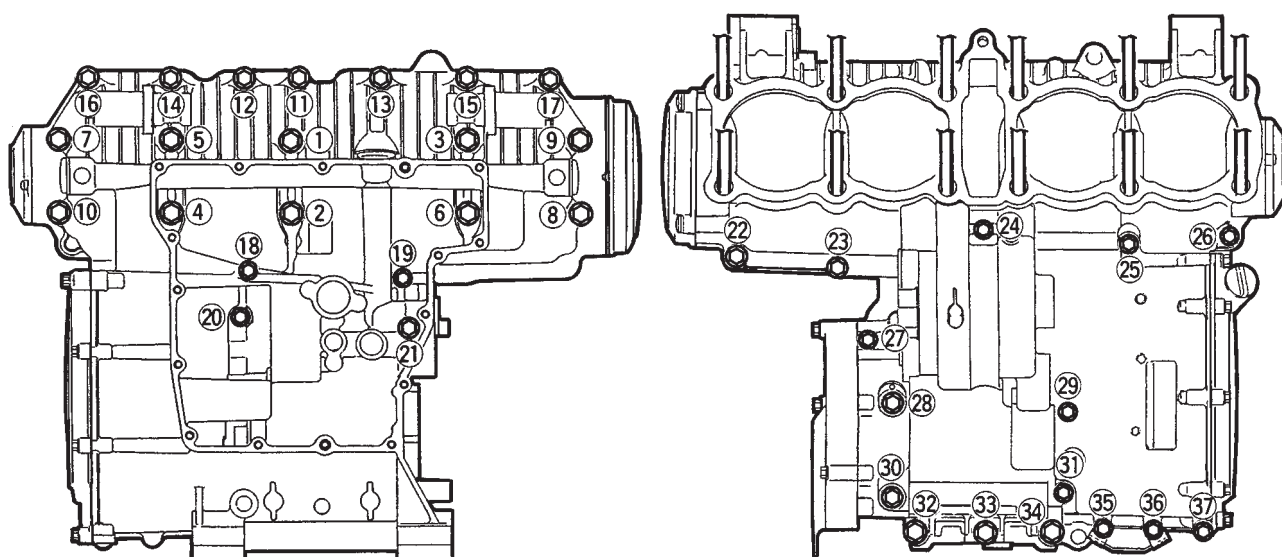

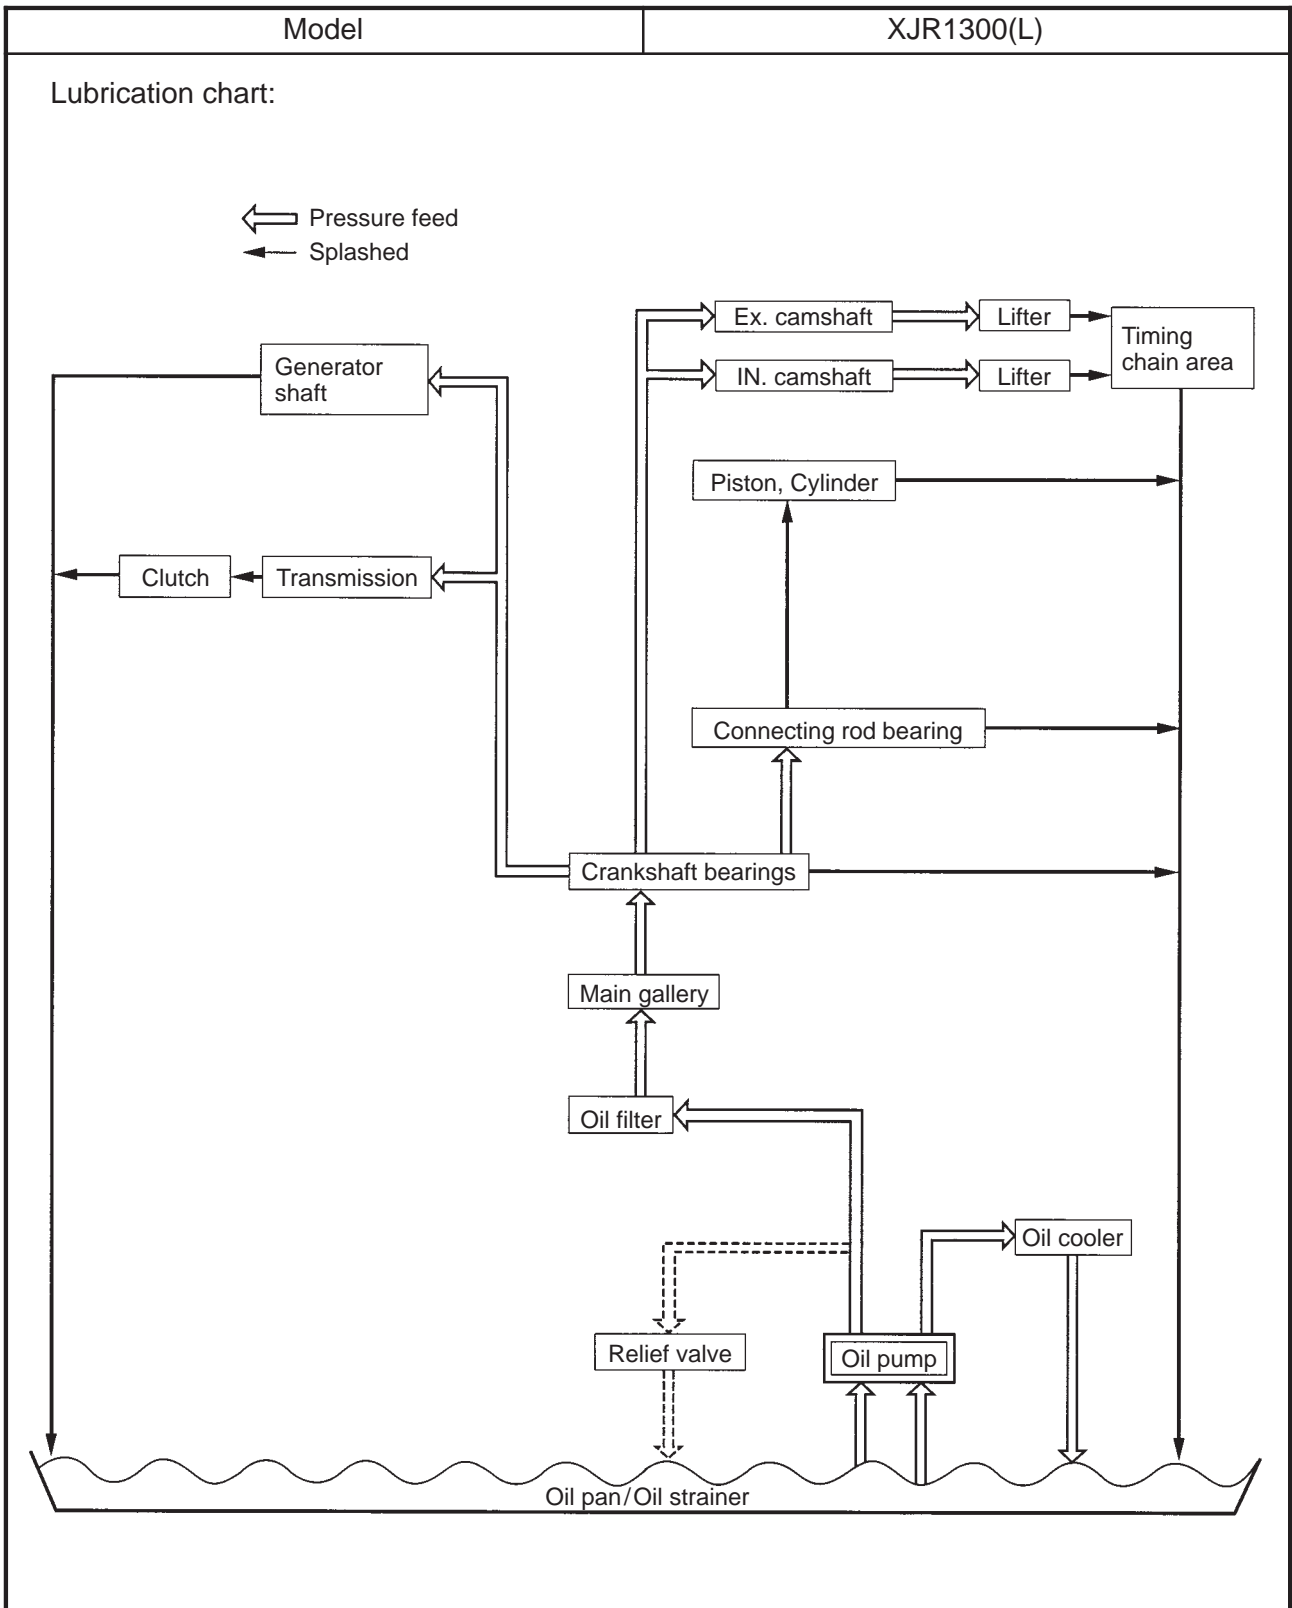

# MAINTENANCE SPECIFICATIONS

**SPEC**






## CHASSIS

Model	Standard	Limit
Steering system: Steering bearing type	Angular bearing	∞
Front suspension: Front fork travel	130 mm	∞
Fork spring free length	407.3 mm	395 mm
Fitting length	363.3 mm	∞
Collar length	150 mm	∞
Spring rate (K1)	4.9 N/mm (0.5 kg/mm)	∞
(K2)	8.8 N/mm (0.9 kg/mm)	∞
Stroke (K1)	0 83 mm	∞
(K2)	83 130 mm	∞
Optional spring	No	∞
Oil capacity	538 cm <sup>3</sup>	∞
Oil level	137 mm	∞
Oil grade	Fork oil 10W or equivalent	∞
Rear suspension: Shock absorber travel	88 mm	∞
Spring free length	210 mm	206 mm
Fitting length	190 mm	∞
Spring rate (K1)	20.6 N/mm (2.1 kg/mm)	∞
(K2)	31.4 N/mm (3.2 kg/mm)	∞
Stroke (K1)	0 50 mm	∞
(K2)	50 88 mm	∞
Front wheel: Type	Cast wheel	∞
Rim size	17 × MT3.50	∞
Rim material	Aluminum	∞
Rim runout limit radial	∞	1 mm
lateral	∞	0.5 mm
Rear wheel: Type	Cast wheel	∞
Rim size	17 × MT5.50	∞
Rim material	Aluminum	∞
Rim runout limit radial	∞	1 mm
lateral	∞	0.5 mm
Drive chain: Type/manufacturer	50ZVM/DAIDO	∞
No. of links	110	∞
Chain free play	20 30 mm	∞

# MAINTENANCE SPECIFICATIONS

**SPEC**

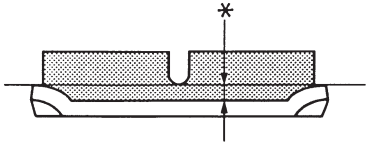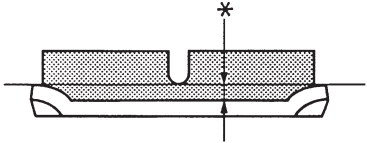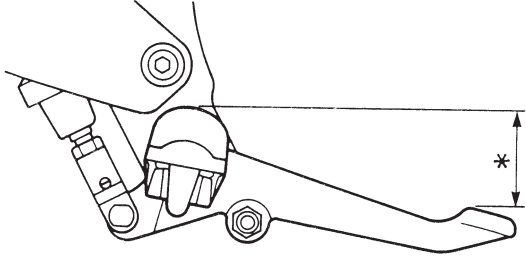

Model	Standard	Limit
<p>Front disc brake:</p> <p>Type</p> <p>Disc outside diameter × thickness</p> <p>Disc deflection limit</p> <p>Pad thickness</p> 	<p>Dual</p> <p>298 × 5 mm</p> <p>5.5 mm</p>	<p>⊗</p> <p>⊗</p> <p>0.2 mm</p> <p>0.5 mm</p>
<p>Master cylinder inside diameter</p> <p>Caliper cylinder inside diameter</p> <p>Brake fluid type</p>	<p>14 mm</p> <p>30.2 mm and 27 mm</p> <p>DOT #4</p>	<p>⊗</p> <p>⊗</p> <p>⊗</p>
<p>Rear disc brake:</p> <p>Type</p> <p>Disc outside diameter × thickness</p> <p>Disc deflection limit</p> <p>Pad thickness</p> 	<p>Single</p> <p>267 × 5 mm</p> <p>5.5 mm</p>	<p>⊗</p> <p>⊗</p> <p>0.15 mm</p> <p>0.5 mm</p>
<p>Master cylinder inside diameter</p> <p>Caliper cylinder inside diameter</p> <p>Brake fluid type</p>	<p>12.7 mm</p> <p>42.85 mm</p> <p>DOT #4</p>	<p>⊗</p> <p>⊗</p> <p>⊗</p>
<p>Brake lever &amp; brake pedal:</p> <p>Brake pedal position</p> 	<p>45 mm</p>	<p>⊗</p>
<p>Throttle grip free play</p>	<p>3 5 mm</p>	<p>⊗</p>





## MAINTENANCE SPECIFICATIONS

**SPEC**


Part to be tightened	Part name	Thread size	Q'ty	Tightening torque		Remarks
				Nm	mⒻg	
Hook	Screw	M6 × 1.0	2	7	0.7	
Helmet holder	Bolt	M6 × 1.0	2	13	1.3	
Tail light bracket	Bolt	M8 × 1.25	4	30	3.0	
Side stand	Bolt	M10 × 1.25	1	40	4.0	
Side stand	Nut	M10 × 1.25	1	40	4.0	
Side stand switch	Screw	M5 × 0.8	2	4	0.4	
Footrest bracket	Bolt	M8 × 1.25	4	28	2.8	
Rear footrest bracket	Bolt	M8 × 1.25	4	28	2.8	
Footrest and footrest bracket	Bolt	M10 × 1.25	2	55	5.5	
Rear brake reservoir tank	Screw	M6 × 1.0	1	5	0.5	
Rear master cylinder and bracket	Bolt	M8 × 1.25	2	23	2.3	
Center stand	Nut and Bolt	M10 × 1.25	2	41	4.1	
Front wheel axle	–	M16 × 1.5	1	73	7.3	
Front wheel axle pinch bolt	Bolt	M8 × 1.0	1	19	1.9	
Front brake caliper and front fork	Bolt	M10 × 1.25	4	40	4.0	
Front brake disk and hub	Bolt	M8 × 1.25	12	20	2.0	
Front brake caliper and bleed screw	–	M8 × 1.25	2	6	0.6	
Front brake hose	Union bolt	M10 × 1.25	2	30	3.0	
Tensionbar and swingarm	Nut and bolt	M8 × 1.25	2	23	2.3	
Driven sprocket and hub	Nut	M8 × 1.25	6	60	6.0	
Chain puller	Nut	M8 × 1.25	2	16	1.6	
Rear brake caliper and caliper bracket	Bolt	M10 × 1.25	2	40	4.0	
Rear wheel axle	Nut	M18 × 1.5	1	150	15.0	
Rear brake hose	Union bolt	M10 × 1.25	2	30	3.0	
Rear brake caliper and bleed screw	–	M8 × 1.25	1	6	0.6	
Rear brake disc and hub	Bolt	M8 × 1.25	6	20	2.0	

**NOTE:**

1. First, tighten the ring nut approximately 52 Nm (5.2 mⒻg) by using the torque wrench, then loosen the ring nut one turn.
2. Retighten the ring nut to specification.

# MAINTENANCE SPECIFICATIONS

**SPEC**


## ELECTRICAL

Model	Standard	Limit
Voltage:	12 V	∞
Ignition system: Ignition timing (B.T.D.C.) Advanced timing (B.T.D.C.) Advancer type	5 /1050 r/min 50 /5000 r/min TPS & Electrical type	∞ ∞ ∞
T.C.I.: Pickup coil resistance/color T.C.I. unit model/manufacture	248 × 372 Ω/W/R-W/G 5EA20/YAMAHA	∞ ∞
Ignition coil: Model/manufacture Minimum spark gap Primary winding resistance Secondary winding resistance	83R/YAMAHA 6 mm 1.9 × 2.9 Ω 9.5 × 14.3 kΩ	∞ ∞ ∞ ∞
Spark plug cap: Type Resistance	Resin type 10 kΩ	∞ ∞
Charging system: Type Model/manufacture Normal output Rotor coil resistance Stator coil resistance Brush overall length Spring force	A.C. generator B3G-B/DENSO 13.5 V 28 A/3000 r/min 2.8 × 3.0 Ω 0.19 × 0.21 Ω 13.7 mm 5.10 × 5.69 N (0.52 × 0.58 kg)	∞ ∞ ∞ ∞ ∞ 4.7 mm ∞
Voltage regulator: Type Model/manufacture No load regulated voltage	Semi-conductor, field control type B3G-B/DENSO 14.2 × 14.8 V	∞ ∞ ∞
Electric starter system: Type Starter motor: Model/manufacture Output Brush overall length Spring force Commutator diameter	Constant mesh type  SM-13/MITSUBA 0.65 kW 10 mm 7.65 × 10.01 N (0.780 × 1.021 kg) 28 mm	∞  ∞ ∞ 5 mm ∞ 27 mm

## MAINTENANCE SPECIFICATIONS

**SPEC**



Model	Standard	Limit
Mica undercut	0.7 mm	∞
Starter relay:		
Model/manufacture	MS5E-491/JIDECO	∞
Amperage rating	100 A	∞
Coil winding resistance	4.2    4.6 Ω	∞
Horn:		
Type	Plane type	∞
Quantity	2 pcs	∞
Model/manufacture	YF12/NIKKO	∞
Maximum amperage	3 A	∞
Flasher relay:		
Type	Full transistor type	∞
Model/manufacture	FE246BH/DENSO	∞
Self cancelling device	No	∞
Flasher frequency	75    95 cyl/min	∞
Oil level switch:		
Model/manufacture	5G2/DENSO	∞
Fuel gauge:		
Model/manufacture	4 KG/NIPPON SEIKI	∞
Sender unit resistance	full    4    10 Ω	∞
	empty    90    100 Ω	∞
Starting circuit cut-off relay:		
Model/manufacture	G8R-30Y-J/OMRON	∞
Coil winding resistance	162    198 Ω	∞
Diode	Yes	∞
Oil level switch relay:		
Model/manufacture	G8D-117Y-2/OMRON	∞
Circuit breaker:		
Type	Fuse	∞
Amperage for individual circuit × Q'ty		
MAIN	30 A × 1	∞
HEAD LIGHT	15 A × 1	∞
SIGNAL	15 A × 1	∞
IGNITION	7.5 A × 1	∞
Reserve	30 A × 1	∞
	15 A × 1	∞
	7.5 A × 1	∞

# CONVERSION TABLE/ GENERAL TORQUE SPECIFICATIONS

**SPEC**



EAS00028

## CONVERSION TABLE

All specification data in this manual are listed in SI and METRIC UNITS.

Use this table to convert METRIC unit data to IMPERIAL unit data.

Ex.

METRIC		MULTIPLIER	=	IMP
** mm	x	0.03937	=	** in
2 mm	x	0.03937	=	0.08 in


## CONVERSION TABLE

METRIC TO IMP			
	Known	Multiplier	Result
Torque	mⒻg	7.233	ftⒻb
	mⒻg	86.794	inⒻb
	cmⒻg	0.0723	ftⒻb
	cmⒻg	0.8679	inⒻb
Weight	kg	2.205	lb
	g	0.03527	oz
Distance	km/hr	0.6214	mph
	km	0.6214	mi
	m	3.281	ft
	m	1.094	yd
	cm	0.3937	in
	mm	0.03937	in
Volume/ Capacity	cc (cm <sup>3</sup> )	0.03527	oz (IMP liq.)
	cc (cm <sup>3</sup> )	0.06102	cuⒻn
	lt (liter)	0.8799	qt (IMP liq.)
	lt (liter)	0.2199	gal (IMP liq.)
Miscella- neous	kg/mm	55.997	lb/in
	kg/cm <sup>2</sup>	14.2234	psi (lb/in <sup>2</sup> )
	Centigrade	9/5 ( C ) + 32	Fahrenheit ( F )

EAS00029

## GENERAL TIGHTENING TORQUES

This chart specifies tightening torques for standard fasteners with a standard ISO thread pitch. Tightening torque specifications for special components or assemblies are provided for each chapter of this manual. To avoid warpage, tighten multi-fastener assemblies in a criss-cross pattern and progressive stages until the specified tightening torque is reached. Unless otherwise specified, tightening torque specifications require clean, dry threads. Components should be at room temperature.

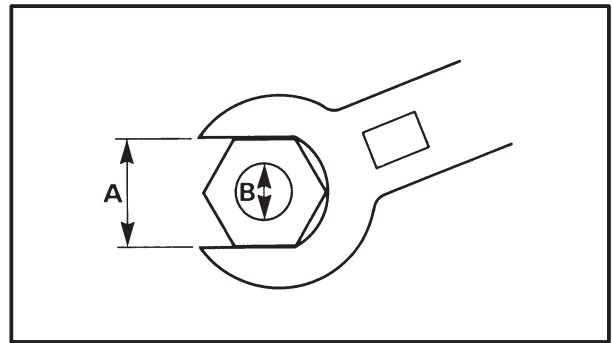

A: Distance across flats

B: Outside thread diameter

A (Nut)	B (Bolt)	General specifications torques	
		Nm	mⒻg
10 mm	6 mm	6	0.6
12 mm	8 mm	15	1.5
14 mm	10 mm	30	3.0
17 mm	12 mm	55	5.5
19 mm	14 mm	85	8.5
22 mm	16 mm	130	13.0

## LUBRICATION POINT AND GRADE OF LUBRICANT

**SPEC**



### LUBRICATION POINT AND GRADE OF LUBRICANT ENGINE

Lubrication Point	Symbol
Oil seal lips	
O-ring	
Bearing	
Piston surface	
Piston pin	
Crankshaft pin	
Crankshaft journal/big end	
Connecting rod bolt/nut	
Camshaft cam lobe/journal	
Valve stem (IN, EX)	
Valve stem end (IN, EX)	
Valve lifter	
Oil pump rotor (inner/outer), housing	
Oil strainer assembly	
Starter idle gear inner surface	
Starter wheel gear inner surface	
Starter clutch (outer/roller)	
Crankcase cover (push rod hole)	
Primary drive gear/damper	
Transmission gear (wheel/pinion)	
Shift cam	
Shift fork/guide bar	
Shift shaft assembly	
Crankcase mating surfaces	Yamaha bond No. 1215
Blind plug and oil seal (crankcase main gallery)	Yamaha bond No. 1215

# LUBRICATION POINT AND GRADE OF LUBRICANT

**SPEC**




## CHASSIS

Lubrication Point	Symbol
Steering bearing (upper/lower) and bearing cover lip	
Front wheel oil seal (left/right)	
Rear wheel oil seal (left/right)	
Clutch hub fitting area	
Rear brake pedal shaft	
Shift pedal	
Centerstand sliding surface	
Sidestand sliding surface	
Tube guide (throttle grip) inner surface	
Brake lever bolt, sliding surface	
Clutch lever bolt, sliding surface	
Rear footrest pivot	
Swingarm pivot bearing	
Swingarm pivot shaft outer surface	
Swingarm thrust cover lip	




LUBRICATION DIAGRAMS

- ① Camshaft (intake)
- ② Camshaft (exhaust)
- ③ Main gallery
- ④ Oil strainer
- ⑤ Oil pump
- ⑥ Main axle
- ⑦ Crankshaft

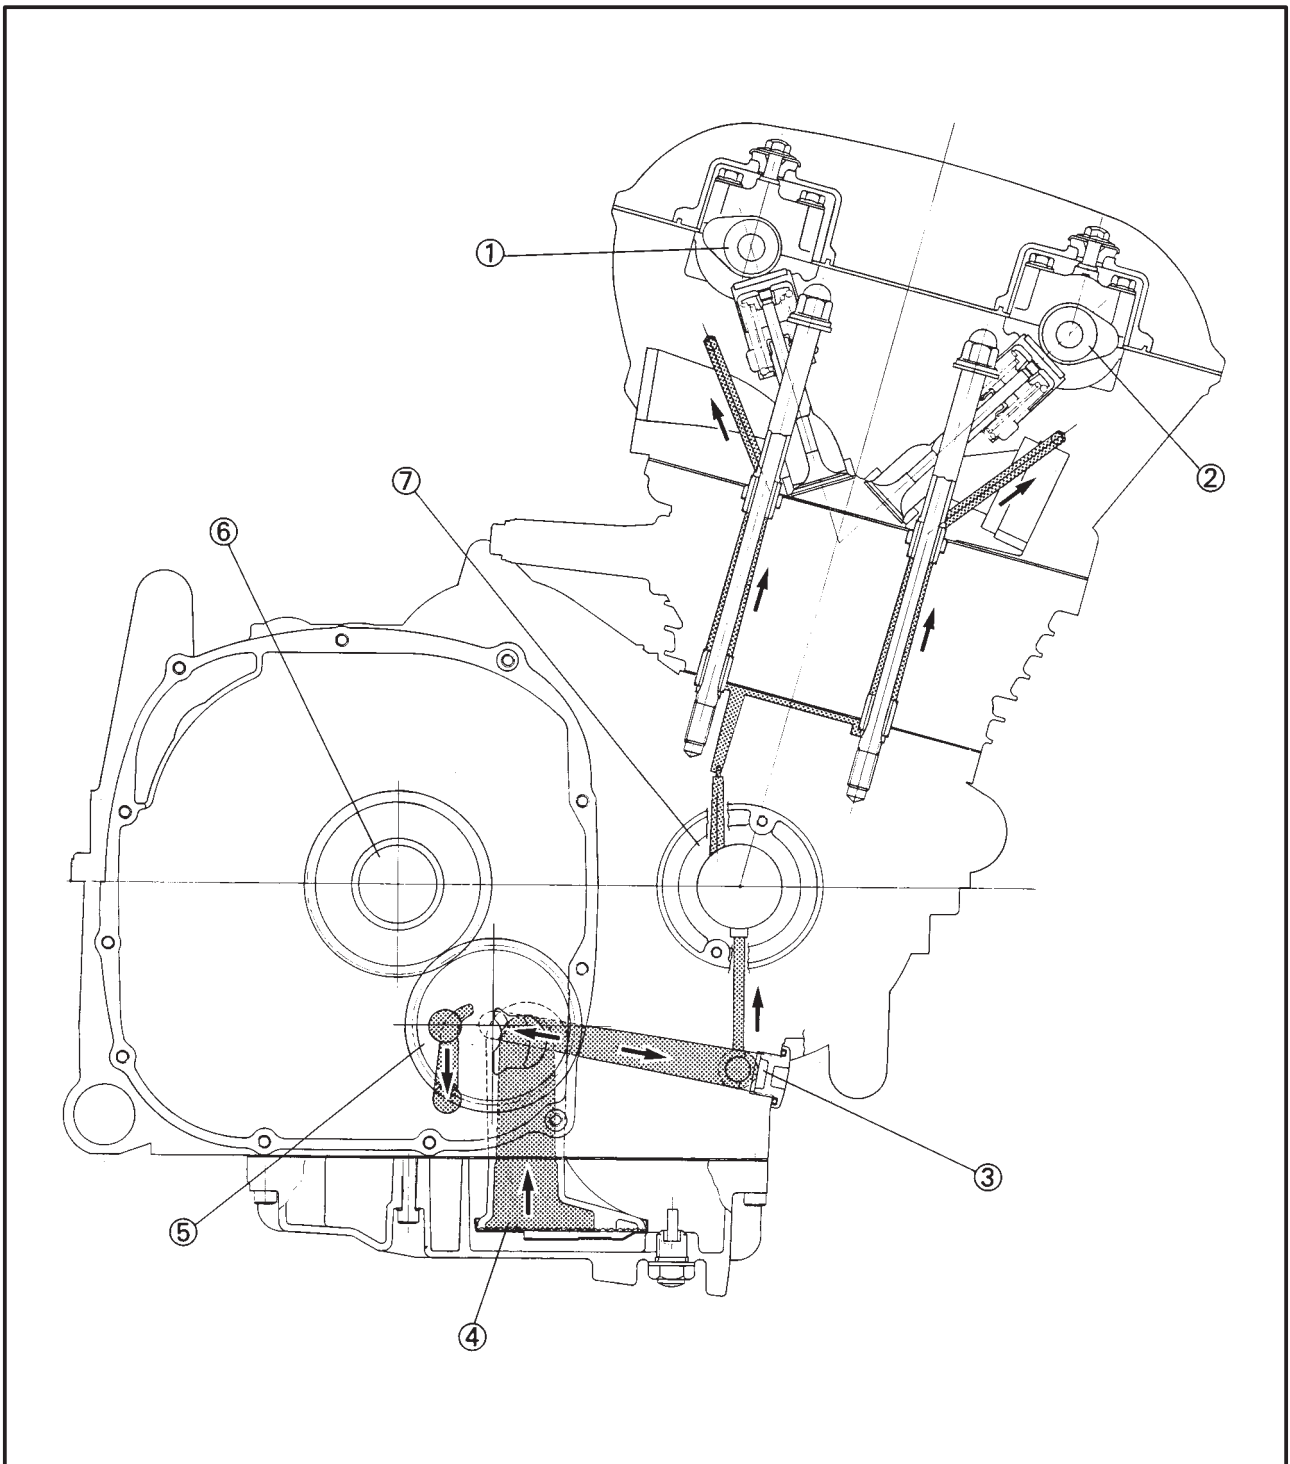




- ① Oil cooler
- ② Starter clutch
- ③ Main axle
- ④ Drive axle
- ⑤ Oil pump
- ⑥ Oil pan
- ⑦ Relief valve
- ⑧ Main gallery

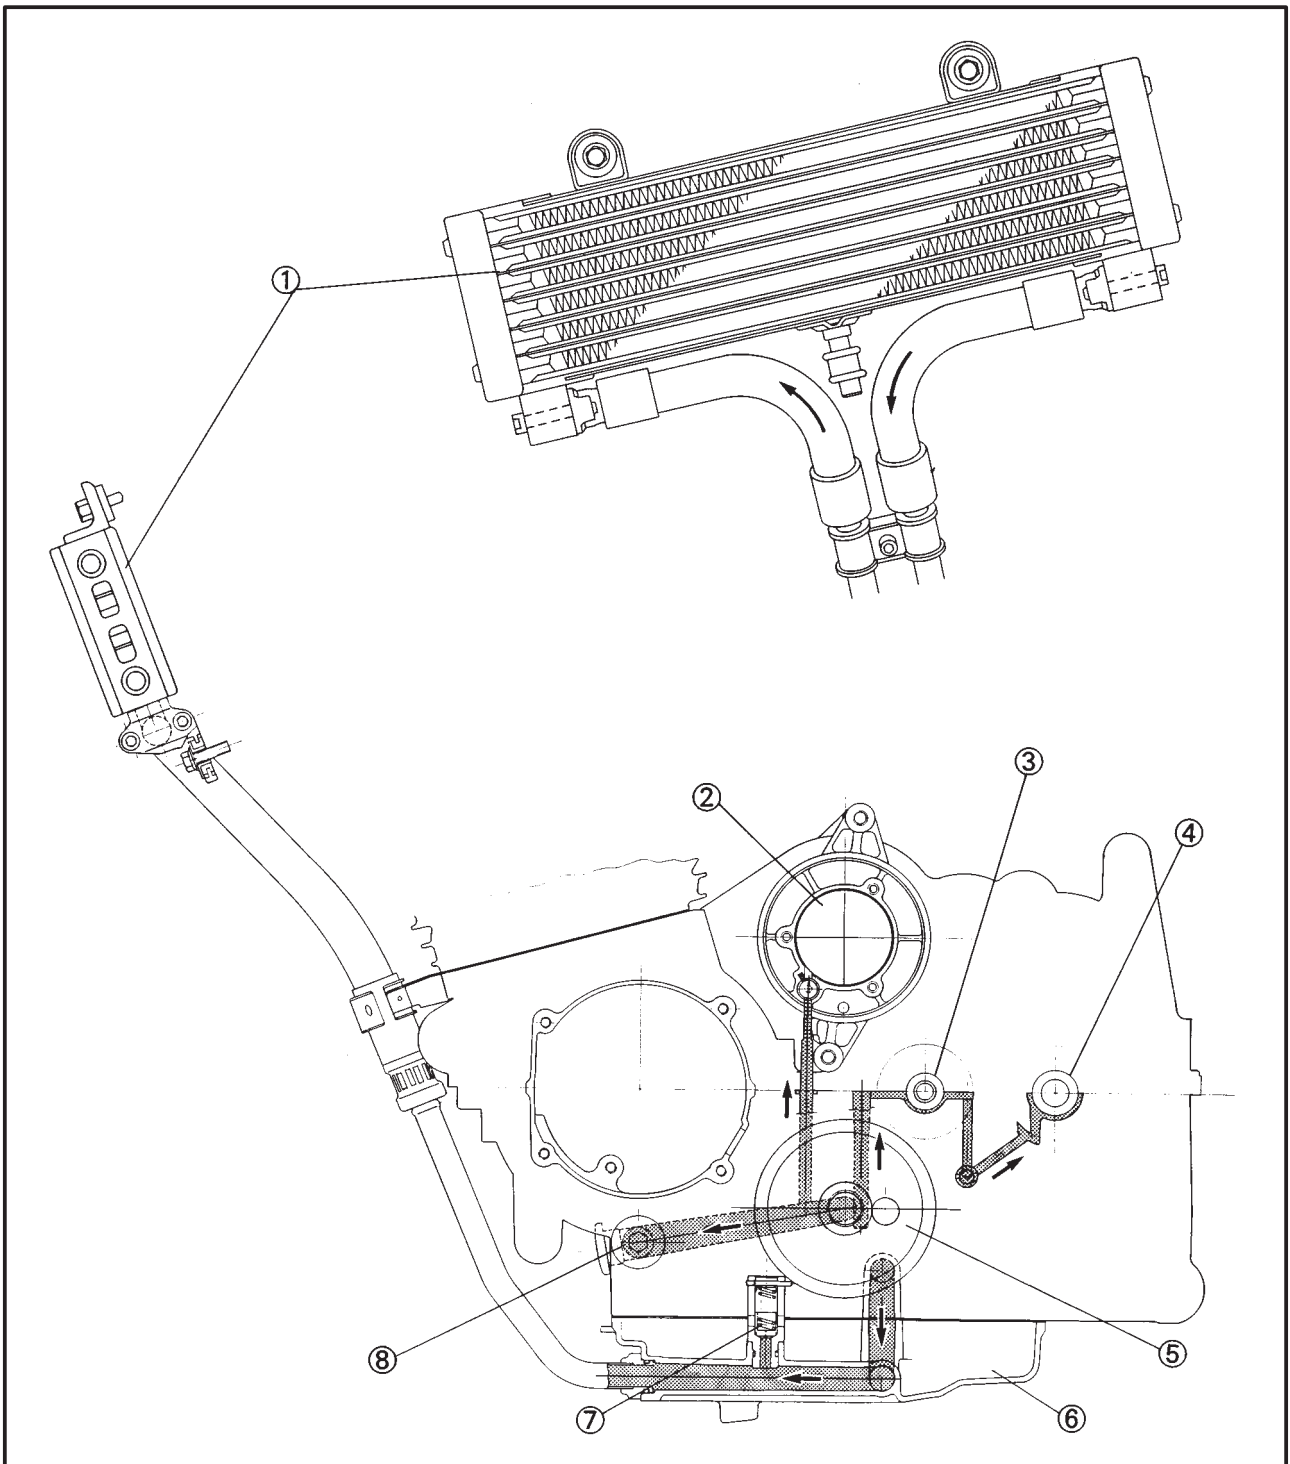






- ① Camshaft
- ② Crankshaft
- ③ Oil pump
- ④ Oil filter

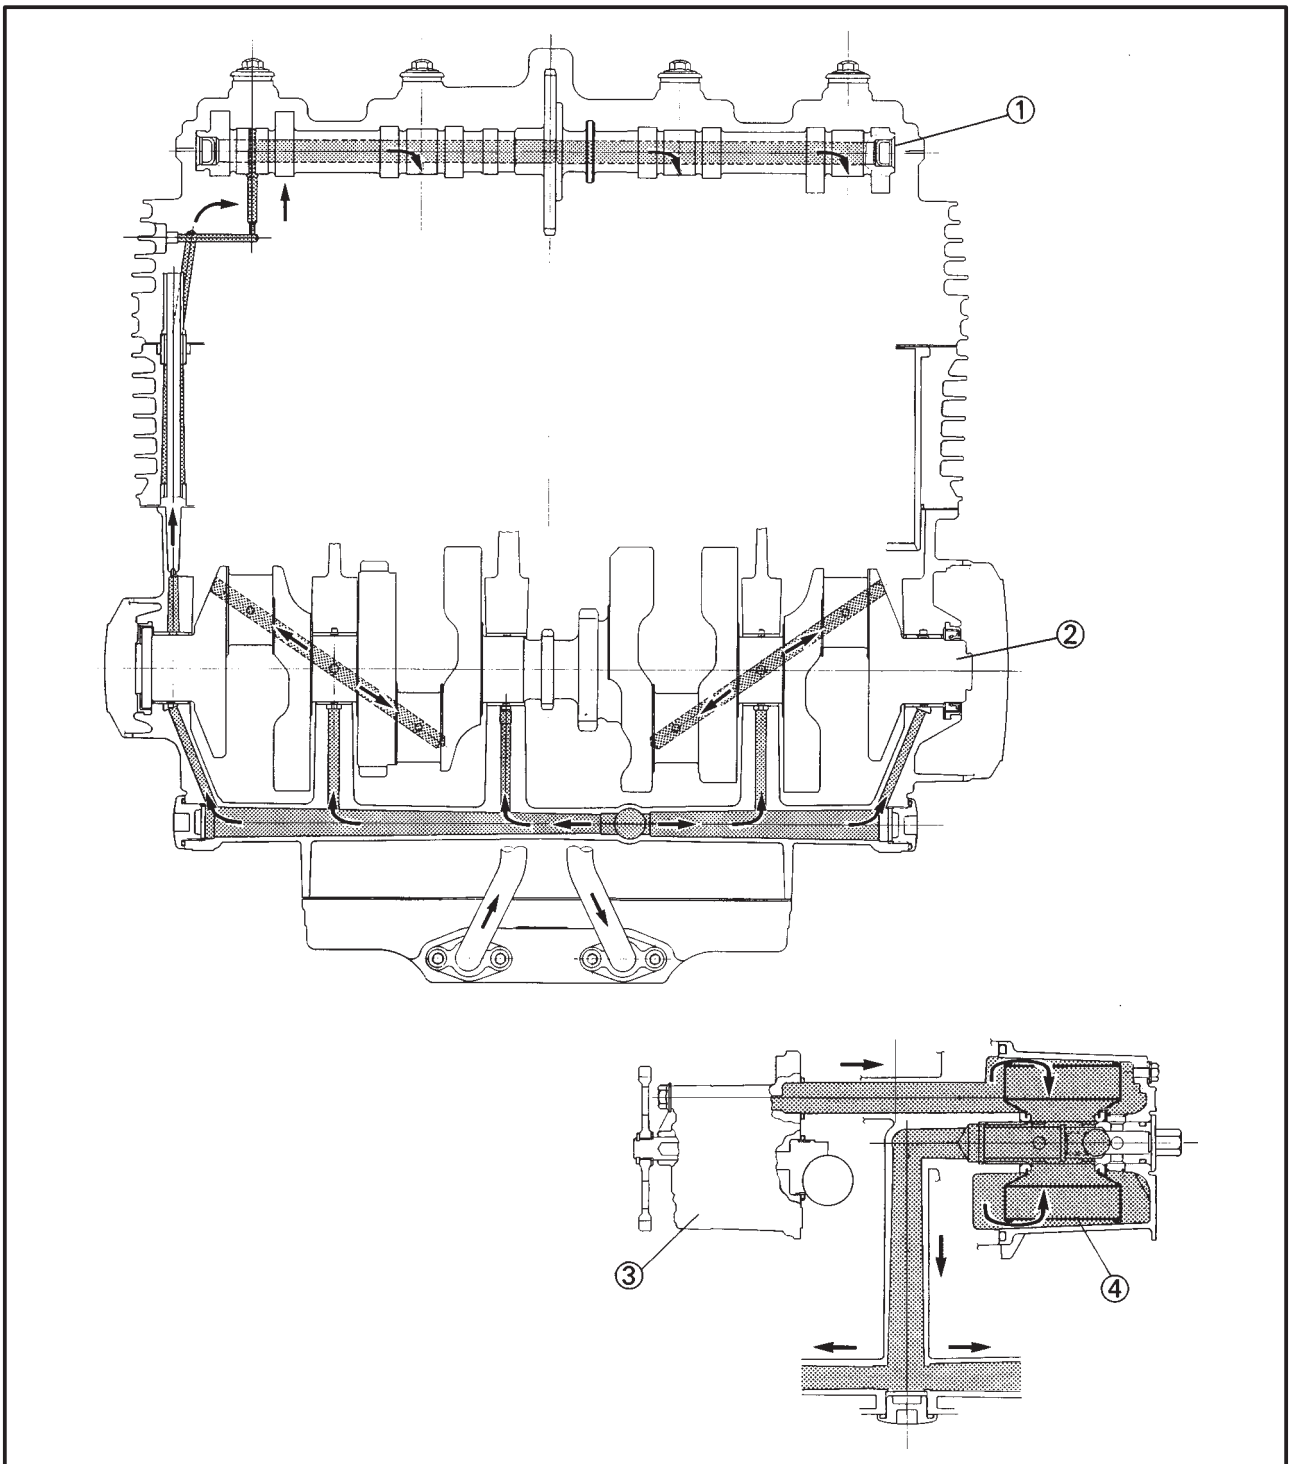

**CABLE ROUTING**

- ① Starter motor cable
- ② Battery negative (-) lead
- ③ Battery negative (-) lead connector
- ④ AC generator connector
- ⑤ Rear brake switch lead connector
- ⑥ Neutral lead
- ⑦ Pickup lead
- ⑧ Sidestand switch lead
- ⑨ Throttle position sensor
- ⑩ Ignition coil lead (#2, 3)
- ⑪ Throttle cable
- ⑫ Engine ground lead
- ⑬ Air ventilation hose
- ⑭ Rear brake switch
- ⑮ Starting circuit cutoff relay

- A Fasten the wireharness to the seat rail with a plastic band. Make sure that the end of band down ward.
- B Align the white tape on the wireharness with a plastic band and fasten them to the seat real. Make sure that the end of band down ward.
- C Fasten the wireharness with the steel clamp on the frame.

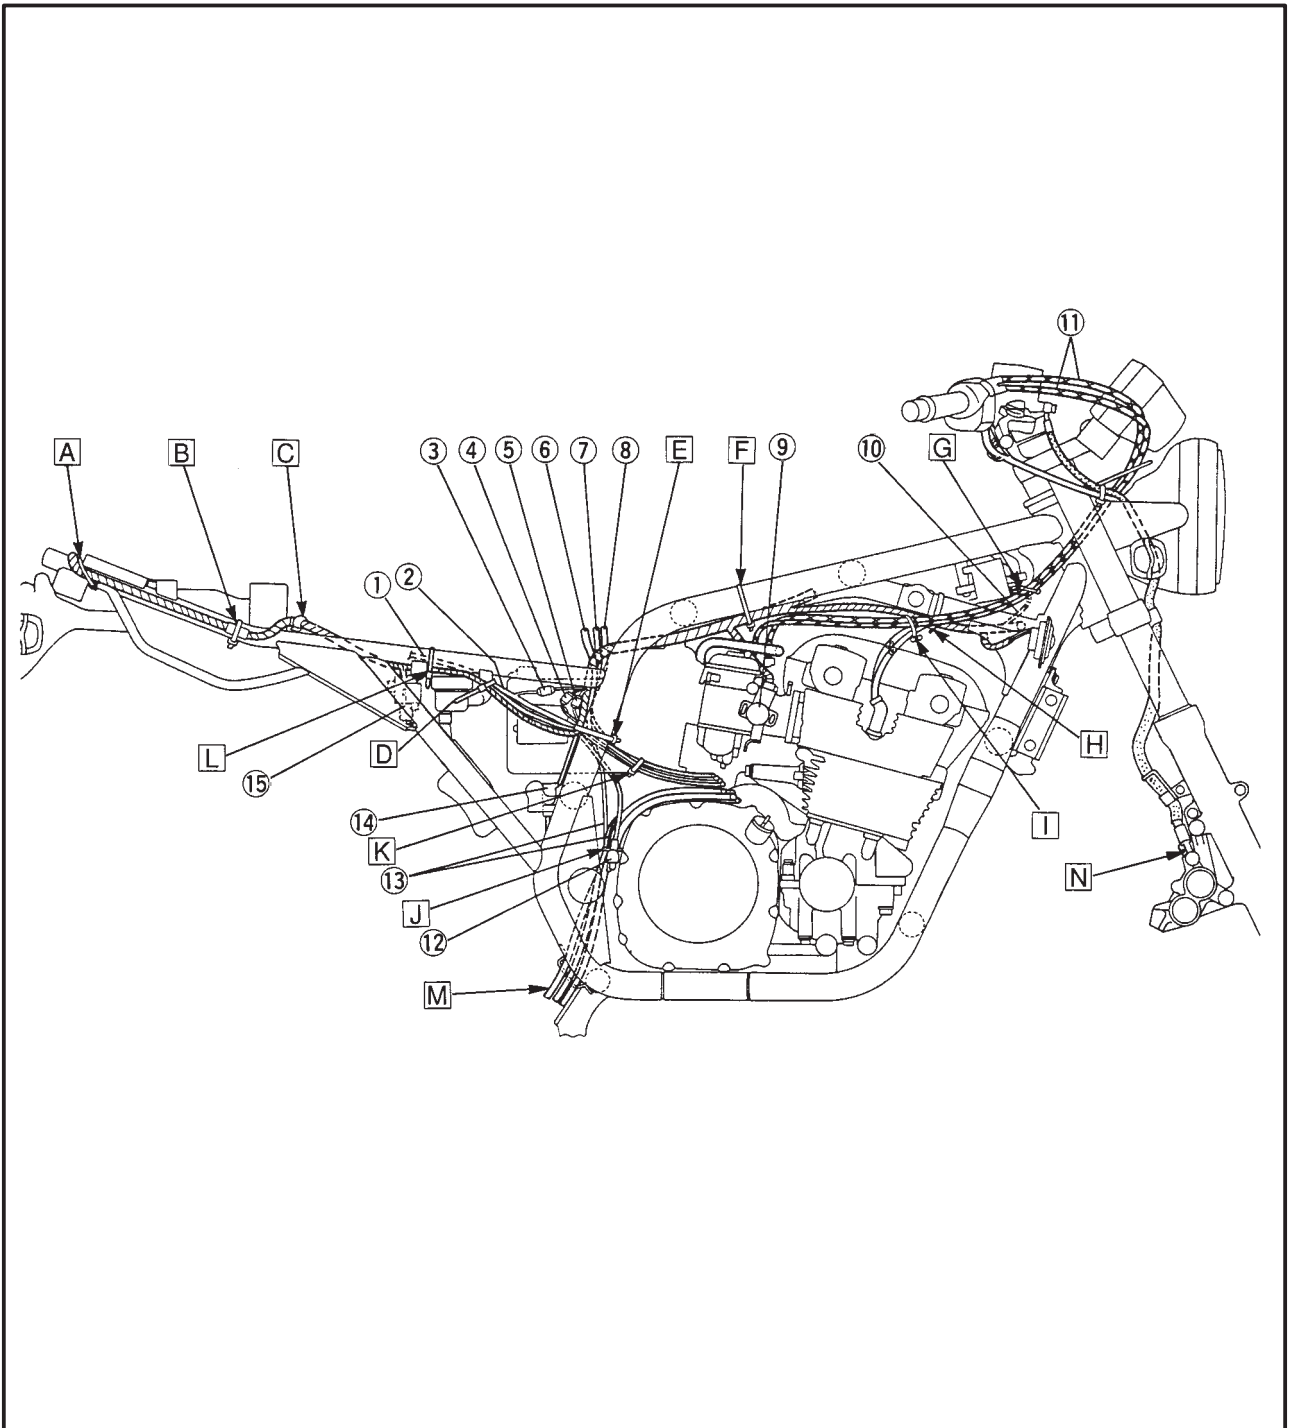


## CABLE ROUTING

SPEC




- D** Route the wireharness and starter motor cable in front of the reservoir tank bracket and the battery negative (-) lead behind the reservoir tank bracket. And fasten them with a plastic band.
- E** Fasten the wireharness, neutral lead, sidestand switch lead, pick-up coil lead, AC generator lead and rear brake switch lead to the frame with a plastic band. Make sure that the end of band forward of motorcycle.
- F** Fasten the wireharness to the frame with a plastic band. Make sure that the end of band downward.
- G** Insert the plastic band through the hole of plastic panel and then fasten the throttle cables with it. Make sure that the end of band inside of motorcycle.
- H** Fasten the wireharness to the frame with a plastic band. Make sure that the end of band downward.
- I** Fasten the high tension cables and throttle cables with a plastic clamp.
- J** Route the air ventilation hoses, air filter case drain hose, fuel tank drain hose and fuel tank breather hose through the engine guide.
- K** Fasten the AC generator lead, pick-up coil lead, sidestand switch lead and starter motor cable with a plastic band.

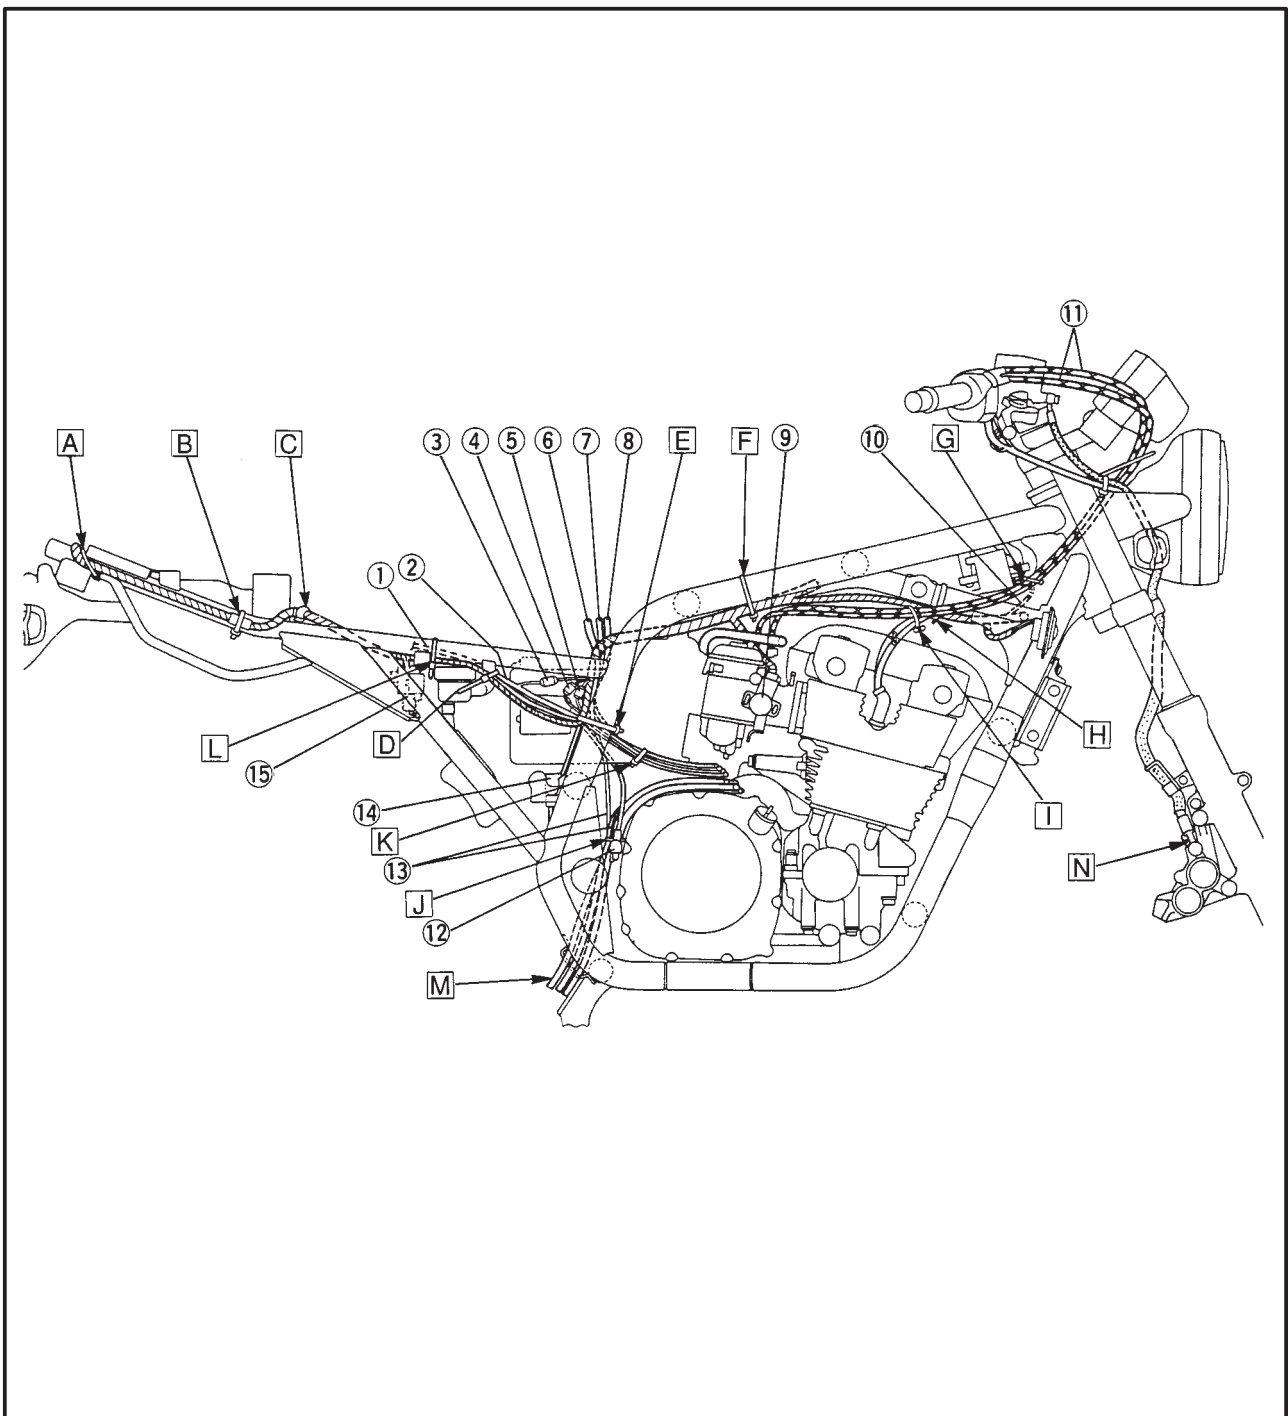



- L** Route the wireharness and starter motor cable behind the side cover bracket and fasten them with a plastic band at front of the bracket.
- M** Align the white paint marks of the fuel tank drain hose, fuel tank breather hose and air filter case drain hose.
- N** Touch the brake pipe to the brake caliper stopper.

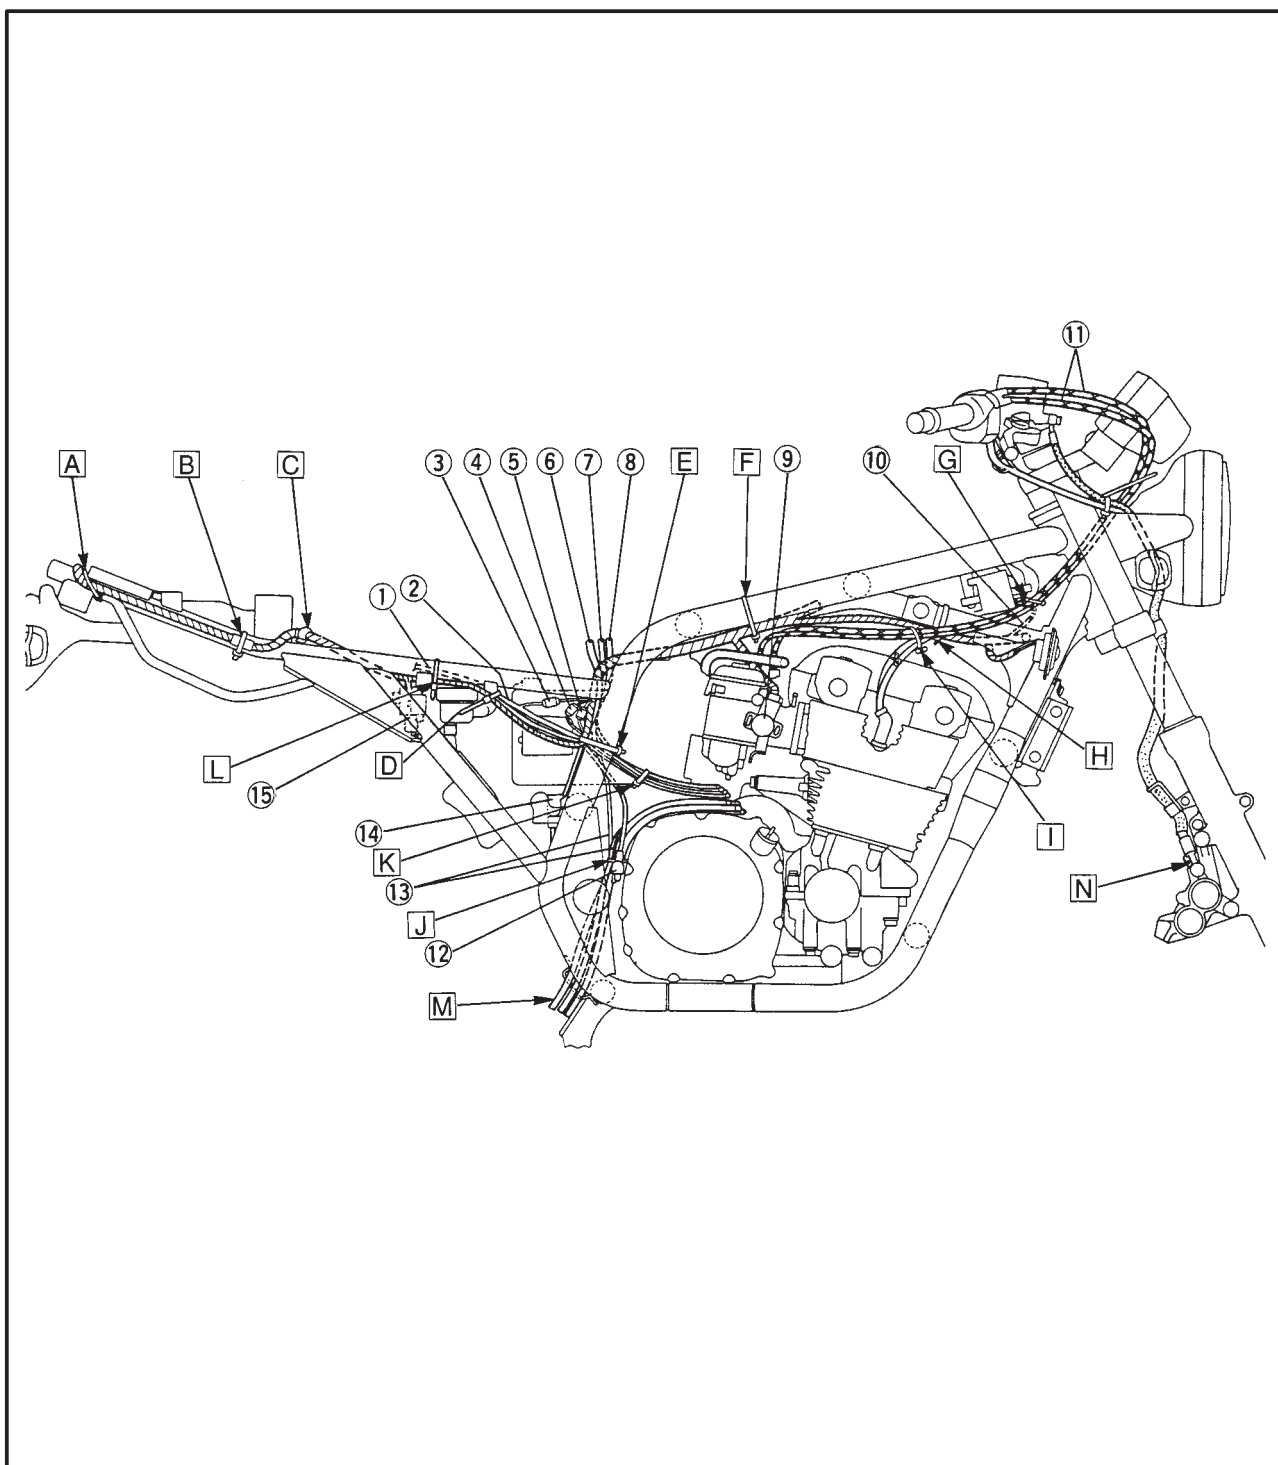

# CABLE ROUTING


SPEC



- ① Clutch hose
- ② Starter cable
- ③ Air filter case drain hose
- ④ Frame ground
- ⑤ Flasher relay connector
- ⑥ Oil light relay connector
- ⑦ Igniter unit connectors
- ⑧ Starter motor
- ⑨ AC generator
- ⑩ Sidestand switch
- ⑪ Sidestand switch lead
- ⑫ Ignition coil lead (#1, 4)

- A Insert the plastic band through the hole of plastic panel and then fasten the clutch hose with it. Make sure that the end of band inside of motorcycle.
- B To headlight lower hole.
- C Route the wireharness and starter cable through the guide.
- D Connect the ignition lead with white marking tape to the ignition coil (#1, 4).

- E Fasten the high tension cables (#1, 2) with a plastic clamp. Position the clamp at 50 – 80 mm above the high tension cable number.
- F Fasten the horn lead to the frame with a plastic band. Make sure that the end of band down ward.
- G Install the frame ground and igniter unit together with screw.

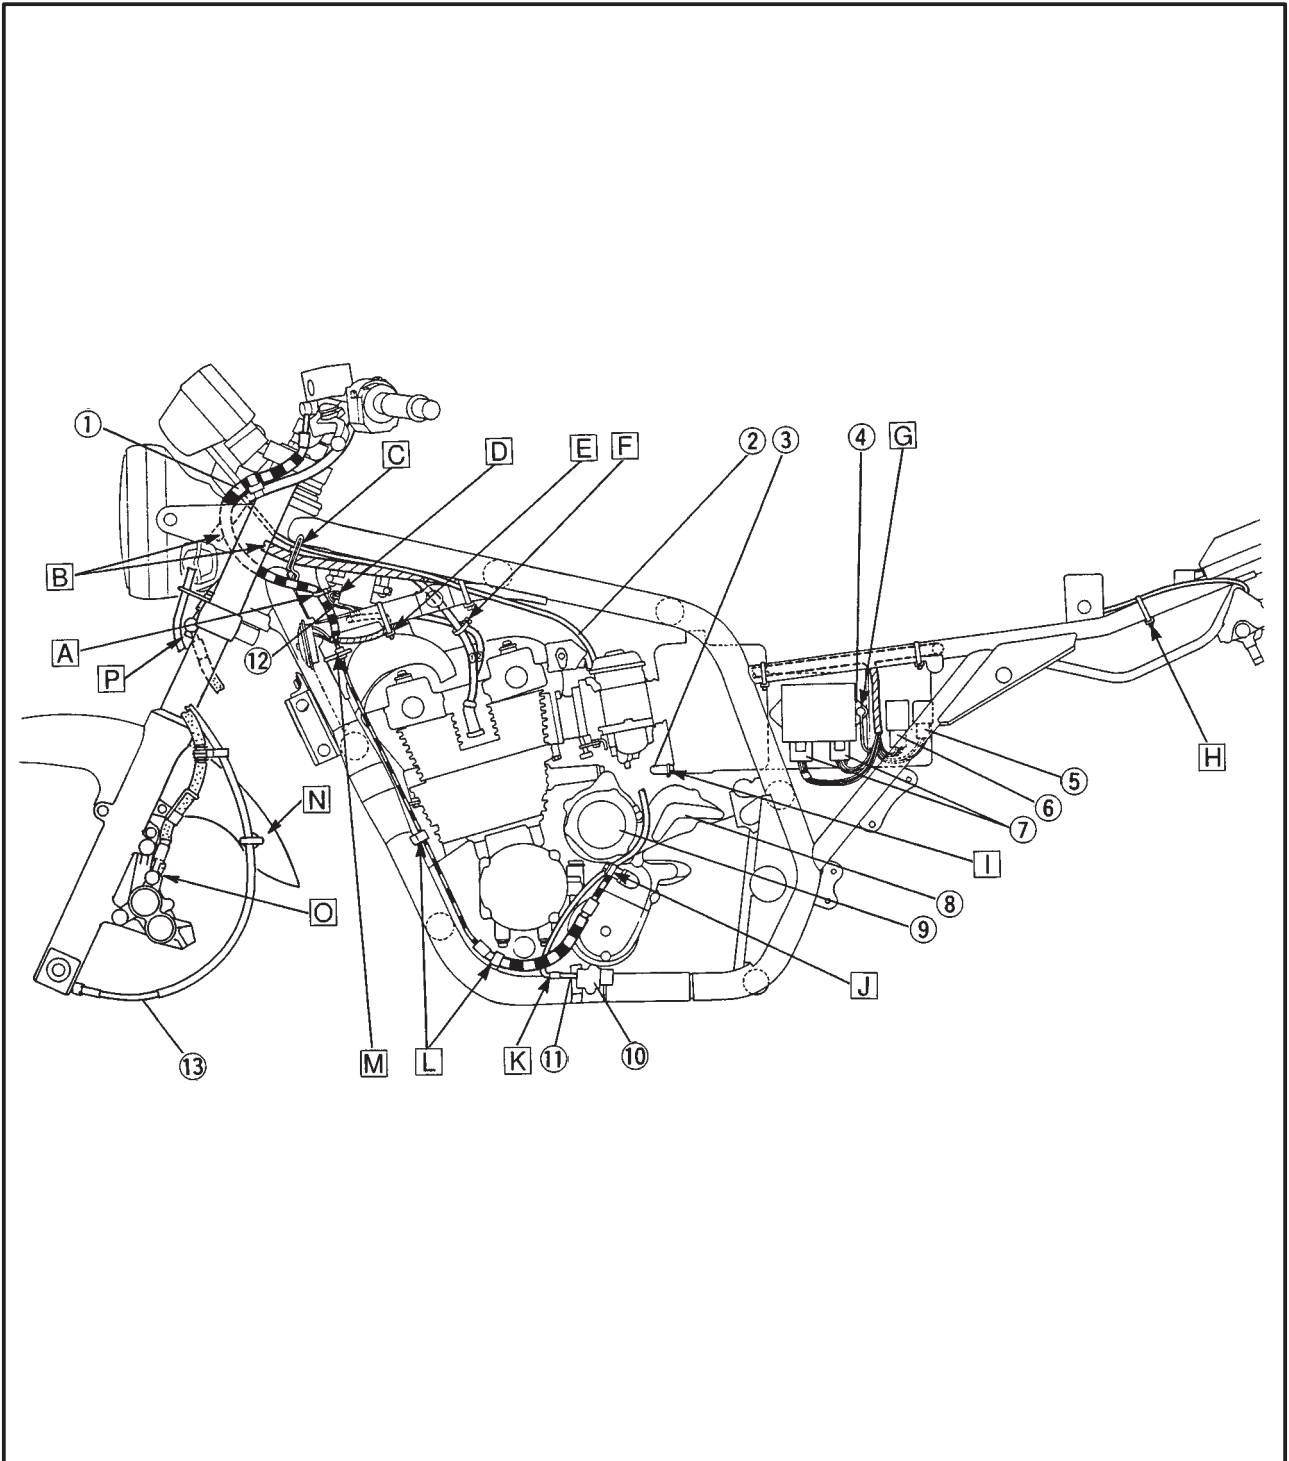


## CABLE ROUTING

SPEC



- H** Fasten the seat lock cable to the seat rail with a plastic band. Make sure that the end of band down ward.
- I** Route the air filter case drain hose over the starter motor to right side of motorcycle.
- J** Position the clutch pipe parallel with the oil filter cover.
- K** Fasten the sidestand switch lead with steel clamp on the frame and then route it between the pickup cover, oil filter cover, AC generator and starter motor to the right side of motorcycle.
- L** Fasten the clutch hose with steel clamp on the frame.
- M** Clamp the gromet on the clutch hose with wire holder on the frame.
- N** Route the speedometer cable through the guide.
- O** Touch the brake pipe to the brake caliper stopper.
- P** Touch the brake pipe to the brake hose joint.

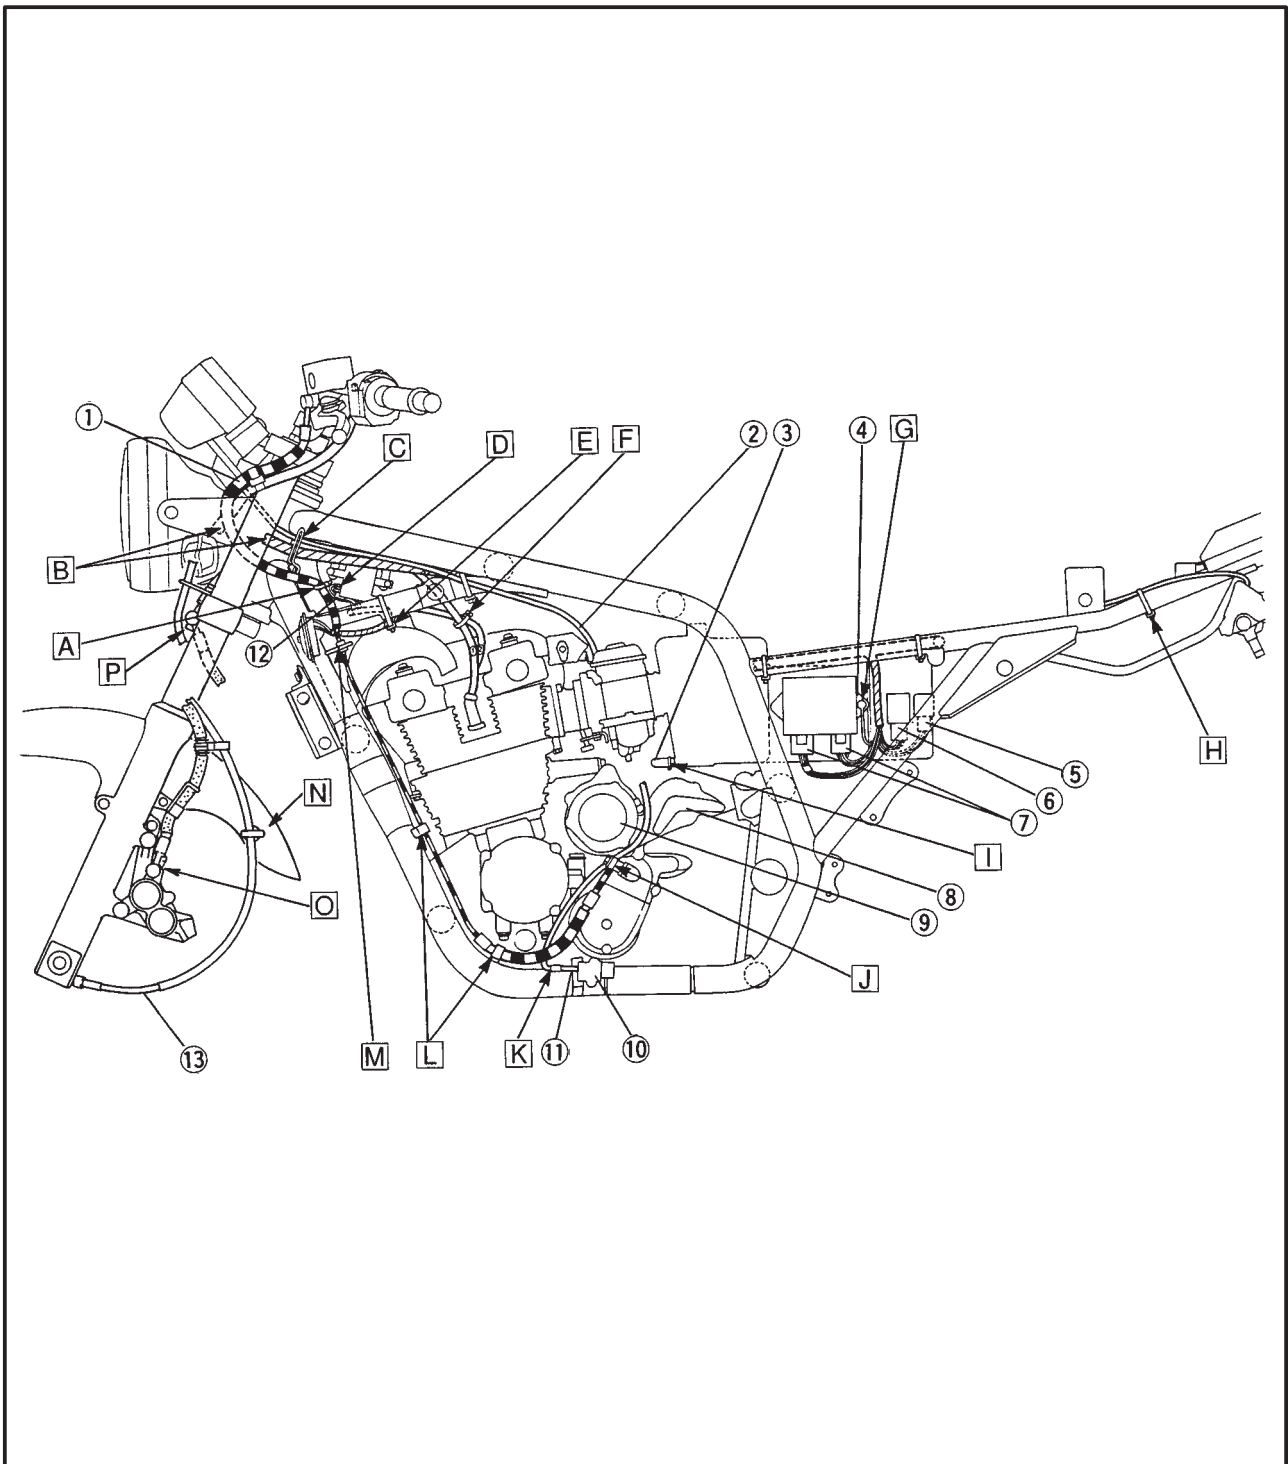

# CABLE ROUTING

SPEC



- ① Throttle cables
- ② Ignition coil (#2, 3)
- ③ Throttle position sensor
- ④ Neutral switch connector
- ⑤ Pickup coil connector
- ⑥ Sidestand switch connector
- ⑦ Battery
- ⑧ Reservoir tank
- ⑨ Battery negative (-) lead
- ⑩ Starting circuit cutoff relay
- ⑪ Battery positive (+) lead connector

- ⑫ Starter relay
- ⑬ Seat lock cable
- ⑭ Seat lock
- ⑮ Battery positive (+) lead
- ⑯ Fuse box
- ⑰ Starter relay connector
- ⑱ Flasher relay
- ⑲ Oil light relay
- ⑳ Igniter unit
- ㉑ Fuel sender connector
- ㉒ Starter cable
- ㉓ Ignition coil (#1, 4)

- ㉔ Taillight lead
- ㉕ Starter cable

- A Position the horn (high) to right side.
- B Fasten the throttle cable (front side) to the frame with a plastic clamp.
- C Fasten the throttle position sensor with steel clamp on the carburetor (#4).
- D To fuel sender.

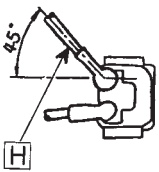
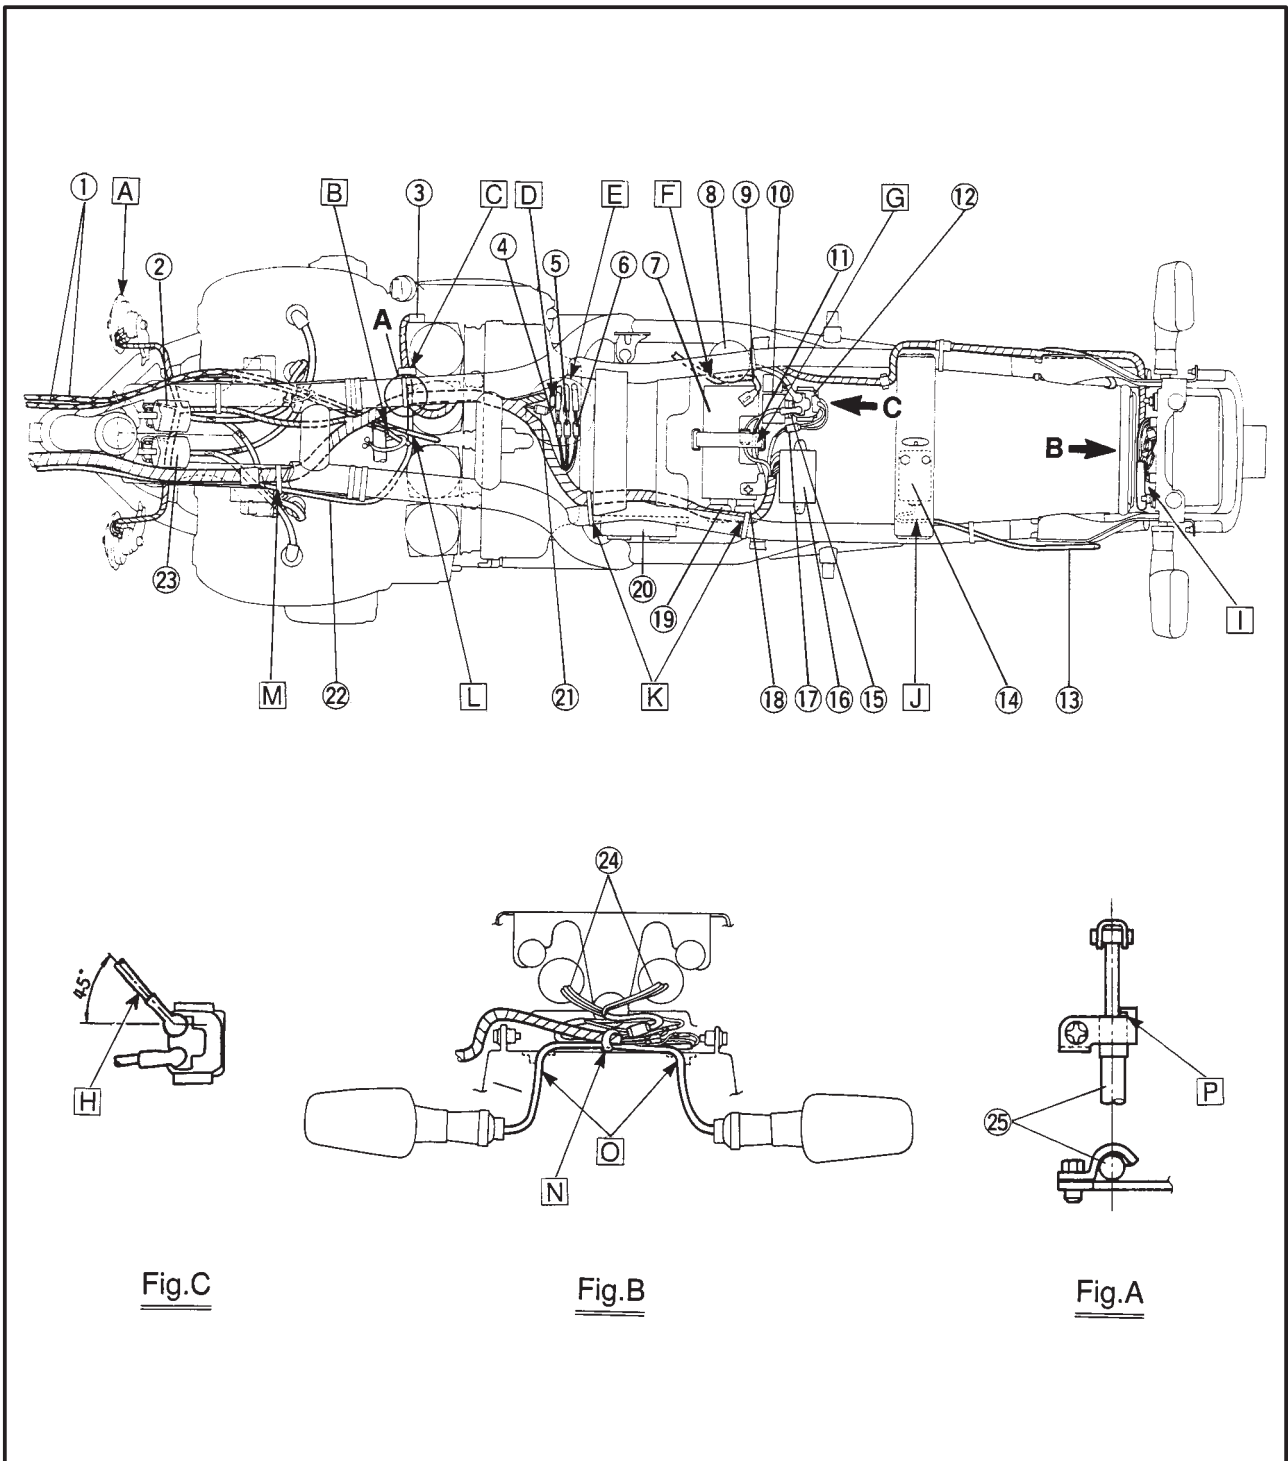


Fig.C

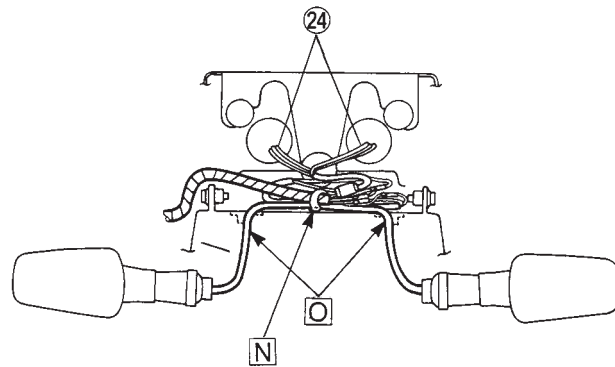


Fig.B

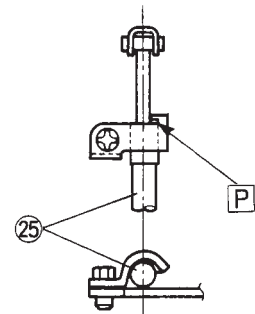


Fig.A

# CABLE ROUTING

SPEC



- E** Connect the fuel sender connector, neutral switch connector, pickup coil connector and side-stand switch connector above the air filter case.
- F** Route the battery negative (-) lead inside of the reservoir tank bracket and under the reservoir tank and then connect it.
- G** Fasten the battery positive (+) lead and battery positive (+) lead connector on the groove of the battery with the battery rubber band.
- H** Position the starter motor cable at 45 degree out side of the motorcycle.
- I** Position the wireharness, tail-light lead and rear turn signal light leads (left and right) between the taillight bracket and rear fender rib.
- J** Position the seat lock cable inside under the seat lock bracket.
- K** Fasten the wireharness to the frame with a plastic band. Make sure that the end of band down ward.
- L** Route the starter cable between the throttle cables.
- M** Fasten the wireharness, starter cable to the frame with a plastic band. Make sure that end of band down ward.

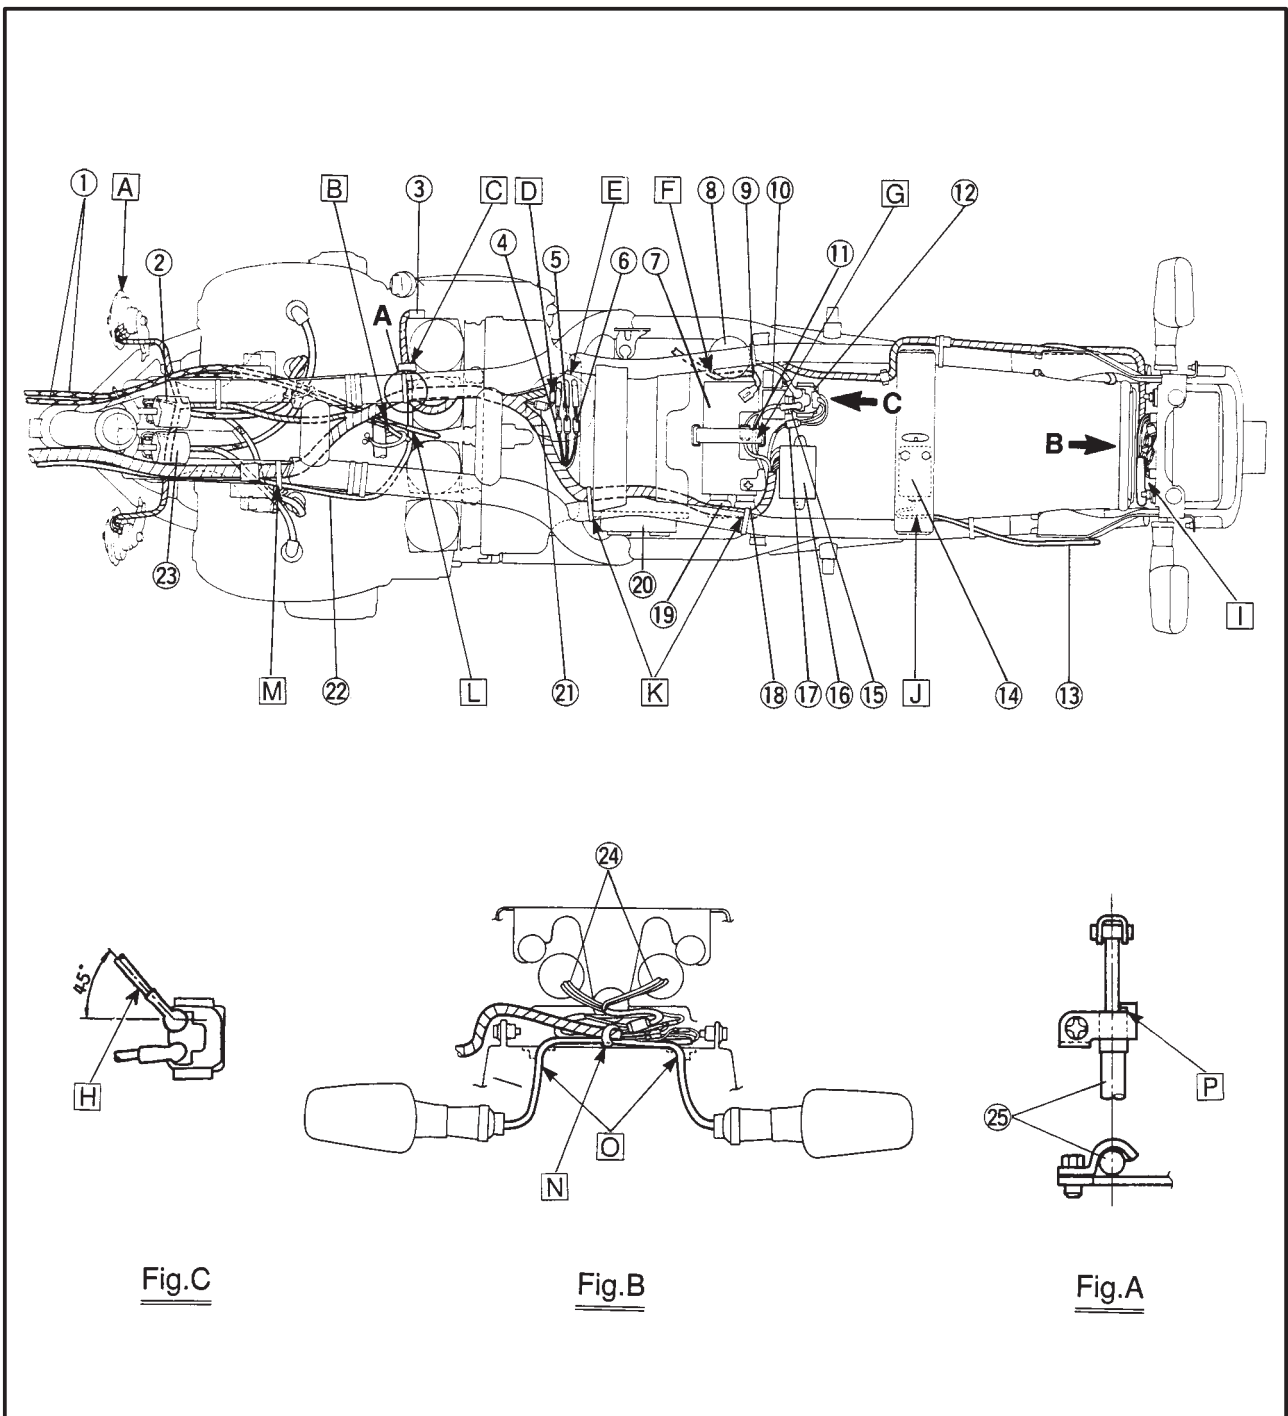


Fig.C


Fig.B

Fig.A





- N** Fasten the wireharness, taillight lead and rear turn signal light leads (left and right) with steel clamp on the frame make sure that the end of clamp forward.
- O** Route the rear turn signal light leads (left and right) through the each holes of the rear fender.
- P** Touch the starter cable to the stopper and position it vertical of the motorcyle.

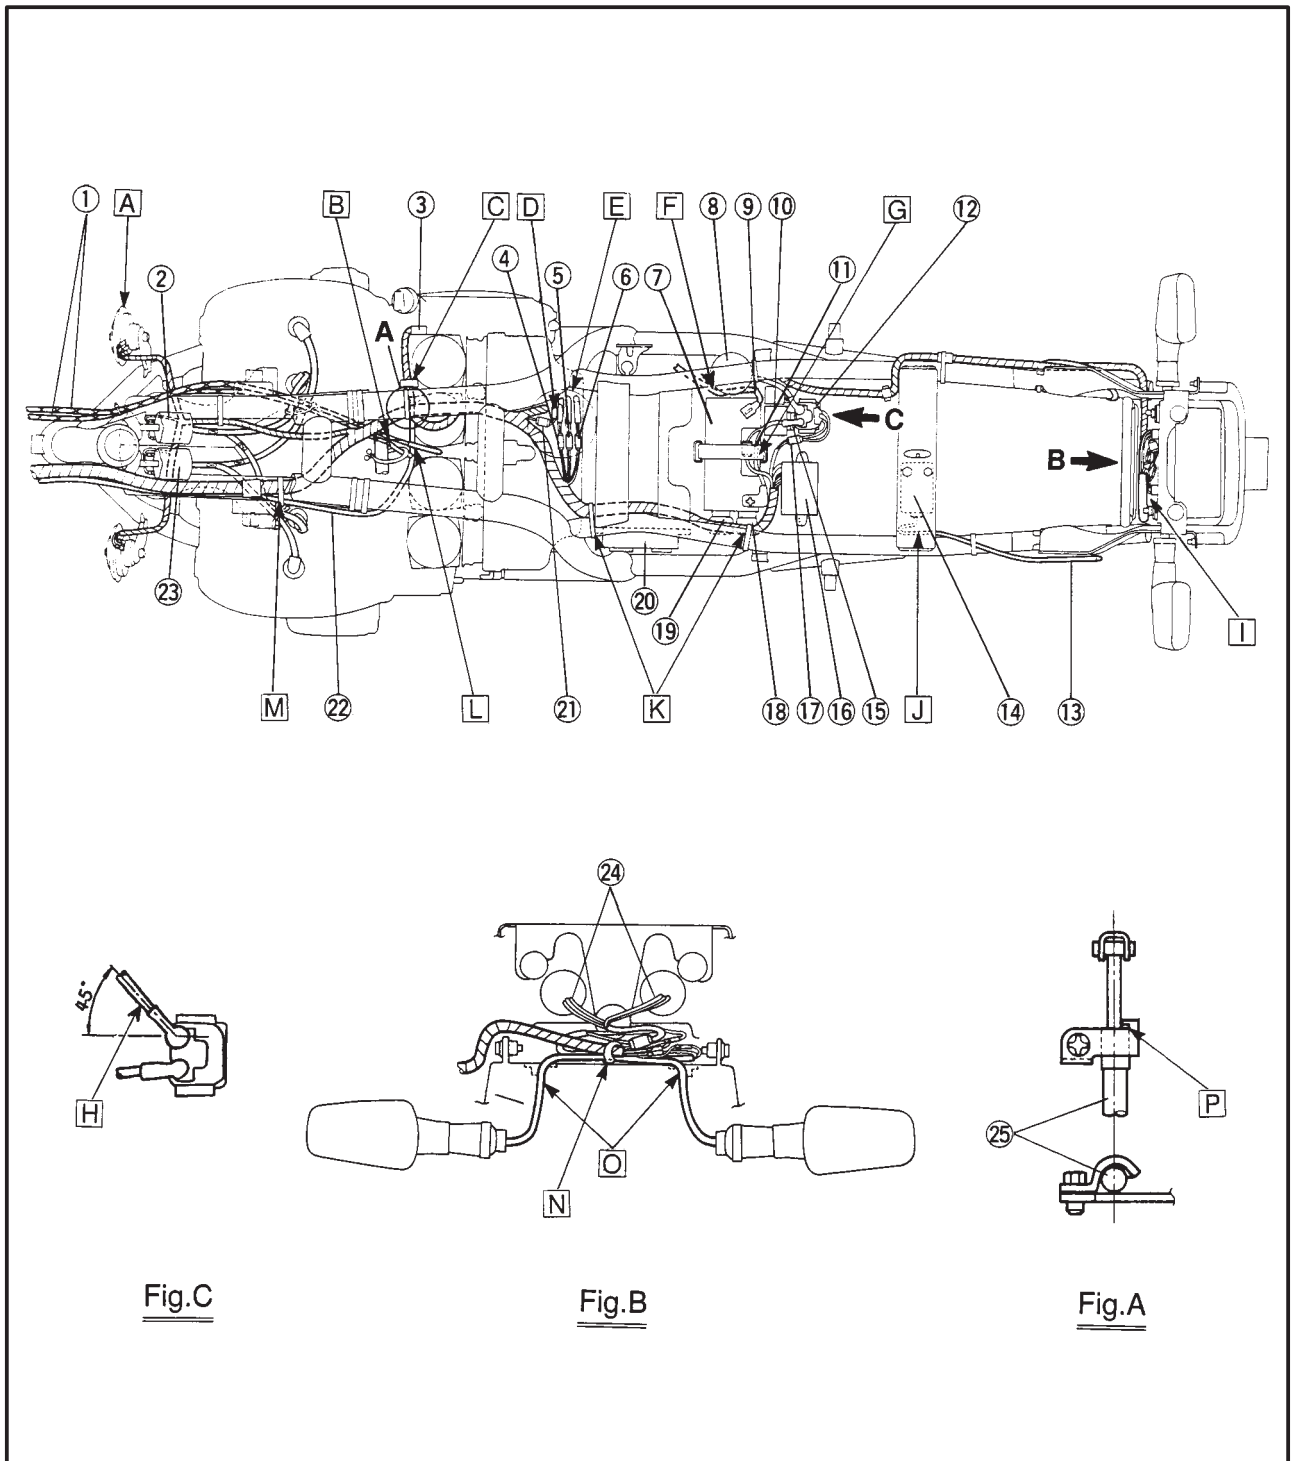

## CABLE ROUTING


SPEC



- ① Meter leads
- ② Main switch lead
- ③ Starter cable
- ④ Handlebar switch lead (left)
- ⑤ Clutch hose
- ⑥ Brake hose
- ⑦ Handlebar switch lead (right)


- A Route the throttle cables through the guide on the headlight stay.
- B Route the meter leads, main switch lead into the upper hole of the headlight body.
- C Route the handlebar switch lead (left) inside of the clutch hose. Fasten the handlebar switch lead (left), clutch hose and starter cable with a plastic band.


- D Route the handlebar switch lead (left) and front turn signal light lead (left) into the left under hole of the headlight body.
- E Route the front turn signal light leads (left and right) in front of the headlight stay.
- F Route the speedometer cable through the guide on the headlight stay.
- G To front brake master cylinder.

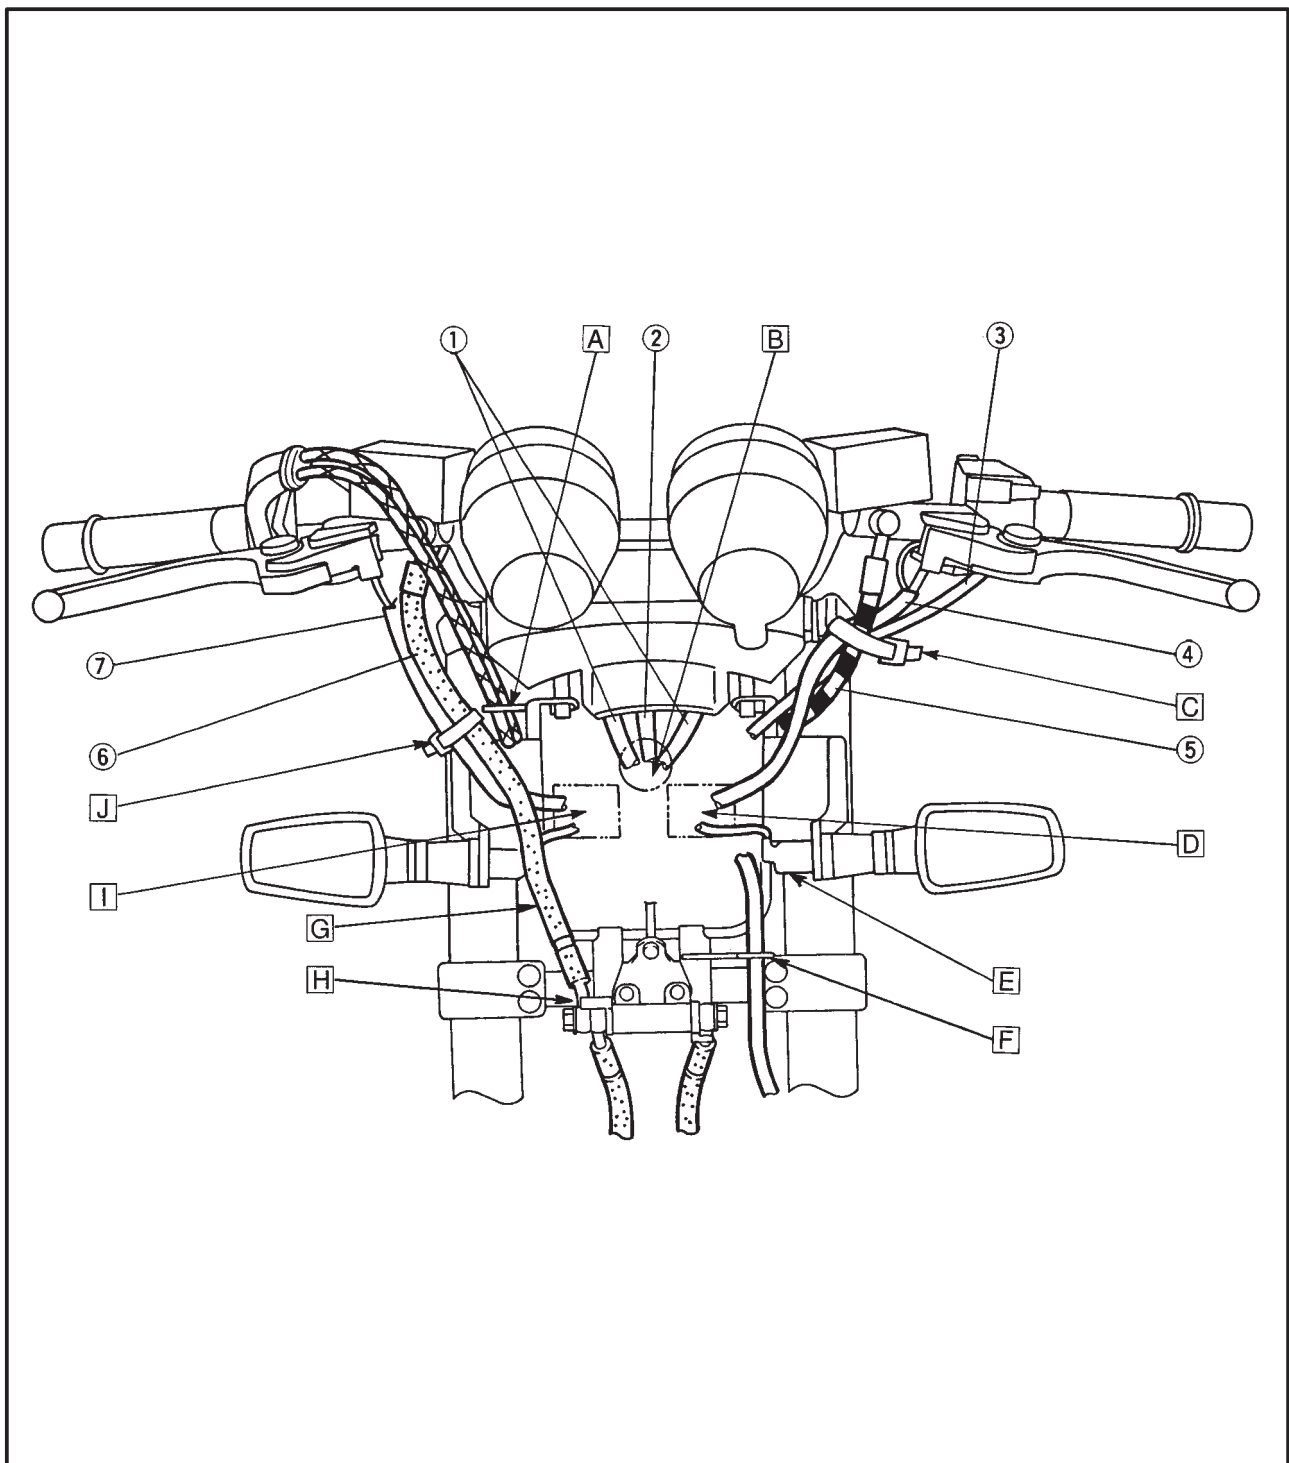



- [H] Touch the brake pipe to the stopper.
- [I] Route the handlebar switch lead (right) and front turn signal light lead (right) into the right under hole of the headlight stay.
- [J] Fasten the handlebar switch lead (right) and front brake hose with a plastic band.

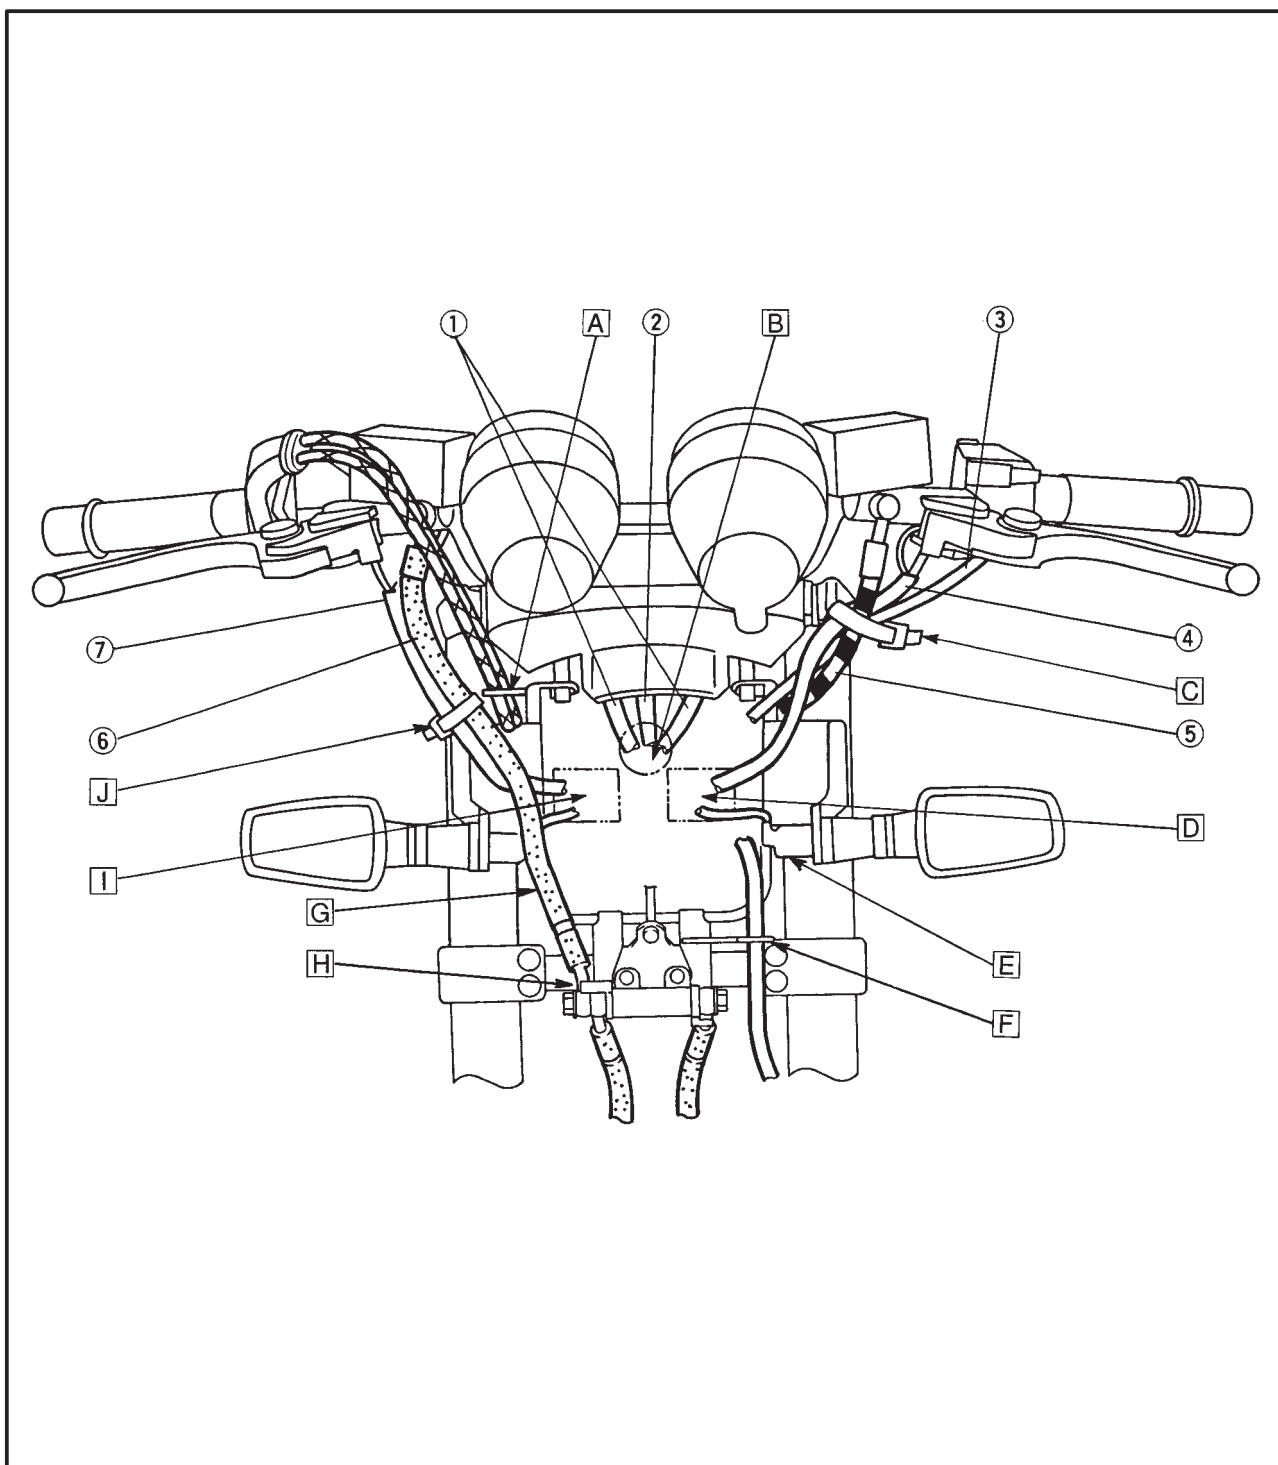

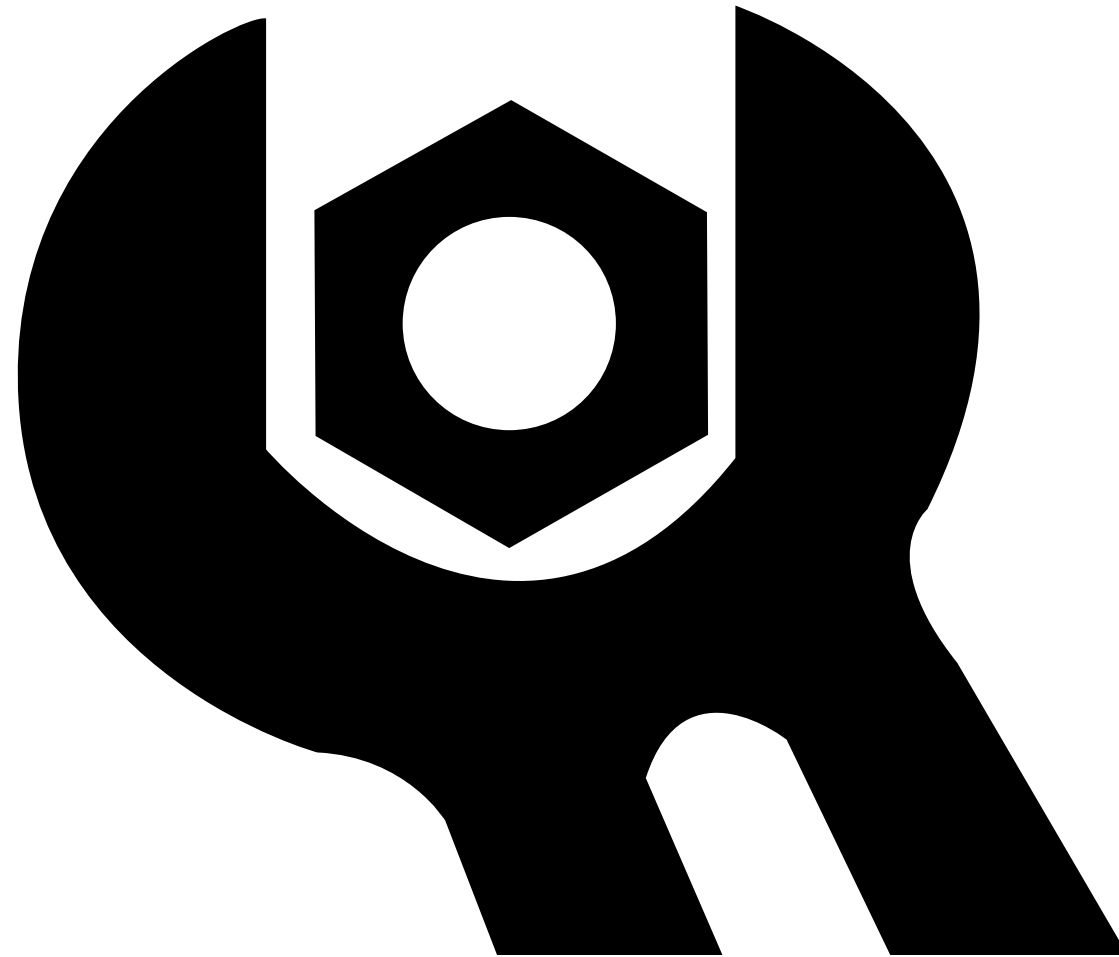

**CHK**

---

**ADJ**

**3**



## CHAPTER 3. PERIODIC INSPECTION AND ADJUSTMENT

<b>INTRODUCTION</b> .....	3-1
<b>PERIODIC MAINTENANCE/LUBRICATION INTERVALS</b> .....	3-1
<b>SEAT SIDE COVER AND FUEL TANK</b> .....	3-3
<b>ENGINE</b> .....	3-4
ADJUSTING THE VALVE CLEARANCE .....	3-4
SYNCHRONIZING THE CARBURETOR .....	3-9
ADJUSTING THE IDLING SPEED .....	3-10
ADJUSTING THE THROTTLE CABLE FREE PLAY .....	3-11
CHECKING THE SPARK PLUGS .....	3-13
CHECKING THE IGNITION TIMING .....	3-13
MEASURING THE COMPRESSION PRESSURE .....	3-14
CHECKING THE ENGINE OIL LEVEL .....	3-16
CHECKING THE ENGINE OIL .....	3-17
MEASURING THE ENGINE OIL PRESSURE .....	3-18
ADJUSTING THE CLUTCH LEVER .....	3-19
CHECKING THE CLUTCH FLUID LEVEL .....	3-20
BLEEDING THE HYDRAULIC CLUTCH SYSTEM .....	3-20
CLEANING THE AIR FILTER ELEMENT .....	3-22
CHECKING THE CARBURETOR JOINTS AND INTAKE MANIFOLDS .....	3-23
CHECKING THE FUEL AND VACUUM HOSES .....	3-23
CHECKING THE CRANKCASE BREATHER HOSE .....	3-24
CHECKING THE EXHAUST SYSTEM .....	3-24
<b>CHASSIS</b> .....	3-25
ADJUSTING THE FRONT BRAKE .....	3-25
ADJUSTING THE REAR BRAKE .....	3-25
CHECKING THE BRAKE FLUID LEVEL .....	3-26
CHECKING THE BRAKE PADS .....	3-27
ADJUSTING THE REAR BRAKE LIGHT SWITCH .....	3-27
BLEEDING THE HYDRAULIC BRAKE SYSTEM .....	3-28
ADJUSTING THE SHIFT PEDAL .....	3-29
ADJUSTING THE DRIVE CHAIN SLACK .....	3-29
LUBRICATING THE DRIVE CHAIN .....	3-31
CHECKING AND ADJUSTING THE STEERING HEAD .....	3-32
CHECKING THE FRONT FORK .....	3-34
ADJUSTING THE FRONT FORK LEGS .....	3-35
ADJUSTING THE REAR SHOCK ABSORBER ASSEMBLIES .....	3-36
CHECKING THE TIRES .....	3-37
CHECKING THE WHEELS .....	3-39
CHECKING AND LUBRICATING THE CABLES .....	3-40
LUBRICATING THE LEVERS AND PEDALS .....	3-40

---

LUBRICATING THE SIDE STAND .....	3-40
LUBRICATING THE CENTERSTAND .....	3-40
LUBRICATING THE REAR SUSPENSION .....	3-40

<b>ELECTRICAL SYSTEM .....</b>	<b>3-41</b>
CHECKING AND CHARGING THE BATTERY .....	3-41
CHECKING THE FUSES .....	3-46
REPLACING THE HEADLIGHT BULB .....	3-48
ADJUSTING THE HEADLIGHT BEAM .....	3-49



## PERIODIC INSPECTION AND ADJUSTMENT

### INTRODUCTION

This chapter includes all information necessary to perform recommended inspections and adjustments. These preventive maintenance procedures, if followed, will ensure more reliable vehicle operation and a longer service life. The need for costly overhaul work will be greatly reduced. This information applies to vehicles already in service as well as new vehicles that are being prepared for sale. All service technicians should be familiar with this entire chapter.

### PERIODIC MAINTENANCE/LUBRICATION INTERVALS

ITEM	REMARKS	BREAK-IN 1,000 km	EVERY	
			6,000 km or 6 months	12,000 km or 12 months
Valves*	Check valve clearance. Adjust if necessary.	EVERY 24,000 km or 24 months		
Spark plugs	Check condition. Clean or replace if necessary.	○	○	○
Air filter	Clean. Replace if necessary.		○	○
Carburetor*	Check idle speed/synchronization/starter operation. Adjust if necessary.	○	○	○
Fuel line*	Check fuel hose for cracks or damage. Replace if necessary.		○	○
Fuel filter*	Check condition. Replace if necessary.			○
Engine oil	Replace (Warm engine before draining).	○	○	○
Engine oil filter*	Replace.	○		○
Brake*	Check operation/fluid leakage/See NOTE. Correct if necessary.		○	○
Clutch*	Check operation/fluid leakage/See NOTE. Correct if necessary.		○	○
Swingarm pivot*	Check swingarm assembly for looseness. Correct if necessary. Moderately repack every 24,000 km or 24 months.**			○
Rear suspension link pivots*	Check operation. Apply grease lightly every 24,000 km or 24 months.**			○
Wheels*	Check balance/damage/runout. Replace if necessary.		○	○
Wheel bearings*	Check bearing assembly for looseness/damage. Replace if damaged.		○	○
Steering bearings*	Check bearing assembly for looseness. Correct if necessary. Moderately repack every 24,000 km or 24 months.	○		○
Front forks*	Check operation/oil leakage. Repair if necessary.		○	○
Rear shock absorber*	Check operation/oil leakage. Repair if necessary.		○	○
Drive chain	Check chain free play/alignment. Adjust if necessary. Clean and lube.	EVERY 500 km		
Fittings/Fasteners*	Check all chassis fittings and fasteners. Correct if necessary.	○	○	○
Center and sidestand*	Check operation. Repair if necessary.	○	○	○
Sidestand switch*	Check operation. Clean or replace if necessary.	○	○	○
A.C. Generator*	Replace generator brushes every 100,000 km.			

## PERIODIC MAINTENANCE/LUBRICATION INTERVALS

---



\*: It is recommended that these items be serviced by a Yamaha dealer.

\*\* : Molybdenum disulfide grease.

\*\*\*: Lithium soap base grease.

**NOTE:** \_\_\_\_\_

Brake fluid replacement:


1. When disassembling the master cylinder, caliper cylinder or clutch release cylinder, replace the brake fluid. Normally check the brake fluid level and add the fluid as required.
  2. On the inner parts of the master cylinder, caliper cylinder and clutch release cylinder, replace the oil seals every two years.
  3. Replace the brake and clutch hoses every four years, or if cracked or damaged.
-



# SEAT, SIDE COVER AND FUEL TANK



## SEAT, SIDE COVER AND FUEL TANK

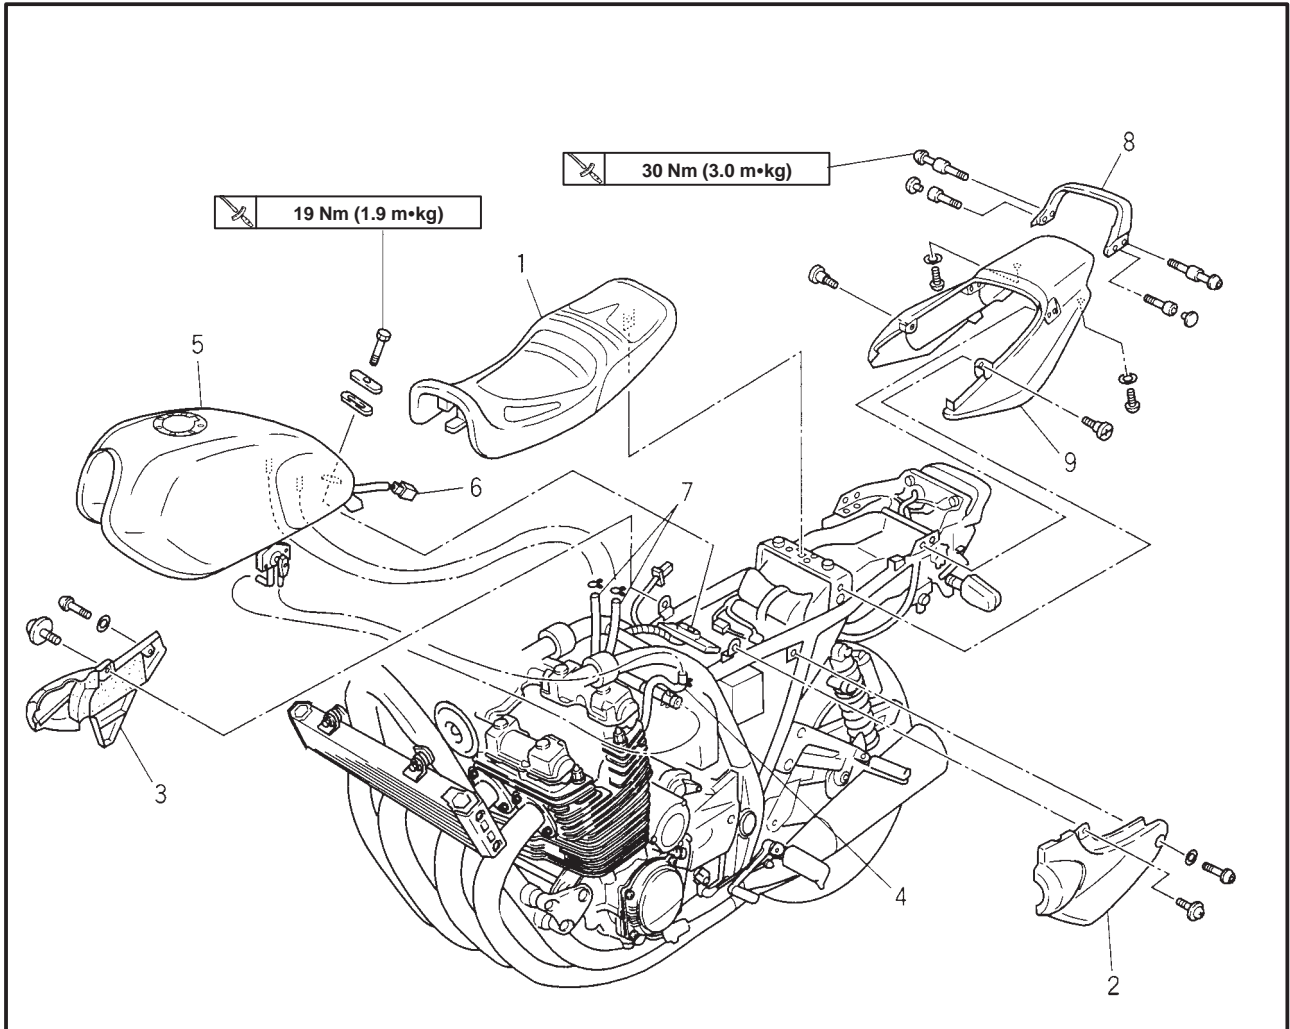

Order	Job/Part	Q'ty	Remarks
	<b>Removing the seat, side cover and fuel tank</b>		Remove the parts in the order listed.
1	Seat	1	
2	Side cover (left)	1	
3	Side cover (right)	1	
4	Fuel hose	1/1	<b>NOTE:</b> _____ Disconnect the fuel pipe, set the fuel cock lever "ON" or "RES" position.
5	Fuel tank	1	
6	Fuel sender lead	1	
7	Drain hose	2	
8	Grab bar	1	
9	Rear fender cover	1	
			For installation, reverse the removal procedure.

## ADJUSTING THE VALVE CLEARANCE

CHK  
ADJ



### ENGINE

#### ADJUSTING THE VALVE CLEARANCE

the following procedure applies to all of the valves.


#### NOTE:

- Valve clearance adjustment should be made on a cold engine, at room temperature.
- When the valve clearance is to be measured or adjusted, the piston must be at top dead center (TDC) on the compression stroke.

#### 1. Remove:


- seat
- side covers
- fuel tank

Refer to "SEAT, SIDE COVER AND FUEL TANK".

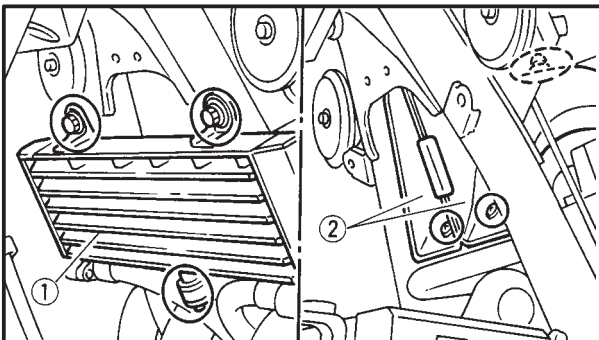


#### 2. Remove:

- oil cooler ①
- air ducts ②

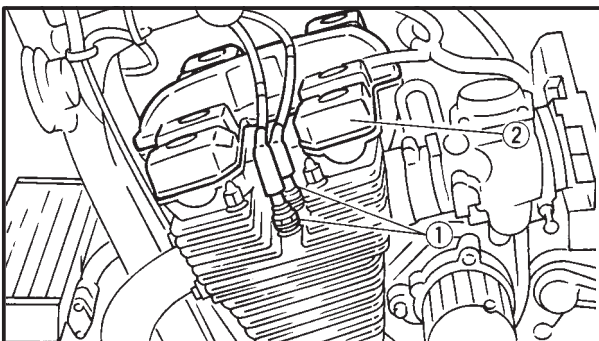

#### 3. Remove:

- spark plugs ①
- cylinder head cover ②
- timing plate cover ③

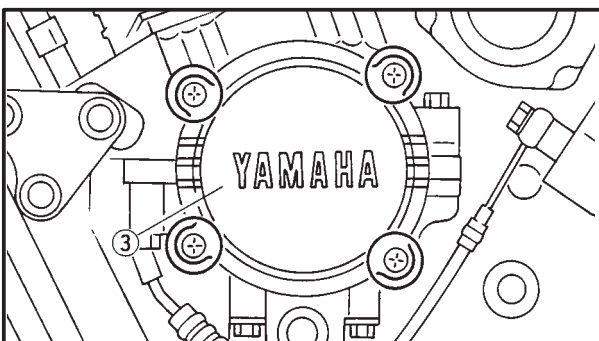

#### 4. Measure:

- valve clearance
- Out of specification → Adjust.



#### Valve clearance (cold):

Intake valve 0.11 × 0.15 mm

Exhaust valve 0.16 × 0.20 mm





# ADJUSTING THE VALVE CLEARANCE

**CHK  
ADJ**



## INTAKE

MEASURED CLEARANCE	INSTALLED PAD NUMBER																															
	200	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320							
0.00 × 0.05			200	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320					
0.06 × 0.10		200	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320						
0.11 × 0.15	STANDARD CLEARANCE																															
0.16 × 0.20	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320								
0.21 × 0.25	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320									
0.26 × 0.30	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320										
0.31 × 0.35	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320											
0.36 × 0.40	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320												
0.41 × 0.45	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320													
0.46 × 0.50	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320														
0.51 × 0.55	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320															
0.56 × 0.60	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320																
0.61 × 0.65	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320																	
0.66 × 0.70	255	260	265	270	275	280	285	290	295	300	305	310	315	320																		
0.71 × 0.75	260	265	270	275	280	285	290	295	300	305	310	315	320																			
0.76 × 0.80	265	270	275	280	285	290	295	300	305	310	315	320																				
0.81 × 0.85	270	275	280	285	290	295	300	305	310	315	320																					
0.86 × 0.90	275	280	285	290	295	300	305	310	315	320																						
0.91 × 0.95	280	285	290	295	300	305	310	315	320																							
0.96 × 1.00	285	290	295	300	305	310	315	320																								
1.01 × 1.05	290	295	300	305	310	315	320																									
1.06 × 1.10	295	300	305	310	315	320																										
1.11 × 1.15	300	305	310	315	320																											
1.16 × 1.20	305	310	315	320																												
1.21 × 1.25	310	315	320																													
1.26 × 1.30	315	320																														
1.31 × 1.35	320																															

VALVE CLEARANCE (cold):  
 0.11 × 0.15 mm  
 Example: Installed is 250  
 Measured clearance is 0.23 mm  
 Replace 250 pad with 260 pad  
 Pad number: (example)  
 Pad No. 250 = 2.50 mm  
 Pad No. 260 = 2.60 mm  
 Always install pad with number down.

## EXHAUST

MEASURED CLEARANCE	INSTALLED PAD NUMBER																															
	200	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320							
0.00 × 0.05				200	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320				
0.06 × 0.10			200	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320					
0.11 × 0.15		200	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320						
0.16 × 0.20	STANDARD CLEARANCE																															
0.21 × 0.25	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320								
0.26 × 0.30	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320									
0.31 × 0.35	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320										
0.36 × 0.40	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320											
0.41 × 0.45	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320												
0.46 × 0.50	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320													
0.51 × 0.55	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320														
0.56 × 0.60	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320															
0.61 × 0.65	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320																
0.66 × 0.70	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320																	
0.71 × 0.75	255	260	265	270	275	280	285	290	295	300	305	310	315	320																		
0.76 × 0.80	260	265	270	275	280	285	290	295	300	305	310	315	320																			
0.81 × 0.85	265	270	275	280	285	290	295	300	305	310	315	320																				
0.86 × 0.90	270	275	280	285	290	295	300	305	310	315	320																					
0.91 × 0.95	275	280	285	290	295	300	305	310	315	320																						
0.96 × 1.00	280	285	290	295	300	305	310	315	320																							
1.01 × 1.05	285	290	295	300	305	310	315	320																								
1.06 × 1.10	290	295	300	305	310	315	320																									
1.11 × 1.15	295	300	305	310	315	320																										
1.16 × 1.20	300	305	310	315	320																											
1.21 × 1.25	305	310	315	320																												
1.26 × 1.30	310	315	320																													
1.31 × 1.35	315	320																														
1.36 × 1.40	320																															

VALVE CLEARANCE (cold):  
 0.16 × 0.20 mm  
 Example: Installed is 250  
 Measured clearance is 0.32 mm  
 Replace 250 pad with 265 pad  
 Pad number: (example)  
 Pad No. 250 = 2.50 mm  
 Pad No. 265 = 2.65 mm  
 Always install pad with number down.

## ADJUSTING THE VALVE CLEARANCE

CHK  
ADJ



### EXAMPLE:

Original valve pad number = 248 (thickness = 2.48 mm (0.098 in))

Rounded value = 250

h. Locate the rounded number of the original valve pad and the measured valve clearance in the valve pad selection table.

The point where the column and row intersect is the new valve pad number.

### NOTE:

The new valve pad number is only an approximation. The valve clearance must be measured again and the above steps should be repeated if the measurement is still incorrect.

i. Install the new valve pad with the numbered side facing down.

j. Remove the tappet adjusting tool.

### INTAKE

### EXHAUST

k. Measure the valve clearance again.

i. If the valve clearance is still out of specification, repeat all of the valve clearance adjustment steps until the specified clearance is obtained.



6. Install:

- all removed parts

### NOTE:

For installation, reverse the removal procedure. Note the following points.

7. Install:

- fuel tank
- side covers
- seat

Refer to "SEAT, SIDE COVER AND FUEL TANK".











## CHECKING THE SPARK PLUGS CHECKING THE IGNITION TIMING

CHK  
ADJ



EAS00059


### CHECKING THE SPARK PLUGS

The following procedure applies to all of the spark plugs.

1. Disconnect:
  - Ⓒ spark plug cap
2. Remove:
  - Ⓒ spark plug

#### CAUTION:

Before removing the spark plugs, blow away any dirt accumulated in the spark plug wells with compressed air to prevent it from falling into the cylinders.

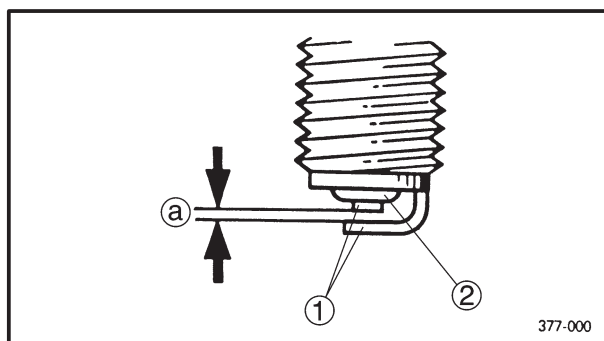

3. Check:
  - Ⓒ spark plug type
  - Incorrect → Change.

**Spark plug type (manufacturer)**  
**DPR8EA-9 (NGK)**  
**X24EPR-U9 (DENSO)**

4. Check
  - Ⓒ electrode ①
  - Damage/wear → Replace the spark plug.
  - Ⓒ insulator ②
  - Abnormal color → Replace the spark plug.
  - Normal color is a medium-to-light tan color.
5. Clean:
  - Ⓒ spark plug
  - (with a spark plug cleaner or wire brush)
6. Measure:
  - Ⓒ spark plug gap ③
  - (with a wire gauge)
  - Out of specification → Regap.



**Spark plug gap**  
**0.8 × 0.9 mm**


7. Install:
  - Ⓒ spark plug



**Spark plug**  
**18 Nm (1.8 mⒸkg)**

#### NOTE:

Before installing the spark plug clean the spark plug and gasket surface.

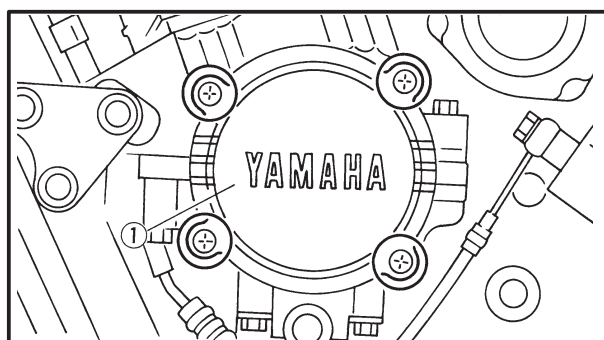

8. Connect:
  - Ⓒ spark plug cap

EAS00063

### CHECKING THE IGNITION TIMING

#### NOTE:


Prior to checking the ignition timing, check the wiring connections of the entire ignition system. Make sure that all connections are tight and free of corrosion.

1. Remove:
  - Ⓒ timing plate cover ①



## MEASURING THE COMPRESSION PRESSURE

CHK  
ADJ

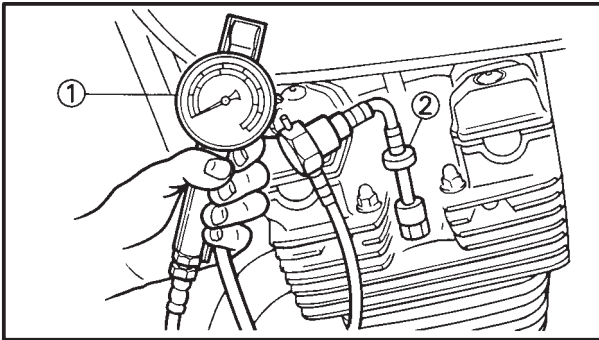

3. Disconnect:
  - spark plug cap
4. Remove:
  - spark plug

### CAUTION:

Before removing the spark plugs, use compressed air to blow away any dirt accumulated in the spark plug wells to prevent it from falling into the cylinders.

5. Install:
  - compression gauge ①
  - adapter ②



**Compression gauge**  
90890-03081  
**Adapter**  
90890-04082

6. Measure:
  - compression pressure
    - Above the maximum pressure → Inspect the cylinder head, valve surfaces, and piston crown for carbon deposits.
    - Below the minimum pressure → Squirt a few drops of oil into the affected cylinder and measure again.
  - Refer to the following table.

Compression pressure (With oil applied into cylinder)	
Reading	Diagnosis
Higher than without oil	Piston wear or damage → Repair.
Same as without oil	Piston ring(-s), valves, cylinder head gasket or piston possibly defective → Repair. Compression pressure (at sea level)



**Compression pressure (at sea level):**  
**Standard:**  
 1,050 kPa (10.5 kg/cm<sup>2</sup>,  
 10.5 bar)/400 r/min.  
**Minimum:**  
 900 kPa (9.0 kg/cm<sup>2</sup>,  
 9.0 bar)/400 r/min.  
**Maximum:**  
 1,200 kPa (12.0 kg/cm<sup>2</sup>,  
 12.0 bar)/400 r/min.





## CHANGING THE ENGINE OIL/ MEASURING THE ENGINE OIL PRESSURE

CHK  
ADJ



### Quantity

Total amount  
4.2 L

Without oil filter element re-  
placement  
3 L

With oil filter element replace-  
ment  
3.35 L

9. Install:
  - engine oil filler cap
10. Start the engine, warm it up for several minutes, and then turn it off.
11. Check;
  - engine  
(for engine oil leaks)
12. Check:
  - engine oil level  
Refer to "CHECKING THE ENGINE OIL LEVEL".

EAS00077

### MEASURING THE ENGINE OIL PRESSURE

1. Check:
  - engine oil level  
Below the minimum level mark → Add the recommended engine oil to the proper level.
2. Start the engine, warm it up for several minutes, and then turn it off.

### CAUTION:

When the engine is cold, the engine oil will have a higher viscosity, causing the engine oil pressure to increase. Therefore, be sure to measure the engine oil pressure after warming up the engine.

3. Remove:
  - main gallery bolt

### ⚠ WARNING

The engine, muffler and engine oil are extremely hot.


4. Install:
  - oil pressure gauge ①
  - oil pressure adapter B ②



Oil pressure gauge  
90890-03153

Oil pressure adapter B  
90890-03124

5. Measure:
  - engine oil pressure  
(at the following conditions)

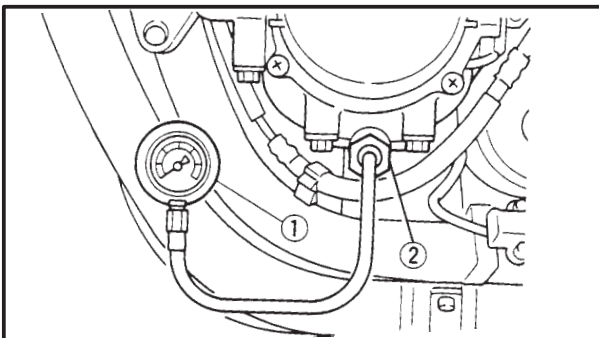






## CHECKING THE CLUTCH FLUID LEVEL/ BLEEDING THE HYDRAULIC CLUTCH SYSTEM

CHK  
ADJ

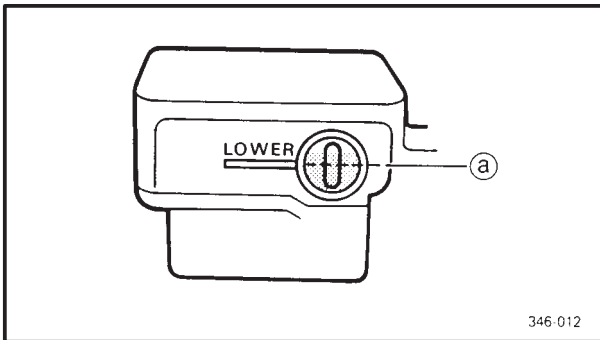

EAS00083

### CHECKING THE CLUTCH FLUID LEVEL

1. Stand the motorcycle on a level surface.

#### NOTE:

Place the motorcycle on a suitable stand.

2. Check:

- clutch fluid level

Below the minimum level mark (a) → Add the recommended clutch fluid to the proper level.



Recommended clutch fluid  
Brake fluid DOT 4

#### ⚠ WARNING

- Use only the designated clutch fluid. Other clutch fluids may cause the rubber seals to deteriorate, causing leakage and poor clutch performance.
- Refill with the same type of clutch fluid that is already in the system. Mixing clutch fluids may result in a harmful chemical reaction, leading to poor clutch performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the clutch fluid and could cause vapor lock.

#### CAUTION:

Clutch fluid may damage painted surfaces or plastic parts. Therefore, always clean up any spilt clutch fluid immediately.

#### NOTE:

In order to ensure a correct reading of the clutch fluid level, make sure that the top of the reservoir is horizontal.

EAS00084

### BLEEDING THE HYDRAULIC CLUTCH SYSTEM

#### ⚠ WARNING

Bleed the hydraulic clutch system whenever:

- the system was disassembled,
- a clutch hose was loosened or removed,
- the clutch fluid level is very low,
- clutch operation is faulty.


## BLEEDING THE HYDRAULIC CLUTCH SYSTEM

CHK  
ADJ



### NOTE:

- Be careful not to spill any clutch fluid or allow the clutch master cylinder reservoir to overflow.
- When bleeding the hydraulic clutch system, make sure that there is always enough clutch fluid before applying the clutch lever. Ignoring this precaution could allow air to enter the hydraulic clutch system, considerably lengthening the bleeding procedure.
- If bleeding is difficult, it may be necessary to let the clutch fluid settle for a few hours. Repeat the bleeding procedure when the tiny bubbles in the hose have disappeared.

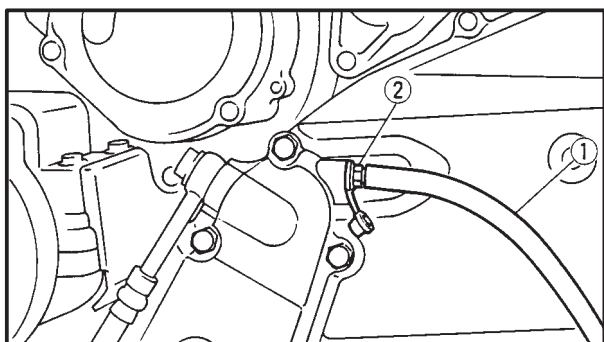

### 1. Bleed:

- hydraulic clutch system



- a. Add the recommended clutch fluid to the proper level.
- b. Install the clutch master cylinder reservoir diaphragm.
- c. Connect a clear plastic hose (1) tightly to the bleed screw (2).
- d. Place the other end of the hose into a container.
- e. Slowly squeeze the clutch lever several times.
- f. Fully squeeze the clutch lever without releasing it.
- g. Loosen the bleed screw.  
This will release the tension and cause the clutch lever to contact the handlebar grip.
- h. Tighten the bleed screw and then release the clutch lever.
- i. Repeat steps (e) to (h) until all of the air bubbles have disappeared from the clutch fluid in the plastic hose.
- j. Tighten the bleed screw to specification.



**Bleed screw**  
**6 Nm (0.6 m•kg)**

- k. Add the recommended clutch fluid to the proper level.  
Refer to "CHECKING THE CLUTCH FLUID LEVEL".




### **!** WARNING

**After bleeding the hydraulic clutch system, check the clutch operation.**



## CLEANING THE AIR FILTER ELEMENT

CHK  
ADJ

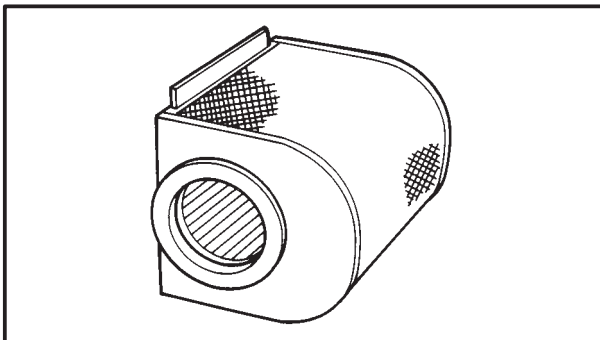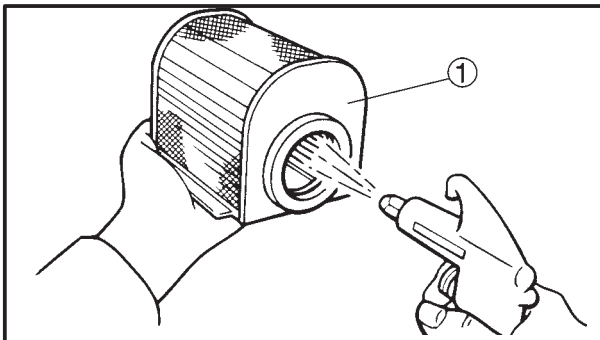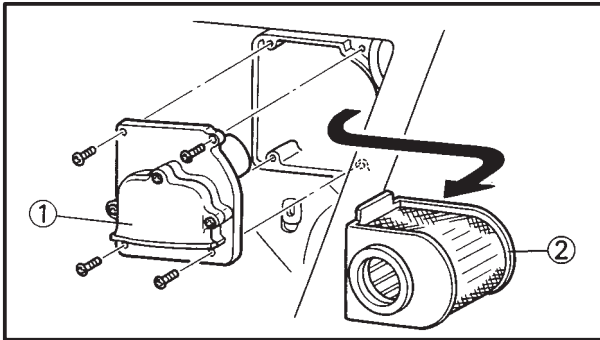

EAS00087

### CLEANING THE AIR FILTER ELEMENT

1. Remove:
  - side cover (right)  
Refer to "SEAT, SIDE COVER AND FUEL TANK".
  - air filter case cover ①
2. Remove:
  - air filter element ②
3. Clean:
  - air filter element ①  
Apply compressed air to the inner surface of the air filter element.
4. Check:
  - air filter element  
Damage → Replace.
5. Install:
  - air filter element
  - air filter case cover  
(along with the gasket)

#### CAUTION:

Never operate the engine without the air filter element installed. Unfiltered air will cause rapid wear of engine parts and may damage the engine. Operating the engine without the air filter element will also affect the carburetor tuning, leading to poor engine performance and possible overheating.

#### NOTE:

Make sure that the air filter element is properly installed in the air filter case.

6. Install:
  - side cover (right)  
Refer to "SEAT, SIDE COVER AND FUEL TANK".




EAS00095

### CHECKING THE CARBURETOR JOINTS AND INTAKE MANIFOLDS

The following procedure applies to all of the carburetor joints and intake manifolds.

1. Remove:
  - seat
  - side cover
  - fuel tankRefer to "SEAT, SIDE COVER AND FUEL TANK".

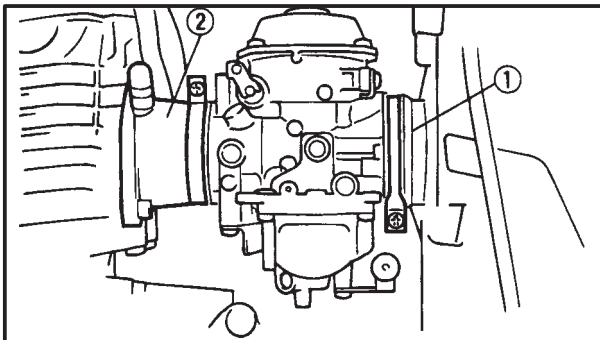

2. Check:
  - carburetor joint ①
  - intake manifold ②Cracks/damage → Replace.  
Refer to "CARBURETOR" in chapter 6.


3. Install:
  - fuel tank
  - side cover
  - seatRefer to "SEAT, SIDE COVER AND FUEL TANK".

EAS00096

### CHECKING THE FUEL AND VACUUM HOSES

The following procedure applies to all of the fuel and vacuum hoses.

1. Remove:
  - seat
  - fuel tankRefer to "SEAT, SIDE COVER AND FUEL TANK".

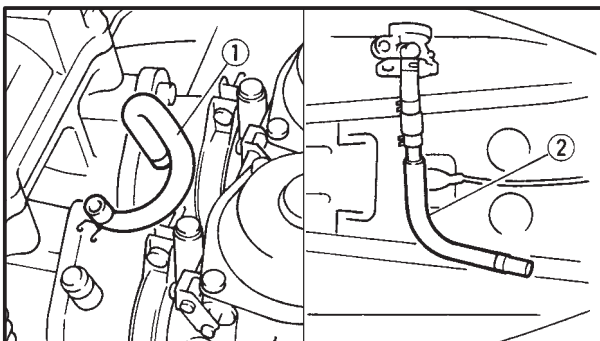


2. Check:
  - vacuum hose ①
  - fuel hose ②Cracks/damage → Replace.  
Loose connection → Connect properly.

3. Install:
  - fuel tank
  - seatRefer to "SEAT, SIDE COVER AND FUEL TANK".

## CHECKING THE CRANKCASE BREATHER HOSE/ CHECKING THE EXHAUST SYSTEM

CHK  
ADJ

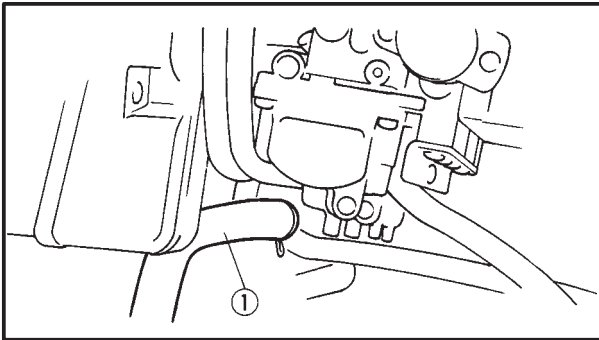

EAS00098

### CHECKING THE CRANKCASE BREATHER HOSE

EAS00100

#### 1. Check:

- crankcase breather hose (1)
- Cracks/damage → Replace.
- Loose connection → Connect properly.

#### CAUTION:

**Make sure that the crankcase breather hose is routed correctly.**

EAS00099

### CHECKING THE EXHAUST SYSTEM



The following procedure applies to all of the exhaust pipes, mufflers and gaskets.

#### 1. Check:

- exhaust pipe (1)
- muffler (2)
- Cracks/damage → Replace.
- gasket (3), (4), (5)
- Exhaust gas leaks → Replace.

#### 2. Check:

- tightening torque

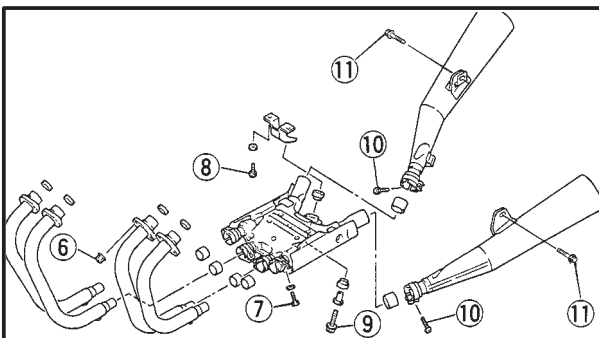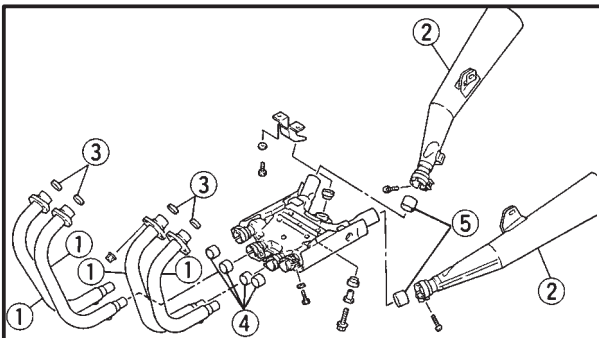

Exhaust pipe nut (6)  
25 Nm (2.5 m•kg)

Exhaust pipe and exhaust chamber screw (7)  
20 Nm (2.0 m•kg)

Muffler bracket bolt (8)  
20 Nm (2.0 m•kg)

Exhaust chamber bolt (9)  
25 Nm (2.5 m•kg)

Exhaust chamber and muffler bolt (10)


20 Nm (2.0 m•kg)

Muffler and stay bolt (11)

20 Nm (2.0 m•kg)

**ADJUSTING THE FRONT BRAKE/  
ADJUSTING THE REAR BRAKE**

**CHK  
ADJ**

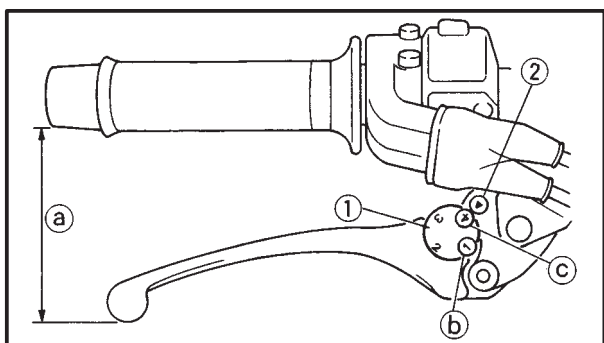

EAS00107

**CHASSIS  
ADJUSTING THE FRONT BRAKE**

1. Adjust:

- brake lever position  
(distance **a** from the throttle grip to the brake lever)



- a. While pushing the brake lever forward, turn the adjusting dial **1** until the brake lever is in the desired position.

**NOTE:**

Be sure to align the setting on the adjusting dial with the arrow mark **2** on the brake lever holder.

Position #1 <b>b</b>	Distance <b>a</b> is the largest.
Position #4 <b>c</b>	Distance <b>a</b> is the smallest.

**! WARNING**

After adjusting the brake lever position, make sure that the pin on the brake lever holder is firmly inserted in the hole in the adjusting dial.




EAS00110

**ADJUSTING THE REAR BRAKE**

1. Check:

- brake pedal position  
(distance **a** from the top of the rider footrest to the top of the brake pedal)
- Out of specification → Adjust.

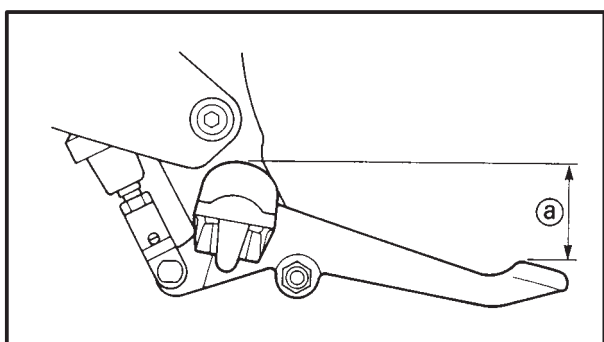

**Brake pedal position (below the top of the rider footrest)  
45 mm**


2. Adjust:

- brake pedal position



- a. Loosen the locknut **1**.  
b. Turn the adjusting bolt **2** in direction **a** or **b** until the specified brake pedal position is obtained.

<b>Direction <b>a</b></b>	<b>Brake pedal is lowered.</b>
<b>Direction <b>b</b></b>	<b>Brake pedal is raised.</b>

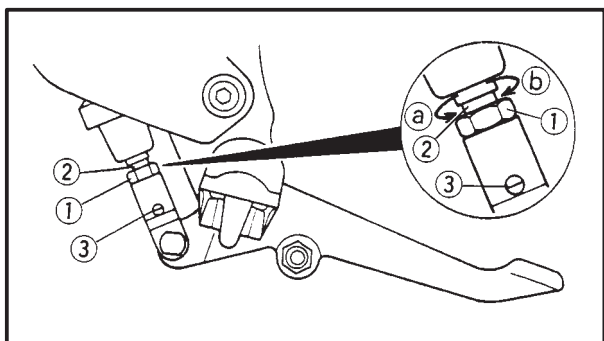

**! WARNING**

After adjusting the brake pedal position, check that the end of the adjusting bolt **2** is visible through the hole **3**.

## ADJUSTING THE REAR BRAKE/ CHECKING THE BRAKE FLUID LEVEL

**CHK**  
**ADJ**



EAS00110

c. Tighten the locknut ① to specification.



**Locknut**  
**18 Nm (1.8 m•kg)**

### **! WARNING**

A soft or spongy feeling in the brake pedal can indicate the presence of air in the brake system. Before the vehicle is operated, the air must be removed by bleeding the brake system. Air in the brake system will considerably reduce braking performance and could result in loss of control and possibly an accident. Therefore, inspect and, if necessary, bleed the brake system.

### **CAUTION:**

After adjusting the brake pedal position, make sure that there is no brake drag.

3. Adjust:

- rear brake light switch

Refer to “ADJUSTING THE REAR BRAKE LIGHT SWITCH”.

EAS00115

## CHECKING THE BRAKE FLUID LEVEL

1. Stand the motorcycle on a level surface.


### **NOTE:**

- Place the motorcycle on a suitable stand.
- Make sure that the motorcycle is upright.

2. Check:

- brake fluid level

Below the minimum level mark (a) → Add the recommended brake fluid to the proper level.

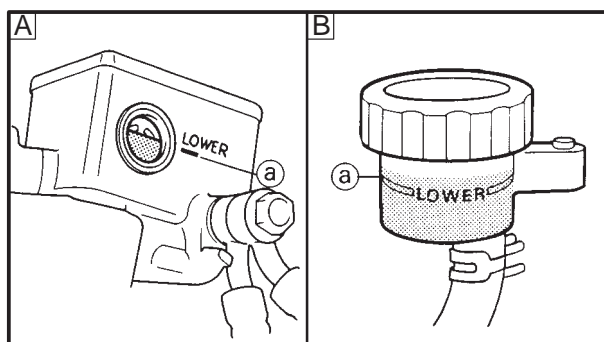

**Recommended brake fluid**  
**DOT 4**

**A** Front brake

**B** Rear brake

### **! WARNING**

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.



- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

**CAUTION:**

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilled brake fluid immediately.

**NOTE:**

In order to ensure a correct reading of the brake fluid level, make sure that the top of the reservoir is horizontal.

EAS00118

**CHECKING THE BRAKE PADS**


The following procedure applies to all of the brake pads.

1. Operate the brake.
2. Check:

- front brake pad
- rear brake pad

Brake pad almost worn to the wear indicator line ① → Replace the brake pads as a set. Refer to “REPLACING THE FRONT BRAKE PADS” and “REPLACING THE REAR BRAKE PADS” in chapter 6.

- A Front brake
- B Rear brake

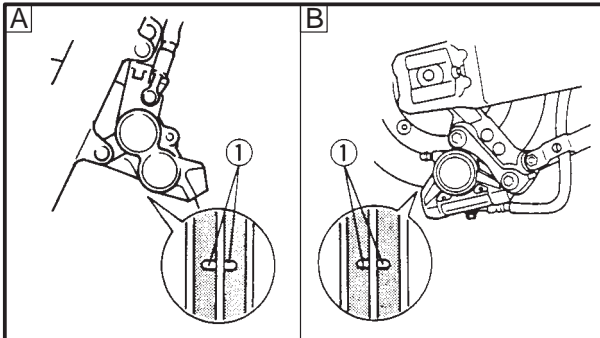

EAS00128


**ADJUSTING THE REAR BRAKE LIGHT SWITCH**

**NOTE:**

The rear brake light switch is operated by movement of the brake pedal.

The rear brake light switch is properly adjusted when the brake light comes on just before the braking effect starts.

1. Check:
  - rear brake light operation timing  
Incorrect → Adjust.
2. Adjust:
  - rear brake light operation timing

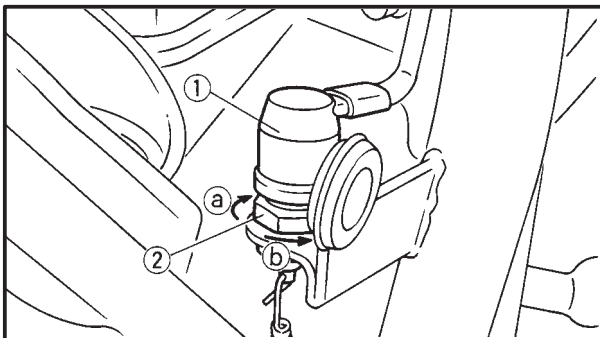

- a. Hold the main body ① of the rear brake light switch so that it does not rotate and turn the adjusting nut ② in direction a or b until the rear brake light comes on at the proper time.

Direction a	Brake light comes on sooner.
Direction b	Brake light comes on later.





**Bleed screw**  
**6 Nm (0.6 m•kg)**

- k. Fill the reservoir to the proper level.  
Refer to “CHECKING THE BRAKE FLUID LEVEL”.

**⚠ WARNING**

**After bleeding the hydraulic brake system, check the brake operation.**



EAS00136

**ADJUSTING THE SHIFT PEDAL**

1. Check:
  - shift pedal position  
The end ① of the shift pedal is above the shift rod. (The angle ② should be approximately 90°.)  
Incorrect → Adjust.
2. Adjust:
  - shift pedal position



- a. Loosen both locknuts ②.
- b. Turn the shift rod ③ in direction ④ or ⑤ to obtain the correct shift pedal position.

<b>Direction ④</b>	<b>Shift pedal is raised.</b>
<b>Direction ⑤</b>	<b>Shift pedal is lowered.</b>

- Tighten both locknuts.



EAS00140



**ADJUSTING THE DRIVE CHAIN SLACK**

**NOTE:**

The drive chain slack must be checked at the tightest point on the chain.

**CAUTION:**

A drive chain that is too tight will overload the engine and other vital parts, and one that is too loose can skip and damage the swingarm or cause an accident. Therefore, keep the drive chain slack within the specified limits.

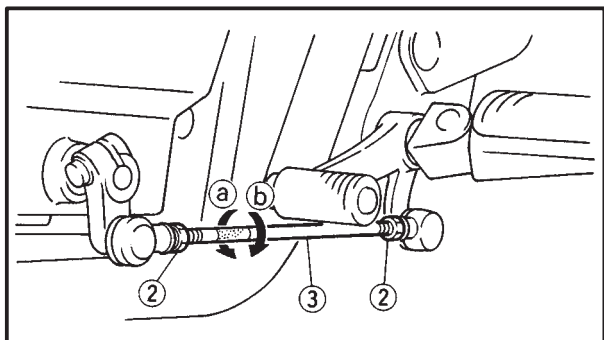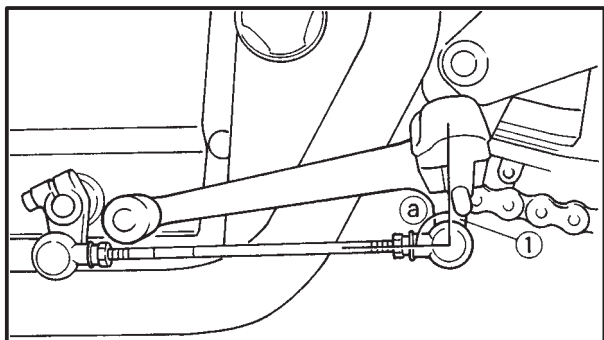



# ADJUSTING THE DRIVE CHAIN SLACK/ LUBRICATING THE DRIVE CHAIN



## CAUTION:

Do not loosen the wheel axle nut after tightening it to the specified torque. If the groove in the wheel axle nut is not aligned with the cotter pin hole in the wheel axle, tighten the nut further until they are aligned.

- i. Tighten the tensionbar bolt to specification.



**Tensionbar bolt**  
**23 Nm (2.3 m•kg)**




EAS00142

## LUBRICATING THE DRIVE CHAIN

The drive chain consists of many interacting parts. If the drive chain is not maintained properly, it will wear out rapidly.

Therefore, the drive chain should be serviced, especially when the motorcycle is used in dusty areas. This motorcycle has a drive chain with small rubber O-rings ① between each side plate. Steam cleaning, high-pressure washing, certain solvents, and the use of a coarse brush can damage these O-rings. therefore, use only kerosine to clean the drive chain. Wipe the drive chain dry and thoroughly lubricate it with engine oil or chain lubricant that is suitable for O-ring chains. Do not use any other lubricants on the drive chain since they may contain solvents that could damage the O-rings.

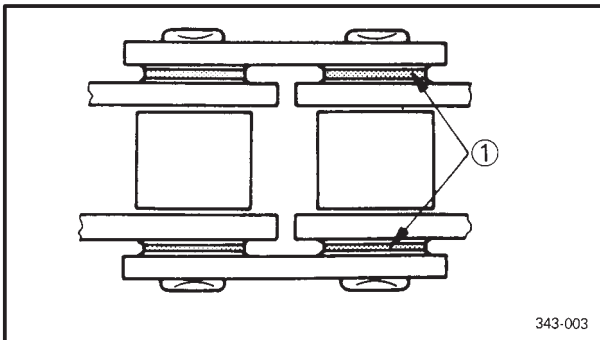

**Recommended lubricant**  
**Engine oil or chain lubricant**  
**suitable for O-ring chains**

## CHECKING AND ADJUSTING THE STEERING HEAD

CHK  
ADJ



EAS00146

### CHECKING AND ADJUSTING THE STEERING HEAD





1. Stand the motorcycle on a level surface.

#### **⚠ WARNING**

Securely support the motorcycle so that there is no danger of it falling over.

#### **NOTE:**

Place the motorcycle on a suitable stand so that the front wheel is elevated.

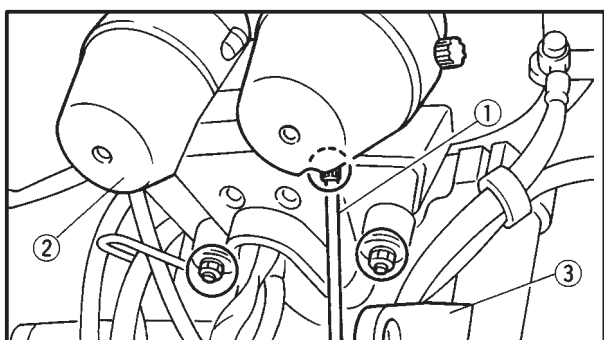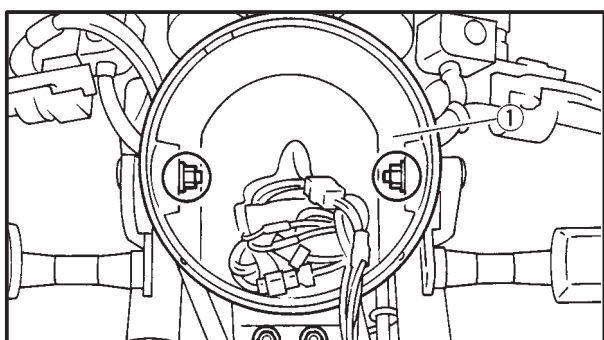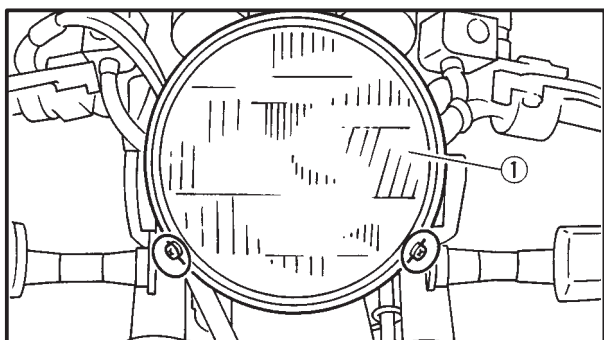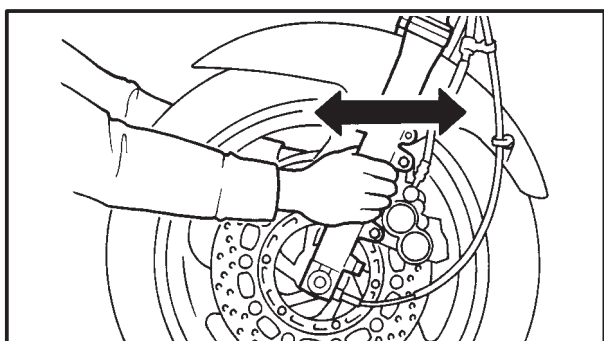


2. Check:
  - steering head  
Grasp the bottom of the front fork legs and gently rock the front fork.  
Looseness or binding → Adjust the steering head.
3. Remove:
  - seat
  - fuel tank  
Refer to "SEAT, SIDE COVER AND FUEL TANK".
4. Remove:
  - headlight unit ①
5. Remove:
  - headlight body ①
6. Disconnect:
  - speed meter cable ①
7. Remove:
  - meter assembly ②
  - headlight stay ③



## CHECKING AND ADJUSTING THE STEERING HEAD/ CHECKING THE FRONT FORK

**CHK**  
**ADJ**

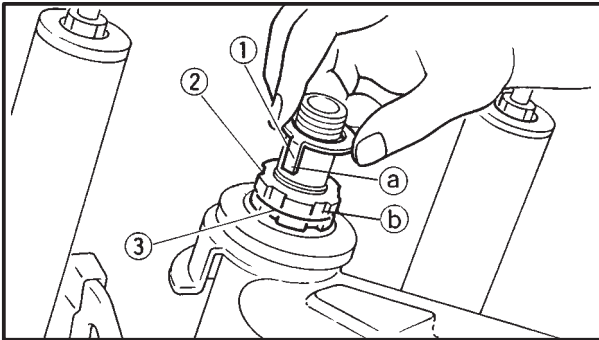

- e. Install the rubber washer (3).
- f. Install the upper ring nut (2).
- g. Finger tighten the upper ring nut (2), then align the slots of both ring nuts. If necessary, hold the lower ring nut and tighten the upper ring nut until their slots are aligned.
- h. Install the lock washer (1).

**NOTE:**

Make sure that the lock washer tabs (a) sit correctly in the ring nut slots (b).

11. Install:

- handle crown



**Steering stem nut**  
**110 Nm (11.0 m•kg)**  
**Upper bracket pinch bolt**  
**30 Nm (3.0 m•kg)**

12. Install:

- handlebar

13. Install:

- upper handlebar holder



**Handlebar holder bolt**  
**23 Nm (2.3 m•kg)**

EAS00149

## CHECKING THE FRONT FORK

1. Stand the motorcycle on a level surface.

**⚠ WARNING**

**Securely support the motorcycle so that there is no danger of it falling over.**


2. Check:

- inner tube  
Damage/scratches → Replace.
- oil seal  
Oil leakage → Replace.

3. Hold the motorcycle upright and apply the front brake.

4. Check:

- operation  
Push down hard on the handlebar several times and check if the front fork rebounds smoothly.  
Unsmooth operation → Repair.  
Refer to "FRONT FORK" in chapter 6.

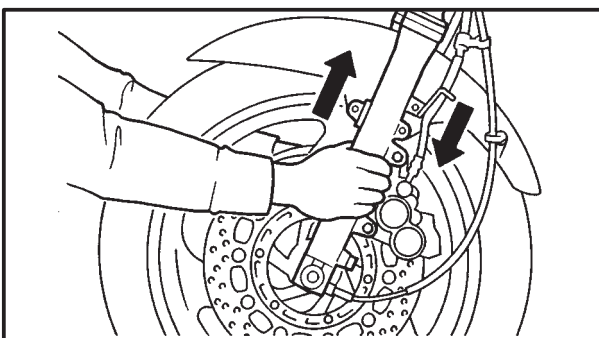







# CHECKING THE TIRES




EAS00162

## CHECKING THE TIRES

The following procedure applies to both of the tires.

1. Measure:
  - tire pressure
  - Out of specification → Regulate.

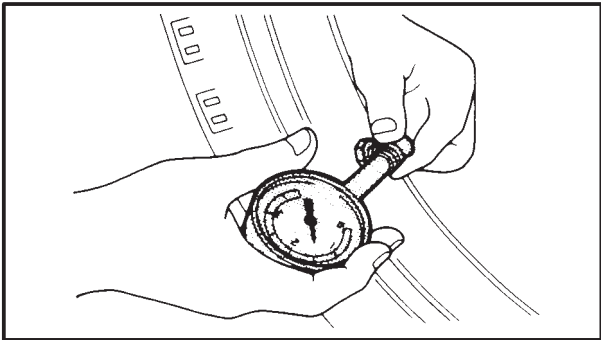

### **⚠ WARNING**

- The tire pressure should only be checked and regulated when the tire temperature equals the ambient air temperature.
- The tire pressure and the suspension must be adjusted according to the total weight (including cargo, rider, passenger and accessories) and the anticipated riding speed.
- Operation of an overloaded motorcycle could cause tire damage, an accident or an injury.


**NEVER OVERLOAD THE MOTORCYCLE.**

Basic weight (with oil and a full fuel tank)	253 kg	
Maximum load	207 kg	
Cold tire pressure	Front tire	Rear tire
Up to 90 kg load*	250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar)	250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar)
90 kg × Maximum load*	250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar)	290 kPa (2.9 kg/cm <sup>2</sup> , 2.9 bar)
High speed riding	250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar)	290 kPa (2.9 kg/cm <sup>2</sup> , 2.9 bar)

\* Load is the total weight of cargo, rider, passenger and accessories

## CHECKING THE TIRES

CHK  
ADJ

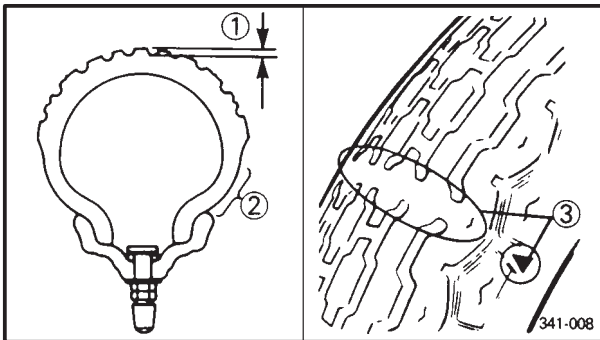

### ⚠ WARNING

It is dangerous to ride with a worn-out tire. When the tire tread reaches the wear limit, replace the tire immediately.

#### 2. Check:

- tire surfaces
- Damage/wear → Replace the tire.




**Minimum tire tread depth**  
**1.6 mm**

- ① Tire tread depth
- ② Side wall
- ③ Wear indicator

### ⚠ WARNING

- Do not use a tubeless tire on a wheel designed only for tube tires to avoid tire failure and personal injury from sudden deflation.
- When using a tube tire, be sure to install the correct tube.
- Always replace a new tube tire and a new tube as a set.
- To avoid pinching the tube, make sure that the wheel rim band and tube are centered in the wheel groove.
- Patching a punctured tube is not recommended. If it is absolutely necessary to do so, use great care and replace the tube as soon as possible with a good quality replacement.

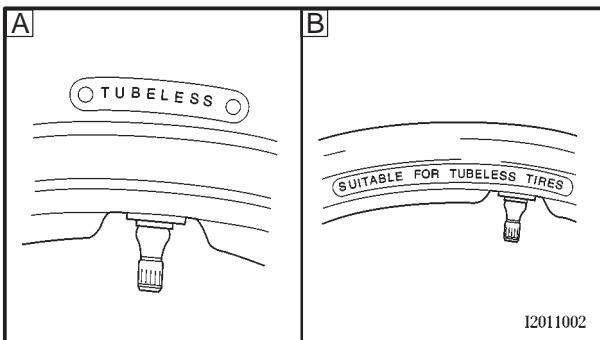

A Tire

B Wheel

Tube wheel	Tube tire only
Tubeless wheel	Tube or tubeless tire

After extensive tests, the tires listed below have been approved by Yamaha Motor Co., Ltd. for this model. The front and rear tires should always be by the same manufacturer and of the same design. No guarantee concerning handling characteristics can be given if a tire combination other than one approved by Yamaha is used on this motorcycle.

## CHECKING THE TIRES/CHECKING THE WHEELS

CHK  
ADJ



### Front tire

Manufacturer	Size	Type
MICHELIN	120/70ZR17	MACADAM 90X
DUNLOP	120/70ZR17	D207F
BRIDGESTONE	120/70ZR17	BT57F


### Rear tire

Manufacturer	Size	Type
MICHELIN	180/55ZR17	MACADAM 90X
DUNLOP	180/55ZR17	D207
BRIDGESTONE	180/55ZR17	BT57R

### **⚠ WARNING**

New tires have a relatively low grip on the road surface until they have been slightly worn.

Therefore, approximately 100 km should be traveled at normal speed before any high-speed riding is done.

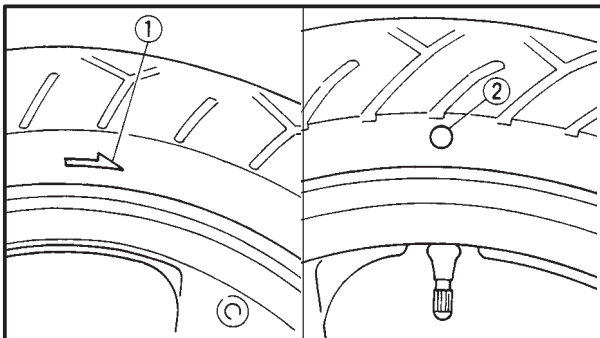

### NOTE:

For tires with a direction of rotation mark (1):

- Install the tire with the mark pointing in the direction of wheel rotation.
- Align the mark (2) with the valve installation point.

EAS00168

### CHECKING THE WHEELS

The following procedure applies to both of the wheels.

1. Check:

- wheel  
Damage/out-of-round → Replace.

### **⚠ WARNING**

Never attempt to make any repairs to the wheel.

### NOTE:

After a tire or wheel has been changed or replaced, always balance the wheel.



EAS00170

### CHECKING AND LUBRICATING THE CABLES

The following procedure applies to all of the cable sheaths and cables.

#### **WARNING**

**Damaged cable sheaths may cause the cable to corrode and interfere with its movement. Replace damaged cable sheaths and cables as soon as possible.**

1. Check:
  - cable sheath  
Damage → Replace.
2. Check:
  - cable operation  
Unsmooth operation → Lubricate.

	<b>Recommended lubricant</b> Engine oil or a suitable cable lubricant
---	--

#### **NOTE:**

Hold the cable end upright and pour a few drops of lubricant into the cable sheath or use a suitable lubing device.

EAS00171

### LUBRICATING THE LEVERS AND PEDALS

Lubricate the pivoting point and metal-to-metal moving parts of the levers and pedals.

	<b>Recommended lubricant</b> Engine oil
---	--

EAS00172

### LUBRICATING THE SIDESTAND

Lubricate the pivoting point and metal-to-metal moving parts of the sidestand.

	<b>Recommended lubricant</b> Engine oil
---	--

EAS00173

### LUBRICATING THE CENTERSTAND


Lubricate the pivoting point and metal-to-metal moving parts of the centerstand.

	<b>Recommended lubricant</b> Engine oil
---	--

EAS00174


### LUBRICATING THE REAR SUSPENSION

Lubricate the pivoting point and metal-to-metal moving parts of the rear suspension.

	<b>Recommended lubricant</b> Molydenum disulfide grease
---	--

## CHECKING AND CHARGING THE BATTERY

CHK  
ADJ

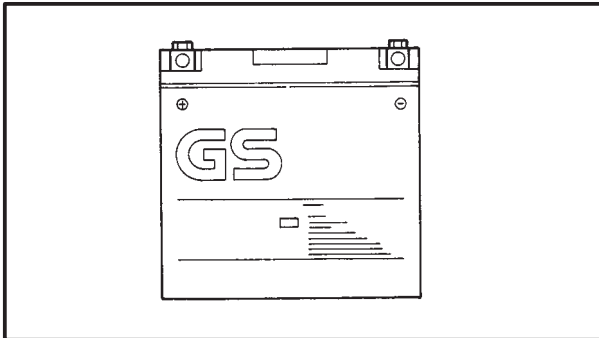

EAS00178

### ELECTRICAL SYSTEM CHECKING AND CHARGING THE BATTERY

#### **! WARNING**

Batteries generate explosive hydrogen gas and contain electrolyte which is made of poisonous and highly caustic sulfuric acid. Therefore, always follow these preventive measures:

- Wear protective eye gear when handling or working near batteries.
- Charge batteries in a well-ventilated area.
- Keep batteries away from fire, sparks or open flames (e.g., welding equipment, lighted cigarettes).
- DO NOT SMOKE when charging or handling batteries.
- KEEP BATTERIES AND ELECTROLYTE OUT OF REACH OF CHILDREN.
- Avoid bodily contact with electrolyte as it can cause severe burns or permanent eye injury.

First aid in case of bodily contact:

External

- SKIN – Wash with water.
- EYES – Flush with water for 15 minutes and get immediate medical attention.

Internal

Drink large quantities of water or milk followed with milk of magnesia, beaten egg or vegetable oil. Get immediate medical attention.

#### **CAUTION:**


- This is a sealed battery. Never remove the sealing caps because the balance between cells will not be maintained and battery performance will deteriorate.
- Charging time, charging amperage and charging voltage for a MF battery are different from those of conventional batteries. The MF battery should be charged as explained in the charging method illustrations. If the battery is overcharged, the electrolyte level will drop considerably. Therefore, take special care when charging the battery.





## CHECKING AND CHARGING THE BATTERY

CHK  
ADJ

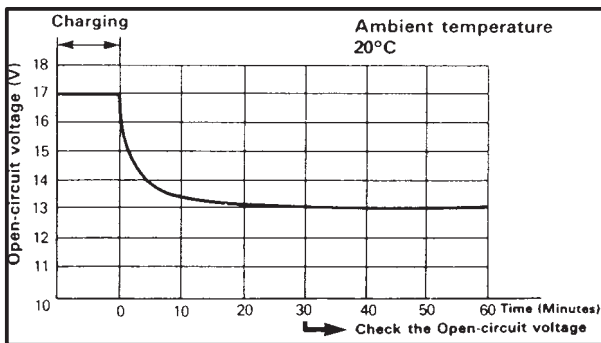

### **⚠ WARNING**

Do not quick charge a battery.

### **CAUTION:**


- Make sure that the battery vent is free of obstructions.
- Never remove the MF battery sealing caps.
- Do not use a high-rate battery charger. They force a high-amperage current into the battery quickly and can cause battery overheating and battery plate damage.
- If it is impossible to regulate the charging current on the battery charger, be careful not to overcharge the battery.
- When charging a battery, be sure to remove it from the motorcycle. (If charging has to be done with the battery mounted on the motorcycle, disconnect the negative lead from the battery terminal.)
- To reduce the chance of sparks, do not plug in the battery charger until the battery charger leads are connected to the battery.
- Before removing the battery charger lead clips from the battery terminals, be sure to turn off the battery charger.
- Make sure that the battery charger lead clips are in full contact with the battery terminal and that they are not shorted. A corroded battery charger lead clip may generate heat in the contact area and a weak clip spring may cause sparks.
- If the battery becomes hot to the touch at any time during the charging process, disconnect the battery charger and let the battery cool before reconnecting it. Hot batteries can explode!
- As shown in the following illustration, the open-circuit voltage of a MF battery stabilizes about 30 minutes after charging has been completed. Therefore, wait 30 minutes after charging is completed before measuring the open-circuit voltage.

# CHECKING AND CHARGING THE BATTERY

CHK  
ADJ




## Charging method using a variable-voltage charger

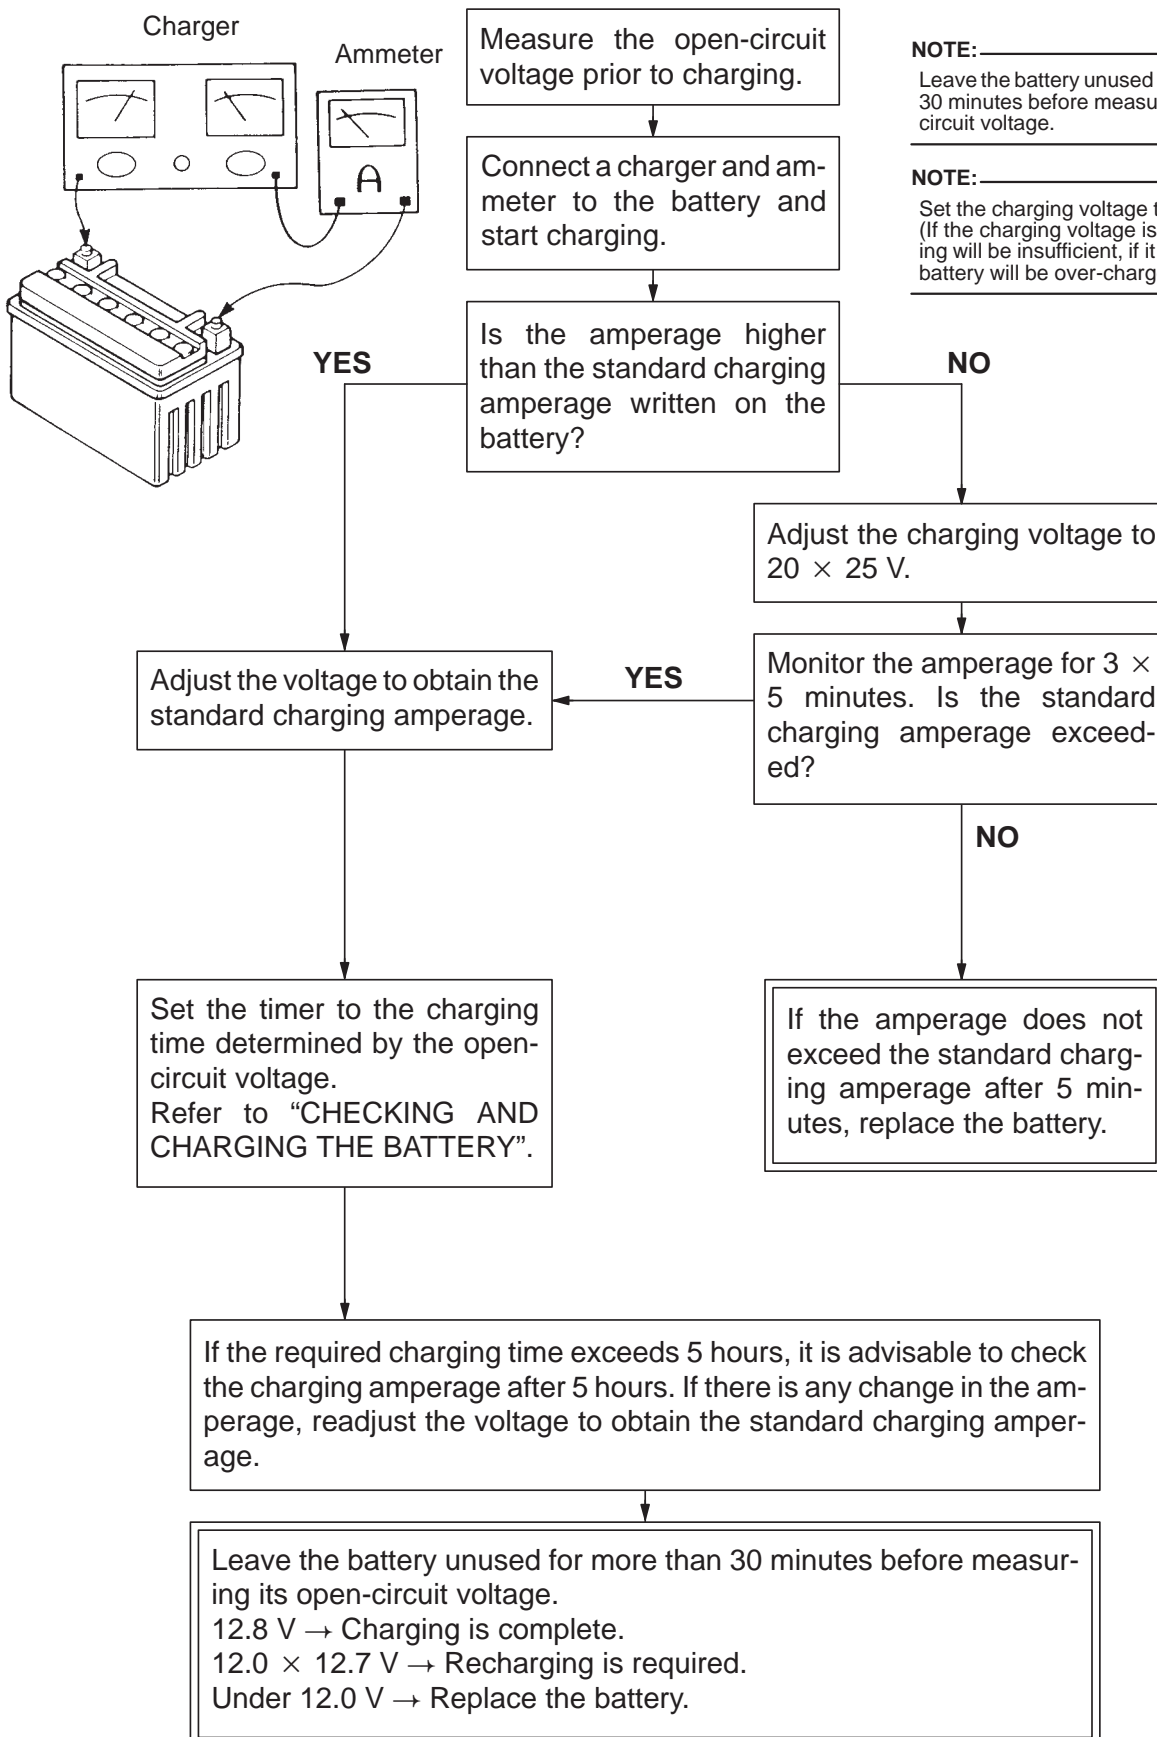

# CHECKING AND CHARGING THE BATTERY



## Charging method using a constant-voltage charger

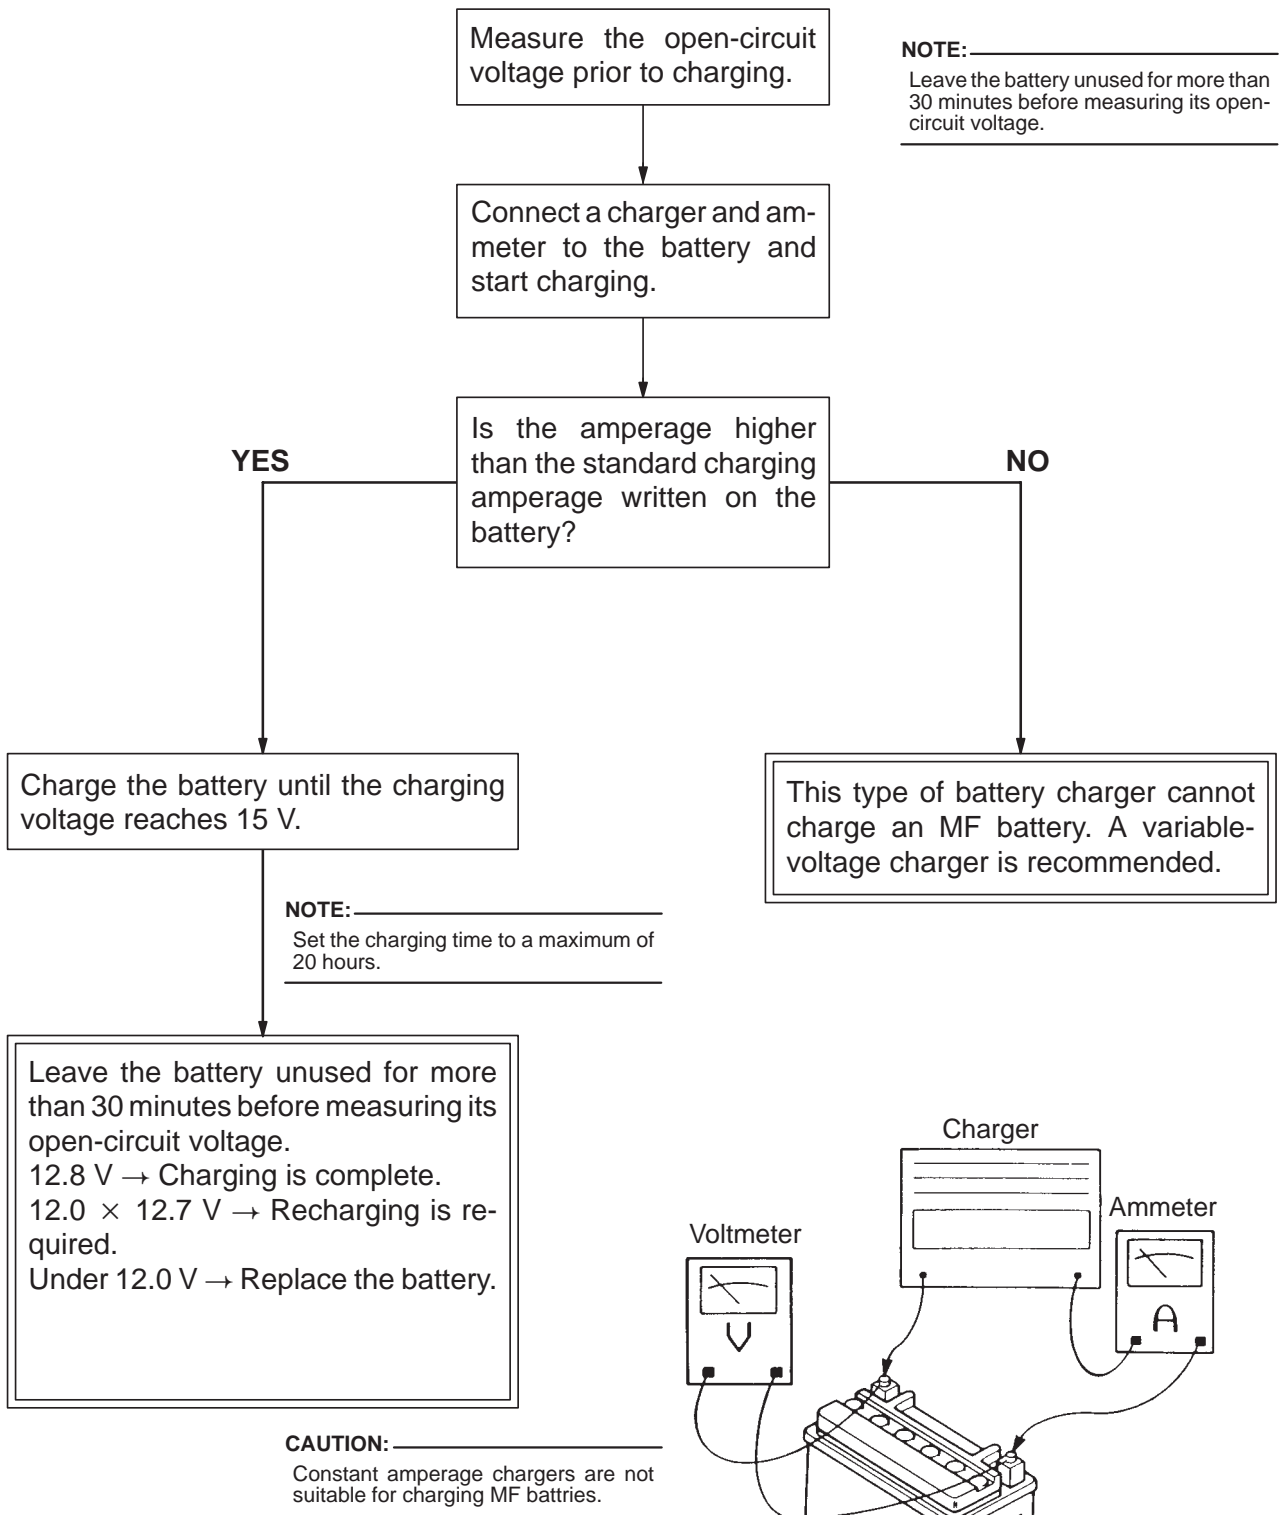



# CHECKING THE FUSES



	<b>Pocket tester</b> 90890-03112
---	-------------------------------------

b. If the pocket tester indicates “∞”, replace the fuse.



3. Replace:  
•blown fuse



- a. Turn off the ignition.
- b. Install a new fuse of the correct amperage rating.
- c. Turn on the switches to verify if the electrical circuit is operational.
- d. If the fuse immediately blows again, check the electrical circuit.



Fuses	Amperage rating	Quantity
Main fuse	30 A	1
Headlight fuse	15 A	1
Signaling system fuse	15 A	1
Ignition fuse	7.5 A	1
Reserve	30 A	1
	15 A	1
	7.5 A	1




## **WARNING**

Never use a fuse with an amperage rating other than that specified. Improvising or using a fuse with the wrong amperage rating may cause extensive damage to the electrical system, cause the lighting and ignition systems to malfunction and could possibly cause a fire.

4. Install:  
•seat

## REPLACING THE HEADLIGHT BULB

CHK  
ADJ

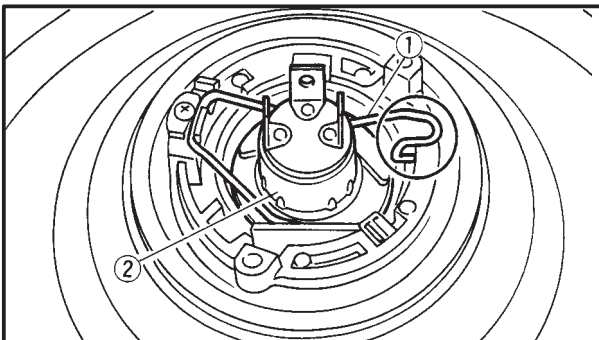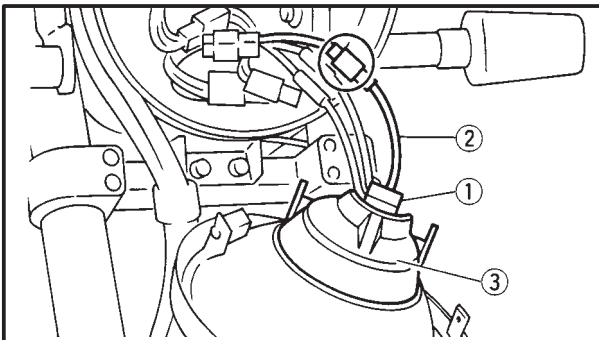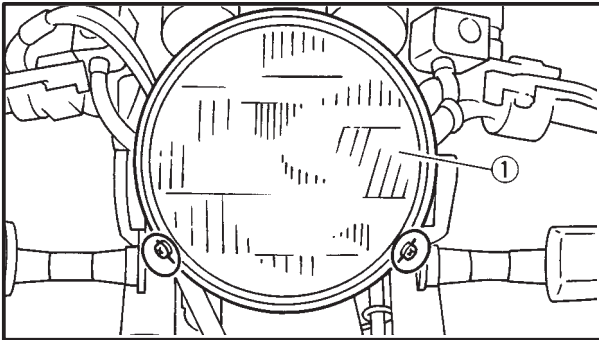

EAS00182

### REPLACING THE HEADLIGHT BULB

1. Remove:
  - headlight unit ①

2. Disconnect:
  - headlight lead ①
  - auxiliary light lead ②

3. Remove:
  - cover ③

4. Remove:
  - headlight bulb holder ①

5. Remove:
  - headlight bulb ②

#### **⚠ WARNING**


Since the headlight bulb gets extremely hot, keep flammable products and your hands away from the bulb until it has cooled down.

6. Install:
  - headlight bulb (New)  
Secure the new headlight bulb with the headlight bulb holder.

#### **CAUTION:**

Avoid touching the glass part of the headlight bulb to keep it free from oil, otherwise the transparency of the glass, the life of the bulb and the luminous flux will be adversely affected. If the headlight bulb gets soiled, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.



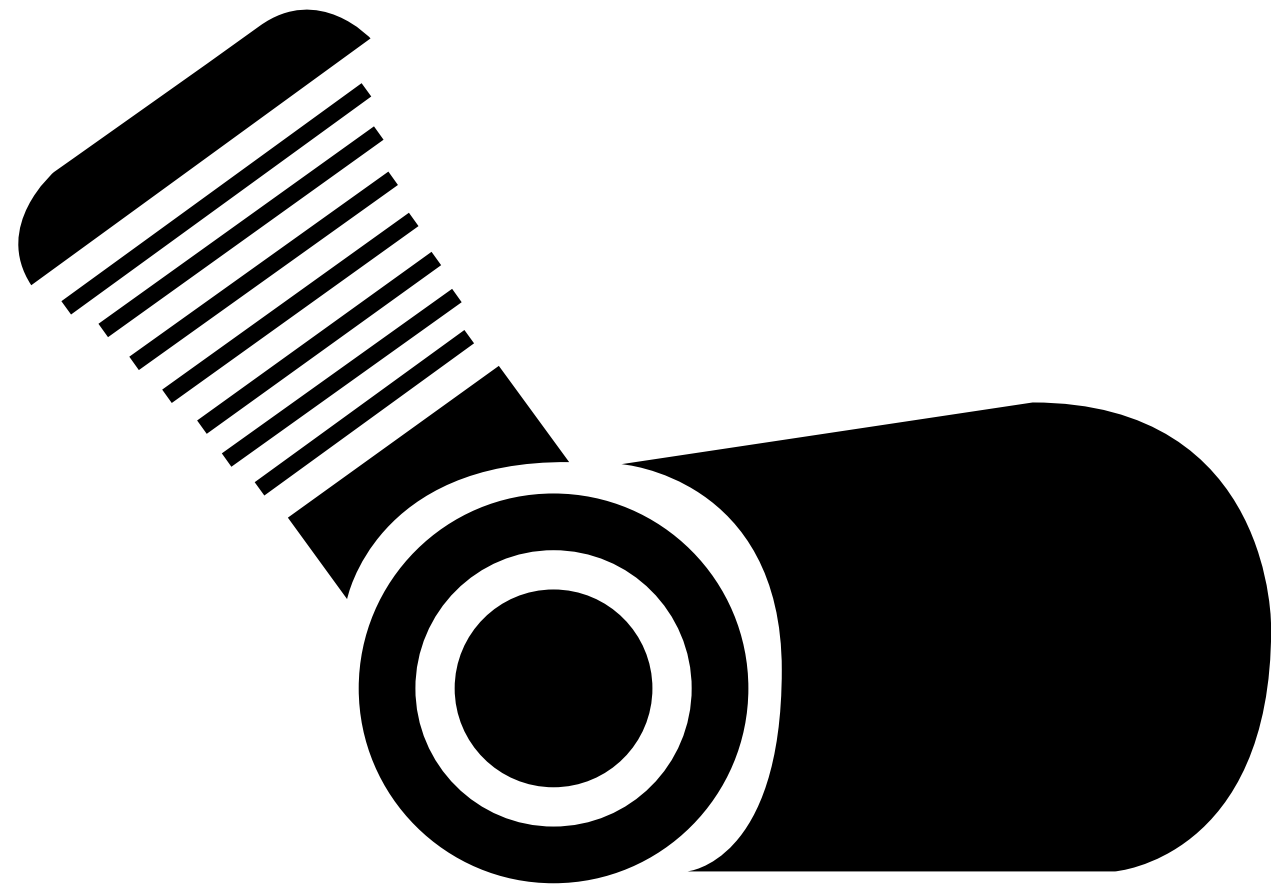

**ENG**

**4**





---

## CHAPTER 4. ENGINE OVERHAUL

<b>ENGINE</b> .....	4-1
LEADS, HOSES AND EXHAUST PIPES .....	4-1
LEADS AND DRIVE SPROCKET .....	4-3
ENGINE .....	4-5
INSTALLING THE ENGINE .....	4-6
<b>CAMSHAFT</b> .....	4-7
CYLINDER HEAD COVER .....	4-7
CAMSHAFTS .....	4-8
REMOVING THE CAMSHAFTS .....	4-9
CHECKING THE CAMSHAFTS .....	4-10
CHECKING THE CAMSHAFT SPROCKETS AND TIMING CHAIN GUIDES .....	4-11
CHECKING THE TIMING CHAIN TENSIONER .....	4-11
INSTALLING THE CAMSHAFTS .....	4-12
<b>CYLINDER HEAD</b> .....	4-15
REMOVING THE CYLINDER HEAD .....	4-16
CHECKING THE CYLINDER HEAD .....	4-16
INSTALLING THE CYLINDER HEAD .....	4-17
<b>VALVES AND VALVE SPRINGS</b> .....	4-18
REMOVING THE VALVES .....	4-19
CHECKING THE VALVES AND VALVE GUIDES .....	4-20
CHECKING THE VALVE SEATS .....	4-22
CHECKING THE VALVE SPRINGS .....	4-23
CHECKING THE VALVE LIFTERS .....	4-24
INSTALLING THE VALVES .....	4-24
<b>CYLINDERS AND PISTONS</b> .....	4-26
REMOVING THE CYLINDERS AND PISTONS .....	4-27
CHECKING THE CYLINDERS AND PISTONS .....	4-27
CHECKING THE PISTON RINGS .....	4-29
INSTALLING THE PISTONS AND CYLINDERS .....	4-30
<b>CLUTCH</b> .....	4-32
CLUTCH COVER .....	4-32
CLUTCH .....	4-33
REMOVING THE CLUTCH .....	4-35
CHECKING THE FRICTION PLATES .....	4-35
CHECKING THE CLUTCH PLATES .....	4-36
CHECKING THE CLUTCH SPRING PLATE .....	4-36
CHECKING THE CLUTCH HOUSING .....	4-36
CHECKING THE CLUTCH SPRING .....	4-36
CHECKING THE CLUTCH SPRING PLATE .....	4-36
CHECKING THE CLUTCH HOUSING .....	4-37
CHECKING THE CLUTCH BOSS .....	4-37



---

CHECKING THE PRESSURE PLATE .....	4-37
CHECKING THE CLUTCH PUSH RODS .....	4-38
INSTALLING THE CLUTCH .....	4-38
CLUTCH MASTER CYLINDER .....	4-41
CHECKING THE CLUTCH MASTER CYLINDER .....	4-43
ASSEMBLING THE CLUTCH MASTER CYLINDER .....	4-44
INSTALLING THE CLUTCH MASTER CYLINDER .....	4-44
CLUTCH RELEASE CYLINDER .....	4-47
DISASSEMBLING THE CLUTCH RELEASE CYLINDER .....	4-49
CHECKING THE CLUTCH RELEASE CYLINDER .....	4-49
INSTALLING THE CLUTCH RELEASE CYLINDER .....	4-50
<b>OIL PUMP .....</b>	<b>4-52</b>
CHECKING THE OIL PUMP .....	4-54
ASSEMBLING THE OIL PUMP .....	4-55
INSTALLING THE OIL PUMP .....	4-55
<b>SHIFT SHAFT .....</b>	<b>4-56</b>
CHECKING THE SHIFT SHAFT .....	4-57
CHECKING THE STOPPER LEVER .....	4-57
INSTALLING THE SHIFT SHAFT .....	4-57
<b>TIMING PLATE AND PICKUP COIL .....</b>	<b>4-59</b>
<b>OIL PAN .....</b>	<b>4-60</b>
REMOVING THE OIL PAN .....	4-61
CHECKING THE RELIEF VALVE .....	4-61
CHECKING THE OIL DELIVERY PIPES .....	4-61
CHECKING THE OIL STRAINER .....	4-61
INSTALLING THE OIL STRAINER .....	4-62
INSTALLING THE OIL PAN .....	4-62
<b>CRANKCASE .....</b>	<b>4-63</b>
DISASSEMBLING THE CRANKCASE .....	4-65
CHECKING THE CRANKCASE .....	4-66
ASSEMBLING THE CRANKCASE .....	4-66
<b>STARTER CLUTCH .....</b>	<b>4-68</b>
CHECKING THE STARTER CLUTCH .....	4-70
CHECKING THE GENERATOR SHAFT .....	4-71
INSTALLING THE STARTER CLUTCH ROLLER .....	4-71
<b>CRANKSHAFT .....</b>	<b>4-72</b>
CRANKSHAFT .....	4-72
CONNECTING ROD .....	4-73
REMOVING THE CRANKSHAFT ASSEMBLY .....	4-74
REMOVING THE CONNECTING RODS .....	4-74
CHECKING THE CRANKSHAFT AND CONNECTING RODS .....	4-74
CHECKING THE TIMING CHAIN .....	4-79
CHECKING THE HY-VO CHAIN .....	4-79



---

CHECKING THE BEARINGS AND OIL SEALS .....	4-79
CHECKING THE CIRCLIPS AND WASHERS .....	4-79
INSTALLING THE CONNECTING RODS .....	4-79
INSTALLING THE CRANKSHAFT .....	4-81


<b>TRANSMISSION .....</b>	<b>4-82</b>
SHIFT CAM AND SHIFT FORK .....	4-85
CHECKING THE SHIFT FORK .....	4-86
CHECKING THE SHIFT DRUM ASSEMBLY .....	4-86
CHECKING THE TRANSMISSION .....	4-86
INSTALLING THE SHIFT FORKS AND SHIFT DRUM ASSEMBLY	4-87
INSTALLING THE TRANSMISSION .....	4-88




EAS0018

# ENGINE OVERHAULE

## ENGINE LEADS, HOSES AND EXHAUST PIPES

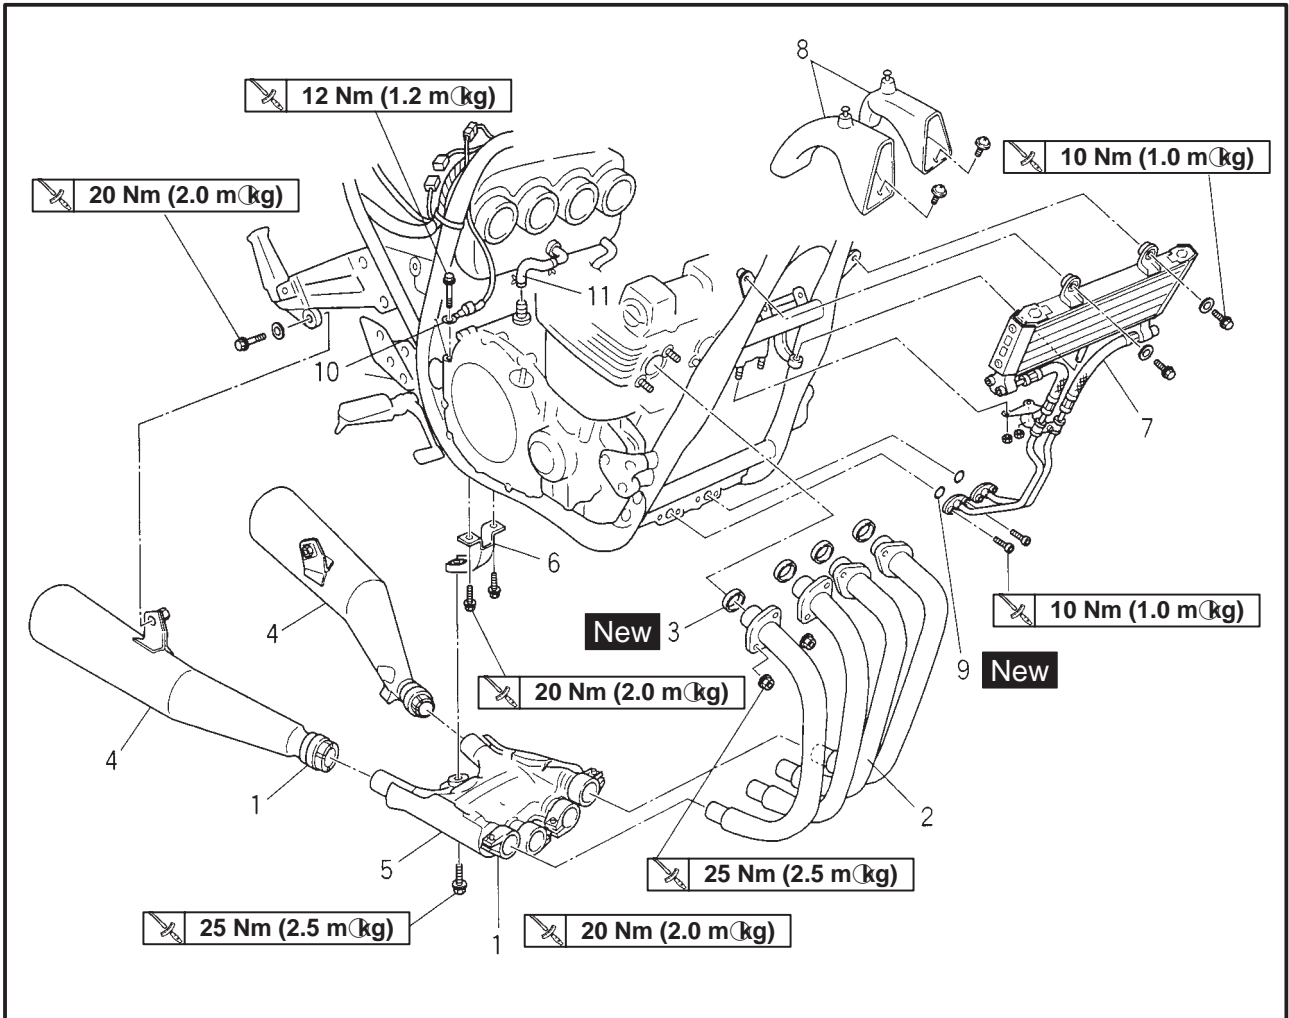

Order	Job/Part	Q'ty	Remarks
	<b>Removing the leads, hoses and exhaust pipes</b>		Remove the parts in the order listed.
	Seat, side cover, fuel tank		Refer to "SEAT, SIDE COVER AND FUEL TANK" in Chapter 3.
	Carburetor		Refer to "CARBURETOR" in Chapter 5.
	Engine oil		Drain
1	Exhaust band	6	
2	Exhaust pipe	4	
3	Gasket	4	
4	Muffler left/right	1/1	
5	Exhaust chamber	1	
6	Exhaust chamber bracket	1	
7	Oil cooler	1	
8	Air duct left/right	1/1	

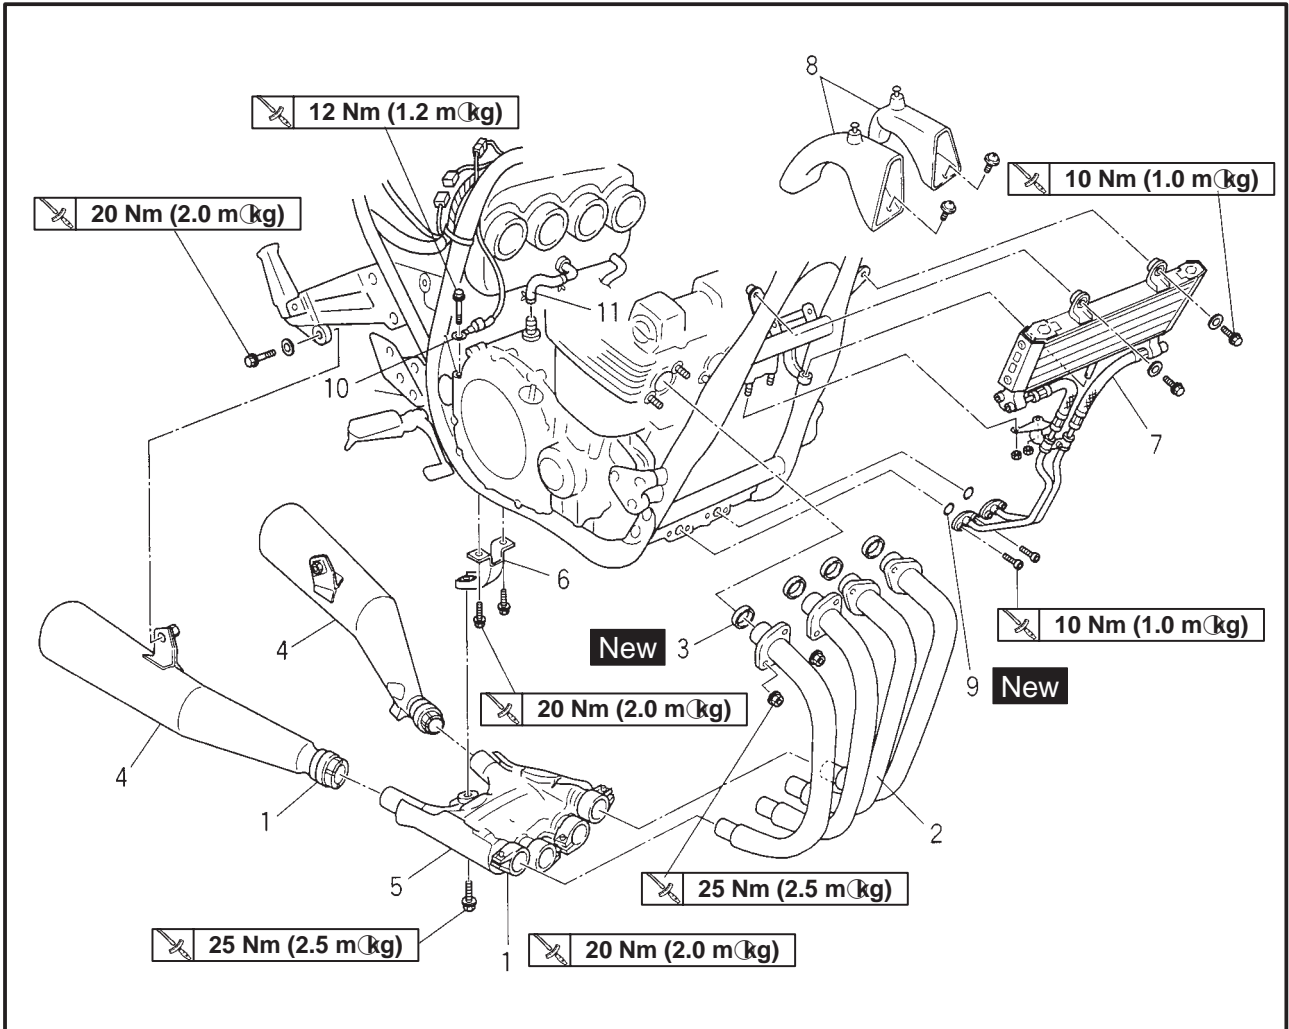


Order	Job/Part	Q'ty	Remarks
9	O-ring	2	<b>NOTE:</b> _____ _____ Disconnect ground lead.
10	Ground lead	1	
11	Crankcase breather hose	1	For installation, reverse the removal procedure.




EAS00190

**LEADS AND DRIVE SPROCKET**

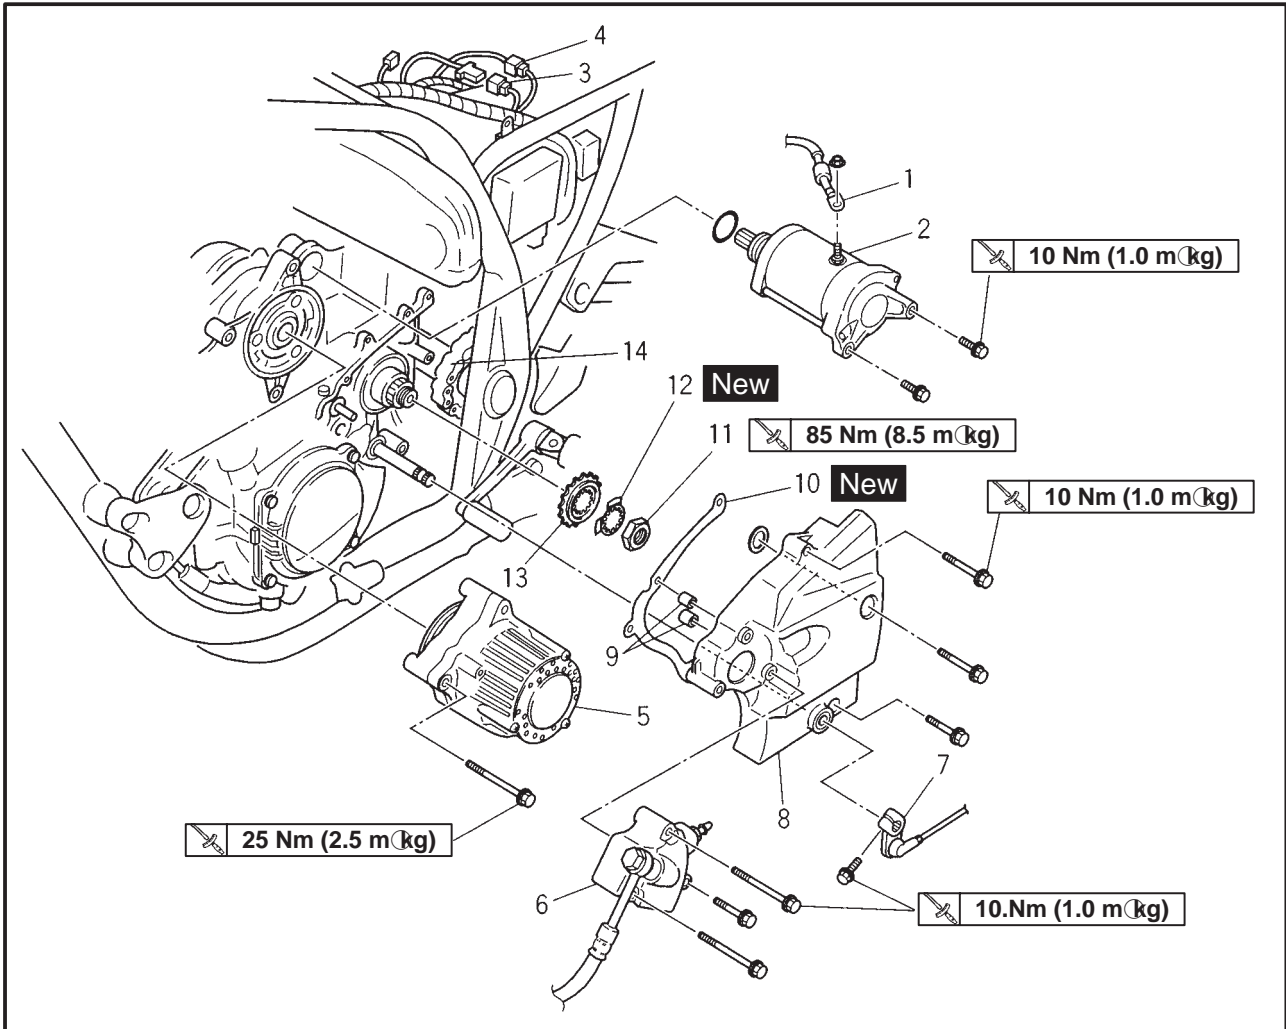


Order	Job/Part	Q'ty	Remarks
	<b>Removing the leads and drive sprocket</b>		Remove the parts in the order listed.
1	Starter motor lead	1	<b>NOTE:</b> _____ Disconnect starter motor lead.
2	Starter motor	1	
3	Pickup/neutral switch lead	1	
4	A.C. generator lead	1	
5	A.C. generator	1	
6	Clutch release cylinder comp.	1	
7	Shift arm	1	Refer to "INSTALLING THE ENGINE"
8	Drive sprocket cover	1	
9	Dowel pins	2	
10	Gasket	1	
11	Nut	1	

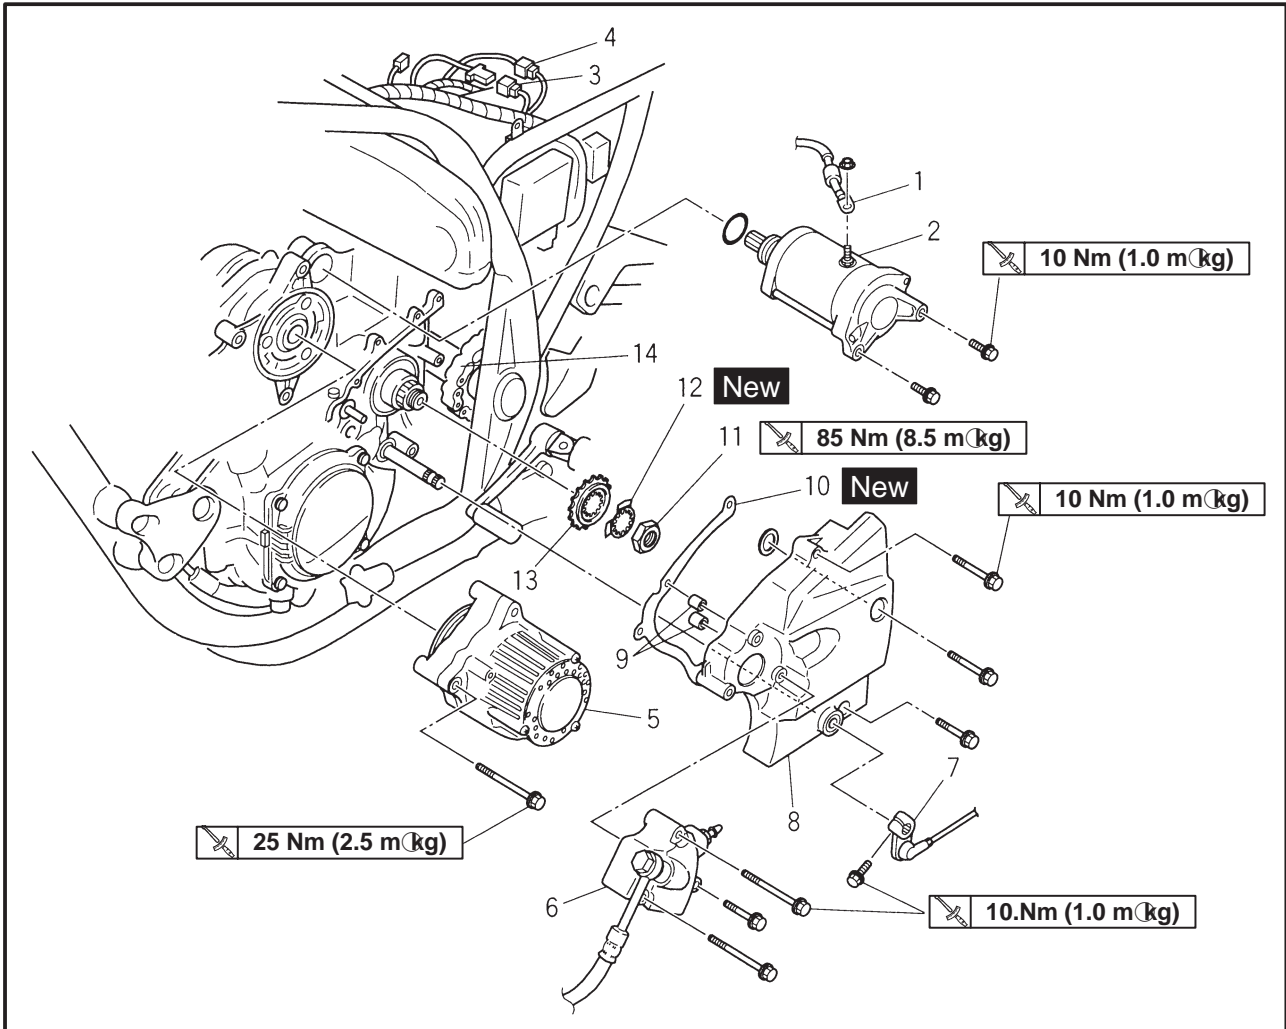




Order	Job/Part	Q'ty	Remarks
12	Lock washer	1	For installation, reverse the removal procedure.
13	Drive sprocket	1	
14	Drive chain	1	

ENGINE

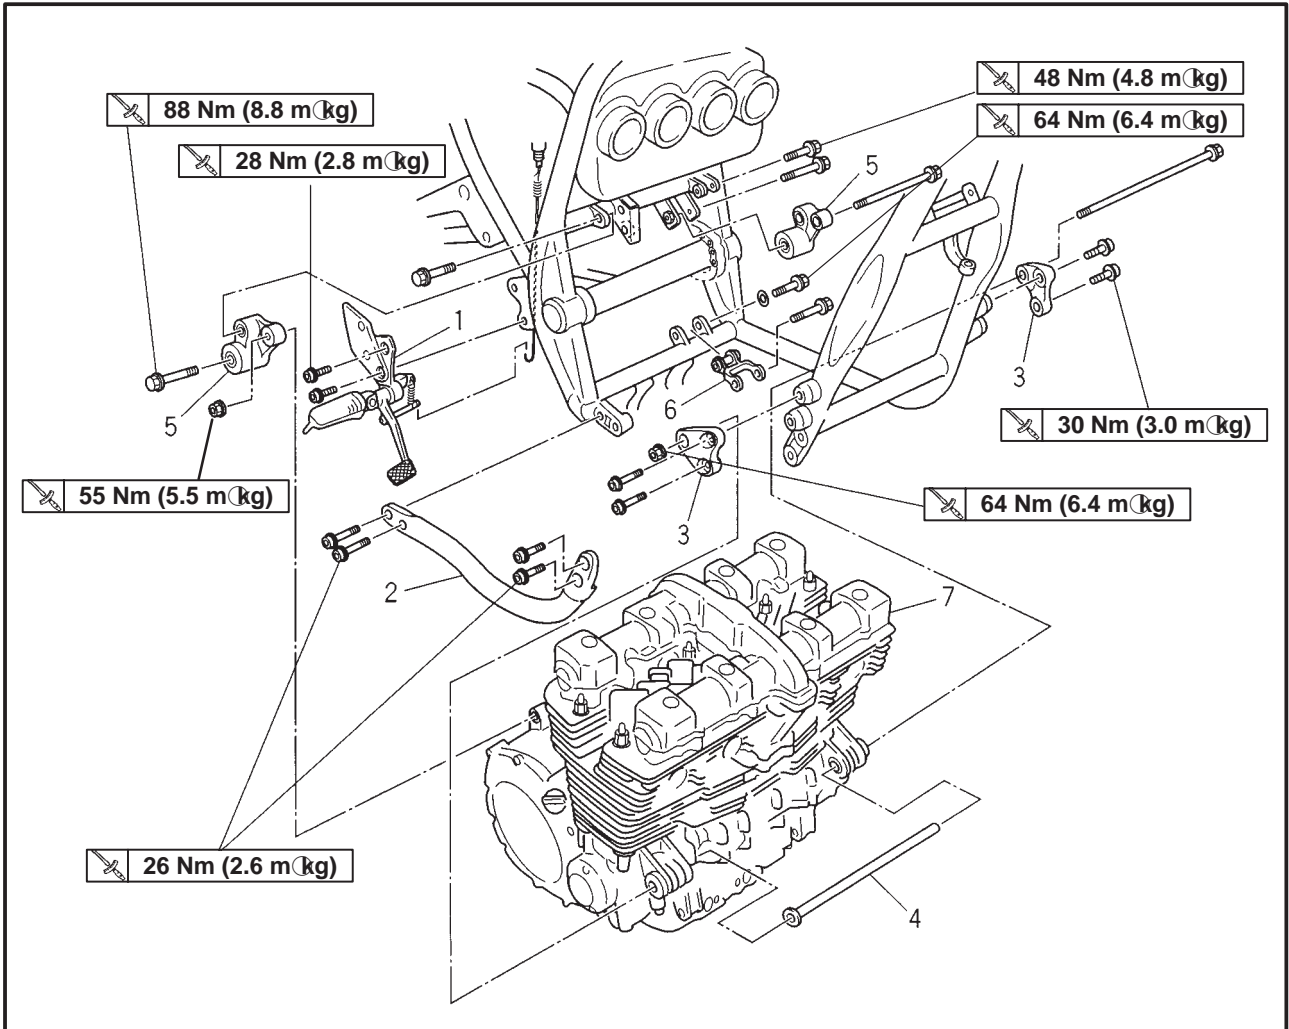

Order	Job/Part	Q'ty	Remarks
	<b>Removing the engine</b>		Remove the parts in the order listed.
1	Footrest	1	<b>NOTE:</b> _____ Place a suitable stand under the frame and engine.
2	Down tube	1	
3	Engine bracket (front)	2	Refer to "INSTALLING THE ENGINE".
4	Spacer	1	
5	Engine bracket (rear upper) left, right	2	
6	Engine bracket (rear lower)	1	
7	Engine	1	
			For installation, reverse the removal procedure.



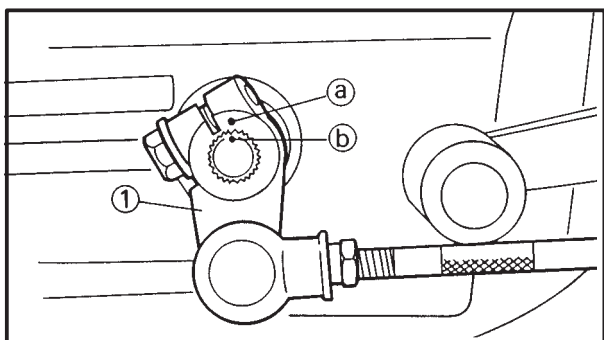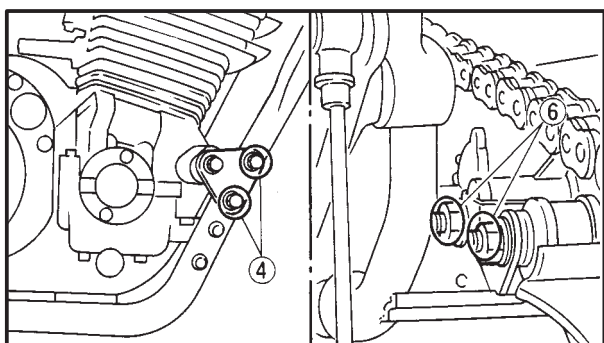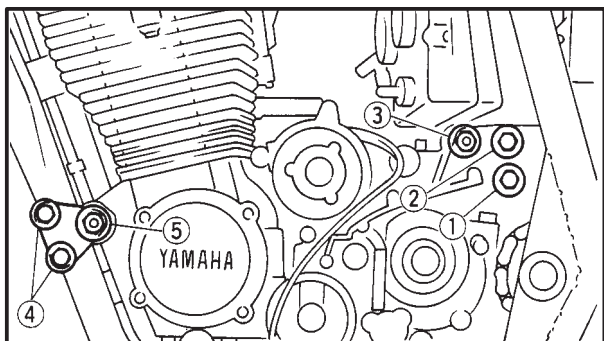

EAS00192

**INSTALLING THE ENGINE**

1. Tighten the bolts in the following order.



**Bolt ①:**  
88 Nm (8.8 mⓀg)

**Bolt ②:**  
48 Nm (4.8 mⓀg)

**Bolt ③:**  
55 Nm (5.5 mⓀg)

**Bolt ④:**  
30 Nm (3.0 mⓀg)

**Bolt ⑤:**  
64 Nm (6.4 mⓀg)

**Nut ⑥:**  
64 Nm (6.4 mⓀg)

2. Install:

Shift arm ①


**NOTE:**

Align the punch mark ⑥ in the shift shaft with the punched mark ⑦ on the shift arm.

Align the bottom edge of the shift pedal with the mark on the frame-to-swingarm bracket.



**Shift arm bolt**  
10 Nm (1.0 mⓀg)

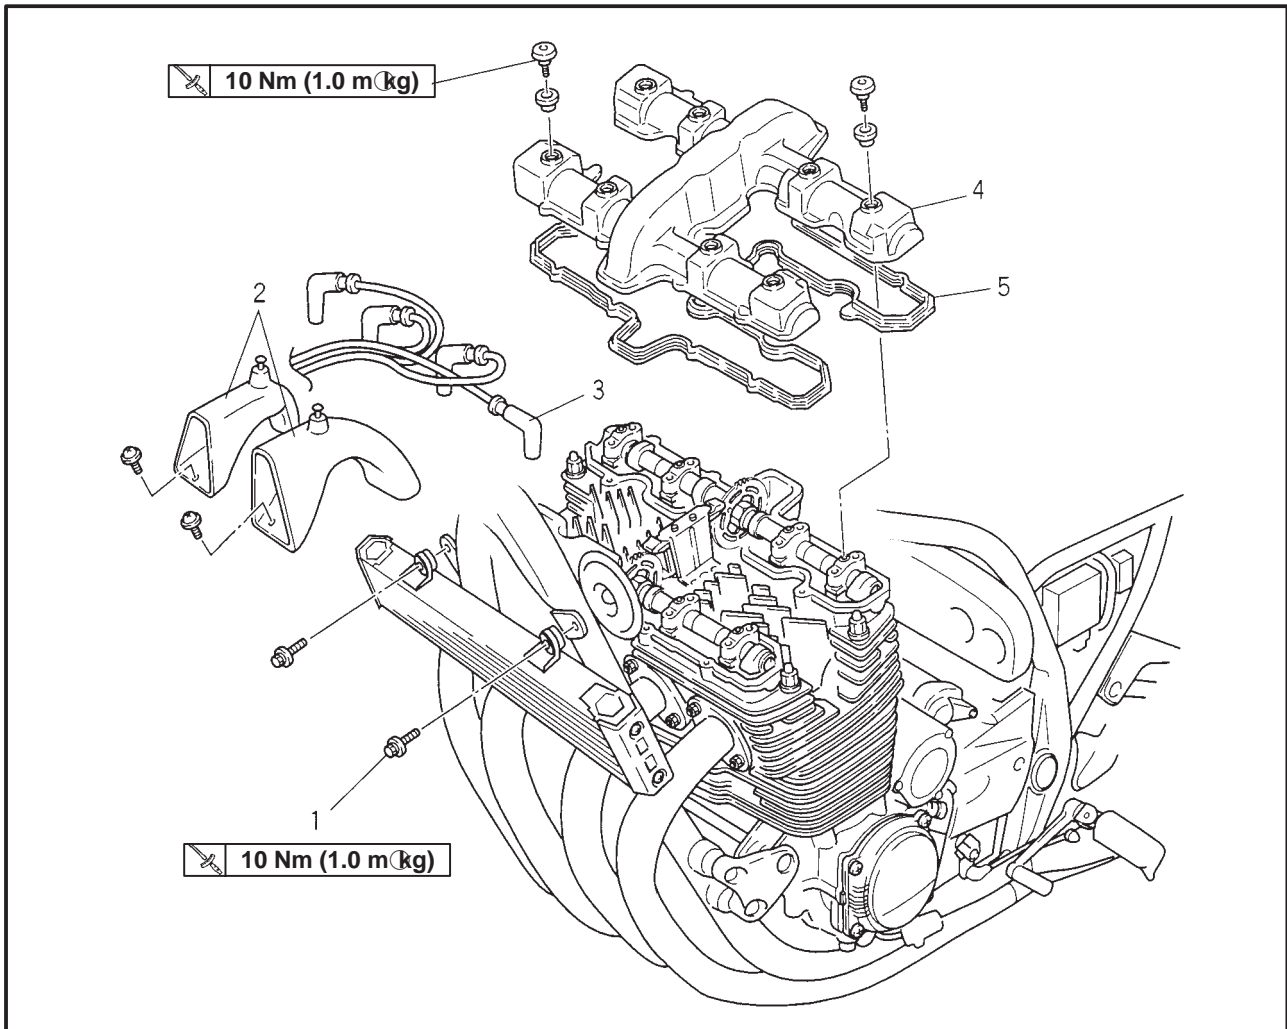

**CAMSHAFT**  
**CYLINDER HEAD COVER**


Order	Job/Part	Q'ty	Remarks
	<b>Removing the cylinder head covers</b> Seat, fuel tank		Remove the parts in the order listed. Refer to "SEAT, SIDE COVER AND FUEL TANK".
1	Bolts	2	
2	Air duct (left/right)	1/1	
3	Plug cap	4	
4	Cylinder head cover	1	
5	Gasket	1	
			For installation, reverse the removal procedure.



EAS00196

### CAMSHAFTS

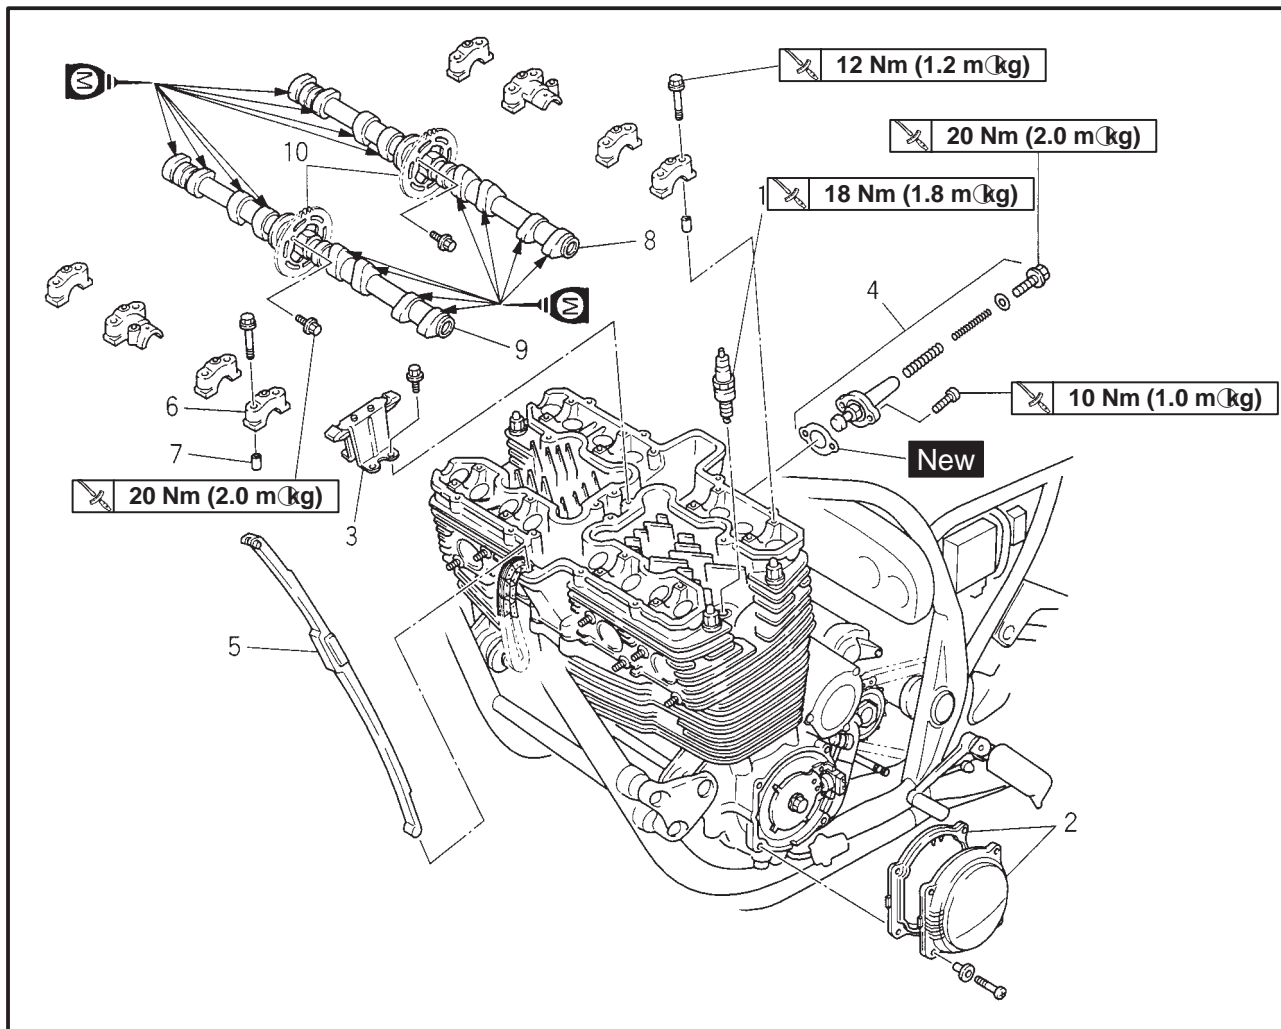

Order	Job/Part	Q'ty	Remarks
	<b>Removing the camshafts</b>		Remove the parts in the order listed.
1	Spark plugs	4	Refer to "REMOVING/INSTALLING THE CAMSHAFTS".
2	Timing plate cover/Gasket	1/1	
3	Timing chain guide (top side)	1	
4	Timing chain tensioner assembly	1	
5	Timing chain guide (exhaust side)	1	
6	Camshaft caps	8	
7	Dowel pins	16	
8	Camshaft (intake)	1	
9	Camshaft (exhaust)	1	
10	Camshaft sprockets	2	
			For installation, reverse the removal procedure.





EAS000204



### CHECKING THE CAMSHAFTS

1. Check:

- Camshaft lobes  
Blue discoloration/pitting/scratches → Replace the camshaft.

2. Measure:

- Camshaft lobe dimensions (a) and (b)  
Out of specification → Replace the camshaft.

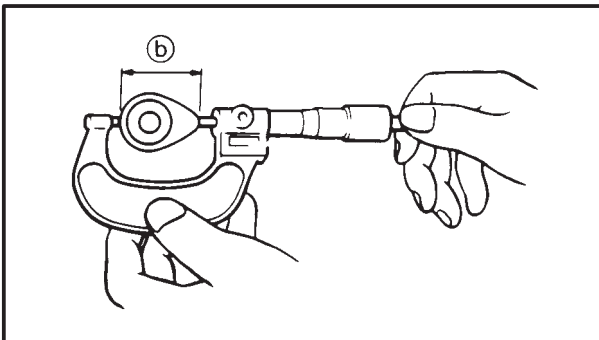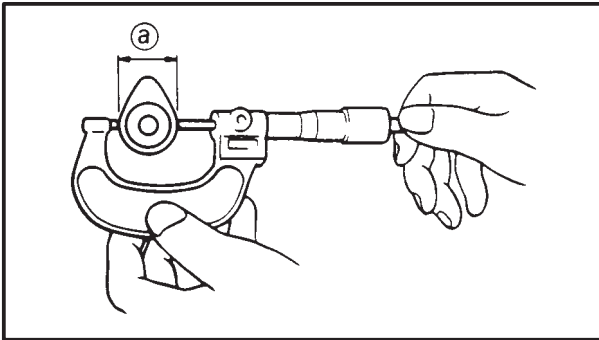

**Camshaft lobe dimension limit**  
**Intake/exhaust**


- (a) **Wear limit <28.15 mm>**
- (b) **Wear limit <35.85 mm>**

3. Measure:

- Camshaft runout  
Out of specification → Replace.



**Camshaft runout**  
**Less than 0.03 mm**


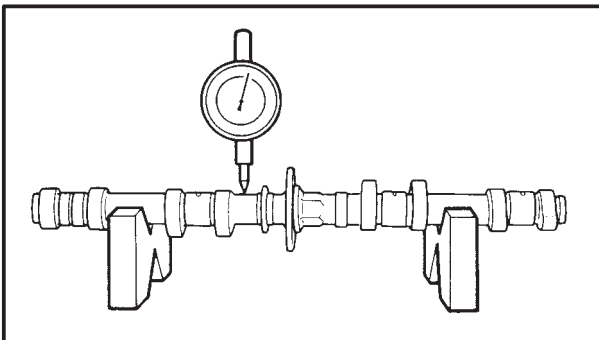


4. Measure:

- Camshaft-journal-to-camshaft-cap clearance  
Out of specification → Measure the camshaft journal diameter.



**Camshaft-journal-to-camshaft-cap clearance**  
**0.020 × 0.054 mm**

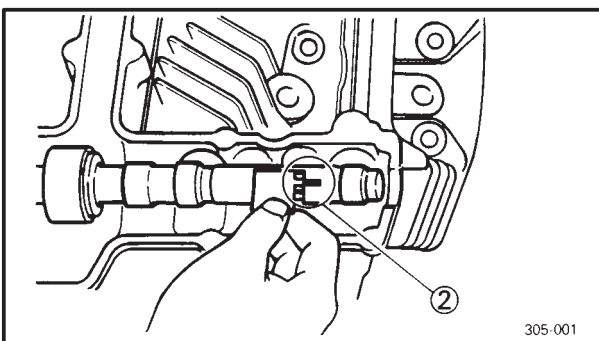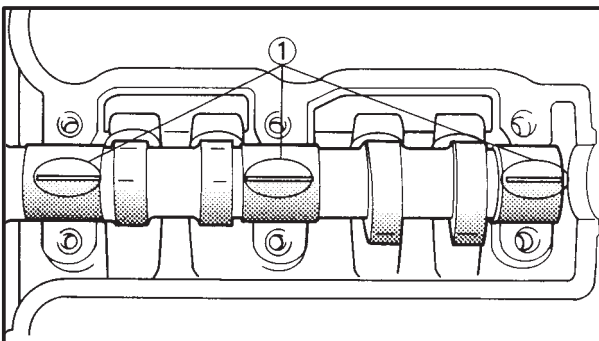

- a. Install the camshaft into the cylinder head (without the dowel pins and camshaft caps).
- b. Position a strip of Plastigauge® (1) onto the camshaft journal as shown.
- c. Install the dowel pins and camshaft caps.

**NOTE:**


- Tighten the camshaft cap bolts in stages and in a crisscross pattern, working from the inner caps out.
- Do not turn the camshaft when measuring the camshaft journal-to-camshaft cap clearance with the Plastigauge®.



**Camshaft cap bolt**  
**12 Nm (1.2 mⓀg)**

- d. Remove the camshaft caps and then measure the width of the Plastigauge® (2).

305-001

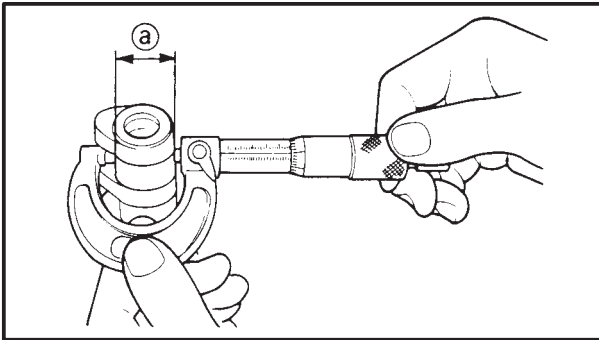

## 5. Measure:

- Camshaft journal diameter (a)

Out of specification → Replace the camshaft.

Within specification → Replace the cylinder head and the camshaft caps as a set.



**Camshaft journal diameter**  
24.967 × 24.980 mm

EAS00208

### CHECKING THE CAMSHAFT SPROCKETS, AND TIMING CHAIN GUIDES

The following procedure applies to all of the camshafts sprockets and timing chain guides.

## 1. Check:

- Camshaft sprocket

Damage/wear → Replace the camshaft sprockets and the timing chain as a set.

## 2. Check:

- Timing chain guide (exhaust side)

- Timing chain guide (top side)

Damage/wear → Replace the defective part(-s).

EAS00210

### CHECKING THE TIMING CHAIN TENSIONER

## 1. Check:

- Timing chain tensioner

Cracks/damage → Replace.

## 2. Check:

- One-way cam operation

Rough movement → Replace the timing chain tensioner housing.

## 3. Check:

- Cap bolt

- Copper washer


- Spring

- One-way cam

- Gasket

- Timing chain tensioner rod

Damage/wear → Replace the defective part(-s).

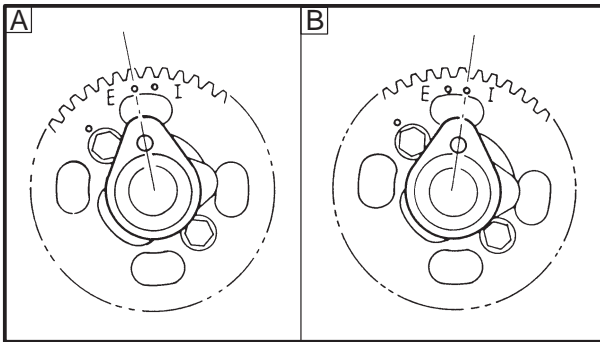

**INSTALLING THE CAMSHAFTS**

1. Install:

- Camshaft sprockets

**NOTE:**


- Be sure to set the sprockets in the specified position as shown in the figure.
- Temporarily tighten the bolts in this stage.

**A** Exhaust side

**B** Intake side

2. Install:


- Camshaft (exhaust)
- Camshaft (intake)

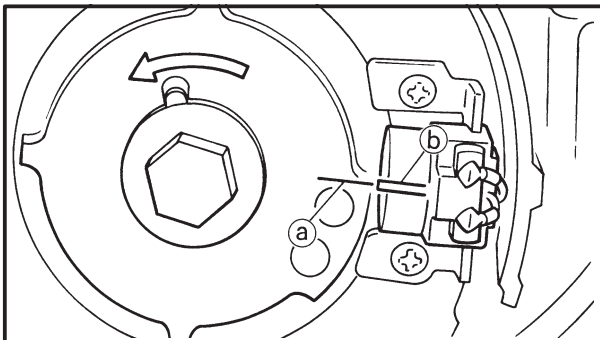

- a. Turn the crankshaft counterclockwise until the TDC mark (a) is aligned with the pickup coil mark (b).

**CAUTION:**


**Do not turn the crankshaft during the camshafts installation. Damage or improper valve timing will result.**

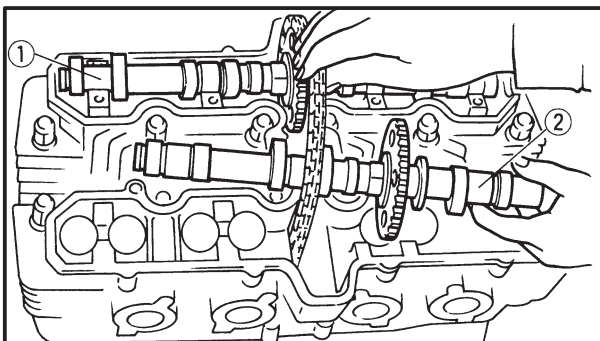

- b. Fit the timing chain onto both camshaft sprockets and install the camshafts.

**NOTE:**

- Install the exhaust camshaft (1) first, then the intake camshaft (2).
- Install the camshafts with the punched mark facing upward.
- Keep the timing chain as tense as possible on the exhaust side.

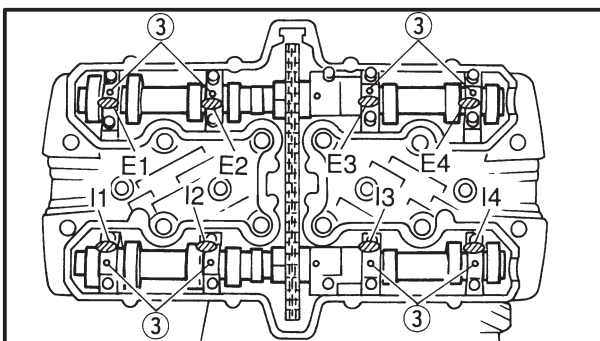


- c. Install the camshaft caps (3) with dowel pins.

**NOTE:**

- Make sure that each camshaft cap is installed in its original place by reference to its embossed identification mark, as follows:  
Intake: I  
Exhaust: E
- Install the camshaft cap with the arrow mark pointing towards the right side of the engine.
- Temporarily tighten the bolts in this stage.

## CAMSHAFTS

ENG

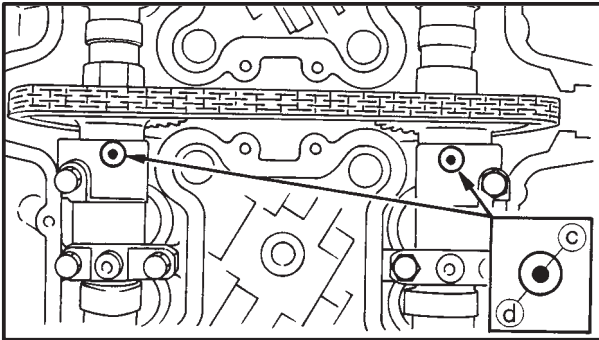

- d. Check if the punched marks (c) on both camshafts are inside the holes of camshaft caps (d). If they are not in the position, repeat the above steps.
- e. Tighten the bolts (camshaft cap) in a criss-cross pattern from the inside outwards.



### CAUTION:

The bolts (camshaft caps) must be tightened evenly or damage to the cylinder head, camshaft caps and camshaft will result.



**Bolt (camshaft cap):**  
12 Nm (1.2 mkg)

- f. Remove the safety wire from the timing chain.

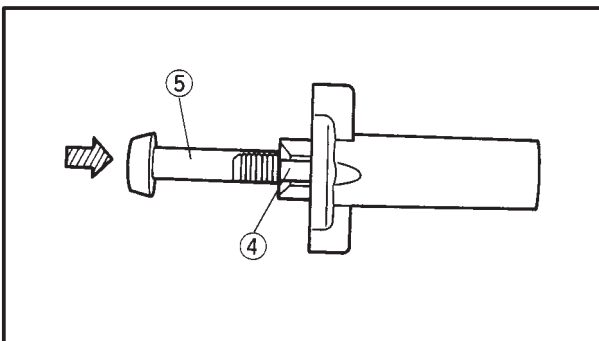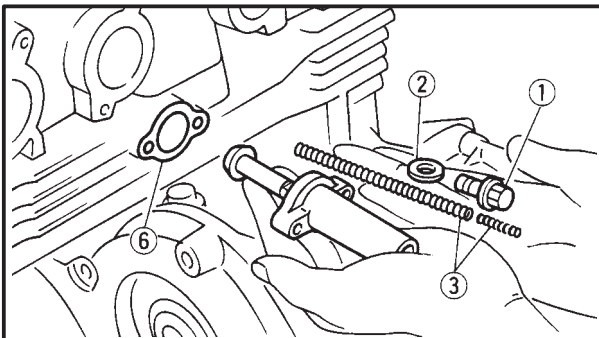

3. Install:

○ timing chain tensioner



### Installation steps:

- a. Remove the tensioner cap bolt (1), washer (2) and springs (3).
- b. Release the timing chain tensioner one-way cam (4) and push the tensioner rod (5) all the way into the timing chain tensioner housing.
- c. Install the timing chain tensioner with a gasket (6) onto the cylinder.

### CAUTION:

Always use a new gasket.

### NOTE:

The timing chain tensioner teeth should face down.



**Timing chain tensioner bolt:**  
10 Nm (1.0 mkg)

- d. Install the springs (3), washer (2) and cap bolt (1).



**Cap bolt (timing chain tensioner):**  
20 Nm (2.0 mkg)



4. Check:

○ Valve timing


Out of alignment → Reinstall the camshafts by referring the above steps.





EAS00221




CYLINDER HEAD

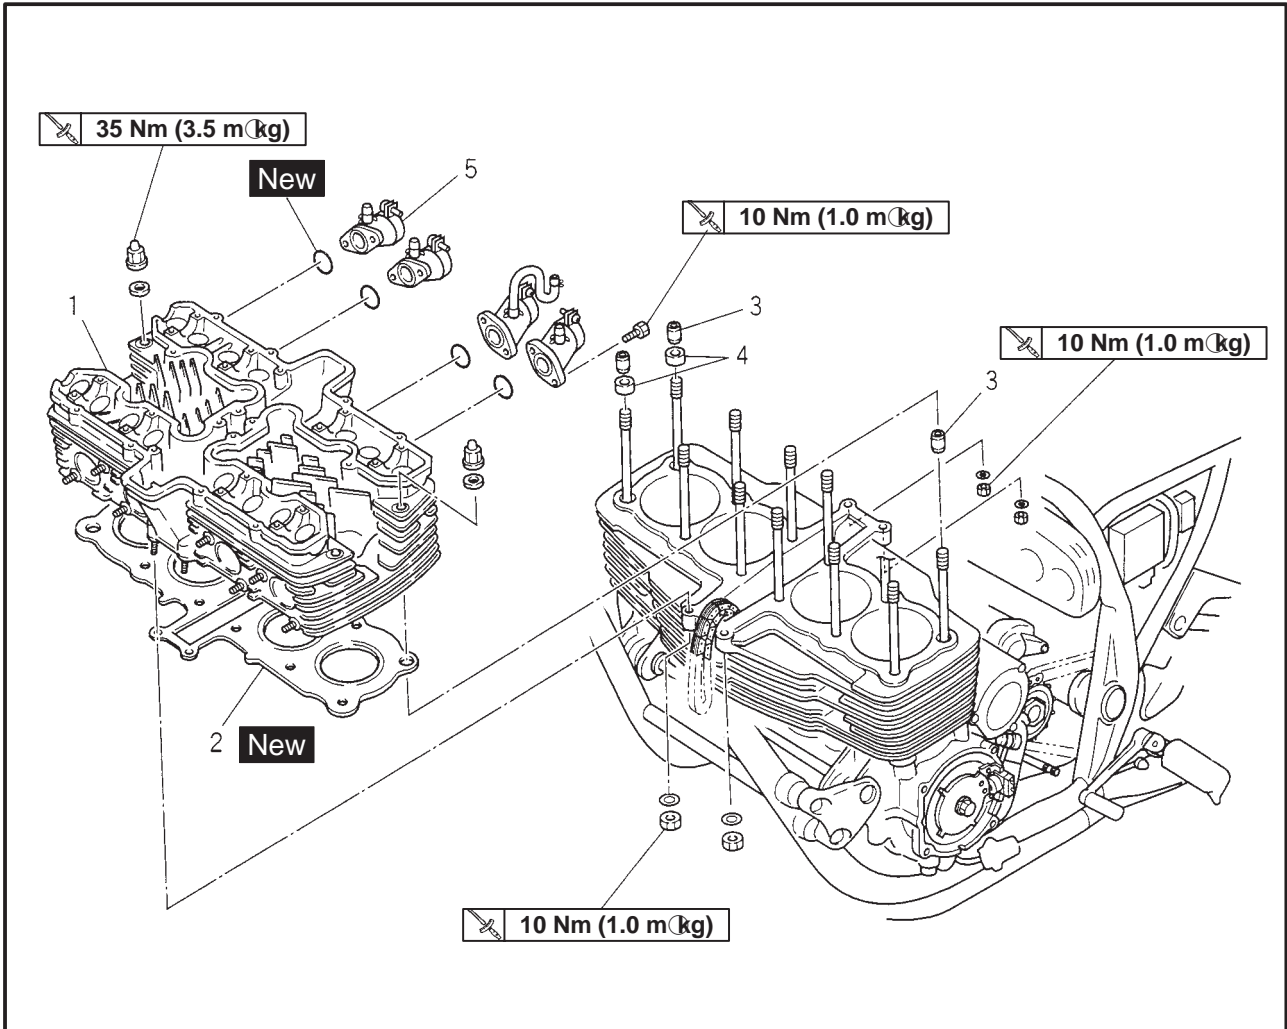

Order	Job/Part	Q'ty	Remarks
	<b>Removing the cylinder head</b>		Remove the parts in the order listed. <b>NOTE:</b> _____ Remove the engine mount (front) and move the engine to front side. _____
	Camshafts		Refer to "CAMSHAFTS".
1	Cylinder head	1	Refer to "REMOVING/INSTALLING THE CYLINDER HEAD".
2	Gasket	1	
3	Dowel pins	2	
4	O-rings	2	
5	Intake manifold	4	
			For installation, reverse the removal procedure.

# CYLINDER HEAD

ENG

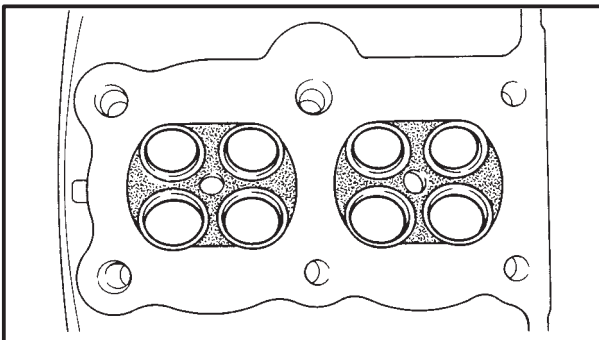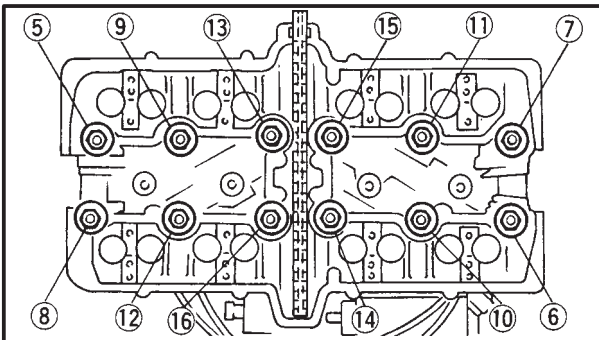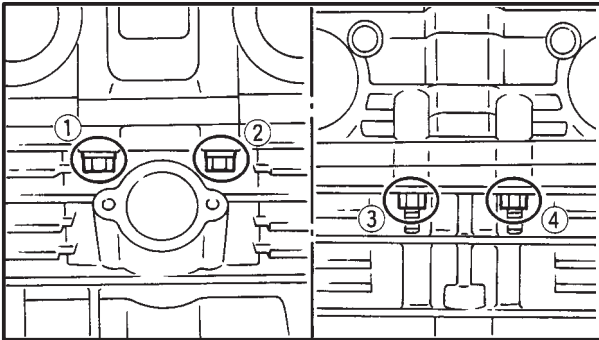

EAS00223

## REMOVING THE CYLINDER HEAD

1. Remove:

- cylinder head nuts ① × ⑩

### NOTE:

- Loosen the nuts in the proper sequence as shown.
- Loosen each nut 1/2 of a turn at a time. After all of the nuts are fully loosened, remove them.

EAS00228

## CHECKING THE CYLINDER HEAD

The following procedure applies to all of the cylinder heads.

1. Eliminate:

- combustion chamber carbon deposits (with a rounded scraper)

### NOTE:

Do not use a sharp instrument to avoid damaging or scratching:


- spark plug threads
- valve seats

2. Check:

- cylinder head  
Damage/scratches → Replace.

3. Measure:


- cylinder head warpage  
Out of specification → Resurface the cylinder head.

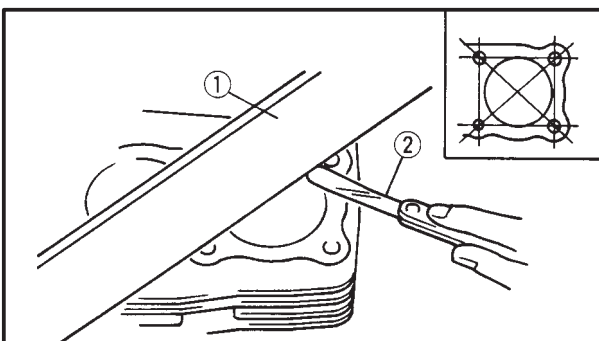

**Cylinder head warpage  
Less than 0.1 mm**

- a. Place a straightedge ① and a thickness gauge ② across the cylinder head.
- b. Measure the warpage.
- c. If the limit is exceeded, resurface the cylinder head as follows.
- d. Place a 400 × 600 grit wet sandpaper on the surface plate and resurface the cylinder head using a figure-eight sanding pattern.


**NOTE:** \_\_\_\_\_  
 To ensure an even surface, rotate the cylinder head several times.

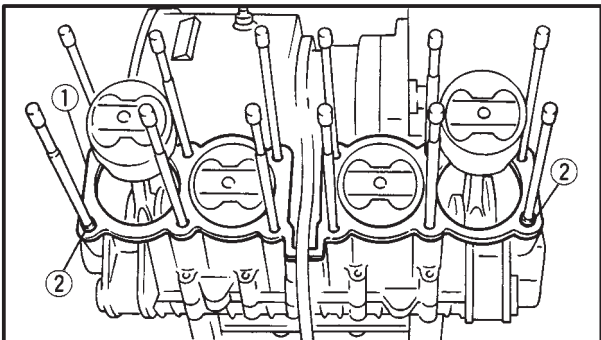


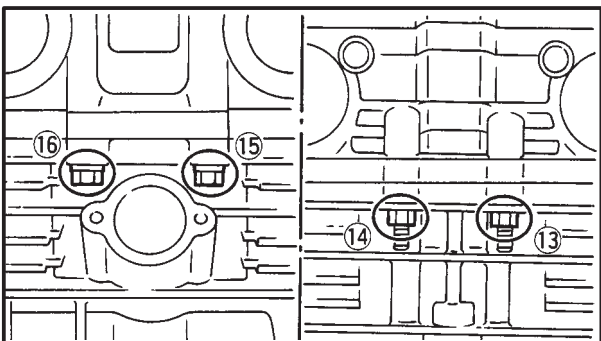
EAS00232  
**INSTALLING THE CYLINDER HEAD**

1. Install:
  - gasket (New) ①
  - dowel pins ②
2. Install:
  - cylinder head
  - washers
  - copper washers
  - cylinder head nuts

**NOTE:** \_\_\_\_\_  
 ○ Apply engine oil onto the threads of the cylinder head nuts.  
 ○ Tighten the cylinder head nuts in the proper tightening sequence as shown and torque them in two stages.

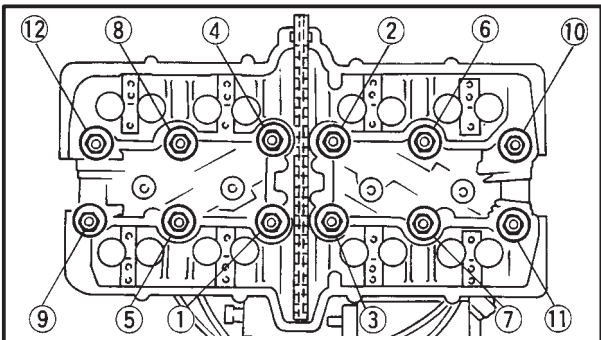

	<b>Cylinder head Cap nut</b> <b>35 Nm (3.5 mⓀg)</b>
	<b>Cylinder head nut</b> <b>10 Nm (1.0 mⓀg)</b>



3. Install:
  - exhaust camshaft
  - intake camshaft
 Refer to "INSTALLING THE CAMSHAFTS".


# VALVES AND VALVE SPRINGS

ENG



EAS00236

## VALVES AND VALVE SPRINGS

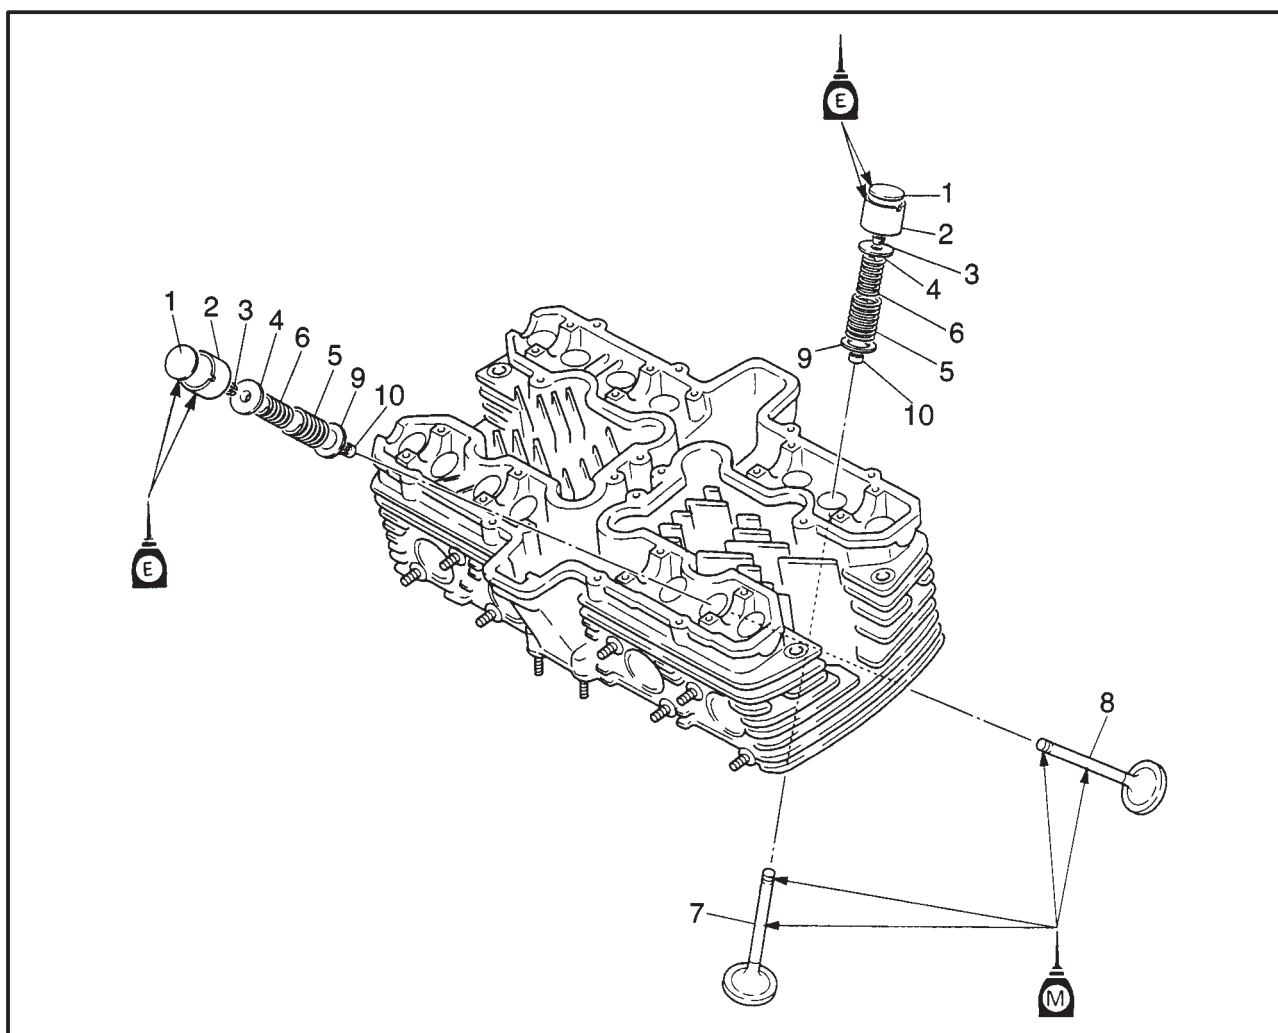


Order	Job/Part	Q'ty	Remarks
	<b>Removing the valves and valve springs</b>		Remove the parts in the order listed.
	Camshaft		Refer to "CAMSHAFTS".
	Cylinder head		Refer to "CYLINDER HEAD".
1	Valve pads	16	Refer to "REMOVING/INSTALLING THE VALVES".
2	Valve lifters	16	
3	Valve cotters	32	
4	Upper springs seats	16	
5	Valve springs (outer)	16	
6	Valve springs (inner)	16	
7	Intake valves	8	
8	Exhaust valves	8	
9	Lower spring seats	16	
10	Oil seals	16	
			For installation, reverse the removal procedure.



## VALVES AND VALVE SPRINGS

ENG


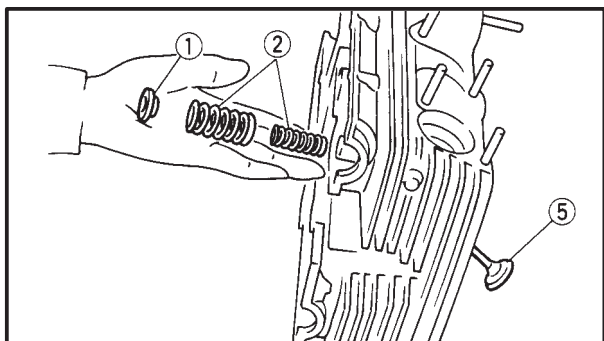


4. Remove:

- Upper spring seat ①
- Valve springs ②
- Oil seal ③
- Lower spring seat ④
- Valve ⑤

**NOTE:**

Identify the position of each part very carefully so that it can be reinstalled in its original place.

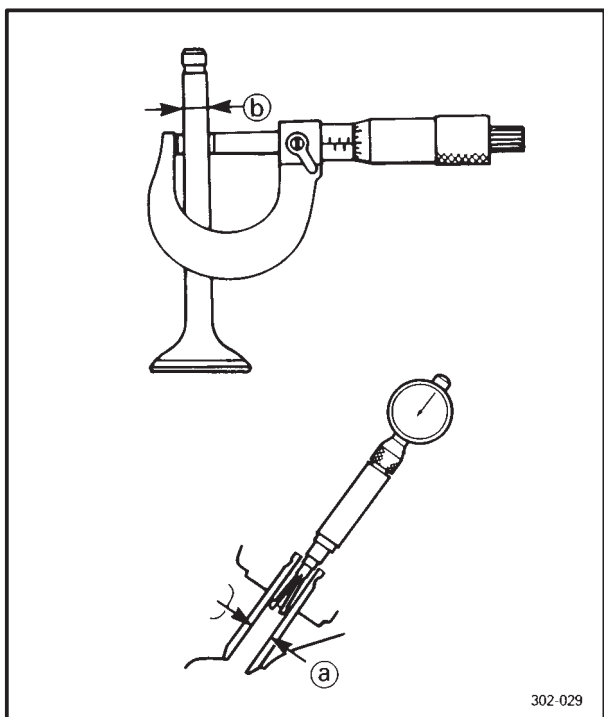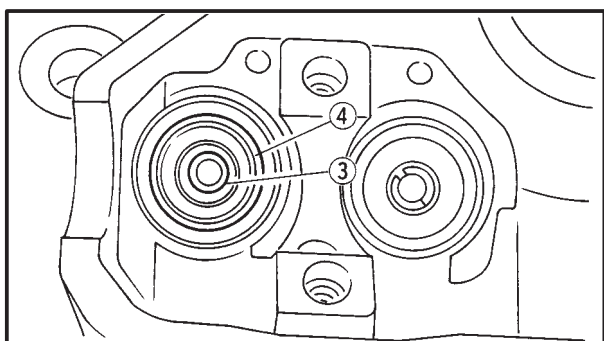

EAS00239

### CHECKING THE VALVES AND VALVE GUIDES

The following procedure applies to all of the valves and valve guides.

1. Measure:

- Valve-stem to valve guide clearance

$$\text{Valve-stem to valve-guide clearance} = \text{Valve guide inside diameter (a)} - \text{Valve stem diameter (b)}$$

Out of specification → Replace the valve guide.



#### Valve-stem to valve-guide clearance

**Intake**

**0.010 × 0.037 mm**

**Limit: 0.08 mm**

**Exhaust**

**0.025 × 0.052 mm**

**Limit: 0.10 mm**

2. Replace:

- Valve guide

**NOTE:**

To ease valve guide removal and installation, and to maintain the correct fit, heat the cylinder head to 100°C (212°F) in an oven.






EAS00240

## CHECKING THE VALVE SEATS

The following procedure applies to all of the valves and valve seats.


1. Eliminate:
  - carbon deposits  
(from the valve face and valve seat)
2. Check:
  - valve seat  
Pitting/wear → Replace the cylinder head.
3. Measure:
  - valve seat width (a)  
Out of specification → Replace the cylinder head.

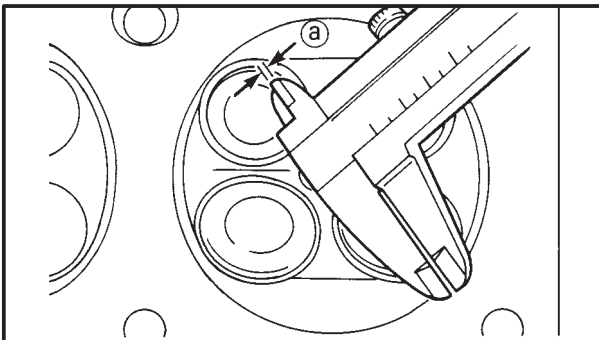

**Valve seat width**

**Intake: 0.9 × 1.1 mm**

**Exhaust: 0.9 × 1.1 mm**

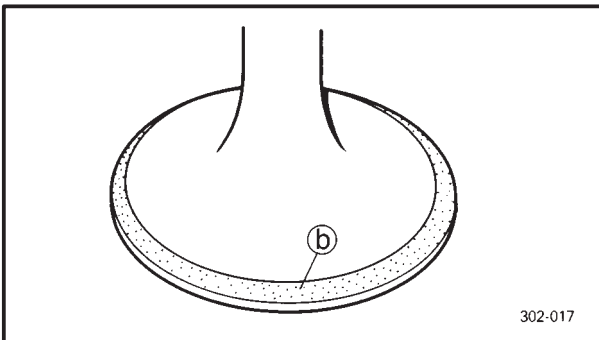


- a. Apply Mechanic's blueing dye (Dykem) (b) onto the valve face.
- b. Install the valve into the cylinder head.
- c. Press the valve through the valve guide and onto the valve seat to make a clear pattern.
- d. Measure the valve seat width. Where the valve seat and valve face contacted one another, the blueing will have been removed.

4. Lap:
  - valve face
  - valve seat

**NOTE:** \_\_\_\_\_

After replacing the cylinder head or replacing the valve and valve guide, the valve seat and valve face should be lapped.

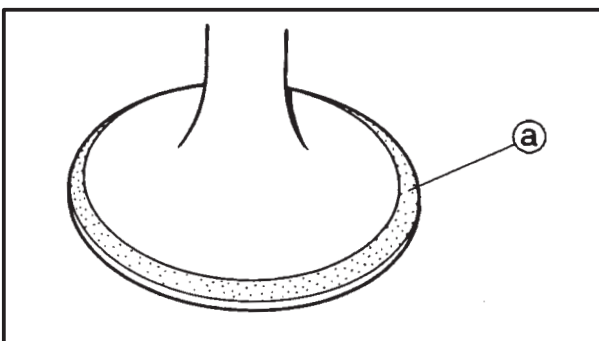


- a. Apply a coarse lapping compound (a) to the valve face.


**CAUTION:** \_\_\_\_\_

**Do not let the lapping compound enter the gap between the valve stem and the valve guide.**


- b. Apply molybdenum disulfide oil onto the valve stem.
- c. Install the valve into the cylinder head.

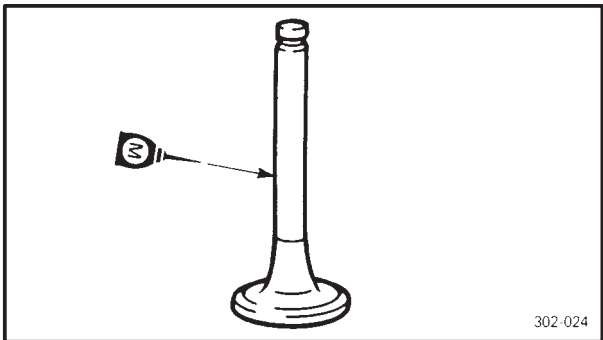

d. Turn the valve until the valve face and valve seat are evenly polished, then clean off all of the lapping compound.

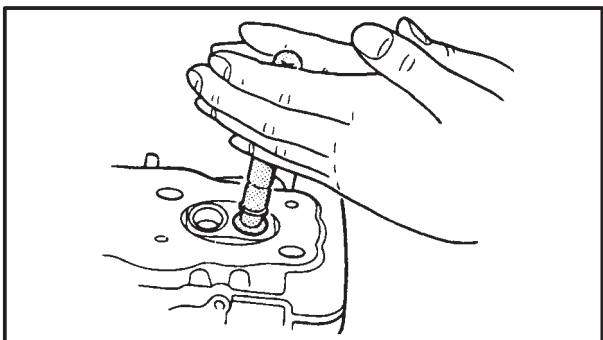

**NOTE:** \_\_\_\_\_  
For the best lapping results, lightly tap the valve seat while rotating the valve back and forth between your hand.

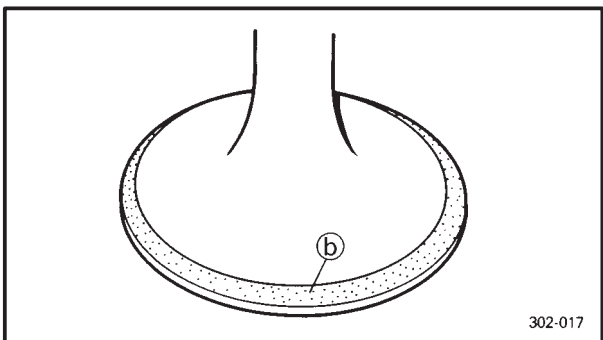

e. Apply a fine lapping compound to the valve face and repeat the above steps.



f. After every lapping procedure, be sure to clean off all of the lapping compound from the valve face and valve seat.

g. Apply Mechanic's blueing dye (Dykem) (b) onto the valve face.

h. Install the valve into the cylinder head.

i. Press the valve through the valve guide and onto the valve seat to make a clear impression.

j. Measure the valve seat width (c) again. If the valve seat width is out of specification, reface and lap the valve seat.

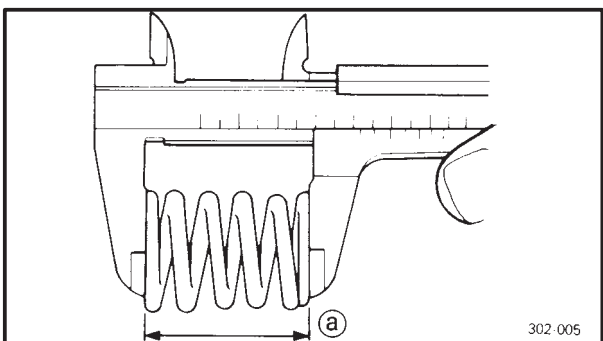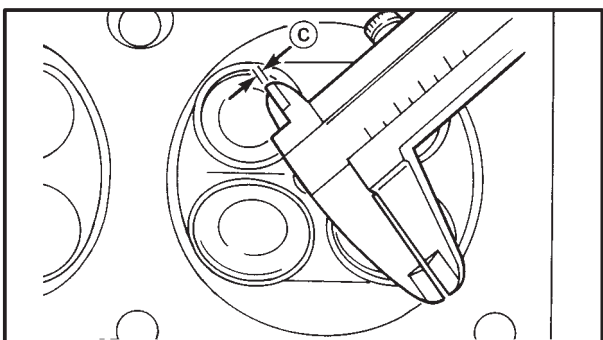

EAS00241

### CHECKING THE VALVE SPRINGS

The following procedure applies to all of the valve springs.

1. Measure:

① valve spring free length (a)


Out of specification → Replace the valve spring.



Valve spring free length (intake and exhaust)

Inner spring <Limit>  
39.65 mm <37.5 mm>

Outer spring <Limit>  
41.1 mm <39 mm>

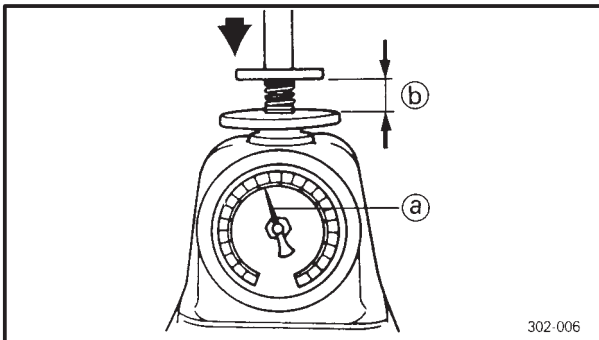


302-006

2. Measure:

⊙ compressed spring force (a)

Out of specification → Replace the valve spring.

⊙ installed length (b)

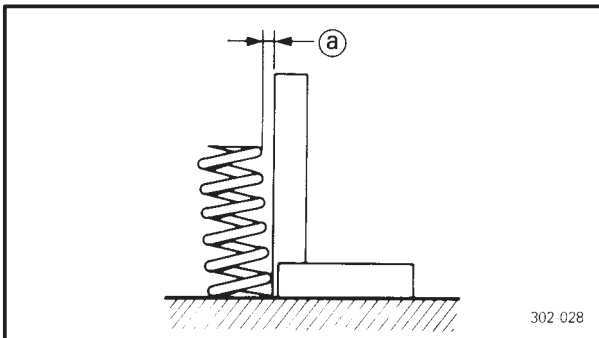

302-028



Compressed spring force


Intake and exhaust inner spring  
61.7 × 72.5 N (6.29 × 7.39 kg)  
at 32.8 mm

Intake and exhaust outer spring  
130.4 × 154.0 N (13.3 × 15.7 kg)  
at 34.8 mm

3. Measure:

⊙ valve spring tilt (a)

Out of specification → Replace the valve spring.

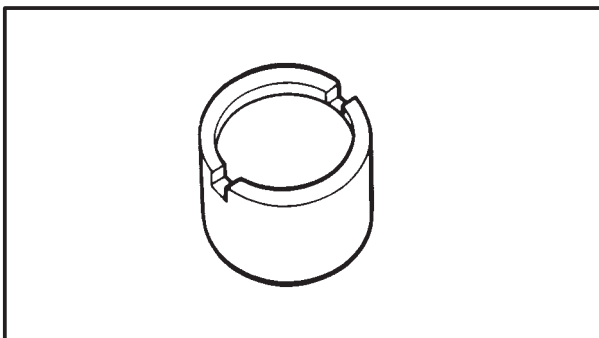

Spring tilt limit

Intake and exhaust inner spring  
2.5° / 1.7 mm

Intake and exhaust outer spring  
2.5° / 1.7 mm

EAS00242

## CHECKING THE VALVE LIFTERS

The following procedure applies to all of the valve lifters.

1. Check:

⊙ valve lifter

Damage/scratches → Replace the valve lifters and cylinder head.

EAS00245


## INSTALLING THE VALVES

The following procedure applies to all of the valves and related components.

1. Deburr:

⊙ valve stem end




(with an oil stone)

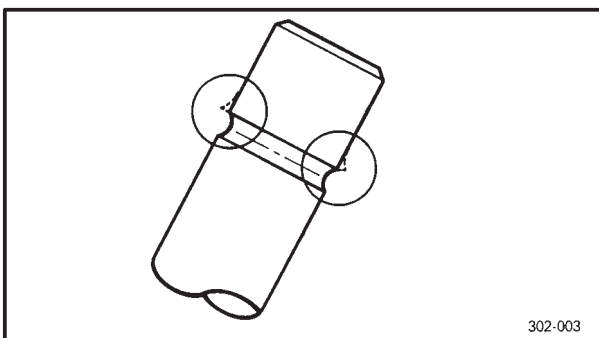

302-003

## VALVES AND VALVE SPRINGS

ENG

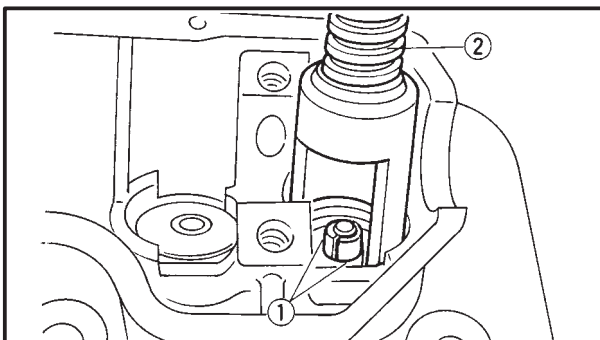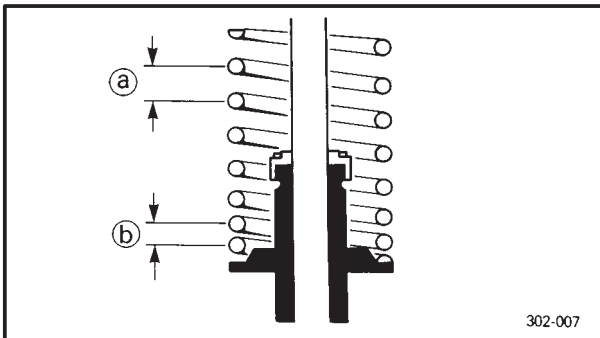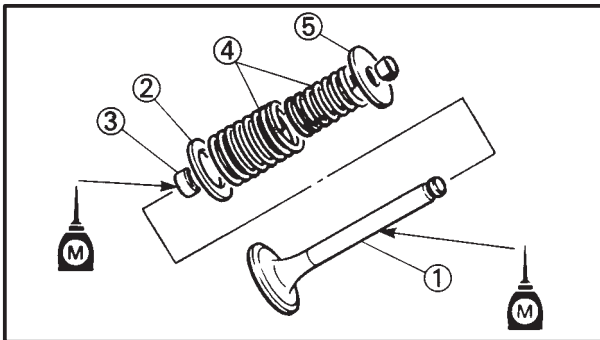

**Recommended lubricant**  
**Molybdenum disulfide oil**

2. Install:

- valve ①
- lower spring seat ②
- oil seal ③
- valve springs ④
- upper spring seat ⑤  
(into the cylinder head)

**NOTE:** \_\_\_\_\_

Install the valve spring with the larger pitch (a) facing up.

- Smaller pitch

3. Install:

- valve cotten ①

**NOTE:** \_\_\_\_\_

Install the valve cotten by compressing the valve spring with the valve spring compressor ②.




**Valve spring compressor**  
**90890-04019**

4. To secure the valve cotten ① onto the valve stem, lightly tap the valve tip with a soft-face hammer.

**CAUTION:** \_\_\_\_\_

Hitting the valve tip with excessive force could damage the valve.

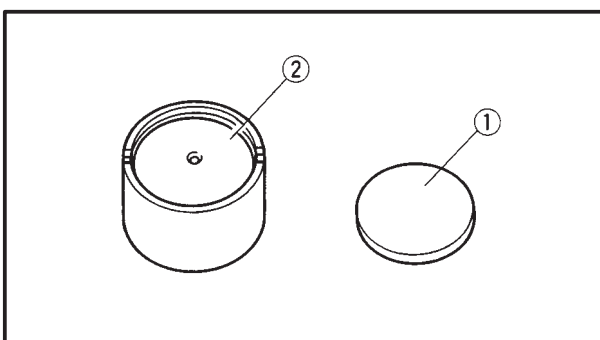

5. Install:


- valve pad ①
- valve lifter ②

**NOTE:** \_\_\_\_\_



- Apply molybdenum disulfide oil onto the valve lifter and valve pad.
- The valve lifter must move smoothly when rotated with a finger.
- Each valve lifter and valve pad must be reinstalled in its original position.

EAS00252

CYLINDERS AND PISTONS

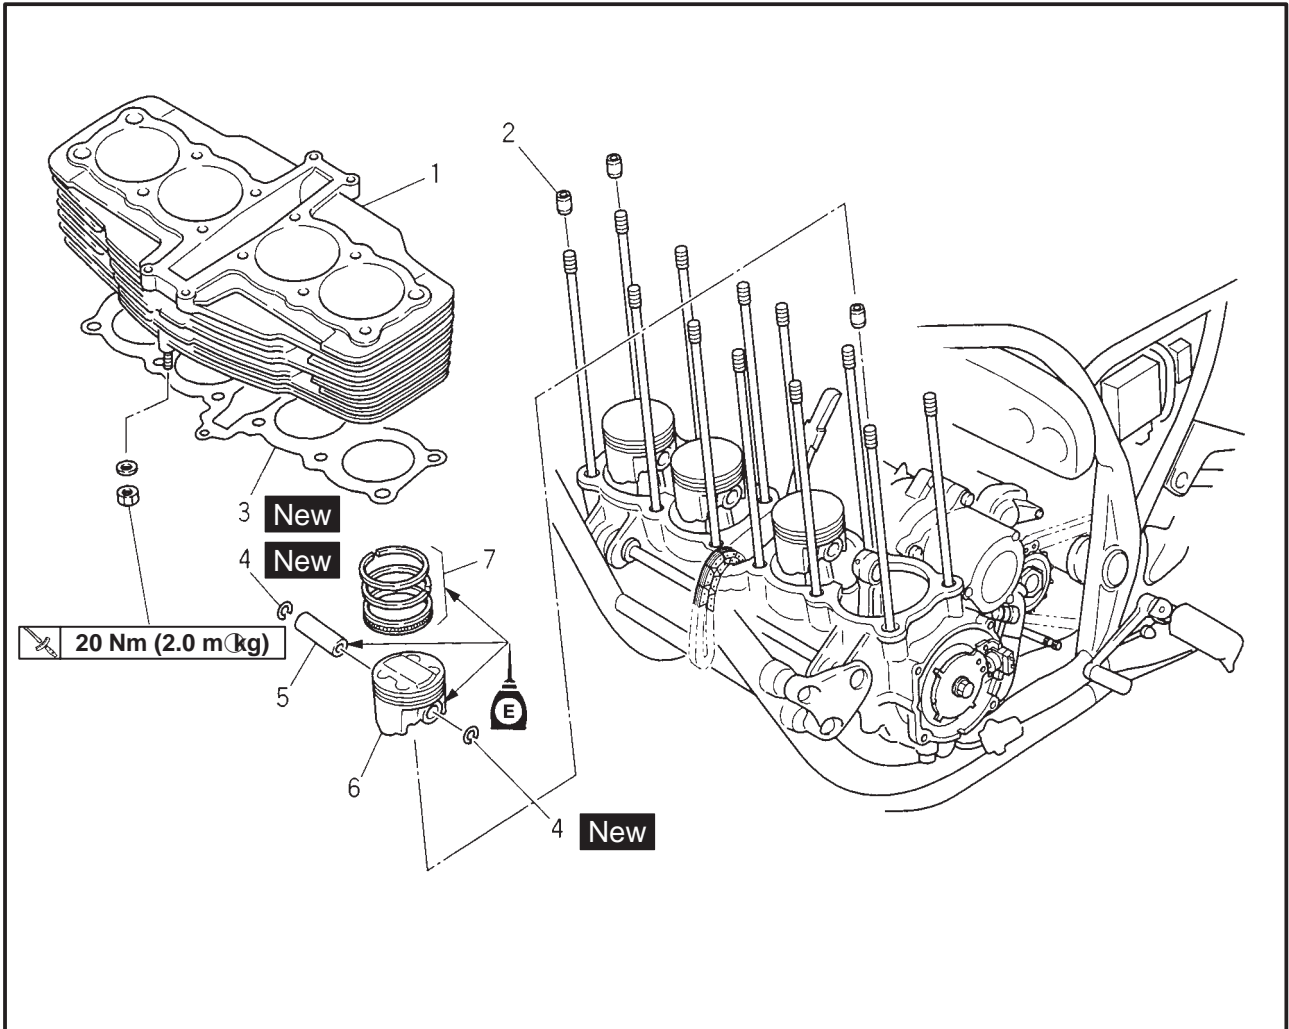

Order	Job/Part	Q'ty	Remarks
	<b>Removing the cylinders and pistons</b>		
	Cylinder head		Remove the parts in the order listed. Refer to "CYLINDER HEAD".
1	Cylinder block	1	Refer to "REMOVING/INSTALLING THE CYLINDERS AND PISTONS".
2	Dowel pins	2	
3	Gasket	1	
4	Piston pin clips	8	
5	Piston pins	4	
6	Pistons	4	
7	Oil ring sets	4	
			For installation, removal procedure.

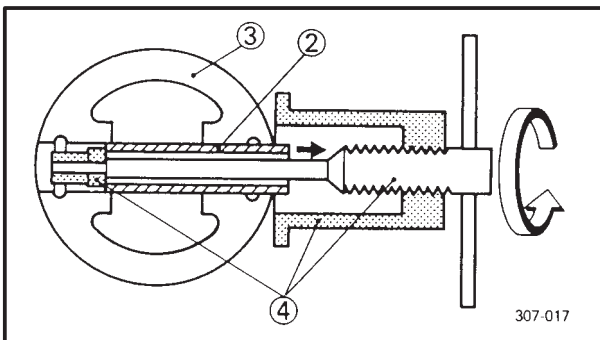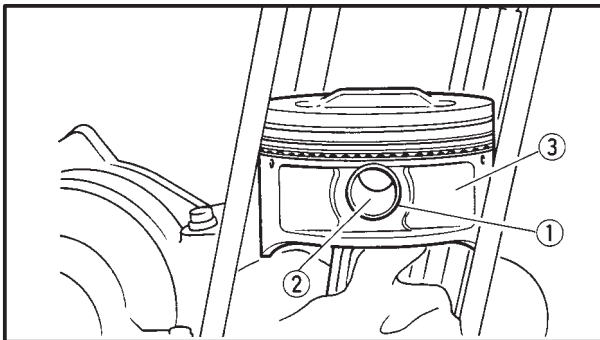

307-017

EAS00254

## REMOVING THE CYLINDERS AND PISTONS

The following procedure applies to all of the cylinders and pistons.

- Remove:
  - piston pin clip ①
  - piston pin ②
  - piston ③

### CAUTION:


Do not use a hammer to drive the piston pin out.

### NOTE:

- Before removing the piston pin clip, cover the crankcase opening with a clean rag to prevent the piston pin clip from falling into the crankcase.
- For reference during installation, put an identification mark on each piston crown.
- Before removing the piston pin, deburr the piston pin clip's groove and the piston's pin bore area. If both areas are deburred and the piston pin is still difficult to remove, remove it with the piston pin puller ④.



**Piston pin puller**  
90890-01304

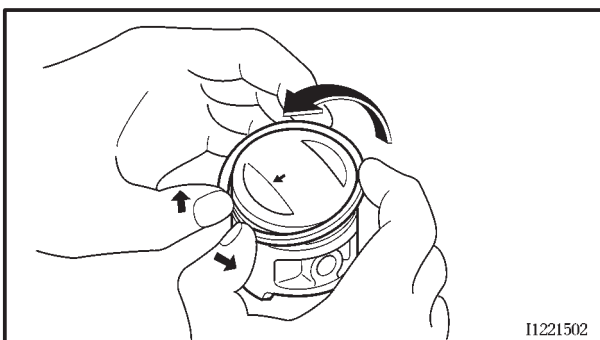

11221502

- Remove:
  - top ring
  - 2nd ring
  - oil ring

### NOTE:

When removing a piston ring, open the end gap with your fingers and lift the other side of the ring over the piston crown.


EAS00260

## CHECKING THE CYLINDERS AND PISTONS

The following procedure applies to all of the cylinders and pistons.

- Check:
  - piston wall
  - cylinder wall
  - Vertical scratches → Replace the cylinder, and replace the piston and piston rings as a set.
- Measure:
  - piston to cylinder clearance



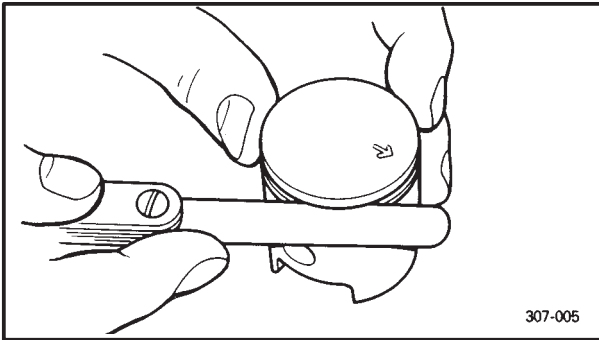

307-005

EAS00263

## CHECKING THE PISTON RINGS

### 1. Measure:

- piston ring side clearance

Out of specification → Replace the piston and piston rings as a set.

### NOTE:

Before measuring the piston ring side clearance, eliminate any carbon deposits from the piston ring grooves and piston rings.



### Piston ring side clearance

#### Top ring

**0.045 × 0.080 mm**

**<Limit>: 0.1 mm**

#### 2nd ring

**0.03 × 0.07 mm**


**<Limit>: 0.1 mm**

### 2. Install:

- piston ring  
(into the cylinder)

### NOTE:

Level the piston ring in the cylinder with the piston crown as shown.

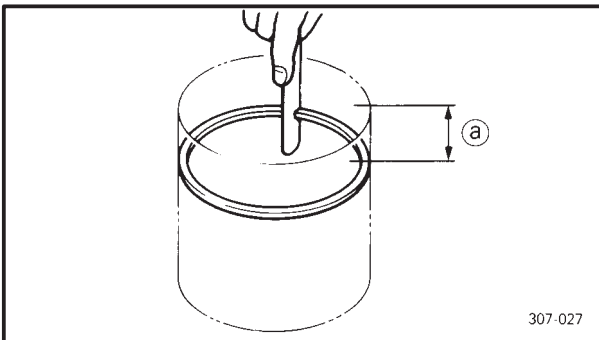

307-027

① 30 mm

### 3. Measure:

- piston ring end gap

Out of specification → Replace the piston ring.

### NOTE:

The oil ring expander spacer's end gap cannot be measured. If the oil ring rail's gap is excessive, replace all three piston rings.



### Piston ring end gap

#### Top ring

**0.20 × 0.35 mm**

**<Limit>: 0.6 mm**

#### 2nd ring




**0.35 × 0.50 mm**

**<Limit>: 0.75 mm**

#### Oil ring

**0.2 × 0.5 mm**



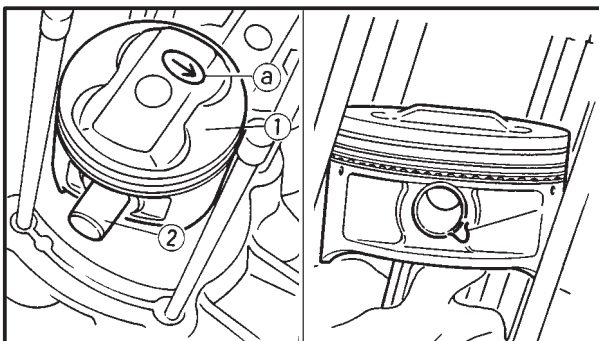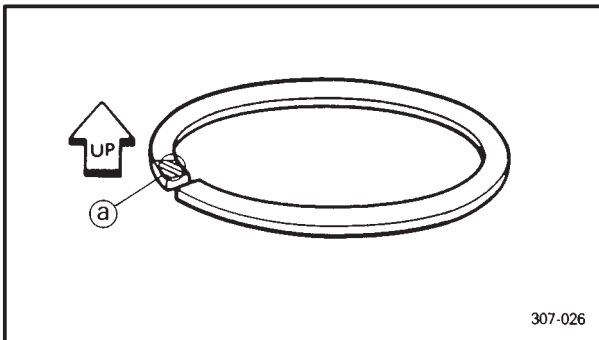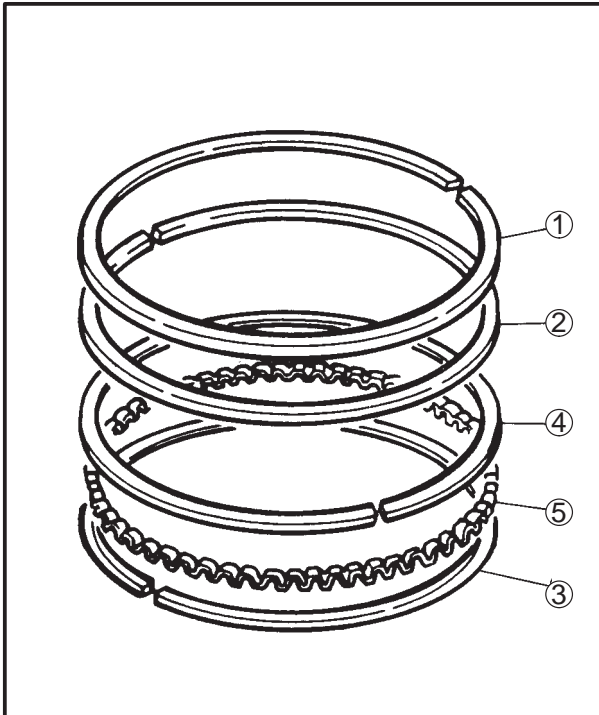

EAS00270

## INSTALLING THE PISTONS AND CYLINDERS

The following procedure applies to all of the pistons and cylinders.

1. Install:

- top ring ①
- 2nd ring ②
- lower oil ring rail ③
- upper oil ring rail ④
- oil ring expander ⑤

### NOTE:

- Be sure to install the piston rings so that the manufacturer's marks or numbers (a) are located on the upper side of the rings.
- The piston rings that have an "R" mark must be installed into the 2nd ring groove.

2. Install:



- piston ①
- piston pin ②
- piston pin clip (New) ③

### NOTE:

- Apply engine oil onto the piston pin.
- Make sure that the arrow mark (a) on the piston points towards the exhaust side of the engine.
- Before installing the piston pin clip, cover the crankcase opening with a clean rag to prevent the piston pin clip from falling into the crankcase.
- Reinstall each piston into its original cylinder (numbering order starting from the left: #1 to #4).

## CYLINDERS AND PISTONS

ENG

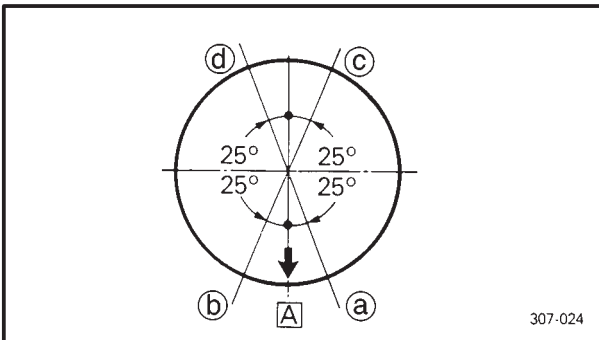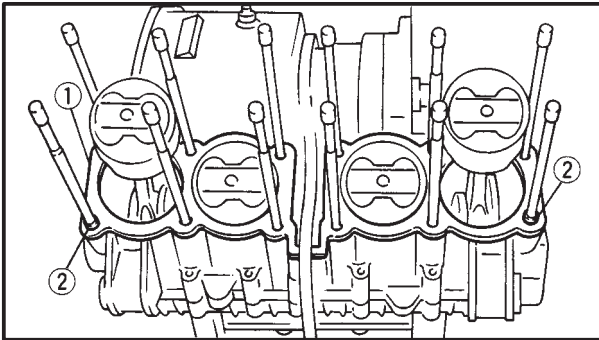

3. Install:

- gasket (New) ①
- dowel pins ②

4. Lubricate:

- piston
- piston rings
- cylinder  
(with the recommended lubricant)



**Recommended lubricant**  
**Engine oil**

5. Offset:

- piston ring end gaps

- a Top ring
- b Lower oil ring rail
- c Upper oil ring rail
- d 2nd ring
- A forward

6. Install:

- cylinder block


**NOTE:**

- Install pistons #2 and #3 before installing pistons #1 and #4.
- Pass the timing chain and timing chain guide (intake side) through the timing chain cavity.



EAS00273

**CLUTCH  
CLUTCH COVER**

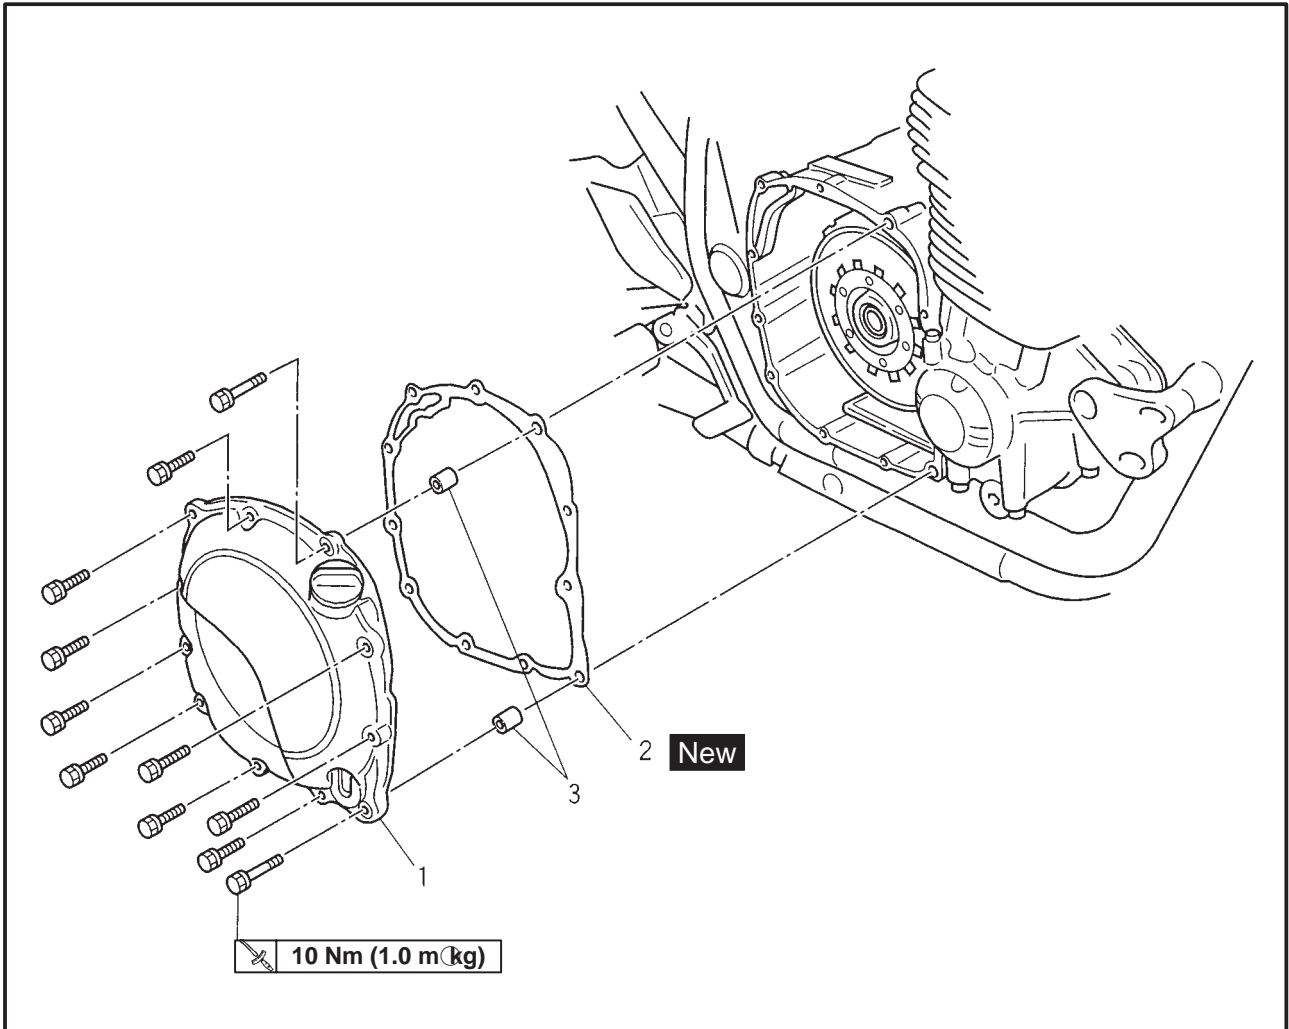


Order	Job/Part	Q'ty	Remarks
	<b>Removing the clutch cover.</b>		
	Engine oil		Remove the parts in the order listed.
	Drain		
1	Clutch cover	1	
2	Gasket	1	
3	Dowel pins	2	
			For installation, reverse the removal procedure.




EAS00274


CLUTCH

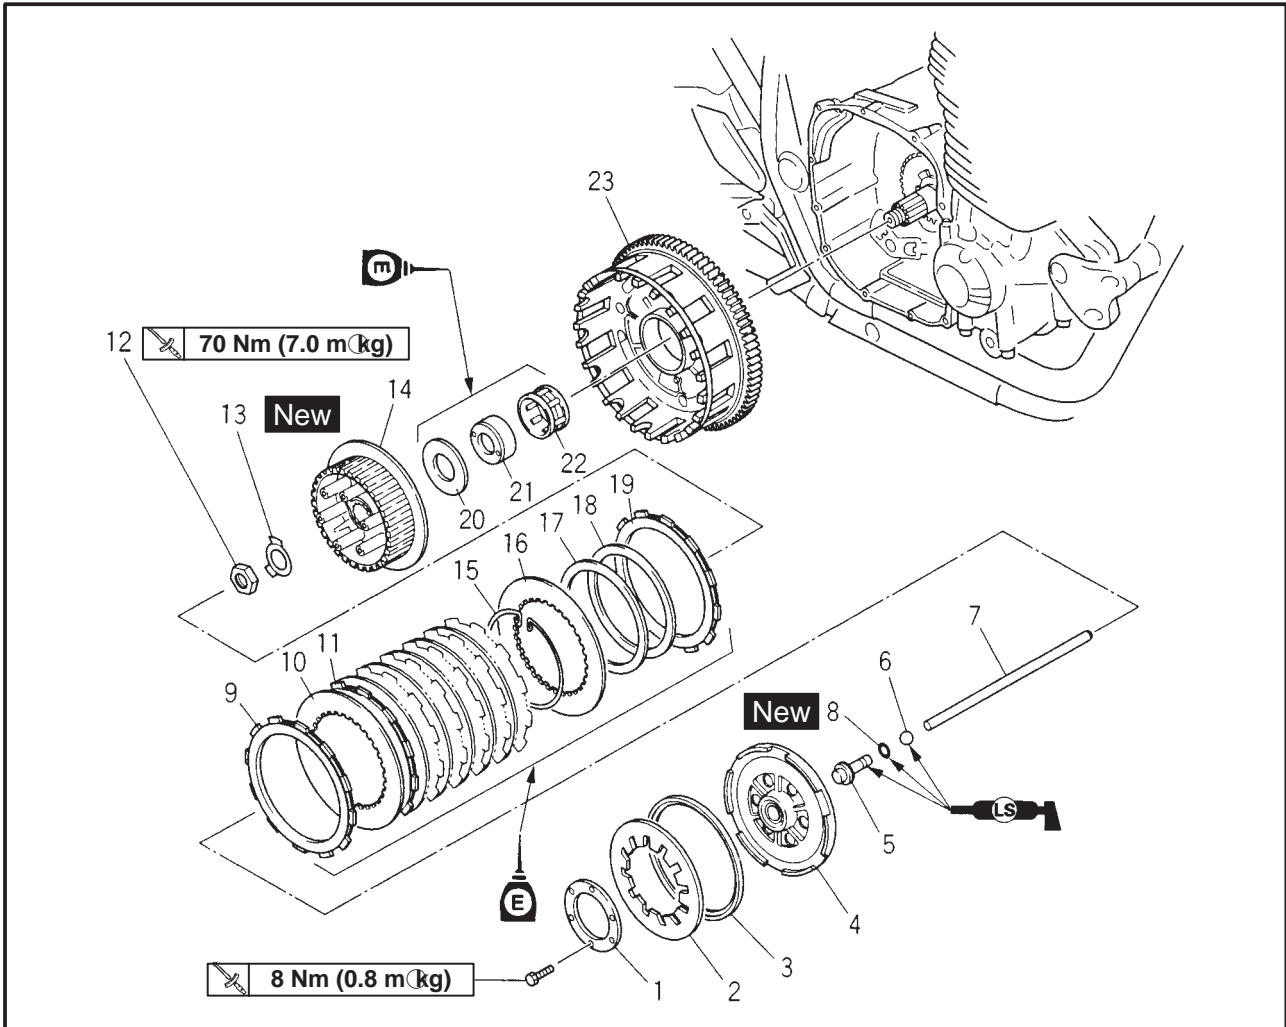

Order	Job/Part	Q'ty	Remarks
	<b>Removing the clutch</b>		
1	Pressure plate	1	Remove the parts in the order listed.
2	Clutch spring	1	
3	Spring housing	1	
4	Pressure plate	1	
5	Clutch push rod (short)	1	
6	Ball	1	
7	Clutch push rod (long)	1	
8	O-ring	1	
9	Friction plates	1	
10	Clutch plates	6	
11	Friction plates	6	
12	Clutch boss nut	1	
13	Lock washer	1	
			Refer to "INSTALLING THE CLUTCH".
			Refer to "REMOVING/INSTALLING THE CLUTCH".

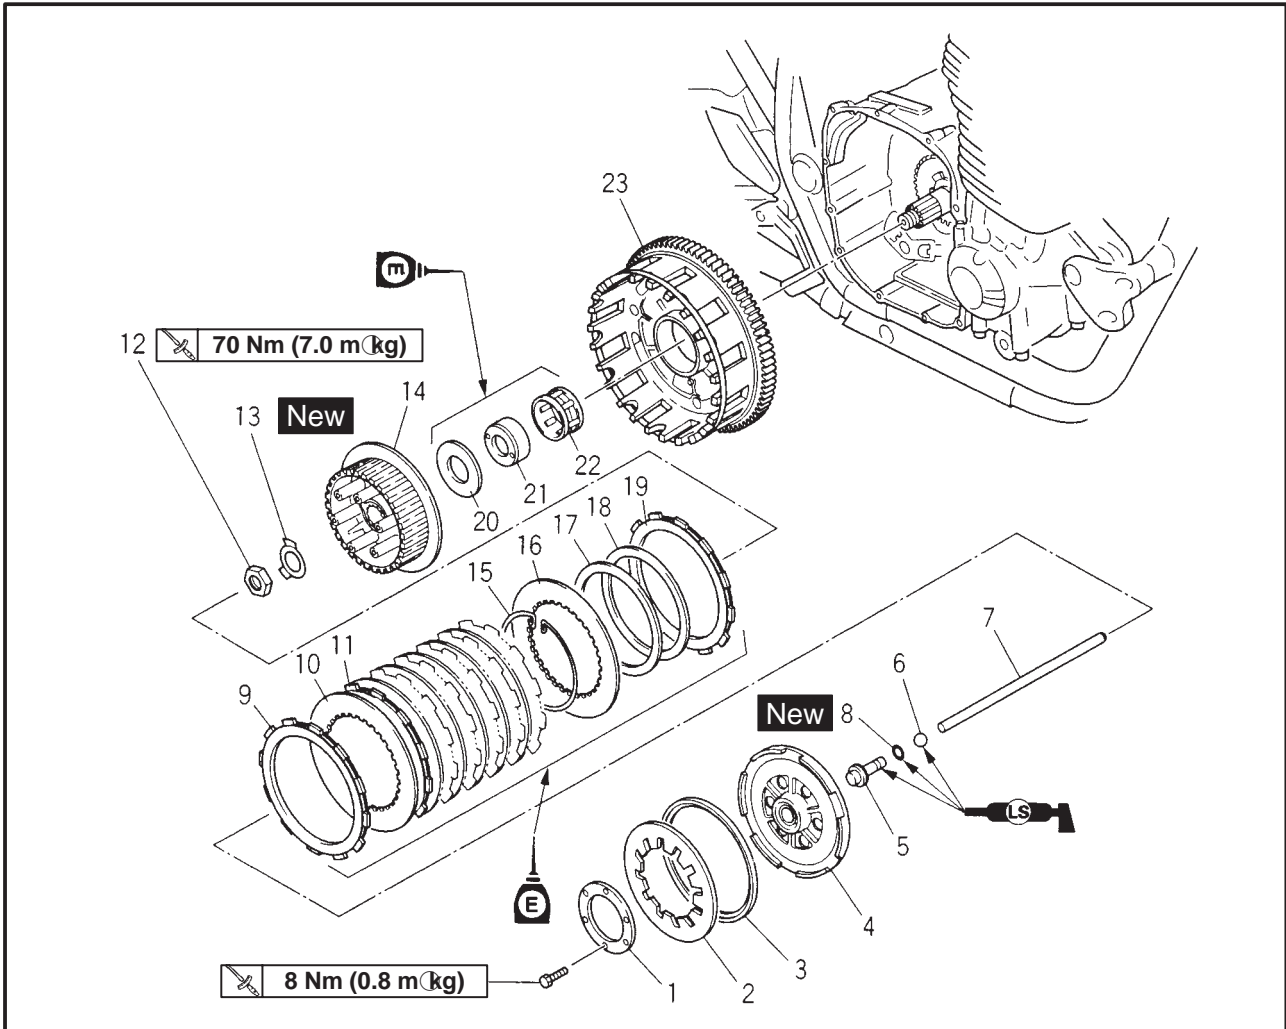

Order	Job/Part	Q'ty	Remarks
14	Clutch boss	1	Refer to "REMOVING/INSTALLING THE CLUTCH".
15	Stopper ring	1	
16	Clutch plate	1	
17	Clutch spring plate	1	
18	Clutch spring plate seat	1	
19	Friction plates (narrow)	1	
20	Thrust washer	1	
21	Spacer	1	
22	Bearing	1	
23	Clutch housing	1	
			For installation, reverse the removal procedure.

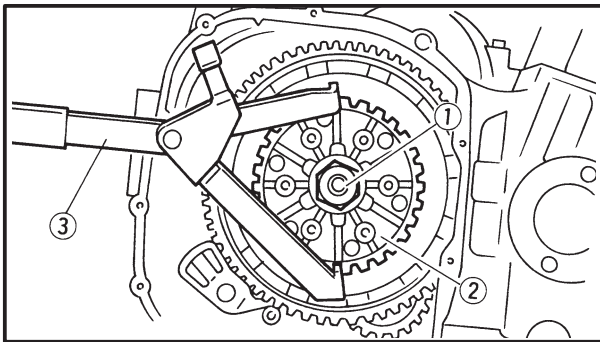

EAS00275

## REMOVING THE CLUTCH


1. Straighten the lock washer tab.
2. Loosen:
  - ⊙ Clutch boss nut ①

### NOTE:

While holding the clutch boss ② with the universal clutch holder, loosen the clutch boss nut.



**Universal clutch holder ③**  
**90890-04086**

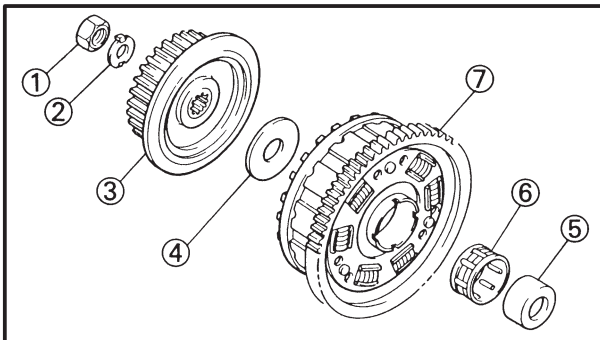


3. Remove:

- ⊙ Clutch boss nut ①
- ⊙ Lock washer ②
- ⊙ Clutch boss ③
- ⊙ Thrust washer ④
- ⊙ Spacer ⑤
- ⊙ Bearing ⑥
- ⊙ Clutch housing ⑦

### NOTE:

Insert two 6 mm bolts ⑧ into the spacer and then remove the spacer by pulling on the bolts.

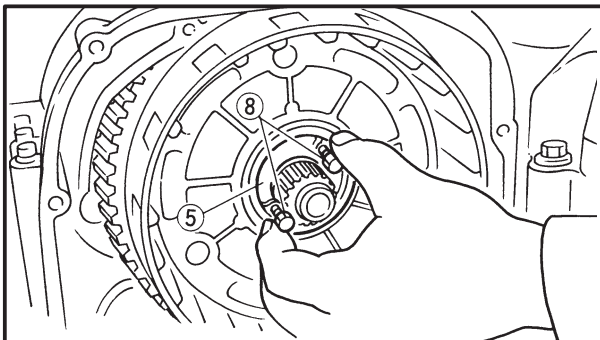

EAS00280


## CHECKING THE FRICTION PLATES

The following procedure applies to all of the friction plates.

1. Check:
  - ⊙ Friction plate
  - Damage/wear → Replace the friction plates as a set.
2. Measure:
  - ⊙ Friction plate thickness
  - Out of specification → Replace the friction plates as a set.

### NOTE:

Measure the friction plate at four places.

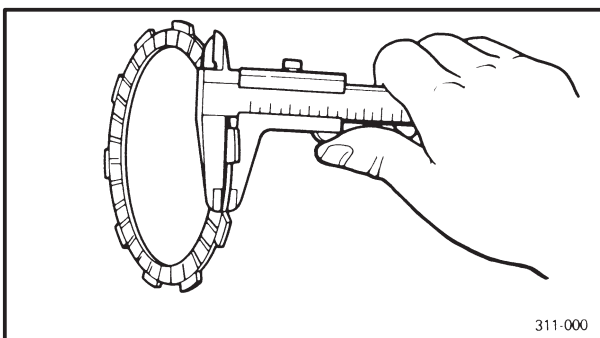

311-000



**Friction plate thickness**  
**2.9 × 3.1 mm**  
**<Limit>: 2.8 mm**



EAS00281

**CHECKING THE CLUTCH PLATES**

The following procedure applies to all of the clutch plates.

## 1. Check:

- ⊙ Clutch plate

Damage → Replace the clutch plates as a set.


## 2. Measure:

- ⊙ Clutch plate warpage

(with a surface plate and thickness gauge

①)

Out of specification → Replace the clutch plates as a set.

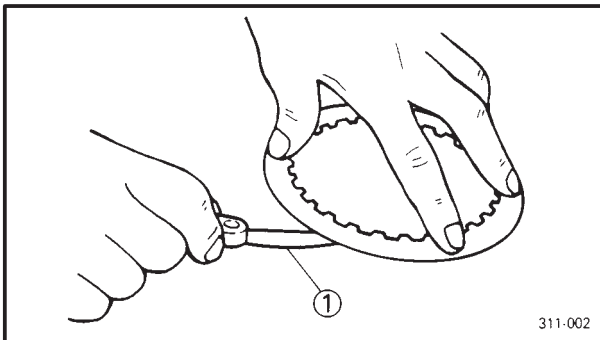

311-002




**Clutch plate warpage limit**  
**Less than 0.1 mm**

**CHECKING THE CLUTCH SPRING**

## 1. Check:

- ⊙ Clutch spring

Damage → Replace as a set.

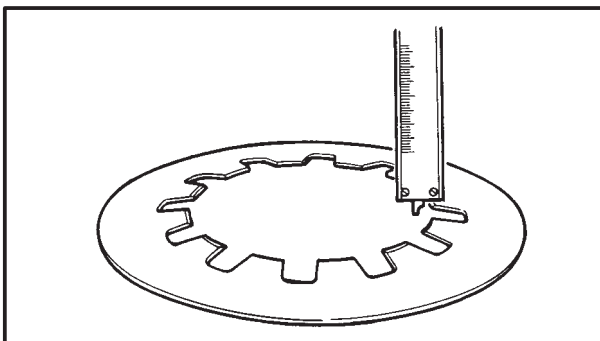

## 2. Measure:

- ⊙ Clutch spring free height

Out of specification → Replace spring as a set.



**Free height limit (clutch spring):**  
**6.0 mm**

EAS00283

**CHECKING THE CLUTCH SPRING PLATE**

## 1. Check:


- ⊙ Clutch spring plate

Damage → Replace.

## 2. Check:

- ⊙ Clutch spring plate seat

Damage → Replace.

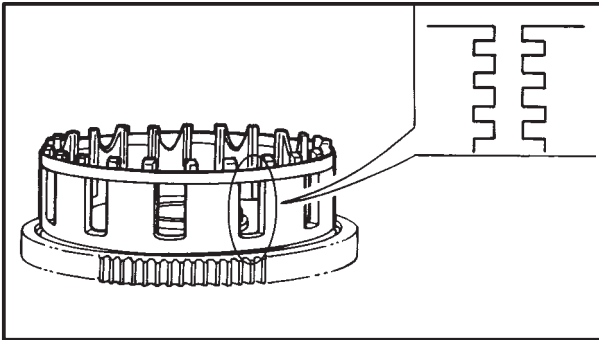

EAS00284

**CHECKING THE CLUTCH HOUSING**

## 1. Check:

- Clutch housing dogs

Damage/pitting/wear → Deburr the clutch housing dogs or replace the clutch housing.


**NOTE:** \_\_\_\_\_

Pitting on the clutch housing dogs will cause erratic clutch operation.

## 2. Check:

- Bearing

Damage/wear → Replace the clutch housing.

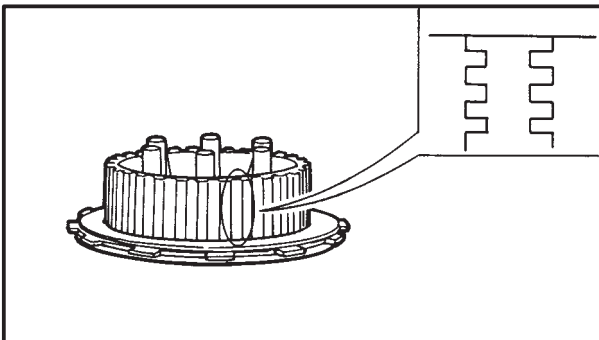

EAS00285

**CHECKING THE CLUTCH BOSS**

## 1. Check:

- Clutch boss splines

Damage/pitting/wear → Replace the clutch boss.

**NOTE:** \_\_\_\_\_

Pitting on the clutch boss splines will cause erratic clutch operation.

EAS00286


**CHECKING THE PRESSURE PLATE**

## 1. Check:

- Pressure plate

Cracks/damage → Replace.



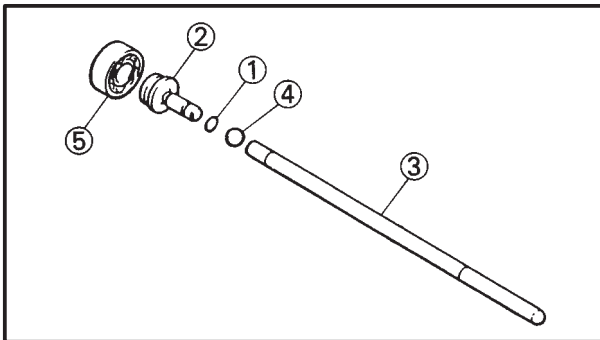

EAS00288

## CHECKING THE CLUTCH PUSH RODS

### 1. Check:

- O-ring ①
- short clutch push rod ②
- long clutch push rod ③
- ball ④
- bearing ⑤


Cracks/damage/wear → Replace the defective part(-s).

### 2. Measure:


- long clutch push rod bending limit
- Out of specification → Replace the long clutch push rod.



**Long clutch push rod bending limit**  
**0.3 mm**

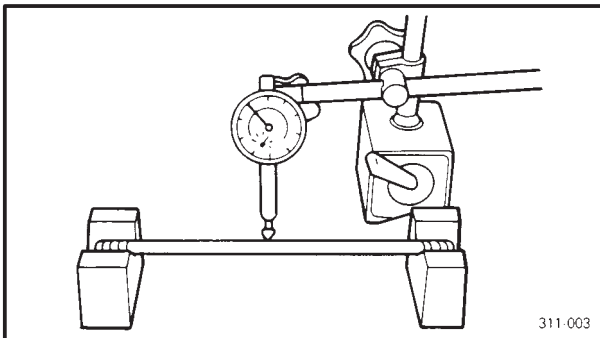

311-003

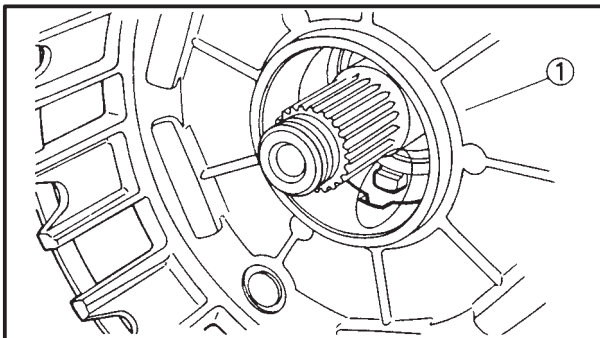


## INSTALLING THE CLUTCH

### 1. Install:

- clutch housing ①

### NOTE:

Engage the notch of clutch housing and the projection on the oil pump drive gear.

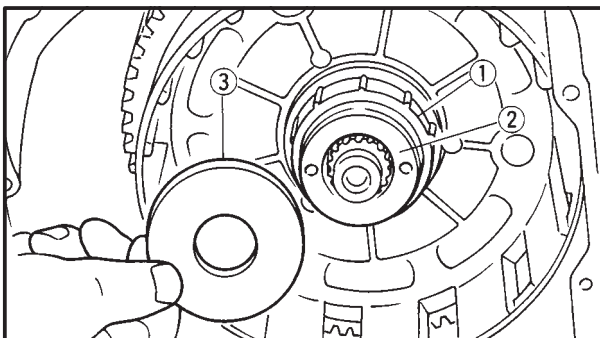

### 2. Install:


- bearing ①
- spacer ②
- thrust washer ③

### NOTE:

Install the spacer with the two screw holes facing towards the clutch boss.

# CLUTCH

ENG

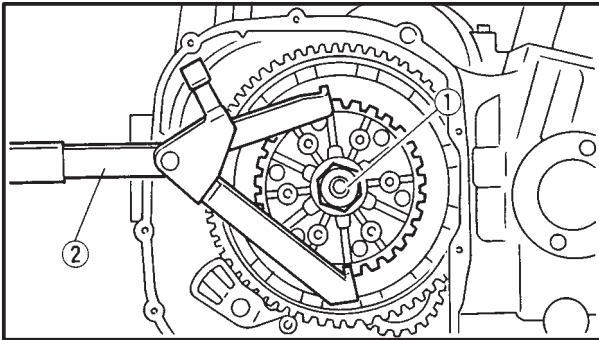

3. Tighten:  
ⓐ clutch boss nut ①

**NOTE:** \_\_\_\_\_


While holding the clutch boss with the universal clutch holder ②, tighten the clutch boss nut.



**Universal clutch holder**  
90890-04086




**Clutch boss nut**  
70 Nm (7.0 mⓀg)

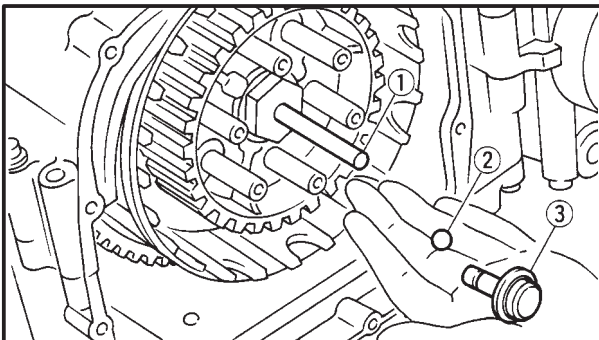

4. Bend the lock washer tab along a flat side of the nut.  
5. Lubricate:  
ⓐ long clutch push rod ①  
ⓑ ball ②  
ⓒ short clutch push rod ③  
(with the recommended lubricant)







**Recommended lubricant**  
Lithium soap base grease

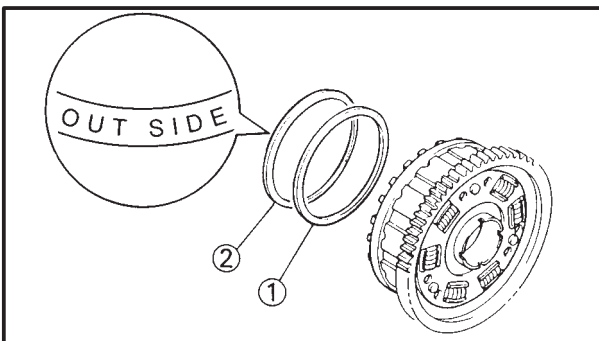

6. Install:  
ⓐ clutch spring plate seat ①  
ⓑ clutch spring plate ②

**NOTE:** \_\_\_\_\_

Install the spring plate with the letters "OUT SIDE" facing outward.

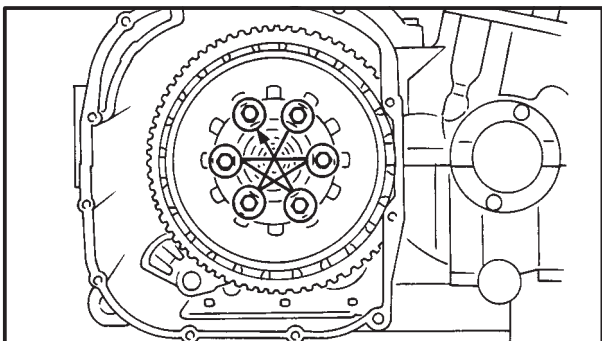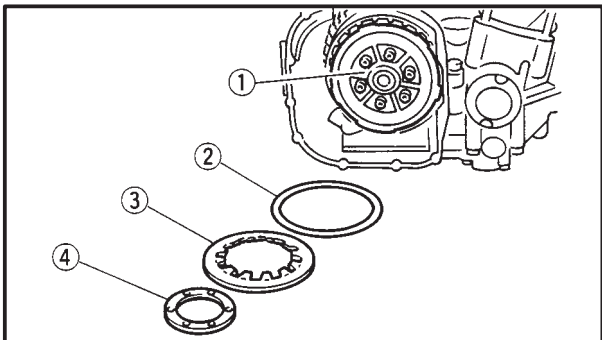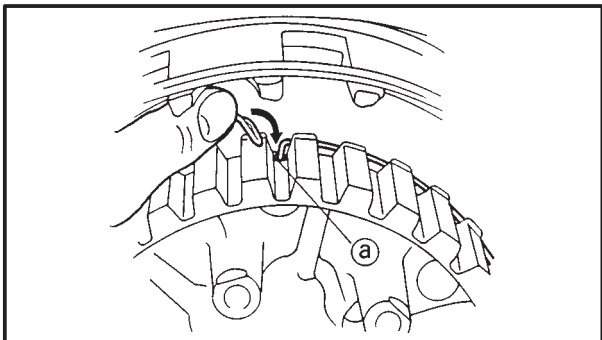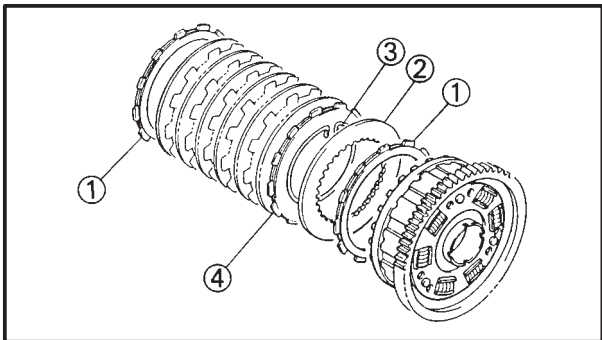

7. Install:

- Friction plates (narrow type) ①
- Clutch plates ②
- Stopper ring ③
- Friction plates (wide type) ④



- a. Install the friction plate of narrow contact face ① and one of the clutch plate to the clutch boss.
- b. Install the stopper ring ③.

**NOTE:**

Install the stopper ring onto the groove around the clutch boss with both ends of the ring fitted in the hole (a) on the boss.

- c. Install the other 6 clutch plates and the 6 friction plates of wide contact face alternately.
- d. Install the another friction plate of narrow face.



8. Install:

- Pressure plate ①
- Spring housing ②
- Clutch spring ③
- Plate ④
- Bolts (clutch spring)

**NOTE:**

Tighten the bolts (clutch spring) in stages, using a crisscross pattern.




**Bolt (clutch spring):  
8 Nm (0.8 mkg)**




EAS00305

CLUTCH MASTER CYLINDER

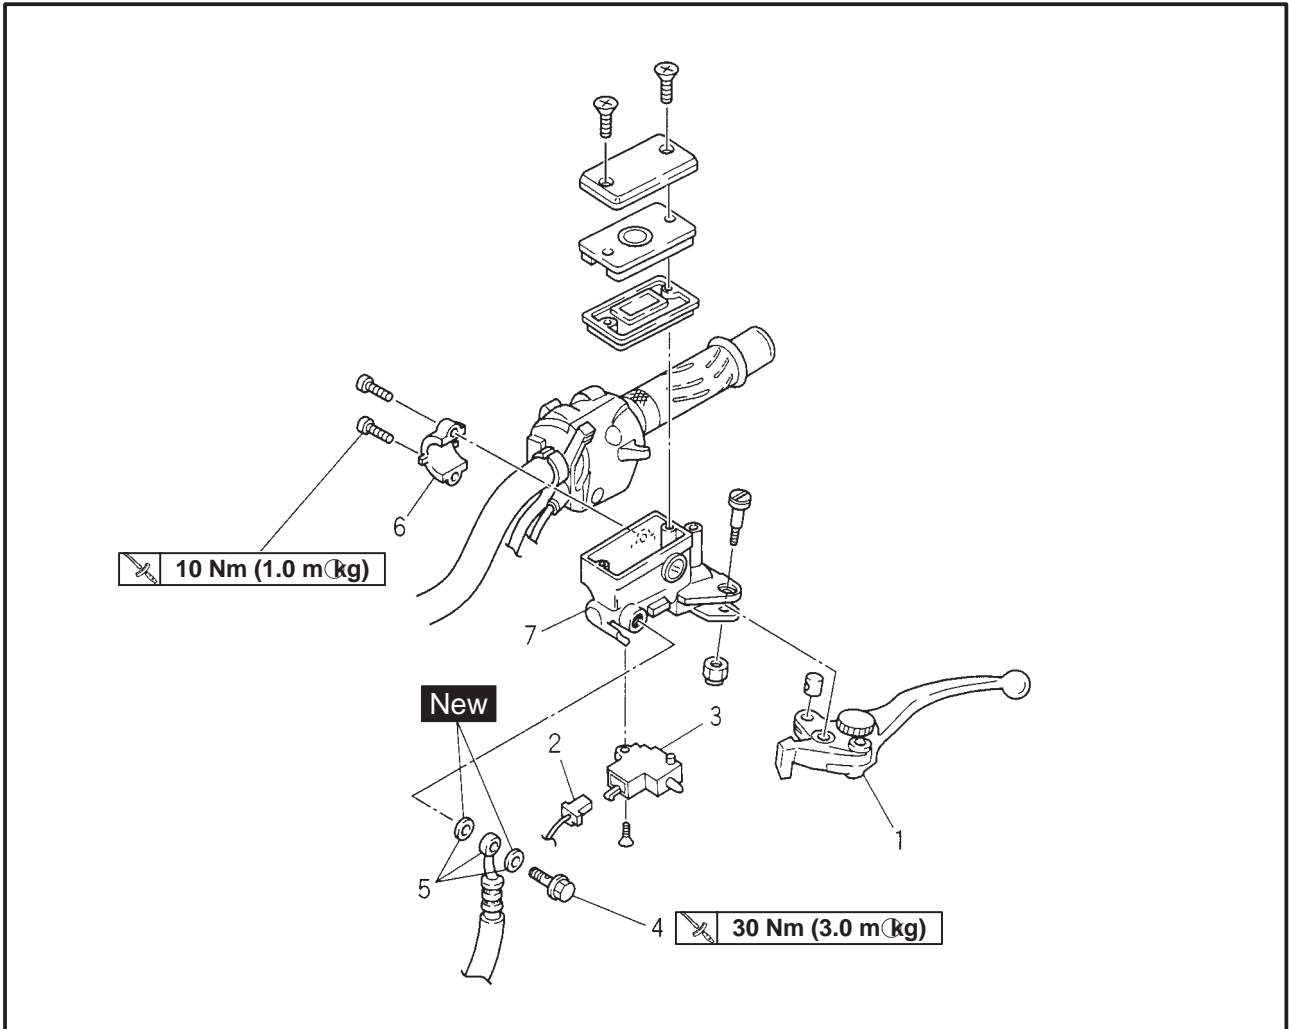

Order	Job/Part	Q'ty	Remarks
	<b>Removing the clutch master cylinder</b>		Remove the parts in the order listed.
1	Clutch lever	1	<b>NOTE:</b> _____ Before removing the clutch master cylinder, drain the clutch fluid from the entire clutch system.
2	Clutch switch lead	1	
3	Clutch switch	1	
4	Union bolt	1	Refer to "INSTALLING THE CLUTCH MASTER CYLINDER".  For installation, reverse the removal procedure.
5	Copper washers/Clutch hose	2/1	
6	Clutch lever holder	1	
7	Clutch master cylinder	1	

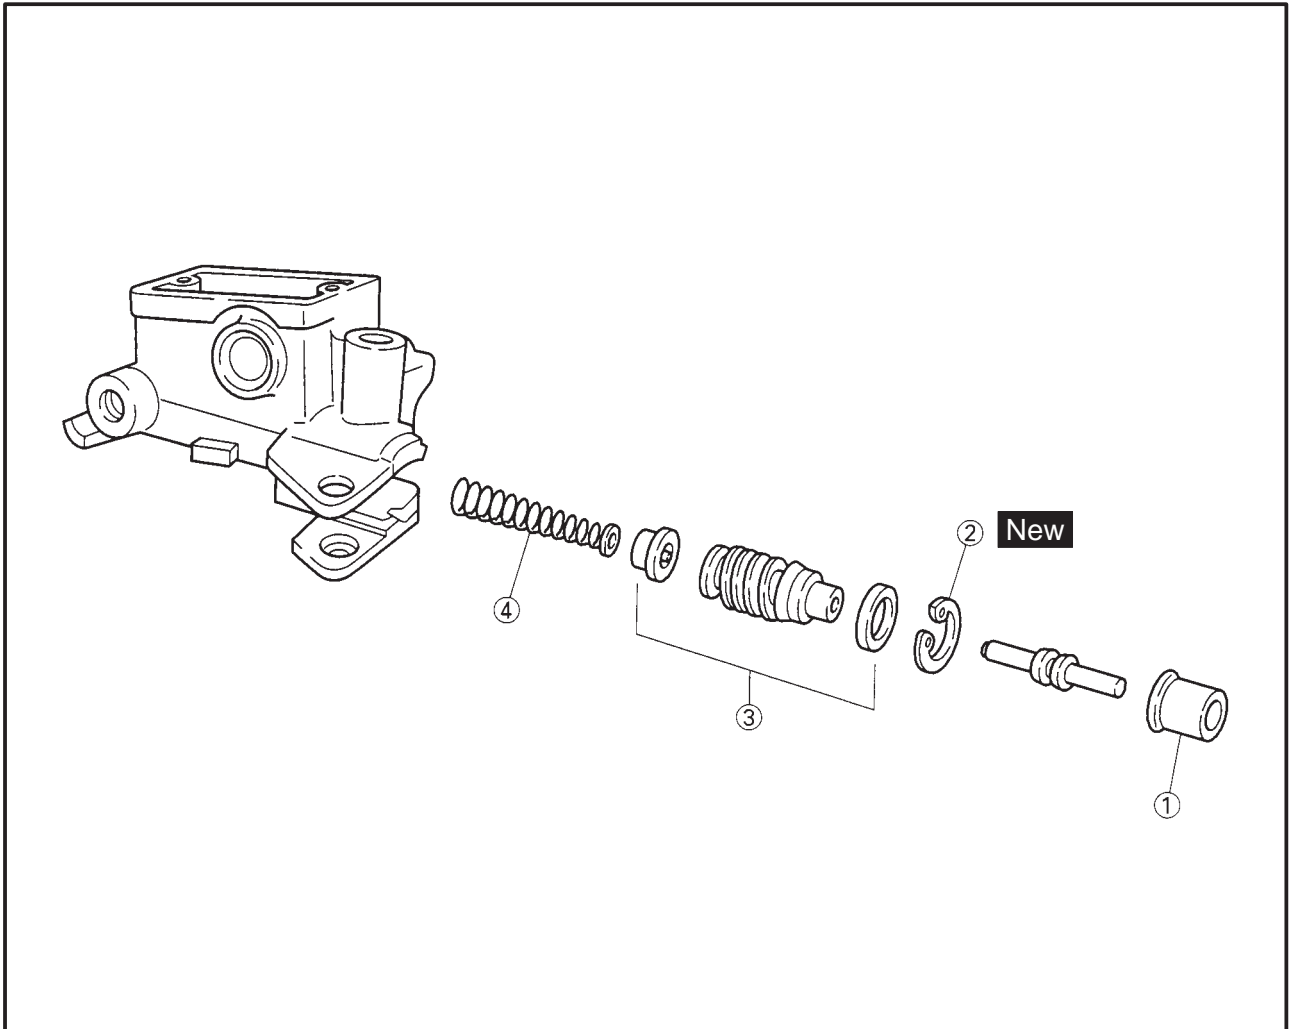

Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the clutch master cylinder</b>		Disassembly the parts in the order listed.
①	Master cylinder boot	1	
②	Circlip	1	
③	Master cylinder kit	1	
④	Spring	1	
			For assembly, reverse the disassembly procedure.



EAS00307

### CAUTION:

Clutch components rarely require disassembly.

Therefore, always follow these preventive measures:

- Never disassemble clutch components unless absolutely necessary.
- If any connection on the hydraulic clutch system is disconnected, the entire clutch system must be disassembled, drained, cleaned, properly filled, and bled after reassembly.
- Never use solvents on internal clutch components.
- Use only clean or new clutch fluid for cleaning clutch components.
- Clutch fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt fluid immediately.
- Avoid clutch fluid coming into contact with the eyes as it can cause serious injury.

First aid for clutch fluid entering the eyes:

- Flush with water for 15 minutes and get immediate medical attention.

EAS00308

### CHECKING THE CLUTCH MASTER CYLINDER


Recommended clutch component replacement schedule	
Piston seals	Every two years
Clutch hose	Every two years
Clutch fluid	Every two years and whenever the clutch is disassembled.


1. Check:

- Clutch master cylinder body ①  
Cracks/damage → Replace the clutch master cylinder.
- Clutch fluid delivery passage ②  
(clutch master cylinder body)  
Obstruction → Blow out with compressed air.

### ⚠ WARNING

Whenever a clutch master cylinder is disassembled, replace the piston seals.

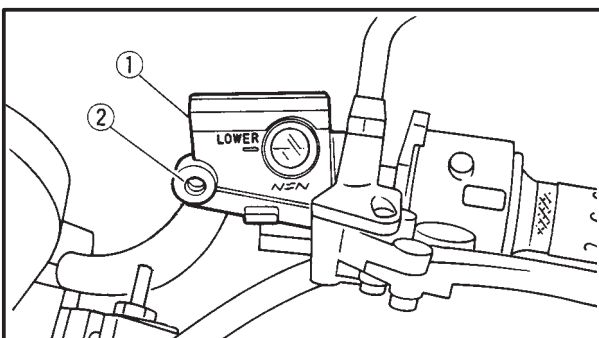

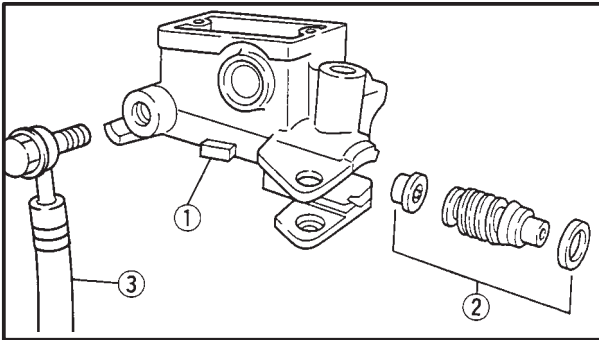


## 2. Check:

- Clutch master cylinder ①
- Clutch master cylinder kit ②
  - Rust/scratches/wear → Replace the clutch master cylinder and clutch master cylinder kit as a set.
- Clutch hose ③
  - Cracks/damage/wear → Replace.

EAS00309

**ASSEMBLING THE CLUTCH MASTER CYLINDER****⚠ WARNING**

- Before installation, all internal clutch components must be cleaned and lubricated with clean or new clutch fluid.
- Never use solvents on internal clutch components as they will cause the piston seals to swell and distort.
- Whenever a clutch master cylinder is disassembled, replace the piston seals.

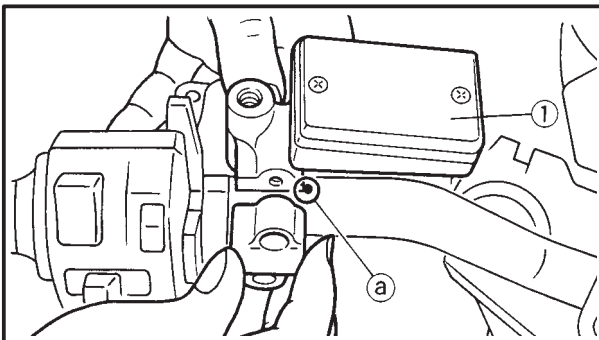

Recommended clutch fluid  
Brake fluid DOT 4

EAS00310

**INSTALLING THE CLUTCH MASTER CYLINDER**

## 1. Install:

- Clutch master cylinder ①

**⚠ WARNING**

- Install the clutch lever holder with the “UP” mark facing up.
- Align the end of the clutch lever holder with the punch mark (a) in the handlebar.
- First, tighten the upper bolt, then the lower bolt.

## 2. Install:


- Copper washers (New)
- Clutch hose ①
- Union bolt ②

**⚠ WARNING**

Proper clutch hose routing is essential to insure safe motorcycle operation. Refer to “CABLE ROUTING”.


**NOTE:**

While holding the clutch hose, tighten the union bolt.

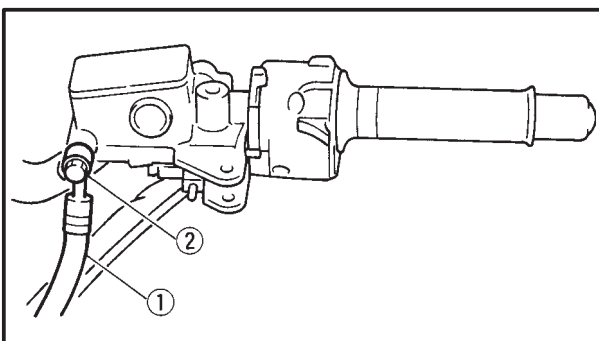

## CLUTCH

ENG

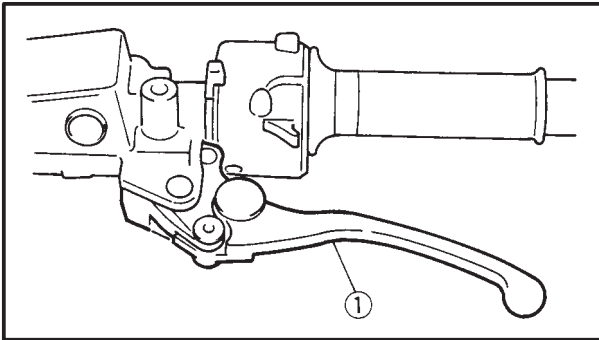

Union bolt  
30 Nm (3.0 mkg)

3. Install:

- Clutch lever ①

**NOTE:**

Lubricate the clutch lever pivot bolt with lithium soap base grease.

4. Fill:

- Clutch master cylinder reservoir  
(with the specified amount of the recommended clutch fluid)



Recommended clutch fluid  
Brake fluid DOT 4

**⚠ WARNING**

- Use only the designated clutch fluid. Other clutch fluids may cause the rubber seals to deteriorate, causing leakage and poor clutch performance.
- Refill with the same type of clutch fluid that is already in the system. Mixing clutch fluids may result in a harmful chemical reaction, leading to poor clutch performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the clutch fluid and could cause vapor lock.

**CAUTION:**

Clutch fluid may damage painted surfaces or plastic parts. Therefore, always clean up any spilt clutch fluid immediately.


**NOTE:**

In order to ensure a correct reading of the clutch fluid level, make sure that the top of the reservoir is horizontal.

5. Bleed:

- Clutch system  
Refer to "BLEEDING THE HYDRAULIC CLUTCH SYSTEM" in chapter 3.



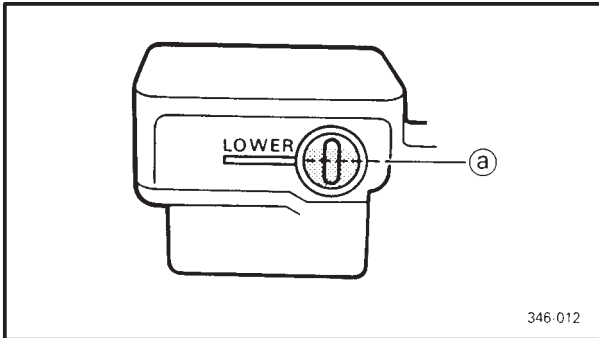

## 6. Check:

- clutch fluid level

Below the minimum level mark (a) → Add the recommended clutch fluid to the proper level.

Refer to "CHECKING THE CLUTCH FLUID LEVEL" in chapter 3.

## 7. Check:

- clutch lever operation


Soft or spongy feeling → Bleed the clutch system.

Refer to "BLEEDING THE HYDRAULIC CLUTCH SYSTEM" in chapter 3.




EAS00311



CLUTCH RELEASE CYLINDER

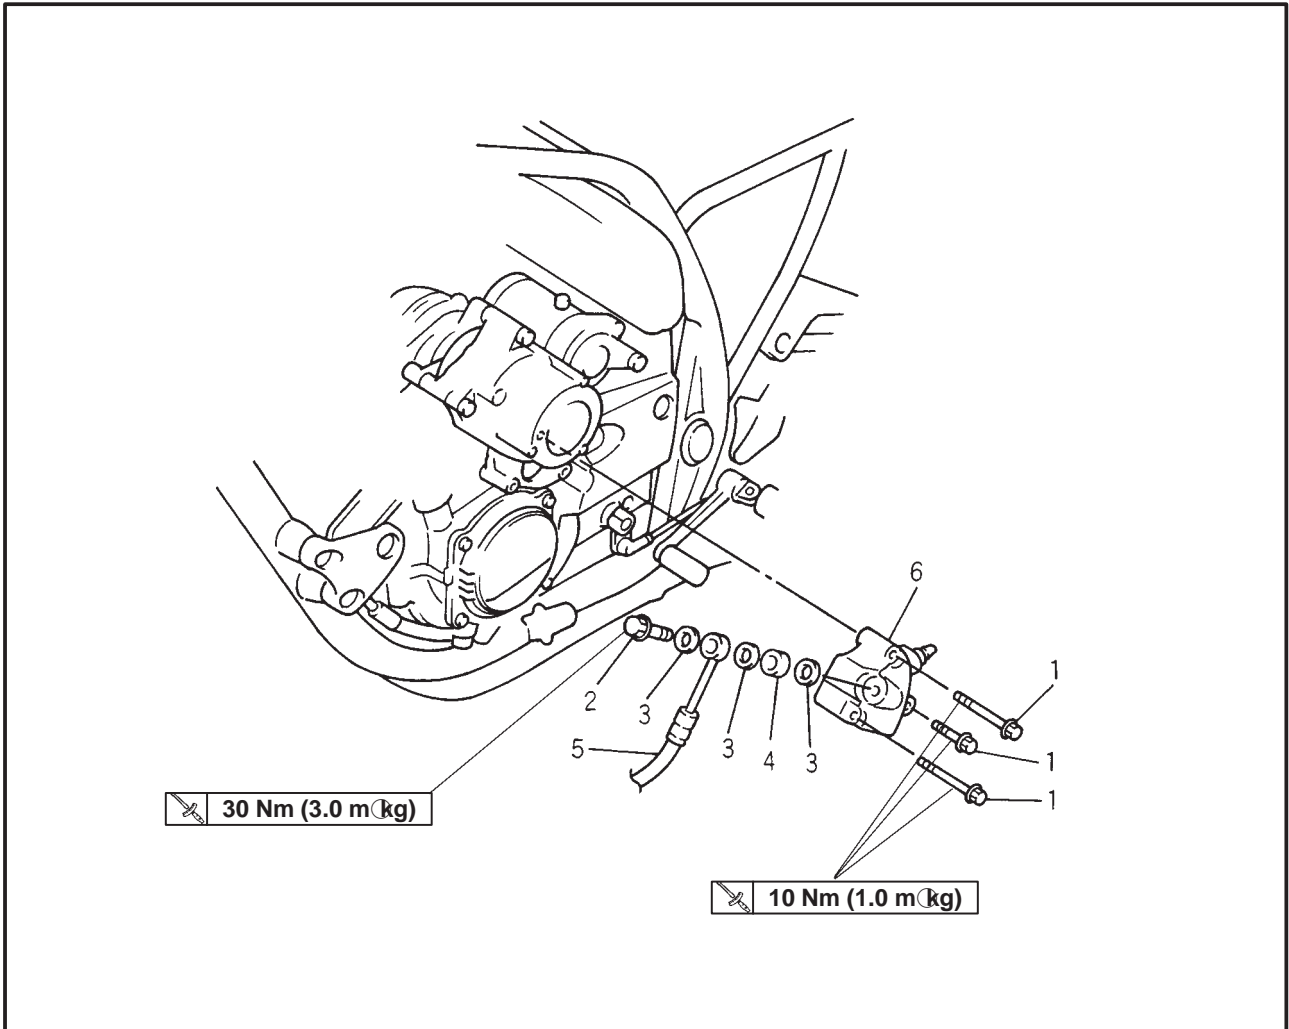

Order	Job/Part	Q'ty	Remarks
	<b>Removing the clutch release cylinder</b>		Remove the parts in the order listed.
1	Bolt	3	Refer to "INSTALLING THE CLUTCH RELEASE CYLINDER". <b>NOTE:</b> _____ Before removing the clutch release cylinder, drain the clutch fluid from the entire clutch system.
2	Union bolt	1	Refer to "INSTALLING THE CLUTCH RELEASE CYLINDER".
3	Copper washer	3	
4	Spacer	1	
5	Clutch hose	1	
6	Clutch release cylinder	1	
			For installation, reverse the removal procedure.

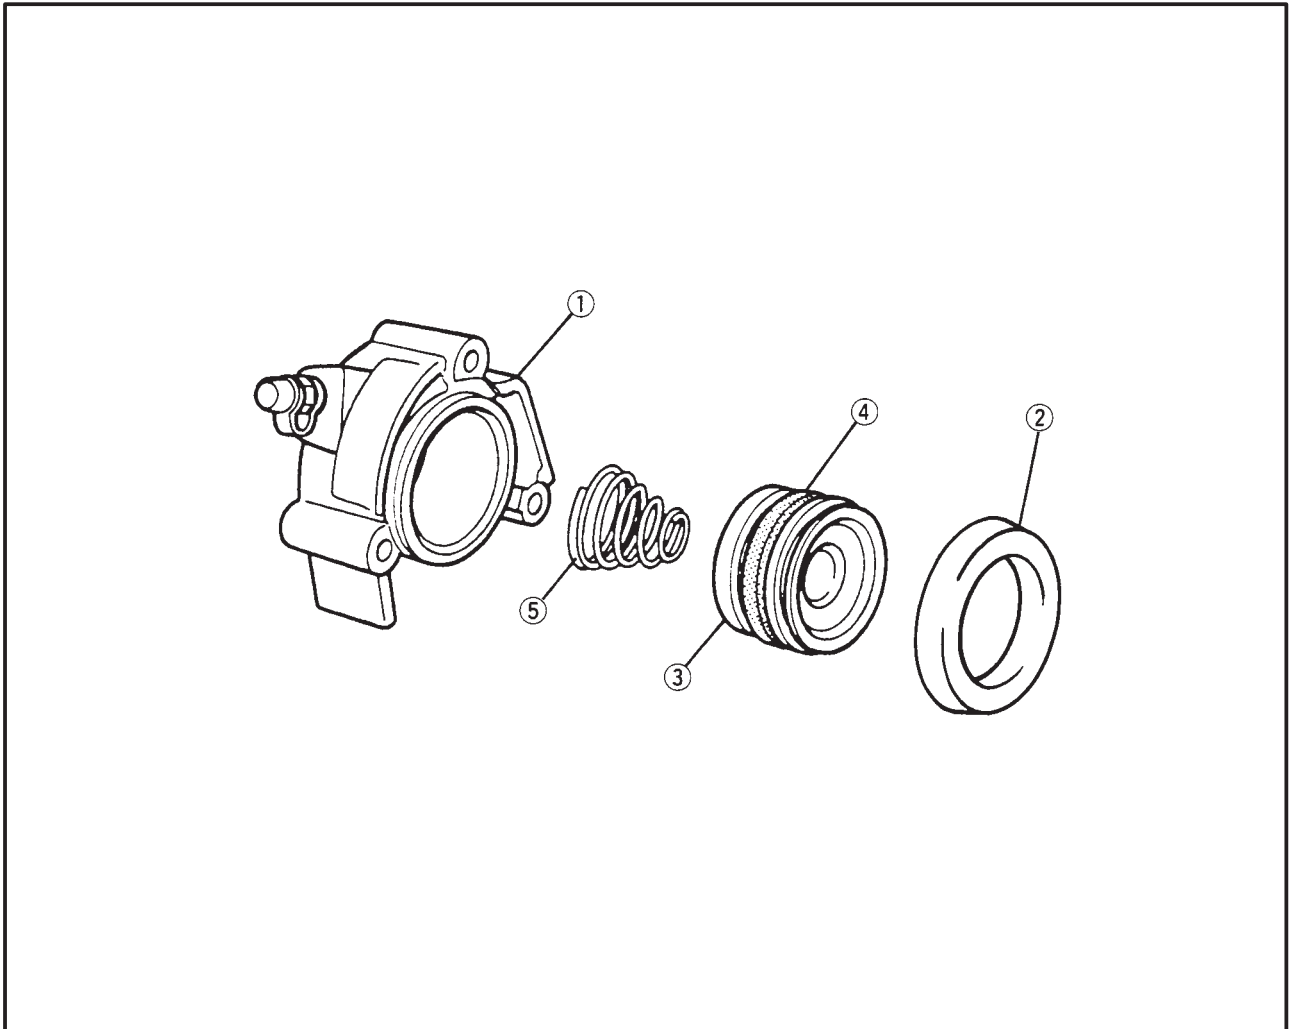

Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the clutch release cylinder</b>		Disassembly the parts in the order listed.
①	Clutch release cylinder	1	Refer to "DISASSEMBLING THE CLUTCH RELEASE CYLINDER".
②	Piston seal	1	
③	Clutch release cylinder piston	1	
④	Piston seal	1	
⑤	Spring	1	
			For assembly, reverse the disassembly procedure.

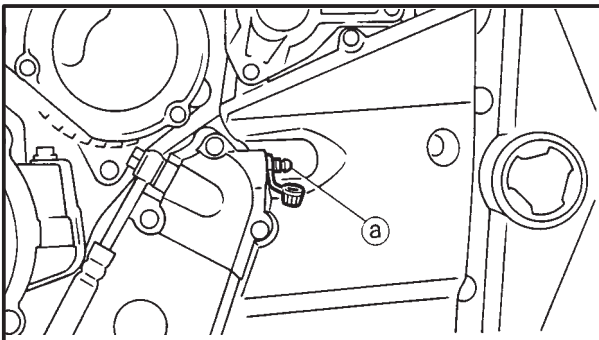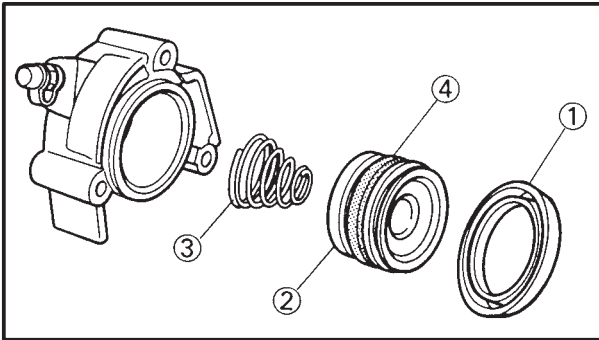

EAS00313

**DISASSEMBLING THE CLUTCH RELEASE CYLINDER**

1. Remove:

- piston seal ①
- clutch release cylinder piston ②
- spring ③
- piston seal ④



a. Blow compressed air into the clutch hose joint opening (a) to force out the piston from the clutch release cylinder.

**⚠ WARNING**


- Cover the clutch release cylinder with a rag. Be careful not to get injured when the piston is expelled from the clutch release cylinder.
- Never try to pry out the clutch release cylinder piston.

b. Remove the clutch release cylinder piston seals.



EAS00314

**CHECKING THE CLUTCH RELEASE CYLINDER**

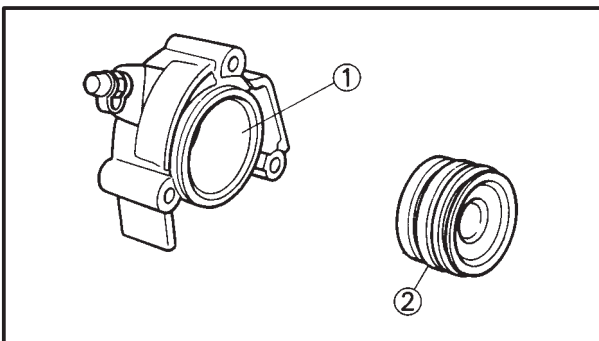


Recommended clutch component replacement schedule	
Piston seals	Every two years
Clutch hose	Every two years
Clutch fluid	Every two years and whenever the clutch is disassembled

1. Check:

- clutch release cylinder body  
Cracks/damage → Replace the clutch release cylinder.

2. Check:

- clutch release cylinder ①
- clutch release cylinder piston ②  
Rust/scratches/wear → Replace the clutch release cylinder and clutch release cylinder piston as a set.

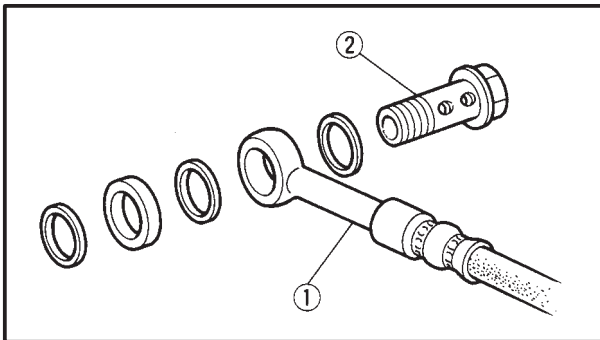

EAS00315

### INSTALLING THE CLUTCH RELEASE CYLINDER

#### 1. Check:

- Copper washers (New)
- Clutch hose ①
- Union bolt ②

#### **⚠ WARNING**

Proper clutch hose routing is essential to insure safe motorcycle operation. Refer to "CABLE ROUTING".



**Union bolt**  
30 Nm (3.0 mkg)

#### 2. Fill:

- Clutch master cylinder reservoir  
(with the specified amount of the recommended clutch fluid)



**Recommended clutch fluid**  
Brake fluid DOT 4

#### **⚠ WARNING**


- Use only the designated clutch fluid. Other clutch fluids may cause the rubber seals to deteriorate, causing leakage and poor clutch performance.
- Refill with the same type of clutch fluid that is already in the system. Mixing clutch fluids may result in a harmful chemical reaction, leading to poor clutch performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the clutch fluid and could cause vapor lock.

#### **CAUTION:**

Clutch fluid may damage painted surfaces or plastic parts. Therefore, always clean up any spilt clutch fluid immediately.

**NOTE:**

In order to ensure a correct reading of the clutch fluid level, make sure that the top of the reservoir is horizontal.

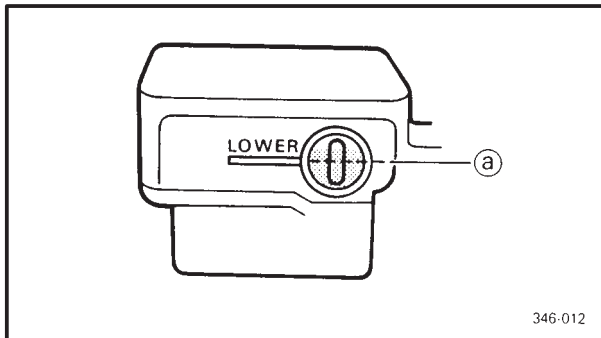**3. Bleed:**

- Clutch system

Refer to "BLEEDING THE HYDRAULIC CLUTCH SYSTEM" in chapter 3.

**4. Check:**

- Clutch fluid level

Below the minimum level mark (a) → Add the recommended clutch fluid to the proper level.

Refer to "CHECKING THE CLUTCH FLUID LEVEL" in chapter 3.

**5. Check:**


- Clutch lever operation

Soft or spongy feeling → Bleed the clutch system.


Refer to "BLEEDING THE HYDRAULIC CLUTCH SYSTEM" in chapter 3.



OIL PUMP


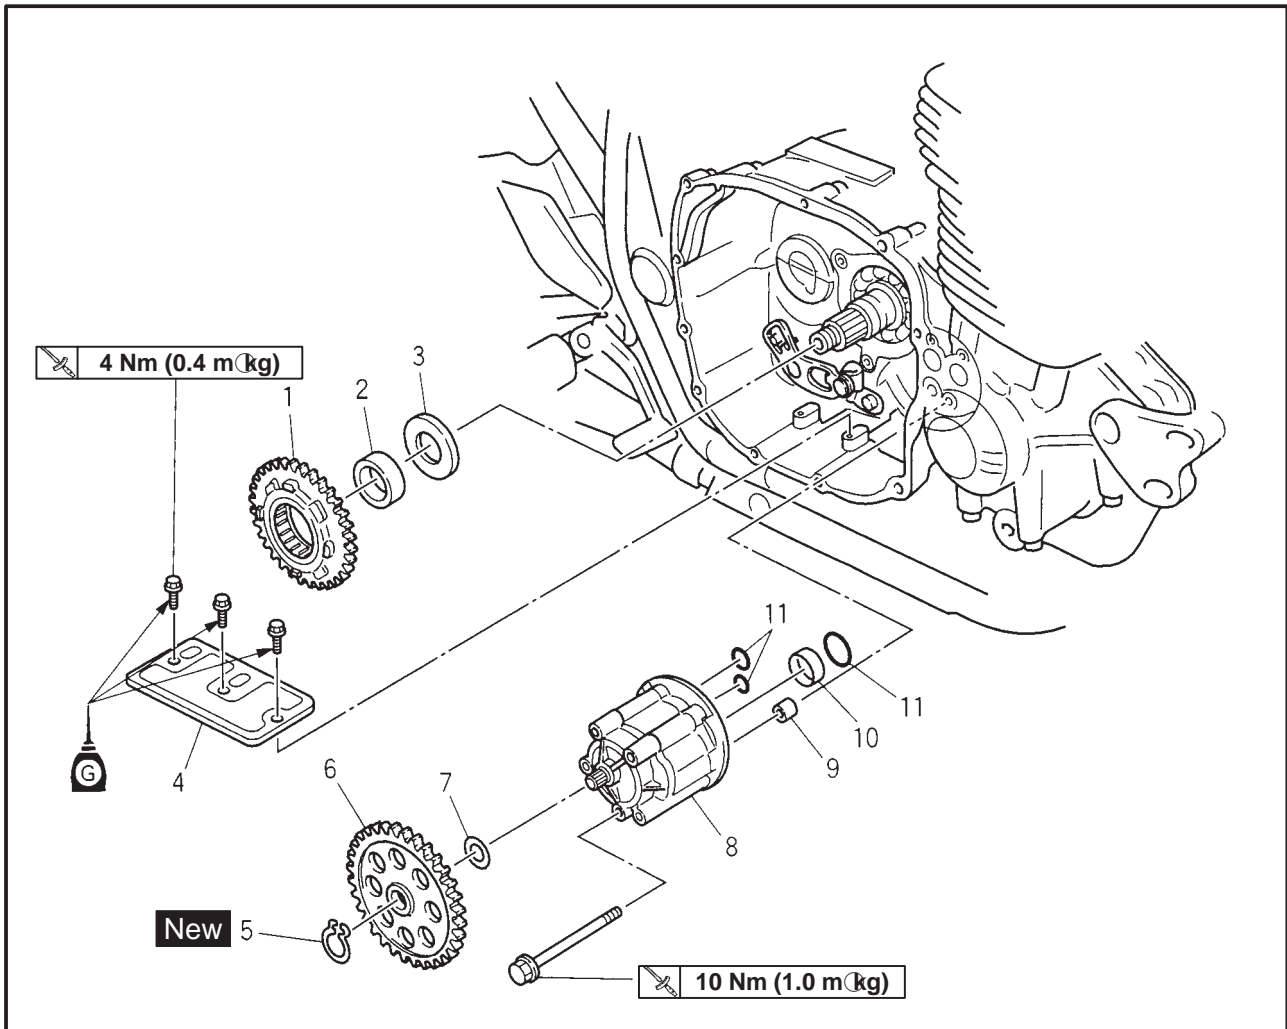


Order	Job/Part	Q'ty	Remarks
	<b>Removing the oil pump.</b>		
	Clutch		Remove the parts in the order listed. Refer to "INSTALLING THE CLUTCH".
1	Oil pump drive gear	1	
2	Collar	1	
3	Washer	1	
4	Oil buffer plate	1	
5	Circlip	1	
6	Oil pump driven gear	1	
7	Washer	1	
8	Oil pump	1	Refer to "INSTALLING THE OIL PUMP".
9	Dowel pin	1	
10	Collar	1	
11	O-ring	3	
			For installation, reverse the removal procedure.

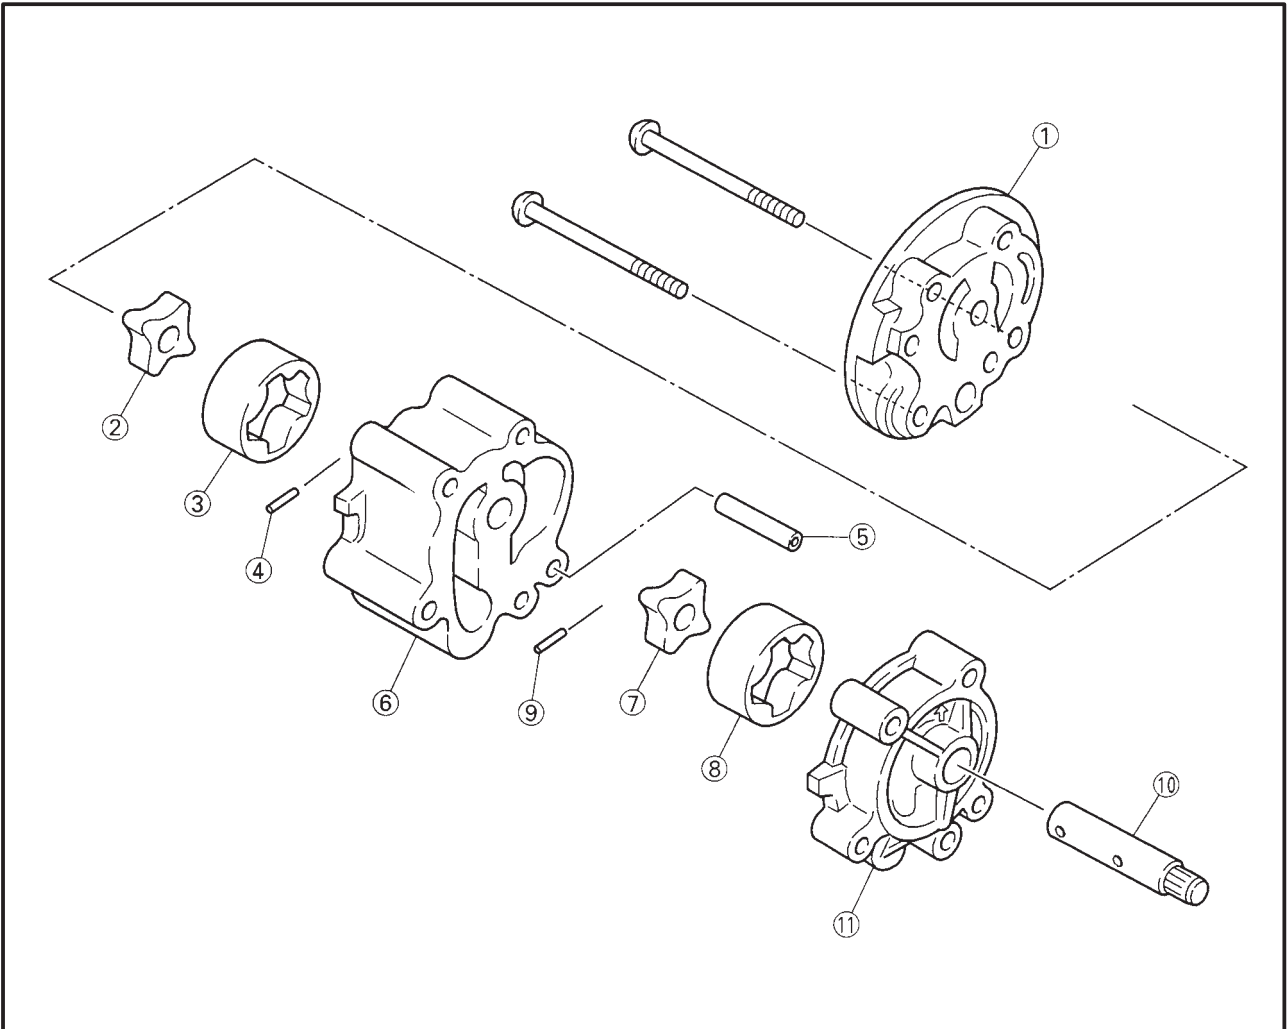

Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the oil pump</b>		Disassembly the parts in the order listed.
①	Oil pump housing	1	Refer to "ASSEMBLING THE OIL PUMP".
②	Inner rotor	1	
③	Outer rotor	1	
④	Pin	1	
⑤	Dowel pin	1	
⑥	Oil pump housing	1	
⑦	Inner rotor	1	
⑧	Outer rotor	1	
⑨	Pin	1	
⑩	Oil pump shaft	1	
⑪	Oil pump cover	1	
			For assembly, reverse the disassembly procedure.



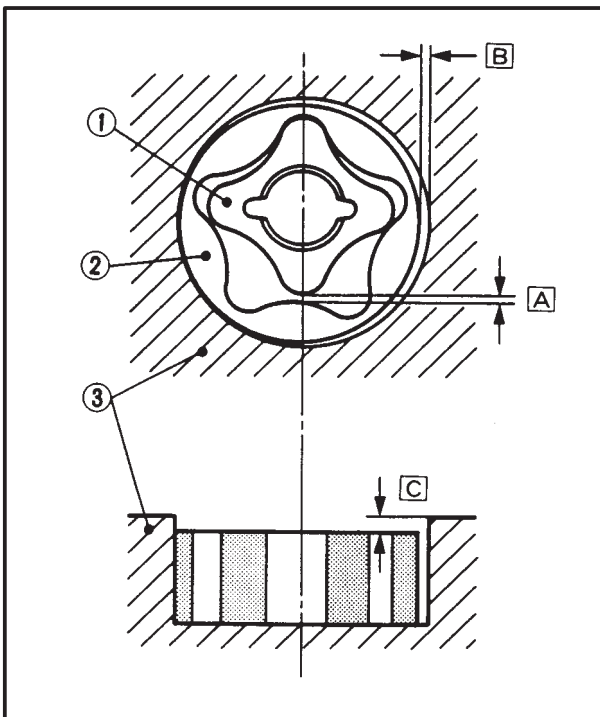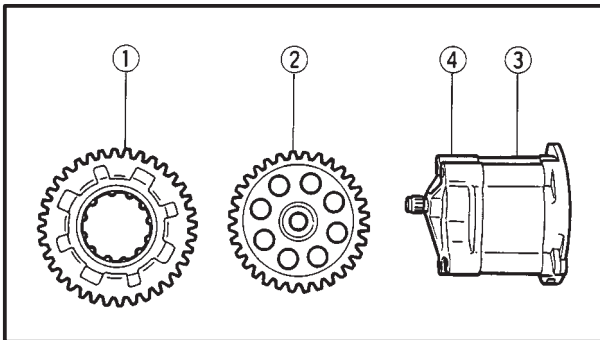

EAS00364

### CHECKING THE OIL PUMP

#### 1. Check:

- ⊙ Oil pump drive gear ①
  - ⊙ Oil pump driven gear ②
  - ⊙ Oil pump housing ③
  - ⊙ Oil pump housing cover ④
- Cracks/damage/wear → Replace the defective part(-s).

#### 2. Measure:

- ⊙ Inner-rotor to outer-rotor tip clearance [A]
  - ⊙ Outer-rotor to oil-pump-housing clearance [B]
  - ⊙ Oil-pump-housing to inner-rotor and outer-rotor clearance [C]
- Outer of specification → Replace the oil pump.

- ① Inner rotor
- ② Outer rotor
- ③ Oil pump housing



#### Inner-rotor to outer-rotor tip clearance

$0.12 \times 0.17$  mm <Limit 0.2 mm>

#### Outer-rotor to oil-pump-housing clearance

$0.03 \times 0.08$  mm <Limit 0.15 mm>

#### Oil-pump-housing to inner-rotor and outer-rotor clearance

$0.03 \times 0.08$  mm <Limit 0.15 mm>

#### 3. Check:

- ⊙ Oil pump operation
- Unsmooth → Repeat steps (1) and (2) or replace the defective part(-s).



EAS00375


## ASSEMBLING THE OIL PUMP

### 1. Lubricate:

- Inner rotor
- Outer rotor
- Oil pump shaft  
(with the recommended lubricant)



**Recommended lubricant**  
**Engine oil**

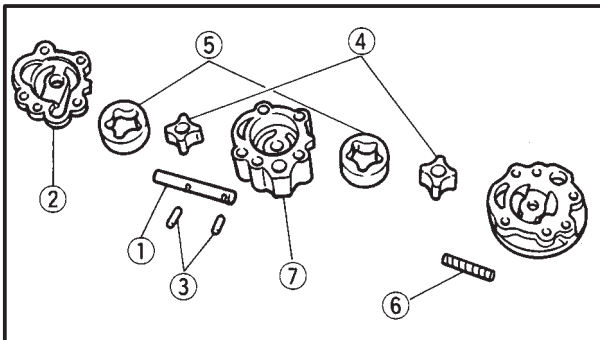

### 2. Install:

- Oil pump shaft ①  
(to the oil pump cover ②)
- Pin ③
- Inner rotor ④
- Outer rotor ⑤
- Pin ⑥
- Oil pump housing ⑦
- Screw



**Oil pump housing screw**  
**10 Nm (1.0 mⓀg)**

### NOTE:

When installing the inner rotor, align the pin ③ in the oil pump shaft with the groove on the inner rotor ④.

### 3. Check:

- Oil pump operation
- Refer to "CHECKING THE OIL PUMP".

EAS00376


## INSTALLING THE OIL PUMP

### 1. Install:

- Oil pump ①



**Oil pump bolt**  
**10 Nm (1.0 mⓀg)**

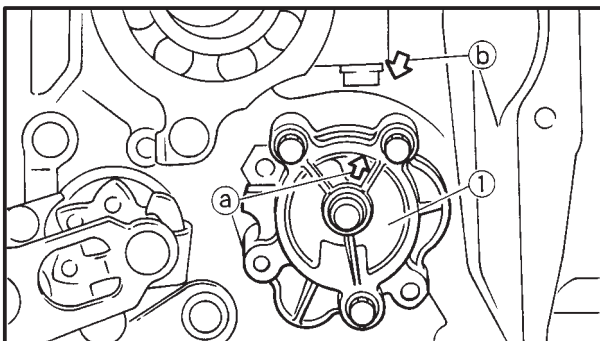

### CAUTION:

After tightening the bolts, make sure that the oil pump turns smoothly.


### NOTE:

Align the arrow ① on the oil pump with the arrow ② on the crankcase.




EAS00327

## SHIFT SHAFT

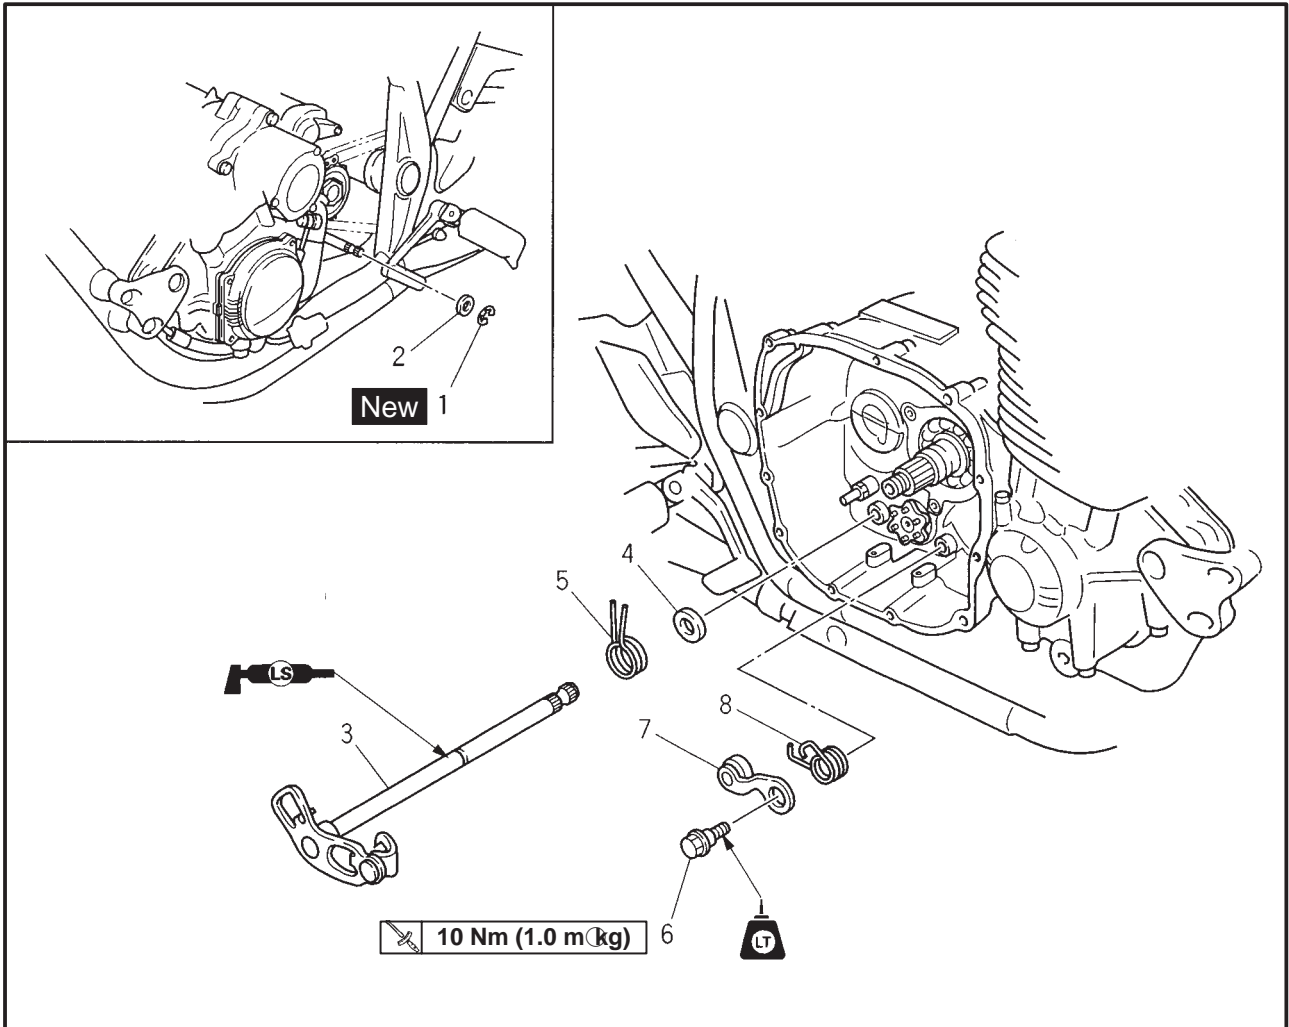

Order	Job/Part	Q'ty	Remarks
	<b>Removing the shift shaft and stopper lever</b>		Remove the parts in the order listed.
	Oil pump		Refer to "OIL PUMP".
	Drive sprocket cover		Refer to "ENGINE".
1	Circlip	1	Refer to "INSTALLING THE SHIFT SHAFT".  For installation, reverse the removal procedure.
2	Washer	1	
3	Shift shaft	1	
4	Washer	1	
5	Shift lever spring	1	
6	Bolt	1	
7	Stopper lever	1	
8	Stopper lever spring	1	

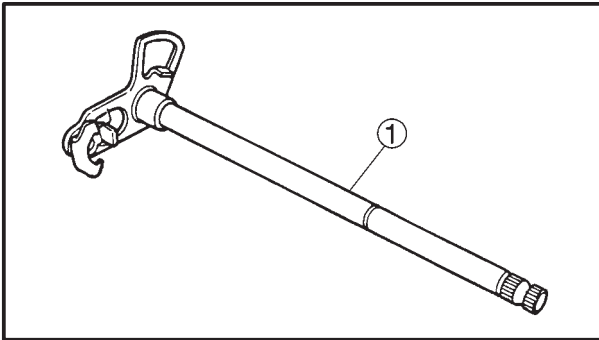


EAS00328

## CHECKING THE SHIFT SHAFT

1. Check:

- ⊙ shift shaft ①  
Bends/damage/wear → Replace.
- ⊙ shift lever spring  
Damage/wear → Replace.

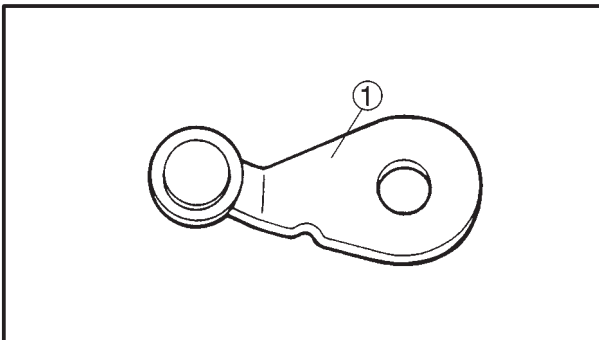


EAS00330

## CHECKING THE STOPPER LEVER

1. Check:

- ⊙ stopper lever ①  
Bends/damage → Replace.
- ⊙ Roller turns roughly → Replace the stopper lever.

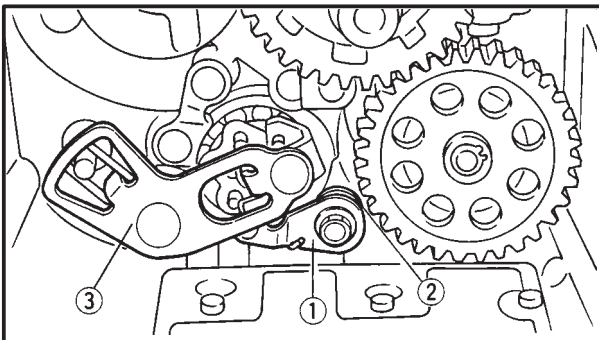

EAS00331


## INSTALLING THE SHIFT SHAFT

1. Install:

- ⊙ stopper lever ①
- ⊙ stopper lever spring ②
- ⊙ shift shaft lever ③

### NOTE:

- ⊙ Hook the ends of the stopper lever spring onto the stopper lever and the crankcase boss.
- ⊙ Mesh the stopper lever with the shift drum segment assembly.

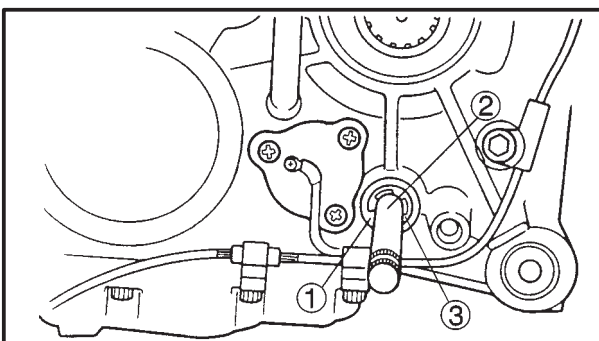


2. Install:

- ⊙ washer ①
- ⊙ shift shaft ②
- ⊙ circlip ③

## SHIFT SHAFT

ENG

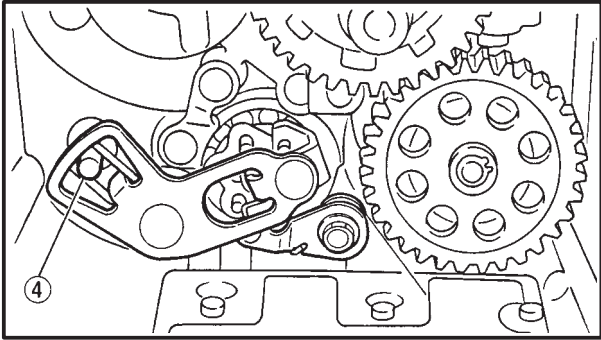


**NOTE:** \_\_\_\_\_

- ① Lubricate the oil seal lips with lithium soap base grease.
- ② Hook the end of the shift lever spring onto the shift lever spring stopper ④.

# TIMING PLATE AND PICKUP COIL




## TIMING PLATE AND PICKUP COIL

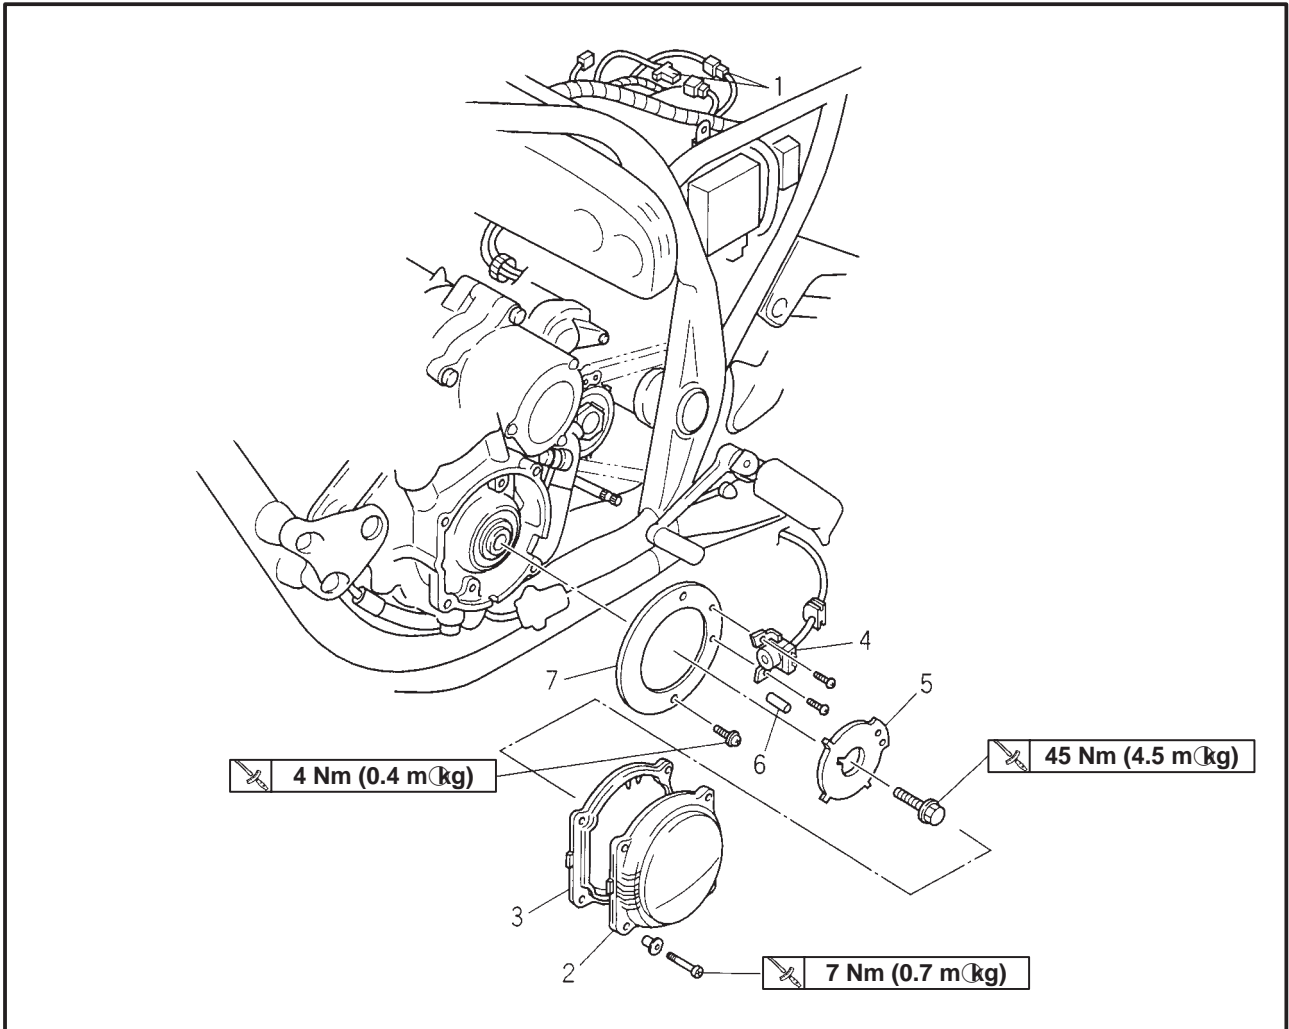


Order	Job/Part	Q'ty	Remarks
	<b>Removing the timing plate and pickup coil</b>		Remove the parts in the order listed.
	Seat, side cover, fuel tank		
1	Pickup coil read	1	
2	Timing plate cover	1	
3	Gasket	1	
4	Pickup coil	1	
5	Timing plate	1	
6	Dowel pin	1	
7	Pickup base	1	
			For installation, reverse the removal procedure.



OIL PAN

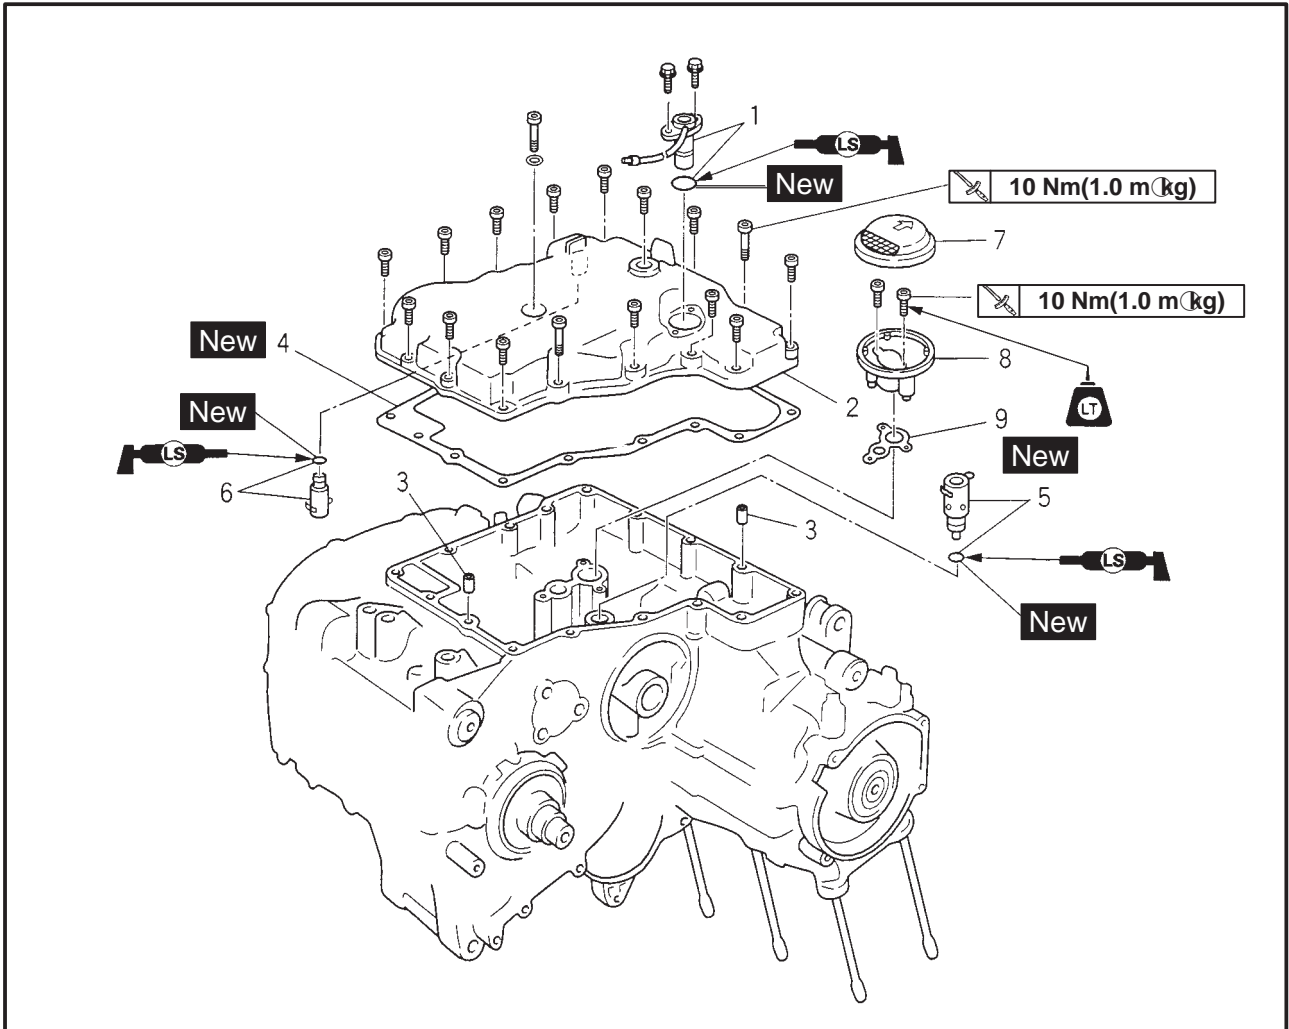

Order	Job/Part	Q'ty	Remarks
	<b>Removing the oil pan</b>		
	Engine		Remove the parts in the order listed. Refer to "ENGINE".
1	Oil level switch/O-ring	1/1	Refer to "REMOVING/INSTALLING THE OIL PAN".
2	Oil pan	1	
3	Dowel pin	2	
4	Gasket	1	
5	Relief valve/O-ring	1/1	Refer to "INSTALLING THE OIL STRAINER".
6	Relief valve/O-ring	1/1	
7	Oil strainer	1	
8	Oil strainer housing	1	
9	Gasket	1	
			For installation, reverse the removal procedure.

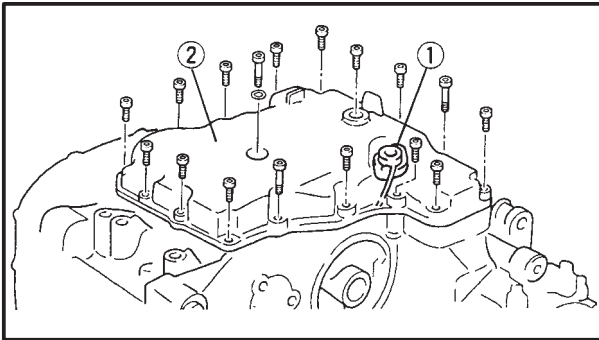

EAS00362


**REMOVING THE OIL PAN**

1. Remove:

- Oil level switch ①
- Oil pan ②
- Gasket
- Dowel pins

**NOTE:**

Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.

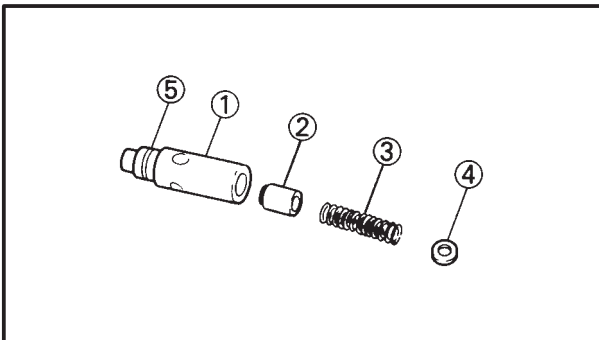


EAS00365

**CHECKING THE RELIEF VALVE**

1. Check:

- Relief valve body ①
  - Relief valve ②
  - Spring ③
  - Cover ④
- Damage/wear → Replace the defective part(-s).
- Circlip ⑤

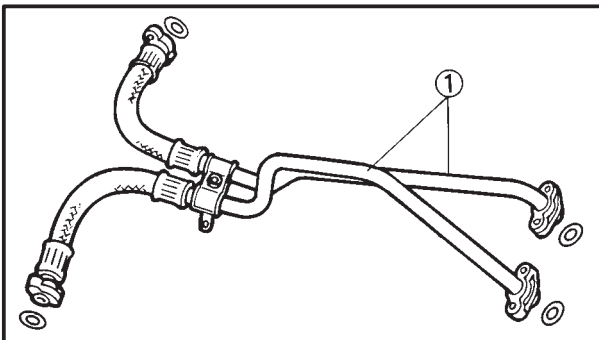


EAS00367

**CHECKING THE OIL DELIVERY PIPES**

The following procedure applies to all of the oil delivery pipes.

1. Check:

- Oil delivery pipe ①
- Damage → Replace.
- Obstruction → Wash and blow out with compressed air.

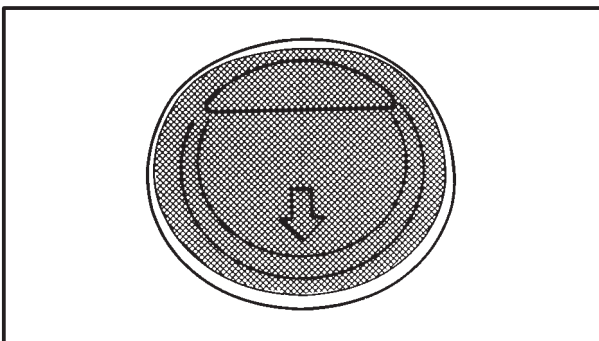




EAS00368

**CHECKING THE OIL STRAINER**

1. Check:

- Oil strainer
- Damage → Replace.
- Contaminants → Clean with engine oil.



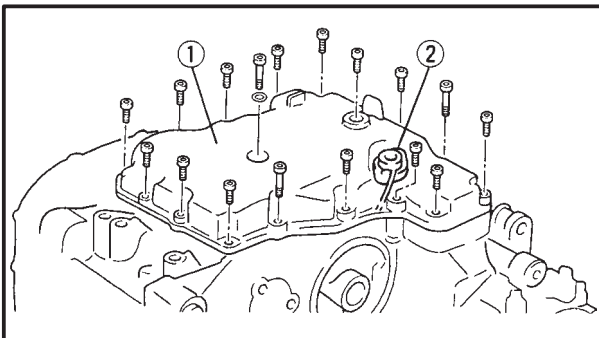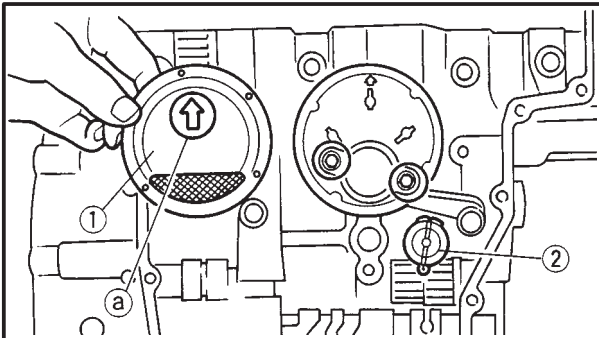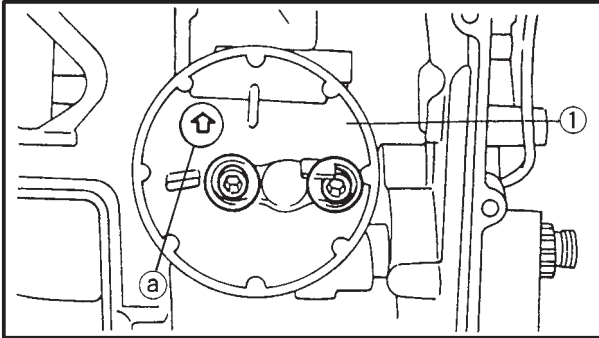

EAS00378

**INSTALLING THE OIL STRAINER**

1. Install:

- ⊙ Oil strainer housing ①



**Oil strainer housing bolt**  
**10 Nm (1.0 mⓀg)**  
**LOCTITE®**

**NOTE:** \_\_\_\_\_

The arrow ② on the oil strainer housing must point towards the front of the engine.

2. Install:

- ⊙ Oil strainer cover ①
- ⊙ Relief valve ②

**NOTE:** \_\_\_\_\_

The arrow ② on the oil strainer cover must point towards the front of the engine.

EAS00380

**INSTALLING THE OIL PAN**

1. Install:

- ⊙ Dowel pins
- ⊙ Gasket (New)
- ⊙ Oil pan ①
- ⊙ Oil level switch ②
- ⊙ Engine oil drain bolt

**⚠ WARNING** \_\_\_\_\_

**Always use new copper washers.**

**NOTE:** \_\_\_\_\_

⊙ Tighten the oil pan bolts in stages and in a crisscross pattern.


⊙ Lubricate the oil level switch's O-ring with engine oil.



**Oil pan bolt**  
**10 Nm (1.0 mⓀg)**  
**Oil level switch bolt**  
**10 Nm (1.0 mⓀg)**




CRANKCASE

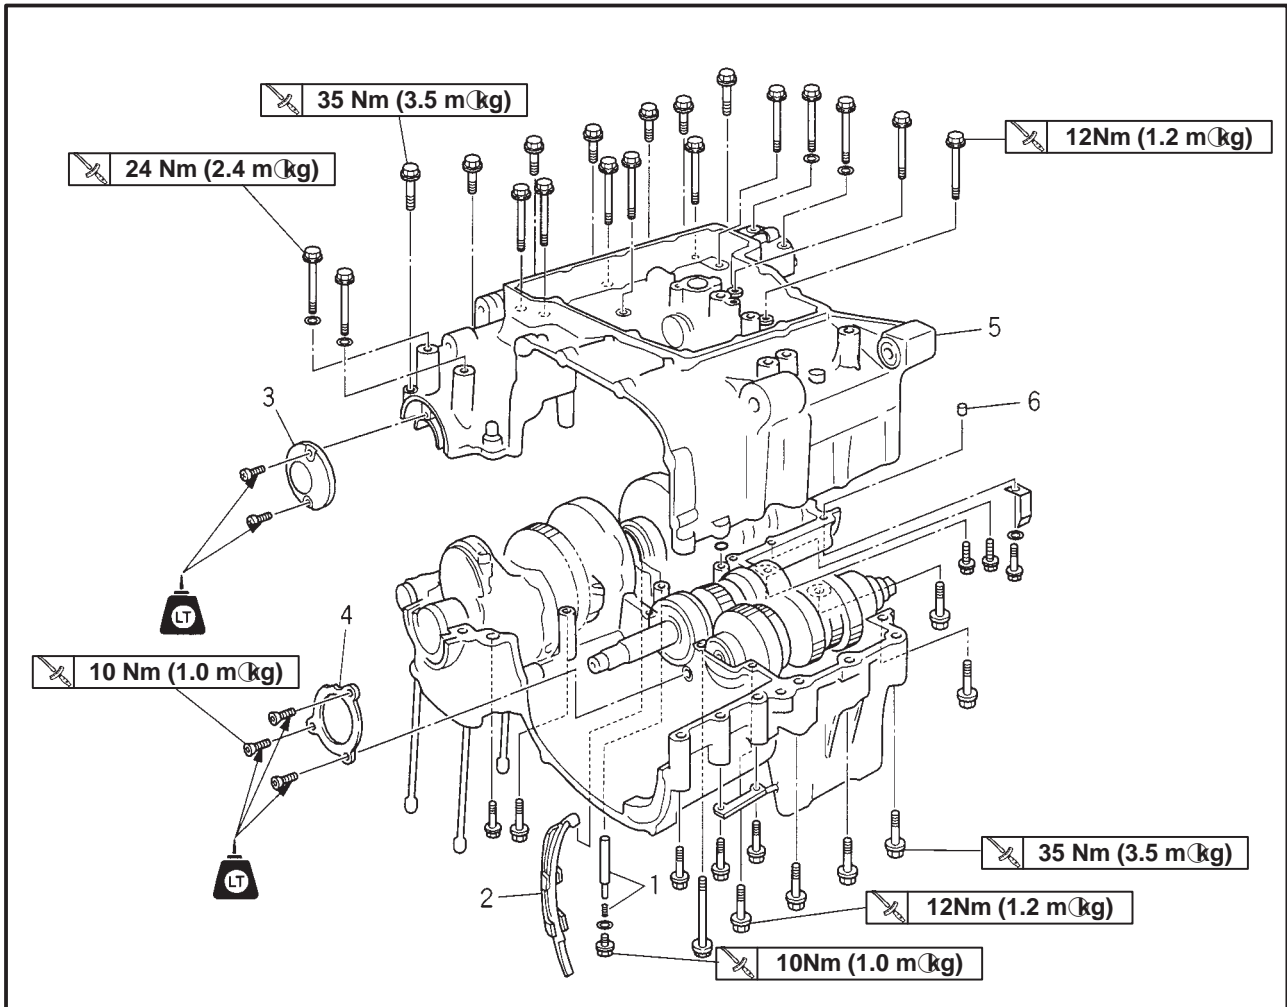

Order	Job/Part	Q'ty	Remarks
	<b>Removing the oil pan</b>		Remove the parts in the order listed.
	Engine		Refer to "ENGINE".
	Camshafts		Refer to "CAMSHAFTS".
	Cylinder head		Refer to "CYLINDER HEAD".
	Cylinder, piston		Refer to "CYLINDERS AND PISTONS".
	Clutch		Refer to "CLUTCH".
	Oil pump		Refer to "OIL PUMP".
	Shift shaft		Refer to "SHIFT SHAFT".
	Timing plate, pickup coil		Refer to "TIMING PLATE AND PICKUP COIL".
	Oil strainer		Refer to "OIL PAN".
1	Spring/rod	1/1	
2	Chain guide	1	
3	Cover	1	

# CRANKCASE

ENG

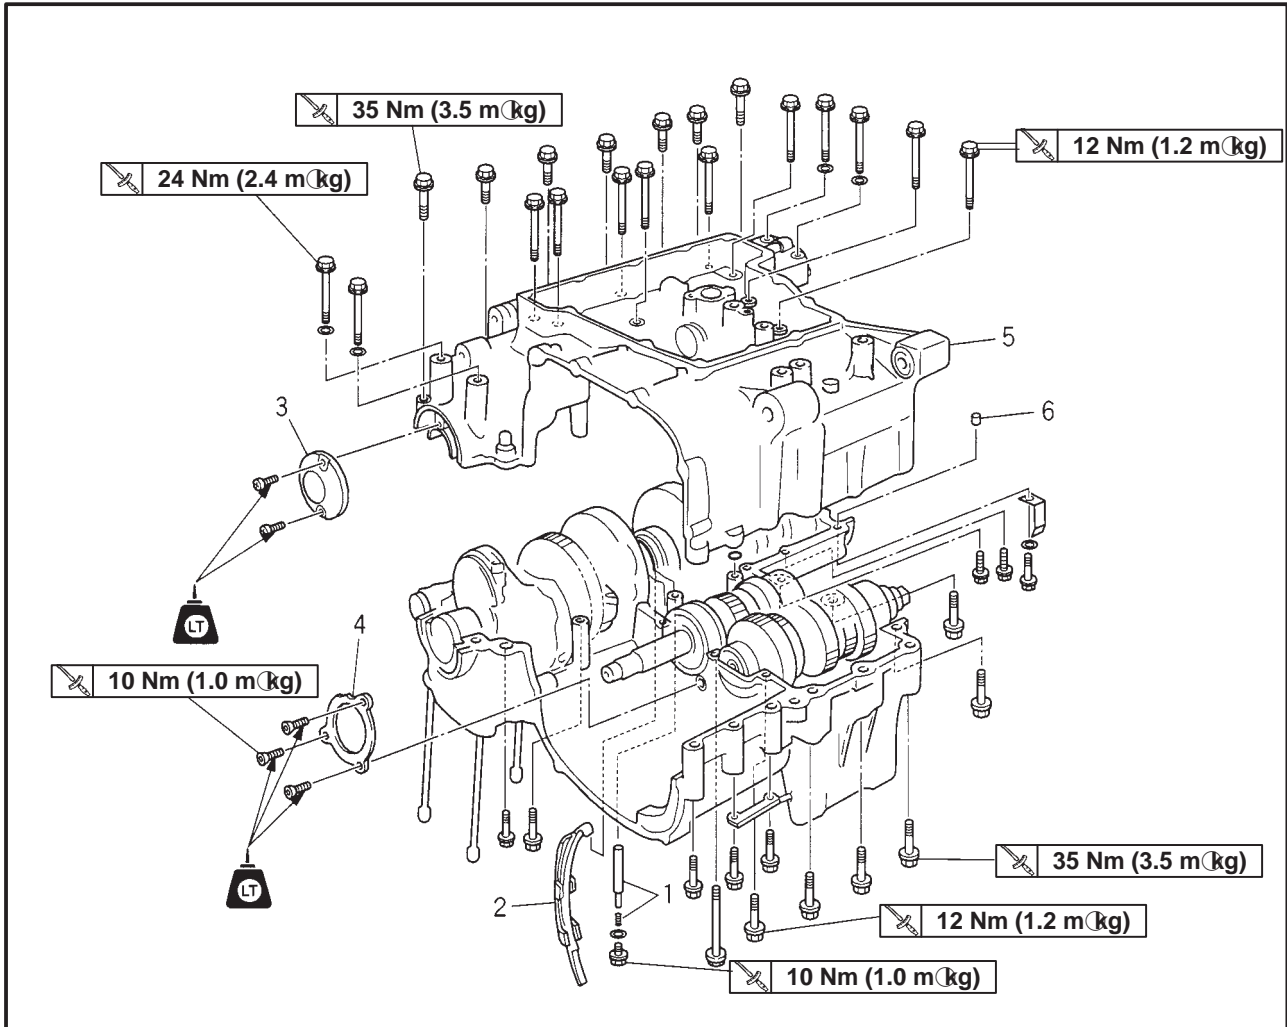

Order	Job/Part	Q'ty	Remarks
4	Bearing cover	1	
5	Crankcase (lower)	1	Refer to "DISASSEMBLING/ASSEMBLING THE CRANKCASE".
6	Dowel pin	2	For installation, reverse the removal procedure.



EAS00384

## DISASSEMBLING THE CRANKCASE

1. Remove:

- crankcase bolts

### NOTE:

- Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.
- Loosen the bolts in decreasing numerical order (refer to the numbers in the illustration).
- The numbers embossed on the crankcase indicate the crankcase tightening sequence.

2. Place the engine upside down.

3. Remove:

- lower crankcase

**A** Upper crankcase

☆ : M10 bolts

× : M8 bolts

△ : M6 bolts

### CAUTION:

**Tap on one side of the crankcase with a soft-face hammer. Tap only on reinforced portions of the crankcase, not on the crankcase mating surfaces. Work slowly and carefully and make sure that the crankcase halves separate evenly.**

4. Remove:

- dowel pins
- O-ring

**B** Lower crankcase

☆ : M10 bolts

× : M8 bolts


△ : M6 bolts

5. Remove:

- crankshaft journal lower bearing (from the lower crankcase)

### NOTE:

Identify the position of each crankshaft journal lower bearing so that it can be reinstalled in its original place.

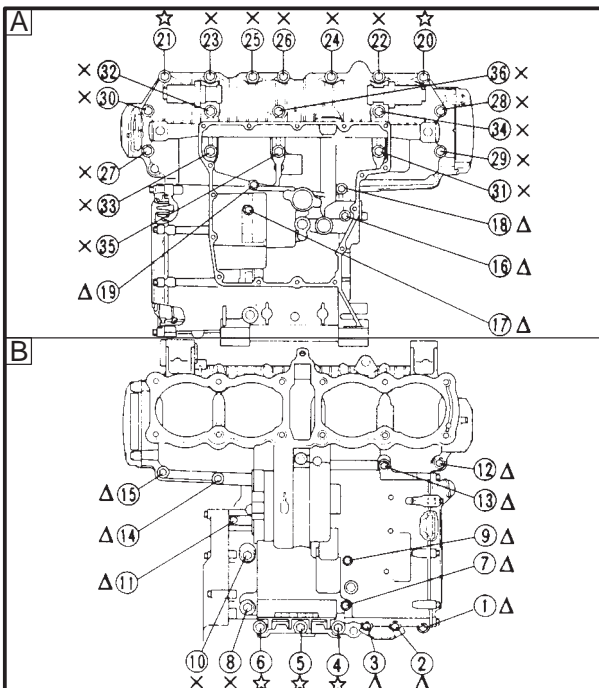



EAS00399

**CHECKING THE CRANKCASE**

1. Thoroughly wash the crankcase halves in a mild solvent.
2. Thoroughly clean all the gasket surfaces and crankcase mating surfaces.
3. Check:
  - crankcase  
Cracks/damage → Replace.
  - oil delivery passages  
Obstruction → Blow out with compressed air.

EAS00412

**ASSEMBLING THE CRANKCASE**

1. Lubricate:
  - crankshaft journal bearings  
(with the recommended lubricant)



**Recommended lubricant  
Engine oil**


2. Apply:
  - sealant  
(onto the crankcase mating surfaces)



**Yamaha bond No. 1215  
90890-85505**

**NOTE:**

Do not allow any sealant to come into contact with the oil gallery or crankshaft journal bearings. Do not apply sealant to within 2 ~ 3 mm of the crankshaft journal bearings.

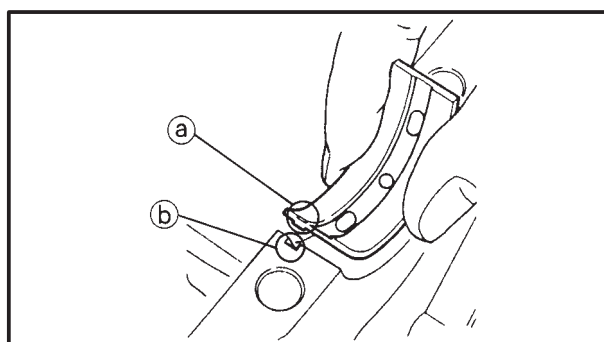





3. Install:
  - dowel pin
4. Install:
  - crankshaft journal lower bearings  
(into the lower crankcase)

**NOTE:**

- Align the projections (a) on the crankshaft journal lower bearings with the notches (b) in the crankcase.
- Install each crankshaft journal lower bearing in its original place.

# CRANKCASE

ENG

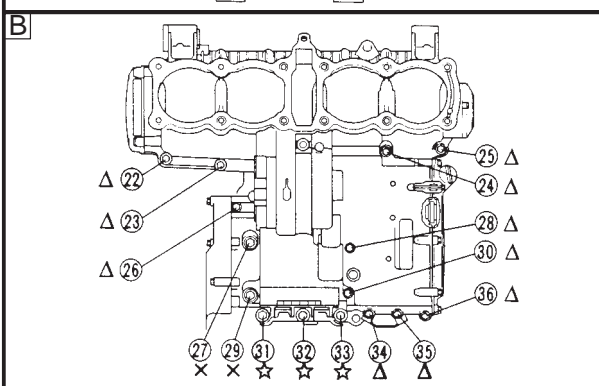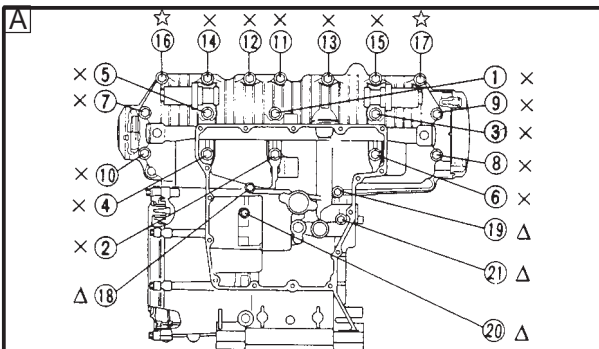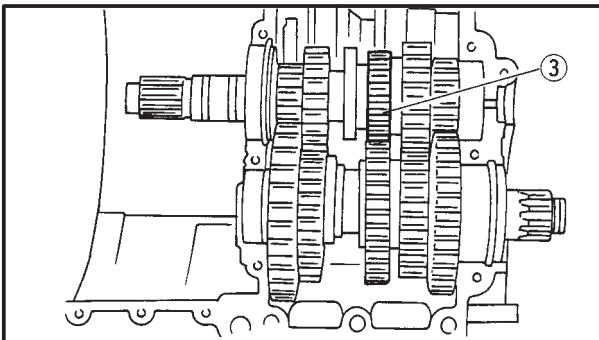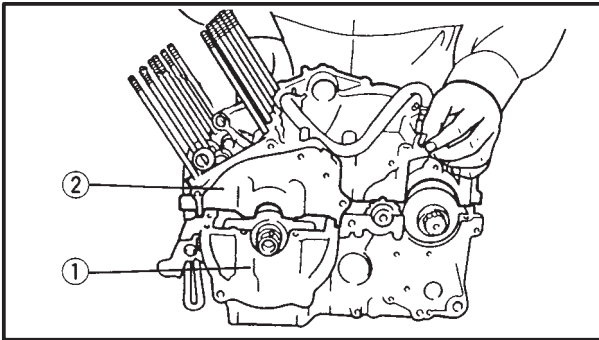

5. Set the shift drum assembly and transmission gears in the neutral position.

6. Install:

- Lower crankcase (1)
- (onto the upper crankcase (2))

## CAUTION:

Before tightening the crankcase bolts, make sure that the transmission gears shift correctly when the shift drum assembly is turned by hand.

## NOTE:

- Carefully position the shift forks so that they mesh smoothly with the transmission gears.
- Mesh shift fork center with the 2nd pinion gear (3) on the main axle.

7. Install:

- Lower crankcase bolts
- Upper crankcase bolts

## NOTE:

Tighten the bolts in the tightening sequence cast on the crankcase.

**A** Upper crankcase

**B** Lower crankcase



☆ **M10 bolt (16, 17, 31 ~ 33):**  
**35 Nm (3.5 mkg)**

× **M8 bolt (1 ~ 15, 27, 29):**  
**24 Nm (2.4 mkg)**

△ **M6 bolt (18 ~ 26, 28, 30, 34 ~ 36):**  
**12 Nm (1.2 mkg)**

8. Install:

- Clutch cover




**Clutch cover bolt**  
**10 Nm (1.0 mkg)**



EAS00342


## STARTER CLUTCH

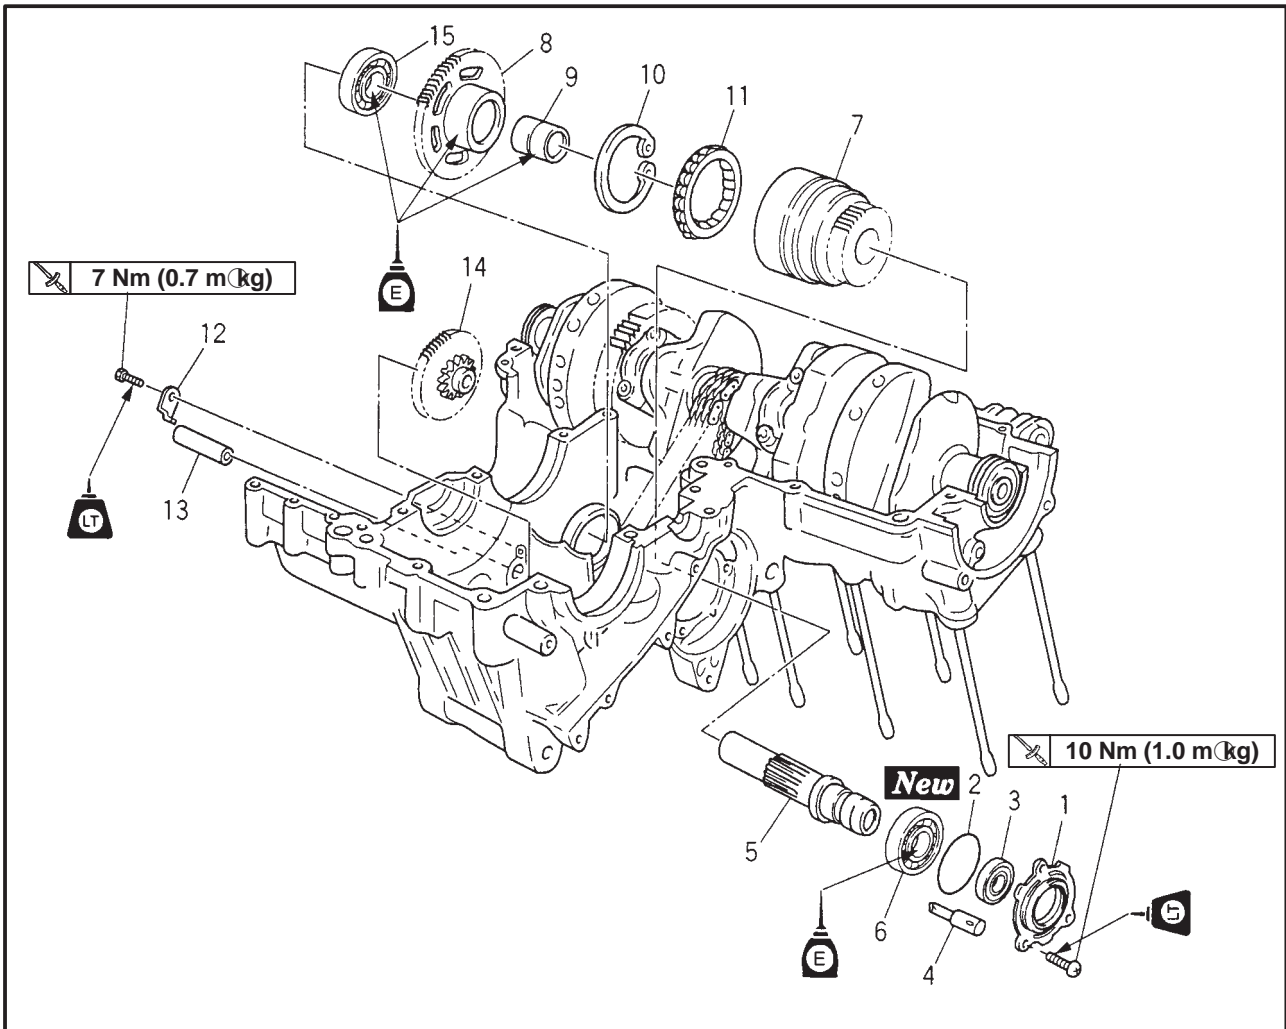

Order	Job/Part	Q'ty	Remarks
	<b>Removing the starter clutch</b>		
	Crankcase		Remove the parts in the order listed. Refer to "CRANKCASE".
1	Bearing housing	1	
2	O-ring	1	
3	Oil seal	1	
4	Nozzle	1	
5	Generator shaft	1	
6	Bearing	1	
7	Starter clutch drive gear	1	Refer to "INSTALLING THE STARTER CLUTCH".
8	Starter clutch gear	1	
9	Collar	1	
10	Circlip	1	Refer to "INSTALLING THE STARTER CLUTCH".
11	Starter clutch roller	1	
12	Stopper plate	1	

# STARTER CLUTCH

ENG

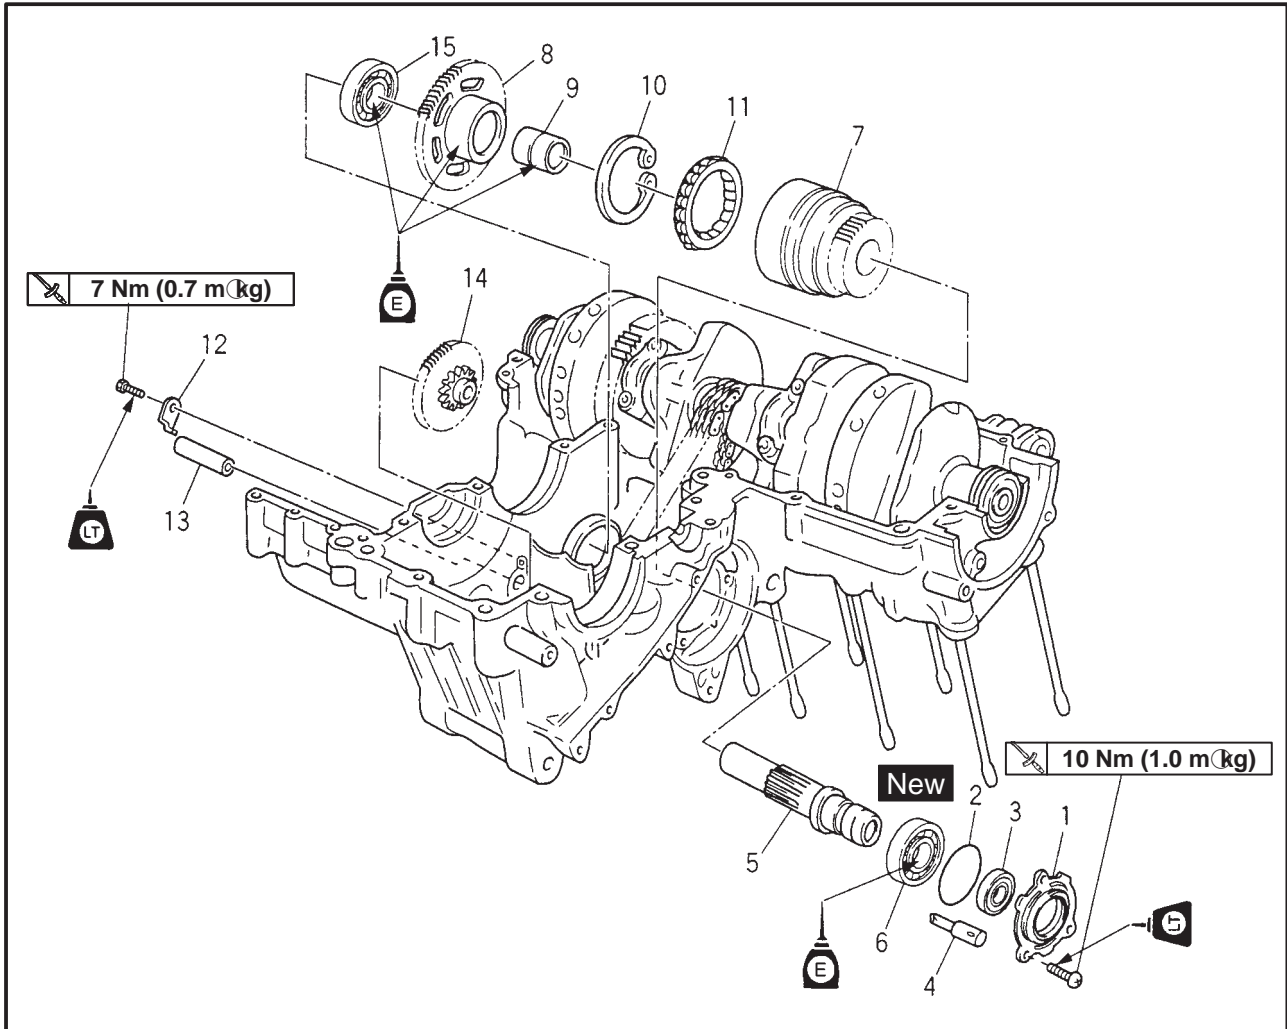

Order	Job/Part	Q'ty	Remarks
13	Idle gear shaft	1	For installation, reverse the removal procedure.
14	Starter clutch idle gear	1	
15	Bearing	1	





EAS00350

## CHECKING THE STARTER CLUTCH

1. Check:

- ⊙ starter clutch rollers ①  
Damage/wear → Replace.

2. Check:

- ⊙ starter clutch idle gear ②
- ⊙ starter clutch drive gear ③
- ⊙ starter clutch gear ④  
Burrs/chips/roughness/wear → Replace the defective part(-s).

3. Check:

- ⊙ starter clutch gear's contacting surfaces  
Damage/pitting/wear → Replace the starter clutch gear.

4. Check:

- ⊙ starter clutch operation






- Install the starter clutch gear ④ onto the starter clutch and hold the starter clutch.
- When turning the starter clutch drive gear clockwise **A**, the starter clutch and the starter clutch drive gear should engage. If the starter clutch drive gear and starter clutch do not engage, the starter clutch is faulty and must be replaced.
- When turning the starter clutch drive gear counterclockwise **B**, it should turn freely. If the starter clutch drive gear does not turn freely, the starter clutch is faulty and must be replaced.



5. Check:

- ⊙ starter clutch shaft  
Bends/damage/wear → Replace.

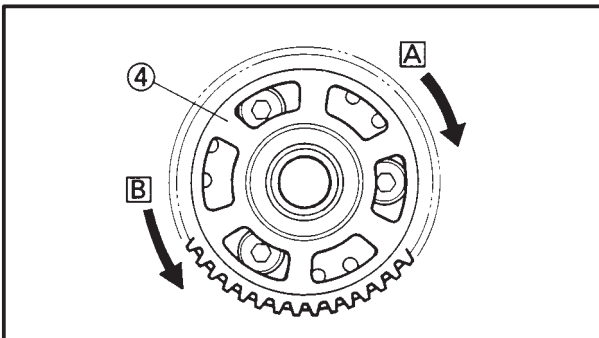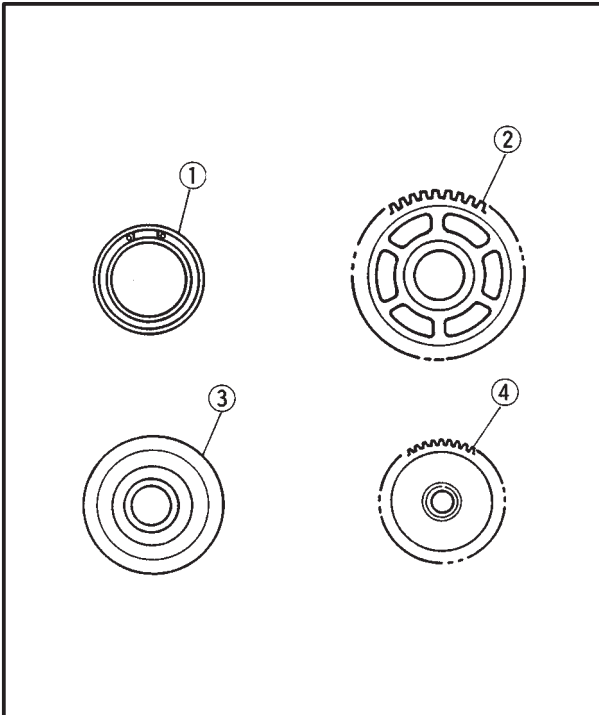

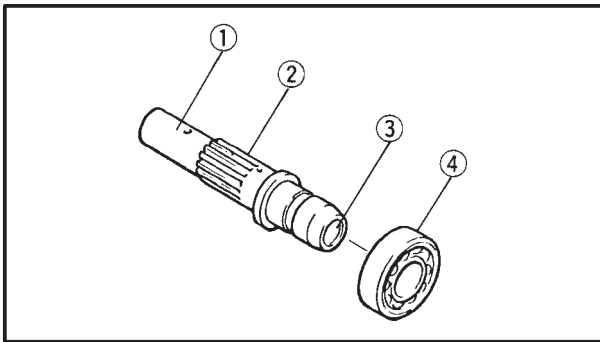


EAS00352

## CHECKING THE GENERATOR SHAFT

1. Check:

- generator shaft ①
- generator shaft splines ②  
Damage/wear → Replace the generator shaft.
- oil passages ③  
Dirt/obstruction → Wash the generator shaft and then blow out the oil passages with compressed air.
- bearing ④  
Rough movement → Replace.

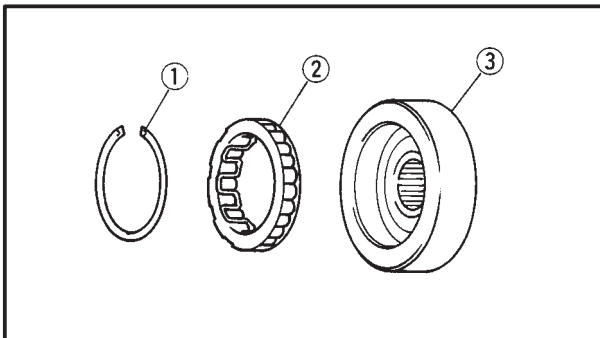


## INSTALLING THE STARTER CLUTCH ROLLER

1. Install:

- circlip ①
- starter clutch roller ②
- starter clutch drive gear ③

### CAUTION:


Be sure to install the starter clutch roller to the starter clutch drive gear so that the circlip is outside.

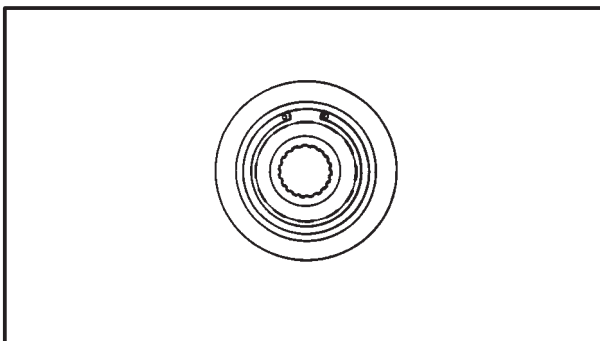



EAS00381


**CRANKSHAFT**  
**CRANKSHAFT**

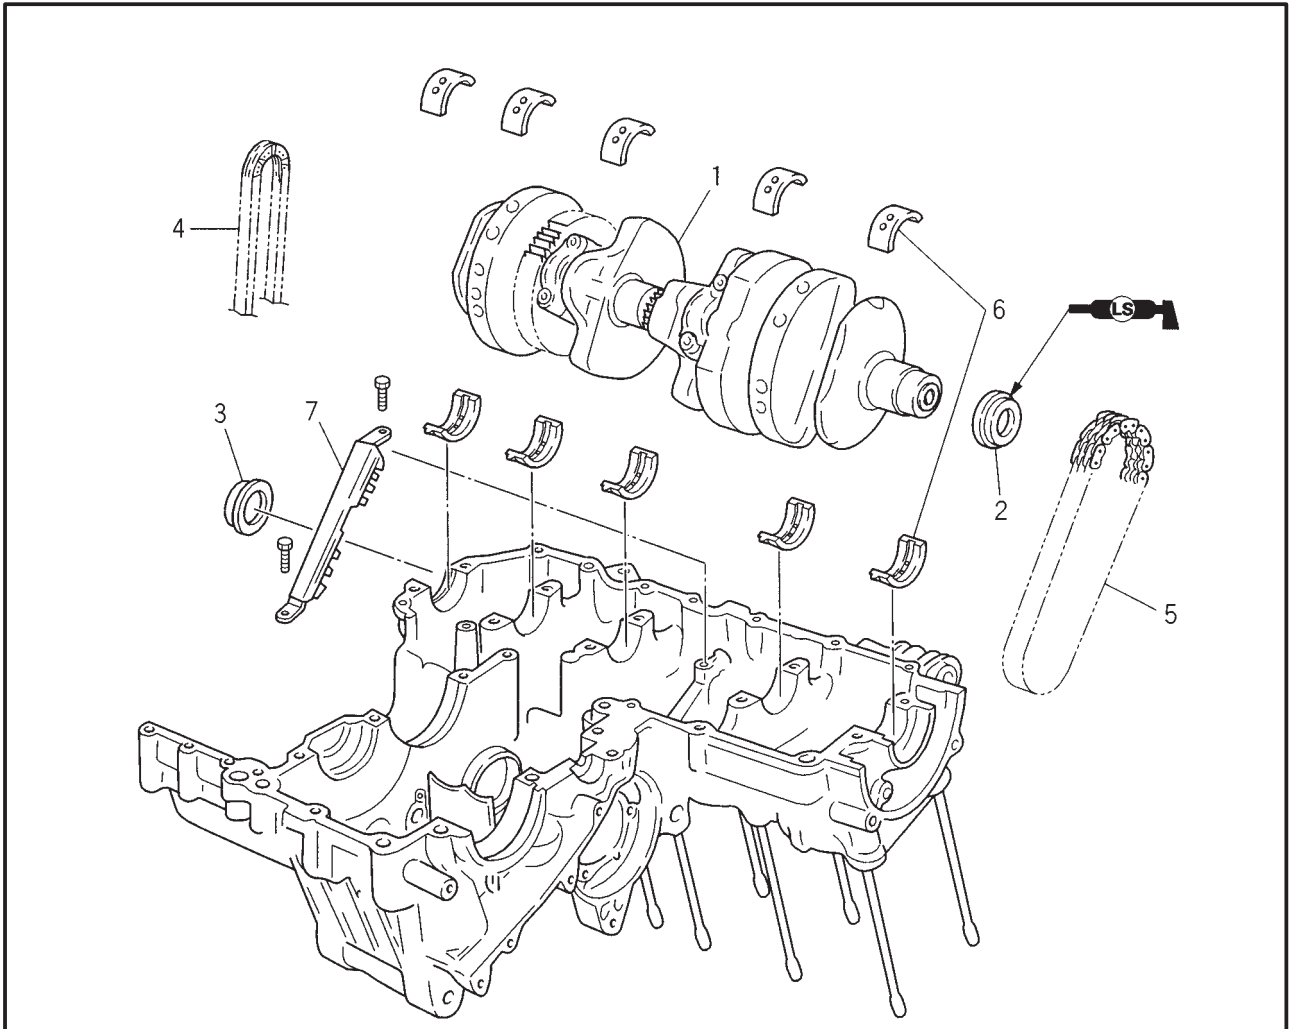




Order	Job/Part	Q'ty	Remarks
	<b>Removing the crankshaft assembly</b>		
	Crankcase		Remove the parts in the order listed.
	Starter clutch		Refer to "CRANKCASE".
			Refer to "STARTER CLUTCH".
1	Crankshaft	1	Refer to "INSTALLING THE CRANKSHAFT ASSEMBLY".
2	Oil seal	1	
3	Cover	1	
4	Timing chain	1	
5	HY-VO chain	1	
6	Crankshaft journal bearings	10	Refer to "REMOVING/INSTALLING THE CRANKSHAFT ASSEMBLY".
7	HY-VO chain guide	1	For installation, reverse the removal procedure.



CONNECTING ROD

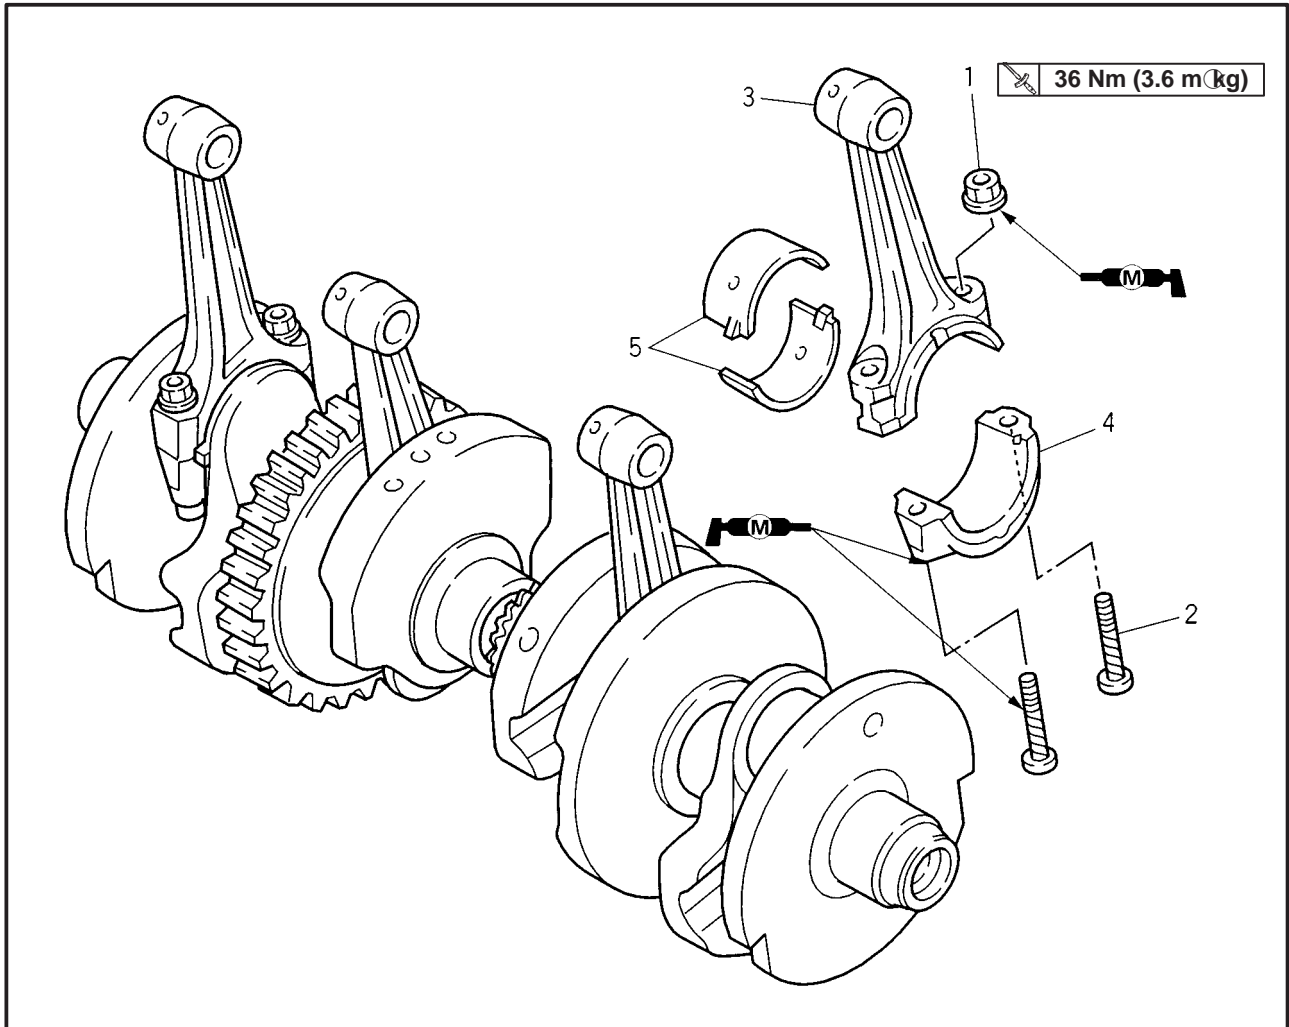

Order	Job/Part	Q'ty	Remarks
	<b>Removing the connecting rod.</b>		
1	Nut	8	Remove the parts in the order listed Refer to "INSTALLING THE CONNECTING RODS."
2	Connecting rod bolt	8	
3	Coonecting rod	4	Refer to "REMOVING/INSTALLING THE CONNECTING RODS."  For installation, reverse the removal procedur.
4	Connecting rod cap	4	
5	Connecting rod bearing	8	

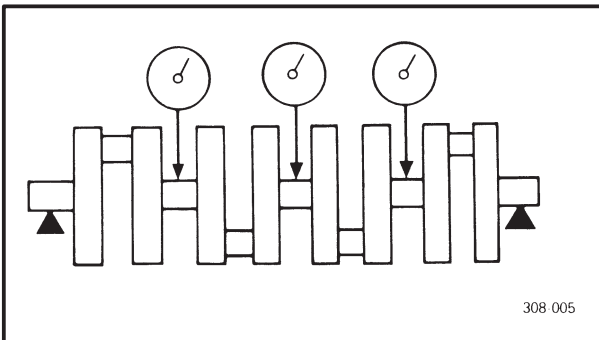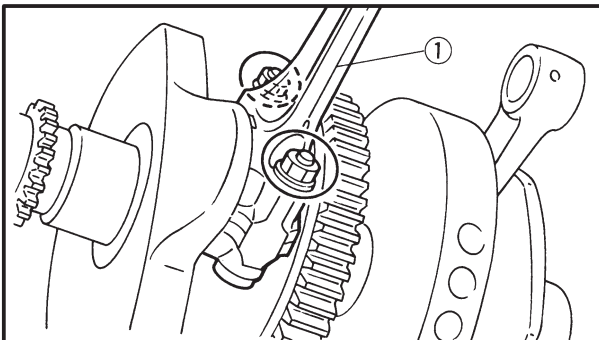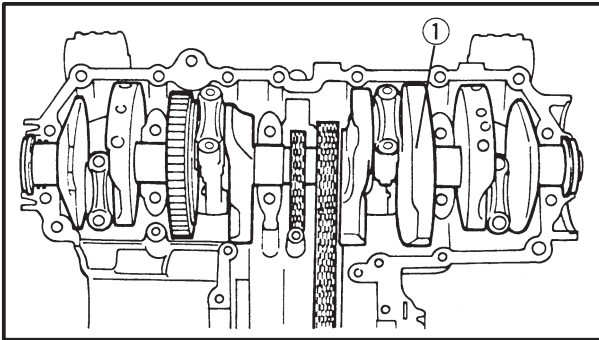

EAS00387

## REMOVING THE CRANKSHAFT ASSEMBLY

1. Remove:

- ① crankshaft assembly ①
- ① crankshaft journal upper bearings (from the upper crankcase)

### NOTE:

Identify the position of each crankshaft journal upper bearing so that it can be reinstalled in its original place.

EAS00391

## REMOVING THE CONNECTING RODS

1. Remove:

- ① connecting rods ①
- ① big end bearings

### NOTE:

Identify the position of each big end bearing so that it can be reinstalled in its original place.

EAS00395

## CHECKING THE CRANKSHAFT AND CONNECTING RODS

1. Measure:

- ① crankshaft runout
- Out of specification → Replace the crankshaft.

**Crankshaft runout**  
**Less than 0.02 mm**

2. Check:

- ① crankshaft journal surfaces
- ① crankshaft pin surfaces
- ① bearing surfaces
- Scratches/wear → Replace the crankshaft.

3. Measure:

- ① crankshaft-journal-to-crankshaft-journal-bearing clearance
- Out of specification → Replace the crankshaft journal bearings.






**Crankshaft-journal to crankshaft-journal-bearing clearance**  
**0.030 × 0.064 mm**

### CAUTION:

Do not interchange the crankshaft journal bearings. To obtain the correct crankshaft-journal-to-crankshaft-journal-bearing clearance and prevent engine damage, the crankshaft journal bearings must be installed in their original positions.

# CRANKSHAFT

ENG

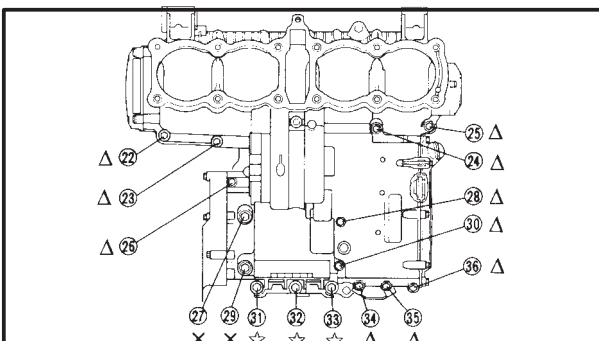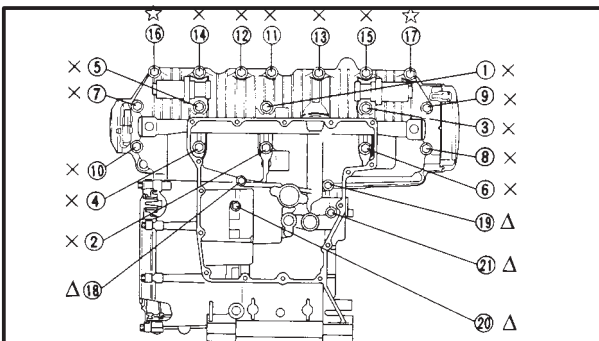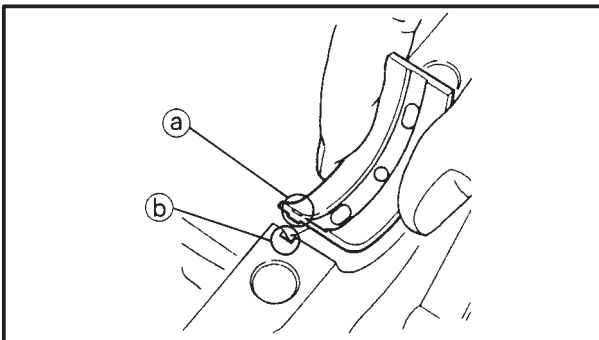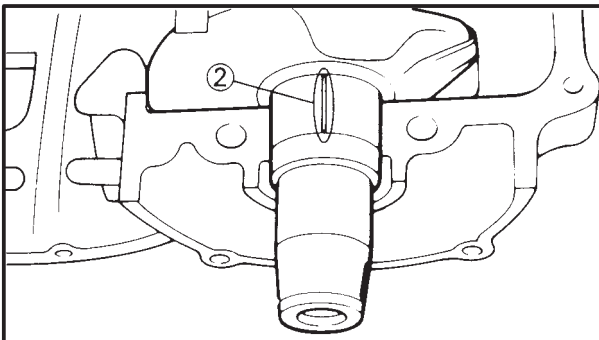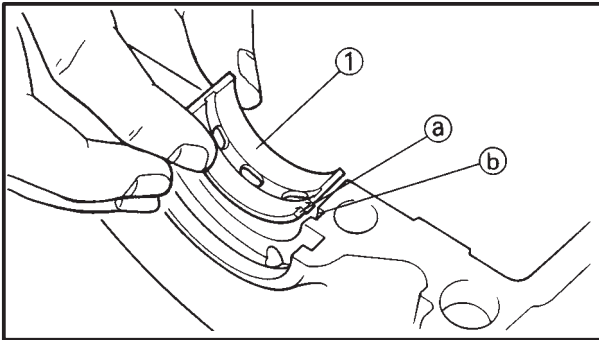

- Clean the crankshaft journal bearings, crankshaft journals, and bearing portions of the crankcase.
- Place the upper crankcase upside down on a bench.
- Install the crankshaft journal upper bearings ① and the crankshaft into the upper crankcase.

**NOTE:** \_\_\_\_\_  
Align the projections ② of the crankshaft journal upper bearings with the notches ③ in the crankcase.

- Put a piece of Plastigauge® ④ on each crankshaft journal.

**NOTE:** \_\_\_\_\_  
Do not put the Plastigauge® over the oil hole in the crankshaft journal.

- Install the crankshaft journal lower bearings into the lower crankcase and assemble the crankcase halves.

**NOTE:** \_\_\_\_\_  
Align the projections ② of the crankshaft journal lower bearings with the notches ③ in the crankcase.

Do not move the crankshaft until the clearance measurement has been completed.

- Tighten the bolts to specification in the tightening sequence cast on the crankcase.



## Crankcase bolt




- ☆ M10 (No.16, 17, 31 ~ 33):  
35 Nm (3.5 mkg)
- × M8 (No.1 ~ 15, 27, 29):  
24 Nm (2.4 mkg)
- △ M6 (No.18 ~ 26, 28, 30,  
34 ~ 36):  
12 Nm (1.2 mkg)

△ Upper crankcase

× Lower crankcase

**NOTE:** \_\_\_\_\_  
Lubricate the crankcase bolt threads (M8) with engine oil.



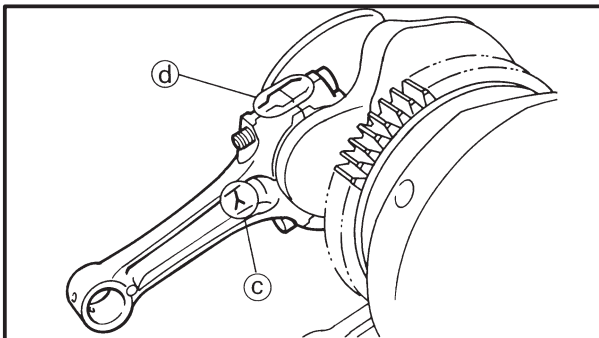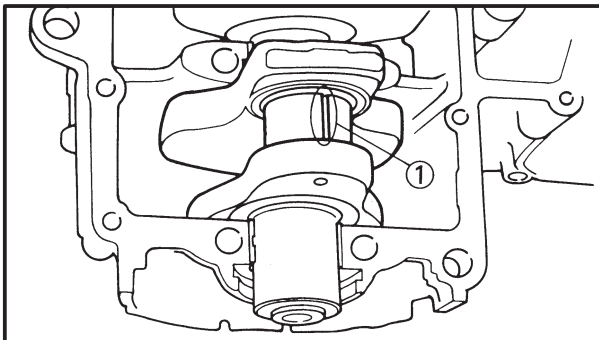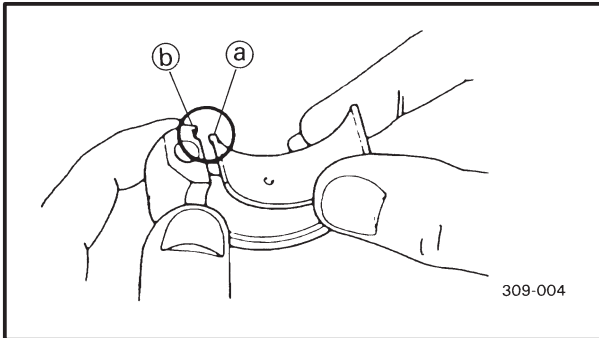

### CAUTION:

Do not interchange the big end bearings and connecting rods. To obtain the correct crankshaft-pin-to-big-end-bearing clearance and prevent engine damage, the big end bearings must be installed in their original positions.

- a. Clean the big end bearings, crankshaft pins, and bearing portions of the connecting rods.
- b. Install the big end upper bearing into the connecting rod and the big end lower bearing into the connecting rod cap.

### NOTE:

Align the projections (a) on the big end bearings with the notches (b) in the connecting rod and connecting rod cap.

- c. Put a piece of Plastigauge® (1) on the crankshaft pin.
- d. Assemble the connecting rod halves.

### NOTE:

- Ⓛ Do not move the connecting rod or crankshaft until the clearance measurement has been completed.
- Ⓛ Apply molybdenum disulfide grease onto the bolts, threads, and nuts seats.
- Ⓛ Make sure that the "Y" mark (c) on the connecting rod faces towards the left side of the crankshaft.
- Ⓛ Make sure that the characters (d) on both the connecting rod and connecting rod cap are aligned.




- e. Tighten the connecting rod nuts.

### CAUTION:

- Ⓛ When tightening the connecting rod nuts, be sure to use an F-type torque wrench.
- Ⓛ Without pausing, tighten the connecting rod nuts to the specified torque. Apply continuous torque between 2.0 and 3.6 mⓁkg. Once you reach 2.0 mⓁkg, DO NOT STOP TIGHTENING until the specified torque is reached. If the tightening is interrupted between 2.0 and 3.6 mⓁkg, loosen the connecting rod nut to less than 2.0 mⓁkg and start again.



# CRANKSHAFT

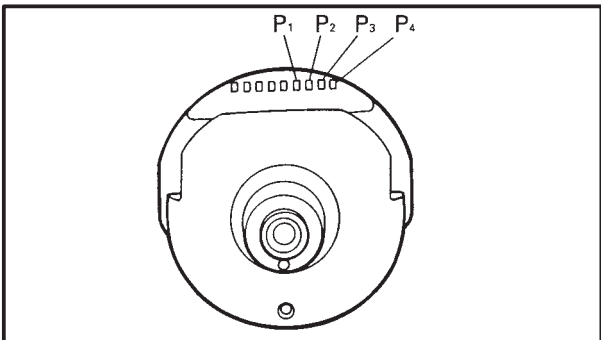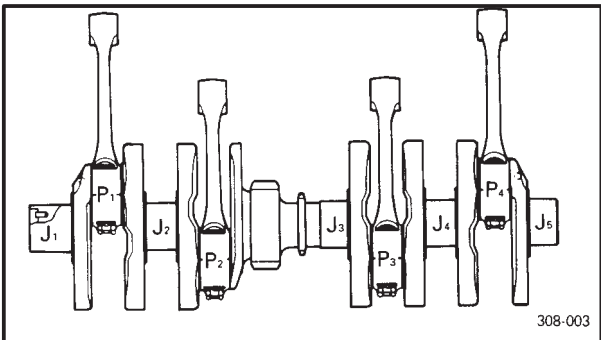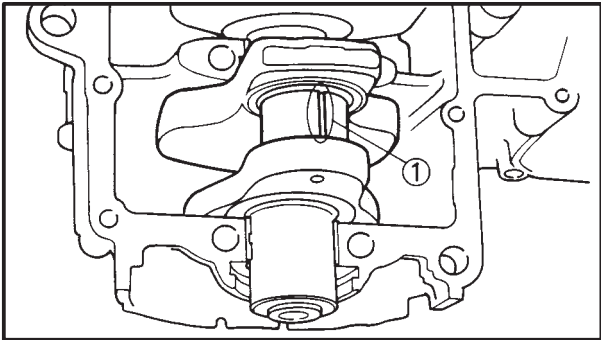

Refer to "INSTALLING THE CONNECTING RODS".

	<b>Connecting rod nut</b> <b>36 Nm (3.6 mkg)</b>
--	---

- f. Remove the connecting rod and big end bearings.  
Refer to "REMOVING THE CONNECTING RODS".
- g. Measure the compressed Plastigauge® width ① on the crankshaft pin.  
If the clearance is out of specification, select replacement big end bearings.

6. Select:  
big end bearings (P<sub>1</sub> ~ P<sub>4</sub>)


**NOTE:**

- The numbers stamped into the crankshaft web and the numbers on the connecting rods are used to determine the replacement big end bearing sizes.
- P<sub>1</sub> ~ "P<sub>4</sub>" refer to the bearings shown in the crankshaft illustration.

For example, if the connecting rod "P<sub>1</sub>" and the crankshaft web "P<sub>1</sub>" numbers are "4" and "1" respectively, then the bearing size for "P<sub>1</sub>" is:

<b>Bearing size for "P<sub>1</sub>":</b> <b>"P<sub>1</sub>" (connecting rod) – "P<sub>1</sub>"</b> <b>(crak-kshaft) = 4 – 1 = 3 (brown)</b>
---

BIG END BEARING COLOR CODE	
1	Blue
2	Black
3	Brown
4	Green

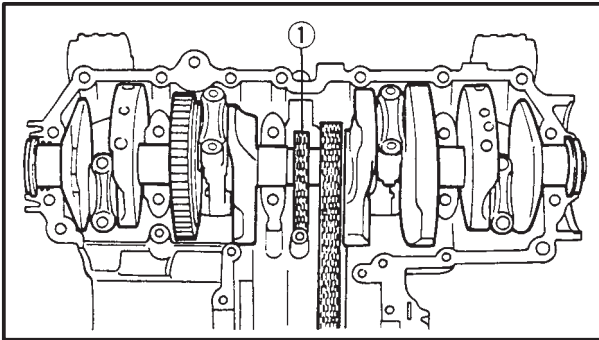

## CHECKING THE TIMING CHAIN

1. Check:
  - ⊙ timing chain ①  
Damage/stiffness → Replace the timing chain and camshaft sprockets as a set.
2. Check
  - ⊙ timing chain guide (intake side)  
Damage/wear → Replace.

EAS00400

## CHECKING THE HY-VO CHAIN

1. Check:
  - ⊙ HY-VO chain ①  
Damage/stiffness → Replace the HY-VO chain and sprockets as a set.
2. Check:
  - ⊙ HY-VO chain guide  
Damage/wear → Replace.

EAS00401

## CHECKING THE BEARINGS AND OIL SEALS

1. Check:
  - ⊙ bearings  
Clean and lubricate the bearings, then rotate the inner race with your finger  
Rough movement → Replace.
2. Check:
  - ⊙ oil seals  
Damage/wear → Replace.

EAS00402

## CHECKING THE CIRCLIPS AND WASHERS

1. Check:
  - ⊙ circlips  
Bends/damage/looseness → Replace.
  - ⊙ washers  
Bends/damage → Replace.

EAS00403




## INSTALLING THE CONNECTING RODS

1. Lubricate:
  - ⊙ bolt threads
  - ⊙ nut seats  
(with the recommended lubricant)



**Recommended lubricant**  
**Molybdenum disulfide grease**

2. Lubricate:
  - ⊙ crankshaft pins
  - ⊙ big end bearings
  - ⊙ connecting rod inner surface  
(with the recommended lubricant)

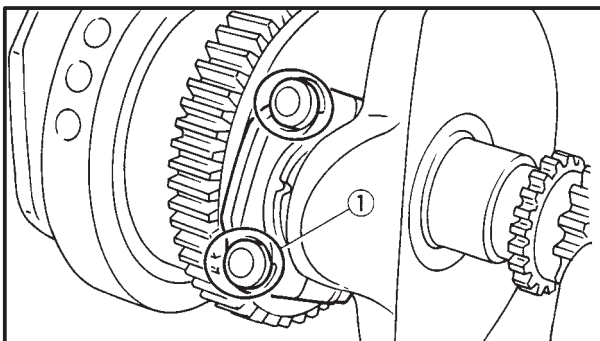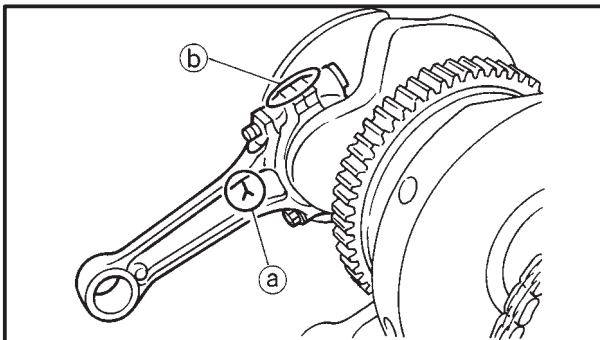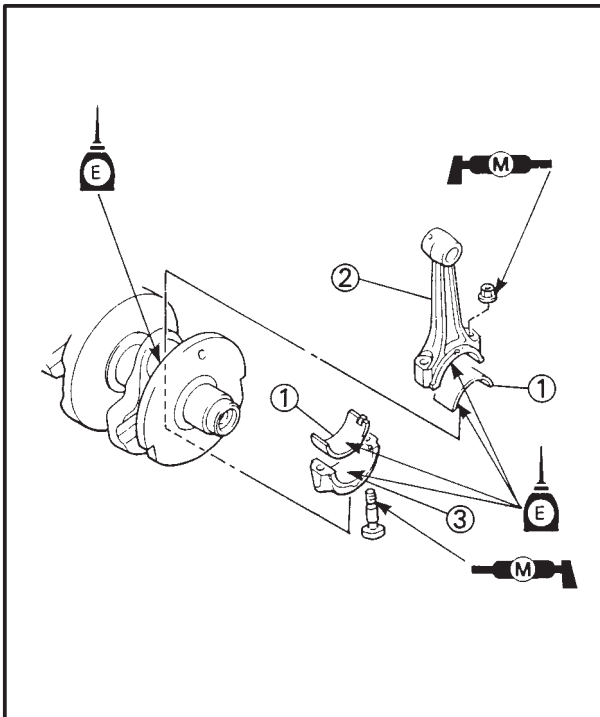

**Recommended lubricant**  
**Engine oil**

3. Install:

- big end bearings ①
- connecting rods ②
- connecting rod caps ③  
(onto the crankshaft pins)

**NOTE:**

- Align the projections on the big end bearings with the notches in the connecting rods and connecting rod caps.
- Be sure to reinstall each big end bearing in its original place.
- Make sure that the "Y" marks (a) on the connecting rods face towards the left side of the crankshaft.
- Make sure that the characters (b) on both the connecting rod and connecting rod cap are aligned.

4. Align:

- bolt heads ①  
(with the connecting rod caps)

5. Tighten:



- connecting rod nuts



**Connecting rod nuts**  
**36 Nm (3.6 mⓀg)**

**CAUTION:**

- When tightening the connecting rod nuts, be sure to use an F-type torque wrench.
- Without pausing, tighten the connecting rod nuts to the specified torque. Apply continuous torque between 2.0 and 3.6 mⓀg. Once you reach 2.0 mⓀg DO NOT STOP TIGHTENING until the specified torque is reached. If the tightening is interrupted between 2.0 and 3.6 mⓀg, loosen the connecting rod nut to less than 2.0 mⓀg and start again.

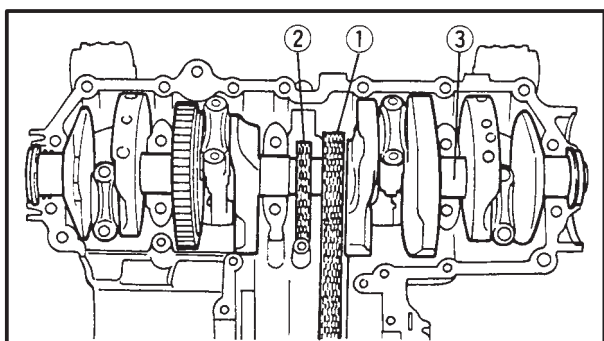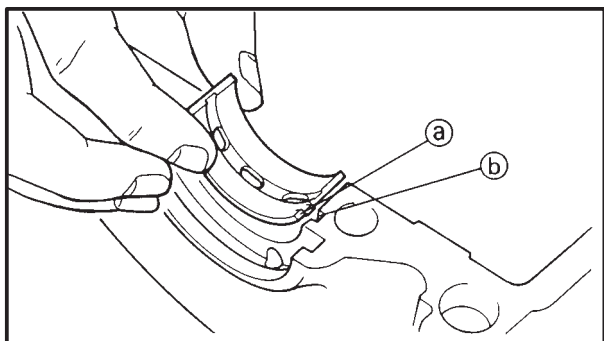

EAS00407

### INSTALLING THE CRANKSHAFT

#### 1. Install:

- crankshaft journal upper bearings  
(into the upper crankcase)

#### NOTE:

- Align the projections (a) on the crankshaft journal upper bearings with the notches (b) in the crankcase.
- Be sure to install each crankshaft journal upper bearing in its original place.

#### 2. Install:


- HY-VO chain (1)
- timing chain (2)  
(onto the crankshaft sprocket)
- crankshaft assembly (3)

#### NOTE:


- Pass the timing chain through the timing chain cavity.
- To prevent the timing chain from falling into the crankcase, fasten it with a wire.

EAS00419


TRANSMISSION

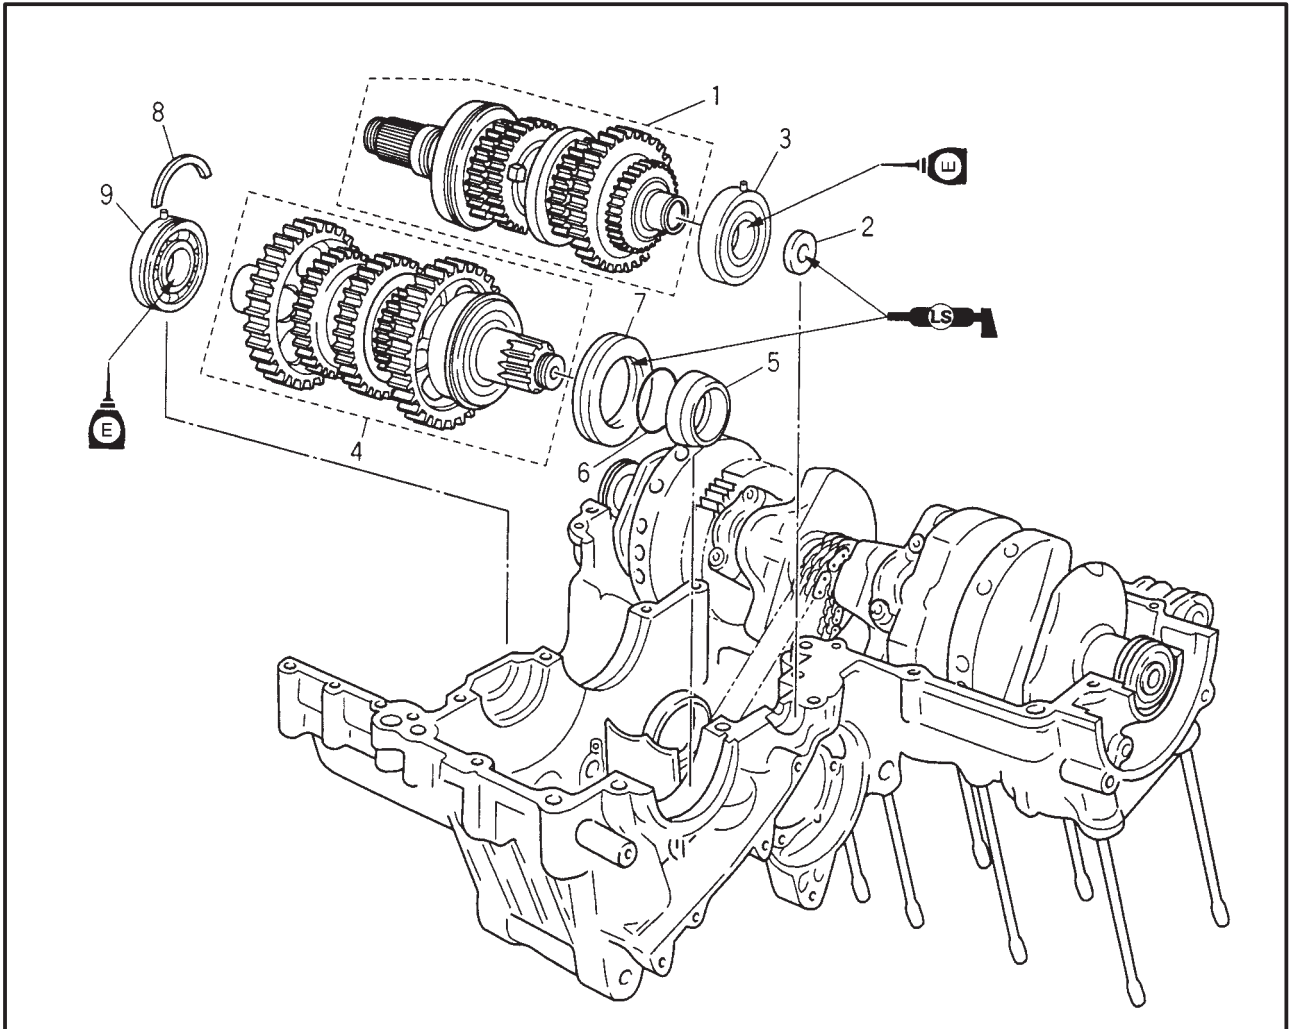

Order	Job/Part	Q'ty	Remarks
	<b>Removing the transmission, shift drum assembly, and shift forks.</b>		Remove the parts in the order listed.
	Crankcase		Refer to "CRANKCASE".
1	Main axle assembly	1	Refer to "INSTALLING THE TRANSMISSION".
2	Oil seal	1	
3	Bearing	1	
4	Drive axle assembly	1	
5	Collar	1	
6	O-ring	1	
7	Oil seal	1	
8	Circlip	1	
9	Bearing	1	
			For installation, reverse the removal procedure.

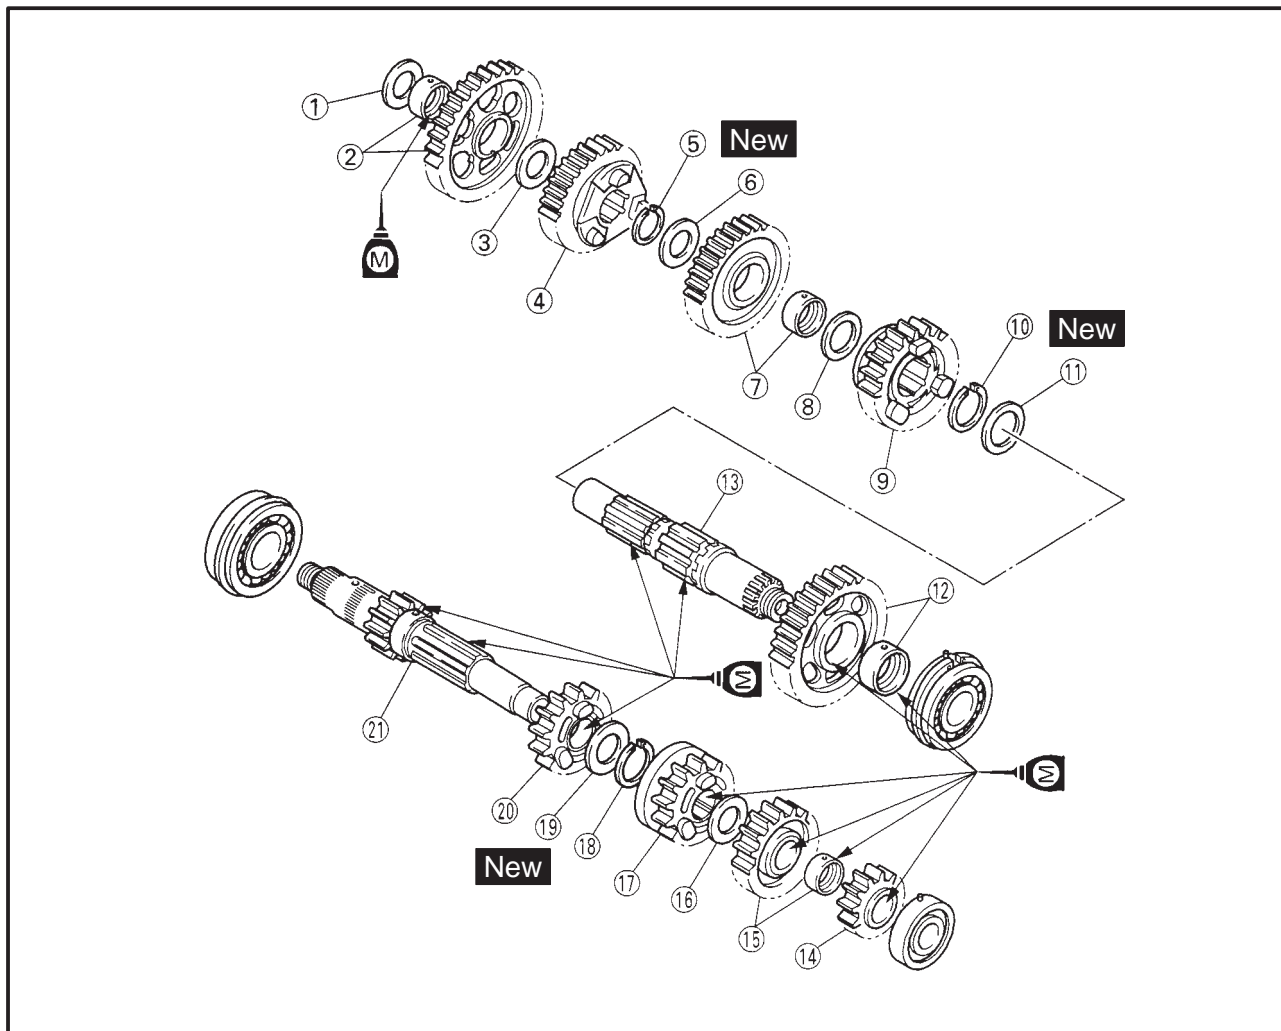


Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the transmission</b>		Disassembly the parts in the order listed.
①	Washer	1	
②	1st wheel gear/Collar	1/1	
③	Washer	1	
④	4th wheel gear	1	
⑤	Circlip	1	
⑥	Washer	1	
⑦	3rd wheel gear/collar	1/1	
⑧	Washer	1	
⑨	5th wheel gear	1	
⑩	Circlip	1	
⑪	Washer	1	
⑫	2nd wheel gear/collar	1/1	
⑬	Drive axle	1	

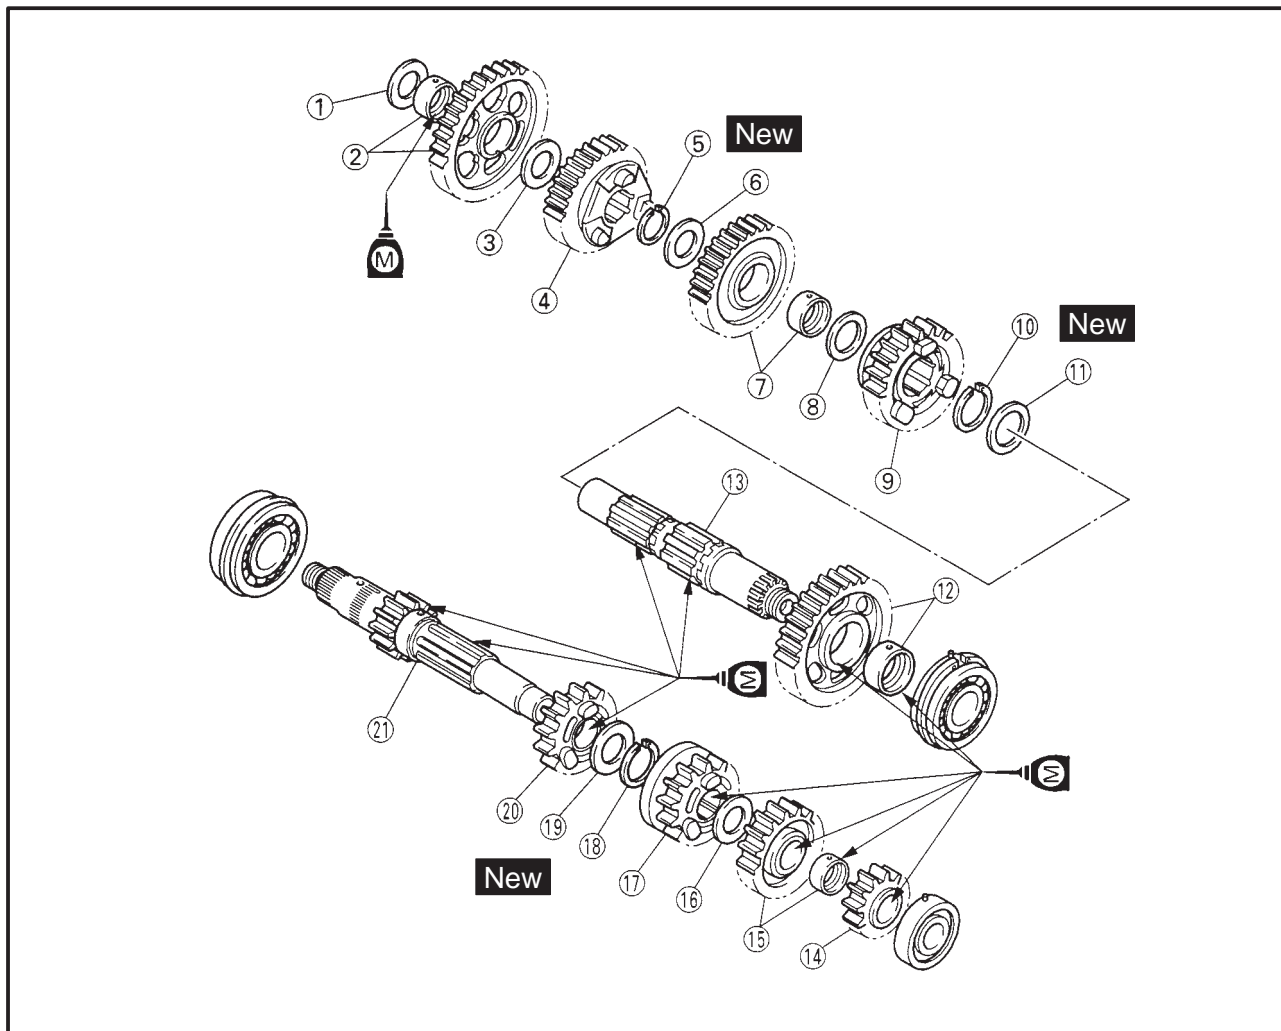

Order	Job/Part	Q'ty	Remarks
⑭	2nd pinion gear	1	For assembly, reverse the disassembly procedure.
⑮	5th pinion gear/collar	1/1	
⑯	Washer	1	
⑰	3rd pinion gear	1	
⑱	Circlip	1	
⑲	Washer	1	
⑳	4th pinion gear	1	
㉑	Main axle (1st pinion gear)	1	




SHIFT CAM AND SHIFT FORK

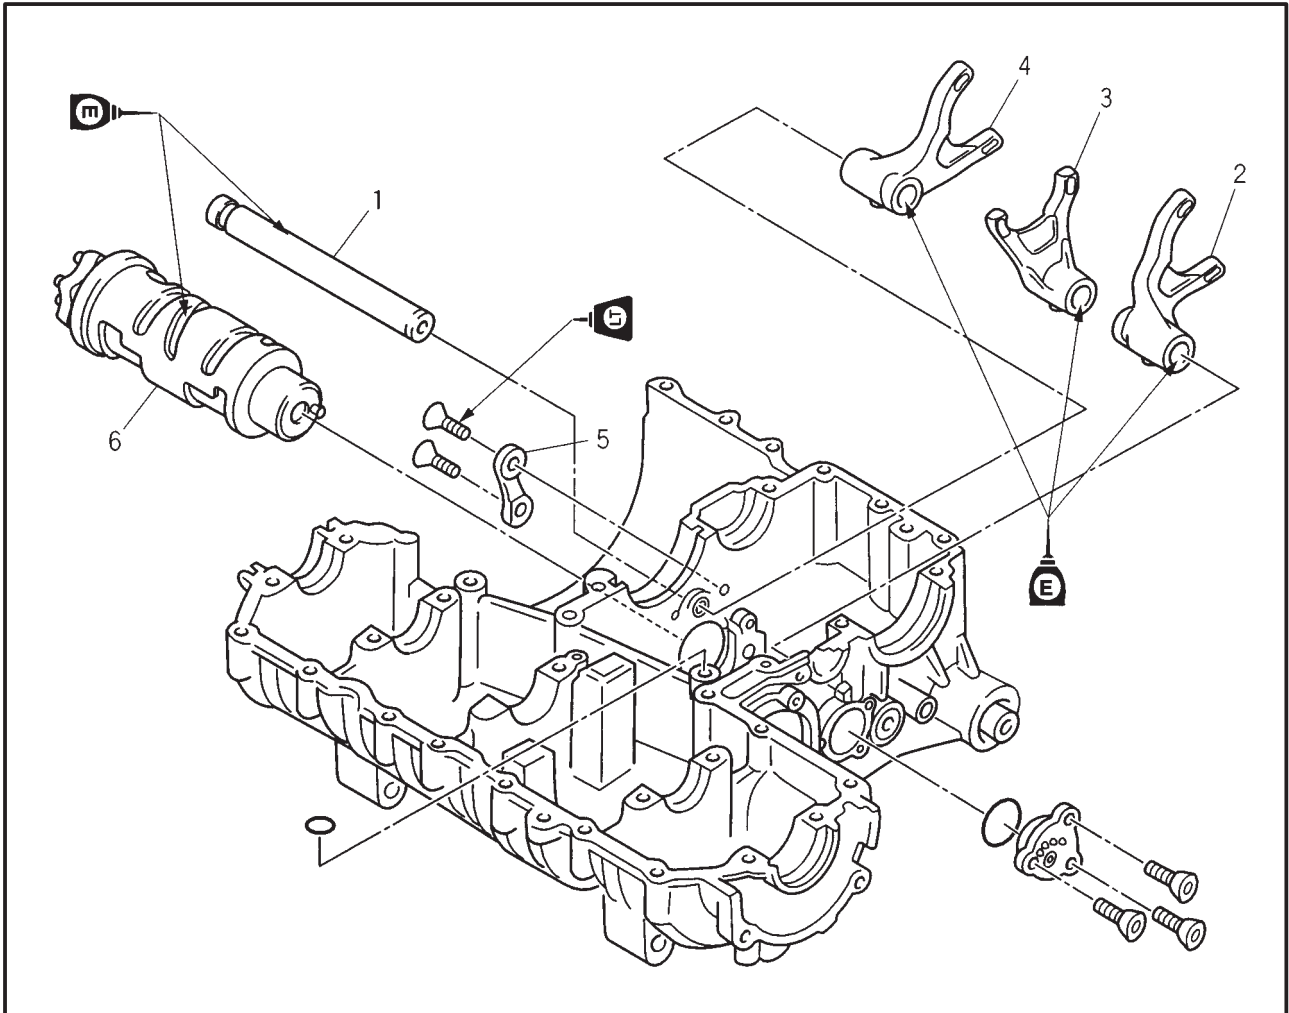

Order	Job/Part	Q'ty	Remarks
	<b>Removing the shift cam and shift fork.</b>		Remove the parts in the order listed. Refer to "CRANKCASE"
	Crankcase		
1	Shif fork quide bar	1	Refer to "INSTALLING THE TRANSMISSION"
2	Shift fork (L)	1	
3	Shift fork (C)	1	
4	Shift fork (R)	1	
5	Stopper plate	1	
6	Shift drum	1	For installation, reverse the removal produre.



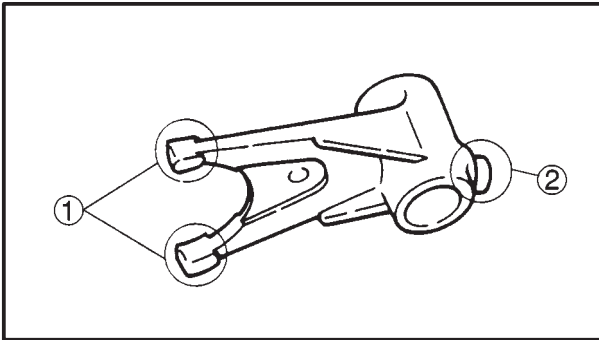

EAS00421

### CHECKING THE SHIFT FORKS

The following procedure applies to all of the shift forks and related components.

1. Check:

○ shift fork cam follower ①

○ shift fork pawl ②

Bends/damage/scoring/wear → Replace the shift fork.

2. Check:


○ shift fork guide bar

Roll the shift fork guide bar on a flat surface.

Bends → Replace.

### ⚠ WARNING

**Do not attempt to straighten a bent shift fork guide bar.**

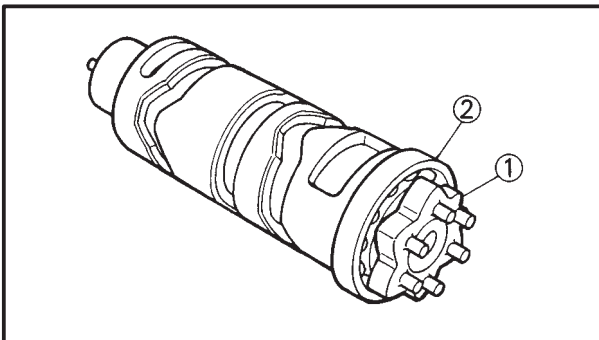

EAS00422

### CHECKING THE SHIFT DRUM ASSEMBLY

1. Check:

○ shift drum grooves


Damage/scratches/wear → Replace the shift drum.

○ shift drum segment ①

Damage/wear → Replace.

○ shift drum bearing ②

Damage/pitting → Replace.

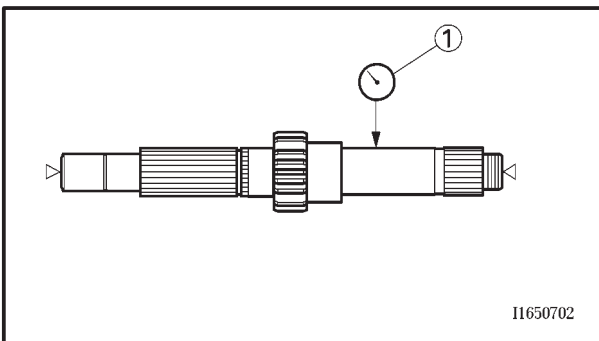

I1650702

EAS00424

### CHECKING THE TRANSMISSION

1. Measure:


○ main axle runout

(with a centering device and dial gauge ①)

Out of specification → Replace the main axle.



**Main axle runout limit**  
**0.06 mm**

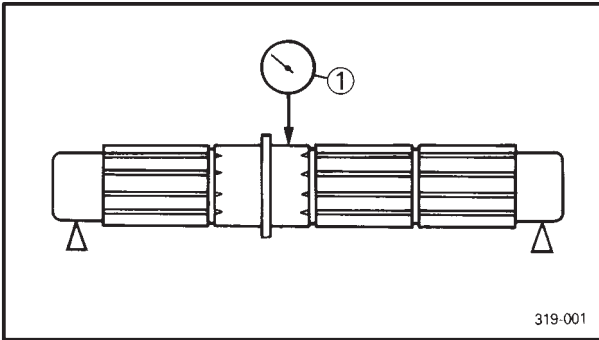

2. Measure:


- ① drive axle runout  
(with a centering device and dial gauge ①)  
Out of specification → Replace the drive axle.



**Drive axle runout limit**  
**0.06 mm**


3. Check:

- ① transmission gears  
Blue discoloration/pitting/wear → Replace the defective gear(-s).
- ① transmission gear dogs  
Cracks/damage/rounded edges → Replace the defective gear(-s).

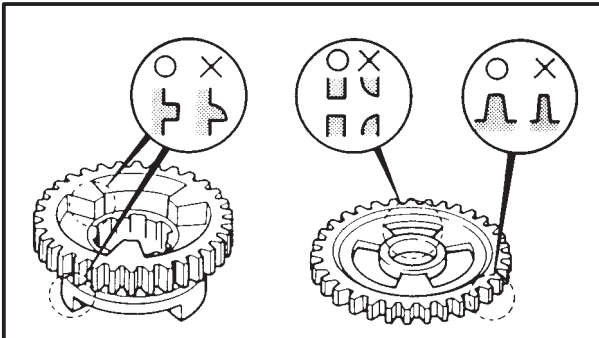

4. Check:

- ① transmission gear engagement  
(each pinion gear to its respective wheel gear)  
Incorrect → Reassemble the transmission axle assemblies.

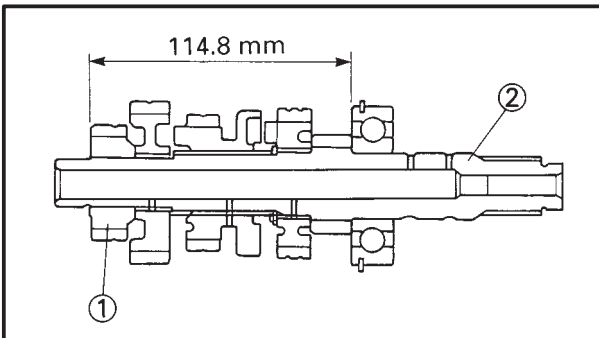

**NOTE:**

When reassembling the main axle, press the 2nd pinion gear ① onto it ② as shown.

5. Check:

- ① transmission gear movement  
Rough movement → Replace the defective part(-s).

6. Check:


- ① circlips  
Damage/bends/looseness → Replace.

EAS00426

**INSTALLING THE SHIFT FORKS AND SHIFT DRUM ASSEMBLY**


1. Install:




- ① shift drum assembly
- ② shift fork guide bars
- ③ shift fork "R"
- ④ shift fork "C"
- ⑤ shift fork "L"

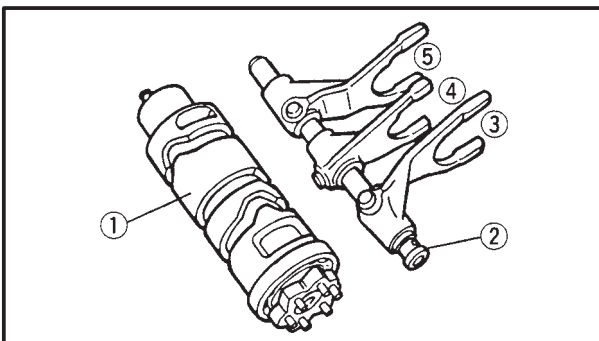

**NOTE:**

The embossed marks on the shift forks should face towards the right side of the engine and be in the following sequence: "R", "C", "L".

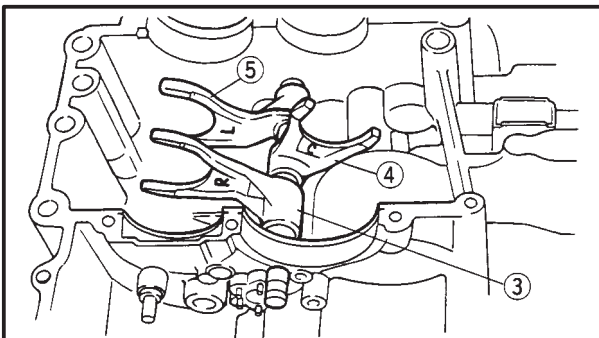

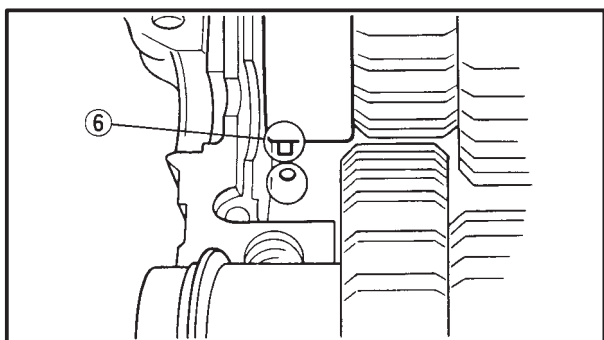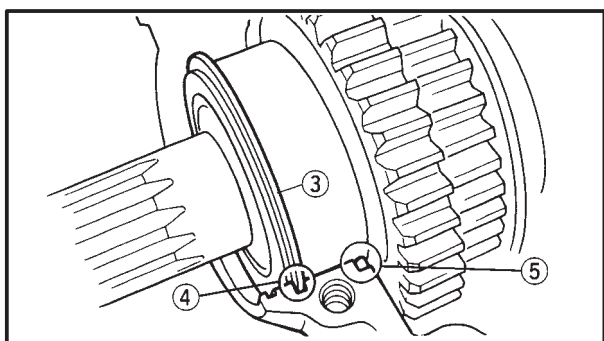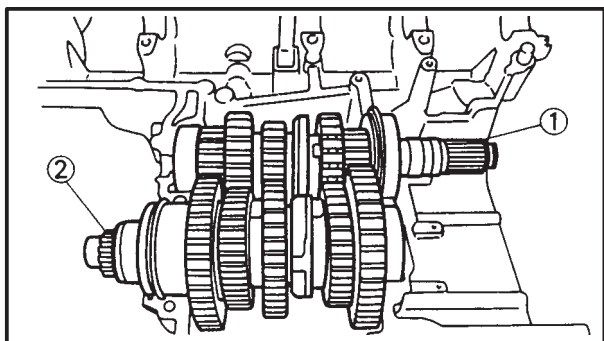

EAS00429

### INSTALLING THE TRANSMISSION

#### 1. Install:

- main axle assembly ①
- drive axle assembly ②

#### NOTE:


- Make sure that the drive axle bearing circlips ③ are inserted into the grooves ④ in the upper crankcase.
- The drive axle bearing pin ⑤ must face towards the rear of the crankcase and the main axle bearing pin ⑥ must face towards the front of the crankcase.

#### 2. Check:

- transmission
- Rough movement → Repair.

#### NOTE:

Oil each gear, shaft, and bearing thoroughly.

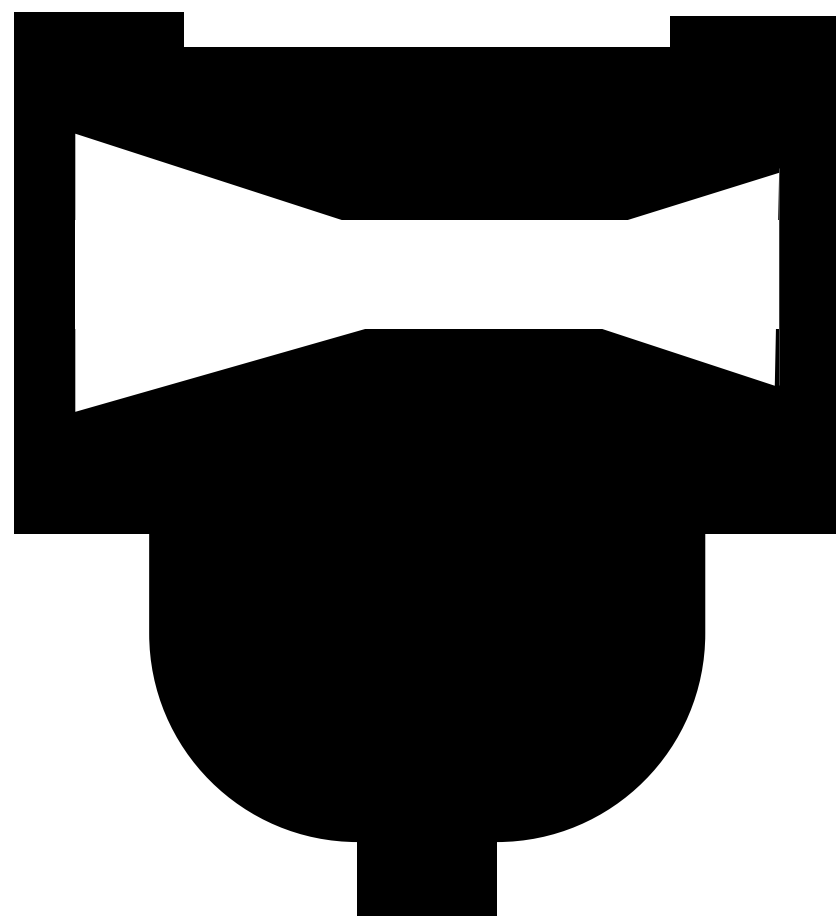

**CARB**

**5**



---

## **CHAPTER 5. CARBURETORS**


<b>CARBURETORS</b> .....	5-1
CHECKING THE CARBURETORS .....	5-4
ASSEMBLING THE CARBURETORS .....	5-5
INSTALLING THE CARBURETORS .....	5-7
MEASURING AND ADJUSTING THE FUEL LEVEL .....	5-7
CHECKING AND ADJUSTING THE THROTTLE POSITION SENSOR .....	5-8
CHECKING THE FUEL COCK .....	5-10
CHECKING THE FUEL COCK OPERATION .....	5-10




EAS00481

CARBURETORS

CARBURETORS

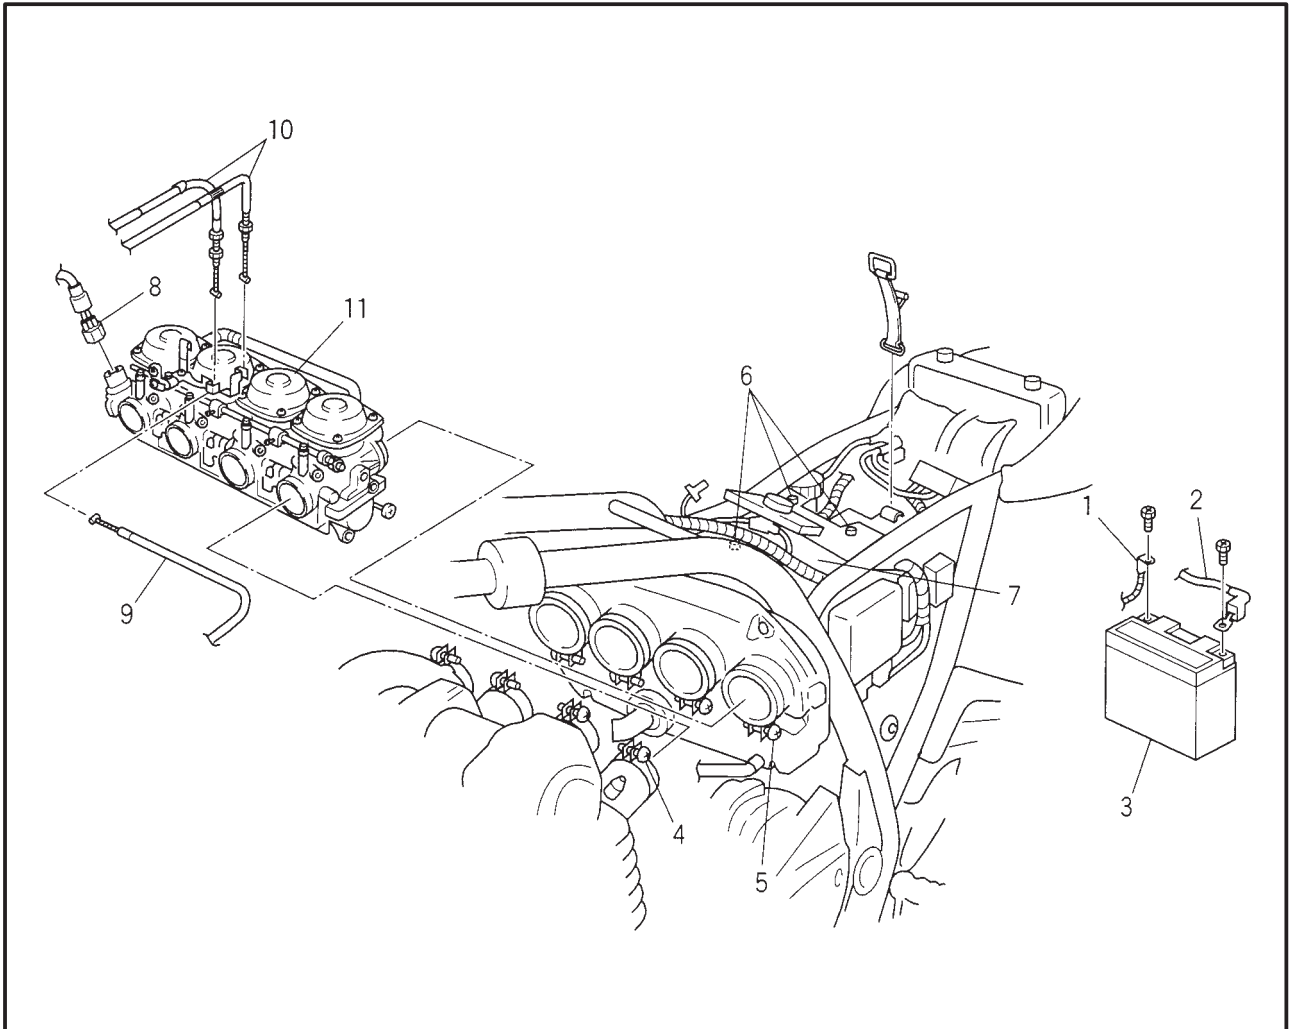


Order	Job/Part	Q'ty	Remarks
	<b>Removing the carburetors</b>		
	Seat, fuel tank		Remove the parts in the order listed. Refer to "SEAT, SIDE COVER AND FUEL TANK" in Chapter 3.
1	Battery negative lead	1	
2	Battery positive lead	1	
3	Battery	1	
4	Carburetor joint screws	4	Loosen
5	Air filter joint screws	4	Loosen
6	Bolts	3	Loosen
7	Air filter case	1	Move to rear ward
8	Throttle position sensor lead	1	Disconnect
9	Starter cable	1	
10	Throttle cables	2	
11	Carburetors	1	
			For installation, reverse the removal procedure.

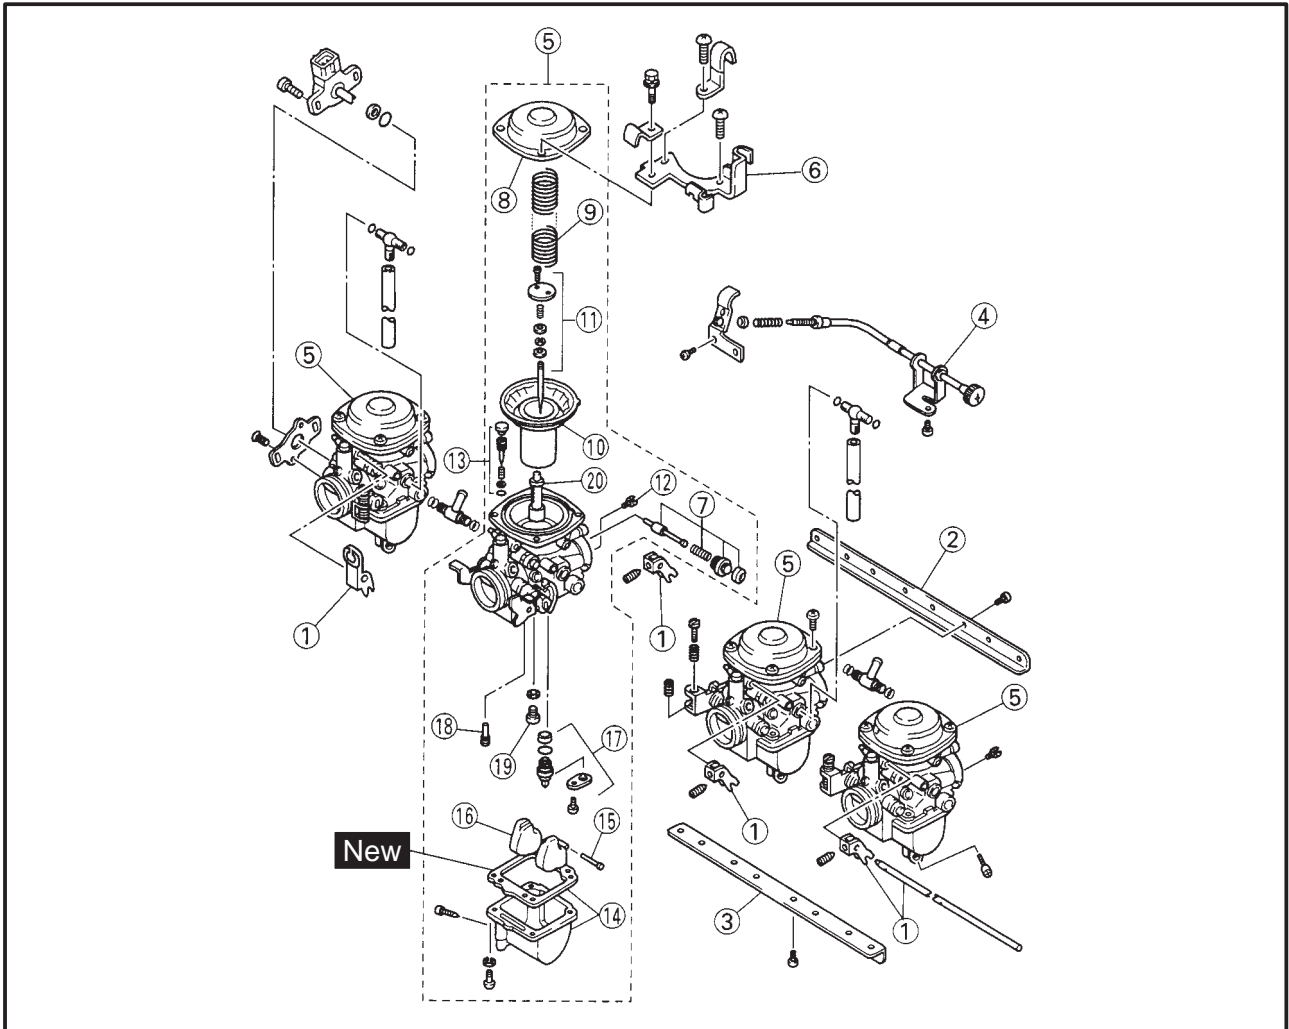

Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the carburetor</b>		Disassembly the parts in the order listed.
①	Starter shaft/Starter levers	1/4	<b>NOTE:</b> _____ The following procedure applies to all of the carburetors. _____ Refer to "ASSEMBLING THE CARBURETORS".
②	Upper bracket	1	
③	Lower bracket	1	
④	Throttle stop screw set	1	
⑤	Carburetors	4	
⑥	Throttle cable bracket	1	
⑦	Starter plunger set	1	
⑧	Vacuum chamber cover	1	
⑨	Piston valve spring	1	
⑩	Piston valve	1	
⑪	Jet needle	1	
⑫	Pilot air jet	1	
⑬	Pilot screw	1	




EAS00484

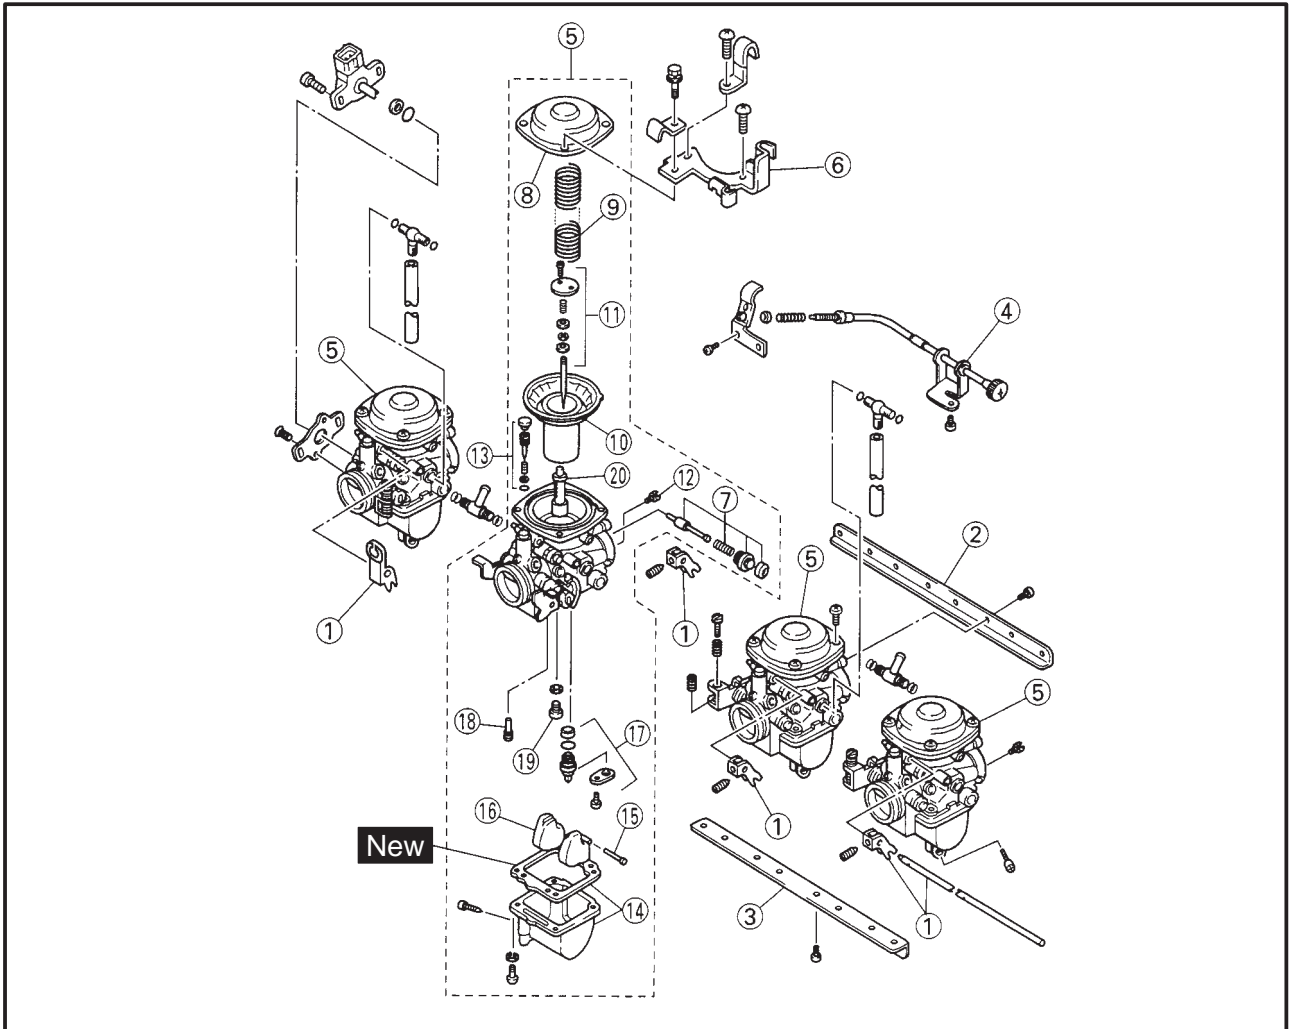

Order	Job/Part	Q'ty	Remarks
⑭	Float chamber	1/1	Refer to "ASSEMBLING THE CARBURETORS".  For assembly, reverse the disassembly procedure.
	Float chamber gasket		
⑮	Float pin	1	
⑯	Float	1	
⑰	Needle valve ass'y	1	
⑱	Pilot jet	1	
⑲	Main jet	1	
⑳	Needle jet	1	





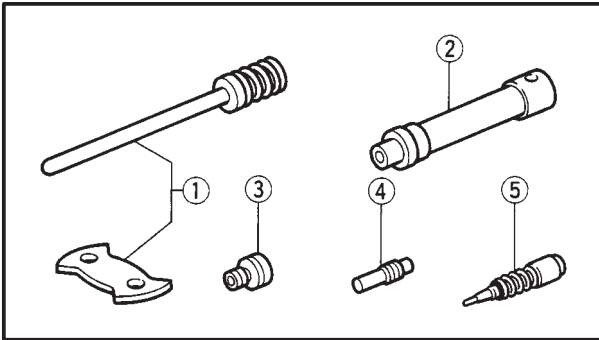

### 10. Check:

- Jet needle kit ①
- Needle jet ②
- Main jet ③
- Pilot jet ④
- Pilot screw ⑤

Bends/damage/wear → Replace.

Obstruction → Clean.

Blow out the jets with compressed air.

### 11. Check:

- Piston valve movement

Insert the piston valve into the carburetor body and move it up and down.

Tightness → Replace the piston valve.

### 12. Check:

- Fuel feed pipes

- Hose joint

Cracks/damage → Replace.

Obstruction → Clean.

Blow out the pipes with compressed air.

### 13. Check:

- Fuel feed hoses

- Fuel hoses

Cracks/damage/wear → Replace.

Obstruction → Clean.

Blow out the hoses with compressed air.

EAS00489


## ASSEMBLING THE CARBURETORS

The following procedure applies to both of the carburetors.

### CAUTION:

- Before assembling the carburetors, wash all of the parts in a petroleum-based solvent.

- Always use a new gasket.

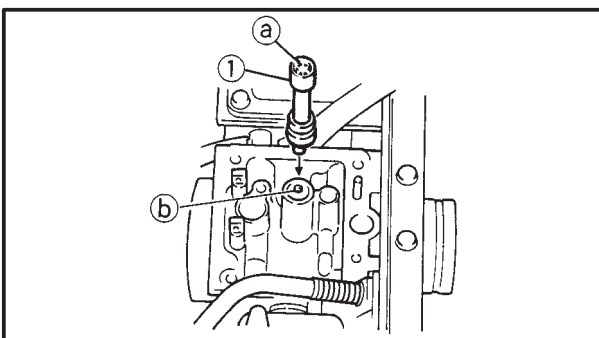

### 1. Install:

- Needle jet ①
- Pilot jet
- Main jet

### NOTE:

Align the slot ① on the needle jet with the projection ② on the carburetor body.









Out of specification → Replace the throttle position sensor.

**Throttle position sensor resistance**  
**0 to 4 × 6 kΩ at 20°C (68°F)**  
**(Yellow – Black/Blue)**



2. Adjust:
- ① throttle position sensor angle



- a. Turn the main switch to “ON”.
- b. Disconnect the throttle position sensor coupler.
- c. Reconnect the throttle position sensor coupler.



**NOTE:** \_\_\_\_\_

After reconnecting the throttle position sensor coupler, the tachometer switches to the throttle position sensor adjustment mode.

- d. Loosen the throttle position sensor screws ①.
- e. Adjust the throttle position sensor angle according to the following table:

**NOTE:** \_\_\_\_\_

The angle of the throttle position sensor is indicated by the r/min which are displayed on the tachometer.

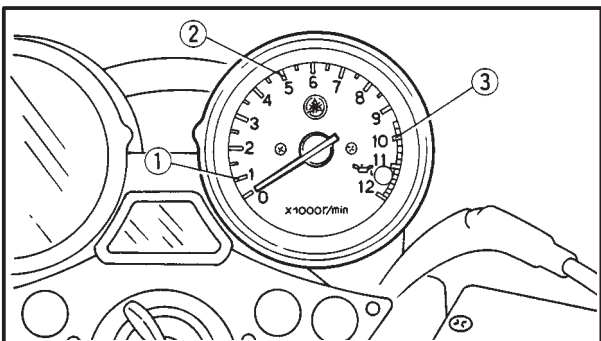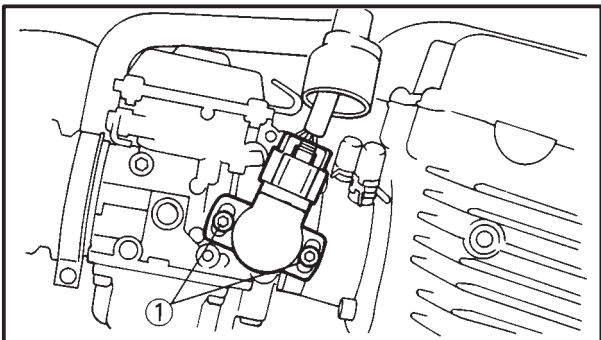

**Tachometer reading**  
**Throttle position sensor angle**  
**1,000 r/min ①**  
**Too small**  
**5,000 r/min ②**  
**Correct**  
**10,000 r/min ③**  
**Too large**


- f. After adjusting the throttle position sensor angle, tighten the throttle position sensor screws.

**NOTE:** \_\_\_\_\_

To exit the throttle position sensor adjustment mode, start the engine or turn the main switch to “OFF”.





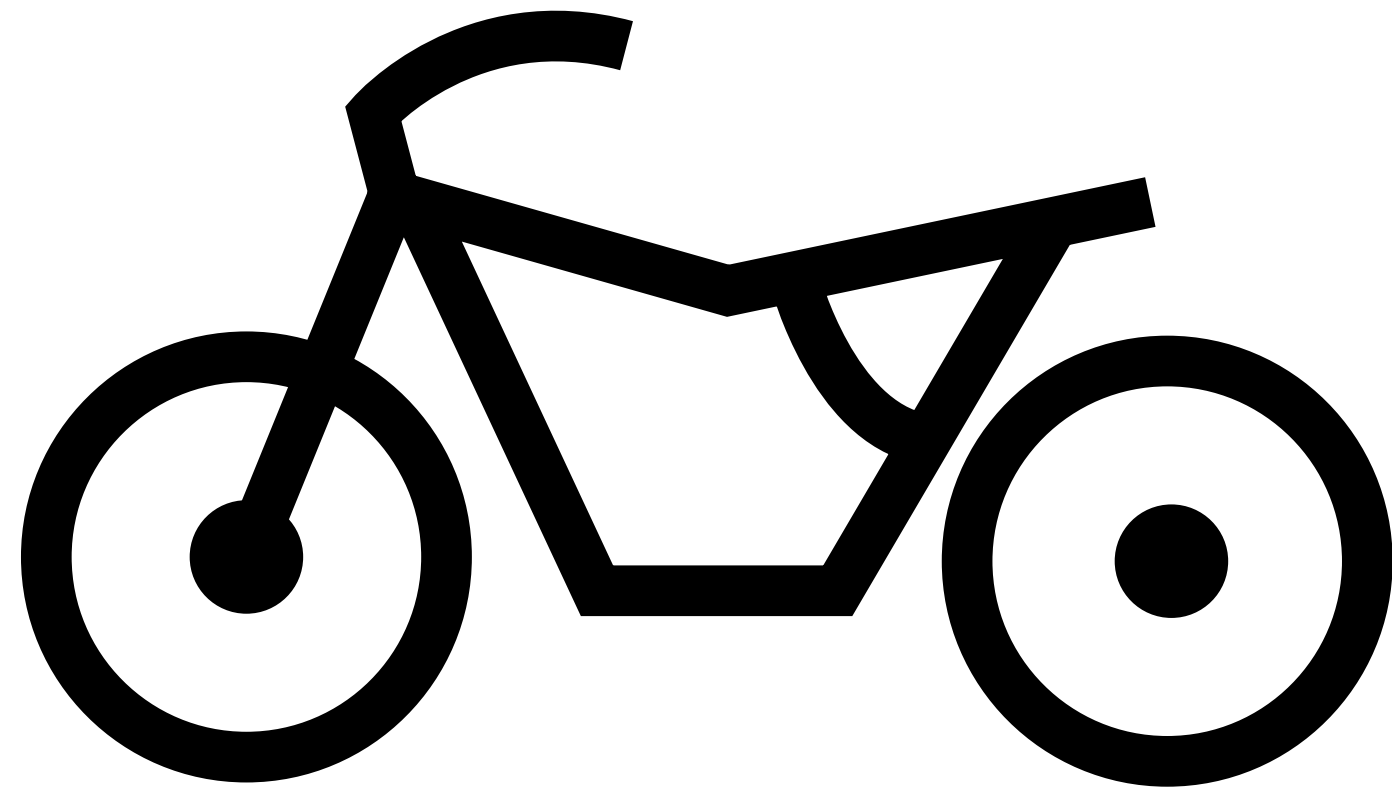

**CHAS**

**6**





---

## CHAPTER 6. CHASSIS

<b>FRONT WHEEL AND BRAKE DISCS</b> .....	6-1
REMOVING THE FRONT WHEEL .....	6-3
CHECKING THE FRONT WHEEL .....	6-3
CHECKING THE BRAKE DISCS .....	6-4
INSTALLING THE FRONT WHEEL .....	6-6
ADJUSTING THE FRONT WHEEL STATIC BALANCE .....	6-7
<b>REAR WHEEL, BRAKE DISC AND REAR WHEEL SPROCKET</b> ....	6-9
REAR WHEEL .....	6-9
BRAKE DISC AND REAR WHEEL SPROCKET .....	6-10
REMOVING THE REAR WHEEL .....	6-11
CHECKING THE REAR WHEEL .....	6-11
CHECKING THE REAR WHEEL DRIVE HUB .....	6-12
CHECKING AND REPLACING THE REAR WHEEL SPROCKET .	6-12
INSTALLING THE REAR WHEEL .....	6-13
ADJUSTING THE REAR WHEEL STATIC BALANCE .....	6-13
<b>FRONT AND REAR BRAKES</b> .....	6-14
FRONT BRAKE PADS .....	6-14
REAR BRAKE PADS .....	6-15
REPLACING THE FRONT BRAKE PADS .....	6-16
REPLACING THE REAR BRAKE PADS .....	6-18
FRONT BRAKE MASTER CYLINDER .....	6-20
REAR BRAKE MASTER CYLINDER .....	6-22
DISASSEMBLING THE FRONT BRAKE MASTER CYLINDER ....	6-24
DISASSEMBLING THE REAR BRAKE MASTER CYLINDER ....	6-24
CHECKING THE FRONT AND REAR BRAKE MASTER CYLINDERS .....	6-25
ASSEMBLING AND INSTALLING THE FRONT BRAKE MASTER CYLINDERS .....	6-26
ASSEMBLING THE REAR BRAKE MASTER CYLINDER .....	6-28
FRONT BRAKE CALIPER .....	6-30
REAR BRAKE CALIPER .....	6-32
DISASSEMBLING THE FRONT BRAKE CALIPERS .....	6-34
DISASSEMBLING THE REAR BRAKE CALIPER .....	6-35
CHECKING THE FRONT AND REAR BRAKE CALIPERS .....	6-36
ASSEMBLING AND INSTALLING THE FRONT BRAKE CALIPERS .....	6-36
ASSEMBLING AND INSTALLING THE REAR BRAKE CALIPER ..	6-39




---

<b>FRONT FORK</b> .....	6-41
REMOVING THE FRONT FORK LEGS .....	6-44
DISASSEMBLING THE FRONT FORK LEGS .....	6-44
CHECKING THE FRONT FORK LEGS .....	6-46
ASSEMBLING THE FRONT FORK LEGS .....	6-47
INSTALLING THE FRONT FORK LEGS .....	6-50
<b>HANDLEBAR</b> .....	6-51
REMOVING THE HANDLEBAR .....	6-53
CHECKING THE HANDLEBAR .....	6-53
INSTALLING THE HANDLEBAR .....	6-54
<b>STEERING HEAD</b> .....	6-57
LOWER BRACKET .....	6-57
REMOVING THE LOWER BRACKET .....	6-59
CHECKING THE STEERING HEAD .....	6-59
INSTALLING THE STEERING HEAD .....	6-60
<b>REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN</b> .....	6-61
HANDLING THE REAR SHOCK ABSORBER AND GAS CYLINDER .....	6-63
DISPOSING OF A REAR SHOCK ABSORBER AND GAS CYLINDER .....	6-63
REMOVING THE SWINGARM .....	6-64
CHECKING THE REAR SHOCK ABSORBER ASSEMBLY AND GAS CYLINDER .....	6-65
CHECKING THE SWINGARM .....	6-65
CHECKING THE DRIVE CHAIN .....	6-66

EAS00514

## CHASSIS FRONT WHEEL AND BRAKE DISCS

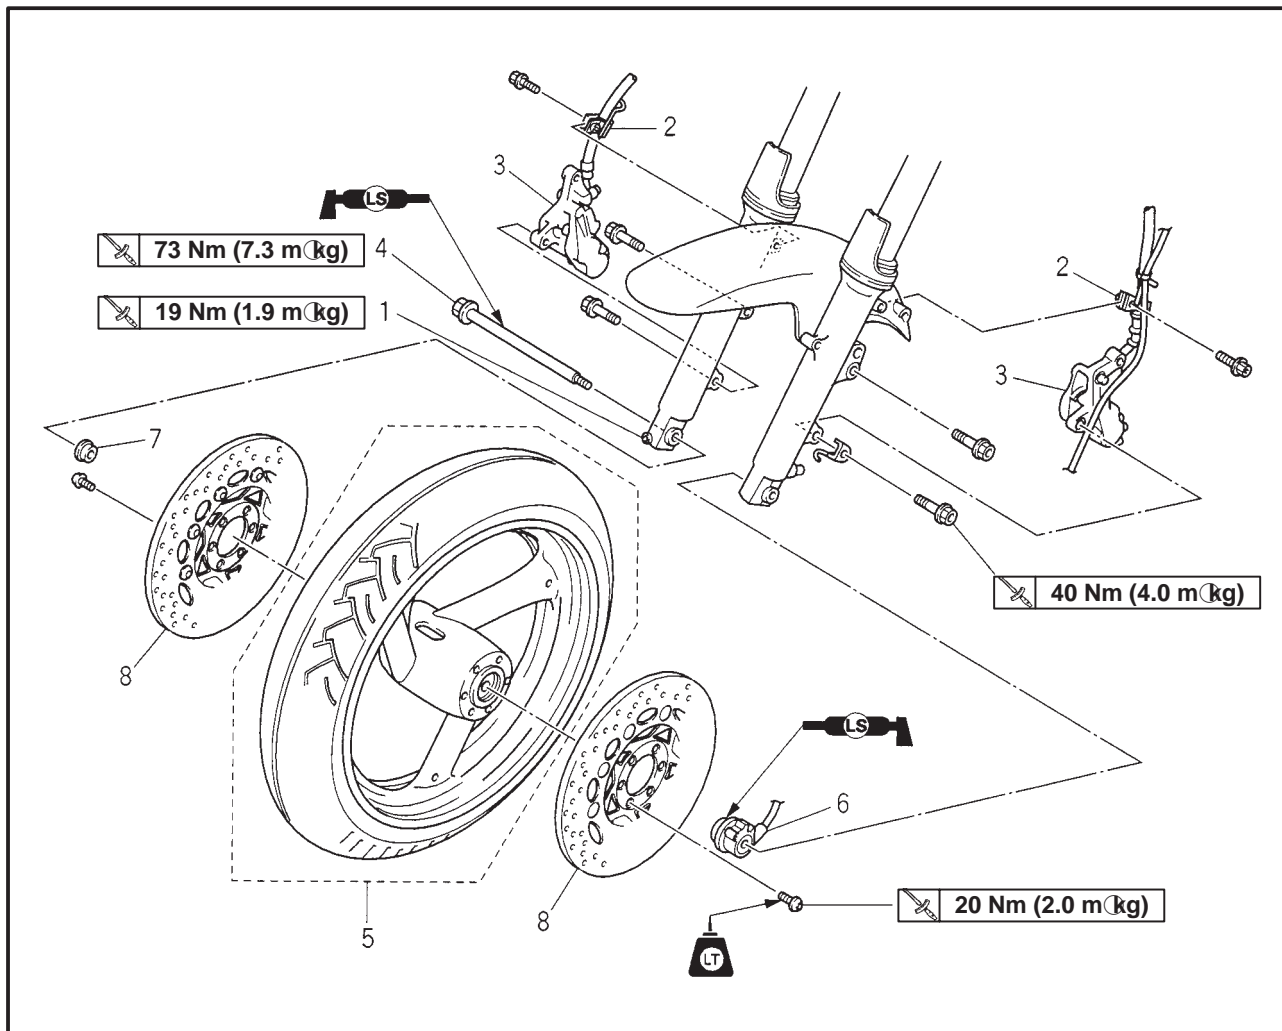


Order	Job/Part	Q'ty	Remarks
	<b>Removing the front wheel and brake discs</b>		Remove the parts in the order listed.
			<b>NOTE:</b> _____ Place the motorcycle on a suitable stand so that the front wheel is elevated.
1	Wheel axle pinch bolt	1	Refer to "REMOVING/INSTALLING THE FRONT WHEEL".
2	Brake hose holder (left/right)	1/1	
3	Caliper (left/right)	1/1	
4	Wheel axle	1	
5	Front wheel	1	
6	Speedometer gear unit	1	
7	Collar	1	
8	Brake disc (left/right)	1/1	
			For installation, reverse the removal procedure.

# FRONT WHEEL AND BRAKE DISCS



EAS00518

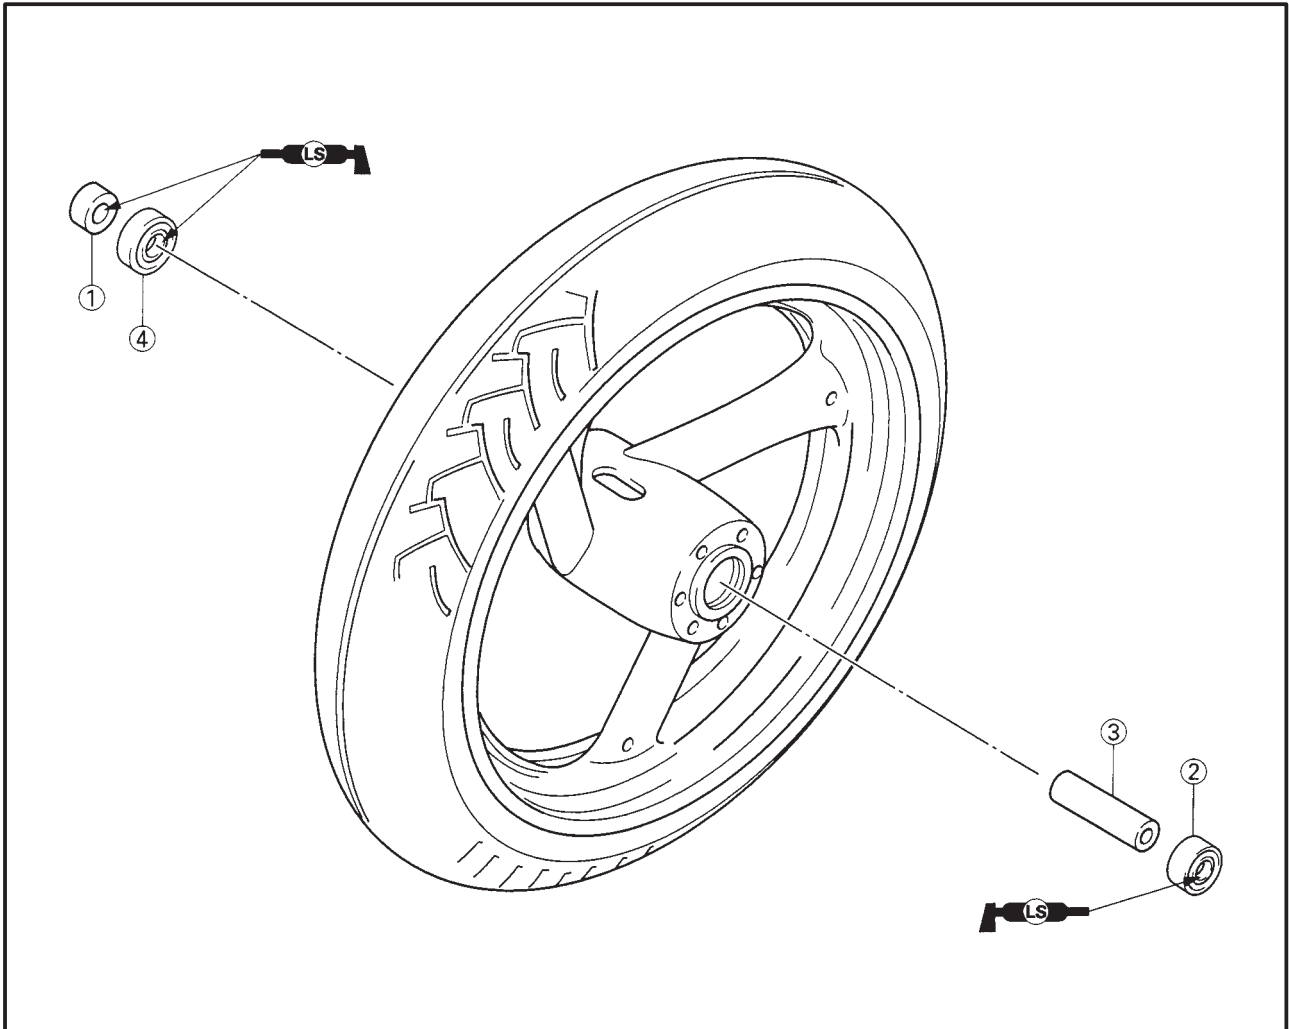

Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the front wheel.</b>		Disassembly the parts in the order listed.
①	Oil seal	1	
②	Bearing	1	
③	Spacer	1	
④	Bearing	1	
			For assembly, reverse the disassembly procedure.

EAS00521

## REMOVING THE FRONT WHEEL


1. Stand the motorcycle on a level surface.

### **⚠ WARNING**

Securely support the motorcycle so that there is no danger of it falling over.

### NOTE:


Place the motorcycle on a suitable stand so that the front wheel is elevated.

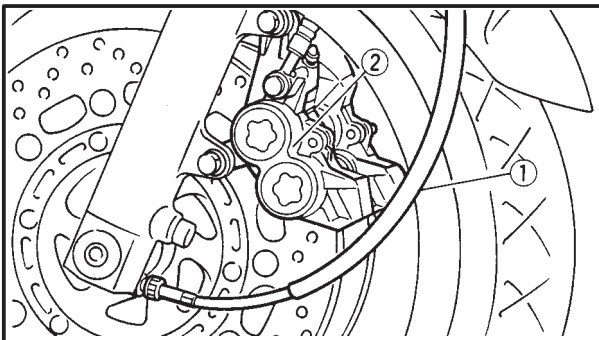

2. disconnect:
  - speedometer cable ①
3. Remove:
  - brake calipers ② (left and right)

### NOTE:

Do not squeeze the brake lever when removing the brake calipers.

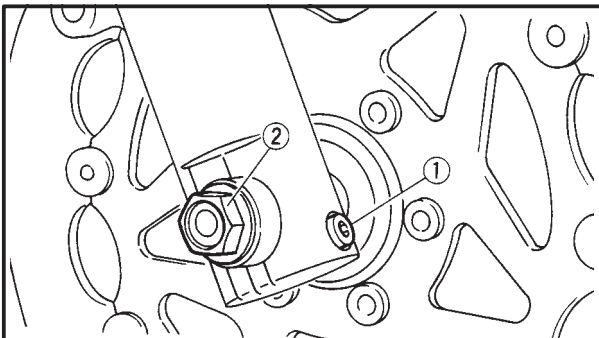

4. Loosen:
  - pinch bolt (front wheel axle) ①
  - front wheel axle ②
5. Elevate:
  - front wheel

### NOTE:

Place the motorcycle on a suitable stand so that the front wheel is elevated.

EAS00525


## CHECKING THE FRONT WHEEL

1. Check:
  - wheel axle

Roll the wheel axle on a flat surface.  
Bends → Replace.

### **⚠ WARNING**

Do not attempt to straighten a bent wheel axle.

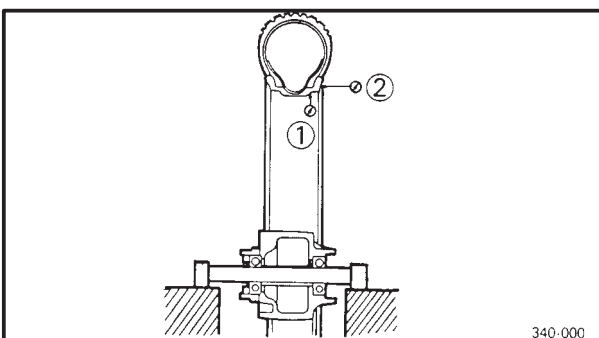


340-000




2. Check:
  - tire
  - front wheel

Damage/wear → Replace.  
Refer to “CHECKING THE TIRES” and “CHECKING THE WHEELS” in chapter 3.
3. Measure:
  - front wheel radial runout ①
  - front wheel lateral runout ②

Over the specified limits → Replace.

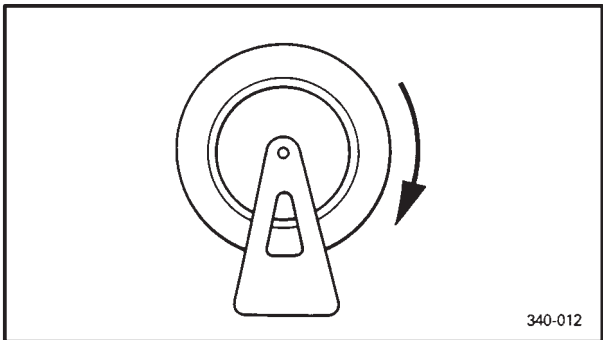

340-012

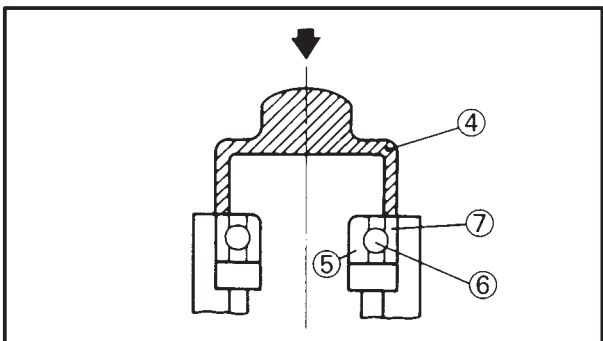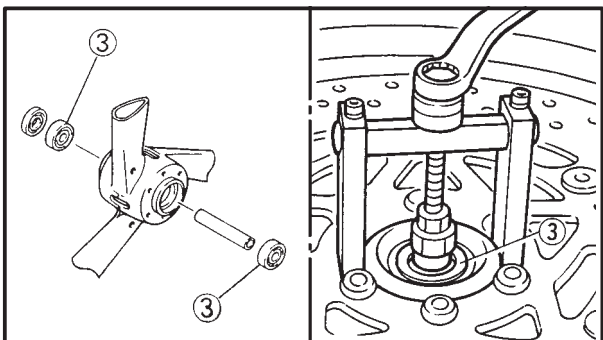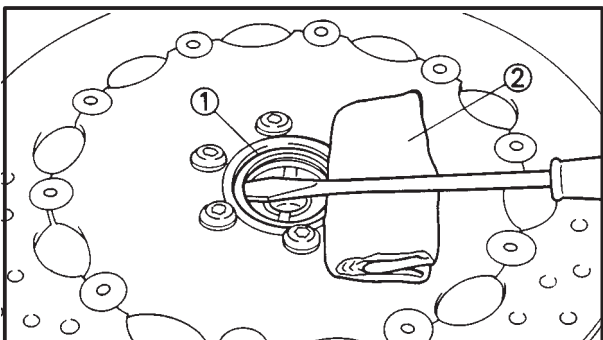

**Front wheel radial runout limit**  
1.0 mm  
**Front wheel lateral runout limit**  
0.5 mm

**4. Check:**

- wheel bearings  
Front wheel turns roughly or is loose → Replace the wheel bearings.
- oil seals  
Damage/wear → Replace.

**5. Replace:**

- wheel bearings (New)
- oil seals (New)



- a. Clean the outside of the front wheel hub.
- b. Remove the oil seals (1) with a flat-head screwdriver.

**NOTE:** \_\_\_\_\_

To prevent damaging the wheel, place a rag (2) between the screwdriver and the wheel surface.

- c. Remove the wheel bearings (3) with a general bearing puller.
- d. Install the new wheel bearings and oil seals in the reverse order of disassembly.

**CAUTION:** \_\_\_\_\_

**Do not contact the wheel bearing center race (5) or balls (6). Contact should be made only with the outer race (7).**

**NOTE:** \_\_\_\_\_

Use a socket (4) that matches the diameter of the wheel bearing outer race and oil seal.

EAS00531

**CHECKING THE BRAKE DISCS**

The following procedure applies to all of the brake discs.

**1. Check:**

- brake disc  
Damage/galling → Replace.

**2. Measure:**

- brake disc deflection  
Out of specification → Correct the brake disc deflection or replace the brake disc.



EAS00544


## INSTALLING THE FRONT WHEEL

The following procedure applies to both brake discs.

1. Lubricate:

- wheel axle
- oil seal lips

	<b>Recommended lubricant</b> <b>Lithium soap base grease</b>
---	---

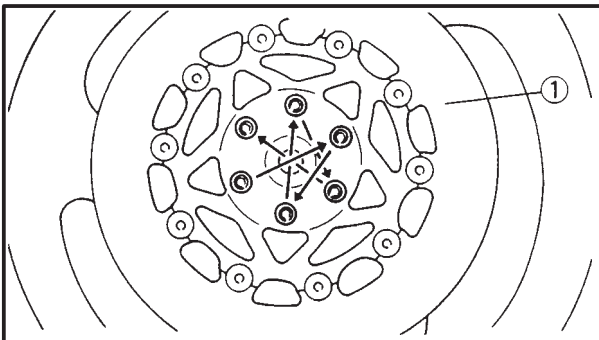


2. Install:

- brake disc ①

**NOTE:**

- Apply LOCTITE® 648 to the threads of the brake disc bolts.
- Tighten the brake disc bolts in stages and in a crisscross pattern.

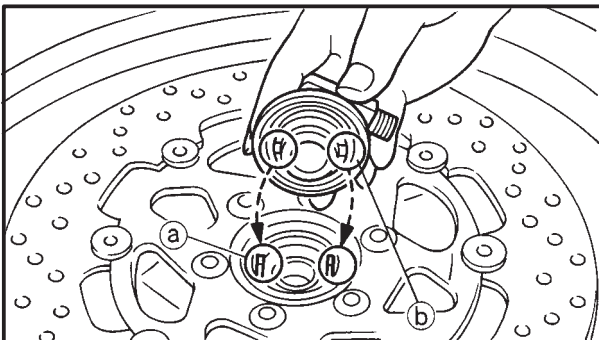


3. Install:

- speedometer gear unit

**NOTE:**

Make sure that the speedometer gear unit and the wheel hub are installed with the two projections (a) meshed into the two slots (b) respectively.

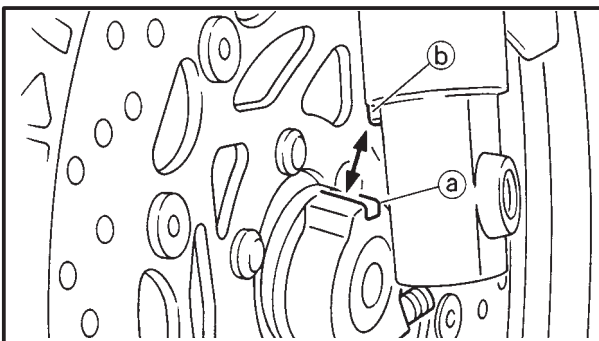


4. Install:

- front wheel


**NOTE:**

Make sure that the slot (a) in the speedometer gear unit fits over the stopper (b) on the outer tube.

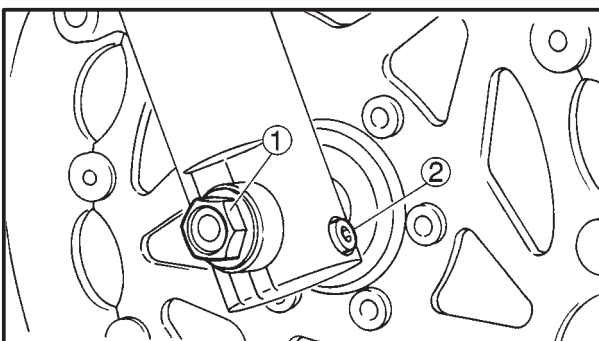

5. Tighten:

- wheel axle ①
- wheel axle pinch bolt ②

	<b>Wheel axle</b> <b>73 Nm (7.3 mⓀg)</b> <b>Wheel axle pinch bolt</b> <b>19 Nm (1.9 mⓀg)</b>
---	---




**CAUTION:**

Before tightening the wheel axle nut, push down hard on the handlebar several times and check if the front fork rebounds smoothly.





# FRONT WHEEL AND BRAKE DISCS

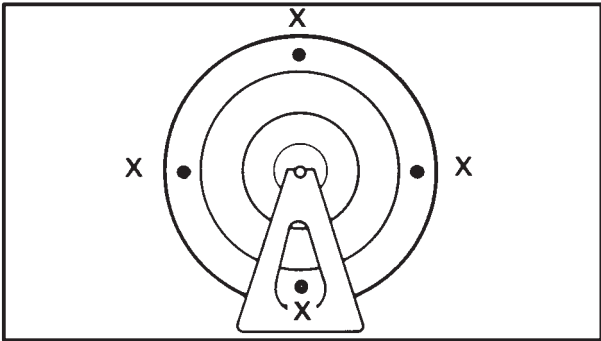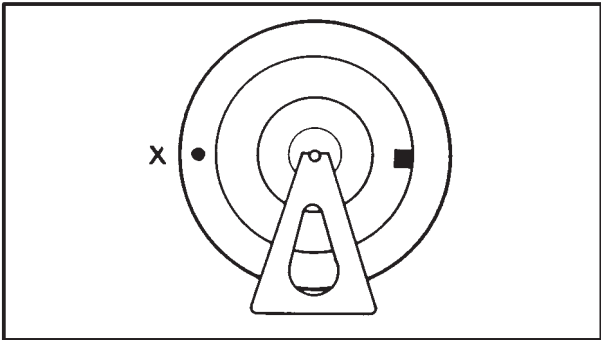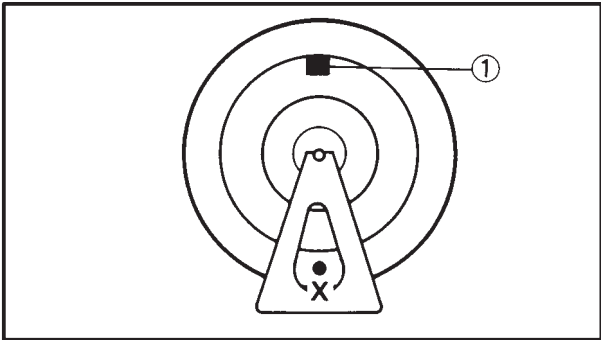

3. Adjust:  
 Ⓒ front wheel static balance



a. Install a balancing weight ① onto the rim exactly opposite the heavy spot "X".

**NOTE:** \_\_\_\_\_

Start with the lightest weight.



- b. Turn the front wheel 90° so that the heavy spot is positioned as shown.
- c. If the heavy spot does not stay in that position, install a heavier weight.
- d. Repeat steps (b) and (c) until the front wheel is balanced.



4. Check:  
 Ⓒ front wheel static balance



- a. Turn the front wheel and make sure that it stays at each position shown.
- b. If the front wheel does not remain stationary at all of the positions, rebalance it.




# REAR WHEEL, BRAKE DISC AND REAR WHEEL SPROCKET



EAS00550

## REAR WHEEL, BRAKE DISC AND REAR WHEEL SPROCKET REAR WHEEL

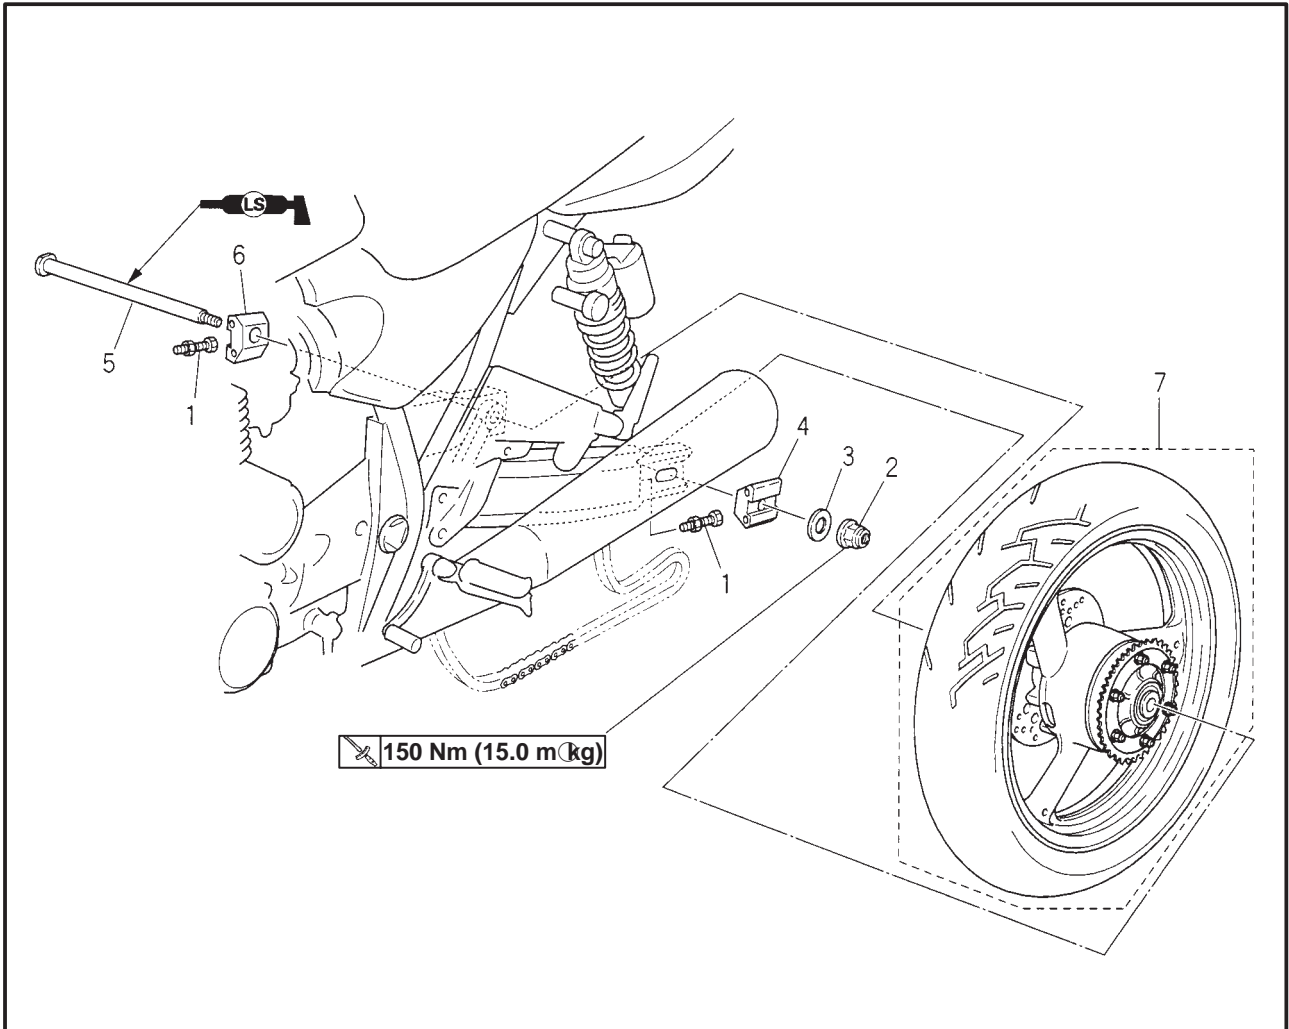


Order	Job/Part	Q'ty	Remarks
	<b>Removing the rear wheel</b>		Remove the parts in the order listed.
			<b>NOTE:</b> _____ Place the motorcycle on a suitable stand so that the rear wheel is elevated.
1	Chain adjusters	2	Refer to "REMOVING/INSTALLING THE REAR WHEEL".
2	Rear wheel axle nut	1	
3	Plate washer	1	
4	Chain puller (left)	1	
5	Wheel axle	1	
6	Chain Puller (right)	1	
7	Rear wheel	1	
			For installation, reverse the removal procedure.

# REAR WHEEL, BRAKE DISC AND REAR WHEEL SPROCKET



## BRAKE DISC AND REAR WHEEL SPROCKET

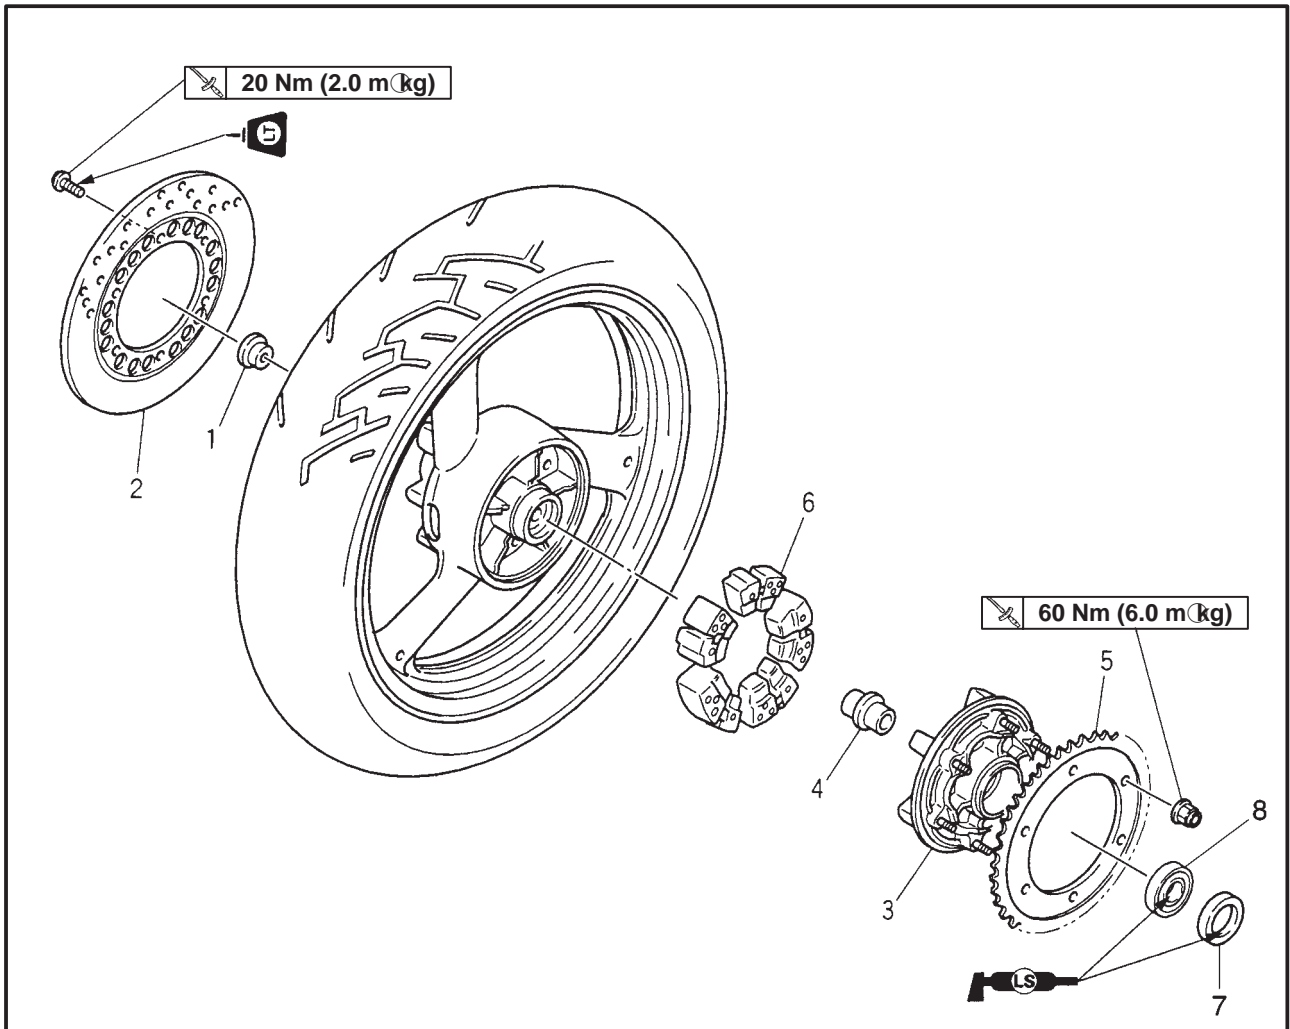

Order	Job/Part	Q'ty	Remarks
	<b>Removing the brake disc and rear wheel sprocket</b>		Remove the parts in the order listed.
1	Collar	1	
2	Brake disc	1	
3	Clutch hub	1	
4	Collar	1	
5	Rear wheel sprocket	1	
6	Clutch dampers	5	
7	Oil seal	1	
8	Bearing	1	
			For installation, the removal procedure.

## REAR WHEEL, BRAKE DISC AND REAR WHEEL SPROCKET



EAS00561

### REMOVING THE REAR WHEEL



1. Stand the motorcycle on a level surface.

#### **⚠ WARNING**

Securely support the motorcycle so that there is no danger of it falling over.

#### **NOTE:**

Place the motorcycle on a suitable stand so that the rear wheel is elevated.

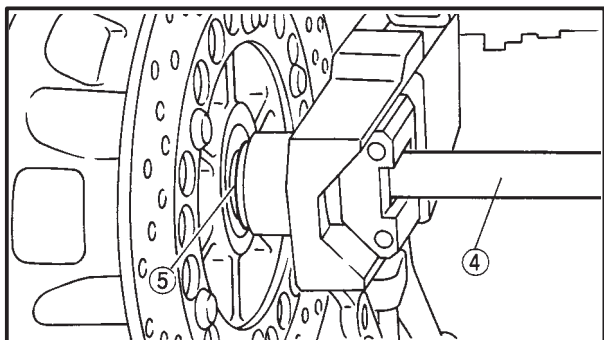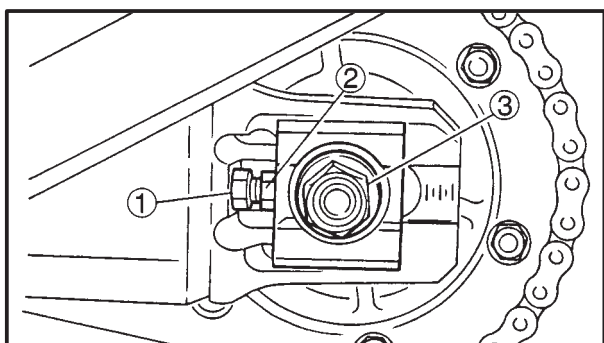

2. Loosen:

- adjusting bolt ①
- locknut ②

3. Remove:

- wheel axle nut ③
- wheel axle ④
- rear wheel
- right collar ⑤

#### **NOTE:**

Push the rear wheel forward and remove the drive chain from the rear wheel sprocket.

EAS00565

### CHECKING THE REAR WHEEL

1. Check:

- wheel axle
- rear wheel
- wheel bearings
- oil seals

Refer to "FRONT WHEEL".

2. Check:

- tire
- rear wheel

Damage/wear → Replace.

Refer to "INSPECTING THE TIRES" and "INSPECTING THE WHEELS" in chapter 3.

3. Measure:

- rear wheel radial runout
- rear wheel lateral runout

Refer to "FRONT WHEEL".



## REAR WHEEL, BRAKE DISC AND REAR WHEEL SPROCKET

CHAS



EAS00572

### INSTALLING THE REAR WHEEL

1. Lubricate:

- wheel axle
- wheel bearings
- oil seal lips



**Recommended lubricant**  
**Lithium soap base grease**

2. Tighten:

- wheel axle nut



**Wheel axle nut**  
**150 Nm (15.0 mkg)**

EAS00575

### ADJUSTING THE REAR WHEEL STATIC BALANCE

**NOTE:** \_\_\_\_\_


- After replacing the tire, wheel or both, the rear wheel static balance should be adjusted.
- Adjust the rear wheel static balance with the brake disc and rear wheel drive hub installed.

1. Adjust:

- rear wheel static balance  
Refer to "FRONT WHEEL".

EAS00577

**FRONT AND REAR BRAKES**  
**FRONT BRAKE PADS**

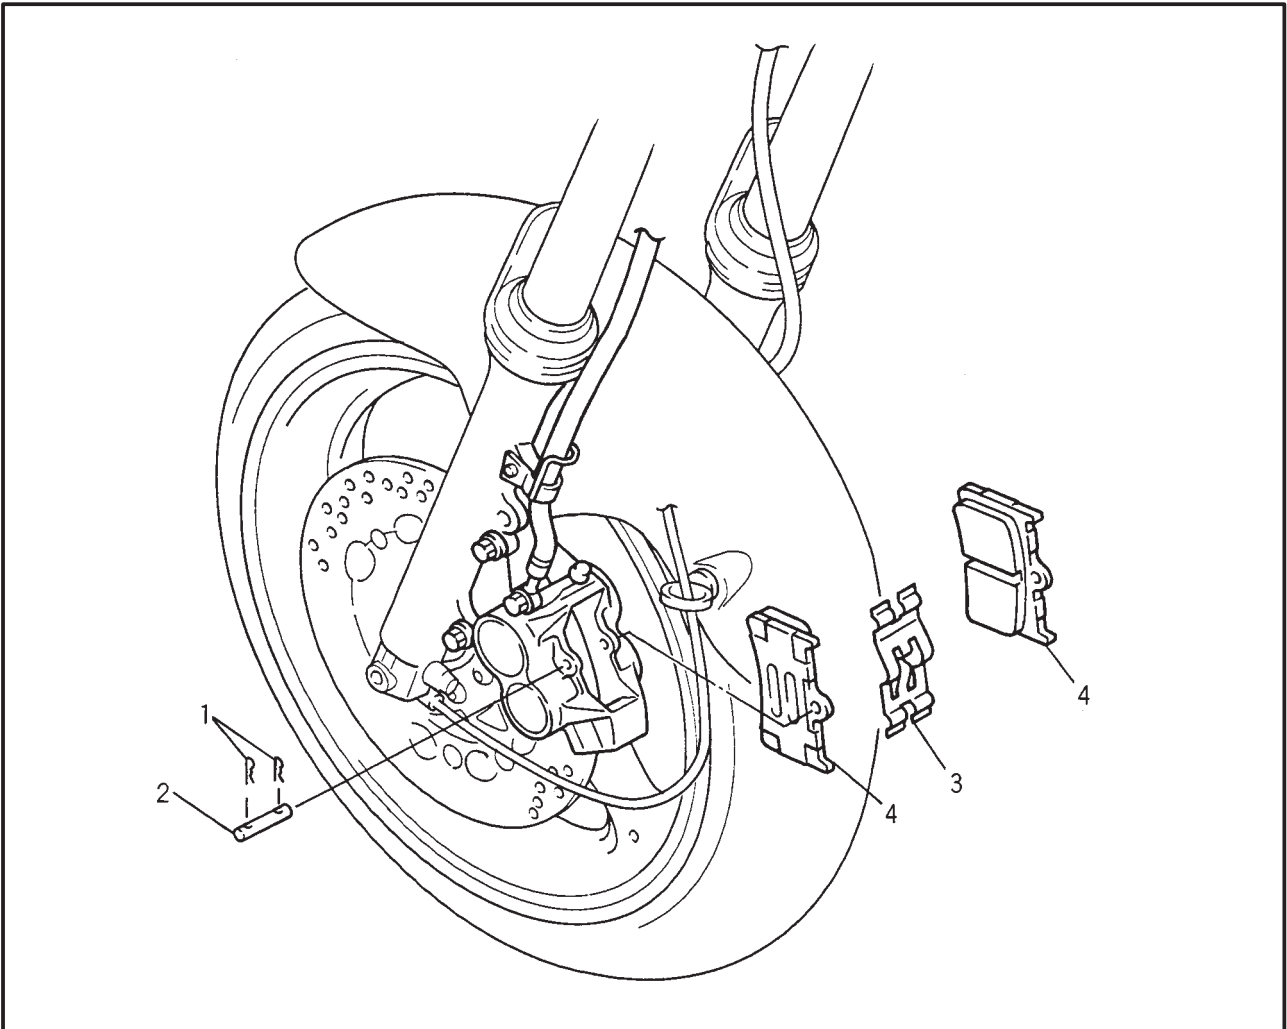


Order	Job/Part	Q'ty	Remarks
	<b>Removing the front brake pads</b>		
1	Clip	4	Remove the parts in the order listed.  Refer to "REPLACING THE FRONT BRAKE PADS".  For installation, reverse the removal procedure.
2	Pad pin	2	
3	Pad support	2	
4	Brake pad	4	



EAS00578

REAR BRAKE PADS

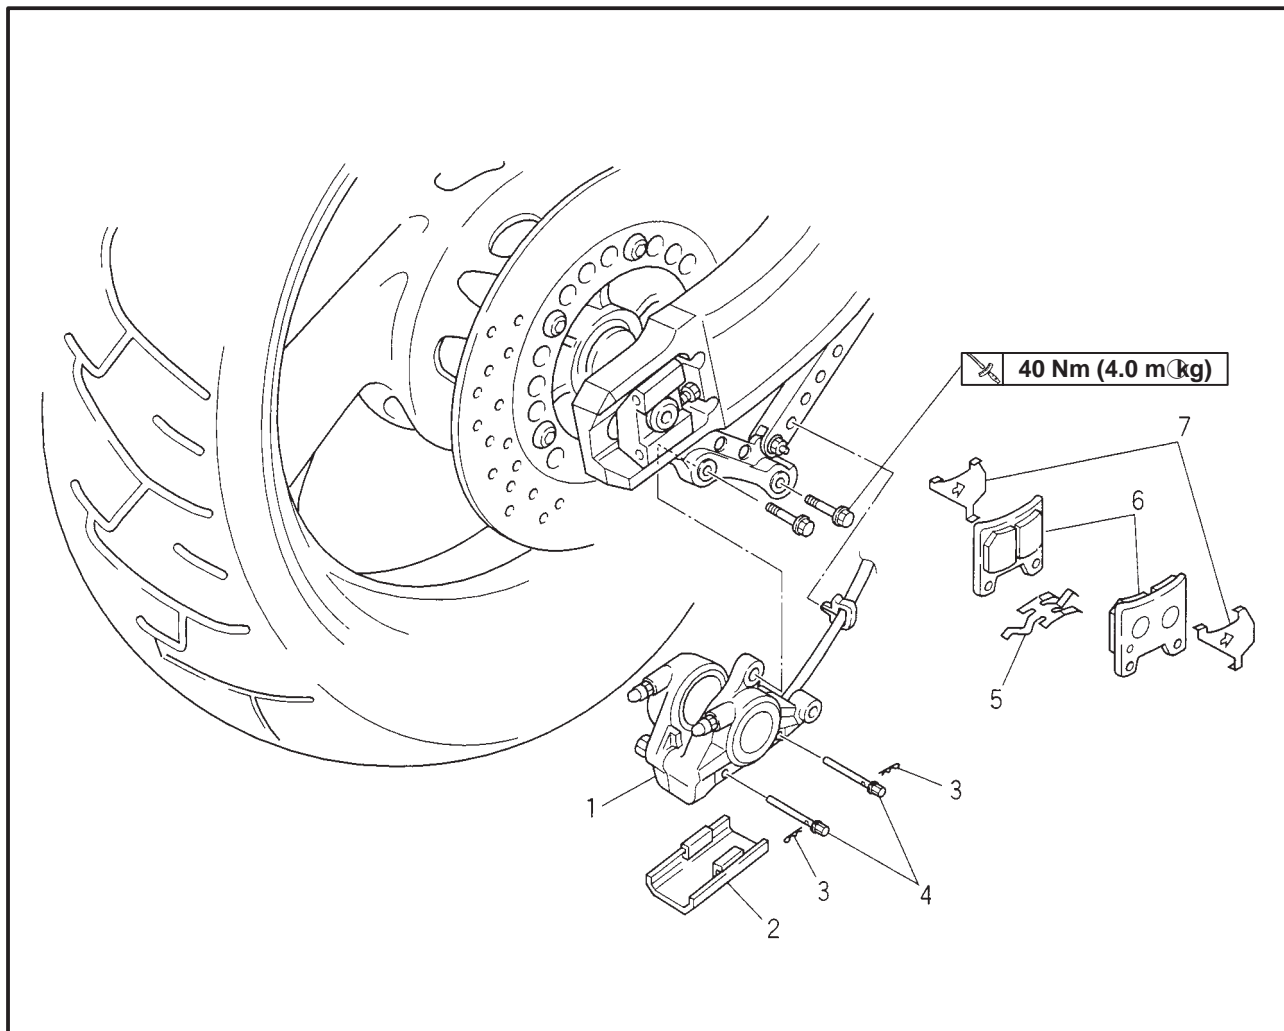

Order	Job/Part	Q'ty	Remarks
	<b>Removing the rear brake pads</b>		
1	Caliper	1	Remove the parts in the order listed.  Refer to "REPLACING THE REAR BRAKE PADS".
2	Cover	1	
3	Clip	2	
4	Pad pin	2	
5	Pad spring	1	
6	Brake pad	2	
7	Caliper shim	2	
			For installation, reverse the removal procedure.



EAS00579

**CAUTION:**



Disc brake components rarely require disassembly.

Therefore, always follow these preventive measures:

- ⓪ Never disassemble brake components unless absolutely necessary.
- ⓪ If any connection on the hydraulic brake system is disconnected, the entire brake system must be disassembled, drained, cleaned, properly filled, and bled after reassembly.
- ⓪ Never use solvents on internal brake components.
- ⓪ Use only clean or new brake fluid for cleaning brake components.
- ⓪ Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt fluid immediately.
- ⓪ Avoid brake fluid coming into contact with the eyes as it can cause serious injury.

First aid for brake fluid entering the eyes:

- ⓪ Flush with water for 15 minutes and get immediate medical attention.

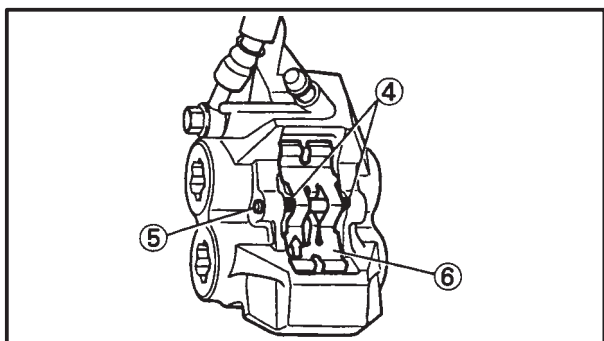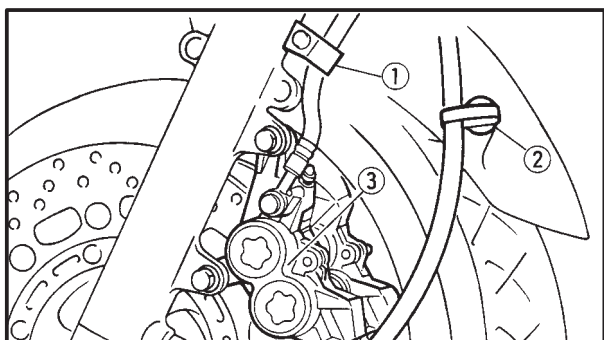

EAS00582

**REPLACING THE FRONT BRAKE PADS**

The following procedure applies to both brake calipers.

**NOTE:**

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.

1. Remove:

- ⓪ brake hose holder ①
- ⓪ speedometer cable guide ②
- ⓪ brake caliper ③

2. Remove:

- ⓪ brake pad clips ④
- ⓪ brake pad pin ⑤
- ⓪ brake pad spring ⑥





6. Install:
- ⊙ brake pad pins
  - ⊙ brake pad clips
  - ⊙ brake caliper



**Brake caliper bolt**  
**40 Nm (4.0 m⊙kg)**

7. Check:
- ⊙ brake fluid level  
 Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3.
8. Check:
- ⊙ brake lever operation  
 Soft or spongy feeling → Bleed the brake system. Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.

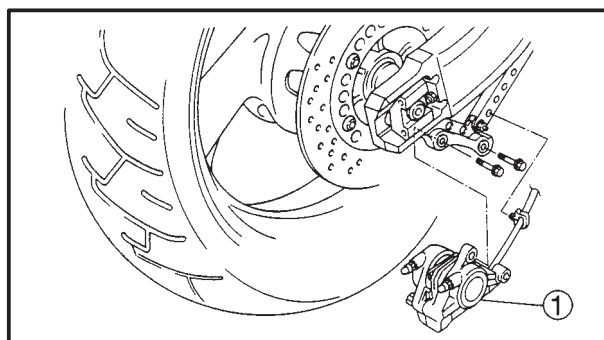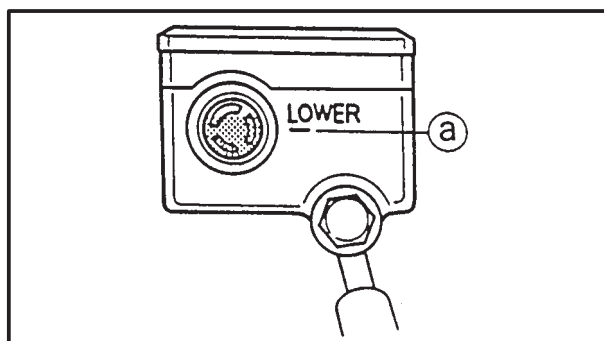



EAS00583

## REPLACING THE REAR BRAKE PADS

### NOTE:

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.

1. Remove:
- ⊙ brake caliper (1)
2. Remove:
- ⊙ brake pad cover (1)
  - ⊙ brake pad clips (2)
  - ⊙ brake pad pins (3)
  - ⊙ brake pad spring (4)
3. Remove:
- ⊙ brake pads (5)  
 (along with the brake pad shims)
4. Measure:
- ⊙ brake pad wear limit (a)  
 Out of specification → Replace the brake pads as a set.

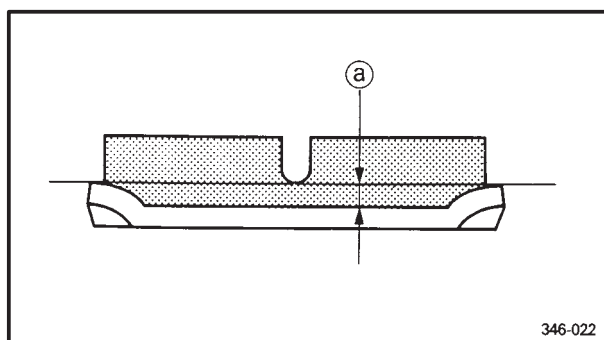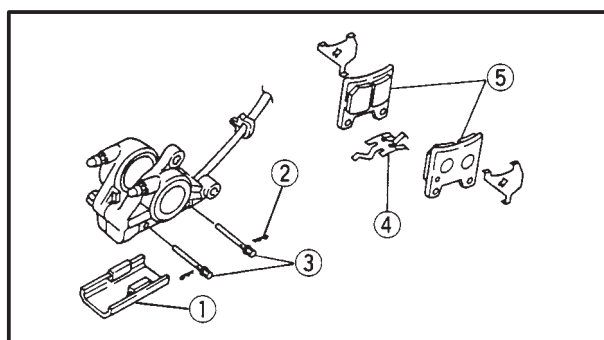


**Brake pad wear limit**  
**0.5 mm**




EAS00586

## FRONT BRAKE MASTER CYLINDER

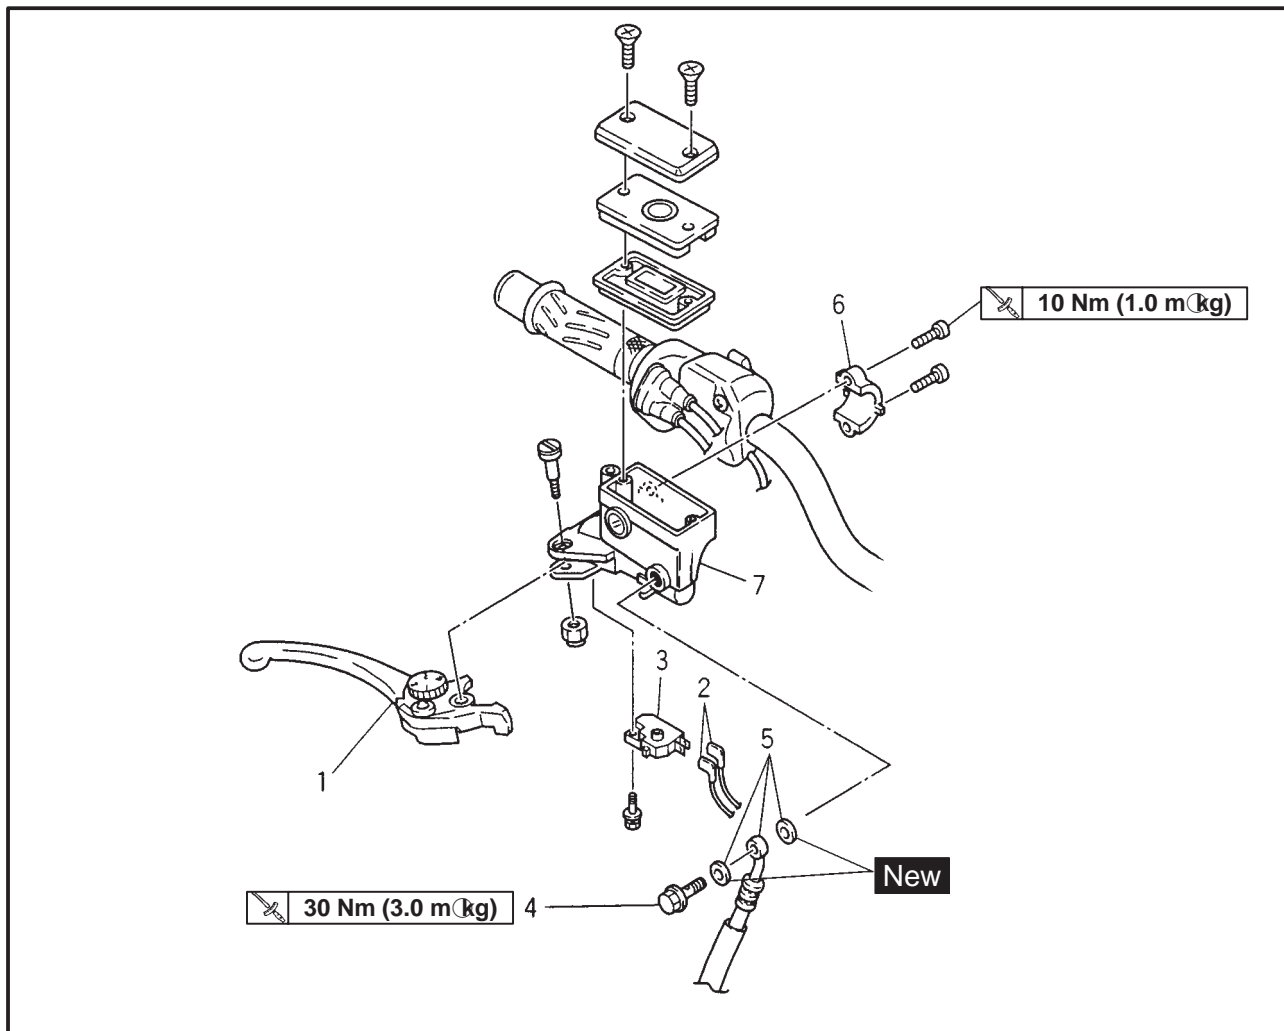


Order	Job/Part	Q'ty	Remarks
	Removing the front brake master cylinder Brake fluid		Remove the parts in the order listed. Drain
1	Brake lever	1	Refer to "DISASSEMBLING/ASSEMBLING AND INSTALLING THE REAR BRAKE MASTER CYLINDER".  For installation, reverse the removal procedure.
2	Brake switch lead	2	
3	Front brake switch	1	
4	Union bolt	1	
5	Copper washers/Brake hose	2 / 1	
6	Master cylinder bracket	1	
7	Master cylinder	1	

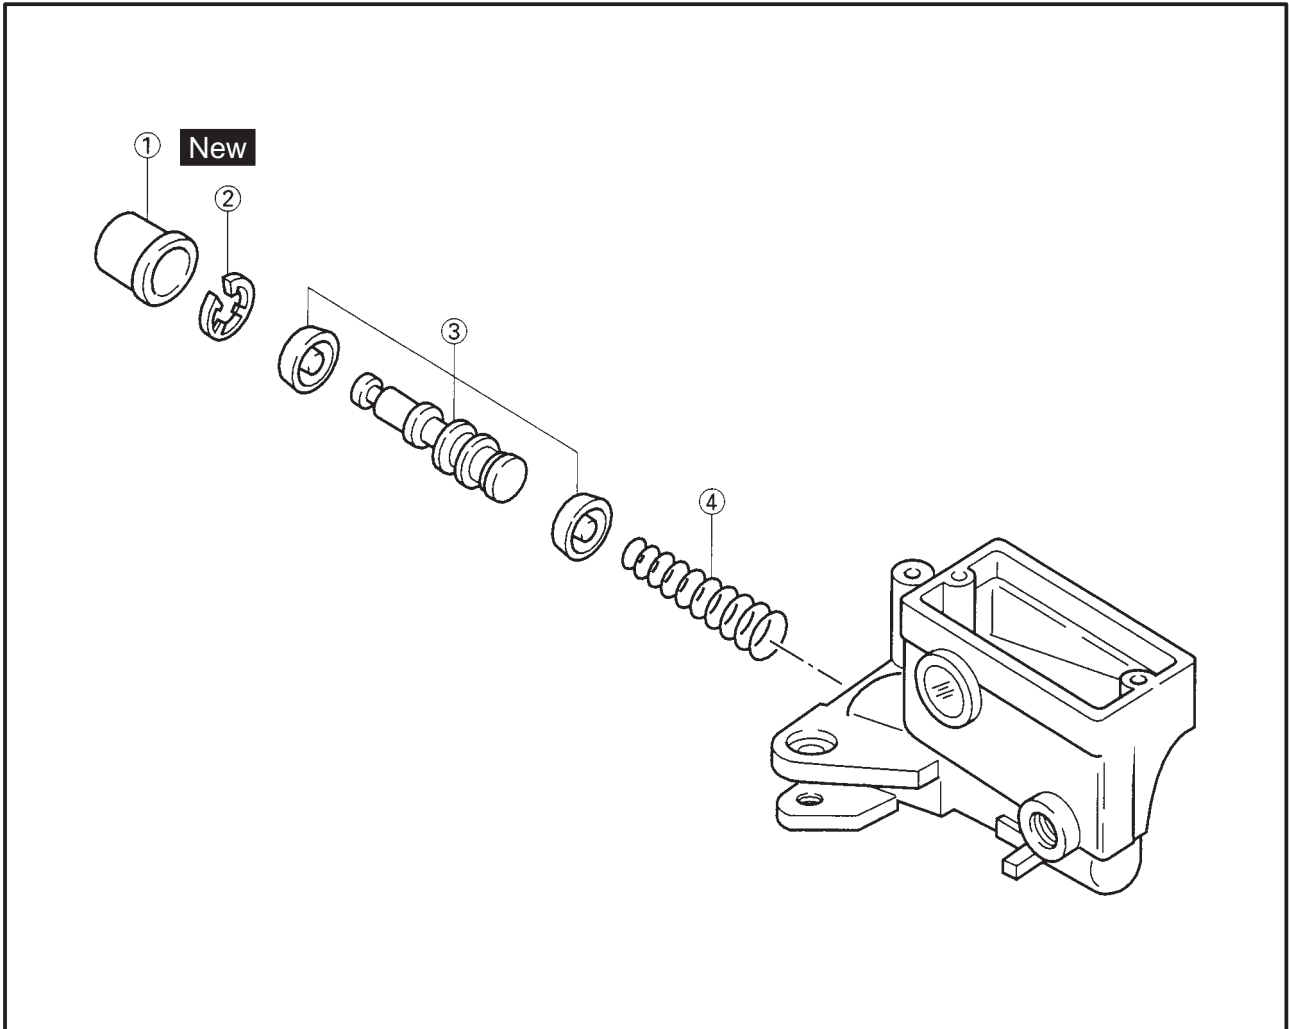

Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the front brake master cylinder</b>		Disassembly the parts in the order listed.
①	Master cylinder boot	1	
②	Circlip	1	
③	Master cylinder kit	1	
④	Spring	1	
			For assembly, reverse the disassembly procedure.


EAS00586

## REAR BRAKE MASTER CYLINDER

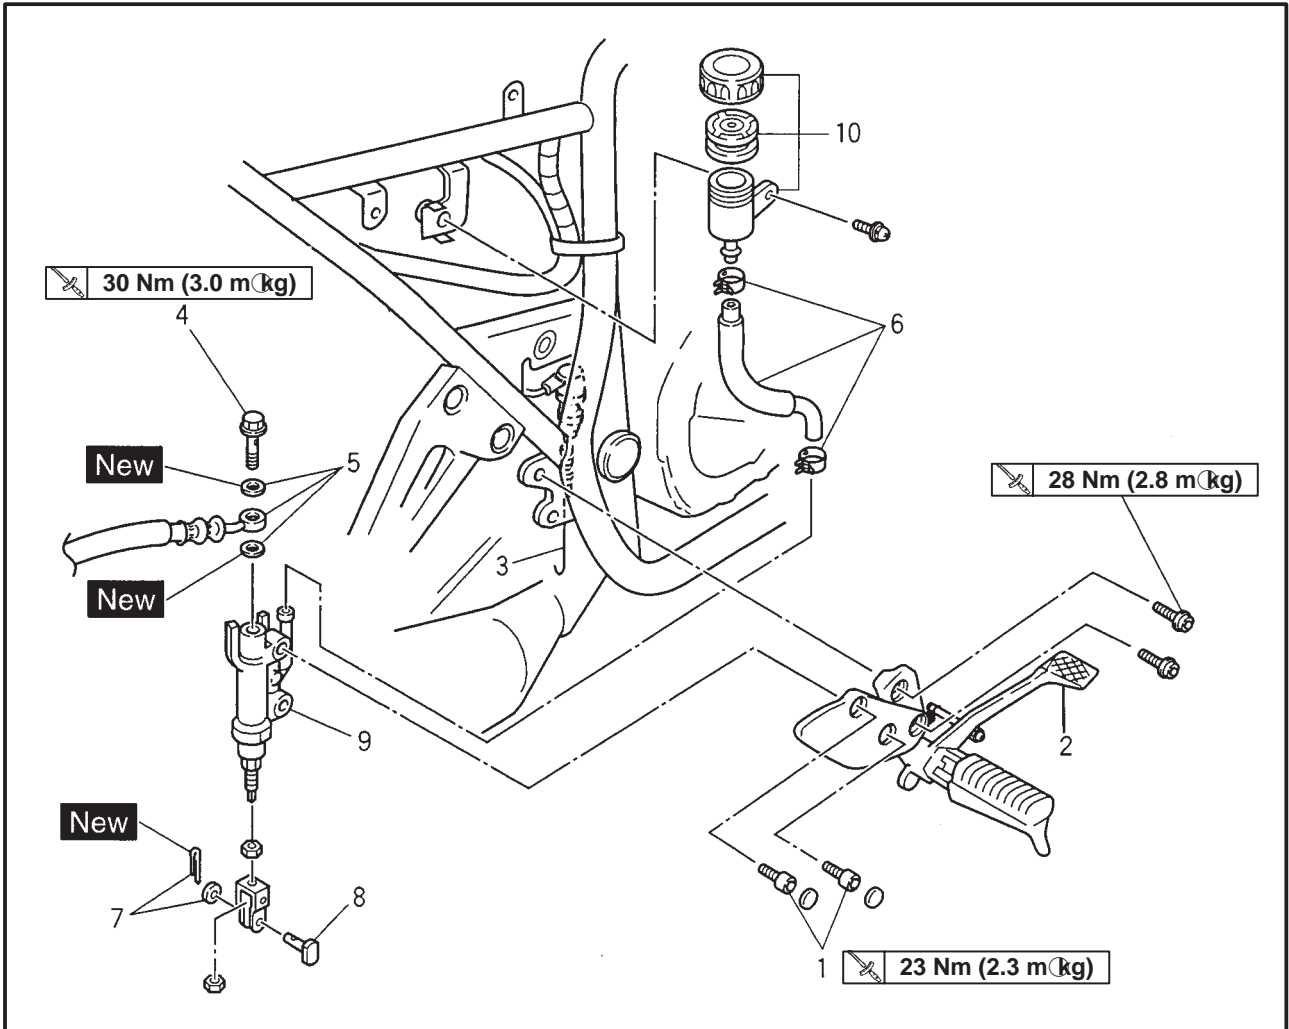

Order	Job/Part	Q'ty	Remarks
	<b>Removing the rear brake master cylinder</b>		Remove the parts in the order listed.
	Brake fluid		Drain
1	Bolts	2	
2	Brake pedal	1	
3	Brake switch	1	
4	Union bolt	1	
5	Copper washers/brake hose	2/1	
6	Clip/reservoir hose	2/1	Refer to "DISASSEMBLING/ASSEMBLING THE REAR BRAKE MASTER CYLINDER".
7	Cotter pin/copper washer	1/1	
8	Pin	1	
9	Master cylinder ass'y	1	
10	Reservoir tank	1	
			For installation, reverse removal procedure.



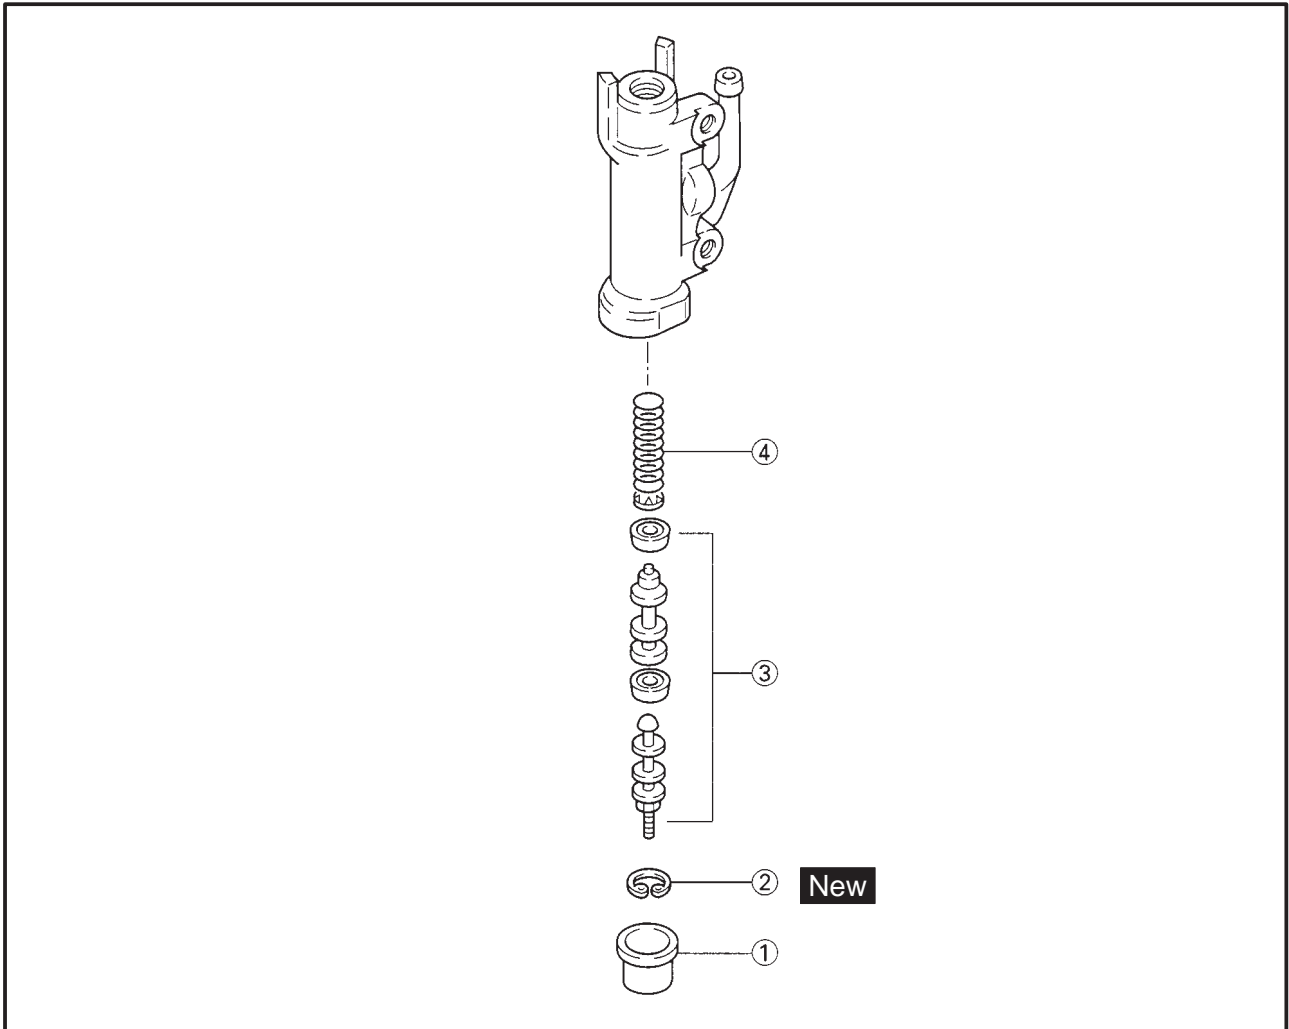


Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the rear brake master cylinder</b>		Disassembly the parts in the order listed.
①	Master cylinder boot	1	
②	Circlip	1	
③	Master cylinder kit	1	
④	Spring	1	
			For assembly, reverse the disassembly procedure.

EAS00588

## DISASSEMBLING THE FRONT BRAKE MASTER CYLINDER

**NOTE:** \_\_\_\_\_

Before disassembling the front brake master cylinder, drain the brake fluid from the entire brake system.

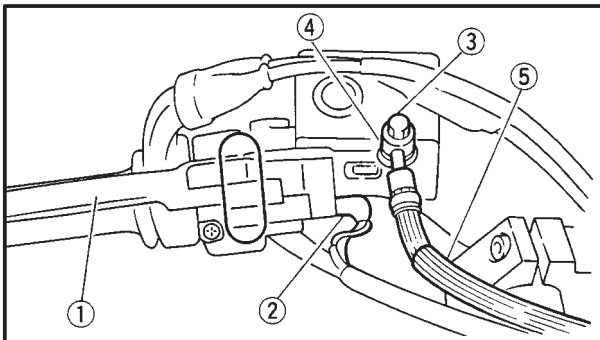

1. Remove:

○ Rear view mirror (right)

○ Brake lever ①

2. Disconnect:

○ Brake switch coupler ②  
(from the brake switch)

3. Remove:

○ Union bolt ③

○ Copper washers ④

○ Brake hose ⑤

**NOTE:** \_\_\_\_\_


To collect any remaining brake fluid, place a container under the master cylinder and the end of the brake hose.

EAS00589

## DISASSEMBLING THE REAR BRAKE MASTER CYLINDER

**NOTE:** \_\_\_\_\_

Before disassembling the rear brake master cylinder, drain the brake fluid from the entire brake system.

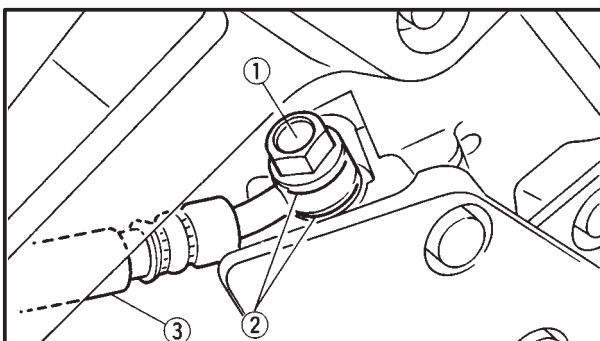

1. Remove:


○ Union bolt ①

○ Copper washers ②

○ Brake hose ③

**NOTE:** \_\_\_\_\_

To collect any remaining brake fluid, place a container under the master cylinder and the end of the brake hose.

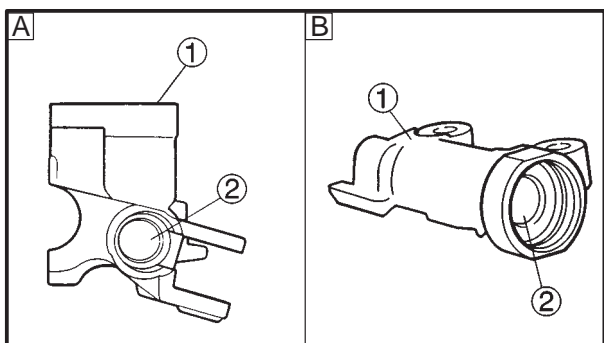

EAS00592

## CHECKING THE FRONT AND REAR BRAKE MASTER CYLINDERS


The following procedure applies to the both of the brake master cylinders.

1. Check:

- ① brake master cylinder ①  
Damage/scratches/wear → Replace.
- ① brake fluid delivery passages ②  
(brake master cylinder body)  
Obstruction → Blow out with compressed air.

**A** Front

**B** Rear

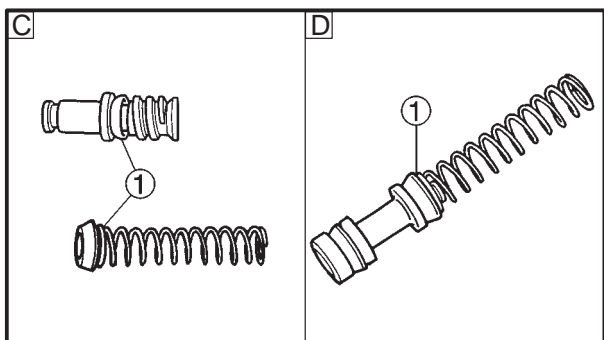


2. Check:

- ① brake master cylinder kit ①  
Damage/scratches/wear → Replace.

**C** Front

**D** Rear

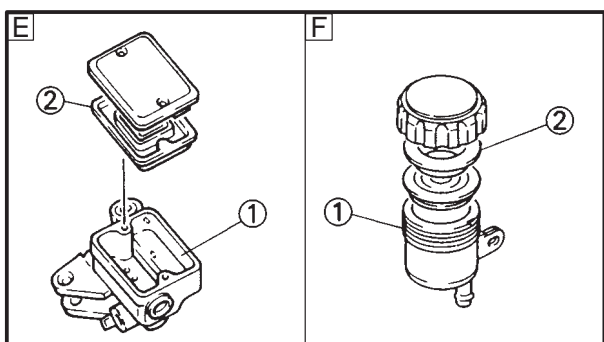

3. Check:


- ① front brake master cylinder reservoir ①  
Cracks/damage → Replace.
- ① front brake mater cylinder reservoir diaphragm ②  
Damage/wear → Replace.
- ① rear brake fluid reservoir ①  
Cracks/damage → Replace.
- ① rear brake fluid reservoir diaphragm ②  
Cracks/damage → Replace.

**E** Front

**F** Rear

4. Check:

- ① brake hoses ①  
Cracks/damage/wear → Replace.


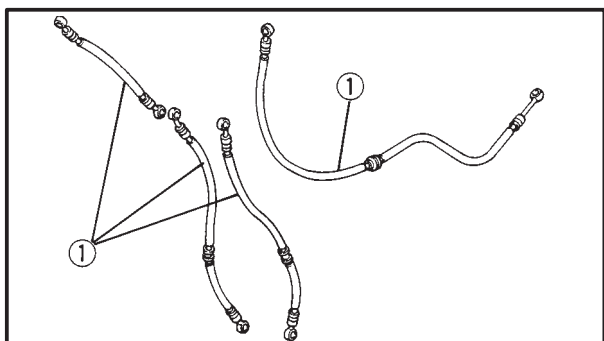


EAS00598

## ASSEMBLING AND INSTALLING THE FRONT BRAKE MASTER CYLINDER

### **⚠ WARNING**

- Ⓞ Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Ⓞ Never use solvents on internal brake components.

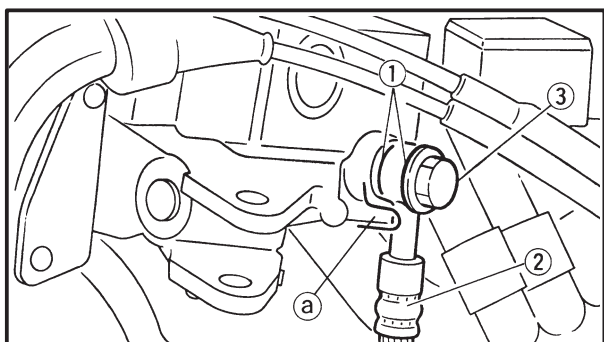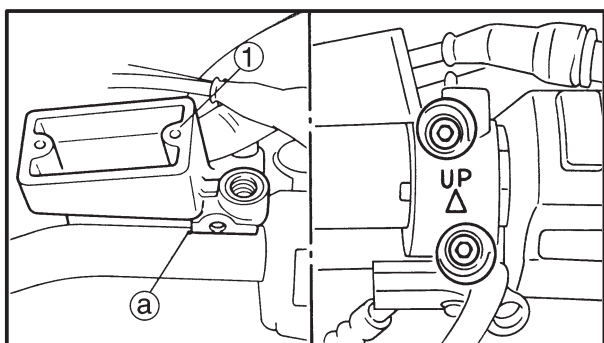

**Recommended brake fluid  
DOT 4**

1. Install:

- Ⓞ brake master cylinder ①

### **NOTE:**

- Ⓞ Install the brake master cylinder holder with the "UP" mark facing up.
- Ⓞ Align the end of the brake master cylinder holder with the punch mark (a) on the handlebar.
- Ⓞ First, tighten the upper bolt, then the lower bolt.



**Brake master cylinder bolt  
10 Nm (1.0 mⓄg)**

2. Install:

- Ⓞ copper washers (New) ①
- Ⓞ brake hose ②
- Ⓞ union bolt ③



**Union bolt  
30 Nm (3.0 mⓄg)**

### **⚠ WARNING**

Proper brake hose routing is essential to insure safe motorcycle operation. Refer to "CABLE ROUTING".

### **CAUTION:**

When installing the brake hose onto the brake master cylinder make sure that the brake pipe touches the projection (a) as shown.

### **NOTE:**

Turn the handlebar to the left and to the right to make sure that the brake hose does not touch other parts (e.g., wire harness, cables, leads). Correct if necessary.



3. Fill:

- brake master cylinder reservoir  
(with the specified amount of the recommended brake fluid)




**Recommended brake fluid  
DOT 4**

**⚠ WARNING**

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

**CAUTION:**

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

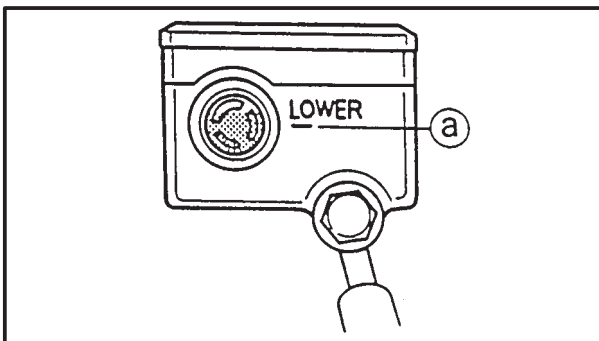

4. Bleed:


- brake system  
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.

5. Check:

- brake fluid level  
Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3.

6. Check:

- brake lever operation  
Soft or spongy feeling → Bleed the brake system.  
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.

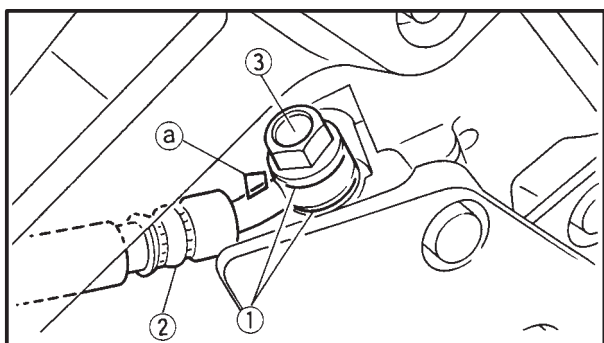

EAS00610

### ASSEMBLING THE REAR BRAKE MASTER CYLINDER

1. Install:

- Copper washers (New) ①
- Brake hose ②



Union bolt ③  
30 Nm (3.0 mkg)

### ⚠ WARNING

Proper brake hose routing is essential to insure safe motorcycle operation. Refer to "CABLE ROUTING".

### CAUTION:

When installing the brake hose onto the brake master cylinder make sure that the brake pipe touches the projection (a) as shown.

2. Fill:

- Brake fluid reservoir





Recommended brake fluid  
DOT 4

### ⚠ WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

### CAUTION:

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

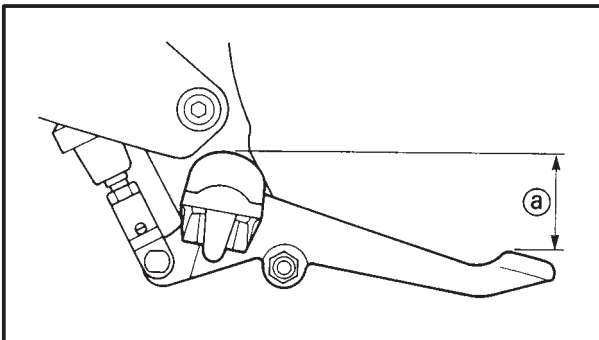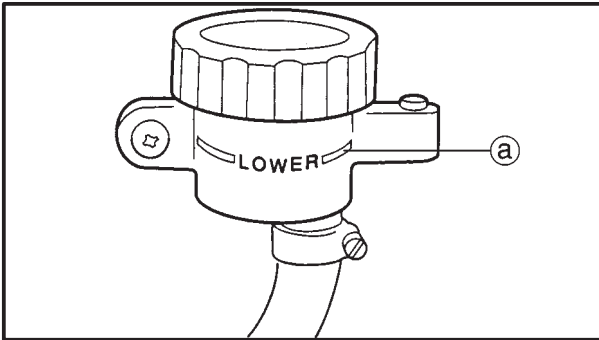

3. Bleed:  
 ○ brake system  
 Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.

4. Check:  
 ○ brake fluid level  
 Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3.

5. Adjust:  
 ○ brake pedal position (a)  
 Refer to “ADJUSTING THE REAR BRAKE” in chapter 3.




**Brake pedal position (below the top of the rider footrest) (a)  
 45 mm**

6. Adjust:  
 ○ rear brake light operation timing  
 Refer to “ADJUSTING THE REAR BRAKE LIGHT SWITCH” in chapter 3.


EAS00613

## FRONT BRAKE CALIPER

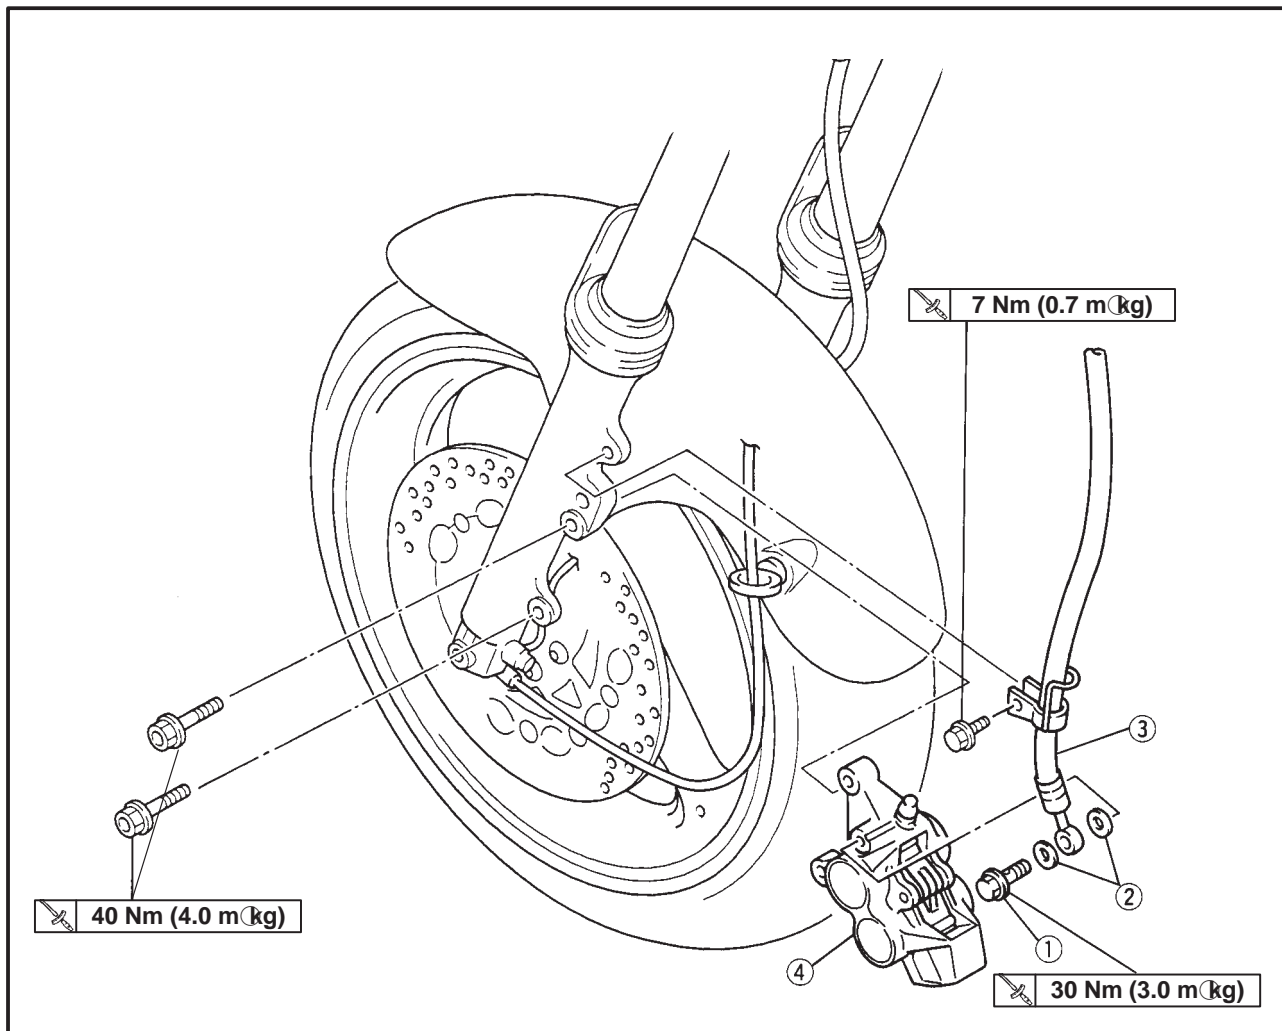

Order	Job/Part	Q'ty	Remarks
	<b>Removing the front brake calipers</b>		Remove the parts in the order listed.
	Brake fluid		Drain
1	Union bolts	2	Refer to "DISASSEMBLING/ ASSEMBLING AND INSTALLING THE FRONT BRAKE CALIPERS".
2	Copper washers	4	
3	Brake hoses	2	
4	Caliper ass'y	2	
			For installation, reverse the removal procedure.




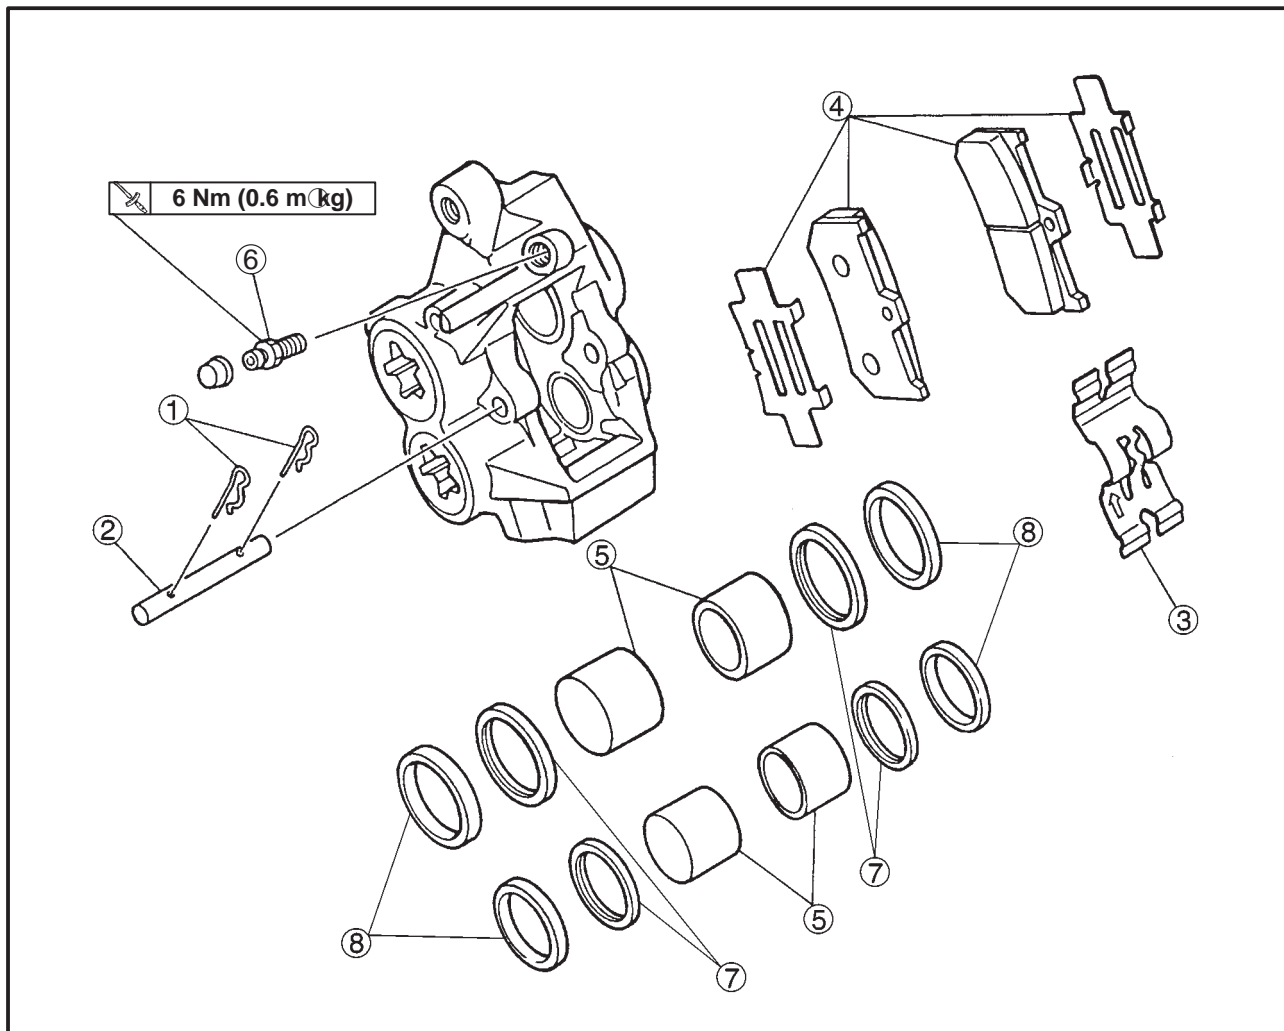


Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the front brake calipers.</b> The following procedure applies to both of the front brake calipers.		Disassembly the parts in the order listed.
①	Clips	2	Refer to "DISASSEMBLING THE FRONT BRAKE CALIPERS".  For assembly, reverse the disassembly procedure.
②	Pad pin	1	
③	Pad spring	1	
④	Brake pads/shims	2/2	
⑤	Caliper pistons	4	
⑥	Bleed screw	1	
⑦	Dust seals	4	
⑧	Piston seals	4	

ESA00616

## REAR BRAKE CALIPER

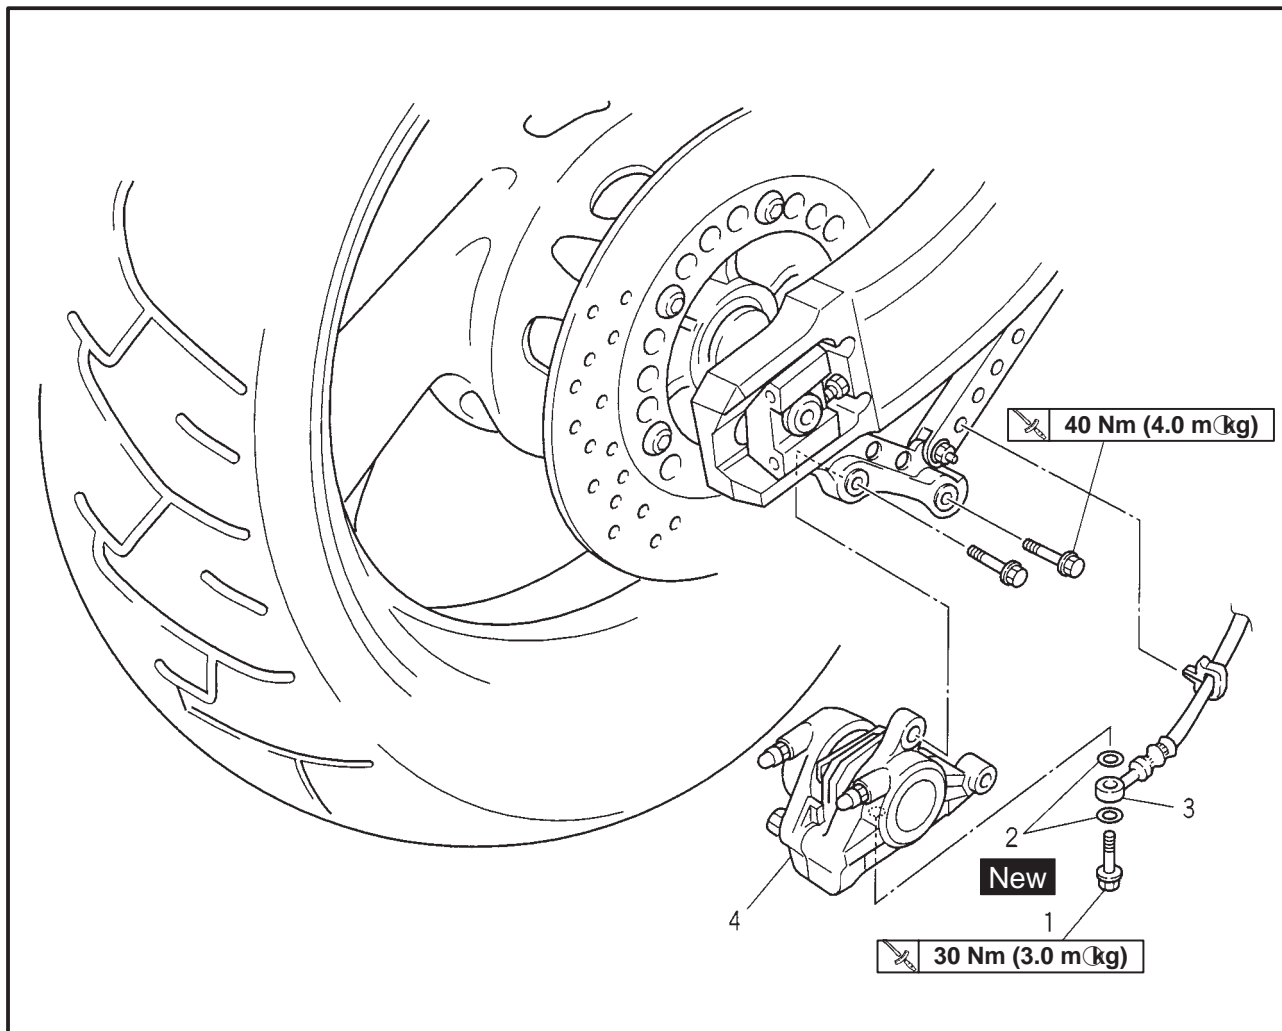

Order	Job/Part	Q'ty	Remarks
	<b>Removing the rear brake caliper</b>		Remove the parts in the order listed. Drain
1	Brake fluid	1	Refer to "DISASSEMBLING/ ASSEMBLING AND INSTALLING THE REAR BRAKE CALIPER".
1	Union bolt	1	
2	Copper washers	2	
3	Brake hose	1	
4	Caliper ass'y	1	For installation, reverse the removal procedure.

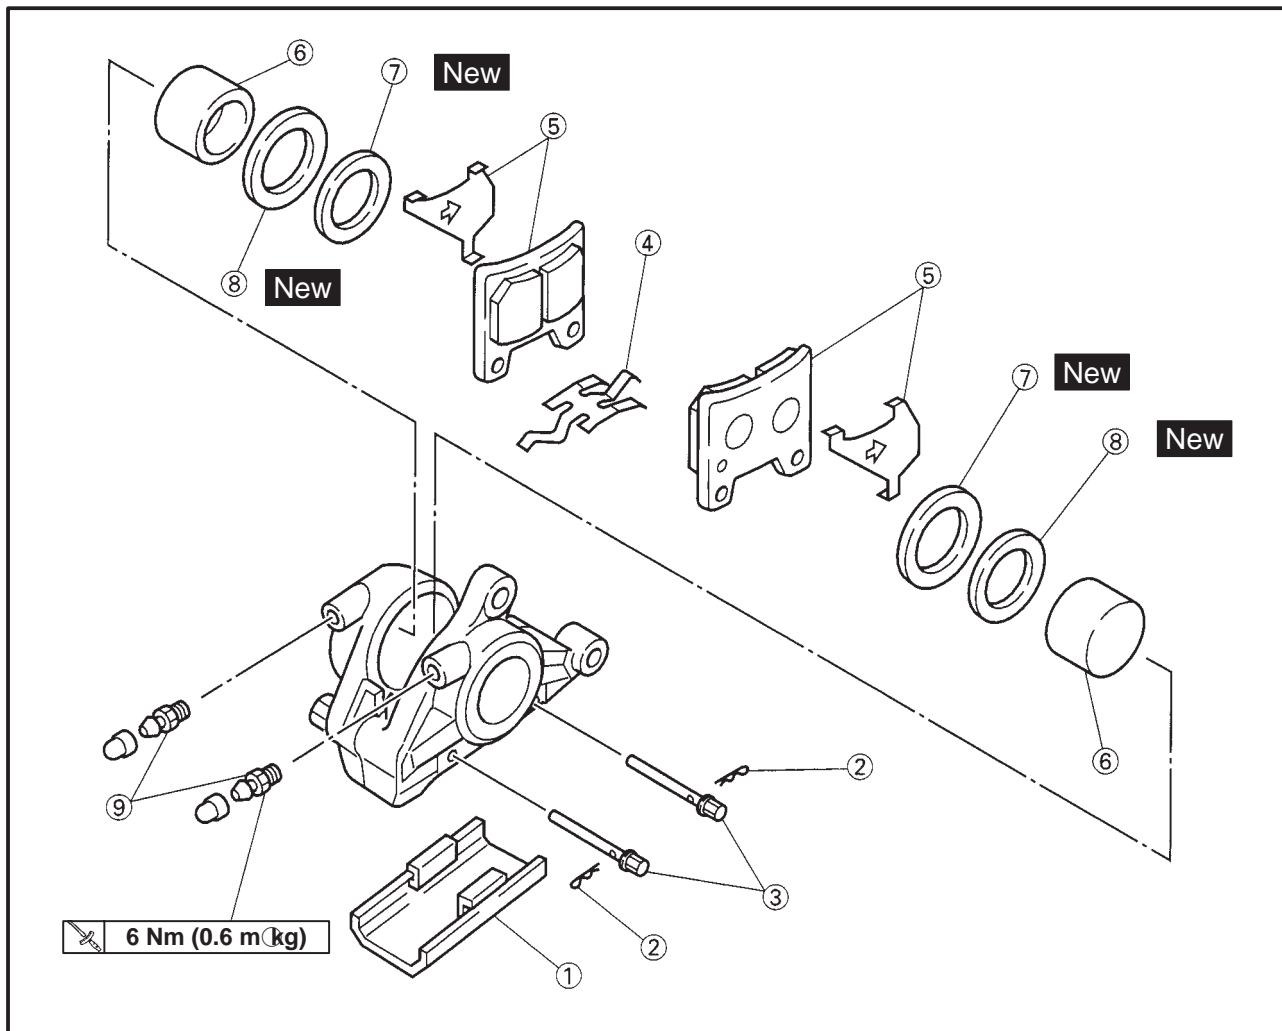

Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the rear brake caliper</b>		Disassembly the parts in the order listed.
1	Cover	1	Refer to "DISASSEMBLING THE REAR BRAKE CALIPER."  For assembly, reverse the disassembly procedure.
2	Clips	2	
3	Pad pins	2	
4	Pad support	1	
5	Brake pads/shims	2/2	
6	Caliper pistons	2	
7	Dust seals	2	
8	Piston seals	2	
9	Bleed screws	2	


EAS00625

## DISASSEMBLING THE FRONT BRAKE CALIPERS

The following procedure applies to both of the brake calipers.

**NOTE:** \_\_\_\_\_

Before disassembling either brake caliper, drain the brake fluid from the entire brake system.

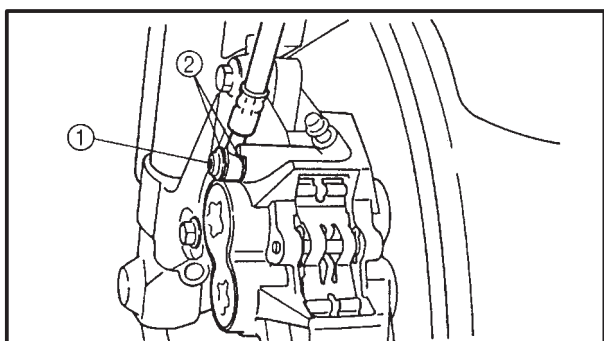


1. Remove:

- Union bolt ①
- Copper washers ②
- Brake hose


**NOTE:** \_\_\_\_\_

Put the end of the brake hose into a container and pump out the brake fluid carefully.

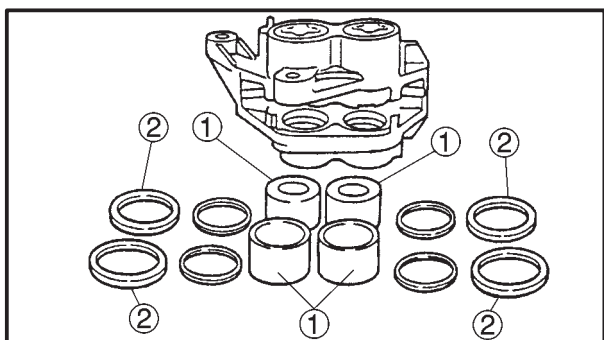

2. Remove:

- Brake caliper pistons ①
- Brake caliper piston seals ②

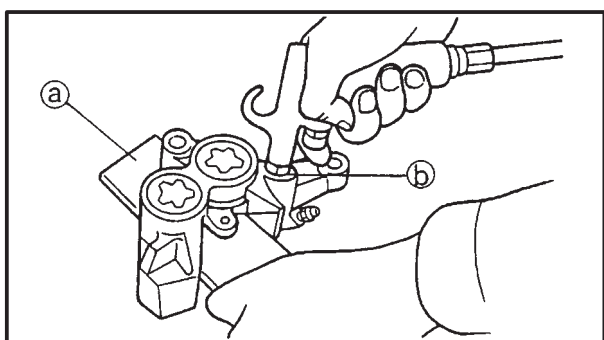

- a. Secure the right side brake caliper pistons with a piece of wood (a).
- b. Blow compressed air into the brake hose joint opening (b) to force out the left side pistons from the brake caliper.
- c. Remove the brake caliper piston seals.
- d. Repeat the previous steps to force out the right side pistons from the brake caliper.

**⚠ WARNING** \_\_\_\_\_

- Never try to pry out the brake caliper pistons.
- Do not loosen the bolts.







EAS00633

## CHECKING THE FRONT AND REAR BRAKE CALIPERS

Recommended brake component replacement schedule	
Brake pads	If necessary
Piston seals	Every two years
Brake hoses	Every two years
Brake fluid	Every two years and whenever the brake is disassembled.

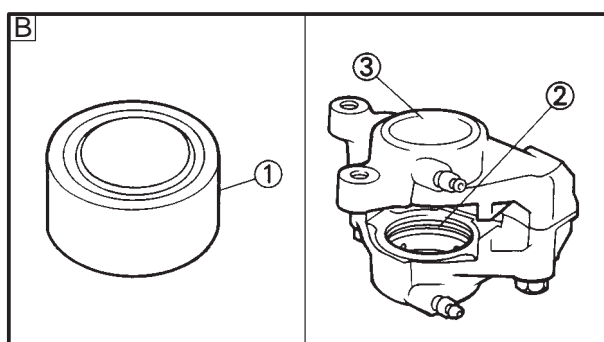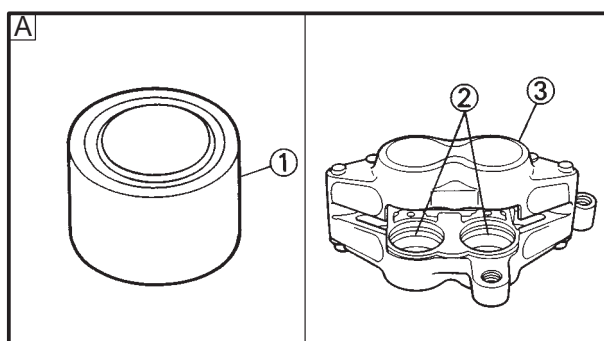

### 1. Check:

- brake caliper pistons ①  
Rust/scratches/wear → Replace the brake caliper.
- brake caliper cylinders ②  
Scratches/wear → Replace the brake caliper.
- brake calipers ③  
Cracks/damage → Replace.
- brake fluid delivery passages (brake caliper body)  
Obstruction → Blow out with compressed air.

### **⚠ WARNING**

Whenever a brake caliper is disassembled, replace the brake caliper piston seals.

**A** Front

**B** Rear

EAS00638


## ASSEMBLING AND INSTALLING THE FRONT BRAKE CALIPERS

The following procedure applies to both of the brake calipers.

### **⚠ WARNING**


- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.

- Ⓞ Never use solvents on internal brake components as they will cause the piston seals to swell and distort.
- Ⓞ Whenever a brake caliper is disassembled, replace the brake caliper piston seals.

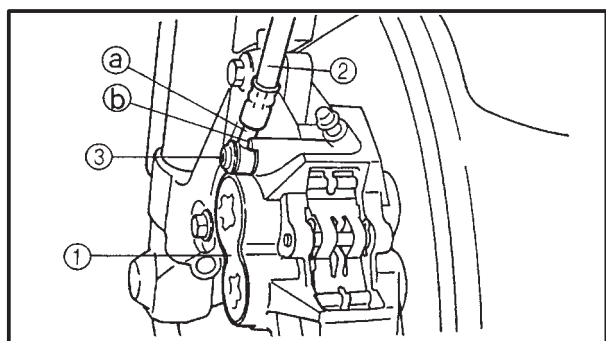

	<b>Recommended brake fluid DOT 4</b>
---	--

1. Install:
  - Ⓞ brake caliper ① (temporarily)
  - Ⓞ copper washers (New)
  - Ⓞ brake hose ②
  - Ⓞ union bolt ③

	<b>Union bolt 30 Nm (3.0 mⓀg)</b>
---	---------------------------------------

**⚠ WARNING**


Proper brake hose routing is essential to insure safe motorcycle operation. Refer to “CABLE ROUTING”.


**CAUTION:**

When installing the brake hose onto the brake caliper ①, make sure that the brake pipe ① touches the projection ② on the brake caliper.

2. Remove:
  - Ⓞ brake caliper
3. Install:
  - Ⓞ brake pads
  - Ⓞ brake pad springs
  - Ⓞ brake caliper retaining bolt
  - Ⓞ brake caliper
  - Ⓞ brake hose holder

Refer to “REPLACING THE BRAKE PADS”.

	<b>Brake caliper bolt 40 Nm (4.0 mⓀg)</b>
---	---

	<b>Brake hose holder bolt 7 Nm (0.7 mⓀg)</b>
---	--

4. Fill:
  - Ⓞ brake master cylinder reservoir (with the specified amount of the recommended brake fluid)




Recommended brake fluid  
DOT 4

### ⚠ WARNING

- ① Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- ① Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- ① When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

### CAUTION:

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

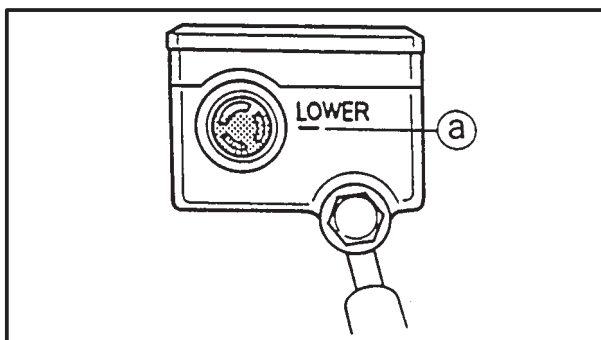

5. Bleed:
  - ① brake system  
Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.
6. Check:
  - ① brake fluid level  
Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.
7. Check:
  - ① brake lever operation  
Soft or spongy feeling → Bleed the brake system.  
Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.



EAS00642

## ASSEMBLING AND INSTALLING THE REAR BRAKE CALIPER

### **⚠ WARNING**


- ⓘ Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- ⓘ Never use solvents on internal brake components as they will cause the piston seals to swell and distort.
- ⓘ Whenever a brake caliper is disassembled, replace the brake caliper piston seals.

	<b>Recommended brake fluid</b> <b>DOT 4</b>
--	--

1. Install:

- ⓘ brake caliper ①  
(temporarily)
- ⓘ copper washers **New**
- ⓘ brake hose ②
- ⓘ union bolt ③

	<b>30 Nm (3.0 m(kg))</b>
--	--------------------------

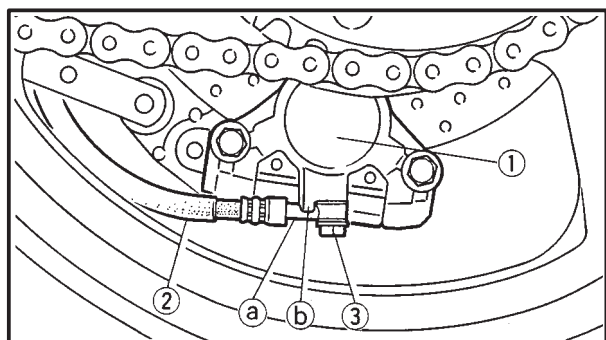

### **⚠ WARNING**

Proper brake hose routing is essential to insure safe motorcycle operation. Refer to “CABLE ROUTING”.

### **CAUTION:**

When installing the brake hose onto the brake caliper ①, make sure that the brake pipe ① touches the projection ② on the brake caliper.

2. Remove:

- ⓘ brake caliper

3. Install:

- ⓘ brake pads
- ⓘ brake pad springs
- ⓘ brake caliper
- ⓘ brake hose holder

	<b>40 Nm (4.0 m(kg))</b>
--	--------------------------

	<b>7 Nm (7.0 m(kg))</b>
--	-------------------------

Refer to “REPLACING THE REAR BRAKE PADS”.



4. Fill:

- brake fluid reservoir  
(with the specified amount of the recommended brake fluid)

	<b>Recommended brake fluid DOT 4</b>
--	--

**⚠ WARNING**

- **Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.**
- **Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.**
- **When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.**

**CAUTION:**


**Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.**

5. Bleed:

- brake system  
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.

6. Check:

- brake fluid level  
Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3.

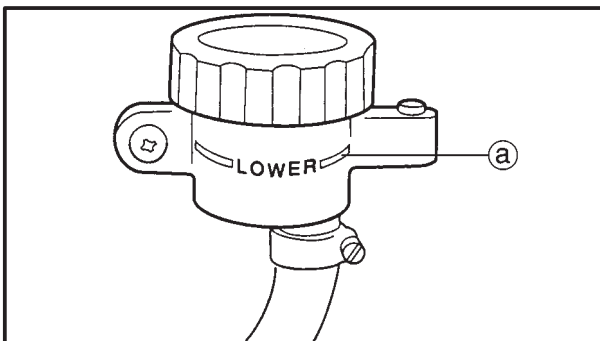


7. Check:


- brake pedal operation  
Soft or spongy feeling → Bleed the brake system.  
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.

EAS00647

FRONT FORK

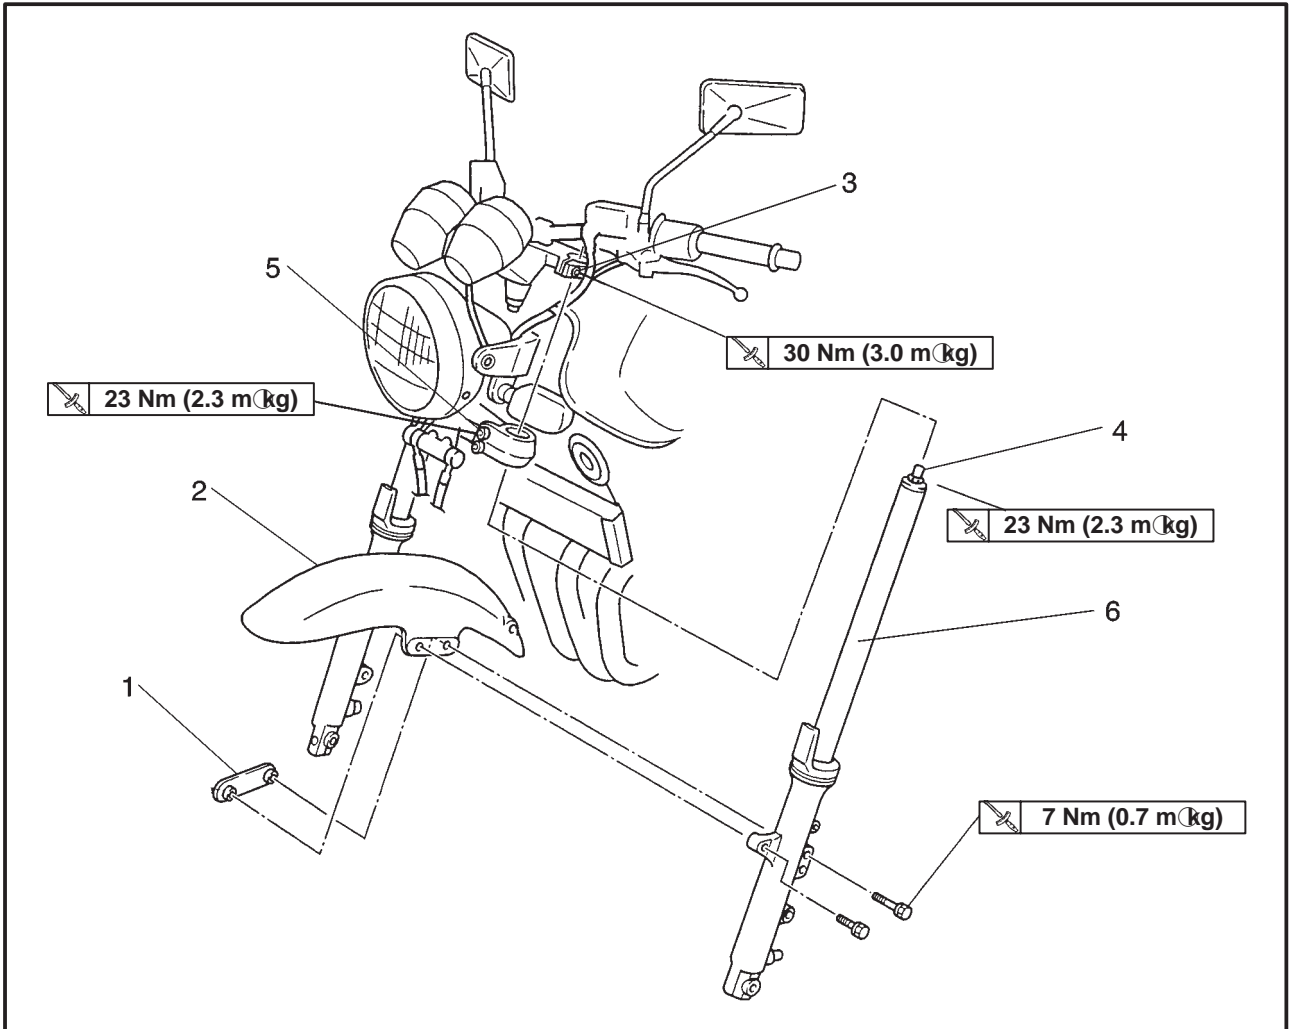


Order	Job/Part	Q'ty	Remarks
	<b>Removing the front fork</b>		
	Front wheel		Remove the parts in the order listed. Refer to "FRONT WHEEL AND BRAKE DISCS".
	Brake calipers		
1	Brackets	2	Refer to "REMOVING/INSTALLING THE FRONT FORK LEGS".
2	Front fender	1	
3	Bolts (upper bracket)	2	
4	Cap bolts	2	
5	Bolts (lower bracket)	4	
6	Front fork (left/right)	1/1	
			For installation, reverse the removal procedure.

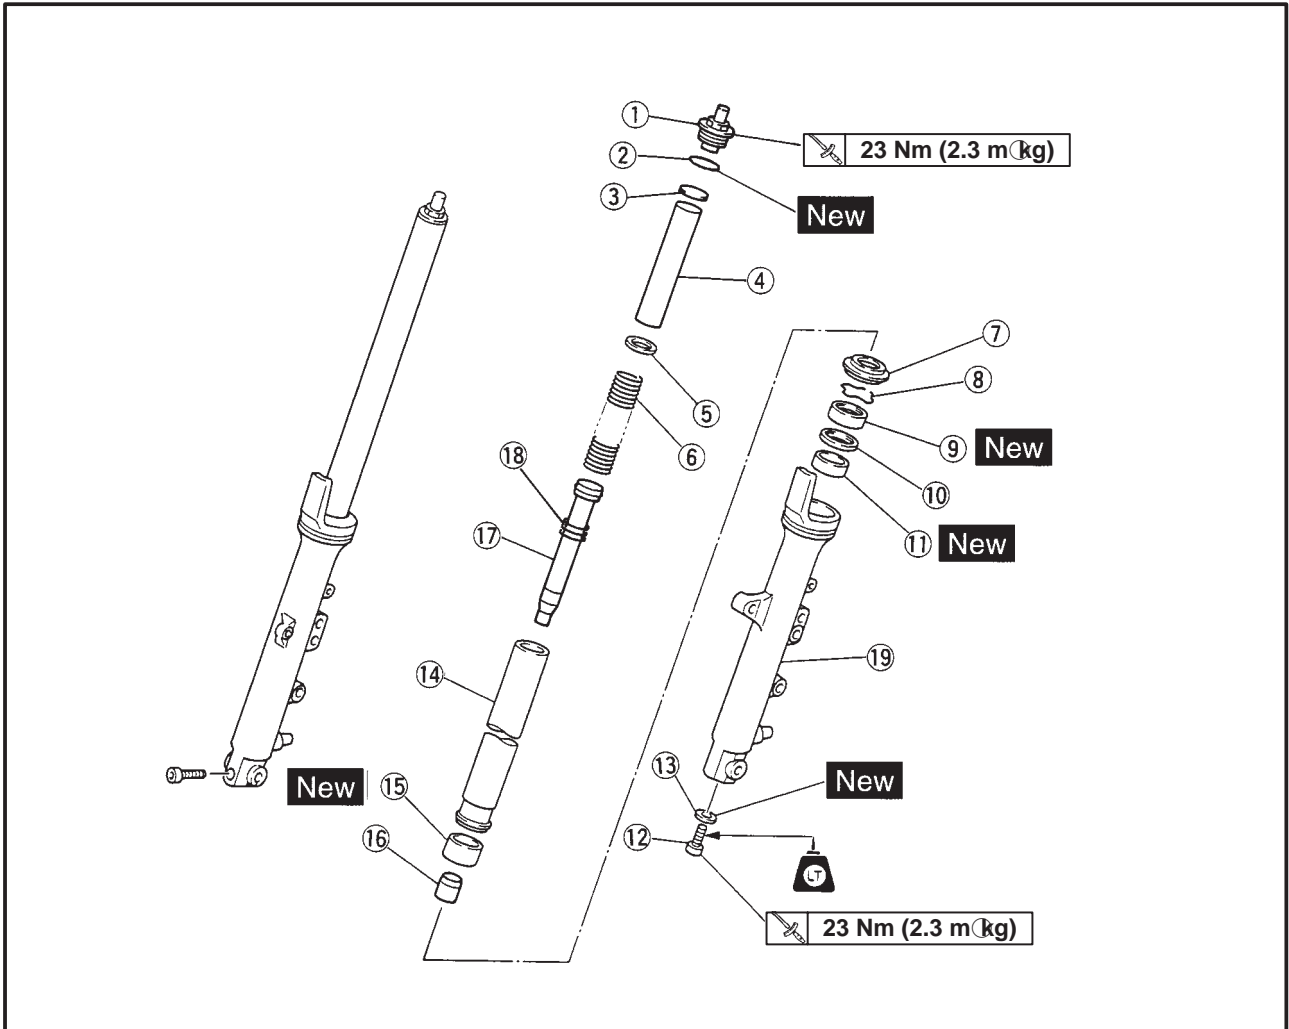

Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the front fork</b>		Disassembly the parts in the order listed.
①	Cap bolts	2	Refer to "DISASSEMBLING/ ASSEMBLING THE FRONT FORK LEGS".
②	O-rings	2	
③	Plates	2	
④	Spacers	2	
⑤	Spring seats	2	
⑥	Fork springs	2	
⑦	Dust seals	2	
⑧	Oil seal clips	2	
⑨	Oil seals	2	
⑩	Seal spacers	2	
⑪	Outer tube bushings	2	
⑫	Bolts (damper rod)	2	
⑬	Gaskets	2	

# FRONT FORK

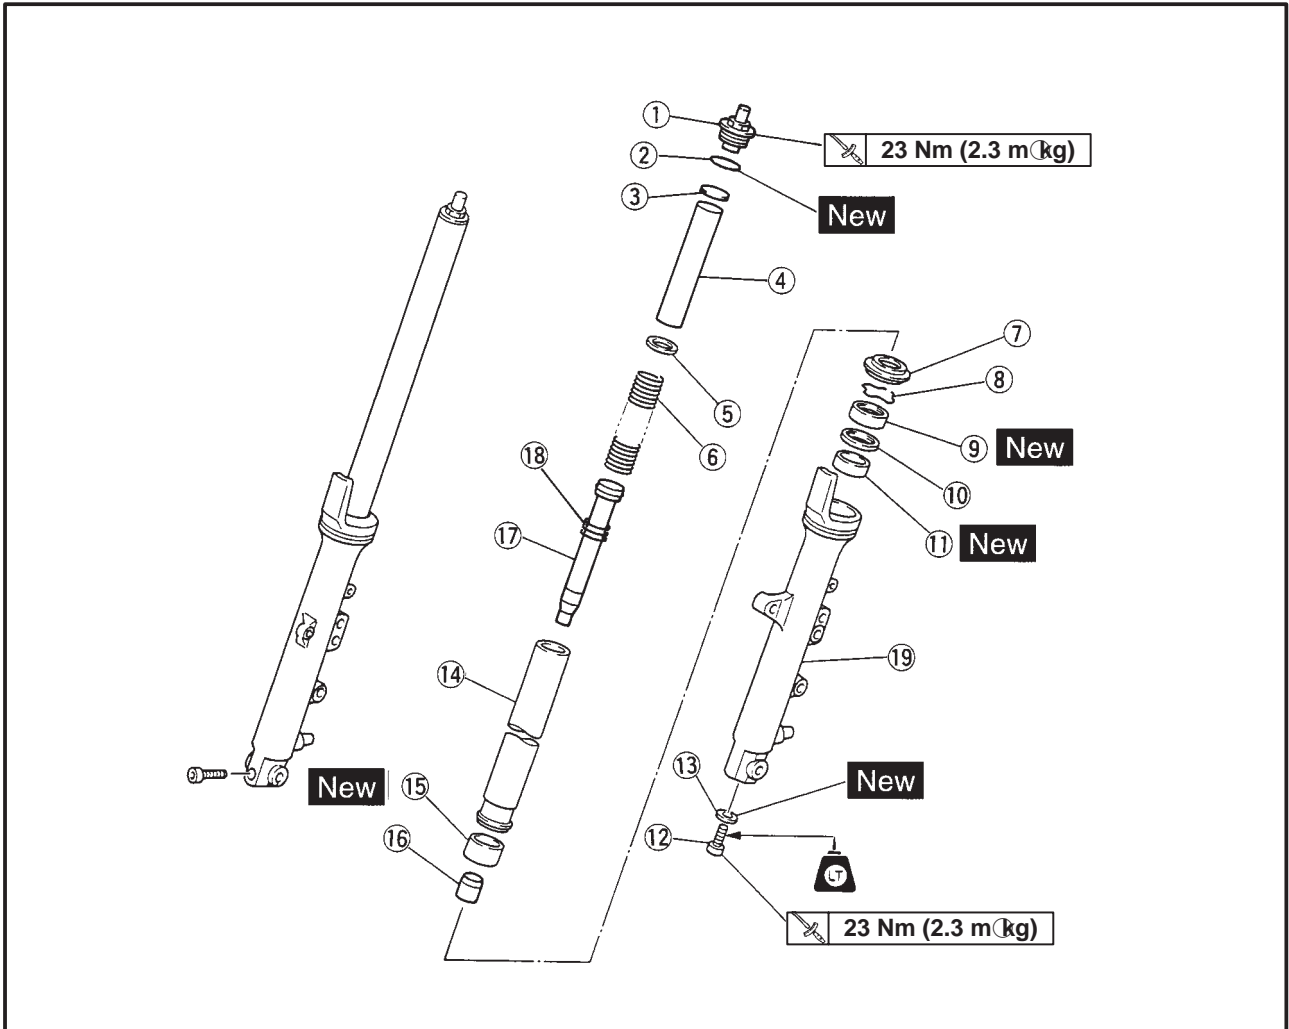

Order	Job/Part	Q'ty	Remarks
⑭	Inner tubes	2	Refer to "DISASSEMBLING/ ASSEMBLING THE FRONT FORK LEGS".  For assembly, reverse the disassembly procedure.
⑮	Inner tube bushings	2	
⑯	Oil flow stoppers	2	
⑰	Damper rods	2	
⑱	Damper rod springs	2	
⑲	Outer tubes	2	



EAS00649

## REMOVING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.


1. Stand the motorcycle on a level surface.

### **⚠ WARNING**

Securely support the motorcycle so that there is no danger of it falling over.

### NOTE:

Place the motorcycle on a suitable stand so that the front wheel is elevated.

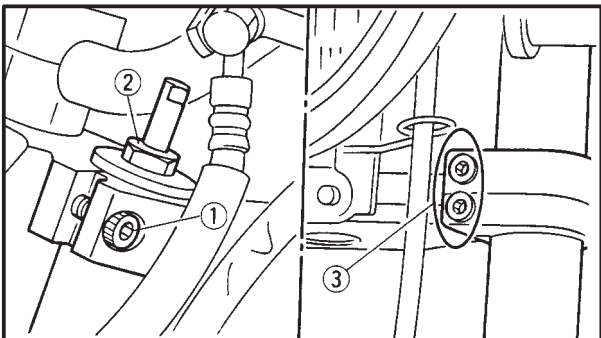


2. Loosen:

- upper bracket pinch bolt ①
- cap bolt ②
- lower bracket pinch bolt ③

### **⚠ WARNING**

Before loosening the upper and lower bracket pinch bolts, support the front fork leg.

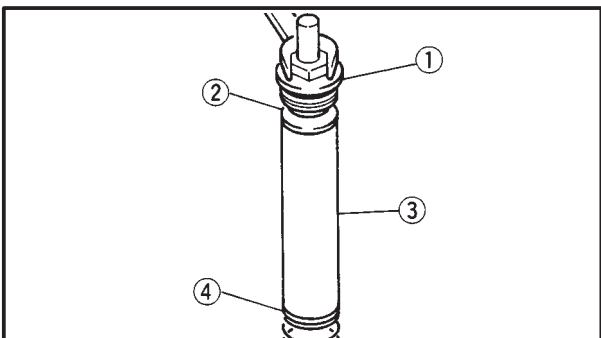

3. Remove:

- front fork leg

EAS00653

## DISASSEMBLING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

1. Loosen the spring preload adjuster fully.





2. Remove:

- cap bolt ①
- plate ②
- spacer ③
- spring seat ④
- spring

3. Drain

- fork oil



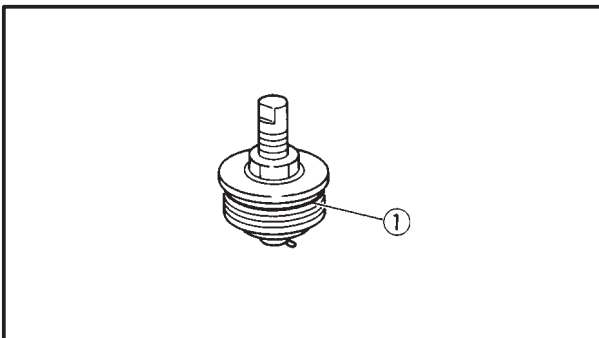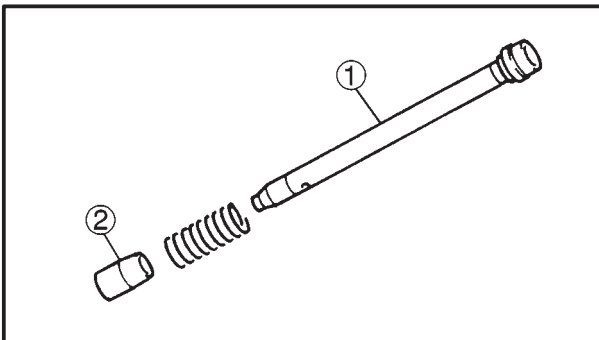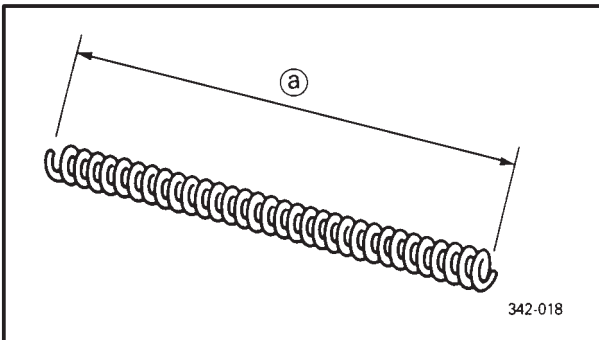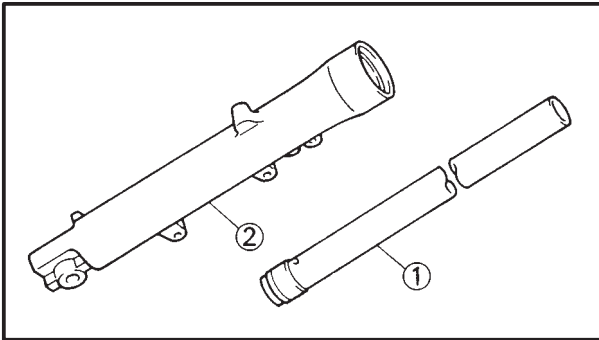

EAS00657

## CHECKING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

1. Check:

- Inner tube ①
- Outer tube ②

Bends/damage/scratches → Replace.

### ⚠ WARNING

**Do not attempt to straighten a bent inner tube as this may dangerously weaken it.**

2. Measure:

- Spring free length (a)

Over the specified limit → Replace.



**Spring free length limit  
395 mm**

3. Check:

- Damper rod ①

Damage/wear → Replace.

Obstruction → Blow out all of the oil passages with compressed air.

- Oil flow stopper ②

Damage → Replace.

### CAUTION:

○ The front fork leg has a built-in damper adjusting rod and a very sophisticated internal construction, which are particularly sensitive to foreign material.

○ When disassembling and assembling the front fork leg, do not allow any foreign material to enter the front fork.

4. Check:

- Cap bolt O-ring ①

Damage/wear → Replace.



EB703703

## ASSEMBLING THE FRONT FORK LEGS



The following procedure applies to both of the front fork legs.

### **WARNING**

- **Make sure that the oil levels in both front fork legs are equal.**
- **Uneven oil levels can result in poor handling and a loss of stability.**

### **NOTE:**

- When assembling the front fork leg, be sure to replace the following parts:
  - inner tube bushing
  - outer tube bushing
  - oil seal
  - dust seal
- Before assembling the front fork leg, make sure that all of the components are clean.

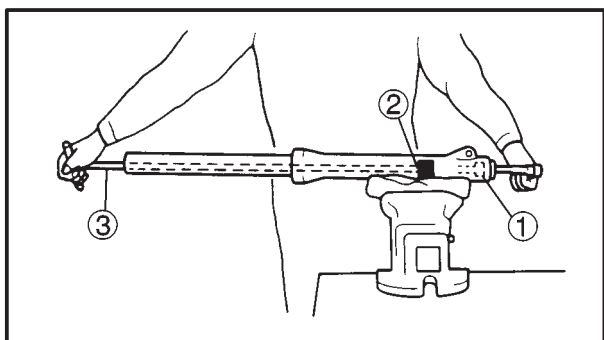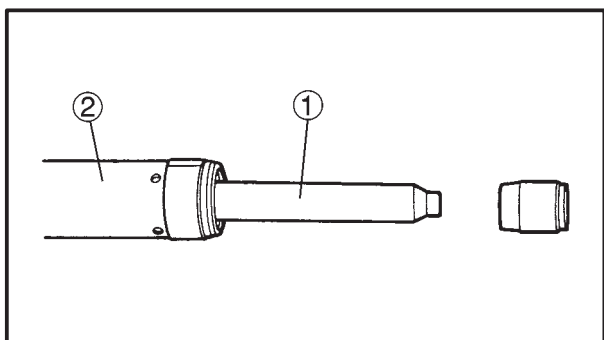

1. Install:

- damper rod ①

### **CAUTION:**

**Allow the damper rod to slide slowly down the inner tube ② until it protrudes from the bottom of the inner tube. Be careful not to damage the inner tube.**

2. Lubricate:


- inner tube's outer surface



**Recommended lubricant**  
Yamaha fork and shock oil 10W or equivalent

3. Tighten:


- damper rod bolt ①



**Damper rod bolt**  
30 Nm (3.0 m<sup>kg</sup>)  
**LOCTITE®**

### **NOTE:**





While holding the damper rod with the damper rod holder ② and T-handle ③, tighten the damper rod bolt.



**Damper rod holder (30 mm)**  
90890-01327  
**T-handle**  
90890-01326

# FRONT FORK

CHAS

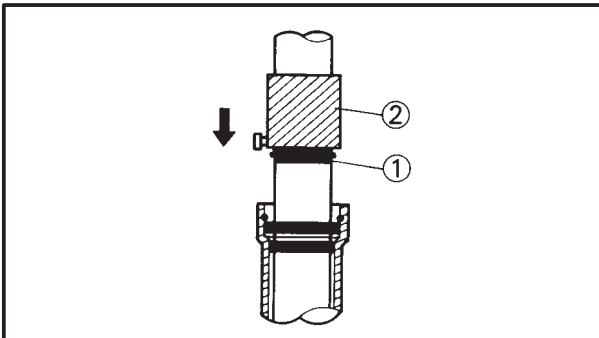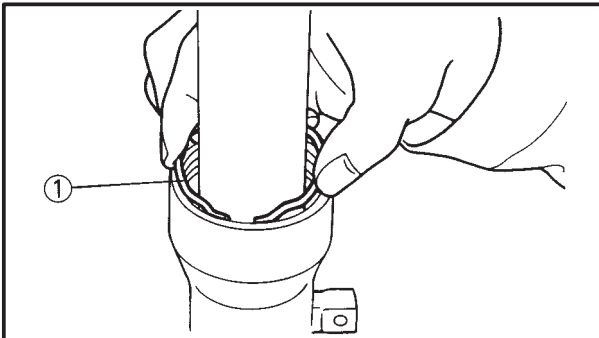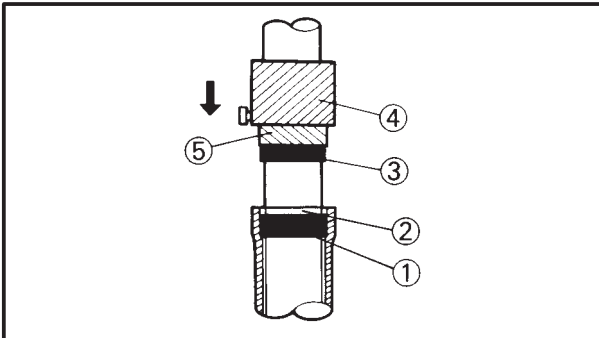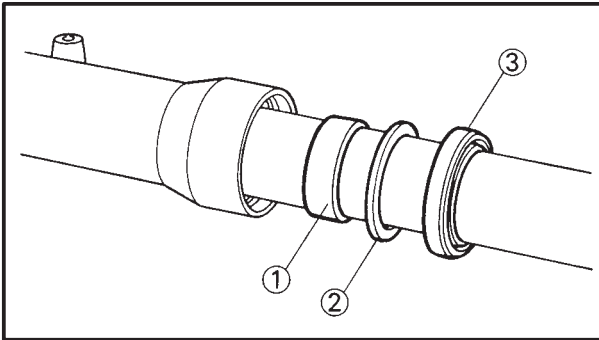

4. Install:

○ Outer tube bushing ①

○ Seal spacer ②

○ Oil seal ③

(with the fork seal driver weight ④ and adapter ⑤)



**Fork seal driver weight**

**90890-01367**

**Adapter**

**90890-01374**

**CAUTION:** \_\_\_\_\_

**Make sure that the numbered side of the oil seal faces up.**

**NOTE:** \_\_\_\_\_

○ Before installing the oil seal, apply lithium soap base grease onto its lips.

○ Apply fork oil onto the outer surface of the inner tube.

5. Install:

○ Oil seal clip ①

**NOTE:** \_\_\_\_\_

Adjust the oil seal clip so that it fits into the outer tube groove.

6. Install:

○ Dust seal ①

(with the fork seal driver weight) ②




7. Fully compress the front fork leg.
8. Fill:
  - front fork leg  
(with the specified amount of the recommended fork oil)



**Quantity (each front fork leg)**  
**538 cm<sup>3</sup>**  
**Recommended oil**  
**Fork oil 10w**  
**or equivalent**

**CAUTION:** \_\_\_\_\_

- **Be sure to use the recommended fork oil. Other oils may have an adverse effect on front fork performance.**
- **When disassembling and assembling the front fork leg, do not allow any foreign material to enter the front fork.**

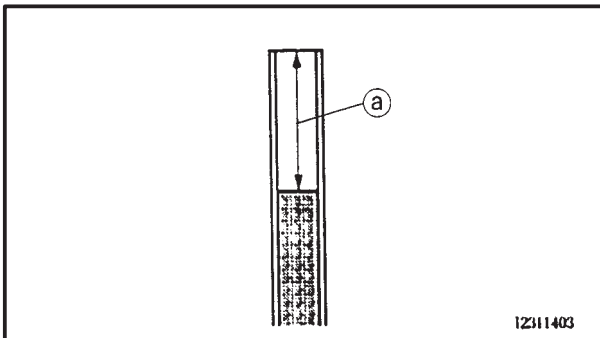


9. After filling up, slowly pump the fork up and down to distribute the fork oil
10. Measure:
  - Oil level (a)  
Out of specification → Adjust.



**Oil level:**  
**137 mm**  
**(from the top of the inner tube fully compressed and without the fork spring)**

**NOTE:** \_\_\_\_\_

Hold the fork in an upright position.


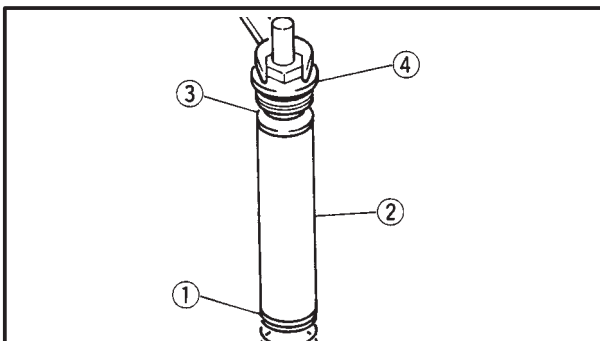


11. Install:
  - fork spring
  - spring seat ①
  - spacer ②
  - plate ③
  - cap bolt ④



**NOTE:**

- Install the fork spring with its smaller pitch upward.
- Before installing the cap bolt, apply grease to the O-ring.
- Temporarily tighten the cap bolt.

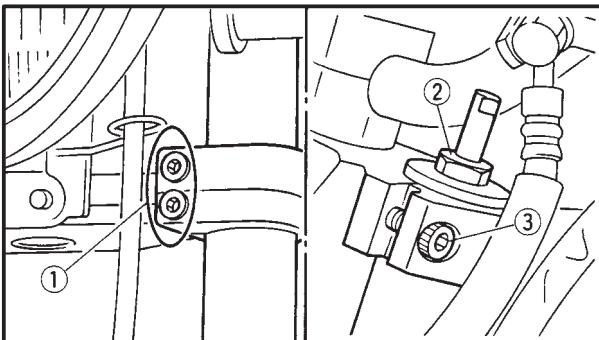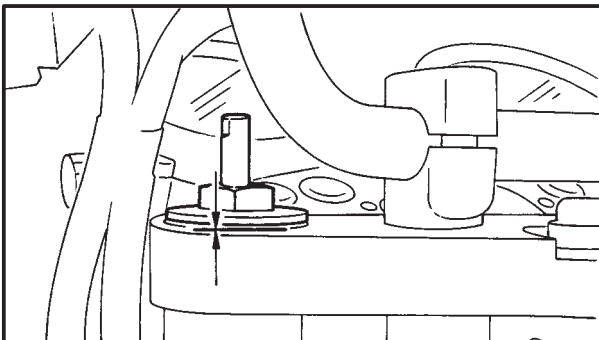

EAS00662

**INSTALLING THE FRONT FORK LEGS**

The following procedure applies to both of the front fork legs.

1. Install:

- front fork leg  
Temporarily tighten the upper and lower bracket pinch bolts.

**NOTE:**

Make sure that the inner fork tube is flush with the top of the upper bracket.

2. Tighten:

- lower bracket pinch bolt ①
- cap bolt ②
- upper bracket pinch bolt ③



**Lower bracket pinch bolt**  
23 Nm (2.3 mkg)

**Cap bolt**  
23 Nm (2.3 mkg)

**Upper bracket pinch bolt**  
30 Nm (3.0 mkg)

**⚠ WARNING**


Make sure that the brake hoses are routed properly.

3. Adjust:

- spring preload adjusters (left and right)  
Refer to “ADJUSTING THE FRONT FORK LEGS” in chapter 3.


EAS00664

## HANDLEBAR

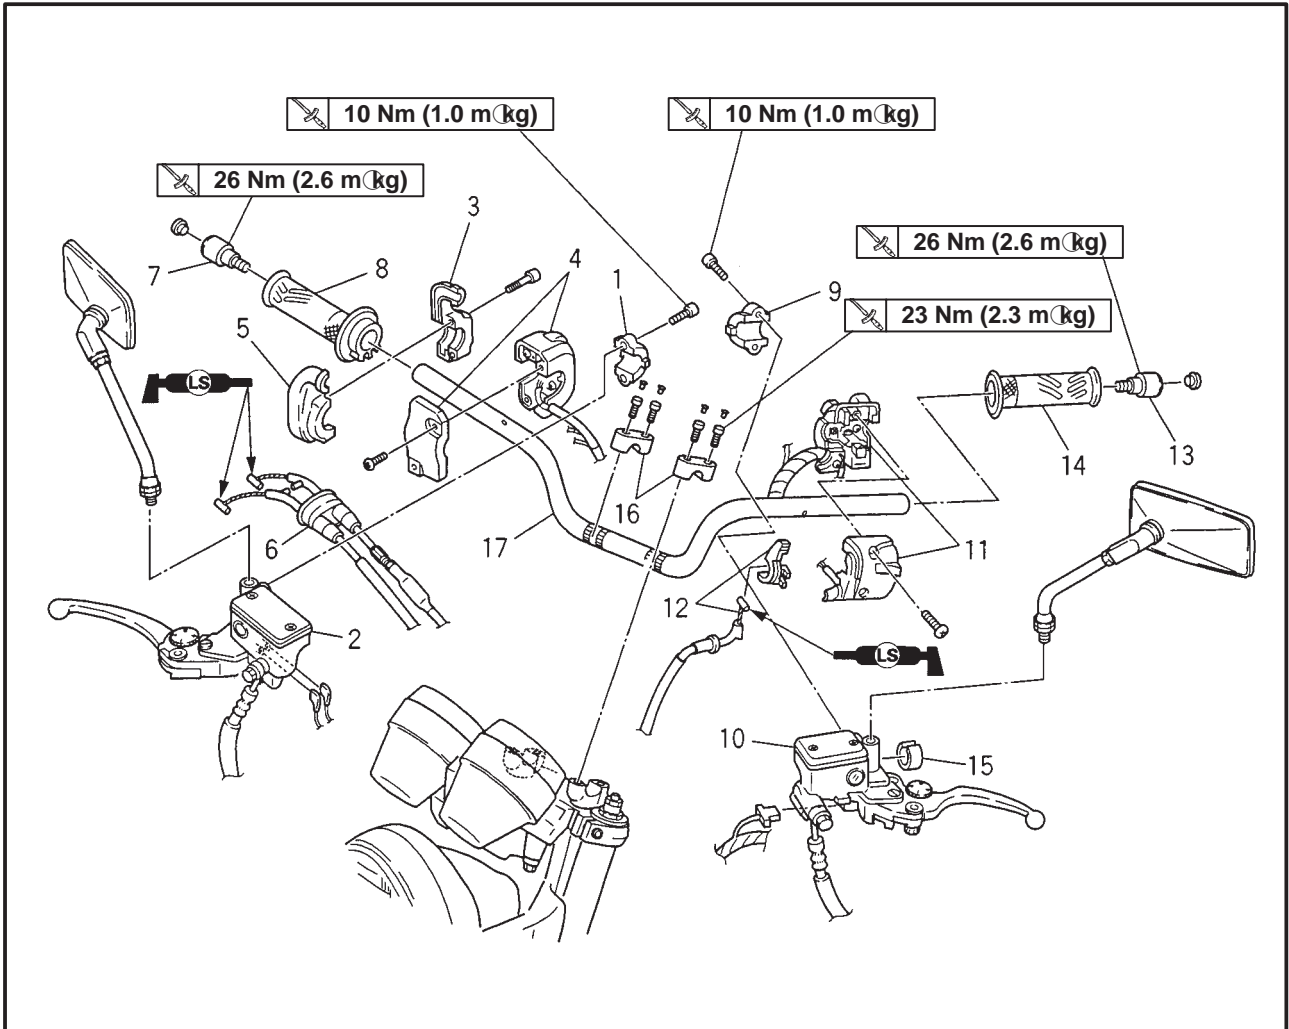

Order	Job/Part	Q'ty	Remarks
	<b>Removing the handlebar</b>		Remove the parts in the order listed.
1	Master cylinder bracket	1	Refer to "REMOVING/INSTALLING THE HANDLEBAR".  Refer to "INSTALLING THE HANDLEBAR".  Refer to "INSTALLING THE HANDLEBAR".
2	Master cylinder (front brake)	1	
3	Throttle cable housing	1	
4	Handlebar switch (right)	1	
5	Throttle cable housing	1	
6	Throttle cables	2	
7	Grip end (right)	1	
8	Throttle grip	1	
9	Master cylinder bracket	1	
10	Master cylinder (clutch)	1	
11	Handlebar switch (left)	1	
12	Starter lever/Starter cable	1/1	
13	Grip end (left)	1	

# HANDLEBAR

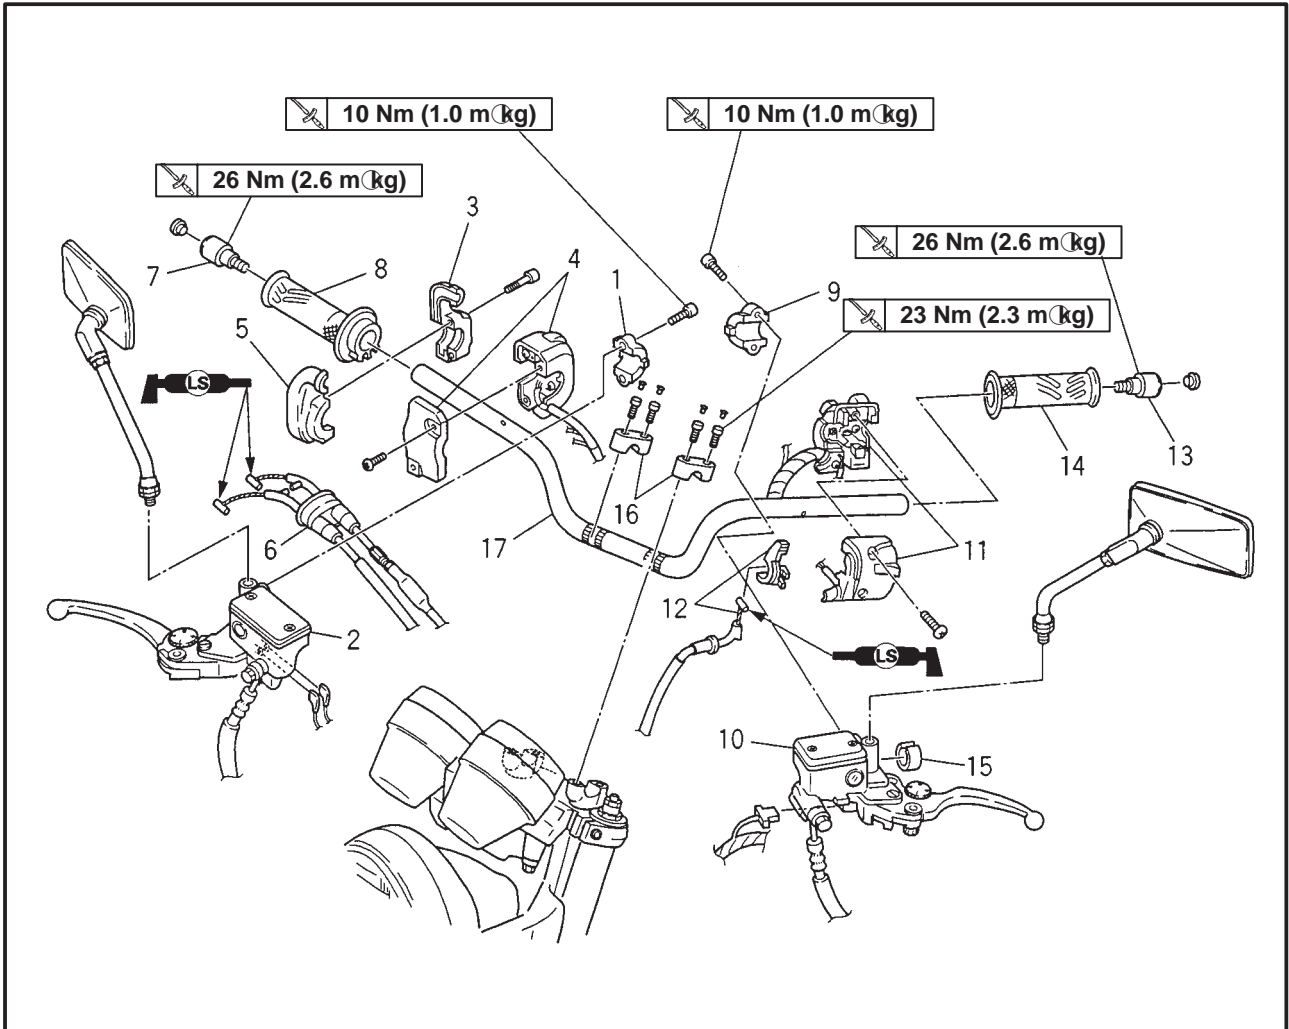

Order	Job/Part	Q'ty	Remarks
14	Handlebar grip	1	Refer to "REMOVING THE HANDLEBAR".
15	Collar	1	
16	Upper handlebar holders	2	Refer to "INSTALLING THE HANDLEBAR".
17	Handlebar	1	
			For installation, reverse the removal procedure.


EAS00666

## REMOVING THE HANDLEBAR

1. Stand the motorcycle on a level surface.

### **⚠ WARNING**

Securely support the motorcycle so that there is no danger of it falling over.

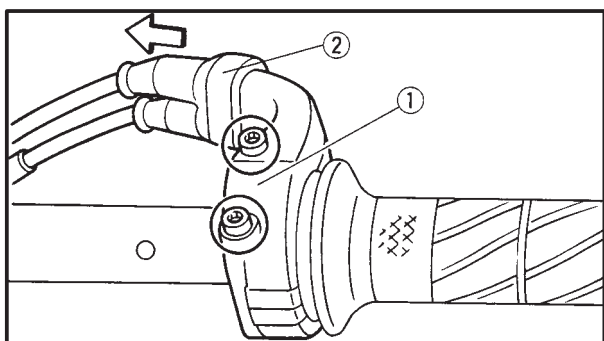


2. Remove:

Throttle cable housing (1)

### **NOTE:**

While removing the throttle cable housing, pull back the rubber cover (2).

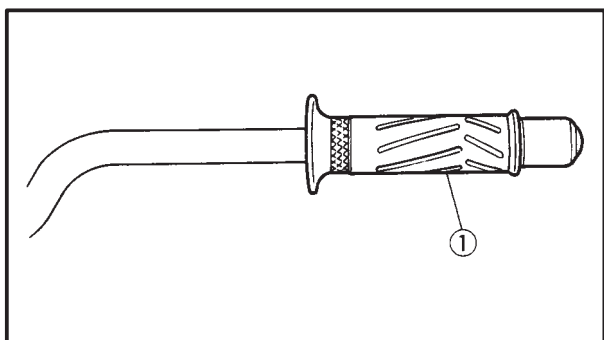


3. Remove:

Handlebar grip (left) (1)

### **NOTE:**

Blow compressed air between the handlebar and the handlebar grip, and gradually push the grip off the handlebar.

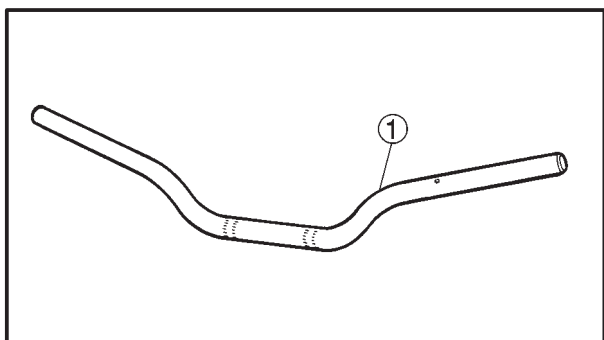

EAS00668

## CHECKING THE HANDLEBAR

1. Stand the motorcycle on a level surface.

### **⚠ WARNING**

Securely support the motorcycle so that there is no danger of it falling over.

2. Check:

Handlebar (1)

Bends/cracks/damage → Replace.

### **⚠ WARNING**


Do not attempt to straighten a bent handlebar as this may dangerously weaken it.





## THE HANDLEBAR


CHAS

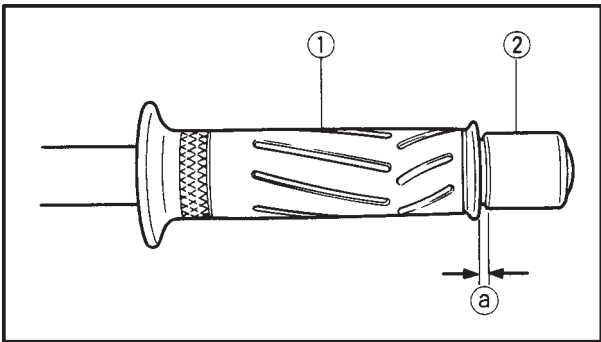

3. Install:
- handlebar grip ①
  - left grip end ②

**NOTE:**


There should be 1 × 3 mm of clearance ① between the handlebar grip and the left grip end.

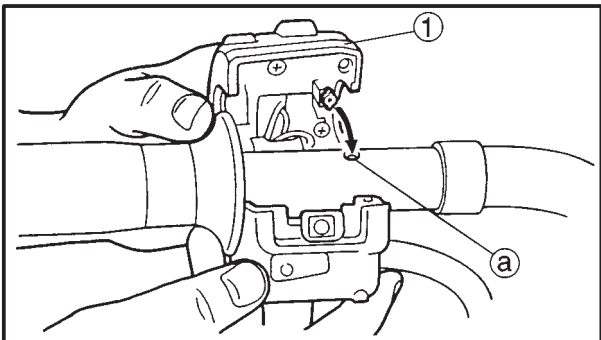

4. Install:
- left handlebar switch ①

**NOTE:**


Align the pin on the left handlebar switch with the hole ① in the handlebar.

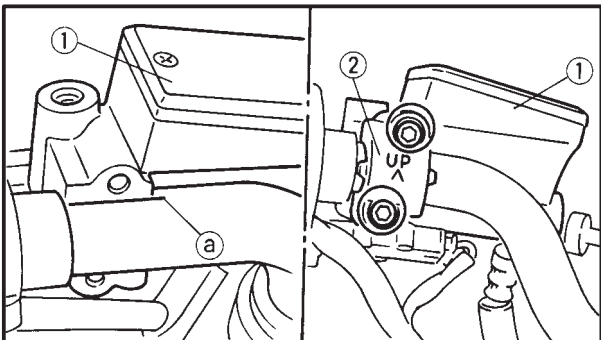

5. Install:
- master cylinder (clutch) ①
  - master cylinder bracket ②

**NOTE:**

Align the mating surfaces of the master cylinder with the punch mark ① on the handlebar.

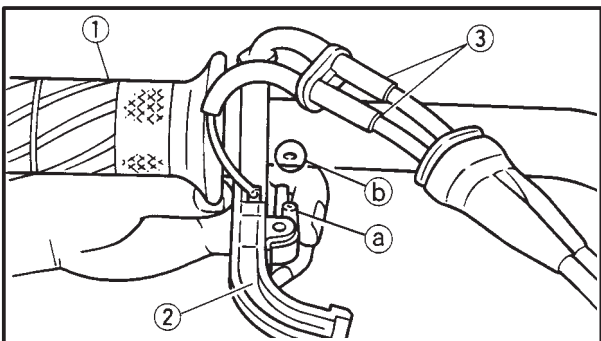


6. Install:
- throttle grip ①
  - throttle cable housing ②
  - throttle cables ③

**NOTE:**

Apply a thin coat of lithium soap base grease onto the inside of the throttle grip and install it onto the handlebar.

**⚠ WARNING**



Make sure that the pin ① on the throttle cable housing is aligned with the hole ② in the handlebar.

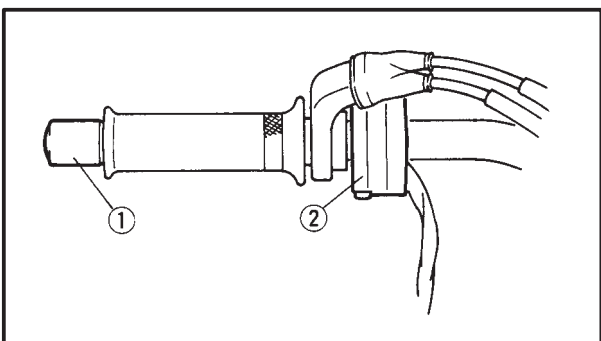

7. Install:
- right grip end ①
  - right handlebar switch ②

**⚠ WARNING**

Make sure that the throttle grip operates smoothly.

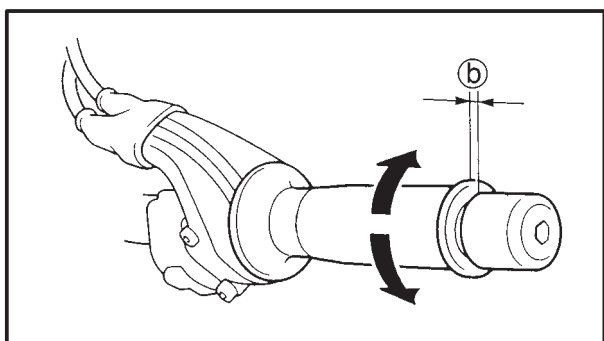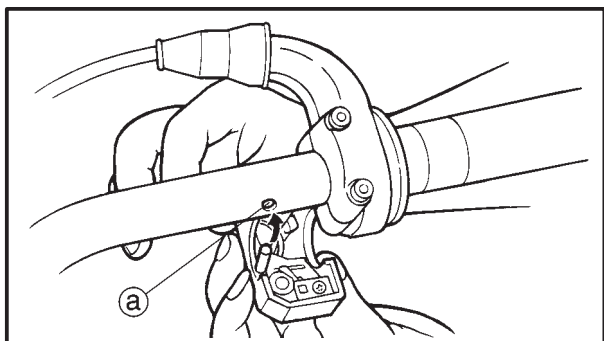

**NOTE:**

- Align the pin on the right handlebar switch with the hole (a) in the handlebar.
- There should be 1 × 3 mm of clearance (b) between the throttle grip and the right grip end.

8. Install:

- master cylinder ass'y (front brake)

9. Adjust:

- throttle cable free play


Refer to "ADJUSTING THE THROTTLE CABLE FREE PLAY" in chapter 3.



**Throttle cable free play (at the flange of the throttle grip)**  
**3 × 5 mm**


EAS00676

**STEERING HEAD  
LOWER BRACKET**

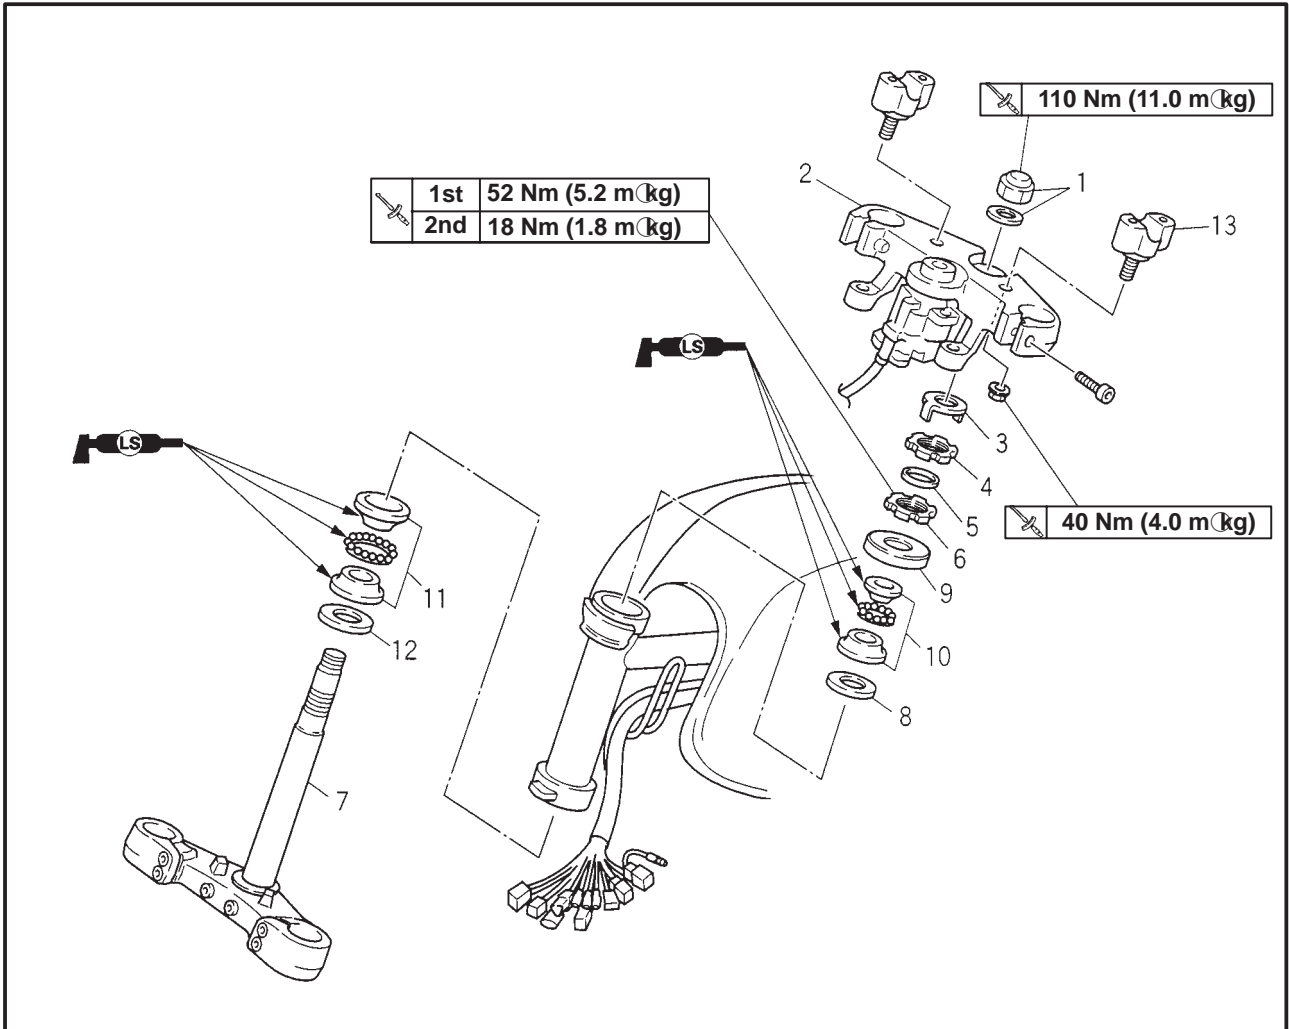

Order	Job/Part	Q'ty	Remarks
	<b>Removing the lower bracket</b>		
	Front wheel		Remove the parts in the order listed. Refer to "FRONT WHEEL AND BRAKE DISCS".
	Front fork		Refer to "FRONT FORK".
	Handlebar		Refer to "HANDLEBAR".
1	Steering stem nut/Washer	1/1	Refer to "INSTALLING THE STEERING HEAD".
2	Upper bracket	1	
3	Lock washer	1	
4	Upper ring nut	1	Refer to "REMOVING THE LOWER BRACKET/INSTALLING THE STEERING HEAD".
5	Rubber washer	1	
6	Lower ring nut	1	
7	Lower bracket	1	
8	Rubber seal	1	
9	Bearing cover	1	
10	Bearing	1	

# STEERING HEAD

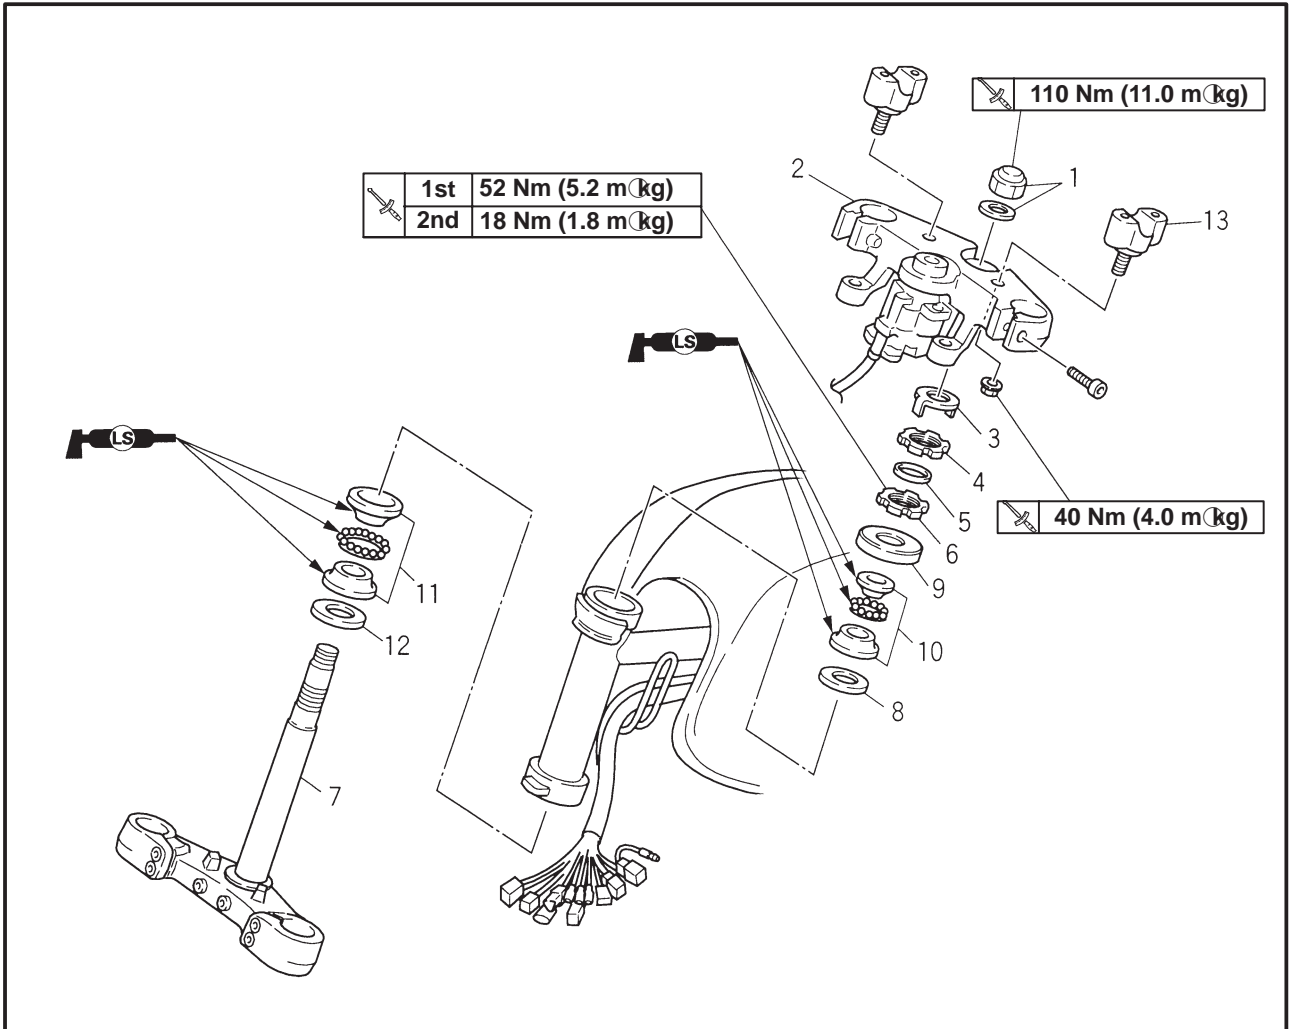

Order	Job/Part	Q'ty	Remarks
11	Bearing	1	For installation, reverse the removal procedure.
12	Dust seal	1	
13	Lower handlebar holders	2	

EAS00679

## REMOVING THE LOWER BRACKET

1. Stand the motorcycle on a level surface.

### **⚠ WARNING**


Securely support the motorcycle so that there is no danger of it falling over.

2. Remove:

- upper ring nut ①
- lower ring nut ②

### **NOTE:**


Hold the lower ring nut with the exhaust and steering nut wrench, then remove the upper ring nut with the ring nut wrench.

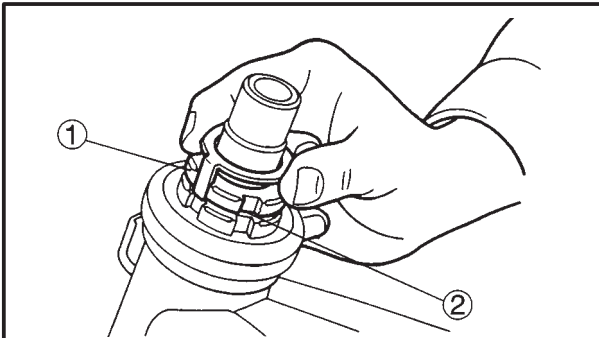

**Exhaust and steering nut wrench**  
90890-01268  
**Ring nut wrench**  
90890-01403

### **⚠ WARNING**

Securely support the lower bracket so that there is no danger of it falling.

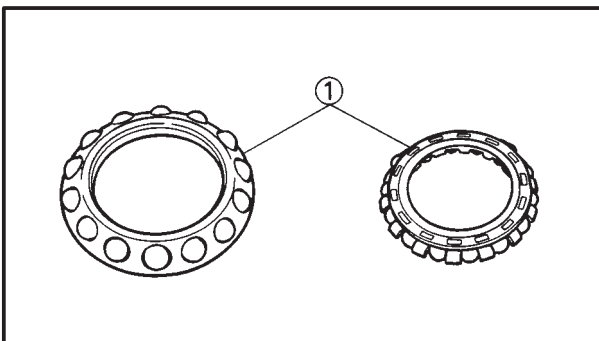

EAS00682

## CHECKING THE STEERING HEAD

1. Wash:

- bearing balls
- bearing races



**Recommended cleaning solvent**  
**Kerosine**

2. Check:

- bearing balls ①
- Damage/pitting → Replace.

3. Replace:


- bearing balls
- bearing races



# REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN




## REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN

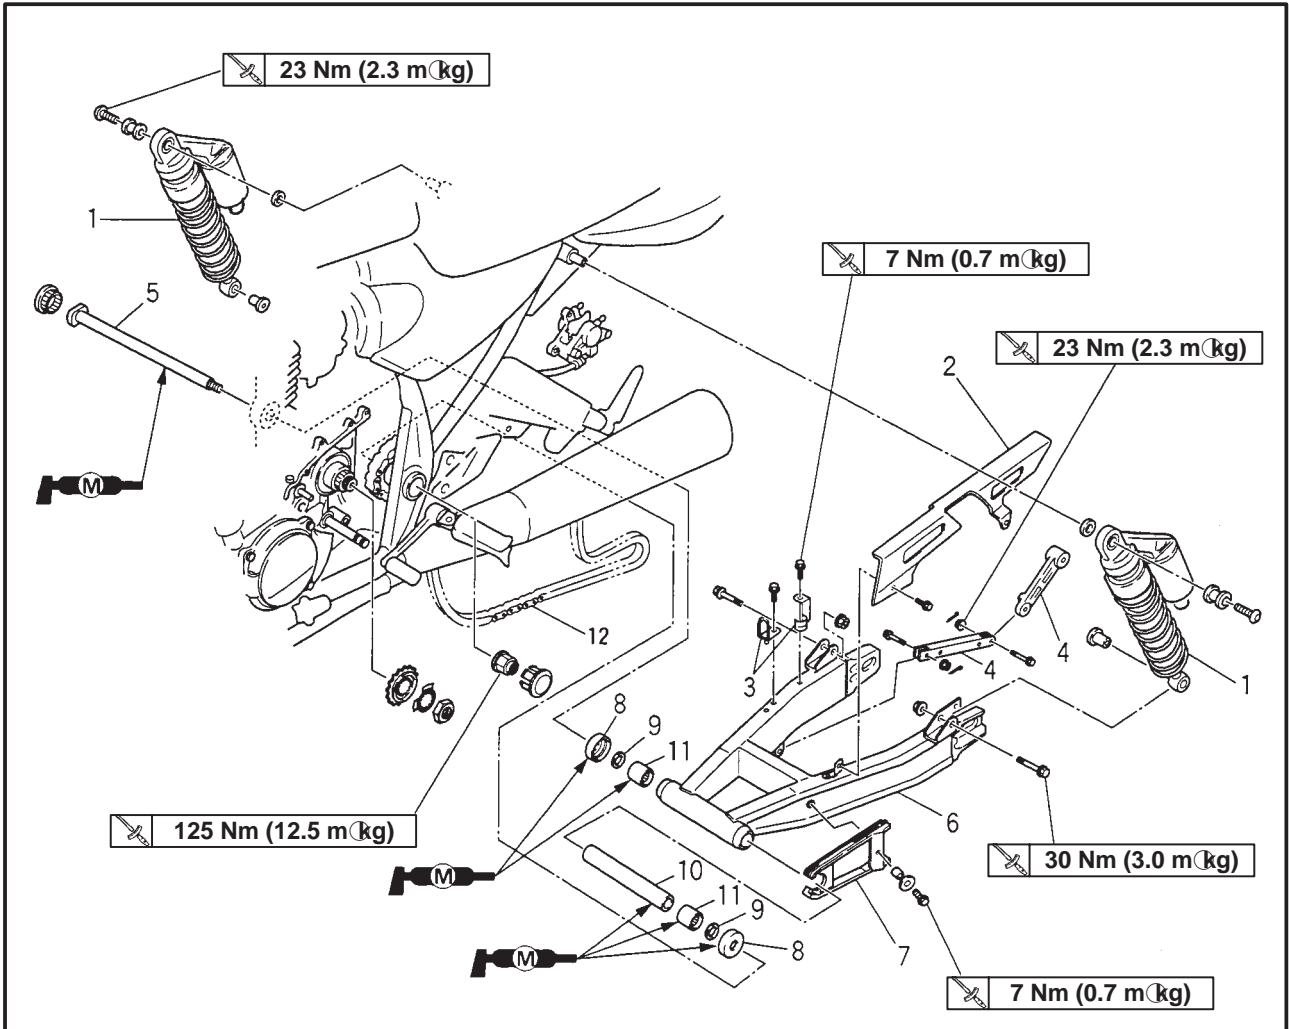

Order	Job/Part	Q'ty	Remarks
	<b>Removing the rear shock absorber, swingarm and drive chain.</b>		Remove the parts in the order listed.
	Rear wheel		Refer to "REAR WHEEL, BRAKEDISC AND REAR WHEEL SPROCKET".
	Drive sprocket		Refer to "ENGINE" in chapter 4.
1	Rear shock absorber (left/right)	1	
2	Chain case	1	
3	Brake hose holders	2	
4	Tension bar/Caliper bracket	1/1	
5	Pivot shaft	1	
6	Swingarm	1	Refer to "REMOVING THE SWINGARM".
7	Drive chain guide	1	
8	Dust covers	2	
9	Washers	2	
10	Bush	1	

# REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN

CHAS

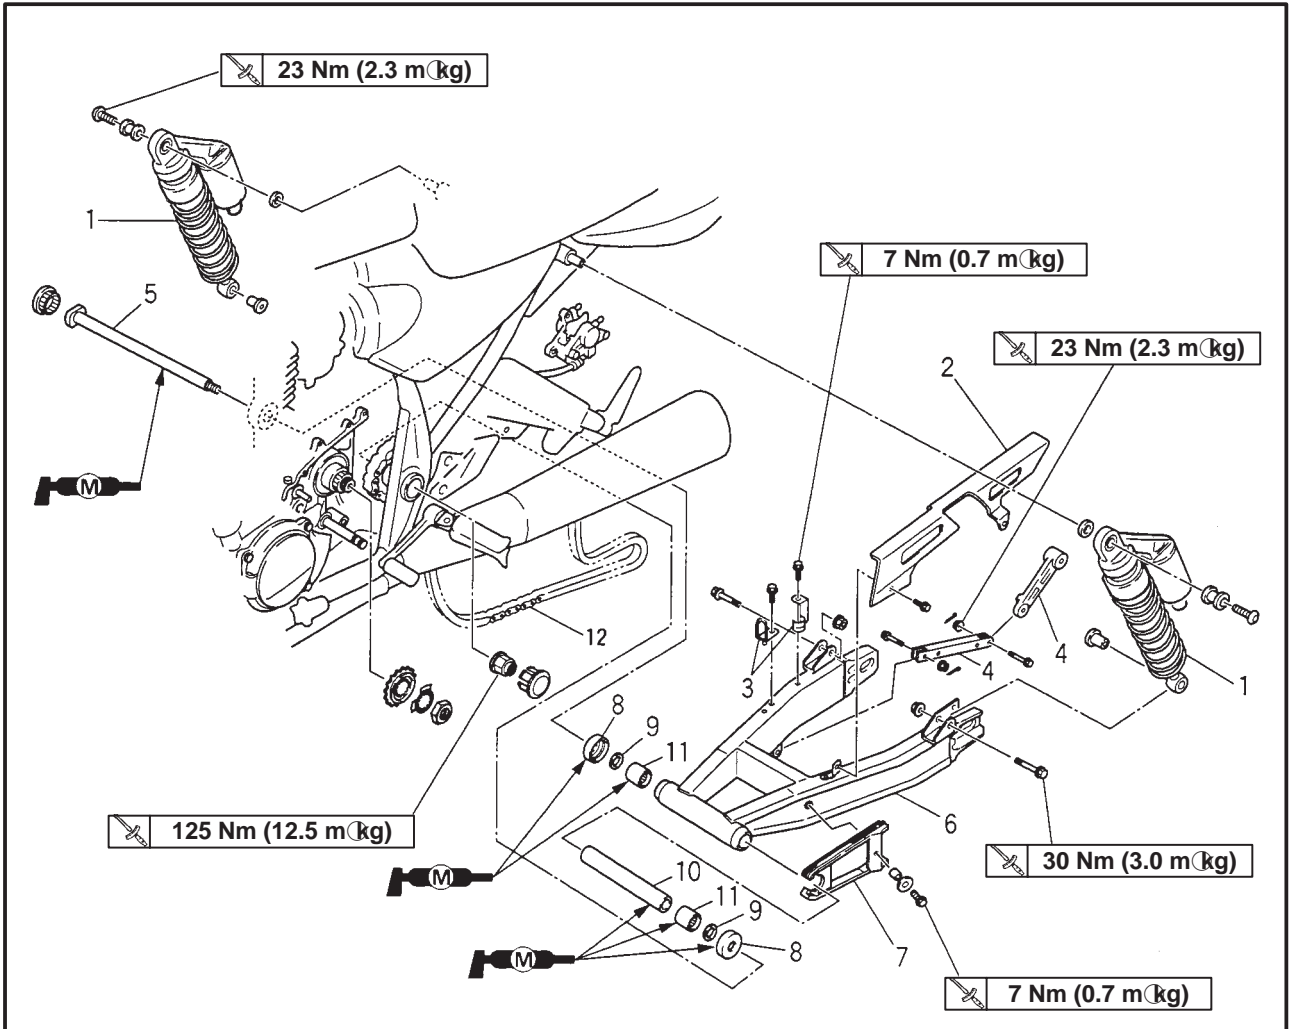

Order	Job/Part	Q'ty	Remarks
11	Bearings	2	For installation, reverse the removal procedure.
12	Drive chain	1	








# REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN

CHAS

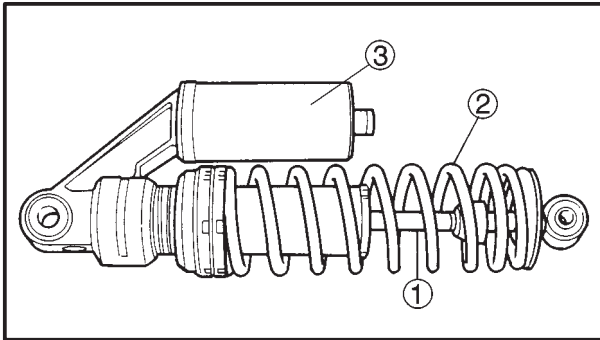


EAS00696

## CHECKING THE REAR SHOCK ABSORBER ASSEMBLY AND GAS CYLINDER

### 1. Check:

- Rear shock absorber rod ①  
Bends/damage → Replace the rear shock absorber assembly.
- Rear shock absorber  
Gas leaks/oil leaks → Replace the rear shock absorber assembly.
- Spring ②  
Damage/wear → Replace the rear shock absorber assembly.
- Gas cylinder ③  
Damage/gas leaks → Replace.
- Bushings  
Damage/wear → Replace.
- Dust seals  
Damage/wear → Replace.
- Bolts  
Bends/damage/wear → Replace.

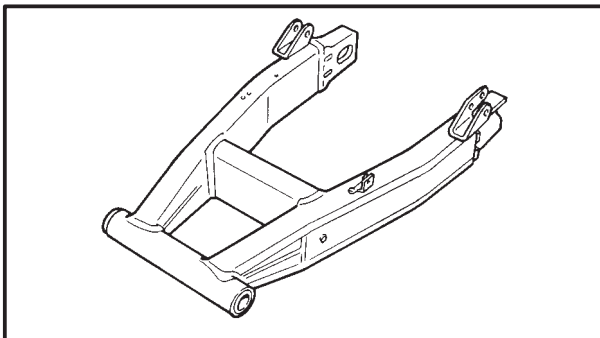


EAS00707

## CHECKING THE SWINGARM

### 1. Check:

- Swingarm  
Bends/cracks/damage → Replace.

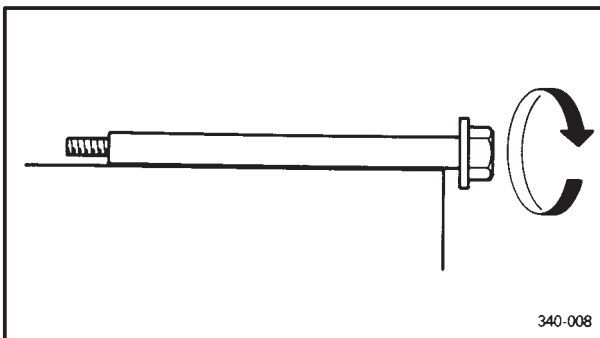

### 2. Check:

- Pivot shaft  
Roll the pivot shaft on a flat surface.  
Bends → Replace.

## ⚠ WARNING

Do not attempt to straighten a bent pivot shaft.

### 3. Wash:


- Pivot shaft
- Dust covers
- Spacer
- Washers
- Bearings



Recommended cleaning solvent  
Kerosine



# REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN

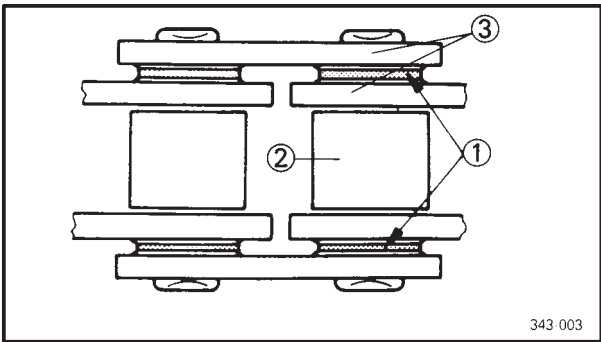

343-003

## 4. Check:


- O-rings ①  
Damage → Replace the drive chain.
- drive chain rollers ②  
Damage/wear → Replace the drive chain.
- drive chain side plates ③  
Damage/wear → Replace the drive chain.  
Cracks → Replace the drive chain and make sure that the battery breather hose is properly routed away from the drive chain and below the swingarm.

## 5. Lubricate:

- drive chain




**Recommended lubricant**  
**Engine oil or chain lubricant**  
**suitable for O-ring chains**

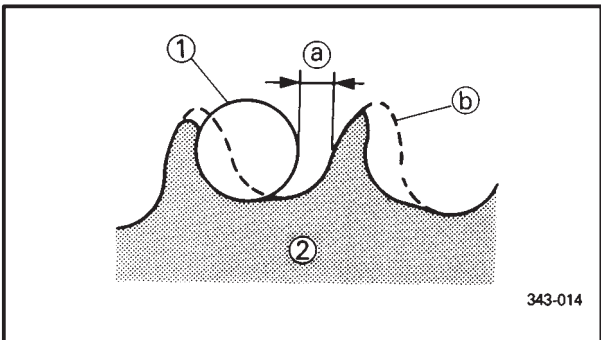

343-014


## 6. Check:

- drive sprocket
- rear wheel sprocket  
More than 1/4 tooth<sup>a</sup> wear → Replace the drive chain sprockets as a set.  
Bent teeth → Replace the drive chain sprockets as a set.
- Correct
- Drive chain roller
- Drive chain sprocket



**ELEC**

**7**



---

## CHAPTER 7. ELECTRICAL

<b>ELECTRICAL COMPONENTS</b> .....	7-1
<b>SWITCHES</b> .....	7-2
CHECKING SWITCH CONTINUITY .....	7-2
<b>CHECKING THE SWITCHES</b> .....	7-3
<b>CHECKING THE BULBS AND BULB SOCKETS</b> .....	7-5
TYPES OF BULBS .....	7-5
CHECKING THE CONDITION OF THE BULBS .....	7-5
CHECKING THE CONDITION OF THE BULB SOCKETS .....	7-7
<b>IGNITION SYSTEM</b> .....	7-8
CIRCUIT DIAGRAM .....	7-8
TROUBLESHOOTING .....	7-9
<b>ELECTRIC STARTING SYSTEM</b> .....	7-13
CIRCUIT DIAGRAM .....	7-13
STARTING CIRCUIT CUTOFF SYSTEM OPERATION .....	7-14
TROUBLESHOOTING .....	7-15
STARTER MOTOR .....	7-19
<b>CHARGING SYSTEM</b> .....	7-22
CIRCUIT DIAGRAM .....	7-22
TROUBLESHOOTING .....	7-23
A.C. GENERATOR .....	7-26
<b>LIGHTING SYSTEM</b> .....	7-27
CIRCUIT DIAGRAM .....	7-27
TROUBLESHOOTING .....	7-28
CHECKING THE LIGHTING SYSTEM .....	7-29
<b>SIGNALING SYSTEM</b> .....	7-32
CIRCUIT DIAGRAM .....	7-32
TROUBLESHOOTING .....	7-33
CHECKING THE SIGNALING SYSTEM .....	7-34
<b>SELF-DIAGNOSIS</b> .....	7-41
TROUBLESHOOTING .....	7-42




EAS00729




ELECTRICAL

ELECTRICAL COMPONENTS

- |                                 |                     |
|---------------------------------|---------------------|
| ① Main switch                   | ⑪ Rear brake switch |
| ② Fuel sender                   | ⑫ Oil level switch  |
| ③ Starter relay                 | ⑬ Horns             |
| ④ Starting circuit cutoff relay | ⑭ Ignition coils    |
| ⑤ Battery                       |                     |
| ⑥ Oil level relay               |                     |
| ⑦ Flasher relay                 |                     |
| ⑧ Ignitor unit                  |                     |
| ⑨ Neutral switch                |                     |
| ⑩ Sidestand switch              |                     |

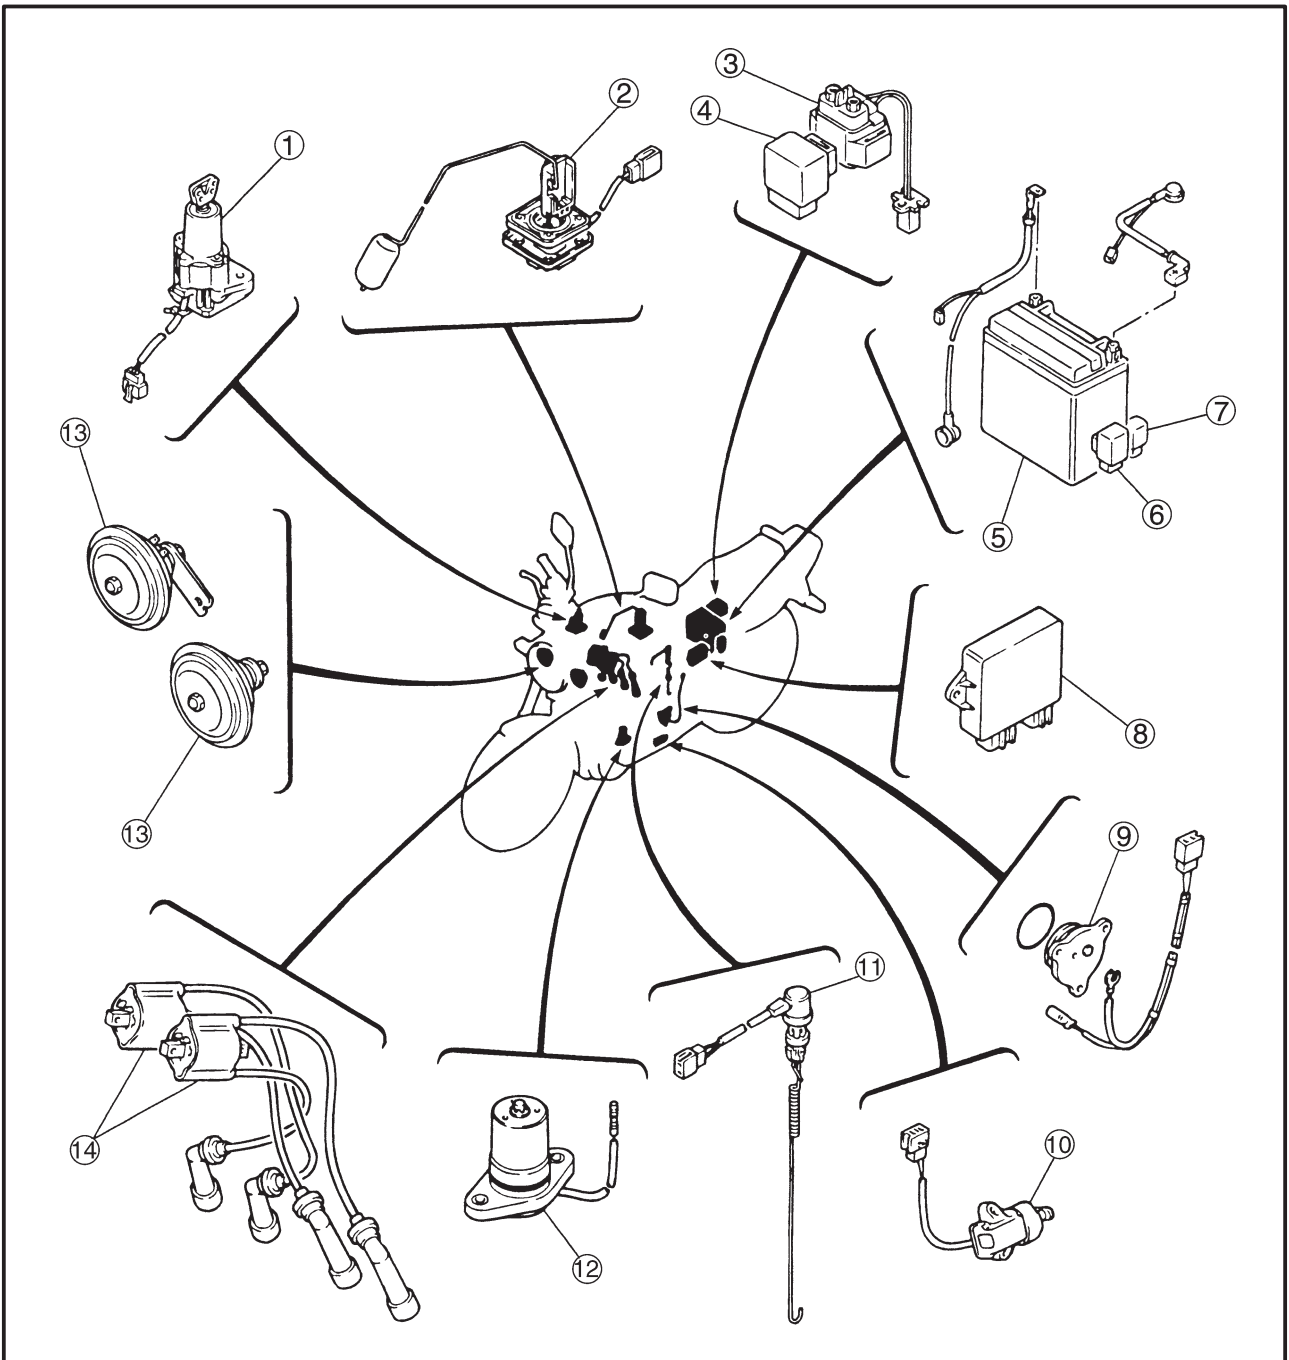



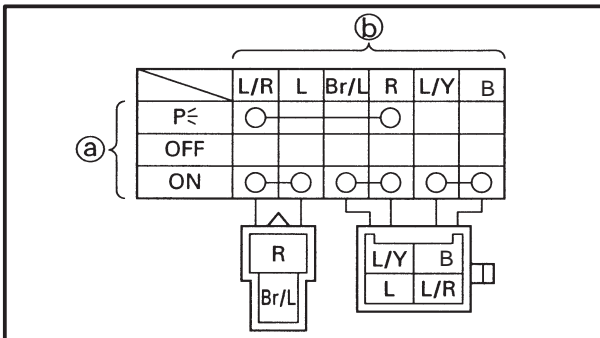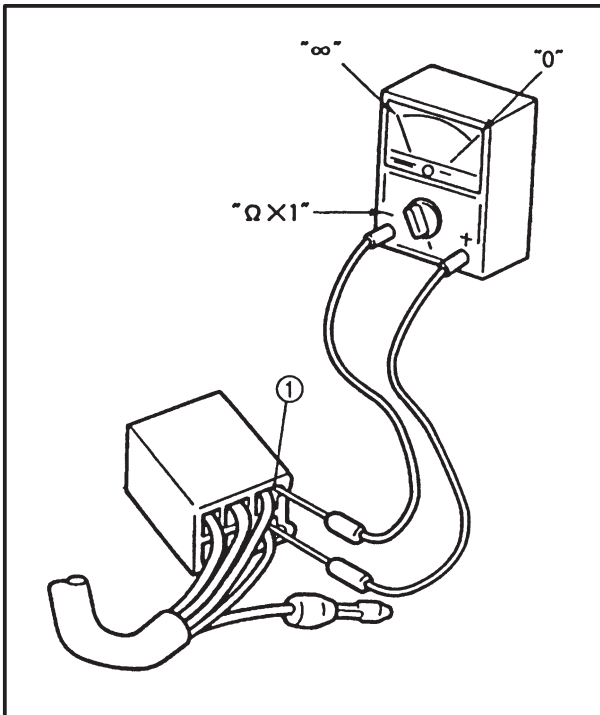

EAS0010

## SWITCHES

### CHECKING SWITCH CONTINUITY

Check each switch for continuity with the pocket tester. If the continuity reading is incorrect, check the wiring connections and if necessary, replace the switch.

#### CAUTION:

Never insert the tester probes into the coupler terminal slots ①. Always insert the probes from the opposite end of the coupler, taking care not to loosen or damage the leads.



Pocket tester  
90890-03112

#### NOTE:

- Ⓞ Before checking for continuity, set the pocket tester to "0" and to the " $\Omega \times 1$ " range.
- Ⓞ When checking for continuity, switch back and forth between the switch positions a few times.

The terminal connections for switches (e.g., main switch, engine stop switch) are shown in an illustration similar to the one on the left. The switch positions ① are shown in the far left column and the switch lead colors ② are shown in the top row in the switch illustration.

#### NOTE:

"○—○" indicates a continuity of electricity between switch terminals (i.e., a closed circuit at the respective switch position).

#### The example illustration on the left shows that:

There is continuity between blue/red and red when the switch is set to "P $\leq$ ".  
 There is continuity between blue/red and blue, between brown/blue and red, and between blue/yellow and black when the switch is set to "ON".

# CHECKING THE SWITCHES



EAS00731


## CHECKING THE SWITCHES

Check each switch for damage or wear, proper connections, and also for continuity between the terminals. Refer to "CHECKING SWITCH CONTINUITY".

Damage/wear → Repair or replace the switch.


Improperly connected → Properly connect.

Incorrect continuity reading → Replace the switch.

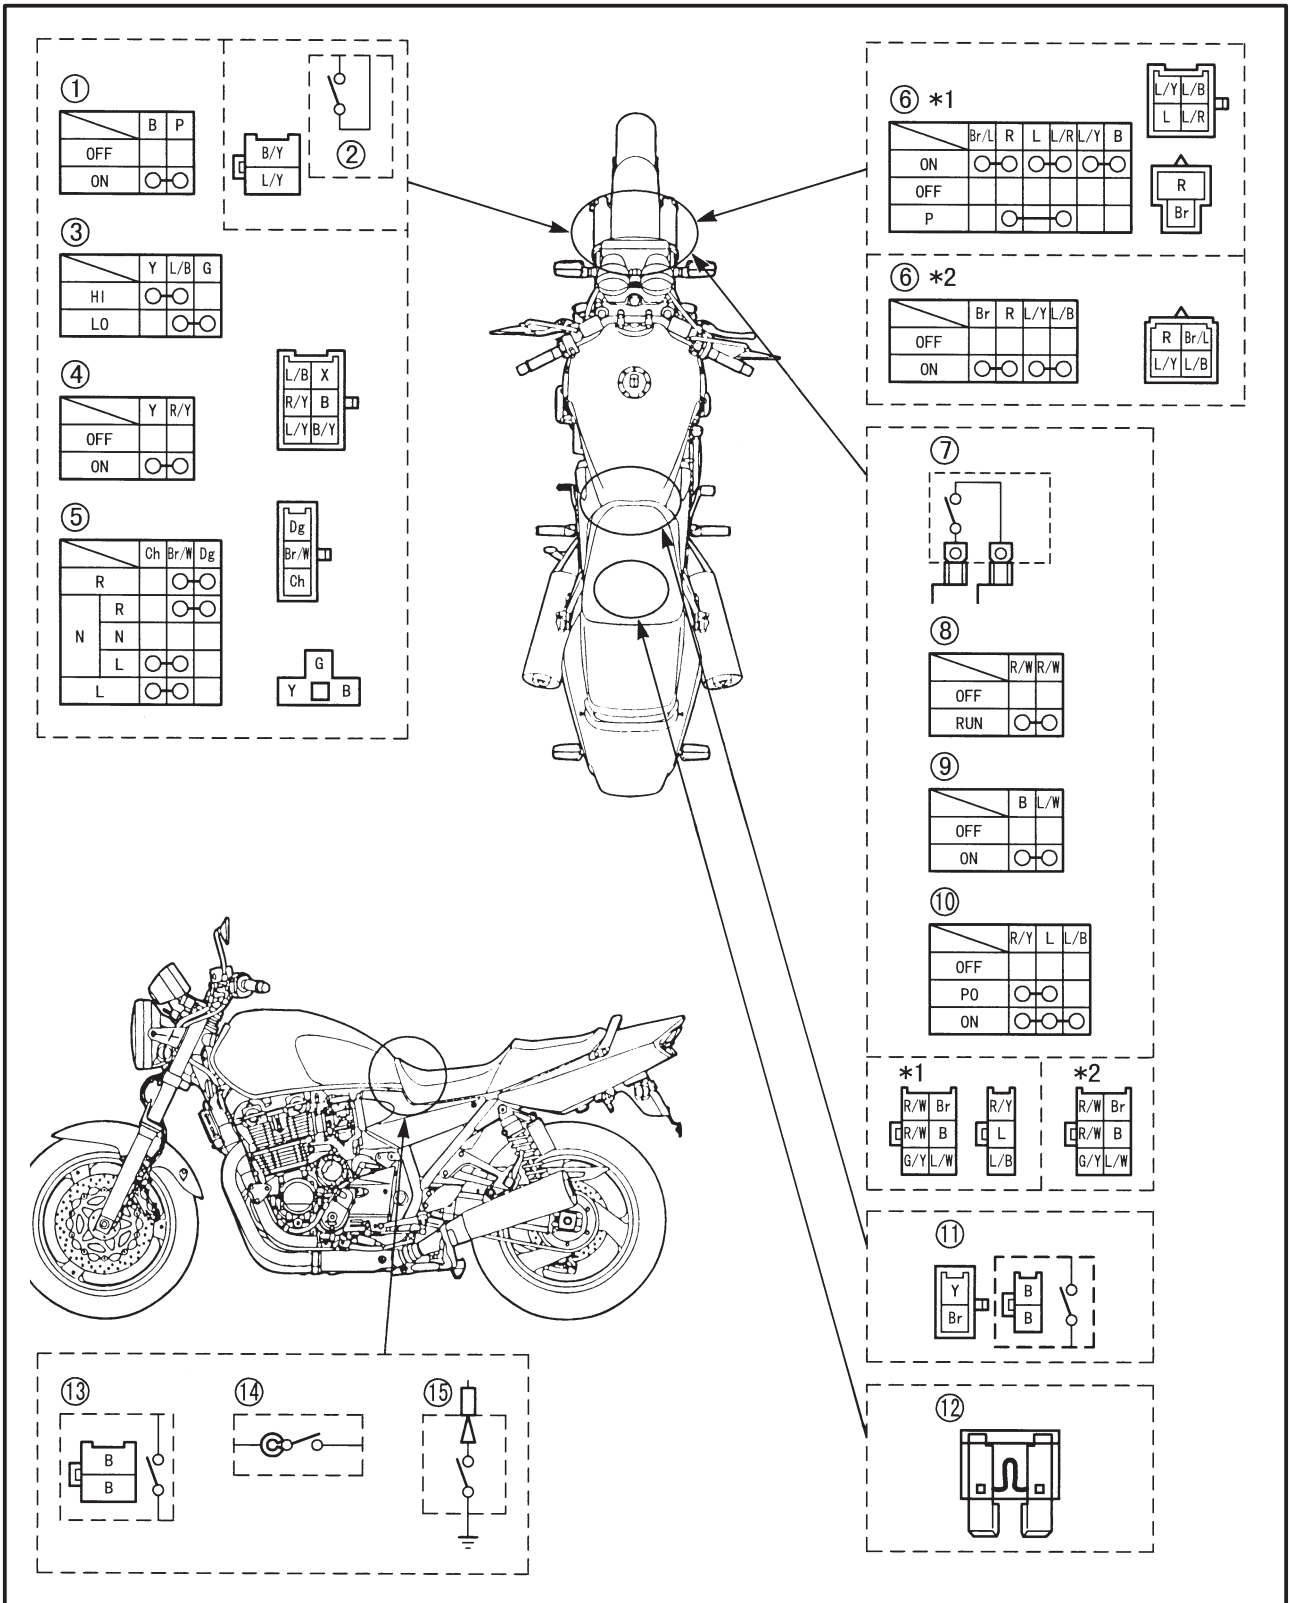


## CHECKING THE SWITCHES

**ELEC**



- ① Horn switch
- ② Clutch switch
- ③ Dimmer switch
- ④ Pass switch
- ⑤ Turn signal switch
- ⑥ Main switch
- ⑦ Front brake switch
- ⑧ Engine stop switch
- ⑨ Start switch
- ⑩ Lights switch (for Europe)
- ⑪ Rear brake switch
- ⑫ Fuse
- ⑬ Side stand switch
- ⑭ Neutral switch
- ⑮ Oil level switch
- \*1: for Europe
- \*2: for AUS



EAS00732



## CHECKING THE BULBS AND BULB SOCKETS

Check each bulb and bulb socket for damage or wear, proper connections, and also for continuity between the terminals.

Damage/wear → Repair or replace the bulb, bulb socket or both.

Improperly connected → Properly connect.

Incorrect continuity reading → Repair or replace the bulb, bulb socket or both.

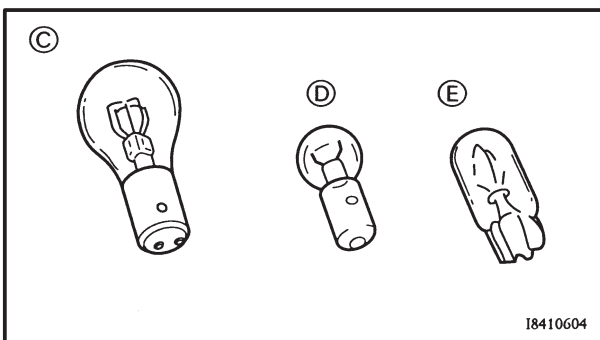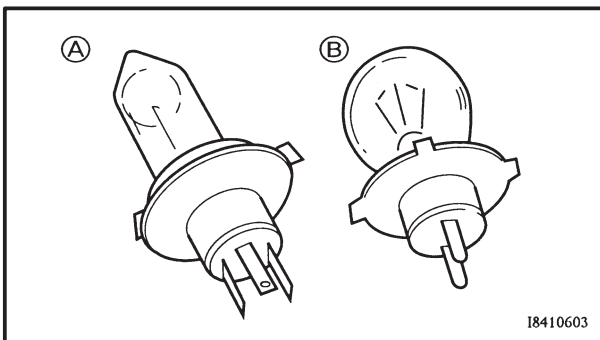

### TYPES OF BULBS

The bulbs used on this motorcycle are shown in the illustration on the left.

Ⓐ Bulbs Ⓐ and Ⓑ are used for headlights and usually use a bulb holder which must be detached before removing the bulb. The majority of these bulbs can be removed from their respective socket by turning them counterclockwise.

Ⓒ Bulb Ⓒ is used for turn signal and tail/brake lights and can be removed from the socket by pushing and turning the bulb counterclockwise.

Ⓓ Bulbs Ⓓ and Ⓔ are used for meter and indicator lights and can be removed from their respective socket by carefully pulling them out.

### CHECKING THE CONDITION OF THE BULBS

The following procedure applies to all of the bulbs.

1. Remove:


- Ⓐ bulb






# IGNITION SYSTEM


ELEC



EAS00735

## IGNITION SYSTEM CIRCUIT DIAGRAM

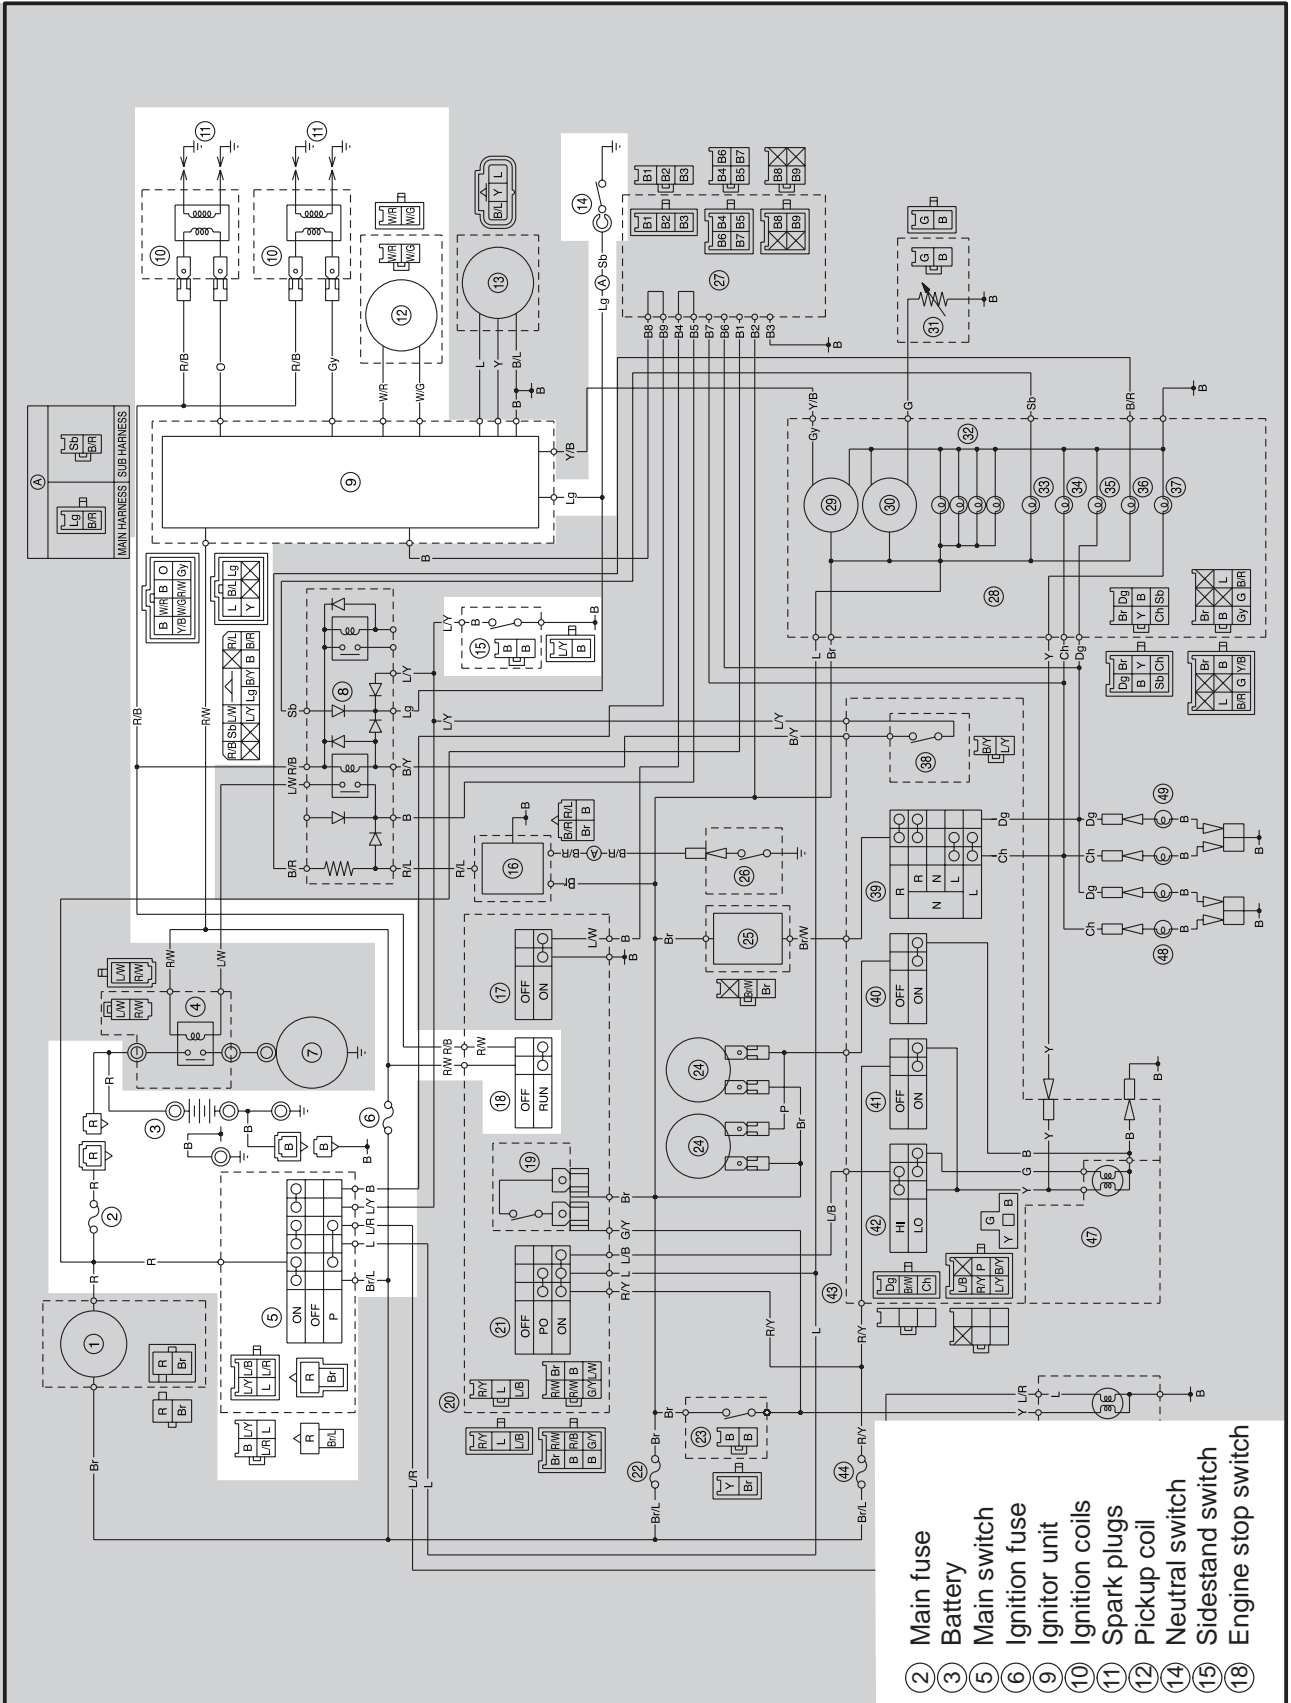



EAS00737

### TROUBLESHOOTING

**The ignition system fails to operate (no spark or intermittent spark).**

Check:

1. main and ignition fuses
2. battery
3. spark plugs
4. ignition spark gap
5. spark plug cap resistance
6. ignition coil resistance
7. pickup coil resistance
8. main switch
9. engine stop switch
10. neutral switch
11. sidestand switch
12. wiring  
(of the entire ignition system)

#### NOTE:

Before troubleshooting, remove the following part(-s):

- 1) seat
- 2) fuel tank
- 3) headlight unit
- 4) side cover (left)

Troubleshoot with the following special tool(-s).



**Ignition checker**  
90890-06754  
**Pocket tester**  
90890-03112

EAS00738

#### 1. Main and ignition fuses

Check the main and ignition fuses for continuity. Refer to "CHECKING THE FUSES" in chapter 3.

Are the main and ignition fuses OK?

↓ YES

↓ NO

Replace the fuse(-s).

EAS00739

#### 2. Battery

Check the condition of the battery. Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



**Min. open-circuit voltage**  
**12.8 V or more at 20°C**

Is the battery OK?

↓ YES

↓ NO

Clean the battery terminals.  
Recharge or replace the battery.

EAS00741

#### 3. Spark plugs

The following procedure applies to all of the spark plugs.

- Check the condition of the spark plug.
- Check the spark plug type.
- Measure the spark plug gap.

Refer to "CHECKING THE SPARK PLUGS" in chapter 3.



**Standard spark plug**  
**DPR 8EA-9 (NGK)**  
**X24EPR-U9 (DENSO)**  
**Spark plug gap**  
**0.8 ~ 0.9 mm**


Is the spark plug in good condition, is it of the correct type, and its gap within specification?

↓ YES

↓ NO

Re-gap or replace the spark plug.






EAS00743

### 4. Ignition spark gap

The following procedure applies to all of the spark plugs.

- ① Disconnect the spark plug cap from the spark plug.
- ② Connect the ignition checker ① as shown.
- ③ Spark plug cap
- ④ Set the main switch to "ON".
- ⑤ Measure the ignition spark gap ⑥.
- ⑦ Crank the engine by pushing the start switch and gradually increase the spark gap until a misfire occurs.

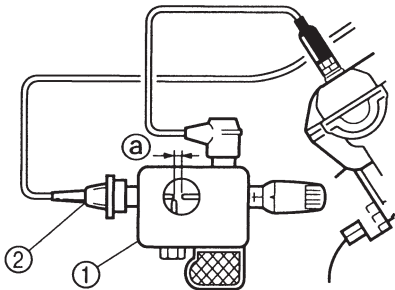

18110202



**Min. ignition spark gap**  
**6 mm**

⑧ Is there a spark and is the spark gap within specification?

↓ NO

↓ YES


The ignition system is OK.

EAS00745

### 5. Spark plug cap resistance

The following procedure applies to all of the spark plug caps.

- ① Disconnect the spark plug cap from the spark plug.
- ② Connect the pocket tester ( $\Omega \times 1k$ ) to the spark plug cap as shown.
- ③ Measure the spark plug cap resistance.

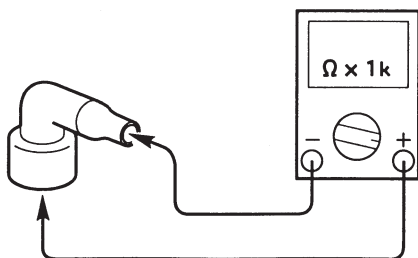

18040101



**Spark plug cap resistance**  
**10 k $\Omega$  at 20°C**

④ Is the spark plug cap OK?

↓ YES

↓ NO

Replace the spark plug cap.


EAS00747

### 6. Ignition coil resistance

The following procedure applies to all of the ignition coils.

- ① Disconnect the ignition coil connectors from the ignition coil terminals.
- ② Connect the pocket tester ( $\Omega \times 1$ ) to the ignition coil as shown.

**Tester positive probe → red/black**  
**Tester negative probe → orange (gray)**

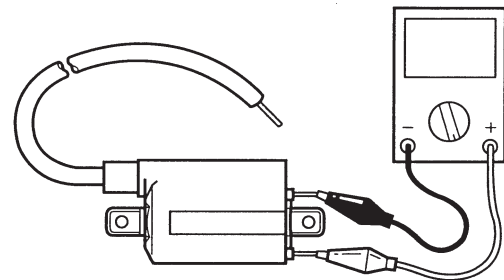

18110104

③ Measure the primary coil resistance.



**Primary coil resistance**  
**1.9 ~ 2.9  $\Omega$  at 20°C**

- ④ Connect the pocket tester ( $\Omega \times 1k$ ) to the ignition coil as shown.
- ⑤ Measure the secondary coil resistance.

**Tester positive probe → spark plug lead ①**  
**Tester negative probe → spark plug lead ②**

# IGNITION SYSTEM

**ELEC**



18110102

**Secondary coil resistance**  
9.5 ~ 14.3 kΩ at 20°C

Is the ignition coil OK?

↓ YES      ↓ NO

Replace the ignition coil.

EAS00748

**7. Pickup coil resistance**

- Disconnect the pickup coil coupler from the wire harness.
- Connect the pocket tester ( $\Omega \times 100$ ) to the pickup coil terminal.

**Tester positive probe → white/red ①**  
**Tester negative probe → white/green ②**

○ Measure the pickup coil resistance.

**Pickup coil resistance**  
248 ~ 372 Ω at 20°C  
(between white/red and white/green)

Is the pickup coil OK?

↓ YES      ↓ NO

Replace the pickup coil.

EAS00749

**8. Main switch**

- Check the main switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the main switch OK?

↓ YES      ↓ NO

Replace the main switch.

EAS00750

**9. Engine stop switch**

- Check the engine stop switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the engine stop switch OK?

↓ YES      ↓ NO

Replace the right handlebar switch.

EAS00751

**10. Neutral switch**

- Check the neutral switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the neutral switch OK?

↓ YES      ↓ NO

Replace the neutral switch.

EAS00752

**11. Sidestand switch**


- Check the sidestand switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the sidestand switch OK?

↓ YES      ↓ NO

Replace the side-stand switch.

# IGNITION SYSTEM

ELEC



EAS00754

## 13. Wiring

- Check the entire ignition system's wiring. Refer to "CIRCUIT DIAGRAM".
- Is the ignition system's wiring properly connected and without defects?



NO




YES

Properly connect or repair the ignition system's wiring.

Replace the ignitor unit.


# ELECTRIC STARTING SYSTEM

ELEC



EAS00755



## ELECTRIC STARTING SYSTEM CIRCUIT DIAGRAM

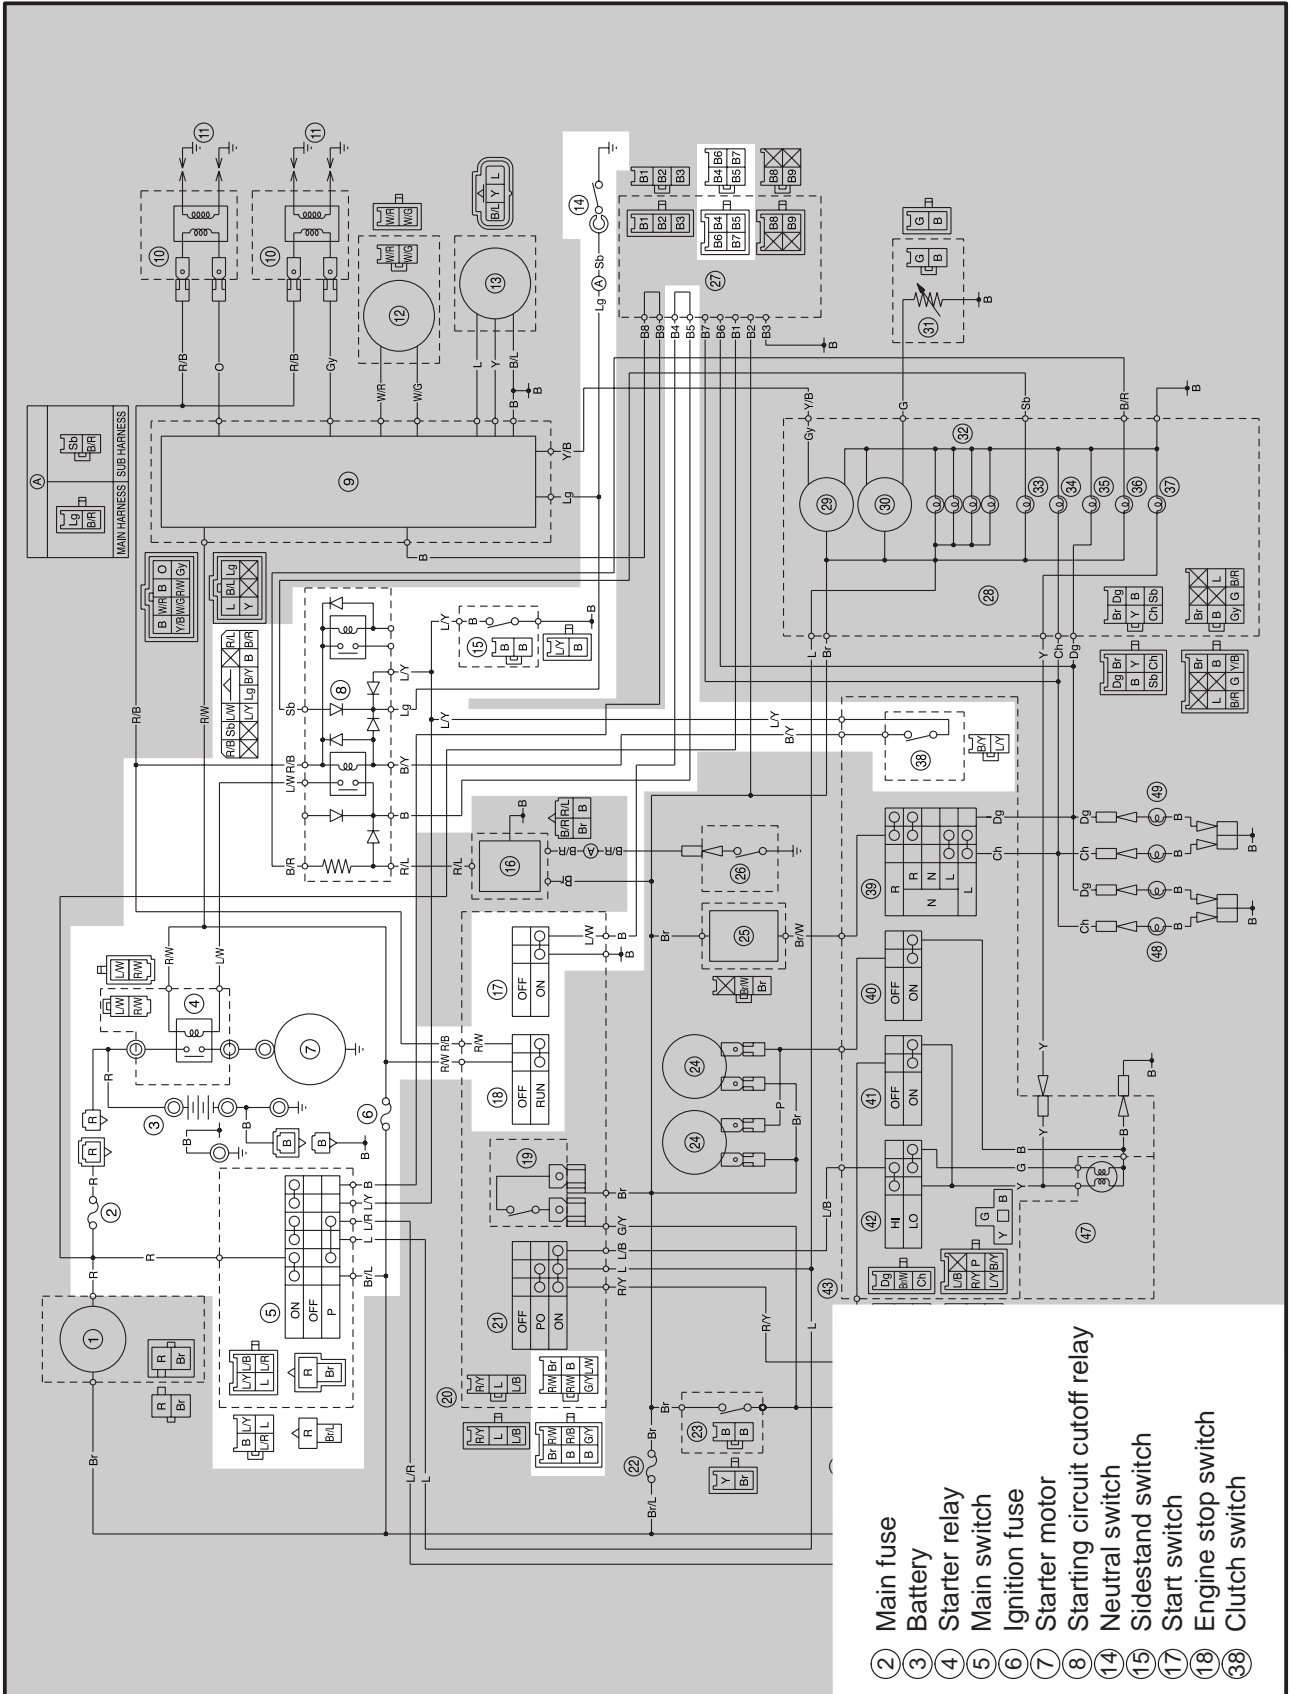

- ② Main fuse
- ③ Battery
- ④ Starter relay
- ⑤ Main switch
- ⑥ Ignition fuse
- ⑦ Starter motor
- ⑧ Starting circuit cutoff relay
- ⑭ Neutral switch
- ⑮ Sidestand switch
- ⑰ Start switch
- ⑱ Engine stop switch
- ⑳ Clutch switch

# ELECTRIC STARTING SYSTEM

ELEC

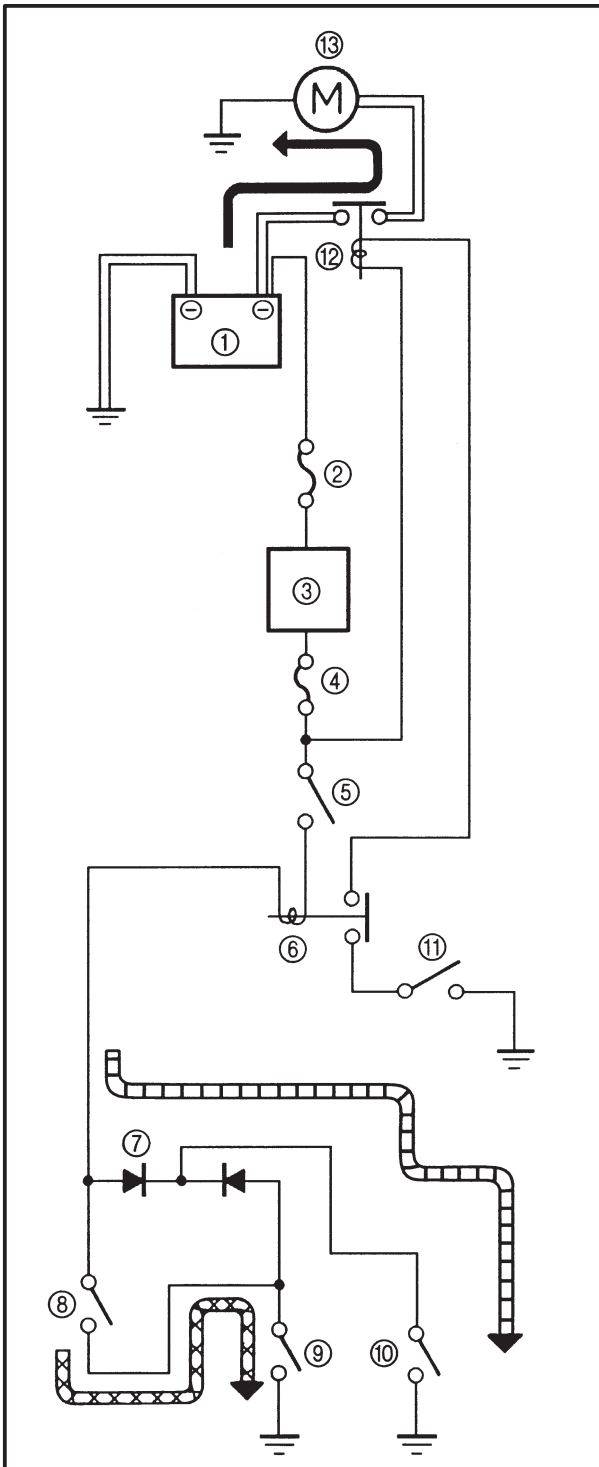

EAS00756

## STARTING CIRCUIT CUTOFF SYSTEM OPERATION

If the engine stop switch is set to "○" and the main switch is set to "ON" (both switches are closed), the starter motor can only operate if at least one of the following conditions is met:

- The transmission is in neutral (the neutral switch is closed).
- The clutch lever is pulled to the handlebar (the clutch switch is closed) and the sidestand is up (the sidestand switch is closed).

The starting circuit cutoff relay prevents the starter motor from operating when neither of these conditions has been met. In this instance, the starting circuit cutoff relay is open so current cannot reach the starter motor. When at least one of the above conditions has been met the starting circuit cutoff relay is closed and the engine can be started by pressing the start switch.

◀ WHEN THE TRANSMISSION IS IN NEUTRAL

◀ WHEN THE SIDESTAND IS UP AND THE CLUTCH LEVER IS PULLED TO THE HANDLEBAR

- ① Battery
- ② Main fuse
- ③ Main switch
- ④ Ignition fuse
- ⑤ Engine stop switch
- ⑥ Starting circuit cutoff relay
- ⑦ Diode
- ⑧ Clutch switch
- ⑨ Sidestand switch
- ⑩ Neutral switch
- ⑪ Start switch
- ⑫ Starter relay
- ⑬ Starter motor

# ELECTRIC STARTING SYSTEM

**ELEC**



EAS00757

## TROUBLESHOOTING

**The starter motor fails to turn.**

Check:

1. main and ignition fuses
2. battery
3. starter motor
4. starting circuit cutoff relay
5. diode
6. starter relay
7. main switch
8. engine stop switch
9. neutral switch
10. sidestand switch
11. clutch switch
12. start switch
13. wiring  
(of the entire starting system)

### NOTE:

Before, troubleshooting, remove the following part(-s):

- 1) seat
- 2) fuel tank
- 3) headlight unit

Troubleshoot with the following special tool(-s).



**Pocket tester**  
90890-03112

EAS00738

### 1. Main and ignition fuses

- Check the main and ignition fuses for continuity. Refer to "CHECKING THE FUSES" in chapter 3.
- Are the main and ignition fuses OK?

↓ YES

↓ NO

Replace the fuse(-s).

EAS00739

### 2. Battery

- Check the condition of the battery. Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



**Open-circuit voltage**  
12.8 V or more at 20°C

Is the battery OK?

↓ YES


↓ NO

- Clean the battery terminals.
- Recharge or replace the battery.

EAS00758

### 3. Starter motor

- Connect the battery positive terminal ① and starter motor lead ② with a jumper lead ③.

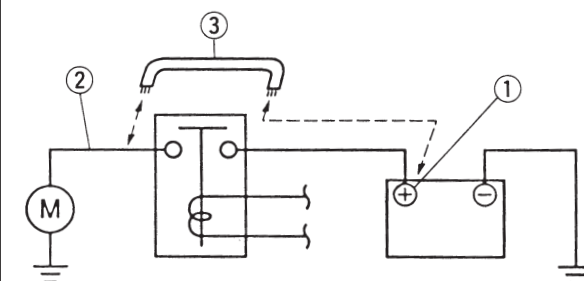

### ⚠ WARNING

- A wire that is used as a jumper lead must have at least the same capacity of the battery lead, otherwise the jumper lead may burn.
- This check is likely to produce sparks, therefore make sure that no flammable gas or fluid is in the vicinity.

Does the starter motor turn?

↓ YES

↓ NO

Repair or replace the starter motor.




EAS00759

### 4. Starting circuit cutoff relay

- Ⓐ Disconnect the relay unit from the coupler.
- Ⓑ Connect the pocket tester ( $\Omega \times 1$ ) and battery (12 V) to the relay unit terminals as shown.

**Battery positive terminal** → red/black ①  
**Battery negative terminal** → black/yellow ②

**Tester positive probe** → blue/white ③  
**Tester negative probe** → black ④

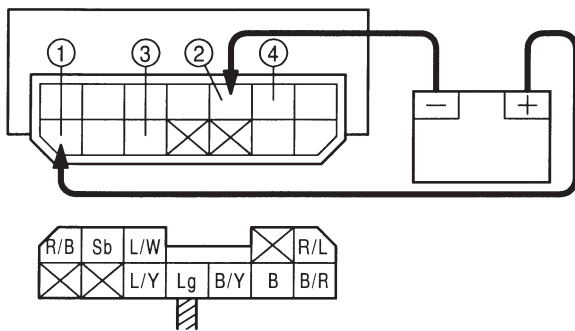

- Ⓒ Does the starting circuit cutoff relay have continuity between black and blue/white?

↓ YES

↓ NO

Replace the relay unit.


EAS00760

### 5. Diode

- Ⓐ Disconnect the starting circuit cutoff relay from the coupler.
- Ⓑ Connect the pocket tester ( $\Omega \times 1$ ) to the starting circuit cutoff relay terminals as shown.
- Ⓒ Measure the starting circuit cutoff relay for continuity as follows.

<b>Tester positive probe</b> → light green ① <b>Tester negative probe</b> → black/yellow ②	<b>Continuity</b>
---	-------------------

<b>Tester positive probe</b> → black/yellow ② <b>Tester negative probe</b> → light green ①	<b>No continuity</b>
---	----------------------

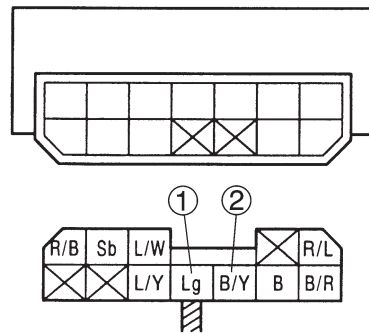

**NOTE:** \_\_\_\_\_

When you switch the “-” and “+” leads of the digital pocket tester the readings in the above chart will be reversed.

- Ⓒ Are the tester readings correct?

↓ YES

↓ NO

Replace the relay unit.

# ELECTRIC STARTING SYSTEM

**ELEC**




EAS00761

## 6. Starter relay

- Ⓐ Disconnect the starter relay from the coupler.
- Ⓑ Connect the pocket tester ( $\Omega \times 1$ ) and battery (12 V) to the starter relay coupler as shown.

**Battery positive terminal** → red/white ①  
**Battery negative terminal** → blue/white ②

**Tester positive probe** → red ③  
**Tester negative probe** → black ④

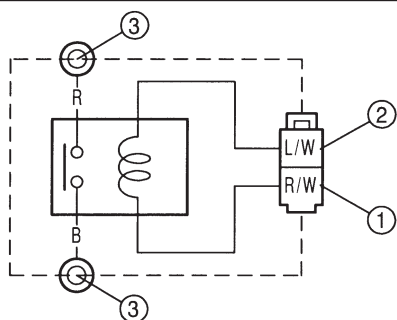

- Ⓒ Does the starter relay have continuity between red and black?

↓ YES

↓ NO

Replace the starter relay.

EAS00749

## 7. Main switch

- Ⓒ Check the main switch for continuity. Refer to "CHECKING THE SWITCHES".
- Ⓓ Is the main switch OK?

↓ YES

↓ NO

Replace the main switch.

EAS00750

## 8. Engine stop switch

- Ⓒ Check the engine stop switch for continuity. Refer to "CHECKING THE SWITCHES".
- Ⓓ Is the engine stop switch OK?

↓ YES

↓ NO

Replace the right handlebar switch.

EAS00751

## 9. Neutral switch

- Ⓒ Check the neutral switch for continuity. Refer to "CHECKING THE SWITCHES".
- Ⓓ Is the neutral switch OK?

↓ YES

↓ NO

Replace the neutral switch.

EAS00752

## 10. Sidestand switch

- Ⓒ Check the sidestand switch for continuity. Refer to "CHECKING THE SWITCHES".
- Ⓓ Is the sidestand switch OK?

↓ YES

↓ NO

Replace the sidestand switch.

EAS00763

## 11. Clutch switch

- Ⓒ Check the clutch switch for continuity. Refer to "CHECKING THE SWITCHES".
- Ⓓ Is the clutch switch OK?

↓ YES

↓ NO

Replace the clutch switch.



# ELECTRIC STARTING SYSTEM



EAS00764

12. Start switch  
 Check the start switch for continuity.  
Refer to "CHECKING THE SWITCHES".  
 Is the start switch OK?

↓ YES

↓ NO

Replace the right handlebar switch.

EAS00766


13. Wiring  
 Check the entire starting system's wiring.  
Refer to "CIRCUIT DIAGRAM".  
 Is the starting system's wiring properly connected and without defects?

↓ NO


↓ YES

Properly connect or repair the starting system's wiring.

The starting system circuit is OK.



## STARTER MOTOR

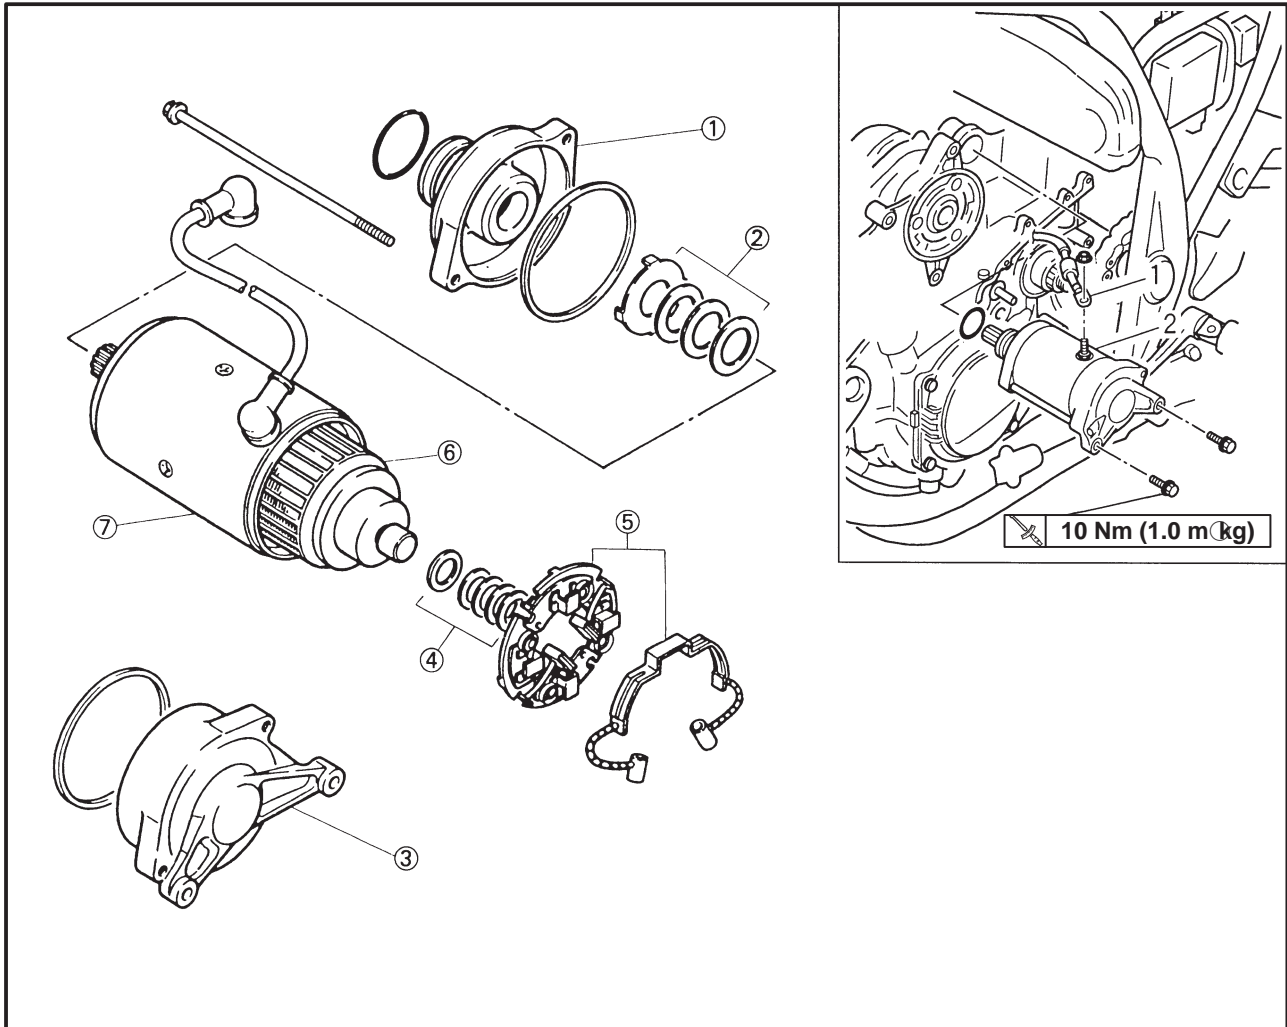


Order	Job/Part	Q'ty	Remarks
1	<b>Removing the starter motor</b> Starter motor lead	1	Remove the parts in the order listed.  For installation, reverse the removal procedure.
2	Starter motor assembly	1	
①	<b>Disassembling the starter motor</b> Starter motor front cover	1	Disassembly the parts in the order listed.  For assembly, reverse the disassembly procedure
②	Washer set	1	
③	Starter motor rear cover	1	
④	washer set	1	
⑤	Brush holder/brush	1/1	
⑥	Armature assembly	1	
⑦	Starter motor yoke	1	



# ELECTRIC STARTING SYSTEM

**ELEC**

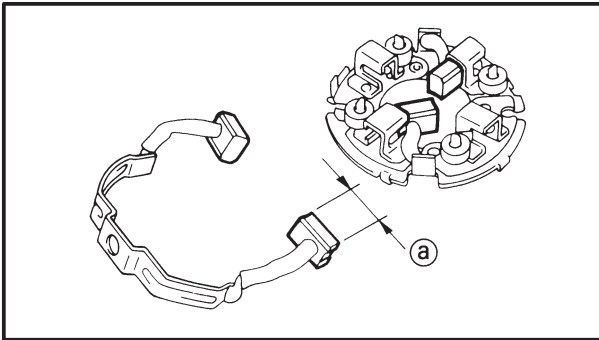


5. Measure:

⊙ brush length (a)

Out of specification → Replace the brushes as a set.



**Min. brush length  
5 mm**

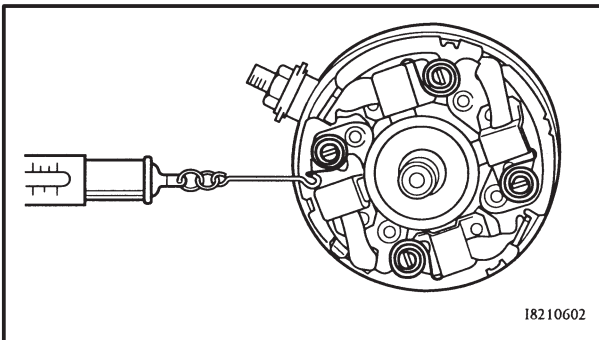

6. Measure:

⊙ brush spring force

Out of specification → Replace the brush springs as a set.



**Brush spring force  
7.65 ~ 10.01 N (0.780 ~ 1.021 kg)**

18210602

7. Check:


⊙ gear teeth

Damage/wear → Replace the gear.

8. Check:

⊙ oil seal

Damage/wear → Replace the defective part(-s).

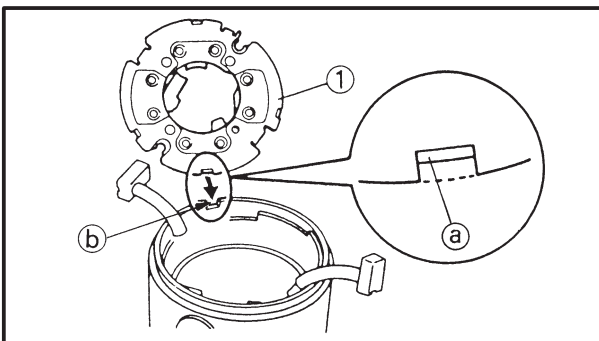

EAS00772


## Assembling The Starter Motor

1. Install:

⊙ brush holder (1)

**NOTE:**

Align the tab (a) on the brush holder with the slot (b) in the starter motor rear cover.

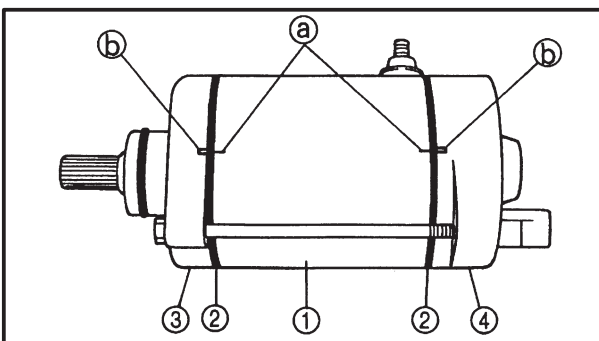

2. Install:

⊙ starter motor yoke (1)

⊙ O-rings (2) **New**

⊙ starter motor front cover (3)

⊙ starter motor rear cover (4)

⊙ bolts

**5 Nm (0.5 m(kg))**

**NOTE:**

Align the match marks (a) on the starter motor yoke with the match marks (b) on the front and rear covers.



# CHARGING SYSTEM

**ELEC**



EAS00774

## TROUBLESHOOTING

**The battery is not being charged.**

Check:

1. main fuse
2. battery
3. charging voltage
4. starter coil assembly resistance
5. brush check
6. field coil resistance
7. main switch
8. wiring  
(of the entire charging system)

**NOTE:**

- Before troubleshooting, remove the following part(-s):
  - 1) seat
  - 2) fuel tank
  - 3) headlight unit
- Troubleshoot with the following special tool(-s).



**Engine tachometer**  
90890-03113  
**Pocket tester**  
90890-03112

EAS00738

### 1. Main fuse

- Check the main fuse for continuity. Refer to "CHECKING THE FUSES" in chapter 3.
- Is the main fuse OK?

↓ YES

↓ NO

Replace the fuse.

EAS00739

### 2. Battery

- Check the condition of the battery. Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



**Open-circuit voltage**  
12.8 V or more at 20°C

- Is the battery OK?

↓ YES

↓ NO


- Clean the battery terminals.
- Recharge or replace the battery.

EAS00775

### 3. Charging voltage

- Connect the engine tachometer to the spark plug lead of cylinder #1.
- Connect the pocket tester (DC 20 V) to the battery as shown.

**Tester positive probe → battery positive terminal**  
**Tester negative probe → battery negative terminal**

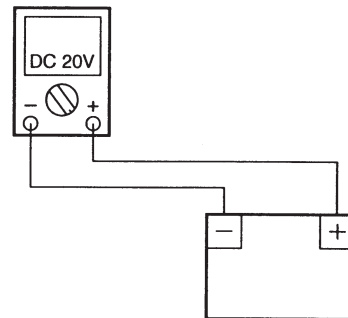

- Start the engine and let it run at approximately 5,000 r/min.
- Measure the charging voltage.



**Charging voltage**  
14 V at 5,000 r/min

# CHARGING SYSTEM



**NOTE:** \_\_\_\_\_  
 Make sure that the battery is fully charged.

Is the charging voltage within specification?

**NO**                      **YES**

The charging circuit is OK.


EAS00776

**4. Stator coil assembly resistances**


Remove the generator cover.  
 Connect the pocket tester ( $\Omega \times 1$ ) to the stator coil assembly coupler as shown.

**Tester positive probe → white ①**  
**Tester negative probe → black ②**

**Tester positive probe → white ①**  
**Tester negative probe → black ③**

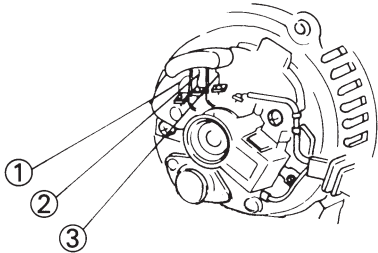

Measure the stator coil assembly resistances.

 **Stator coil resistance**  
**0.19 ~ 0.21  $\Omega$  at 20°C**

Is the stator coil assembly OK?


**YES**                      **NO**

Replace the stator coil assembly.


EAS00777

**5. Brush check**

Remove the brush holder ① .

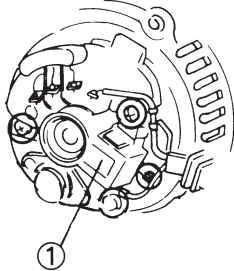

Check the brush spring.  
 Measure the overall length of brushes.

 **Brush spring force**  
**5.10 ~ 5.69 N (0.52 ~ 0.58 kg)**  
**Brush overall length <wear limit>**  
**13.7 mm <4.7 mm>**

Are the brush spring and brush OK?


**YES**                      **NO**

Replace the brushes and brush spring as a set.


EAS00778

6. Field coil resistance

Connect the pocket tester ( $\Omega \times 1$ ) to the rotor as shown.

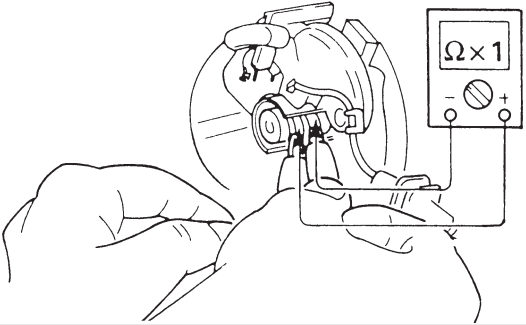

Measure the field coil resistance.

 **Field coil resistance**  
**2.8 ~ 3.0  $\Omega$  at 20°C**

Is the field coil OK?

 YES

 NO

Replace the field coil.

EAS00749

7. Main switch

Check the main switch for continuity.  
Refer to "CHECKING THE SWITCHES".

Is the main switch OK?

 YES

 NO

Replace the main switch.

EAS00779

8. Wiring

Check the wiring connections of the entire charging system.  
Refer to "CIRCUIT DIAGRAM".

Is the charging system's wiring properly connected and without defects?

 NO

 YES


Properly connect or repair the charging system's wiring.

Replace the rectifier.





### A.C. GENERATOR

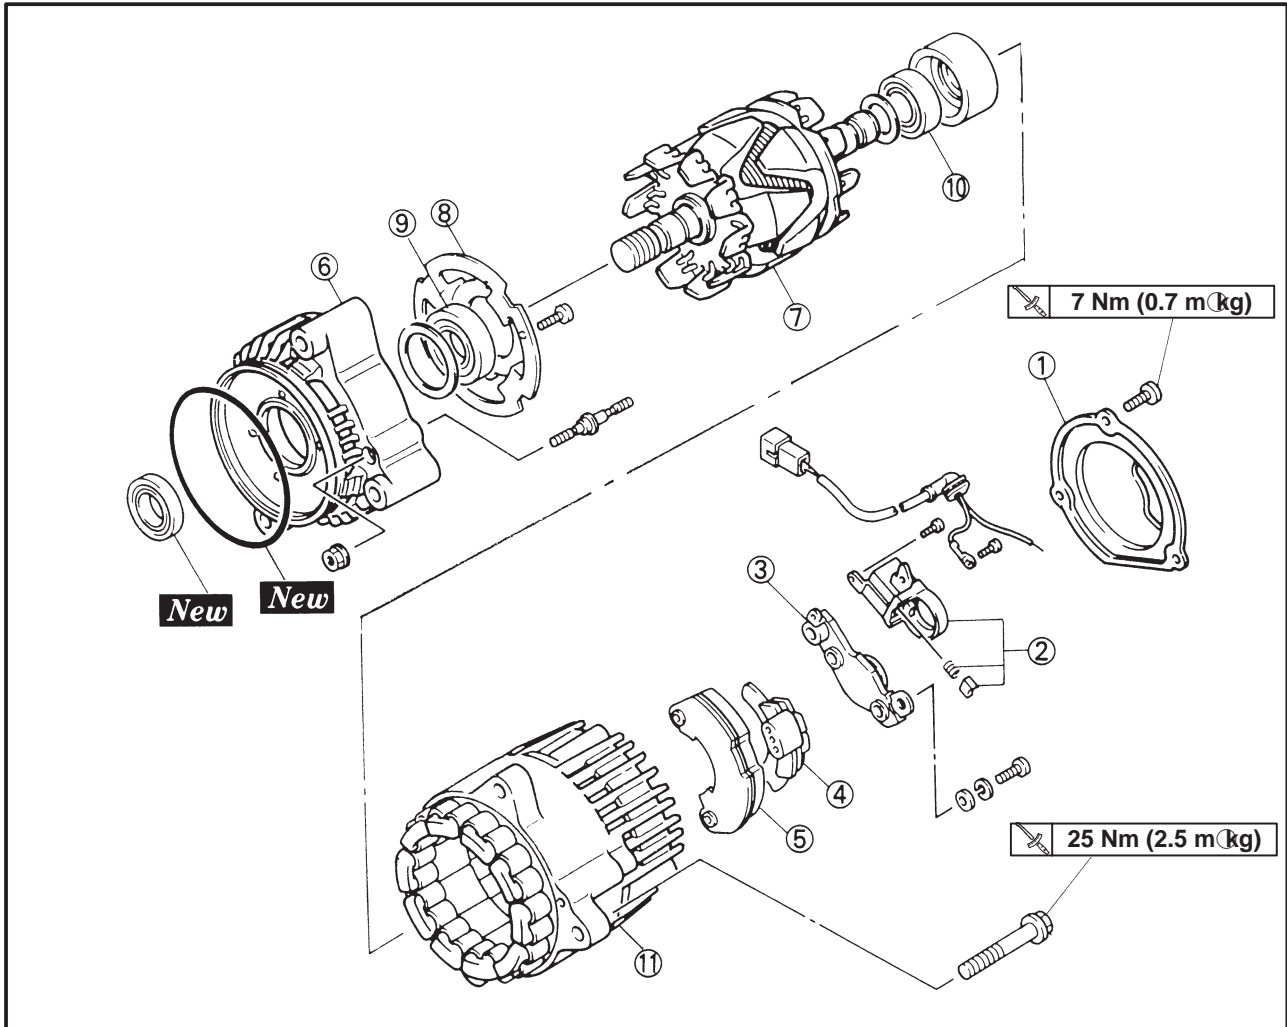


Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the A.C. Generator</b>		Disassembly the parts in the order list.
①	Cover	1	
②	Brush holder	1	
③	Regulator	1	
④	Rectifier cover	1	
⑤	Rectifier	1	
⑥	Rear cover	1	
⑦	Rotor assembly	1	
⑧	Bearing cover	1	
⑨	Bearing	1	
⑩	Bearing	1	
⑪	Stator assembly	1	
			For assembly, reverse the disassembly procedure.



EAS00780

## LIGHTING SYSTEM CIRCUIT DIAGRAM

- ② Main fuse
- ③ Battery
- ⑤ Main switch
- ②① Lights switch
- ③② Meter light
- ③⑦ High beam indicator light
- ④① Pass switch
- ④② Dimmer switch
- ④④ Headlight fuse
- ④⑤ Auxiliary light
- ④⑥ Tail / brake light
- ④⑦ Headlight

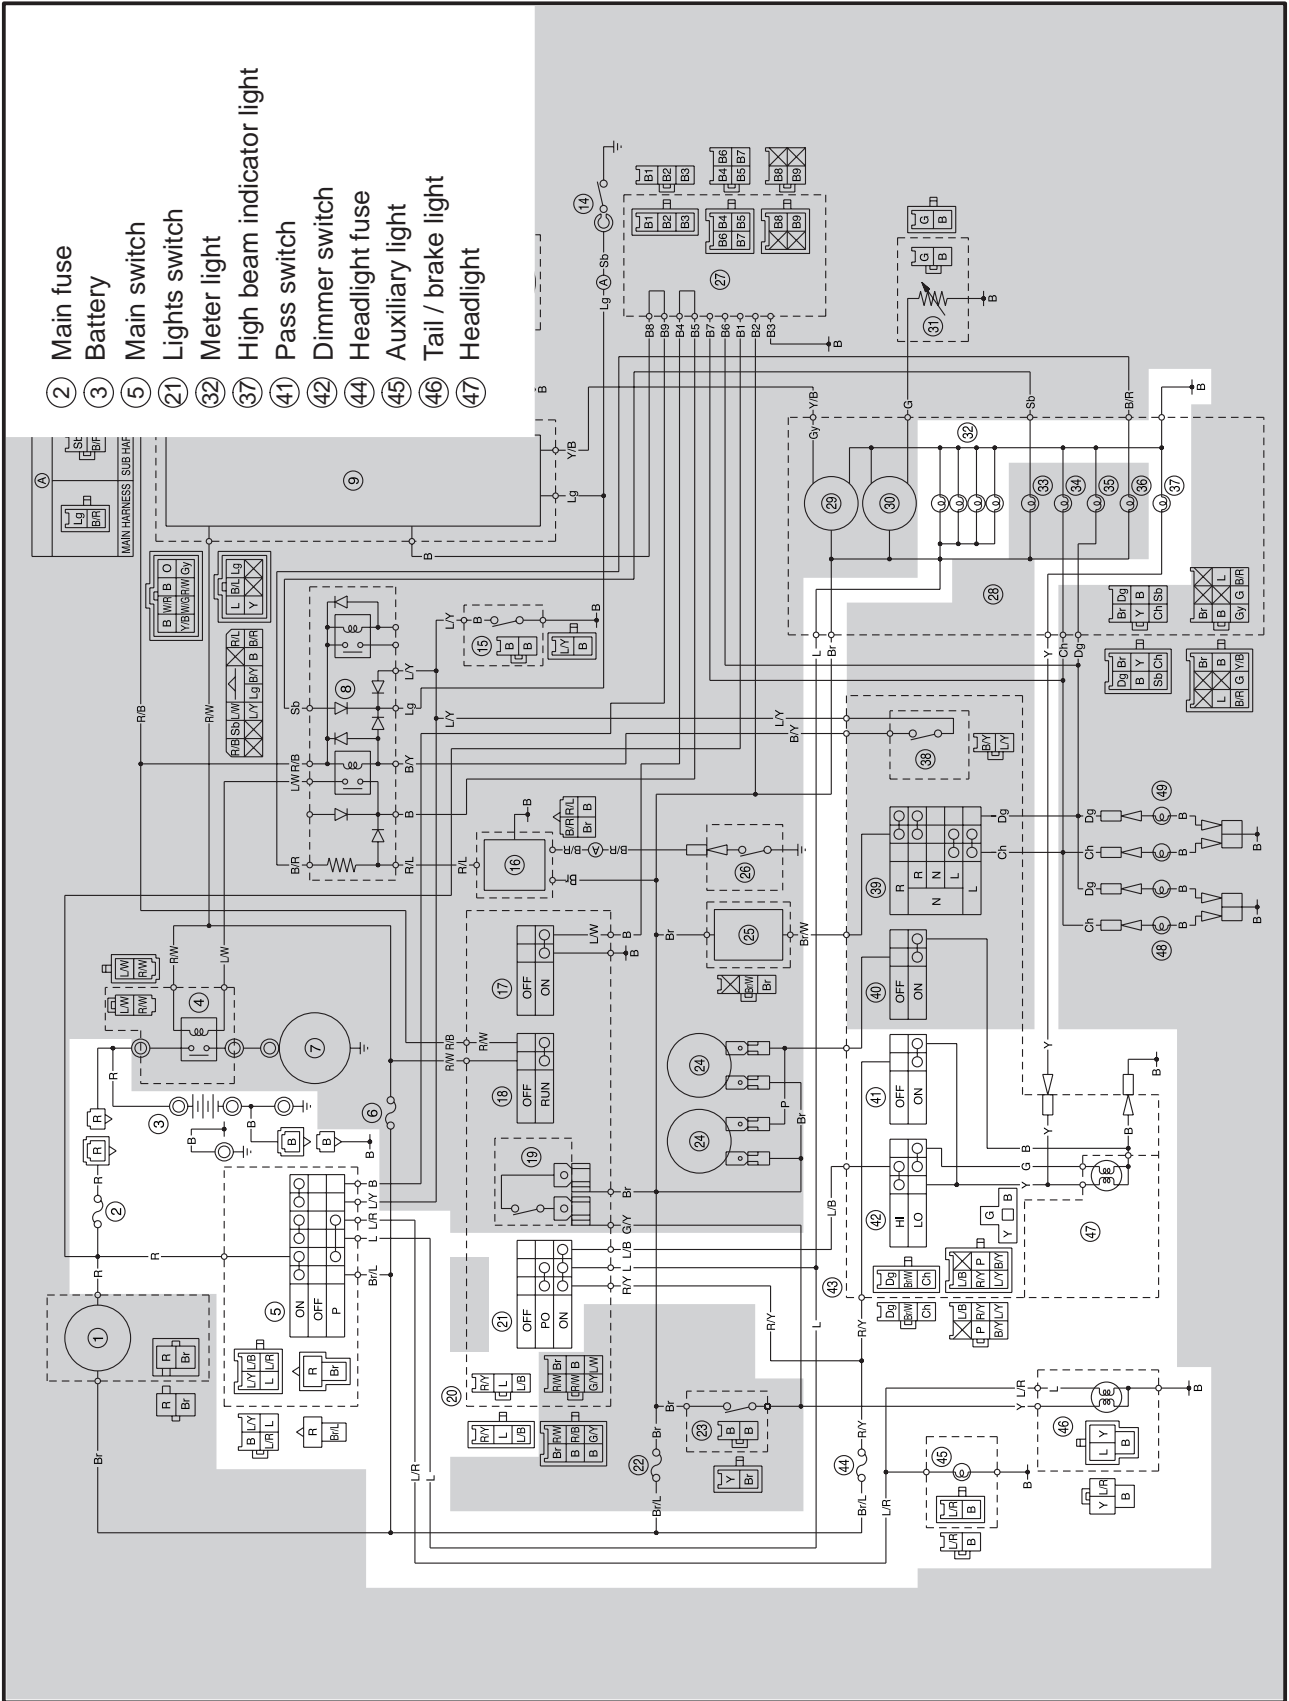

EAS00781

## TROUBLESHOOTING

**Any of the following fail to light: headlight, high beam indicator light, taillight, auxiliary light (for Europe) or meter light.**

Check:

1. main, and headlight fuses
2. battery
3. main switch
4. lights switch (for Europe)
5. dimmer switch
6. pass switch
7. wiring  
(of the entire charging system)

### NOTE:




- Before troubleshooting, remove the following part(-s):
  - 1) seat
  - 2) fuel tank
  - 3) headlight unit
- Troubleshoot with the following special tool(-s).

	<p><b>Pocket tester</b> 90890-03112</p>
---	---

EAS00738

<p><b>1. Main, and headlight fuses</b></p> <p><input type="checkbox"/> Check the main, and headlight fuses for continuity. Refer to "CHECKING THE FUSES" in chapter 3.</p> <p><input type="checkbox"/> Are the main, and headlight fuses OK?</p>
<p>↓ YES      ↓ NO</p>
<p>Replace the fuse(-s).</p>

EAS00739

<p><b>2. Battery</b></p> <p><input type="checkbox"/> Check the condition of the battery. Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.</p>		
<table border="1"> <tr> <td style="text-align: center;"></td> <td> <p><b>Open-circuit voltage</b> 12.8 V or more at 20°C</p> </td> </tr> </table>		<p><b>Open-circuit voltage</b> 12.8 V or more at 20°C</p>
	<p><b>Open-circuit voltage</b> 12.8 V or more at 20°C</p>	
<p><input type="checkbox"/> Is the battery OK?</p>		
<p>↓ YES      ↓ NO</p>		
<p><input type="checkbox"/> Clean the battery terminals. <input type="checkbox"/> Recharge or replace the battery.</p>		

EAS00749

<p><b>3. Main switch</b></p> <p><input type="checkbox"/> Check the main switch for continuity. Refer to "CHECKING THE SWITCHES".</p> <p><input type="checkbox"/> Is the main switch OK?</p>
<p>↓ YES      ↓ NO</p>
<p>Replace the main switch.</p>

EAS00783

<p><b>4. Lights switch (for Europe)</b></p> <p><input type="checkbox"/> Check the lights switch for continuity. Refer to "CHECKING THE SWITCHES".</p> <p><input type="checkbox"/> Is the lights switch OK?</p>
<p>↓ YES      ↓ NO</p>
<p>The lights switch is faulty. Replace the right handlebar switch.</p>

# LIGHTING SYSTEM



EAS00784

5. Dimmer switch  
 Check the dimmer switch for continuity. Refer to "CHECKING THE SWITCHES".  
 Is the dimmer switch OK?



The dimmer switch is faulty. Replace the left handlebar switch.

EAS00786

6. Pass switch  
 Check the pass switch for continuity. Refer to "CHECKING THE SWITCHES".  
 Is the pass switch OK?



The pass switch is faulty. Replace the left handlebar switch.

EAS00787

7. Wiring  
 Check the entire lighting system's wiring. Refer to "CIRCUIT DIAGRAM".  
 Is the lighting system's wiring properly connected and without defects?



Check the condition of each of the lighting system's circuits. Refer to "CHECKING THE LIGHTING SYSTEM".

Properly connect or repair the lighting system's wiring.

EAS00788

## CHECKING THE LIGHTING SYSTEM

1. The headlight and the high beam indicator light fail to come on.

1. Headlight bulb and socket  
 Check the headlight bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".  
 Are the headlight bulb and socket OK?




Replace the headlight bulb, socket or both.

2. Voltage

Connect the pocket tester (DC 20 V) to the headlight and high beam indicator light couplers as shown.

- A When the dimmer switch is set to "☰" (High beam)
- B When the dimmer switch is set to "☷" (Low beam)

Headlight coupler (wire harness side)

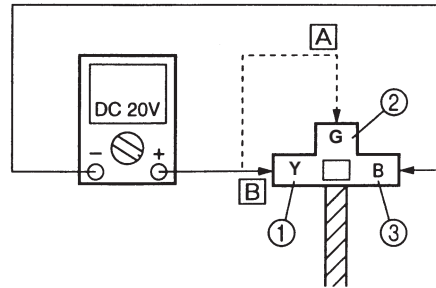



**Headlight**


Tester positive probe → yellow ① or green ②

Tester negative probe → black ③

**High beam indicator light**

Tester positive probe → yellow ④

Tester negative probe → black ⑤

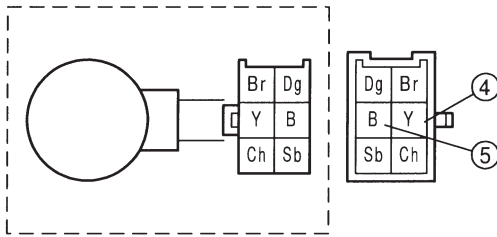

- Set the main switch to "ON".
- Set the light switch to "☀".
- Set the dimmer switch to "☹" or "☹".
- Measure the voltage (12 V) of yellow (green) ② on the headlight coupler (headlight side).
- Is the voltage within specification?

↓ YES

↓ NO

This circuit is OK.


The wiring circuit from the main switch to the headlight coupler is faulty and must be repaired.

**2. Voltage**

- Connect the pocket tester (20 V) to the meter assembly coupler (wire harness side) as shown.

Tester positive probe → blue ①

Tester negative probe → black ②

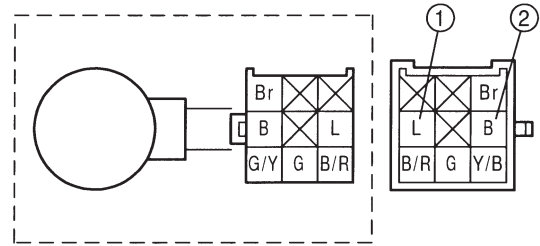

- Set the main switch to "ON".
- Set the light switch to "☹" or "☹".
- Measure the voltage (12 V) of blue ① on the meter assembly coupler (wire harness side).
- Is the voltage within specification?

↓ YES

↓ NO

This circuit is OK.

The wiring circuit from the main switch to the meter assembly coupler is faulty and must be repaired.

EAS00789

**2. A meter light fails to come on.**

**1. Meter light bulb and socket.**

- Check the meter light bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the meter light bulb and socket OK?

↓ YES

↓ NO

Replace the meter light bulb, socket or both.

EAS00790

**3. A tail/brake light fails to come on.**


**1. Tail/brake light bulb and socket**

- Check the tail/brake light bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the tail/brake light bulb and socket OK?

↓ YES

↓ NO

Replace the tail/brake light bulb, socket or both.



2. Voltage

Ⓞ Connect the pocket tester (DC 20 V) to the tail/brake light coupler (wire harness side) as shown.

**Tester positive probe → blue/red ①**  
**Tester negative probe → black ②**

Ⓞ Set the main switch to "ON".  
 Ⓞ Set the light switch to "ΞD DΞ" or "☀".  
 Ⓞ Measure the voltage (12 V) of blue/red ① on the tail/brake light coupler (wire harness side).  
 Ⓞ Is the voltage within specification?

↓ YES

↓ NO

This circuit is OK.

The wiring circuit from the main switch to the tail/brake light coupler is faulty and must be repaired.

2. Voltage

Ⓞ Connect the pocket tester (DC 20 V) to the auxiliary light couplers (wire harness side) as shown.

**Tester positive probe → blue/red ①**  
**Tester negative probe → black ②**

Ⓞ Set the main switch to "ON".  
 Ⓞ Set the light switch to "ΞD DΞ" or "☀".  
 Ⓞ Measure the voltage (12 V) of blue/red ① on the auxiliary light couplers (wire harness side).  
 Ⓞ Is the voltage within specification?

↓ YES

↓ NO

This circuit is OK.

The wiring circuit from the main switch to the auxiliary light connectors is faulty and must be repaired.

EB805413

### 4. The auxiliary light fails to come on. (for Europe)

1. Auxiliary light bulb and socket

Ⓞ Check the auxiliary light bulb and socket for continuity.  
 Refer to "CHECKING THE BULBS AND BULB SOCKETS".  
 Ⓞ Are the auxiliary light bulb and socket OK?

↓ YES


↓ NO

Replace the auxiliary light bulb, socket or both.



EAS00793

## SIGNALING SYSTEM CIRCUIT DIAGRAM

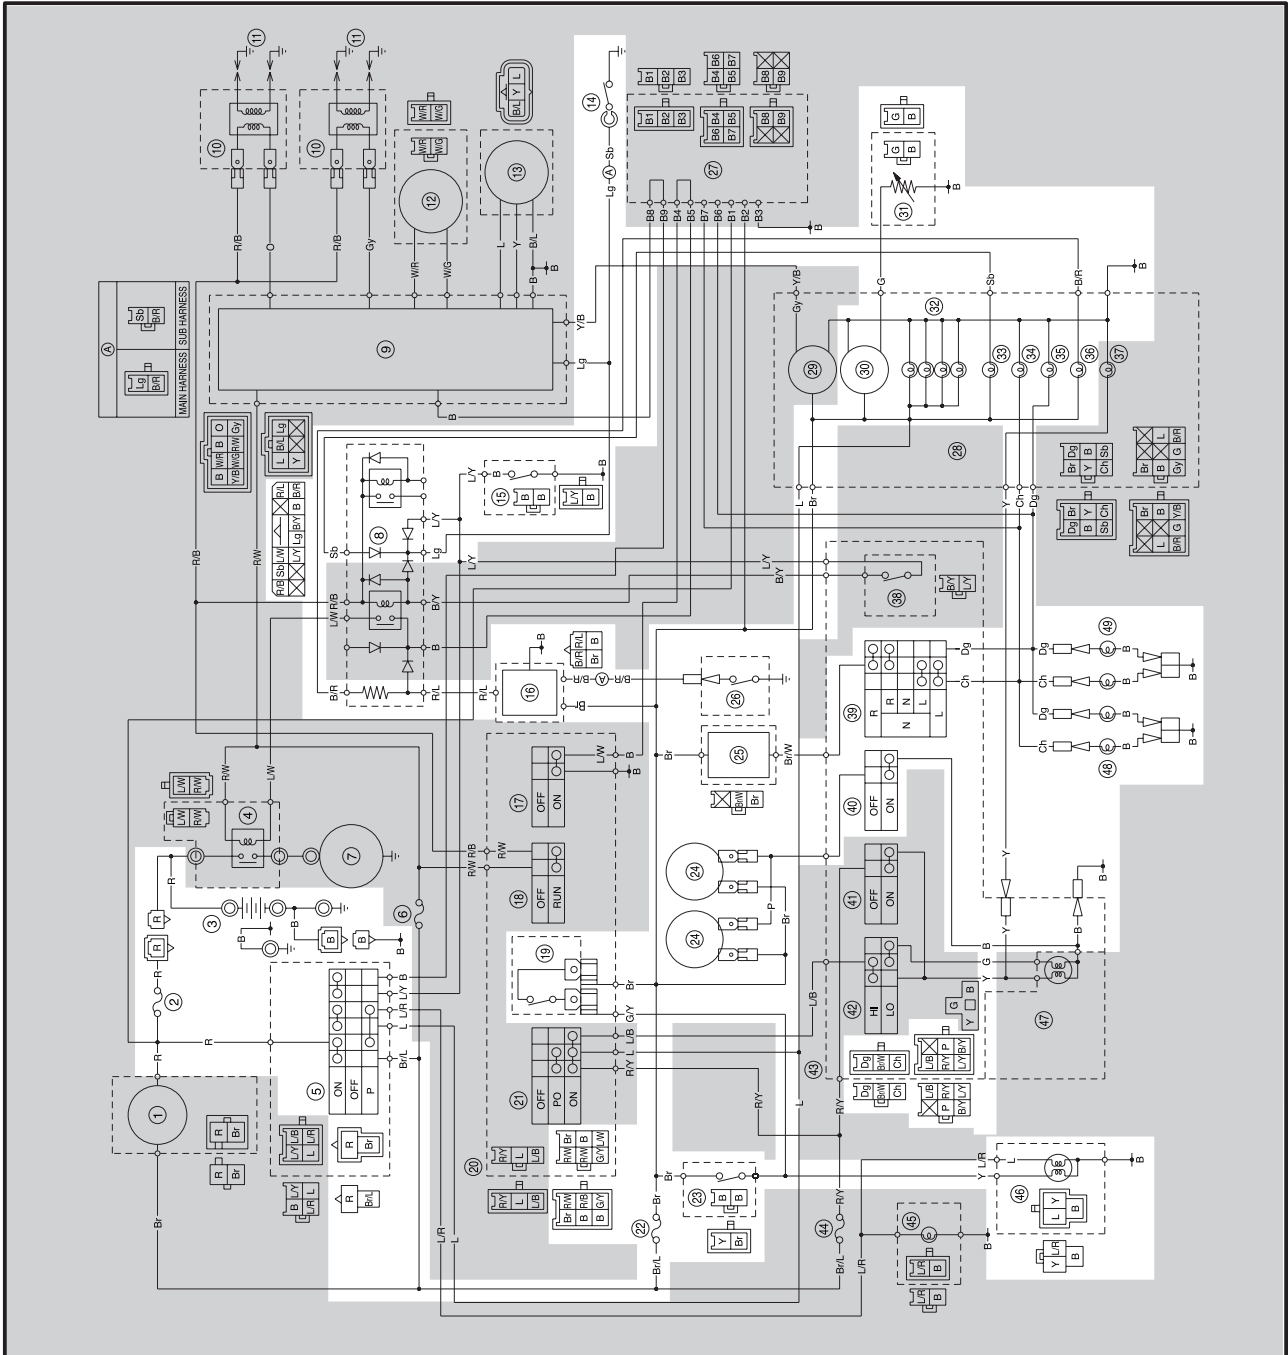

- ② Main fuse
- ③ Battery
- ⑤ Main switch
- ⑭ Neutral switch
- ⑮ Oil level relay
- ⑰ Front brake light switch
- ⑳ Signaling system fuse
- ㉓ Rear brake light switch
- ㉔ Horn
- ㉕ Flasher relay
- ㉖ Oil level switch
- ㉗ Fuel gauge
- ㉘ Fuel sender
- ㉚ Neutral indicator light
- ㉛ Turn signal indicator light (left)
- ㉜ Turn signal indicator light (right)
- ㉞ Oil level warning light
- ㉟ Turn signal switch
- ㊱ Horn switch
- ㊲ Tail/brake light
- ㊳ Front turn signal light
- ㊴ Rear turn signal light

# SIGNALING SYSTEM



EB806010

## TROUBLESHOOTING

- Any of the following fail to light: turn signal light, brake light or an indicator light.
- The horn fails to sound.

Check:

1. main and signaling system fuses
2. battery
3. main switch
4. wiring  
(of the entire signaling system)

### NOTE:

- Before troubleshooting, remove the following part(-s):
  - 1) seats
  - 2) fuel tank
  - 3) headlight unit
- Troubleshoot with the following special tool(-s).

	<b>Pocket tester</b> 90890-03112
--	-------------------------------------

EAS00738

<p>1. Main and signaling system fuses</p> <p><input type="radio"/> Check the main and signaling system fuses for continuity. Refer to "CHECKING AND CHANGING THE FUSES" in chapter 3.</p> <p><input type="radio"/> Are the main and signaling system fuses OK?</p>
--

↓ YES
↓ NO

Replace the fuse(-s).

EAS00739

<p>2. Battery</p> <p><input type="radio"/> Check the condition of the battery. Refer to "CHECKING THE BATTERY" in chapter 3.</p>		
<table border="1"> <tr> <td style="text-align: center;"></td> <td> <p><b>Open-circuit voltage</b> 12.8 V or more at 20°C</p> </td> </tr> </table>		<p><b>Open-circuit voltage</b> 12.8 V or more at 20°C</p>
	<p><b>Open-circuit voltage</b> 12.8 V or more at 20°C</p>	
<p><input type="radio"/> Is the battery OK?</p>		

↓ YES
↓ NO

Clean the battery terminals.  
 Recharge or replace the battery.

EAS00749

<p>3. Main switch</p> <p><input type="radio"/> Check the main switch for continuity. Refer to "CHECKING THE SWITCHES".</p> <p><input type="radio"/> Is the main switch OK?</p>
--

↓ YES
↓ NO

Replace the main switch.

EAS00795

<p>4. Wiring</p> <p><input type="radio"/> Check the entire signaling system's wiring. Refer to "CIRCUIT DIAGRAM".</p> <p><input type="radio"/> Is the signaling system's wiring properly connected and without defects?</p>
---

↓ YES
↓ NO

Check the condition of each of the signaling system's circuits. Refer to "CHECKING THE SIGNALING SYSTEM".

Properly connect or repair the signaling system's wiring.



EAS00796

## CHECKING THE SIGNALING SYSTEM

### 1. The horn fails to sound.

**1. Horn switch**

- Check the horn switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the horn switch OK?




Replace the left handlebar switch.

**2. Voltage**

- Connect the pocket tester (DC 20 V) to the horn connector at the horn terminal as shown.

**Tester positive probe → brown ①**  
**Tester negative probe → ground**

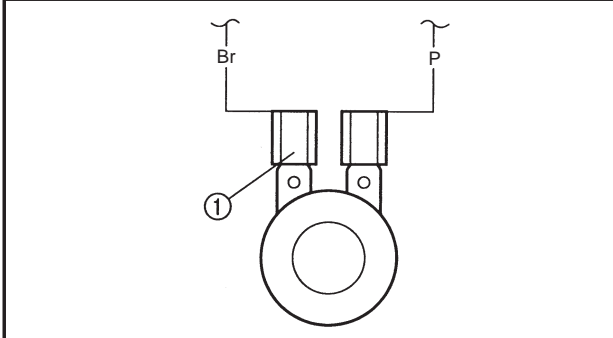


- Set the main switch to "ON".
- Measure the voltage (12 V) of brown at the horn terminal.
- Is the voltage within specification?



The wiring circuit from the main switch to the horn connector is faulty and must be repaired.

### 3. Horn

- Disconnect the black connector at the horn terminal.
- Connect a jumper lead ① to the horn terminal and ground the jumper lead.
- Set the main switch to "ON".
- Does the horn sound?

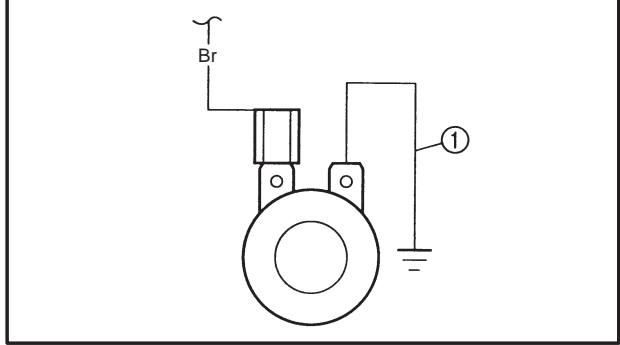


The horn is OK.


### 4. Voltage

- Connect the pocket tester (DC 20 V) to the horn connector at the black terminal as shown.

**Tester positive probe → black ①**  
**Tester negative probe → ground**

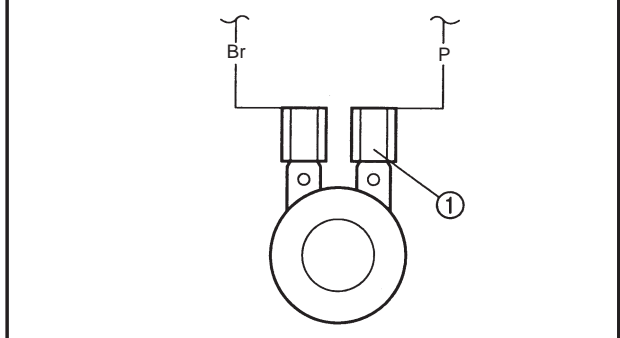

- Set the main switch to "ON".
- Measure the voltage (12 V) of black ① at the horn terminal.
- Is the voltage within specification?



Repair or replace the horn.

Replace the horn.

# SIGNALING SYSTEM



EAS00797

2. A tail/brake light fails to come on.

1. Tail/brake light bulb and socket

Ⓞ Check the tail/brake light bulb and socket for continuity.  
Refer to "CHECKING THE BULBS AND BULB SOCKETS".

Ⓞ Are the tail/brake light bulb and socket OK?

↓ YES

↓ NO

Replace the tail/brake light bulb, socket or both.

2. Brake light switches

Ⓞ Check the brake light switches for continuity.  
Refer to "CHECKING THE SWITCHES".

Ⓞ Is the brake light switch OK?

↓ YES


↓ NO

Replace the brake light switch.

3. Voltage

Ⓞ Connect the pocket tester (DC 20 V) to the tail/brake light coupler (wire harness side) as shown.

Tester positive probe → yellow ①  
Tester negative probe → black ②

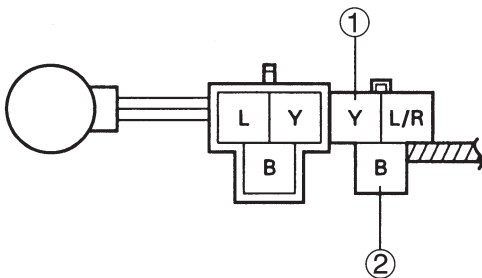

Ⓞ Set the main switch to "ON".

Ⓞ Pull in the brake lever or push down on the brake pedal.

Ⓞ Measure the voltage (12 V) of yellow at the tail/brake light coupler (wire harness side).

Ⓞ Is the voltage within specification?

↓ YES

↓ NO

This circuit is OK.

The wiring circuit from the main switch to the tail/brake light coupler is faulty and must be repaired.

EAS00799

3. A turn signal light, turn signal indicator light or both fail to blink.

1. Turn signal light bulb and socket

Ⓞ Check the turn signal light bulb and socket for continuity.  
Refer to "CHECKING THE BULBS AND BULB SOCKETS".

Ⓞ Are the turn signal light bulb and socket OK?

↓ YES

↓ NO

Replace the turn signal light bulb, socket or both.

# SIGNALING SYSTEM

ELEC



2. Turn signal switch

⊙ Check the turn signal for continuity.  
Refer to "CHECKING THE SWITCHES".

⊙ Is the turn signal switch OK?




Replace the left handlebar switch.

3. Voltage

⊙ Connect the pocket tester (DC 20 V) to the flasher relay coupler (wire harness side) as shown.

Tester positive probe → brown ①  
Tester negative probe → ground

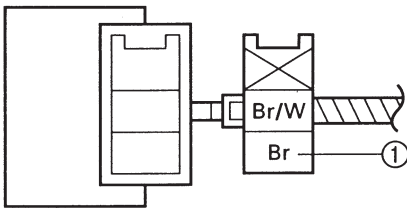

⊙ Set the main switch to "ON".

⊙ Measure the voltage (12 V) of brown ① at the flasher relay coupler (wire harness side).

⊙ Is the voltage within specification?




The wiring circuit from the main switch to the flasher relay coupler (flasher relay side) is faulty and must be repaired.

4. Voltage

⊙ Connect the tester (DC 20 V) to the flasher relay coupler (wire harness side) as shown.

Tester positive probe → brown/white ①  
Tester negative probe → ground

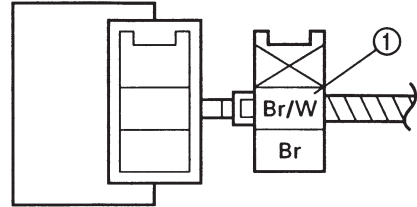

⊙ Set the main switch to "ON".

⊙ Set the turn signal switch to "←" or "→".

⊙ Measure the voltage (12 V) or brown/white at the flasher relay coupler (wire harness side).

⊙ Is the voltage within specification?



The flasher relay is faulty and must be replaced.


5. Voltage

⊙ Connect the pocket tester (DC 20 V) to the turn signal light connectors or the meter assembly coupler (wire harness side) as shown.

- Ⓐ Turn signal light
- Ⓑ Turn signal indicator light

**Left turn signal light**  
Tester positive probe → chocolate ①  
Tester negative probe → ground

**Right turn signal light**  
Tester positive probe → dark green ②  
Tester negative probe → ground ②

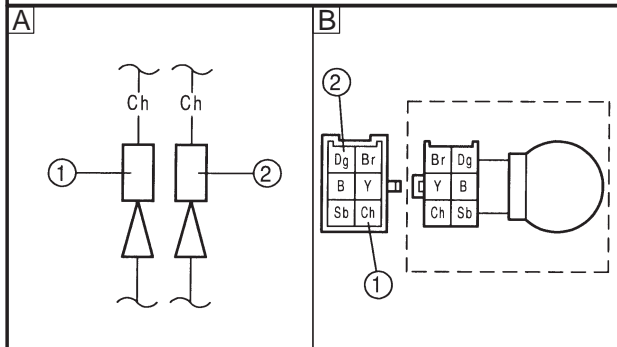

# SIGNALING SYSTEM



- ⊙ Set the main switch to "ON".
- ⊙ Set the turn signal switch to "←" or "→".
- ⊙ Measure the voltage (12 V) of chocolate ① or dark green ② at the turn signal light connector (wire harness side).
- ⊙ Is the voltage within specification?

↓ YES

↓ NO

This circuit is OK.

The wiring circuit from the turn signal switch to the turn signal light connector is faulty and must be repaired.

EAS00800

## 4. The neutral indicator light fails to come on.

1. Neutral indicator light bulb and socket
- ⊙ Check the neutral indicator light bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
  - ⊙ Are the neutral indicator light bulb and socket OK?

↓ YES

↓ NO

Replace the neutral indicator light bulb, socket or both.

2. Neutral switch
- ⊙ Check the neutral switch for continuity. Refer to "CHECKING THE SWITCHES".
  - ⊙ Is the neutral switch OK?

↓ YES

↓ NO


Replace the neutral switch.

EAS00760

## 3. Diode

- ⊙ Disconnect the starting circuit cutoff relay from the coupler.
- ⊙ Connect the pocket tester ( $\Omega \times 1$ ) to the starting circuit cutoff relay terminals as shown.
- ⊙ Measure the starting circuit cutoff relay for continuity as follows.

Tester positive probe → light green ① Tester negative probe → sky blue ②	<b>Continuity</b>
Tester positive probe → sky blue ② Tester negative probe → light green ①	<b>No continuity</b>

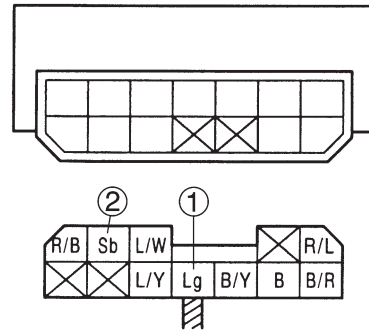

### NOTE:

When you switch the "-" and "+" leads of the digital pocket tester the readings in the above chart will be reversed.

- ⊙ Are the tester readings correct?

↓ YES

↓ NO

Replace the relay unit.

# SIGNALING SYSTEM



**4. Voltage**

Connect the pocket tester (DC 20 V) to the meter assembly coupler (wire harness side) as shown.

**Tester positive probe → brown ①**  
**Tester negative probe → sky blue ②**

Set the main switch to "ON".  
 Measure the voltage (12 V) of brown ① and sky blue ② at the meter assembly coupler.  
 Is the voltage within specification?

↓ YES      ↓ NO

This circuit is OK.

The wiring circuit from the main switch to the meter light bulb coupler is faulty and must be repaired.

EAS00802

## 5. The oil level warning light fails to come on.

**1. Oil level warning light bulb and socket**

Check the oil level warning light bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS"  
 Are the oil level warning light bulb and socket OK?

↓ YES      ↓ NO

Replace the oil level warning light bulb, socket or both.

**2. Oil level switch**

Drain the engine oil and remove the oil level switch from the oil pan.  
 Check the oil level switch for continuity. Refer to "CHECKING THE SWITCHES".  
 Is the oil level switch OK?

↓ YES      ↓ NO


Replace the oil level switch.

**3. Oil level relay**

Disconnect the oil level relay from the coupler.  
 Connect the pocket tester ( $\Omega \times 1$ ) and battery (12 V) to the oil level relay terminals as shown.

**Battery positive terminal → brown ①**  
**Battery negative terminal → black/red ②**

**Tester positive probe → red/blue ③**  
**Tester negative probe → black ④**

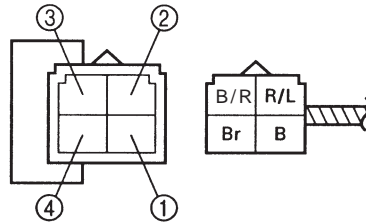

Does the oil level relay have continuity between red/blue and black?

↓ YES      ↓ NO

Replace the oil level relay.

# SIGNALING SYSTEM

**ELEC**



**4. Starting circuit cutoff relay**

- Disconnect the relay unit from the coupler.
- Connect the pocket tester ( $\Omega \times 1$ ) to the relay unit terminals as shown.

**Tester positive probe** → red/blue ①  
**Tester negative probe** → brack/red ②

○ Measure the relay unit resistance.

**Relay unit resistance**  
 $8.2 \Omega$  at  $20^\circ\text{C}$

○ Is the relay unit OK?

↓ YES      ↓ NO

Replace the starting circuit cutoff relay.

**5. Voltage**

- Connect the pocket tester (DC 20 V) to the meter assembly coupler (wire harness side) as shown.

**Tester positive probe** → brown ①  
**Tester negative probe** → black/red ②

- Set the main switch to "ON".
- Measure the voltage (12 V) of brown ① and black/red at the meter assembly coupler.
- Is the voltage within specification?

↓ YES      ↓ NO

This circuit is OK.

The wiring circuit from the main switch to the meter assembly coupler is faulty and must be repaired.

EAS00804

## 6. The fuel level gauge fails to operate.

**1. Fuel sender**

- Disconnect the fuel sender coupler from the wire harness.
- Drain the fuel from the fuel tank and remove the fuel sender from the fuel tank.
- Connect the pocket tester to the fuel sender coupler as shown.

**Tester positive probe** → green ①  
**Tester negative probe** → black ②

○ Measure the fuel sender resistance.

**Fuel sender resistance (up position)**  
 $4 \sim 10 \Omega$  at  $20^\circ\text{C}$   
**Fuel sender resistance (down position)**  
 $90 \sim 100 \Omega$  at  $20^\circ\text{C}$

○ Is the fuel sender OK?


↓ YES      ↓ NO

Replace the fuel sender.

**2. Voltage**

Connect the pocket tester (DC 20 V) to the meter assembly coupler (wire harness side) as shown.

**Tester positive probe → brown ①**  
**Tester negative probe → black ②**

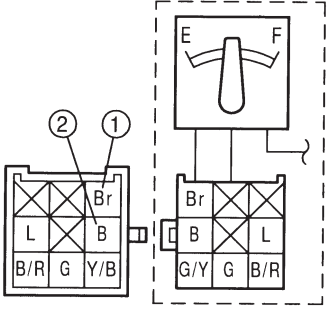


Set the main switch to "ON".  
 Measure the voltage (12 V).  
 Is the voltage within specification?

YES  NO

The wiring circuit from the main switch to the meter assembly coupler is faulty and must be repaired.

**3. Fuel level gauge**

Set the main switch to "ON".  
 Move the float up ① or down ②.

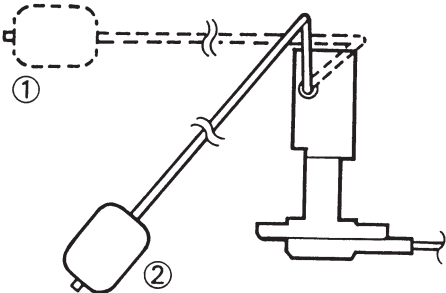

Check that the fuel level gauge needle move to "F" to "E".  
**NOTE:** \_\_\_\_\_  
 Before reading the fuel level gauge, leave the float in one position (either up or down) for at least three minutes.

Does the fuel level gauge needle move appropriately?

YES  NO

This circuit is OK.

Replace the fuel level gauge.



EAS00834

**SELF-DIAGNOSIS**

The XJR1300 (L) features a self-diagnosing system for the following circuit(-s):


- ① Throttle position sensor
- ② Ignition circuit

If any of these circuits are defective, their respective condition codes will be displayed on the tachometer when the main switch is set to "ON" (irrespective of whether the engine is running or not). The engine is not operated condition code at 2,000 r/min.

Circuit	Defect(-s)	System response	Condition code
Throttle position sensor	<ul style="list-style-type: none"> <li>① Disconnected</li> <li>② Short-circuit</li> <li>③ Locked</li> </ul>	<ul style="list-style-type: none"> <li>① The ignitor unit stays set to the wide-open throttle ignition timing. The motorcycle can be ridden.</li> <li>② The tachometer displays the condition code.</li> </ul>	3,000 r/min
Ignition circuit	<ul style="list-style-type: none"> <li>① Incorrect input signal for side stand switch and neutral switch.</li> </ul>	<ul style="list-style-type: none"> <li>① No ignition</li> <li>② The tachometer displays the condition code.</li> </ul>	2,000 r/min


**Tachometer display sequence**

**1) Throttle position sensor**

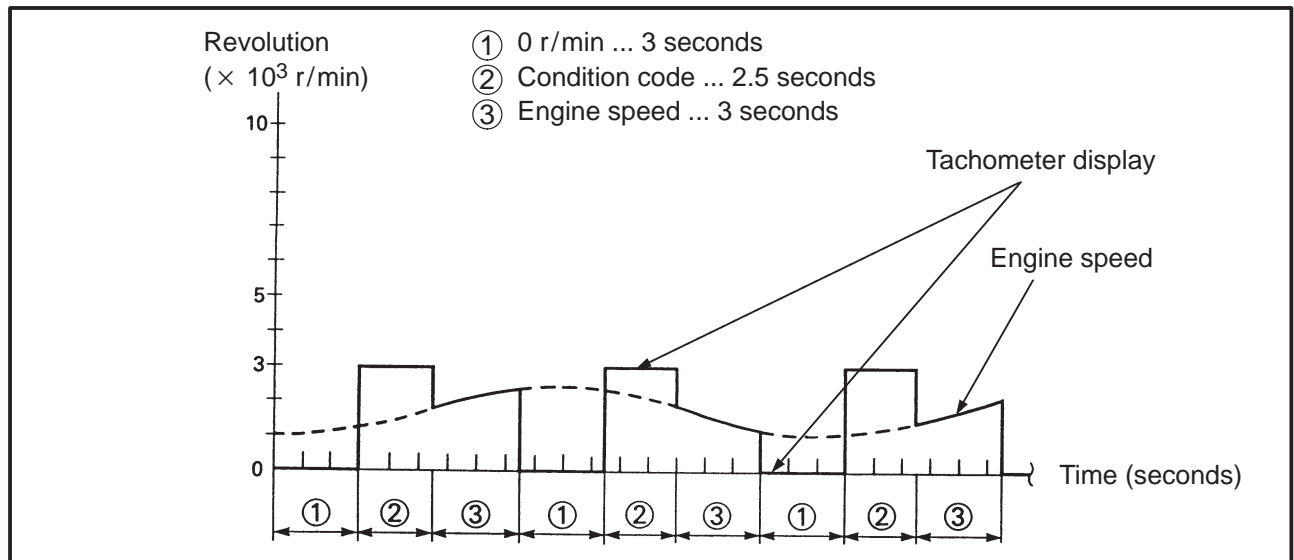

If the engine is stopped, the engine speed ③ is 0 r/min.


**2) Ignition circuit**

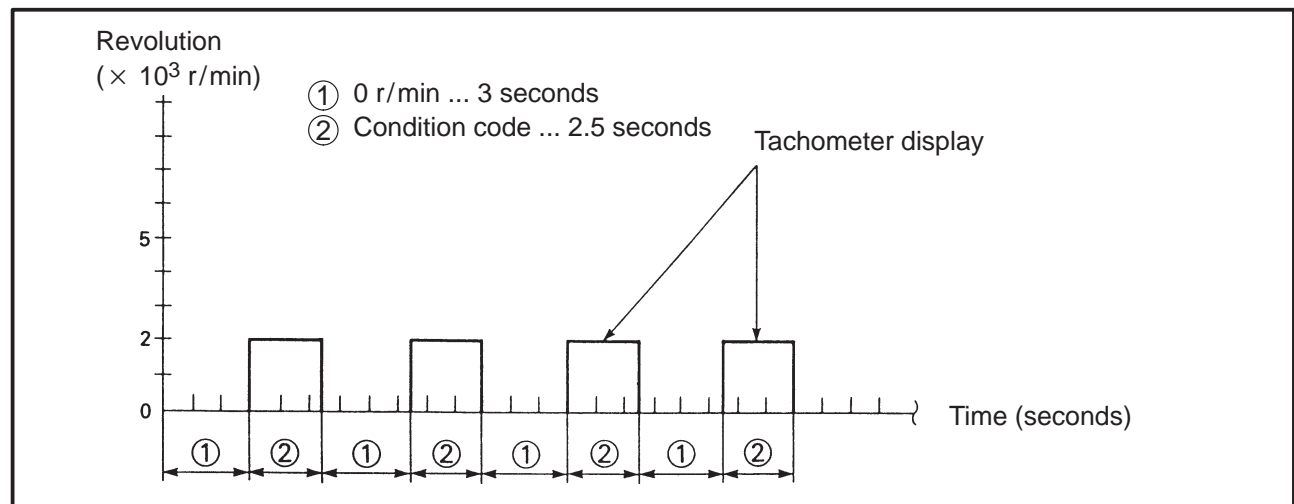



# SELF-DIAGNOSIS

**ELEC**



EAS00835

## TROUBLESHOOTING

**The tachometer starts to display the self-diagnosis sequence.**

Check:

1. throttle position sensor
2. ignition circuit

**NOTE:**

○ Before troubleshooting, remove the following part(-s):

- 1) rider seat
- 2) fuel tank
- 3) air filter case


○ Troubleshoot with the following special tool(-s).



**Pocket tester**  
**90890-03112**

EAS00836

## 1. Throttle position sensor CIRCUIT DIAGRAM

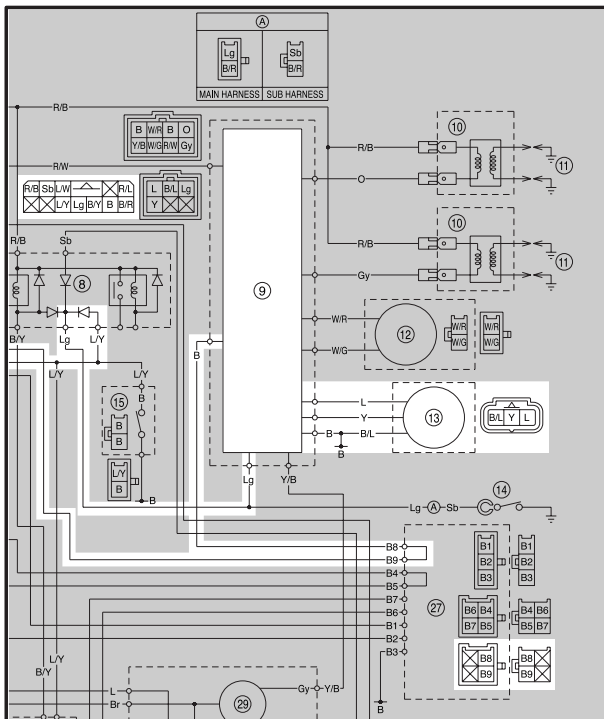

- ⑬ Throttle position sensor
- ⑨ Ignitor unit

### 1. Wire harness

- Check the wire harness for continuity. Refer to "CIRCUIT DIAGRAM".
- Is the wire harness OK?



Repair or replace the wire harness.

EBB12401

### 2. Throttle position sensor

- Check the throttle position sensor for continuity. Refer to "CHECKING AND ADJUSTING THE THROTTLE POSITION SENSOR" in chapter 6.
- Is the throttle position sensor OK?




Replace the ignitor unit.

Replace the throttle position sensor.

# SELF-DIAGNOSIS



## 2. Ignition circuit CIRCUIT DIAGRAM

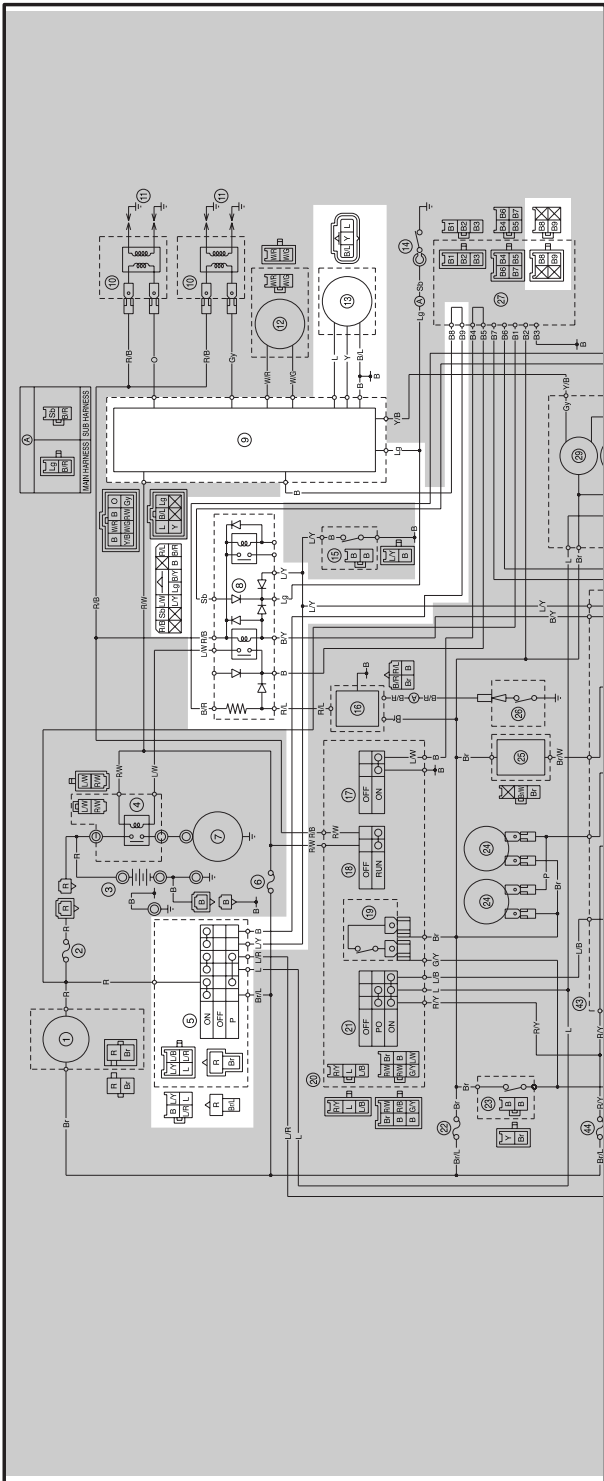

- ⑤ Main switch
- ⑧ Starting circuit cutoff relay
- ⑨ Ignitor unit

EAS00749

3. Main switch

○ Check the main switch for continuity.  
Refer to "CHECKING THE SWITCHES".

○ Is the main switch OK?

↓ YES

↓ NO

Replace the main switch.

EB812400

4. Wire harness

○ Check the wire harness for continuity.  
Refer to "CIRCUIT DIAGRAM".

○ Is the wire harness OK?

↓ YES

↓ NO

Repair or replace the wire harness.

EAS00760



5. Starting circuit cutoff relay


○ Disconnect the starting circuit cutoff relay from the coupler.

○ Connect the pocket tester ( $\Omega \times 1$ ) to the starting circuit cutoff relay terminals as shown.

○ Measure the starting circuit cutoff relay for continuity as follows.

Tester positive probe → light green ① Tester negative probe → blue/yellow ②	Continuity
Tester positive probe → blue/yellow ② Tester negative probe → light green ①	No continuity

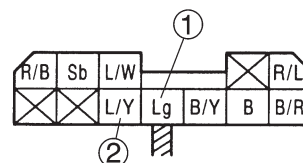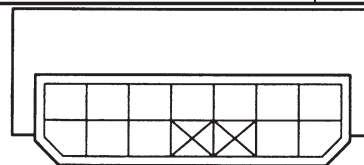



**NOTE:** \_\_\_\_\_  
When you switch the “-” and “+” leads of the digital pocket tester the readings in the above chart will be reversed.

Are the tester readings correct?

↓ YES

↓ NO

Replace the ignitor unit.

Replace the relay unit.

?

TRBL

SHTG

88

## CHAPTER 8. TROUBLESHOOTING

<b>STARTING PROBLEMS</b> .....	8-1
ENGINE .....	8-1
FUEL SYSTEM .....	8-1
ELECTRICAL SYSTEMS .....	8-1
 <b>INCORRECT ENGINE IDLING SPEED</b> .....	 8-2
ENGINE .....	8-2
FUEL SYSTEM .....	8-2
ELECTRICAL SYSTEMS .....	8-2
 <b>POOR MEDIUM-AND-HIGH-SPEED PERFORMANCE</b> .....	 8-2
ENGINE .....	8-2
FUEL SYSTEM .....	8-2
 <b>FAULTY GEAR SHIFTING</b> .....	 8-2
SHIFTING IS DIFFICULT .....	8-2
SHIFT PEDAL DOES NOT MOVE .....	8-2
JUMPS OUT OF GEAR .....	8-2
 <b>FAULTY CLUTCH</b> .....	 8-3
CLUTCH SLIPS .....	8-3
CLUTCH DRAGS .....	8-3
 <b>OVERHEATING</b> .....	 8-3
ENGINE .....	8-3
FUEL SYSTEM .....	8-3
CHASSIS .....	8-3
ELECTRICAL SYSTEMS .....	8-3
 <b>POOR BRAKING PERFORMANCE</b> .....	 8-4
 <b>FAULTY FRONT FORK LEGS</b> .....	 8-4
LEAKING OIL .....	8-4
MALFUNCTION .....	8-4
 <b>UNSTABLE HANDLING</b> .....	 8-4
 <b>FAULTY LIGHTING AND SIGNALING SYSTEM</b> .....	 8-5
HEADLIGHT DOES NOT LIGHT .....	8-5
HEADLIGHT BULB BURNT OUT .....	8-5
TAIL/BRAKE LIGHT DOES NOT LIGHT .....	8-5
TAIL/BRAKE LIGHT BULB BURNT OUT .....	8-5
TURN SIGNAL DOES NOT LIGHT .....	8-5
TURN SIGNAL BUNKS SLOWLY .....	8-5
TURN SIGNAL REMAINS LIT .....	8-5
TURN SIGNAL BLINKS QUICKLY .....	8-5
HORN DOES NOT SOUND .....	8-5

## TROUBLESHOOTING

### NOTE:

The following guide for troubleshooting does not cover all the possible causes of trouble. It should be helpful, however, as a guide to basic troubleshooting. Refer to the relative procedure in this manual for checks, adjustments, and replacement of parts.

## STARTING PROBLEMS

### ENGINE

#### Cylinders and cylinder head(-s)

- Loose spark plug
- Loose cylinder head
- Damaged cylinder head gasket
- Worn or damaged cylinder
- Incorrect valve clearance
- Incorrectly sealed valve
- Incorrect valve-to-valve-seat contact
- Incorrect valve timing
- Faulty valve spring
- Seized valve

#### Pistons and piston rings

- Incorrectly installed piston ring
- Damaged, worn or fatigued piston ring
- Seized piston ring
- Seized or damaged piston

#### Air filter

- Incorrectly installed air filter
- Clogged air filter element

#### Crankcase and crankshaft

- Incorrectly assembled crankcase
- Seized crankshaft

### ELECTRICAL SYSTEMS

#### Battery

- Faulty battery
- Discharged battery

#### Fuses

- Blown, damaged or incorrect fuse
- Incorrectly installed fuse

#### Spark plugs

- Incorrect spark plug gap
- Incorrect spark plug heat range
- Fouled spark plug
- Worn or damaged electrode
- Worn or damaged insulator
- Faulty spark plug cap

#### Ignition coils

- Damaged ignition coil
- Broken or shorted primary or secondary coils
- Faulty spark plug lead

### FUEL SYSTEM

#### Fuel tank

- Empty fuel tank
- Clogged fuel filter
- Clogged fuel tank breather hose
- Deteriorated or contaminated fuel

#### Fuel cock

- Clogged or damaged fuel hose/vacuum hose

#### Carburetors

- Deteriorated or contaminated fuel
- Clogged pilot jet
- Clogged pilot air passage
- Sucked-in air
- Damaged float
- Worn needle valve
- Incorrectly installed needle valve seat
- Incorrect fuel level
- Incorrectly installed pilot jet
- Clogged starter jet
- Faulty starter plunger
- Incorrectly adjusted starter cable

#### Ignition system

- Faulty ignitor unit
- Faulty pickup coil

#### Switches and wiring

- Faulty main switch
- Faulty engine stop switch
- Broken or shorted wiring
- Faulty neutral switch
- Faulty start switch
- Faulty sidestand switch
- Faulty clutch switch
- Incorrectly grounded circuit
- Loose connections

#### Starting system

- Faulty starter motor
- Faulty starter relay
- Faulty starting circuit cutoff relay
- Faulty starter clutch

## INCORRECT ENGINE IDLING SPEED/POOR MEDIUM AND-HIGH-SPEED PERFORMANCE/FAULTY GEAR SHIFTING

TRBL  
SHTG



EAS00846

### INCORRECT ENGINE IDLING SPEED

#### ENGINE

##### Cylinders and cylinder head

- Incorrect valve clearance
- Damaged valve train components

##### Air filter

- Clogged air filter element

#### FUEL SYSTEM

##### Carburetors

- Faulty starter plunger
- Loose or clogged pilot jet
- Loose or clogged pilot air jet
- Damaged or loose carburetor joint
- Incorrectly synchronized carburetors
- Incorrectly adjusted engine idling speed (throttle stop screw)
- Incorrect throttle cable free play
- Flooded carburetor

#### ELECTRICAL SYSTEMS

##### Battery

- Faulty battery
- Discharged battery

##### Spark plugs

- Incorrect spark plug gap
- Incorrect spark plug heat range
- Fouled spark plug
- Worn or damaged electrode
- Worn or damaged insulator
- Faulty spark plug cap

##### Ignition coils

- Broken or shorted primary or secondary coils
- Faulty spark plug lead
- Damaged ignition coil

##### Ignition system

- Faulty ignition unit
- Faulty pickup coil

EAS00848

### POOR MEDIUM-AND-HIGH-SPEED PERFORMANCE

Refer to "STARTING PROBLEMS".

#### ENGINE

##### Air filter

- Clogged air filter element

#### FUEL SYSTEM

##### Carburetors

- Faulty diaphragm
- Incorrect fuel level
- Loose or clogged main jet

EAS00850

### FAULTY GEAR SHIFTING

#### SHIFTING IS DIFFICULT

Refer to "CLUTCH DRAGS".

#### SHIFT PEDAL DOES NOT MOVE

##### Shift shaft

- Incorrectly adjusted shift rod
- Bent shift shaft

##### Shift drum and shift forks

- Foreign object in a shift drum groove
- Seized shift fork
- Bent shift fork guide bar

##### Transmission

- Seized transmission gear
- Foreign object between transmission gears
- Incorrectly assembled transmission

#### JUMPS OUT OF GEAR

##### Shift shaft

- Incorrect shift pedal position
- Incorrectly returned stopper lever

##### Shift forks

- Worn shift fork

##### Shift drum

- Incorrect axial play
- Worn shift drum groove

##### Transmission

- Worn gear dog

EAS00852

## FAULTY CLUTCH

### CLUTCH SLIPS

#### Clutch

- Improperly assembled clutch
- Improperly assembled clutch master cylinder
- Improperly assembled clutch release cylinder
- Loose or fatigued clutch spring
- Loose union bolt
- Worn friction plate
- Worn clutch plate
- Damaged clutch release cylinder

#### Engine oil

- Incorrect oil level
- Incorrect oil viscosity (low)
- Deteriorated oil

EAS00854

## OVERHEATING

### ENGINE

#### Cylinder head(-s) and piston(-s)

- Heavy carbon buildup

#### Engine oil

- Incorrect oil level
- Incorrect oil viscosity
- Inferior oil quality

### FUEL SYSTEM

#### Carburetors

- Incorrect main jet setting
- Incorrect fuel level
- Damaged or loose carburetor joint

#### Air filter

- Clogged air filter element

### CLUTCH DRAGS

#### Clutch

- Unevenly tensioned clutch springs
- Warped pressure plate
- Bent clutch plate
- Swollen friction plate
- Bent clutch pull rod
- Damaged clutch boss
- Burnt primary driven gear bushing
- Damaged clutch release cylinder
- Match marks not aligned

#### Engine oil

- Incorrect oil level
- Incorrect oil viscosity (high)
- Deteriorated oil

### CHASSIS

#### Brakes

- Dragging brake

### ELECTRICAL SYSTEMS

#### Spark plugs

- Incorrect spark plug gap
- Incorrect spark plug heat range

#### Ignition system

- Faulty ignitor unit



## POOR BRAKING PERFORMANCE/FAULTY FRONT FORK LEGS/UNSTABLE HANDLING

TRBL  
SHTG



EAS00857

### POOR BRAKING PERFORMANCE

- Worn brake pad
- Worn brake disc
- Air in hydraulic brake system
- Leaking brake fluid
- Faulty brake caliper piston seal
- Loose union bolt
- Damaged brake hose
- Oil or grease on the brake disc
- Oil or grease on the brake pad
- Incorrect brake fluid level

EAS00860

### FAULTY FRONT FORK LEGS LEAKING OIL

- Bent, damaged or rusty inner tube
- Damaged outer tube
- Incorrectly installed oil seal
- Damaged oil seal lip
- Incorrect oil level (high)
- Loose damper rod assembly bolt
- Damaged damper rod assembly bolt copper washer
- Damaged cap bolt O-ring

### MALFUNCTION

- Bent or damaged inner tube
- Bent or damaged outer tube
- Damaged fork spring
- Worn or damaged outer tube busing
- Bent or damaged damper rod
- Incorrect oil viscosity
- Incorrect oil level

EAS00862

### UNSTABLE HANDLING

#### Handlebar

- Bent or incorrectly installed right handlebar
- Bent or incorrectly installed left handlebar

#### Steering head components

- Incorrectly installed upper bracket
- Incorrectly installed lower bracket (incorrectly tightened ring nut)

- Bent steering stem

- Damaged ball bearing or bearing race

#### Front fork legs

- Uneven oil levels (both front fork legs)
- Unevenly tensioned fork spring (both front fork legs)
- Damaged fork spring
- Bent or damaged inner tube
- Bent or damaged outer tube

#### Swingarm

- Worn bearing or bushing
- Bent or damaged swingarm

#### Rear shock absorber assembly

- Faulty rear shock absorber spring
- Leaking oil or gas

#### Tires

- Uneven tire pressures (front and rear)
- Incorrect tire pressure
- Uneven tire wear

#### Wheels

- Incorrect wheel balance
- Deformed cast wheel
- Damaged wheel bearing
- Bent or loose wheel axle
- Excessive wheel runout

#### Frame

- Bent frame
- Damaged steering head pipe
- Incorrectly installed bearing race

EAS00866

## FAULTY LIGHTING AND SIGNALING SYSTEMS

### HEADLIGHT DOES NOT LIGHT

- Wrong headlight bulb
- Too many electrical accessories
- Hard charging
- Incorrect connection
- Incorrectly grounded circuit
- Poor contacts (main or light switch)
- Burnt-out headlight bulb

### HEADLIGHT BULB BURNT OUT

- Wrong headlight bulb
- Faulty battery
- Faulty rectifier/regulator
- Incorrectly grounded circuit
- Faulty main switch
- Faulty light switch
- Headlight bulb life expired

### TAIL/BRAKE LIGHT DOES NOT LIGHT

- Wrong tail/brake light bulb
- Too many electrical accessories
- Incorrect connection
- Burnt-out tail/brake light bulb

### TAIL/BRAKE LIGHT BULB BURNT OUT

- Wrong tail/brake light bulb
- Faulty battery
- Incorrectly adjusted rear brake light switch
- Tail/brake light bulb life expired

### TURN SIGNAL DOES NOT LIGHT

- Faulty turn signal switch
- Faulty turn signal relay
- Burnt-out turn signal bulb
- Incorrect connection
- Damaged or faulty wire harness
- Incorrectly grounded circuit
- Faulty battery
- Blown, damaged or incorrect fuse

### TURN SIGNAL BLINKS SLOWLY

- Faulty turn signal relay
- Faulty main switch
- Faulty turn signal switch
- Wrong turn signal bulb

### TURN SIGNAL REMAINS LIT

- Faulty turn signal relay
- Burnt-out-turn signal bulb


### TURN SIGNAL BLINKS QUICKLY

- Incorrect turn signal bulb
- Faulty turn signal relay
- Burnt-out turn signal bulb

### HORN DOES NOT SOUND

- Incorrectly adjusted horn
- Damaged or faulty horn
- Faulty main switch
- Faulty horn switch
- Faulty battery
- Blown, damaged or incorrect fuse
- Faulty wire harness

# XJR1300'99 WIRING DIAGRAM for EUR

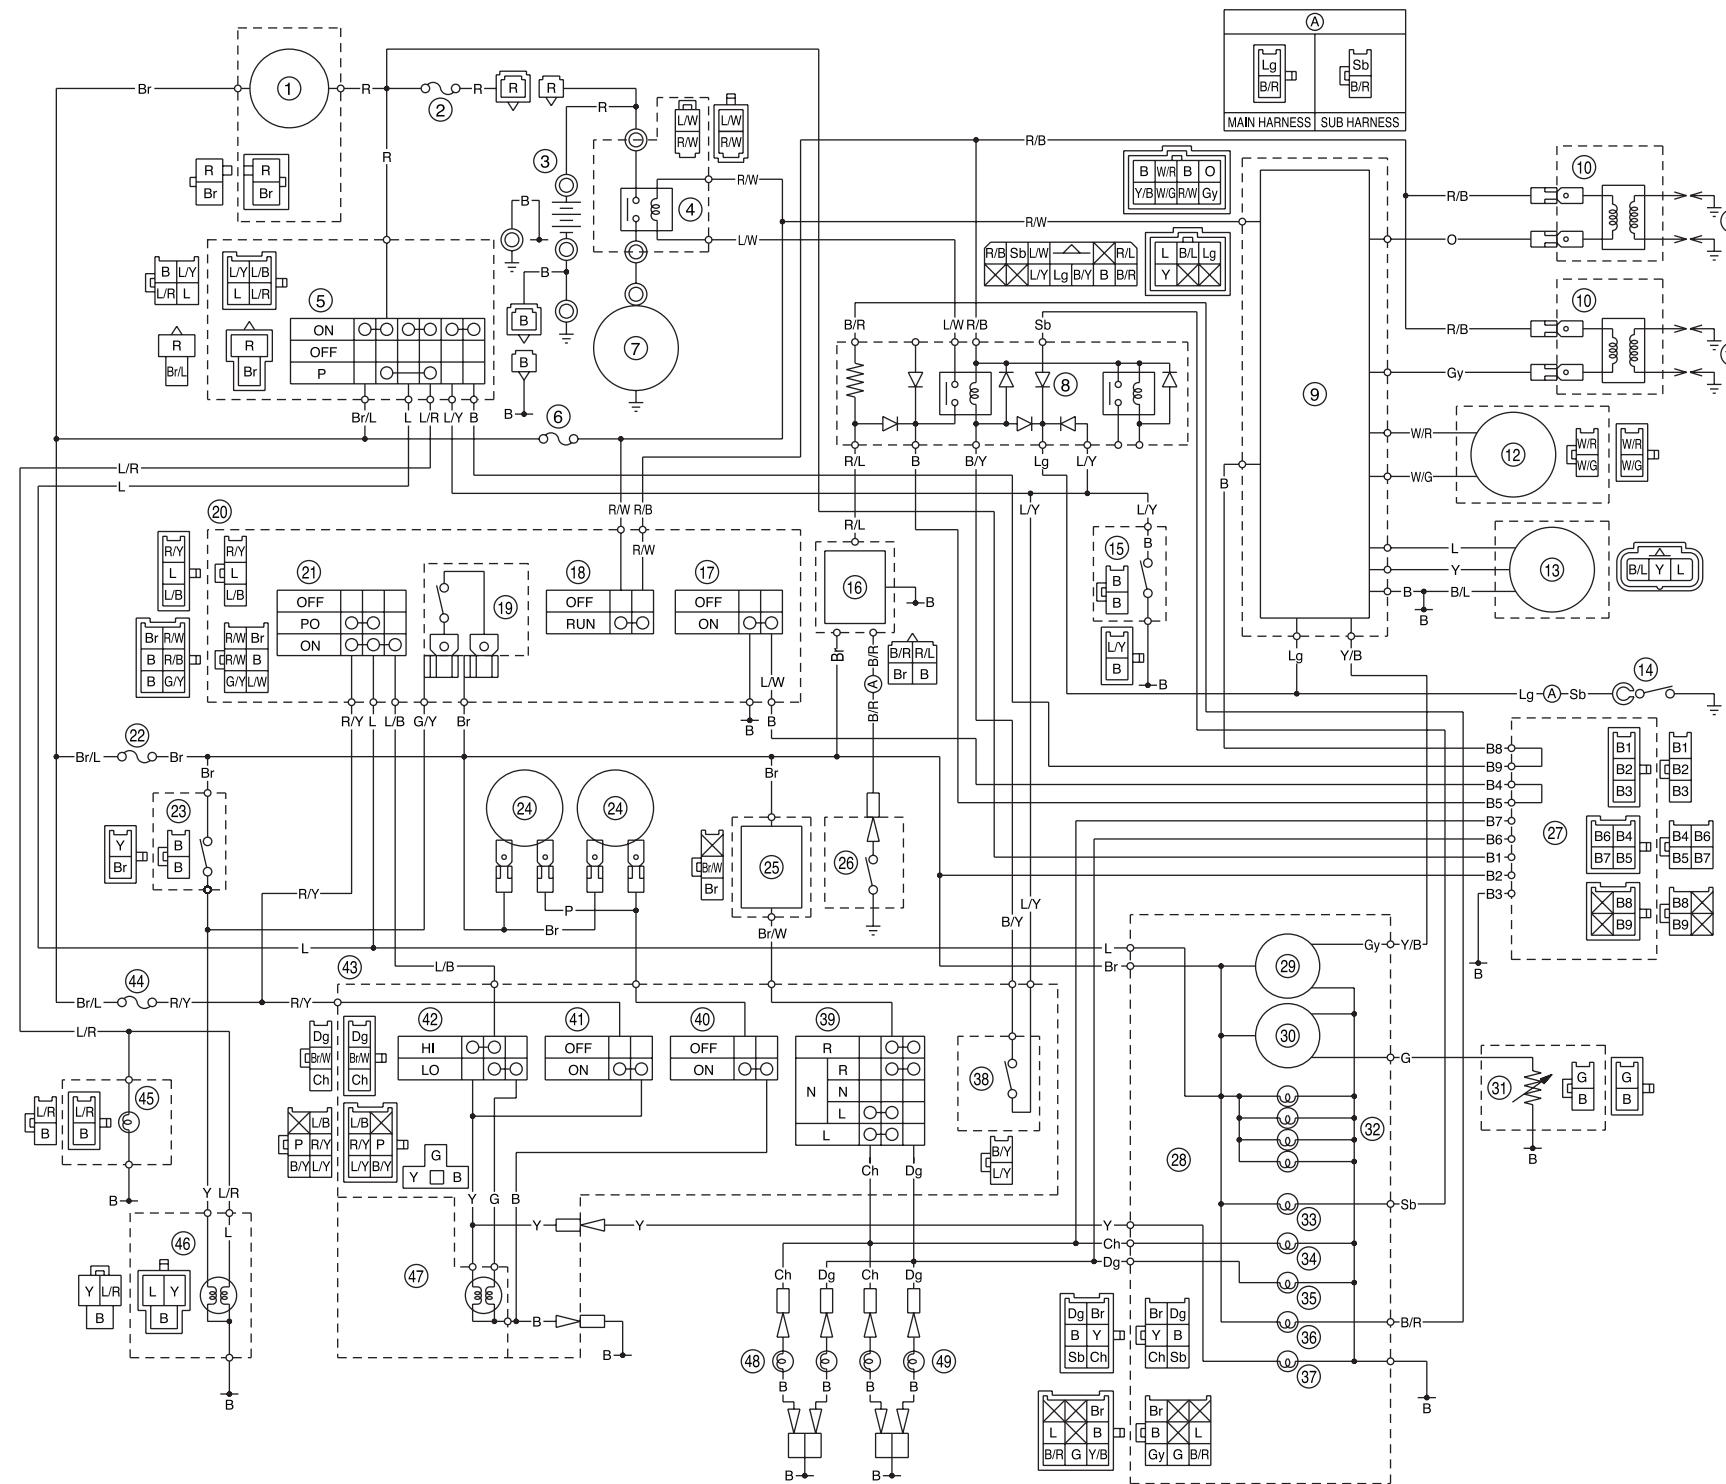


- ① AC generator
- ② Fuse (main)
- ③ Battery
- ④ Starter relay
- ⑤ Main switch
- ⑥ Fuse (ignition)
- ⑦ Starter motor
- ⑧ Starting circuit cut-off relay
- ⑨ Ignitor unit
- ⑩ Ignition coil
- ⑪ Spark plug
- ⑫ Pickup coil
- ⑬ TPS (throttle position sensor)
- ⑭ Neutral switch
- ⑮ Sidestand switch
- ⑯ Oil level relay
- ⑰ Start switch
- ⑱ Engine stop switch
- ⑲ Front brake switch
- ⑳ Handlebar switches (right)
- ㉑ Lights switch
- ㉒ Fuse (signal)
- ㉓ Rear brake switch
- ㉔ Horn
- ㉕ Flasher relay
- ㉖ Oil level switch
- ㉗ Connector
- ㉘ Meter assembly
- ㉙ Tachometer
- ㉚ Fuel gauge
- ㉛ Fuel sender
- ㉜ Meter lights
- ㉝ Neutral indicator light
- ㉞ Turn signal indicator light (left)
- ㉟ Turn signal indicator light (right)
- ㊱ Oil warning light
- ㊲ High beam indicator light
- ㊳ Clutch switch
- ㊴ Turn signal switch
- ㊵ Horn switch
- ㊶ Pass switch
- ㊷ Dimmer switch
- ㊸ Handlebar switch (left)
- ㊹ Fuse (headlight)
- ㊺ Auxiliary light
- ㊻ Tail/brake light
- ㊼ Headlight
- ㊽ Front turn signal lights
- ㊾ Rear turn signal lights

## COLOR CODE

B . . . . Black	O . . . . Orange	Br/L . . Brown/Blue	R/L . . . Red/Blue
Br . . . . Brown	Sb . . . . Sky blue	Br/W . . Brown/White	R/W . . . Red/White
Ch . . . . Chocolate	P . . . . Pink	G/Y . . . Green/Yellow	R/Y . . . Red/Yellow
Dg . . . . Dark green	R . . . . Red	L/B . . . Blue/Black	W/G . . . White/Green
G . . . . Green	Y . . . . Yellow	L/R . . . Blue/Red	W/R . . . White/Red
Gy . . . . Gray	B/L . . . Black/Blue	L/W . . . Blue/White	Y/B . . . Yellow/Black
L . . . . Blue	B/R . . . Black/Red	L/Y . . . Blue/Yellow	
Lg . . . . Light green	B/Y . . . Black/Yellow	R/B . . . Red/Black	

# XJR1300L WIRING DIAGRAM for AUS

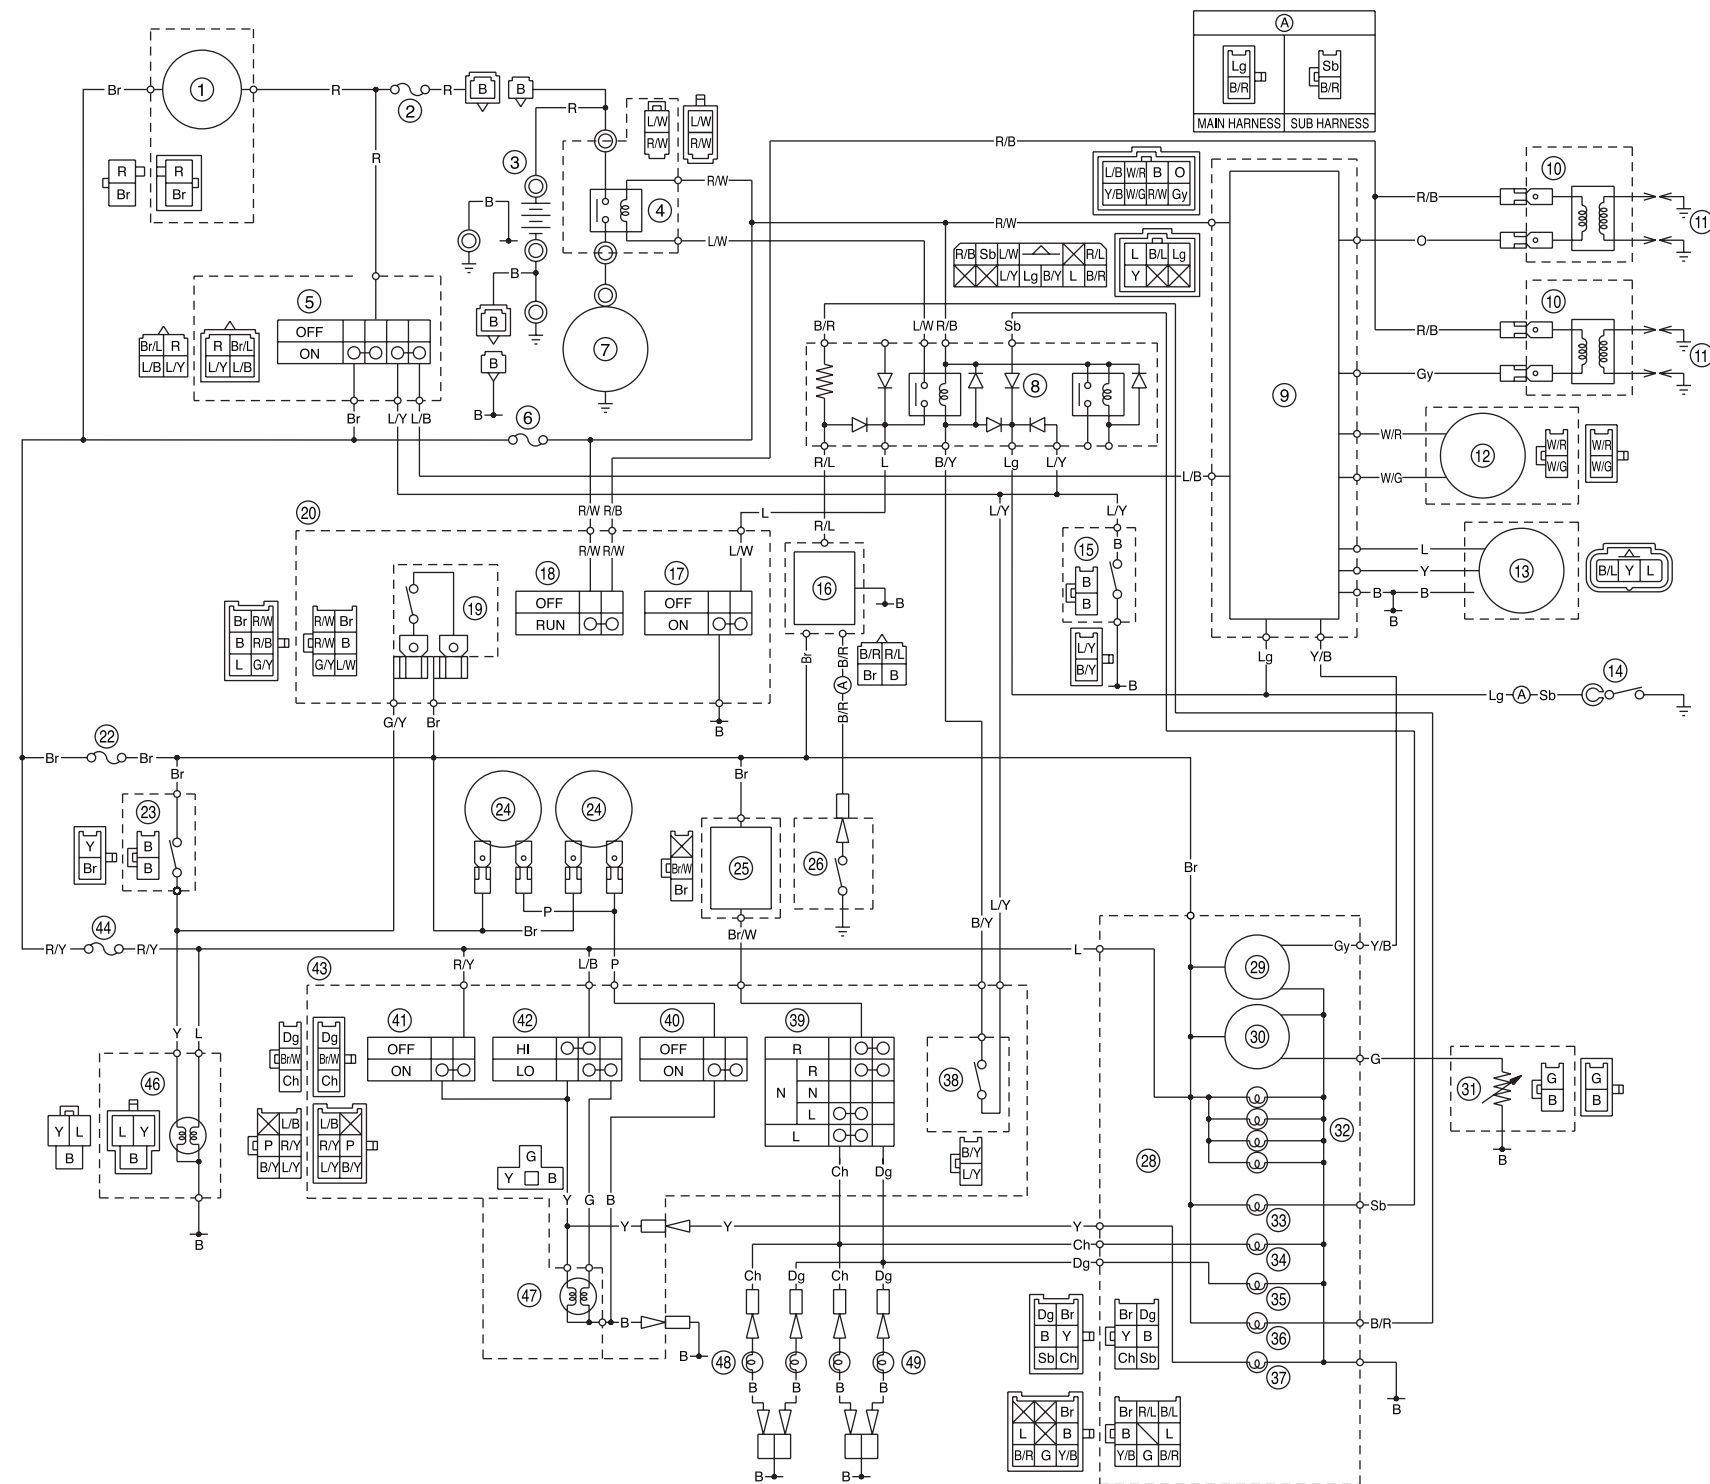

- ① AC generator
- ② Fuse (main)
- ③ Battery
- ④ Starter relay
- ⑤ Main switch
- ⑥ Fuse (ignition)
- ⑦ Starter motor
- ⑧ Starting circuit cut-off relay
- ⑨ Ignitor unit
- ⑩ Ignition coil
- ⑪ Spark plug
- ⑫ Pickup coil
- ⑬ TPS (throttle position sensor)
- ⑭ Neutral switch
- ⑮ Sidestand switch
- ⑯ Oil level relay
- ⑰ Start switch
- ⑱ Engine stop switch
- ⑲ Front brake switch
- ⑳ Handlebar switches (right)
- ㉑ Fuse (signal)
- ㉒ Rear brake switch
- ㉓ Horn
- ㉔ Flasher relay
- ㉕ Oil level switch
- ㉖ Meter assembly
- ㉗ Tachometer
- ㉘ Fuel gauge
- ㉙ Fuel sender
- ㉚ Meter lights
- ㉛ Neutral indicator light
- ㉜ Turn signal indicator light (left)
- ㉝ Turn signal indicator light (right)
- ㉞ Oil warning light
- ㉟ High beam indicator light
- ㊱ Clutch switch
- ㊲ Turn signal switch
- ㊳ Horn switch
- ㊴ Pass switch
- ㊵ Dimmer switch
- ㊶ Handlebar switch (left)
- ㊷ Fuse (headlight)
- ㊸ Tail/brake light
- ㊹ Headlight
- ㊺ Front turn signal lights
- ㊻ Rear turn signal lights

## COLOR CODE

B . . . . Black	O . . . . Orange	Br/L . . Brown/Blue	R/L . . . Red/Blue
Br . . . . Brown	Sb . . . . Sky blue	Br/W . . Brown/White	R/W . . . Red/White
Ch . . . . Chocolate	P . . . . Pink	G/Y . . . Green/Yellow	R/Y . . . Red/Yellow
Dg . . . . Dark green	R . . . . Red	L/B . . . Blue/Black	W/G . . . White/Green
G . . . . Green	Y . . . . Yellow	L/R . . . Blue/Red	W/R . . . White/Red
Gy . . . . Gray	B/L . . . Black/Blue	L/W . . . Blue/White	Y/B . . . Yellow/Black
L . . . . Blue	B/R . . . Black/Red	L/Y . . . Blue/Yellow	
Lg . . . . Light green	B/Y . . . Black/Yellow	R/B . . . Red/Black	



**XJR1300SP '99**

5EA6-AE1

**SUPPLEMENTARY  
SERVICE MANUAL**

---

## FOREWORD

This Supplementary Service Manual has been prepared to introduce new service and data for the XJR1300SP '99. For complete service information procedures it is necessary to use this Supplementary Service Manual together with the following manual.

**XJR1300 (L) SERVICE MANUAL: 5EA3-AE1**

**XJR1300SP '99  
SUPPLEMENTARY  
SERVICE MANUAL**  
©1998 by Yamaha Motor Co., Ltd.  
First Edition, December 1998  
Any reproduction or unauthorized use  
without the written permission of  
Yamaha Motor Co., Ltd. is expressly  
prohibited.

## NOTICE

This manual was produced by the Yamaha Motor Company primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual, so it is assumed that anyone who uses this book to perform maintenance and repairs on Yamaha motorcycles has a basic understanding of the mechanical ideas and the procedures of motorcycle repair. Repairs attempted by anyone without this knowledge are likely to render the motorcycle unsafe and unfit for use.

Yamaha Motor Company, Ltd. is continually striving to improve all its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

---

### NOTE:

Designs and specifications are subject to change without notice.

---

## IMPORTANT INFORMATION

Particularly important information is distinguished in this manual by the following notations.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



Failure to follow WARNING instructions could result in severe injury or death to the motorcycle operator, a bystander or a person inspecting or repairing the motorcycle.

### CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the motorcycle.

### NOTE:

A NOTE provides key information to make procedures easier or clearer.

## HOW TO USE THIS MANUAL

This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

① The manual is divided into chapters. An abbreviation and symbol in the upper right corner of each page indicate the current chapter.

Refer to "SYMBOLS".

② Each chapter is divided into sections. The current section title is shown at the top of each page, except in Chapter 3 ("PERIODIC CHECKS AND ADJUSTMENTS"), where the sub-section title(-s) appears.

③ Sub-section titles appear in smaller print than the section title.

④ To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.

⑤ Numbers are given in the order of the jobs in the exploded diagram. A circled number indicates a disassembly step.

⑥ Symbols indicate parts to be lubricated or replaced.

Refer to "SYMBOLS".

⑦ A job instruction chart accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.

⑧ Jobs requiring more information (such as special tools and technical data) are described sequentially.

② CLUTCH

① ENG

④

CLUTCH

ENG

⑤

⑥

Order	Job/Part	Qty	Remarks
14	Clutch boss	1	
15	Stopper ring	1	
16	Clutch plate	1	
17	Clutch spring plate	1	
18	Clutch spring plate seat	1	
19	Friction plates (narrow)	1	Refer to "REMOVING/INSTALLING THE CLUTCH".
20	Thrust washer	1	
21	Spacer	1	
22	Bearing	1	
23	Clutch housing	1	

⑦

For installation, reverse the removal procedure.

③

**REMOVING THE CLUTCH**

- Straighten the lock washer tab.
- Loosen:
  - clutch boss nut ①

**NOTE:**  
While holding the clutch boss ② with the universal clutch holder, loosen the clutch boss nut.

Universal clutch holder ③  
90890-04086

- Remove:
  - clutch boss nut ①
  - lock washer ②
  - clutch boss ③
  - thrust washer
  - spacer ⑤
  - bearing ⑥
  - clutch housing ⑦

**NOTE:**  
Insert two 6 mm bolts ⑧ into the spacer and then remove the spacer by pulling on the bolts.

⑧

**CHECKING THE FRICTION PLATES**  
The following procedure applies to all of the friction plates.























- Check:
  - friction plate
 Damage/wear → Replace the friction plates as a set.
- Measure:
  - friction plate thickness
 Out of specification → Replace the friction plates as a set.

**NOTE:**  
Measure the friction plate at four places.

Friction plate thickness  
2.9 – 3.1 mm  
<Limit> 2.8 mm

⑧



① GEN INFO 	② SPEC 
③ CHK ADJ 	④ ENG 
⑤ CARB 	⑥ CHAS 
⑦ ELEC 	⑧ TRBL SHTG ?
⑨ 	⑩ 
⑪ 	⑫ 
⑬ 	⑭ 
⑮ 	⑯ 
⑰ 	⑱ 
⑲ 	
⑳ 	㉑ 
㉒ 	
㉓ 	㉔ <b>New</b>

EAS00009

**SYMBOLS**

The following symbols are not relevant to every vehicle.

Symbols ① to ⑧ indicate the subject of each chapter.

- ① General information
- ② Specifications
- ③ Periodic checks and adjustments
- ④ Engine
- ⑤ Carburetor(-s)
- ⑥ Chassis
- ⑦ Electrical system
- ⑧ Troubleshooting

Symbols ⑨ to ⑯ indicate the following.

- ⑨ Serviceable with engine mounted
- ⑩ Filling fluid
- ⑪ Lubricant
- ⑫ Special tool
- ⑬ Tightening torque
- ⑭ Wear limit, clearance
- ⑮ Engine speed
- ⑯ Electrical data

Symbols ⑰ to ㉒ in the exploded diagrams indicate the types of lubricants and lubrication points.

- ⑰ Engine oil
- ⑱ Gear oil
- ⑲ Molybdenum disulfide oil
- ⑳ Wheel bearing grease
- ㉑ Lithium soap base grease
- ㉒ Molybdenum disulfide grease

Symbols ㉓ to ㉔ in the exploded diagrams indicate the following:

- ㉓ Apply locking agent (LOCTITE®)
- ㉔ Replace the part

---

# CONTENTS

**SPECIFICATIONS**

- GENERAL SPECIFICATIONS ..... 1
- MAINTENANCE SPECIFICATIONS ..... 1
- CHASSIS ..... 1

## GENERAL SPECIFICATIONS

**SPEC**

## SPECIFICATIONS

### GENERAL SPECIFICATIONS

Model	XJR1300SP
Model code:	5EA5 (SF) (G) (A) 5EA6 (GB) (D) (NL) (B) (F) (P) (I) (GR) (N) (SW) (E)

### MAINTENANCE SPECIFICATIONS

#### CHASSIS

Item	Standard	Limit
Rear suspension:		
Shock absorber travel	88 mm	•••
Spring free length	230 mm	•••
Fitting length	212 mm	•••
Spring rate (K1)	17.8 N/mm (1.82 kg/mm)	•••
(K2)	21.6 N/mm (2.2 kg/mm)	•••
(K3)	23.7 N/mm (2.42 kg/mm)	•••
Stroke (K1)	0 ~ 32 mm	•••
(K2)	32 ~ 62 mm	•••
(K3)	62 ~ 88 mm	•••



**YAMAHA**

**2002**

**XJR1300(P)**

**5EA3-AE2**

**SUPPLEMENTARY  
SERVICE MANUAL**



---

## FOREWORD

This Supplementary Service Manual has been prepared to introduce new service and data for the XJR1300 (P) 2002. For complete service information procedures it is necessary to use this Supplementary Service Manual together with the following manual.

**XJR1300 (L) '99 SERVICE MANUAL: 5EA3-AE1**

EAS00000

**XJR1300 (P) 2002  
SUPPLEMENTARY  
SERVICE MANUAL**  
© 2001 by Yamaha Motor Co., Ltd.  
1st Edition, August 2001  
All rights reserved.  
Any reprinting or unauthorized use  
without the written permission of  
Yamaha Motor Co., Ltd.  
is expressly prohibited.

---

## NOTICE

This manual was produced by the Yamaha Motor Company, Ltd. primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual. Therefore, anyone who uses this book to perform maintenance and repairs on Yamaha vehicles should have a basic understanding of mechanics and the techniques to repair these types of vehicles. Repair and maintenance work attempted by anyone without this knowledge is likely to render the vehicle unsafe and unfit for use.

This model has been designed and manufactured to perform within certain specifications in regard to performance and emissions. Proper service with the correct tools is necessary to ensure that the vehicle will operate as designed. If there is any question about a service procedure, it is imperative that you contact a Yamaha dealer for any service information changes that apply to this model. This policy is intended to provide the customer with the most satisfaction from his vehicle and to conform with federal environmental quality objectives.

Yamaha Motor Company, Ltd. is continually striving to improve all its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

---

### NOTE:

- This Service Manual contains information regarding periodic maintenance to the emission control system. Please read this material carefully.
  - Designs and specifications are subject to change without notice.
- 

## IMPORTANT INFORMATION

Particularly important information is distinguished in this manual by the following.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



Failure to follow WARNING instructions could result in severe injury or death to the motorcycle operator, a bystander or a person checking or repairing the motorcycle.

### CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the motorcycle.

### NOTE:

A NOTE provides key information to make procedures easier or clearer.

## HOW TO USE THIS MANUAL

This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

① The manual is divided into chapters. An abbreviation and symbol in the upper right corner of each page indicate the current chapter.

Refer to “SYMBOLS”.

② Each chapter is divided into sections. The current section title is shown at the top of each page, except in Chapter 3 (“PERIODIC CHECKS AND ADJUSTMENTS”), where the sub-section title(-s) appears.

③ Sub-section titles appear in smaller print than the section title.

④ To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.

⑤ Numbers are given in the order of the jobs in the exploded diagram. A circled number indicates a disassembly step.

⑥ Symbols indicate parts to be lubricated or replaced.

Refer to “SYMBOLS”.

⑦ A job instruction chart accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.

⑧ Jobs requiring more information (such as special tools and technical data) are described sequentially.

②

CLUTCH

①

ENG

④

CLUTCH

ENG

③

**REMOVING THE CLUTCH**

1. Straighten the lock washer tab.

2. Loosen:

- clutch boss nut ①

**NOTE:**

While holding the clutch boss ② with the universal clutch holder, loosen the clutch boss nut.

**Universal clutch holder ③**  
90890-04086

3. Remove:

- clutch boss nut ①
- lock washer ②
- clutch boss ③
- thrust washer
- spacer ⑤
- bearing ⑥
- clutch housing ⑦

**NOTE:**

Insert two 8 mm bolts ⑧ into the spacer and then remove the spacer by pulling on the bolts.

⑦

Order	Job/Part	Qty	Remarks
14	Clutch boss	1	Refer to "REMOVING/INSTALLING THE CLUTCH".
15	Stopper ring	1	
16	Clutch plate	1	
17	Clutch spring plate	1	
18	Clutch spring plate seat	1	
19	Friction plates (narrow)	1	
20	Thrust washer	1	
21	Spacer	1	
22	Bearing	1	
23	Clutch housing	1	
			For installation, reverse the removal procedure.

**CHECKING THE FRICTION PLATES**

The following procedure applies to all of the friction plates.

1. Check:

- friction plate
- Damage/wear → Replace the friction plates as a set.

2. Measure:

- friction plate thickness
- Out of specification → Replace the friction plates as a set.

**NOTE:**










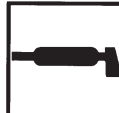












Measure the friction plate at four places.

**Friction plate thickness**  
2.9 ~ 3.1 mm  
<Limit>: 2.8 mm

4-34

4-35



① GEN INFO 	② SPEC 
③ CHK ADJ 	④ ENG 
⑤ CARB 	⑥ CHAS 
⑦ ELEC 	⑧ TRBL SHTG ?
⑨ 	⑩ 
⑪ 	⑫ 
⑬ 	⑭ 
⑮ 	⑯ 
⑰ 	⑱ 
⑲ 	
⑳ 	㉑ 
㉒ 	
㉓ 	㉔ <b>New</b>

## SYMBOLS

The following symbols are not relevant to every vehicle.

Symbols ① to ⑧ indicate the subject of each chapter.

- ① General information
- ② Specifications
- ③ Periodic checks and adjustments
- ④ Engine
- ⑤ Carburetor(-s)
- ⑥ Chassis
- ⑦ Electrical system
- ⑧ Troubleshooting

Symbols ⑨ to ⑯ indicate the following.

- ⑨ Serviceable with engine mounted
- ⑩ Filling fluid
- ⑪ Lubricant
- ⑫ Special tool
- ⑬ Tightening torque
- ⑭ Wear limit, clearance
- ⑮ Engine speed
- ⑯ Electrical data

Symbols ⑰ to ㉒ in the exploded diagrams indicate the types of lubricants and lubrication points.

- ⑰ Engine oil
- ⑱ Gear oil
- ⑲ Molybdenum disulfide oil
- ⑳ Wheel bearing grease
- ㉑ Lithium soap base grease
- ㉒ Molybdenum disulfide grease

Symbols ㉓ to ㉔ in the exploded diagrams indicate the following:

- ㉓ Apply locking agent (LOCTITE®)
- ㉔ Replace the part

---

# CONTENTS

## SPECIFICATIONS

GENERAL SPECIFICATIONS .....	1
MAINTENANCE SPECIFICATIONS .....	3
ENGINE .....	3
CHASSIS .....	6
ELECTRICAL .....	8
CABLE ROUTING .....	9

## PERIODIC INSPECTION AND ADJUSTMENT

INTRODUCTION .....	20
PERIODIC MAINTENANCE/LUBRICATION INTERVALS .....	20
ENGINE .....	22
ADJUSTING THE CLUTCH LEVER .....	22
CHASSIS .....	23
ADJUSTING THE FRONT BRAKE .....	23

## CARBURETORS

AIR INDUCTION SYSTEM .....	24
AIR INJECTION .....	24
AIR CUTOFF VALVE .....	24
AIR INDUCTION SYSTEM DIAGRAMS .....	25
CHECKING THE AIR INDUCTION SYSTEM .....	26

## CHASSIS

FRONT AND REAR BRAKES .....	27
FRONT BRAKE MASTER CYLINDER .....	27
ASSEMBLING AND INSTALLING THE FRONT BRAKE MASTER CYLINDER .....	28
REAR BRAKE CALIPER .....	30

## ELECTRICAL

CARBURETOR HEATING SYSTEM .....	32
TROUBLESHOOTING .....	33

**XJR1300 2002 WIRING DIAGRAM (for EUR)**

**XJR1300P 2002 WIRING DIAGRAM (for AUS)**



## SPECIFICATIONS

### GENERAL SPECIFICATIONS

Model	XJR1300 (P)
Model code:	5EAT/5EAW (EUR) 5EAU/5EAX (for D) 5EAV/5EAY (for AUS)
Dimensions:	
Overall length	2,175 mm
Overall width	775 mm
Overall height	1,115 mm
Seat height	790 mm
Wheelbase	1,510 mm
Minimum ground clearance	120 mm
Minimum turning radius	2,800 mm
Basic weight:	
With oil and full fuel tank	247 kg
Carburetor:	
Type/quantity	BSR37/4
Manufacturer	MIKUNI
Transmission:	
Primary reduction system	Spur gear
Primary reduction ratio	98/56 (1.750)
Secondary reduction system	Chain drive
Secondary reduction ratio	39/18 (2.167)
Transmission type	Constant mesh 5-speed
Operation	Left foot operation
Gear ratio 1st	40/14 (2.857)
2nd	36/18 (2.000)
3rd	33/21 (1.571)
4th	31/24 (1.292)
5th	29/26 (1.115)

## GENERAL SPECIFICATIONS

**SPEC**






Model	XJR1300 (P)
Tire: Type Size            front rear Manufacturer front rear Type            front rear	Tubeless 120/70ZR17 (58W)/ 120/70ZR17 M/C (58W) 180/55ZR17 (73W)/ 180/55ZR17 M/C (73W) MICHELIN/DUNLOP MICHELIN/DUNLOP MACADAM90X E/D220F ST M MACADAM90X E/D220 ST M
Tire pressure (cold tire): Maximum load-except motorcycle Loading condition A * front rear Loading condition B * front rear High-speed riding front rear	203 kg 0 ~ 90 kg 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar) 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar) 90 ~ 203 kg 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar) 290 kPa (2.9 kg/cm <sup>2</sup> , 2.9 bar) 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar) 290 kPa (2.9 kg/cm <sup>2</sup> , 2.9 bar)

\*Load is the total weight of cargo, rider, passenger, and accessories.




**MAINTENANCE SPECIFICATIONS**  
**ENGINE**

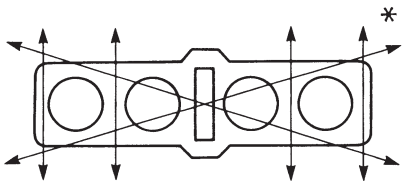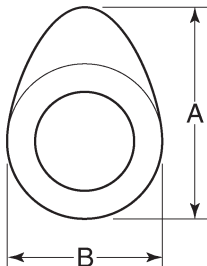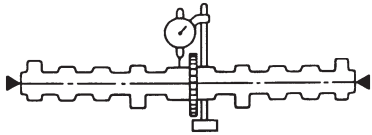Model	Standard	Limit
Cylinder head: Warp limit 	...	0.2 mm
Cylinder: Bore size Taper limit Out of round limit Wear limit	79.00 ~ 79.01 mm ... ... ...	... 0.05 mm 0.1 mm 79.1 mm
Camshaft: Drive method Cam cap inside diameter Camshaft outside diameter Shaft-to-cap clearance Cam dimensions   Intake "A" "B" Exhaust "A" "B" Camshaft runout limit 	Chain drive (Center) 25.000 ~ 25.021 mm 24.967 ~ 24.980 mm 0.020 ~ 0.054 mm  35.95 ~ 36.05 mm 28.058 ~ 28.158 mm 35.95 ~ 36.05 mm 28.045 ~ 28.145 mm ...	... ... ... ...  35.85 mm 27.958 mm 35.85 mm 27.945 mm 0.03 mm

## MAINTENANCE SPECIFICATIONS

**SPEC**

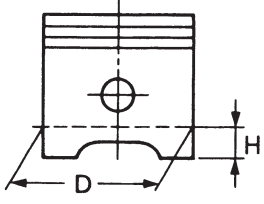
Model	Standard	Limit
Piston: Piston to cylinder clearance Piston size "D" 	0.015 ~ 0.040 mm 78.970 ~ 78.985 mm	0.15 mm ...
Measuring point "H" Piston off-set Piston off-set direction Piston pin bore inside diameter Piston pin outside diameter	5 mm 1 mm IN side 18.004 ~ 18.015 mm 17.991 ~ 18.000 mm	... ... ... 18.045 mm 17.971 mm
Carburetor: I.D. mark Main jet (M.J) Main air jet (M.A.J) Jet needle (J.N) Needle jet (N.J) Pilot jet (P.A.J.1) Pilot outlet (P.O) Pilot jet (P.J) Bypass 1 (B.P.1) Bypass 2 (B.P.2) Bypass 3 (B.P.3) Pilot screw (P.S) Valve seat size (V.S) Starter jet (G.S.1) Starter jet (G.S.2) Throttle valve size (Th.V) Float height (F.H) Fuel level (using special tool) Engine idle speed Intake vacuum	5EAT 30 #107.5 #80 5D118-53-3 P-0M #140 ø1.0 #15 0.9 0.9 0.8 2 2.3 #52.5 0.8 #115 33 ~ 34 mm 3 ~ 4 mm 950 ~ 1,150 r/min 31.3 kPa (235 mmHg)	... ...

## MAINTENANCE SPECIFICATIONS

**SPEC**



### Tightening torques


Part to be tightened	Part name	Thread size	Q'ty	Tightening torque		Remarks
				Nm	m•kg	
Carburetor joint and carburetor	Band	M4 × 0.7	4	2.7	0.27	
Carburetor and air filter joint	Clamp	M4 × 0.7	4	2.7	0.27	
Air induction system pipe joint	–	–	4	3.7	0.37	
Air induction system	Bolt	M6 × 1.0	2	10	1.0	

## MAINTENANCE SPECIFICATIONS

**SPEC**



### CHASSIS

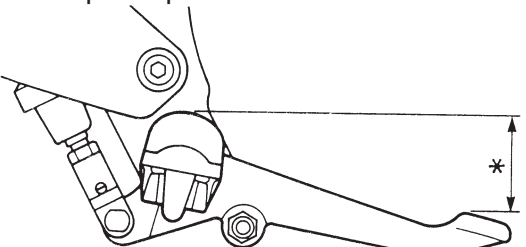Model	Standard	Limit
<b>Front suspension:</b> Front fork travel Fork spring free length Fitting length Collar length Spring rate (K1) (K2) Stroke (K1) (K2) Optional spring Oil capacity Oil level Oil grade	130 mm 308.3 mm 287.3 mm 245 mm 6.4 N/mm (0.65 kg/mm) 10.8 N/mm (1.1 kg/mm) 0 ~ 85 mm 85 ~ 130 mm No 568 cm <sup>3</sup> 118 mm Fork oil 10W or equivalent	... 300 mm ... ... ... ... ... ... ... ... ... ...
<b>Rear suspension:</b> Shock absorber travel Spring free length Fitting length Spring rate (K1) (K2) (K3) (K4) Stroke (K1) (K2) (K3) (K4)	93 mm 230 mm 209 mm 19.4 N/mm (1.98 kg/mm) 21.4 N/mm (2.18 kg/mm) 26.3 N/mm (2.68 kg/mm) 28.2 N/mm (2.88 kg/mm) 0 ~ 13 mm 13 ~ 50 mm 50 ~ 67.5 mm 67.5 ~ 93.0 mm	... 225 mm ... ... ... ... ... ... ... ... ...
<b>Front wheel:</b> Type Rim size Rim material Rim runout limit radial lateral	Cast wheel 17 × MT3.50 or 17 M/C × MT3.50 Aluminum ... ...	... ... ... 1 mm 0.5 mm
<b>Rear wheel:</b> Type Rim size Rim material Rim runout limit radial lateral	Cast wheel 17 × MT3.50 or 17 M/C × MT3.50 Aluminum ... ...	... ... ... 1 mm 0.5 mm
<b>Drive chain:</b> Type/manufacturer No. of links Chain free play	50VA8/DAIDO 112 20 ~ 30 mm	... ... ...
<b>Brake lever &amp; brake pedal:</b> Brake pedal position 	40 mm	...



## MAINTENANCE SPECIFICATIONS

**SPEC**

### Tightening torques

Part to be tightened	Part name	Thread size	Q'ty	Tightening torque		Remarks
				Nm	m•kg	
Throttle cable and carburetor Ignition coil	Nut	M6 × 1.0	2	4	0.4	
	Nut	M6 × 1.0	2	6.5	0.65	



**ELECTRICAL**


Model	Standard	Limit
T.C.I.:		
Pickup coil resistance/color	248 ~ 372 Ω/W/R-W/G	...
T.C.I. unit model/manufacturer	TNDF63/DENSO (except for D) TNDF64/DENSO (for D)	... ...
Charging system:		
Type	A.C. generator	...
Model/manufacturer	B3G/DENSO	...
Normal output	13.5 V 28 A/5,000 r/min	...
Rotor coil resistance	2.8 ~ 3.0 Ω	...
Stator coil resistance	0.19 ~ 0.21 Ω	...
Brush overall length	13.7 mm	4.7 mm
Spring force	5.10 ~ 5.69 N (0.52 ~ 0.58 kg)	...
Voltage regulator:		
Type	Semi-conductor, field control type	...
Model/manufacturer	B3G/DENSO	...
No load regulated voltage	14.2 ~ 14.8 V	...
Electric starter system:		
Type	Constant mesh type	...
Starter motor:		
Model/manufacturer	SM-13/MITSUBA	...
Output	0.65 kW	...
Brush overall length	10 mm	5 mm
Spring force	8.82 N (899 kg)	...
Commutator diameter	28 mm	27 mm
Mica undercut	0.7 mm	...
Starter relay:		
Model/manufacturer	MS5E-491/JIDECO	...
Amperage rating	180 A	...
Coil winding resistance	4.2 ~ 4.6 Ω	...
Starting circuit cut-off relay:		
Model/manufacturer	G8R-30Y-P/OMRON	...
Coil winding resistance	162 ~ 198 Ω	...
Diode	Yes	...
Circuit breaker:		
Type	Fuse	...
Amperage for individual circuit × Q'ty		
MAIN	40 A × 1	...
HEAD LIGHT	15 A × 1	...
SIGNAL	15 A × 1	...
IGNITION	15 A × 1	...
TURN	15 A × 1	...
Reserve	40 A × 1	...
	15 A × 1	...



**CABLE ROUTING**

- ① Starter motor cable
- ② Battery negative (-) lead wire
- ③ Carburetor heater plug
- ④ A.C. generator coupler
- ⑤ Rear stop switch coupler
- ⑥ Neutral lead wire
- ⑦ Pickup lead wire
- ⑧ Side stand switch lead wire
- ⑨ T.P.S.
- ⑩ Tank fitting
- ⑪ #1 and #4 ignition coil lead wires
- ⑫ Horn lead wire
- ⑬ #3 high-tension cord
- ⑭ #4 high-tension cord
- ⑮ Engine frame ground lead wire
- ⑯ Rear stop switch
- ⑰ Relay assy
- ⑱ Guide wire
- ⑲ Fuel tank drain hose
- ⑳ Fuel tank breather hose

**A** Pass the starter motor cable and the negative (-) lead wire of the battery through the inside of the seat rail.

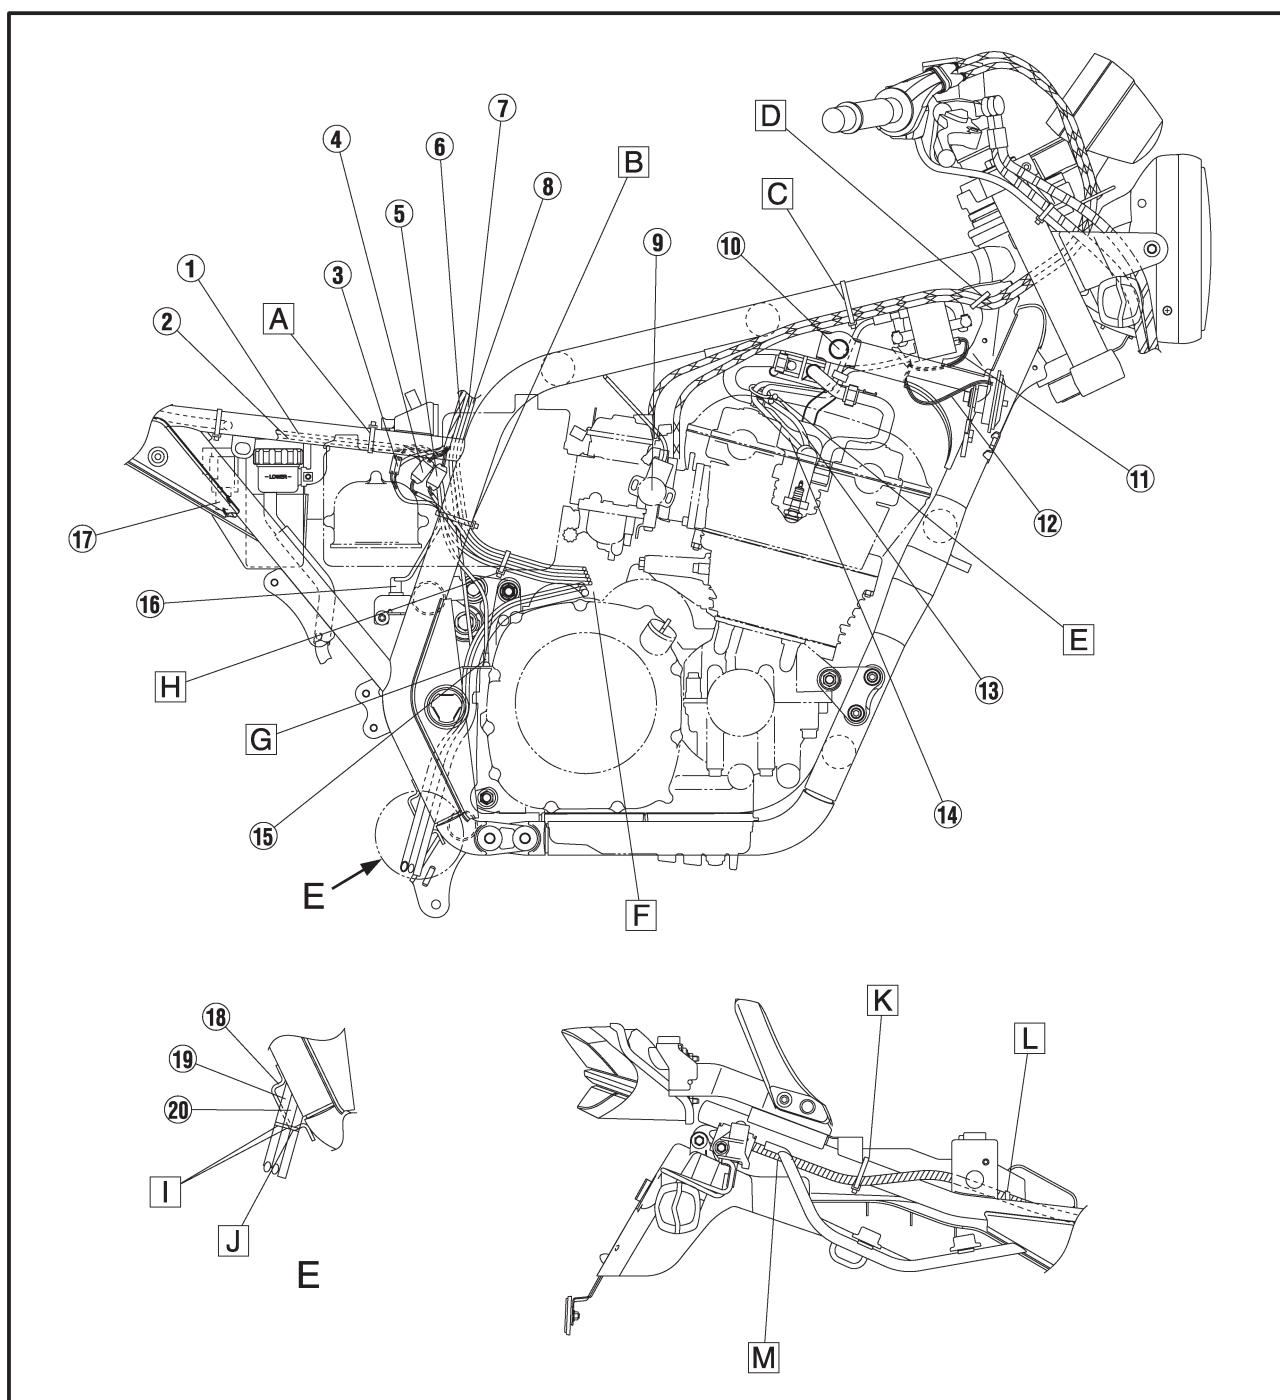


## CABLE ROUTING

SPEC




- B** Secure the carburetor heater lead wire, the starter motor cable, the negative (-) lead wire of the battery, the A.C. generator lead wire, the neutral lead wire, the side stand switch lead wire, the pickup lead wire, and the rear stop switch lead wire (total 8 wires), to the fuel tank rail, near the air cleaner intake port mounting screw, by use of this band. The front end of the band must be directed towards the front of the vehicle.
- C** Clamp the throttle cables to the fuel tank rail, on the tank fitting by use of this band. The front end of the band must be directed downward.
- D** Thread this clamp through the upper hole in the gusset and secure the two throttle cables. The front end of the clamp must be directed towards the inside of the vehicle.
- E** Bundle the #3 and #4 high-tension cords, on the head cover mounting bolt at the #3 cord, by use of this band.
- F** Do not entangle the lead wires and the hosing. Pass the bundle of lead wires and that of hosing orderly as shown.
- G** Pass the air cleaner drain hose, the fuel tank drain hose, and the fuel tank breather hose (total 3 hoses) through the guide wire of the engine.

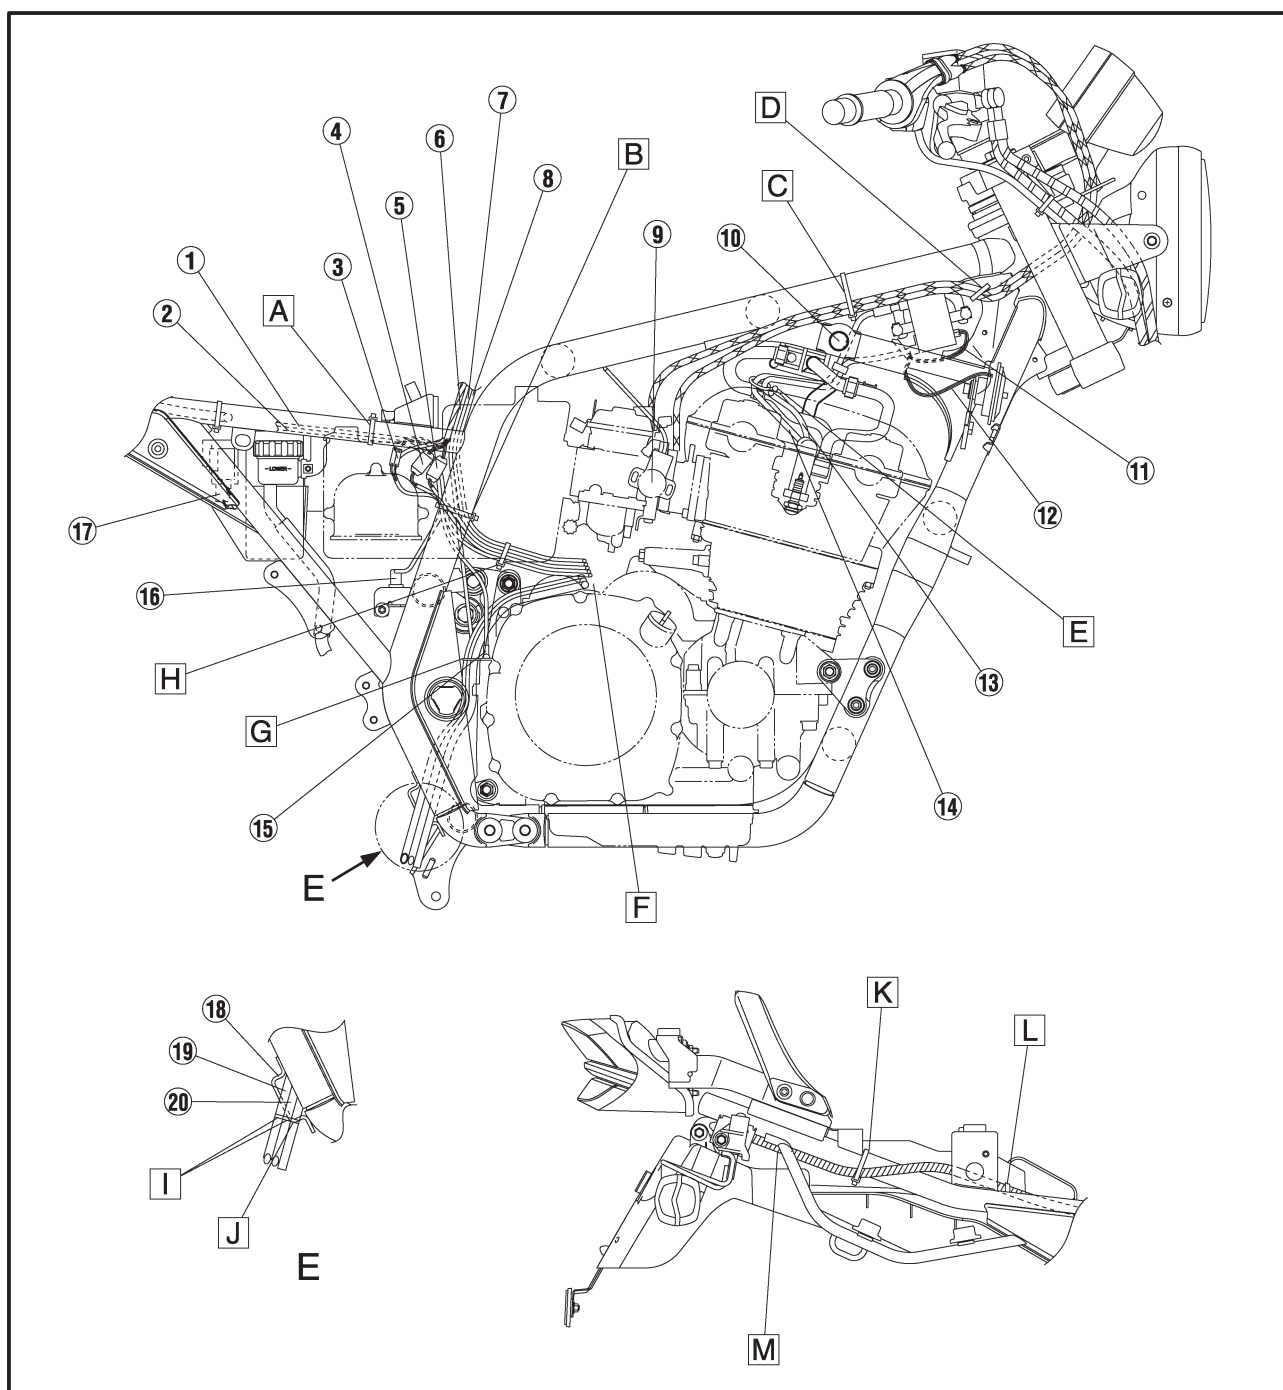



- [H] Bundle the A.C. generator lead wire, the pickup lead wire, the side stand switch lead wire, the starter motor cable, and the carburetor heater lead wire (total 5 wires), by use of this clamp.
- [I] Match the marks of the fuel tank drain hose and fuel tank breather hose, and arrange the two types of hose properly.
- [J] Match the paint mark of the air cleaner drain hose to the lower end of the guide wire.
- [K] Clamp the wire harness to the seat rail, at the front end of the bracket. The front end of the clamp must be directed downward.
- [L] Clamp the wire harness.
- [M] Pass the wire harness between the handle standing lug member and the rear fender.

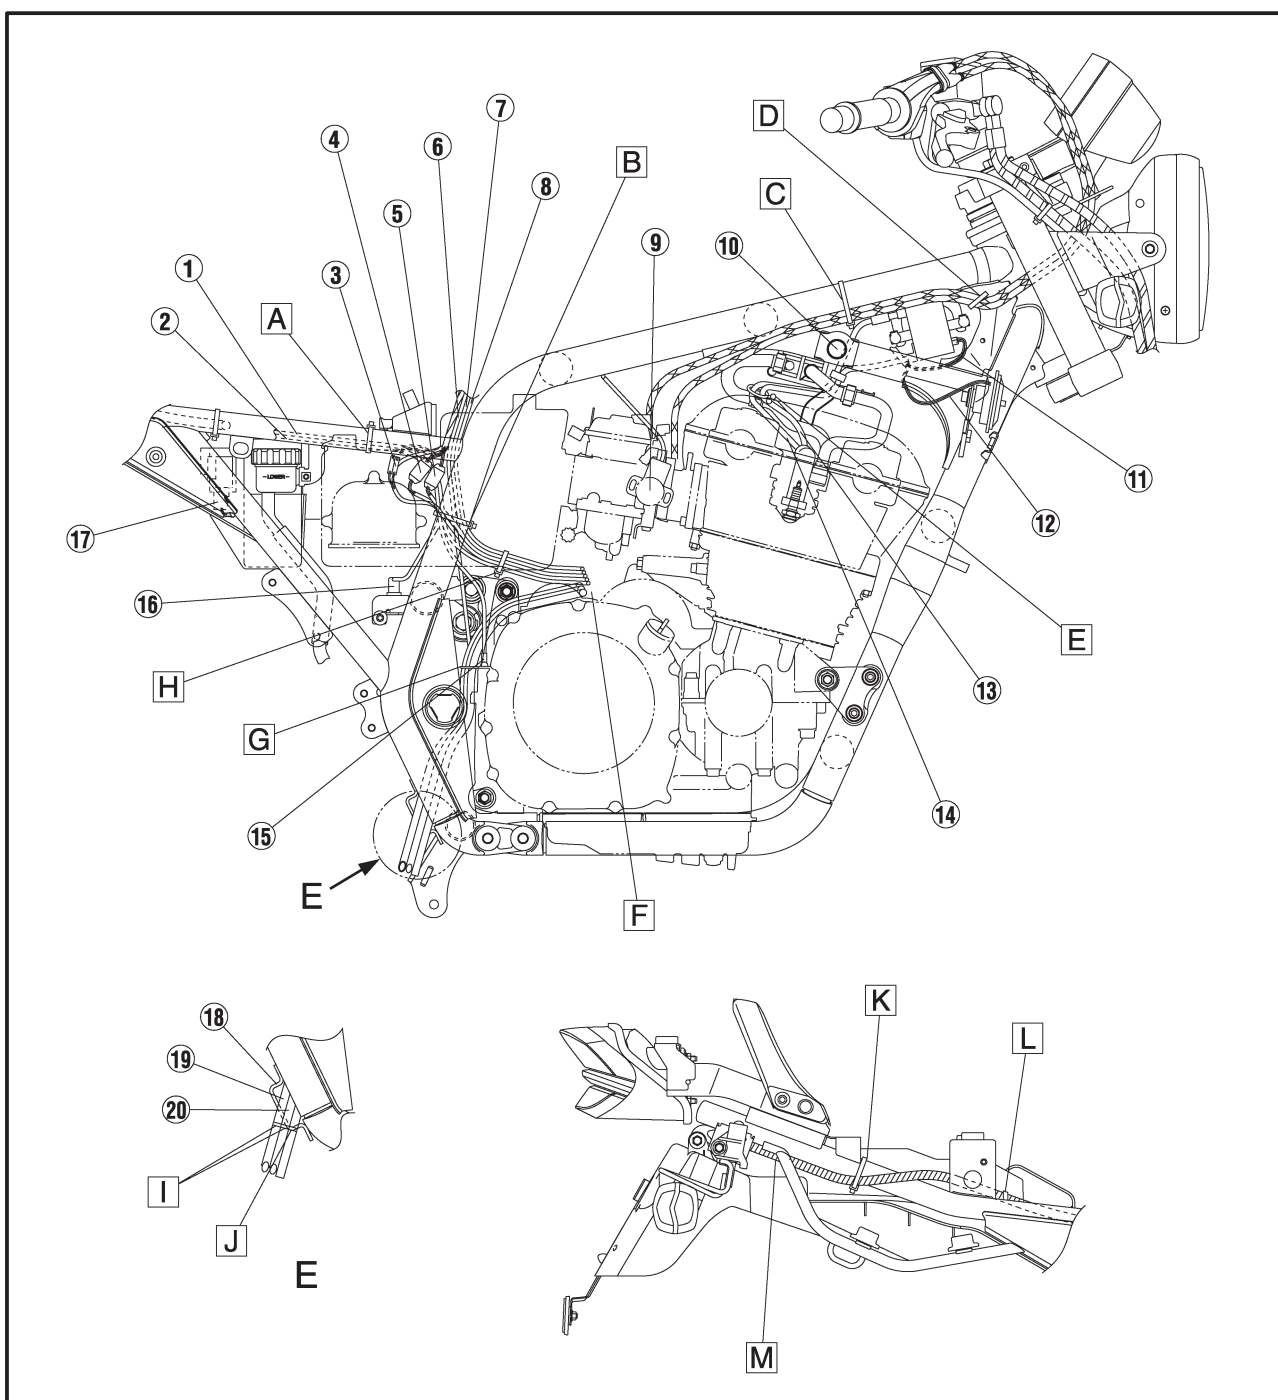




- ① Gusset
- ② Tension pipe 1
- ③ #2 high-tension cord
- ④ #1 high-tension cord
- ⑤ Wire starter
- ⑥ A.C. generator
- ⑦ Oil filter cover
- ⑧ Side stand switch
- ⑨ Side stand switch lead wire
- ⑩ Horn lead wire
- ⑪ #2 and #3 ignition coil lead wires
- ⑫ Frame ground lead wire

- ⑬ Flasher relay coupler
- ⑭ Oil lamp relay coupler
- ⑮ Igniter unit coupler

- A** Pass the wire harness and the starter cable through the holder wire of the gusset.  
Pass the starter cable under the wire harness.
- B** Secure the lead wire branch of the main harness to tension pipe 1, at the immediate rear of the

gusset, by use of this band.  
The front end of the band must be directed downward.

- C** Bundle the four high-tension cords, the #1 and #2 cords up and the #3 and #4 cords down, by use of this band.  
Position the leading ends of the cords near, but not below, the lower front end of the air induction system assy.

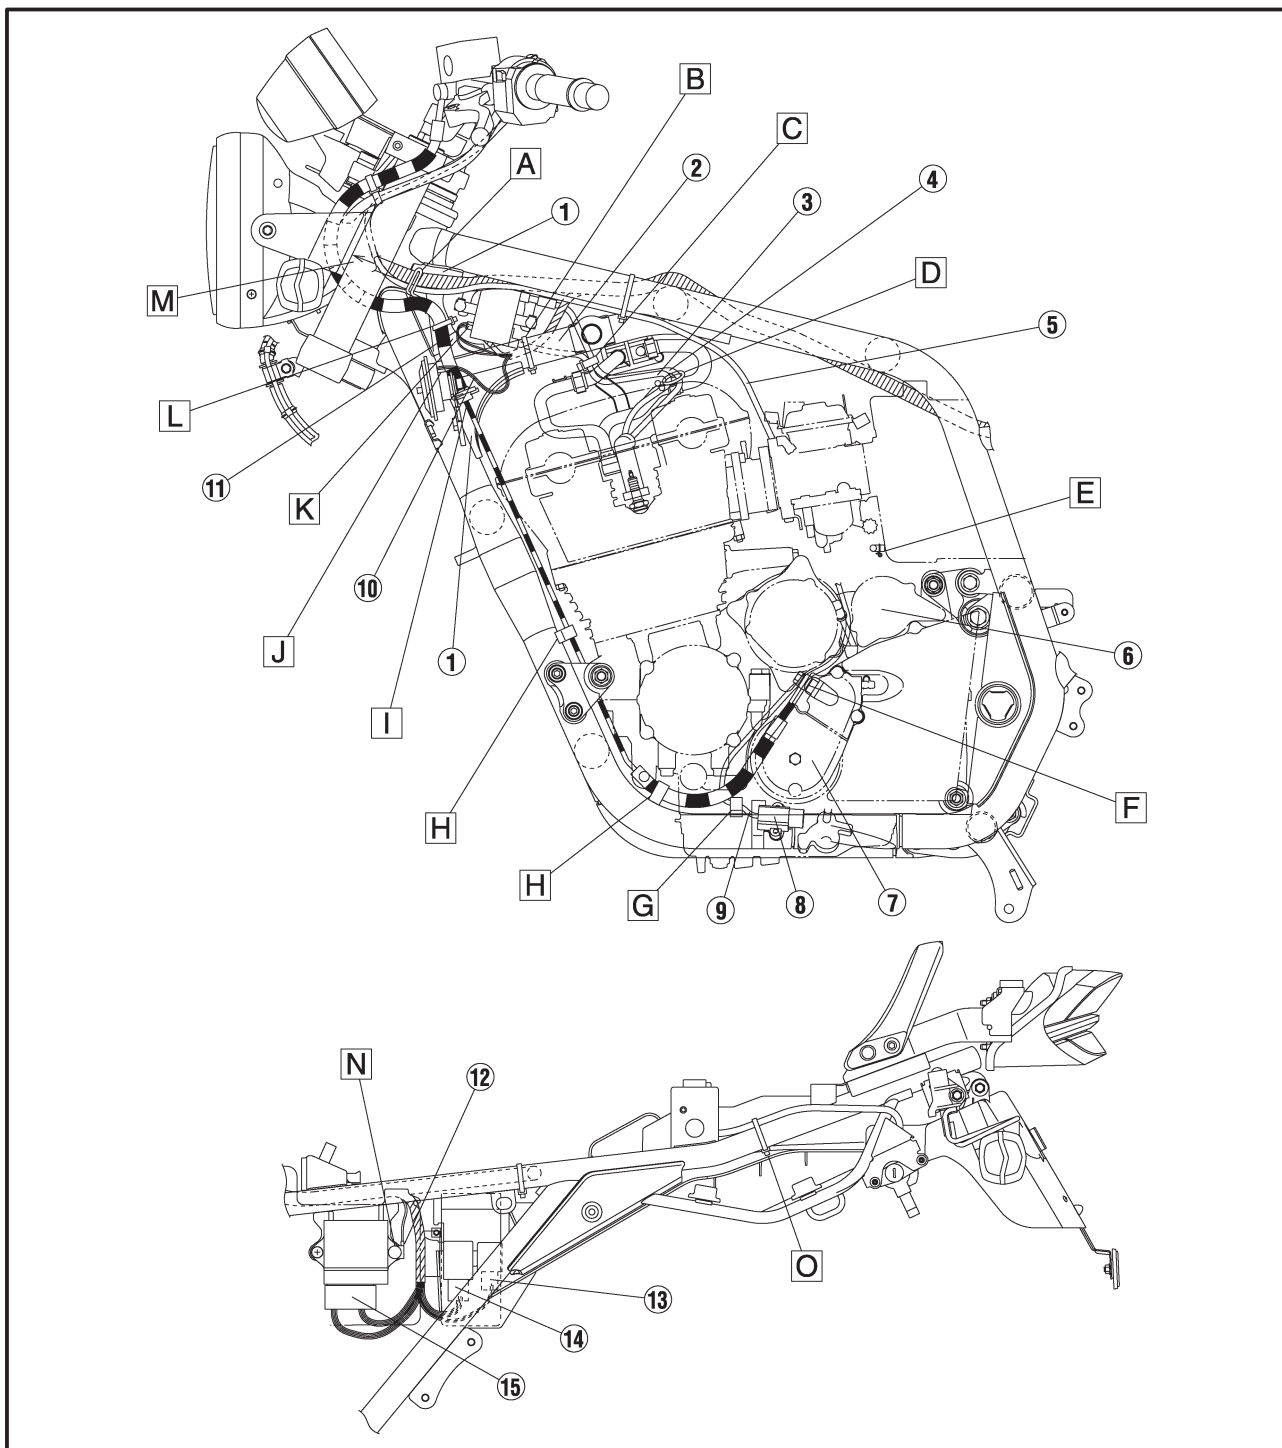


## CABLE ROUTING

**SPEC**



- D** Bundle the #1 and #2 high-tension cords using this clamp. Clamp these cords above the #2 head cover mounting bolt.
- E** Route the air cleaner drain hose through the right side of the vehicle with a clearance above the starter motor.
- F** Mount the square fixture of the clutch hose in parallel with the cover.
- G** After securing the side stand switch lead wire using this clamp, first route the lead wire between the pickup cover, the oil filter cover, the A.C. generator, and the starter motor. Next, as with the engine lead wire, route the lead wire through the right side of the vehicle.
- H** Clamp the clutch hose.
- I** Secure the grommet of the clutch hose by use of this holder wire of the gusset.
- J** Pass the horn lead wire between the clutch hose and the frame, then pull the lead wire out to the front, and connect the lead wire to the horn.
- K** Connect the black-coupler-equipped lead wire to the #1 and #4 ignition coils.

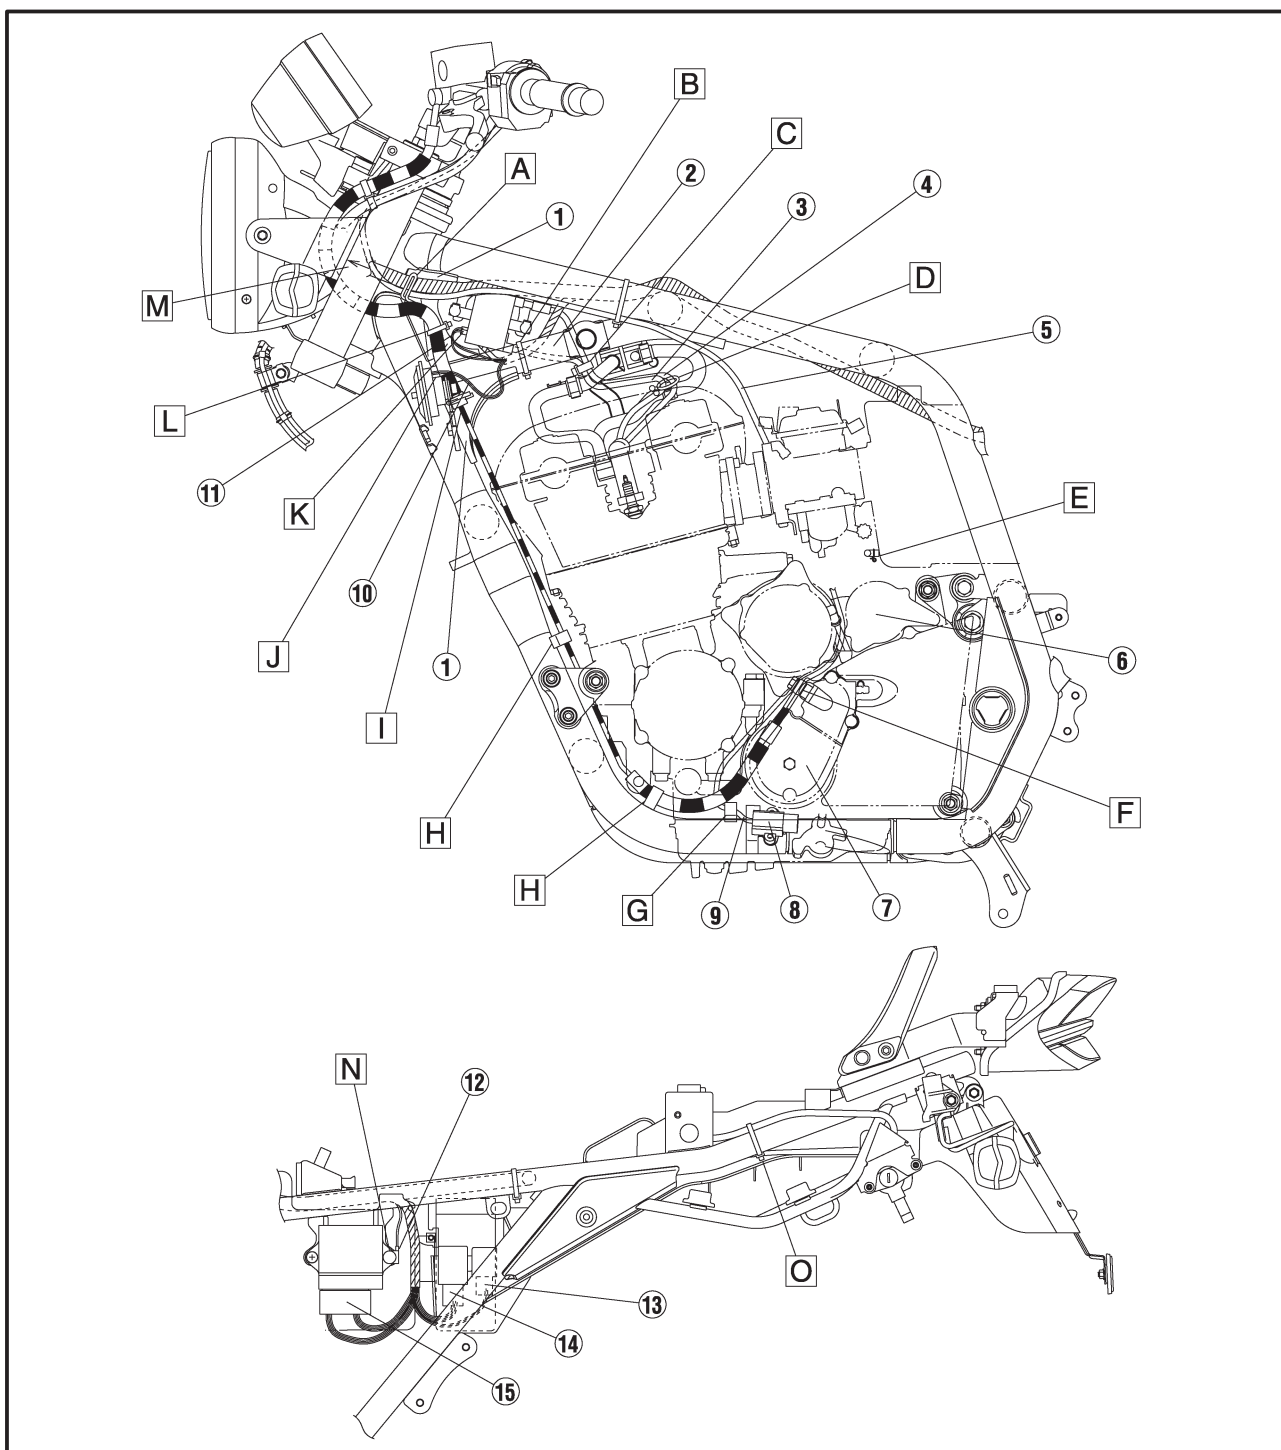


## CABLE ROUTING

SPEC



- L** Pass this clamp through the lower hole of the gusset and secure the clutch hose. The front end of the clamp must be directed towards the inside of the vehicle.
- M** Pass the main harness through the inside of the clutch hose and insert the harness into the left of the headlight lower hole.
- N** Fasten the frame ground lead wire together with the igniter unit mounting screw.
- O** Clamp the seat lock wire to the seat rail. The front end of the clamp must be directed downward.

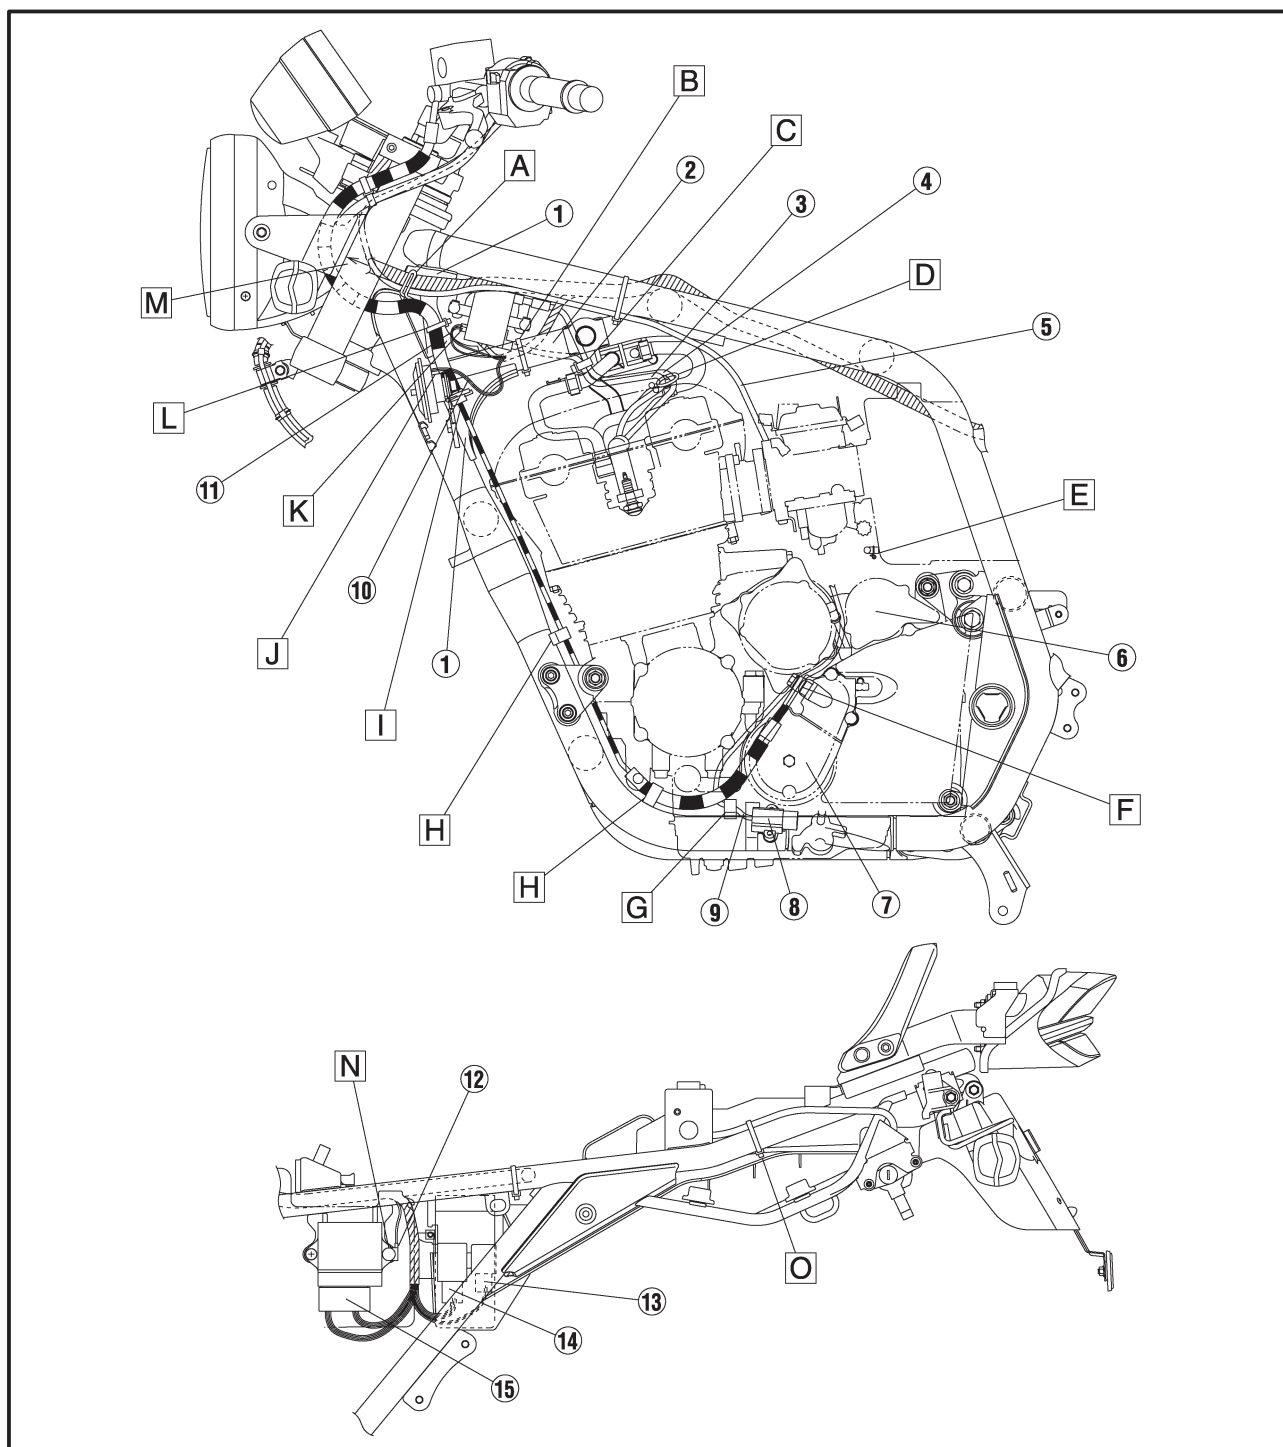




# CABLE ROUTING

**SPEC**



- ① Throttle cable
- ② #1 and #4 ignition coils
- ③ T.P.S.
- ④ Neutral switch coupler
- ⑤ Pickup coupler
- ⑥ Side stand switch coupler
- ⑦ Fuel sender coupler
- ⑧ Igniter unit
- ⑨ Starter cable
- ⑩ #2 and #3 ignition coils
- ⑪ Stoppers
- ⑫ Negative (-) lead wire of the battery
- ⑬ Relay assy
- ⑭ Starter motor cable
- ⑮ Thermoswitch
- ⑯ Starter relay
- ⑰ Rib of the rear fender
- ⑱ Seat lock wire
- ⑲ Positive (+) lead wire of the battery
- ⑳ Starter relay coupler
- ㉑ Fuse box
- ㉒ Negative (-) lead wire coupler of the battery
- ㉓ Flasher relay
- ㉔ Oil lamp relay
- ㉕ Battery band

- A** Right horn.  
Install the HI tone source (with H-marked label) at the right of the vehicle.
- B** Connect the #1-#4 high-tension cords in order of the cord number.
- C** Pass the T.P.S. lead wire through the clamp of the #4 carburetor.
- D** To fuel sender

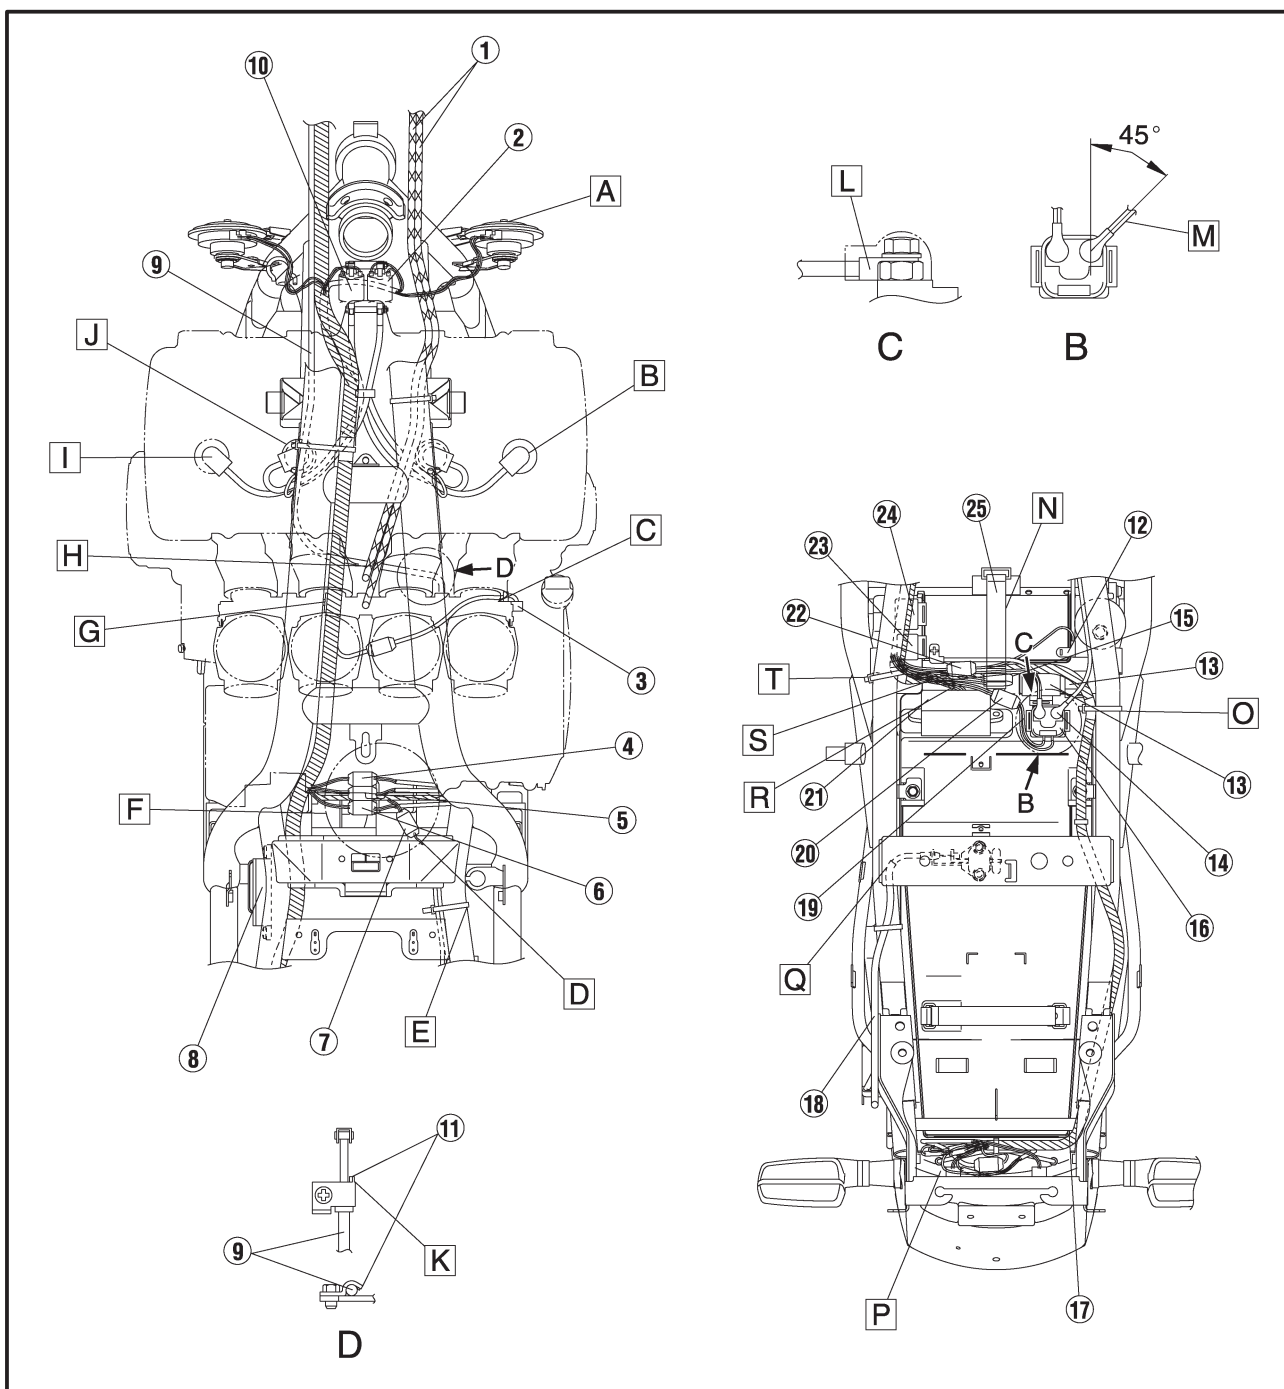


# CABLE ROUTING

SPEC



- E** Clamp the starter motor cable and the negative (-) lead wire of the battery to the seat rail, between the air cleaner mounting bracket and the tank mounting bracket.
- F** Connect the fuel sender coupler, neutral switch coupler, pickup coupler, and side stand switch coupler wires above the air cleaner.
- G** Thread the wire harness insertion clamp onto the T-stud of the frame.
- H** Pass the starter cable through the front of the throttle cable.
- I** From left: #1, #2, #3, and #4 high-tension cords.
- J** Secure the wire harness and the starter cable, on the harness positioning tape, by use of this band. The front end of the band must be directed downward. The harness must not deflect between the T-stud and the clamp.
- K** Connect the starter cable to face at right angles to the vehicle body with contact with the stoppers.
- L** Direct the crimping side of the battery positive (+) lead wire downward and connect the lead wire.
- M** Connect the starter motor cable to face outward at an angle of about 45 degrees.

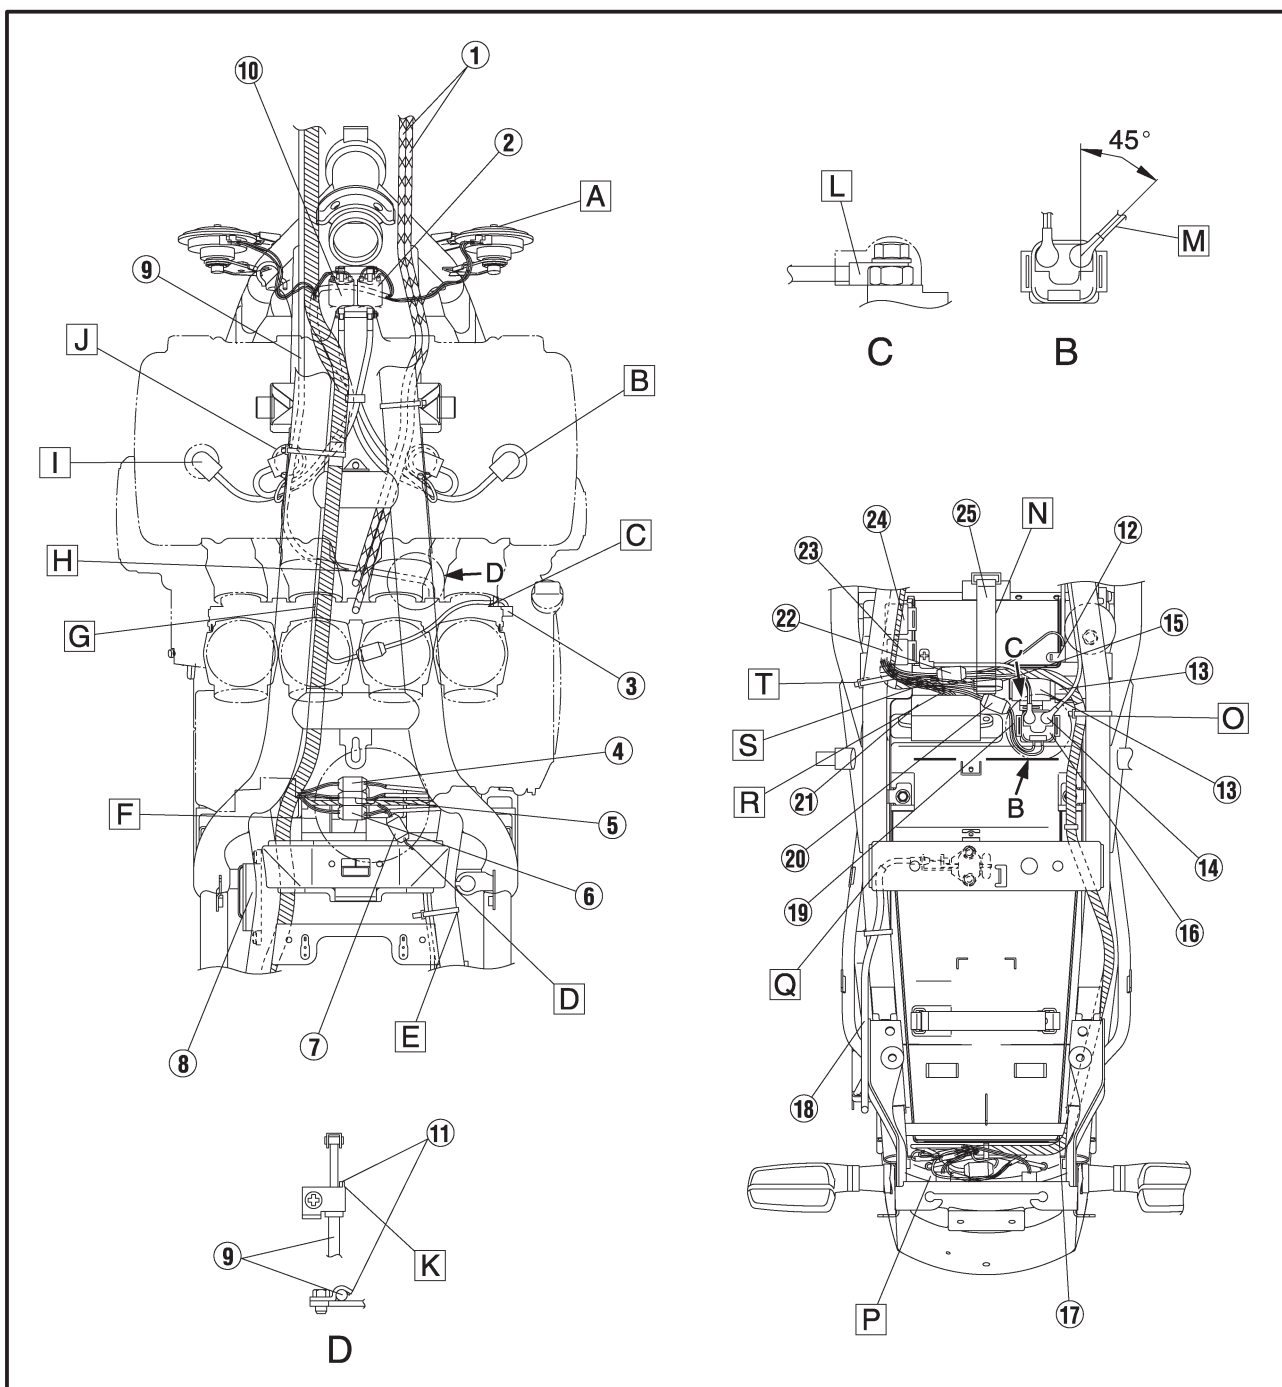

# CABLE ROUTING

SPEC



**N** Secure the two positive (+) lead wires of the battery, the negative(-) lead wire coupler of the battery, and the wire harness by use of this battery band.

**O** Clamp the wire harness to the seat rail, on the wire harness positioning tape and at the immediate rear of the side cover mounting bracket on the seat rail.

The front end of the clamp must face downward and be positioned inside the back stay.

**P** Store the wire harness, the taillight lead wire, and the rear left and right flasher lead wires, into the space between the taillight bracket and the rib of the rear fender.


**Q** The seat lock wire must not extend to the outside of the bracket.

**R** Pass the lead wire leading to the fuse box under the wire harness.

**S** After connecting the lead wire of the thermoswitch, store the lead wire into the space under the wire harness.

**T** Clamp the wire harness to the seat rail, on the wire harness positioning tape and at the immediate rear of the side cover mounting bracket on the seat rail.

The front end of the clamp must face downward and be positioned inside the back stay.

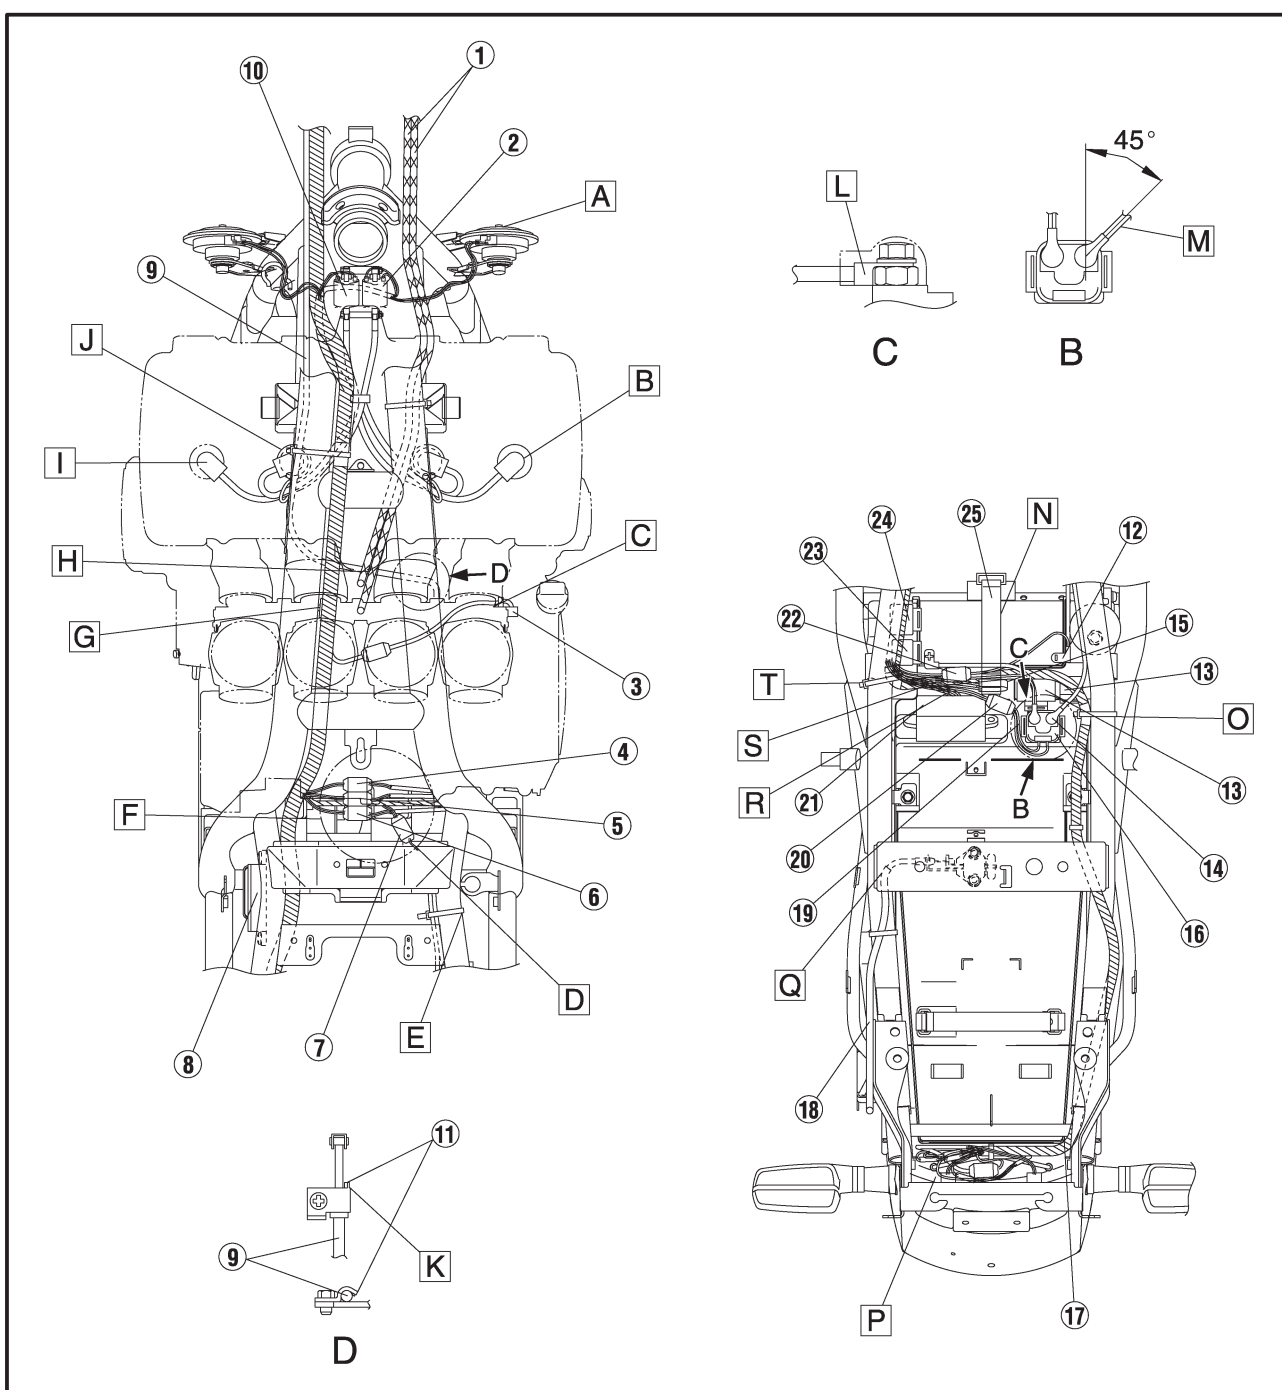

# CABLE ROUTING




- ① Meter lead wire
- ② Main switch lead wire
- ③ Crown handle
- ④ Starter cable
- ⑤ Left handle switch lead wire
- ⑥ Clutch hose
- ⑦ Front left flasher lead wire
- ⑧ Front right flasher lead wire
- ⑨ Brake hose 2
- ⑩ Brake hose 1
- ⑪ Right handle switch lead wire
- ⑫ Wire harness
- ⑬ Taillight lead wires
- ⑭ Taillight bracket
- ⑮ Rib of the rear fender

- ⑯ Rear fender
- ⑰ Rear left flasher lead wire
- ⑱ Rear right flasher lead wire
- ⑲ Wire harness


- A** Pass the throttle cable through the guide wire of the stay headlight.
- B** Insert the meter lead wire and the main switch lead wire into the upper hole of the headlight.

- C** Bundle the handle switch lead wire, the clutch hose, and the starter cable, under the crown handle, by use of this band. The handle switch lead wire must be passed outside the clutch hose. The starter cable must be passed inside the clutch hose.
- D** Pass the front left and right flasher lead wires through the front of the stay headlight. Securely mount the cap to face upward.

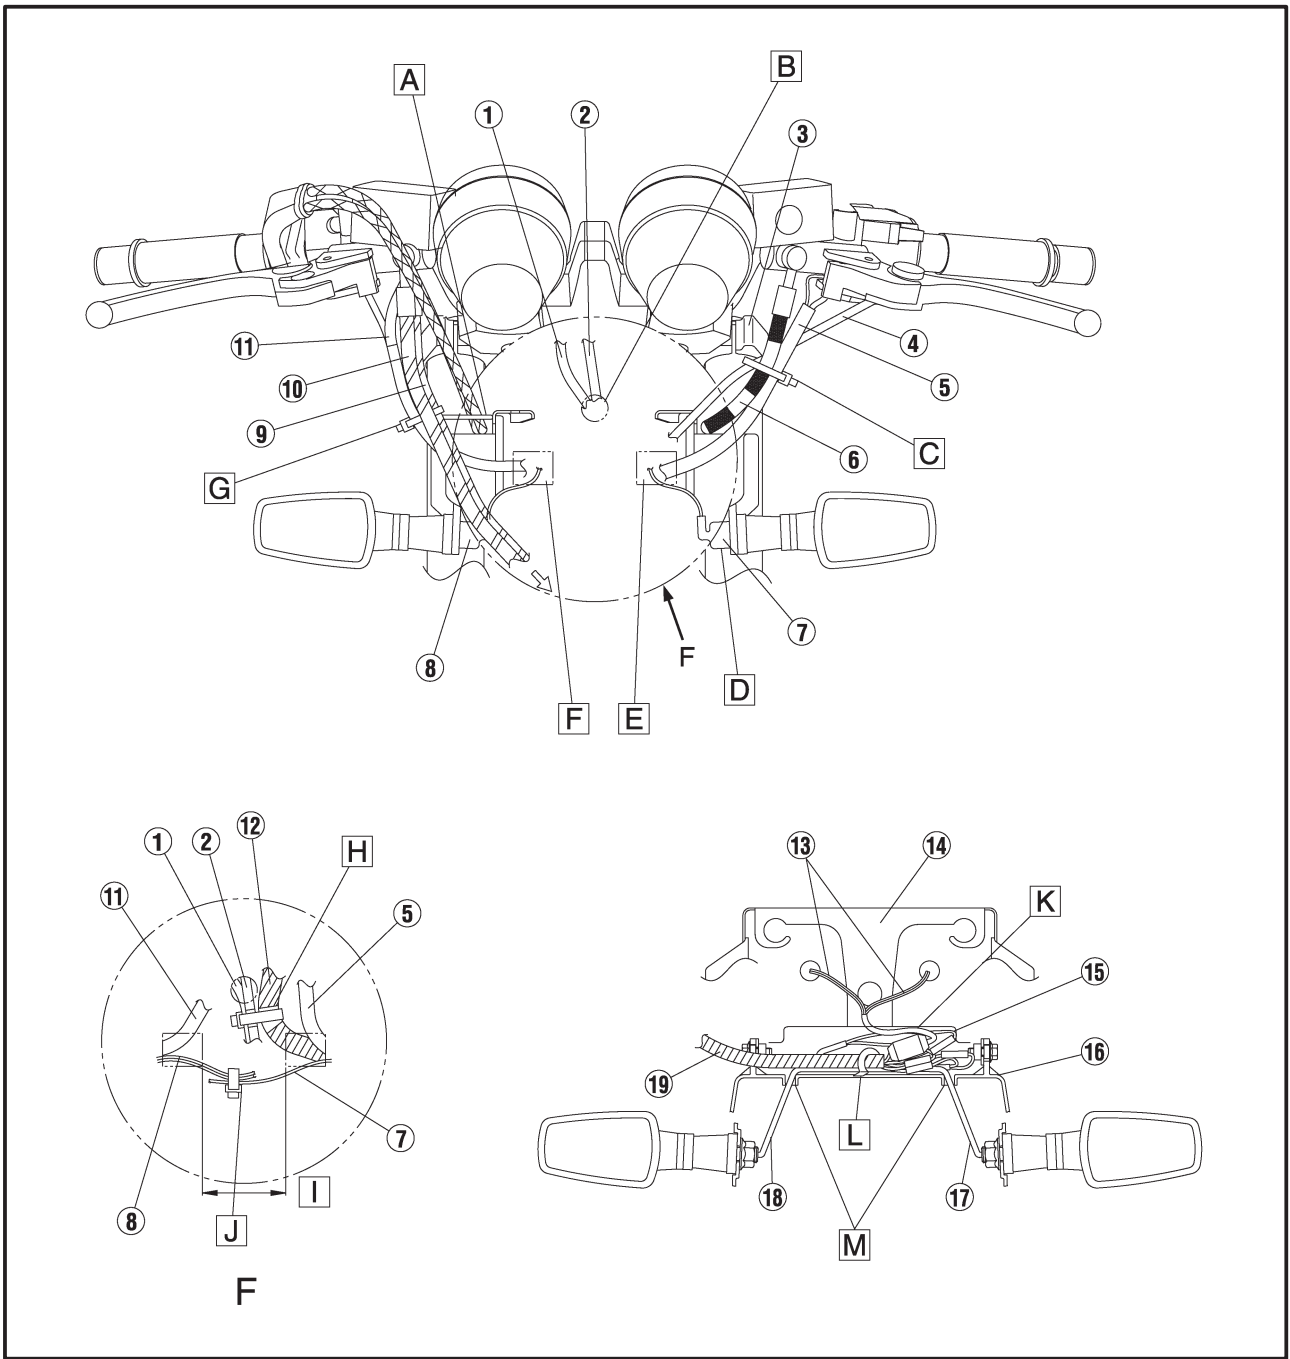



- E** Insert the left lead wire of the handle switch and the left lead wire of the front flasher into the left of the headlight lower hole.
- F** Insert the right lead wire of the handle switch and the right lead wire of the front flasher into the right of the headlight lower hole.
- G** Bundle the handle switch lead wire and brake hose 2, near the guide wire of the stay headlight by use of this band.
- H** Match the wire harness, the main switch lead wire, and the meter lead wire, to the wire harness and main switch lead wire positioning tapes, and bundle the harness and the lead wires by use of the band.
- I** The lead wires must be clamped in this area.
- J** Bundle the front left and right flasher lead wires by use of the clamp.
- K** The wire harness, the taillight lead wires, and the rear left and right flasher lead wires must be arranged below the rib of the rear fender.
- L** Clamp the wire harness and the rear left and right flasher lead wires. The front end of the clamp must be directed forward.
- M** Pass the rear left and right flasher lead wires through the respective holes in the rear fender.

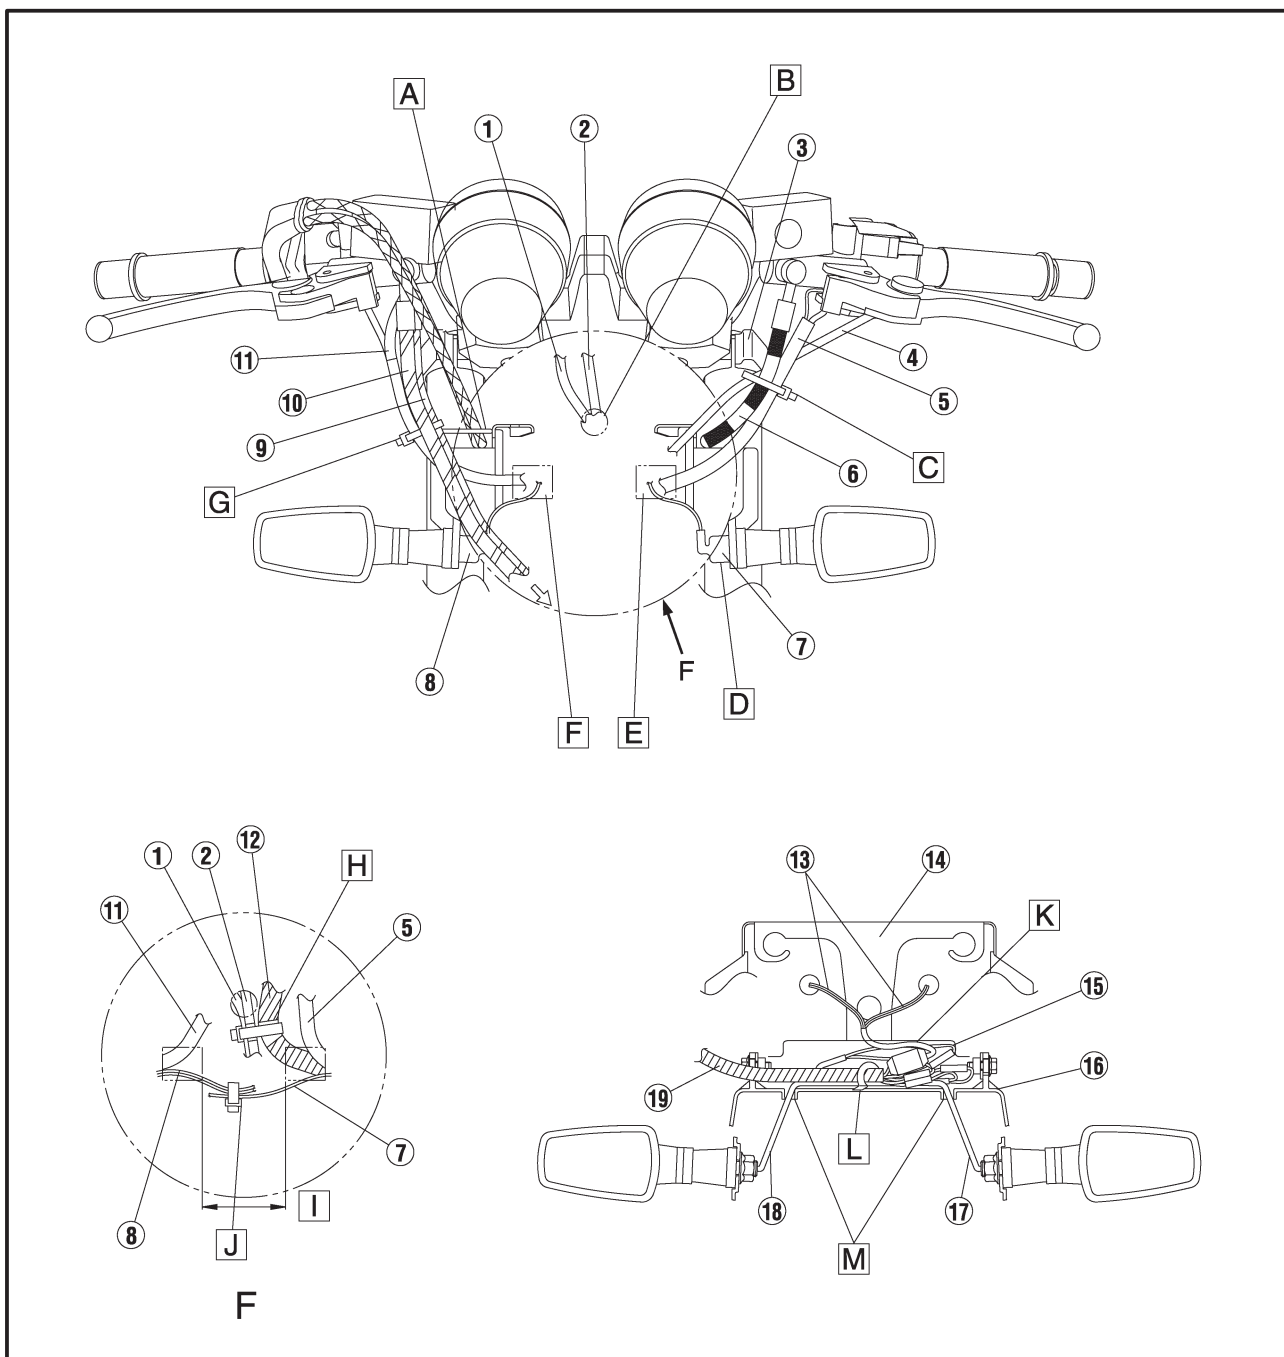



## PERIODIC INSPECTION AND ADJUSTMENT

### INTRODUCTION

This chapter includes all information necessary to perform recommended inspections and adjustments. These preventive maintenance procedures, if followed, will ensure more reliable vehicle operation and a longer service life. The need for costly overhaul work will be greatly reduced. This information applies to vehicles already in service as well as new vehicles that are being prepared for sale. All service technicians should be familiar with this entire chapter.

### PERIODIC MAINTENANCE/LUBRICATION INTERVALS

**NOTE:**

- The annual checks must be performed every year, except if a kilometer-based maintenance is performed instead.
- From 50,000 km, repeat the maintenance intervals starting from 10,000 km.
- Items marked with an asterisk should be performed by Yamaha dealer as they require special tools, data and technical skills.

NO.	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (× 1,000 km)					ANNUAL CHECK
			1	10	20	30	40	
1	*	<b>Fuel line</b>		√	√	√	√	√
2	*	<b>Fuel filter</b>			√		√	
3		<ul style="list-style-type: none"> <li>• Check condition.</li> <li>• Clean and regap.</li> </ul>		√		√		
		<ul style="list-style-type: none"> <li>• Replace.</li> </ul>			√		√	
4	*	<b>Valves</b>	<ul style="list-style-type: none"> <li>• Check valve clearance.</li> <li>• Adjust</li> </ul> Every 20,000 km					
5		<ul style="list-style-type: none"> <li>• Clean.</li> </ul>		√		√		
		<ul style="list-style-type: none"> <li>• Replace.</li> </ul>			√		√	
6	*	<b>Clutch</b>	√	√	√	√	√	
7	*	<ul style="list-style-type: none"> <li>• Check operation, fluid level and vehicle for fluid leakage. (See NOTE.)</li> </ul>	√	√	√	√	√	√
		<ul style="list-style-type: none"> <li>• Replace brake pads.</li> </ul> Whenever worn to the limit						
8	*	<ul style="list-style-type: none"> <li>• Check operation, fluid level and vehicle for fluid leakage. (See NOTE.)</li> </ul>	√	√	√	√	√	√
		<ul style="list-style-type: none"> <li>• Replace brake pads.</li> </ul> Whenever worn to the limit						
9	*	<ul style="list-style-type: none"> <li>• Check for cracks or damage.</li> </ul>		√	√	√	√	√
		<ul style="list-style-type: none"> <li>• Replace. (See NOTE.)</li> </ul> Every 4 years						
10	*	<b>Wheels</b>		√	√	√	√	
11	*	<b>Tires</b>		√	√	√	√	√
12	*	<b>Wheel bearings</b>		√	√	√	√	
13	*	<ul style="list-style-type: none"> <li>• Check operation and for excessive play.</li> </ul>		√	√	√	√	
		<ul style="list-style-type: none"> <li>• Lubricate with lithium-soap-based grease.</li> </ul> Every 50,000 km						
14		<b>Drive chain</b>	<ul style="list-style-type: none"> <li>• Check chain slack.</li> <li>• Make sure that the rear wheel is properly aligned.</li> <li>• Clean and lubricate.</li> </ul> Every 1,000 km and after washing the motorcycle or riding in the rain					

## PERIODIC MAINTENANCE/LUBRICATION INTERVALS

**CHK  
ADJ**



NO.	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (× 1,000 km)					ANNUAL CHECK	
			1	10	20	30	40		
15	*	<b>Steering bearings</b>	• Check bearing play and steering for roughness.	√	√	√	√	√	
			• Lubricate with lithium-soap-based grease.	Every 20,000 km					
16	*	<b>Chassis fasteners</b>	• Make sure that all nuts, bolts and screws are properly tightened.		√	√	√	√	√
17		<b>Sidestand, centerstand</b>	• Check operation. • Lubricate.		√	√	√	√	√
18	*	<b>Sidestand switch</b>	• Check operation.	√	√	√	√	√	√
19	*	<b>Front fork</b>	• Check operation and for oil leakage.		√	√	√	√	
20	*	<b>Shock absorber assemblies</b>	• Check operation and shock absorbers for oil leakage.		√	√	√	√	
21	*	<b>Carburetors</b>	• Check starter (choke) operation. • Adjust engine idling speed and synchronization.	√	√	√	√	√	√
22		<b>Engine oil</b>	• Change. • Check oil level and vehicle for oil leakage.	√	√	√	√	√	√
23		<b>Engine oil filter element</b>	• Replace.	√		√		√	
24	*	<b>Front and rear brake switches</b>	• Check operation.	√	√	√	√	√	√
25		<b>Moving parts and cables</b>	• Lubricate.		√	√	√	√	√
26	*	<b>Lights, signals and switches</b>	• Check operation. • Adjust headlight beam.	√	√	√	√	√	√

**NOTE:**

- The air filter needs more frequent service if you are riding in unusually wet or dusty areas.
- Hydraulic brake and clutch service.
  - Regularly check and, if necessary, correct the brake and clutch fluid levels.
  - Every two years replace the internal components of the brake master cylinders and calipers as well as clutch master and release cylinders, and change the brake and clutch fluids.
  - Replace the brake and clutch hoses every four years and if cracked or damaged.








**CARBURETOR**

EAS00507

**AIR INDUCTION SYSTEM  
AIR INJECTION**

The air induction system burns unburned exhaust gases by injecting fresh air (secondary air) into the exhaust port, reducing the emission of hydrocarbons.

When there is negative pressure at the exhaust port, the reed valve opens, allowing secondary air to flow into the exhaust port. The required temperature for burning the unburned exhaust gases is approximately 600 to 700°C.

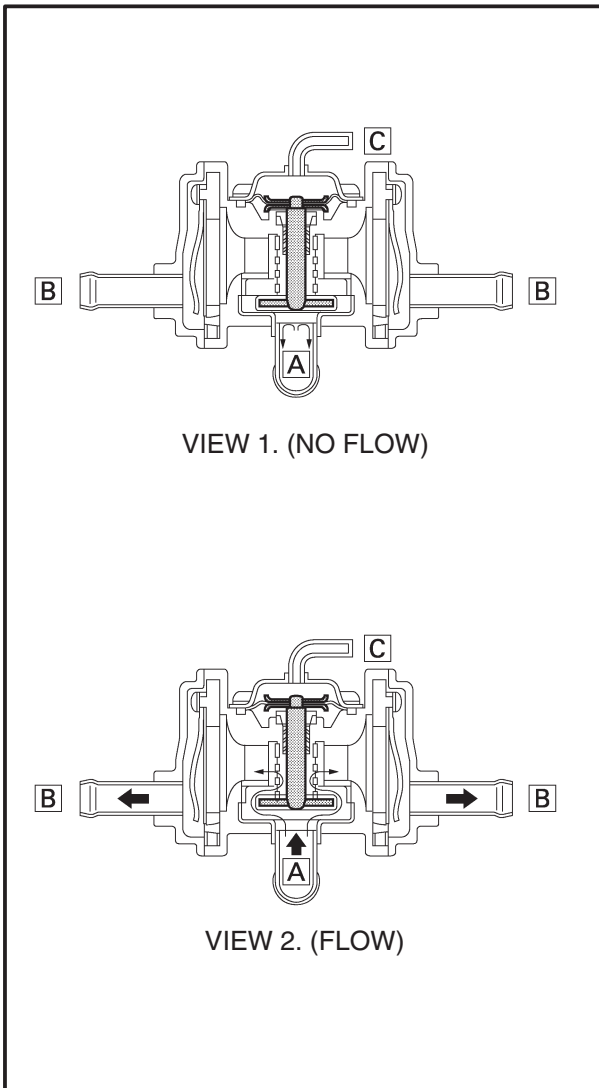

EAS00508

**AIR CUTOFF VALVE**

The air cutoff valve is operated by the intake gas pressure through the piston valve diaphragm. Normally, the air cutoff valve is open to allow fresh air to flow into the exhaust port. During sudden deceleration (the throttle valve suddenly closes), negative pressure is generated and the air cutoff valve is closed in order to prevent after-burning.

Additionally, at high engine speeds and when the pressure decreases, the air cutoff valve automatically closes to guard against a loss of performance due to self-EGR.

VIEW 1. (NO FLOW)

When decelerating (the throttle closes), the valve will close.

VIEW 2. (FLOW)


During normal operation the valve is open.

- A** From the air cleaner
- B** To the cylinder
- C** To the carburetor joint



EAS00509

AIR INDUCTION SYSTEM DIAGRAMS

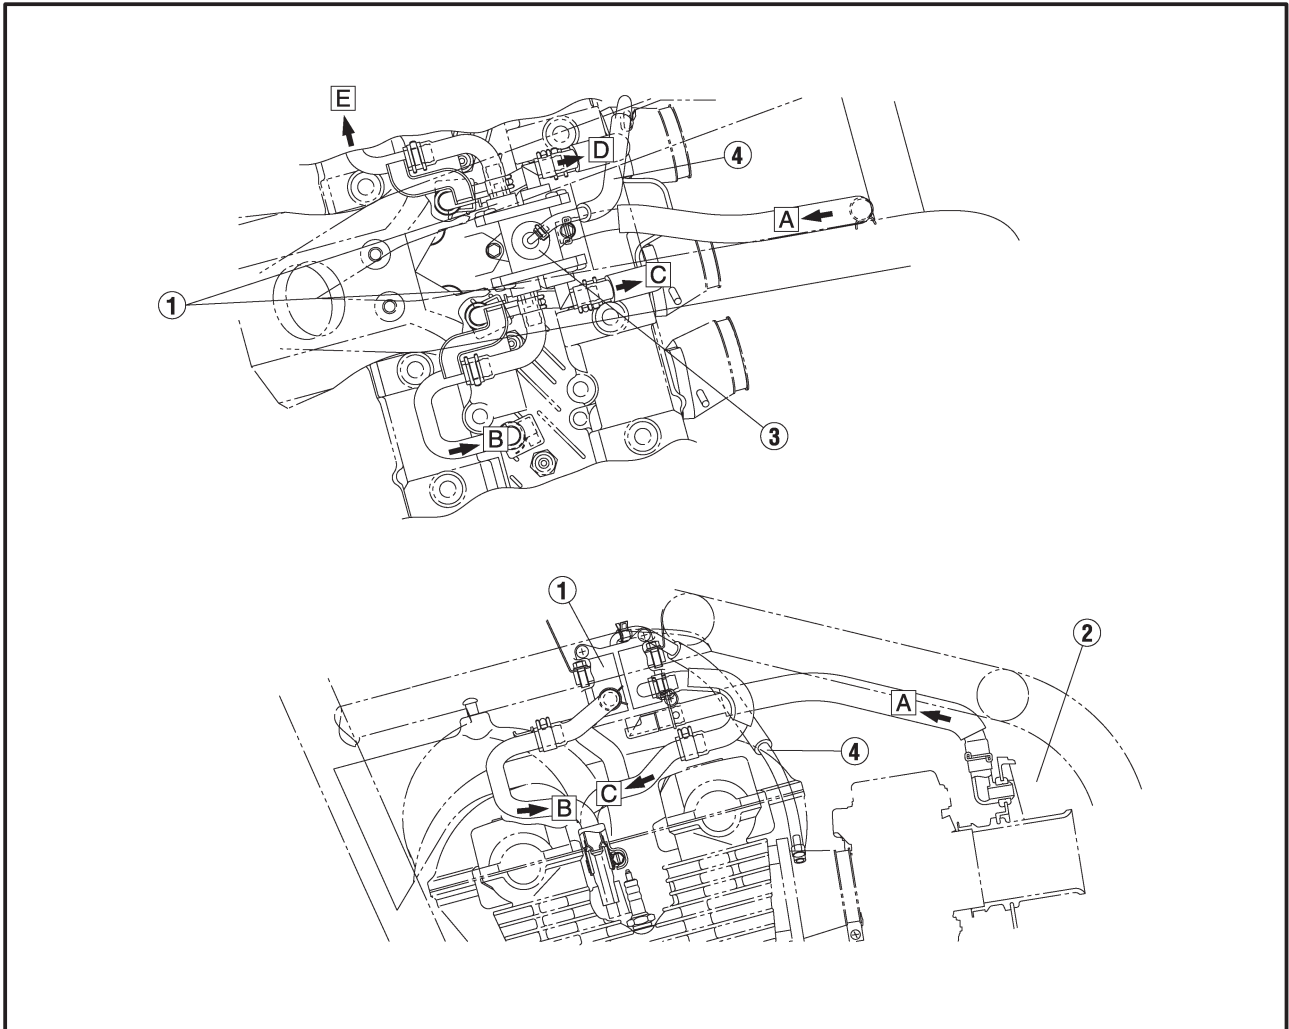

- ① Reed valve
- ② Air cleaner
- ③ Air cutoff valve
- ④ Vacuum hose (cylinder #3)
- A To the air cutoff valve
- B To cylinder #1
- C To cylinder #2
- D To cylinder #3
- E To cylinder #4




EAS00510

## CHECKING THE AIR INDUCTION SYSTEM


### 1. Check:

- hoses  
Loose connection → Connect properly.  
Cracks/damage → Replace.
- pipes  
Cracks/damage → Replace.

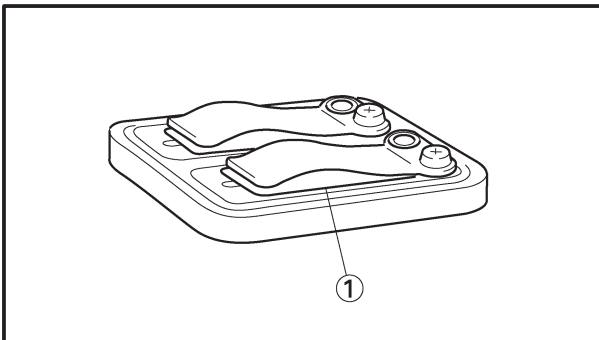

### 2. Check:

- fibre reed ①
- fibre reed stopper
- reed valve seat  
Cracks/damage → Replace the reed valve.

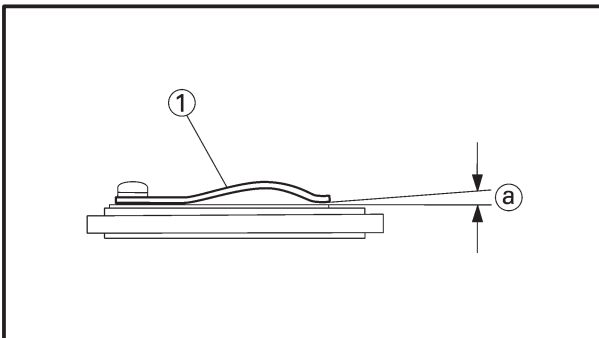


### 3. Measure:

- fibre reed bending limit (a)  
Out of specification → Replace the reed valve.



**Fibre reed bending limit  
0.2 mm**

① Surface plate

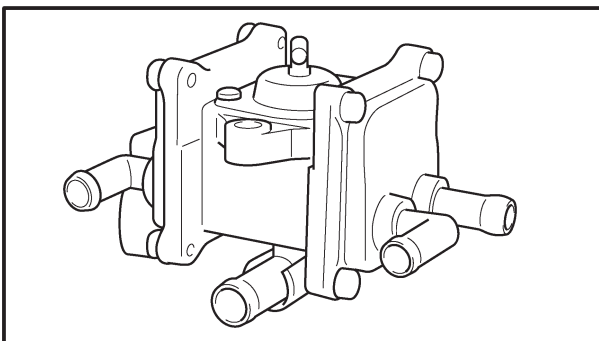

### 4. Check:


- air cutoff valve  
Cracks/damage → Replace.

CHASSIS

FRONT AND REAR BRAKES

EAS00586

FRONT BRAKE MASTER CYLINDER

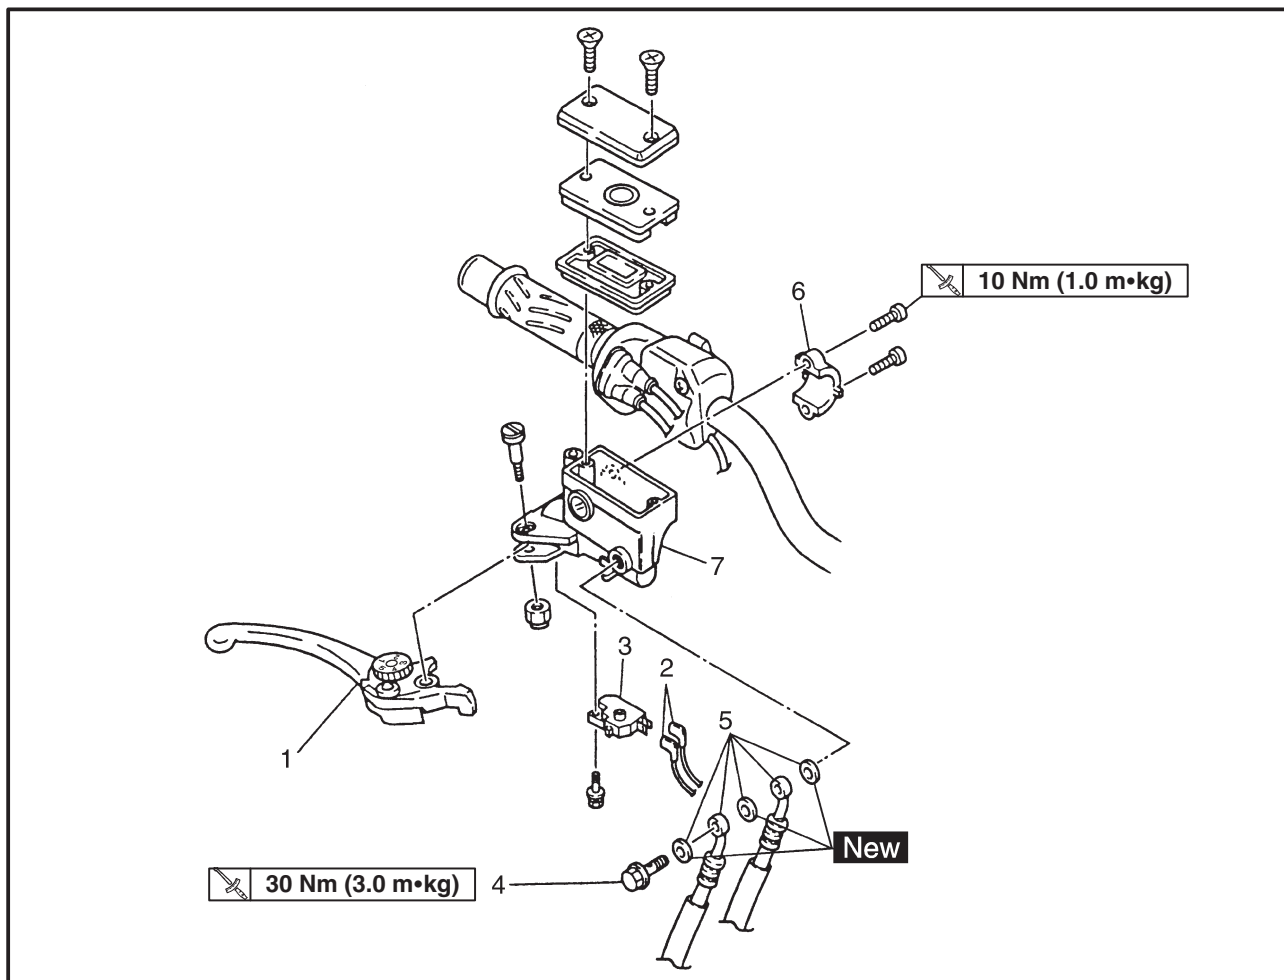




Order	Job/Part	Q'ty	Remarks
	<b>Removing the front brake master cylinder</b>		
	Brake fluid		Remove the parts in the order listed. Drain
1	Brake lever	1	
2	Brake switch lead	2	
3	Front brake switch	1	
4	Union bolt	1	Refer to "DISASSEMBLING/ASSEMBLING AND INSTALLING THE REAR BRAKE MASTER CYLINDER" in chapter 6. (Manual No.: 5EA3-AE1) For installation, reverse the removal procedure.
5	Copper washers/Brake hose	3/2	
6	Master cylinder bracket	1	
7	Master cylinder	1	

EAS00598

**ASSEMBLING AND INSTALLING THE FRONT BRAKE MASTER CYLINDER**

**⚠ WARNING**

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components.

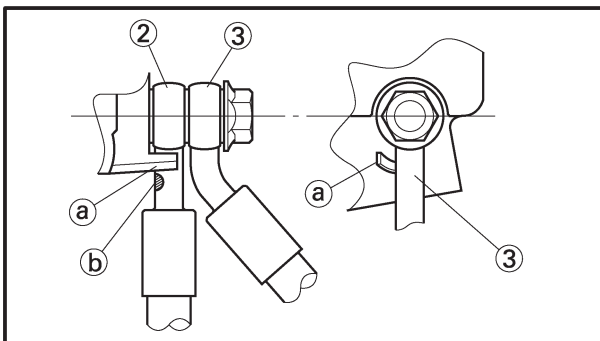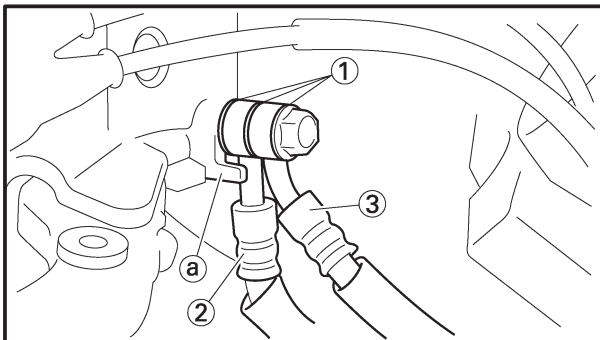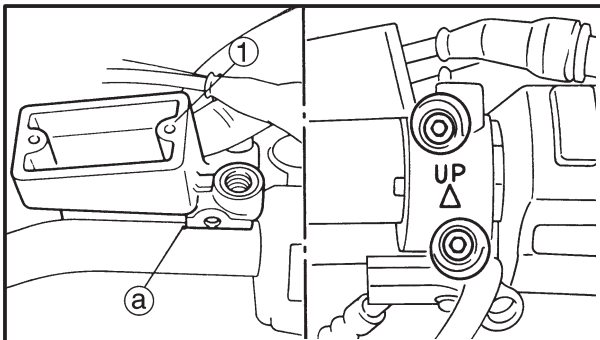


	<b>Recommended brake fluid DOT 4</b>
---	--


1. Install:
- brake master cylinder (1)

**NOTE:**

- Install the brake master cylinder holder with the “UP” mark facing up.
- Align the end of the brake master cylinder holder with the punch mark (a) on the handlebar.
- First, tighten the upper bolt, then the lower bolt.

	<b>Brake master cylinder bolt 10 Nm (1.0 m•kg)</b>
---	--

2. Install:
- copper washers (New) (1)
  - brake hose 1 (2)
  - brake hose 2 (3)
  - union bolt (4)

	<b>Union bolt 30 Nm (3.0 m•kg)</b>
---	--

**⚠ WARNING**

Proper brake hose routing is essential to insure safe motorcycle operation. Refer to “CABLE ROUTING”.

**CAUTION:**

- When installing the brake hose 1 (2) onto the brake master cylinder, make sure that the brake pipe touches the projection (a) as shown. And install the paint mark (b) toward the brake master cylinder side.
- Install the brake hose 2 (3) at the same angle as the brake hose 1 (2).

**NOTE:**

Turn the handlebar to the left and to the right to make sure that the brake hose does not touch other parts (e.g., wire harness, cables, leads). Correct if necessary.



## 3. Fill:

- brake master cylinder reservoir  
(with the specified amount of the recommended brake fluid)




**Recommended brake fluid**  
**DOT 4**

**⚠ WARNING**

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

**CAUTION:**

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

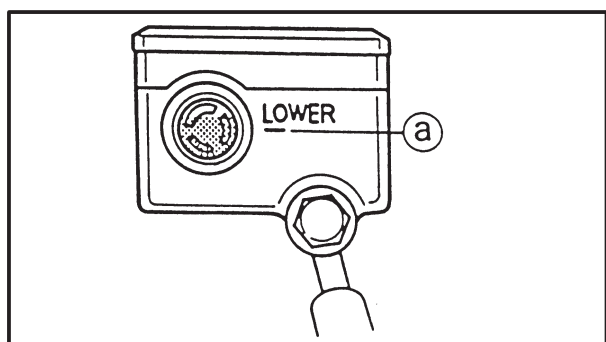

## 4. Bleed:

- brake system  
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3. (Manual No.: 5EA3-AE1)

## 5. Check:


- brake fluid level  
Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3. (Manual No.: 5EA3-AE1)

## 6. Check:

- brake lever operation  
Soft or spongy feeling → Bleed the brake system.  
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3. (Manual No.: 5EA3-AE1)

EAS00616


REAR BRAKE CALIPER

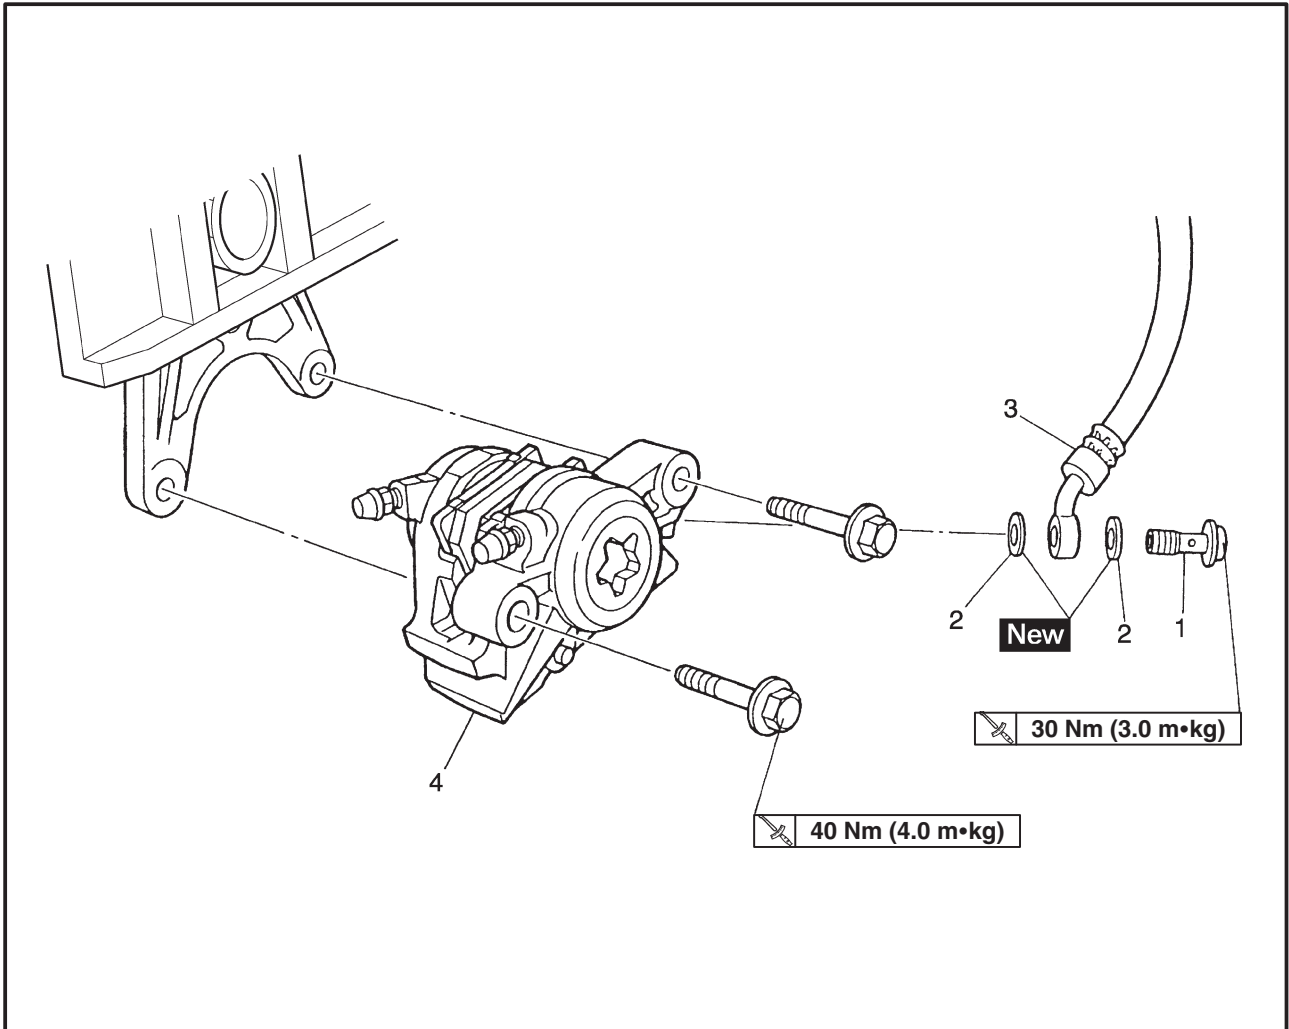

Order	Job/Part	Q'ty	Remarks
	<b>Removing the rear brake caliper</b>		
	Brake fluid		Remove the parts in the order listed.
1	Union bolt	1	Drain.
2	Copper washer	2	
3	Brake hose	1	
4	Brake caliper	1	
			For installation, reverse the removal procedure.



EAS00617

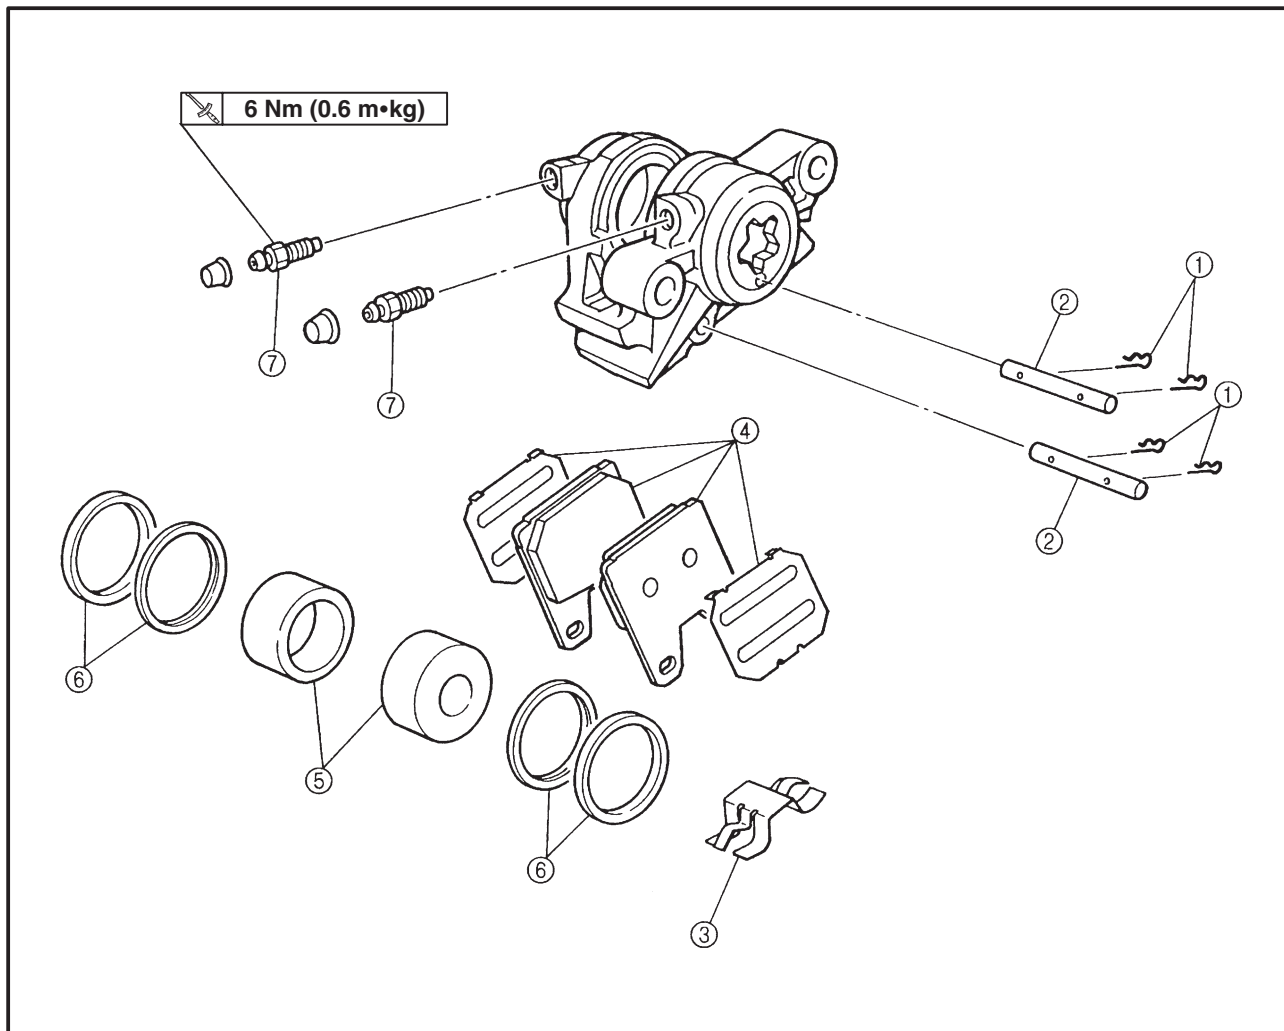

Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the rear brake caliper</b>		Disassemble the parts in the order listed.
①	Brake pad clip	4	
②	Brake pad pin	2	
③	Brake pad spring	1	
④	Brake pad	2	
⑤	Brake caliper piston	2	
⑥	Brake caliper piston seal	4	
⑦	Bleed screw	2	
			For assembly, reverse the disassembly procedure.


# CARBURETOR HEATING SYSTEM

ELEC



## ELECTRICAL

### CARBURETOR HEATING SYSTEM

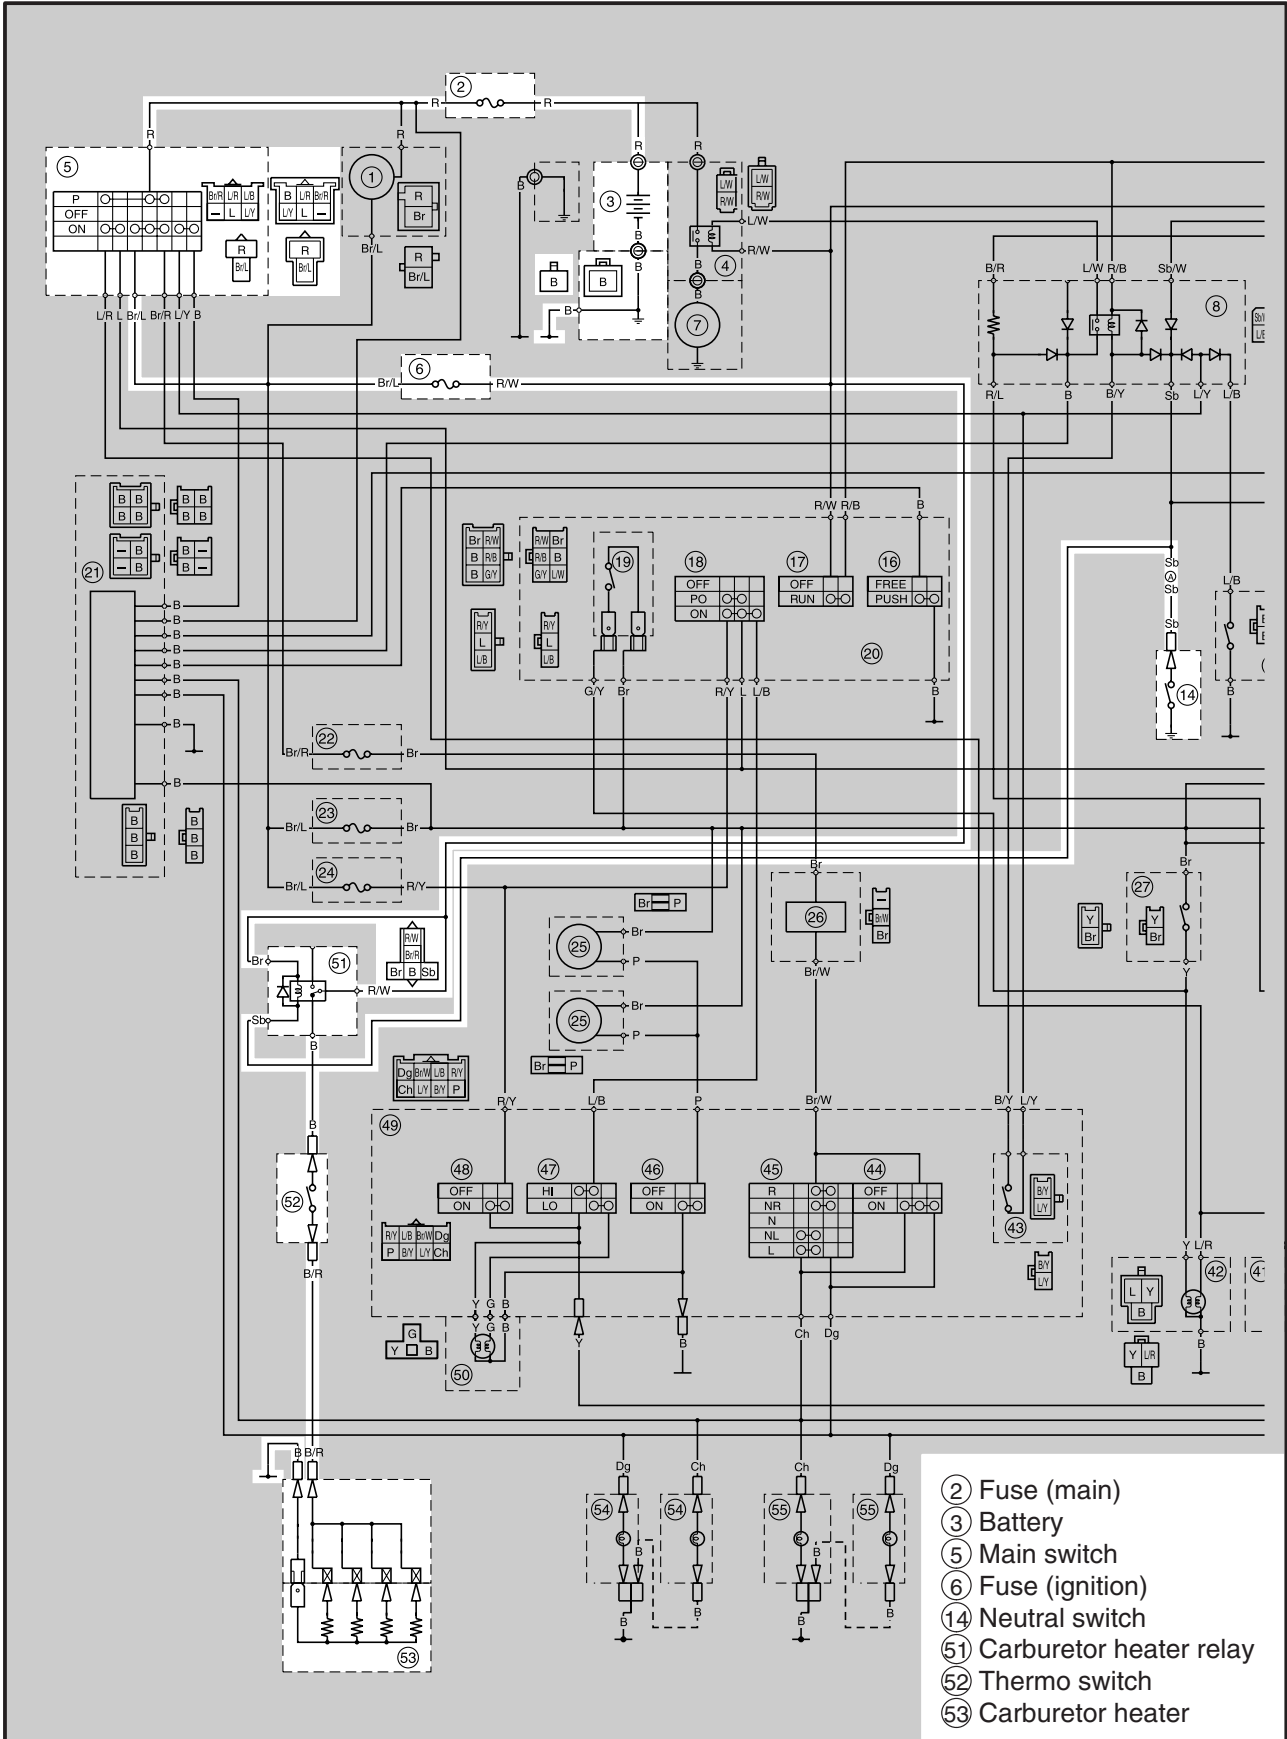

# CARBURETOR HEATING SYSTEM

**ELEC**



EAS00821

## TROUBLESHOOTING

**The carburetor heating system fails to operate.**

Check:

1. Main and ignition fuses
2. Battery
3. Main switch
4. Neutral switch
5. Carburetor heater relay
6. Thermo switch
7. Carburetor heater
8. Wiring connections  
(of the entire carburetor heating system)

### NOTE:

Before troubleshooting, remove the following part(-s):

- 1) Rider and passenger seats
- Troubleshoot with the following special tool(-s).



**Pocket tester**  
90890-03112

EAS00738

### 1. Main, and ignition fuses

- Check the main and ignition fuses for continuity. Refer to "CHECKING THE FUSES" in chapter 3. (Manual No.: 5EA3-AE1)
- Are the main and ignition fuses OK?

↓ YES

↓ NO

Replace the fuse(-s).

EAS00739

### 2. Battery

- Check the condition of the battery. Refer to "CHECKING THE BATTERY" in chapter 3. (Manual No.: 5EA3-AE1)



**Open-circuit voltage**  
12.8 V or more at 20°C

- Is the battery OK?

↓ YES

↓ NO

- Clean the battery terminals.
- Recharge or replace the battery.

EAS00749

### 3. Main switch

- Check the main switch for continuity. Refer to "CHECKING THE SWITCHES" in chapter 8. (Manual No.: 5EA3-AE1)
- Is the main switch OK?

↓ YES

↓ NO

Replace the main switch.

EAS00751

### 4. Neutral switch

- Check the neutral switch for continuity. Refer to "CHECKING THE SWITCHES" in chapter 8. (Manual No.: 5EA3-AE1)
- Is the neutral switch OK?

↓ YES

↓ NO


Replace the neutral switch.

EAS00822

### 5. Carburetor heater relay

- Disconnect the carburetor heater relay coupler from the wire harness.
- Connect the pocket tester ( $\Omega \times 1$ ) to the carburetor heater relay coupler as shown.

**Tester positive probe** → red/white ①  
**Tester negative probe** → black ②

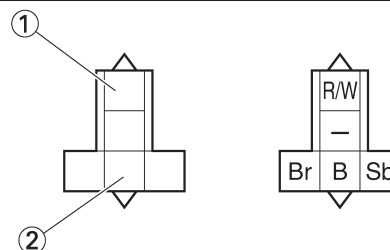

- Check the carburetor heater relay for no continuity.
- Is the carburetor heater relay OK?

↓ YES

↓ NO

Replace the carburetor heater relay.

# CARBURETOR HEATING SYSTEM



**6. Thermo switch**

- Remove the thermo switch from the thermo switch plate.
- Connect the pocket tester to the ( $\Omega \times 1$ ) to the thermo switch as shown.

**Tester positive probe** → black ①  
**Tester negative probe** → black/red ②

- Check the thermo switch for continuity at the temperatures indicated below.

**A COOL DOWN**  
**B HEAT UP**

- Does the thermo switch operated properly?

↓ YES      ↓ NO

Replace the thermo switch.

EAS00825  
 The following procedure applies to all of the carburetor heating elements.

**7. Carburetor heater**

- Remove the carburetor heating element from the carburetor.
- Connect the pocket tester to the carburetor heating element as shown.

**Tester positive probe** → heating element ①  
**Tester negative probe** → heating element body ②

- Measure the carburetor heater resistance.

**Carburetor heating element resistance**

12 V 15 W: 4 ~ 11  $\Omega$  at 20°C  
 12 V 20 W: 4 ~ 11  $\Omega$  at 20°C

- Is the carburetor heating element OK?

↓ YES      ↓ NO

Replace the carburetor heating element.

EAS00826

**8. Wiring**


- Check the entire carburetor heating system's wiring. Refer to "CIRCUIT DIAGRAM".
- Is the carburetor heating system's wiring properly connected and without defects?

↓ NO

Properly connect or repair the carburetor heating system's wiring.



# XJR1300 2002 WIRING DIAGRAM (for EUR)

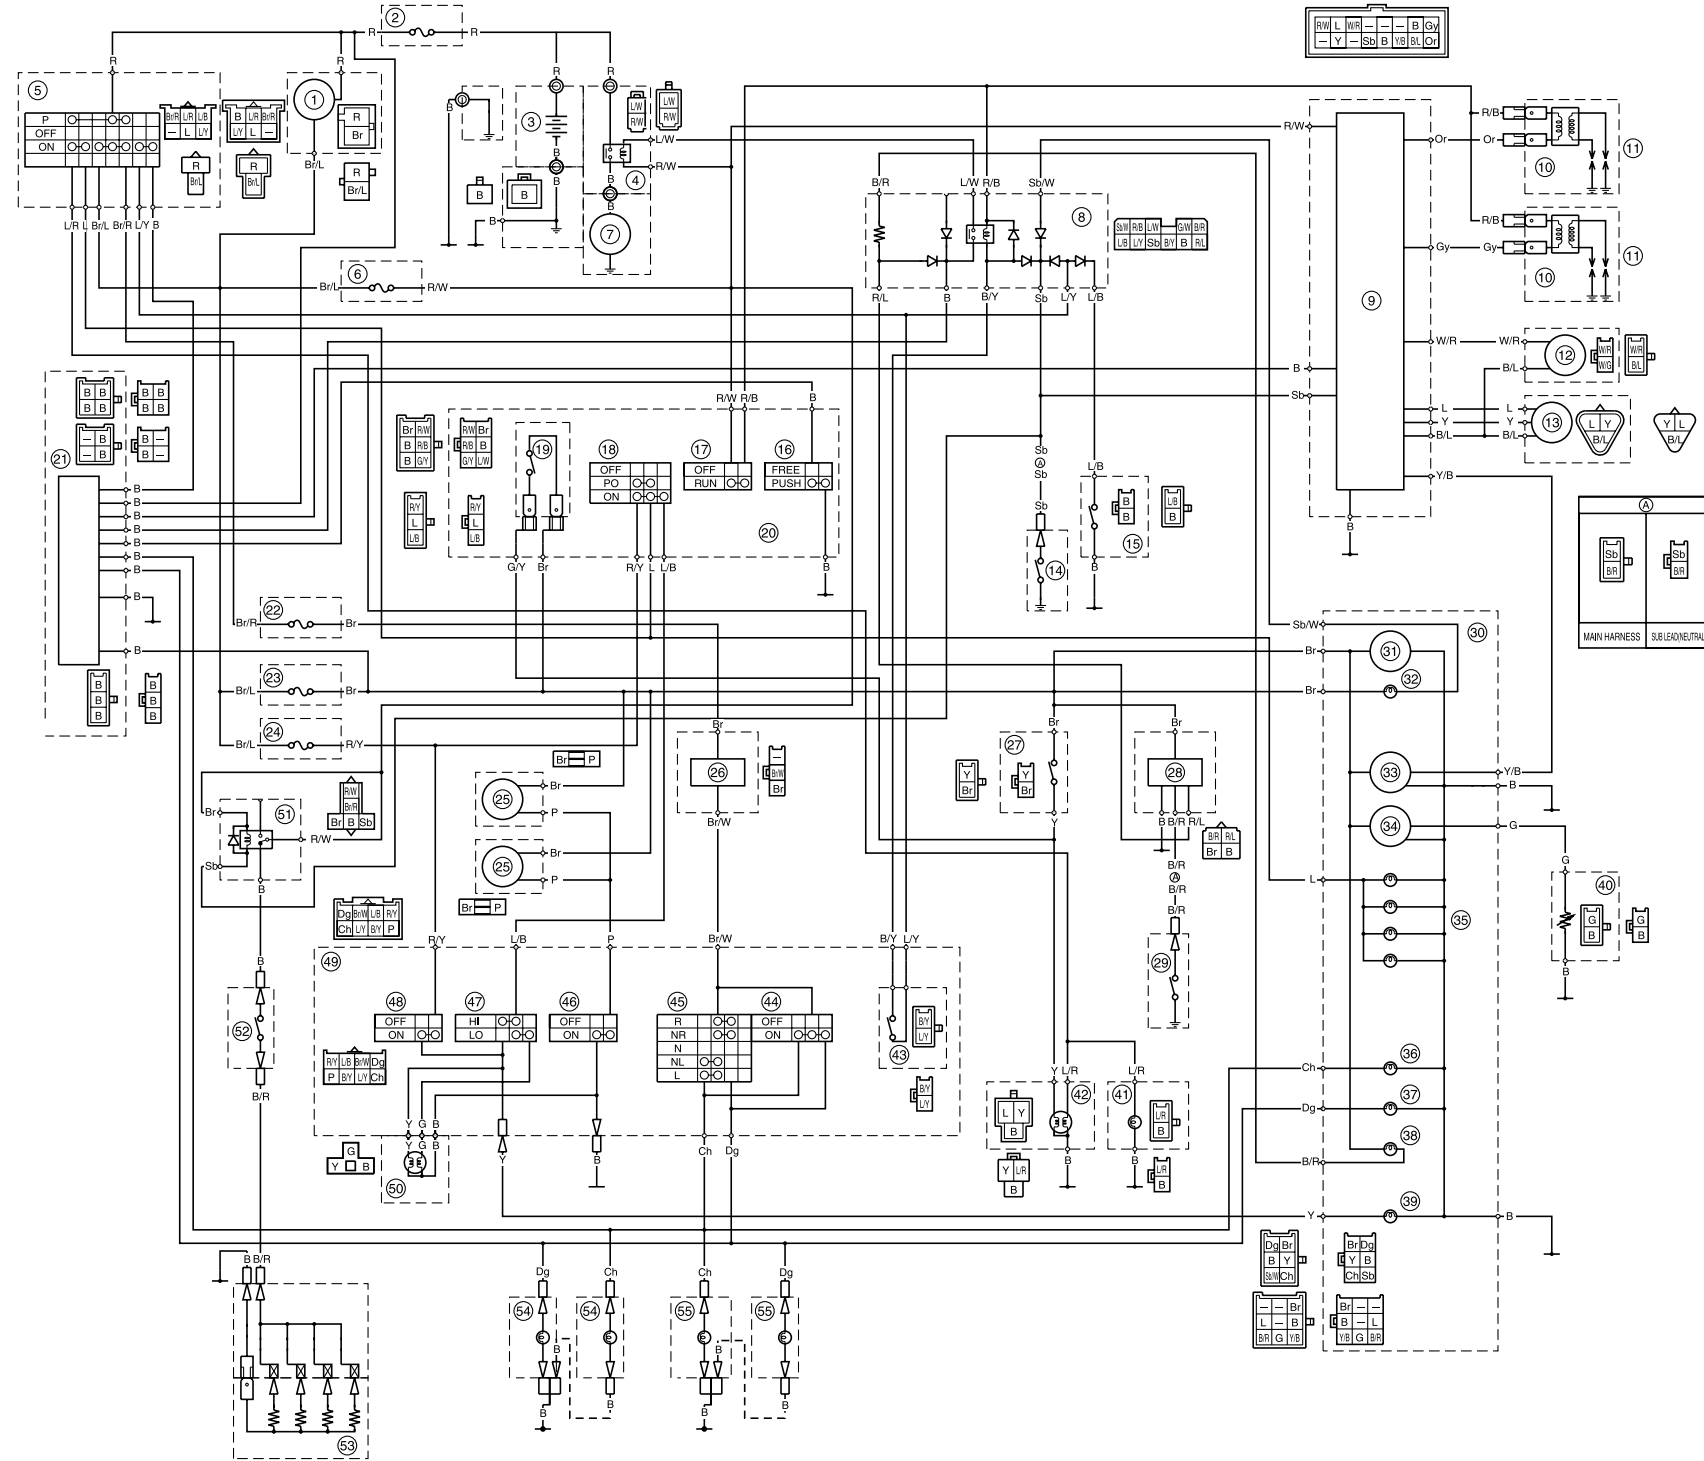


- ① AC generator
- ② Fuse (main)
- ③ Battery
- ④ Starter relay
- ⑤ Main switch
- ⑥ Fuse (ignition)
- ⑦ Starter motor
- ⑧ Starting circuit cut-off relay
- ⑨ Ignitor unit
- ⑩ Ignition coil
- ⑪ Spark plug
- ⑫ Pickup coil
- ⑬ TPS (throttle position sensor)
- ⑭ Neutral switch
- ⑮ Sidestand switch
- ⑯ Start switch
- ⑰ Engine stop switch
- ⑱ Lights switch
- ⑲ Front brake switch
- ⑳ Handlebar switches (right)
- ㉑ Alarm
- ㉒ Fuse (turn)
- ㉓ Fuse (signal)
- ㉔ Fuse (headlight)
- ㉕ Horn
- ㉖ Flasher relay
- ㉗ Rear brake switch
- ㉘ Oil level relay
- ㉙ Oil level switch
- ㉚ Meter assembly
- ㉛ Speedometer
- ㉜ Neutral indicator light
- ㉝ Tachometer
- ㉞ Fuel gauge
- ㉟ Meter lights
- ㊱ Turn signal indicator light (left)
- ㊲ Turn signal indicator light (right)
- ㊳ Oil warning light
- ㊴ High beam indicator light
- ㊵ Fuel sender
- ㊶ Auxiliary light
- ㊷ Tail/brake light
- ㊸ Clutch switch
- ㊹ Hazard switch
- ㊺ Turn signal switch
- ㊻ Horn switch
- ㊼ Dimmer switch
- ㊽ Pass switch
- ㊾ Handlebar switch (left)
- ㊿ Headlight
- 1 Carburator heater relay
- 2 Thermo switch
- 3 Carburator heater
- 4 Rear turn signal lights
- 5 Front turn signal lights

## COLOR CODE

B . . . . Black	O . . . . Orange	Br/L .. Brown/Blue	R/L .. Red/Blue
Br . . . . Brown	Sb . . . . Sky blue	Br/W . Brown/White	R/W .. Red/White
Ch ... Chocolate	P . . . . Pink	G/Y .. Green/Yellow	R/Y .. Red/Yellow
Dg ... Dark green	R . . . . Red	L/B ... Blue/Black	W/G .. White/Green
G . . . . Green	Y . . . . Yellow	L/R .. Blue/Red	W/R .. White/Red
Gy ... Gray	B/L ... Black/Blue	L/W .. Blue/White	Y/B .. Yellow/Black
L . . . . Blue	B/R .. Black/Red	L/Y ... Blue/Yellow	
Lg . . . . Light green	B/Y .. Black/Yellow	R/B .. Red/Black	

# XJR1300P 2002 WIRING DIAGRAM (for AUS)

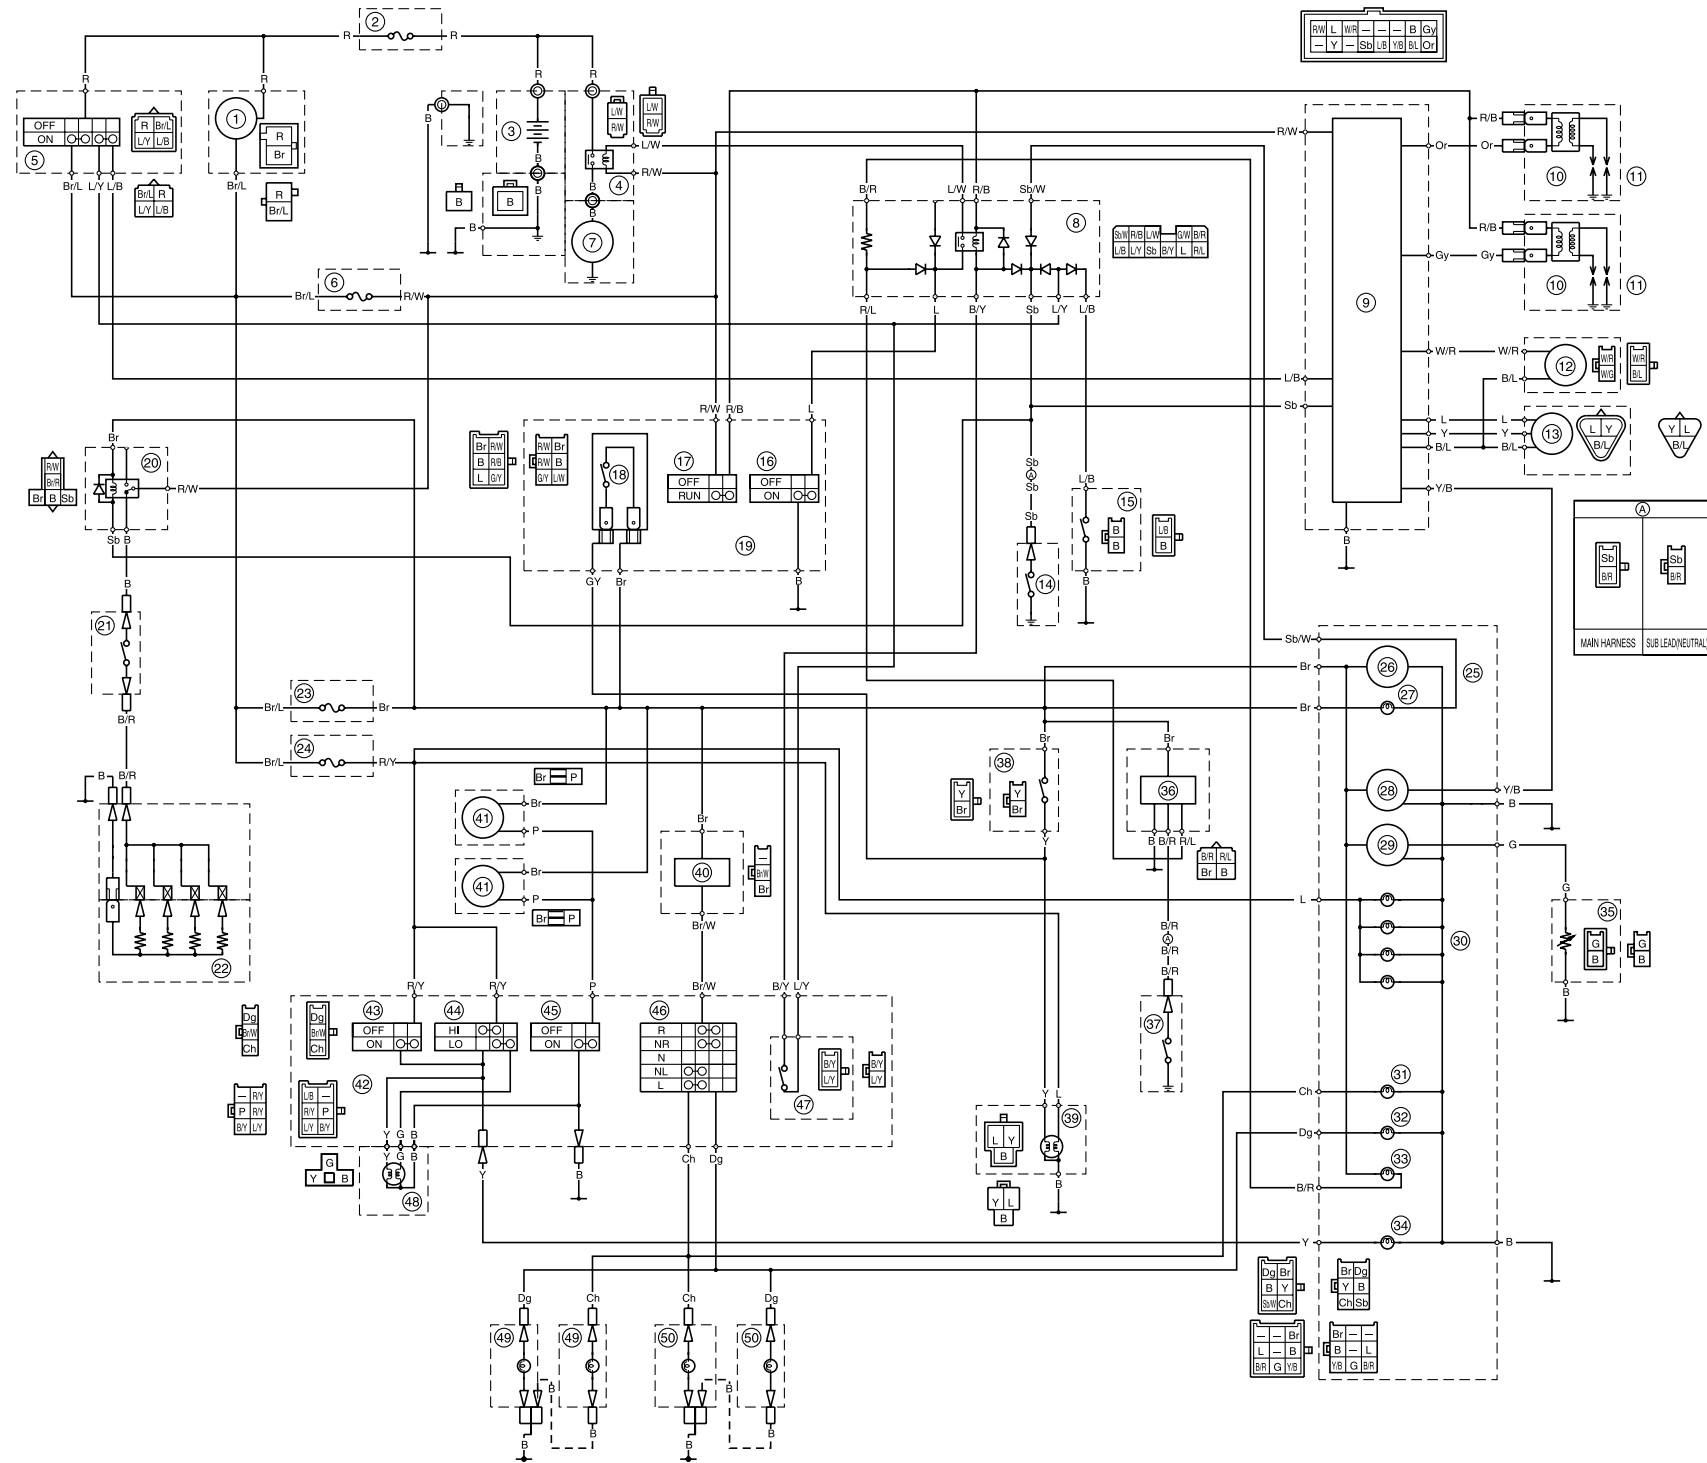

- ① AC generator
- ② Fuse (main)
- ③ Battery
- ④ Starter relay
- ⑤ Main switch
- ⑥ Fuse (ignition)
- ⑦ Starter motor
- ⑧ Starting circuit cut-off relay
- ⑨ Ignitor unit
- ⑩ Ignition coil
- ⑪ Spark plug
- ⑫ Pickup coil
- ⑬ TPS (throttle position sensor)
- ⑭ Neutral switch
- ⑮ Sidestand switch
- ⑯ Start switch
- ⑰ Engine stop switch
- ⑱ Front brake switch
- ⑲ Handlebar switches (right)
- ⑳ Carburetor heater relay
- ㉑ Thermo switch
- ㉒ Carburetor heater
- ㉓ Fuse (signal)
- ㉔ Fuse (headlight)
- ㉕ Meter assembly
- ㉖ Speedometer
- ㉗ Neutral indicator light
- ㉘ Tachometer
- ㉙ Fuel gauge
- ㉚ Meter lights
- ㉛ Turn signal indicator light (left)
- ㉜ Turn signal indicator light (right)
- ㉝ Oil warning light
- ㉞ High beam indicator light
- ㉟ Fuel sender
- ㊱ Oil level relay
- ㊲ Oil level switch
- ㊳ Rear brake switch
- ㊴ Tail/brake light
- ㊵ Flasher relay
- ㊶ Horn
- ㊷ Handlebar switch (left)
- ㊸ Pass switch
- ㊹ Dimmer switch
- ㊺ Horn switch
- ㊻ Turn signal switch
- ㊼ Clutch switch
- ㊽ Headlight
- ㊾ Rear turn signal lights
- ㊿ Front turn signal lights

## COLOR CODE

B . . . . Black	O . . . . Orange	Br/L .. Brown/Blue	R/L .. Red/Blue
Br . . . . Brown	Sb . . . . Sky blue	Br/W . Brown/White	R/W .. Red/White
Ch ... Chocolate	P . . . . Pink	G/Y .. Green/Yellow	R/Y .. Red/Yellow
Dg ... Dark green	R . . . . Red	L/B ... Blue/Black	W/G .. White/Green
G . . . . Green	Y . . . . Yellow	L/R .. Blue/Red	W/R .. White/Red
Gy ... Gray	B/L ... Black/Blue	L/W .. Blue/White	Y/B .. Yellow/Black
L . . . . Blue	B/R .. Black/Red	L/Y ... Blue/Yellow	
Lg . . . . Light green	B/Y .. Black/Yellow	R/B .. Red/Black	