

FOUNDATION[®] Fieldbus Two-Wire pH/ORP Transmitter

For additional information, please visit our website
at www.emersonprocess.com/raihome/liquid/.

ESSENTIAL INSTRUCTIONS

READ THIS PAGE BEFORE PROCEEDING!

Your purchase from Rosemount Analytical, Inc. has resulted in one of the finest instruments available for your particular application. These instruments have been designed, and tested to meet many national and international standards. Experience indicates that its performance is directly related to the quality of the installation and knowledge of the user in operating and maintaining the instrument. To ensure their continued operation to the design specifications, personnel should read this manual thoroughly before proceeding with installation, commissioning, operation, and maintenance of this instrument. If this equipment is used in a manner not specified by the manufacturer, the protection provided by it against hazards may be impaired.

- Failure to follow the proper instructions may cause any one of the following situations to occur: Loss of life; personal injury; property damage; damage to this instrument; and warranty invalidation.
- Ensure that you have received the correct model and options from your purchase order. Verify that this manual covers your model and options. If not, call 1-800-854-8257 or 949-757-8500 to request correct manual.
- For clarification of instructions, contact your Rosemount representative.
- Follow all warnings, cautions, and instructions marked on and supplied with the product.
- Use only qualified personnel to install, operate, update, program and maintain the product.
- Educate your personnel in the proper installation, operation, and maintenance of the product.
- Install equipment as specified in the Installation section of this manual. Follow appropriate local and national codes. Only connect the product to electrical and pressure sources specified in this manual.
- Use only factory documented components for repair. Tampering or unauthorized substitution of parts and procedures can affect the performance and cause unsafe operation of your process.
- All equipment doors must be closed and protective covers must be in place unless qualified personnel are performing maintenance.
- If this equipment is used in a manner not specified by the manufacturer, the protection provided by it against hazards may be impaired.

SPECIFICATIONS - GENERAL

Housing: Cast aluminum with epoxy coating. NEMA 4X (IP65) and NEMA 7B. Neoprene O-ring cover seals.

Dimensions: 6.3 in. x 6.9 in. x 6.4 in. (160 mm x 175 mm x 161 mm); diameter 6.1 in (155 mm)

Conduit Openings: 3/4 in. FNPT

Reference Impedance: Transmitter accepts high impedance (i.e. glass) reference electrodes as well as low impedance (i.e. silver-silver chloride) reference electrodes.

Response Time: Display reaches 95% of final reading within 10 seconds.

Temperature Sensors: The following RTDs can be used with the Model 5081-P pH/ORP transmitter:

3 and 4 wire Pt 100 RTDs

3 and 4 wire Pt 1000 RTDs

Transmitter can also be used with two-wire RTDs.

Temperature Range: 5°F to 248°F (-15°C to 130°C)

Local Display: Two line LCD; first line shows process variable (pH or ORP), second line shows temperature and output signal. When triggered, fault and warning messages alternate with temperature and output readings.

Process variable: 7 segment LCD, 0.8 in. (20 mm) high

Temperature/output: 7 segment LCD, 0.3 in. (7 mm) high

Display board can be rotated 90 degrees clockwise or counterclockwise.

During calibration and programming, messages and prompts appear in the temperature/output area.

Power Supply and Load Requirements: A power supply voltage of 9-32 Vdc at 22 mA is required.

Security: User selected security code prevents accidental changes to program settings.

Ambient Temperature: -4 to 149°F (-20 to 65°C)

Relative Humidity: 0 to 95% (with covers sealed)

Storage Temperature: -22 to 176°F (-30 to 80°C)

EMI/RFI: Meets the requirements of

EN-61326



Hazardous Area Classification:

Intrinsic Safety:



Class I, II, III, Div. 1
Groups A-G
T4 Tamb = 70°C



Exia Entity
Class I, Groups A-D
Class II, Groups E-G
Class III
T4 Tamb = 70°C



CE 0600 II 1 G
Baseefa02ATEX1284
EEx ia IIC T4
Tamb = -20°C to +65°C

Non-Incendive:



Class I, Div. 2, Groups A-D
Dust Ignition Proof
Class II & III, Div. 1, Groups E-G
NEMA 4X Enclosure



Class I, Div. 2, Groups A-D
Suitable for Class II, Div. 2, Groups E-G
T4 Tamb = 70°C

Explosion-Proof:



Class I, Div. 1, Groups B-D
Class II, Div. 1, Groups E-G
Class III, Div. 1



Class I, Groups B-D
Class II, Groups E-G
Class III
Tamb = 65°C max

SPECIFICATIONS - pH

pH Input Range: 0 to 14 pH

Temperature Input Range: 5°F to 248°F (-15°C to 130°C)

Accuracy at 25°C: ±0.01 pH

Repeatability at 25°C: ±0.01 pH

Resolution: 0.01 pH and 0.1°C or °F

Stability at 25°C: 0.25% per year

Diagnostics: The internal diagnostics can detect:

- | | |
|------------------------|-----------------------|
| Calibration Error | Low Temperature Error |
| High Temperature Error | Sensor Failure |
| Line Failure | CPU Failure |
| ROM Failure | Input Warning |
| Glass Failure | Glass Warning |
| Reference Failure | Reference Warning |

Once one of the above is diagnosed, the LCD will display a message describing the failure/default detected.

Temperature Compensation: Automatic or manual between 5°F to 248°F (-15°C to 130°C)

Solution Temperature Compensation: Transmitter will convert pH measured at any temperature to the pH at 25°C.

Temperature coefficient is programmable between -0.044 pH/°C and 0.028 pH/°C

Calibration: Automatic two-point and manual two-point buffer calibration. For automatic calibration, the transmitter recognizes NIST, DIN 19266 and 19267, JIS 8802, BSM, Merck, and Ingold buffers.

SPECIFICATIONS - ORP

ORP Input Range: -1400 to 1400 mV

Temperature Input Range: 5°F to 248°F (-15°C to 130°C)

Output Scale Expansion: Continuously expandable between -1400 and 1400 mV

Accuracy at 25°C: ±1 mV

Repeatability at 25°C: ±1 mV

Resolution: 1 mV and 0.1°C or °F

Stability at 25°C: 0.25% per year

SENSOR WIRING AND SET-UP

Wire sensor per Figure 1. Refer to the sensor instruction manual for more details.

If your sensor has an integral preamplifier or you are using a remote preamplifier, you will need to change the preamplifier location in the program menu. Please see Figure 14. Select "trAnS" for integral preamplifier or "SnSr" for J-box or sensor preamplifier.

WIRING THROUGH A JUNCTION BOX WITH REMOTE PREAMPLIFIER

Wire sensor as shown in Figure 5. Refer to the sensor instruction manual for more details.

WIRING THROUGH A JUNCTION BOX

Sensors with integral preamplifiers can be wired to the analyzer through a remote junction box (PN 23550-00). Wire the extension cable and sensor cable point-to-point. Refer to the sensor instruction manual for more details.

POWER WIRING

For general purpose areas, wire power as shown in Figure 1. For hazardous areas, please see hazardous area installation drawings.

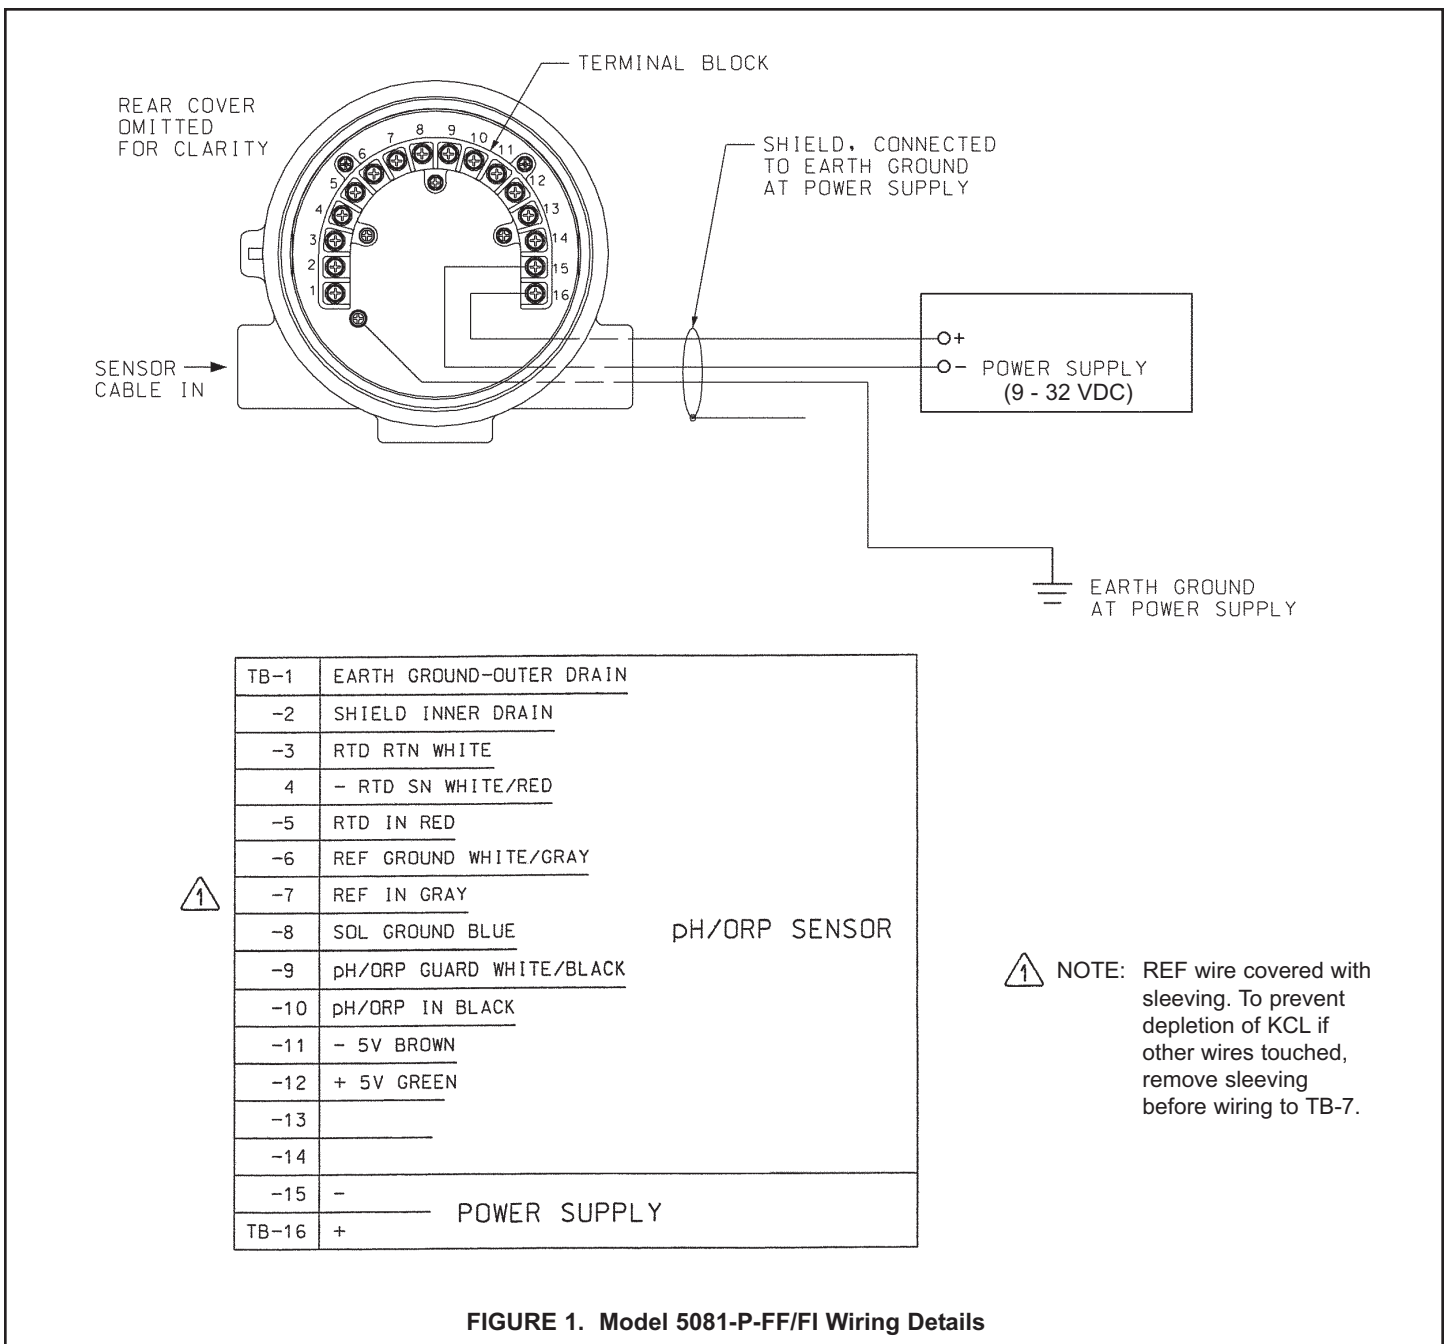


FIGURE 1. Model 5081-P-FF/FI Wiring Details


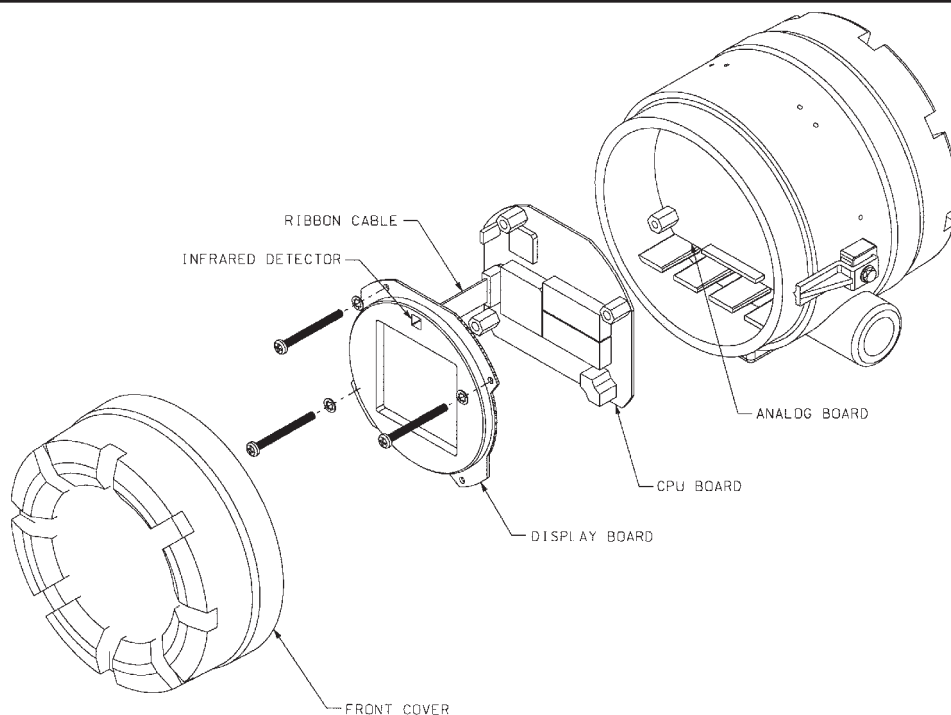


FIGURE 2. Exploded View of Model 5081-P-FF/FI

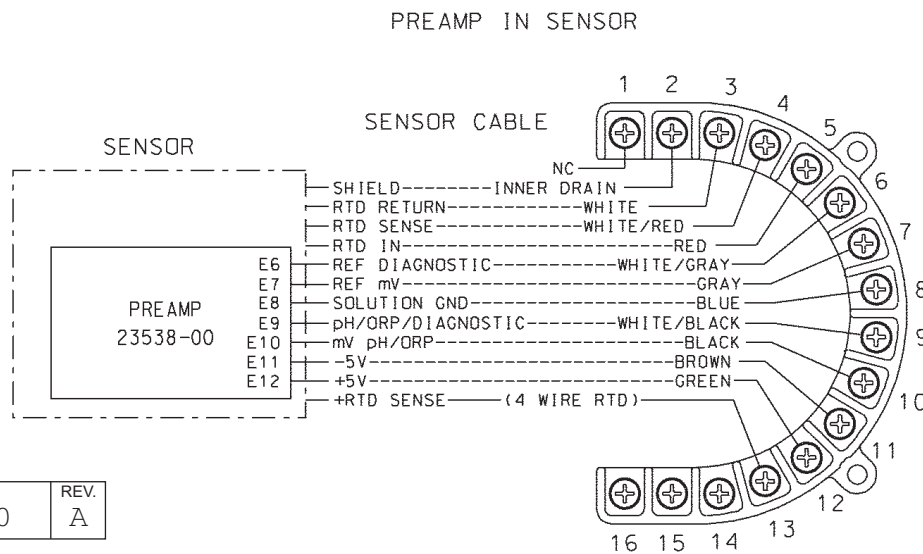

DWG. NO. 45081P30	REV. A
----------------------	-----------

ROSEMOUNT® Analytical 2400 Barranca Pkwy. Irvine, CA 92605 YEAR <input type="text"/>	MODEL 396P-10/12-55 SENSOR Baseefa03ATEX0416X II 1G EExia IIC T4 Tamb= 80°C T5 Tamb= 40°C Ui = 13.44 V Ii = 170 mA Pi = 0.6 W Ci = 0.317 µF Li = 0 ELECTROSTATIC HAZARD DO NOT SOLVENT CLEAN	MODEL 396P-10/12-55 SENSOR Baseefa03ATEX0416X II 1G EExia IIC T4 Tamb= 80°C T5 Tamb= 40°C Ui = 13.44 V Ii = 170 mA Pi = 0.6 W Ci = 0.317 µF Li = 0 ELECTROSTATIC HAZARD DO NOT SOLVENT CLEAN	CE 1180 CE 1180 9241253-02

FIGURE 3. Wiring Diagram — Sensor with Preamplifier

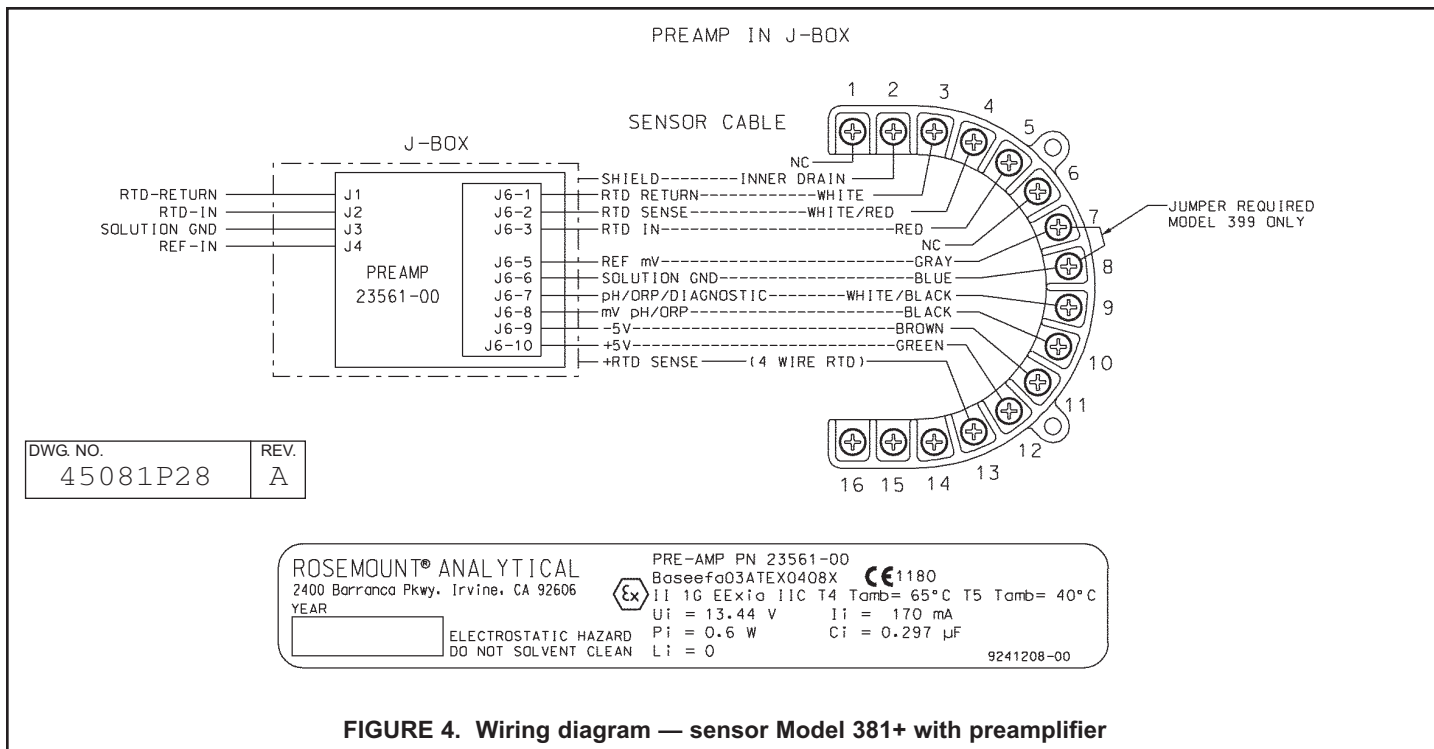


FIGURE 4. Wiring diagram — sensor Model 381+ with preamplifier

WIRING THROUGH A JUNCTION BOX WITH REMOTE PREAMPLIFIER

Wire sensor as shown in Figure 5. Refer to the sensor instruction manual for more details.

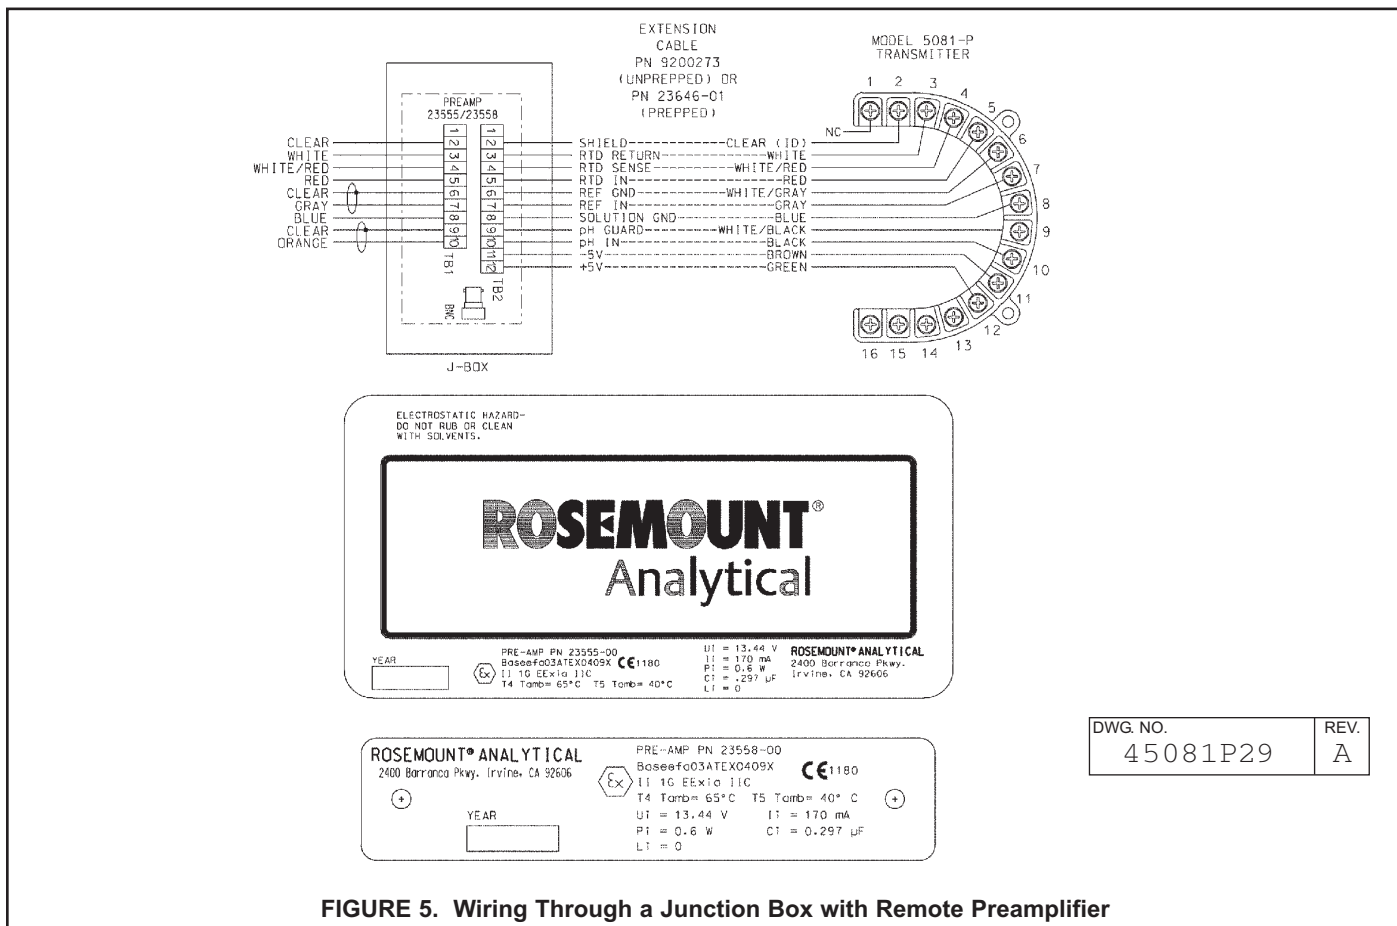


FIGURE 5. Wiring Through a Junction Box with Remote Preamplifier

INSTALLATION

UNPACKING AND INSPECTION

Inspect the shipping container. If it is damaged, contact the shipper immediately for instructions. Save the box. If there is no apparent damage, unpack the container. Be sure all items shown on the packing list are present. If items are missing, notify Rosemount Analytical immediately.

ROTATING THE DISPLAY

The 5081-P-FF/FI display can be rotated 90° left or right. Disengage the cover lock and remove the front cover. Remove the three screws holding the PCB stack and gently lift the display board. Do not disengage the ribbon cable between the display board and the CPU board. Rotate the display. The black infrared sensor will be at the top of the display.

INSTALLATION

See Figure 6.

1. Although the analyzer is suitable for outdoor use, do not install it in direct sunlight or in areas of extreme temperatures.
2. Install the analyzer in an area where vibrations and electromagnetic and radio frequency interference are minimized or absent.
3. Keep the analyzer and sensor wiring at least one foot from high voltage conductors. Be sure there is easy access to the analyzer.
4. The conduit connections on the sides of the 5081-P housing should be sealed to prevent moisture from entering the enclosure.
5. The transmitter must not be mounted with both conduit openings at the top.


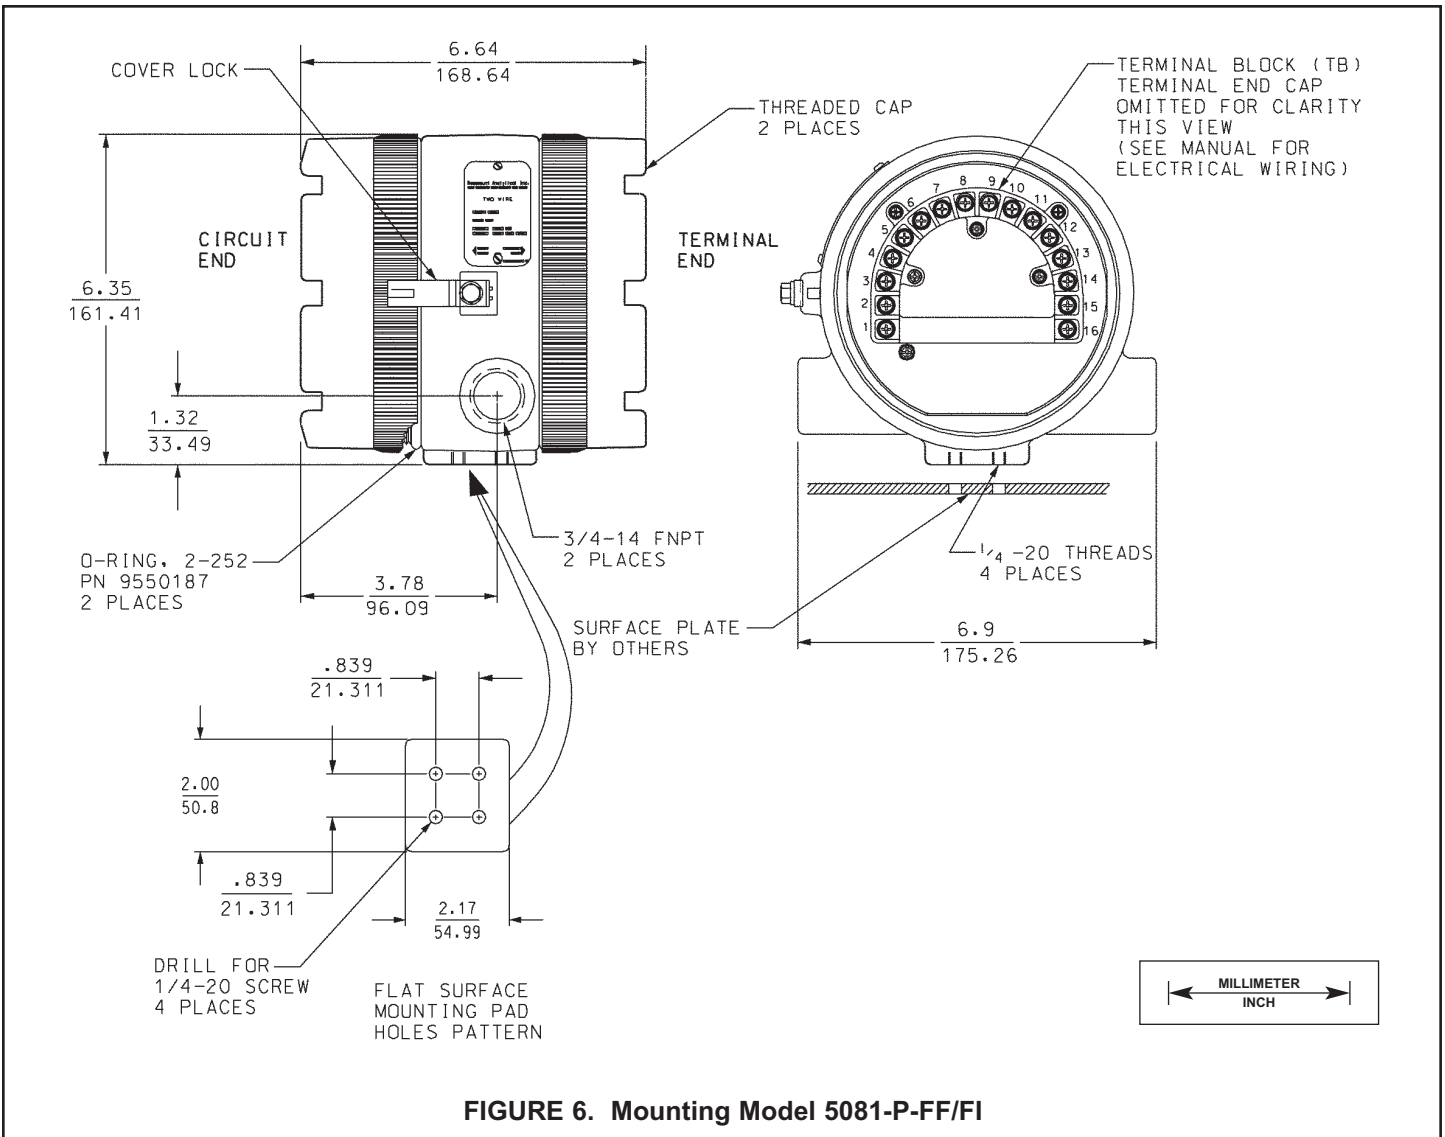


FIGURE 6. Mounting Model 5081-P-FF/FI

B 9241503-00

REVISIONS		ECO NO	REV	RELEASE DATE	BY DATE			CHK
LTR	ECO	8271	C	10-10-02				

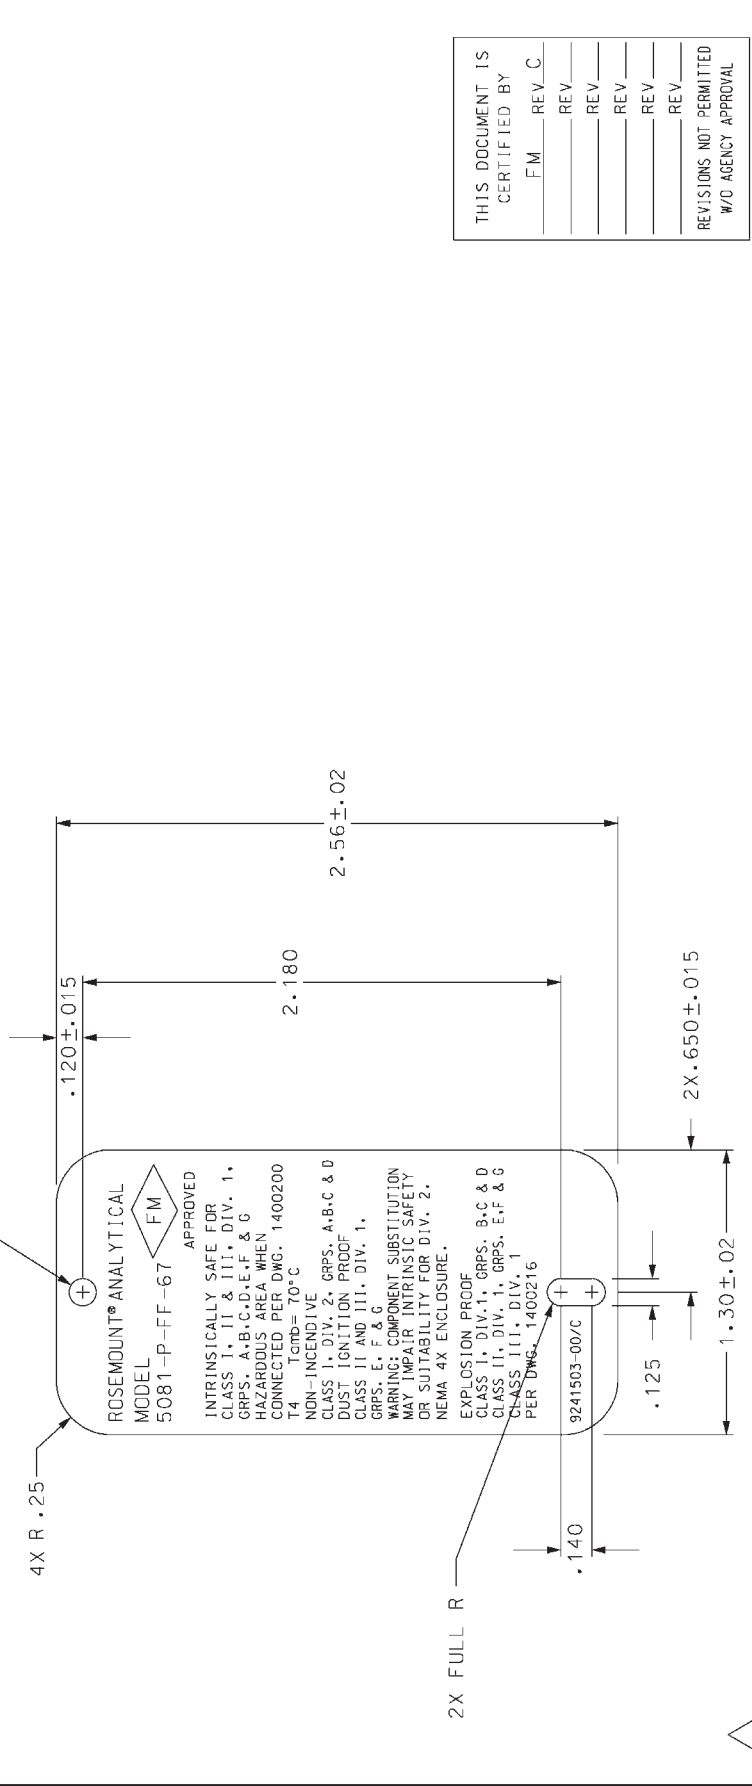

THIS DOCUMENT IS CERTIFIED BY
 FM REV. C
 REVISIONS NOT PERMITTED W/O AGENCY APPROVAL

ITEM	PART NO	DESCRIPTION	QTY
UNLESS OTHERWISE SPECIFIED .XX ± .030 .XXX ± .010 ANGLES ± 1/2° DIMENSIONS ARE IN INCHES REMOVE BURRS & SHARP EDGES .020 MAX MACHINED FILLET RADIUS .020 MAX NOMINAL SURFACE FINISH 125			
BILL OF MATERIAL			
Uniloc			
TITLE LABEL, I.S. FM 5081-P-FF			
DWG NO B 9241503-00			
SIZE C			
SCALE 2:1			
SHEET 1 OF 2			

4 FINISH: SILKSCREEN BLACK EPOXY PAINT (BAKED).

3. ARTWORK IS SHEET 2 OF 2.

2. NO CHANGE WITHOUT FM APPROVAL.

1 MATERIAL: AISI 300 SERIES STAINLESS STEEL .015±.005 THICK. MATERIAL TO BE ANNEALED & PASSIVATED. MAXIMUM HARDNESS BRINELL 190.

NOTES: UNLESS OTHERWISE SPECIFIED

FIGURE 8. FM Intrinsically Safe Installation Label

HAZARDOUS AREA INSTALLATION

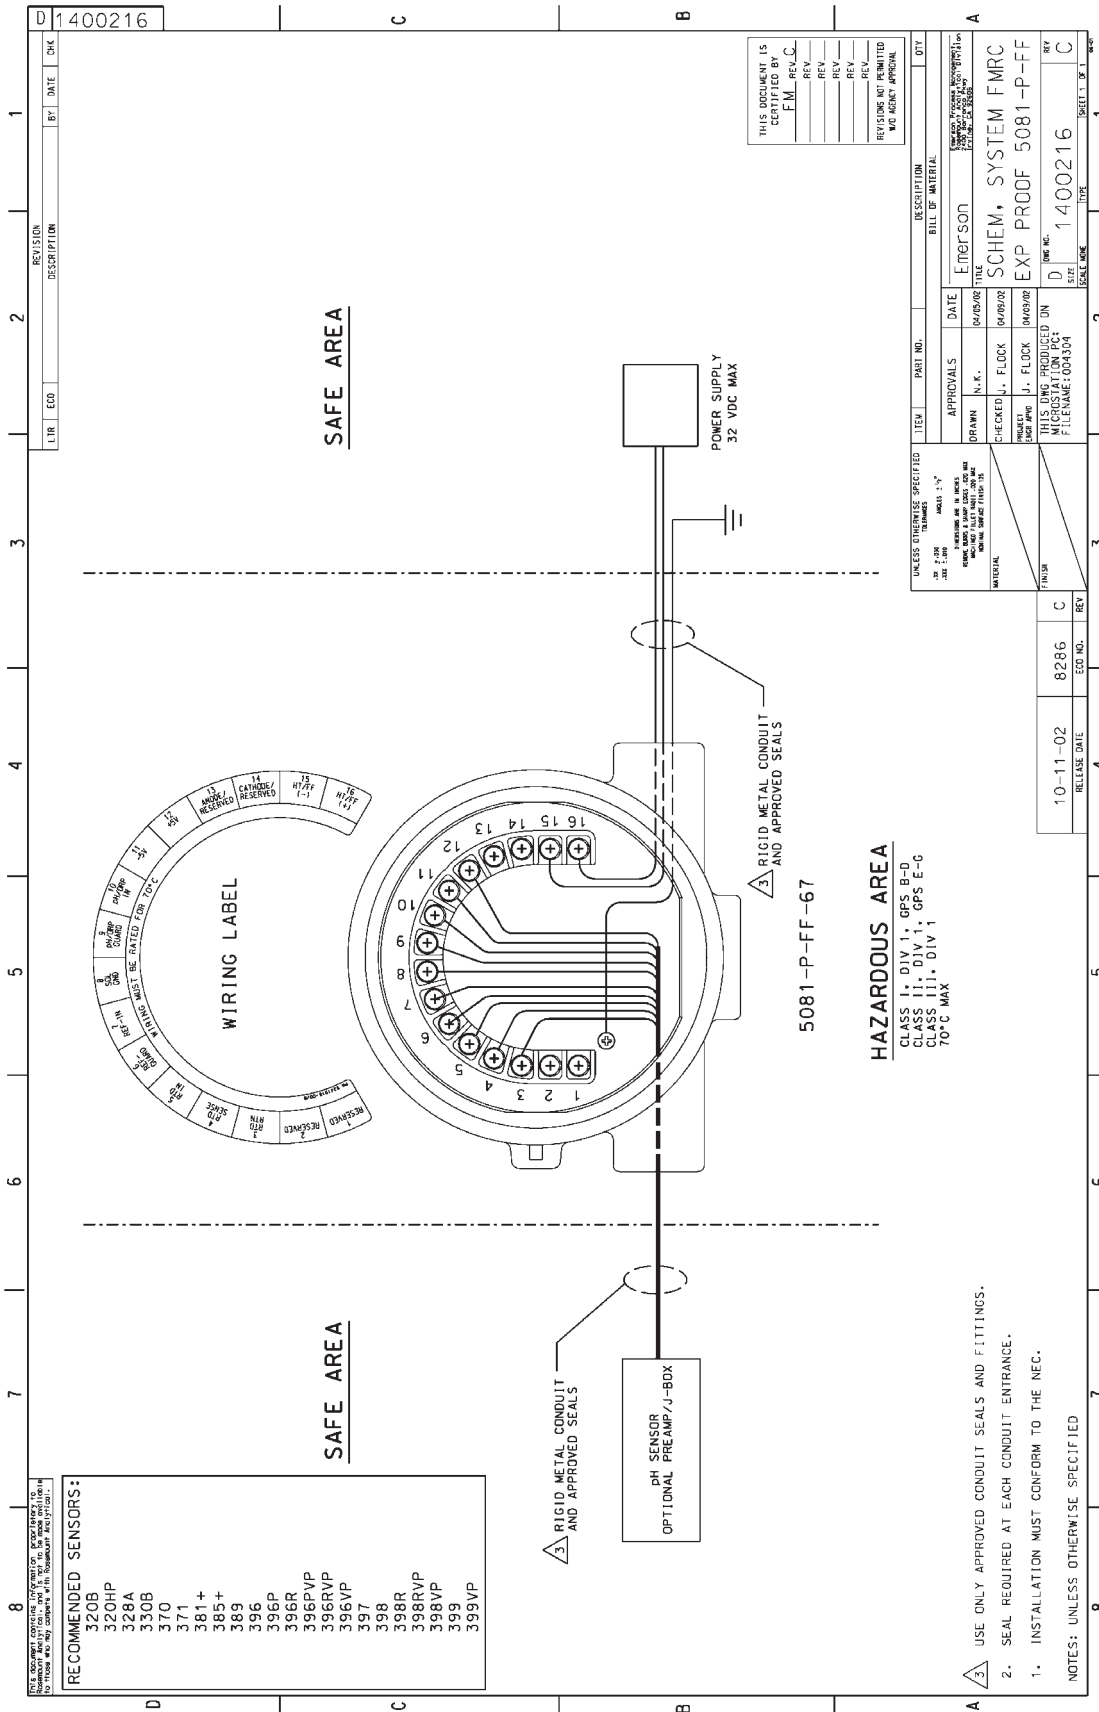


FIGURE 7. FMRC Explosion-Proof Installation

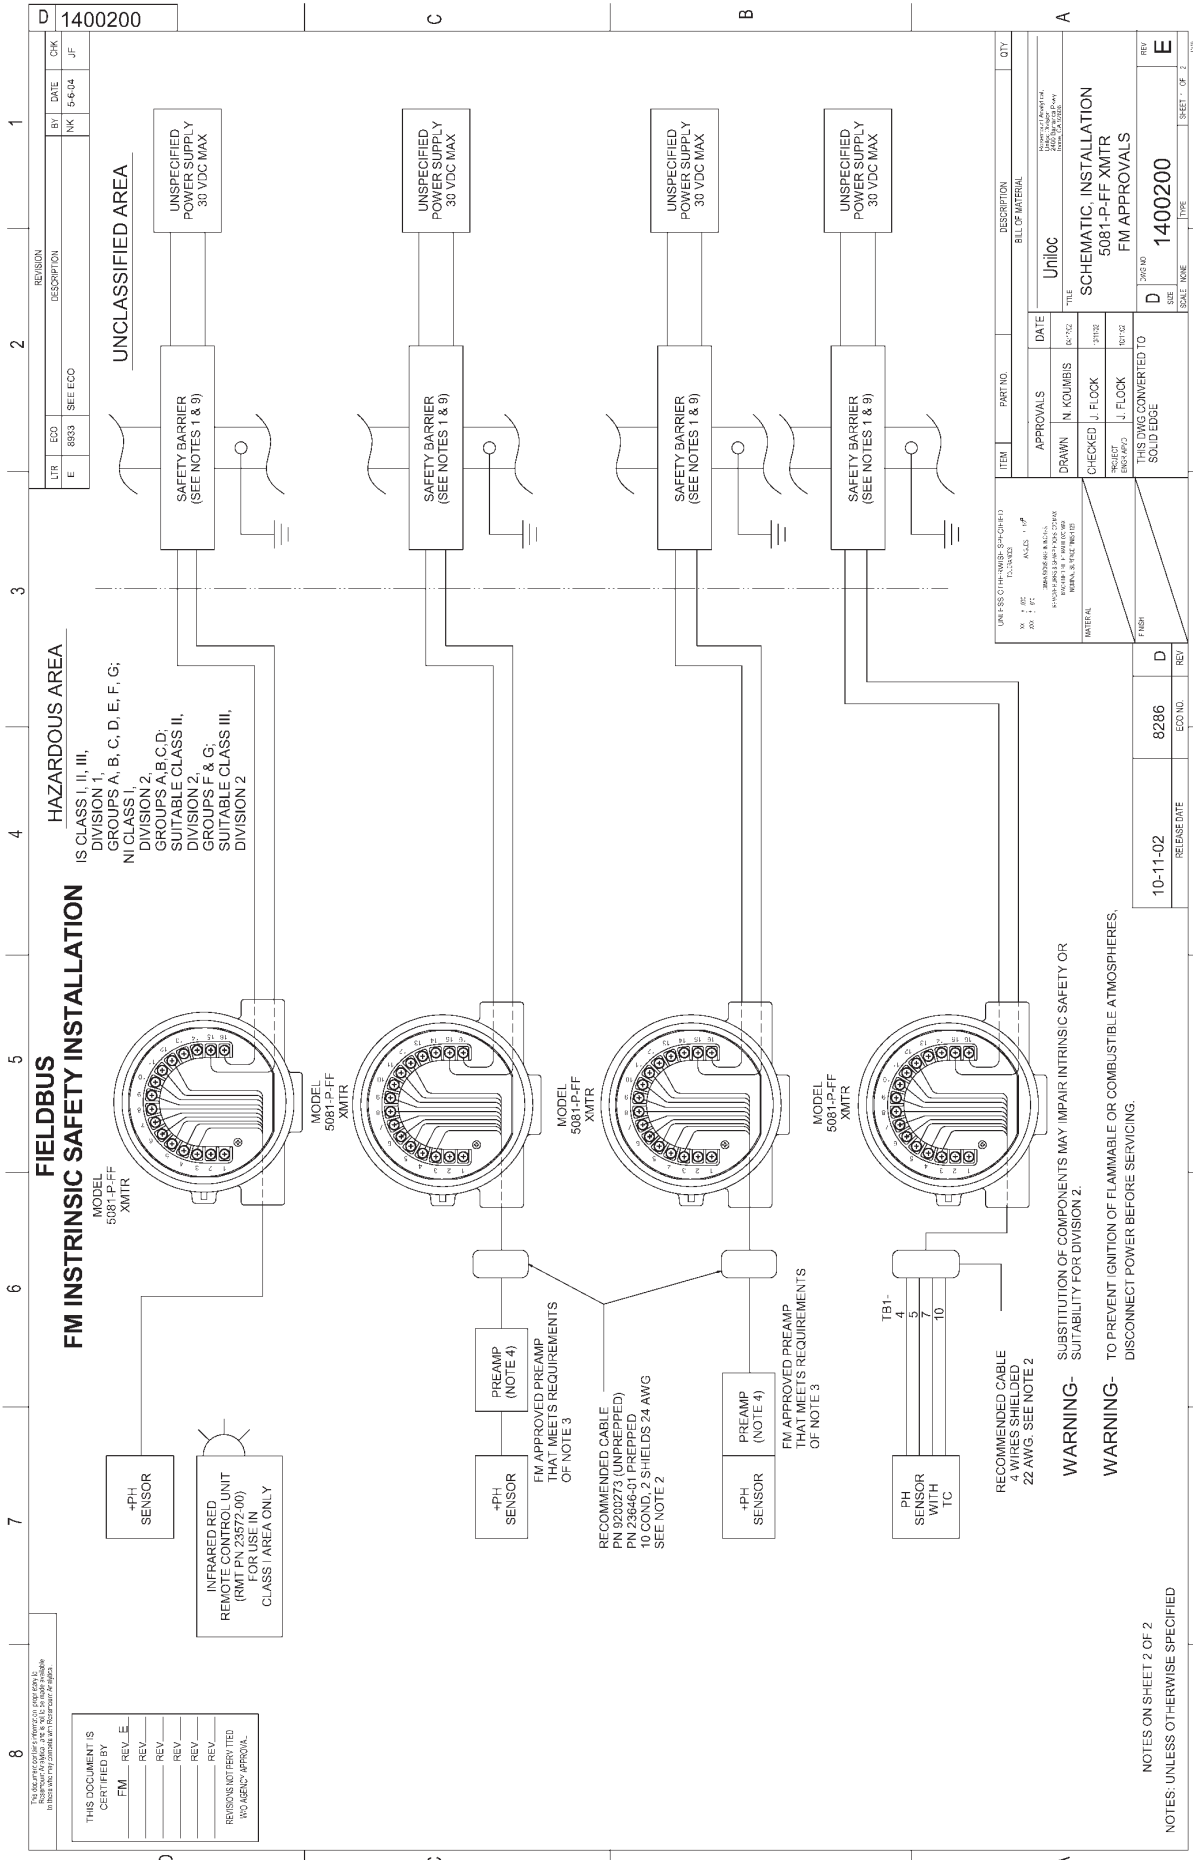


FIGURE 9. FM Intrinsic Safe Installation (1 of 2)

REVISION		BY	DATE	CHK
LTR	ECD	8893	5-6-04	JF
E	SEE ECO			

ITEM	PART NO.	DESCRIPTION	QTY
		ELL OF MATERIAL	

APPROVALS	DATE
DRAWN N KOUMBIS	DATE
CHECKED J FLOCK	DATE
REVIEWED J FLOCK	DATE
THIS DWG CONVERTED TO SOLIDEDGE	

MATERIAL	FINISH
UNLESS OTHERWISE SPECIFIED	F
NO. OF TUBES	AS SHOWN
NO. OF FITTINGS	AS SHOWN
DRAGON ROSE BUSHINGS	AS SHOWN
PROTECTIVE TUBING	AS SHOWN
PROTECTIVE TUBING	AS SHOWN
PROTECTIVE TUBING	AS SHOWN
PROTECTIVE TUBING	AS SHOWN

REV	DATE	DESCRIPTION
D	10-11-02	8286
E		

REV	DATE	DESCRIPTION
D	10-11-02	8286
E		

REV	DATE	DESCRIPTION
D	10-11-02	8286
E		

REV	DATE	DESCRIPTION
D	10-11-02	8286
E		

REV	DATE	DESCRIPTION
D	10-11-02	8286
E		

REV	DATE	DESCRIPTION
D	10-11-02	8286
E		

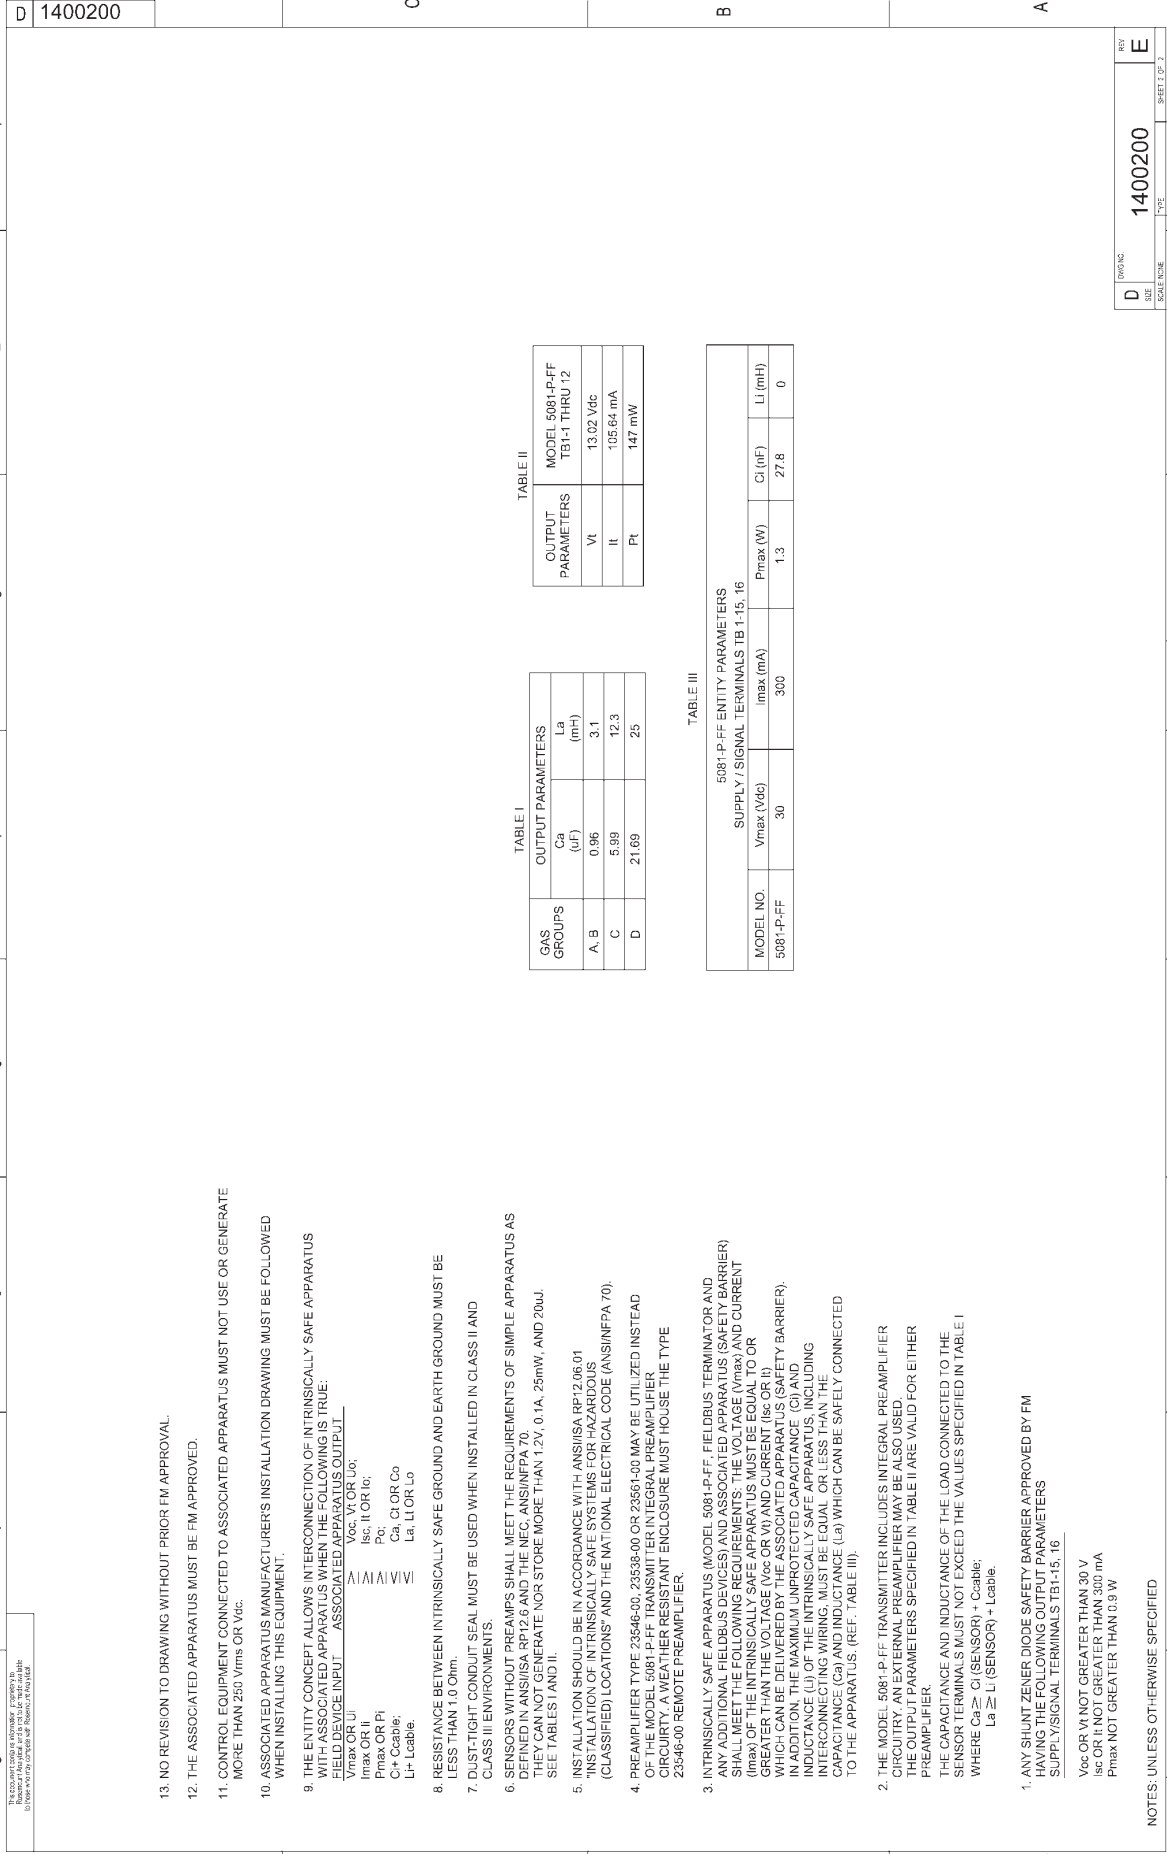



FIGURE 9. FM Intrinsically Safe Installation (2 of 2)

B 9241504-00

REVISIONS		REV		BY		DATE		CHK	
LTR	ECC	DESCRIPTION	ECO NO	8324	C				

12-3-02	8324	C			
---------	------	---	--	--	--

This document contains information proprietary to Rosemount Analytical, and is not to be made available to those who may compete with Rosemount Analytical.

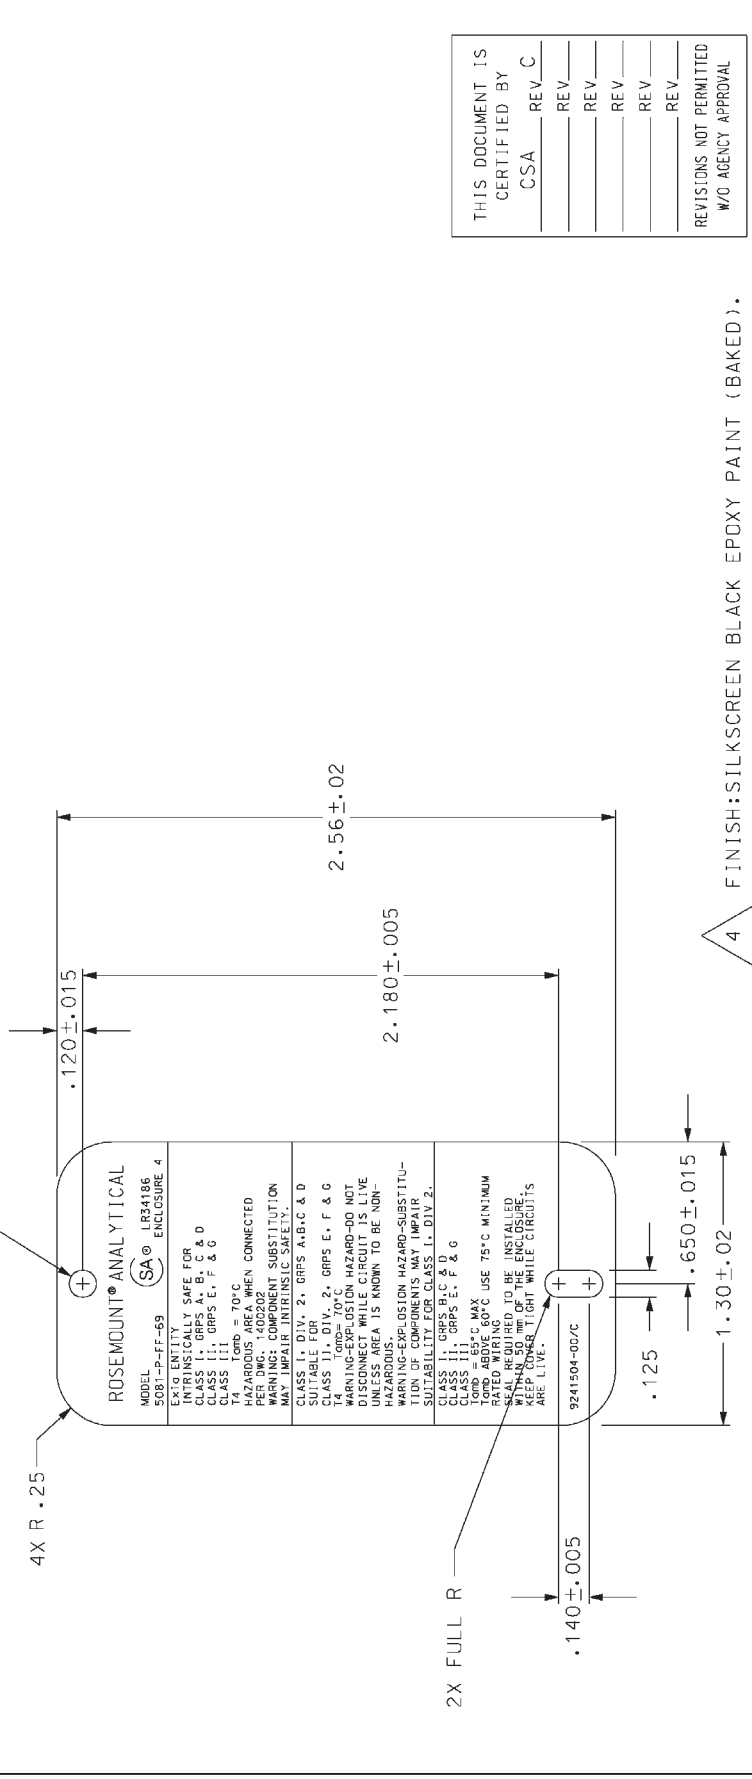

THIS DOCUMENT IS CERTIFIED BY
 CSA REV. C
 REV. _____
 REV. _____
 REV. _____
 REV. _____
 REV. _____
 REVISIONS NOT PERMITTED
 W/O AGENCY APPROVAL

UNLESS OTHERWISE SPECIFIED		ITEM		PART NO		DESCRIPTION		QTY	
.XX ±.030						BILL OF MATERIAL			
.XXX ±.010						Uniloc			
ANGLES ± 1/2°						TITLE LABEL, I.S. CSA			
DIMENSIONS ARE IN INCHES						5081-P-FF			
REMOVE BURRS & SHARP EDGES .020 MAX						DRAWN B. JOHNSON			
MACHINED FILLET RADIUS .020 MAX						DATE 4/29/02			
NOMINAL SURFACE FINISH 125						CHECKED J. FLOCK			
MATERIAL		1		PROJECT ENGR APVD J. FLOCK		DATE 5/3/02			
FINISH		4		THIS DWG PRODUCED ON MICROSTATION PC: FILENAME: 004094		DWG NO 9241504-00		REV C	
NOTES: UNLESS OTHERWISE SPECIFIED						SCALE 2:1		SHEET 1 OF 2	

- ARTWORK IS SHEET 2 OF 2.
- NO CHANGE WITHOUT CSA APPROVAL.

1 MATERIAL: AISI 300 SERIES STAINLESS STEEL .015+/--.005 THICK, MATERIAL TO BE ANNEALED & PASSIVATED. MAXIMUM HARDNESS BRINELL 190.

FIGURE 10. CSA Intrinsically Safe Installation Label


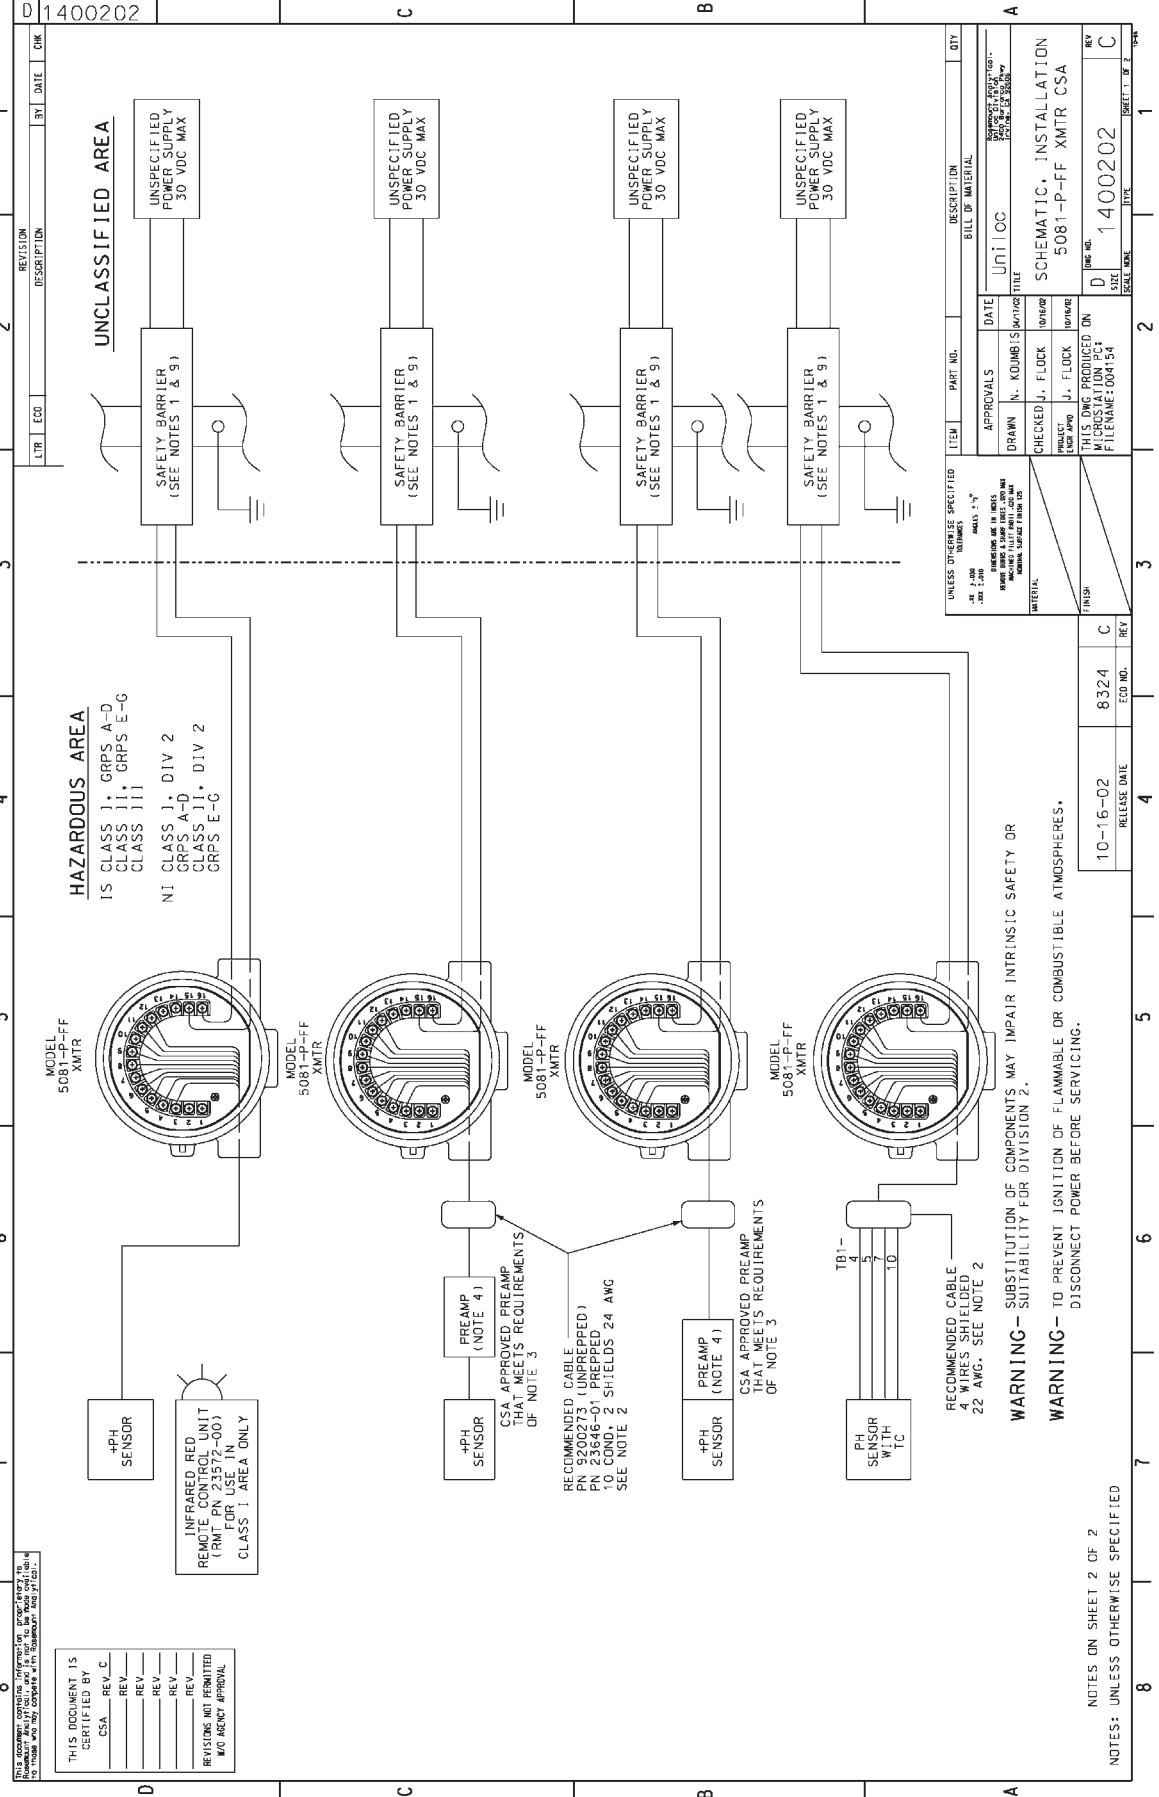


FIGURE 11. CSA Intrinsically Safe Installation (1 of 2)

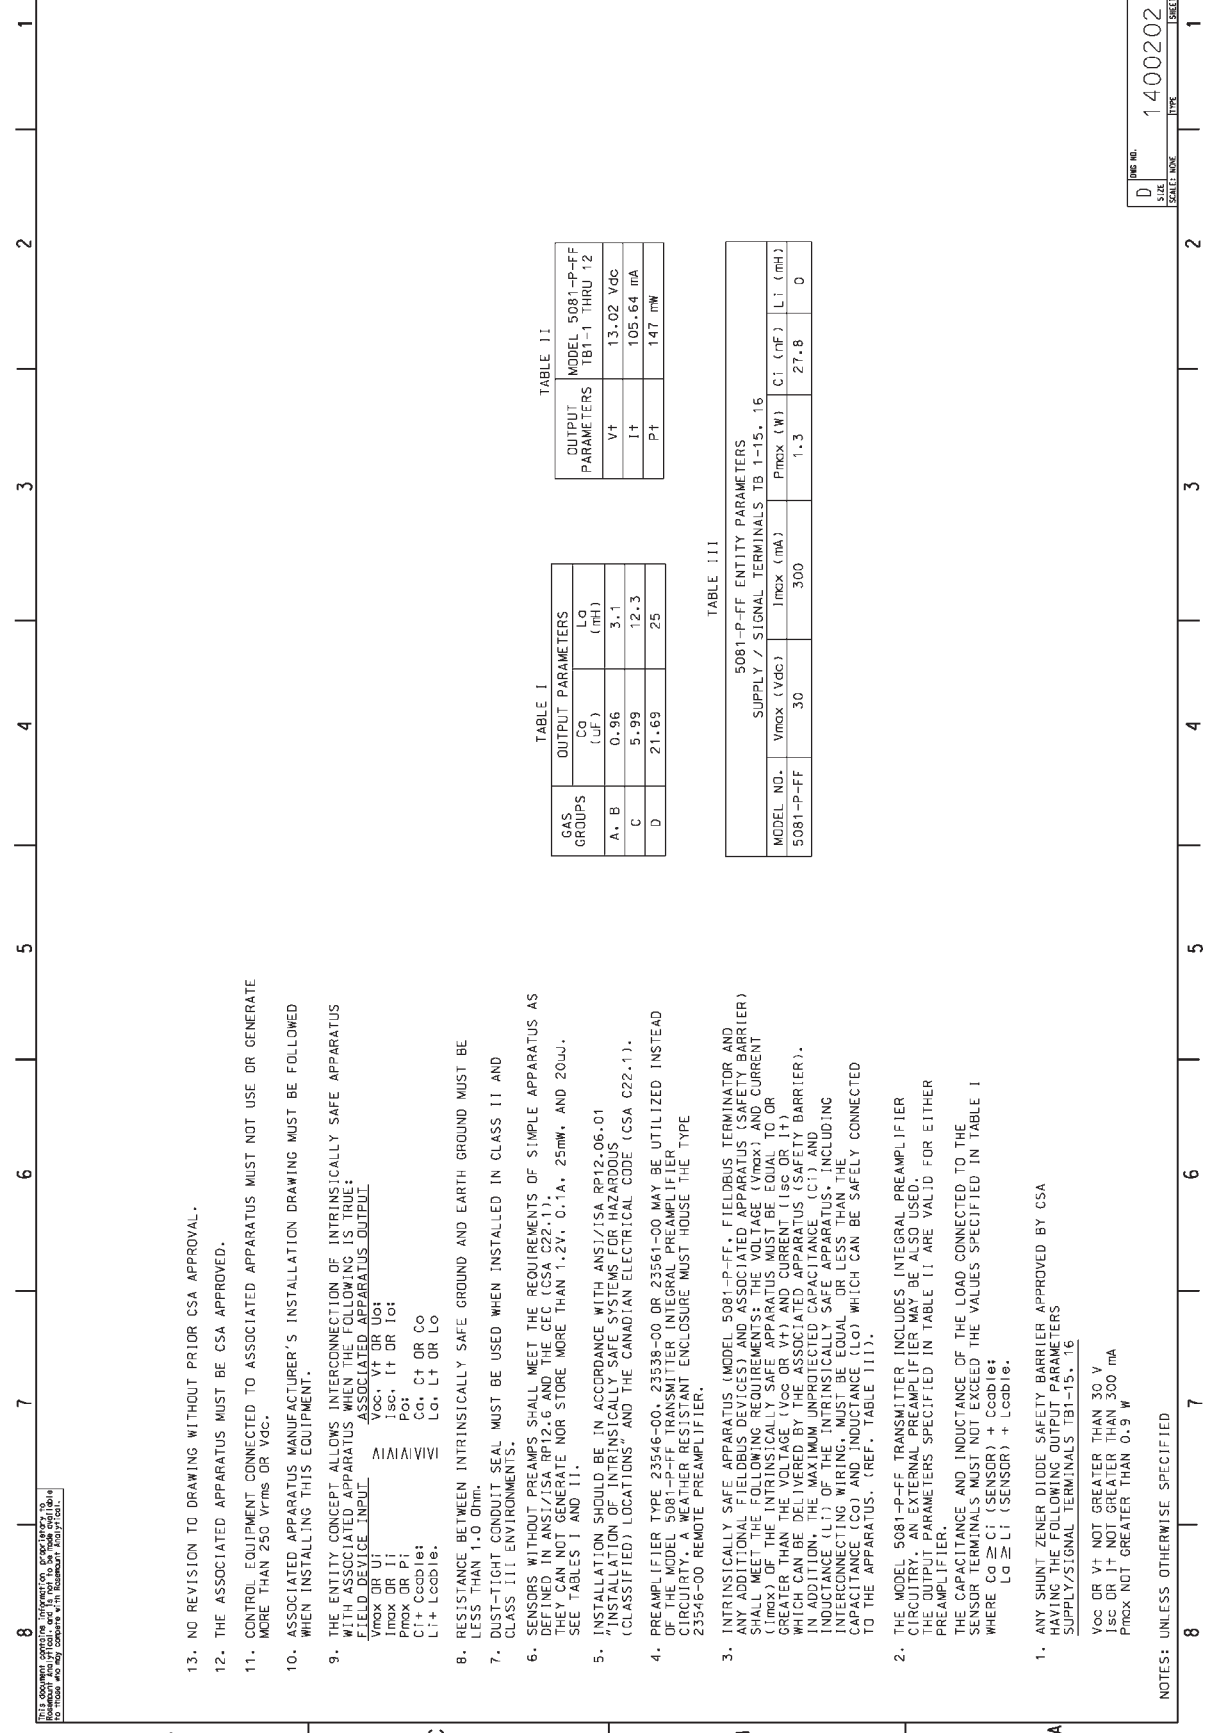

THIS DOCUMENT CONTAINS INFORMATION OF CONFIDENTIALITY TO THE EXTENT THAT IT RELATES TO THE PROPRIETARY AND UNPUBLISHED TRADE SECRETS OF THE COMPANY.

13. NO REVISION TO DRAWING WITHOUT PRIOR CSA APPROVAL.
12. THE ASSOCIATED APPARATUS MUST BE CSA APPROVED.
11. CONTROL EQUIPMENT CONNECTED TO ASSOCIATED APPARATUS MUST NOT USE OR GENERATE MORE THAN 250 Vrms OR Vdc.
10. ASSOCIATED APPARATUS MANUFACTURER'S INSTALLATION DRAWING MUST BE FOLLOWED WHEN INSTALLING THIS EQUIPMENT.

9. THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS WITH ASSOCIATED APPARATUS WHEN THE FOLLOWING IS TRUE:
 FIELD_DEVICE_INPUT ASSOCIATED APPARATUS_OUTPUT
 Vmax OR Ii Vdc, Vt OR Uo;
 Imax OR Ii Isc, It OR Io;
 Pmax OR Pi Po;
 Ct+ Ccable; Co, Ct OR Co
 Lt+ Lcable; Lo, Lt OR Lo

8. RESISTANCE BETWEEN INTRINSICALLY SAFE GROUND AND EARTH GROUND MUST BE LESS THAN 1.0 Ohm.
7. DUST-TIGHT CONDUIT SEAL MUST BE USED WHEN INSTALLED IN CLASS II AND CLASS III ENVIRONMENTS.
6. SENSORS WITHOUT PREAMPS SHALL MEET THE REQUIREMENTS OF SIMPLE APPARATUS AS DEFINED IN ANSI/ISA RP12.6 AND THE CEC (CSA C22-1), THEY CAN NOT GENERATE NOR STORE MORE THAN 1.2V, 0.1A, 25mW, AND 20uJ. SEE TABLE I AND II.
5. INSTALLATION SHOULD BE IN ACCORDANCE WITH ANSI/ISA RP12.06-01 "INSTALLATION OF INTRINSICALLY SAFE SYSTEMS FOR HAZARDOUS (CLASSIFIED) LOCATIONS" AND THE CANADIAN ELECTRICAL CODE (CSA C22-1).
4. PREAMPLIFIER TYPE 23546-00, 23538-00 OR 23561-00 MAY BE UTILIZED INSTEAD OF THE MODEL 5081-P-FF TRANSMITTER. THE WEATHER RESISTANT ENCLOSURE MUST HOUSE THE TYPE 23546-00 REMOTE PREAMPLIFIER.

3. INTRINSICALLY SAFE APPARATUS (MODEL 5081-P-FF, FIELDBUS TERMINATOR AND ANY ADDITIONAL FIELDBUS DEVICES) AND ASSOCIATED APPARATUS (SAFETY BARRIER) SHALL MEET THE FOLLOWING REQUIREMENTS: THE VOLTAGE (Vmax) AND CURRENT (Imax) OF THE INTRINSICALLY SAFE APPARATUS MUST BE EQUAL TO OR GREATER THAN THE VOLTAGE (Voc) AND CURRENT (Isc) OF THE SAFETY BARRIER. THE CAPACITANCE AND INDUCTANCE OF THE LOAD CONNECTED TO THE SAFETY BARRIER MUST NOT EXCEED THE VALUES SPECIFIED IN TABLE I. IN ADDITION, THE MAXIMUM UNPROTECTED CAPACITANCE (Ct) AND INDUCTANCE (Lt) OF THE INTRINSICALLY SAFE APPARATUS, INCLUDING INTERCONNECTING WIRING, MUST BE EQUAL OR LESS THAN THE CAPACITANCE (Co) AND INDUCTANCE (Lo) WHICH CAN BE SAFELY CONNECTED TO THE APPARATUS. (REF. TABLE III).

2. THE MODEL 5081-P-FF TRANSMITTER INCLUDES INTEGRAL PREAMPLIFIER CIRCUITRY, AN EXTERNAL PREAMPLIFIER MAY BE ALSO USED. THE OUTPUT PARAMETERS SPECIFIED IN TABLE II ARE VALID FOR EITHER PREAMPLIFIER.
 THE CAPACITANCE AND INDUCTANCE OF THE LOAD CONNECTED TO THE SENSOR TERMINALS MUST NOT EXCEED THE VALUES SPECIFIED IN TABLE I WHERE $C_o \geq C_t$ (SENSOR) + Ccable; AND $L_o \geq L_t$ (SENSOR) + Lcable.

1. ANY SHUNT ZENER DIODE SAFETY BARRIER APPROVED BY CSA MUST MEET THE FOLLOWING OUTPUT PARAMETERS SUPPLY/SIGNAL TERMINALS TB1-15, 16
 Voc OR Vt NOT GREATER THAN 30 V
 Isc OR It NOT GREATER THAN 300 mA
 Pmax NOT GREATER THAN 0.9 W

NOTES: UNLESS OTHERWISE SPECIFIED

TABLE I

GAS GROUPS	OUTPUT PARAMETERS	
	Co (uF)	Lo (mH)
A, B	0.96	3.1
C	5.99	12.3
D	21.69	25

TABLE II

OUTPUT PARAMETERS	MODEL 5081-P-FF TB1-1 THRU 12	
	Vt	Ii
Vt	13.02 Vdc	
Ii	105.64 mA	
Pt	147 mW	

TABLE III


MODEL NO.	5081-P-FF ENTITY PARAMETERS SUPPLY / SIGNAL TERMINALS TB 1-15, 16		
	Vmax (Vdc)	Imax (mA)	Pmax (W)
5081-P-FF	30	300	1.3
			Ct (nF)
			27.8
			Li (mH)
			0

FIGURE 11. CSA Intrinsically Safe Installation (2 of 2)

B 9241502-00

REVOLUTIONS		BY		DATE		CHK	
RELEASE DATE	ECO NO	REV	LTR	ECO	DESCRIPTION		
08-09-02	8226	D					

ITEM	PART NO	DESCRIPTION	QTY
BILL OF MATERIAL			
Uniloc			
TITLE LABEL, I.S. BAS/ATEX 5081-P-FF			
DWG NO 9241502-00			
REV D			
SCALE 2:1			
SHEET 1 OF 2			

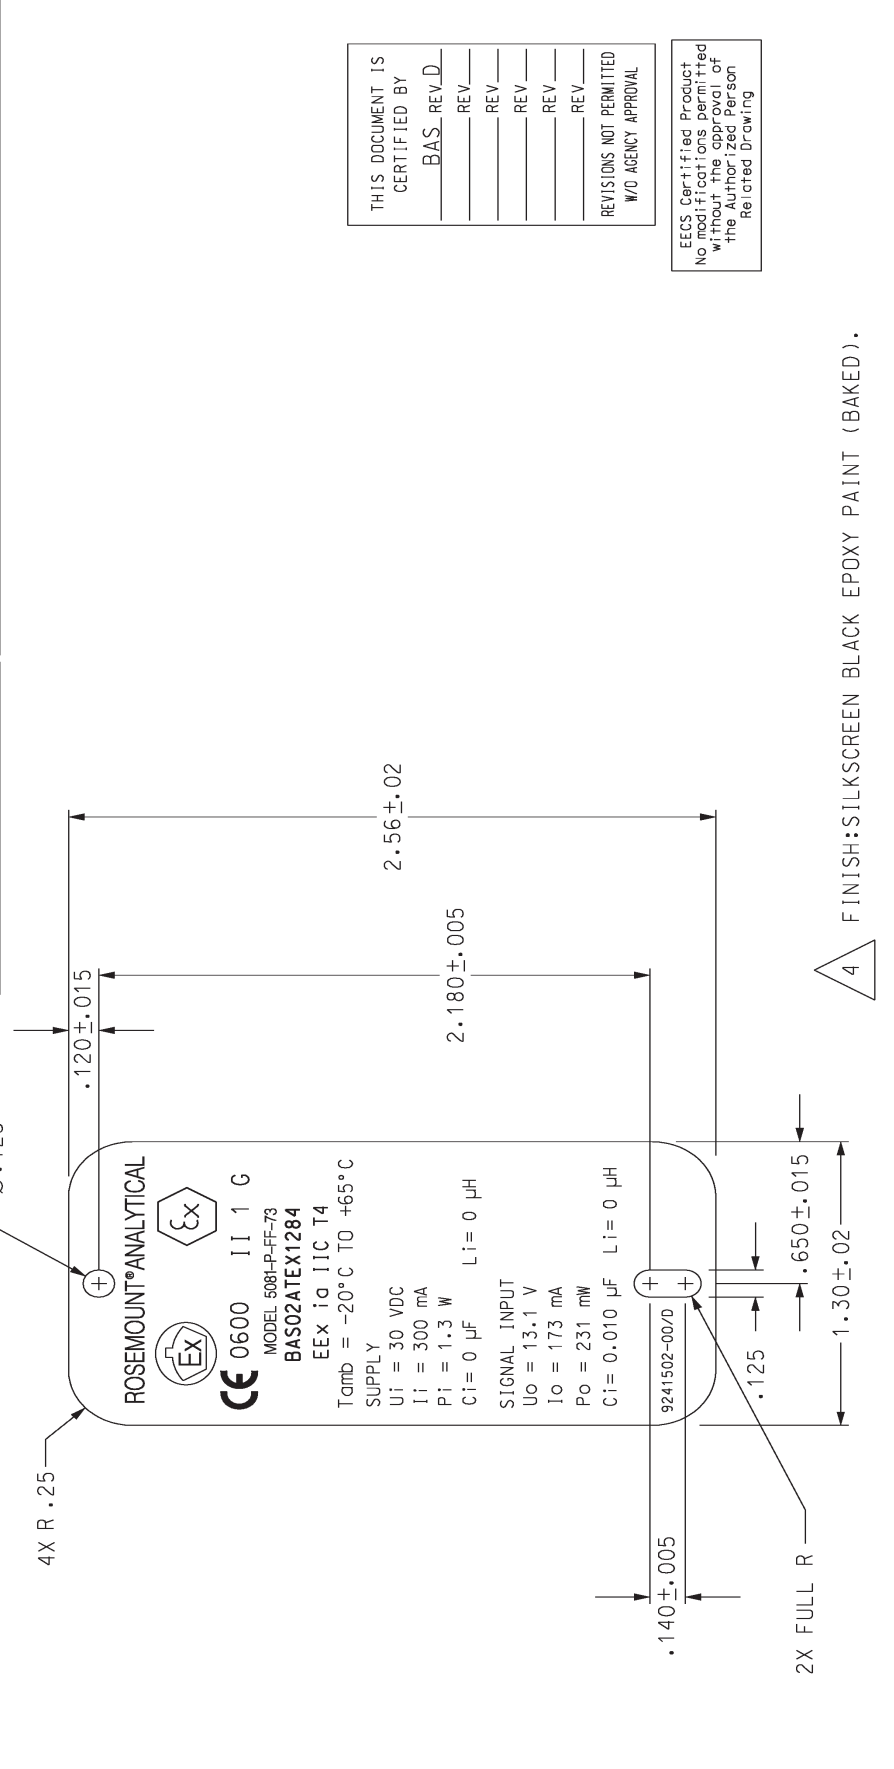

THIS DOCUMENT IS CERTIFIED BY
 BAS REV D
 REV
 REV
 REV
 REV
 REV
 REVISIONS NOT PERMITTED
 W/O AGENCY APPROVAL

ECS Certified Product
 No modifications permitted
 without the approval of
 the Authorized Person
 Related Drawing

UNLESS OTHERWISE SPECIFIED		TOLERANCES	
.XX ± .030	ANGLES ± 1/2°		
.XXX ± .010	DIMENSIONS ARE IN INCHES		
REMOVE BURRS & SHARP EDGES TO MAX			
MACHINED FILET RADIUS .020 MAX			
NOMINAL SURFACE FINISH 125			
MATERIAL	1		
FINISH	4		
CHECKED	B. JOHNSON	DATE	4/26/02
PROJECT ENGR APVD			
THIS DWG PRODUCED ON MICROSTATION PC; FILENAME: 004092			

- ARTWORK IS SHEET 2 OF 2.
 - NO CHANGE WITHOUT BASEEFA APPROVAL.
 - MATERIAL: AISI 300 SERIES STAINLESS STEEL .015+/--.005 THICK. MATERIAL TO BE ANNEALED & PASSIVATED. MAXIMUM HARDNESS BRINELL 190.
- NOTES: UNLESS OTHERWISE SPECIFIED

FIGURE 12. ATEX Intrinsically Safe Installation Label

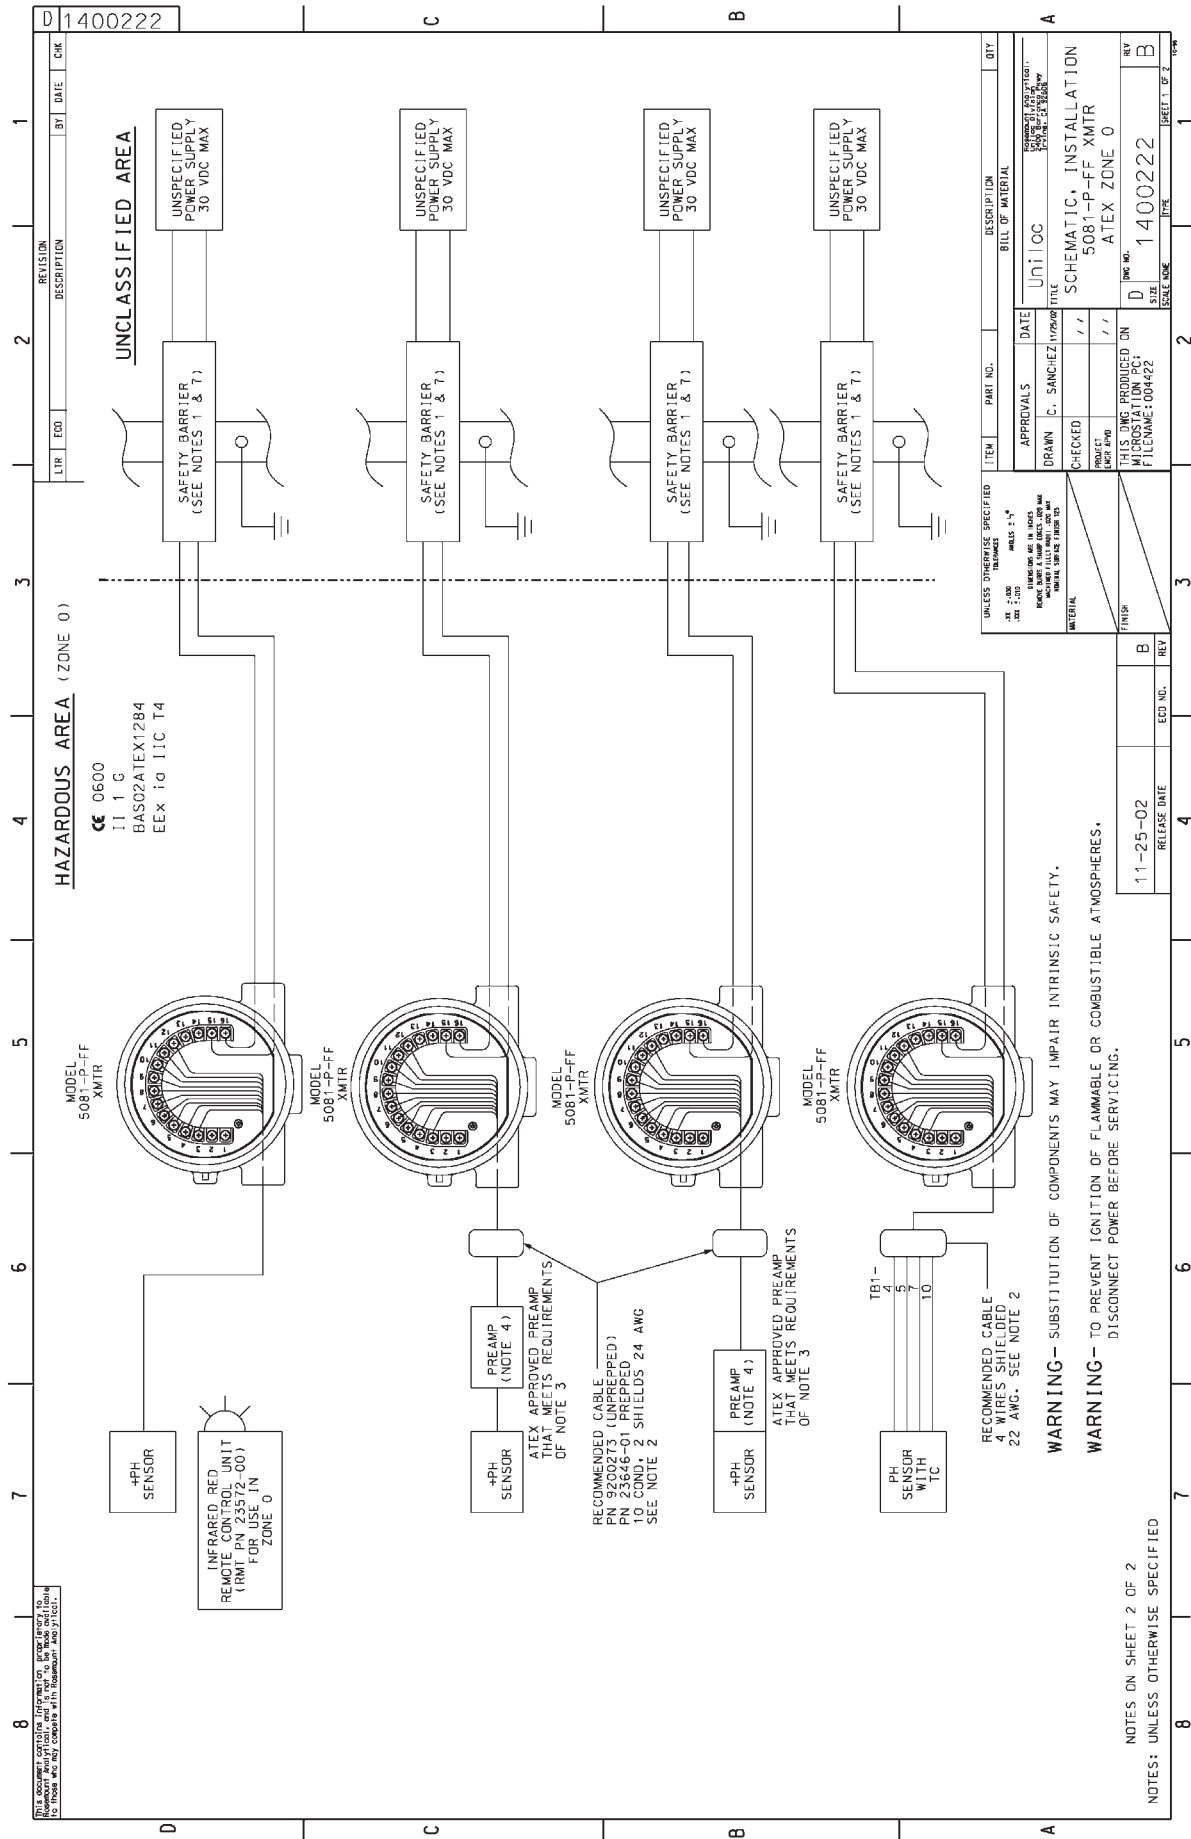


FIGURE 13. ATEX Intrinsically Safe Installation (1 of 2)

THIS DOCUMENT CONTAINS INFORMATION RELATING TO THE DESIGN OF A SAFETY BARRIER WHICH IS THE PROPERTY OF THE U.S. GOVERNMENT AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

11. PROCESS RESISTIVITY MUST BE LESS THAN 10^9 OHMS.
10. THE ASSOCIATED APPARATUS MUST BE ATEX APPROVED.
9. CONTROL EQUIPMENT CONNECTED TO ASSOCIATED APPARATUS MUST NOT USE OR GENERATE MORE THAN 250 Vrms OR Vdc.
8. ASSOCIATED APPARATUS MANUFACTURER'S INSTALLATION DRAWING MUST BE FOLLOWED WHEN INSTALLING THIS EQUIPMENT.
7. THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS WITH ASSOCIATED APPARATUS WHEN THE FOLLOWING IS TRUE:
FIELD DEVICE INPUT ASSOCIATED APPARATUS OUTPUT
Vmax OR Vt Vcc, Vt OR Vc;
Imax OR Ii Isc, Ii OR Io;
Pmax OR P1 Pot;
C1+ Ccobl1; Cc, C1 OR Co
L1+ Lcobl1; Lc, Lt OR Lc
6. RESISTANCE BETWEEN INTRINSICALLY SAFE GROUND AND EARTH GROUND MUST BE LESS THAN 1.0 OHM.
5. SENSORS WITHOUT PREAMPS SHALL MEET THE REQUIREMENTS OF SIMPLE APPARATUS AS DEFINED IN ANSI/ISA RP12.6 AND THE NEC, ANSI/NFPA 70. THEY CAN NOT GENERATE NOR STORE MORE THAN 1.2V, 0.1A, 25mWh, AND 20J. SEE TABLES I AND II.
4. PREAMPLIFIER TYPE 23546-00, 23538-00 OR 23561-00 MAY BE UTILIZED INSTEAD OF THE MODEL 5081-P-FF TRANSMITTER INTEGRAL PREAMPLIFIER CIRCUITRY. A WEATHER RESISTANT ENCLOSURE MUST HOUSE THE TYPE 23546-00 REMOTE PREAMPLIFIER.
3. INTRINSICALLY SAFE APPARATUS (MODEL 5081-P-FF, FIBROUS TERMINATOR AND ANY OTHER TYPE) WHICH IS NOT ASSOCIATED WITH A SAFETY BARRIER SHALL MEET THE FOLLOWING REQUIREMENTS: THE VOLTAGE (Vmax) AND CURRENT (Imax) OF THE INTRINSICALLY SAFE APPARATUS MUST BE EQUAL TO OR GREATER THAN THE VOLTAGE (Voc OR Vt) AND CURRENT (Isc OR Ii) WHICH CAN BE DELIVERED BY THE ASSOCIATED APPARATUS (SAFETY BARRIER). IN ADDITION, THE MAXIMUM UNPROTECTED CAPACITANCE (C1) AND INDUCTANCE (L1) OF THE INTRINSICALLY SAFE APPARATUS, INCLUDING INTERCONNECTING WIRING, MUST BE EQUAL OR LESS THAN THE CAPACITANCE (C0) AND INDUCTANCE (L0) WHICH CAN BE SAFELY CONNECTED TO THE APPARATUS. (REF. TABLE III).
2. THE MODEL 5081-P-FF TRANSMITTER INCLUDES INTEGRAL PREAMPLIFIER CIRCUITRY, AN EXTERNAL PREAMPLIFIER MAY BE ALSO USED. THE OUTPUT PARAMETERS SPECIFIED IN TABLE II ARE VALID FOR EITHER THE CAPACITANCE AND INDUCTANCE OF THE LOAD CONNECTED TO THE SENSOR TERMINALS MUST NOT EXCEED THE VALUES SPECIFIED IN TABLE I WHERE $C_0 \geq C_1$ (SENSOR) + Ccobl1; $L_0 \geq L_1$ (SENSOR) + Lcobl1.
1. ANY SHUNT ZENER DIODE SAFETY BARRIER HAVING ATEX APPROVAL AND HAVING THE FOLLOWING OUTPUT PARAMETERS SUPPLY/SIGNAL TERMINALS TB1 15 AND 16
Voc OR Vt NOT GREATER THAN 30 V
Isc OR Ii NOT GREATER THAN 300 mA
Pmax NOT GREATER THAN 0.5 W

NOTES: UNLESS OTHERWISE SPECIFIED

TABLE I

GAS GROUPS	OUTPUT PARAMETERS	
	Cg (uF)	Lo (mH)
IIC	0-96	3-1
IIB	5-99	12-3
IIA	21-69	25

TABLE II

OUTPUT PARAMETERS	MODEL 5081-P-FF TB1-1 THRU 12
Vt	13.1 Vcc
Ii	173 mA
Pi	231 mW
Ci	.01 uF
Li	0 uF

TABLE III


5081-P-FF ENTITY PARAMETERS SUPPLY / SIGNAL TERMINALS TB1 15 AND 16			
MODEL NO.	Vmax (Vdc)	Imax (mA)	Pmax (W)
5081-P-FF	30	300	1.3
			C1 (uF)
			Li (uH)
			0

FIGURE 14. ATEX Intrinsically Safe Installation (2 of 2)

REVISIONS		ECO NO	REV	LTR	ECO	BY	DATE	CHK
DESCRIPTION		8933	A					


RELEASE DATE: 5-6-04

THIS DOCUMENT IS CERTIFIED BY
 FM REV. A
 REVISIONS NOT PERMITTED
 W/O AGENCY APPROVAL

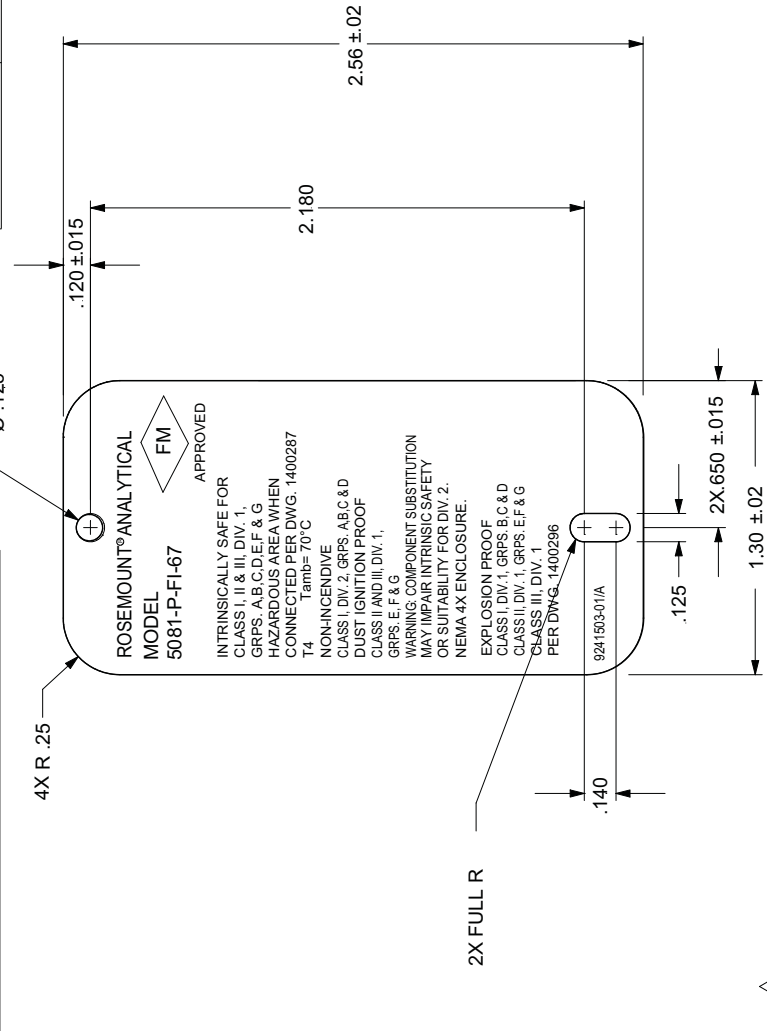

UNLESS OTHERWISE SPECIFIED		ITEM	PART NO	DESCRIPTION	QTY
XX + .030	TOLERANCES	BILL OF MATERIAL			
XXX + .010	ANGLES ± 1/2°	UniToc			
DIMENSIONS ARE IN INCHES		APPROVALS		TITLE	
REMOVE BURRS & SHARP EDGES .001 MAX		B. JOHNSON	LABEL, I.S. FM		
MACHINED FILLET RADI .020 MAX		J. FLOCK	5081-P-FI		
NOMINAL SURFACE FINISH 125		J. FLOCK	DWG NO		
MATERIAL	1	THIS DWG CREATED IN		B	REV
FINISH	4	SOLID EDGE		9241503-01	A
NOTES: UNLESS OTHERWISE SPECIFIED		SCALE		SHEET 1 OF 2	

- 1 MATERIAL: AISI 300 SERIES STAINLESS STEEL .015+/- .005 THICK. MATERIAL TO BE ANNEALED & PASSIVATED. MAXIMUM HARDNESS BRINELL 190.
- 2. NO CHANGE WITHOUT FM APPROVAL.
- 3. ARTWORK IS SHEET 2 OF 2.
- 4 FINISH: SILKSCREEN BLACK EPOXY PAINT (BAKED).

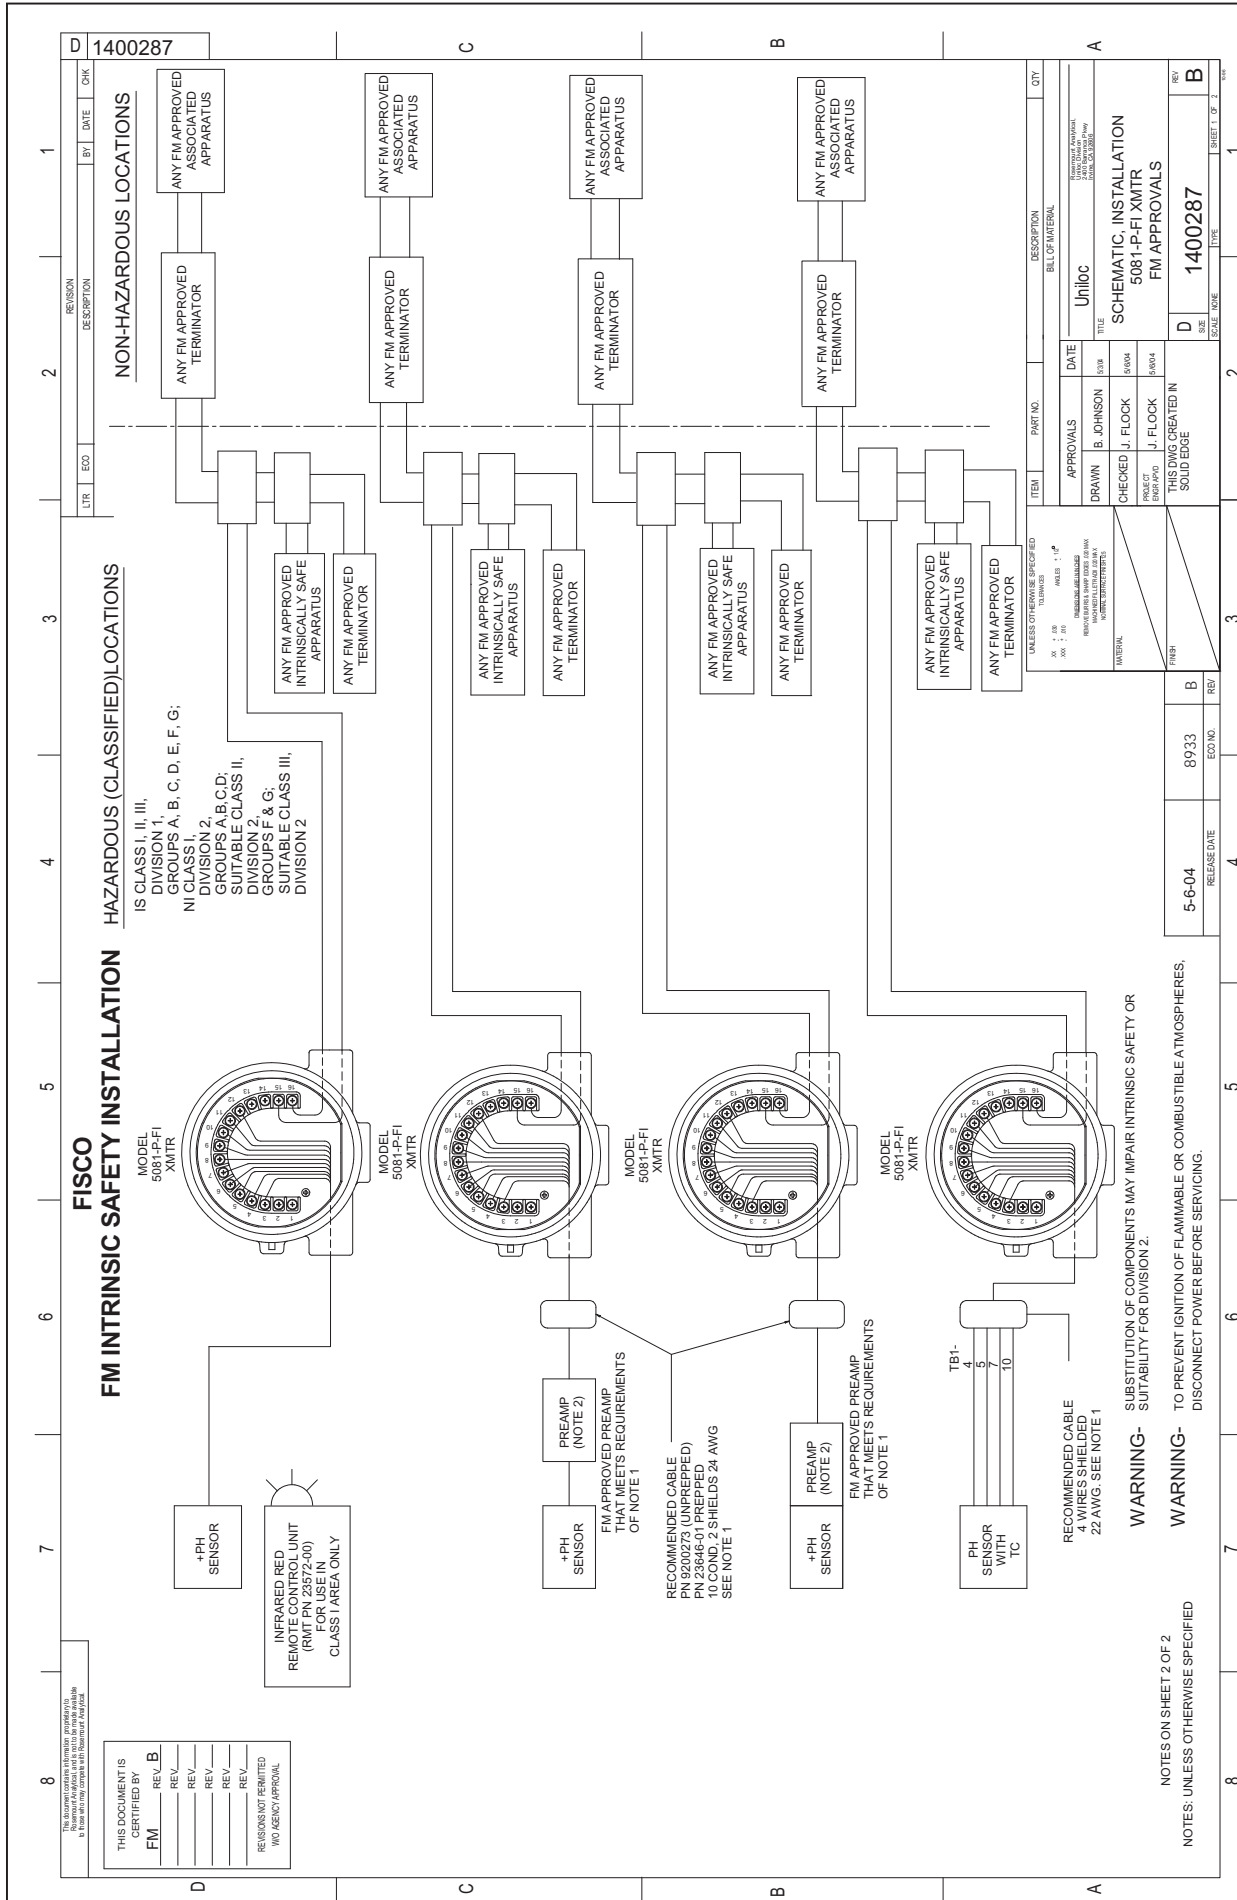

11. NO REVISION TO DRAWING WITHOUT PRIOR FACTORY MUTUAL RESEARCH APPROVAL.

10. THE CONFIGURATION OF ASSOCIATED APPARATUS MUST BE FACTORY MUTUAL RESEARCH APPROVED UNDER THE ASSOCIATED CONCEPT.

9. CONTROL EQUIPMENT CONNECTED TO ASSOCIATED APPARATUS MUST NOT USE OR GENERATE MORE THAN 250 Vrms OR Vdc.

8. ASSOCIATED APPARATUS MANUFACTURER'S INSTALLATION DRAWING MUST BE FOLLOWED WHEN INSTALLING THIS EQUIPMENT.

7. THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS WITH ASSOCIATED APPARATUS WHEN THE FOLLOWING IS TRUE:

FIELD DEVICE INPUT ASSOCIATED APPARATUS OUTPUT

Vmax OR U_i Vdc, V_{OC} OR U_o

I_{max} OR I_o I_{sc}, I_{OC} OR I_o

P_{max} OR P_i Ca, Ci OR Co

3C1+ 3C2cable; La, Li OR Lo; Lc OR Rc

3L1+ 3L2cable; (La/Ra OR Lo/Ro) AND (Li/Ri OR Lo/Ro)

6. RESISTANCE BETWEEN INTRINSICALLY SAFE GROUND AND EARTH GROUND MUST BE LESS THAN 1.0 Ohm.

5. DUST TIGHT CONDUIT SEAL MUST BE USED WHEN INSTALLED IN CLASS II AND CLASS III ENVIRONMENTS.

4. SENSORS WITHOUT PREAMPS SHALL MEET THE REQUIREMENTS OF SIMPLE APPARATUS AS DEFINED IN ANS/ISA RP12.6 AND THE NEC, ANS/INFA 70.

THEY CAN NOT GENERATE NOR STORE MORE THAN 1.5V, 0.1A OR A PASSIVE COMPONENT THAT DOES NOT DISSIPATE MORE THAN 1.3W. SEE TABLES I AND II.

3. INSTALLATION SHOULD BE IN ACCORDANCE WITH ANS/ISA RP12.06 (INSTALLATION OF INTRINSICALLY SAFE FIELD DEVICES OR PASSIVE COMPONENTS) AND THE NATIONAL ELECTRICAL CODE (ANS/NECA 70) SECTIONS 504 AND 505.

2. PREAMPLIFIER TYPE 23546-00, 23538-00 OR 23561-00 MAY BE UTILIZED INSTEAD OF THE MODEL 5081-P-FI TRANSMITTER INTEGRAL PREAMPLIFIER.

1. THE MODEL 5081-P-FI TRANSMITTER INCLUDES INTEGRAL PREAMPLIFIER CIRCUITRY, AN EXTERNAL PREAMPLIFIER MAY BE ALSO USED.

THE OUTPUT PARAMETERS SPECIFIED IN TABLE I ARE VALID FOR EITHER PREAMPLIFIER.

THE CAPACITANCE AND INDUCTANCE OF THE LOAD CONNECTED TO THE SENSOR TERMINALS MUST NOT EXCEED THE VALUES SPECIFIED IN TABLE I

WHERE Ca ≥ Ci (SENSOR) + Ccable; La ≥ Li (SENSOR) + Lcable.

NOTES: UNLESS OTHERWISE SPECIFIED

TABLE I

GAS GROUPS		OUTPUT PARAMETERS	
A, B	C	Ca (uF)	La (mH)
		0.96	3.1
		5.99	12.3
D		21.69	25

TABLE II


OUTPUT PARAMETERS		MODEL 5081-P-FI TB1-1 THRU 12	
VI	II	VI	II
		13.02 Vdc	105.64 mA
			147 mW

TABLE III

5081-P-FI FISCO PARAMETERS SUPPLY / SIGNAL TERMINALS TB 1-15, 16					
MODEL NO.	GROUPS	Vmax (Vdc)	I _{max} (mA)	P _{max} (W)	LI (uH)
5081-P-FI	IBJ / C,D,E,F,G	17.5	380	5.32	5
5081-P-FI	ICJ / A,B,C,D,E,F,G	17.5	380	2.52	5

NOTES: UNLESS OTHERWISE SPECIFIED

REVISIONS		ECO NO	REV	LTR	ECO	BY	DATE	CHK
DESCRIPTION		8925	A					

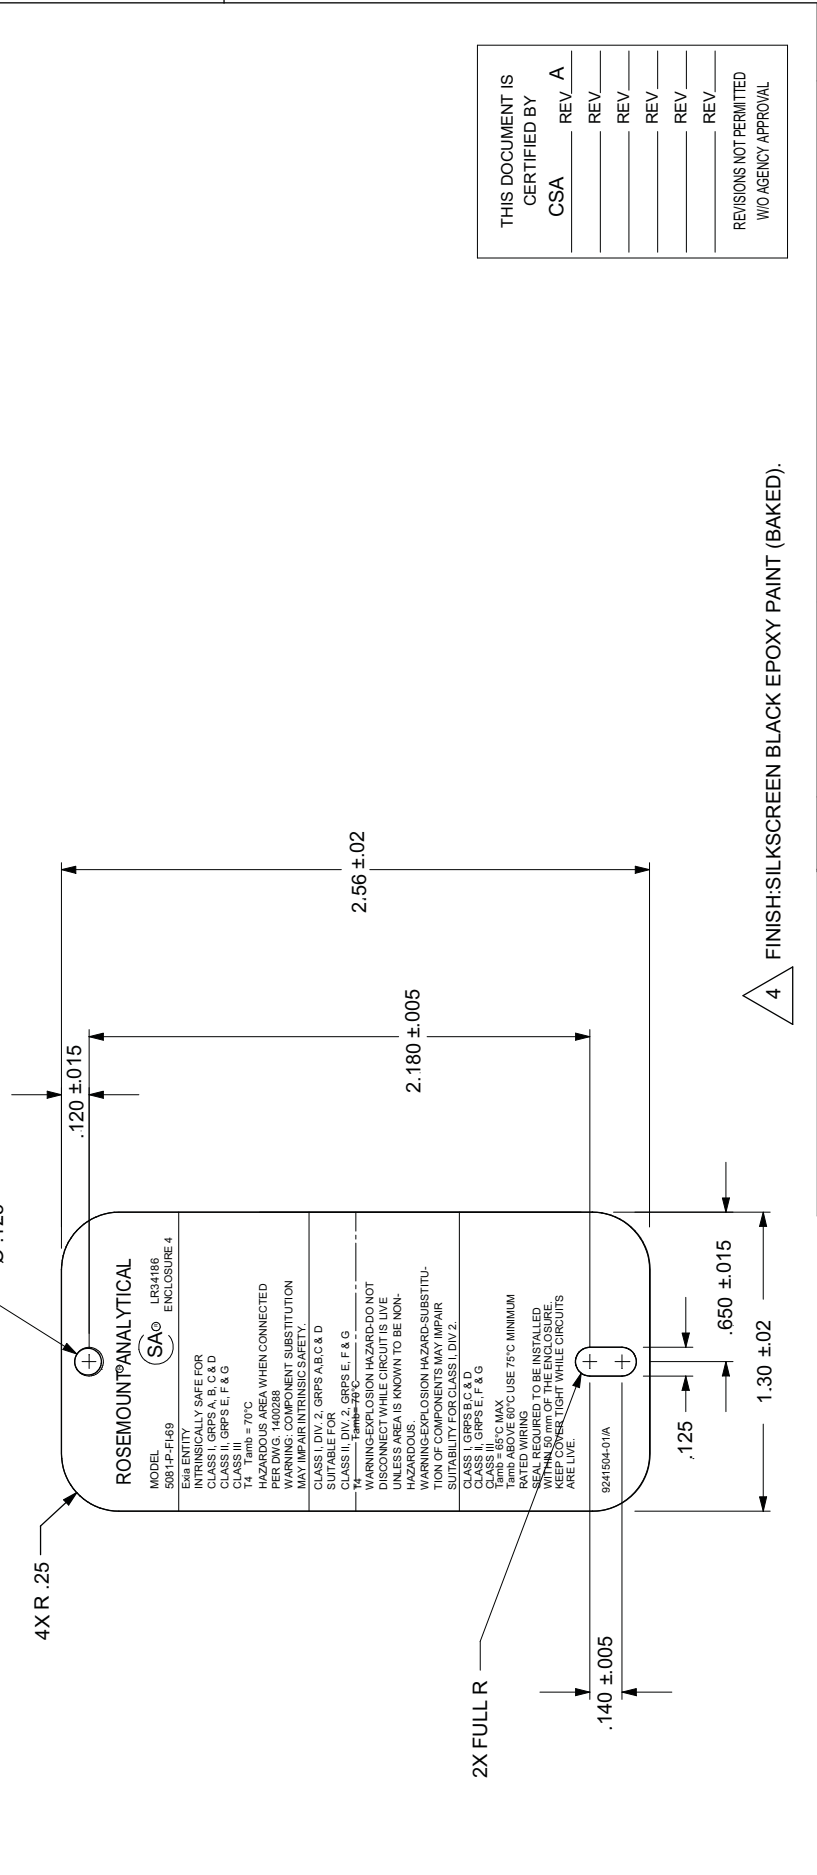

THIS DOCUMENT IS CERTIFIED BY
 CSA _____ REV. A
 _____ REV. _____
 _____ REV. _____
 _____ REV. _____
 _____ REV. _____
 REVISIONS NOT PERMITTED
 W/O AGENCY APPROVAL


4 FINISH: SILKSCREEN BLACK EPOXY PAINT (BAKED).

UNLESS OTHERWISE SPECIFIED		ITEM	PART NO	DESCRIPTION	QTY
XX + .030	TOLERANCES	BILL OF MATERIAL			
XXX + .010	ANGLES ± 1/2°	UniToc			
DIMENSIONS ARE IN INCHES		APPROVALS		DATE	
REMOVE BURRS & SHARP EDGES .020 MAX		DRAWN	B. JOHNSON	5/3/04	
MACHINED FILLET RADI .020 MAX		CHECKED	J. FLOCK	5/6/04	
NOMINAL SURFACE FINISH 125		PROJECT ENGR APVD	J. FLOCK	5/6/04	
MATERIAL	1	THIS DWG CREATED IN SOLID EDGE			
FINISH	4				
		DWG NO		REV	
		B 9241504-01		A	
		SCALE 2:1		SHEET 1 OF 2	

- ARTWORK IS SHEET 2 OF 2.
- NO CHANGE WITHOUT CSA APPROVAL.
- MATERIAL: AISI 300 SERIES STAINLESS STEEL .015±.005 THICK. MATERIAL TO BE ANNEALED & PASSIVATED. MAXIMUM HARDNESS BRINELL 190.

NOTES: UNLESS OTHERWISE SPECIFIED

This document contains information proprietary to Rosemount Analytical, and is not to be made available to those who may compete with Rosemount Analytical.	RELEASE DATE	ECO NO	REV	REVISIONS			
	5-6-04	8925	A	LTR	ECO	BY	DATE

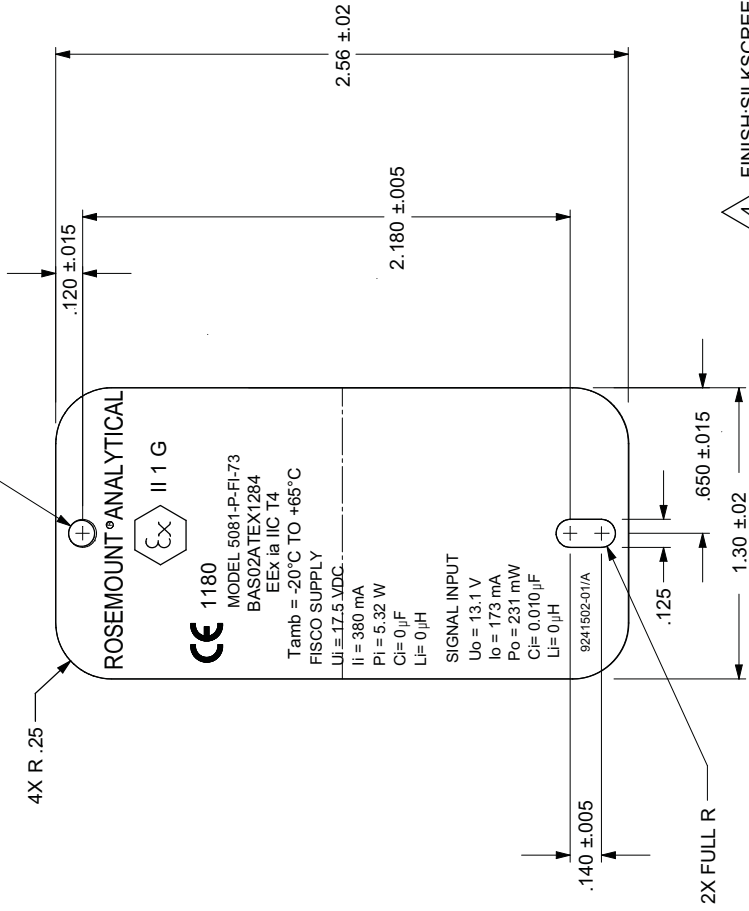

THIS DOCUMENT IS CERTIFIED BY


Baseefa	REV. A
_____	REV. _____
_____	REV. _____
_____	REV. _____
_____	REV. _____
_____	REV. _____

REVISIONS NOT PERMITTED W/O AGENCY APPROVAL

Baseefa Certified Product Not to be Reprinted without the approval of the Authorized Person Related Drawing

UNLESS OTHERWISE SPECIFIED	ITEM	PART NO	DESCRIPTION	QTY
XX +.000 XXX +.010			BILL OF MATERIAL	
ANGLES ± 1/2° DIMENSIONS ARE IN INCHES REMOVE BURRS & SHARP EDGES .020 MAX MACHINED FILLET RADI .020 MAX NOMINAL SURFACE FINISH 125			Uni Toc	
MATERIAL	DRAWN	APPROVALS	TITLE	
FINISH	CHECKED	B. JOHNSON	LABEL, I.S. BAS/ATEX	
	PROJECT ENGR APVD	J. FLOCK	5081-P-FI	
	THIS DWG CREATED IN SOLID EDGE	J. FLOCK	DWG NO	REV
			B 9241502-01	A
			SCALE 2:1	SHEET 1 OF 2

- ARTWORK IS SHEET 2 OF 2.
 - NO CHANGE WITHOUT BASEEFA APPROVAL.
- 1 MATERIAL: AISI 300 SERIES STAINLESS STEEL .015+/--.005 THICK. MATERIAL TO BE ANNEALED & PASSIVATED. MAXIMUM HARDNESS BRINELL 190.
- NOTES: UNLESS OTHERWISE SPECIFIED

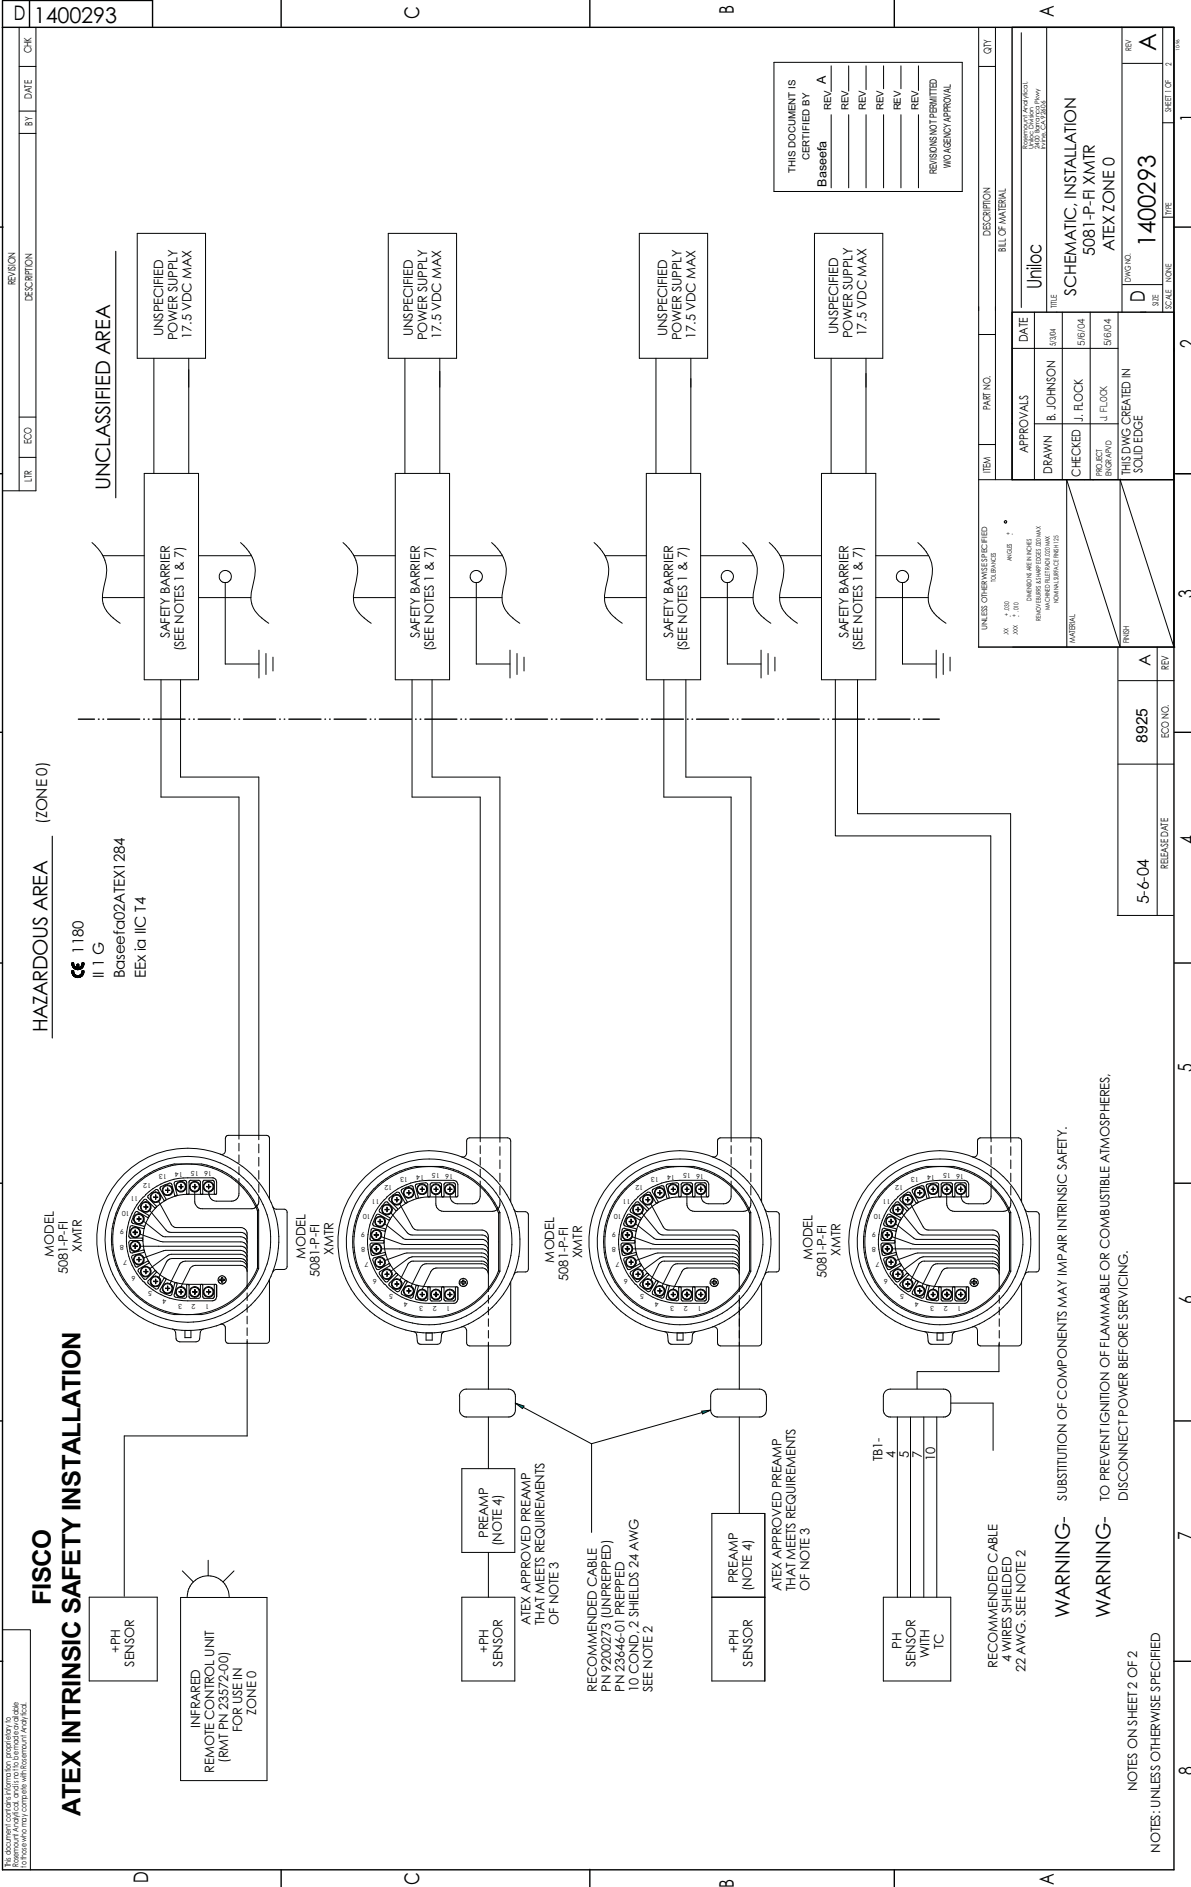

THIS DOCUMENT IS CERTIFIED BY

Basefile	REV. A
REV.	REV.
REV.	REV.
REV.	REV.
REV.	REV.
REVISIONS NOT PERMITTED WITHOUT APPROVAL	

UNLESS OTHERWISE SPECIFIED	ITEM	PART NO.	DESCRIPTION	QTY
XX 1 200			UNILIC	
XXX 1 200			UNILIC	
UNLESS OTHERWISE SPECIFIED	APPROVALS	DATE	DESCRIPTION	QTY
XX 1 200	DRAWN	B. JOHNSON	UNILIC	
XXX 1 200	CHECKED	J. FLOCK	UNILIC	
UNLESS OTHERWISE SPECIFIED	PRODUCT	DATE	DESCRIPTION	QTY
XX 1 200	DESIGNED IN	J. FLOCK	SCHMATIC, INSTALLATION	
XXX 1 200	SOLID EDGE	J. FLOCK	5081-P-FI XMTR	
UNLESS OTHERWISE SPECIFIED	SCALE	NO.	DESCRIPTION	QTY
XX 1 200	5-6-04	8925	ATEX ZONE 0	
XXX 1 200			1400293	

INFRARED REMOTE CONTROLLER (IRC) - KEY FUNCTIONS

The infrared remote controller is used to calibrate and program the transmitter and to display diagnostic messages. See figure below for a description of the function of the keys.

Hold the IRC within 6 feet of the transmitter, and not more than 15 degrees from the center of the display window.


RESET - Press RESET to end the current operation and return to the main display. Changes will NOT be saved. **RESET does NOT return the transmitter to factory default settings.**

ARROW KEYS - Use ↑ and ↓ keys to increase or decrease a number or to scroll through items in a list. Use the ← or → keys to move the cursor across a number. A flashing word or numeral shows the position of the cursor.

CAL - Press CAL to access the calibration menu.

PROG - Press PROG to access the program menu.

DIAG - Press DIAG to read diagnostic messages.



REMOTE CONTROL
ROSEMOUNT
FISHER-ROSEMOUNT

HOLD - Press HOLD to access the prompts used for turning on or off the hold function.

ENTER - Press ENTER to move from a submenu to the first prompt under the submenu. Pressing ENTER also stores changes in memory and advances to the next prompt.

NEXT - Press NEXT to advance to the next submenu or to leave a message screen.

EXIT - Press EXIT to end the current operation. Changes are NOT saved.

Infrared Remote Controller.

IRC - INFRARED REMOTE CONTROL

<p>REMOTE CONTROL LR 34186 Exia</p> <p>INTRINSICALLY SAFE EQUIPMENT HAZARDOUS AREA LOCATIONS: CLASS I, DIV 1, GP A, B, C, D CLASS I, DIV 2, GP A, B, C, D T3C Tamb = 40°C T3 Tamb = 80°C 1.5Vdc AAA BATTERIES EVEREADY E92/1212 DURACELL MN2400/PC2400</p>	<p>SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY</p> <p>PN 23572-00</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 0 auto;"> <p style="text-align: center; margin: 0;">WARNING: TO PREVENT IGNITION CHANGE BATTERIES IN A NONHAZARDOUS AREA ONLY</p> </div>	<p>IS/II/1/A,B,C & D NI/II/2/A,B,C & D T4 Tamb = 40°C T3A Tamb = 80°C</p> <p style="text-align: right;"> APPROVED</p> <p> Baseefa02ATEX0198 II 1G EExia IIC T4 CE 1180 1.5Vdc AAA BATTERIES EVEREADY E92/1212 DURACELL MN2400/PC2400 ROSEMOUNT ANALYTICAL 92606 USA</p>
---	---	---

YEAR

START-UP CONFIGURATION AND CALIBRATION — pH

To perform a two-point buffer calibration, follow these steps:

1. Place the pH sensor in the first buffer solution.
2. On the remote, press CAL, ENTER, ENTER.
3. Use the arrow buttons to select the correct buffer value. Press ENTER.
4. Rinse the sensor and place it in the second buffer solution. Press ENTER.
5. Use the arrow buttons to select the correct buffer value. Press ENTER.

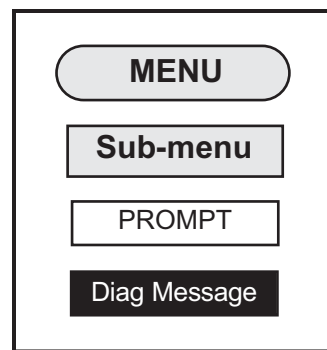
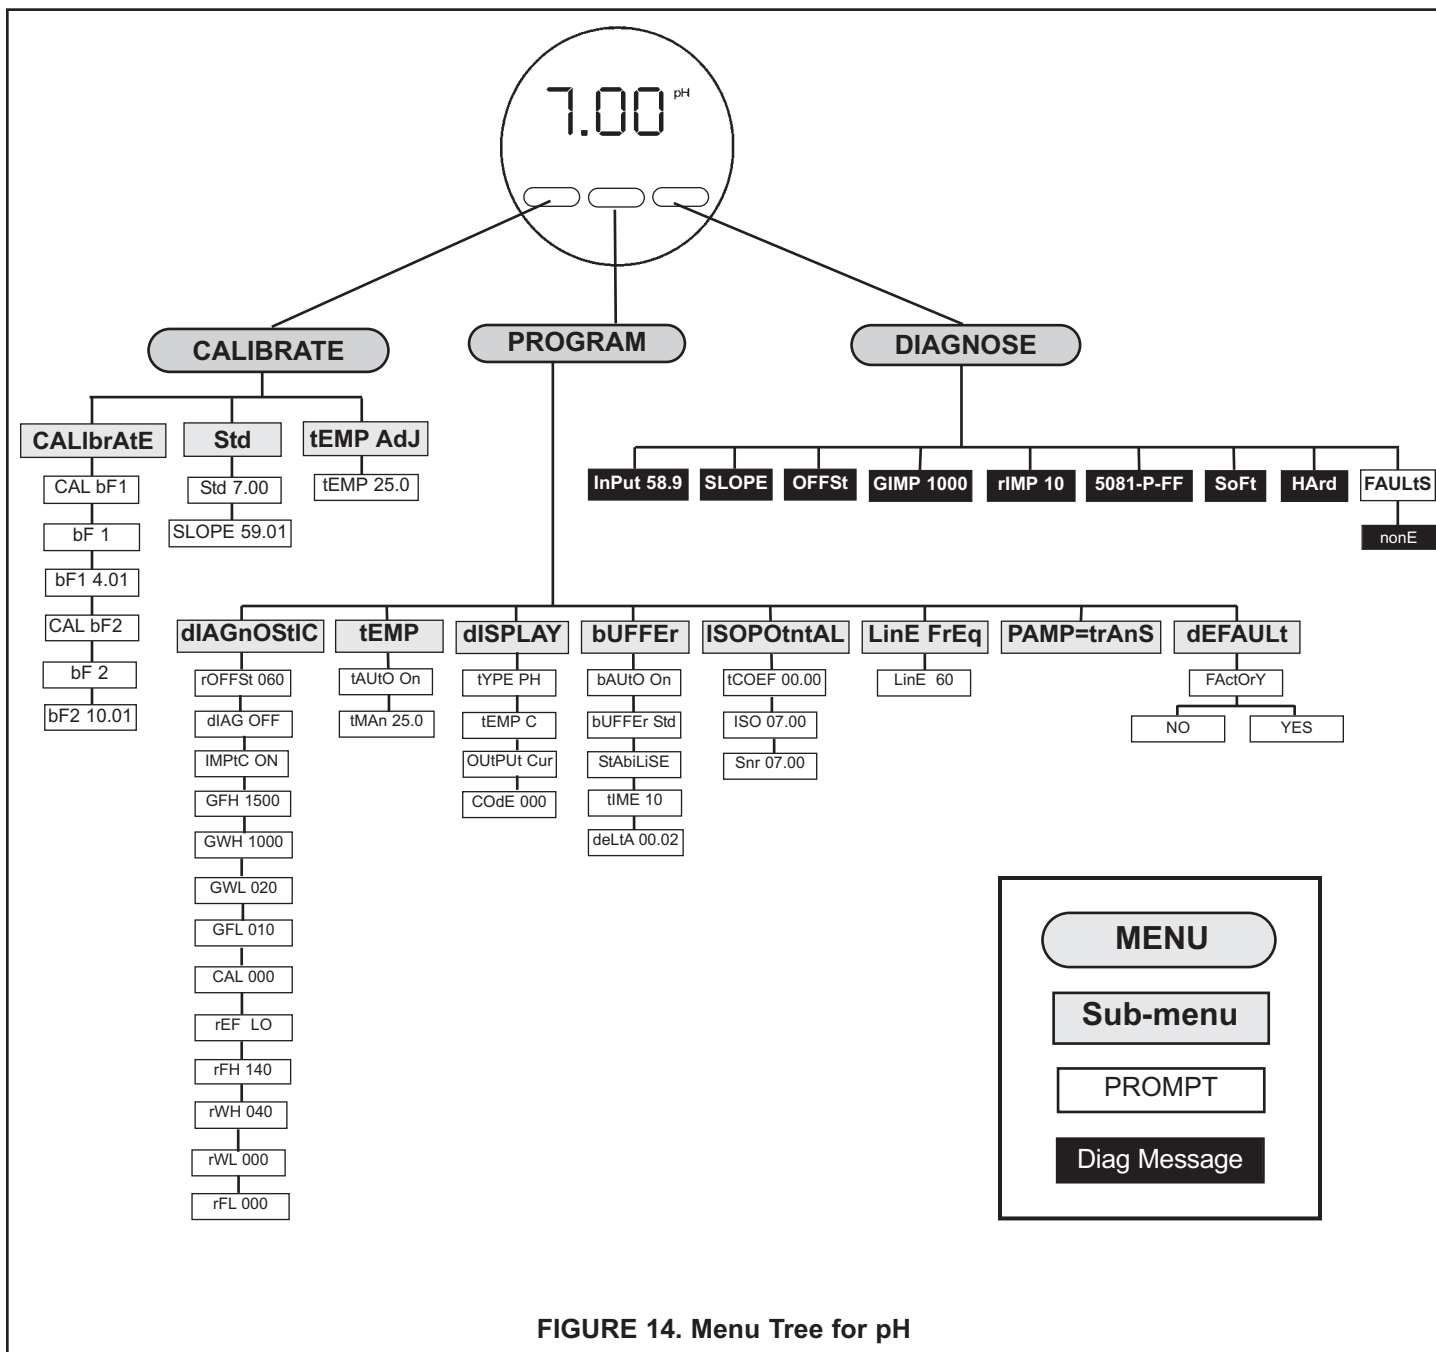


FIGURE 14. Menu Tree for pH

START-UP CONFIGURATION AND CALIBRATION — ORP

To perform a one point standardization, follow these steps.

1. Place the ORP sensor in the ORP buffer solution.
2. On the Remote press CAL, ENTER, ENTER
3. Use the arrow buttons to adjust the value. Press ENTER
4. Press RESET

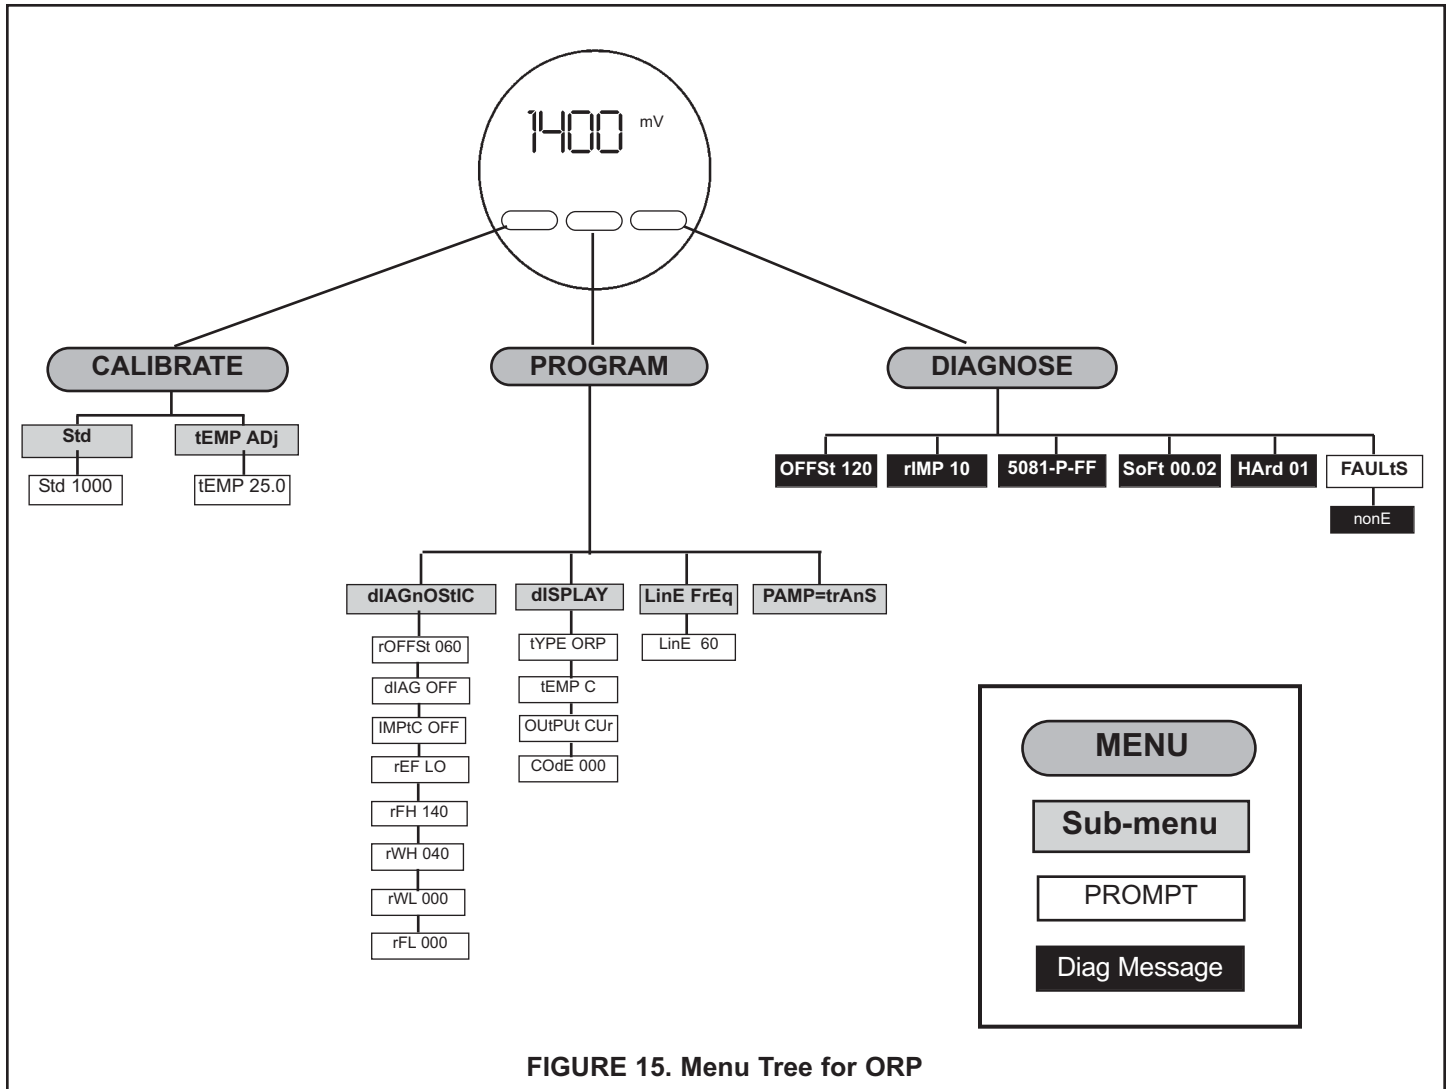


FIGURE 15. Menu Tree for ORP


PROGRAM MENU MNEMONICS

5081-P DISPLAY	MANUAL TEXT	MEANING
CALibrAtE	CALibrAtE	Calibration menu
Std	Std	Standardize sensor
bF1 / bF2	bF1 / bF2	Buffer 1 / Buffer 2
SLOPE	SLOPE	Sensor slope
Hold	HoLd	Set hold
FAULt	FAULt	Set fault
dPn	dPn	Set output dampening
dIAGnoStic	dIAGnoStic	Diagnostic submenu
rOFFSt	rOFFSt	Reference offset
IMPtC	IMPtC	Glass impedance temperature compensation
GFH	GFH	Glass fault high
GWH	GWH	Glass warning high
GFL	GFL	Glass fault low
GWL	GWL	Glass warning low
CAL	CAL	[Factory use only]
rEF	rEF	Set high/low impedance reference
rFH	rFH	Reference fault high
rWH	rWH	Reference warning high
rFL	rFL	Reference fault low
rWL	rWL	Reference warning low
tEMP	tEMP	Temperature units
tAUtO	tAUtO	Automatic temperature compensation
tMAn	tMAn	Manual temperature compensation
tYPE	tYPE	Measurement type (pH/ORP)
diSPLAy	diSPLAy	Display submenu



*The right people,
the right answers,
right now.*

**ROSEMOUNT ANALYTICAL
CUSTOMER SUPPORT CENTER
1-800-854-8257**

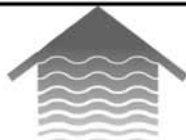

ON-LINE ORDERING NOW AVAILABLE ON OUR WEB SITE
<http://www.raihome.com>

Specifications subject to change without notice.



Credit Cards for U.S. Purchases Only.



Emerson Process Management

2400 Barranca Parkway
Irvine, CA 92606 USA
Tel: (949) 757-8500
Fax: (949) 474-7250
<http://www.raihome.com>

