

## ***LIGHTNING 35HD***

---

### **Super High Brightness Digital Video Projector User Manual**



## Declaration of Conformity

---

### Directives covered by this Declaration

**89/336/EEC** Electromagnetic Compatibility Directive, amended by **92/31/EEC** and **93/68/EEC**.

**73/23/EEC** Low Voltage Equipment Directive, amended by **93/68/EEC**.

### Products covered by this Declaration

Large screen video projector type *LIGHTNING 35HD*

### Basis on which Conformity is being declared

The products identified above comply with the protection requirements of the above EU directives, and the manufacturer has applied the following standards.

EN 55022:1998 - Limits and Methods of Measurement of Radio Disturbance Characteristics of Information Technology Equipment.


EN 55024:1998 - Limits and Methods of Measurement of Immunity Characteristics of Information Technology Equipment.

EN 55103:1997 - Product family Standard for Audio, Video, Audio-Visual and Entertainment Lighting Control apparatus for Professional Use.

EN 60950:1992 - Specification for Safety of Information Technology Equipment, including Electrical Business equipment.

The technical documentation required to demonstrate that the products meet the requirements of the Low Voltage directive has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities. The CE mark was first applied in March 2004.

Signed:



Authority: D.J. Quinn, Product Development Director

Date: 25 March 2004

### Attention!

The attention of the specifier, purchaser, installer, or user is drawn to special measures and limitations to use which must be observed when these products are taken into service to maintain compliance with the above directives. Details of these special measures are available on request, and are also contained in the product manuals.

# Important Information

Please read this user manual carefully before using the projector, and keep the manual handy for future reference.

A serial number is located on the side of the projector. Record it here:

## Symbols used in this guide

---

### Warnings



**ELECTRICAL WARNING:** this symbol indicates that there is a danger of electrical shock unless the instructions are not closely followed.



**WARNING:** this symbol indicates that there is a danger of physical injury to yourself and/or damage to the equipment unless the instructions are not closely followed.



**NOTE:** this symbol indicates that there is some important information that you should read.

### Trademarks

- IBM is a registered trademark of International Business Machines Corporation.
- Macintosh and PowerBook are registered trademarks of Apple Computer, Inc.
- Other product and company names mentioned in this user's manual may be the trademarks of their respective holders.

### Product revision

- Because we at Digital Projection continually strive to improve our products, we may change specifications and designs, and add new features without prior notice. Projectors built prior to this revision of the User Manual may therefore not include all the features described.

### Manual revision

Date	Description	Revision
October 2004	Firmware release 1.2	Patch A

## General precautions

---

Notes



Do not open the cabinet. There are no user serviceable parts inside.

Use only the power cable provided.

Ensure that the power outlet includes a Ground connection, as this equipment **MUST** be earthed.

Take care to prevent small objects such as paper or wire from falling into the projector. If this does happen, switch off immediately, and have the objects removed by authorised service personnel.

Do not expose the projector to rain or moisture, and do not place any liquids on top of the projector.

Unplug before cleaning, and use a damp, not wet, cloth.

Do not touch the power plug with wet hands.

Do not touch the power plug during a thunder storm.

Handle the power cable carefully and avoid sharp bends. Do not use a damaged power cable.



There are no user-serviceable parts inside the lamp module. The whole module should be replaced and returned to Digital Projection for re-furbishment.

Take care when removing the lamp module, as it is heavy (>10kg).

Take care not to touch the glass surface of the lamp module. If you do accidentally touch the glass, it should be cleaned before use.

Do not use the lamp for more than 750 hours, as this may cause serious lamp failure, damage the lamp module and cause extra cost on replacement.

Xenon lamps produce high intensity light. Do not look directly at the light coming from the lamp housing, or the lens, or allow items such as magnifying lenses to be placed in the light path. This could result in serious eye damage.

Do not touch the ventilation outlets, as they will become hot in use.

Do not cover the ventilation outlets or inlets.

Do not cover the lens whilst the projector is switched on. This could cause a fire

Always allow the projector to cool for 5 minutes before switching off the power, moving the projector or changing the lamp.

Never use strong detergents or solvents such as alcohol or thinners to clean the projector and lens.

## Installation precautions



Connect the LAN cable only to a computer LAN connection. Other similar connectors may have a dangerously high voltage source.

The projector must be installed only by suitably qualified personnel, in accordance with local building codes.

The projector should be installed as close to the power outlet as possible.

The power connection should be easily accessible, so that it can be disconnected in an emergency.

Ensure that there is at least 30cm (12in) of space between the ventilation outlets and any wall, and 10cm (4in) on all other sides.

Do not install the projector close to anything that might be affected by its operational heat, for instance, polystyrene ceiling tiles, curtains etc.

The projector weighs over 100kg (200lbs). Use safe handling techniques when lifting the projector.

When stacking projectors, the stack **MUST** be vertical, to ensure that the stresses are distributed to all for frame couplings.

Before installation, make sure that the surface, ceiling or rigging that is to support the projector is capable of supporting the combined weight of the projector and lens (see specification for exact weights).

Separate backup safety chains or wires should always be used for each projector.

Do not place heavy objects on top of the projector chassis. Only the rigging frame is capable of withstanding the weight of another projector.

Do not stack more than four projectors.

Do not drop or jarr the projector.



Place the projector in a dry area away from sources of dust, moisture, steam, smoke, sunlight or heat.

Do not tilt the projector more than  $\pm 12^\circ$  from side to side when in use, as this may cause serious lamp failure, damage the lamp module and cause extra cost on replacement. The projector may be tilted forwards and backwards as necessary.

Each time a new lens is fitted to the projector, the calibration procedure must be carried out. See *Lens menu*, in *Section 4. Using the menus*.

The zoom drive mechanism should always be set to the engaged position, even when using the non-zoom lens, as it provides an extra level of protection, should the lens release lever fail.

### Notes

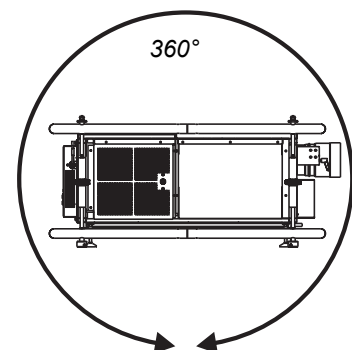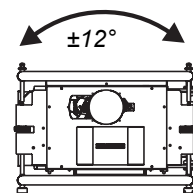

## Operation and configuration precautions

---

Notes



Do not try to operate the touch screen using anything harder than your finger. This could damage the LCD.

Do not make changes to the networking configuration unless you understand what you are doing, or have taken advice from your Network Manager. If you make a mistake, it is possible that you will lose contact with the projector. Always double-check your settings before pressing the APPLY button. Always keep a written note of the original settings, and any changes you have made.

If using DHCP, then keep the projector switched on at all times, and make sure the projector is accessible, as the IP address could be re-assigned on power-up or after a lost connection.

Software update should NOT be carried out except by, or with the supervision of, Digital Projection Service personnel.

## Compliance with international standards

---

### Noise

#### *GSGC Acoustic Noise Information Ordinance*

The sound pressure level is less than 70 dB (A) according to ISO 3744 or ISO 7779.

### RF Interference

#### *FCC*

The Federal Communications Commission does not allow any modifications or changes to the unit EXCEPT those specified by Digital Projection in this manual. Failure to comply with this government regulation could void your right to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant with Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be responsible for correcting any interference.

# LIGHTNING 35HD User Manual

## CONTENTS

<b>Important Information</b>	<b>i</b>
<b>Symbols used in this guide</b>	<b>i</b>
Warnings	i
Trademarks	i
Product revision	i
Manual revision	i
<b>General precautions</b>	<b>ii</b>
<b>Installation precautions</b>	<b>iii</b>
<b>Operation and configuration precautions</b>	<b>iv</b>
<b>Compliance with international standards</b>	<b>iv</b>
Noise	iv
RF Interference	iv
<b>1. Introduction</b>	<b>1.1</b>
What's in the box?	1.2
Key features of the projector	1.3
Getting to know the projector	1.4
Chassis – lamp, lens and filter	1.4
Lamp-hours meter	1.5
Rear panel – connection and control	1.6
Rigging frame	1.6
<b>2. Installation</b>	<b>2.1</b>
Screen requirements	2.2
Aspect ratio	2.2
Positioning the screen and projector	2.4
Choosing a lens	2.5
Method one: using the lens charts	2.5
Lens charts	2.6
Method two: Choosing a lens by calculation	2.12
Useful lens calculations	2.13
Shifting the image	2.14
Fitting the lens	2.15
Mounting the projector	2.16
Levelling	2.16
Stacking projectors	2.17
Connecting the projector	2.18
Input Formats	2.19
EDID handshaking	2.20
Projector Outputs	2.20
Input connection examples	2.21
Control connection examples	2.22
Power connections	2.23

<b>3. Getting started</b>	<b>3.1</b>
Switching the power on .....	3.2
Using the touch screen .....	3.2
Switching the lamp on .....	3.3
Adjusting the lamp power .....	3.3
Selecting an image source .....	3.4
Adjusting the projected image .....	3.4
Switching the power off .....	3.6
<b>4. Using the Menus</b>	<b>4.1</b>
Introduction .....	4.4
Menu structure .....	4.5
<b>Show mode</b> .....	<b>4.6</b>
Lamp status .....	4.6
Video source .....	4.6
Warnings .....	4.7
Projector status .....	4.7
LCD screen blank .....	4.7
IP addresses .....	4.7
<b>Lamp menu</b> .....	<b>4.8</b>
Lamp power .....	4.8
Lamp on .....	4.8
Lamp off .....	4.8
Shutter open/closed .....	4.8
Lamp/Lens memories .....	4.9
Advanced menu .....	4.9
<b>Lens menu</b> .....	<b>4.10</b>
Shift, zoom and focus .....	4.10
Shutter open/closed .....	4.10
Centre .....	4.10
Calibration .....	4.10
Stop all movement .....	4.10
Test patterns .....	4.11
Lamp/Lens memories .....	4.11
Advanced Lens menu .....	4.11
<b>Image menu</b> .....	<b>4.12</b>
Test Patterns .....	4.12
Shutter open/closed .....	4.13
Contrast .....	4.14
Brightness .....	4.15
Gamma .....	4.16
User Gamma Presets .....	4.17
Advanced Gamma Setup .....	4.17
Advanced image setup .....	4.18
<b>Source menu</b> .....	<b>4.22</b>
Source select .....	4.22
DVI Repeater on/off .....	4.22



- Configuration menu ..... 4.23**
  - Detailed status ..... 4.23
  - Networking configuration ..... 4.24
  - Touchscreen calibration ..... 4.27
  - Reset IP addresses ..... 4.27
- Engineering & Maintenance menu ..... 4.28**
  - Log files ..... 4.28
  - Software update ..... 4.28
- Help menu ..... 4.29**
  
- 5. Maintenance ..... 5.1**
  - Changing the lamp ..... 5.2
    - Lamp-hours meter ..... 5.3
  - Changing the filter ..... 5.5
  - Cleaning the projector and lens ..... 5.6
  
- 6. Appendix ..... 6.1**
  - Troubleshooting ..... 6.2
  - Specifications ..... 6.4
    - Part numbers ..... 6.4
    - Optical ..... 6.4
    - Electrical ..... 6.4
    - Physical ..... 6.5
    - Lens Data ..... 6.6
  - Connections ..... 6.8
    - DVI-D connection ..... 6.8
    - LAN connection ..... 6.9
    - Serial control input ..... 6.10
    - Using Windows Hyperterminal to connect to the projector ..... 6.11
  - Remote communications protocol ..... 6.12
    - Image commands ..... 6.12
    - Lens Commands ..... 6.21
    - PSU Commands ..... 6.23
  - Dimensions ..... 6.25



# 1. Introduction

## Contents

What's in the box? .....	1.2
Key features of the projector .....	1.3
Getting to know the projector .....	1.4
Chassis – lamp, lens and filter .....	1.4
Lamp-hours meter .....	1.5
Rear panel – connection and control .....	1.6
Rigging frame .....	1.6

## What's in the box?

- Make sure your box contains everything listed. If any pieces are missing, contact your dealer.
- You should save the original box and packing materials, in case you ever need to ship your Projector.




*Projector*  
(USA: 102-061) (Rest of World: 103-398)




*Power cable - USA*  
(LA00098)




*Power cable - Rest of World*  
(LA00097)

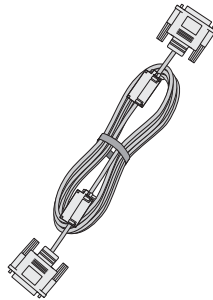

*DVI-D dual link 2metre cable*  
(104-274A)

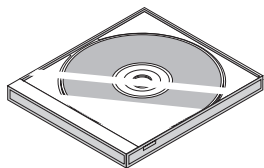

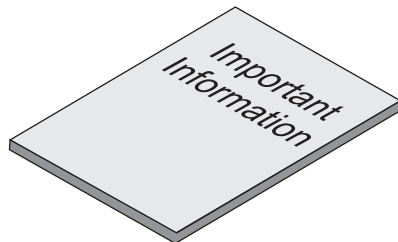

*User manual*  
(104-272A)



*Important Information*  
(104-273A)

### Notes

 *Lenses are optional. Order lenses from your Digital Projection dealer.*

 *For more detailed information about lenses, see **Choosing a lens**, in **Section 2. Installation**.*

## Key features of the projector

**Congratulations on your purchase of the Digital Projection LIGHTNING 35HD projector.**

Digital Projection International, Texas Instruments' first DLP™ partner and the original innovator of the 3-chip DLP™ projector, proudly introduces our third-generation LIGHTNING series — the LIGHTNING 35HD. Incredibly bright, high resolution and high in contrast, the 35HD offers a radically new electronics configuration ideally suited for the staging and large-venue permanent installation markets.

The LIGHTNING 35HD harnesses the power of Texas Instruments' new 2048 x 1080 pixel HPO DMD's™. Like its LIGHTNING predecessors, the 35HD is destined to be the first choice of professionals who stage prestigious events such as the Grammy® Awards and the Oscars®. With contrast of 1600:1 and awe-inspiring lumen capability, the 35HD is unmatched for applications as diverse as world class staged events, commercial entertainment, major outdoor venues, large-scale simulation, gaming and houses of worship.

### Key Features

- High resolution, large venue projector
- Applications: Large Screen; Fixed install and Rental
- 18,000 Centre lumens / 16,000 ANSI lumens ±10%
- Contrast 1600:1 ±10%
- True 2K HD (2048x1080)
- Precision mechanical design ensuring maximum amount of light from lamp housing reaches optics, without any operator adjustment
- 110kg, 3kW single phase
- Compact size, light weight
- Intelligent lens mount with ½ pixel accuracy pre-sets
- Rigging frame with Quick-lock stack system
- Ruggedised robust metal case
- Floating chassis - 3 point pitch & roll adjustment for accurate alignment
- LAN & RS232 connection for network operation
- Single, Dual, or Twin DVI input with loop through for second projector
- 3D capability, using Dual DVI and switched LCD spectacles (not supplied)
- Wi-fi connection for handheld PDA operation (not supplied)
- Touch panel operation for all setup commands
- Browser host for LAN operation



### Notes




*For inputs other than DVI, including analog or digital, composite or component, RGB and S-video, and features such as scaling, soft-edge blend, cross-fade, and user definable geometric warp: use in conjunction with the Digital Projection MMS 1000 multi-media switcher.*


# Getting to know the projector

## Chassis – lamp, lens and filter

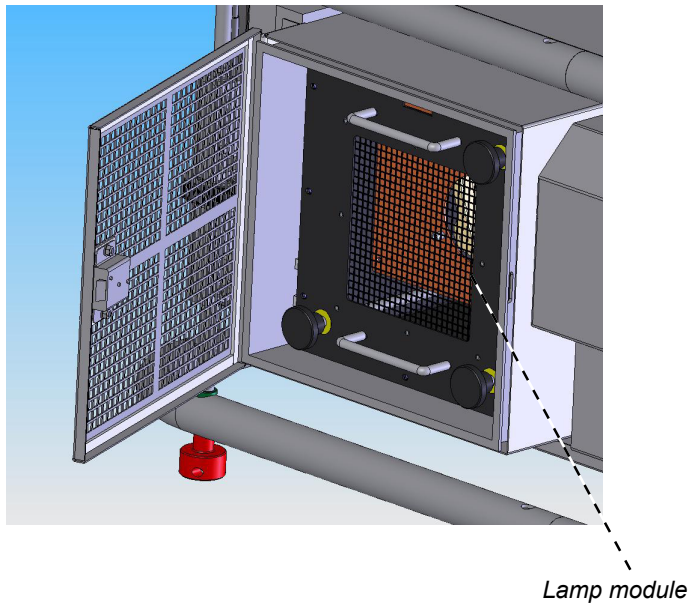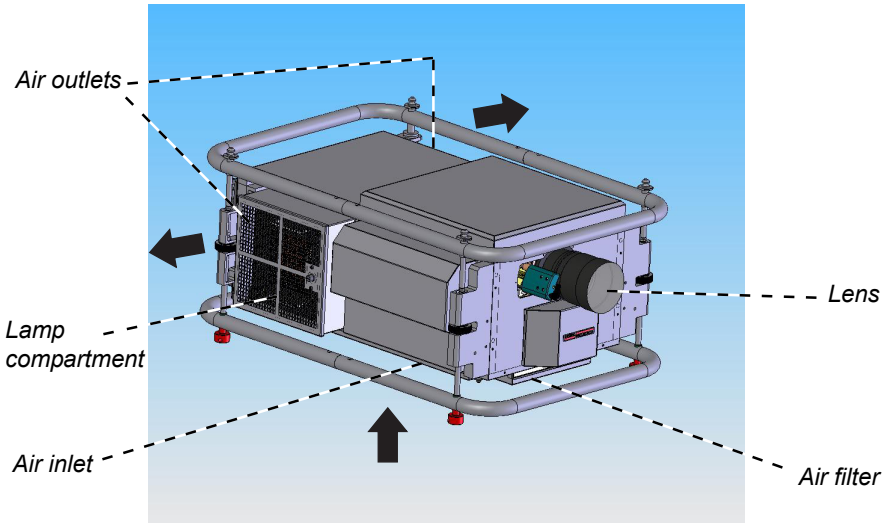


### Notes

 For information about how to change the lamp or the filter, see **section 5. Maintenance**.

 For more detailed information about lenses, see **section 2. Installation**

### Lamp-hours meter

There are two types of Lamp-hours meter, depending on the lamp module that has been fitted, as shown below.

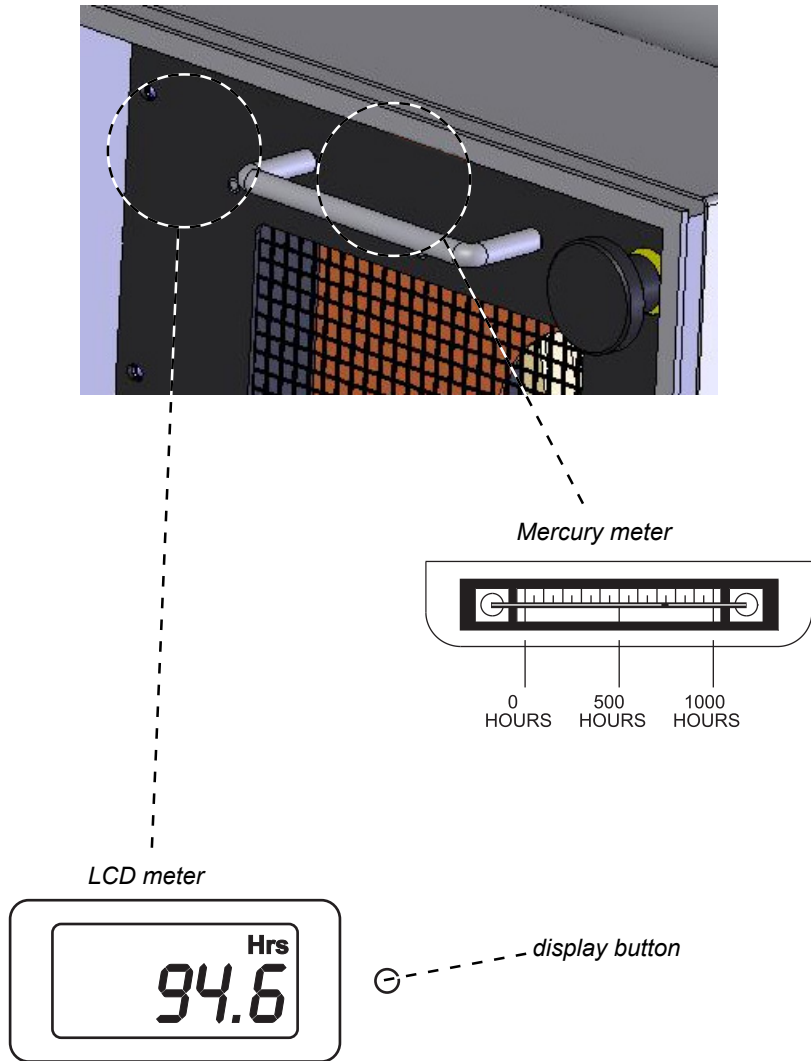


Notes

The LCD Lamp-hours meter has two modes of operation:


- When the lamp is switched on, the LCD will show lamp run hours.
- When the lamp is switched off, the LCD will be blank.

Press the button and hold for 5 seconds to display lamp run hours.


### Rear panel – connection and control

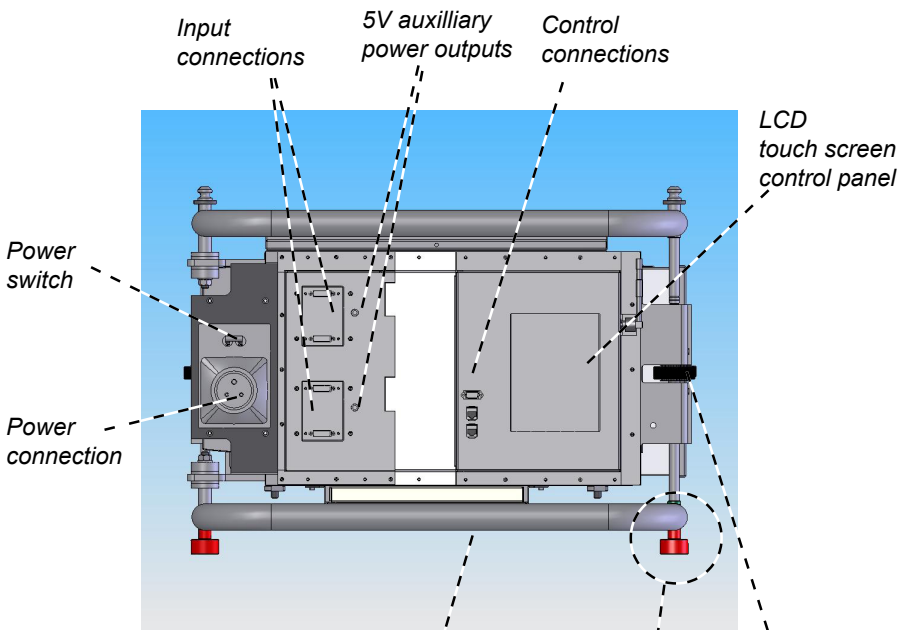

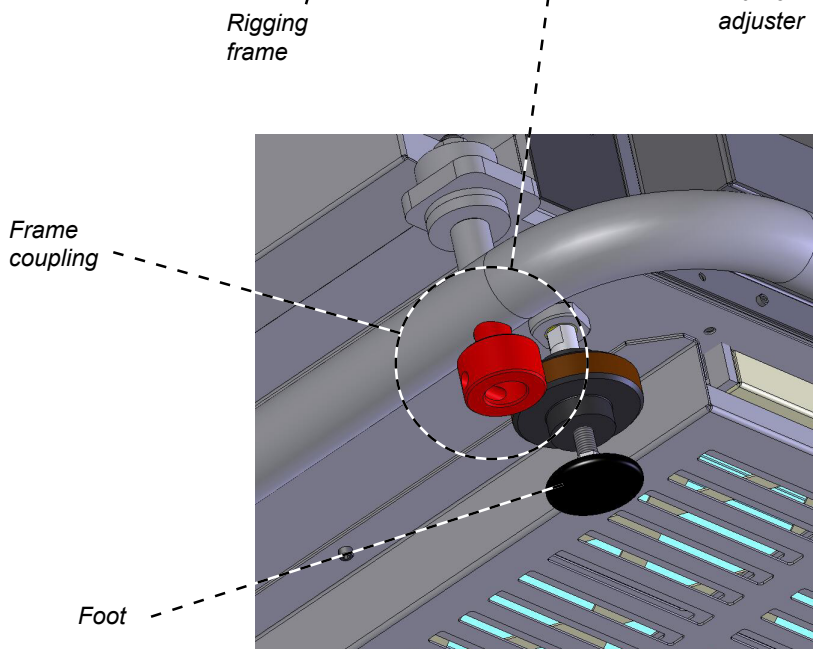

### Rigging frame



### Notes

 For information about how to connect the projector, see **Connecting the projector** in section 2. **Installation**, and **Connections** in section 6. **Appendix**.

 For information about how to use the touch screen control panel, see section 4. **Using the menus**.

 For information about how to mount and stack projectors, see section 2. **Installation**.



# 2. Installation

## Contents


<b>Screen requirements</b> .....	<b>2.2</b>
<b>Aspect ratio</b> .....	<b>2.2</b>
<i>Fitting the image to the DMD</i> .....	2.2
<i>Diagonal screen sizes</i> .....	2.2
<i>Fitting the image to the screen</i> .....	2.3
<b>Positioning the screen and projector</b> .....	<b>2.4</b>
<b>Choosing a lens</b> .....	<b>2.5</b>
<b>Method one: using the lens charts</b> .....	<b>2.5</b>
<b>Lens charts</b> .....	<b>2.6</b>
<i>Full width image, including native resolution 2048x1080, and 2.35:1</i> .....	2.6
<i>16:9 full height image</i> .....	2.7
<i>4:3 full height image</i> .....	2.8
<i>5:4 full height image</i> .....	2.9
<i>5:4 un-resized image</i> .....	2.10
<i>4:3 un-resized image</i> .....	2.11
<b>Method two: Choosing a lens by calculation</b> .....	<b>2.12</b>
<b>Useful lens calculations</b> .....	<b>2.13</b>
<b>Shifting the image</b> .....	<b>2.14</b>
<b>Fitting the lens</b> .....	<b>2.15</b>
<b>Mounting the projector</b> .....	<b>2.16</b>
<b>Levelling</b> .....	<b>2.16</b>
<i>Coarse frame adjustment</i> .....	2.16
<i>Fine frame adjustment</i> .....	2.16
<i>Chassis adjustment</i> .....	2.16
<b>Stacking projectors</b> .....	<b>2.17</b>
<b>Connecting the projector</b> .....	<b>2.18</b>
<i>Digilink</i> .....	2.18
<b>Input Formats</b> .....	<b>2.19</b>
<i>Single DVI-D</i> .....	2.19
<i>Single DVI-D</i> .....	2.19
<i>Dual DVI-D</i> .....	2.19
<i>Twin Link (Twin Single DVI-D)</i> .....	2.19
<i>Dual Twin (Dual Twin DVI-D)</i> .....	2.19
<b>EDID handshaking</b> .....	<b>2.20</b>
<i>Example: setting up the MMS 1000 multimedia switcher</i> .....	2.20
<b>Projector Outputs</b> .....	<b>2.20</b>
<b>Input connection examples</b> .....	<b>2.21</b>
<b>Control connection examples</b> .....	<b>2.22</b>
<i>LAN connection</i> .....	2.22
<i>Serial connection</i> .....	2.22
<b>Power connections</b> .....	<b>2.23</b>
<i>USA power input</i> .....	2.23
<i>Rest of World power input</i> .....	2.23
<i>Auxilliary Power Output (Stage 2 models only)</i> .....	2.24

# Screen requirements

## Aspect ratio

### Fitting the image to the DMD


If the source image supplied to the projector is smaller than 2048 x 1080 pixels, then the image will not fill the DMD. The following example shows how a number of common formats may be displayed without the use of an external scaling processor.

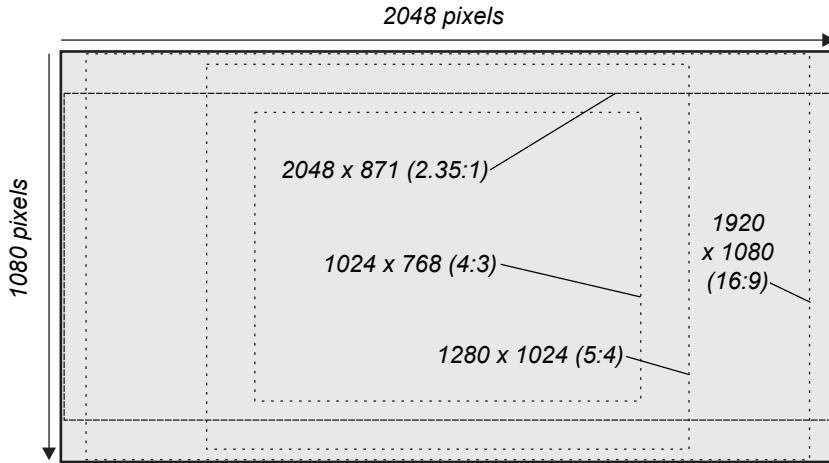

### Diagonal screen sizes

Screen sizes are sometimes specified by their diagonal size (D) in inches. When dealing with large screens and projection distances at different aspect ratios, it is more convenient to measure screen width (W) and height (H).

The example calculations below show how to convert diagonal sizes in inches into width and height, at various aspect ratios.

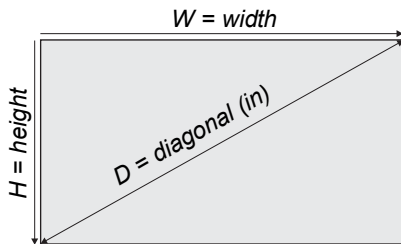

**2.35:1 aspect ratio**

$W = D \times 0.92\text{in}$  (D x .023m)       $H = D \times 0.39\text{in}$       (D x .01m)

**2048x1080, native resolution**

$W = D \times 0.88\text{in}$  (D x .022m)       $H = D \times 0.47\text{in}$       (D x .012m)

**16:9 aspect ratio**

$W = D \times 0.87\text{in}$  (D x .022m)       $H = D \times 0.49\text{in}$       (D x .0125m)

**4:3 aspect ratio**

$W = D \times 0.8\text{in}$  (D x .02m)       $H = D \times 0.6\text{in}$       (D x .015m)

**5:4 aspect ratio**

$W = D \times 0.78\text{in}$  (D x .02m)       $H = D \times 0.625\text{in}$       (D x .016m)

**Notes**


The resolution of the DMD fitted to the projector is 2048 x 1080 pixels.

*This projector does not perform any image processing - the MMS 1000 is recommended for this purpose.*

**Fitting the image to the screen**

It is important that your screen is of sufficient height and width to display images at all the aspect ratios you are planning to use.

Use the conversion chart, or the sample calculations below to check that you are able to display the full image on your screen. If you have insufficient height or width, you will have to reduce the overall image size in order to display the full image on your screen.

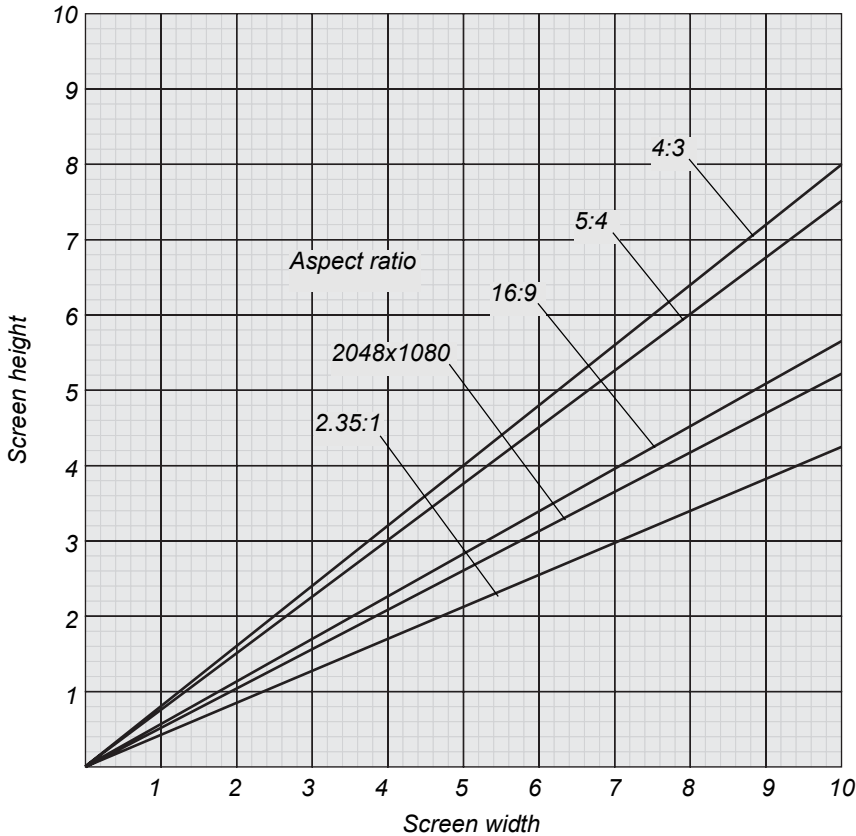

**2.35:1 aspect ratio**

$W = H \times 2.35$     $H = W \times 0.426$

**2048x1080, native resolution**

$W = H \times 1.896$     $H = W \times 0.527$

**16:9 aspect ratio**

$W = H \times 1.777$     $H = W \times 0.562$

**4:3 aspect ratio**

$W = H \times 1.333$     $H = W \times 0.75$

**5:4 aspect ratio**



$W = H \times 1.25$     $H = W \times 0.8$

**Notes**

### Positioning the screen and projector

For optimum viewing, the screen should be a flat surface perpendicular to the floor. The bottom of the screen should be 1.2m (4 feet) above the floor and the front row of the audience should not have to look up more than 30° to see the top of the screen.

The distance between the front row of the audience and the screen should be at least twice the screen height and the distance between the back row and the screen should be a maximum of 8 times the screen height. The screen viewing area should be within a 60° range from the face of the screen.

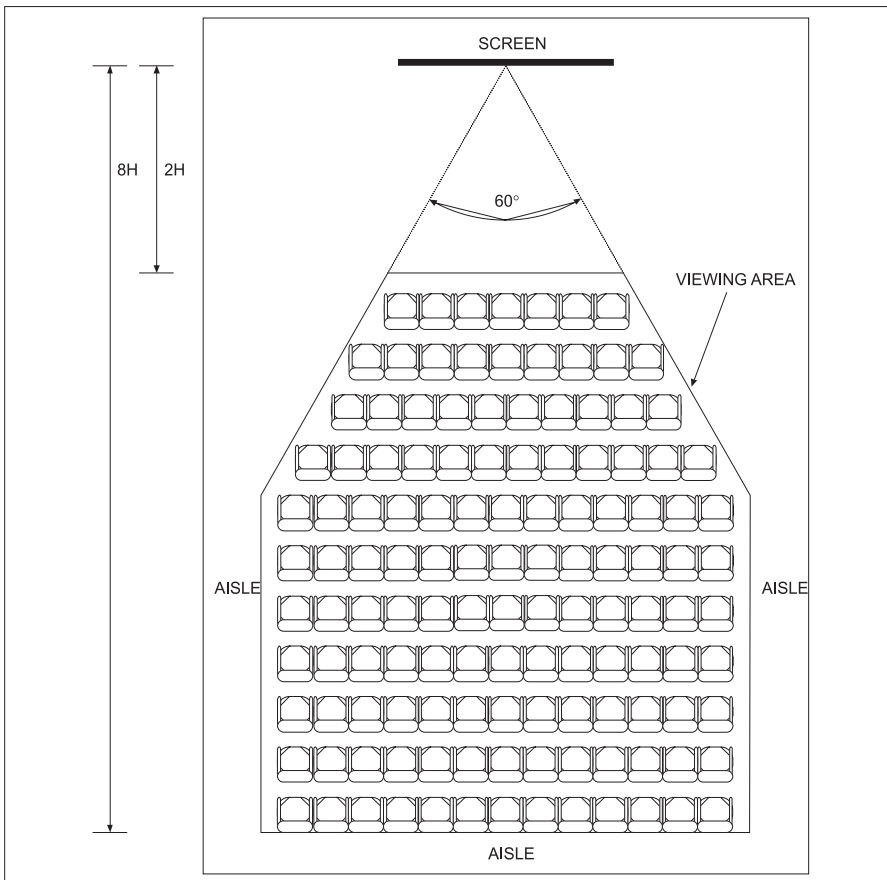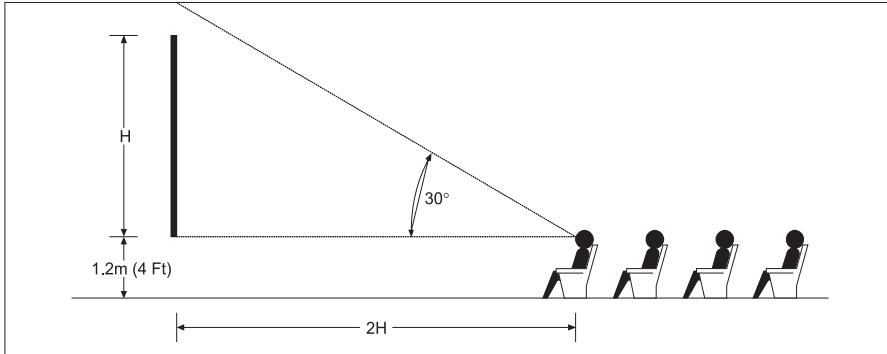

#### Notes



**The projector should be installed as close to the power outlet as possible.**

**The power connection should be easily accessible, so that it can be disconnected in an emergency.**

**Ensure that there is at least 30cm (12in) of space between the ventilation outlets and any wall, and 10cm (4in) on all other sides.**

**Do not install the projector close to anything that might be affected by its operational heat, for instance, polystyrene ceiling tiles, curtains etc.**



*The image can be flipped for rear projection (see section 4. Using the menus, Image menu) and displayed without the need for extra mirrors or equipment.*

*However, you must ensure that there is sufficient distance behind the screen for the projector to be correctly located.*

*Rear installation is generally more complicated and advice should be sought from your local dealer before attempting it.*

## Choosing a lens

---

A number of lenses are available for use with the projector. Which lens you choose will depend on the screen size, image aspect ratio and projection distance.

If you are simply connecting the output of a camera or computer directly to the projector, then the image size (in pixels) may well be fixed. If, however, you are using commercially available image processing equipment, such as the Digital Projection MMS 1000, you may be able to resize the image to fit the DMD.

If the image does not fill the full width of the DMD, this effectively increases the throw ratio of the lens. This can be corrected for by applying a Throw ratio factor.

### Method one: using the lens charts

For the screen sizes listed below, use one of the charts on the following pages, to choose a lens.

#### any full width image, including:

- native resolution      2048 x 1080 pixels
- 2.35:1 full width      2048 x 871 pixels

*A Throw ratio factor (TRF) has been applied to the following charts:*

- 16:9 full height**      1920 x 1080 pixels
- 4:3 full height**      1440 x 1080 pixels
- 5:4 full height**      1350 x 1080 pixels
- 4:3 unresized**      1024 x 768 pixels
- 5:4 unresized**      1280 x 1024 pixels

### Method two: by calculation

See the calculations, on the page immediately following the lens charts.


#### Notes



*For more information about Throw ratio factor (TRF), see **Useful lens calculations**, later in this section.*

**Lens charts**

**Full width image, including native resolution 2048x1080, and 2.35:1**

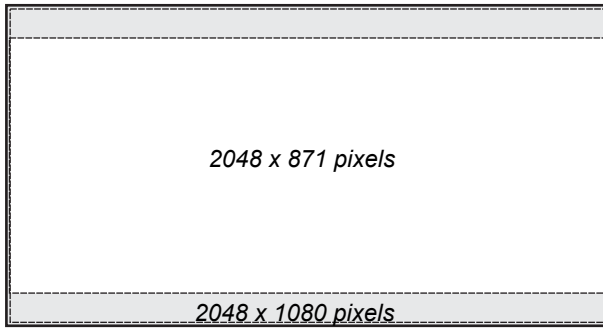


Use the chart below to choose which lens best suits your application.

**example**

- For a screen width of 25m at a distance of 33m, the 1.25 - 1.45: 1 zoom lens would be best suited.
- For the same screen size at a distance of 40m, the 1.45 - 1.8: 1 lens would be best suited.

if you need to be more precise, then use the calculations on page 5.

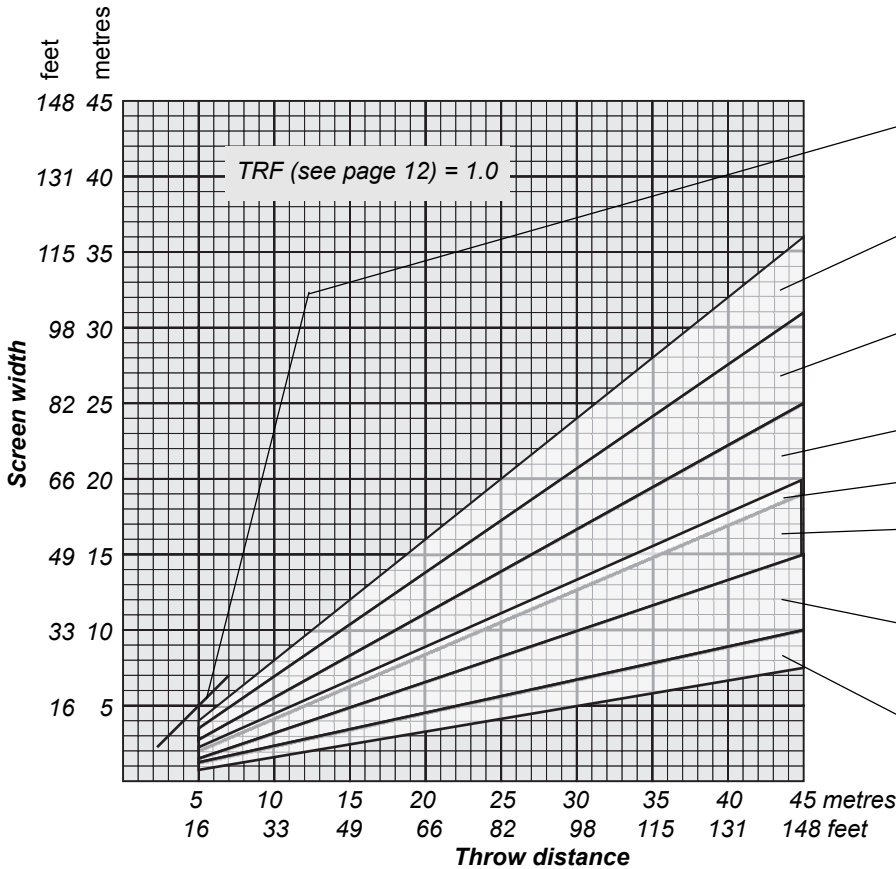


The lenses available and their part numbers are listed below:

- 1.0: 1 fixed lens** 103-350
- 1.25 - 1.45: 1 zoom lens** 103-351
- 1.45 - 1.8: 1 zoom lens** 102-451
- 1.8 - 2.4: 1 zoom lens** 102-676
- (note: these two lenses overlap)
- 2.2 - 3.0: 1 zoom lens** 102-677
- 3.0 - 4.3: 1 zoom lens** 102-678
- 4.3 - 6.0: 1 zoom lens** 104-189


Lens charts, continued

**16:9 full height image**

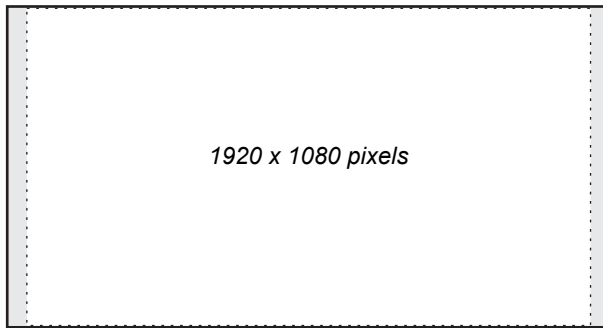

Use the chart below to choose which lens best suits your application.

if you need to be more precise, then use the calculations on page 5:

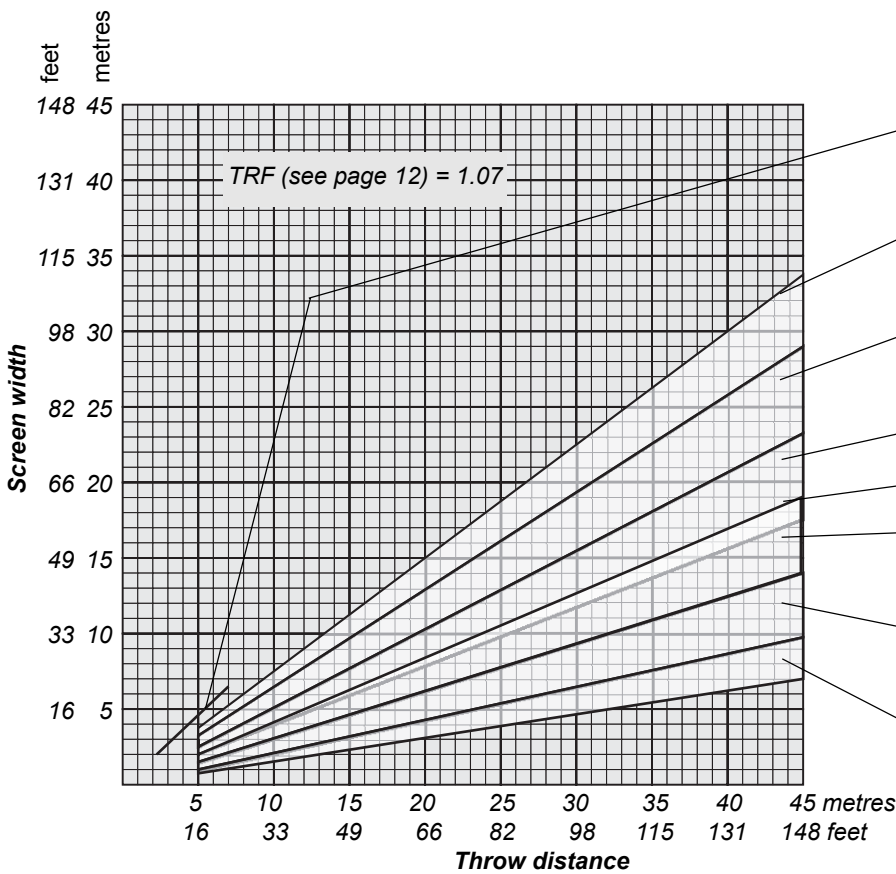


**Notes**

The lenses available and their part numbers are listed below:


- 1.0: 1 fixed lens** 103-350
- 1.25 - 1.45: 1 zoom lens** 103-351
- 1.45 - 1.8: 1 zoom lens** 102-451
- 1.8 - 2.4: 1 zoom lens** 102-676
- (note: these two lenses overlap)
- 2.2 - 3.0: 1 zoom lens** 102-677
- 3.0 - 4.3: 1 zoom lens** 102-678
- 4.3 - 6.0: 1 zoom lens** 104-189

Lens charts, continued

**4:3 full height image**

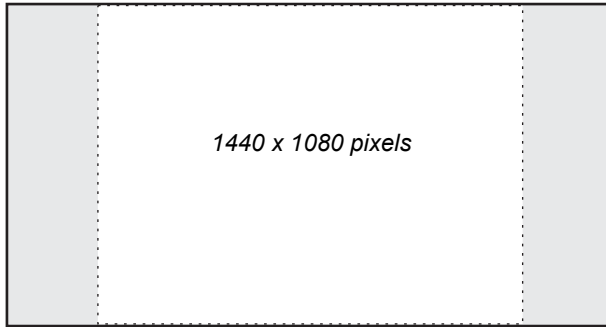

Use the chart below to choose which lens best suits your application.  
 if you need to be more precise, then use the calculations on page 5:

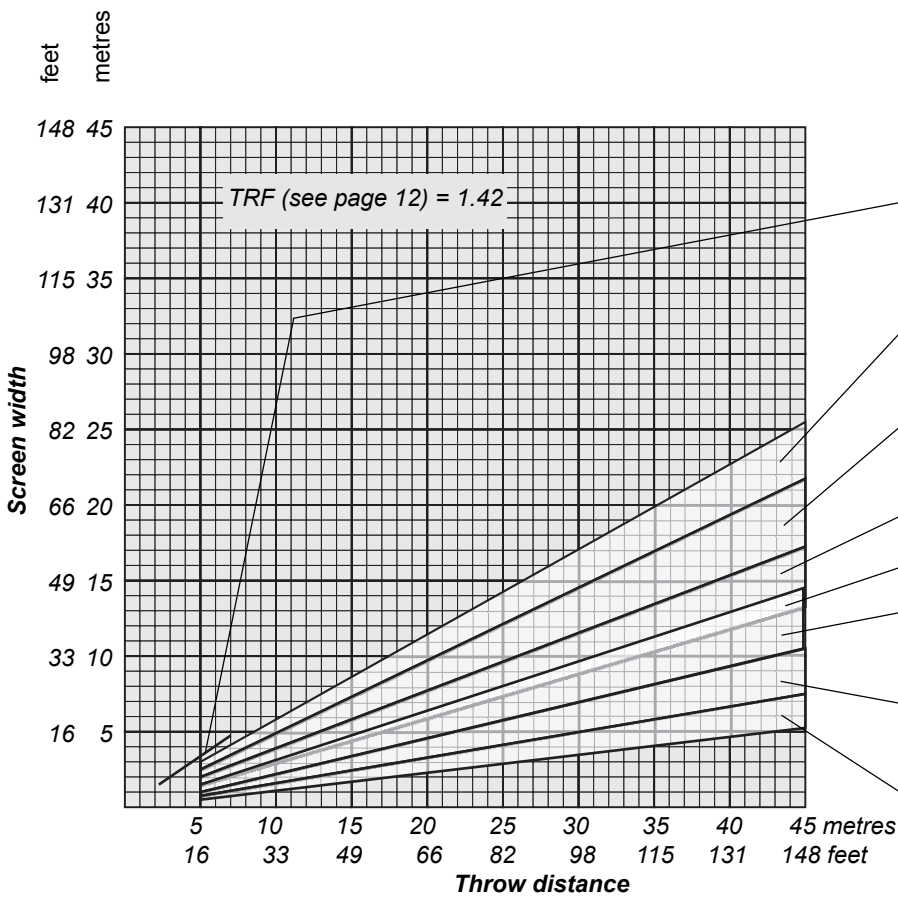

**Notes**


The lenses available and their part numbers are listed below:

- 1.0: 1 fixed lens** 103-350
- 1.25 - 1.45: 1 zoom lens** 103-351
- 1.45 - 1.8: 1 zoom lens** 102-451
- 1.8 - 2.4: 1 zoom lens** 102-676
- (note: these two lenses overlap)*
- 2.2 - 3.0: 1 zoom lens** 102-677
- 3.0 - 4.3: 1 zoom lens** 102-678
- 4.3 - 6.0: 1 zoom lens** 104-189




Lens charts, continued

**5:4 full height image**

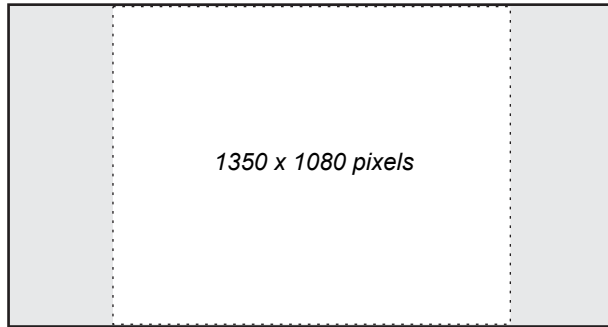

Use the chart below to choose which lens best suits your application.  
 if you need to be more precise, then use the calculations on page 5:

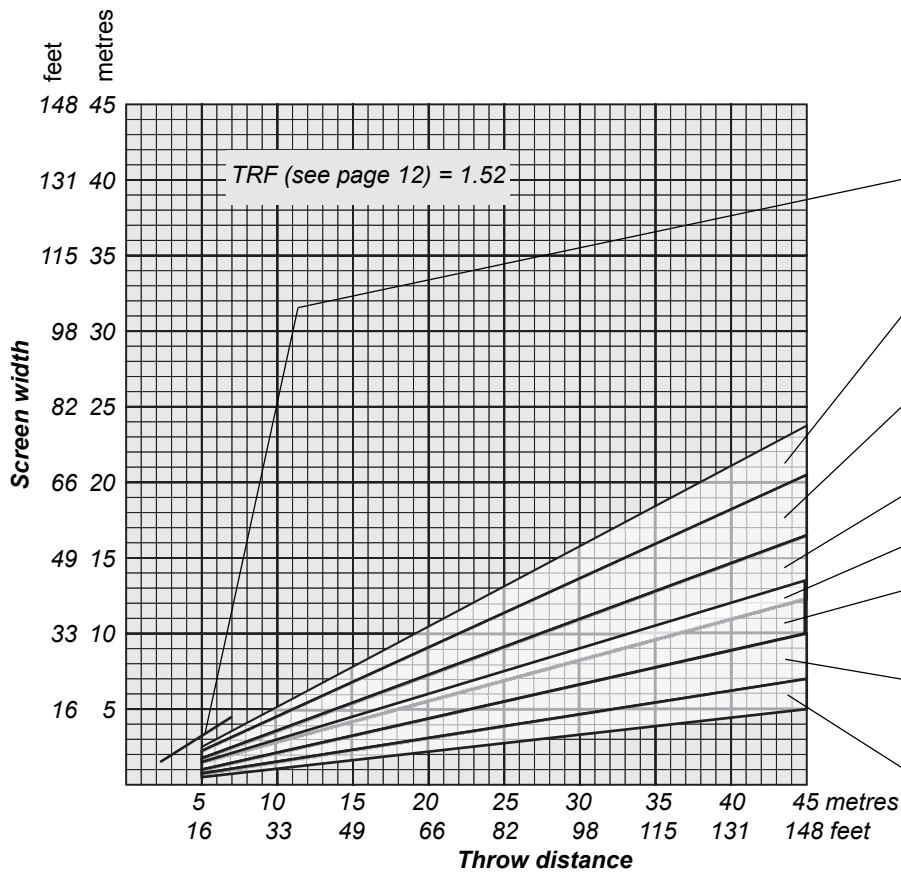


**Notes**

The lenses available and their part numbers are listed below:

<b>1.0: 1 fixed lens</b>	103-350
<b>1.25 - 1.45: 1 zoom lens</b>	103-351
<b>1.45 - 1.8: 1 zoom lens</b>	102-451
<b>1.8 - 2.4: 1 zoom lens</b>	102-676
<i>(note: these two lenses overlap)</i>	
<b>2.2 - 3.0: 1 zoom lens</b>	102-677
<b>3.0 - 4.3: 1 zoom lens</b>	102-678
<b>4.3 - 6.0: 1 zoom lens</b>	104-189


Lens charts, continued

5:4 un-resized image

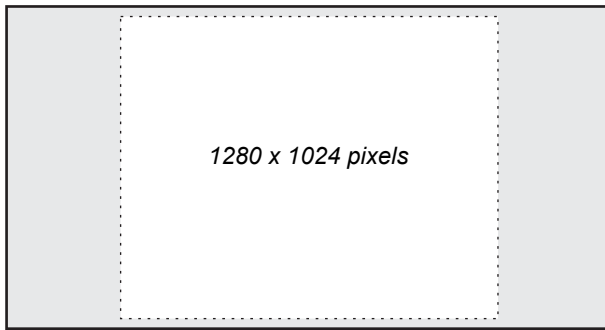

Use the chart below to choose which lens best suits your application.

if you need to be more precise, then use the calculations on page 5:

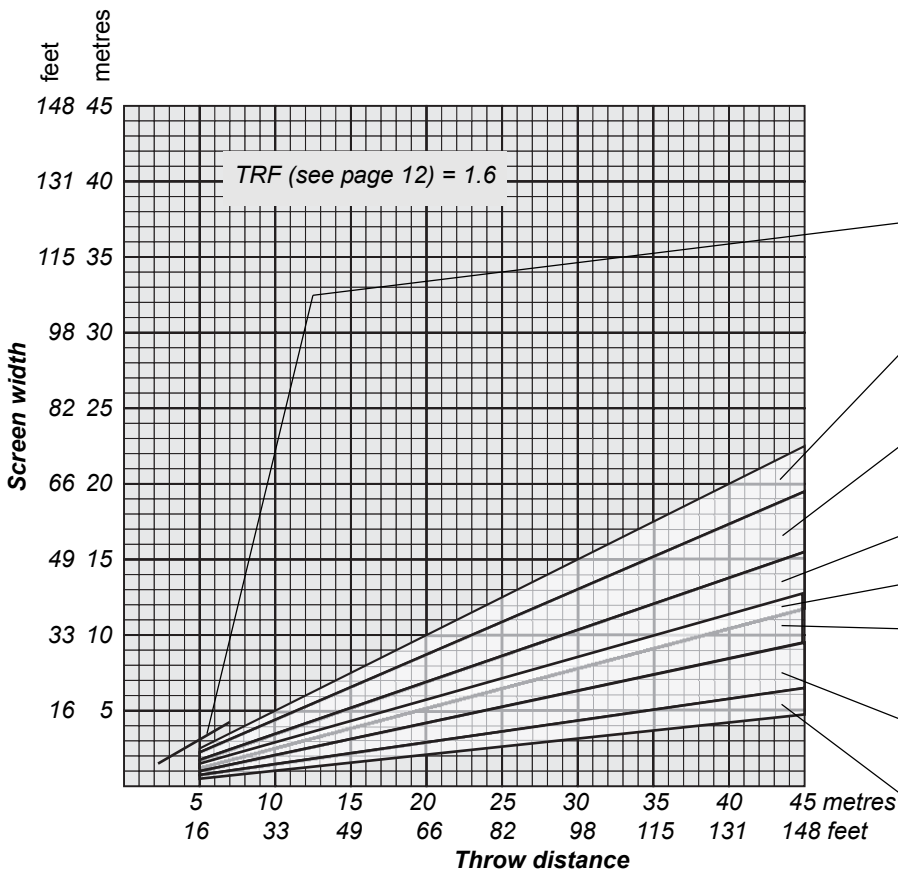


Notes

The lenses available and their part numbers are listed below:

- 1.0: 1 fixed lens      103-350
- 1.25 - 1.45: 1 zoom lens      103-351
- 1.45 - 1.8: 1 zoom lens      102-451
- 1.8 - 2.4: 1 zoom lens      102-676
- (note: these two lenses overlap)
- 2.2 - 3.0: 1 zoom lens      102-677
- 3.0 - 4.3: 1 zoom lens      102-678
- 4.3 - 6.0: 1 zoom lens      104-189


Lens charts, continued

**4:3 un-resized image**

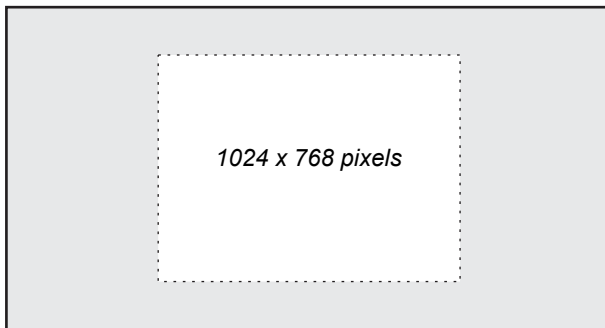

Use the chart below to choose which lens best suits your application.

if you need to be more precise, then use the calculations on page 5:

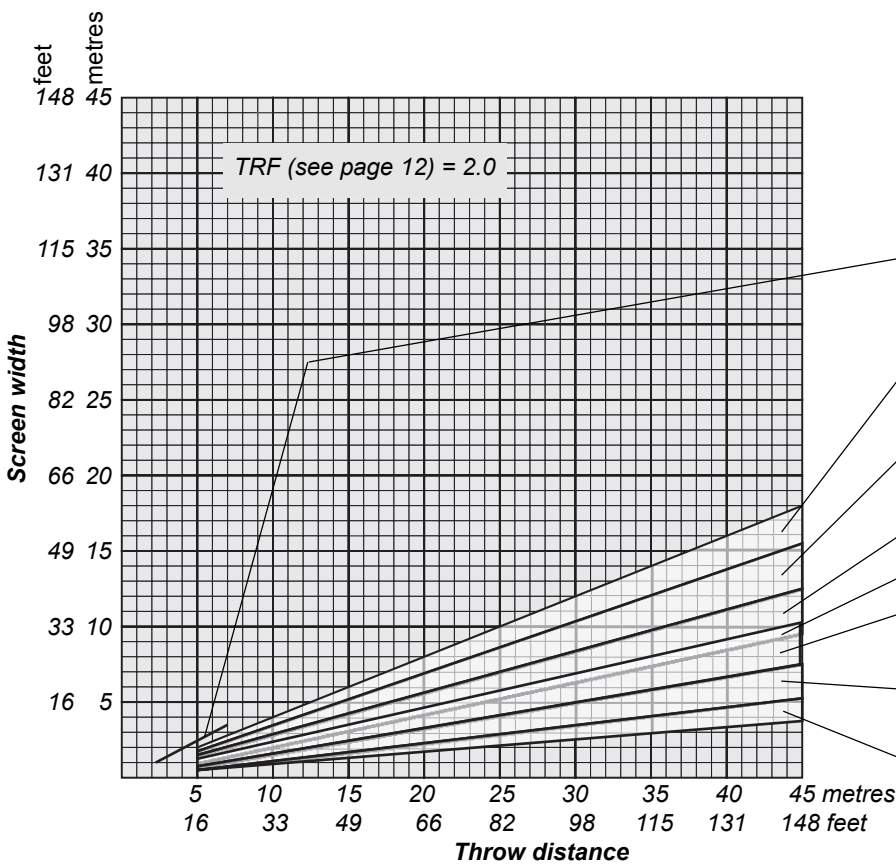

**Notes**

The lenses available and their part numbers are listed below:

- 1.0: 1 fixed lens** 103-350
- 1.25 - 1.45: 1 zoom lens** 103-351
- 1.45 - 1.8: 1 zoom lens** 102-451
- 1.8 - 2.4: 1 zoom lens** 102-676  
(note: these two lenses overlap)
- 2.2 - 3.0: 1 zoom lens** 102-677
- 3.0 - 4.3: 1 zoom lens** 102-678
- 4.3 - 6.0: 1 zoom lens** 104-189

**Method two: Choosing a lens by calculation**

For any screen size not listed above, or if you need to be more precise, then use the calculations below.

- Identify actual width of the image in pixels.
- Calculate the Throw Ratio Factor:  $TRF = \frac{DMD\ width\ (2048)}{Image\ width\ in\ pixels}$
- Identify the screen width required.
- Identify the throw distance required.


*Throw distance calculations are based on the distance from the outer end of the lens, which will vary from lens to lens. Once a lens has been chosen, the figures can be checked using the more accurate figures given on the next page.*

- Calculate the throw ratio required.  $Throw\ ratio = \frac{Throw\ distance}{Screen\ width \times TRF}$
- Choose a lens with the required throw ratio from the list to the right.


**example**

- An unresized image, 1280 x 1024 pixels, screen width 11m, throw distance 26m from the outer end of the lens.
- Throw Ratio Factor (TRF) =  $\frac{2048}{1280} = 1.6$
- Throw ratio required =  $\frac{26}{11 \times 1.6} = 1.48$
- Choose the **1.45 - 1.8: 1 zoom lens** (102-676)

**Notes**

 The Throw ratio for a particular lens is fixed, but assumes that the image fills the width of the DMD.

*For images that do not fill the width of the DMD, the Throw ratio is effectively increased. To correct for this in these calculations, a Throw Ratio Factor (TRF) is used.*

 The lenses available and their part numbers are listed below:

<b>1.0: 1 fixed lens</b>	103-350
<b>1.25 - 1.45: 1 zoom lens</b>	103-351
<b>1.45 - 1.8: 1 zoom lens</b>	102-451
<b>1.8 - 2.4: 1 zoom lens</b>	102-676
<i>(note: these two lenses overlap)</i>	
<b>2.2 - 3.0: 1 zoom lens</b>	102-677
<b>3.0 - 4.3: 1 zoom lens</b>	102-678
<b>4.3 - 6.0: 1 zoom lens</b>	104-189

## Useful lens calculations

The following lens calculations may be useful:

$$\text{Throw ratio} = \frac{\text{Throw distance}}{\text{Screen width}}$$

$$\text{Throw ratio factor (TRF)} = \frac{\text{DMD width in pixels}}{\text{image width in pixels}} = \frac{2048}{\text{image width in pixels}}$$


Therefore:

$$\text{Screen width} = \frac{\text{Throw distance (from outer end of lens)}}{\text{Throw ratio} \times \text{TRF}}$$


$$\text{Throw distance} = \text{Screen width} \times \text{Throw ratio} \times \text{TRF}$$

The throw distance calculated above is to the outer end of the lens. For each lens, the nominal distance between the front of the projector and the outer end of the lens (lens extension) will be as listed below:


		<i>lens extension</i>
<b>1.0: 1 fixed lens</b>	103-350	185mm (7.3in)
<b>1.25 - 1.45: 1 zoom lens</b>	103-351	161mm (6.3in)
<b>1.45 - 1.8: 1 zoom lens</b>	102-451	109mm (4.3in)
<b>1.8 - 2.4: 1 zoom lens</b>	102-676	97mm (3.8in)
<b>2.2 - 3.0: 1 zoom lens</b>	102-677	53mm (2.1in)
<b>3.0 - 4.3: 1 zoom lens</b>	102-678	98mm (3.9in)
<b>4.3 - 6.0: 1 zoom lens</b>	104-189	170mm (6.7in)

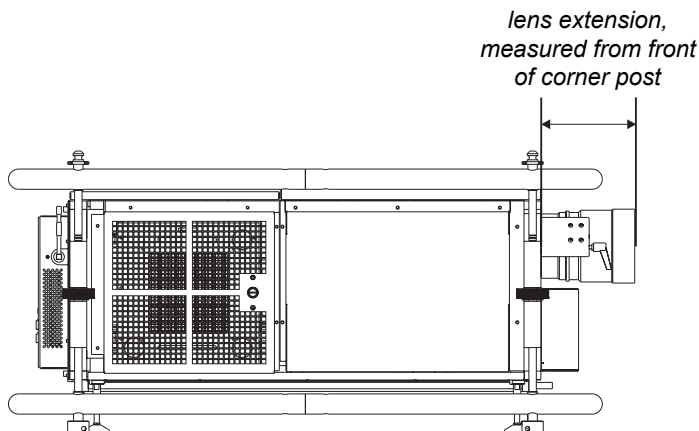

### Notes


 The Throw ratio for a particular lens is fixed, but assumes that the image fills the width of the DMD.

For images that do not fill the width of the DMD, the Throw ratio is effectively increased. To correct for this in these calculations, a Throw Ratio Factor (TRF) is used.

 Lens extension is measured when the lens is focussed at infinity, and fully extended. At other focus settings, the extension could be up to 10mm less

## Shifting the image

The normal position for the projector is at the centre of the screen. However, you can set the projector above or below the centre, or to one side, and adjust the image using the **Lens shift** feature to maintain a geometrically correct image.

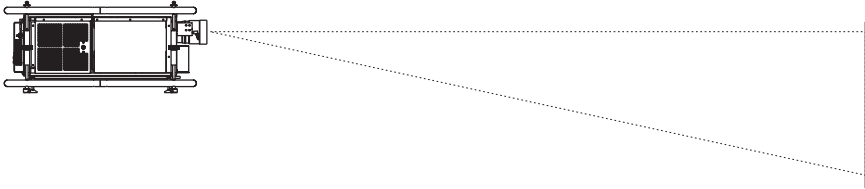

- Any single adjustment outside the ranges specified below may result in an unacceptable level of distortion, particularly at the corners of the image, due to the image passing through the periphery of the lens optics.
- If the lens is to be shifted in two directions combined, the maximum range without distortion will be somewhat less, as can be seen in the diagrams to the right.

The maximum range available with no distortion is dependent on which lens is used. The tables below show the maximum range for images that fill the DMD. For images which do not use the full height or width, extra shift will be possible, up to the limit of the lens mount movement.

### 1.0 :1 fixed lens (103-350)

vertical (pixels)	horizontal (pixels)	vertical (vs DMD height)	horizontal (vs DMD width)
± 400	± 256	± 0.37H	± 0.125W

### 1.25 - 1.45 :1 zoom lens (103-351)

vertical (pixels)	horizontal (pixels)	vertical (vs DMD height)	horizontal (vs DMD width)
± 540	± 365	± 0.5H	± 0.178W

- 1.45 - 1.8 :1 zoom lens (102-451)
- 1.8 - 2.4 :1 zoom lens (102-676)
- 2.2 - 3.0 :1 zoom lens (102-677)
- 3.0 - 4.3 :1 zoom lens (102-678)
- 4.3 - 6.0 :1 zoom lens (104-189)


vertical (pixels)	horizontal (pixels)	vertical (vs DMD height)	horizontal (vs DMD width)
± 282	± 172	± 0.26H	± 0.085W

It is physically possible to shift the lens further than this, up to the number of pixels shown in the diagram to the right. However:

- There will be some distortion of the image beyond the ranges specified above.
- Due to internal hardware layout, the shift towards the upper-right is limited as shown in the diagram.
- Due to continuing product development, these figures may vary by ±25 pixels.

### Notes


- For more information on using the **Lens shift** feature, see **section 4. Using the menus, Lens menu**.
- If the lens is to be shifted in two directions combined, the maximum range is somewhat less, as can be seen below.

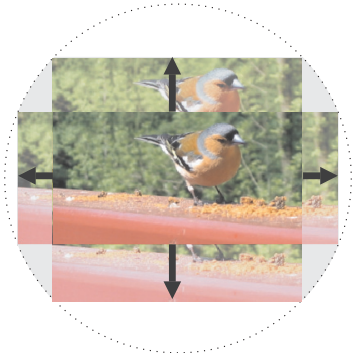

full horizontal and vertical shift without distortion




combined shift without distortion is reduced

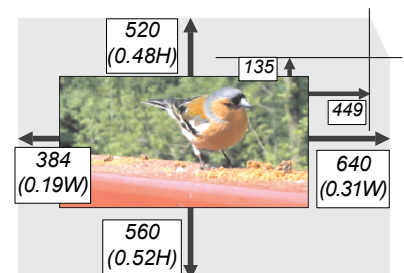


total lens mount shift available in pixels and vs DMD size


## Fitting the lens


- Turn the lens release lever anti-clockwise to open the lock.
- Turn the zoom drive mechanism anti-clockwise to disengage the drive.
- Insert the lens into the lens aperture, making sure that the two notches on the lens engage with the locating tab inside the lens mount.
- Turn the lens release lever clockwise to lock the lens in place. When the lock is fully closed, the lever should feel loose.
- Turn the zoom drive mechanism clockwise to engage the drive.

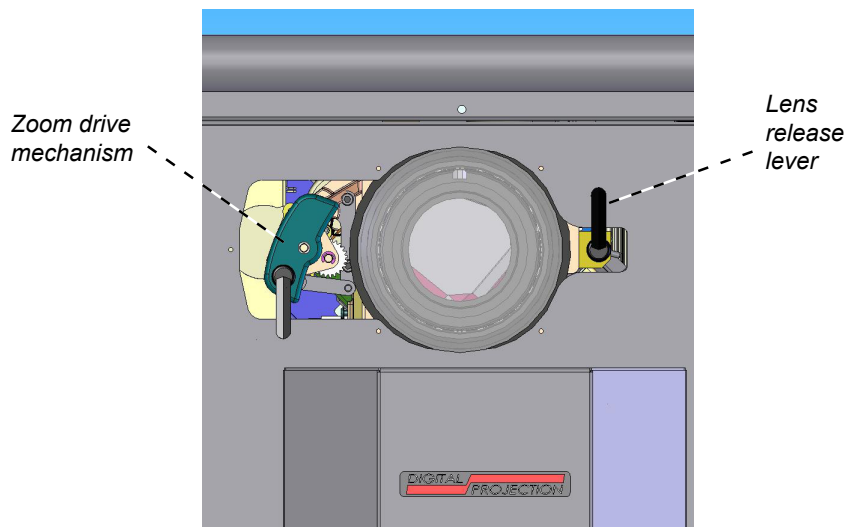

### Notes

 **Each time a new lens is fitted to the projector, the calibration procedure must be carried out. See *Lens menu*, in *Section 4. Using the menus*.**

 *Be careful not to scratch the lens surfaces. If you do accidentally touch a lens, then clean the surface using a lens paper.*

 **The zoom drive mechanism should always be set to the engaged position, even when using the non-zoom lens, as it provides an extra level of protection, should the lens release lever fail.**

## Mounting the projector

The projector is designed to be suspended from a lighting truss by its rigging frame. However, the four adjustable feet under the chassis allow the projector to be lowered onto a flat surface without any danger of hands being trapped between the bottom frame and the surface.

### Levelling

Before suspending the projector, make sure that the three frame adjusters are set roughly midway.


#### Coarse frame adjustment

If the projector is to be suspended by its rigging frame, coarse adjustment of projector level should be made by adjusting the length of the supporting wires or chains, or by adjusting the position of the truss.

#### Fine frame adjustment

Once the initial coarse adjustment has been made, fine adjustment should be made by turning the three frame adjusters on the rigging frame.


The frame adjusters will provide approximately  $\pm 10\text{mm}$  of movement relative to the rear right corner. Centering lines are scribed on the shafts to show the centre of adjustment.

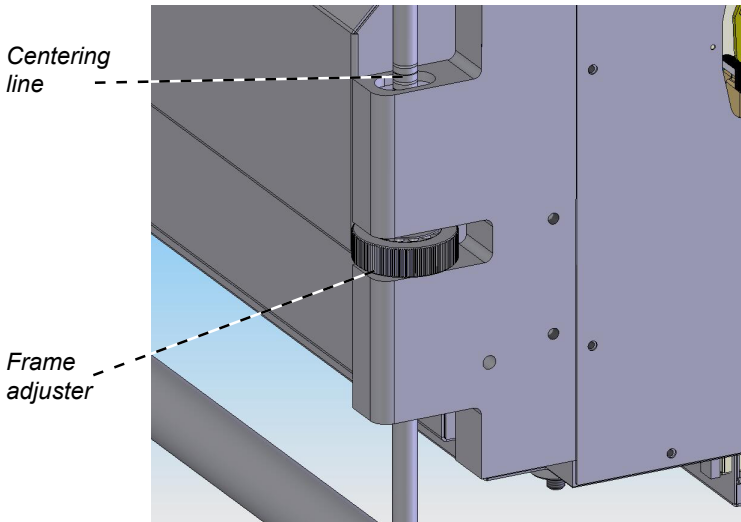



#### Chassis adjustment

If the projector is to be operated from a flat surface such as a projector table, then adjustment of projector level should be made by turning the four feet under the chassis.


### Notes



 **BEFORE INSTALLING THE PROJECTOR, READ ALL THE WARNINGS BELOW AND ALL THOSE IN *IMPORTANT INFORMATION* AT THE FRONT OF THIS MANUAL.**

 **The projector weighs over 100kg (200lbs). Use safe handling techniques when lifting the projector.**

 **Make sure that the surface, ceiling or rigging that is to support the projector is capable of supporting the combined weight of the projector and lens (see specification for weights).**

 **Backup safety chains or wires should always be used.**

 **Do not tilt the projector more than  $\pm 12^\circ$  from side to side when in use, as this may cause serious lamp failure, damage the lamp module and cause extra cost on replacement. The projector may be tilted forwards and backwards as necessary.**

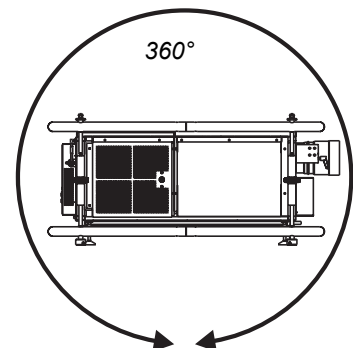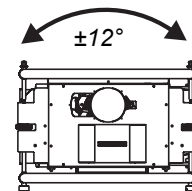





## Stacking projectors


The rigging frame is capable of supporting the weight of up to three other projectors, using the built-in frame couplings. The projectors can be stacked on top of each other, or suspended below each other.


- Carefully lower each projector down onto the top of the others, making sure that all four frame couplings engage fully.
- Fit a locking pin into each coupling. A ball in the end of the pin prevents the pin from falling out – to insert or remove a locking pin, press the button on the t-bar to release the ball.
- Align the images from the projectors, following the instructions in **section 3. Getting started, Adjusting the projected image.**

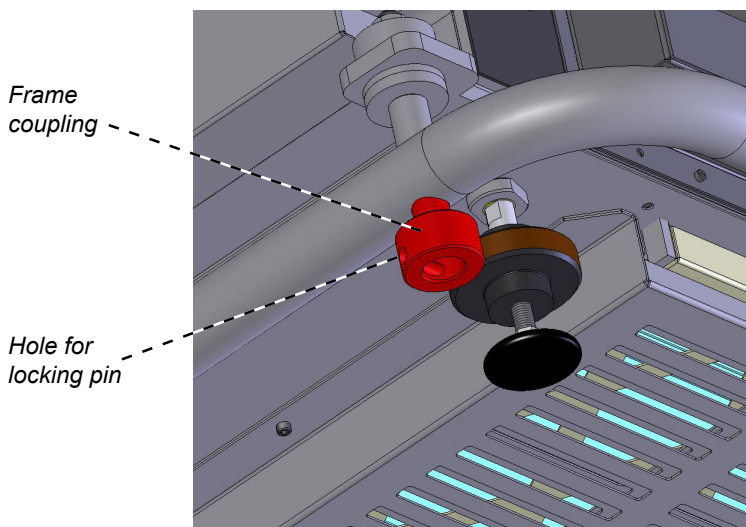


### Notes

 **When stacking projectors, the stack **MUST** be vertical, to ensure that the stresses are distributed to all for frame couplings.**


 **Make sure that the surface, ceiling or rigging that is to support the projector is capable of supporting the combined weight of all the projectors and lenses (see specification for weights).**

 **Do not place heavy objects on top of the projector chassis. Only the rigging frame is capable of withstanding the weight of another projector.**

 **Do not try to stack more than four projectors.**

 **Separate backup safety chains or wires should always be used for each projector.**

## Connecting the projector

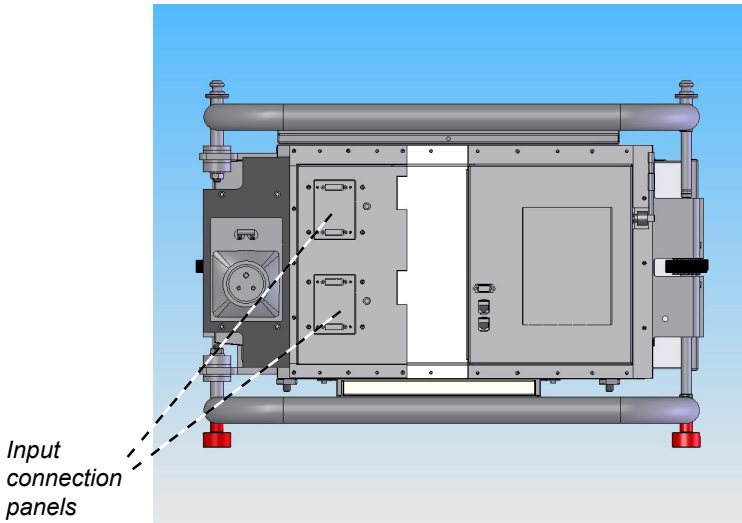


This projector is designed to be the projection head of a projection system enabling the user to use a variety of commercially available image-scaling and processing products including the Digital Projection MMS1000. The processing unit can be located close to source equipment such as computers, video tape players and DVD players etc. Therefore, only the projector needs to be located in the lighting gantry.


Only one connection is required between the processing equipment and head. For short distances, a regular DVI-D cable may be used, but for distances greater than 5 metres the **DigiLink** high bandwidth optical connection system is recommended.

### Digilink

The **DigiLink** system is fully compatible with DVI-D, but uses optical fibre to transmit the RGB and clock signals, and copper wires to transmit the DDC signal and 5V power line. These are all integrated into a single cable. DigiLink allows cable lengths up to 100m to be used with the added benefit of reduced picture interference.

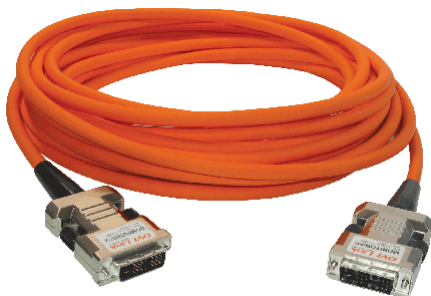

### Notes

 *This projector does not include any image-scaling or processing functions. Sources presented to the projector can only be mapped pixel for pixel to the display.*

*More information about selecting (blanking) and positioning of the image can be found in **section 4. Using the menus.***

## Input Formats

### **Stage 1 model:**

#### **Single DVI-D**

A single input is available.

#### **A IN**

Sources upto 2048x1080 resolution @ 24- 60Hz and 8bits per colour.

### **Stage 2 model:**

#### **Single DVI-D**

Up to two selectable inputs are possible.

#### **A IN or B IN**

Sources upto 2048x1080 resolution @ 24- 60Hz and 8bits per colour.

#### **Dual DVI-D**

Up to two selectable inputs are possible.

#### **A IN or B IN**

Sources upto 2048x1080 resolution @ 24-96Hz and 8bits per colour.

#### **Twin Link (Twin Single DVI-D)**

A single input using both Input A and Input B together.

#### **A IN AND B IN**

Sources up to 2048x1080 resolution @ 24-60Hz and increased bit depth, ie 10 or 12bits per colour.

#### **Dual Twin (Dual Twin DVI-D)**

A single input using both Input A and Input B together.

#### **A IN AND B IN**

Sources up to 2048x1080 resolution @ 24-96Hz and increased bit depth, for example 10 or 12bits per colour.

### Notes



*On earlier models, known as 'Stage 1' models, only Single DVI-D was available.*

*On later models, from 'Stage 2' onwards, Dual, Twin and Dual Twin DVI-D inputs are also available.*

### EDID handshaking

If you are using a computer DVI card or other DVI source that obeys the EDID handshaking protocol, then the card or source will automatically configure itself to suit the projector.

If not, then you should refer to the documentation supplied with the DVI source to manually set the resolution to 2048 x 1080 or the nearest suitable setting.

#### **Example: setting up the MMS 1000 multimedia switcher**

The MMS multimedia switcher does not use EDID protocols, therefore you should use the MMS menus to manually set the output resolution as follows:


- Switcher Options → Page 5 → Output Resolution → 2k x 1k (2048 x 1080)

### Projector Outputs

The LIGHTNING 35HD has loop-through outputs for each input. This enables signals to be passed through to a second projector in a stacking situation.

Ensure that DVI Repeater is ON - see **Source menu**, in **section 4. Using the menus**.




#### **Example**

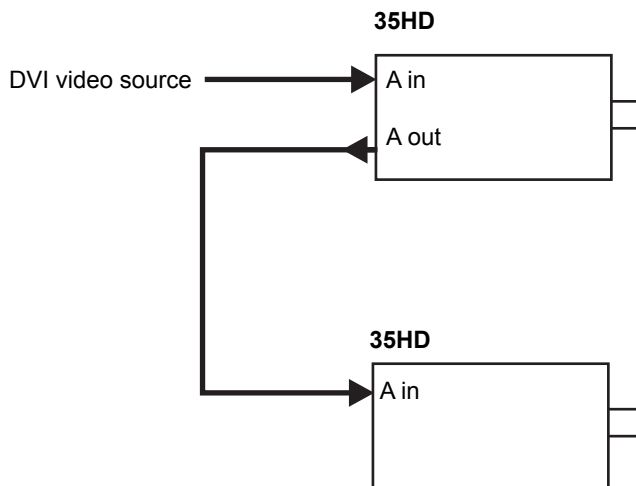


**Notes**


### Input connection examples

#### examples

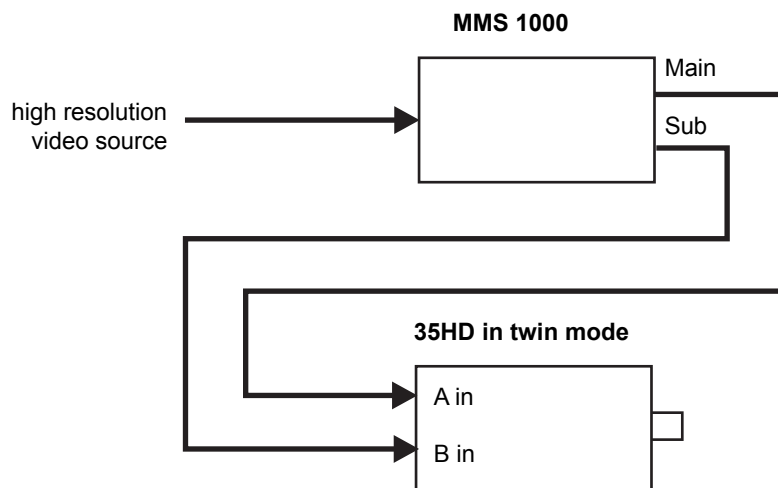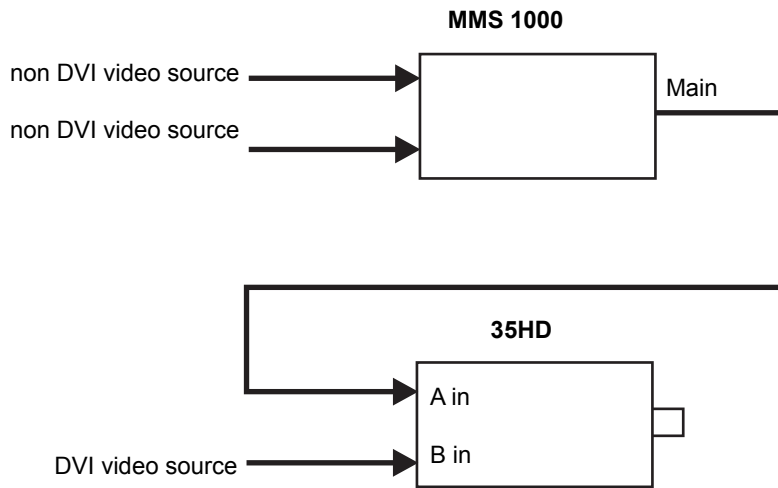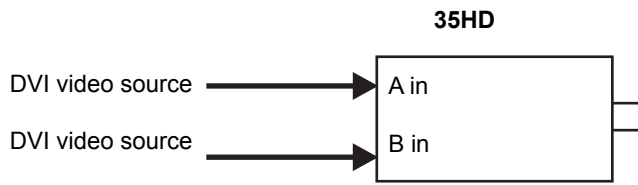

#### Notes




 More information about pin connections can be found in section 6. Appendix.

 Cable complexity and interference can be reduced by using the **Digilink** high bandwidth optical connection system. Contact your dealer for more information.


### Control connection examples


#### LAN connection


All of the projector's features can be controlled via a LAN connection, using a standard internet browser package such as Internet Explorer.

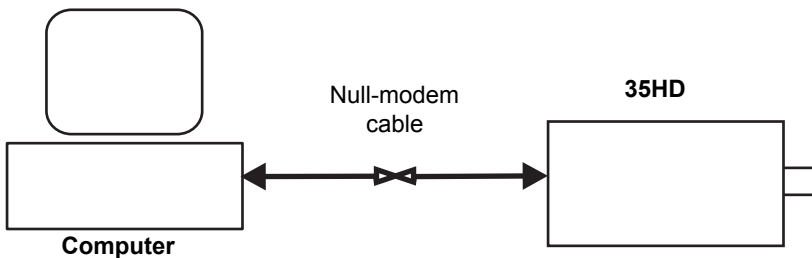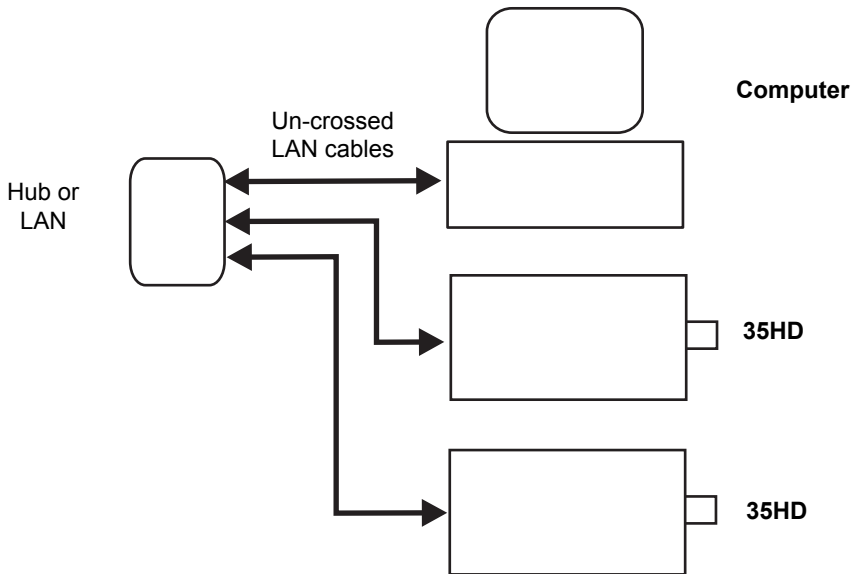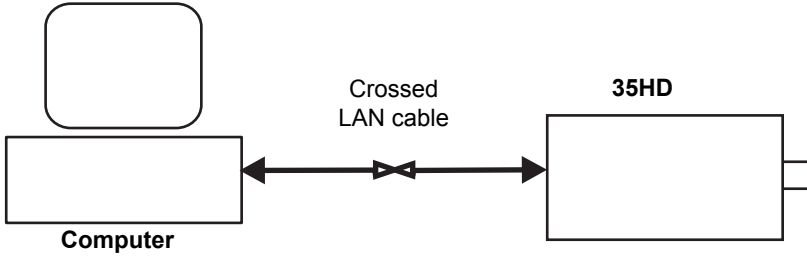

#### Notes

 More information about pin connections can be found in **section 6. Appendix.**

 More information about using a browser to control the projector can be found in **section 4. Using the menus.**


 More information about pin connections and control codes can be found in **section 6. Appendix.**

### Power connections

#### *USA power input*

Make sure the main power switch is off before connecting the power cable.


Firmly push in the **Hubbell** connector, then turn clockwise to lock.

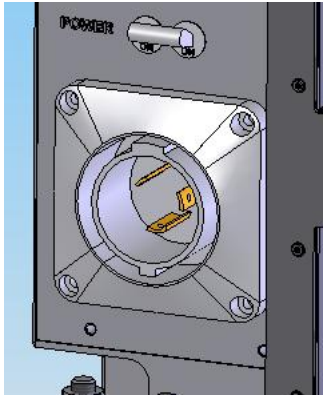

#### *Rest of World power input*

Make sure the main power switch is off before connecting.

Lift the lid of the **C-form** connector then firmly push in the connector.

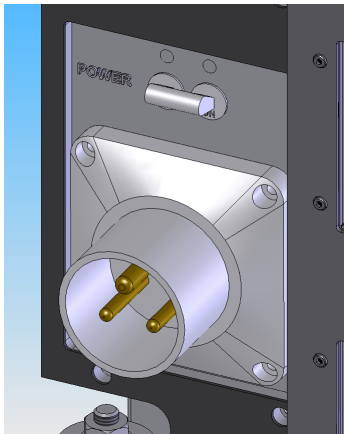

### Notes



**Use only the power cable provided.**




**Ensure that the power outlet includes a Ground connection, as this equipment **MUST** be earthed.**




**Handle the power cable carefully and avoid sharp bends. Do not use a damaged power cable.**

**Auxilliary Power Output (Stage 2 models only)**

Two auxilliary power outputs are available, for powering line drivers etc.

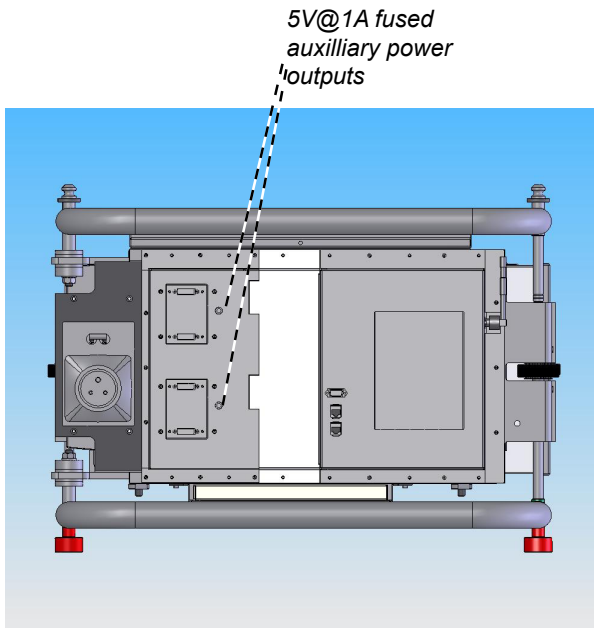

**Notes**

 Should the 5V auxilliary output become overloaded, a resettable fuse will operate. To reset the fuse, disconnect from the auxilliary output for a short period, then reconnect.




# 3. Getting started

## Contents

Switching the power on .....	3.2
Using the touch screen .....	3.2
Switching the lamp on .....	3.3
Adjusting the lamp power .....	3.3
Selecting an image source .....	3.4
Adjusting the projected image .....	3.4
Switching the power off .....	3.6

# Switching the power on

- Connect the power cable between the mains supply and the projector.
- Push the main power switch upwards to switch on the power.
- The projector software will take several seconds to boot up. When the main menu is displayed on the touch screen display, the projector is ready for use.

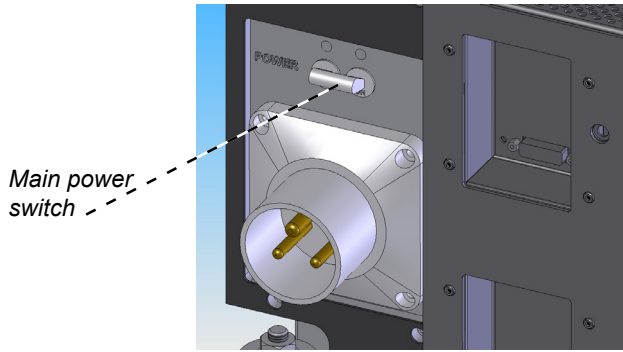


# Using the touch screen

All of the projector's features can be controlled using the touch screen.

The Main Menu is shown below. The eight buttons at the bottom of the screen are visible whenever the projector is switched on. Buttons and controls relating to the Sub Menus will appear above these eight buttons.

Buttons on the touch screen are activated by light short taps using the tip of your finger. Slider controls are activated by gently stroking the surface of the screen.

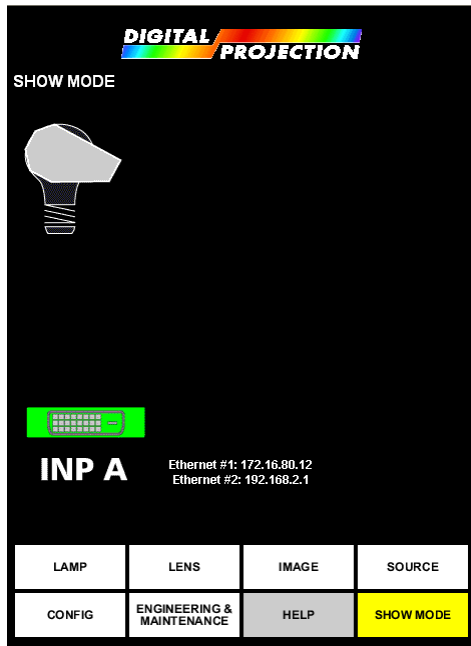

### Notes

For more information about connecting the power cable, see **Power Connections**, in **Section 2. Installation**.

Note that when the projector is switched on, the lamp will be **OFF** until switched **ON** (see next page).

**Do not try to operate the touch screen using anything harder than your finger. This could damage the LCD.**


If you have difficulty getting the touch screen display to respond correctly, then try varying the length and pressure of your finger movements until you have more success.

For more detailed information about all the touch screen menus, see the next section: **Using the menus**.

## Switching the lamp on

- Press the **LAMP** button on the **Main menu**.
- Press the **LAMP ON** button.

The projector will reset momentarily, whilst the lamp strikes. You will not be able to make any further settings until the Main Menu returns.

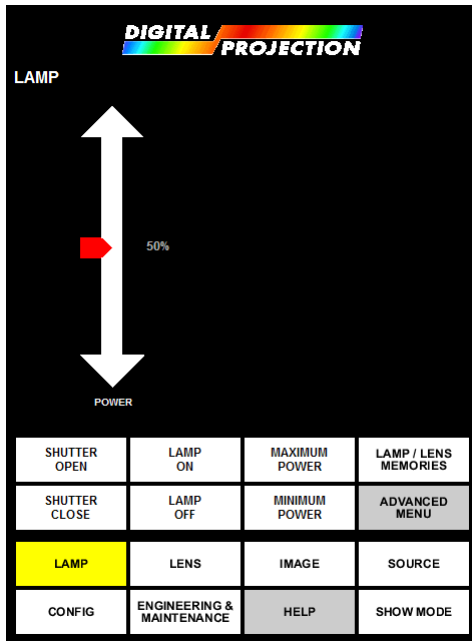

## Adjusting the lamp power


Either:

- Touch and drag the red slider up and down


OR

- for fine adjustment, press either arrow head.

### Notes


 Whenever you switch the lamp on, the projector will reset momentarily, whilst the lamp strikes. This is to protect the control circuitry from the effects of the lamp strike pulse.

Any settings made before you switched the lamp on will be retained.


 For more detailed information about all the touch screen menus, see the next section: **Using the menus.**

## Selecting an image source

- If you have a video source connected, Select Source **A** or Source **B**, and the mode you wish to use.

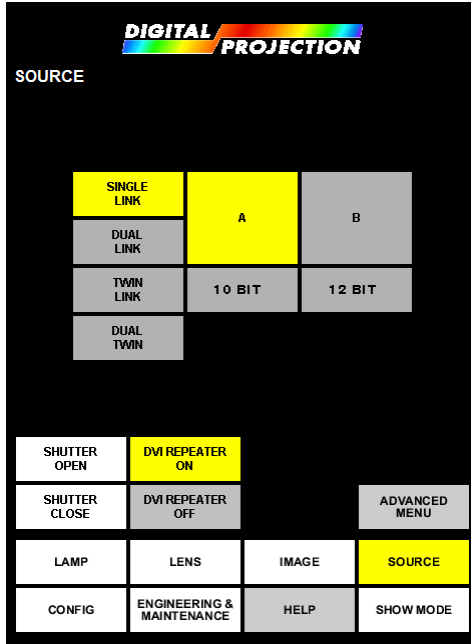


### Notes

 For more detailed information about all the touch screen menus, see the next section: **Using the menus.**

## Adjusting the projected image


If you have no video source connected to the projector, then you can display a test pattern as follows:

- Press the **IMAGE** button on the **Main menu**.
- Select a test pattern.

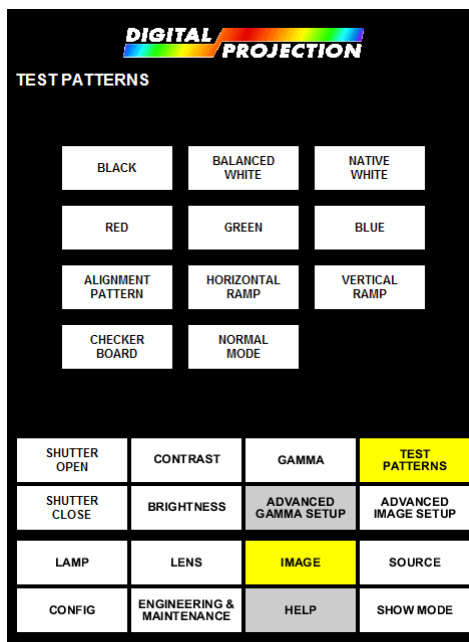


Once you have an image or a test pattern displayed:

- Press the **LENS** button on the **Main menu**:
- To adjust the shift, zoom and focus settings, press the **MOVE**, **ZOOM** and **FOCUS** arrow heads.

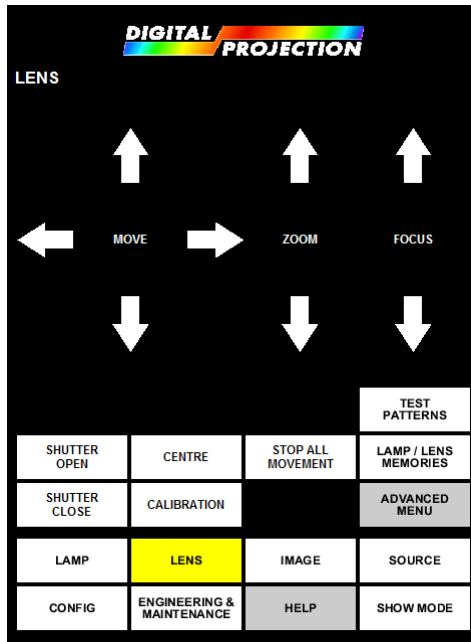

- Press the **IMAGE** button on the **Main menu**.
- Press the **CONTRAST**, **BRIGHTNESS** or **GAMMA** buttons.
- Touch and drag the red sliders up and down, or for fine adjustment, press the arrow heads.

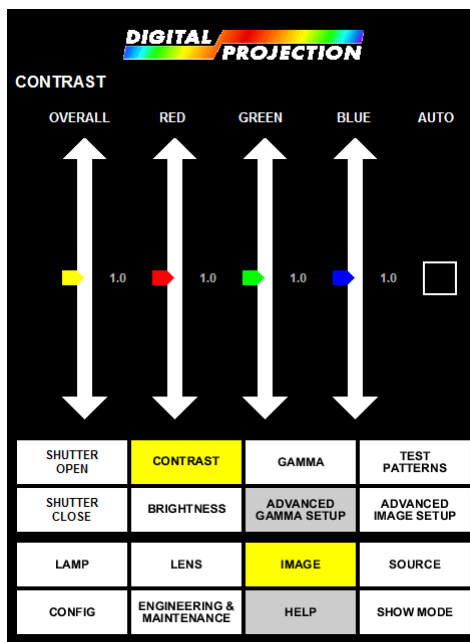

**Notes**



For more detailed information about all the touch screen menus, see the next section: *Using the menus.*

## Switching the power off

---

- Press the **LAMP** button on the **Main menu**.
- Press **LAMP OFF**. Hold the button pressed until the button turns to yellow, then release. The lamp power will ramp down to minimum then go off after a further 3 seconds.
- Allow the lamp to cool for 5 minutes.
- Push the main power switch downwards to switch off the power.
- When the power is switched off, all current settings are retained, and will be restored next time the power is switched back on again.

### Notes



**Always allow the lamp to cool for 5 minutes before:**

Switching off the power

Moving the projector

# 4. Using the Menus

## Contents

<b>Introduction</b> .....	<b>4.4</b>
Menu structure .....	4.5
<b>Show mode</b> .....	<b>4.6</b>
Lamp status .....	4.6
Video source .....	4.6
Warnings .....	4.7
Projector status .....	4.7
LCD screen blank .....	4.7
IP addresses .....	4.7
<b>Lamp menu</b> .....	<b>4.8</b>
Lamp power .....	4.8
Lamp on .....	4.8
Lamp off .....	4.8
Shutter open/closed .....	4.8
Lamp/Lens memories .....	4.9
Store .....	4.9
Recall .....	4.9
Advanced menu .....	4.9
<b>Lens menu</b> .....	<b>4.10</b>
Shift, zoom and focus .....	4.10
Shutter open/closed .....	4.10
Centre .....	4.10
Calibration .....	4.10
Stop all movement .....	4.10
Test patterns .....	4.11
Lamp/Lens memories .....	4.11
Advanced Lens menu .....	4.11
<b>Image menu</b> .....	<b>4.12</b>
Test Patterns .....	4.12
Shutter open/closed .....	4.13
Contrast .....	4.14
Brightness .....	4.15
Gamma .....	4.16
User Gamma Presets .....	4.17
Advanced Gamma Setup .....	4.17
Advanced image setup .....	4.18
Input window .....	4.18
Input preset .....	4.18
Input pan .....	4.18
Image position .....	4.20
Image orientation .....	4.21

Continued on next page





Contents, continued

- Source menu ..... 4.22**
  - Source select ..... 4.22**
    - Single DVI-D (Stage 1 model): ..... 4.22*
    - Single DVI-D (Stage 2 model only): ..... 4.22*
    - Dual DVI-D (Stage 2 model only): ..... 4.22*
    - Twin Link (Stage 2 model only): ..... 4.22*
    - Dual Twin (Stage 2 model only): ..... 4.22*
    - 10 Bit or 12 Bit (Stage 2 model only): ..... 4.22*
  - DVI Repeater on/off ..... 4.22**
- Configuration menu ..... 4.23**
  - Detailed status ..... 4.23**
  - Networking configuration ..... 4.24**
    - Ethernet configuration choices ..... 4.24*
    - Setting the Ethernet port for DHCP or Manual ..... 4.25*
    - Making the IP address and other settings ..... 4.25*
    - Example ..... 4.25*
    - Wireless LAN configuration ..... 4.26*
  - Touchscreen calibration ..... 4.27**
  - Reset IP addresses ..... 4.27**
- Engineering & Maintenance menu ..... 4.28**
  - Log files ..... 4.28**
  - Software update ..... 4.28**
- Help menu ..... 4.29**

## Introduction

---

All of the projector's features can be controlled using:

- the menus on the touch screen or
- the same menus on a remote computer using a web browser (with the IP address of the projector typed into the browser address field)

None of the menus are ever displayed on the projection screen.

In these instructions, it is assumed that the touch screen is being used, so the expressions 'press the button', or 'touch and drag the slider control' will be used, rather than the familiar 'click' or 'click and drag' used on a web browser.

The buttons and controls react in the following way when operated:

- A button or control will be coloured white if its function is available. It will be coloured grey if not (some functions are not yet available).
- Buttons and single-headed arrow controls will change to yellow when pressed.
- Slider controls can be adjusted by touching and dragging the slider, or for fine adjustment, by pressing either arrow head. The numerical value will change to grey until the projector hardware has responded, when the value will change to white.
- Some sliders and arrow controls can be centred, or reset to default values, by pressing on the number next to the slider or in the middle of the arrows. These operations are described in more detail later in this section.
- Some functions require the button to be pressed and held for a short period, to avoid accidental operation. In these cases, the button will turn grey when pressed, turning yellow only when the function has been activated.

When the projector is first switched on, the control panel will be in **Show mode**, as described on the page 4.

The eight buttons of the **Main menu** are always visible at the bottom of the display. Buttons and controls relating to the **Sub Menus** will appear in the top part of the display.

### Notes



**Do not try to operate the touch screen using anything harder than your finger. This could damage the LCD.**




*If you have difficulty getting the touch screen to respond correctly, then try varying the length and pressure of your finger movements until you have more success.*



*For more information about using a web browser to control the projector, see **Config menu... Networking configuration**, later in this section.*


*For information about how to connect the projector, see **Connecting the projector** in section 2. **Installation**, and **Connections** in section 6. **Appendix**.*

**Menu structure**

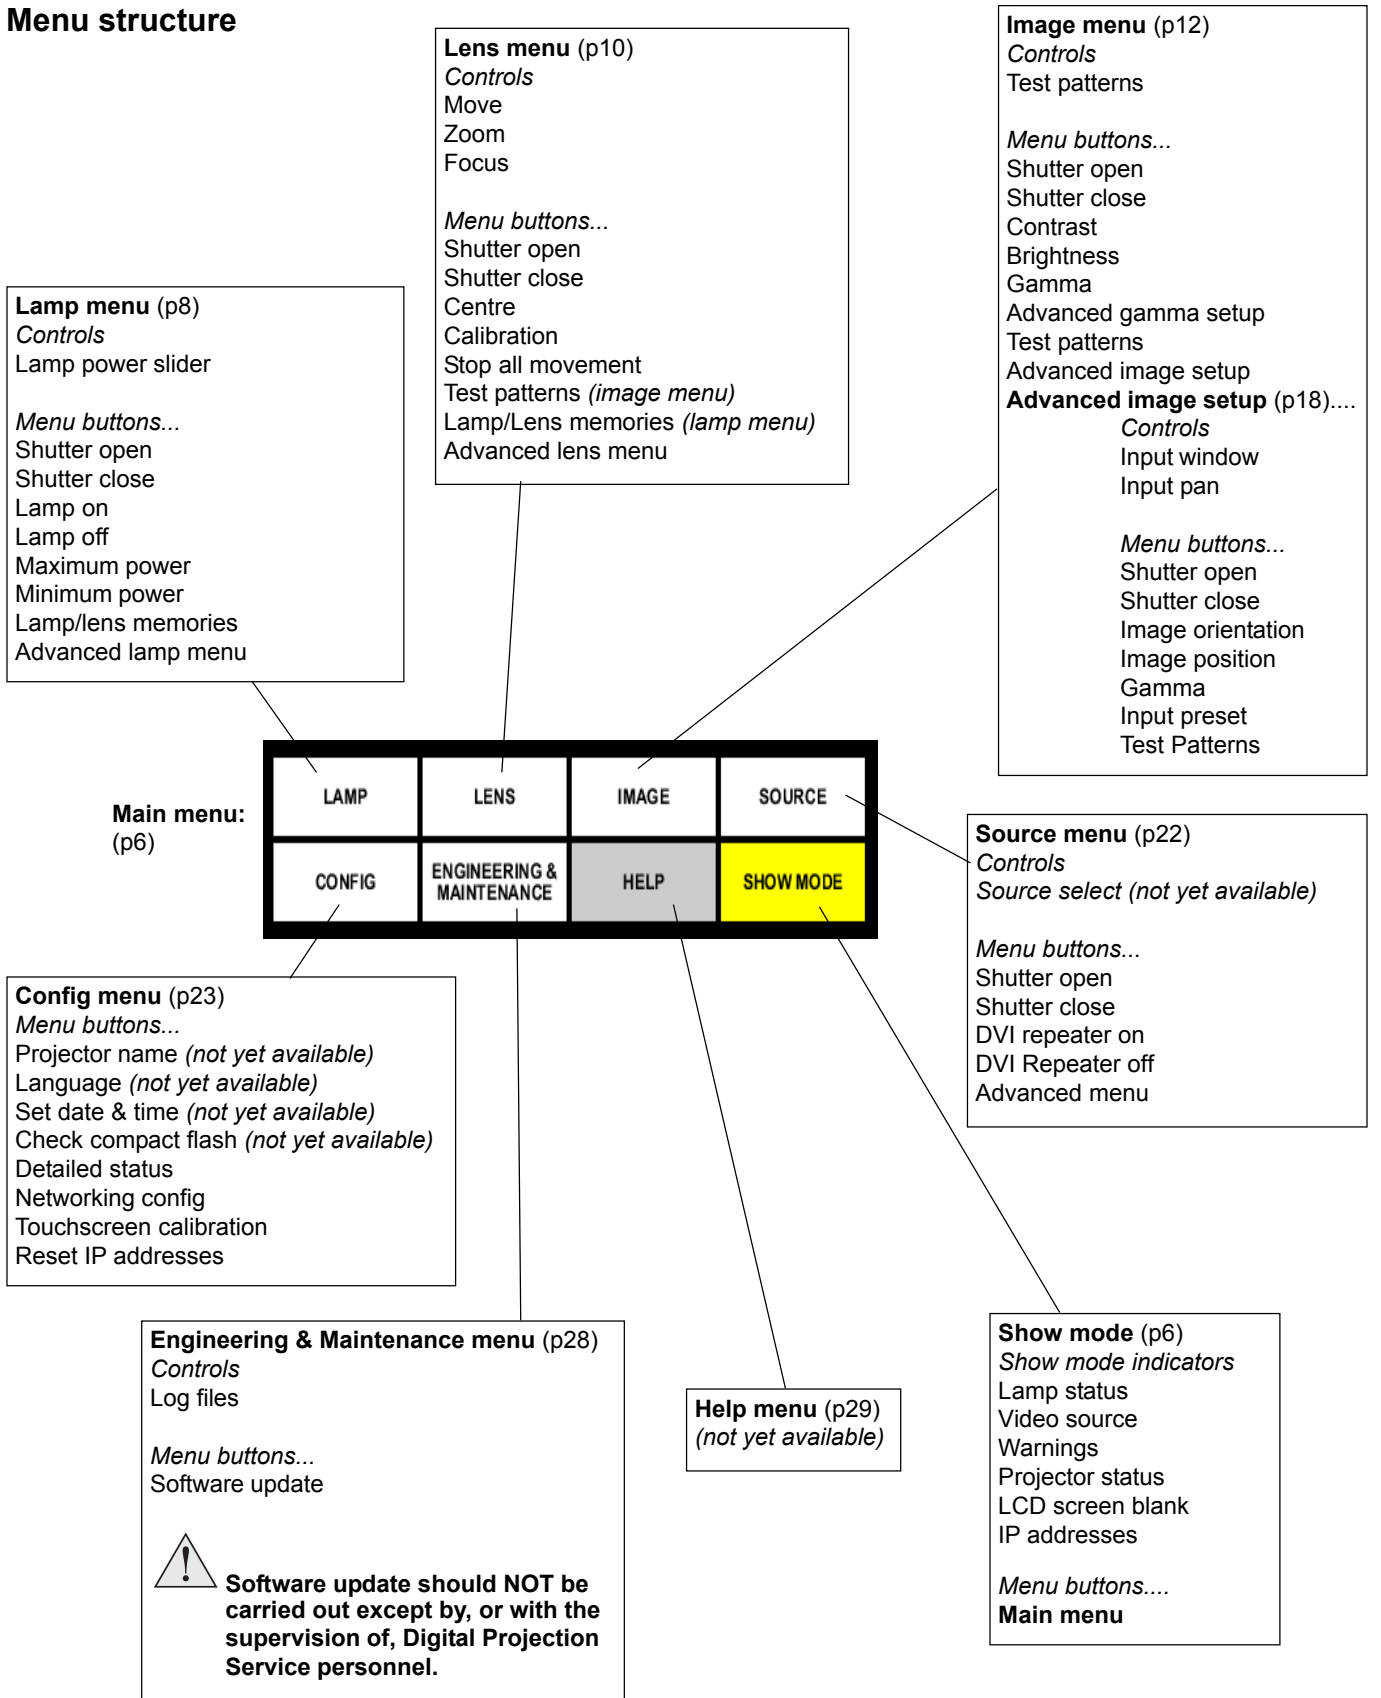

## Show mode

When the projector is first switched on, the control panel will be in **Show mode**, as shown below:

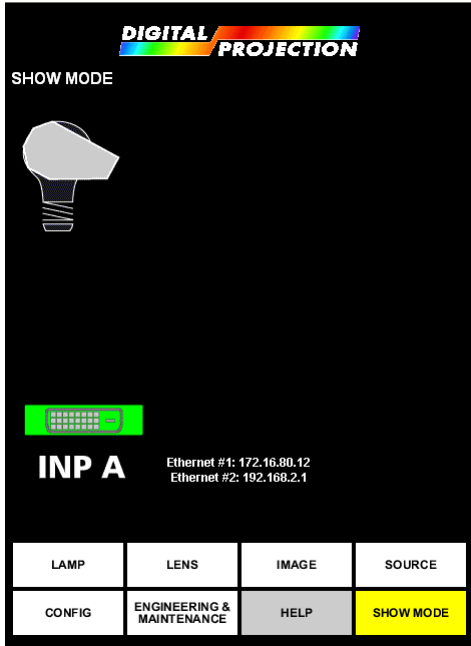

In **Show mode**, these icons are displayed:

### Lamp status

Lamp off  
Shutter closed



Lamp off  
Shutter open



Lamp on  
Shutter closed




Lamp on  
Shutter open




### Video source


Source A  
Single/Dual mode

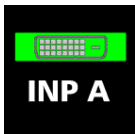

Source B  
Single/Dual mode

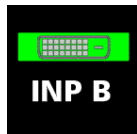

Sources A and B  
Twin mode

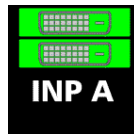

(Single mode only in Stage 1 model)

(these two not available in Stage 1 models)

#### Main menu

##### Show mode indicators

- Lamp status
- Video source
- Warnings
- Projector status
- LCD screen blank
- IP addresses

##### Menu buttons...

- Lamp menu
- Lens menu
- Image menu
- Source menu
- Config menu
- Engineering & Maintenance menu
- Help menu

#### Notes



The eight buttons of the **Main menu** are always visible at the bottom of the display, as shown here.

To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.

## Warnings

If a projector fault is detected, the warning symbol will be displayed, with an explanatory message.



## Projector status

*Feature not yet available*

## LCD screen blank

To blank the LCD screen, press and hold the Digital projection logo at the top of the screen for about two seconds. On release, the screen will blank.



To restore the display, press anywhere on the screen.

## IP addresses


The IP addresses of the two ethernet ports are shown.

Ethernet #1: 172.16.80.12  
Ethernet #2: 192.168.2.1

**Notes**

## Lamp menu

Press the **LAMP** button on the **Main menu**:

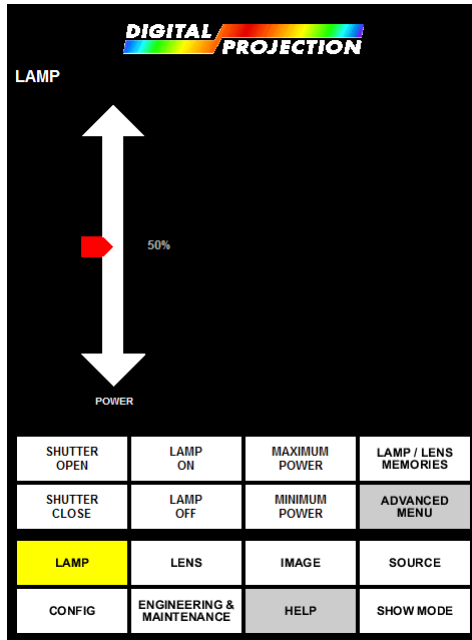

### Lamp menu

#### Controls

Lamp power slider

#### Menu buttons...

- Shutter open
- Shutter close
- Lamp on
- Lamp off
- Maximum power
- Minimum power
- Lamp/lens memories
- Advanced lamp menu

### Notes



*The eight buttons of the **Main menu** are always visible at the bottom of the display.*

*To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.*

## Lamp power

To adjust the lamp power, touch and drag the red slider up and down, or for fine adjustment, press the arrow heads. The numerical value will change to grey until the projector hardware has responded, when the value will change to white.

The minimum setting for a 3kW lamp is 50%.

To set maximum or minimum power, press the **MAXIMUM** or **MINIMUM** button.

## Lamp on

Press the **LAMP ON** button.

When you switch the lamp **ON**, the projector will reset, whilst the lamp strikes. This is to protect the control circuitry from the effects of the lamp strike pulse. Any settings made before the lamp was switched on will be retained.

## Lamp off


Press the **LAMP OFF** button. Hold the button pressed until the button turns to yellow, then release. The lamp power will ramp down to minimum then go off after a further 3 seconds.

## Shutter open/closed

Press the **SHUTTER OPEN** or **SHUTTER CLOSE** button.

### Lamp/Lens memories

Press the **LAMP/LENS MEMORIES** button.

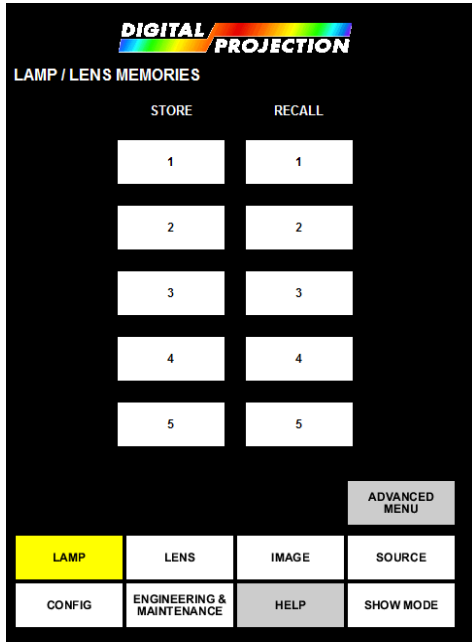

#### Store

To store the current **Lamp power**, **Shutter status**, **Lens shift**, **zoom** and **focus** settings for future recall, press and hold one of the five numbered **STORE** buttons. The button will turn grey - hold it until it turns yellow. If you release the button before it turns yellow, the new settings will not be stored, and any previous settings will not be lost.

#### Recall

To recall a previously stored set of **Lamp power**, **Shutter status**, **Lens shift**, **zoom** and **focus** settings press one of the five numbered **RECALL** buttons.

#### Advanced menu

*Feature not yet available*


#### Notes



*The Lamp/Lens memories are useful if you need to swap repeatedly and easily between the settings for a number of different lenses, or venues.*

## Lens menu

Press the **LENS** button on the **Main menu**:

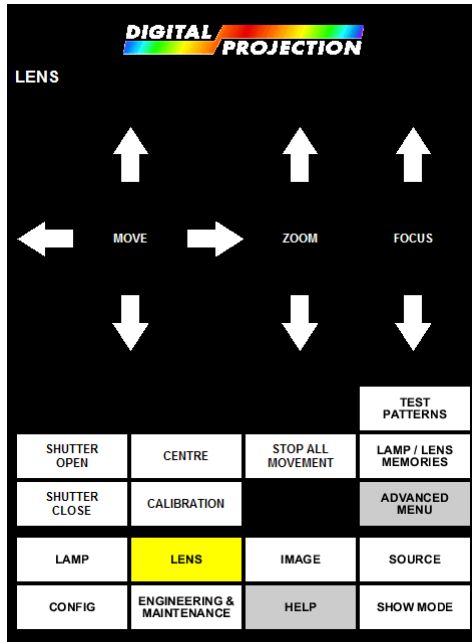

### Lens menu

*Controls*

- Move
- Zoom
- Focus

*Menu buttons...*

- Shutter open
- Shutter close
- Centre
- Calibration
- Stop all movement
- Test patterns (*image menu*)
- Lamp/Lens memories (*lamp menu*)
- Advanced lens menu

### Notes



*The eight buttons of the **Main menu** are always visible at the bottom of the display.*

*To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate **Main menu** button.*



*Each time you change the lens, the projector will need to be calibrated, in order that its minimum and maximum travel distances can be determined.*

### Shift, zoom and focus

To adjust the shift, zoom and focus settings, press the **MOVE**, **ZOOM** and **FOCUS** arrow heads.

Lens movements will start slowly, then speed up as the button is held. To make fine adjustments therefore, use a number of short presses.

### Shutter open/closed

Press the **SHUTTER OPEN** or **SHUTTER CLOSE** button.

### Centre

To centre the lens, press the **CENTRE** button.

### Calibration

To calibrate the projector to a new lens, press and hold the **CALIBRATION** button. The button will turn grey - hold it until it turns yellow, then release.

The zoom and focus mechanism will operate for about a minute, whilst the minimum and maximum travel distances are determined.

### Stop all movement

To cancel, for instance, a **CENTRE** operation or a **LAMP/LENS MEMORY** recall, press the **STOP ALL MOVEMENT** button.



### Test patterns

Pressing the **Test patterns** button takes you directly to the *Test pattern* function in the *Image menu*. See **Image menu**, later in this section.

### Lamp/Lens memories

Pressing the **Lamp/Lens memories** button takes you directly to the *Lamp/Lens memories* function in the *Lamp menu*. See **Lamp menu**, earlier in this section.


### Advanced Lens menu

*Feature not yet available*

**Notes**

# Image menu

Press the **IMAGE** button on the **Main menu**:

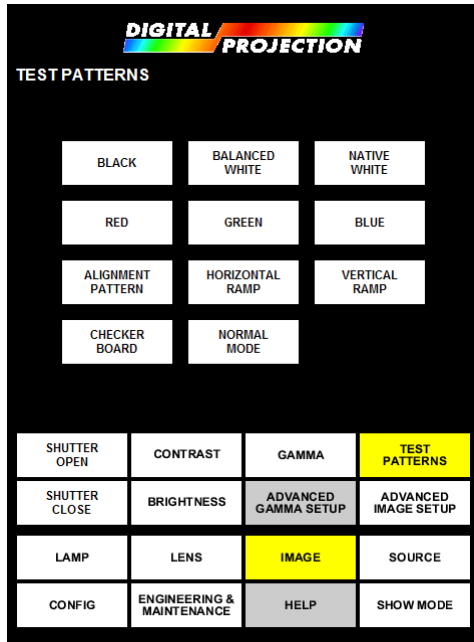

## Test Patterns

Choose from:

- **BLACK**
- **BALANCED WHITE**
- **RED**
- **GREEN**
- **BLUE**
- **ALIGNMENT PATTERN**
- **HORIZONTAL RAMP**
- **VERTICAL RAMP**
- **CHECKER BOARD**

All of the above are affected by the contrast, brightness and gamma controls.

The four alignment patterns are illustrated on the next page.

- **NATIVE WHITE**

Native white is not affected by the contrast, brightness and gamma controls. All pixels are fully illuminated, and no colour balancing is possible.

- **NORMAL MODE**


**Normal mode** turns off all test patterns, and restores the source image.

### Image menu


Controls  
Test patterns

Menu buttons...  
Shutter open  
Shutter close  
Contrast  
Brightness  
Gamma  
Advanced gamma setup  
Test patterns  
Advanced image setup


### Notes

 The eight buttons of the **Main menu** are always visible at the bottom of the display.

To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.

 When **Test patterns** are selected, the actual colours displayed may depend on the settings of the contrast, brightness and gamma controls.


It may be necessary to set all brightness controls to 0.0, and all contrast controls to 1.0, before making any light level measurements.

 There are two ways of creating a blank screen:

**Shutter closed:** the screen is completely black.

**All black test pattern:** all pixels are set to off, but there may be an extremely small amount of light leakage through the prism and DMD assembly.


Alignment pattern

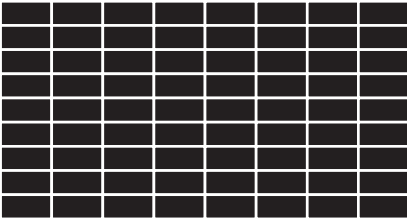


Horizontal ramp



Vertical ramp

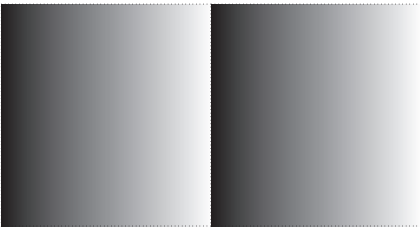


Checker board

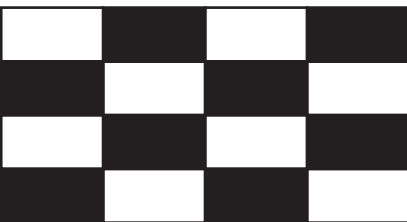

### Shutter open/closed

Press the **SHUTTER OPEN** or **SHUTTER CLOSE** button.

#### Notes

 When **Test patterns** are selected, the actual colours displayed may depend on the settings of the contrast, brightness and gamma controls.


It may be necessary to set all brightness controls to 0.0, and all contrast controls to 1.0, before making any light level measurements.

Image menu, continued

### Contrast

Press the **CONTRAST** button:

To adjust the **OVERALL**, **RED**, **GREEN** or **BLUE** contrast settings, touch and drag the sliders up and down or for fine adjustment, press the arrow heads. To reset a slider to its midpoint (1.0), press on the numerical value.

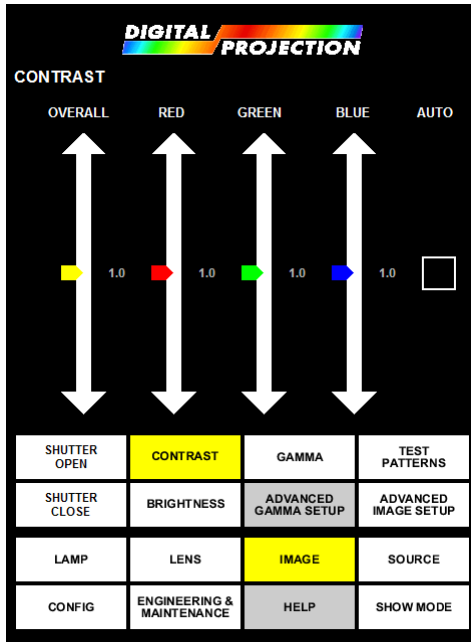

The numerical values displayed, ranging from 0 to 2.0 are not absolute, but relative values. When the **OVERALL** slider is used, all three colours on the projected image will change, but the individual values displayed on the sliders will not.

To maintain optimum overall image contrast and light output, press the **AUTO** button. The **OVERALL** slider will grey out and become inoperable. The actual contrast settings will be automatically adjusted such that your colour balance settings are maintained but the optimum contrast and light output will be achieved.

#### Image menu...

##### Contrast

Controls  
Contrast sliders

##### Menu buttons...

Shutter open  
Shutter close  
Contrast  
Brightness  
Gamma  
Advanced gamma setup  
Test patterns  
Advanced image setup

#### Notes



The eight buttons of the **Main menu** are always visible at the bottom of the display.

To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.



The contrast, brightness and gamma controls in the **Image menu** are all interactive, so settings made with one control may directly affect the setting of another control.


All these controls allow extreme settings to be made. However, in normal use, it should never be necessary to set any of the controls far from midpoint.

If in doubt, reset the contrast, brightness and gamma controls to midpoint, then make your adjustments in small steps. Better still, use the **AUTO** feature.

### Brightness

Press the **BRIGHTNESS** button:

To adjust the **OVERALL**, **RED**, **GREEN** or **BLUE** brightness settings, touch and drag the sliders up and down or for fine adjustment, press the arrow heads. To reset a slider to its midpoint (0.0), press on the numerical value.

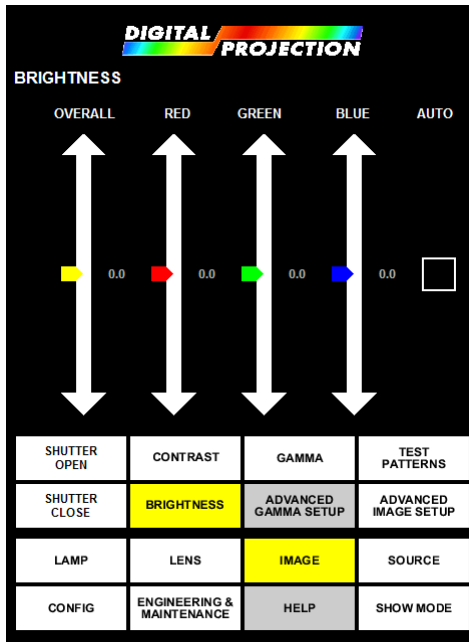

The numerical values displayed, ranging from -0.5 to +0.5 are not absolute, but relative values. When the **OVERALL** slider is used, all three colours on the projected image will change, but the individual values displayed on the sliders will not.

To maintain optimum overall image brightness, press the **AUTO** button. The **OVERALL** slider will grey out and become inoperable. The actual brightness settings will be automatically adjusted such that your colour balance settings are maintained but the optimum shadow detail and black level will be achieved.

#### Image menu... Brightness

Controls  
Brightness sliders

Menu buttons...  
Shutter open  
Shutter close  
Contrast  
Brightness  
Gamma  
Advanced gamma setup  
Test patterns  
Advanced image setup

#### Notes

The contrast, brightness and gamma controls in the **Image menu** are all interactive, so settings made with one control may directly affect the setting of another control.


All these controls allow extreme settings to be made. However, in normal use, it should never be necessary to set any of the controls far from midpoint.

If in doubt, reset the contrast, brightness and gamma controls to midpoint, then make your adjustments in small steps. Better still, use the **AUTO** feature.

Image menu, continued

### Gamma

Press the **GAMMA** button.

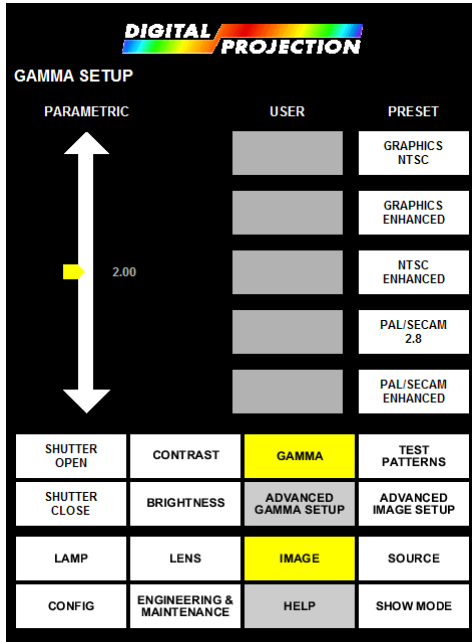

To adjust the Gamma setting manually, touch and drag the **PARAMETRIC** slider up and down or for fine adjustment, press the arrow heads. To reset a slider to its midpoint (2.0), press on the numerical value.

Or choose from one of the **PRESETS**:

- **GRAPHICS NTSC**
- **GRAPHICS ENHANCED**
- **NTSC ENHANCED**
- **PAL/SECAM 2.8**
- **PAL/SECAM ENHANCED**

The **PARAMETRIC** slider will grey out and become inoperable whenever a preset is selected.

To return from one of the Gamma **PRESETS**, to manual setting, simply touch and drag the **PARAMETRIC** slider or press one of the arrow heads. The **PRESET** button will grey out and the slider will become yellow again.

#### Image menu...

##### Gamma

Controls  
 Parametric slider  
 User Presets

##### Menu buttons...

Shutter open  
 Shutter close  
 Contrast  
 Brightness  
 Gamma  
 Advanced gamma setup  
 Test patterns  
 Advanced image setup

#### Notes



The eight buttons of the **Main menu** are always visible at the bottom of the display.

To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.



The contrast, brightness and gamma controls in the **Image menu** are all interactive, so settings made with one control may directly affect the setting of another control.

All these controls allow extreme settings to be made. However, in normal use, it should never be necessary to set any of the controls far from midpoint.

If in doubt, reset the contrast, brightness and gamma controls to midpoint, then make your adjustments in small steps. Better still, use the **AUTO** feature.

## User Gamma Presets

*Feature not yet available*

## Advanced Gamma Setup

*Feature not yet available*

### Notes




*The contrast, brightness and gamma controls in the **Image menu** are all interactive, so settings made with one control may directly affect the setting of another control.*

*All these controls allow extreme settings to be made. However, in normal use, it should never be necessary to set any of the controls far from midpoint.*

*If in doubt, reset the contrast, brightness and gamma controls to midpoint, then make your adjustments in small steps. Better still, use the **AUTO** feature.*

### Advanced image setup

Press the **ADVANCED IMAGE SETUP** button on the **Image menu**:

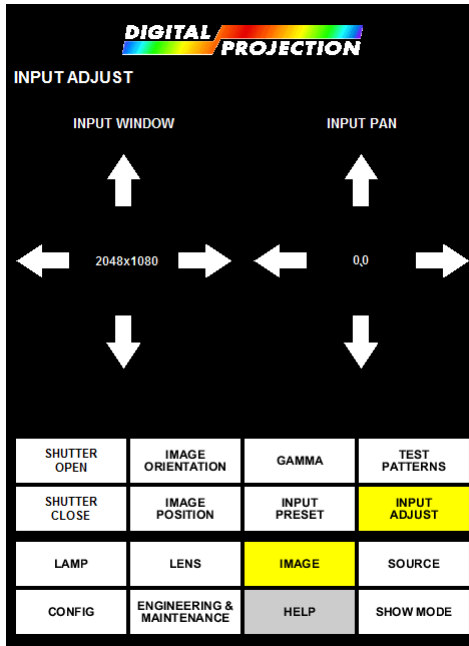


#### Input window

Press the arrow heads to select a portion of the video image to be displayed, hiding or revealing more or less of the image, as shown on the next page.

OR

#### Input preset

Press **INPUT PRESET** to see all six preset image sizes. Choose by pressing on the required Preset button.

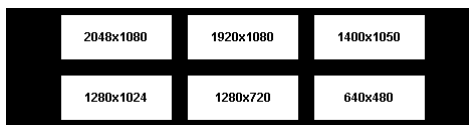

OR

Press on the number in the middle of the **Input window** arrows, to cycle through the preset image sizes. Choose (*up to the maximum set in **Input preset***) from:

- 2048x1080
- 1920x1080
- 1400x1050
- 1280x1024
- 1280x720
- 640x480

#### Input pan

Press the arrow heads to pan the video image within the window, as shown on the next page.

OR

Press on **0,0** in the middle of the **Input pan** arrows, to pan to the centre of the image.

#### Image menu...

#### Advanced image setup

Controls  
Input window  
Input pan

Menu buttons...  
Shutter open  
Shutter close  
Image orientation  
Image position  
Gamma  
Input preset  
Test Patterns

#### Notes

The eight buttons of the **Main menu** are always visible at the bottom of the display.

To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.

The **Input adjust** controls allow you to select which portion of the video image is to be displayed.

These controls **DO NOT** change the position or size of the whole image on the projection screen.

To change the position or size of the whole image on the projection screen, use the Move and Zoom controls in the **Lens menu**.





**Example**



The original image





Input window: width reduced

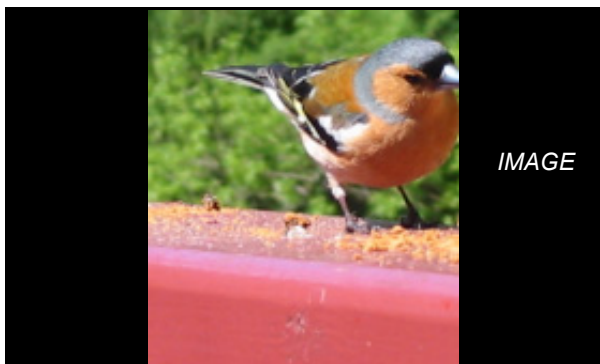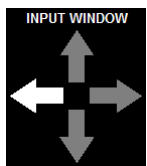


Input window: height reduced

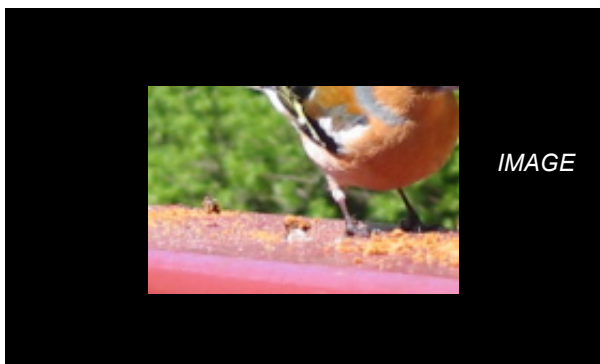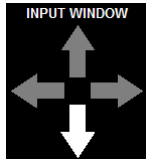

Input pan: image moved down and left

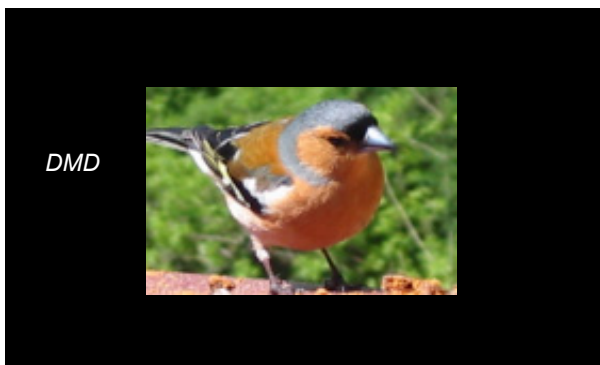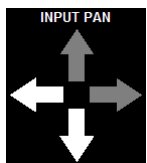


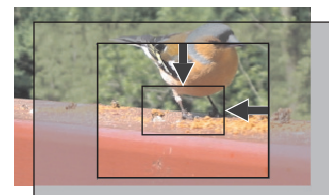
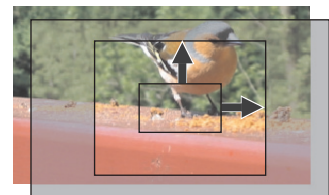
**Notes**


 The **Input adjust** controls allow you to select which portion of the video image is to be displayed.


These controls **DO NOT** change the position or size of the whole image on the projection screen.

To change the position or size of the whole image on the projection screen, use the **Move** and **Zoom** controls in the **Lens menu**.

 Note how the **Input window** controls change the size of the window, not the image




 Note how the **Input pan** controls move the image, not the window, rather like the scroll bars in many familiar wordprocessor and desktop publishing programs.

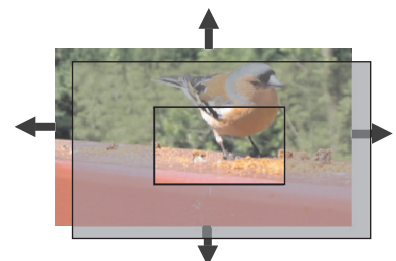

Advanced image setup, continued

**Image position**

Press the **IMAGE POSITION** button on the **Advanced image menu**:

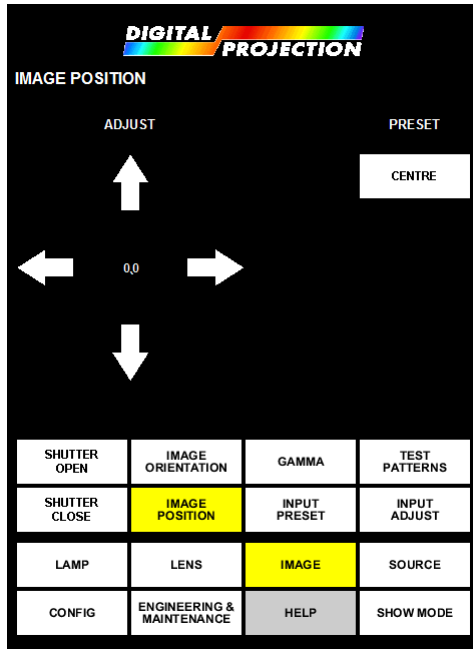

**Image menu...  
Advanced image setup...  
Image position**

*Controls*  
Image position adjust  
Centre image

*Menu buttons...*  
Shutter open  
Shutter close  
Image orientation  
Image position  
Gamma  
Input preset  
Test Patterns

**Notes**

The eight buttons of the **Main menu** are always visible at the bottom of the display.

To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.

The **Image position** controls are useful for multiple projector applications, where the images need to be tiled.

The **Image position** controls affect how the selected video image is positioned on the DMD.



DO NOT use these controls to change the position of the whole image on the projection screen.

To change the position of the whole image on the projection screen, use the Move and Zoom controls in the **Lens menu**.

Note that in subsequent adjustments to the **Input adjust** controls the image will be limited to the edges of the DMD.

Press the arrow heads to reposition the selected portion of the video image on the DMD, as shown below.

Image position moved down and right

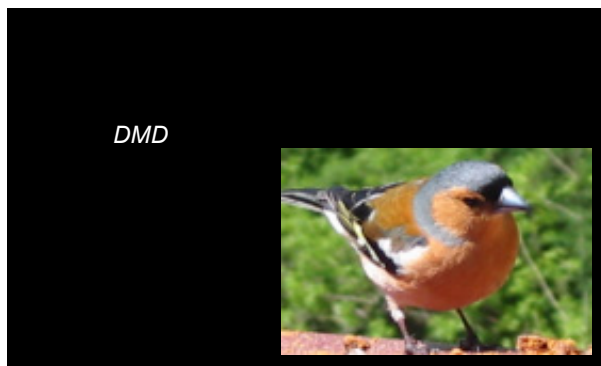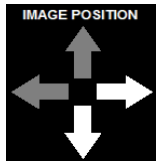


**OR**

Press the **CENTRE** button, to centre the image on the DMD.

**Image orientation**

Press the **IMAGE ORIENTATION** button on the **Advanced image menu**:

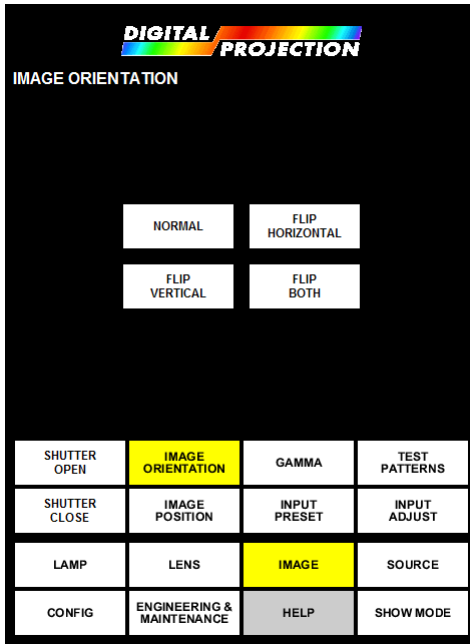

Choose from:

- **FLIP HORIZONTAL**

**Horizontal** inverts the image left to right for rear projection.

- **FLIP VERTICAL**

**Vertical** inverts the image top to bottom for when the projector is mounted upside down.


- **FLIP BOTH**

**Both** inverts the image left to right and top to bottom for rear projection and inverted operation.


- **NORMAL**

**Normal** restores the image to its correct orientation.


*Flip vertical*

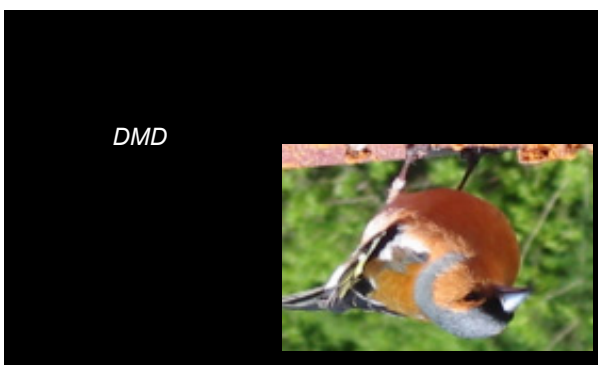

**Notes**

 *The Image Orientation controls allow the projected image to be flipped for rear or reflected projection, or to correct for incorrectly oriented images.*

## Source menu

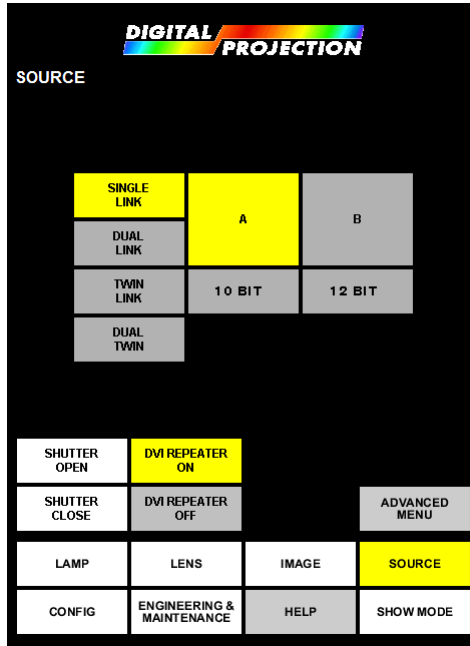

Press the **SOURCE** button on the **Main menu**:

### Source select

#### Single DVI-D (Stage 1 model):

**A IN** (single mode)

#### Single DVI-D (Stage 2 model only):

Select from: **A IN** (single mode) or **B IN** (single mode)

#### Dual DVI-D (Stage 2 model only):

Select from: **A IN** (dual mode) or **B IN** (dual mode)

#### Twin Link (Stage 2 model only):

A single input using both: **A IN** (single mode) AND **B IN** (single mode)

#### Dual Twin (Stage 2 model only):

A single input using both: **A IN** (dual mode) AND **B IN** (dual mode)

#### 10 Bit or 12 Bit (Stage 2 model only):

When using **Twin Link** or **Dual Twin**, select either **10 bit** or **12 bit** image depth

### DVI Repeater on/off


Turns the DVI loop-through **ON** or **OFF**

### Source menu


Controls  
Source select

Menu buttons...  
Shutter open  
Shutter close  
DVI repeater on  
DVI Repeater off  
Advanced menu


### Notes

 The eight buttons of the **Main menu** are always visible at the bottom of the display.

To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.


 On earlier models, known as 'Stage 1' models, only Single DVI-D on input A was available.

On later models, from 'Stage 2' onwards, Dual, Twin and Dual Twin DVI-D inputs are also available.

 For more information about input formats, see **section 2. Installation, Input formats**.

# Configuration menu

Press the **CONFIG** button on the **Main menu**:

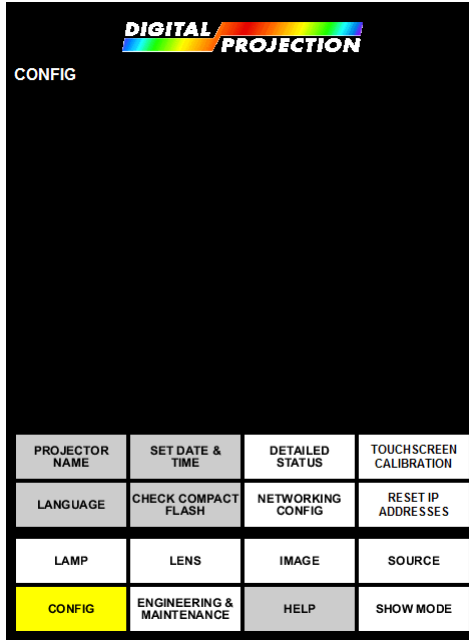

*Greyed out buttons: Feature not yet available*

## Detailed status

Press the **DETAILED STATUS** button.

The Software release version and the total number of hours of operation are shown.



### Config menu

*Menu buttons...*

- Projector name *(not yet available)*
- Language *(not yet available)*
- Set date & time *(not yet available)*
- Check compact flash *(not yet available)*
- Detailed status
- Networking config
- Touchscreen calibration
- Reset IP addresses

### Notes




The eight buttons of the **Main menu** are always visible at the bottom of the display.

To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.

Configuration menu, continued

### Networking configuration

Press the **NETWORK CONFIG** button on the **Config menu**, then choose from:

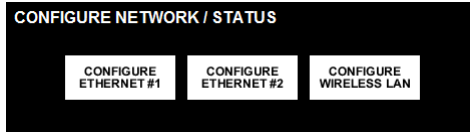


**Config menu...  
Network configuration...  
Ethernet #1 or #2**

Settings...  
IP address  
Netmask  
Mode  
Gateway (not yet available)  
DNS (not yet available)

#### Ethernet configuration choices

- You can use either the Ethernet #1 or #2 port to connect the projector to a controlling computer, but the two ports should always be set differently.
- If you are connecting the projector to an existing computer network that has a DHCP (Dynamic Host Configuration Protocol) domain controller located in a network server or router, then you should set the port to **DHCP** mode, and the projector will determine its settings automatically.
- If you are connecting the projector to an existing computer network that does not support DHCP, then you should set the port to **MANUAL** mode, obtain the network settings from your Network Manager, and configure the projector as described on the next page.
- If you are connecting a number of projectors and computers in a self contained network, then you should set the port to **MANUAL** mode, configure the IP address and Netmask settings as shown in the example on the next page.
- If you are connecting a single projector to a computer using a crossed LAN cable, then you should set the port to **MANUAL** mode and leave the IP address and Netmask settings at their default values. Configure the computer to match the projector, but with the last number of the IP address different.

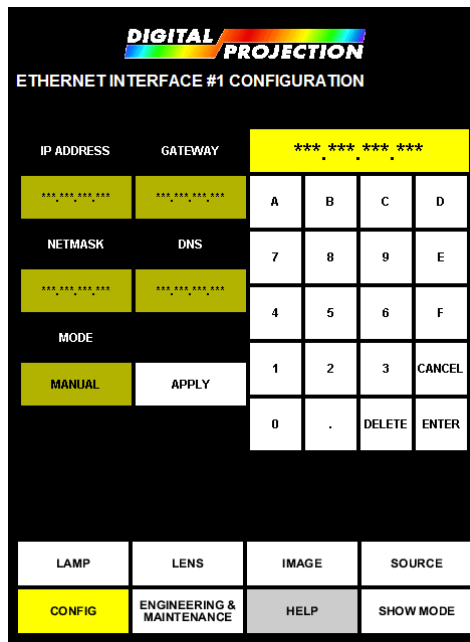

#### Notes



**Do not make changes to the networking configuration unless you understand what you are doing, or have taken advice from your Network Manager.**

**If you make a mistake, it is possible that you will lose contact with the projector.**

**Always double-check your settings before pressing the APPLY button.**

**Always keep a written note of the original settings, and any changes you have made.**



**If using DHCP, then keep the projector switched on at all times, and make sure the projector is accessible, as the IP address could be re-assigned on power-up or after a lost connection.**



**For information about how to connect the projector, see *Connecting the projector* in section 2. *Installation*, and *Connections* in section 6. *Appendix*.**

**Setting the Ethernet port for DHCP or Manual**

- Press the **MODE** button to set the Ethernet port to **DHCP** or **MANUAL** mode as required, then press the **APPLY** button.

**Making the IP address and other settings**

- Press the **IP ADDRESS** field.
- Use the on-screen keypad to enter the IP address, remembering to include leading zeroes for numbers less than 3 digits in length. The numbers will appear in the field at the top of the keypad as you type.

If you make a mistake, press **DELETE** to undo your typing one character at a time, or press **CANCEL** to start again completely.

- Press **ENTER** to transfer the completed address from the keypad display to the **IP ADDRESS** field.

*repeat for NETMASK.*

*leave DNS and GATEWAY blank.*

- When all settings are complete, double check, then press **APPLY**.

**Example**

*To connect a number of projectors and computers in a self contained network, using a hub:*

- Set to **MANUAL** mode, not **DHCP**.
- For each projector and computer, set the first three IP address number groups the same, and the last number different (any number between 001 and 254).

The example below follows the convention for a private non-resolvable network (cannot be seen on the internet).

**172 . 016 . 010 . 001**

**172 . 016 . 010 . 002**

**172 . 016 . 010 . 003   etc**

- Set the Netmask field for all projectors and computers to

**255 . 255 . 255 . 000**

**Notes**



**Do not make changes to the networking configuration unless you understand what you are doing, or have taken advice from your Network Manager.**

**If you make a mistake, it is possible that you will lose contact with the projector.**

**Always double-check your settings before pressing the APPLY button.**

**Always keep a written note of the original settings, and any changes you have made.**



*When making these settings, leading zeroes **must** be used for numbers less than 3 digits in length. eg 192.168.010.001*

*When making a network connection, eg via the address box in a browser, leading zeroes are not necessary.*



*To control more than one projector from a single computer, either open a separate browser window for each projector, or set a bookmark for each projector in Favourites.*



*The eight buttons of the **Main menu** are always visible at the bottom of the display.*

*To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.*

**Wireless LAN configuration**

*Feature not yet available*

**Config menu...**  
**Network configuration...**  
**Wireless LAN**

*(not yet available)*

**Notes**



**Do not make changes to the networking configuration unless you understand what you are doing, or have taken advice from your Network Manager.**

**If you make a mistake, it is possible that you will lose contact with the projector.**

**Always double-check your settings before pressing the APPLY button.**

**Always keep a written note of the original settings, and any changes you have made.**




**If using DHCP, then keep the projector switched on at all times, and make sure the projector is accessible, as the IP address could be re-assigned on power-up or after a lost connection.**



Configuration menu, continued

### Touchscreen calibration

If you suspect that the LCD touchscreen has drifted out of calibration, press and hold the **TOUCHSCREEN CALIBRATION** button on the **Config** menu:

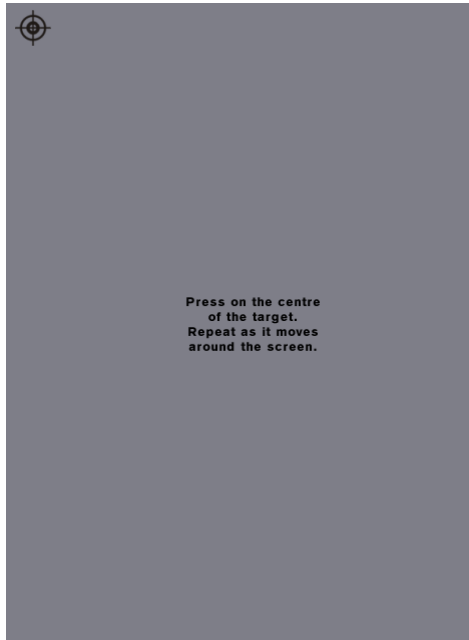


A target appears in one corner of the screen. Press on the centre of the target and repeat as the target moves around the screen.

After touching all four corners, you can wait a few seconds and carry out the calibration again, or exit by pressing the button in the centre of the screen.


### Reset IP addresses


To reset these to their factory settings, press and hold the **RESET IP ADDRESSES** button. The button will turn grey - hold it until it turns yellow, then release.

#### Notes

 The eight buttons of the **Main menu** are always visible at the bottom of the display.

To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.

 Touchscreen calibration should not normally be necessary except after many hours of heavy use.

 **Do not make changes to the networking configuration unless you understand what you are doing, or have taken advice from your Network Manager.**

If you make a mistake, it is possible that you will lose contact with the projector.

**Always double-check your settings before pressing the APPLY button.**

**Always keep a written note of the original settings, and any changes you have made.**

# Engineering & Maintenance menu

Press the **ENGINEERING & MAINTENANCE** button on the **Main menu**:



### Engineering & Maintenance menu

Controls  
Log files

Menu buttons...  
Software update

### Notes



**Software update should NOT be carried out except by, or with the supervision of, Digital Projection Service personnel.**

## Log files

A single log file is created for each day that the projector is switched on. There will only be one file per day, regardless of how many times the projector has been switched on and off.

The log files cannot be accessed from the projector touch screen. However, in the event of a problem with the projector, the log files can be downloaded to a remote computer via a network connection, and emailed to **Digital Projection** for analysis.

To open a log file on a remote computer:

- Click on the **log file** name.

## Software update

(only available via a browser, not when operating directly from the projector touch screen)



This should NOT be carried out except by, or with the supervision of, Digital Projection Service personnel.

## Help menu

---

*Feature not yet available*

### Help menu

*(not yet available)*

### Notes



The eight buttons of the **Main menu** are always visible at the bottom of the display.

To go back to a previous menu option that is no longer visible, call up the menu again using the appropriate Main menu button.



# 5. Maintenance

## Contents



Changing the lamp .....	5.2
Lamp-hours meter .....	5.3
Changing the filter .....	5.5
Cleaning the projector and lens .....	5.6

## Changing the lamp


The lamp should be changed after 750 hours of use, as indicated on the lamp-hours meter. The meter is located on the front of the lamp module, and is accessible inside the lamp compartment door.


To open the lamp compartment door:


- Give the catch half a turn anti-clockwise, to release the catch.

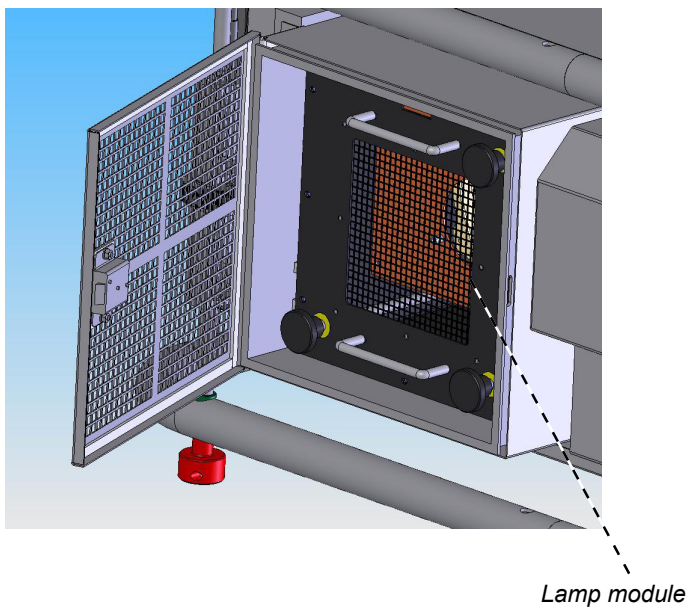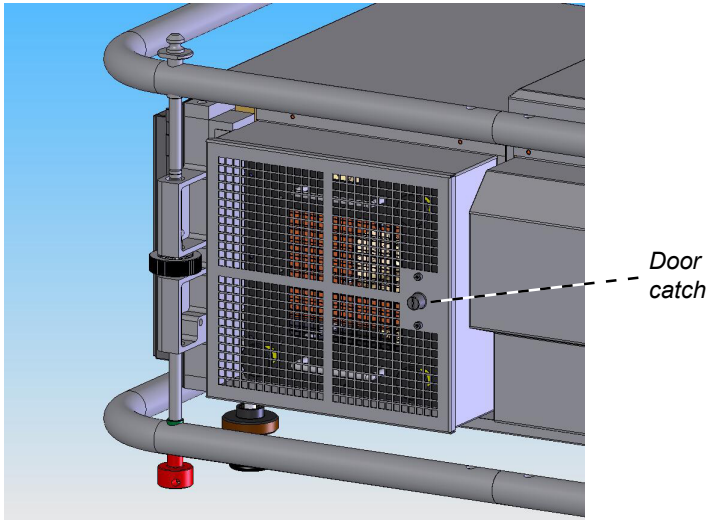


### Notes

 **Always allow the lamp to cool for 5 minutes before removing the lamp module.**




 **There are no user-serviceable parts inside the lamp module. The whole module should be replaced and returned to Digital Projection for re-furbishment.**

 **Do not use the lamp for more than 750 hours, as this may cause serious lamp failure, damage the lamp module and cause extra cost on replacement.**

 **Xenon lamps produce high intensity light. Do not look directly at the light coming from the lamp housing or the lens.**

### Lamp-hours meter

There are two types of Lamp-hours meter, depending on the lamp module that has been fitted, as shown below.

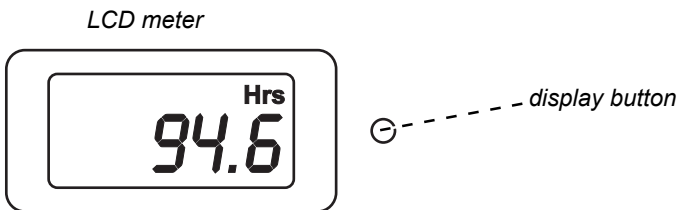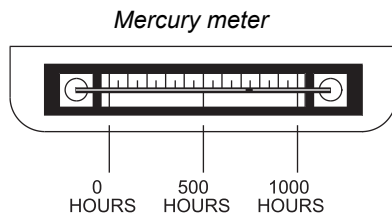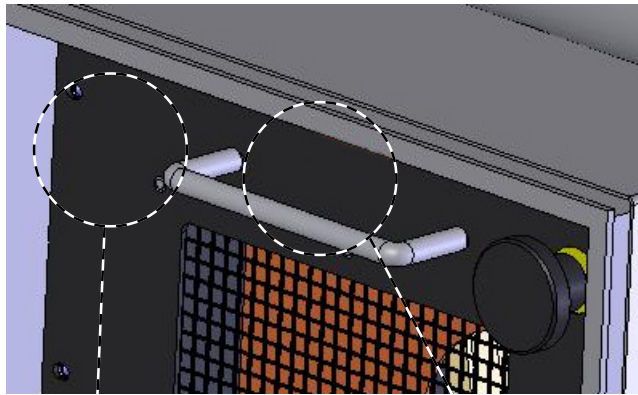

The LCD Lamp-hours meter has two modes of operation:


- When the lamp is switched on, the LCD will show lamp run hours.
- When the lamp is switched off, the LCD will be blank.

Press the button and hold for 5 seconds to display lamp run hours.

Notes

To change the lamp:

- Press the **LAMP** button on the **Main menu**.
- Press **LAMP OFF** and hold for 3 seconds. The lamp will ramp down to minimum and go off after a further 3 seconds.
- Allow the lamp to cool for 5 minutes.
- Push the main power switch downwards to switch off the power.
- Open the lamp compartment door.
- Unscrew each of the three lamp module screws until the thread disengages and the knob can be pulled out a little against its spring pressure.

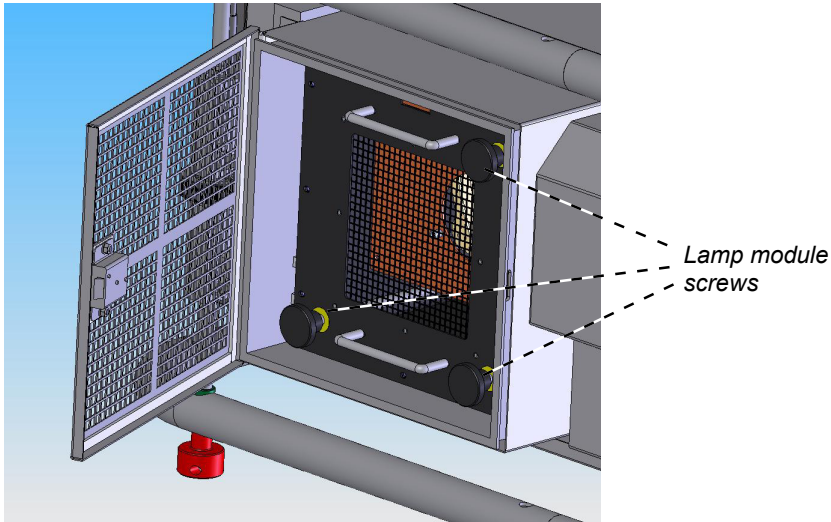

- Pull the lamp module out of the projector.

To fit the new lamp module:

- Rest the lamp module on the edge of the compartment and line up the white nylon guides.
- Gently but firmly, push the lamp module in all the way until the connector engages.
- Screw in each of the three lamp module screws until finger tight.
- Push the lamp compartment door closed.

### Notes



**Take care when removing the lamp module, as it is heavy (>10kg).**




**Take care not to touch the glass surface of the lamp module. If you do accidentally touch the glass, it should be cleaned before use.**



## Changing the filter

To change the filter:

- Press the **LAMP** button on the **Main menu**.
- Press **LAMP OFF** and hold for 3 seconds. The lamp will ramp down to minimum and go off after a further 3 seconds.
- Allow the lamp to cool for 5 minutes.
- Push the main power switch downwards to switch off the power.
- Pull the filter out from under the front of the projector, under the lens, by pulling on the strap.

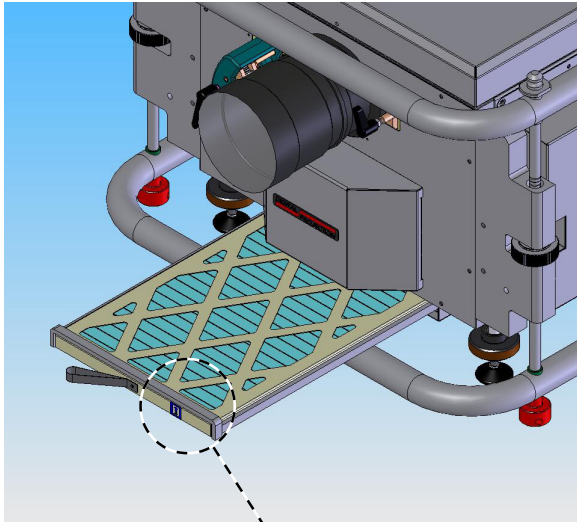

- Replenish the filter material.
- Push the replenished filter firmly back into the slot, taking care to fit it the right way up, as shown by the arrow.

### Notes



*The filter should be changed regularly:*

- *In a clean environment such as an office, change after 750 hours, at the same time as the lamp is changed.*
- *In a dusty or smoky environment such as a theatre or public area, more frequent changes may be necessary.*



*If you have an early fibre-board filter, then it should be replaced by a new refillable metal filter when dirty.*

## **Cleaning the projector and lens**

Turn the projector off before cleaning.

Clean the cabinet periodically with a damp cloth. If heavily soiled, use a mild detergent.

Use a blower or lens paper to clean the lens, taking care not to scratch the glass.

### *Notes*



**Never use strong detergents or solvents such as alcohol or thinners to clean the projector and lens.**

# 6. Appendix

## Contents

<b>Troubleshooting</b> .....	<b>6.2</b>
<b>Specifications</b> .....	<b>6.4</b>
<b>Part numbers</b> .....	<b>6.4</b>
<b>Optical</b> .....	<b>6.4</b>
<b>Electrical</b> .....	<b>6.4</b>
<b>Physical</b> .....	<b>6.5</b>
<b>Lens Data</b> .....	<b>6.6</b>
<b>Connections</b> .....	<b>6.8</b>
<b>DVI-D connection</b> .....	<b>6.8</b>
<b>LAN connection</b> .....	<b>6.9</b>
<i>10BaseT Unshielded Twisted Pair cable</i> .....	6.9
<i>Crossed cable</i> .....	6.9
<b>Serial control input</b> .....	<b>6.10</b>
<i>Null-modem cable</i> .....	6.10
<i>Modem settings</i> .....	6.10
<b>Using Windows Hyperterminal to connect to the projector</b> .....	<b>6.11</b>
<b>Remote communications protocol</b> .....	<b>6.12</b>
<b>Image commands</b> .....	<b>6.12</b>
<i>Image Brightness</i> .....	6.12
<i>Image Contrast</i> .....	6.13
<i>Image Projection Mode</i> .....	6.13
<i>Image Orientation</i> .....	6.14
<i>Image Mirror Park</i> .....	6.14
<i>Image Colour Temperature Gain</i> .....	6.15
<i>Input Image Size</i> .....	6.15
<i>Input Image Window Size</i> .....	6.16
<i>Image Position</i> .....	6.16
<i>Input Capture Offset</i> .....	6.17
<i>Test Patterns</i> .....	6.18
<i>Degamma Table Select</i> .....	6.19
<i>Picture Mute</i> .....	6.20
<b>Lens Commands</b> .....	<b>6.21</b>
<i>Lens Stop All</i> .....	6.21
<i>Lens Move</i> .....	6.21
<i>Lens Goto Absolute Position</i> .....	6.22
<i>Lens Goto Centre</i> .....	6.22
<i>Lens Calibrate Zoom</i> .....	6.22
<b>PSU Commands</b> .....	<b>6.23</b>
<i>Lamp On</i> .....	6.23
<i>Lamp Off</i> .....	6.23
<i>Lamp Power</i> .....	6.24
<b>Dimensions</b> .....	<b>6.25</b>

## Troubleshooting

<i>Problem</i>	<i>Possible solutions</i>
<b>The projector will not power up.</b>	<p>Check that the mains plug is plugged in and that the mains supply is switched on.</p> <p>Check any external fuses or breakers.</p>
<b>The projector shuts down after it has been in use for some time.</b>	<p>The projector may be overheating. Check that the air inlets and outlets are clear of any obstruction. Check that the air filter is clean, and if it is dirty, fit a new one.</p> <p>See <b>Section 1. Introduction, Getting to know the projector</b></p>
<b>The lamp is not lit.</b>	<p>Check in the <b>LAMP</b> menu that the lamp is turned on.</p> <p>See <b>Section 4. Using the menus, Lamp menu</b></p> <p>Check the lamp-hours meter. If the lamp has been in use for over 750 hours, the lamp module should be changed.</p> <p>See <b>Section 5. Maintenance, Changing the lamp</b></p>
<b>The menus say the lamp is lit but no image is displayed.</b>	<p>The lamp may be faulty. Check by fitting a new lamp module.</p> <p>See <b>Section 5. Maintenance, Changing the lamp</b></p> <p>Check that the input source is switched on and connected to the projector correctly.</p> <p>Check that the correct image source is selected.</p> <p>See <b>Section 4. Using the menus, Source menu</b></p> <p>Check that the brightness and contrast settings are set correctly.</p> <p>See <b>Section 4. Using the menus, Image menu</b></p> <p>If the input source is connected via a device powered from the 5V auxilliary power outlet, check that this power cable is connected correctly.</p> <p>The projector may be overheating. Check that the air inlets and outlets are clear of any obstruction. Check that the air filter is clean, and if it is dirty, fit a new one.</p>
<b>The image does not fit the screen correctly.</b>	<p>If the image is smaller than 2048 x 1080 pixels, then the image will NOT fill the screen. The projector does not perform any image processing - the MMS 1000 is recommended for this purpose.</p> <p>Check that the correct lens is being used for the combination of screen size and projection distance.</p> <p>See <b>Section 1. Introduction, Choosing a lens</b></p> <p>Check the settings in the <b>IMAGE</b> menu.</p> <p>See <b>Section 4. Using the menus, Image menu</b></p>

<b>Problem</b>	<b>Possible solutions</b>
<b>Poor colour depth reproduction.</b>	<p>Colour depth is 8 bits using Single or Dual inputs. If using Twin inputs for greater colour depth, check that both source cables are connected correctly, and that <b>Twin mode</b> is selected.</p> <p>See <b>Section 4. Using the menus, Source menu</b></p>
<b>Uneven image quality.</b>	<p>Check that the projector is parallel to the screen.</p> <p>Check that the screen is flat, and securely mounted.</p>
<b>Projector does not respond to remote control commands from a computer.</b>	<p>Check that the LAN or serial cable is connected correctly.</p> <p>See <b>this section 6. Appendix, Connections</b></p> <p>If using a LAN, check that the address setting is made correctly.</p> <p>See <b>Section 4. Using the menus, Configuration menu</b></p> <p>If using a serial cable, check that the modem settings are made correctly.</p> <p>See <b>this section 6. Appendix, Connections</b></p> <p>Check that the correct control codes are being used.</p> <p>See <b>this section 6. Appendix, Serial communications protocol</b></p>
	<p><b>In the event that this troubleshooting guide has not solved the problem, then contact your Digital Projection dealer or service centre.</b></p>

## Specifications

---

### Part numbers

#### Projector

USA model	102-061
Rest of World model	103-398

#### Lenses

1.0 :1 fixed lens	103-350
1.25 - 1.45 :1 zoom lens	103-351
1.45 - 1.8 :1 zoom lens	102-451
1.8 - 2.4 :1 zoom lens	102-676
2.2 - 3.0 :1 zoom lens	102-677
3.0 - 4.3 :1 zoom lens	102-678
4.3 - 6.0 :1 zoom lens	104-189

#### Replacement parts

Lamp module	LM00519
Air filter, complete replacement for early fibre-board model	104-154A
Air filter, replacement filling only, for later model	103-609B

### Optical

<b>Digital Light Processor</b>	3 x 1.26" Texas Instruments DMD™, resolution 2048 x 1080 pixels
<b>Lamp power</b>	3kW
<b>Lamp life (typical)</b>	750 hours
<b>Brightness</b>	18,000 Center lumens, 16,000 ANSI lumens (±10%)
<b>Colour temperature</b>	3000-9300°K
<b>Contrast Ratio</b>	1600:1 full field (±10%)
<b>Pixel fill factor</b>	87%

### Electrical

<b>Inputs</b>	DVI-D single, DVI-D dual, DVI-D single twin or DVI-D dual twin
<b>Pixel clock</b>	single: up to 165MHz, dual: up to 220MHz
<b>Outputs</b>	DVI-D single, DVI-D dual, DVI-D single twin or DVI-D dual twin loop through
<b>Control inputs</b>	2 x LAN 1 x RS232 serial
<b>Mains voltage</b>	208-264 VAC, 48-62Hz (single phase)
<b>Power consumption</b>	4000 W
<b>International Regulations</b>	Meets FCC Class A requirements Meets EMC Directives (EN 50081-1, EN 50082-1, EN 55022) Meets Low Voltage Directive (EN60950)

**Physical**

<b>Operating Temperature</b>	10 to 35°C
<b>Storage Temperature</b>	-10 to 50°C
<b>Thermal Dissipation</b>	13640 BTU
<b>Operating Humidity</b>	up to 80% non-condensing
<b>Weight</b>	114kg (249lbs)



**Lens Data**


	<b>103-350</b>	<b>103-351</b>	<b>102-451</b>	<b>102-676</b>
<i>throw ratio</i>	<b>1.0 :1 fixed</b>	<b>1.25 - 1.45 :1 zoom</b>	<b>1.45 - 1.8 :1 zoom</b>	<b>1.8 - 2.4 :1 zoom</b>
<i>full DMD image width</i>	2.2m - 6.9m (7.4 - 22.6ft)	3.5 - 31m (11 - 102ft)	3 - 25m (9 - 82ft)	2 - 19m (7 - 62ft)
<i>throw distance</i>	2.2m - 6.9m (7.4 - 22.6ft)	5 - 45m (16 - 148ft)	5 - 45m (16 - 148ft)	5 - 45m (16 - 148ft)
<i>lens shift vertical (vs DMD height)</i>	± 400 pixels ± 0.37H	± 540 ± 0.5H	± 282 ± 0.26H	± 282 ± 0.26H
<i>lens shift horizontal (vs DMD width)</i>	± 256 ± 0.125W	± 365 ± 0.178W	± 172 ± 0.085W	± 172 ± 0.085W
<i>Aperture</i>	F/2.5	F/2.5	F/2.5	F/2.5
<i>Max object field size</i>	38.04mm dia	36.0mm dia	36.0mm dia	36.0mm dia
<i>Effective focal length</i>	28.95mm (1.14in)	35.28 - 40.97mm (1.39 - 1.61in)	40.71 - 50.89mm (1.6 - 2.0in)	50.72 - 62.12mm (2 - 2.5in)
<i>Distortion</i>	<0.6%	<1.5%	<1.5%	<1.5%
<i>Transmission</i>	>85% avg.	>88% avg	>88% avg	>88%

**Mechanical**

<i>Lens extension*</i>	185mm (7.3in)	161mm (6.3in)	109mm (4.3in)	97mm (3.8in)
<i>Length</i>	457.5mm (18.0in)	433.6mm (17.1in)	381mm (15in)	368.4mm (14.5in)
<i>Maximum diameter</i>	144.5mm (5.69in)	144.5mm (5.69in)	139mm (5.47in)	139mm (5.47in)

\* Lens extension is the distance from the outer end of the lens to the front of the projector. It is measured when the lens is focussed at infinity and fully extended. At other focus settings, the extension could be up to 10mm less.

It is important for calculating throw distance accurately (see *Useful lens calculations*, in **Section 2. Installation**).

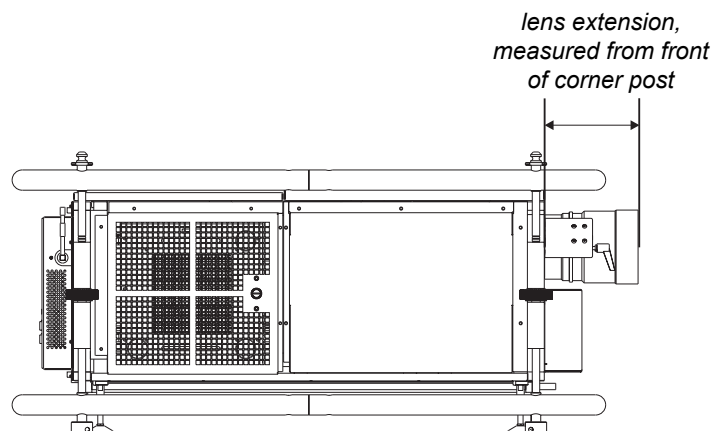



	<b>102-677</b>	<b>102-678</b>	<b>104-189</b>
<i>throw ratio</i>	<b>2.2 - 3.0 :1 zoom</b>	<b>3.0 - 4.3 :1 zoom</b>	<b>4.3 - 6.0 :1 zoom</b>
<i>full DMD image width</i>	2 - 15m (5 - 49ft)	1 - 11m (4 - 34ft)	1 - 8m (3 - 25ft)
<i>throw distance</i>	2.2m - 6.9m (7.4 - 22.6ft)	5 - 45m (16 - 148ft)	5 - 45m (16 - 148ft)
<i>lens shift vertical (vs DMD height)</i>	± 282 ± 0.26H	± 282 ± 0.26H	± 282 ± 0.26H
<i>lens shift horizontal (vs DMD width)</i>	± 172 ± 0.085W	± 172 ± 0.085W	± 172 ± 0.085W
<i>Aperture</i>	F/2.5	F/2.5	F/2.5
<i>Max object field size</i>	36.0mm dia	36.0mm dia	36.0mm dia
<i>Effective focal length</i>	62.35 - 84.79mm (2.46 - 3.34in)	84.0 - 120.5mm (3.31 - 4.74in)	122.8 - 172.3mm (4.83 - 6.78 in)
<i>Distortion</i>	<1.5%	<1.5%	<1.5%
<i>Transmission</i>	>88% avg	>88% avg	>88% avg


**Mechanical**

<i>Lens extension</i>	53mm (2.1in)	98mm (3.9in)	170mm (6.7in)
<i>Length</i>	324.9mm (12.8in)	370.8mm (14.6in)	442mm (17.4in)
<i>Maximum diameter</i>	139mm (5.47in)	139mm (5.47in)	139mm (5.47in)

## Connections

### DVI-D connection

- |    |                      |
|----|----------------------|
| 1  | TMDS Data 2-         |
| 2  | TMDS Data 2+         |
| 3  | TMDS Data 2/4 Shield |
| 4  | TMDS Data 4-         |
| 5  | TMDS Data 4+         |
| 6  | DDC Clock            |
| 7  | DDC Data             |
| 8  | unused               |
| 9  | TMDS Data 1-         |
| 10 | TMDS Data 1+         |
| 11 | TMDS Data 1/3 Shield |
| 12 | TMDS Data 3-         |
| 13 | TMDS Data 3+         |
| 14 | +5 V Power           |
| 15 | Ground               |
| 16 | Hot Plug Detect*     |
| 17 | TMDS Data 0-         |
| 18 | TMDS Data 0+         |
| 19 | TMDS Data 0+         |
| 20 | TMDS Data 0/5 Shield |
| 21 | TMDS Data 5 -        |
| 22 | TMDS Data 5+         |
| 23 | TMDS Clock Shield    |
| 24 | TMDS Clock+          |

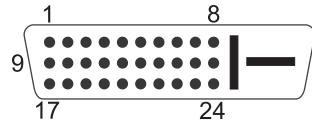

pin view of female connector

### Notes



Cable complexity and interference can be reduced by using the **Digilink** high bandwidth optical connection system. Contact your dealer for more information.

\* Hot plug detect (HPD) is fully DVI compliant. DVI sources detect the presence of a display device by providing +5V on pin 14 and looking for +5V on pin 16. Whenever the projector is operational, and 5V is present on pin 14, pin 16 will be held at +5V.

EDID is available even when the projector is switched off.


Operational means that the projector is powered up. Non operational states are powered down and some self test and reprogramming modes.

**LAN connection**

**10BaseT Unshielded Twisted Pair cable**

The standard wire colours as follows:

- 1 White / Orange stripe
- 2 Orange
- 3 White / Green stripe
- 4 Blue
- 5 White / Blue stripe
- 6 Green
- 7 White / Brown stripe
- 8 Brown



*top view of cable connector  
(clip is underneath)*

**Crossed cable**

(used to connect directly to a computer with no hub or network.)  
(Note that only the green and blue pairs are crossed)

1	White / Orange stripe	White / Green stripe	1
2	Orange	Green	2
3	White / Green stripe	White / Orange stripe	3
4	Blue	Blue	4
5	White / Blue stripe	White / Blue stripe	5
6	Green	Orange	6
7	White / Brown stripe	White / Brown stripe	7
8	Brown	Brown	8


**Notes**

 Use:

- a straight cable to connect to a hub or network, or
- a crossed cable as shown here to connect **ONLY** to a computer directly.

**Serial control input**

- 1 unused
- 2 Received Data
- 3 Transmitted Data
- 4 Data Terminal Ready
- 5 Signal Ground
- 6 Data Set Ready
- 7 Request To Send
- 8 Clear To Send
- 9 unused at present

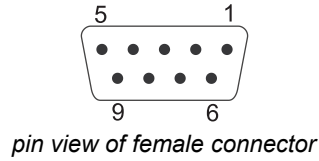

**Null-modem cable**

(used to connect the projector to a computer)

RD	2	---	3	TD
TD	3	---	2	RD
DTR	4	---	6	DSR
GND	5	---	5	GND
DSR	6	---	4	DTR
RTS	7	---	8	CTS
CTS	8	---	7	RTS

**Modem settings**

- Baud rate            38,400 bps
- Data length        8 bits
- Parity                none
- Stop bits            one
- Handshaking      Full duplex RTS/CTS  
                               Xon/Xoff not supported

**Notes**


- The projector is a DTE, so use:*
- *a straight cable to connect to a modem, or*
  - *a null-modem cable as shown here to connect to another DTE such as a computer.*

### Using Windows Hyperterminal to connect to the projector



Many features of the projector can be controlled remotely by sending ascii character strings to the serial control input, or via a LAN, using the protocol and syntax described in the following pages.

If you are using a PC running Windows 95, 98, Me, NT, 2000 or XP, you can send the control codes using Windows Hyperterminal. This can usually be found in:


Start → All Programs → Accessories → Communications → Hyperterminal:

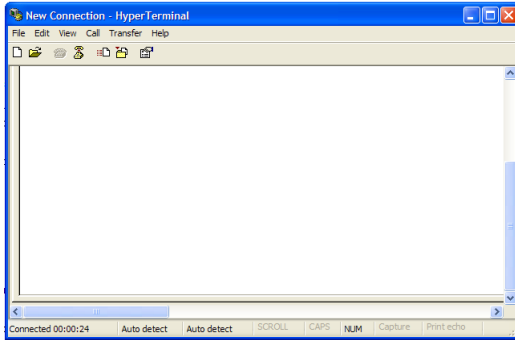

In File → Properties, set the connection either to your serial link or LAN connection. For a serial connection, use the settings detailed on the previous page. For a LAN connection, connect to the server using port number 7000.

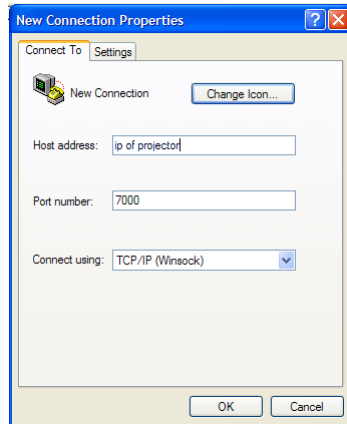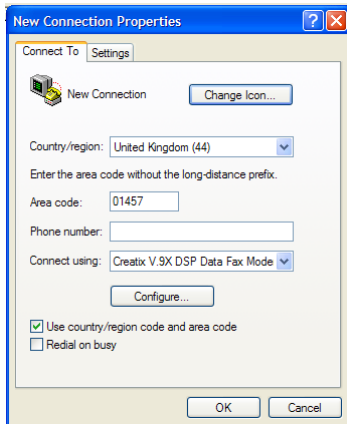


In File → Properties → Settings → Ascii Setup, set the sending and receiving characters as shown below:

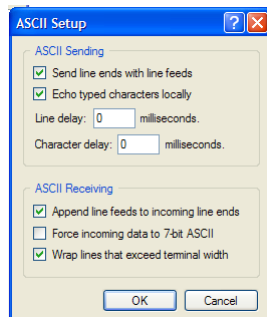

Commands can be sent to the projector simply by typing in the Hyperterminal window. Replies will also be seen in the window.

### Notes

 For a full description of all the Control codes available, see the **Lightning 35HD Communications Protocol**, on the following pages.

## Remote communications protocol

### Version 1.2 Patch A

Each command string sent to the projector should start with character 0x0a and end with character 0x0d. If you are using Windows Hyperterminal, then this will be taken care of by the Ascii Setup described on the previous page.

Prefix each command with:

*"[id],[user],[time],[date],[command priority],[projector id],[projector name],"*

**for example:**

*1234,external,16:37:31,01/04/2004,5,543210,DPL-123,*

**example lens command** (close shutter)

*1234,external,15:20:25,14/10/2004,5,543210,DPL-123,lens,move,write,s,c,0,0*

**example lens command** (open shutter)

*1234,external,15:20:30,14/10/2004,5,543210,DPL-123,lens,move,write,s,o,0,0*

### Image commands

#### *Image Brightness*

**Used to set and query image brightness (lift) levels.**

CALL : "image,brightness,write,r,[level],g,[level],b,[level],o,[level],a,[mode]"

: Where [level] is -0.5 to 0.5 in steps of 0.001

: and [mode] is either "on" or "off"

: 'o' is overall level - only valid if 'a' is set to 'off'.

: 'a' is auto level control.

RETURNS : "[msg id],ACK,brightness,r,[level],g,[level],b,[level],o,[level],a,[mode]"

: OR

: "[msg id],NAK,brightness"

CALL : "image,brightness,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],brightness,[r level],[g level],[b level],[o level],[a mode]"

: OR

: "[msg id],NAK,brightness"

#### Notes



*Details of how to connect to the projector, using the serial control input or via a LAN, can be found on the previous page.*

**Image Contrast****Used to set and query image contrast (gain) levels.**

CALL : "image,contrast,write,r,[r level],g,[g level],b,[b level],o,[level],a,[mode]"

: Where [level] is 0.0 to 2.0 in steps of 0.001

: and [mode] is either "on" or "off"

: 'o' is overall level - only valid if 'a' is set to 'off'.

: 'a' is auto level control.

RETURNS : "[msg id],ACK,contrast,r,[r level],g,[g level],b,[b level],o,[level],a,[mode]"

: OR

: "[msg id],NAK,contrast"

CALL : "image,contrast,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],contrast,[r level],[g level],[b level],[o level],[a mode]"

: OR

: "[msg id],NAK,contrast"

**Image Projection Mode****Used to set and query image projection mode.**

CALL : "image,projectionmode,write,[mode]"

: Where [mode] is one of "curtain", "testpattern" or "normal"

RETURNS : "[msg id],ACK,projectionmode,[mode]"

: OR

: "[msg id],NAK,projectionmode"

CALL : "image,projectionmode,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],projectionmode,[mode]"

: OR

: "[msg id],NAK,projectionmode"

**Notes**

**Image Orientation**

**Used to set and query image orientation.**

CALL : "image,imageorient,write,[orient]"  
: Where [orient] is one of "normal", "nsflip", "ewflip" or "newsflip"

RETURNS : "[msg id],ACK,imageorient,[orient]"  
: OR  
: "[msg id],NAK,imageorient"

CALL : "image,imageorient,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],imageorient,[orient]"  
: OR  
: "[msg id],NAK,imageorient"

**Image Mirror Park**

**Used to set and query mirror park.**

CALL : "image,mirrorpark,write,[mode]"  
: Where [mode] is one of "park" or "release"

RETURNS : "[msg id],ACK,mirrorpark,[orient]"  
: OR  
: "[msg id],NAK,mirrorpark"

CALL : "image,mirrorpark,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],mirrorpark,[mode]"  
: OR  
: "[msg id],NAK,mirrorpark"

**Notes**



**Image Colour Temperature Gain**

*Used to set and query image colour temperature levels.*

CALL : "image,colourtempgain,write,r,[r level],g,[g level],b,[b level]"  
: Where [level] is 0.0 to 2.0 in steps of 0.001

RETURNS : "[msg id],ACK,colourtempgain,r,[r level],g,[g level],b,[b level]"  
: OR  
: "[msg id],NAK,colourtempgain"

CALL : "image,colourtempgain,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],colourtempgain,[r level],[g level],[b level]"  
: OR  
: "[msg id],NAK,colourtempgain"

**Input Image Size**

*Used to set and query image input size.*

CALL : "image,inputimagesize,write,c,[cols],r,[rows]"  
: Where [cols] is the number of pixels range 640 to DMD size  
: and [rows] is the number of lines range 480 to DMD size.

RETURNS : "[msg id],ACK,inputimagesize,c,[cols],r,[rows]"  
: OR  
: "[msg id],NAK,inputimagesize"

CALL : "image,inputimagesize,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],ACK,inputimagesize,[cols],[rows]"  
: OR  
: "[msg id],NAK,inputimagesize"

**Notes**

**Input Image Window Size****Used to set and query image input window size.**

CALL : "image,inputimagewindow,write,c,[cols],r,[rows]"  
 : Where [cols] is the number of pixels range 640 to DMD size  
 : and [rows] is the number of lines range 480 to DMD size.

RETURNS : "[msg id],ACK,inputimagewindow,c,[cols],r,[rows]"  
 : OR  
 : "[msg id],NAK,inputimagewindow"

CALL : "image,inputimagewindow,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],ACK,inputimagewindow,[cols],[rows]"  
 : OR  
 : "[msg id],NAK,inputimagewindow"

**Image Position****Used to set and query image position.**

CALL : "image,imageposition,write,c,[cols offset],r,[rows offset]"  
 : Where [cols] is the number of pixels offset from centre  
 : and [rows] is the number of lines offset from centre.  
 : Positive values move the image down and right and negative move  
 : the image up and left.

RETURNS : "[msg id],ACK,imageposition,c,[cols offset],r,[rows offset]"  
 : OR  
 : "[msg id],NAK,imageposition"

CALL : "image,imageposition,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],ACK,imageposition,[cols offset],[rows offset]"  
 : OR  
 : "[msg id],NAK,imageposition"

**Notes**

**Input Capture Offset**

*Used to set and query image capture offset.*

CALL : "image,inputcaptureoffset,write,c,[cols offset],r,[rows offset]"  
: Where [cols] is the number of pixels offset from centre  
: and [rows] is the number of lines offset from centre.  
: Positive values move the image down and right and negative move  
the image up and left.

RETURNS : "[msg id],ACK,inputcaptureoffset,c,[cols offset],r,[rows offset]"  
: OR  
: "[msg id],NAK,inputcaptureoffset"

CALL : "image,inputcaptureoffset,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],ACK,inputcaptureoffset,[cols offset],[rows offset]"  
: OR  
: "[msg id],NAK,inputcaptureoffset"

**Notes**

**Test Patterns**

**Used to set and query test patterns.**

CALL : "image,testpattern,write,[pattern name][vertical rate]"

: Where [pattern name] is one of:

: black - Full Screen Black

: white - Full Screen White

: green - Full Screen Green

: red - Full Screen Red

: blue - Full Screen Blue

: checker - ANSI Checkerboard

: align - Alignment Pattern

: h\_ramp - Horizontal Ramp

: v\_ramp - Vertical Ramp

: max\_lumens - Native White

: native\_white - Native White

: off - Normal Picture

: and [vertical rate] is 60.

RETURNS : "[msg id],ACK,testpattern,[pattern name][vertical rate]"

: OR

: "[msg id],NAK,testpattern"

CALL : "image,testpattern,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],testpattern,[pattern name][vertical rate]"

: OR

: "[msg id],NAK,testpattern"

**Notes**

**Degamma Table Select**

*Used to set and query degamma table settings.*

CALL : "image,degammaselect,write,[table no.][parametric]"  
: Where [table no.] is one of:  
: 0 - Graphics/NTSC  
: 1 - Graphics Enhanced  
: 2 - NTSC Enhanced  
: 3 - PAL/SECAM 2.8  
: 4 - PAL/SECAM Enhanced  
: 5 - Linear  
:  
: 255 - use parametric value:  
:  
: and [parametric] is in the range 0.01 to 4.0 in steps of 0.0001

RETURNS : "[msg id],ACK,degammaselect,[table no.][parametric]"  
: OR  
: "[msg id],NAK,degammaselect"

CALL : "image,degammaselect,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],degammaselect,[table no.][parametric]"  
: OR  
: "[msg id],NAK,degammaselect"

Notes
-------

**Picture Mute**

*Used to set and query picture mute.*

CALL : "image,picmute,write,[mode]"  
: Where [mode] is one of "on" or "off"

RETURNS : "[msg id],ACK,picmute,[mode]"  
: OR  
: "[msg id],NAK,picmute"

CALL : "image,picmute,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],picmute,[mode]"  
: OR  
: "[msg id],NAK,picmute"

**Notes**

## Lens Commands

### *Lens Stop All*

*Used to stop all lens motors.*

CALL : "lens,stop,write"

RETURNS : "[msg id],ACK,stop"

: OR

: "[msg id],NAK,stop"

### *Lens Move*

*Used to move lens position left-right, up-down and open/close shutter.*

CALL : "lens,move,write,[axis],[direction],[time],[speed]"

: Where [axis] is one of:

: h - horizontal

: v - vertical

: f - focus

: z - zoom

: s - shutter

: [direction is one of:

: l - left (use with 'h')

: r - right "

: u - up (use with 'v')

: d - down "

: o - open (use with shutter)

: c - close "

: [time] is the move time in milliseconds, currently recommended minimum is 300.

: [speed] is 0 for slow and 50 for fast.

NOTE : Only one axis may be driven at a time.

RETURNS : "[msg id],ACK,move"

: OR

: "[msg id],NAK,move"

**Notes**

**Lens Goto Absolute Position****Used to move lens to absolute co-ordinates.**

CALL : "lens,goto,write,h,[hpos],v,[vpos],f,[fpos],z,[zpos]"  
 : Where hpos, vpos, fpos and zpos are values probably obtained from a 'goto read'

NOTE : Any one or all axis may be driven at the same time.

RETURNS : "[msg id],ACK,goto"  
 : OR  
 : "[msg id],NAK,goto"

CALL : "lens,goto,read,[urgency switch]"

NOTE : Urgency switch is currently ignored (can be set to 0).

RETURNS : "[msg id],goto,[hvfz],[hpos],[ypos],[fpos],[zpos],[spos]"  
 : where h,v,f and z are either an axis letter or dash. A letter present indicates that  
 : axis is still moving. (eg "H-F-" means that Horizontal and Focus are still moving)  
 : [spos] is the shutter position either "o" for open or "c" for closed.  
 : OR  
 : "[msg id],NAK,goto"

**Lens Goto Centre****Used to centre lens mount.**

CALL : "lens,gotocentre,write"  
 RETURNS : "[msg id],ACK,gotocentre"  
 : OR  
 : "[msg id],NAK,gotocentre"

**Lens Calibrate Zoom****Used to calibrate zoom range.**

CALL : "lens,calibratezoom,write"  
 RETURNS : "[msg id],ACK,calibratezoom"  
 : OR  
 : "[msg id],NAK,calibratezoom"

**Notes**



**PSU Commands**

**Lamp On**

*Used to turn Lamp on and query Lamp state.*

CALL : "lpsu,on,write,[lamp number]"

NOTE : Lamp number currently ignored but must be present  
: (can be set to 0).

RETURNS : "[msg id],ACK,on"  
: "[msg id],NAK,on"

CALL : "lpsu,on,read,[urgency switch],[lamp number]"

NOTE : Urgency switch and lamp number currently ignored  
: but must be present (can be set to 0).

RETURNS : "[msg id],lpsu,on"  
: OR  
: "[msg id],lpsu,off"  
: OR  
: "[msg id],NAK,on"

**Lamp Off**

*Used to turn Lamp off and query Lamp state.*

CALL : "lpsu,off,write,[lamp number]"

NOTE : Lamp number currently ignored but must be present  
: (can be set to 0).

RETURNS : "[msg id],ACK,on"  
: "[msg id],NAK,on"

CALL : "lpsu,on,read,[urgency switch],[lamp number]"

NOTE : Urgency switch and lamp number currently ignored but must be present (can be set to 0).

RETURNS : "[msg id],lpsu,on"  
: OR  
: "[msg id],lpsu,off"  
: OR  
: "[msg id],NAK,on"

<i>Notes</i>

**Lamp Power**

**Used to set and query Lamp power level.**

CALL : "lpsu,power,write,[lamp number],[% power]"

NOTE : Lamp number currently ignored but must be present

: (can be set to 0).

RETURNS : "[msg id],ACK,power"

: "[msg id],NAK,power"

CALL : "lpsu,power,read,[urgency switch],[lamp number]"

NOTE : Urgency switch and lamp number currently ignored but must be present (can be set to 0).


RETURNS : "[msg id],power,[% power]"

: OR

: "[msg id],NAK,power"

**Notes**

# Dimensions

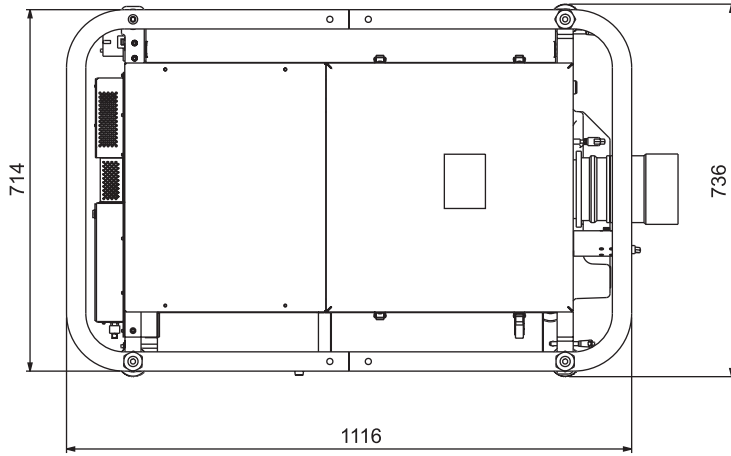

*All dimensions in mm*

