

MANUFACTURER'S LIMITED TWO YEAR **WARRANTY**

LEGACY SOUND CORP. warrants this unit to be free from defective material or workmanship and will repair or replace this unit or any part thereof if it proves defective in normal use or service within two (2) years from the date of original purchase.

Our obligation under this warranty is limited to repairing or replacing, at our discretion, the defective instrument or any part thereof when it is returned, transportation prepaid to the Legacy Service Center at the address below. This warranty will be considered void if the unit has been tampered with, improperly serviced, subjected to abuse or misuse or if installed in a commercial vehicle. This warranty does not cover accidental damage. When returning this unit for service, please include \$15.00 for return postage and handling. Send your unit to:

IMPORTANT: Pack carefully in original carton if possible. We are not responsible for damage incurred in returning items for repair. A letter stating your exact street address, daytime phone number, and the problem you are experiencing should be included. You must also enclose a copy of the original receipt as proof of date of purchase.

LEGACY SERVICE CENTER
1600 63rd Street
Brooklyn, NY 11204

FOR YOUR PROTECTION
Completely and immediately mail the Product Registration Card so that we may contact you directly in the event a safety notification is issued in accordance with the 1972 Consumer Product Safety Act, or for other reasons Legacy may deem necessary.

TECHNICAL SUPPORT HOTLINE
Our technical department will gladly answer any questions you may have about our products. They cannot, however tell you the status of a repair, or handle other customer service situations.
1-800-934-2277
Monday through Thursday, 9AM to 5PM
Friday 9AM to 2PM Eastern.

LEGACY®
www.legacycaraudio.com




LEGACY®



- LA 3 7 0
- LA 4 7 0
- LA 5 7 0
- LA 6 7 0
- LA 7 7 0
- LA 8 7 0
- LA 9 7 0
- LA14 7 0
- LA18 7 0
- LA20 7 0

**HIGH SPEED
CAR AMPLIFIER**

USER'S MANUAL

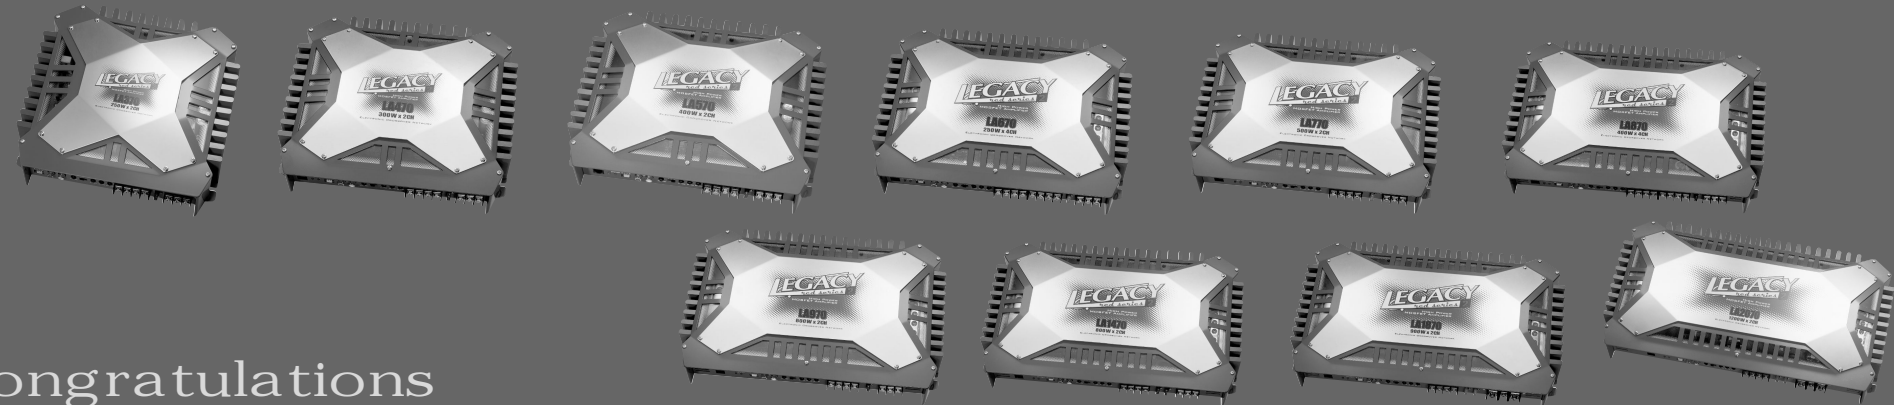

Congratulations on your purchase of a new Legacy Red Series 2 amplifier!

Legacy amps are some of the most advanced car amplification products available. These quality audio products are designed and engineered to afford you years of uncompromised musical service. Legacy has utilized the latest electronic technologies in order to deliver a superb listening experience.

This innovative system has been designed utilizing a 12 V DC Negative Ground power supply. The LEGACY Red SERIES 2 amps incorporate two to eight MOSFETS in the different models.

This design produces enough available voltage to supply the main amplifier sections, and still have a huge amount of reserve voltage for peak "high demand" situations.

The Legacy line has been designed to ensure adequate headroom for even the most demanding peaks and dynamic ranges found on today's CD's and recordings. Used properly, these amplifiers will provide you with years of listening pleasure.

USER MANUAL table of contents

- 1 SPECIFICATIONS
- 2 LA370/LA470/570/770/970/1470/1870/2070 FEATURES & CONTROLS
- 3 LA670/870 FEATURES & CONTROLS
- 4 ELECTRICAL WIRING, INSTALLATION & SETUP
- 5 2 CH STEREO INPUT CONNECTIONS
- 6 4 CH STEREO INPUT CONNECTIONS
- 8 BRIDGED INPUT CONNECTIONS
- 9 BASIC STEREO SPEAKER CONNECTIONS
- 10 MONO-BRIDGED SPEAKER CONNECTIONS
- 11 TROUBLESHOOTING
- 12 WARRANTY



Legacy Red Series 2 Amplifier Features

all amps feature:

- Polished chrome finish w/plexiglass panel
- Soft turn on/off circuit
- Variable gain control
- Remote turn on/off
- Hi/low level inputs
- Power on LED indicator
- Fully adjustable electronic crossover network
- Remote control Bass boost (0 - +18dB @ 60Hz)
- 2 ohm stereo stable
- Bridgeable into 4 ohms
- MOSFET PWM power supplies
- LED protection indicator

Specifications

	LA370 2CH amplifier	LA470 2CH amplifier	LA570 2CH amplifier	LA670 4CH amplifier	LA770 2CH amplifier	LA870 4CH amplifier	LA970 2CH amplifier	LA1470 2CH amplifier	LA1870 2CH amplifier	LA2070 2CH amplifier
OUTPUT POWER										
RMS @ 4 OHMS	2 X 40W	2 X 40W	2 X 50W	4 X 35W	2 X 75W	4 X 50W	2 X 100W	2 X 125W	2 X 150W	2 X 230W
RMS @ 2 OHMS	2 X 60W	2 X 60W	2 X 85W	4 X 55W	2 X 125W	4 X 85W	2 X 150W	2 X 200W	2 X 230W	2 X 350W
MAX OUTPUT	2 X 250W	2 X 300W	2 X 400W	4 X 250W	2 X 500W	4 X 400W	2 X 600W	2 X 800W	2 X 900W	2 X 1200W
BRIDGE MODE	1 X 500W	1 X 600W	1 X 800W	2 X 500W (2 X 250W+1X500W)	1 X 1000W	2 X 800W (2 X 400W+1X800W)	1 X 1200W	1 X 1600W	1 X 1800W	1 X 2400W
FREQUENCY RESPONSE	10-30 kHz									
INPUT IMPEDANCE										
LOW LEVEL INPUTS	10 k-Ohms									
HIGH LEVEL INPUTS	100 Ohms									
INPUT SENSITIVITY										
LOW LEVEL INPUTS	250 mV									
HIGH LEVEL INPUTS	2.5V									
POWER SUPPLY VOLTAGE	14.4 VDC/NEG GD (10.5-16V)									
MATCHING SPEAKER IMPEDANCE										
STEREO MODE	2-4 OHMS	2-4 OHMS	2-4 OHMS	2-4 OHMS	2-4 OHMS	2-4 OHMS	2-4 OHMS	2-4 OHMS	2-4 OHMS	2-4 OHMS
BRIDGED MODE	4-8 OHMS	4-8 OHMS	4-8 OHMS	4-8 OHMS	4-8 OHMS	4-8 OHMS	4-8 OHMS	4-8 OHMS	4-8 OHMS	4-8 OHMS
MAXIMUM CURRENT DRAW	15 A	15 A	15 A	20 A	20 A	30 A	30 A	30 A	40 A	40 A
DIMENSIONS, W x H x L, inches (mm)	10.4 X 2.6 X 10.5 (264 X 66 X 268)	10.4 X 2.6 X 12 (264 X 66 X 304)	10.4 X 2.6 X 12.7 (264 X 66 X 322)	10.4 X 2.6 X 14 (264 X 66 X 358)	10.4 X 2.6 X 14 (264 X 66 X 358)	10.4 X 2.6 X 15.5 (264 X 66 X 394)	10.4 X 2.6 X 15.5 (264 X 66 X 394)	10.4 X 2.6 X 16.2 (264 X 66 X 412)	10.4 X 2.6 X 17 (264 X 66 X 430)	10.4 X 2.6 X 19 (264 X 66 X 484)
NET WEIGHT, LBS (KG)	7.3 (3.3)	8.4 (3.7)	8.8 (4)	9.7 (4.4)	9.6 (4.3)	10.6 (4.8)	10.4 (4.7)	11 (5)	11.5 (5.2)	13 (5.9)

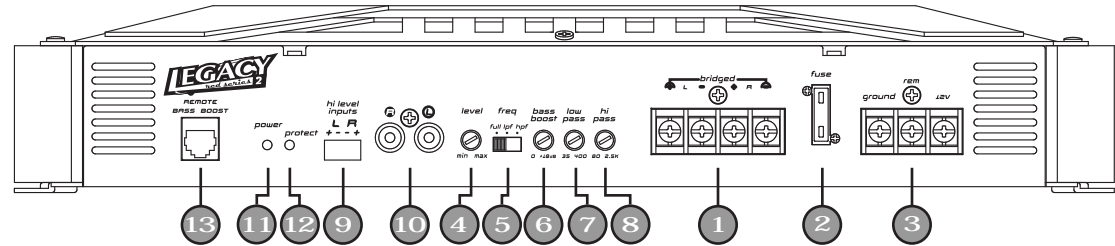
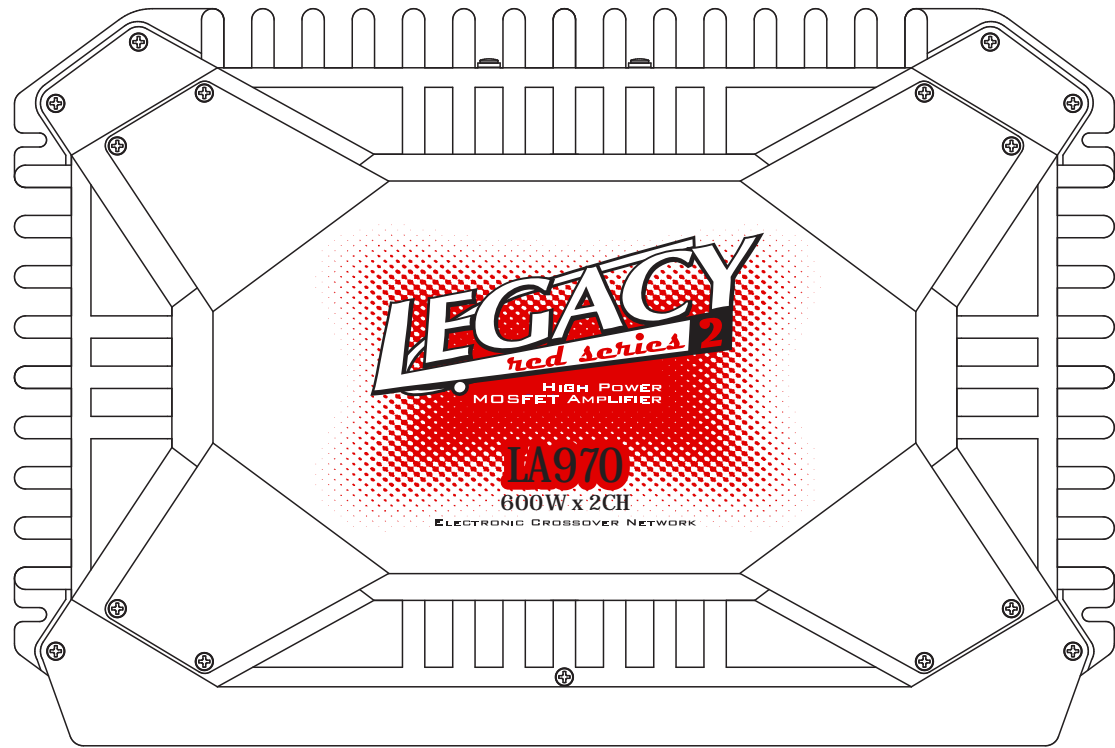


- 1 **Speaker Terminals**
These terminals are 14K Gold plated for high conductivity and minimum impedance loss. The terminals face upwards for easy wiring in tight situations.
- 2 **Fuse**
Protects the amplifier as well as the automobile electrical system from short circuit conditions.
- 3 **Power Supply Terminals**
- 4 **Input Level Control**
Use this control to match the output of the head unit to the amplifier. If distortion is present, reduce the setting of this control.
- 5 **Crossover Mode Switch**
In a full range system, set this to FULL. If the amp is being used to power a crossover system, set to either HPF or LPF as needed.
- 6 **Bass Boost Control**
Allows you to increase the bass signal level sent to the speakers
- 7 **Low Pass Control**
Permits you to adjust the crossover frequency from 35 Hz to 400 Hz to suit the subwoofers
- 8 **High Pass Control**
Permits you to adjust the crossover frequency from 80 Hz to 2.5 kHz to suit the tweeters
- 9 **High Level Input (Low Impedance)**
Use these if your car stereo does not have RCA output jacks; connect the speaker output from the head unit to these inputs
- 10 **Low Level Input (High Impedance)**
This unit is provided with gold-plated RCA input jacks. Using RCA-RCA type patch cords, connect these inputs to the RCA outputs from your head unit.
- 11 **Power LED Indicator**
This LED is illuminated when the REMOTE ON system is turned on.
- 12 **Protection LED Indicator**
The protection circuitry in the amp will disable it if it senses an input overload, speaker short circuit, or thermal overload conditions. Should this occur, the PROTECT LED will be illuminated. At that time, it is important that you check to determine what has caused the protection circuitry to become activated.

If the amp shut off because of a thermal overload, allow it to cool down before attempting to restart.

If the shutdown occurred because of an input overload, or speaker short circuit, be sure to correct these conditions before attempting to restart the amp.

To reset the amp, turn the REMOTE power off and on again.
- 13 **Remote Bass Boost (LA370 without)**
Plug in the Remote Bass Boost Control wire in here.

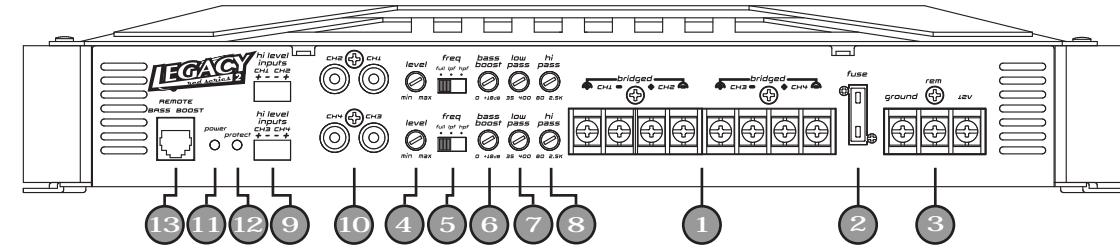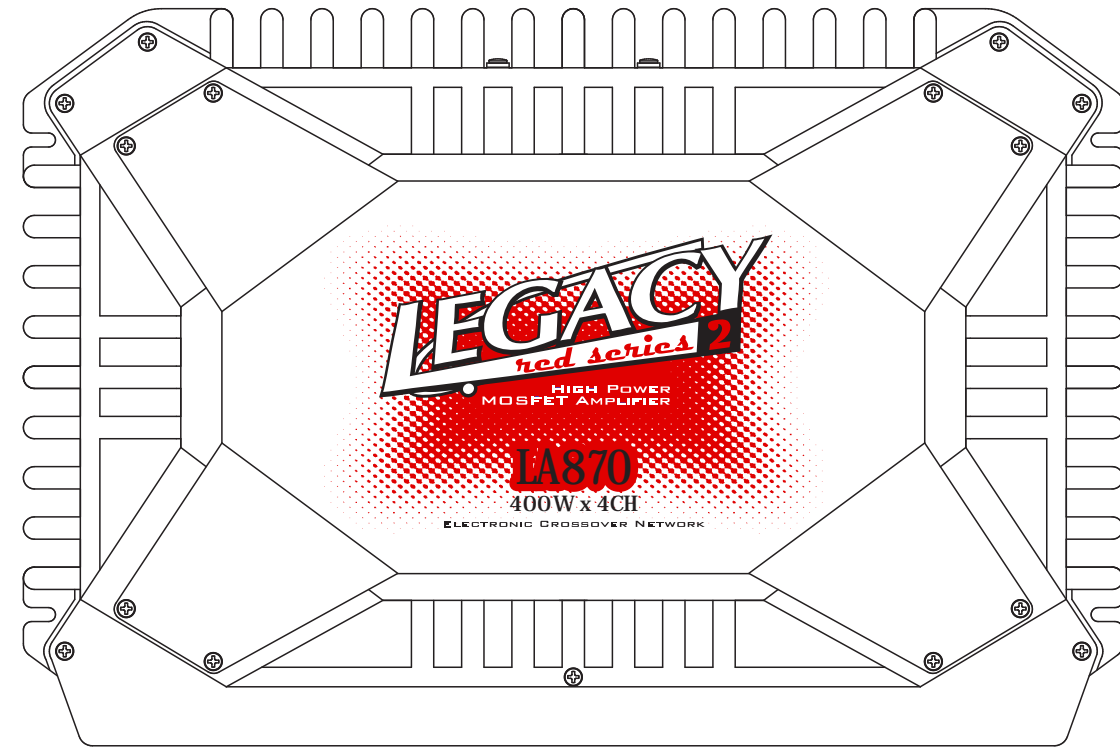

- 1 **Speaker Terminals**
These terminals are 14K Gold plated for high conductivity and minimum impedance loss. The terminals face upwards for easy wiring in tight situations.
- 2 **Fuse**
Protects the amplifier as well as the automobile electrical system from short circuit conditions.
- 3 **Power Supply Terminals**
- 4 **Input Level Control**
Use this control to match the output of the head unit to the amplifier. If distortion is present, reduce the setting of this control.
- 5 **Crossover Mode Switch**
In a full range system, set this to FULL. If the amp is being used to power a crossover system, set to either HPF or LPF as needed.
- 6 **Bass Boost Control**
Allows you to increase the bass signal level sent to the speakers
- 7 **Low Pass Control**
Permits you to adjust the crossover frequency from 35 Hz to 400 Hz to suit the subwoofers
- 8 **High Pass Control**
Permits you to adjust the crossover frequency from 80 Hz to 2.5 kHz to suit the tweeters
- 9 **High Level Input (Low Impedance)**
Use these if your car stereo does not have RCA output jacks; connect the speaker output from the head unit to these inputs
- 10 **Low Level Input (High Impedance)**
This unit is provided with gold-plated RCA input jacks. Using RCA-RCA type patch cords, connect these inputs to the RCA outputs from your head unit.
- 11 **Power LED Indicator**
This LED is illuminated when the REMOTE ON system is turned on.
- 12 **Protection LED Indicator**
The protection circuitry in the amp will disable it if it senses an input overload, speaker short circuit, or thermal overload conditions. Should this occur, the PROTECT LED will be illuminated. At that time, it is important that you check to determine what has caused the protection circuitry to become activated.


If the amp shut off because of a thermal overload, allow it to cool down before attempting to restart.

If the shutdown occurred because of an input overload, or speaker short circuit, be sure to correct these conditions before attempting to restart the amp.

To reset the amp, turn the REMOTE power off and on again.
- 13 **Remote Bass Boost**
Plug in the Remote Bass Boost Control wire in here.

Making Power Connections

1. Connect the +12V terminal directly to the car battery (+) terminal.
2. Connect the GROUND terminal directly to the car battery (-) terminal OR to a good clean, paint-free chassis ground point.
3. To ensure a good ground, and to prevent “motor-boating” noise in the system, make an additional connection from the car battery (-) terminal to the chassis of the stereo unit, using 12 gauge minimum wire.
4. Connect the REMOTE terminal to an external switch for positive 12V turnon-off. This may be connected to the head unit power antenna lead.

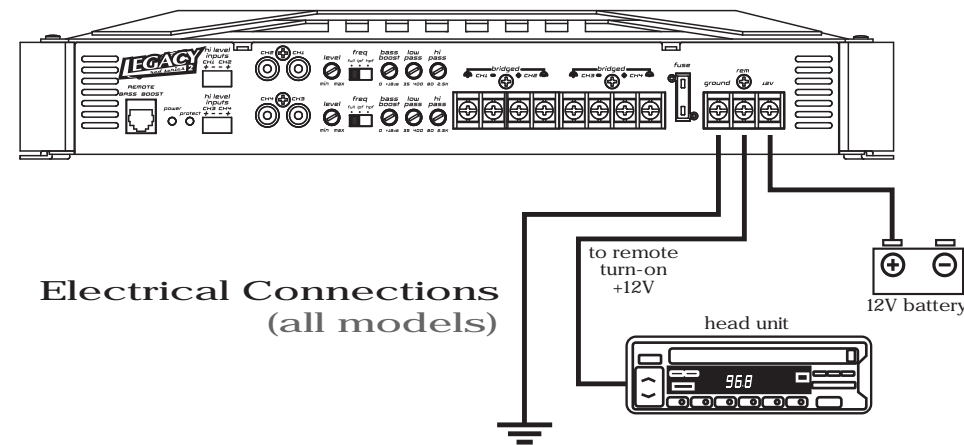

Installation Precautions

This amplifier comes complete with all mounting hardware required. Please remember that this is a high-power unit, which generates considerable electrical energy and heat. Therefore, be sure to install the unit in a place with sufficient airflow, a minimum of dust, and no moisture. Allow enough space around the cooling fins to permit reasonable airflow and cooling.

- Before you drill or cut any holes, investigate your car’s layout very carefully. Take care when you work near the gas tank, fuel lines, hydraulic line and electrical wiring.
- Do not operate the amplifier when it is unmounted. Attach all audio system components securely within the automobile to prevent damage, especially in an accident.
- Do not mount this amplifier so that the wire connections are unprotected or in a pinched condition, or likely to be damaged by nearby objects. Be sure to select a location inside your vehicle which has adequate ventilation.
- Before making or breaking power connections in your system, disconnect the vehicle battery. Confirm that your head unit or other equipment is turned off while connecting the input jacks and speaker terminals.
- If you need to replace the power fuse, only replace it with a fuse identical to that supplied with the system. Using a fuse of a different type or rating may result in damage to your system which isn’t covered by the manufacturer’s warranty.

Setting Up and Turning On Your New Amplifier

After all electrical connections have been made, and physical installation is complete, turn on your stereo and listen for the amplifier to turn on. If there are any unusual noises from the speakers, turn the stereo off and recheck ALL wiring.

Assuming the amplifier turn on normally, you may have to adjust the LEVEL control(s) to match the output levels from your head unit. Follow these steps:


1. Set the volume control on your head unit to about the 2/3 position.
2. Adjust the amplifier LEVEL control(s) to an average listening position.
3. Turn the head unit volume all the way down, and listen for background noise.
4. Start your vehicle, and again, listen for background noise.
5. By fine tuning the LEVEL control(s), you can reduce background and engine noise, if present.

These adjustments should only be made once. After that, use the head unit volume control to adjust the system volume, not the LEVEL control(s).

CAUTION: Never turn the LEVEL control(s) up any higher than you need to get clear sound at 2/3 volume on the head unit.


Electrical Wiring and Installation

Low Level Stereo Input Connection

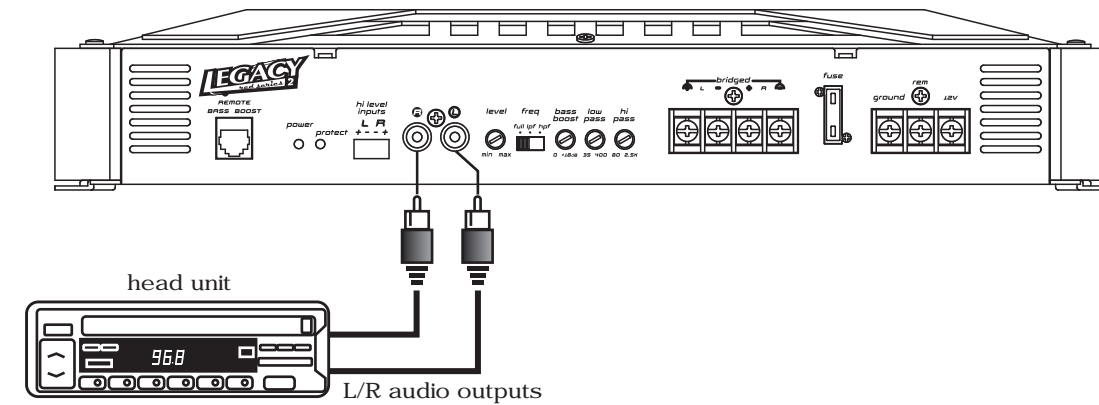


High Level Stereo Input Connection

PLEASE NOTE! If using high level inputs, do not use the low level RCA inputs at the same time!

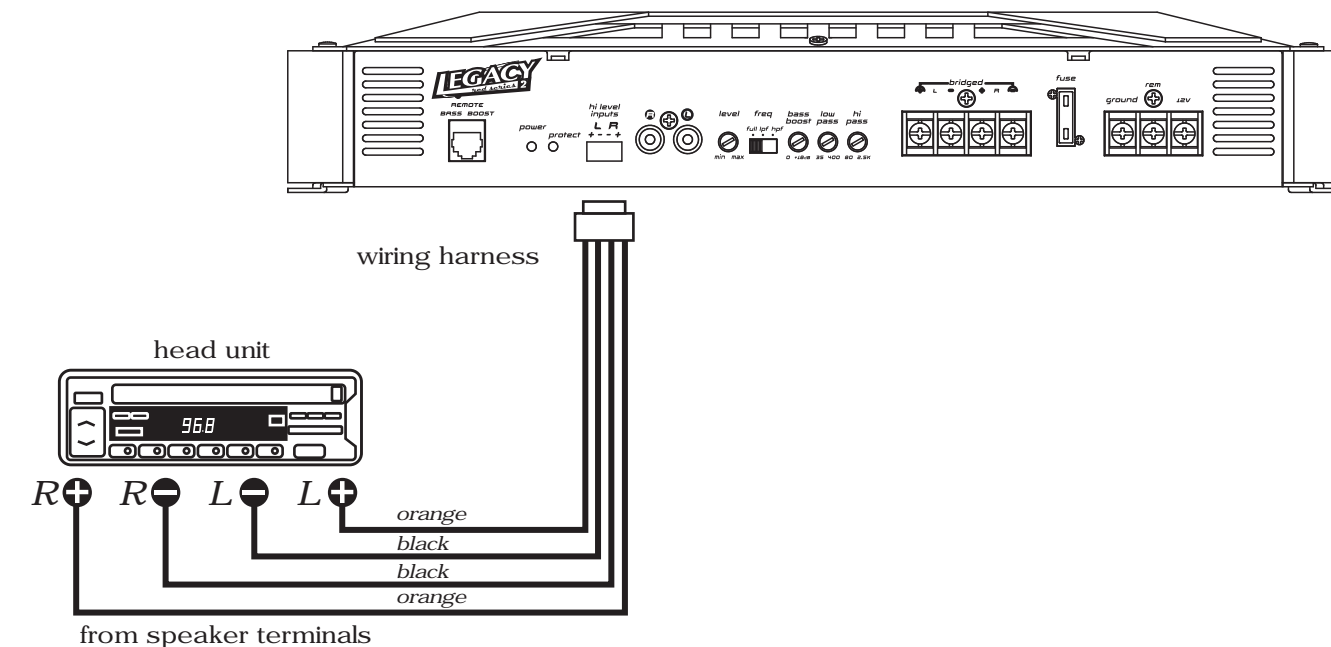


LA370
LA470
LA570
LA770
LA970
LA1470
LA1870
LA2070
2CH AMPS


LA670
LA870
4CH AMPS

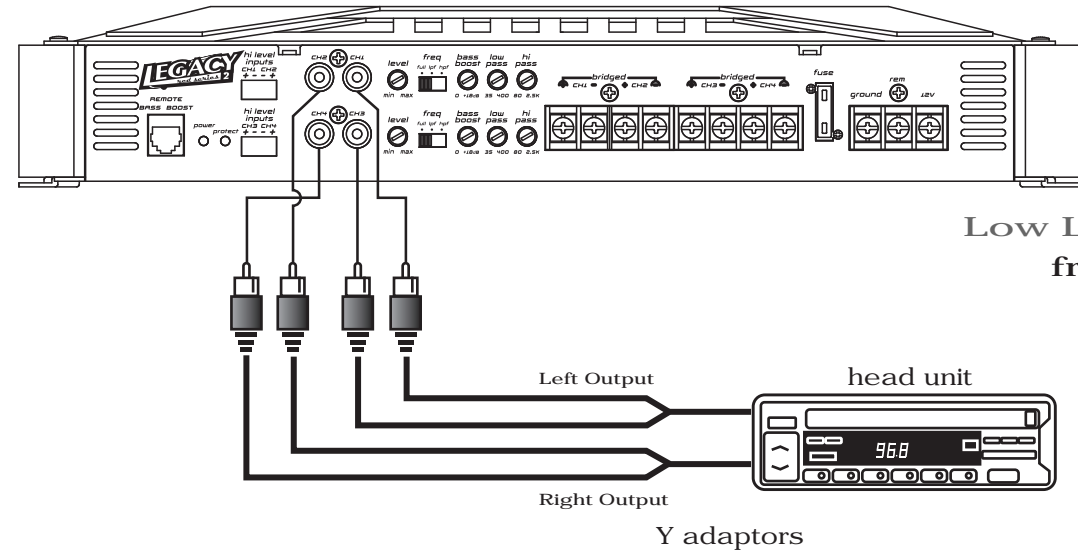


Low Level 4 CH Stereo Input
from 2 CH Audio Source

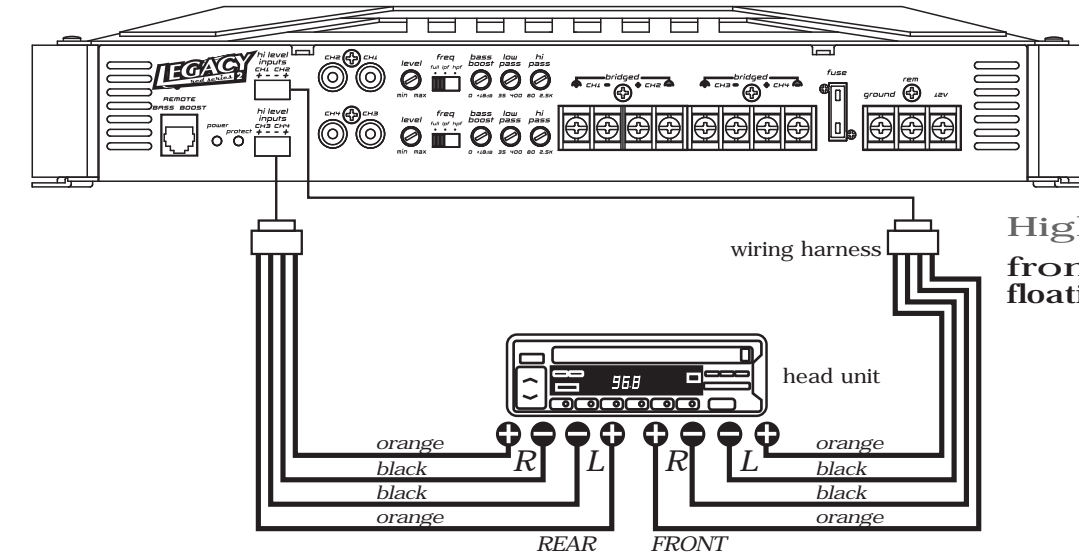

High Level 4 CH Stereo Input
from 4CH Audio Source
floating ground connection

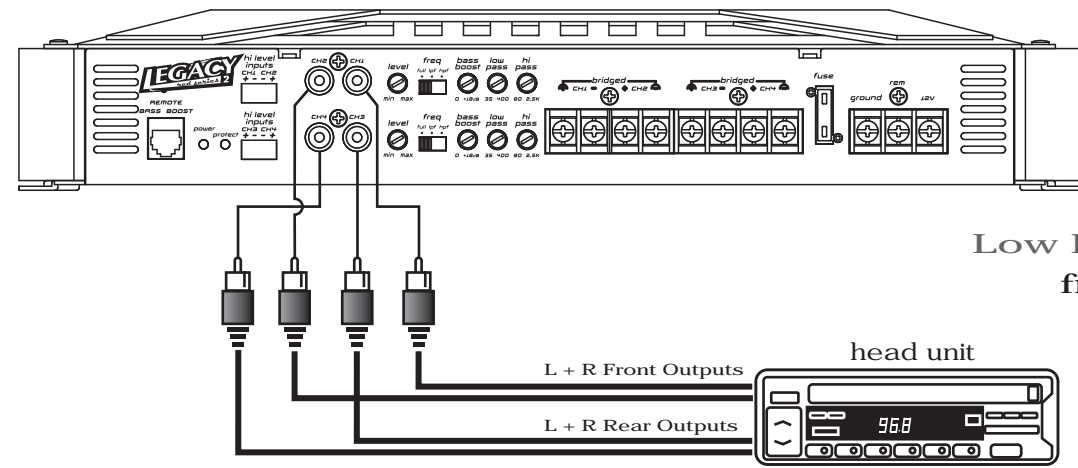


Low Level 4 CH Stereo Input
from 4 CH Audio Source

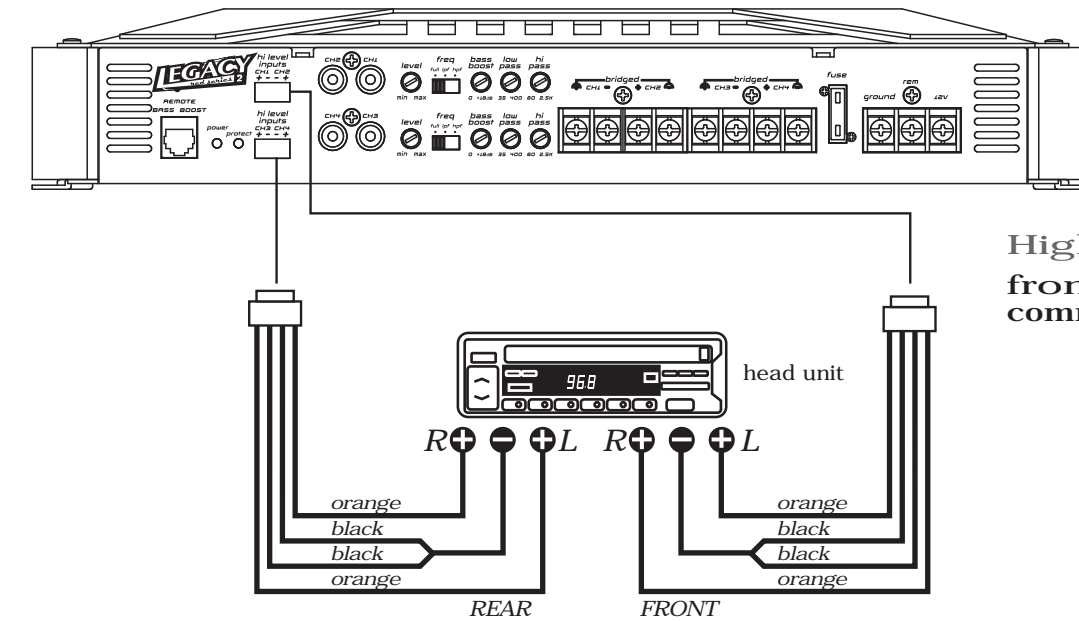


High Level 4 CH Stereo Input
from 4CH Audio Source
common ground connection

LA370
 LA470
 LA570
 LA770
 LA970
 LA1470
 LA1870
 LA2070
 2CH AMPS

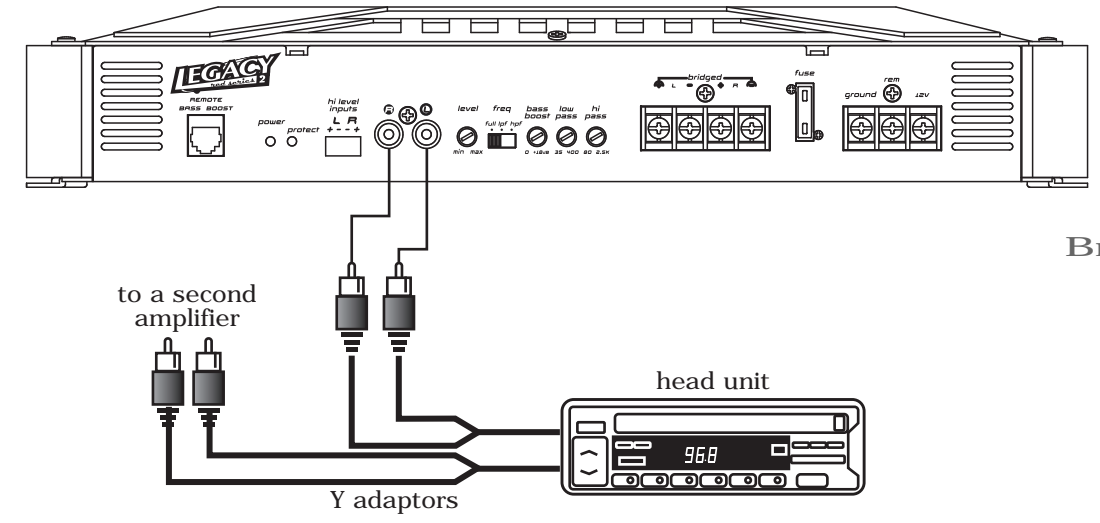


Bridged Input Connection

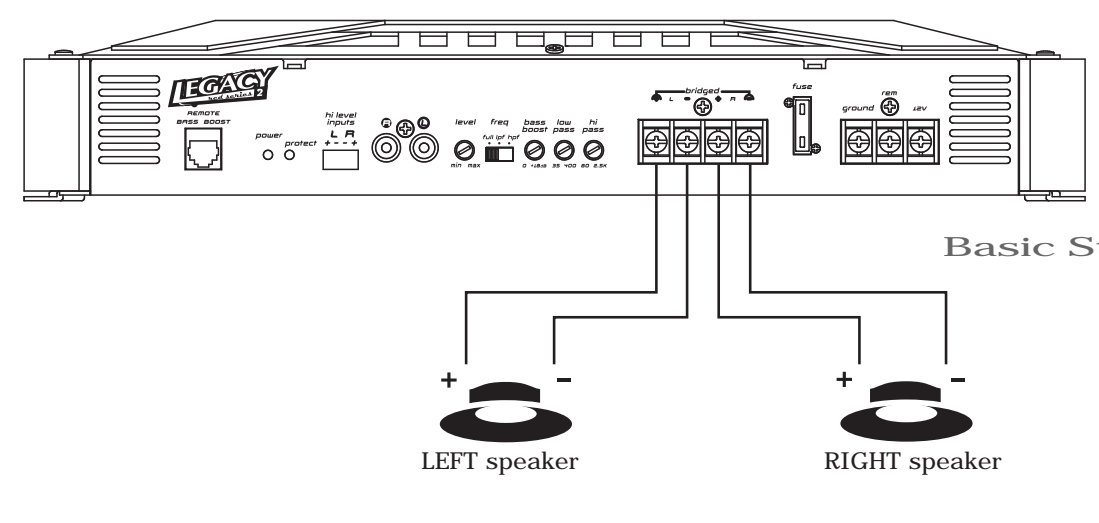


Basic Stereo Output

LA370
 LA470
 LA570
 LA770
 LA970
 LA1470
 LA1870
 LA2070
 2CH AMPS

LA670
 LA870
 4CH AMPS

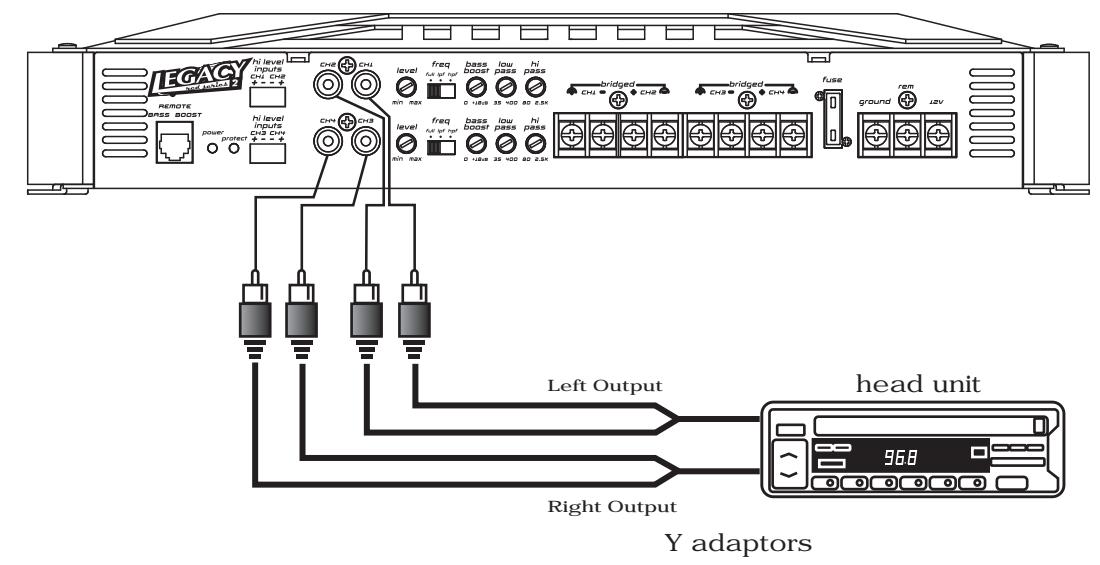

4 CH Bridged Input from 2 CH Audio Source
 CH1+2 = Left Channel
 CH3+4 = Right Channel

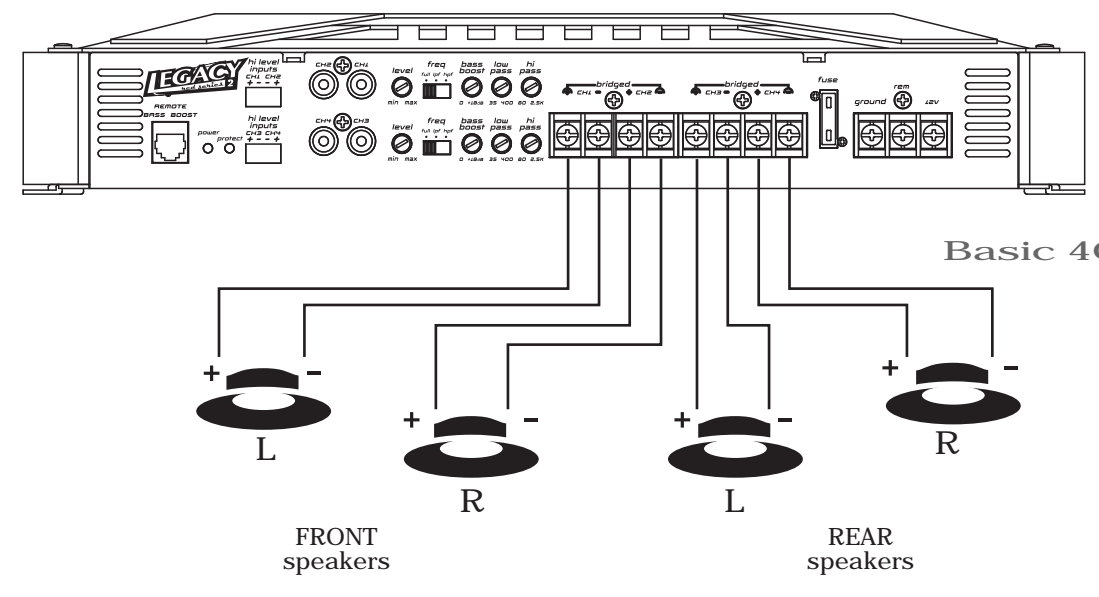


Basic 4CH Output

LA670
 LA870
 4CH AMPS

Input Connections

speakers
 Speaker Connections


LA370
LA470
LA570
LA770
LA970
LA1470
LA1870
LA2070
2CH AMPS

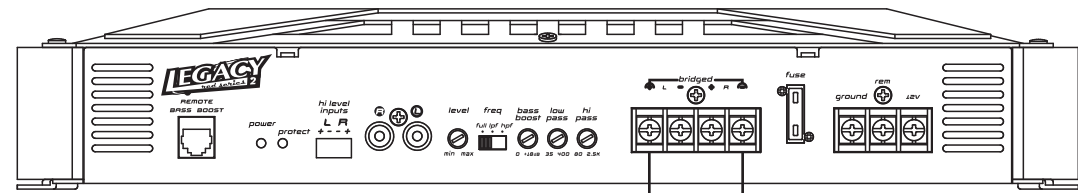



Bridged Mono Output



LA670
LA870
4CH AMPS

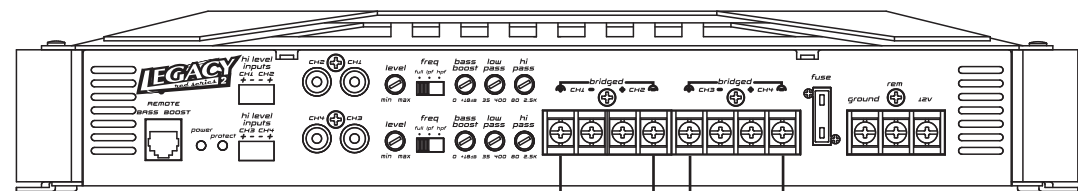

2 CH Mono-Bridged Output

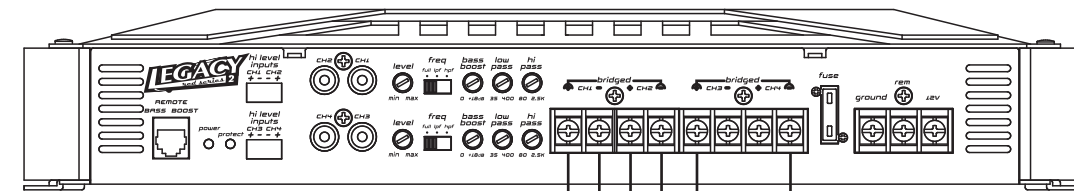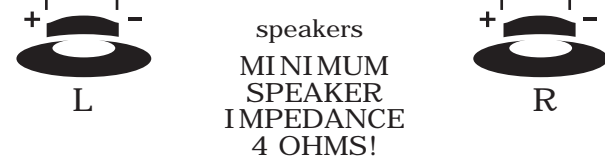

2 CH Stereo plus Mono-Bridged Subwoofer Output



LA670
LA870
4CH AMPS

TROUBLESHOOTING

Amplifier will not power up.

- Check for good ground connection.
- Check that remote DC terminal has at least +12v DC.
- Check that there is battery power on the + terminal.
- Check all fuses.
- Check that Protection LED is not lit. If it is lit, shut off amplifier briefly and then repower it.

High hiss or engine noise (alternator whine) in speakers.

- Disconnect all RCA inputs to the amplifier(s) - if hiss/noise disappears, then plug in the component driving the amplifier and unplug its inputs. If hiss/noise disappears, go on until the faulty/noisy component is found.
- It is best to set the amplifier's input level as insensitive as possible. The best subjective S/N ratio is obtainable this way. Try to drive as high a signal level from the head unit as possible.

Protection LED comes on when the amplifier is powered up.

- Check for shorts on speaker leads.
- Check that the volume control on the head unit is turned down low.
- Remove speaker leads, and reset the amplifier. If the Protection LED still comes on, then the amplifier is faulty.

Before removing your amplifier, refer to the list below and follow the suggested procedures. Always test the speakers and their wires first.

Amplifier(s) gets very hot.

- Check that the minimum speaker impedance for that model is correct.
- Check for speaker shorts.
- Check that there is good airflow around the amplifier. In some applications, an external cooling fan may be required.

Distorted sound

- Check that the Level control(s) is set to match the signal level of the head unit.
- Check that all crossover frequencies are properly set.
- Check for shorts on the speaker leads.

High squeal noise from speakers.

- This is almost always caused by a poorly-grounded RCA patch cord.