

Overview

The Solecis AVS-SL-0201-824 (**FG1330-1113-05**) is the perfect solution for all 2x1 PC switching solutions. Designed for permanent installations and rental companies alike.

The AVS-SL-0201-824 incorporates high resolution switching circuitry for all PC applications up to UXGA. The AVS-SL-0201-824 can be user set to operate in either manual, auto, or remote switching modes. The remote options include control from both RS232 and Contact Closure while Auto modes allow either priority or last presented input switching.

The outputs are both 75 ohm driven with TTL sync restore for connection to long cable runs. The audio inputs automatically follow the video input and are converted to be either balanced or unbalanced signals on the output.

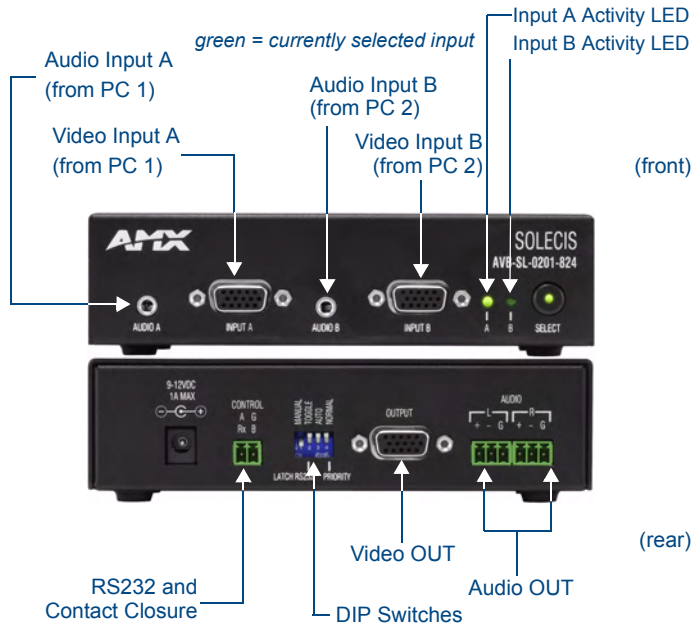


FIG. 1 Solecis AVS-SL-0201-824

Product Specifications

| Solecis AVS-SL-0201-824 Specifications | |
|--|--------------------------|
| RGB Input | |
| Number: | 2 |
| Connectors: | HD-15 |
| Level: | Analog |
| Max Level: | 1V p-p |
| Impedance: | 75 ohm |
| Sync Input | |
| Level: | TTL/Analog |
| Max Level: | 5v p-p |
| Impedance: | 75 ohm |
| Audio Input | |
| Number: | 2 |
| Connectors: | 3.5mm stereo |
| Type: | Unbalanced analog |
| Max Level: | 2V p-p |
| Impedance: | 47K ohm |
| RGB Video Bandwidth: | 400MHz -3dB |
| RGB Return Loss: | 45dB@10MHz, -27dB@100MHz |
| Adjacent Input Crosstalk: | 73dB@10MHz, -50dB@100MHz |
| Audio Response: | 20Hz-50KHz |

| Solecis AVS-SL-0201-824 Specifications (Cont.) | |
|--|--|
| RGB Output | |
| Number: | 1 |
| Connector: | HD-15 |
| Level: | Analog |
| Gain: | Unity |
| Impedance: | 75 ohm |
| Sync Output | |
| Level: | TTL |
| Impedance: | 75 ohm |
| Audio Output | |
| Number: | 2 (L/R) |
| Connectors: | Captive-wire |
| Type: | Balanced/Unbalanced |
| Gain: | Unity |
| Impedance: | 600 ohm |
| Power | |
| Input Voltage: | 9-12VDC |
| Power Consumption: | 15W |
| Dimensions (HWD): | 1.66" x 5.85" x 4.25" (42.2 mm x 148.6 mm x 108.0 mm) • Height includes feet • Depth includes connectors |
| Weight: | 1.4 lbs. (0.65kg) |
| Included Accessories: | PS2.8 power supply (FG423-11) |
| Certifications: | • CE • FCC class B, part 15 • RoHS/WEEE compliant |

Safety Instructions

Please read these instructions before using your AMX Solecis device. Failure to comply with these instructions could result in fire, electrical shock, personal injury, death, or damage to the equipment.

Liquid Spills

Do not set drinks on top of the unit or immerse the unit in liquid.

Do Not Disassemble

This device contains no user serviceable parts. All servicing must be performed by a qualified service technician.

For Safety Reasons

- Do not place the unit on an unstable surface.
- Do not use near water or sources of heat.
- Use only recommended attachments.
- Use the type of power supply as specified.
Unplug the power to the unit and refer servicing to qualified personnel under the following conditions:
 - If liquid has been spilled or the unit has been exposed to rain or water.
 - If it does not operate normally when the operating instructions are followed or if it exhibits a distinct change in performance indicating a need for service.
 - If the unit has been dropped or the cabinet damaged.

Installation

1. Connect one end of the HD-15 cable to the output video socket of the computer.
2. Connect the other end to the INPUT A socket of the switcher.
3. Repeat for INPUT B.
4. Connect a monitor or projector to the MAIN OUTPUT socket of the switcher.
5. Connect Audio to the switcher Inputs using a 3.5mm Stereo Jack plug.
6. The output is taken from the captive-wire connector on the Main Output.

Video Pin Connections

FIG. 2 provides the pin layout for the HD-15 connectors:

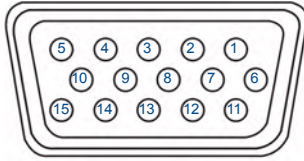


FIG. 2 RGBHV HD-15 connector

The pin configuration for the HD-15 (video) connector are as follows:

| | |
|------------------|------------------|
| 1 - RED | 9 - n/c |
| 2 - GREEN | 10 - SYNC GROUND |
| 3 - BLUE | 11 - n/c |
| 4 - n/c | 12 - n/c |
| 5 - n/c | 13 - H SYNC |
| 6 - RED GROUND | 14 - V SYNC |
| 7 - GREEN GROUND | 15 - n/c |
| 8 - BLUE GROUND | |

Audio Output

The Audio output is taken from the captive-wire connectors on the rear of the unit.

- For balanced output use the +, - and Gnd pins.
- For unbalanced output use the + and Gnd pins.

Setting Up the Mode of Operation

| Rear Panel DIP Switches | | | | | |
|---|----|---|----|----|----------------------------|
| Control | 1 | 2 | 3 | 4 | Notes |
| Manual Switch | ↓ | ↑ | ↑ | ↑ | Front Panel Operation |
| Auto Switch - Normal | ↑↓ | ↑ | ↓ | ↑ | Last Detected Input |
| Auto Switch - Priority | ↑↓ | ↑ | ↓ | ↓ | Input B Priority |
| Contact Closure - Momentary | ↑↓ | ↑ | ↑↓ | ↑↓ | Bell Button Toggle |
| Contact Closure - Latching | ↔ | ↓ | ↔ | ↔ | Logic State Closed Input A |
| RS232 | ↔ | ↓ | ↔ | ↔ | Serial Control |
| ↑-switch up, ↓-switch down, ↔-function disabled, ↑↓-switch up or down | | | | | |

Switch Functions

- 1 - Manual Switch Off / On
- 2 - Remote Control Off / On
- 3 - Auto Switch Off / On
- 4 - Auto Switch Normal / Priority

Manual Switch - Front Panel Operation

1. Power up switcher.
2. The Green LED A will light to indicate power present and A Input is switched.
3. Set Dip switches as shown in the *Rear Panel DIP Switches* table.
4. Press INPUT SELECT button to change between Input sources.

Contact Closure - Toggle Switch

Set Dip switches as shown in the *Rear Panel DIP Switches* table.

- A momentary switch can be wired across connections A and B on the rear panel.
- Manual and auto switch can also be enabled or disabled in this Toggle mode of operation.

Contact Closure - Latching

Set Dip switches as shown in the *Rear Panel DIP Switches* table.

- With control pins A and B open the unit will switch to Input B.
- When control pins are closed the unit will switch to Input A.

Note: When Dip switch 2 is set to Latch or RS232 all other functions will be disabled.

RS232 Mode

1. Power unit down.
2. Set Dip switches as shown in the *Rear Panel DIP Switches* table.
3. Connect RS232 cable to Control pins as follows:
 - TX - Pin A (RX)
 - GND - Pin B (GND).
4. Power up unit.

Set system Protocol as follows

- Baud - 9600
- Data - 8 Bits
- Stop - 1 Bit

Switch Commands

Note: Numbers are shown in HEX.

| Input A | | |
|---------|--------|-------|
| Byte 1 | Byte 2 | Byte3 |
| FE | 00 | 0A |

| Input B | | |
|---------|--------|-------|
| Byte 1 | Byte 2 | Byte3 |
| FE | 00 | 0B |

Note: When an RS232 cable is connected to the Control socket all other functions will be disabled.

Auto Switch - Normal

Set Dip switches as shown in the *Rear Panel DIP Switches* table.

Auto-Switching

The unit scans the VERTICAL sync inputs of input A and B. If any signal sources are active the unit will switch to the last detected input.

To switch between two active sources either disconnect the source and reconnect or use the laptop video toggle mode to turn the Video output off then on again (usually by holding the FN key with a Function key).

To operate in auto switch mode with manual override switch Manual dip down to the On position.

Auto Switch - Priority

1. Set Dip switches as shown in the *Rear Panel DIP Switches* table.
2. When a signal is applied to Input A the unit will automatically switch to A.
3. When the signal is removed from Input A the unit will switch to Input B.
4. To operate in auto switch mode with manual override switch Manual dip down to the On position.

