

Owner's Guide

Mitsubishi Plasma Display PD-5010





Technically Anything is Possible®

Important Information


Precautions


Please read this manual carefully before using your Mitsubishi plasma monitor and keep the manual handy for future reference.

CAUTION

 **RISK OF ELECTRIC SHOCK** 
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

 This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any part inside of this unit.

 This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

WARNING

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. ALSO DO NOT USE THIS UNIT'S POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLETS, UNLESS THE PRONGS CAN BE FULLY INSERTED. REFRAIN FROM OPENING THE CABINET AS THERE ARE HIGH-VOLTAGE COMPONENTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Warnings and Safety Precaution

The Mitsubishi plasma monitor is designed and manufactured to provide long, trouble-free service. No maintenance other than cleaning is required. Use a soft dry cloth to clean the panel. Never use solvents such as alcohol or thinner to clean the panel surface.

The plasma display panel consists of fine picture elements (cells). Although Mitsubishi produces the plasma display panels with more than 99.99 percent active cells, there may be some cells that do not produce light or remain lit.

For operating safety and to avoid damage to the unit, read carefully and observe the following instructions.

To avoid shock and fire hazards:

1. Provide adequate space for ventilation to avoid internal heat build-up. Do not cover rear vents or install the unit in a closed cabinet or shelves.

The unit is equipped with cooling fans. If you install the unit in an enclosure, make sure there is adequate space at the top of the unit to allow hot air to rise and escape. If the monitor becomes too hot, the overheat protector will be activated and the monitor will be turned off. If this happens, turn off the power to the monitor and unplug the power cord. If the room where the monitor is installed is particularly hot, move the monitor to a cooler location, and wait for the monitor to cool for 60 minutes. If the problem persists, contact your Mitsubishi dealer for service.

2. Do not use the power cord polarized plug with extension cords or outlets unless the prongs can be completely inserted.
3. Do not expose the unit to water or moisture.
4. Avoid damage to the power cord, and do not attempt to modify the power cord.
5. Unplug the unit during electrical storms or if the unit will not be used over a long period.
6. Do not open the cabinet which has potentially dangerous high voltage components inside. If the unit is damaged in this way the warranty will be void. Moreover, there is a serious risk of electric shock.
7. Do not attempt to service or repair the unit. Mitsubishi is not liable for any bodily harm or damage caused if unqualified persons attempt service or open the back cover. Refer all service to authorized Mitsubishi Service Centers.

NOTE:

When you connect a computer to this monitor, attach the supplied ferrite cores. If you do not do this, this monitor will not conform to mandatory FCC standards.

Attaching the ferrite cores:

Set the ferrite cores on both ends of the MONITORLINK™ cable (not supplied), and both ends of the power cable (supplied).


Close the lid tightly until the clamps click.

Use the band to fasten the ferrite core (supplied) to the MONITORLINK cable.

MONITORLINK cable (not supplied)



Power cable (supplied)

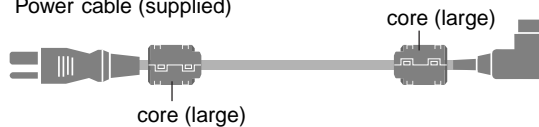

To avoid damage and prolong operating life:

1. Use only with 120V 50/60Hz AC power supply. Continued operation at line voltages greater than 120 Volts AC will shorten the life of the unit, and might even cause a fire hazard.
2. Handle the unit carefully when handling and installing it and do not drop.
3. Set the unit away from heat, excessive dust, and direct sunlight.
4. Protect the inside of the unit from liquids and small metal objects. In case of accident, unplug the unit and have it serviced by an authorized Mitsubishi Service Center.
5. Do not hit or scratch the panel surface as this causes flaws on the surface of the screen.
6. For correct installation and mounting it is strongly recommended to use a trained, authorized Mitsubishi dealer.
7. Only use tabletop stands or wall-mount brackets that are designed specifically for this product.
8. As is the case with any phosphor-based display (like a CRT monitor, for example) light output will gradually decrease over the life of a Plasma Display Panel.

Recommendations to avoid or minimize uneven phosphor aging:

Like all phosphor-based display devices and all other gas plasma displays, plasma monitors can be susceptible to uneven phosphor aging under certain circumstances. Certain operating conditions, such as the continuous display of a static image over a prolonged period of time, can result in uneven phosphor aging if proper precautions are not taken. To protect your investment in this Mitsubishi plasma monitor, please adhere to the following guidelines and recommendations for minimizing this type of damage:

- * Always enable and use your computer's video game or DVD player screen saver during use with these sources.
- * Display a moving image whenever possible.
- * Change the position of the menu display from time to time.
- * Always power down the monitor when you are finished using it.

If the plasma monitor is in long term use or continuous operation, take the following measures to reduce the likelihood of uneven phosphor aging:

- * Lower the Brightness and Contrast levels as much as possible without impairing image readability.
- * Display an image with many colors and color gradations (i.e. photographic or photo-realistic images).
- * Create image content with minimal contrast between light and dark areas. Use complementary or pastel colors whenever possible.
- * Avoid displaying images with few colors and distinct, sharply defined borders between colors.

Contact Mitsubishi at 1-800-332-2110 for other recommended procedures that will best suit your particular application needs.

Contents

Attachment Options for the PD-5010 Monitor	1	On-Screen Controls	18
Introduction	2	Menu Operations	18
Introduction to the PD-5010		Video Settings Menu	20
Plasma Monitor	2	Adjusting the picture	20
The features you'll enjoy include:	2	Setting the picture mode according to the	
Contents of the Package	2	brightness of the room	21
Options	2	Setting the color temperature	22
Part Names and Function	3	Adjusting the color to the desired quality	23
Front View	3	Reducing noise in the picture	24
Rear View / Terminal Board	4	Audio Settings Menu	25
Remote Control	5	Adjusting the treble, bass and left/right balance	25
Battery Installation and Replacement	6	Monitor Settings Menu	26
Using the wired remote control mode	7	Adjusting the Position, Size, Fine Picture,	
Operating Range	7	Picture Adj	26
Handling the remote control	7	Function Menu	27
Installation	8	Setting the on-screen menu	27
Connecting Your PC or Macintosh Computer	9	Adjusting the position of the menu display	28
Connecting Your Document Camera	9	Setting the power management for computer images	29
Connecting Your VCR or Laser Disc Player	9	POWER/STANDBY indicator	30
Connecting Your DVD Player	9	Setting the gray level for the sides of the screen	31
External Speaker Connections	10	Setting the picture to suit the movie	31
Pin Assignments and Signal Levels		Setting "MONITORLINK (M-LINK)"	32
for 15 pin RGB (Analog)	11	Reducing uneven aging of the screen	32
Pin Configuration and Signal		Setting the time for "INVERSE"	33
of the MONITORLINK™ Connector	11	Setting the time for "SCREEN WIPER"	34
Basic Operations	12	Resetting to the default values	35
POWER	12	Options Settings Menu	36
To turn the unit ON and OFF:	12	Setting the allocation of the audio connectors	36
VOLUME	12	Setting the BNC connectors	36
To adjust the volume:	12	Setting a computer image to the correct RGB	
MUTE	12	select screen	37
To cancel the sound:	12	Setting high definition images to the suitable	
INFO	12	screen size	38
To check the settings:	12	Setting the picture size for RGB input signals	38
DIGITAL ZOOM	12	Information Menu	39
AUTO ADJUST	12	Checking the frequencies, polarities of input signals,	
To adjust the size or quality of the picture		and resolution	39
automatically:	12	Setting the language for the menus	39
SLEEP	13	Setting the video signal format	40
To set the sleep timer:	13	External Control	41
To check the remaining time:	13	Table of Signals Supported	55
To cancel the off timer	13	Supported resolution	5;5
WIDE Operations	14	Troubleshooting	57
Viewing a wide screen (manual)	14	Specifications	58
When watching videos or digital video discs	14	Warranty	60
When watching high definition video source	14		
Watching computer images	15		
When "PICTURE SIZE" is set to "OFF"	15		
PIP SCREEN Operations	16		
Showing a couple of pictures on the screen			
at the same time	16		
Operations in the Side-by-side mode	16		
Operations in the Picture-in-picture mode	17		
Selecting the input signals to be displayed	17		
Adjusting the On-Screen Menu controls	17		

Attachment Options for the PD-5010 Monitor

You can attach your optional mounts or stand to the plasma monitor in one of the following two ways:

- * While it is upright. (See Drawing A)
- * As it is laid down with the screen face down (See Drawing B). Lay the protective sheet, which was wrapped around the monitor when it was packaged, beneath the screen surface so as not to scratch the screen face.

• **This device cannot be installed on its own. Be sure to use a stand or wall mount kit.**

* See page 2.


• **For correct installation and mounting it is strongly recommended to use a trained, authorized Mitsubishi dealer.**

Failure to follow correct mounting procedures could result in damage to the equipment or injury to the installer.


Product warranty does not cover damage caused by improper installation.

* **Use only a matching stand or wall mount kit designed to fit this product.**

Drawing A

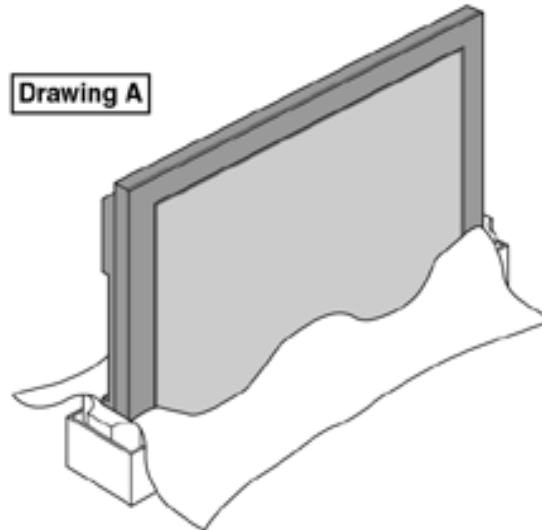


Drawing B

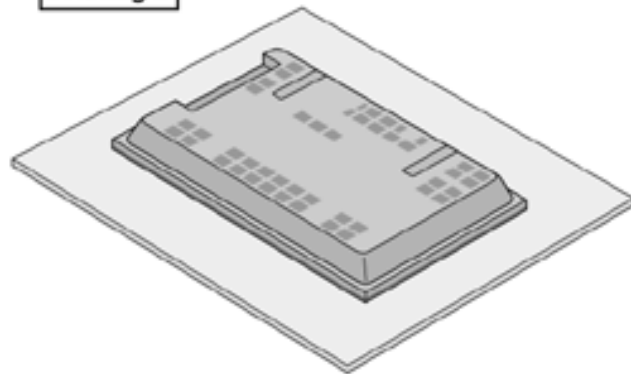

Ventilation Requirements for enclosure mounting

To allow heat to disperse, leave space between surrounding objects as shown on the diagram at the right, when installing.

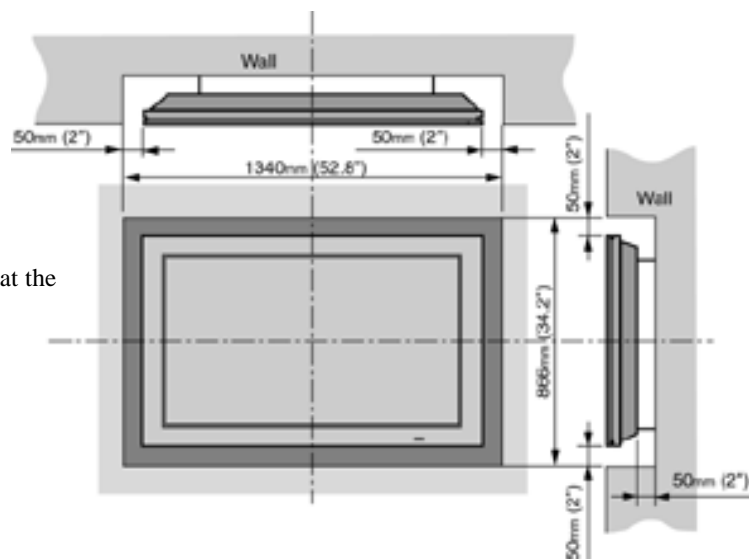

Introduction

Introduction to the PD-5010 Plasma Monitor

Mitsubishi's PD-5010 is a seamless blend of cutting-edge visual technology and sophisticated design. At 50 inches, with a 16:9 aspect ratio, the PD-5010 certainly makes a big impression. However, at a mere 4.68 inches/119 mm thin, the monitor's sleek techno-art lines blend in well with your environment. The PD-5010's crisp, vivid image quality will transform data from any graphic medium from PCs to DVD players into art. And weighing only 98 lbs/44.5 kg, it actually can be hung almost anywhere. Mitsubishi has made sure that a host of multimedia resources can be easily connected and displayed as brilliantly as intended on the PD-5010 monitor.

The features you'll enjoy include:

- 50-inch screen
- 16:9 aspect ratio
- Capsulated Color Filter (CCF) and black matrix
- The enhanced display uses a two-stage filtering system for deeper, more accurate colors.
- 4.68 inch / 119 mm thin
- 98 lbs/ 44.5 kg light
- High-resolution screen: 1365 x 768 pixels
- 160-degrees of off-axis viewing, horizontally and vertically.
- Flicker - and warp - free display provides excellent image geometry even in screen corners
- Not affected by magnetic fields, no color drift or edge distortion.
- VGA, SVGA, XGA, SXGA, UXGA computer signal compatibility
- NTSC, PAL, SECAM, composite and S-Video signal compatibility
- 480P, 1080I, 720P and HDTV signal compatibility
- PCs, VCRs, Laser Disc and DVD player source compatibility
- Sophisticated formatting circuitry automatically converts VGA, SVGA, XGA, SXGA and UXGA signals to the panel's native resolution
- Precision algorithms are used to convert interlaced signals to progressive scan.
- User selectable on-screen color temperature settings
- Component video input terminal for DVD, 15.75kHz (Y, CB, CR)
- Digital broadcasting source compatibility
- Menu-driven on-screen control system that makes image adjustments a snap
- Seven languages (English, German, French, Italian, Spanish, Swedish, and Japanese)

Contents of the Package

- Mitsubishi PD-5010 plasma monitor
- Power cord
- RGB cable (Mini D-Sub 15-pin to Mini D-Sub 15-pin connector)
- Remote control with two AAA Batteries
- Owner's guide
- Remote cable
- Safety metal fittings*
- Screws for safety metal fitting*
- Ferrite core (small x 2, large x 2), band


* These fittings are for fastening the unit to a wall to prevent tipping when used with an optional tabletop stand. Fasten the safety fittings to the holes in the back of the monitor using the mount screws.

Option

- Tabletop stand

Part Names and Function

Front View

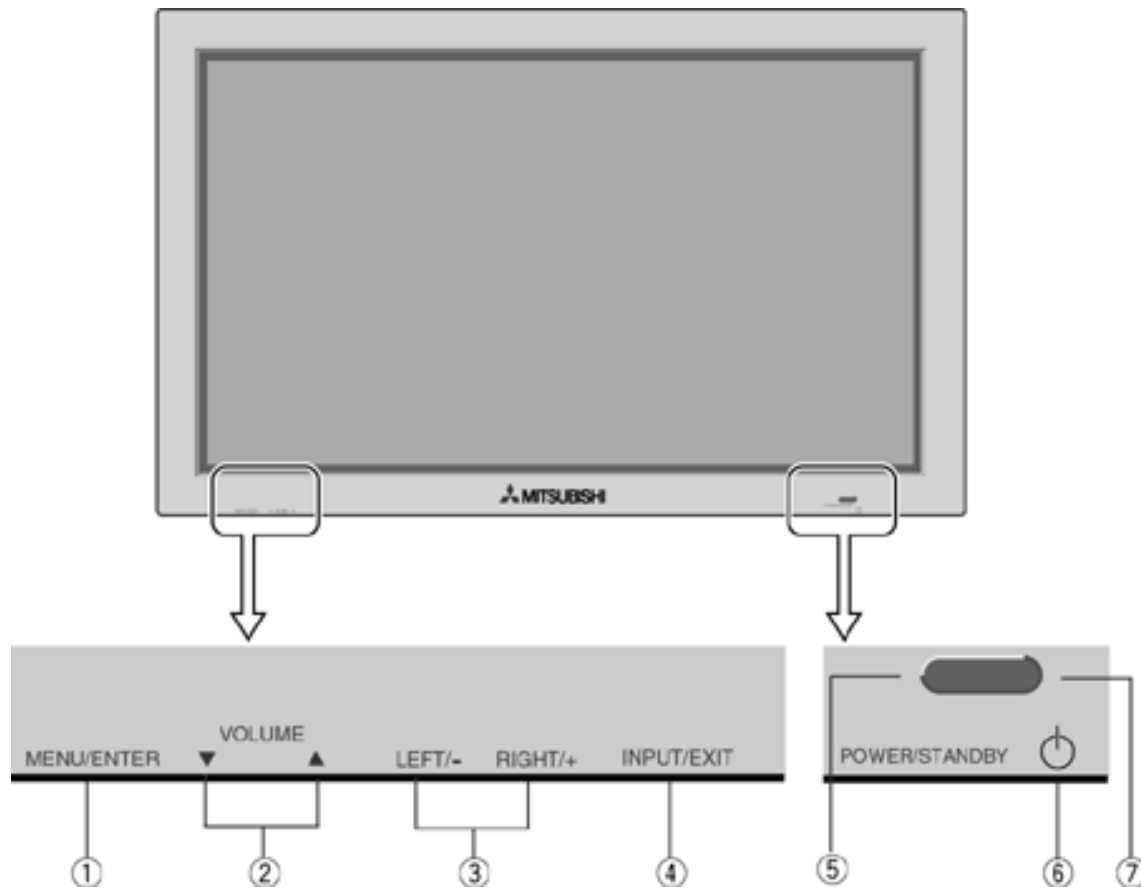

- ① **MENU**
Sets the On-Screen Menu (MENU) mode and displays the main menu.
- ② **VOLUME DOWN and UP**
Adjusts the volume. Functions as the CURSOR (▲/▼) buttons when the MENU is on the screen.
- ③ **LEFT/- and RIGHT/+**
Enlarges or reduces the image. Also functions as the CURSOR (◀ / ▶) buttons when the Menu is on the screen.
- ④ **INPUT / EXIT**
Switches the input, in the following order.


◀VIDEO1 ◀VIDEO2 ◀VIDEO3 ◀DVD/HD
 MONITORLINK* ← RGB/PC2 ←RGB/PC1 ←

Functions as the EXIT buttons in the On-Screen Menu (MENU) mode.

- ⑤ **POWER/STANDBY indicator**
When the power is on Lights green.
When the power is in the standby mode ... Lights red.
- ⑥ **Power**
Turns the monitor's power on and off.
- ⑦ **Remote sensor window**
Receives the signals from the remote control.

*** MONITORLINK is available only after proprietary tuner/controller has been connected.**

Rear View/ Terminal Board

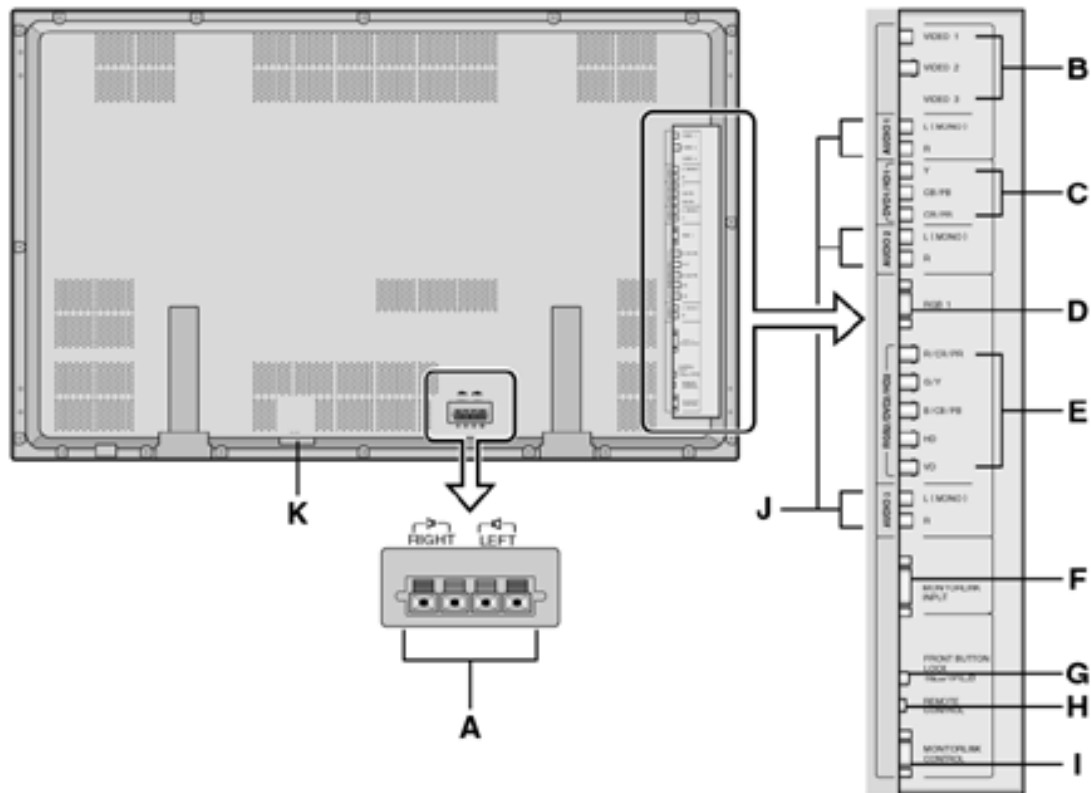

A EXT SPEAKER L and R

Connect speakers here. Maintain the correct polarity.

B VIDEO 1, 2, 3

Connect a VCR or other video device here. Only one of these three inputs can be used.

C DVD1 / HD1

Connect DVD's, High Definition or Laser Discs, etc. here.

D RGB1

Inputs the analog RGB signal of personal computer, etc.

E RGB2/ DVD2/ HD2

RGB2: Inputs the analog RGB signal.

DVD2/ HD2: Connect DVD's, High Definition or Laser Discs, etc. here.

F MONITORLINK™ (M-LINK) INPUT

A proprietary input for connecting a Mitsubishi tuner/controller. Input will appear in menus only after the proprietary tuner/controller has been connected.

G CONTROL LOCK

When "CONTROL LOCK" is set "ON", the buttons on the set's control panel do not function.

H REMOTE CONTROL

Connect the supplied remote cable here.

I MONITORLINK™ CONTROL

This terminal can be used for external control of power ON/OFF, input selection AUDIO MUTE and other features. It is also used with a proprietary Mitsubishi tuner/controller.

J AUDIO1 / AUDIO2 / AUDIO3

Audio 1: Connect the audio output from the device connected to Video 1, 2 or 3.


Audio 2: Connect the audio output from the device connected to DVD1/HD1.

Audio 3: Connect the audio output from the device connected to RGB2/DVD2/HD2.

K AC IN

Connect the included power cord here.

Remote Control

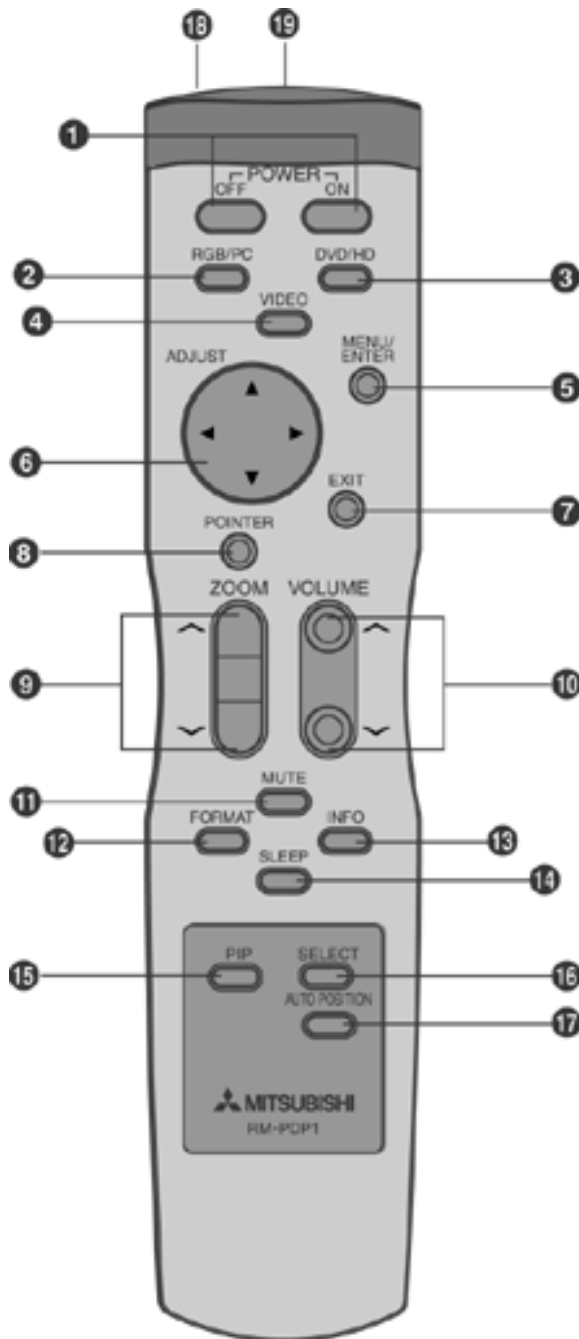

1 POWER ON/OFF

Switches Power ON/OFF.
(This does not operate when POWER/STANDBY indicator of the main unit is off.)

2 RGB/PC

Press this button to select RGB/PC as the source.

[RGB/PC1 RGB/PC2 MONITORLINK*]

RGB/PC can also be selected using the INPUT button on the monitor. The input switches as follows each time the button is pressed:

[VIDEO1 VIDEO2 VIDEO3 DVD/HD
MONITORLINK* ←RGB/PC2←RGB/PC1←]

3 DVD / HD

Press this button to select DVD/HD as the source.

DVD/HD can also be selected using the INPUT SELECT button on the monitor. The input switches as follows each time the button is pressed:

[VIDEO1 VIDEO2 VIDEO3 DVD/HD
MONITORLINK*← RGB/PC2← RGB/PC1←]

4 VIDEO

Press this button to select VIDEO as the source.

[VIDEO1 VIDEO2 VIDEO3]

VIDEO can also be selected using the INPUT SELECT button on the monitor. The input switches as follows each time the button is pressed:

[VIDEO1 VIDEO2 VIDEO3 DVD/HD
MONITORLINK* ←RGB/PC2← RGB/PC1←]

5 MENU/ENTER

Press this button to access the on-screen menu.

Press this button during the display of the main menu to go to the sub menu.

6 ADJUST (▲ / ▼ / ◀ / ▶)

Use these buttons to select items or settings and to adjust settings or switch the display patterns.

7 EXIT

Press this button to exit the OSM controls in the main menu. Press this button during the display of the sub menu to return to the main menu.

8 POINTER

Press this button to display the pointer.

9 ZOOM (△/▽)

Enlarges or reduces the image.

10 VOLUME (△/▽)

Adjusts the volume.

11 MUTE

Mutes the sound.

12 FORMAT

The type of broadcast is detected automatically, and the recommended wide screen is set.

13 INFO
Displays the source settings on the screen.

14 SLEEP
Activates the off timer for the unit.

15 PIP
Press this button to select a screen mode from among single mode, side by side, and picture in picture.

16 SELECT
Press this button to select the active picture in a multi screen mode.

17 AUTO POSITION
Press this button to adjust Fine Picture, Picture ADJ, Position, and Contrast automatically, or to switch the screen size to ZOOM mode automatically with the superimposed caption displayed fully only when the picture contains dark areas above and below the picture.

18 REMOTE CONTROL SIGNAL TRANSMITTER
Transmits the remote control signals.


19 REMOTE JACK
Insert the plug of the supplied remote cable here when using the supplied remote control in the wired condition.

* Input is available only after proprietary tuner/controller has been connected.


Battery Installation and Replacement

Insert the 2 “AAA” batteries, making sure to set them in with the proper polarity.


1. Press and open the cover.

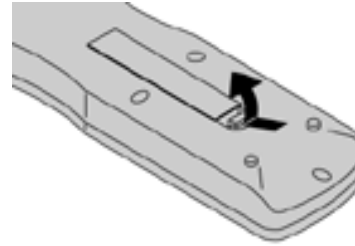

2. Align the batteries according to the (+) and (-) indication inside the case.

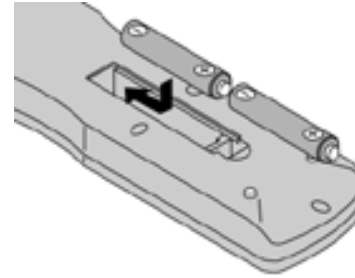


3. Replace the cover.

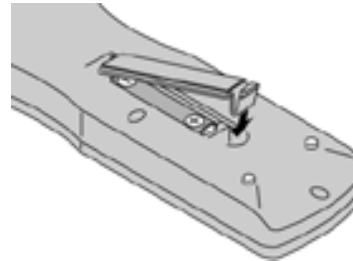

Using the wired remote control mode


Connect the supplied remote cable to the remote control's jack and the "REMOTE CONTROL" terminal on the monitor.

When the cable is connected, the mode automatically switches to wired remote control. When the wired remote control mode is used, the remote control can be operated even if no batteries are loaded.

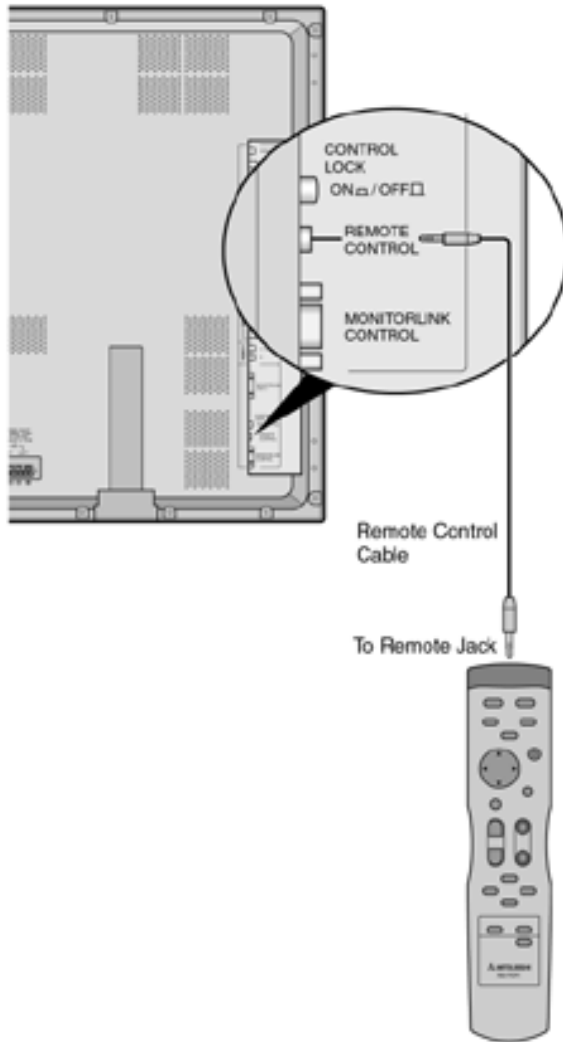

Operating Range


- * Use the remote control within a distance of about 7 m/ 23ft. from the front of the monitor's remote control sensor and at horizontal and vertical angles of up to approximately 30°.
- * The remote control operation may not function if the monitor's remote control sensor is exposed to direct sunlight or strong artificial light, or if there is an obstacle between the sensor and the remote control.

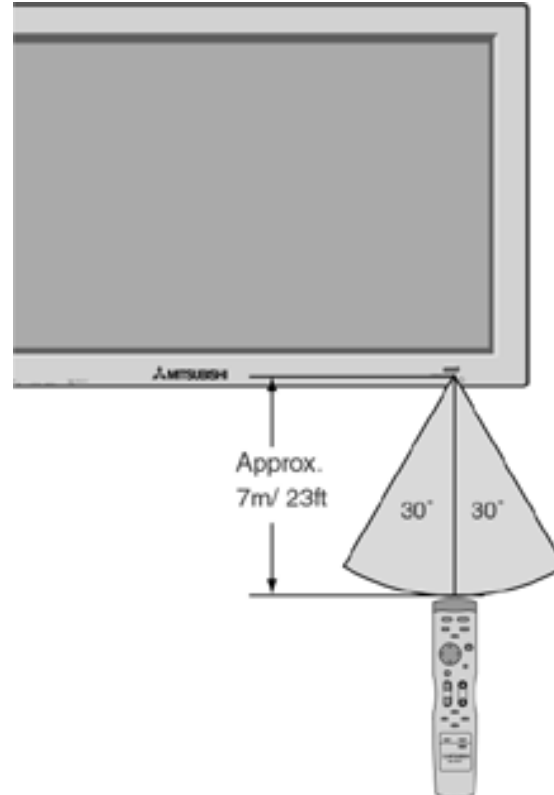

Handling the remote control

- Do not drop or mishandle the remote control.
- Do not get the remote control wet. If the remote control gets wet, wipe it dry immediately.
- Avoid heat and humidity.
- Remove the batteries when not using the remote control for a long period.
- Do not use new and old batteries together, or use different types together.
- Do not take apart the batteries, heat them, or throw them into a fire.
- When using the remote control in the wireless condition, be sure to unplug the remote cable from the REMOTE CONTROL terminal on the monitor.

Installation

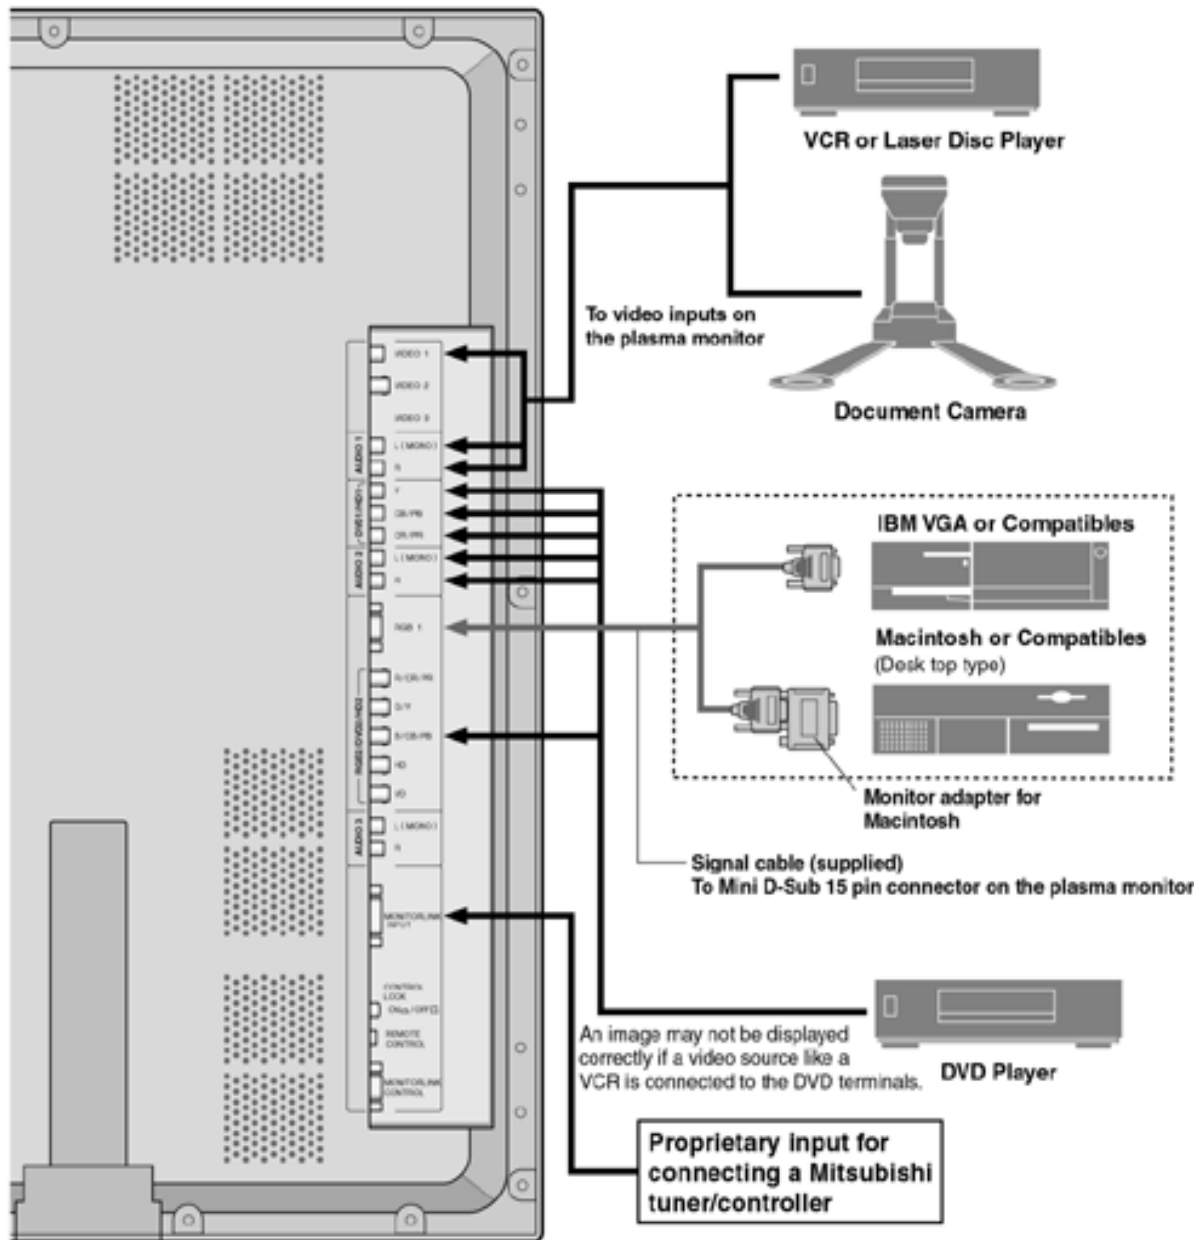

Connecting Your PC or Macintosh Computer

Connecting your PC or Macintosh computer to your plasma monitor will enable you to display your computer's screen image for an impressive presentation. The plasma monitor supports the signals described on page 55.

To connect a PC, Macintosh or compatible graphics adapter, simply:

1. Turn off the power to your plasma monitor and computer.
2. If your PC does not support SXGA/XGA/SVGA/VGA you will need to install an SXGA/XGA/SVGA/VGA graphics board. Consult your computer's owner's manual for your SXGA/XGA/SVGA/VGA configuration. If you need to install a new board, see the manual that comes with your new graphics board for installation instructions.
3. The plasma monitor provides signal compatibility up to VESA 1600 x 1200 (UXGA). However, it is not recommended to use this resolution due to image readability on the monitor's 1365 x 768 native pixel resolution panel.
4. Use the signal cable that's supplied to connect your PC or Macintosh computer to the plasma monitor. For Macintosh, use the monitor adapter to connect to your computer's video port.
5. Turn on the plasma monitor and the computer.
6. If the plasma monitor goes blank after a period of inactivity, it may be caused by a screen saver installed on the computer you've connected to the plasma monitor.

When using a Macintosh with the plasma monitor, the following four display standards are supported using the Macintosh adapter :

- 13" fixed mode
- 16" fixed mode
- 19" fixed mode
- 21" fixed mode

The 19" fixed mode is recommended for the plasma monitor.

Connecting Your Document Camera

You can connect your plasma monitor to a document camera. To do so, simply:

1. Turn off the power to your plasma monitor and document camera.
2. Use a standard video cable to connect your document camera to the Video input on your plasma monitor.
3. Turn on the plasma monitor and the document camera.

Note: Refer to your document camera owner's manual for more information about your camera's video output requirements.

Connecting Your VCR or Laser Disc Player

Use common RCA cables (not provided) to connect your VCR or laser disc player to your plasma monitor. To make these connections, simply:

1. Turn off the power to your plasma monitor and VCR or laser disc player.
2. Connect one end of your RCA cable to the video output connector on the back of your VCR or laser disc player, connect the other end to the Video input on your plasma monitor. Use standard RCA audio patch cords to connect the audio from your VCR or laser disc player to your plasma monitor (if your VCR or laser disc player has this capability). Be careful to keep your right and left channel connections correct for stereo sound.
3. Turn on the plasma monitor and the VCR or laser disc player.


Note: Refer to your VCR or laser disc player owner's manual for more information about your equipment's video output requirements.

Connecting Your DVD Player

You can connect your plasma monitor to a DVD player. To do so, simply:

1. Turn off the power to your plasma monitor and DVD player.
2. Use a standard video cable to connect your DVD player to the Y, Cb, and Cr inputs on your plasma monitor. Or use the DVD-player's S-Video output. Use a standard S-Video cable to connect to the S-Video input on the plasma monitor.
3. Turn on the plasma monitor and the DVD player.

External Speaker Connections

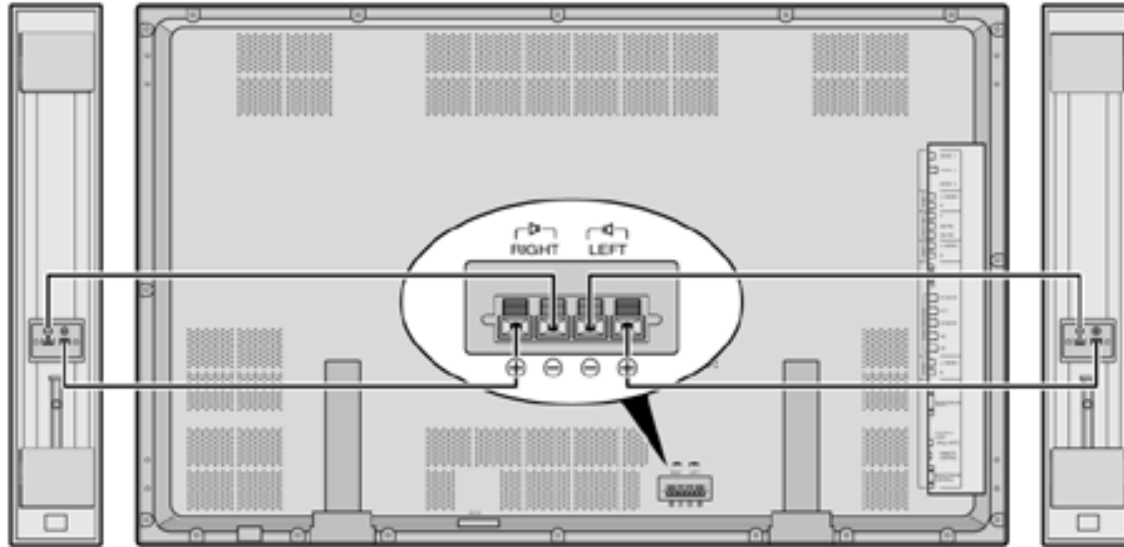

External speakers (not supplied) may be connected to the plasma monitor to reproduce sound from VIDEO, DVD or RGB signal sources.

External speakers may be connected directly to the SPEAKERS terminals.

CAUTION: Unplug the plasma monitor and all connected components before connecting external speakers. Use only speakers with 6-ohm impedance and a power input rating of 10 watts or more.

To connect external speakers directly to the plasma monitor:

1. Strip the ends of the speaker wires.
2. Press down the tabs below the SPEAKERS terminals, insert the speaker wire and release the tab to secure the speaker wire connection:


[a] Connect the right speaker (located at right side of the monitor when viewed from the front) positive (+) wire to RIGHT +.

[b] Connect the right speaker negative (-) wire to RIGHT -.

[c] Connect the left speaker negative (-) wire to LEFT-.

[d] Connect the left speaker positive (+) wire to LEFT+.

Pin Assignments and Signal Levels for 15 pin RGB (Analog)

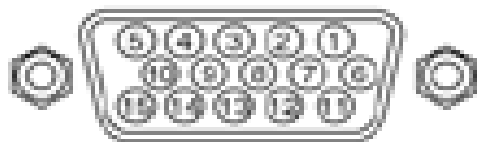

Pin. No.	Signal (Analog)
1	Red
2	Green or sync-on-green
3	Blue
4	No connection
5	Ground
6	Red ground
7	Green ground
8	Blue ground
9	No connection
10	Sync signal ground
11	No connection
12	Bi-directional DATA (SDA)
13	Horizontal sync or Composite Sync
14	Vertical sync
15	Data clock

Basic Operations

POWER

To turn the unit ON and OFF:

1. Plug the power cord into an active AC power outlet.
2. Press the POWER ON button (on the remote control) to turn on the unit.

The monitor's POWER/STANDBY indicator will light up (green) when the unit is on.

3. Press the POWER OFF button (on the remote control or the unit) to turn off the unit.

The monitor's POWER/STANDBY indicator turns red and the standby mode is set (only when turning off the unit with the remote control).

VOLUME

To adjust the volume:

1. Press and hold the VOLUME \triangle button (on the remote control or the unit) to increase to the desired level.
2. Press and hold the VOLUME ∇ button (on the remote control or the unit) to decrease to the desired level.

MUTE

To cancel the sound:

Press the MUTE button on the remote control to cancel the sound; press again to restore.


INFO

To check the settings:

1. The screen changes each time the INFO button is pressed.
2. If the button is not pressed for approximately three seconds, the menu turns off.

DIGITAL ZOOM

Digital zoom specifies the picture position and enlarges the picture.

1. Press the POINTER button to display the pointer. ()

To change the size of the picture:

Press the ZOOM+ button and enlarge the picture.

The pointer will change to resemble a magnifying glass. ()

A press of the ZOOM- button will reduce the picture and return it to its original size.

To change the picture position:

Select the position with the \blacktriangle \blacktriangledown \blacktriangleleft \blacktriangleright buttons.

2. Press the POINTER button to delete the pointer.

AUTO ADJUST

To adjust the size or quality of the picture automatically:

Press the AUTO ADJUST button.

Information

■ AUTO ADJUST ON setting

When RGB (still picture) input is selected Fine Picture, Picture ADJ, Position, and Contrast will be adjusted automatically.

When RGB (motion picture), VIDEO, or Y/Pb/Pr (component) input is selected The screen size switches to ZOOM mode automatically with the superimposed caption displayed fully only when the picture contains dark areas above and below the picture.

SLEEP

To set the off timer:

The off timer can be set to turn the power off after 30, 60, 90 or 120 minutes.

1. Press the SLEEP button to start the timer at 30 minutes.
2. Press the SLEEP button to the desired time.
3. The timer starts when the menu turns off.

→ 30 →60 →90 → 120 → 0



OFF TIMER 30

To check the remaining time:

1. Once the off timer has been set, press the SLEEP button once.
2. The remaining time is displayed, then turns off after a few seconds.
3. When five minutes remain the remaining time appears until it reaches zero.



OFF TIMER 28

To cancel the off timer:

1. Press the SLEEP button twice in a row.
2. The off timer is canceled.



OFF TIMER 0

Note:

*After the power is turned off with the off timer ...
A slight current is still supplied to the monitor. When you are leaving the room or do not plan to use the system for a long period of time, turn off the power of the monitor.*

WIDE Operations

Watching with a wide screen (manual)

With this function, you can select one of four screen sizes.

When watching videos or digital video discs


1. Press the FORMAT button on the remote control.
2. Within 3 seconds ...

Press the FORMAT button again.

The screen size switches as follows:

→ ZOOM → NARROW → STANDARD → STRETCHED


ZOOM size screen

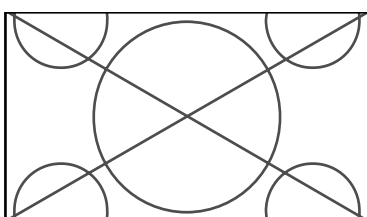

The picture is expanded in the horizontal and vertical direction, maintaining the original proportions.

* Use this for theater size (wide) movies, etc.


NARROW size screen (4:3)

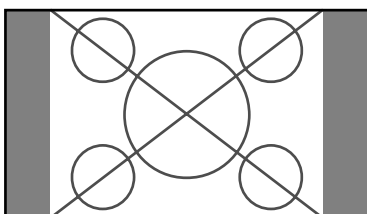

The normal size screen is displayed.

* The picture has the same size as video pictures with a 4 : 3 aspect ratio.


STANDARD size screen

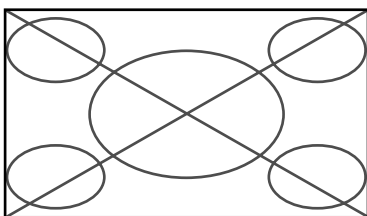

The image is expanded in the horizontal direction.

* Images compressed in the horizontal direction (“squeezed images”) are expanded in the horizontal direction and displayed on the entire screen. (Normal images are expanded in the horizontal direction.)

STRETCHED size screen

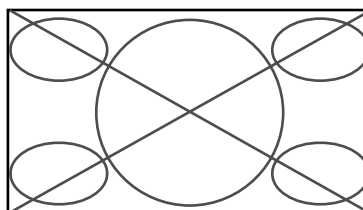


The picture is expanded in the horizontal and vertical directions at different ratios.

* Use this for watching normal video programs (4:3) with a wide screen.

When watching high definition video source

1. Press the FORMAT button on the remote control.

STANDARD size screen (16 : 9)

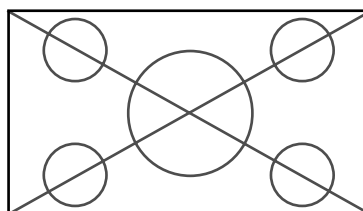

The full size screen is displayed.

* The picture has the same size as video pictures (16 : 9).


Watching computer images

Switch to the wide screen mode to expand the 4 : 3 image to fill the entire screen.

1. Press the FORMAT button on the remote control.
2. Within 3 seconds ...
Press the FORMAT button again.
The screen size switches as follows:


→ NARROW → STANDARD

NARROW size screen (4:3 or SXGA 5:4)

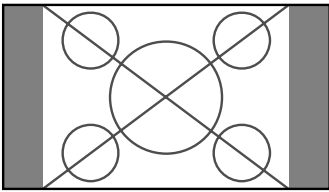

The picture has the same size as the normal computer image.


STANDARD size screen

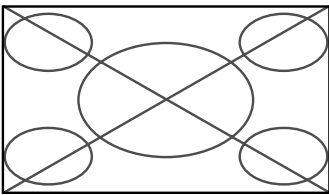

The image is expanded in the horizontal direction.

WHEN WIDE SIGNALS ARE INPUT

STANDARD size screen

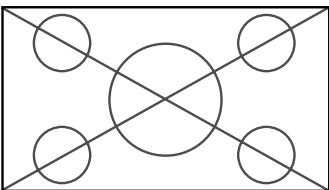


When "PICTURE SIZE" is set to "OFF"

The screen size switches as follows:


→ TRUE → STANDARD

TRUE size screen (VGA, SVGA 4:3)

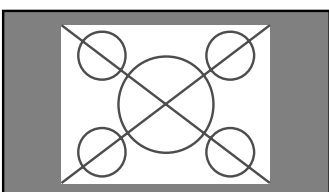

The image is true resolution.


STANDARD size screen

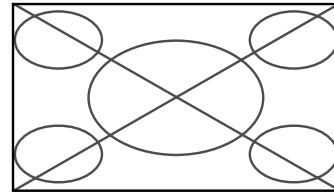

The image is expanded in the horizontal and vertical direction.


WHEN WIDE SIGNALS ARE INPUT

TRUE

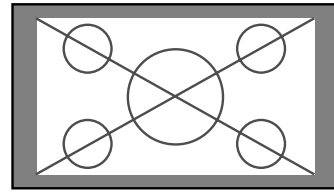

The image is true resolution.

STANDARD

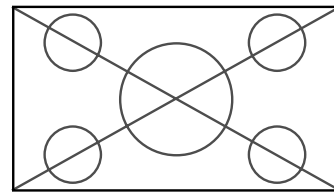

The image fills the screen.

Information

■ Supported resolution

See page 55 for details on the display output of the various VESA signal standards supported by the monitor.

■ "PICTURE SIZE" setting

When the setting of "PICTURE SIZE" is OFF, the size of RGB-input pictures will be TRUE in place of NARROW.

■ When 852 (848) dot x 480 line wide VGA* signals with a vertical frequency of 60 Hz and horizontal frequency of 31.7 (31.0) kHz are input

Select an appropriate setting for RGB SELECT mode referring to the "Table of Signals Supported" on page 55.

* "IBM PC/AT" and "VGA" are registered trademarks of IBM, Inc. of the United States.


PIP SCREEN Operations

Showing a couple of pictures on the screen at the same time

* An RGB-input picture may not be displayed in these modes, depending on the input signal specifications.

1. Press the PIP button to select a screen mode from among single mode, side by side, and picture in picture.


Side by side

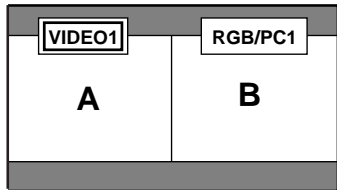

Note:

Picture A and B on the above screen are not always of the same height.

Picture in picture

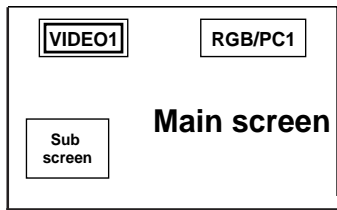

Information




Multi screen operations may not function depending on the combination of input signals. In the table below, "O" means Yes, "X" means No.

Pictures displayed on the left/sub screen	Pictures displayed on the right/main screen							
	VIDEO1	VIDEO2	VIDEO3	HD/DVD1	HD/DVD2	RGB/PC1	RGB/PC2	RGB/PC3
VIDEO1	X	X	X	0	0	0	0	0
VIDEO2	X	X	X	0	0	0	0	0
VIDEO3	X	X	X	0	0	0	0	0
HD/DVD1	0	0	0	X	0	0	0	0
HD/DVD2	0	0	0	0	X	0	X	0
RGB/PC1	0	0	0	0	0	X	X	X
RGB/PC2	0	0	0	0	X	X	X	X
RGB/PC3	0	0	0	0	0	X	X	X



■ Multi screen operations may not function depending on the type of the RGB signals.

Operations in the Side-by-side mode



To change the picture size, press the cursor ◀ or ▶ button.

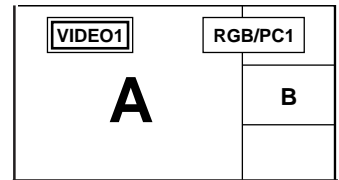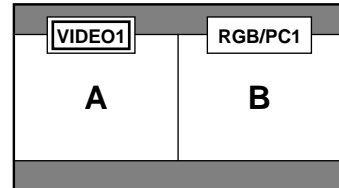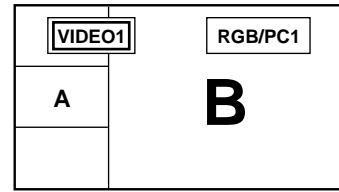

To swap the picture on the right and the left, press the cursor ▲ button.

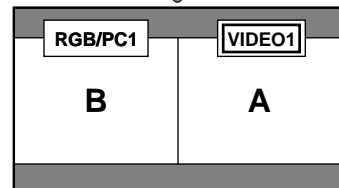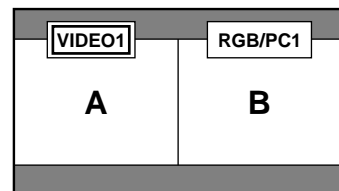


To make the desired picture active, press the SELECT button.

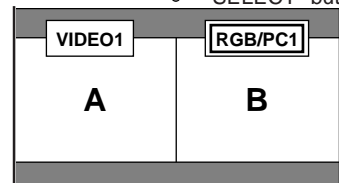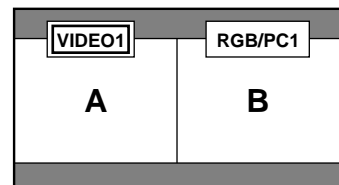


Operations in the Picture-in-picture mode


To move the position of the sub screen, press the cursor ◀ or ▶ button.

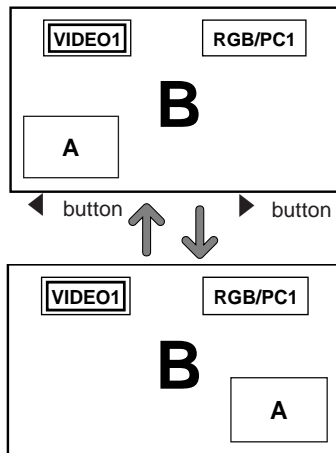

To change the size of the sub screen, press the ZOOM button.

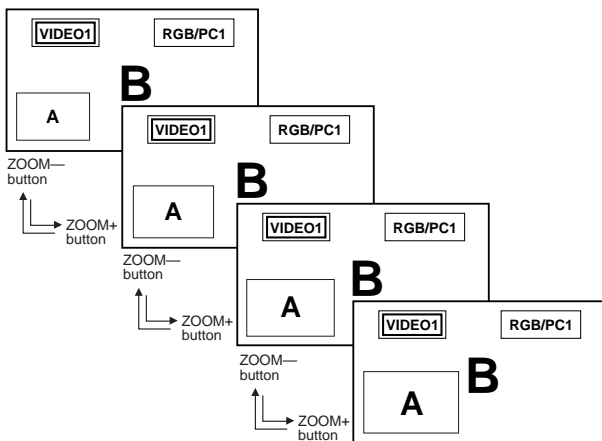

To make the desired picture active, press the SELECT button.

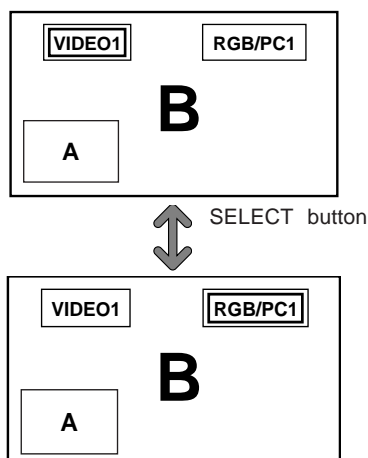

Selecting the input signals to be displayed

1. Press the SELECT button to make the desired picture active.
2. Press the RGB/PC, VIDEO, or DVD/HD button. Each press of the button changes the selection of the input signal. The INPUT button on the monitor can also be used to change the selection.

Adjusting the ON-SCREEN MENU controls

1. Press the SELECT button to make the desired picture active.
2. Press the MENU/ENTER button to display the MAIN MENU.
3. Adjust the setting to your preference. For details, see "On Screen Menu Controls" on page 18.

Note:


- During Multi screen mode, Auto Adjust does not affect the screen.
- During Multi screen mode, some functions of the MENU controls are not available.

On Screen Menu Controls

Menu Operations

The MENU window is displayed with respect to the screen as shown on the diagram.

* Depending on the screen's mode, the MENU may be displayed differently.
In the explanation, the MENU section is shown close up.

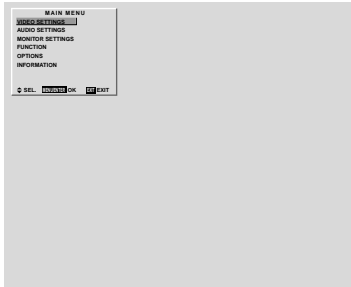


The following describes how to use the menus and the selected items.

1. Press the MENU/ENTER button on the remote control to display the MAIN MENU.



2. Press the cursor buttons ▲ ▼ on the remote control to highlight the menu you wish to enter.
3. Press the MENU/ENTER button on the remote control to select a submenu or item.

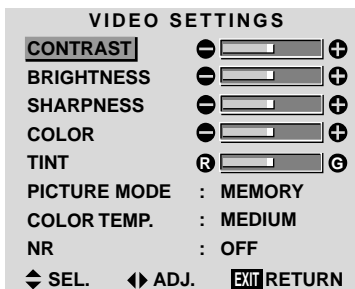

4. Adjust the level or change the setting of the selected item by using the cursor buttons ◀ or ▶ on the remote control.

5. The change is stored until you adjust it again.
6. Repeat steps 2 – 5 to adjust an additional item, or press the EXIT button on the remote control to return to the main menu.

Note: The main menu disappears by pressing the EXIT button.

Main menu	Sub menu	Functions	Default	Reset
VIDEO SETTINGS	CONTRAST	Adjusts the contrast.	Center	Yes
	BRIGHTNESS	Adjusts the brightness.	Center	Yes
	SHARPNESS	Adjusts the sharpness.	Center/1	Yes
	COLOR	Adjusts the color.	Center	Yes
	TINT	Adjusts the tint.	Center	Yes
	PICTURE MODE	Sets the picture mode according to the VIDEO environment and image software.	MEMORY	Yes
	COLOR TEMP NR	Adjusts the color temperature and white balance. Reduces noise visible in image	MEDIUM OFF	Yes Yes

Main menu	Sub menu	Functions	Default	Reset
AUDIO SETTINGS	BASS	Sets the bass.	Center	Yes
	TREBLE	Sets the treble.	Center	Yes
	BALANCE	Sets the left/right balance.	Center	Yes

Main menu	Sub menu	Functions	Default	Reset
MONITOR SETTINGS	V-POSITION	Adjusts the vertical position.	Center	Yes
	H-POSITION	Adjusts the horizontal position.	Center	Yes
	V-HEIGHT	Adjusts the vertical size.	Min	Yes
	H-WIDTH	Adjusts the horizontal size.	Min	Yes
	AUTO PICTURE	Turn this on to have the monitor automatically adjust "FINE PICTURE" and "PICTURE ADJ".	OFF*1	No
	FINE PICTURE PICTURE ADJ.	Adjusts for flickering on the computer image. Adjusts for striped patterns on the computer image.	Min*1 Center*1	Yes Yes

Main menu	Sub menu	Functions	Default	Reset
FUNCTION	MENU	Turns the on-screen menu (screen mode, etc.) off (when set to "OFF"). When set to "ON", the on-screen menu is displayed.	ON	Yes
	MENU ADJ.	Adjusts the vertical and horizontal positions of the menu display.	1	Yes
	POWER MGT	Sets the monitor for use as an energy-saving display when used with a computer.	OFF	Yes
	GRAY LEVEL	In case of 4 : 3, sets the luminance of both sides.	3	Yes
	CINEMA MODE	Sets the picture to suit the movie.	ON	Yes
	M-LINK ADJ.	Adjusts the picture when the picture input from the MONITORLINK input terminal is distorted.	1	Yes
	LONG LIFE	Sets the picture to reduce burn-in of the display.	*2	Yes
	RESET	Resets all the settings (VIDEO, AUDIO, MONITOR, FUNCTION, etc.) to the factory default values.	—	—

Main menu	Sub menu	Functions	Default	Reset
OPTIONS	AUDIO INPUT	Sets the allocation of the audio connectors.	*3	Yes
	BNC SELECT	Sets the BNC connectors.	RGB	Yes
	RGB SELECT	Sets the appropriate mode for the computer image. RGB (VGA signals), VIDEO (Moving picture), WIDE (WIDE VGA) DTV.	AUTO	Yes
	HD SELECT	Sets digital broadcasting (1080A, 1080B) or High Vision (1035I).	1080B	No
	PICTURE SIZE	Sets the picture size for RGB input.	ON	Yes

Main menu	Sub menu	Functions	Default	Reset
INFORMATION	FREQUENCY	Used to check the frequency and synchronizing polarities of the signal currently being inputted.	—	—
	LANGUAGE	Sets the language of the menus (Japanese, English, German, French, Swedish, Italian or Spanish).	English	No
	COLOR SYSTEM	Sets the VIDEO format (AUTO1, AUTO2, PAL, PAL-M, PAL-N, PAL60SECAM, 4.43 NTSC or 3.58 NTSC).	AUTO1	No

*1 RGB/PC only.

*2 PLE: AUTO ORBITER: OFF INVERSE: OFF SCREEN WIPER: OFF

*3 AUDIO1: VIDEO1 AUDIO2: HD/DVD1 AUDIO3: RGB1

Picture Settings Menu


Adjusting the picture

The contrast, brightness, sharpness, color and tint can be adjusted as desired.


Example: Adjusting the contrast

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select “VIDEO SETTINGS”, then press the MENU/ENTER button. The “VIDEO SETTINGS” screen appears.
2. Use the ▲ and ▼ buttons to select “CONTRAST”.

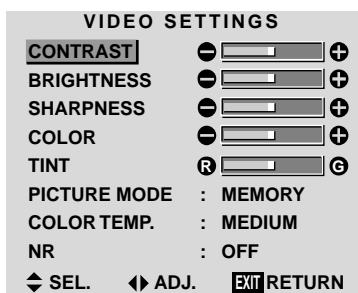

3. Use the ◀ or ▶ buttons to adjust the contrast.

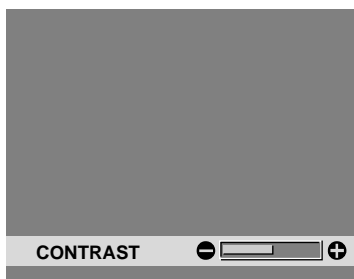

* If neither the ◀ or ▶ button is pressed within 5 seconds, the current setting is set and the previous screen reappears.

4. Once the adjustment is completed ...

Press the EXIT button to return to the main menu.

To delete the main menu, press the EXIT button once more.

*Note: If “CAN NOT ADJUST” appears ...
When trying to enter the VIDEO SETTINGS submenu,
make sure PICTURE MODE is not set to RESET.*

Information

■ VIDEO SETTINGS screen

CONTRAST Changes the picture’s contrast.

BRIGHTNESS .. Changes the picture’s brightness.

SHARPNESS Changes the picture’s sharpness.
Adjusts picture detail of VIDEO display.

COLOR Changes the color density.

TINT Changes the picture’s tint. Adjust for natural colored skin, background, etc.

■ Adjusting the computer image

Only the contrast and brightness can be adjusted when a computer signal is connected.

■ Restoring the factory default settings

Select “RESET” under the “PICTURE MODE” settings.

Setting the picture mode according to the brightness of the room

There are four picture modes that can be used effectively according to the environment in which you are viewing the display.


Example: Setting the "THEATER" mode

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select "VIDEO SETTINGS", then press the MENU/ENTER button.

The "VIDEO SETTINGS" screen appears.

2. Use the ▲ and ▼ buttons to select "PICTURE MODE".

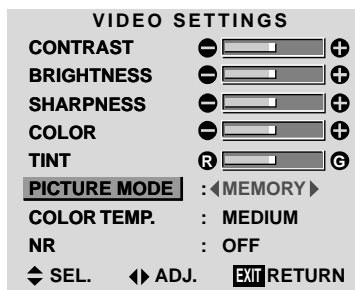


3. To set to "THEATER" ...

Use the ◀ and ▶ buttons to select "THEATER".

The mode switches as follows when the ◀ and ▶ buttons are pressed:

→ MEMORY ↔ THEATER ↔ NORMAL ↔ RESET ←

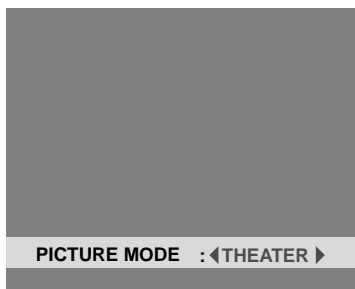

* If neither the ◀ or ▶ button is pressed within 5 seconds, the current selection is set and the previous screen reappears.

4. Once the adjustment is completed ...

Press the EXIT button to return to the main menu. To delete the main menu, press the EXIT button once more.

Information

■ Types of picture modes

MEMORY The last picture adjustments are stored here.

THEATER Set this mode when watching video in a dark room.

This mode provides darker, finer pictures, like the screen in movie theaters.

CONTRAST = 80% for RESET mode
BRIGHTNESS = 95% for RESET mode

NORMAL Set this mode when watching video in a bright room.

This mode provides dynamic pictures with distinct differences between light and dark sections.

CONTRAST = 96% for RESET mode

RESET Use this to reset the picture to the factory default settings. No adjustments to contrast, brightness, sharpness, color or tint can be made in this mode.


Setting the color temperature

Use this procedure to set color tone produced by the plasma display.

Example: Setting "LOW"

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select "VIDEO SETTINGS", then press the MENU/ENTER button. The "VIDEO SETTINGS" screen appears.
2. Use the ▲ and ▼ buttons to select "COLOR TEMP."

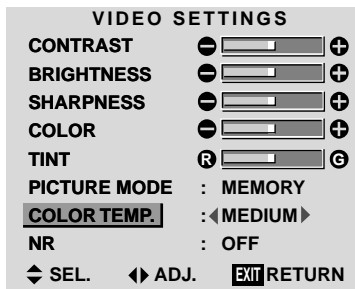


3. Use the ◀ and ▶ buttons to select "LOW".

The mode switches as follows when the ◀ and ▶ buttons are pressed:

→ HIGH ↔ MEDIUM ↔ LOW ↔ CUSTOM ←

* See page 23 to set "CUSTOM".

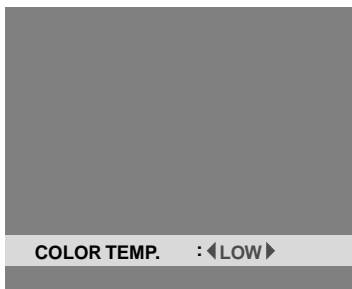

* If neither the ◀ or ▶ button is pressed within 5 seconds, the current selection is set and the previous screen reappears.

4. Once the setting is completed...

Press the EXIT button to return to the main menu.

To delete the main menu, press the EXIT button once more.

Information

■ Setting the color temperature

HIGH Whites appear more bluish

MEDIUM Standard

LOW Whites appear more reddish

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select "FUNCTION," and then select "RESET". Note that this also restores other settings to the factory defaults.


Adjusting the color to the desired quality

Use this procedure to adjust the white balance for bright pictures and dark pictures to achieve the desired color quality.

Example: Adjusting the "WHITE BALANCE"

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...


1. Use the ▲ and ▼ buttons to select "VIDEO SETTINGS", then press the MENU/ENTER button. The "VIDEO SETTINGS" screen appears.

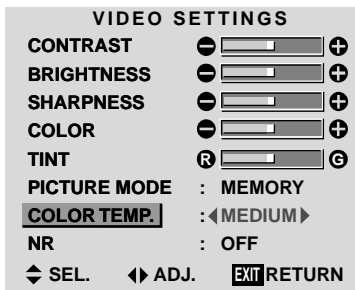

3. Use the ◀ or ▶ buttons to select "CUSTOM".

The mode switches as follows when the ◀ and ▶ buttons are pressed:


→ HIGH ↔ MEDIUM ↔ LOW ↔ CUSTOM ←

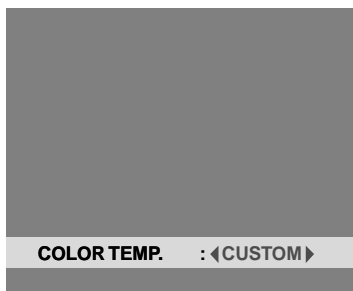


- * If neither the ◀ or ▶ button is pressed within 5 seconds, the current selection is set and the previous screen reappears.

4. Press the MENU/ENTER button. The "WHITE BALANCE" screen appears.

5. Use the ▲ and ▼ buttons to select "RED-GAIN".

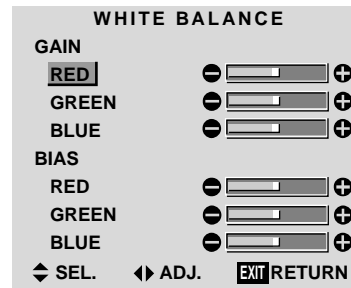

6. Adjust the white balance using the ◀ and ▶ buttons.

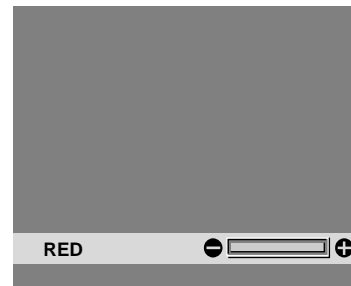

- * If neither the ◀ or ▶ button is pressed within 5 seconds, the current setting is set and the previous screen reappears.

7. Once the adjustment is completed...

Press the EXIT button several times to return to the main menu. To delete the main menu, press the EXIT button once more.

Information

■ Adjusting the white balance

RGB-GAIN White balance adjustment for signal level

RGB-BIAS White balance adjustment for black level

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select "FUNCTION," and then select "RESET". Note that this also restores other settings to the factory defaults.


Reducing noise in the picture

Use these settings if the picture has noise due to poor reception or when playing video tapes on which the picture quality is poor.

Example: Setting "NR-3"


Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select "VIDEO SETTINGS", then press the MENU/ENTER button. The "VIDEO SETTINGS" screen appears.
2. Use the ▲ and ▼ buttons to select "NR".

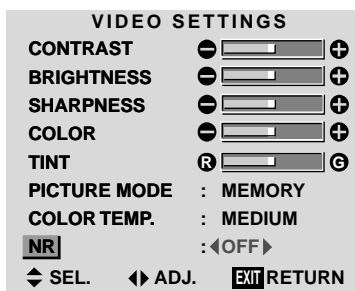

3. Use the ◀ and ▶ buttons to select "NR-3". The mode switches as follows when the ◀ and ▶ buttons are pressed:

→ OFF ↔ NR-1 ↔ NR-2 ↔ NR-3 ←

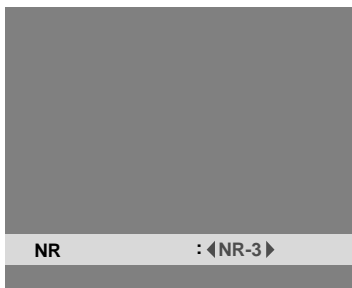

* If neither the ◀ or ▶ button is pressed within 5 seconds, the current selection is set and the previous screen reappears.

4. Once the setting is completed ...

Press the EXIT button to return to the main menu.

To delete the main menu, press the EXIT button once more.

Information

■ NR

* "NR" stands for Noise Reduction.

* This function reduces noise in the picture.

■ Types of noise reduction

There are three types of noise reduction. Each has a different level of noise reduction.

The effect becomes stronger as the number increases (in the order NR-1 → NR-2 → NR-3).

OFF Turns the noise reduction function off.

AUDIO Settings Menu


Adjusting the treble, bass and left/right balance

The treble, bass and left/right balance can be adjusted to suit your tastes.


Example: Adjusting the bass

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select “AUDIO SETTINGS”, then press the MENU/ENTER button. The “AUDIO SETTINGS” screen appears.
2. To adjust the bass ...
Use the ▲ and ▼ buttons to select “BASS”.

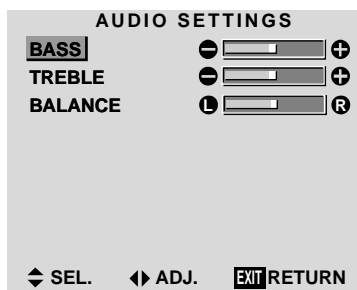

3. Adjust the bass using the ◀ and ▶ buttons.

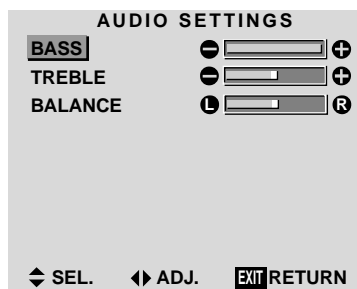

* If neither the ◀ or ▶ button is pressed within 5 seconds, the current selection is set and the previous screen reappears.

To continue adjusting the sound ...
Repeat from step 2.

4. Once the adjustment is completed ...
Press the EXIT button to return to the main menu. To delete the main menu, press the EXIT button once more.

*Note : If “CAN NOT ADJUST” appears...
Set “AUDIO INPUT” on the OPTION menu correctly.*

The audio settings only affect the sound from speakers connected to the PD-5010 's speaker terminals.

In order to adjust the audio settings, you must first select an input for which the audio is operational.

Information

■ Sound settings menu

BASS Changes the level of low frequency sound.

TREBLE Changes the level of high frequency sound.

BALANCE Changes the balance of the left and right channels.

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select “FUNCTION,” and then select “RESET”. Note that this also restores other settings to the factory defaults.

Monitor Settings Menu

Adjusting the Position, Size, Fine Picture, Picture Adj


The position of a computer image can be adjusted and flickering of the image can be corrected.

Example: Adjusting the vertical position in the normal mode

First, select the image from your computer. Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select “MONITOR SETTINGS”, then press the MENU/ENTER button. The “MONITOR SETTINGS” menu appears.


Default settings (when RGB/PC is selected)

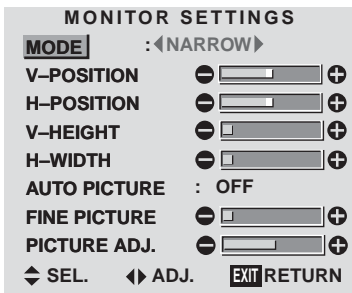

* The settings on the SCREEN menu are not preset at the factory.

To select a mode ...


Use the ◀ and ▶ buttons to select a mode. The mode switches as follows when the ◀ and ▶ buttons are pressed:




* The mode can also be switched by pressing the “FORMAT” button on the remote control.

2. To adjust the vertical position ...

Use the ▲ and ▼ buttons to select “V-POSITION”.

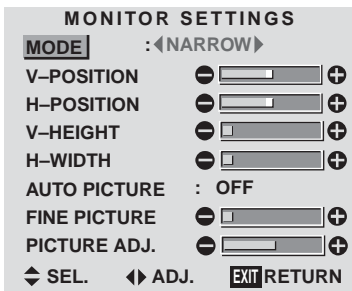

3. Adjust using the ◀ or ▶ buttons.

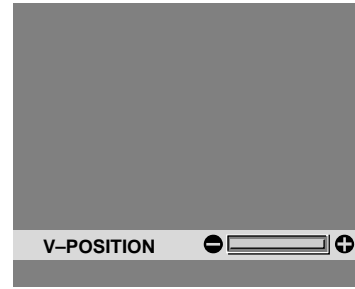

* If neither the ◀ or ▶ button is pressed within 5 seconds, the current setting is set and the previous screen reappears.

To continue making other computer image adjustments ...

Repeat from step 2.


4. Once all adjustments are completed ...

Press the EXIT button to return to the main menu.

To delete the main menu, press the EXIT button once more.

Information

■ When “AUTO PICTURE” is “OFF”

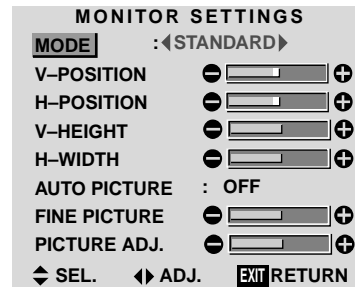

When Auto Picture is off, the Fine Picture and the Picture ADJ. items are displayed so that you can adjust them.

Information

■ Adjusting the Auto Picture

ON The Picture ADJ and Fine Picture adjustments are made automatically.

OFF The Picture ADJ and Fine Picture adjustments are made manually.

■ Adjusting the position of the image

V-POSITION ... Adjusts the vertical position of the image.

H-POSITION ... Adjusts the horizontal position of the image.

V-HEIGHT Adjusts the vertical size of the image. (Except for STRETCHED mode)

H-WIDTH Adjusts the horizontal size of the image. (Except for STRETCHED mode)

FINE PICTURE* Adjusts for flickering.

PICTURE ADJ* Adjusts image resolution.

* The Picture ADJ and Fine Picture features are available only when the "Auto Picture" is off.

* The AUTO PICTURE, FINE PICTURE and PICTURE ADJ. are available only for RGB signals.

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select "FUNCTION," and then select "RESET". Note that this also restores other settings to the factory defaults except for Auto Picture.

Function Menu

Setting the on-screen menu

When using the monitor for presentations, etc., the monitor can be set so that the input source, screen mode, etc., do not appear.

Example: Turning the on-screen menu mode off

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select "FUNCTION", then press the MENU/ENTER button. The "FUNCTION" screen appears.
2. Use the ▲ and ▼ buttons to select "MENU".

FUNCTION	
MENU	: ◀ ON ▶
MENU ADJ.	: 1
POWER MGT	: OFF
GRAY LEVEL	: 3
CINEMA MODE	: ON
M-LINK ADJ.	: 1
LONG LIFE	
RESET	
◀ SEL.	▶ ADJ. EXIT RETURN

3. To turn the on-screen menu mode off ... Use the ◀ and ▶ buttons to select "OFF". The mode switches as follows each time the ◀ or ▶ button is pressed:

ON ↔ OFF

FUNCTION	
MENU	: ◀ OFF ▶
MENU ADJ.	: 1
POWER MGT	: OFF
GRAY LEVEL	: 3
CINEMA MODE	: ON
M-LINK ADJ.	: 1
LONG LIFE	
RESET	
◀ SEL.	▶ ADJ. EXIT RETURN

4. Once the setting is completed ... Press the EXIT button to return to the main menu. To delete the main menu, press the EXIT button once more.

Information

■ MENU modes

ON The on-screen menu appears.

OFF The on-screen menu does not appear.

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select "FUNCTION," and then select "RESET". Note that this also restores other settings to the factory defaults.


Adjusting the position of the menu display

Use these operations to adjust the position of the menus that appear on the screen.

Example: Adjusting the position of the menu display


Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select “FUNCTION”, then press the MENU/ENTER button. The “FUNCTION” menu appears.
2. Use the ▲ and ▼ buttons to select “MENU ADJ.”

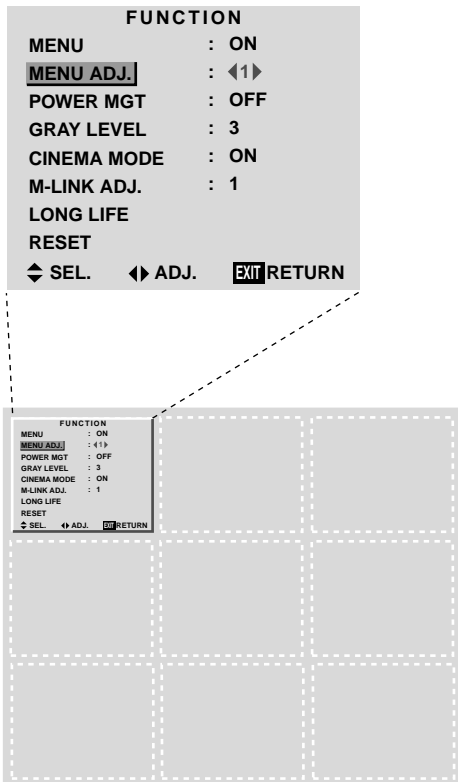

3. To adjust the position...

Adjust using the ◀ or ▶ buttons.

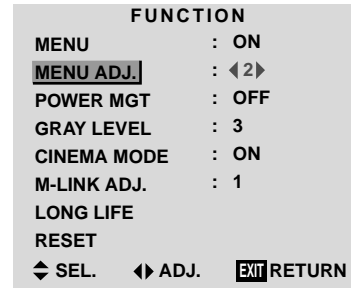


4. Once all adjustments are completed ...

Press the EXIT button to return to the main menu.

To delete the main menu, press the EXIT button once more.

Information

■ Adjusting the position of the menu display

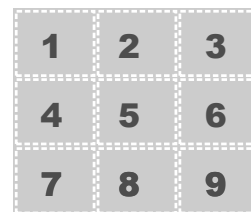

The position can be set between 1 and 9, as per this diagram.

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select “FUNCTION,” and then select “RESET”. Note that this also restores other settings to the factory defaults.


Setting the power management for computer images

This energy-saving (power management) function automatically reduces the monitor's power consumption if no operation is performed for a certain amount of time.

Example: Turning the power management function on


Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select "FUNCTION", then press the MENU/ENTER button.
The "FUNCTION" screen appears.
2. Use the ▲ and ▼ buttons to select "POWER MGT".

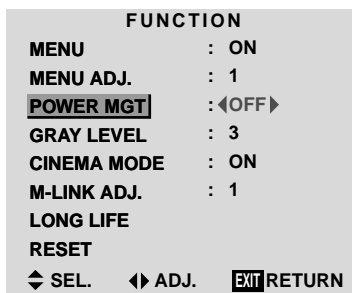

3. To turn the power management function on ...
Use the ◀ and ▶ buttons to select "ON".
The mode switches as follows each time the ◀ or ▶ button is pressed:

ON↔OFF

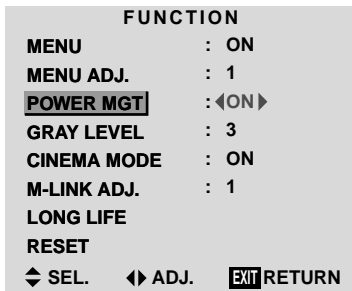

4. Once the setting is completed ...
Press the EXIT button to return to the main menu.
To delete the main menu, press the EXIT button once more.

Information

■ Power management function

- * The power management function automatically reduces the monitor's power consumption if the computer's keyboard or mouse is not operated for a certain amount of time. This function can be used when using the monitor with a computer conforming to the VESA DPMS format.
- * If the computer's power is not turned on or if the computer and selector tuner are not properly connected, the system is set to the off state.
- * For instructions on using the computer's power management function, refer to the computer's operating instructions.

■ Power management settings

- ON In this mode the power management function is turned on.
- OFF In this mode the power management function is turned off.

■ Power management function and POWER/STANDBY indicator

The POWER/STANDBY indicator indicates the status of the power management function. See page 30 for indicator status and description.

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select "FUNCTION," and then select "RESET". Note that this also restores other settings to the factory defaults.

POWER/STANDBY indicator

Power management mode	POWER/STANDBY indicator	Power management operating status	Description	Turning the picture back on
On	Green	Not activated.	Horizontal and vertical synchronizing signals are present from the computer.	Picture already on.
Standby	Orange	Activated.	No horizontal synchronizing signals are sent from the computer.	Operate the keyboard or mouse. The picture reappears immediately.
Suspend	Red	Activated.	No vertical synchronizing signals are sent from the computer.	Operate the keyboard or mouse. The picture reappears, but more time is required than from the standby mode.
Off	Red	Activated.	No horizontal and vertical synchronizing signals are sent from the computer.	Operate the keyboard or mouse. The picture reappears, but more time is required than from the standby mode or suspend mode.


Setting the gray level for the sides of the screen

Use this procedure to set the gray level for the parts on the screen on which nothing is displayed when the screen is set to the 4:3 size.


Example: Adjusting the “GRAY LEVEL”

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select “FUNCTION”, then press the MENU/ENTER button.
The “FUNCTION” screen appears.
2. Use the ▲ and ▼ buttons to select “GRAY LEVEL”.

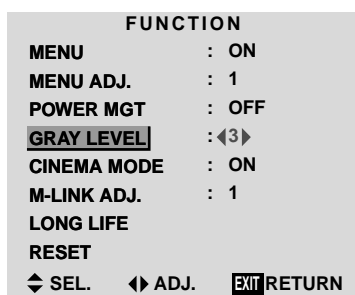

3. To adjust the “GRAY LEVEL”...
Use the ◀ and ▶ buttons to adjust the GRAY LEVEL.

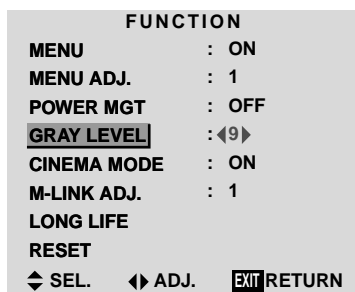

4. Once the setting is completed ...
Press the EXIT button to return to the main menu.
To delete the main menu, press the EXIT button once more.

Information

■ GRAY LEVEL

This adjusts the brightness of the black (the gray level) for the sides of the screen.
The standard is 0 (black). The level can be adjusted from 0 to 15. The factory setting is 3 (dark gray).

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select “FUNCTION,” and then select “RESET”. Note that this also restores other settings to the factory defaults.

Setting the picture to suit the movie


A film image is automatically detected and displayed in an image mode suited to the picture.

[NTSC, PAL, PAL60, 480I (60Hz), 525I (60Hz), 576I (50Hz), 625I (50Hz), 1035I (60Hz), 1080I (60Hz) only]



Example: Setting the “CINEMA MODE” to “OFF”

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select “FUNCTION”, then press the MENU/ENTER button.
The “FUNCTION” screen appears.
2. Use the ▲ and ▼ buttons to select “CINEMA MODE”.

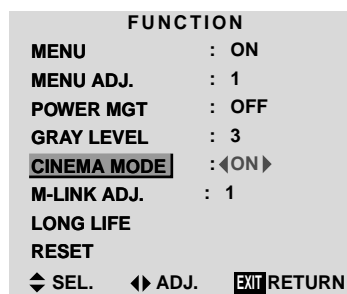

3. To set the CINEMA MODE to “OFF” ...
Use the ◀ or ▶ buttons to select “OFF”.
The mode switches as follows each time the ◀ or ▶ button is pressed:

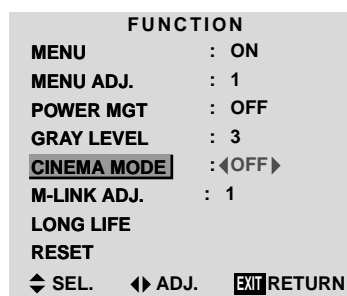

4. Once the setting is completed ...
Press the EXIT button to return to the main menu.
To delete the main menu, press the EXIT button once more.

Information

■ CINEMA MODE

ON Automatic detection and display of pictures as they originated in the movie.
OFF Cinema mode does not function.

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select “FUNCTION,” and then select “RESET”. Note that this also restores other settings to the factory defaults.

Setting MONITORLINK (M-LINK) ADJ.

When the picture input from the MONITORLINK input terminal is distorted, select the most appropriate setting from among “1”, “2”, and “3”.

Example: Setting “2”

Press the MENU/ENTER button on the remote control to display MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select “FUNCTION”, then press the MENU/ENTER button. The “FUNCTION” screen appears.
2. Use the ▲ and ▼ buttons to select “M-LINK ADJ.”.

FUNCTION	
MENU	: ON
MENU ADJ.	: 1
POWER MGT	: OFF
GRAY LEVEL	: 3
CINEMA MODE	: ON
M-LINK ADJ.	: ◀1▶
LONG LIFE	
RESET	
◀ SEL.	▶ ADJ. EXIT RETURN

3. To select “2”...

Use the ◀ and ▶ buttons to select “2”.

The mode switches as follows each time the ◀ or ▶ button is pressed:

→ 1 ↔ 2 ↔ 3 ←

FUNCTION	
MENU	: ON
MENU ADJ.	: 1
POWER MGT	: OFF
GRAY LEVEL	: 3
CINEMA MODE	: ON
M-LINK ADJ.	: ◀2▶
LONG LIFE	
RESET	
◀ SEL.	▶ ADJ. EXIT RETURN

4. Once the setting is completed...

Press the EXIT button to return to the main menu.

To delete the main menu, press the EXIT button once more.

Information

■ **NOTE:** M-LINK ADJ is available only after proprietary tuner/controller has been connected.

■ When you adjust the M-LINK ADJ.

The position of the menu display will change. In such a case, be sure to adjust the position.

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select “FUNCTION,” and then select “RESET”. Note that this also restores other settings to the factory defaults.

Reducing uneven aging of the screen

The brightness of the screen, the position of the picture, positive/negative mode and screen wiper are adjusted to reduce uneven phosphor aging of the screen.

Example: Setting “PLE” to “LOCK”

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then proceed as follows.

1. Use the ▲ and ▼ buttons to select “FUNCTION”, then press the MENU/ENTER button. The “FUNCTION” screen appears.
2. Use the ▲ and ▼ buttons to select “LONG LIFE”, then press the MENU/ENTER button.

FUNCTION	
MENU	: ON
MENU ADJ.	: 1
POWER MGT	: OFF
GRAY LEVEL	: 3
CINEMA MODE	: ON
M-LINK ADJ.	: 1
LONG LIFE	
RESET	
◀ SEL.	MENU/ENTER OK EXIT RETURN

The “LONG LIFE” screen appears.

3. Use the ▲ and ▼ buttons to select “PLE”.

LONG LIFE	
PLE	: ◀AUTO▶
ORBITER	: OFF
INVERSE	: OFF
SCREEN WIPER	: OFF
◀ SEL.	▶ ADJ. EXIT RETURN

4. Use the ◀ and ▶ buttons to select “LOCK”.

The mode switches as follows each time the ◀ or ▶ button is pressed:

AUTO ↔ LOCK

LONG LIFE	
PLE	: ◀LOCK▶
ORBITER	: OFF
INVERSE	: OFF
SCREEN WIPER	: OFF
◀ SEL.	▶ ADJ. EXIT RETURN

5. Once the setting is completed...

Press the EXIT button to return to the FUNCTION menu.
To exit the main menu, press the EXIT button twice.

Information

■ **PEAK LUMINANCE ENHANCEMENT (PLE)**

AUTO The brightness of the screen is adjusted automatically to suit the picture quality.
LOCK The brightness level is set to minimum.

■ **ORBITER**

OFF Orbiter mode does not function.
ON The picture gradually moves around the screen to reduce the impact of uneven aging.

■ **INVERSE**

OFF Inverse mode does not function.
ON The picture is displayed alternately between positive image and negative image.
You can set the time by pressing the MENU/ENTER button while "ON" is set.
WT The entire screen turns white.
You can set the time by pressing the MENU/ENTER button while "ON" is set.

■ **SCREEN WIPER**

OFF Screen wiper mode does not function.
ON Repeatedly moves the white vertical bar from the left end of the screen to the right end at a constant speed.
You can set the time by pressing the MENU/ENTER button while "ON" is set.

■ **Restoring the factory default settings**

To restore the original factory settings, go back to the MAIN MENU. Select "FUNCTION," and then select "RESET". Note that this also restores other settings to the factory defaults.


* The PLE and ORBITER can only be adjusted when an RGB signal is displayed.

Setting the time for "INVERSE"


Set the "INVERSE" or "WHITE" display time and the "WAITING TIME".

Example: Setting so that the INVERSE mode cycles on for 90 minutes and off for 30 minutes.


1. Use the ▲ and ▼ buttons to select "FUNCTION", then press the MENU/ENTER button.
The "FUNCTION" screen appears.
2. Use the ▲ and ▼ buttons to select "LONG LIFE", then press the MENU/ENTER button.
3. Use the ▲ and ▼ buttons to select "INVERSE", then use the ◀ and ▶ buttons to select "ON".

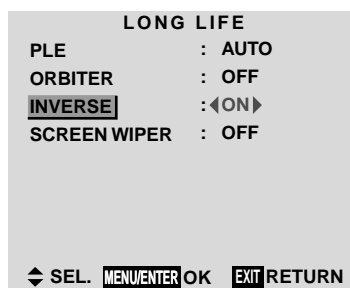

4. Press the MENU/ENTER button.
The "INVERSE/WT" screen appears.

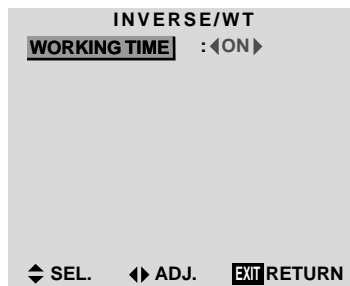

5. Adjust the time using the ◀ and ▶ buttons and the ▲ and ▼ buttons.
The mode switches as follows each time the ▲ or ▼ button is pressed.

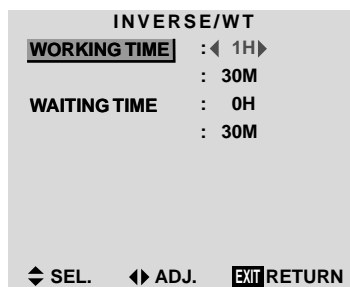

The 1st line of the "WORKING TIME":

→ON or 0H ↔1H ↔2H ↔3H↔...↔12H←

* The “WORKING TIME” (minutes) and “WAITING TIME” cannot be set when the “WORKING TIME” is “ON”.

The 2nd line of the “WORKING TIME”:

→ 0M ↔3M ↔6M ↔9M↔...↔57M←

The 1st line of the “WAITING TIME”:

→ 0H ↔1H ↔2H ↔3H↔... ↔12H ←

The 2nd line of the “WAITING TIME”:

→ 0M ↔3M ↔6M ↔9M↔... ↔57M ←

6. Once the setting is completed...

Press the EXIT button several times to return to the main menu.

To delete the main menu, press the EXIT button once more.

Information

■ Setting the time

WORKING TIME

Set the length of time the “INVERSE/WT” mode lasts. When the WORKING TIME is set to “ON”, the “INVERSE/WT” mode stays in the on state.

WAITING TIME

Set the length of time until the “INVERSE/WT” mode starts.

* The “WORKING TIME” and “WAITING TIME” can be set for up to 12 hours and 45 minutes in units of 3 minutes.

■ To select “ON” for the “WORKING TIME”...


Set the hours of the WORKING TIME to 0H and the minutes to 0M. “ON” will be displayed.

Setting the time for “SCREEN WIPER”


Set the “SCREEN WIPER” operation time, “WAITING TIME”, and “SPEED”.

Example: Setting the SCREEN WIPER mode to start in 30 minutes and proceeds for one and a half hours.


1. Use the ▲ and ▼ buttons to select “FUNCTION”, then press the PROCEED button. The “FUNCTION” screen appears.
2. Use the ▲ and ▼ buttons to select “LONG LIFE”, then press the MENU/ENTER button.
3. Use the ▲ and ▼ buttons to select “SCREEN WIPER”, then use the ◀ and ▶ buttons to select “ON”.

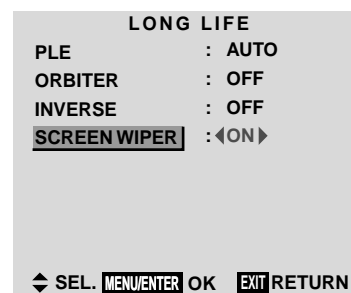

4. Press the MENU/ENTER button. The “SCREEN WIPER” screen appears.

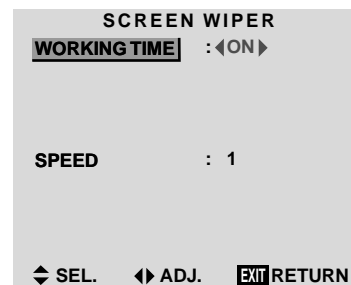

5. Adjust the time and speed using the ◀ and ▶ buttons and the ▲ and ▼ buttons. The mode switches as follows each time the ◀ and ▶ button is pressed.

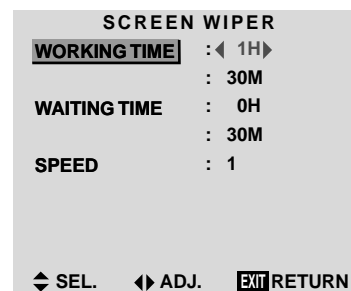

The 1st line of the “WORKING TIME”:

→ 0H ↔1H ↔2H ↔3H↔... ↔12H ←

* The “WORKING TIME” (minutes) and “WAITING TIME” cannot be set when the “WORKING TIME” is “ON”.

The 2nd line of the “WORKING TIME”:

→ 0M ↔3M ↔ 6M ↔ 9M↔ ... ↔57M←

The 1st line of the “WAITING TIME”:

→ 0H ↔1H ↔ 2H ↔ 3H↔ ... ↔12H ←

The 2nd line of the “WAITING TIME”:

→0M ↔3M ↔ 6M ↔ 9M↔ ... ↔57M←

“SPEED”

→1↔2↔3↔4↔5←

6. Once the setting is completed...

Press the EXIT button several times to return to the main menu.

To delete the main menu, press the EXIT button once more.

Information

■ Setting the time

WORKING TIME

Set the length of time the “SCREEN WIPER” mode lasts.

When the WORKING TIME is set to “ON”, the “SCREEN WIPER” mode stays in the “ON” state.

WAITING TIME

Set the length of time until the “SCREEN WIPER” mode starts.

SPEED

Set the moving speed for the “SCREEN WIPER”. The speed decreases as the number increases.

* The “WORKING TIME” and “WAITING TIME” can be set for up to 12 hours and 45 minutes in units of 3 minutes.

■ To select “ON” for the “WORKING TIME”...

Set the hours of the WORKING TIME to 0H and the minutes to 0M. “ON” will be displayed.


Resetting to the default values

Use these operations to restore all the picture adjustments and audio settings to the factory default values.

Refer to page 19 for items to be reset.


Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select “FUNCTION”, then press the MENU/ENTER button.
The “FUNCTION” screen appears.
2. Use the ▲ and ▼ buttons to select “RESET”, then press the MENU/ENTER button.

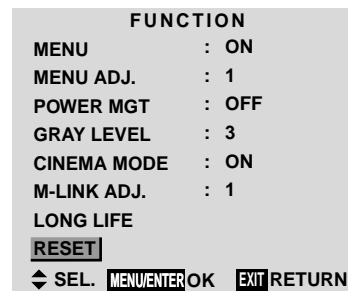

The “RESET” screen appears.

3. Use the ▲ and ▼ buttons to select “RESET”, then press the MENU/ENTER button.

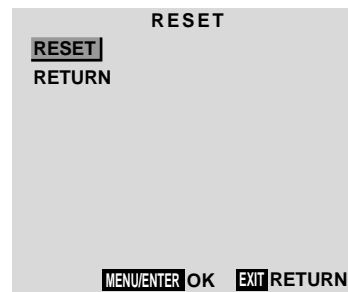

When the “SETTING NOW” screen disappears, the screen will be restored to the previous “RESET” mode, then all the settings are restored to the default values.

4. Once the setting is completed ...

Press the EXIT button.

To delete the main menu, press the EXIT button once more.

Options Setting Menu

Setting the allocation of the audio connectors

Setting the AUDIO 1, 2, and 3 connectors to the desired picture input.

Example: Setting "AUDIO 1" to "VIDEO 2"

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select "OPTIONS", then press the MENU/ENTER button. The "OPTIONS" screen appears.
2. Use the ▲ and ▼ buttons to select "AUDIO 1".

OPTIONS	
AUDIO INPUT	
AUDIO1	: ◀ VIDEO1 ▶
AUDIO2	: HD/DVD1
AUDIO3	: RGB1
BNC SELECT	: RGB
RGB SELECT	: AUTO
HD SELECT	: 1080B
PICTURE SIZE	: ON
◀ SEL.	▶ ADJ. EXIT RETURN

3. To set the AUDIO1 to "VIDEO2"...
Use the ◀ and ▶ buttons to select "VIDEO2".
The mode switches as follows each time the ◀ or ▶ button is pressed:

→VIDEO1←	→VIDEO2←	→VIDEO3←	→HD/DVD←	→RGB/PC1←	→RGB/PC2←	→M-LINK*←
----------	----------	----------	----------	-----------	-----------	-----------

* M-LINK is available only after proprietary tuner/controller has been connected.

OPTIONS	
AUDIO INPUT	
AUDIO1	: ◀ VIDEO2 ▶
AUDIO2	: HD/DVD1
AUDIO3	: RGB1
BNC SELECT	: RGB
RGB SELECT	: AUTO
HD SELECT	: 1080B
PICTURE SIZE	: ON
◀ SEL.	▶ ADJ. EXIT RETURN

4. Once the setting is completed...
Press the EXIT button to return to the main menu.
To delete the main menu, press the EXIT button once more.

Information

■ AUDIO INPUT

A single audio input cannot be selected as the audio channel for more than one input terminal.

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select "FUNCTION," and then select "RESET". Note that this also restores other settings to the factory defaults.

Setting the BNC connectors

Select whether to set the input of the 5 BNC connectors to RGB or component video.

Example: Set the BNC SELECT mode to "COMP."

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select "OPTIONS", then press the MENU/ENTER button. The "OPTIONS" screen appears.
2. Use the ▲ and ▼ buttons to select "BNC SELECT".

OPTIONS	
AUDIO INPUT	
AUDIO1	: VIDEO1
AUDIO2	: HD/DVD1
AUDIO3	: RGB1
BNC SELECT	: ◀ RGB ▶
RGB SELECT	: AUTO
HD SELECT	: 1080B
PICTURE SIZE	: ON
◀ SEL.	▶ ADJ. EXIT RETURN

3. To set the BNC SELECT mode to "COMP."...
Use the ◀ and ▶ buttons to select "COMP.".
The mode switches as follows each time the ◀ or ▶ button is pressed:

→RGB←	→COMP.←
-------	---------

OPTIONS	
AUDIO INPUT	
AUDIO1	: VIDEO1
AUDIO2	: HD/DVD1
AUDIO3	: RGB1
BNC SELECT	: ◀ COMP. ▶
RGB SELECT	: AUTO
HD SELECT	: 1080B
PICTURE SIZE	: ON
◀ SEL.	▶ ADJ. EXIT RETURN

4. Once the setting is completed...
Press the EXIT button to return to the main menu.
To delete the main menu, press the EXIT button once more.

Information

■ BNC SELECT

RGB Use the BNC terminals for a RGB or RGBHV input.

COMP. Use the BNC terminals for component input.

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select "FUNCTION," and then select "RESET". Note that this also restores other settings to the factory defaults.

Setting a computer image to the correct RGB select screen

With the computer image, select the RGB Select mode for a moving image such as (video) mode, wide mode or digital broadcast.

Example: Setting the “RGB SELECT” mode to “MOTION”

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select “OPTIONS”, then press the MENU/ENTER button.
The “OPTIONS” screen appears.
2. Use the ▲ and ▼ buttons to select “RGB SELECT”.

OPTIONS	
AUDIO INPUT	
AUDIO1	: VIDEO1
AUDIO2	: HD/DVD1
AUDIO3	: RGB1
BNC SELECT	: RGB
RGB SELECT	: ◀AUTO▶
HD SELECT	: 1080B
PICTURE SIZE	: ON
◆ SEL.	◀▶ ADJ. EXIT RETURN

3. To set the RGB select mode to “MOTION” ...
Use the ◀ or ▶ buttons to select “MOTION”.
The mode switches as follows each time the ◀ or ▶ button is pressed:

→ AUTO ↔ STILL ↔ MOTION ↔ WIDE1 ↔ WIDE2 ↔ DTV ←

OPTIONS	
AUDIO INPUT	
AUDIO1	: VIDEO1
AUDIO2	: HD/DVD1
AUDIO3	: RGB1
BNC SELECT	: RGB
RGB SELECT	: ◀MOTION▶
HD SELECT	: 1080B
PICTURE SIZE	: ON
◆ SEL.	◀▶ ADJ. EXIT RETURN

4. Once the setting is completed ...
Press the EXIT button to return to the main menu.
To delete the main menu, press the EXIT button once more.

Information

■ RGB SELECT modes

One of these 6 modes must be selected in order to display the following signals correctly:

- AUTO Select the suitable mode for the specifications of input signals as listed in the table “Computer input signals supported by this system” on page 55.
- STILL To display VESA standard signals. (Use this mode for a still image from a computer.)
- MOTION The video signal (from a scan converter) will be converted to RGB signals to make the picture more easily viewable. (Use this mode for a motion image from a computer.)
- WIDE1 When an 852 dot2 480 line signal with a horizontal frequency of 31.7kHz is input, the image may be compressed horizontally. To prevent this, set RGB SELECT to WIDE1.
- WIDE2 When an 848 dot2 480 line signal with a horizontal frequency of 31.0 kHz is input, the image may be compressed horizontally. To prevent this, set RGB SELECT to WIDE2.
- DTV Set this mode when watching digital broadcasting (480P).

See page 55 for the details of the above settings.

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select “FUNCTION,” and then select “RESET”. Note that this also restores other settings to the factory defaults.

Setting high definition images to the suitable screen size

Use this procedure to set whether the number of vertical lines of the input high definition image is 1035 or 1080.

Example: Setting the "1080B" mode to "1035I"

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

- Use the ▲ and ▼ buttons to select "OPTIONS", then press the MENU/ENTER button. The "OPTIONS" screen appears.
- Use the ▲ and ▼ buttons to select "HD SELECT".

OPTIONS	
AUDIO INPUT	
AUDIO1	: VIDEO1
AUDIO2	: HD/DVD1
AUDIO3	: RGB1
BNC SELECT	: RGB
RGB SELECT	: AUTO
HD SELECT	: ◀1080B▶
PICTURE SIZE	: ON
◀ SEL.	▶ ADJ. EXIT RETURN

- To set the HD SELECT mode to "1035I" ... Use the ◀ and ▶ buttons to select "1035I". The mode switches as follows each time the ◀ or ▶ button is pressed:

→ 1080B ↔ 1035I ↔ 1080A ←

OPTIONS	
AUDIO INPUT	
AUDIO1	: VIDEO1
AUDIO2	: HD/DVD1
AUDIO3	: RGB1
BNC SELECT	: RGB
RGB SELECT	: AUTO
HD SELECT	: ◀1035I▶
PICTURE SIZE	: ON
◀ SEL.	▶ ADJ. EXIT RETURN

- Once the setting is completed ... Press the EXIT button to return to the main menu. To delete the main menu, press the EXIT button once more.

Information

■ HD SELECT modes

These 3 modes are not displayed in correct image automatically.

- 1080B Standard digital broadcasts
- 1035I Japanese "High Vision" signal format
- 1080A Digital tuners with non-standard output signals.

Setting the picture size for RGB input signals

Use this procedure to switch the setting to "ON" or "OFF".

Example: Setting the "ON" mode to "OFF"

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

- Use the ▲ and ▼ buttons to select "OPTIONS", then press the MENU/ENTER button. The "OPTIONS" screen appears.
- Use the ▲ and ▼ buttons to select "PICTURE SIZE".

OPTIONS	
AUDIO INPUT	
AUDIO1	: VIDEO1
AUDIO2	: HD/DVD1
AUDIO3	: RGB1
BNC SELECT	: RGB
RGB SELECT	: AUTO
HD SELECT	: 1080B
PICTURE SIZE	: ◀ON▶
◀ SEL.	▶ ADJ. EXIT RETURN

- To set PICTURE SIZE mode to "OFF" ... Use the ◀ and ▶ buttons to select "OFF". The mode switches as follows when the ◀ or ▶ buttons are pressed:

ON ↔ OFF

OPTIONS	
AUDIO INPUT	
AUDIO1	: VIDEO1
AUDIO2	: HD/DVD1
AUDIO3	: RGB1
BNC SELECT	: RGB
RGB SELECT	: AUTO
HD SELECT	: 1080B
PICTURE SIZE	: ◀OFF▶
◀ SEL.	▶ ADJ. EXIT RETURN

- Once the setting is completed ... Press the EXIT button to return to the main menu. To delete the main menu, press the EXIT button once more.

Information

■ PICTURE SIZE

- ON For RGB Input: "NORMAL" and "FULL" can be selected for Wide-Screen switching.
- OFF For RGB Input: "TRUE" and "FULL" can be selected for Wide-Screen switching.

■ Restoring the factory default settings

To restore the original factory settings, go back to the MAIN MENU. Select "FUNCTION," and then select "RESET". Note that this also restores other settings to the factory defaults.


Information Menu

Checking the frequencies, polarities of input signals, and resolution


Use this function to check the frequencies and polarities of the signals currently being input from a computer, etc.

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...

1. Use the ▲ and ▼ buttons to select “INFORMATION”, then press the MENU/ENTER button. The “INFORMATION” screen appears.
2. Use the ▲ and ▼ buttons to select “FREQUENCY”, then press the MENU/ENTER button.

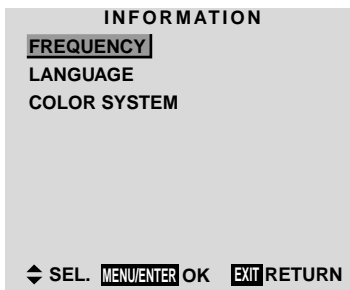

3. The frequency is displayed.

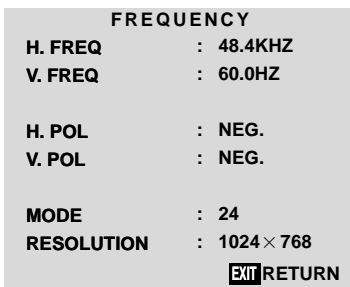

* Press the EXIT button to return to the previous screen.

4. Once you have checked the frequency ... Press the EXIT button to return to the main menu. To delete the main menu, press the EXIT button once more.


Setting the language for the menus

The menu display can be set to one of seven languages: Japanese, English, German, French, Swedish, Italian or Spanish.

Example: Setting the menu display to “DEUTSCH”

Press the MENU/ENTER button on the remote control to display the MAIN MENU on the screen, then...


1. Use the ▲ and ▼ buttons to select “INFORMATION”, then press the MENU/ENTER button. The “INFORMATION” screen appears.
2. Use the ▲ and ▼ buttons to select “LANGUAGE”, then press the MENU/ENTER button.

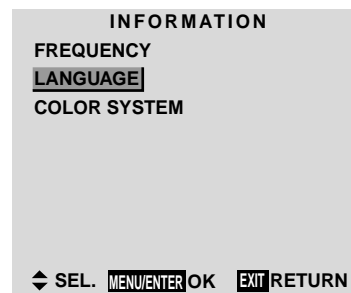

The “LANGUAGE” screen appears.

3. To select “DEUTSCH” ...

Use the ◀ and ▶ buttons to select “DEUTSCH”. The mode switches as follows when the ◀ and ▶ buttons are pressed:



4. Press the MENU/ENTER button. The display language is switched to Deutsch.
5. Once the setting is completed ... Press the EXIT button to return to the main menu. To delete the main menu, press the EXIT button once more.

Information

■ Language settings

ENGLISH English
 DEUTSCH German
 FRANÇAIS French
 ESPAÑOL Spanish
 ITALIANO Italian
 SVENSKA Swedish


Setting the video signal format

Use these operations to set the video signal format.

Example: Setting the video signal format to “3.58 NTSC”

Press the *PROCEED* button on the remote control to display the *MAIN MENU* on the screen, then...

1. Use the ▲ and ▼ buttons to select “INFORMATION”, then press the MENU/ENTER button. The “INFORMATION” screen appears.
2. Use the ▲ and ▼ buttons to select “COLOR SYSTEM”, then press the MENU/ENTER button.

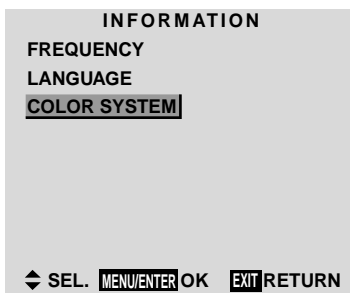


The “COLOR SYSTEM” screen appears.



3. *To select “3.58 NTSC” ...*
Use the ◀ and ▶ buttons to select “3.58 NTSC”. The mode switches as follows when the ◀ and ▶ buttons are pressed:

→ AUTO1 ↔ AUTO2 ↔ 3.58NTSC ↔ 4.43NTSC ←
→ SECAM ↔ PAL-M ↔ PAL-N ↔ PAL60 ↔ PAL ←

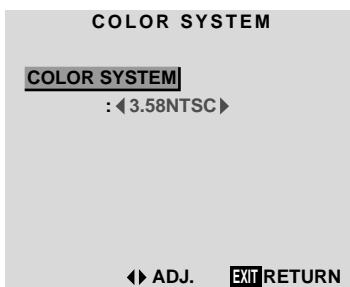

4. *Once the setting is completed ...*

Press the EXIT button to return to the main menu. To delete the main menu, press the EXIT button once more.

The color system is set to “3.58 NTSC”.

Information

■ Video signal formats

Different countries use different formats for video signals. Set to the format used in your current country.

AUTO1/2..... The video signals are automatically detected and the format is set accordingly.

AUTO1: 3.58NTSC, 4.43NTSC, PAL, SECAM, PAL60

AUTO2: PAL-M, PAL-N, 3.58NTSC

PAL (B, G) This is the standard format used mainly in the United Kingdom and Germany.

SECAM..... This is the standard format used mainly in France and Russia.

4.43 NTSC,

PAL60 This format is used for videos in countries using PAL and SECAM video signals.

3.58 NTSC This is the standard format used mainly in Japan and the United States.

PAL-M..... This is the standard format used mainly in Brazil.

PAL-N This is the standard format used mainly in Argentina.


External Control

Application

These specifications cover the communications control of the plasma monitor by external equipment.

Connections


Connections are made as described below.

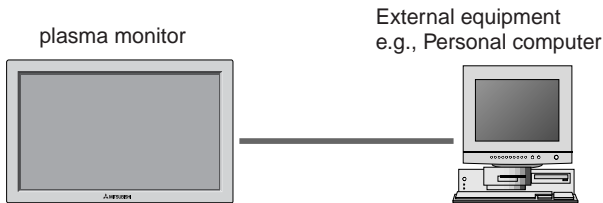

- 1) Connector on the plasma monitor side: EXTERNAL CONTROL connector.

Type of connector: D-Sub 9-pin male

No.	Pin Name
1	No Connection
2	RXD (Receive data)
3	TXD (Transmit data)
4	DTR (DTE side ready)
5	GND
6	DSR (DCE side ready)
7	RTS (Ready to send)
8	CTS (Clear to send)
9	No Connection



- 2) Connector on the external equipment side: Serial port (RS-232C) connector.

See the specifications of the equipment that is to be connected for the type of connector and the pin assignment.

- 3) Wiring


Use a crossed (reverse) cable.

Wire the cable so that each pair of data lines cross between the two devices. These data line pairs are RXD (Receive data) and TXD (Transmit data), DTR (DTE side ready) and DSR (DCE side ready), and RTS (Ready to send) and CTS (Clear to send).

Communication Parameters

- | | |
|--------------------------|--------------|
| (1) Communication system | Asynchronous |
| (2) Interface | RS-232C |
| (3) Baud rate | 9600 bps |
| (4) Data length | 8 bits |
| (5) Parity | Odd |
| (6) Stop bit | 1 bit |
| (7) Communication code | Hex |

Communication Format

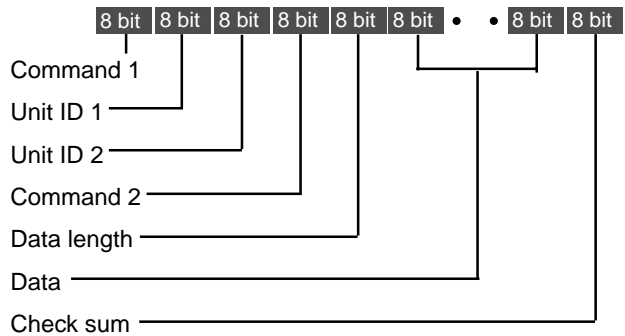

Command 1

Command 1, along with command 2, is a number used to distinguish each command.

In the case of ACK, when the lower order 4 bits is FH (as in 3FH and 7FH), this indicates that the commands and data of the supported equipment have been received. When the lower order 4 bits is BH (as in 3BH and 7BH), this indicates that unsupported commands and data have been received.

Unit ID 1 and Unit ID 2

Unit ID 1 and unit ID 2 are numbers used to identify the equipment that is to be connected.

60H is used for the plasma monitor and 80H is used for external control equipment such as a personal computer.

- 1) Unit ID 1: Indicates the equipment sending the signal
- 2) Unit ID 2: Indicates the equipment receiving the signal

Command 2


Command 2, along with command 1, is a number used to distinguish each command.

Check Sum (CKS), Error Processing, and ACK

- 1) The check sum described below and RS-232C odd parity are used together for a check of the received data.

The check sum is the lower order 8 bits of one frame of sent or received data comprising the sum total of Command 1, Unit ID 1 and 2, Command 2, Data Length, and Data.

Check Sum Example

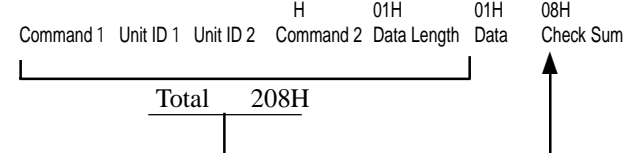

- 2) Error Processing

- When the communication interval is vacant for more than 4 ms, a received Command 1 will be recognized. If, at this time, meaningful data cannot be recognized, that data will not be recognized (as valid data).

- An ACK will not be returned unless the receive data error, the check sum error, and the receive data are all taken in.

Command Reference List

		CMD1	CMD2	LEN
01.	Power ON	9FH	4EH	00H
02.	Power OFF	9FH	4FH	00H
03.	Input Switch Change	DFH	47H	01H
04.	VOLUME Gain Data	DFH	7FH	03H
05.	AUDIO Mute On	9FH	3EH	00H
06.	AUDIO Mute Off	9FH	3FH	00H
07.	CONTRAST Gain Data	DFH	7FH	03H
08.	BRIGHT Gain Data	DFH	7FH	03H
09.	SHARPNESS Gain Data	DFH	7FH	03H
10.	Color Gain Data	DFH	7FH	03H
11.	TINT Gain Data	DFH	7FH	03H
12.	PICTURE MODE Select	DFH	0AH	01H
13.	COLOR TEMP SELECT	DFH	00H	01H
14.	RED Gain Data	DFH	7FH	04H
15.	GREEN Gain Data	DFH	7FH	04H
16.	BLUE Gain Data	DFH	7FH	04H
17.	NR MODE Set	DFH	C0H	01H
18.	BASS Gain Data	DFH	7FH	03H
19.	TREBLE Gain Data	DFH	7FH	03H
20.	BALANCE Gain Data	DFH	7FH	03H
21.	SCREEN MODE Select	DFH	51H	01H
22.	V. POSITION Gain Data	DFH	7FH	03H
23.	H. POSITION Gain Data	DFH	7FH	03H
24.	V-HEIGHT Gain Data	DFH	7FH	03H
25.	H-WIDTH Gain Data	DFH	7FH	03H
26.	AUTO PICTURE Select	DFH	7FH	03H
27.	PHASE Gain Data	DFH	7FH	03H
28.	CLOCK Gain Data	DFH	7FH	03H
29.	OSM Select	DFH	58H	01H
30.	OSM ADJ. Gain Data	DFH	1AH	02H
31.	POWER MGT Select	DFH	1AH	02H
32.	GRAY LEVEL Set	DFH	C6H	01H
33.	CINEMA MODE Set	DFH	C1H	01H
34.	LONG LIFE Set	DFH	6BH	03H
35.	INVERSE Set	DFH	C7H	03H
36.	SCREEN WIPER Set	DFH	C8H	04H
37.	RESET	1FH	54H	00H
38.	Audio Select Set	DFH	70H	02H
39.	BNC SELECT	DFH	8CH	01H
40.	RGB Select	DFH	8BH	01H
41.	HD Select	DFH	8AH	01H
42.	PICTURE SIZE Select	DFH	2AH	01H
43.	LANGUAGE Select	DFH	5BH	01H
44.	COLOR SYSTEM Select	DFH	5CH	01H
45.	Multi Screen Select	DFH	07H	01H
46.	FREQUENCY Request	1FH	26H	00H
47.	Input MODE Request	1FH	41H	00H
48.	VIDEO ADJ Request	1FH	45H	00H
49.	Audio Select Request	1FH	6FH	00H
50.	Failure Mode Request	1FH	3FH	00H
51.	MODEL NAME Request	1FH	17H	00H

01. Power ON

Function

The external control equipment switches on the power of the plasma monitor.

Transmission Data

9FH 80H 60H 4EH 00H CKS

ACK

The plasma monitor returns the following ACK when the power is switched on.

3FH 60H 80H 4EH 00H CKS

NOTE: Do not set the Power ON or Power OFF command continuously.

02. Power OFF

Function

The external control equipment switches off the power of the plasma monitor.

Transmission Data

9FH 80H 60H 4FH 00H CKS

ACK

The plasma monitor returns the following ACK when the power is switched off.

3FH 60H 80H 4FH 00H CKS

NOTE: Do not set the Power ON or Power OFF command continuously.

03. Input Switch Change

Function

The external control equipment switches the input of the plasma monitor.

Transmission Data

DFH 80H 60H 47H 01H DATA00 CKS

DATA00: Input Select

- 01H: Video1
- 02H: Video2
- 03H: Video3
- 05H: HD (HD1 or DTV or DTV1)
- 06H: HD2 (DTV2)
- 07H: RGB1/PC1
- 08H: RGB2/PC2

ACK

The plasma monitor returns the following ACK when the input is switched.

3FH 60H 80H 47H 00H CKS

04. VOLUME Gain Data

Function

The external control equipment changes the VOLUME gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER SOUND Gain Flag				05H			
DATA01:	VOLUME Gain Flag				01H			
DATA02:	VOLUME Gain				00H: Step 0			
					0AH: Step 10 (Default)			
					2AH: Step 42			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER SOUND Gain Flag				05H		
DATA01:	VOLUME Gain Flag				01H		

05. AUDIO Mute On

Function

The external control equipment switches on AUDIO Mute of the plasma monitor.

Transmission Data

9FH	80H	60H	3EH	00H	CKS

ACK

3FH	60H	80H	3EH	00H	CKS

06. AUDIO Mute Off

Function

The external control equipment switches off AUDIO Mute of the plasma monitor.

Transmission Data

9FH	80H	60H	3FH	00H	CKS

ACK

3FH	60H	80H	3FH	00H	CKS

07. CONTRAST Gain Data

Function

The external control equipment changes the CONTRAST gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE Gain Flag				01H			
DATA01:	CONTRAST Gain Flag				07H			
DATA02:	CONTRAST Gain				CCH: -52			
					FFH: -01			
					00H: 0			
					01H: +01			
					14H: +20			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag				01H		
DATA01:	CONTRAST Gain Flag				07H		

08. BRIGHT Gain Data

Function

The external control equipment changes the BRIGHT gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE Gain Flag				01H			
DATA01:	BRIGHT Gain Flag				08H			
DATA02:	BRIGHT Gain				E0H: -32			
					FFH: -01			
					00H: 0			
					01H: +01			
					20H: +32			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag				01H		
DATA01:	BRIGHT Gain Flag				08H		

09. SHARPNESS Gain Data

Function

The external control equipment changes the SHARPNESS gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE Gain Flag				01H			
DATA01:	SHARPNESS Gain Flag				06H			
DATA02:	SHARPNESS Gain				F0H: -16			
					FFH: -01			
					00H: 0			
					01H: +01			
					10H: +16			

Only when a RGB signal is connected

DATA02:	SHARPNESS Gain				01H: 1			
					02H: 2			
					03H: 3			
					04H: 4			
					05H: 5			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag				01H		
DATA01:	SHARPNESS Gain Flag				06H		

10. COLOR Gain Data

Function

The external control equipment changes the COLOR gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE Gain Flag				01H			
DATA01:	COLOR Gain Flag				04H			
DATA02:	COLOR Gain				E0H: -32			
* COLOR Gain is from -22 (EAH) to +22 (16H) only during video.								
					FFH: -01			
					00H: 0			
					01H: +01			
					20H: +32			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag				01H		
DATA01:	COLOR Gain Flag				04H		

11. TINT Gain Data

Function

The external control equipment changes the TINT gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE Gain Flag				01H			
DATA01:	TINT Gain Flag				05H			
DATA02:	TINT Gain				E0H: -32			
* TINT Gain is from -22 (EAH) to +22 (16H) only during video.								
					FFH: -01			
					00H: 0			
					01H: +01			
					20H: +32			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag				01H		
DATA01:	TINT Gain Flag				05H		

12. PICTURE MODE Select

Function

The external control equipment sets the picture mode of the plasma monitor.

Transmission Data

DFH	80H	60H	0AH	01H	DATA00	CKS
DATA00:	01H: MEMORY					
	02H: THEATER					
	03H: NORMAL					
	04H: RESET					

ACK

7FH	60H	80H	0AH	01H	DATA00	CKS
DATA00:	01H: MEMORY					
	02H: THEATER					
	03H: NORMAL					
	04H: RESET					

13. COLOR TEMP SELECT

Function

The external control equipment changes the COLOR TEMP of the plasma monitor.

Transmission Data

DFH	80H	60H	00H	01H	DATA00	CKS
DATA00:	00H: 1					
	01H: 2					
	02H: 3					
	03H: PRO					

ACK

7FH	60H	80H	00H	01H	DATA00	CKS
DATA00:	00H: 1					
	01H: 2					
	02H: 3					
	03H: PRO					

NOTE: Set so that at the selection of 1, 2, or 3 of COLOR TEMP change of the following R/G/B GAIN data cannot be accepted.

14. RED Gain Data

Function

The external control equipment changes the RED Gain Data of the plasma monitor. Note that this command can be accepted only when PRO is selected from COLOR TEMP.

Transmission Data

DFH	80H	60H	7FH	04H	DATA00 to DATA03	CKS
DATA00:	USER PICTURE Gain Flag				01H	
DATA01:	RED Gain Flag				01H	
DATA02:	RED Gain 1 (Bias)				D8H: -40	
					FFH: -1	
					00H: 0	
					IEH: +30	
DATA03:	RED Gain 2 (Drive)				D8H: -40	
					FFH: -1	
					00H: 0	
					IEH: +30	

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag				01H		
DATA01:	RED Gain Flag				01H		

15. GREEN Gain Data

Function

The external control equipment changes the GREEN Gain Data of the plasma monitor. Note that this command can be accepted only when PRO is selected from COLOR TEMP.

Transmission Data

DFH	80H	60H	7FH	04H	DATA00 to DATA03	CKS
DATA00:	USER PICTURE Gain Flag				01H	
DATA01:	GREEN Gain Flag				02H	
DATA02:	GREEN Gain 1 (Bias)				D8H: -40	
					FFH: -1	
					00H: 0	
					IEH: +30	
DATA03:	GREEN Gain2 (Drive)				D8H: -40	
					FFH: -1	
					00H: 0	
					IEH: +30	

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag				01H		
DATA01:	GREEN Gain Flag				02H		

16. BLUE Gain Data

Function

The external control equipment changes the BLUE Gain Data of the plasma monitor. Note that this command can be accepted only when PRO is selected from COLOR TEMP.

Transmission Data

DFH	80H	60H	7FH	04H	DATA00 to DATA03	CKS
DATA00:	USER PICTURE Gain Flag				01H	
DATA01:	BLUE Gain Flag				03H	
DATA02:	BLUE Gain1(Bias)				D8H: -40	
					FFH: -1	
					00H: 0	
					IEH: +30	
DATA03:	BLUE Gain2(Drive)				D8H: -40	
					FFH: -1	
					00H: 0	
					IEH: +30	

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag				01H		
DATA01:	BLUE Gain Flag				03H		

17. NR MODE Set

Function

The external control equipment sets the NR (Noise Reduction) mode of the plasma monitor.

Transmission Data

DFH	80H	60H	C0H	01H	DATA00	CKS
DATA00:	01H: NR OFF					
	02H: NR-1					
	03H: NR-2					
	04H: NR-3					

ACK

7FH	60H	80H	C0H	01H	DATA00	CKS
DATA00:	01H: NR OFF					
	02H: NR-1					
	03H: NR-2					
	04H: NR-3					

18. BASS Gain Data

Function

The external control equipment changes the BASS gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE Gain Flag				05H			
DATA01:	BASS Gain Flag				03H			
DATA02:	BASS Gain				F3H: -13			
					FFH: -01			
					00H: 0			
					01H: +01			
					0DH: +13			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag				05H		
DATA01:	BASS Gain Flag				03H		

19. TREBLE Gain Data

Function

The external control equipment changes the TREBLE gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE Gain Flag				05H			
DATA01:	TREBLE Gain Flag				04H			
DATA02:	TREBLE Gain				F3H: -13			
					FFH: -01			
					00H: 0			
					01H: +01			
					0DH: +13			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag				05H		

20. BALANCE Gain Data

Function

The external control equipment changes the BALANCE gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE	Gain Flag			05H			
DATA01:	BALANCE	Gain Flag			02H			
DATA02:	BALANCE	Gain			EAH: -22			
					FFH: -01			
					00H: 0			
					01H: +01			
					16H: +22			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE	Gain Flag			05H		
DATA01:	BALANCE	Gain Flag			02H		

21. SCREEN MODE Select

Function

The external control equipment switches the screen mode of the plasma monitor.

Transmission Data

DFH	80H	60H	51H	01H	DATA00	CKS
DATA00:	02H:	STADIUM				
	03H:	ZOOM				
	04H:	NORMAL				
	05H:	FULL				
	06H:	TRUE (REAL)				

ACK

7FH	60H	80H	51H	01H	DATA00	CKS
DATA00:	02H:	STADIUM				
	03H:	ZOOM				
	04H:	NORMAL				
	05H:	FULL				
	06H:	TRUE (REAL)				

22. V. POSITION Gain Data

Function

The external control equipment changes the V. POSITION gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE	Gain Flag			03H			
DATA01:	V. POSITION	Gain Flag			01H			
DATA02:	V. POSITION	Gain			COH: -64			
					FFH: -01			
					00H: 0			
					01H: +01			
					40H: +64			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE	Gain Flag			03H		

23. H. POSITION Gain Data

Function

The external control equipment changes the H. POSITION gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE	Gain Flag			03H			
DATA01:	H. POSITION	Gain Flag			02H			
DATA02:	H. POSITION	Gain			80H: -128			
					FFH: -01			
					00H: 0			
					01H: +01			
					7FH: +127			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE	Gain Flag			03H		
DATA01:	H. POSITION	Gain Flag			02H		

24. V-HEIGHT Gain Data

Function

The external control equipment changes the V-HEIGHT gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE	Gain Flag			03H			
DATA01:	V-HEIGHT	Gain Flag			07H			
DATA02:	V-HEIGHT	Gain			00H: 0			
					40H: +64			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE	Gain Flag			03H		
DATA01:	V-HEIGHT	Gain Flag			07H		

25. H-WIDTH Gain Data

Function

The external control equipment changes the H-WIDTH gain data of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE	Gain Flag			03H			
DATA01:	H-WIDTH	Gain Flag			08H			
DATA02:	H-WIDTH	Gain			00H: 0			
					40H: +64			

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE	Gain Flag			03H		
DATA01:	H-WIDTH	Gain Flag			08H		

26. AUTO PICTURE Select

Function

The external control equipment switches on or off the AUTO PICTURE of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE Gain Flag					03H		
DATA01:	AUTO PICTURE Select Flag					09H		
DATA02:	00H: ON							
	01H: OFF							

ACK

7FH	60H	80H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE Gain Flag					03H		
DATA01:	AUTO PICTURE Select Flag					09H		
DATA02:	00H: ON							
	01H: OFF							

27. PHASE Gain Data

Function

The external control equipment changes the PHASE gain data (Phase) of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE Gain Flag					03H		
DATA01:	PHASE Gain Flag					03H		
DATA02:	PHASE Gain					00H: 0		
						2CH: +44		

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag					03H	
DATA01:	PHASE Gain Flag					03H	

28. CLOCK Gain Data

Function

The external control equipment changes the CLOCK gain data (ratio of frequency division) of the plasma monitor.

Transmission Data

DFH	80H	60H	7FH	03H	DATA00	DATA01	DATA02	CKS
DATA00:	USER PICTURE Gain Flag					03H		
DATA01:	CLOCK Gain Flag					04H		
DATA02:	CLOCK Gain					C0H: -64		
						FFH: -01		
						00H: 0		
						01H: +01		
						40H: +64		

ACK

7FH	60H	80H	7FH	02H	DATA00	DATA01	CKS
DATA00:	USER PICTURE Gain Flag					03H	
DATA01:	CLOCK Gain Flag					04H	

29. MENU Select

Function

The external control equipment switches on or off the on-screen menu (OSM) of the plasma monitor.

Transmission Data

DFH	80H	60H	58H	01H	DATA00	CKS
DATA00:	01H: On-Screen menu On					
	02H: On-Screen menu Off					

ACK

7FH	60H	80H	58H	01H	DATA00	CKS
DATA00:	01H: On-Screen menu On					
	02H: On-Screen menu Off					

On-Screen menu On/Off is equivalent to the OSM menu item under the FUNCTION menu.

*Operation is as described in the table below.

Operation	On-Screen Menu (MENU)			
	Display of items and adjustments on the menu		Volume display, input display, and screen size display	
	On-Screen menu is ON	On-Screen menu is OFF	On-Screen menu is ON	On-Screen menu is OFF
Remote control operation	Yes	Yes	Yes	No
Personal computer control operation	No	No	Yes	No

30. MENU ADJ. Gain Data

Function

The external control equipment sets the position of the OSM menu of the plasma monitor.

Transmission Data

DFH	80H	60H	1AH	02H	DATA00	DATA01	CKS
-----	-----	-----	-----	-----	--------	--------	-----

DATA00:	OSM ADJ. Gain Flag				02H		
DATA01:	01H: 1						
	09H: 9						

ACK

7FH	60H	80H	1AH	01H	DATA00	CKS
-----	-----	-----	-----	-----	--------	-----

DATA00:	OSM ADJ. Gain Flag				02H	
---------	--------------------	--	--	--	-----	--

31. POWER MGT Select

Function

The external control equipment switches on or off the POWER MANAGEMENT of the plasma monitor.

Transmission Data

DFH	80H	60H	1AH	02H	DATA00	DATA01	CKS
-----	-----	-----	-----	-----	--------	--------	-----

DATA00:	POWER MGT Select				03H		
DATA01:	01H: ON						
	02H: OFF						

ACK

7FH	60H	80H	1AH	02H	DATA00	DATA01	CKS
-----	-----	-----	-----	-----	--------	--------	-----

DATA00:	POWER MGT Select				03H		
DATA01:	01H: ON						
	02H: OFF						

32. GRAY LEVEL Set

Function

The external control equipment sets the GRAY LEVEL of the plasma monitor.

Transmission Data

DFH	80H	60H	C6H	01H	DATA00	CKS
-----	-----	-----	-----	-----	--------	-----

DATA00:	GRAY LEVEL				00H: 0	
	0FH: 15					

ACK

7FH	60H	80H	C6H	01H	DATA00	CKS
-----	-----	-----	-----	-----	--------	-----

DATA00:	GRAY LEVEL				00H: 0	
	0FH: 15					

33. CINEMA MODE Set

Function

The external control equipment switches on or off the CINEMA MODE of the plasma monitor.

Transmission Data

DFH	80H	60H	C1H	01H	DATA00	CKS
-----	-----	-----	-----	-----	--------	-----

DATA00:	CINEMA MODE Set				01H: ON	
					02H: OFF	

ACK

7FH	60H	80H	C1H	01H	DATA00	CKS
-----	-----	-----	-----	-----	--------	-----

DATA00:	CINEMA MODE Set				01H: ON	
					02H: OFF	

34. LONG LIFE Set

Function

The external control equipment sets the PLE, ORBITER, and INVERSE (inverse of image brightness) of the plasma monitor.

Transmission Data

DFH	80H	60H	6BH	03H	DATA00	DATA01	DATA02	CKS
-----	-----	-----	-----	-----	--------	--------	--------	-----

DATA00:	PLE				01H: AUTO		
					02H: LOCK		

DATA01:	INVERSE				01H: ON		
					02H: OFF		
					03H: WHITE		

DATA02:	ORBITER (PICTURE SHIFT)				01H: ON		
					02H: OFF		

ACK

The plasma monitor returns the following ACK when setting the PLE, ORBITER, and INVERSE (inverse of image brightness):

3FH	60H	80H	6BH	00H	CKS
-----	-----	-----	-----	-----	-----

35. INVERSE Set

Function

The external control equipment sets the INVERSE (inverse of image brightness) and the WHITE of the plasma monitor.

Transmission Data

DFH	80H	60H	C7H	03H	DATA00	DATA01	DATA02	CKS
DATA00 :	INVERSE/WHITE	00H:	No operation	01H:	ON(INVERSE)	02H:	OFF	
		03H:	WHITE	DATA01 :	WORKING TIME	00H:	ON	
		01H:	03M (minutes)	02H:	06M (minutes)	FFH:	12H (hours) and 45M (minutes)	
DATA02 :	WAITING TIME	01H:	03M (minutes)	02H:	06M (minutes)	FFH:	12H (hours) and 45M (minutes)	

ACK

3FH	60H	80H	C7H	00H	CKS
-----	-----	-----	-----	-----	-----

NOTE: The WORKING TIME and the WAITING TIME can be set in units of 3 minutes.

Example: 03H=9 minutes

1EH=1 hour and 30 minutes

36. SCREEN WIPER Set

Function

The external control equipment sets the SCREEN WIPER of the plasma monitor.

Transmission Data

DFH	80H	60H	C8H	04H	DATA00 to	DATA03	CKS
DATA00 :	SCREEN WIPER	00H:	No operation	01H:	ON	02H:	OFF
DATA01 :	WORKING TIME	00H:	ON	01H:	03M (minutes)	02H:	06M (minutes)
		FFH:	12H (hours) and 45M (minutes)	DATA02 :	WAITING TIME	01H:	03M (minutes)
		02H:	06M (minutes)	02H:	06M (minutes)	FFH:	12H (hours) and 45M (minutes)
DATA03 :	SPEED	01H:	1	05H:	5		

ACK

3FH	60H	80H	C8H	00H	CKS
-----	-----	-----	-----	-----	-----

NOTE: The WORKING TIME and the WAITING TIME can be set in units of 3 minutes.

Example: 03H=9 minutes

1EH=1 hour and 30 minutes

37. RESET

Function

The external control equipment resets the user adjustment of the plasma monitor.

Transmission Data

1FH	80H	60H	54H	00H	CKS
-----	-----	-----	-----	-----	-----

ACK

3FH	60H	80H	54H	00H	CKS
-----	-----	-----	-----	-----	-----

38. Audio Select Set

Function

The external control equipment sets combinations of audio and video inputs for the plasma monitor.

Transmission Data

DFH	80H	60H	70H	02H	DATA00	DATA01	CKS
DATA00 :	AUDIO INPUT	01H:	AUDIO 1	02H:	AUDIO 2	03H:	AUDIO 3
DATA01 :	VISUAL INPUT	01H:	Video 1	02H:	Video 2	03H:	Video 3
		05H:	HD (HD1 or DTV or DTV1)	06H:	HD2 (DTV2)	07H:	RGB 1/ PC 1
		08H:	RGB 2/ PC 2	0CH:	M-LINK		

ACK

The plasma monitor returns the following ACK when the input is switched.

3FH	60H	80H	70H	00H	CKS
-----	-----	-----	-----	-----	-----

* The plasma monitor returns "Not Available" when selecting the video input same as the one set at one of the AUDIO 1 to 3.

Example:

The plasma monitor returns "Not Available" when selecting the VIDEO1 for AUDIO2 or VIDEO3 after VIDEO1 has been set to AUDIO1.

39. BNC SELECT

Function

The external control equipment sets the BNC SELECT of the plasma monitor.

Transmission Data

DFH	80H	60H	8CH	01H	DATA00	CKS
DATA00:	BNC SELECT			01H:	RGB	
				02H:	Component	

ACK

The plasma monitor returns the following ACK when setting the BNC SELECT:

7FH	60H	80H	8CH	01H	DATA00	CKS
DATA00:	BNC SELECT			01H:	RGB	
				02H:	Component	

40. RGB Select

Function

The external control equipment sets the RGB SELECT of the plasma monitor.

Transmission Data

DFH	80H	60H	8BH	01H	DATA00	CKS
DATA00:	01H:	AUTO				
	02H:	STILL				
	03H:	MOTION				
	04H:	WIDE1				
	05H:	WIDE2				
	06H:	DTV				

ACK

7FH	60H	80H	8BH	01H	DATA00	CKS
DATA00:	01H:	AUTO				
	02H:	STILL				
	03H:	MOTION				
	04H:	WIDE1				
	05H:	WIDE2				
	06H:	DTV				

41. HD Select

Function

The external control equipment sets the HD SELECT of the plasma monitor.

Transmission Data

DFH	80H	60H	8AH	01H	DATA00	CKS
DATA00:	01H:	1035I				
	02H:	1080A				
	03H:	1080B				

ACK

7FH	60H	80H	8AH	01H	DATA00	CKS
DATA00:	01H:	1035I				
	02H:	1080A				
	03H:	1080B				

42. PICTURE SIZE Select

Function

The external control equipment sets the PICTURE SIZE SELECT of the plasma monitor.

Transmission Data

DFH	80H	60H	2AH	01H	DATA00	CKS
DATA00:	01H:	ON				
	02H:	OFF				

ACK

7FH	60H	80H	2AH	01H	DATA00	CKS
DATA00:	01H:	ON				
	02H:	OFF				

43. LANGUAGE Select

Function

The external control equipment sets the LANGUAGE SELECT of the plasma monitor.

Transmission Data

DFH	80H	60H	5BH	01H	DATA00	CKS
DATA00:	01H:	ENGLISH				
	02H:	GERMAN				
	03H:	FRENCH				
	04H:	SPANISH				
	05H:	ITALIAN				
	06H:	SWEDISH				
	07H:	JAPANESE				

ACK

7FH	60H	80H	5BH	01H	DATA00	CKS
DATA00:	01H:	ENGLISH				
	02H:	GERMAN				
	03H:	FRENCH				
	04H:	SPANISH				
	05H:	ITALIAN				
	06H:	SWEDISH				
	07H:	JAPANESE				

44. COLOR SYSTEM Select

Function

The external control equipment sets the COLOR SYSTEM of the plasma monitor.

Transmission Data

DFH	80H	60H	5CH	01H	DATA00	CKS
-----	-----	-----	-----	-----	--------	-----

DATA00: 01H: 3.58NTSC
02H: 4.43NTSC
03H: PAL
04H: SECAM
0AH: AUTO1
0BH: PAL60
0CH: AUTO2
0DH: PAL- M
0EH: PAL- N

ACK

7FH	60H	80H	5CH	01H	DATA00	CKS
-----	-----	-----	-----	-----	--------	-----

DATA00: 01H: 3.58NTSC
02H: 4.43NTSC
03H: PAL
04H: SECAM
0AH: AUTO1
0BH: PAL60
0CH: AUTO2
0DH: PAL- M
0EH: PAL- N

45. Multi Screen Select

Function

The external control equipment selects single screen mode or multi screen mode of the display.

Transmission Data

DFH	80H	60H	07H	01H	DATA00	CKS
-----	-----	-----	-----	-----	--------	-----

DATA00: Multi Screen
00H: Single screen
01H: Side by Side1 (Same size screen)
02H: Side by Side2 (Left screen smaller)
03H: Picture in Picture sub screen L1
04H: Picture in Picture sub screen R1
05H: Side by Side3 (Left screen bigger)
06H: Picture in Picture sub screen L2
07H: Picture in Picture sub screen R2
08H: Picture in Picture sub screen L3
09H: Picture in Picture sub screen R3
0AH: Picture in Picture sub screen L4
0BH: Picture in Picture sub screen R4
10H: SWAP (The screen of the right and the left interchanges)
Side by Side
20H: Active Left
21H: Active Right
Picture in Picture
30H: Active Main
31H: Active Sub

ACK

The display returns the following ACK.

7FH	60H	80H	07H	01H	DATA00	CKS
-----	-----	-----	-----	-----	--------	-----

DATA00: Multi Screen
00H: Single screen
01H: Side by Side1 (Same size screen)
02H: Side by Side2 (Left screen smaller)
03H: Picture in Picture sub screen L1
04H: Picture in Picture sub screen R1
05H: Side by Side3 (Left screen bigger)
06H: Picture in Picture sub screen L2
07H: Picture in Picture sub screen R2
08H: Picture in Picture sub screen L3
09H: Picture in Picture sub screen R3
0AH: Picture in Picture sub screen L4
0BH: Picture in Picture sub screen R4
10H: SWAP (The screen of the right and the left interchanges)
Side by Side
20H: Active Left
21H: Active Right
Picture in Picture
30H: Active Main
31H: Active Sub

When other commands (except POWER OFF) are sent while the screens are switching with this command, the other command will be returned as "Not Available" until screen switching is finished.

46. FREQUENCY Request

Function

The external control equipment inquires the Horizontal frequency, Vertical frequency, Horizontal sync polarity, Vertical sync polarity, Mode, and Resolution of the plasma monitor.

Transmission Data

1FH 80H 60H 26H 00H CKS

ACK

7FH 60H 80H 26H 0BH DATA00 to DATA10 CKS

Horizontal frequency

DATA00: Integer part
00H: 0 (No signal: 00H)
FFH: 256

DATA01: One decimal place
00H: 0 (No signal: 00H)
09H: 9

Vertical frequency

DATA02: Integer part
00H: 0 (No signal: 00H)
FFH: 256

DATA03: One decimal place
00H: 0 (No signal: 00H)
09H: 9

Horizontal sync polarity

DATA04: 00H: -
01H: Positive
02H: Negative

Vertical sync polarity

DATA05: 00H: -
01H: Positive
02H: Negative

MODE

DATA06: 00H: No signal -
01H to 80H: RGB signal Identification number of PC mode
81H: Video signal 3.58NTSC
82H: 4.43NTSC
83H: PAL
84H: PAL- M
85H: PAL- N
86H: PAL60
87H: SECAM
88H: B/W60
89H: B/W50
A0H: HD/DVD/DTV signal 480I
A1H: 480P
A2H: 576I
A3H: 576P
A4H: 720P
A5H: 1035I
A6H: 1080I

RESOLUTION

DATA07: Dots (Low-order byte) 00H: 0 (No signal: 00H)

FFH: 256

DATA08: Dots (High-order byte) 00H: 257 (No signal: 00H)

FFH

DATA09: Lines (Low-order byte) 00H: 0 (No signal: 00H)

FFH: 256

DATA10: Lines (High-order byte) 00H: 257 (No signal: 00H)

FFH

47. Input MODE Request

Function

The display returns the current input information by the external control equipment's request.

Transmission Data

1FH 80H 60H 41H 00H CKS

ACK

7FH 60H 80H 41H 01H DATA00 CKS

DATA00: Input Select
01H: Video1 02H: Video2
03H: Video3 04H: HD (HD1 or DTV or DTV1)
05H: RGB1/PC1 06H: RGB2/PC2
0AH: DVD (DVD1) 0CH: HD2 (DTV2)

48. VIDEO ADJ Request

Function

The display returns the video adjustments information by the external control equipment's request.

Transmission Data

1FH 80H 60H 45H 00H CKS

ACK

7FH 60H 80H 45H 0CH DATA00 to DATA11 CKS

DATA00: RED Gain(Bias) D8H: -40
 |
 FFH: -1
 00H: 0
 |
 IEH: +30

DATA01: GREEN Gain(Bias) D8H: -40
 |
 FFH: -1
 00H: 0
 |
 IEH: +30

DATA02: BLUE Gain(Bias) D8H: -40
 |
 FFH: -1
 00H: 0
 |
 IEH: +30

DATA03: COLOR Gain E0H: -32
 |
 FFH: -01
 00H: 0
 01H: +01
 |
 20H: +32

DATA04: TINT Gain E0H: -32
 |
 FFH: -01
 00H: 0
 01H: +01
 |
 20H: +32

* COLOR Gain is from -22 (EAH) to +22 (16H) only during video.

* TINT Gain is from -22 (EAH) to +22 (16H) only during video.

DATA05: SHARPNESS Gain F0H: -16
 |
 FFH: -01
 00H: 0
 01H: +01
 |
 10H: +16

DATA06: CONTRAST Gain CCH: -52
 |
 FFH: -01
 00H: 0
 01H: +01
 |
 14H: +20

DATA07: BRIGHT Gain E0H: -32
 |
 FFH: -01
 00H: 0
 01H: +01
 |
 20H: +32

DATA08: RED Gain(Drive) D8H: -40
 |
 FFH: -1
 00H: 0
 |
 IEH: +30

DATA09: GREEN Gain(Drive) D8H: -40
 |
 FFH: -1
 00H: 0
 |
 IEH: +30

DATA10: BLUE Gain(Drive) D8H: -40
 |
 FFH: -1
 00H: 0
 |
 IEH: +30

DATA11: COLORTEMP 00H: 1
 01H: 2
 02H: 3
 03H: PRO

49. Audio Select Request

Function

The external control equipment inquires the current combinations of audio and video inputs for the plasma monitor.

Transmission Data

1FH 80H 60H 6FH 00H CKS

ACK

The plasma monitor returns the following ACK:

7FH 60H 80H 6FH 03H DATA00 DATA01 DATA02 CKS

DATA00: AUDIO 1
 01H – 0CH: VISUAL INPUT DATA
 DATA01: AUDIO 2
 01H – 0CH: VISUAL INPUT DATA
 DATA02: AUDIO 3
 01H – 0CH: VISUAL INPUT DATA

VISUAL INPUT DATA

01H: Video 1
 02H: Video 2
 03H: Video 3
 05H: HD (HD1 or DTV or DTV 1)
 06H: HD2 (DTV2)
 07H: RGB 1 /PC 1
 08H: RGB 2 /PC 2

50. Failure Mode Request

Function

The external control equipment inquires the detection of failures of the plasma monitor.

Transmission Data

1FH 80H 60H 3FH 00H CKS

ACK

The plasma monitor returns the following ACK:

7FH 60H 80H 3FH 02H DATA00 DATA01 CKS

DATA00: FAILURE MODE 1
 Bit 0 : PDP MODULE
 0: Abnormal
 1: Normal
 Bit 1 : 1: fixed (backup)
 Bit 2 : TEMPERATURE
 0: Abnormal
 1: Normal
 Bit 3 : FAN
 0: Abnormal
 1: Normal
 Bit 4 : 1: fixed (backup)
 Bit 5 : 1: fixed (backup)
 Bit 6 : 1: fixed (backup)
 Bit 7 : 1: fixed (backup)
 DATA01: FAILURE MODE 2
 Bit 0–7 : 1: fixed (backup)

51. MODEL NAME Request

Function

The external control equipment inquires the product code of the plasma monitor.

Transmission Data

1FH 80H 60H 17H 00H CKS

ACK

The plasma monitor returns the following ACK:

7FH 60H 80H 17H 0CH DATA00 to DATA11 CKS

DATA00 : 1st character of the product code

DATA01 : 2nd character of the product code

DATA11 : 12th character of the product code

NOTE:

Received data (Hex)	Corresponding character
00H	0
01H	1
08H	8
09H	9
10H	A
11H	B
12H	C
28H	Y
29H	Z
80H	- (Hyphen)
96H	(Blank)

If there are fewer than 12 characters in the product code, product code would be padded right with blanks.

Example: If the product code of your plasma monitor is “PD-5010”, the returned codes would be as follows.

DATA00: 1FH
 DATA01: 27H
 DATA02: 80H
 DATA03: 05H
 DATA04: 00H
 DATA05: 27H
 DATA06: 1CH
 DATA07: 02H
 DATA08: 10H
 DATA09: 96H
 DATA10: 96H
 DATA11: 96H

Table of Signals Supported

Supported resolution

- When the screen mode is NORMAL, each signal is converted to a 1024 dots x 768 lines signal. (Except for *2,3,4)
- When the screen mode is TRUE, the picture is displayed in the original resolution.
- When the screen mode is FULL, each signal is converted to a 1364 dots x 768 lines signal. (Except for *3)

Computer input signals supported by this system

Model Signal Type	Dots x lines	Vertical frequency (Hz)	Horizontal frequency (kHz)	Sync Polarity		Presence		Screen mode			RGB select*5	M-LINK
				Horizontal	Vertical	Horizontal	Vertical	NARROW (4:3)	TRUE	Std. (16:9)		
	640 x 400	70.1	31.5	NEG	NEG	YES	YES	YES*2	YES	YES	--	NO
*IBM PC/AT compatible computers	640 x 480	59.9	31.5	NEG	NEG	YES	YES	YES	YES	YES	STILL	YES
		72.8	37.9	NEG	NEG	YES	YES	YES	YES	YES	--	YES
		75.0	37.5	NEG	NEG	YES	YES	YES	YES	YES	STILL	YES
		85.0	43.3	NEG	NEG	YES	YES	YES	YES	YES	--	YES
		100.4	51.1	NEG	NEG	YES	YES	YES	YES	YES	--	YES
		120.4	61.3	NEG	NEG	YES	YES	YES	YES	YES	--	YES
	848 x 480	60.0	31.0	POS	POS	YES	YES	--	YES	YES	WIDE2	YES
	852 x 480*1	60.0	31.7	NEG	NEG	YES	YES	--	YES	YES	WIDE1	YES
	800 x 600	56.3	35.2	POS	POS	YES	YES	YES	YES	YES	STILL	YES
		60.3	37.9	POS	POS	YES	YES	YES	YES	YES	STILL	YES
		72.2	48.1	POS	POS	YES	YES	YES	YES	YES	--	YES
		75.0	46.9	POS	POS	YES	YES	YES	YES	YES	--	YES
		85.1	53.7	POS	POS	YES	YES	YES	YES	YES	--	YES
		99.8	63.0	POS	POS	YES	YES	YES	YES	YES	--	YES
	1024 x 768	60.0	48.4	NEG	NEG	YES	YES	YES*3	--	YES	STILL	YES
		70.1	56.5	NEG	NEG	YES	YES	YES*3	--	YES	--	YES
		75.0	60.0	POS	POS	YES	YES	YES*3	--	YES	STILL	YES
		85.0	68.7	POS	POS	YES	YES	YES*3	--	YES	--	YES
		100.6	80.5	NEG	NEG	YES	YES	YES*3	--	YES	--	NO
	1152 x 864	75.0	67.5	POS	POS	YES	YES	YES	--	YES	STILL	YES
	1280 x 768	56.2	45.1	POS	POS	YES	YES	--	--	YES	WIDE1	NO
	1360 x 765	60.0	47.7	POS	POS	YES	YES	--	--	YES*3	WIDE1	NO
	1360 x 768	60.0	47.7	POS	POS	YES	YES	--	--	YES*3	WIDE1	YES
	1376 x 768	59.9	48.3	NEG	POS	YES	YES	--	--	YES	WIDE2	YES
	1280 x 1024	60.0	64.0	POS	POS	YES	YES	YES*4	--	YES	STILL	YES
		75.0	80.0	POS	POS	YES	YES	YES*4	--	YES	--	NO
		85.0	91.1	POS	POS	YES	YES	YES*4	--	YES	--	NO
1600 x 1200	60.0	75.0	POS	POS	YES	YES	YES	--	YES	--	NO	
	65.0	81.3	POS	POS	YES	YES	YES	--	YES	--	NO	
	70.0	87.5	POS	POS	YES	YES	YES	--	YES	--	NO	
	75.0	93.8	POS	POS	YES	YES	YES	--	YES	--	NO	
*Apple Macintosh*6	640 x 480	66.7	35.0	Sync on G	Sync on G	--	--	YES	YES	YES	--	NO
	832 x 624	74.6	49.7	Sync on G	Sync on G	--	--	YES	YES	YES	--	NO
	1024 x 768	74.9	60.2	Sync on G	Sync on G	--	--	YES*3	--	YES	WIDE1	NO
	1152 x 870	75.1	68.7	Sync on G	Sync on G	--	--	YES	--	YES	WIDE1	NO
Work Station (EWS4800)	1280 x 1024	60.0	64.6	NEG	NEG	YES	YES	YES*4	--	YES	--	YES
		71.2	75.1	NEG	NEG	YES	YES	YES*4	--	YES	--	NO
Work Station (HP)	1280 x 1024	72.0	78.1	--	--	--	--	YES*4	--	YES	--	NO
Work Station (SUN)	1152 x 900	66.0	61.8	C Sync	C Sync	--	--	YES	--	YES	--	NO
		76.0	71.7	C Sync	C Sync	--	--	YES	--	YES	--	NO
	1280 x 1024	76.1	81.1	C Sync	C Sync	--	--	YES*4	--	YES	--	NO
Work Station (SGI)	1024 x 768	60.0	49.7	--	--	--	--	YES*3	--	YES	--	YES
	1280 x 1024	60.0	63.9	--	--	--	--	YES*4	--	YES	--	YES
IDC-3000G												
PAL625P	768 x 576	50.0	31.4	NEG	NEG	YES	YES	YES*7	--	YES*7	--	NO
NTSC525P	640 x 480	59.9	31.5	NEG	NEG	YES	YES	YES*7	--	YES*7	MOTION	NO

-
- *1 Only when using a graphic accelerator board that is capable of displaying 852 x 480.
 - *2 This signal is converted to a 1024 dots x 640 lines signal.
 - *3 The picture is displayed in the original resolution.
 - *4 The aspect ratio is 5:4. This signal is converted to a 960 dots x 768 lines signal.
 - *5 Normally the RGB select mode suite for the input signals is set automatically. If the picture is not displayed properly, set the RGB mode prepared for the input signals listed in the table above.
 - *6 To connect the monitor to Macintosh computer, use the monitor adapter (D-Sub 15-pin) to your computer's video port. If your computer has a mini D-Sub 15-pin connector, you may have to use the supplied RGB cable.
 - *7 Other screen modes (ZOOM and STRETCHED) are available as well.
-

NOTE:

- While the input signals comply with the resolution listed in the table above, you may have to adjust the position and size of the picture or the fine picture because of errors in synchronization of your computer.
 - When a 1280 dots x 1024 lines signal or 1600 dots x 1200 lines signal is input to the monitor, the picture will be compressed.
 - This monitor has a resolution of 1365 dots x 768 lines. It is recommended that the input signal should be XGA, wide XGA, or equivalent.
 - With digital input some signals are not accepted.
 - The sync may be disturbed when a nonstandard signal other than the aforementioned is input.
 - If you are connecting a composite sync signal, use the HD terminal.
-

- * "IBM PC/AT" and "VGA" are registered trademarks of International Business Machines, Inc. of the United States.
- * "Apple Macintosh" is a registered trademark of Apple Computer, Inc. of the United States.

Troubleshooting

If the picture quality is poor or there is some other problem, check the adjustments, operations, etc., before requesting service.

Symptom	Checks	Remedy
Picture is disturbed. Sound is noisy. Remote control operates erroneously.	<ul style="list-style-type: none"> Is a connected component set directly in front or at the side of the display? 	<ul style="list-style-type: none"> Leave some space between the display and the connected components.
The remote control does not work.	<ul style="list-style-type: none"> Are the remote control's batteries worn out? 	<ul style="list-style-type: none"> Replace both batteries with new ones.
Monitor's power does not turn on when the remote control's power button is pressed.	<ul style="list-style-type: none"> Is the monitor's power cord plugged into a power outlet? 	<ul style="list-style-type: none"> Plug the monitor's power cord into a power outlet.
	<ul style="list-style-type: none"> Are all the monitor's indicators off? 	<ul style="list-style-type: none"> Press the power button on the monitor to turn on the power.
	<ul style="list-style-type: none"> Are the remote control's batteries worn out? 	<ul style="list-style-type: none"> Replace both batteries with new ones.
Monitor does not operate when the remote control's buttons are pressed.	<ul style="list-style-type: none"> Is the remote control pointed at the monitor, or is there an obstacle between the remote control and the monitor? 	<ul style="list-style-type: none"> Point the remote control at the monitor's remote control sensor when pressing buttons, or remove the obstacle.
	<ul style="list-style-type: none"> Is direct sunlight or strong artificial light shining on the monitor's remote control sensor? 	<ul style="list-style-type: none"> Eliminate the light by closing curtains, pointing the light in a different direction, etc.
	<ul style="list-style-type: none"> Are the remote control's batteries worn out? 	<ul style="list-style-type: none"> Replace both batteries with new ones.
	<ul style="list-style-type: none"> The remote cable is plugged into the REMOTE IN terminal (Wired). 	<ul style="list-style-type: none"> Unplug the remote cable from the monitor.
	<ul style="list-style-type: none"> The front panel buttons of the main unit do not function. 	<ul style="list-style-type: none"> The front panel buttons do not function during Control Lock.
No sound or picture is produced.	<ul style="list-style-type: none"> Is the monitor's power cord plugged into a power outlet? 	<ul style="list-style-type: none"> Plug the monitor's power cord into a power outlet.
Picture appears but no sound is produced.	<ul style="list-style-type: none"> Is the volume set at the minimum? 	<ul style="list-style-type: none"> Increase the volume.
	<ul style="list-style-type: none"> Is the mute mode set? 	<ul style="list-style-type: none"> Press the remote control's MUTE button.
	<ul style="list-style-type: none"> Are the speakers properly connected? 	<ul style="list-style-type: none"> Connect the speakers properly.
	<ul style="list-style-type: none"> Is AUDIO INPUT set correctly? 	<ul style="list-style-type: none"> Set AUDIO INPUT on the OPTION menu correctly.
Poor picture with VIDEO signal input.	<ul style="list-style-type: none"> Improper control setting. Local interference. Cable interconnections. Input impedance is not correct level. 	<ul style="list-style-type: none"> Adjust picture control as needed. Try another location for the monitor. Be sure all connections are secure.
Poor picture with RGB signal input.	<ul style="list-style-type: none"> Improper control setting. Incorrect 15 PIN connector pin connections. 	<ul style="list-style-type: none"> Adjust picture controls as needed. Check pin assignments and connections.
Tint is poor or colors are weak.	<ul style="list-style-type: none"> Are the tint and colors properly adjusted? 	<ul style="list-style-type: none"> Adjust tint and color ("VIDEO SETTINGS").
Nothing appears on screen.	<ul style="list-style-type: none"> Is the computer's power turned on? 	<ul style="list-style-type: none"> Turn on the computer's power.
	<ul style="list-style-type: none"> Is a source connected? 	<ul style="list-style-type: none"> Connect source to the monitor.
	<ul style="list-style-type: none"> Is the power management function in the standby or off mode? 	<ul style="list-style-type: none"> Operate the computer (move the mouse, etc.).
Part of picture is cut off or picture is not centered.	<ul style="list-style-type: none"> Is the position adjustment appropriate? 	<ul style="list-style-type: none"> Adjust the "MONITOR SETTINGS" properly.
Image is too large or too small.	<ul style="list-style-type: none"> Is the screen size adjustment appropriate? 	<ul style="list-style-type: none"> Press the "FORMAT" button on the remote control and adjust properly.
Picture is unstable.	<ul style="list-style-type: none"> Is the computer's resolution setting appropriate? 	<ul style="list-style-type: none"> Set to the proper resolution.
POWER/STANDBY indicator is lighted in orange or red.	<ul style="list-style-type: none"> Horizontal and / or vertical sync signal is not present when the Intelligent Power Manager control is on. 	<ul style="list-style-type: none"> Check the input signal.
POWER/STANDBY indicator is blinking in red.	<ul style="list-style-type: none"> The temperature inside the main unit has become too high and has activated the protector. 	<ul style="list-style-type: none"> Promptly switch off the power of the main unit and wait until the internal temperature drops. See*1.
POWER/STANDBY indicator is blinking in green and red, or green.	<ul style="list-style-type: none"> _____ 	<ul style="list-style-type: none"> Promptly switch off the power of the main unit. See *2.

*1 Overheat protector


If the monitor becomes too hot, the overheat protector will be activated and the monitor will be turned off. If this happens, turn off the power to the monitor and unplug the power cord. If the room where the monitor is installed is particularly hot, move the monitor to a cooler location and wait for the monitor to cool for 60 minutes. If the problem persists, contact your Mitsubishi dealer for service.

*2 In the following case, power off the monitor immediately and contact your dealer or authorized Mitsubishi Service Center.

The monitor turns off 5 seconds after powering on and then the POWER/STANDBY indicator blinks. It indicates that the power supply circuit or plasma display panel or, one or more fans have been damaged.

Specifications

Product Name	PD-5010 Plasma Monitor
Screen Size	43.5" (H) x 24.5"(V) inches 1106 (H) x 622 (V) mm diagonal 50"
Aspect Ratio	16 : 9
Resolution	1365(H) x 768(V) pixels
Pixel Pitch	0.032"(H) x 0.032"(V) inches 0.81 (H) x 0.81 (V) mm
Color Reproduction	256 levels, 16,770,000 colors
Signals	
Synchronization Range	Horizontal : 15.5 to 93.8 kHz (automatic : step scan) Vertical : 50.0 to 120 Hz (automatic : step scan)
Input Signals	RGB, NTSC (3.58/4.43), PAL (B,G,M,N),PAL60, SECAM, HD*1 , DVD*1 , DTV*1
Input Terminals	
RGB	
Visual 1 (Analog)	mini D-sub 15-pin21
Visual 2 (Analog)	BNC (R, G, B, H/CS, V)21*2
Visual 3 (M-LINK)	MONITORLINK™
Video	
Visual 1	RCA-pin21
Visual 2	BNC21
Visual 3	S2-Video: DIN 4-pin21
DVD/HD/DTV	
Visual 1	RCA-pin (Y, PB[CB], PR[CR])21*1
Visual 2	BNC (Y, PB[CB], PR[CR])21*1,*2
Audio	Stereo RCA x 3 (Selectable)
External Control	D-sub 9-pin21 (RS-232C)
Sound output	7W+7W at 6 ohm
Power Supply	AC120V 50/60Hz
Current Rating	5.4A (maximum)
Power Consumption	480W (typical)
Dimensions	49.5 (W)x 30.2 (H)x 4.68 (D) inches 1257 (W)x 766 (H)x 119(D) mm
Weight	98 lbs / 44.5 kg
Environmental Considerations	
Operating Temperature	0°C to 35°C / 32°F to 95°F Humidity 20 to 80% (no condensation)
Storage Temperature	-10°C to 50°C / 14°F to 122°F Humidity 10 to 90% (no condensation)
Front Panel User Controls	Power on/off, Input source select, Volume up/down/ Menu control
Remote Control Functions	Power on/off, Input source select, Menu control,Volume up/down, Cursor (UP, DOWN,LEFT, RIGHT), Pointer, Zoom up/down, Sleep timer, Wireless/ Wired remote control
Menu Functions	Video (Contrast / Brightness / Sharpness/ Color / Tint / Picture mode / Color temperature/ Noise reductions), Audio (Bass /Treble/ Balance),Monitor(V- Position / H-Position/ V-Height / H-Width /Auto Picture / Fine picture/ Picture adjustment), Function (Menu/ Menu adjustment/ Power management/ Gray level/ Cinema mode/Long Life (PLE, Orbiter, Inverse, White, Screen Wiper/ Reset)/Option (Audio input/ BNC select/ RGBselect/ HD select/ Picture Size), Information (Frequency / Language* / Color system) *English, German, French, Italian, Spanish, Swedish, Japanese

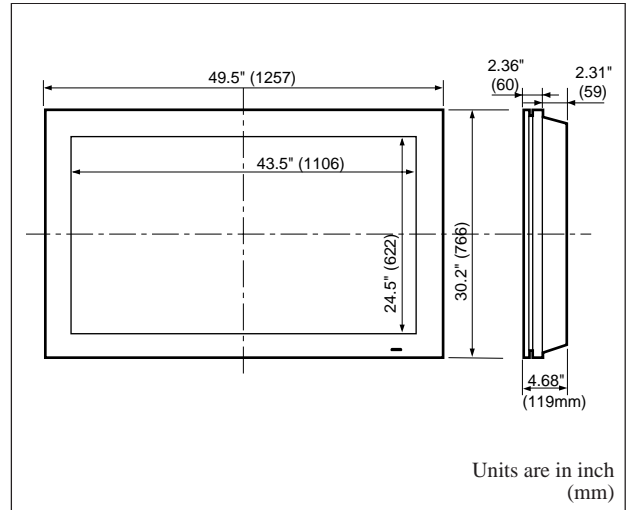

The features and specifications may be subject to change without notice.

*1 HD/DVD/DTV input signals supported on this system

480P (60 Hz)	480I (60 Hz)
525P (60 Hz)	525I (60 Hz)
576P (50 Hz)	576I (50 Hz)
625P (50 Hz)	625I (50 Hz)
720P (60 Hz)	1035I (60 Hz)
1080I (50 Hz)	1080I (60 Hz)

*2 The 5-BNC connectors are used as RGB/PC2 and HD/DVD2 input. Select one of them under "BNC SELECT".

Other Features	3D motion adaptive Scan Converter with 2-2 (50Hz), 2-3 (60Hz) pull down Converter, Digital Zoom function (100-900% Selectable), Self Diagnosis, Reverse phosphor aging, Color Temperature Select, Control Lock, Power management, Plug and play (DDC1, DDC2b only), MULTI SCREEN operations
Accessories	Remote control with two AAA batteries, Remote cable, RGB cable (Mini D-Sub 15-pin to Mini D-Sub 15-pin connector), Power cord, Owner's Guide, Ferrite cores, Bands
Regulations	UL Approved (UL 60950/CSA C22.2, No. 60950) DOC Canada requirements Meets FCC class B requirements

MITSUBISHI PLASMA DISPLAY PANEL LIMITED WARRANTY

MITSUBISHI DIGITAL ELECTRONICS AMERICA, INC. ("MDEA") warrants to the original purchaser of this Plasma Display Panel that if purchased from an authorized MITSUBISHI Audio/Video Dealer, should it prove defective by reason of improper workmanship and/or material:

a. Parts. All parts are warranted for a period of one year from the date of the original purchase at retail. We will repair or replace, at our option, any defective part without charge for the part. Parts used for replacement may be replaced with those of like kind and quality and may be new or remanufactured. Parts used for replacement are warranted for the remainder of the original warranty period.

b. Labor. We will provide the labor for a warranty repair by an authorized MITSUBISHI service center without charge for one year from the original date of purchase at retail.

c. Notice. To obtain warranty service, you must notify an authorized MITSUBISHI service center of any defect within the applicable warranty time period.

1. TO OBTAIN WARRANTY SERVICE:

a. Contact your nearest authorized MITSUBISHI service center, whose name and address can be obtained from your MITSUBISHI dealer or by writing or calling MDEA at the address and telephone number provided below.

b. Warranty service will be provided in your home or, if required, at an authorized MITSUBISHI service center, provided that your television is located within the geographic territory customarily covered by an authorized MITSUBISHI service center. If not, you must either deliver your television to an authorized service location at your own expense, or pay for any travel and/or transportation costs the service center may charge to and from your home. Actual service labor will be provided without charge.

c. Proof of purchase date from an authorized MITSUBISHI dealer is required when requesting warranty service. Present your sales receipt or other document which establishes proof and date of purchase. **THE RETURN OF THE OWNER REGISTRATION CARD IS NOT A CONDITION OF WARRANTY COVERAGE.** However, please return the Owner Registration Card so that we can contact you should a question of safety arise which could affect you.

3. This Plasma Display Panel uses a revolutionary technology, gas plasma, to create the screen image. This technology creates the image using small dots, or picture elements (pixels). Your Plasma Display Panel is manufactured to a high level of perfection, in fact, 99.99% of the total number of active pixels will operate properly. As in tube television, sometimes a pixel is continuously active or inactive. Our standard is clear, your pixels must be 99.99% operational at all times.

4. THIS WARRANTY DOES NOT COVER:

a. Up to .01% pixel outages (small dot picture elements that are dark or incorrectly illuminated).

b. Cosmetic damage or damage to this Plasma Display Panel or to any other products where such damage is caused by unauthorized modification, alteration, repairs to or service of the product by anyone other than an authorized MITSUBISHI service center; physical abuse to or misuse of the product (including any failure to carry out any maintenance as described in the Owner's Guide or any product damaged by excessive physical or electrical stress); any products that have had a serial number or any part thereof altered, defaced or removed; product use in any manner contrary to the Owner's Guide (including, but not limited to, uneven phosphor aging and imprinted images on the viewing screen); freight damage or damage due to improper shipping methods; damage caused by use of third party mounting brackets or stands or any damage caused by acts of God or other factors beyond the reasonable control of MDEA, such as power surge damage caused by electrical system or lightning. This warranty also excludes service calls where no defect in the product covered under this warranty is found, service calls related to unsatisfactory audio or visual reception or signal unless caused by a defect in the product that is covered under this warranty, all costs, expenses or any other damages arising from product installation, or set-ups, any adjustments of user controls (including, contrast, brightness, color, tint, fine tuning, sharpness), other adjustment necessary to prepare the unit for display or use, connection with any external TV tuner, audio receiver, antenna, cable or satellite systems, or service of products purchased or serviced outside the U.S.A. Please consult the operating instructions contained in the Owner's Guide furnished with the product for information regarding user controls.

5. ANY EXPRESS WARRANTY NOT PROVIDED HEREIN, AND ANY REMEDY WHICH, BUT FOR THIS PROVISION, MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF ONE YEAR.

6. UNDER NO CIRCUMSTANCES SHALL MDEA BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, OR OTHERWISE.


7. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental, special or consequential damages, so the above limitations or exclusions may not apply to you.

8. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

9. BEFORE REQUESTING SERVICE, please review the instruction booklet to insure proper installation and correct customer control adjustment. If the problem persists, contact your nearest MITSUBISHI Dealer for the name(s) of authorized MITSUBISHI Service Center(s). If you are unable to obtain this information, please call 800-332-2119, or write us at the address below.

MITSUBISHI DIGITAL ELECTRONICS AMERICA, INC.

9351 Jeronimo Road
Irvine, CA 92618-1904

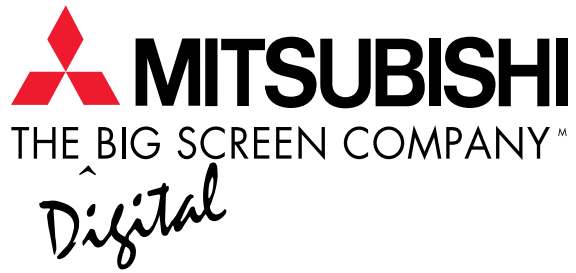

If you have questions regarding your plasma monitor, call Consumer Relations at (800) 332-2119, or email us at MDEA_Service@bigscreen.me.com

To order additional replacement remotes or owner's manuals, call (800) 553-7278 or visit our website at www.mitsubishi-tv.com