

TOSHIBA

SERVICE MANUAL

COLOUR TELEVISION

21N21E2

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES


As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

IMPORTANT

Inferior silicon grease can damage IC's and transistors.

When replacing an IC's or transistors, use only specified silicon grease (YG6260M).

Remove all old silicon before applying new silicon.

CONTENTS

SERVICING NOTICES ON CHECKING	A1-1
HOW TO ORDER PARTS	A1-1
IMPORTANT	A1-1
CONTENTS	A2-1
GENERAL SPECIFICATIONS	A3-1~A3-5
DISASSEMBLY INSTRUCTIONS	
1.REMOVAL OF ANODE CAP	B1-1
2.REMOVAL AND INSTALLATION OF FLAT PACKAGE IC	B2-1, B2-2
SERVICE MODE LIST	C-1
CONFIRMATION OF HOURS USED	C-1
WHEN REPLACING EEPROM(MEMORY) IC	C-1
ELECTRICAL ADJUSTMENTS	D-1~D-5
BLOCK DIAGRAM	E-1, E-2
PRINTED CIRCUIT BOARDS	
MAIN/CRT	F-1~F-4
SCHEMATIC DIAGRAMS	
MICON/TUNER	G-1, G-2
IF/CHROMA	G-3, G-4
21PIN/AV SW	G-5, G-6
SOUND AMP	G-7, G-8
DEFLECTION/CRT	G-9, G-10
POWER	G-11, G-12
WAVEFORMS	H-1~ H-3
MECHANICAL EXPLODED VIEW	I-1
MECHANICAL REPLACEMENT PARTS LIST	J1-1
ELECTRICAL REPLACEMENT PARTS LIST	J2-1~ J2-7

GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	21 inch / 544.5mmV		
			CRT Type	NORMAL		
			Deflection	90 degree		
			Magnetic Field BV/BH	+0.45G/0.18G		
			Color System	PAL/SECAM		
			Speaker	1 Speaker		
			Position	Front		
			Size	1.5 x2.7 Inch		
			Impedance	8 ohm		
			Sound Output	MAX 5.0 W 10%(Typical) 4.0 W		
			DDR SECAM	No		
			NTSC3.58(AV)+NTSC4.43	Yes		
	PAL60Hz	Yes				
G-2	Tuning System	Broadcasting System		CCIR System B/G D/K I		
		Tuner and Receive CH	System	1Tuner		
			Destination	Hyper		
			Tuning System	F-Synth		
			Input Impedance	VHF/UHF 75 ohm		
			CH Coverage	E2 - E4, X - Z+2, S1 - S10, E5 - E12, S11 - S41, E21 - E69		
		Intermediate Frequency	Picture(FP) Sound(FS) FP-FS	B/G, D/K, I 38.9 , 38.9, 38.9 MHz 33.4 , 32.4, 32.9 MHz 5.5 , 6.5, 6.0MHz		
		Preset CH		100		
		Stereo/Dual TV Sound		No		
		Tuner Sound Muting		Yes		
		G-3	Power	Power Source	AC DC	230V-240V AC 50Hz
				Power Consumption		at AC
	Stand by (at AC) Per Year			60 W at AC 230 V 50 Hz 3 W at AC 230 V 50 Hz -- kWh/Year		
Protector	Power Fuse			Yes		
G-4	Regulation			Safety		CE(EN60065:98)
		Radiation		CE		
		X-Radiation		-		
G-5	Temperature	Operation		+5oC ~ +40oC		
		Storage		-20oC ~ +60oC		
G-6	Operating Humidity			Less than 80% RH		

GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu		Yes
		Menu Type	Character	Yes
		Picture		Yes
		Contrast		Yes
		Brightness		Yes
		Colour		Yes
		Tint (NTSC Only)		Yes
		Sharpness		Yes
		Audio		No
		Bass		No
		Treble		No
		Balance		No
		BBE On/Off		No
		Stable Sound On/Off		No
		CH Tuning		Yes
		Manual		Yes
		Auto		Yes
		CH MAPPING		Yes
		CH Allocation		No
		Text Langage(East/West)		Yes
		Language		Yes
		Clock Set		No
		On/OffTimer Set		Yes
		On Timer Set		No
		Pin Code Registration		No
		Panel Lock		Yes
		Nicam Auto Off		No
		AV Colour System		Yes
		Sound System		No
		Auto 4:3 Default		No
		AV2 Output		No
		Output Source		No
		Source		No
		Control Level		Yes
		Volume		Yes
		Brightness		Yes
		Contrast		Yes
		Colour		Yes
		Tint (NTSC Only)		Yes
		Sharpness		Yes
		Tuning		Yes
		Bass		No
		Treble		No
Balance		No		
Back Light		No		
Nicam ST		No		
G(A2)Stereo		No		
Tone 1/2 (A/B)		No		
Surround On/Off		No		
Pin Code		No		
AV		Yes		
Skip		Yes		
Channel		Yes		
Broadcasting Station Name		Yes		
Hotel Lock		No		
Sleep Timer		No		
Selectable Picture		Yes		
Wide Mode		No		
Sound Mute		Yes		
G-8	OSD Language	English , French , Spanish Germany , Italian Polski , Turkey , Sweden Netherland , Portugal Norway , Finland , Denmark Czech , Slovak , Hungarian Russian , Greek Yugoslavian , Bulgarian , Romanian Slovenian , Croatian		
G-9	Clock and Timer	Sleep Timer	Max Time	- Min
			Step	- Min
		Clock		No
		On Timer	Program(On Tim)	Yes
		Off Timer	Program(Off Tim)	Yes
		Wake Up Timer		No
	Timer Back-up (at Power Off Mode)	more than	-- Min Sec	

GENERAL SPECIFICATIONS

G-10	Remote Control	Unit	RC-GX	
		Glow in Dark Remocon	No	
		Format	NEC	
		Custom Code	40-BF h	
		Power Source	Voltage(D.C) UM size x pcs	3V UM-4 x 2 pcs
		Total Keys		34 Keys
		Keys	Power	Yes
			1/Rename	Yes
			2/Move	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			Volume Up / +	Yes
			Volume Down / -	Yes
			Previous	Yes
			Select Picture	Yes
			Menu	Yes
			OK(Enter)	Yes
			EXIT	Yes
			Audio Select	No
			On/OffTimer	Yes
			Mute	Yes
			DSP/surround/Virtual Dolby	No
			Woofers/Bass	No
			Picture Size	No
			TTEXT Keys	
			TEXT / MIX / TV	Yes
			CH Up / Page Up	Yes
			CH Down / Page Down	Yes
			Red	Yes
			Green	Yes
			Yellow	Yes
			Cyan	Yes
			TEXT F/T/B	Yes
			Reveal	Yes
	TIMED PAGE(SUB PAGE)	Yes		
	CALL / TEXT INDEX	Yes		
	INPUT SELECT	Yes		
	TEXT HOLD	Yes		
	TIME / TXCL	Yes		

GENERAL SPECIFICATIONS

G-11	Features	Auto Degauss	Yes	
		Auto Shut Off	Yes	
		Canal+	No	
		CATV	No	
		Anti-theft(Back Up 30 Min.)	No	
		Memory(Last CH)	Yes	
		Memory(Last Volume)	Yes	
		BBE	No	
		Auto Search	Yes	
		ITS	No	
		CH Allocation	No	
		CH MAPPING	Yes	
		Just Clock Function	No	
		Game Position	No	
		CH Label	No	
		VM Circuit	No	
		Full OSD	No	
		Noise Blue Back	No	
		TText	Yes	
			Text type	Fasttext
			Text Language	English , French, Swedish, Hungarian Finnish, Turkish, German, Dutch Portuguese, Spanish, Italian, Greek Polish, Russian, Bulgarian, Czech Slovak, Romanian, Slovenian Croatian, Yugoslavian
			Premiere	No
			Comb Filter	No
				Lines
			Auto CH Memory	No
			Stable Sound	No
			Auto Set Up	No
			FBT Leak Test Protect	Yes
			Power ON Memory	Yes
			Previous (Quick View)	Yes
			Panel Lock	Yes
			Double Focus & Dynamic Focus	No
	Wss Signal Wide Change	No		
	Virtual Dolby Surround	No		
	Hotel Lock	No		
G-12	Accessories	Owner's Manual	Language	Polish,Hungarian,Czech,Rumanian, Bulgarian,Russian,Slovenian,Croatian, English
			w/Guarantee Card	No
			Remote Control Unit	Yes
			Rod Antenna	No
			Poles	-
			Terminal	-
			Loop Antenna	No
			Terminal	-
			U/V Mixer	No
			DC Car Cord (Center+)	No
			Guarantee Card	No
			Warning Sheet	No
			Circuit Diagram	No
			Antenna Change Plug	No
			Service Facility List	No
			Important Safeguard	Yes (Owner's Manual In)
			Dew/AHC Caution Sheet	No
			AC Plug Adapter	No
			Quick Set-up Sheet	Yes
			Battery	Yes
			UM size x pcs	UM-4 x 2 pcs
			OEM Brand	No
			AC Cord	No
			AV Cord (2Pin-1Pin)	No
			Registration Card	No
			PTB Sheet	No
			300 ohm to 75 ohm Antenna Adapter	No

GENERAL SPECIFICATIONS

G-13	Interface	Switch	Front	Power (Tact Sw)	No
				System Select	No
				Main Power SW	Yes
				Sub Power	No
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
			Volume Down	Yes	
			Rear	AC/DC	No
				TV/CATV Selector	No
				Degauss	No
				Main Power SW	No
			Indicator	Power	No
				Stand-by	No
				Stand-by/ON	Yes(Red)
		On Timer		Yes(Green)	
		Terminals	Front	Video Input	Yes(RCA)
				Audio Input	Yes(RCA)
				Other Terminal	Head Phone(MONO)
			Rear	Video Input(Rear1)	No
				Video Input(Rear2)	No
				Audio Input(Rear1)	No
				Audio Input(Rear2)	No
				Video Output	No
				Audio Output	No
				Euro Scart(21Pin)	No
				S-INPUT	
				Euro Scart(21Pin)	Yes (x1)
				RGB-INPUT	Yes (x1)
				Component Input	No
				Diversity	No
				Ext Speaker	No
				DC Jack 12V(Center +)	No
VHF/UHF Antenna Input	D Type				
AC Outlet	No				
G-14	Set Size		Approx. W x D x H (mm)	506.5 x 484 x 464.5	
G-15	Weight		Net (Approx.)	21.0 kg (--- lbs)	
			Gross (Approx.)	23.8kg (---lbs)	
G-16	Carton	Master Carton		No	
			Content	---- Sets	
			Material	-- /--	
			Dimensions W x D x H(mm)	-- x -- x --	
			Description of Origin	---	
		Gift Box		Yes	
			Material	Double/Brown	
			Dimensions W x D x H(mm)	580 x 575 x 555	
			Design	As per Buyer's	
		Drop Test	Description of Origin	No (Assembled in U.K.)	
				Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces	
			Height (cm)	46	
			Container Stuffing	320 Sets/40' container	
G-17	Material	Cabinet	Front	PS 94HB	
			Rear	PS 94HB	
			Holder	PS 94V0 NON-DECABROM	
		PCB	Non-Halogen Demand	Yes	
			Eyelet Demand	Yes	
G-18	Environment	Pb Free	Lead-free Solder	No	
			Other	No	
		Cd Free	No		

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- * After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- * Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 1-1.)**

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.

A cracking noise will be heard as the voltage is discharged.

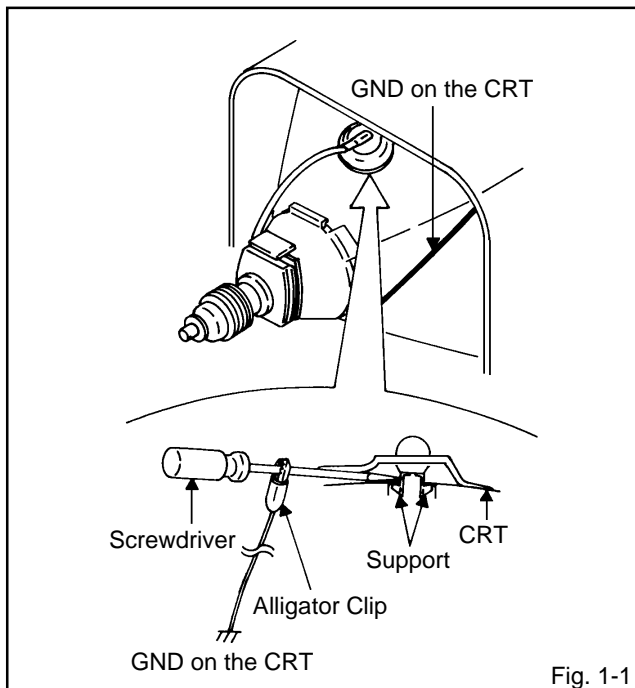


Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 1-2.)**

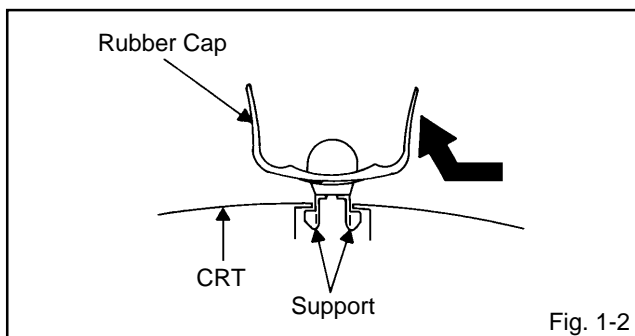


Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 1-3.)**

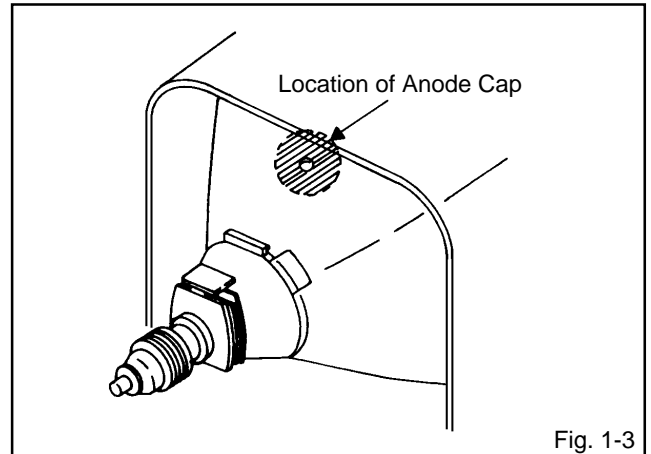


Fig. 1-3

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 1-4.)**

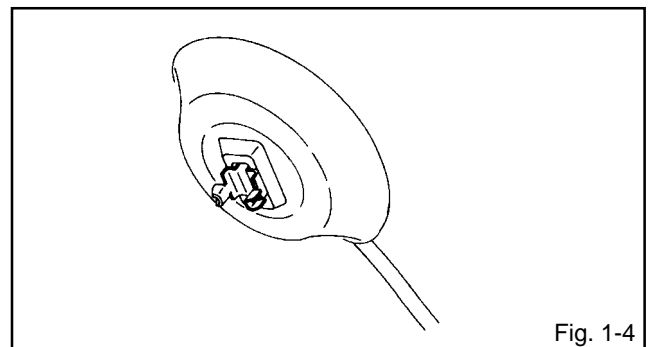


Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 1-5.

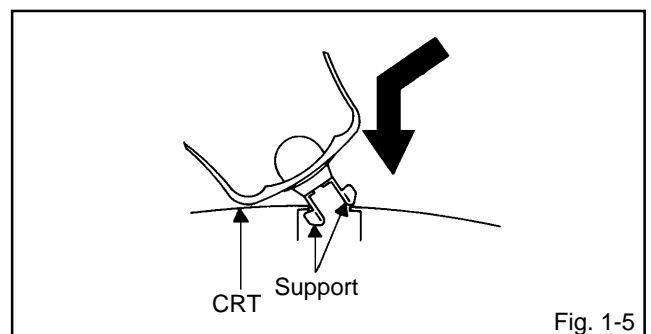


Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS


2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 2-1.)

NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

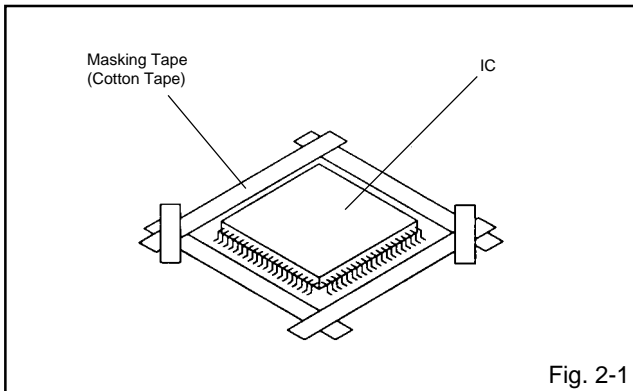

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 2-2.)

NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

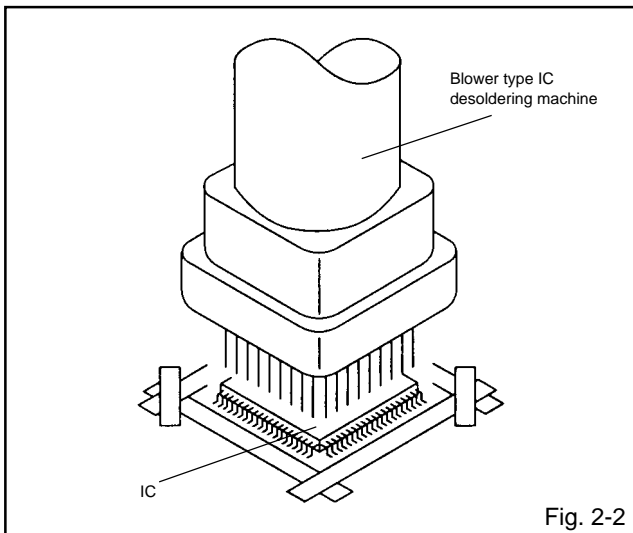

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 2-3.)

NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

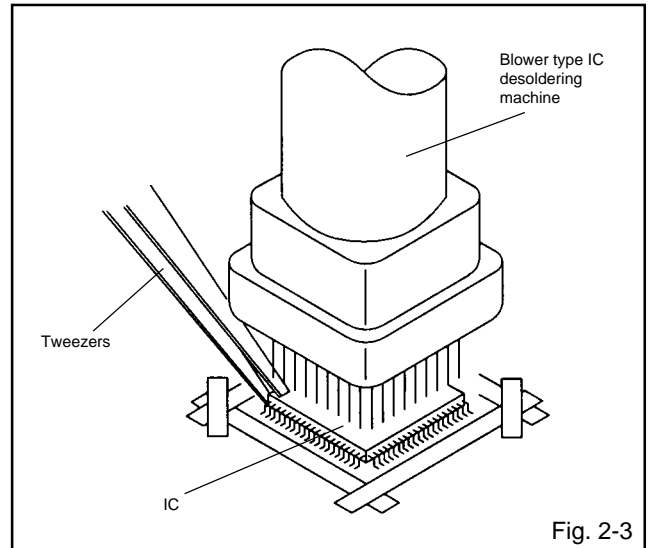

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 2-4.)

NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

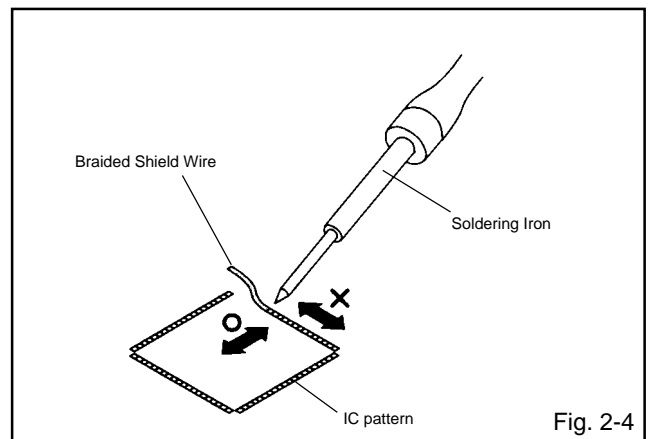


DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 2-5.)

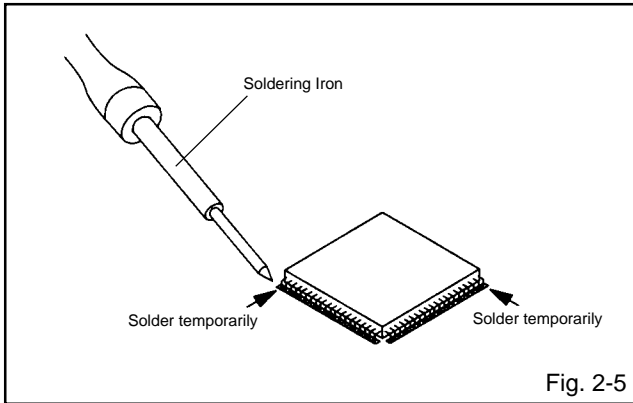


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 2-6.)

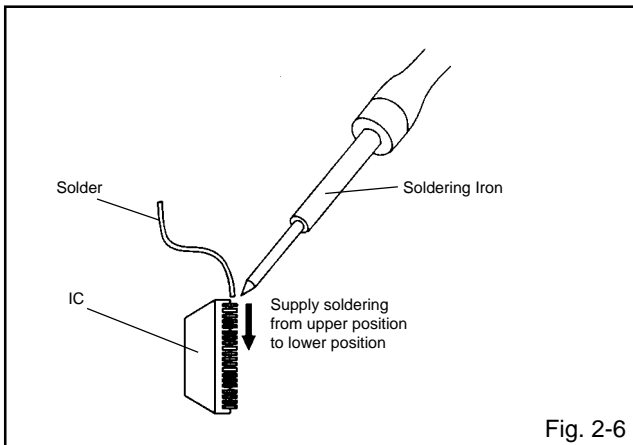


3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 2-7.)

NOTE

Do not absorb the solder to excess.

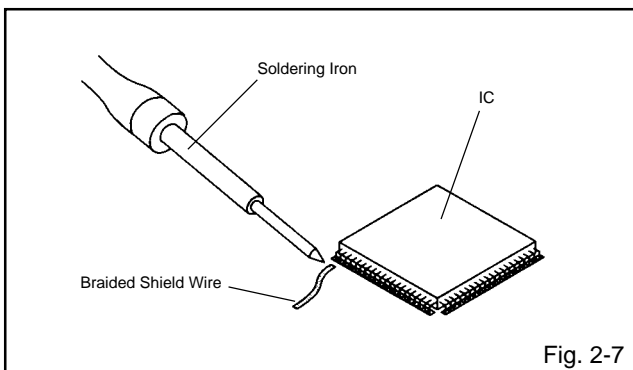

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 2-8.)

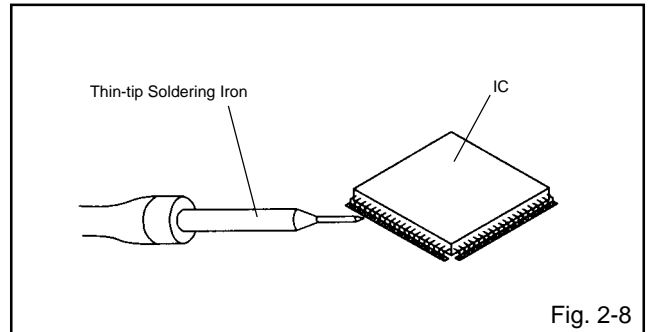

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, always be sure to replace the IC in this case.

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily. To enter the Service Mode, press both set key and remote control key for more than 2 seconds.


Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Reset the user setting items (PICTURE, VOLUME and LANGUAGE) to the initial state for delivery.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED". Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 2 seconds.
3. After the confirmation of using hours, turn off the power.

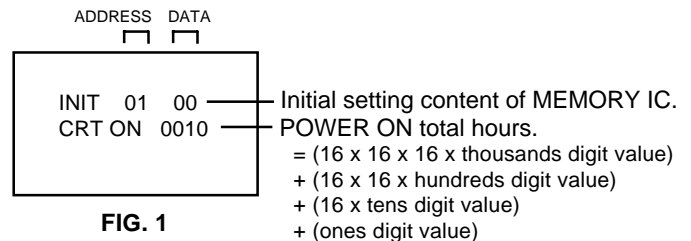

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need setting for after INI 16 due to the adjustment value.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	---	00	00	00	00	61	91	60	E6	50	73	07	03	00	06	00
10	10	00	98	98	98	BC	00	---	---	---	---	---	---	---	---	---

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
 2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 2 seconds. ADDRESS and DATA should appear as FIG 1.
 3. ADDRESS is now selected and should "blink". Using the VOL. +/- button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
 4. Press OK to select DATA. When DATA is selected, it will "blink".
 5. Again, step through the DATA using VOL. +/- button until required DATA value has been selected.
 6. Pressing OK will take you back to ADDRESS for further selection if necessary.
 7. Repeat steps 3 to 6 until all data has been checked.
 8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.
After the data input, set to the initializing of shipping.
 9. Turn POWER on.
 10. Press both VOL. DOWN button on the set and Channel button **(1)** on the remote control for more than 2 seconds.
 11. After the finishing of the initializing of shipping, the unit will turn off automatically.
- The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor).

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Pattern Generator

On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button (9) on the remote control for more than 2 seconds to appear the adjustment mode on the screen as shown in Fig. 1-1.

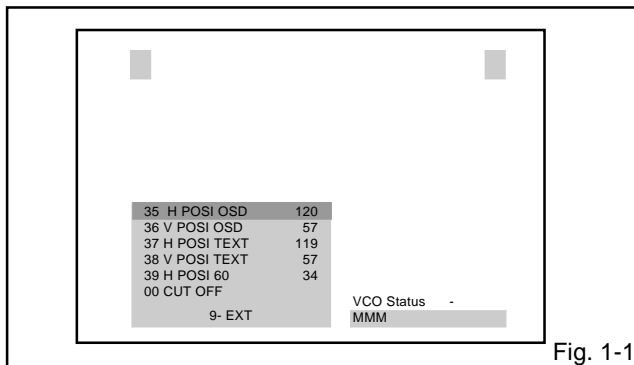


Fig. 1-1

2. Use the Channel button (0-9) or Channel UP/DOWN button on the remote control to select the options shown in Fig. 1-2.
3. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	CUT OFF	20	TINT
01	RF AGC	21	SHARP
02	AGC GAIN	22	CONTRAST CENT
03	R DRIVE	23	CONTRAST MAX
04	R CUTOFF	24	CONTRAST MIN
05	G DRIVE	25	COLOR CENT
06	G CUTOFF	26	COLOR MAX
07	B DRIVE	27	COLOR MIN
08	H POSI (50)	28	M R CUT OFF
09	V POSI (50)	29	M G CUT OFF
10	V POSI (60)	30	M B CUT OFF
11	V SIZE (50)	31	CVBS OUT
12	V SIZE (60)	32	APR THRESHOLD
13	VCO COARSE	33	BELL FILTER
14	VCO FINE	34	BANDPASS
15	VCO COARSE L1	35	H POSI OSD
16	VCO FINE L1	36	V POSI OSD
17	BRIGHT CENT	37	H POSI TEXT
18	BRIGHT MAX	38	V POSI TEXT
19	BRIGHT MIN	39	H POSI (60)

Fig. 1-2

2. BASIC ADJUSTMENTS

2-1: CONSTANT VOLTAGE

1. Place the set with Aging Test for more than 5 minutes.
2. Connect the digital voltmeter to TP501.
3. Set condition is AV MODE without signal.
4. Adjust the VR501 until the DC voltage is $117 \pm 1.0V$.

2-2: VCO

1. Place the set with Aging Test for more than 10 minutes.
2. Connect the oscillator (38.9MHz) to TP001.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (13) on the remote control to select "VCO COARSE".
4. Press the VOL. +/- button on the remote control until the "OK" appear on the screen. If the "OK" is not displayed, select the "+" side on the changed from "+" to "-".
5. Press the Page UP button once to set to "VCO FINE" mode.
6. Press the VOL. +/- button on the remote control to select the 5 step down point from the upper limit on the "OK".
(Example: In case of the "OK" range 30~41, select 36.)

2-3: VCO COARSE L1, VCO FINE L1

1. Place the set with Aging Test for more than 10 minutes.
2. Connect the oscillator (33.95MHz) to TP001.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (15) on the remote control to select "VCO COARSE L1".
4. Press the VOL. +/- button on the remote control until the "OK" appear on the screen. If the "OK" is not displayed, select the "+" side on the changed from "-" to "+".
5. Press the Page UP button once to set to "VCO FINE L1" mode.
6. Press the VOL. +/- button on the remote control to select the 5 step down point from the upper limit on the "OK".
(Example: In case of the "OK" point 30~41, select 36.)

2-4: AGC VOLTAGE

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the UHF ($63 \pm 1dB$).
3. Connect the digital voltmeter to pin 5 of CP101.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (01) on the remote control to select "RF AGC".
5. Press the VOL. +/- button on the remote control until the digital voltmeter is $2.55 \pm 0.05V$.

2-5: FOCUS

1. Receive a 70dB monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the Focus Volume until picture is distinct.

2-6: CUT OFF

1. Set condition is AV MODE without signal.
2. Using the remote control, set the brightness and contrast to normal position.
3. Place the set with Aging Test for more than 15 minutes.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (00) on the remote control to select "CUT OFF".
5. Adjust the Screen Volume until a dim raster is obtained.

ELECTRICAL ADJUSTMENTS

2-7: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(03)** on the remote control to select "R DRIVE".
5. Press the Page UP/DOWN button on the remote control to select the "R DRIVE", "G DRIVE", "M R CUTOFF" or "M G CUTOFF".
6. Adjust the VOL. +/- button on the remote control to whiten the R DRIVE, G DRIVE, M R CUT OFF, and M G CUT OFF at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-8: HORIZONTAL POSITION

1. Receive the monoscope pattern from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select "H POSI (50)".
4. Press the VOL. +/- button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.
5. Receive the monoscope pattern of NTSC. (Audio Video Input)
6. Using the remote control, set the brightness and contrast to normal position.
7. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(39)** on the remote control to select "H POSI (60)".
8. Press the VOL. +/- button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

2-9: VERTICAL SIZE

1. Receive the monoscope pattern from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(11)** on the remote control to select "V SIZE (50)".
4. Adjust by using the VOL. +/- button on the remote control so that the Up/Down OVER SCAN Quantity becomes equal to the Right/Left OVER SCAN Quantity.
5. Receive a broadcast and check if the picture is normal.
6. Receive the monoscope pattern of NTSC. (Audio Video Input)
7. Using the remote control, set the brightness and contrast to normal position.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(12)** on the remote control to select "V SIZE (60)".
9. Adjust by using the VOL. +/- button on the remote control so that the Up/Down OVER SCAN Quantity becomes equal to the Right/Left OVER SCAN Quantity.

2-10: VERTICAL POSITION/VERTICAL LINEARITY

1. Receive the monoscope pattern from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the **VR401** until the horizontal line becomes fit to the notch of the shadow mask.
4. Adjust the **VR420** until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-11: BRIGHT CENT

1. Receive the PAL black pattern*. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Place the set with Aging Test for more than 15 minutes.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(17)** on the remote control to select "BRIGHT CENT".
5. Press the VOL. +/- button on the remote control until the screen begin to shine.
6. Receive the PAL black pattern*. (Audio Video Input)
7. Set to the AV mode. Then perform the above adjustments 2~5.

*The Black Pattern means the whole black raster signal. Select the "RASTER" of the pattern generator, set to the OFF position for each R, G and B.

2-12: COLOR CENT

1. Receive the PAL color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast and color to normal position.
3. Connect the oscilloscope to **TP022**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(25)** on the remote control to select "COLOR CENT".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 5 scales on the screen of the oscilloscope.
6. Press the VOL. +/- button on the remote control until the red color level is adjusted to $90 \pm 10\%$ of the white level. (**Refer to Fig. 2-1**)
7. Receive the PAL color bar pattern. (Audio Video Input)
8. Set to the AV mode. Then perform the above adjustments 2~6.

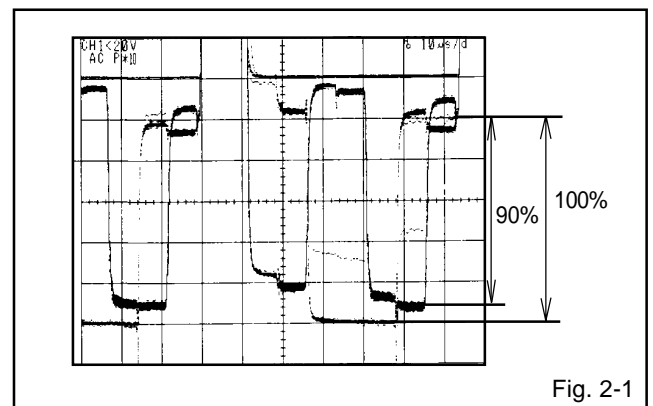


Fig. 2-1

ELECTRICAL ADJUSTMENTS

2-13: TINT

1. Receive the NTSC color bar pattern. (Audio Video Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Connect the oscilloscope to **TP024**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**20**) on the remote control to select "TINT".
5. Press the VOL. +/- button on the remote control until the section "A" becomes a straight line. (**Refer to Fig. 2-2**)

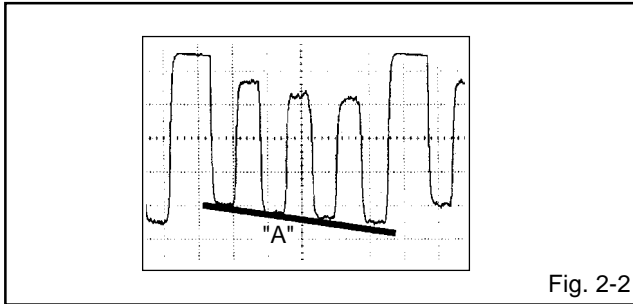


Fig. 2-2

2-14: CONTRAST CENT

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**22**) on the remote control to select "CONTRAST CENT".
2. Press the VOL. +/- button on the remote control until the contrast step No. becomes "35".
3. Receive a broadcast and check if the picture is normal.
4. Set to the AV mode. Then perform the above adjustments 1~3.

2-15: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV
02	AGC GAIN	00	---
04	R CUTOFF	00	---
06	G CUTOFF	00	---
07	B DRIVE	45	---
09	V POSI (50)	08	---
10	V POSI (60)	00	---
18	BRIGHT MAX	40	40
19	BRIGHT MIN	09	09
20	TINT	32	ADJ.
21	SHARP	02	02
23	CONTRAST MAX	50	50
24	CONTRAST MIN	10	10
26	COLOR MAX	50	50
27	COLOR MIN	10	10
30	M B CUT OFF	127	---
31	CVBS OUT	31	---
32	APR THRESHOLD	00	---
33	BELL FILTER	10	---
34	BANDPASS	00	---
35	H POSI OSD	118	---
36	V POSI OSD	50	---
37	H POSI TEXT	122	---
38	V POSI TEXT	58	---

*To check for the fixed values of the RF (60Hz), indicate the adjustment mode screen while input the 60Hz video signal.

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

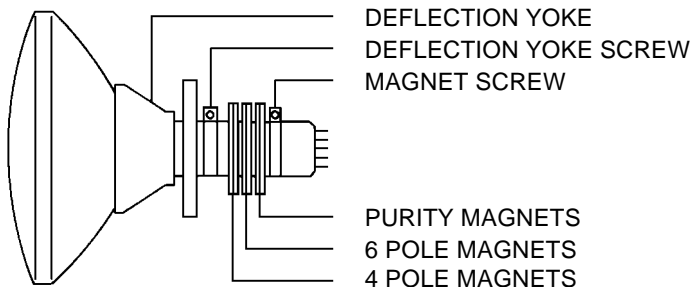


Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

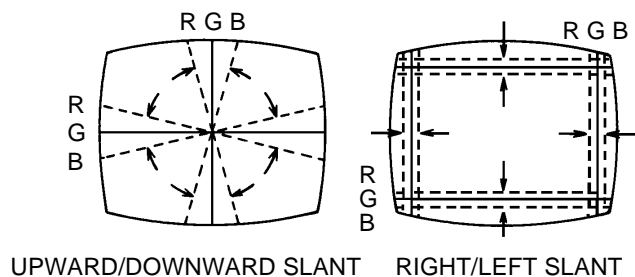


Fig. 3-2-a


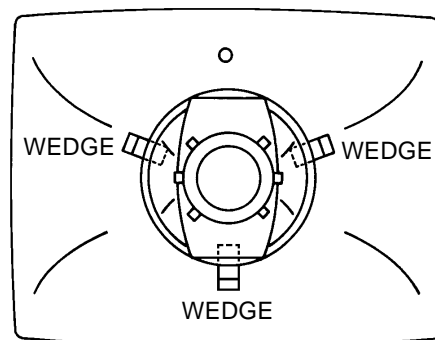



Fig. 3-2-b

ELECTRICAL ADJUSTMENTS


4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

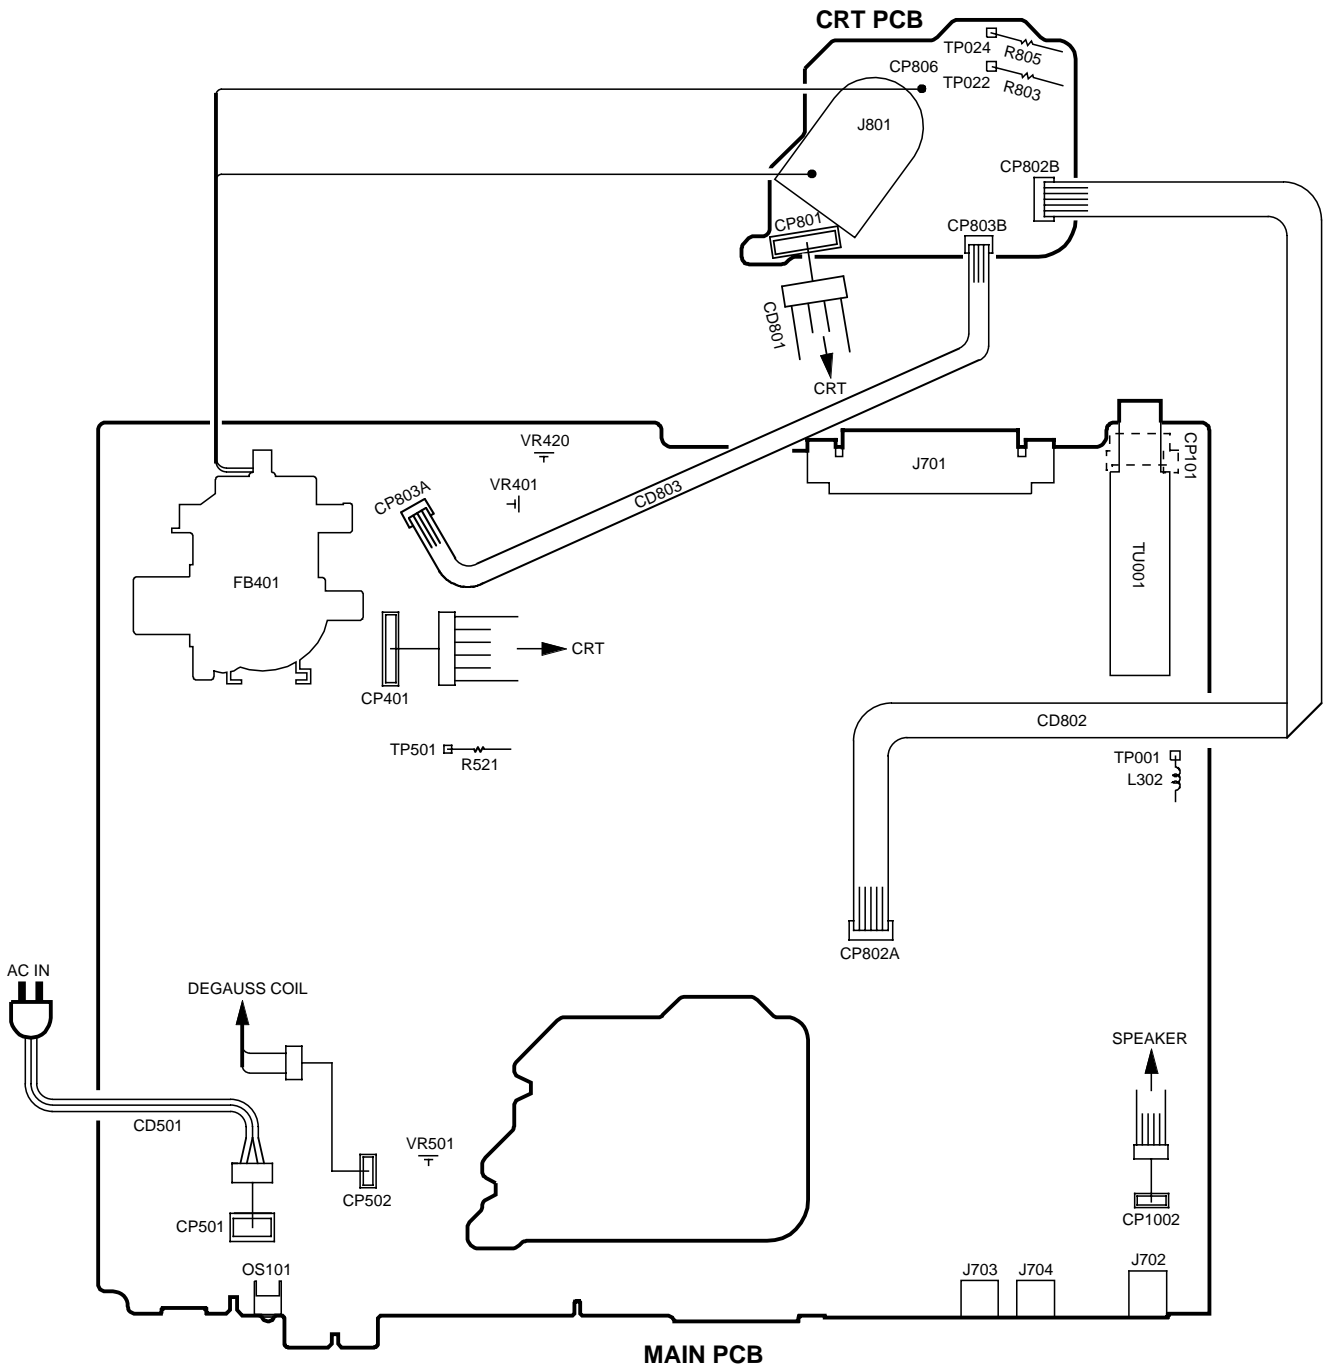


BLOCK DIAGRAM

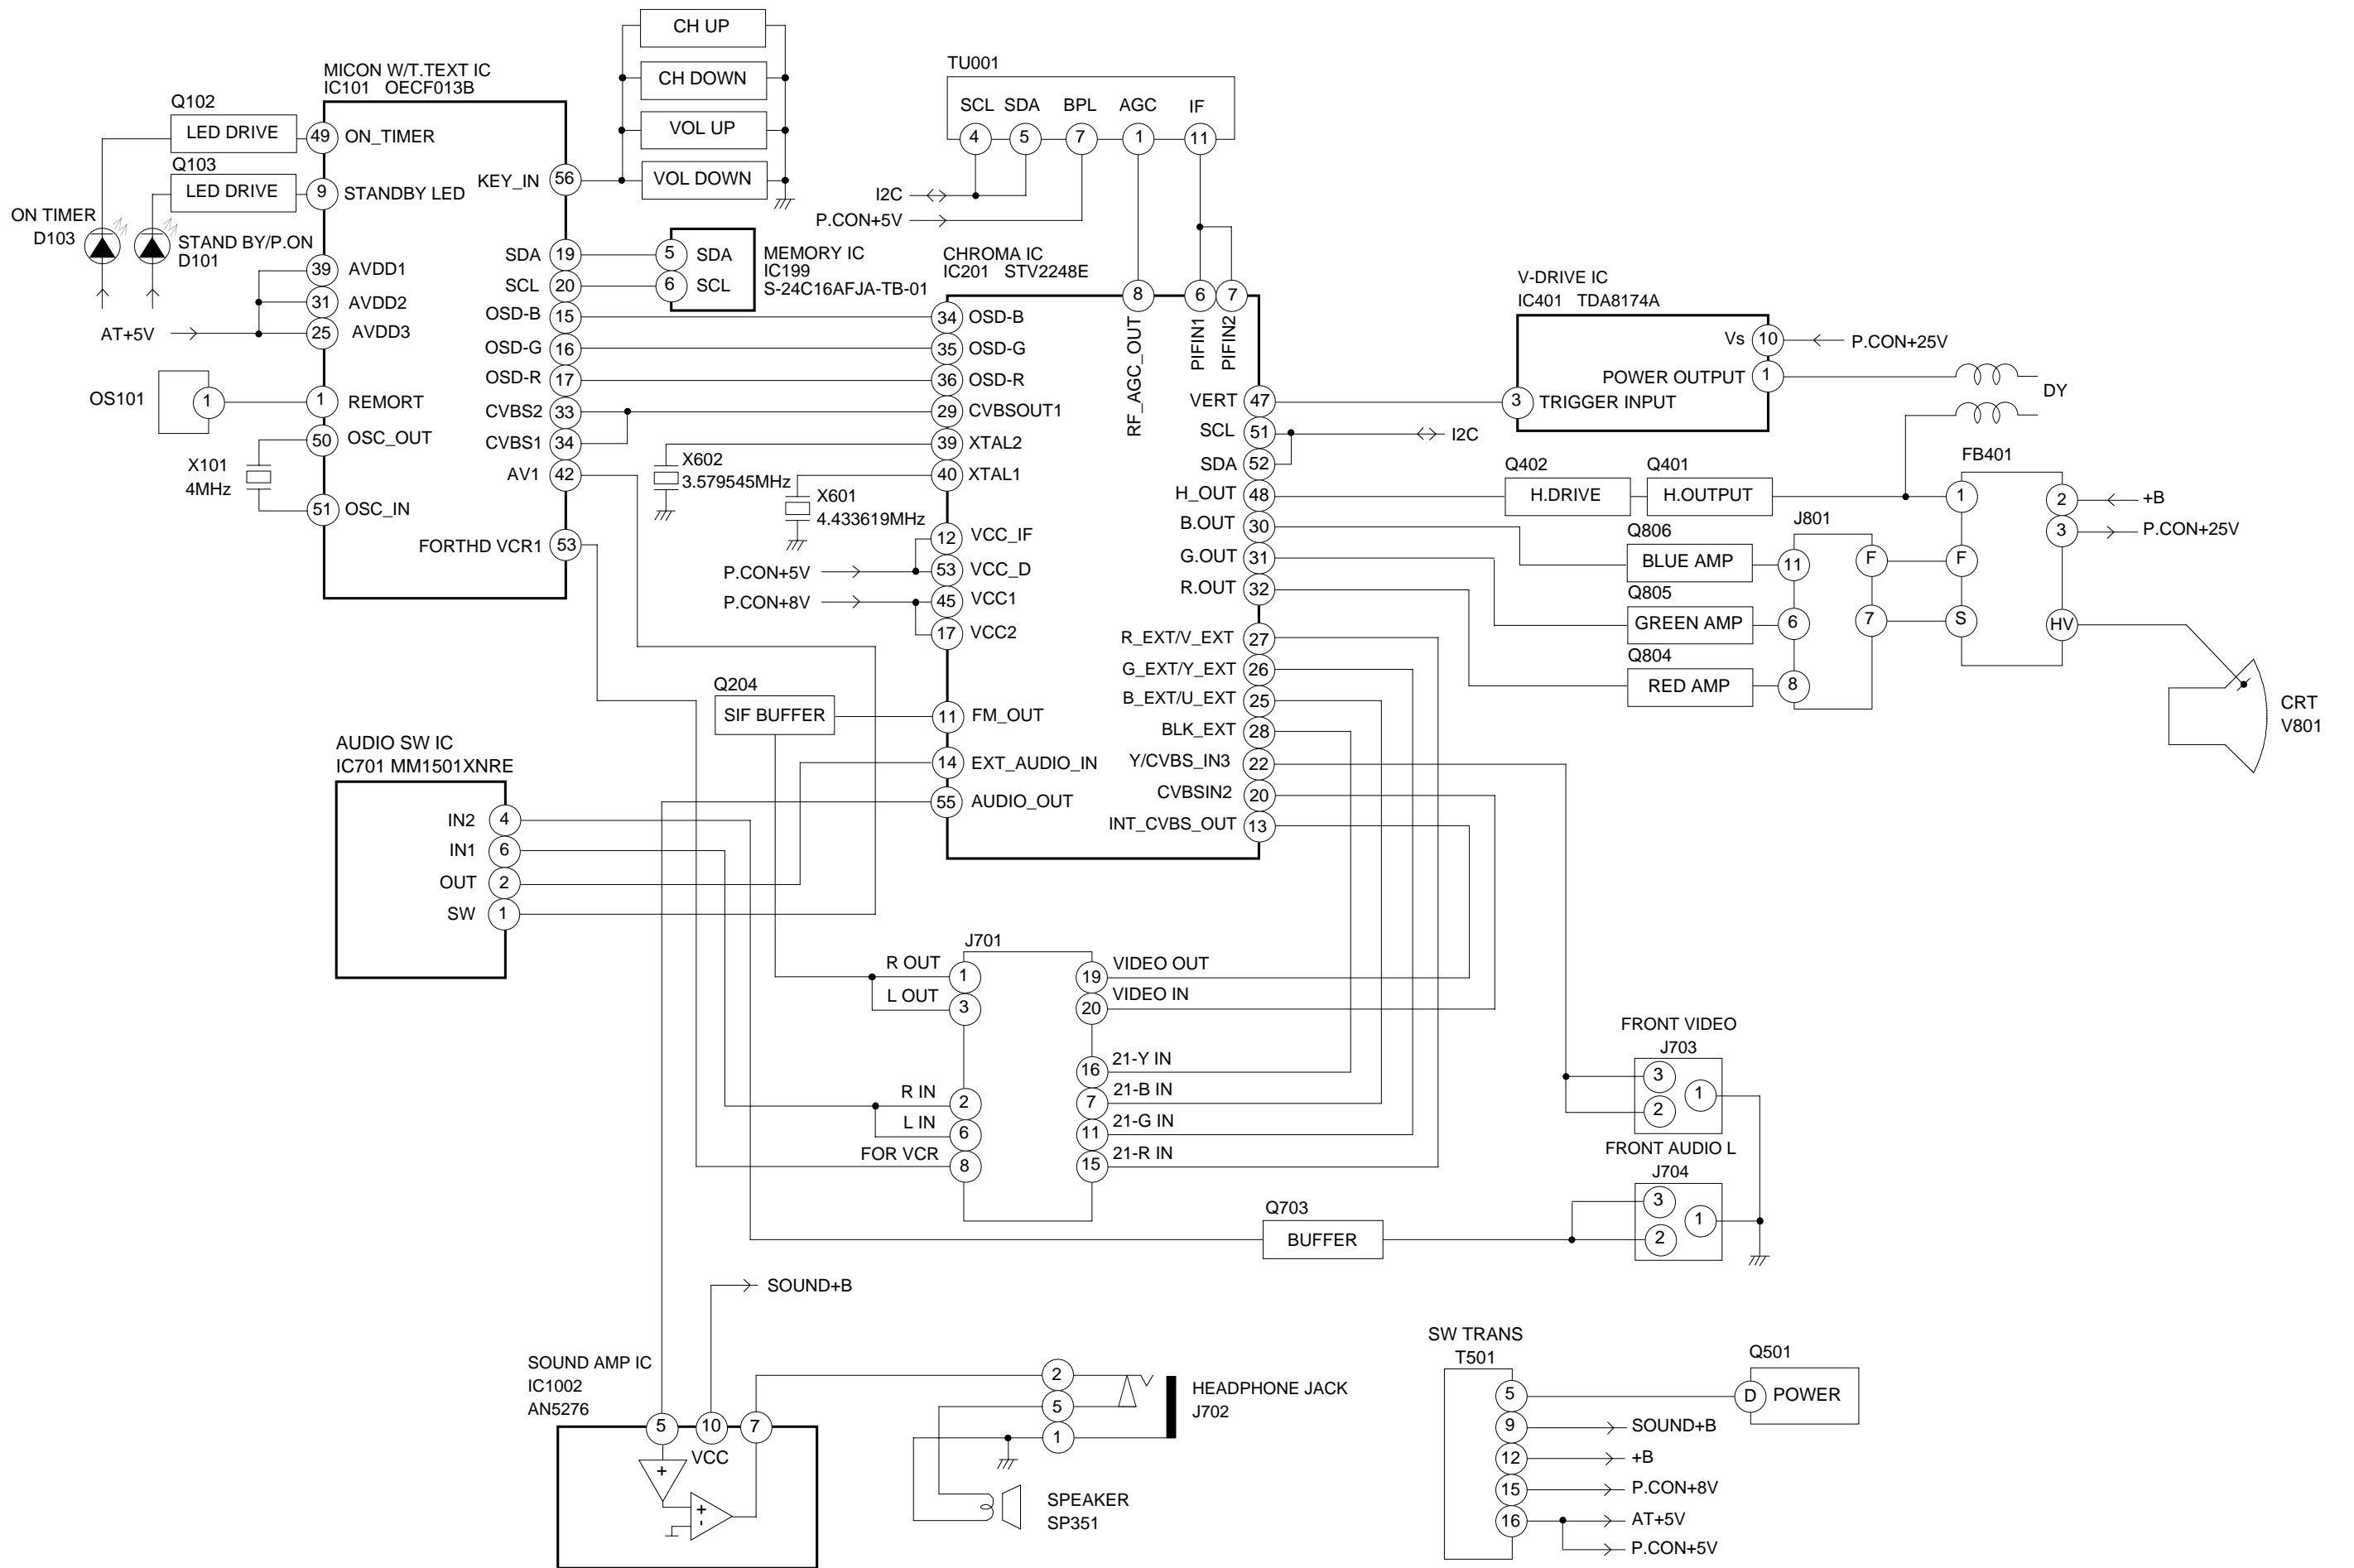


PRINTED CIRCUIT BOARDS
MAIN/CRT (INSERTED PARTS)
SOLDER SIDE

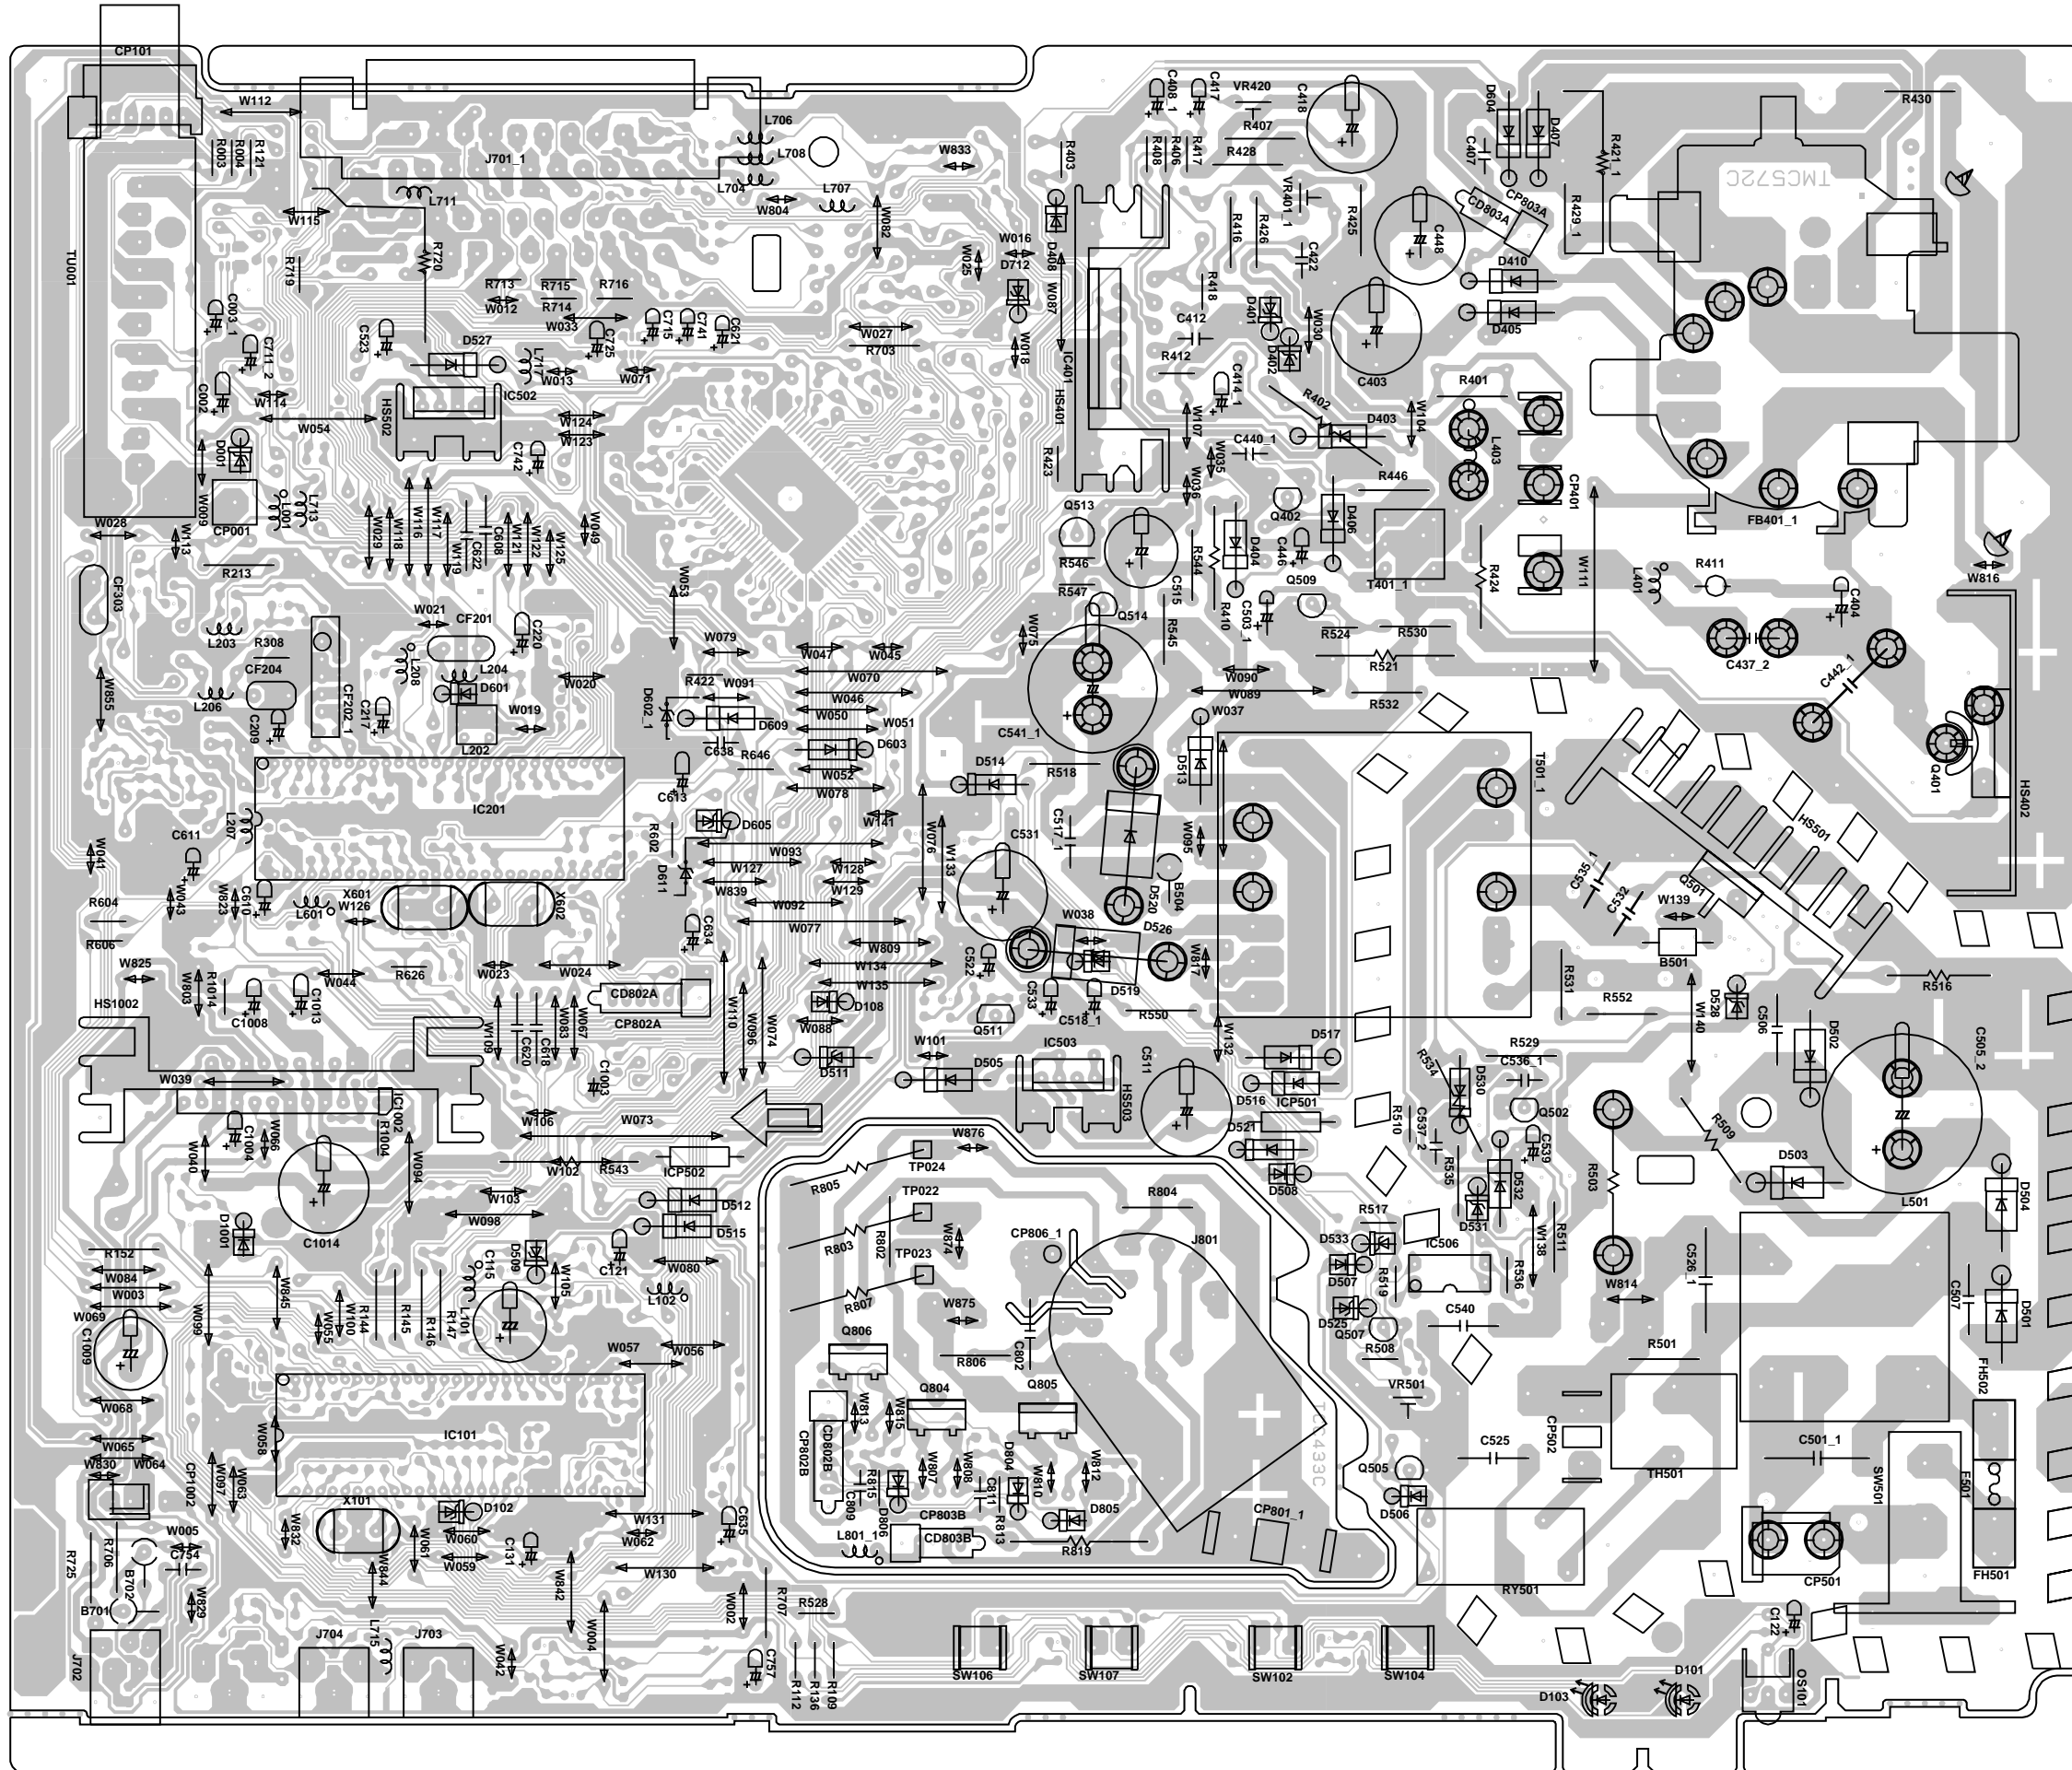

PRINTED CIRCUIT BOARDS
MAIN/CRT (CHIP MOUNTED PARTS)
SOLDER SIDE

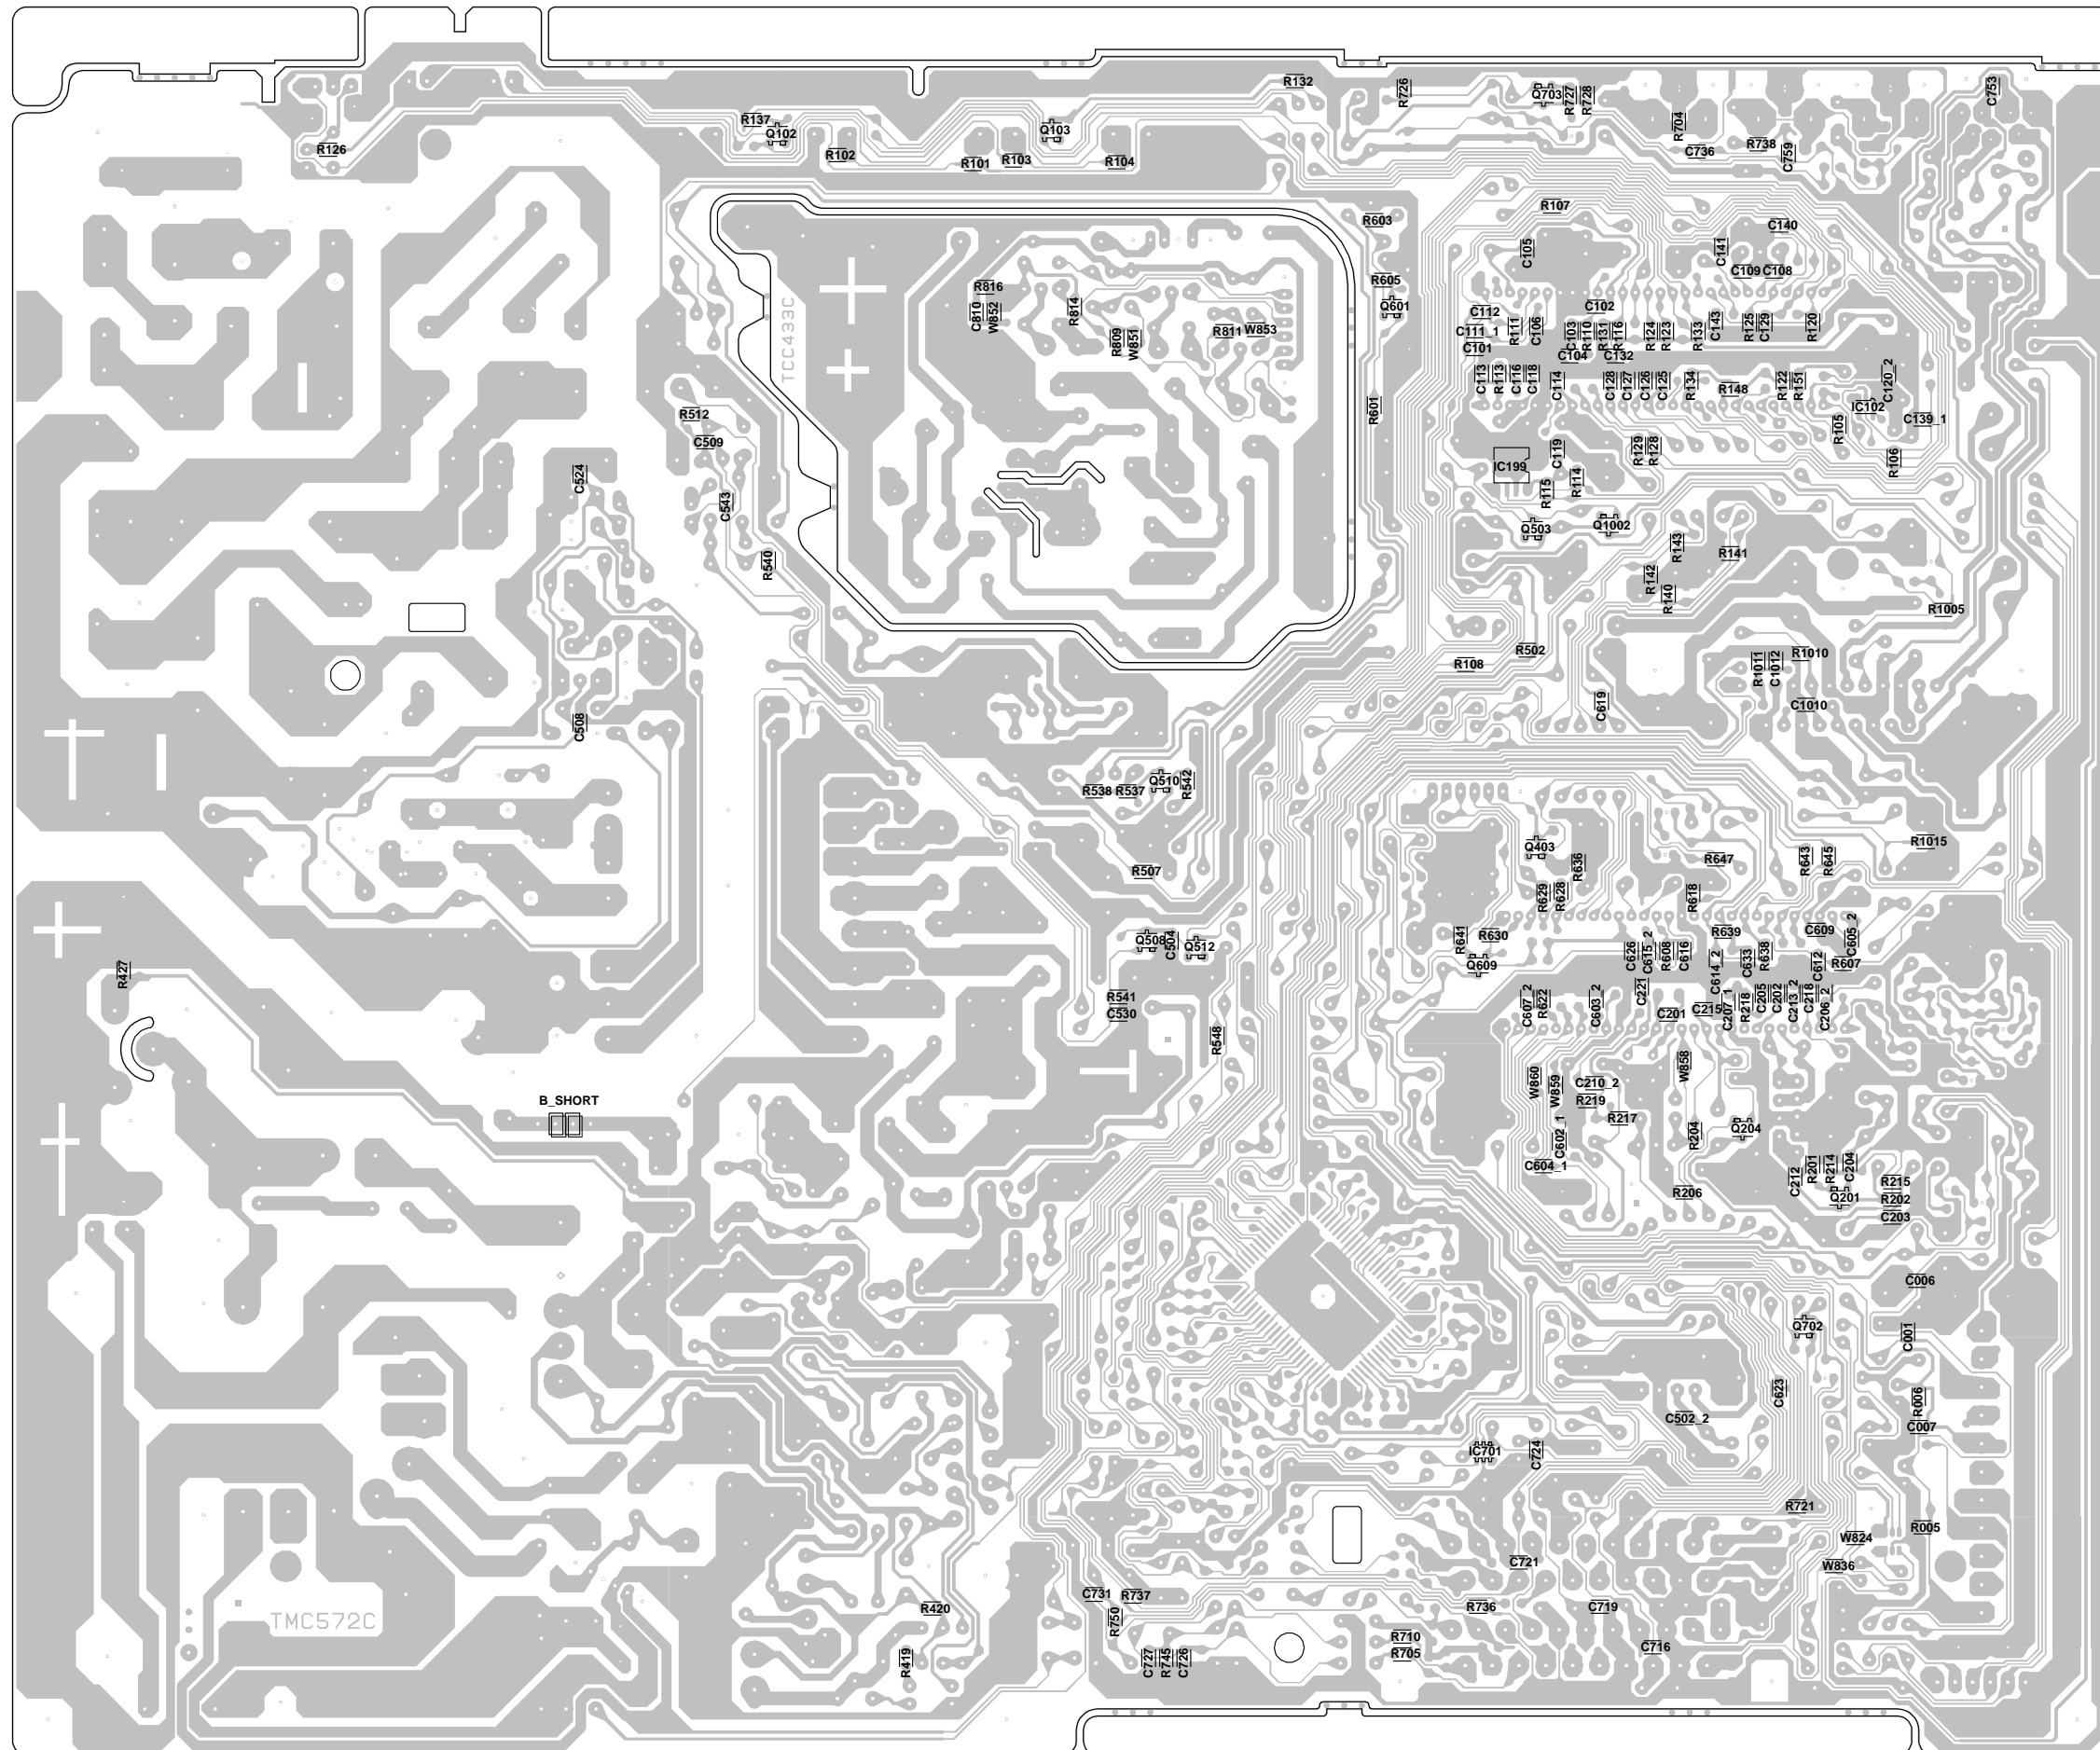


MICON/TUNER SCHEMATIC DIAGRAM (MAIN PCB)

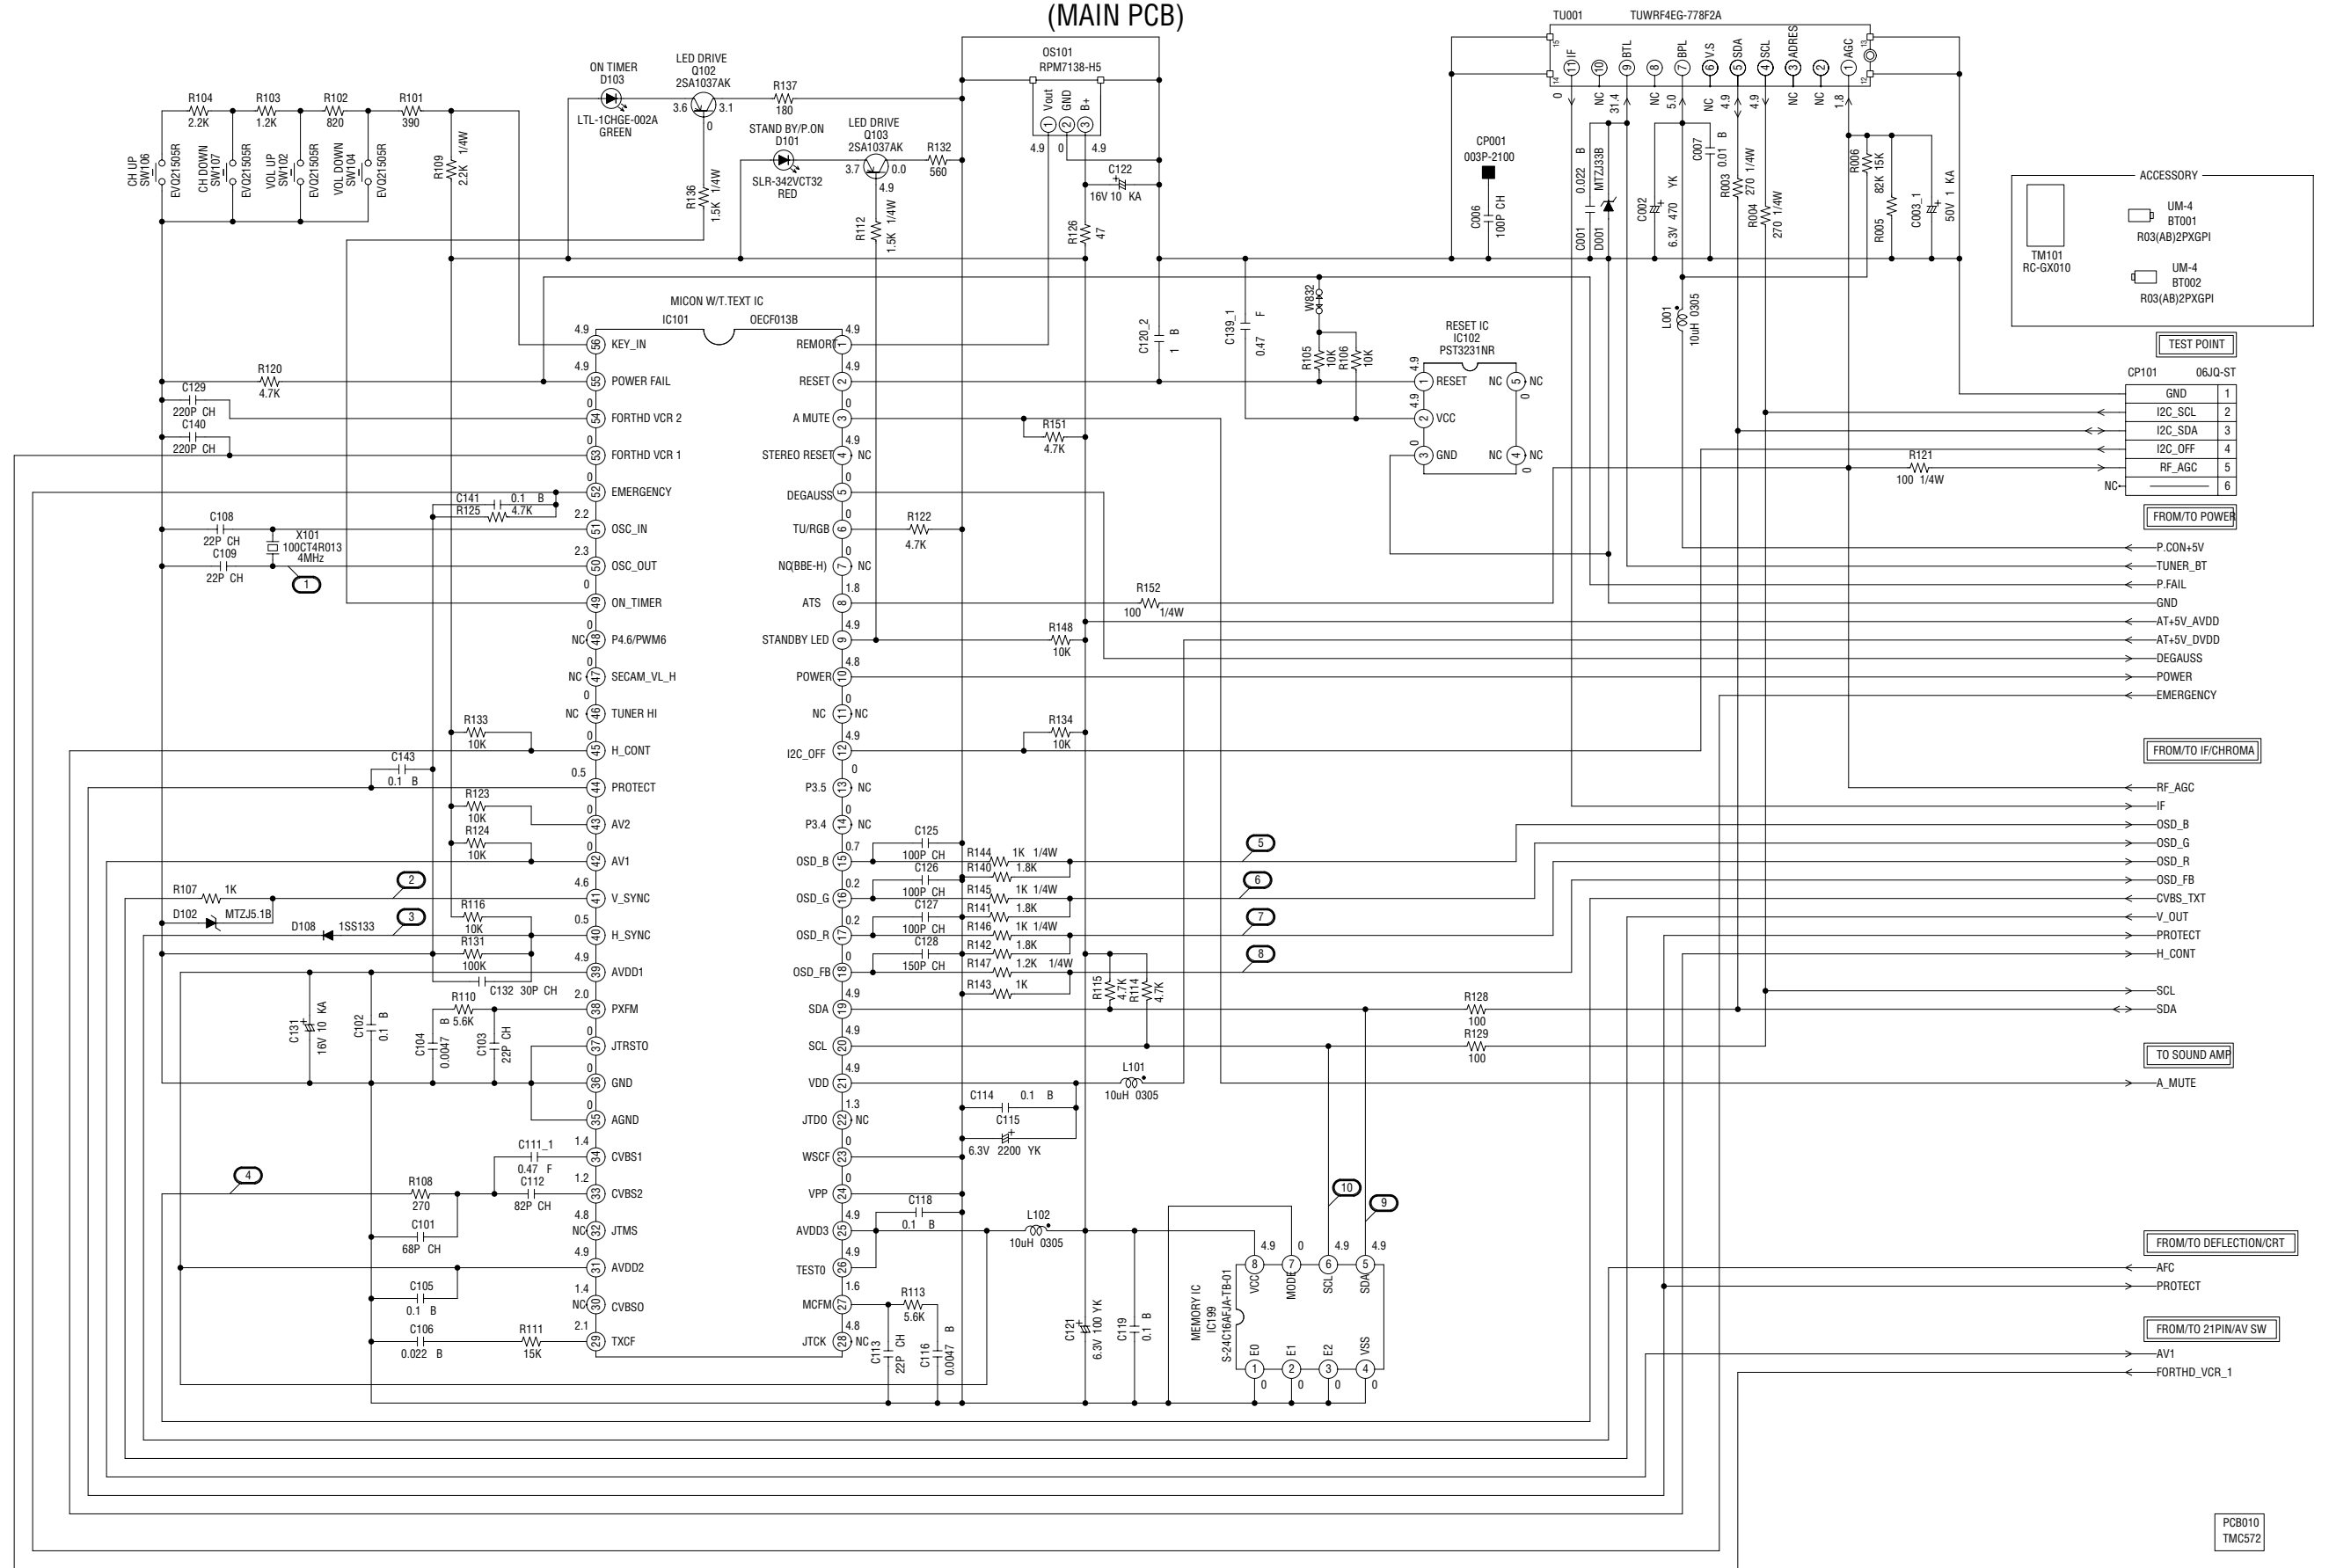

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

IF/CHROMA SCHEMATIC DIAGRAM (MAIN PCB)

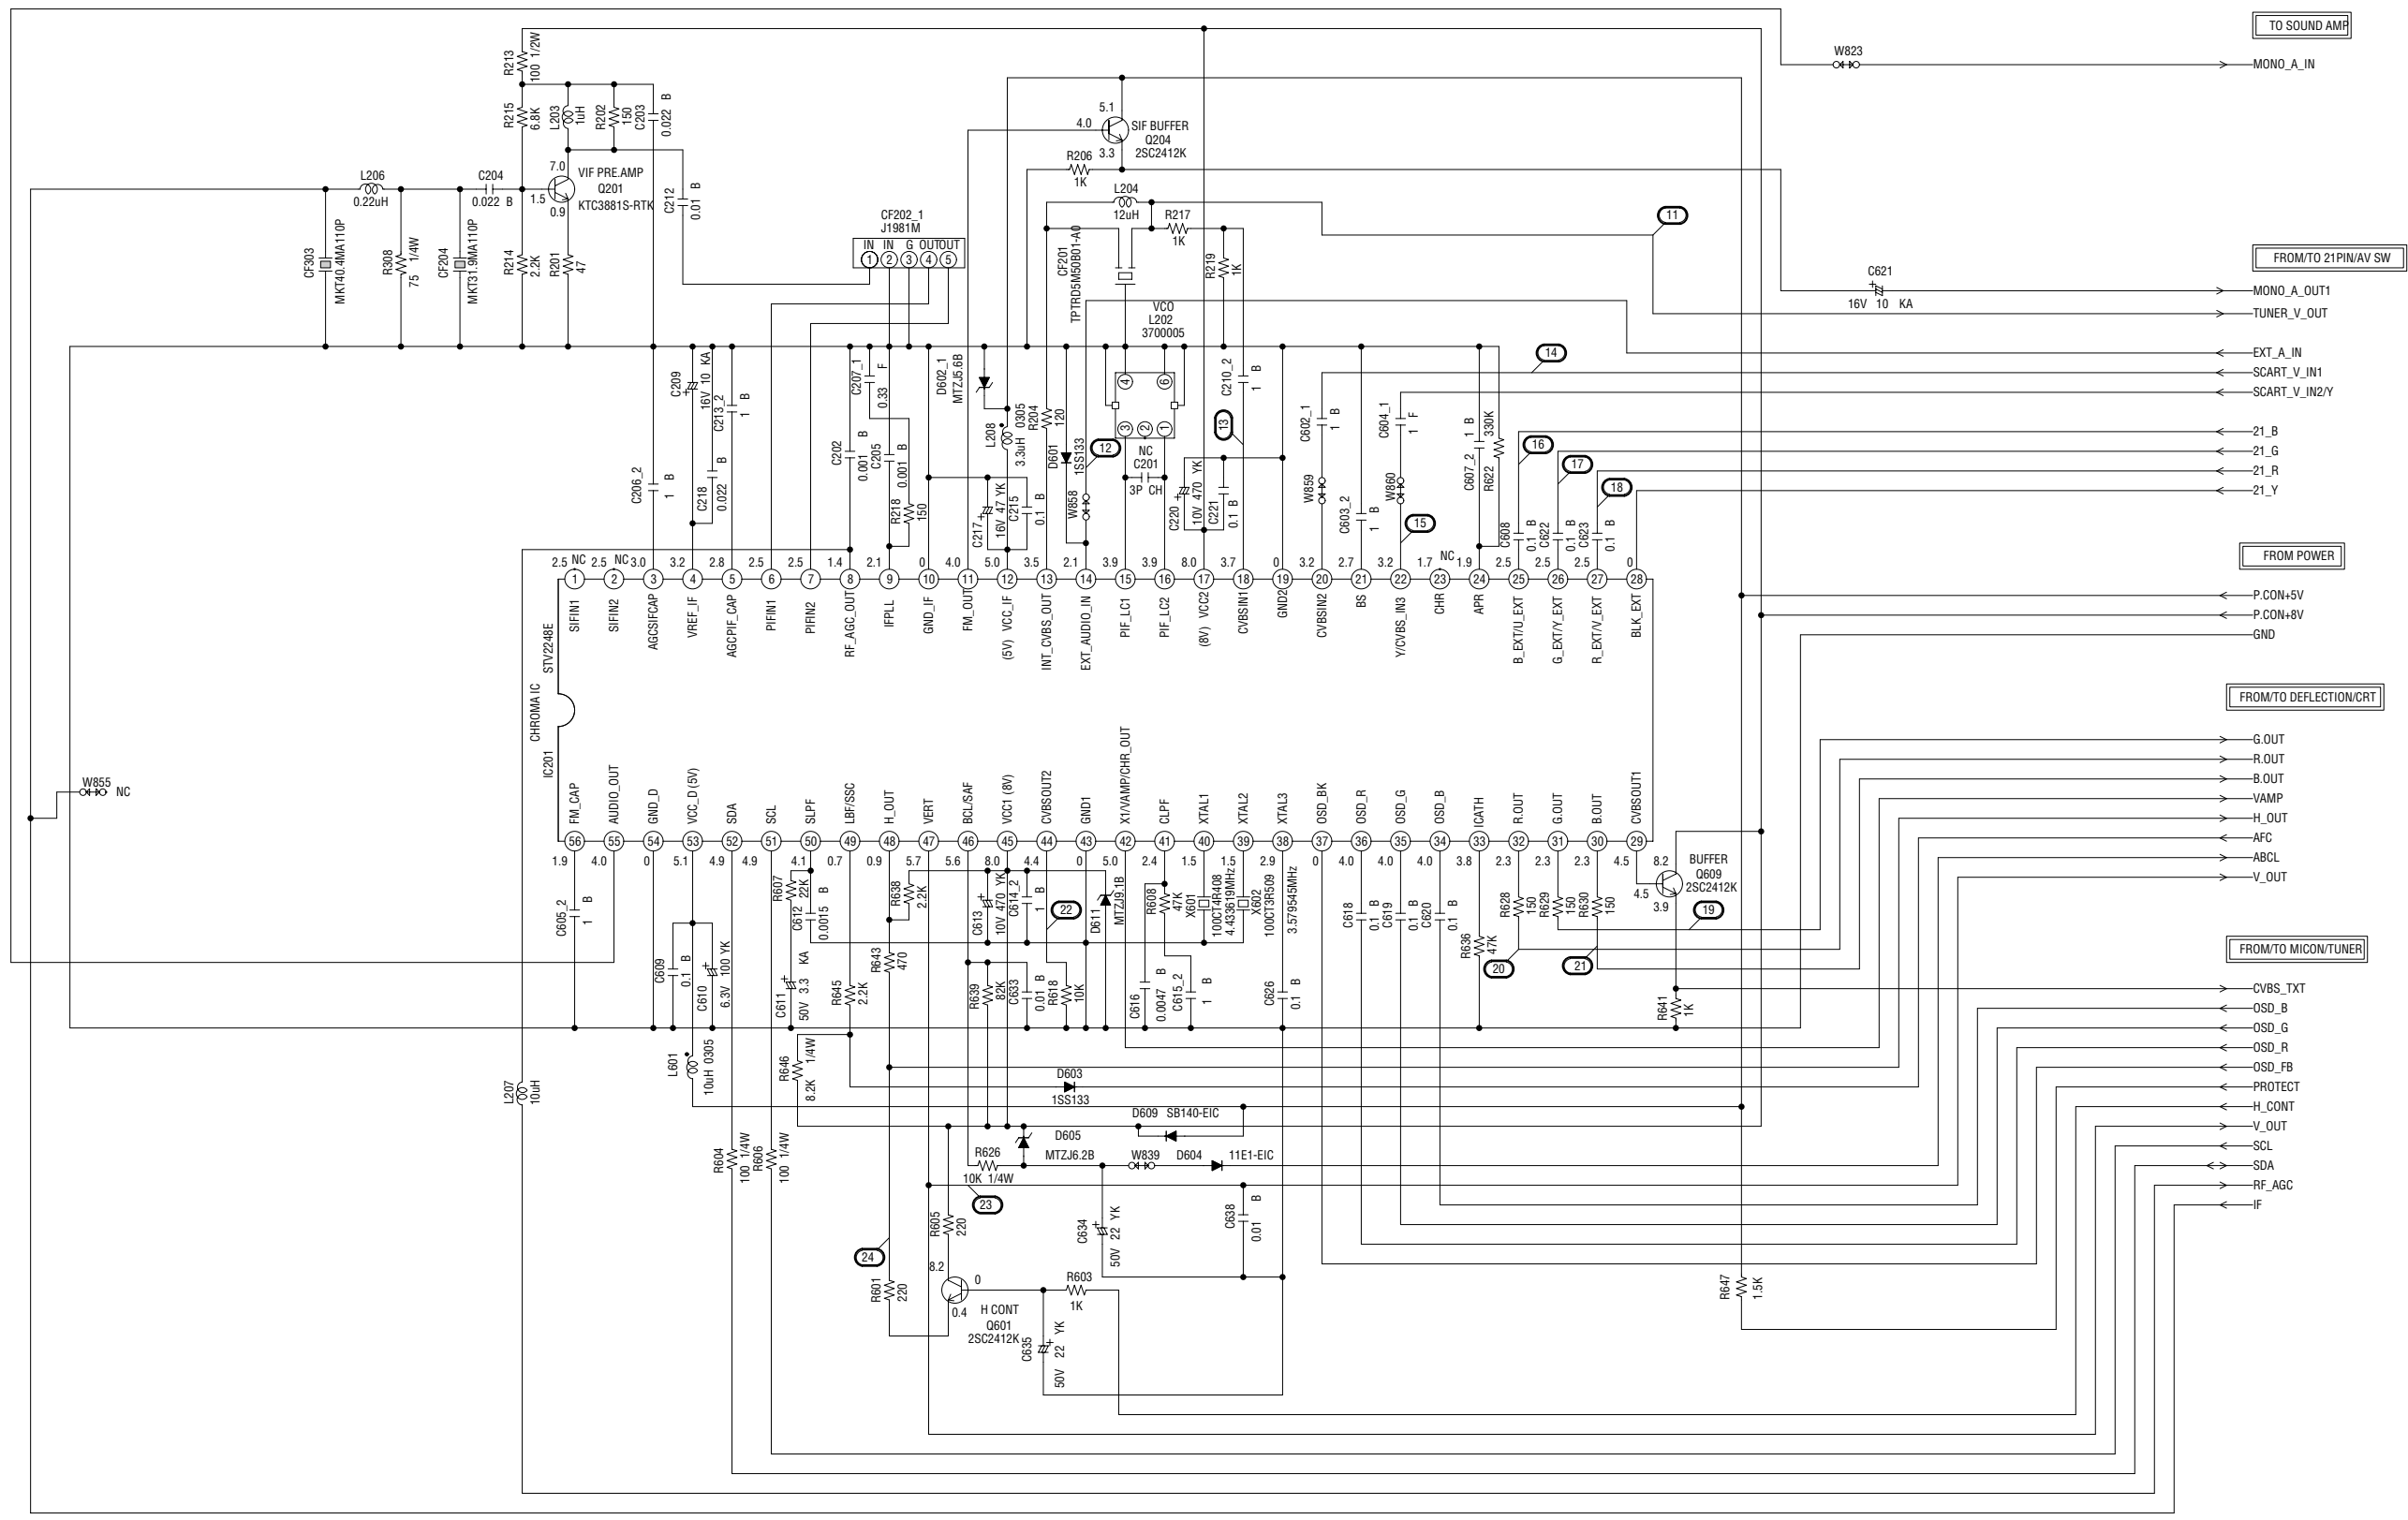


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

PCB010
TMC572

21PIN/AV SW SCHEMATIC DIAGRAM (MAIN PCB)

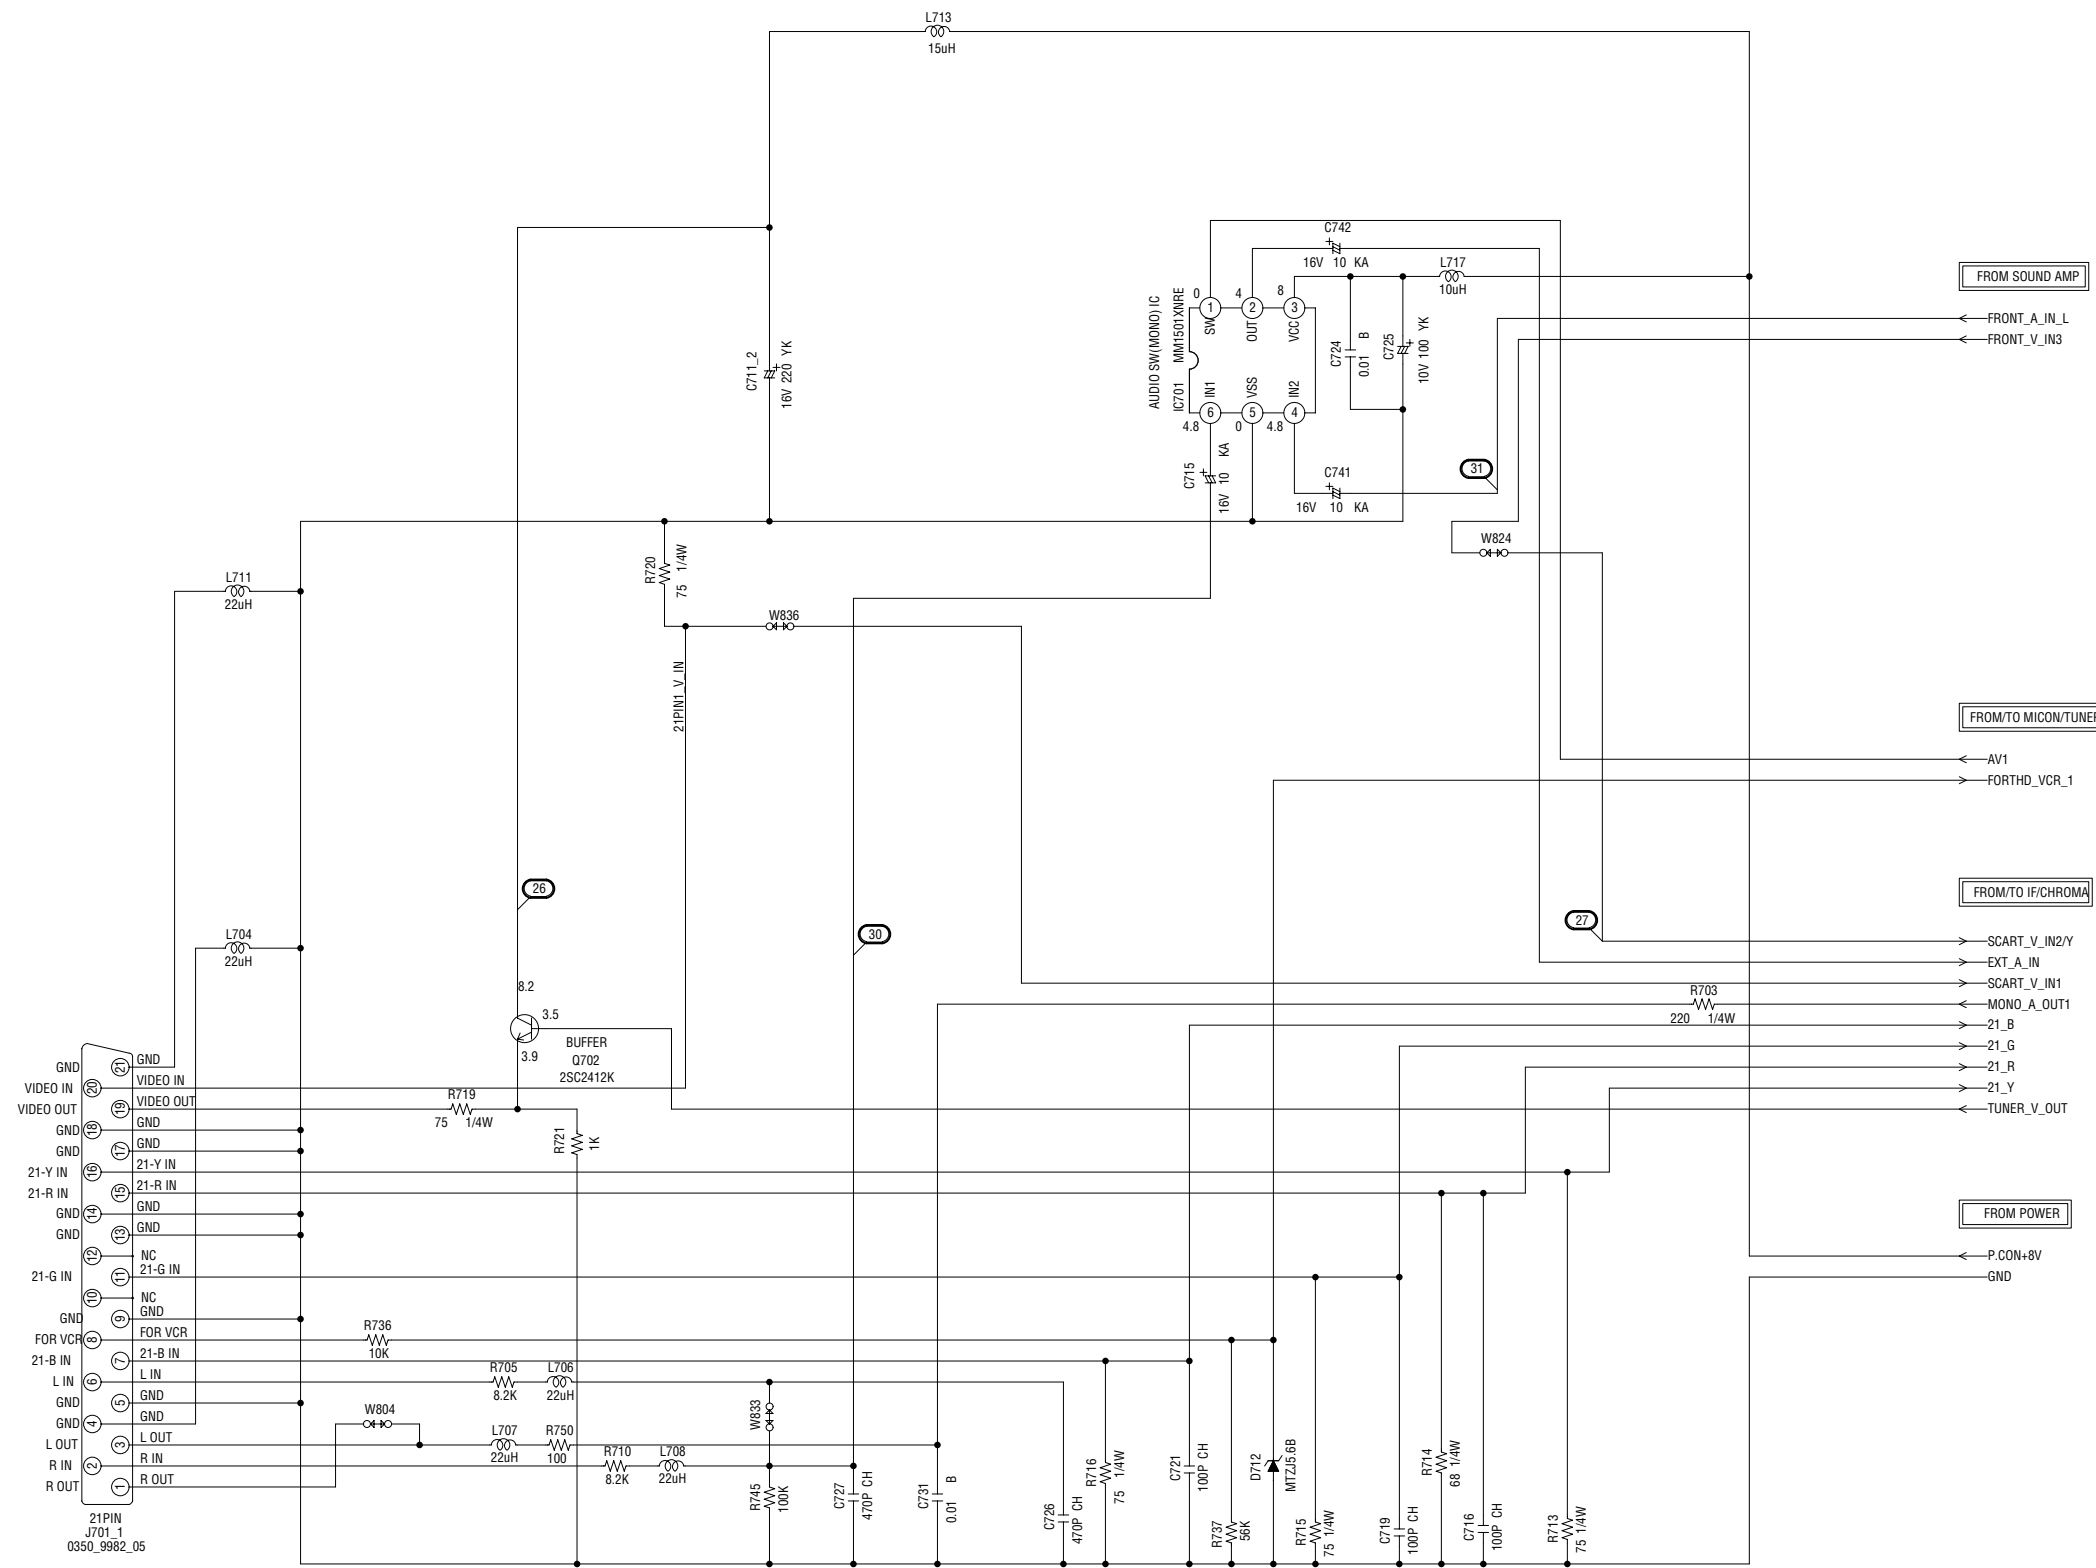


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

PCB010
TMC572


SOUND AMP SCHEMATIC DIAGRAM (MAIN PCB)

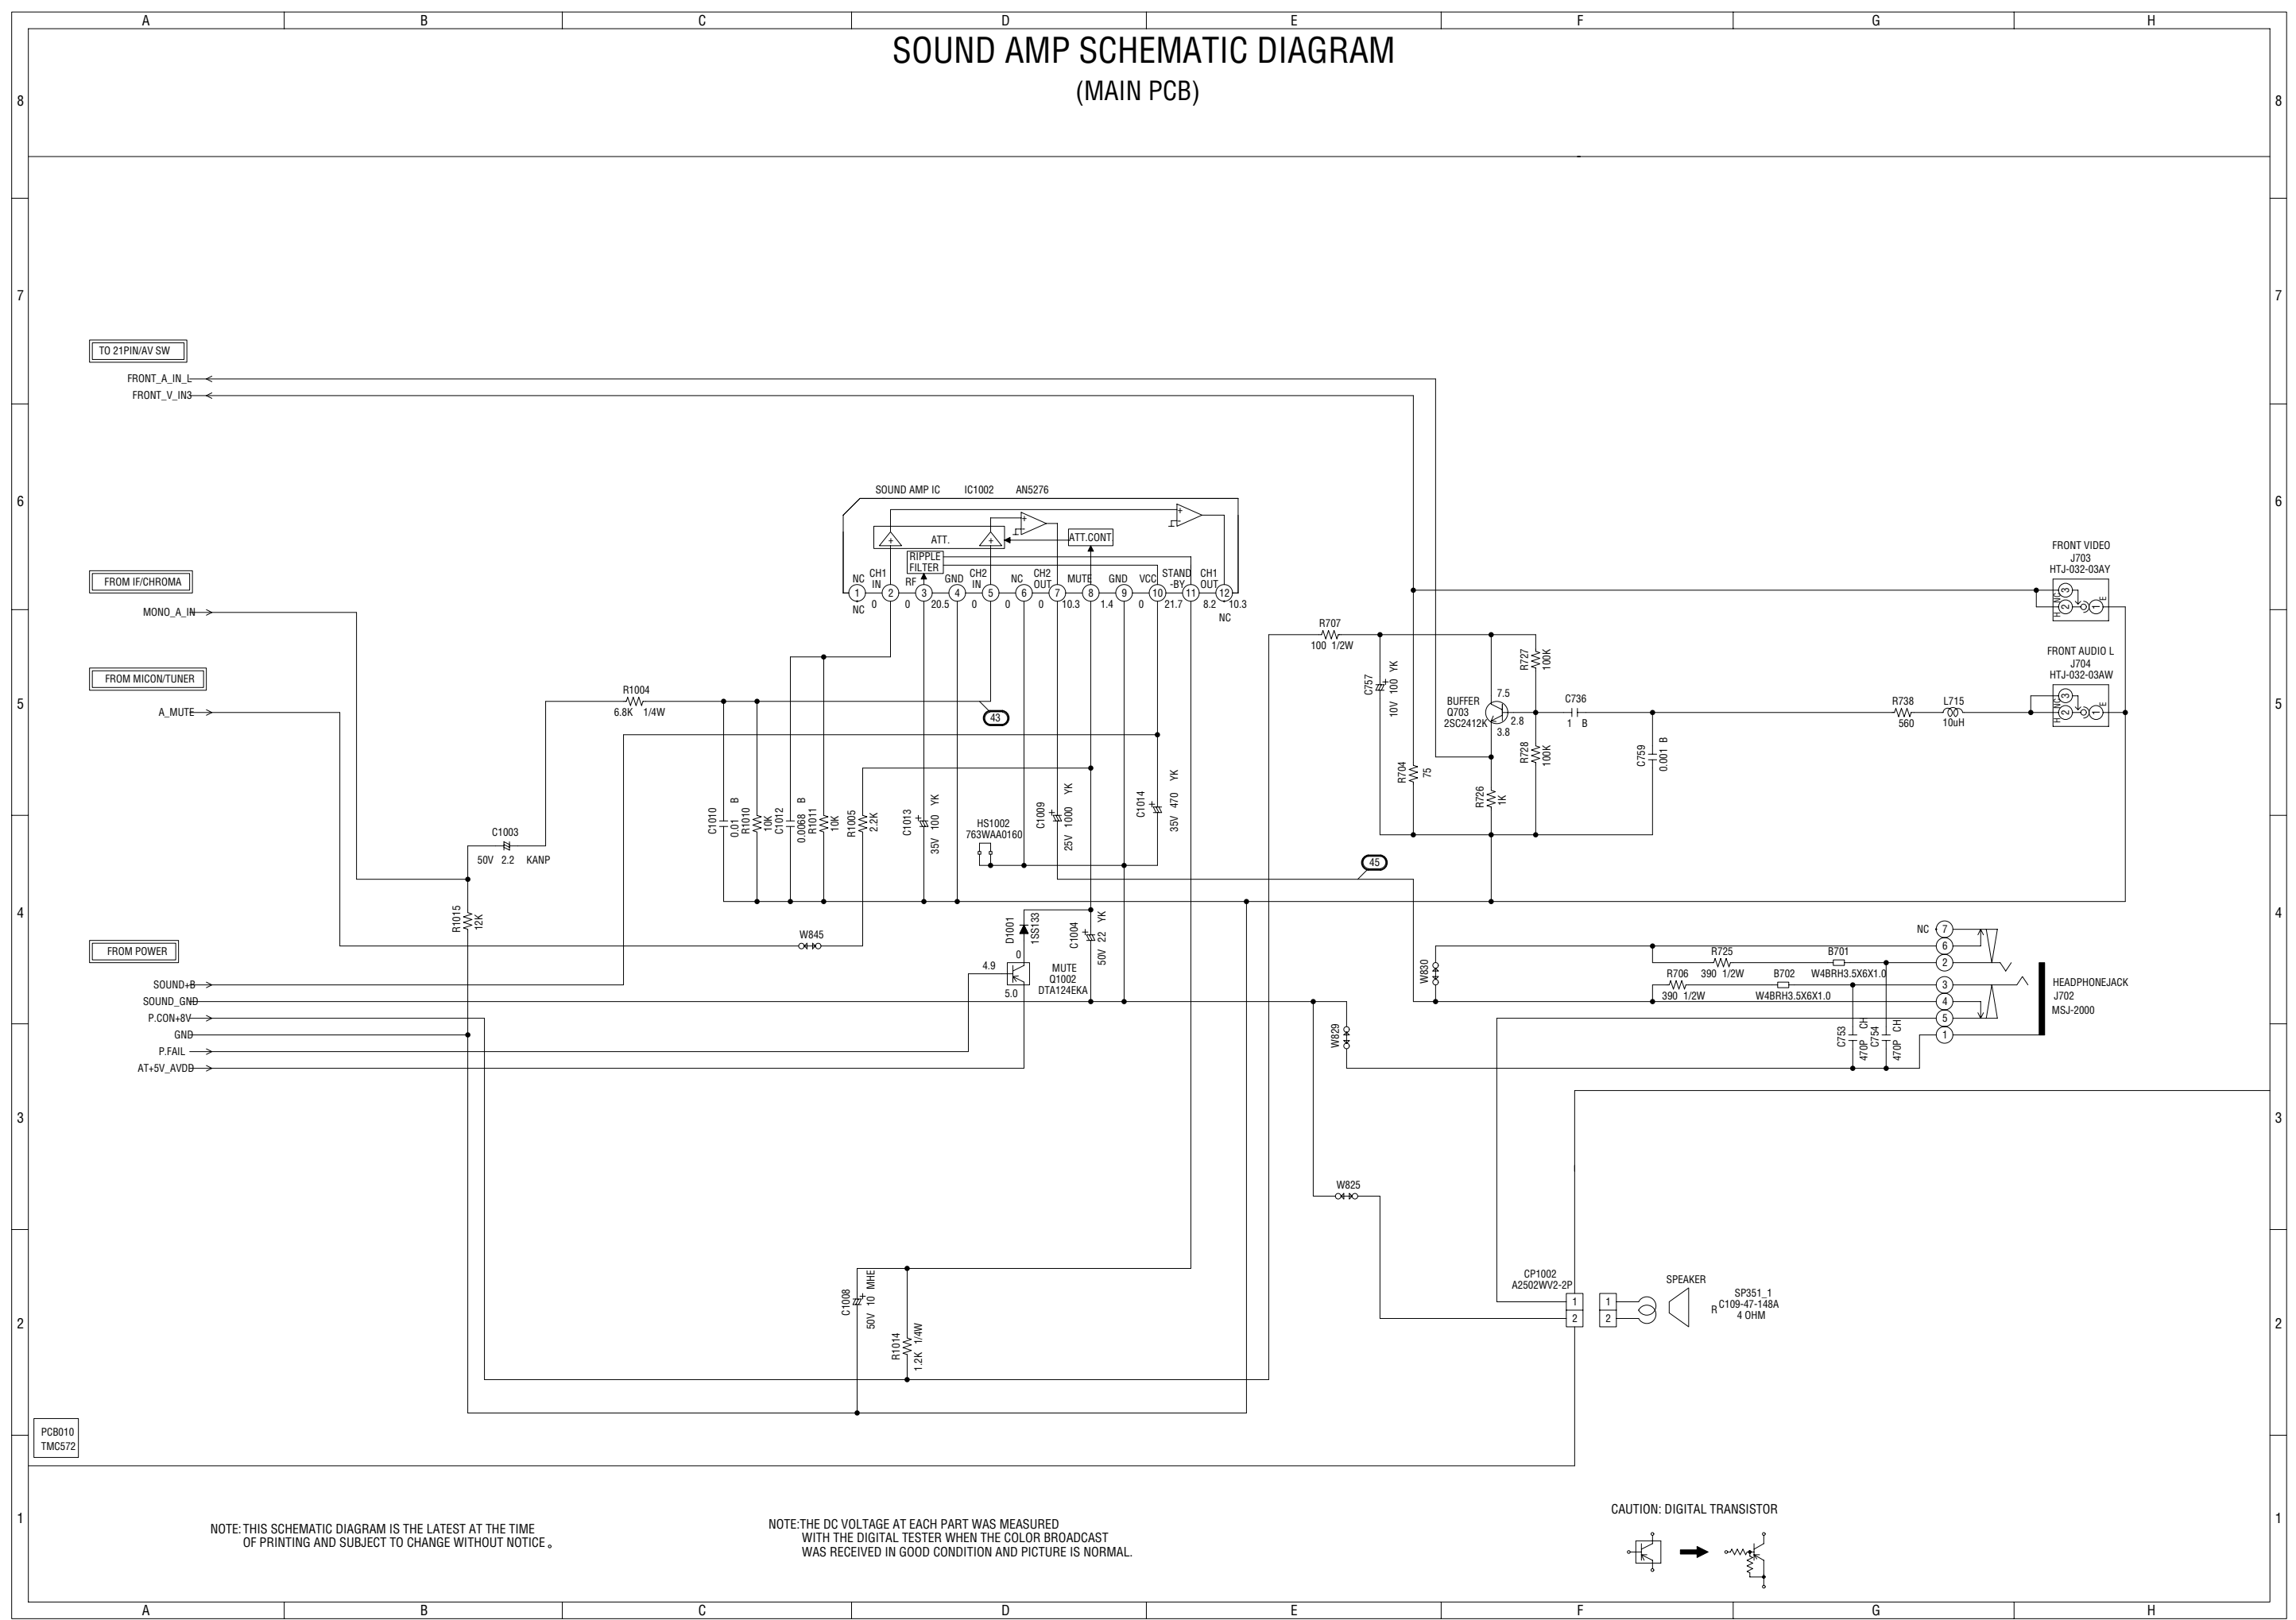


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: DIGITAL TRANSISTOR



DEFLECTION/CRT SCHEMATIC DIAGRAM (MAIN PCB)

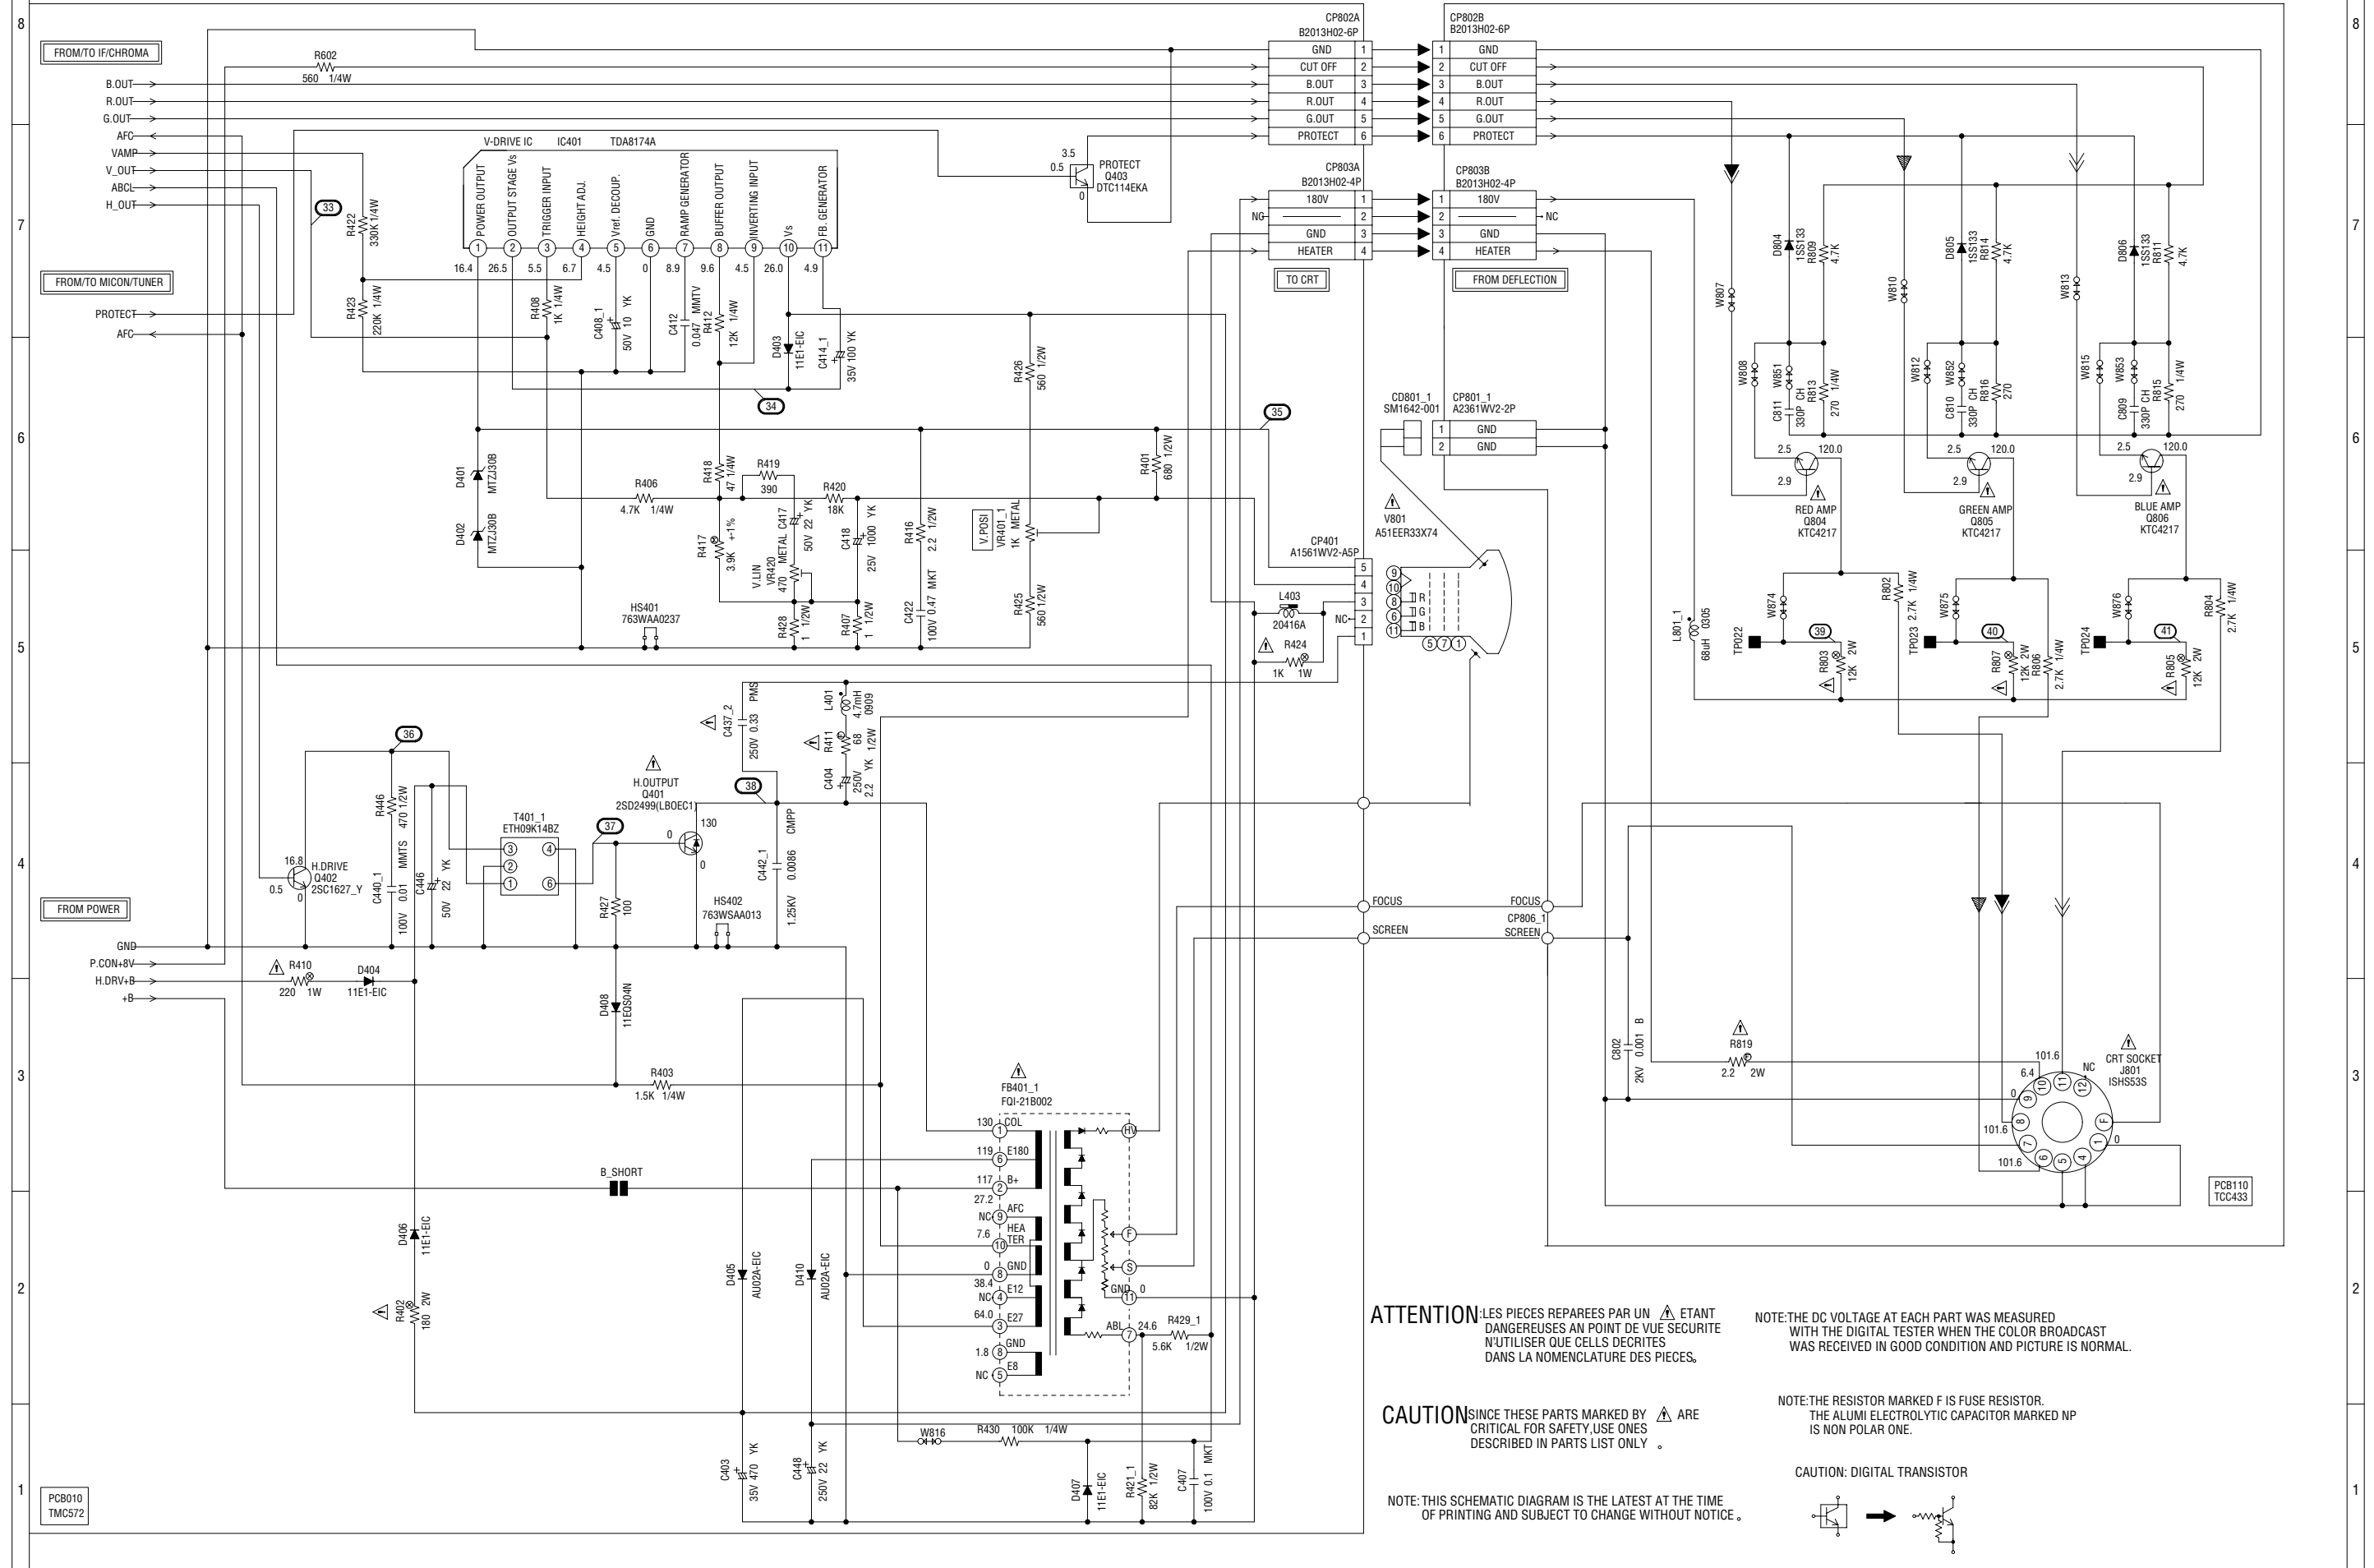

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉGRITÉS DANS LA NOMENCLATURE DES PIÈCES.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


CAUTION: DIGITAL TRANSISTOR



PCB010
TMC572

PCB110
TCC433

POWER SCHEMATIC DIAGRAM (MAIN PCB)

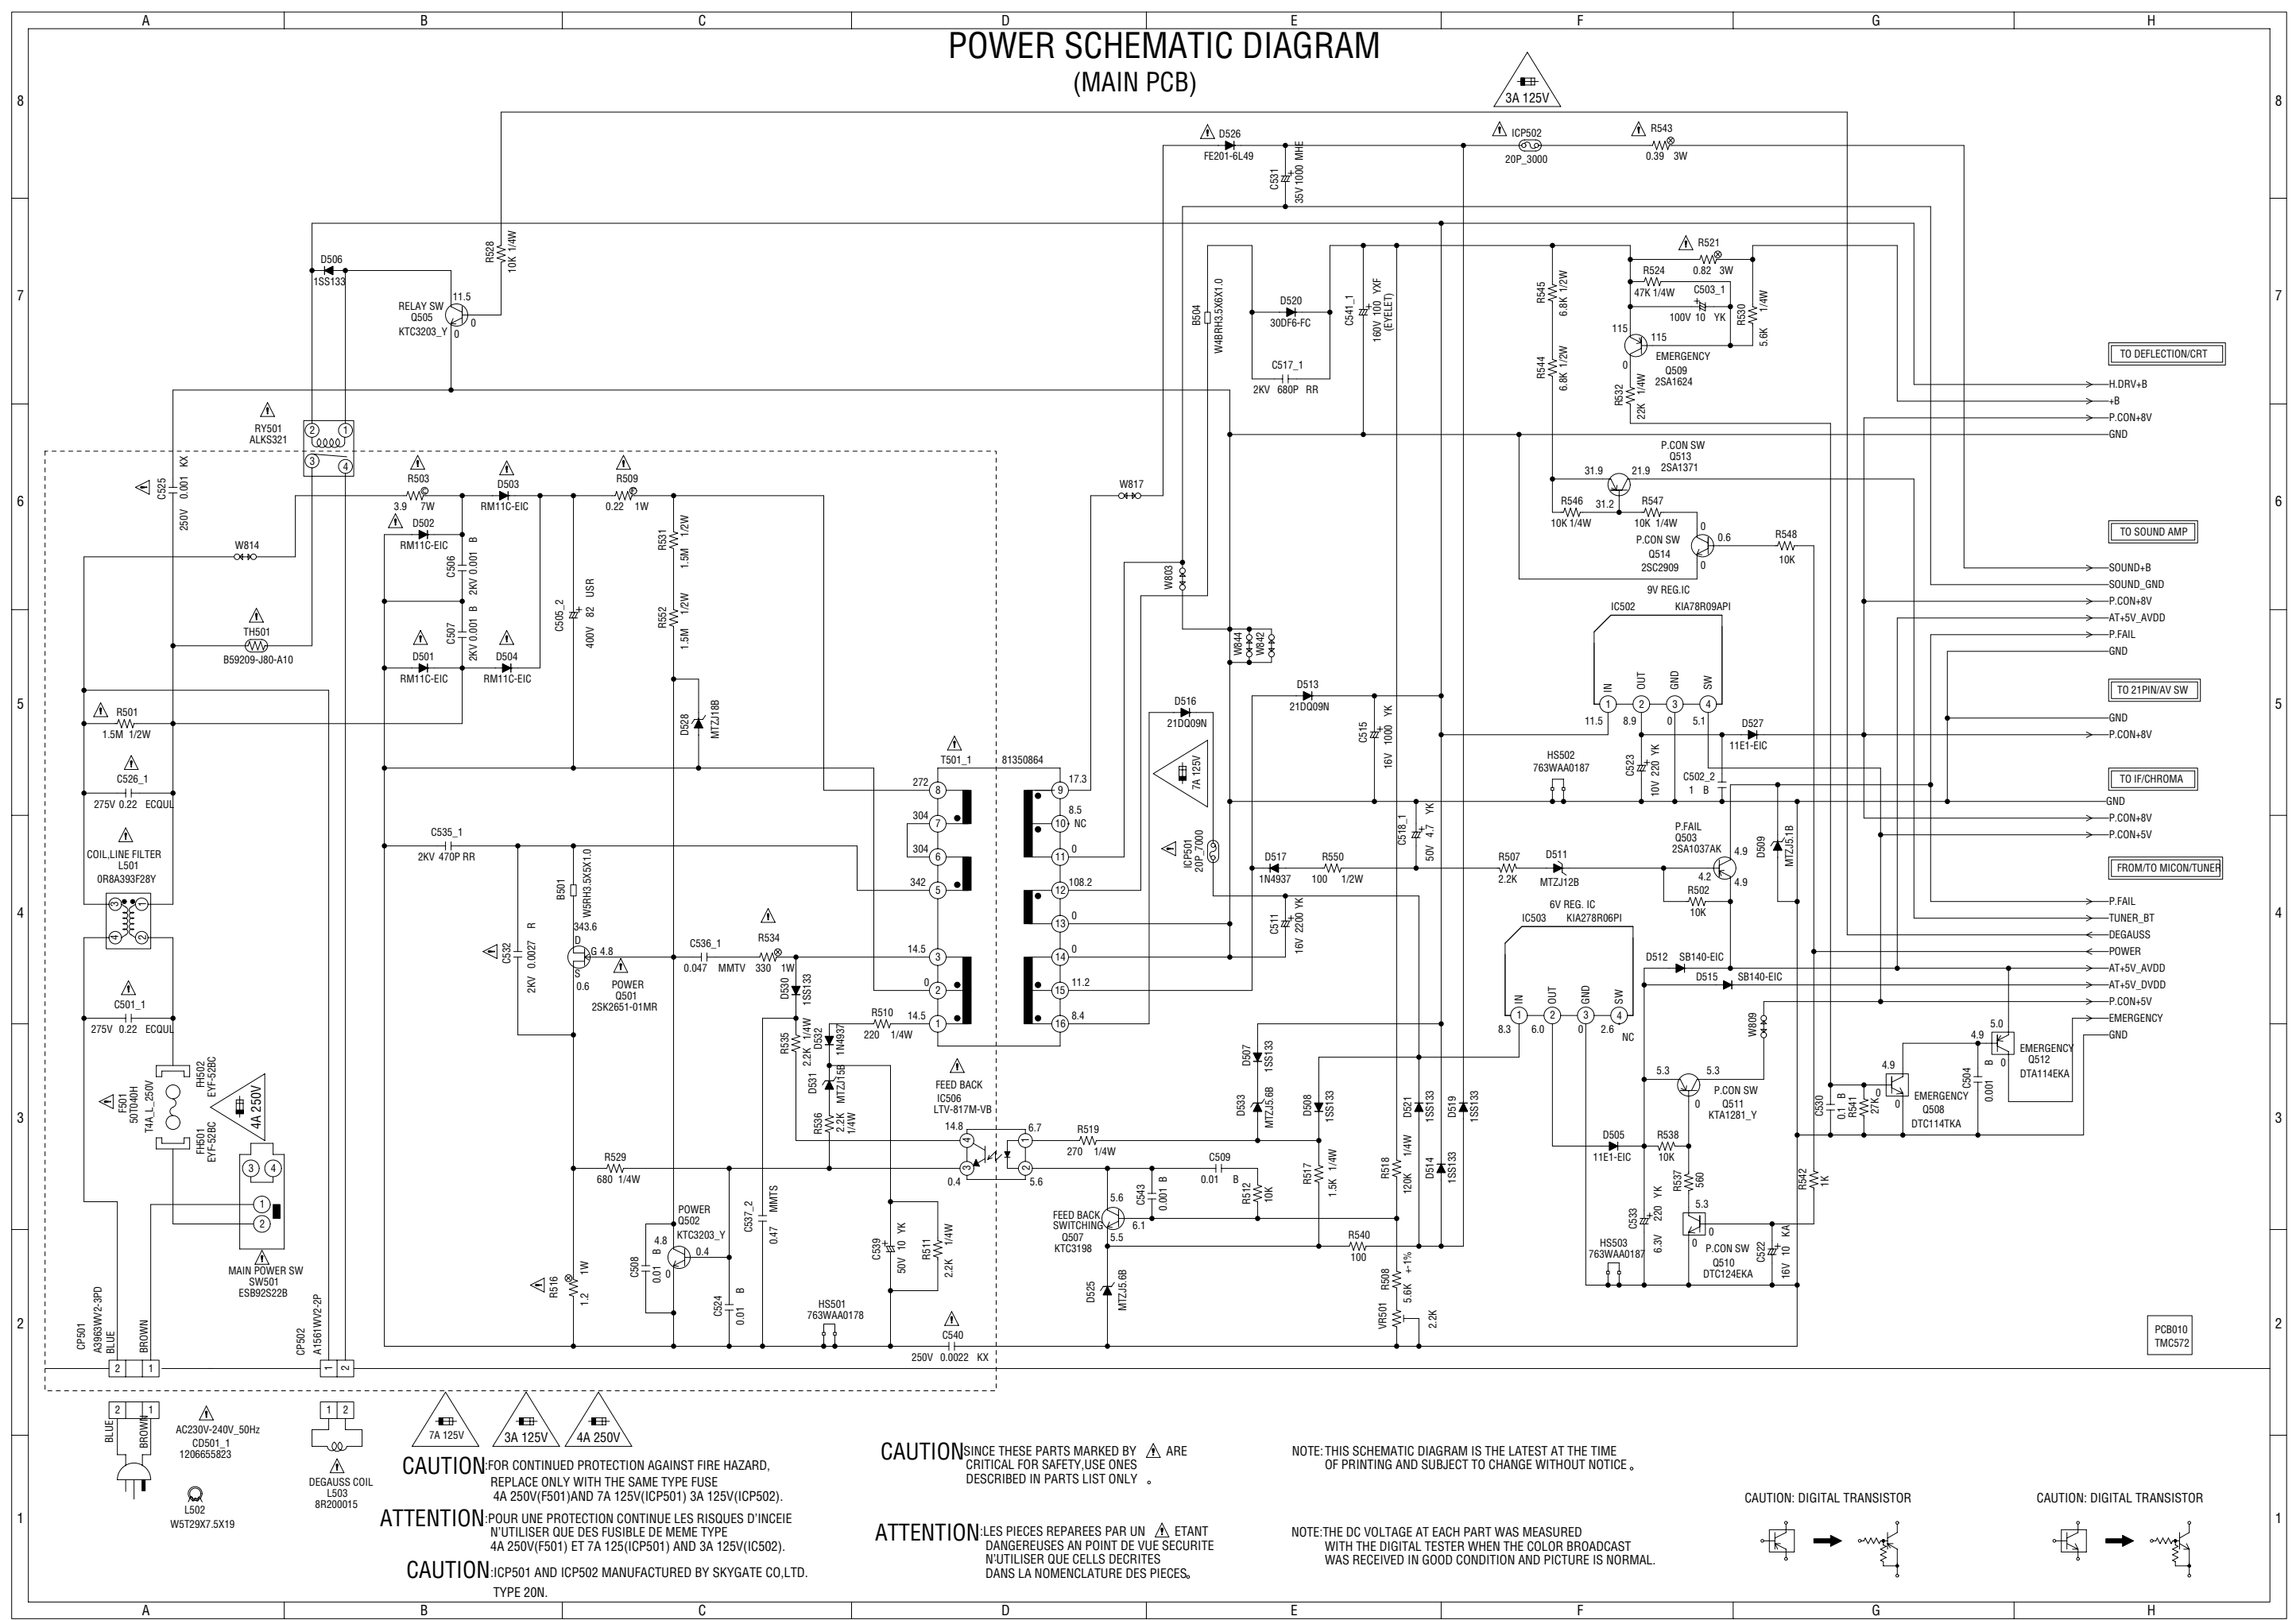

TO DEFLECTION/CRT

H.DRV+B
+B
P.CON+8V
GND

TO SOUND AMP

SOUND+B
SOUND_GND
P.CON+8V
AT+5V_AVDD
P.FAIL
GND

TO 21PIN/AV SW

GND
P.CON+8V


TO IF/CHROMA

GND
P.CON+8V
P.CON+5V

FROM/TO MICON/TUNER

P.FAIL
TUNER_BT
DEGAUSS
POWER
AT+5V_AVDD
AT+5V_DVDD
P.CON+5V
EMERGENCY
GND

PCB010
TMC572

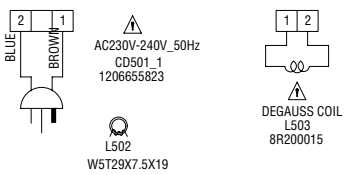

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 4A 250V(F501) AND 7A 125V(ICP501) 3A 125V(ICP502).

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE N'UTILISER QUE DES FUSIBLE DE MEME TYPE 4A 250V(F501) ET 7A 125V(ICP501) AND 3A 125V(IC502).

CAUTION: ICP501 AND ICP502 MANUFACTURED BY SKYGATE CO.,LTD. TYPE 20N.


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: DIGITAL TRANSISTOR













CAUTION: DIGITAL TRANSISTOR








WAVEFORMS

MICON/TUNER


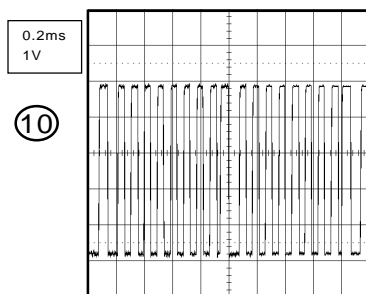
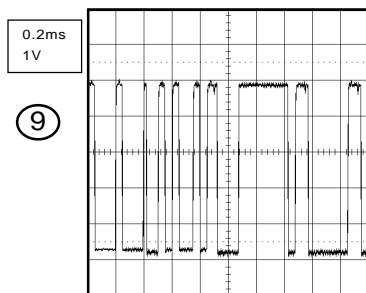
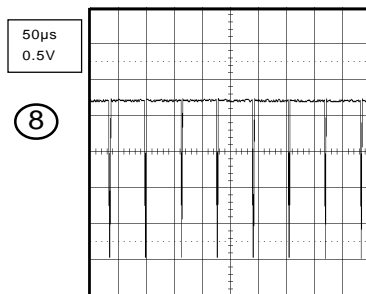
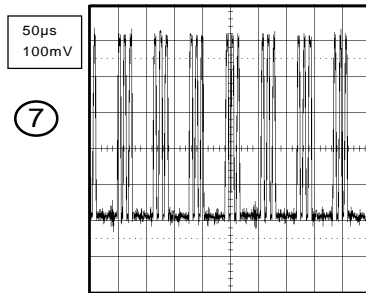
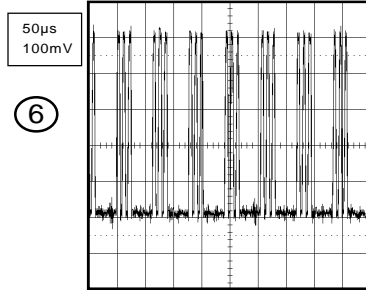
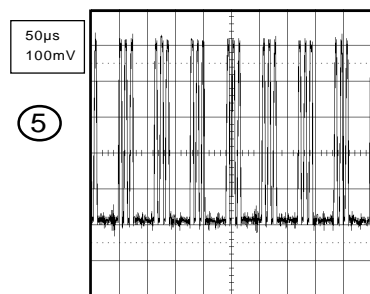
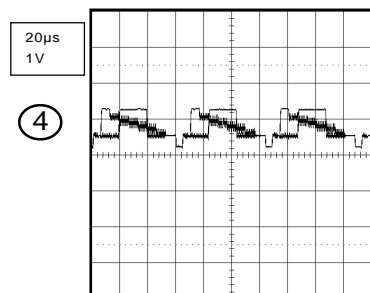
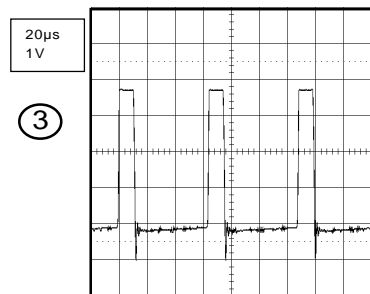
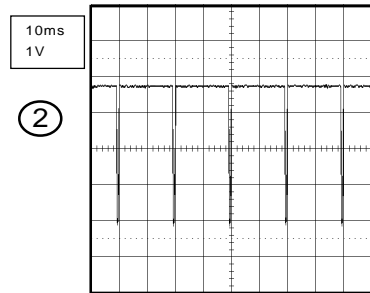
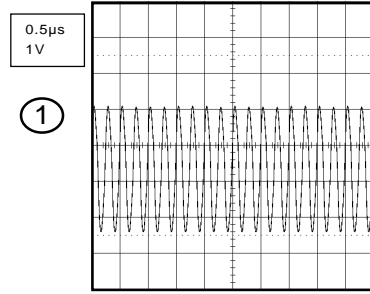


IF/CHROMA

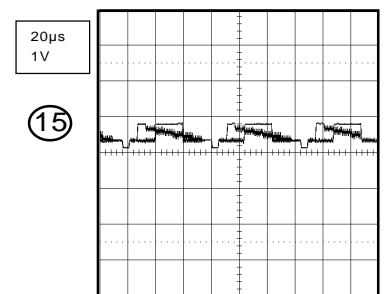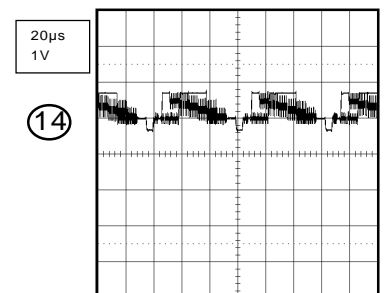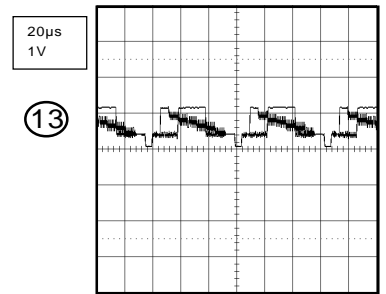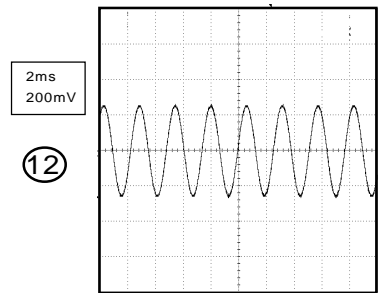
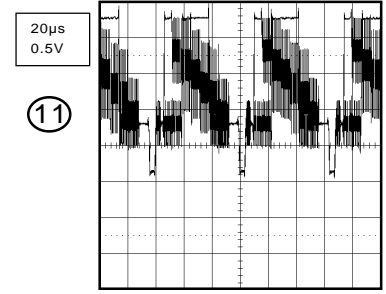


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.



WAVEFORMS

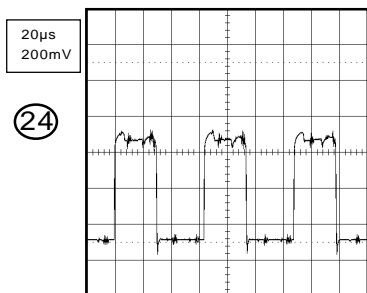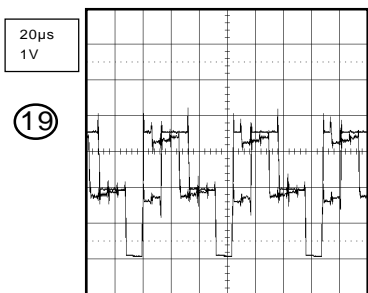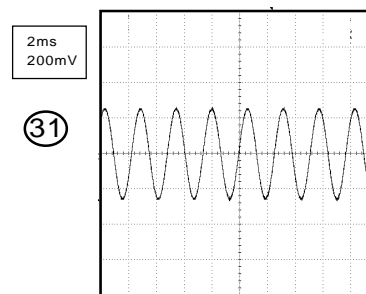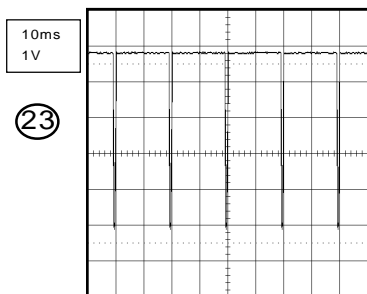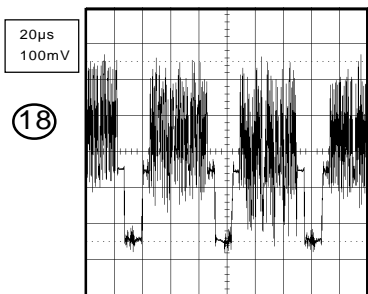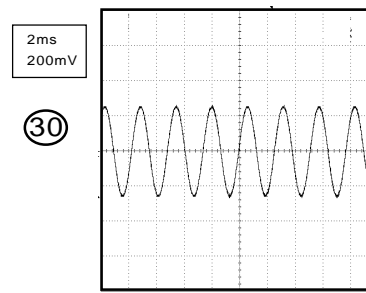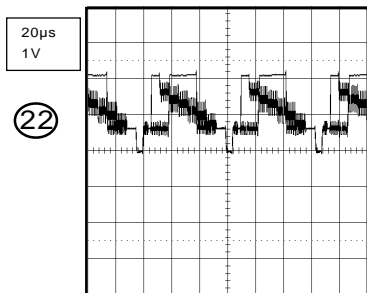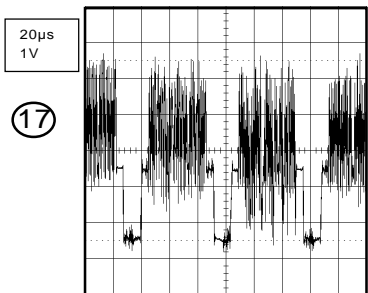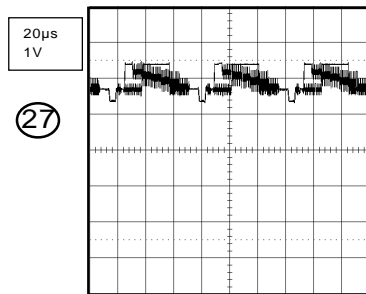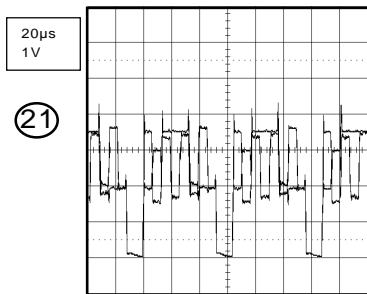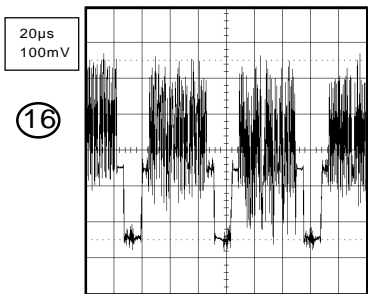

DEFLECTION/CRT








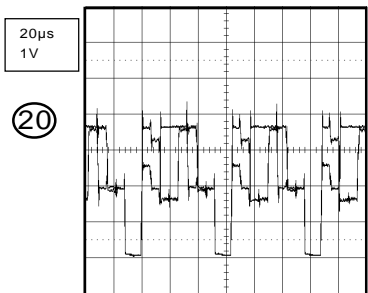
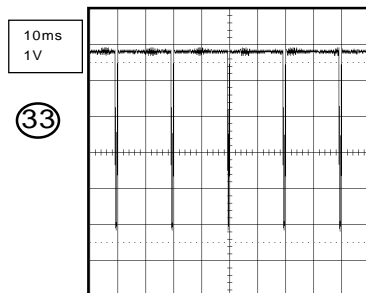


21PIN/AV SW

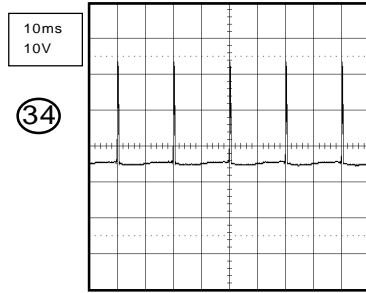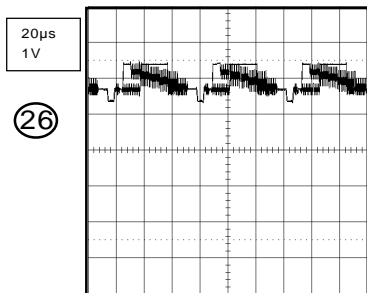

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


WAVEFORMS

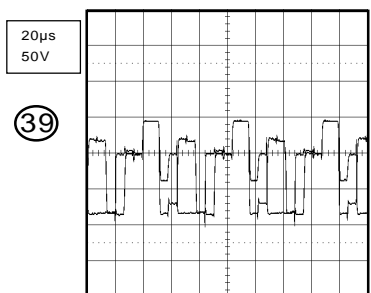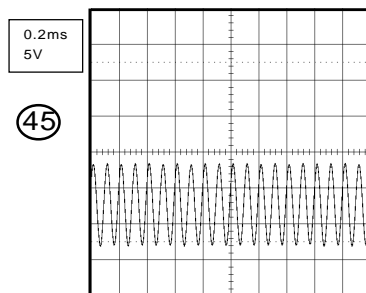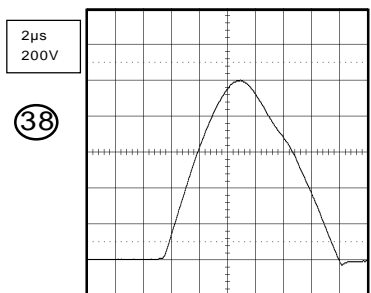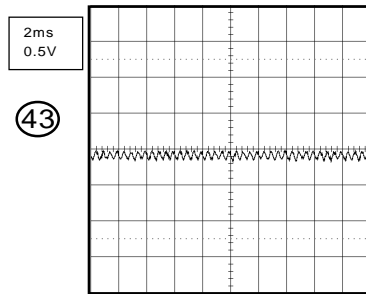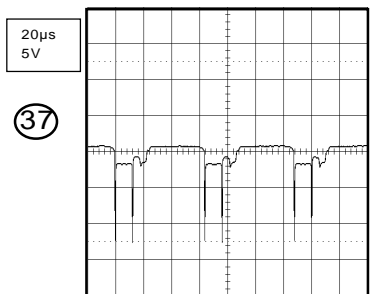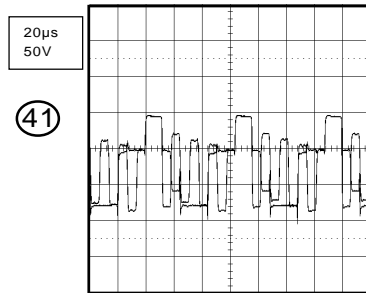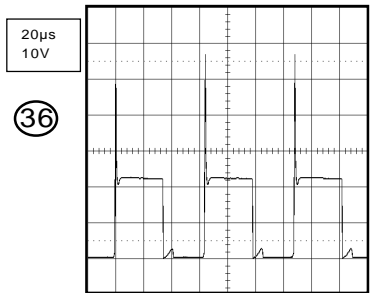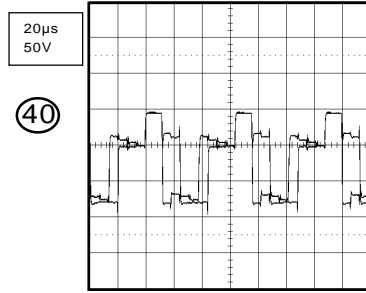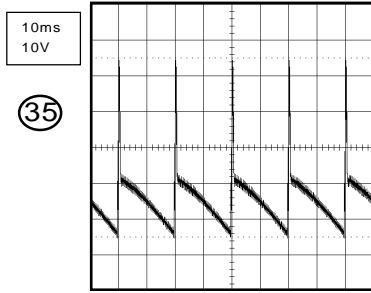

SOUND AMP

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

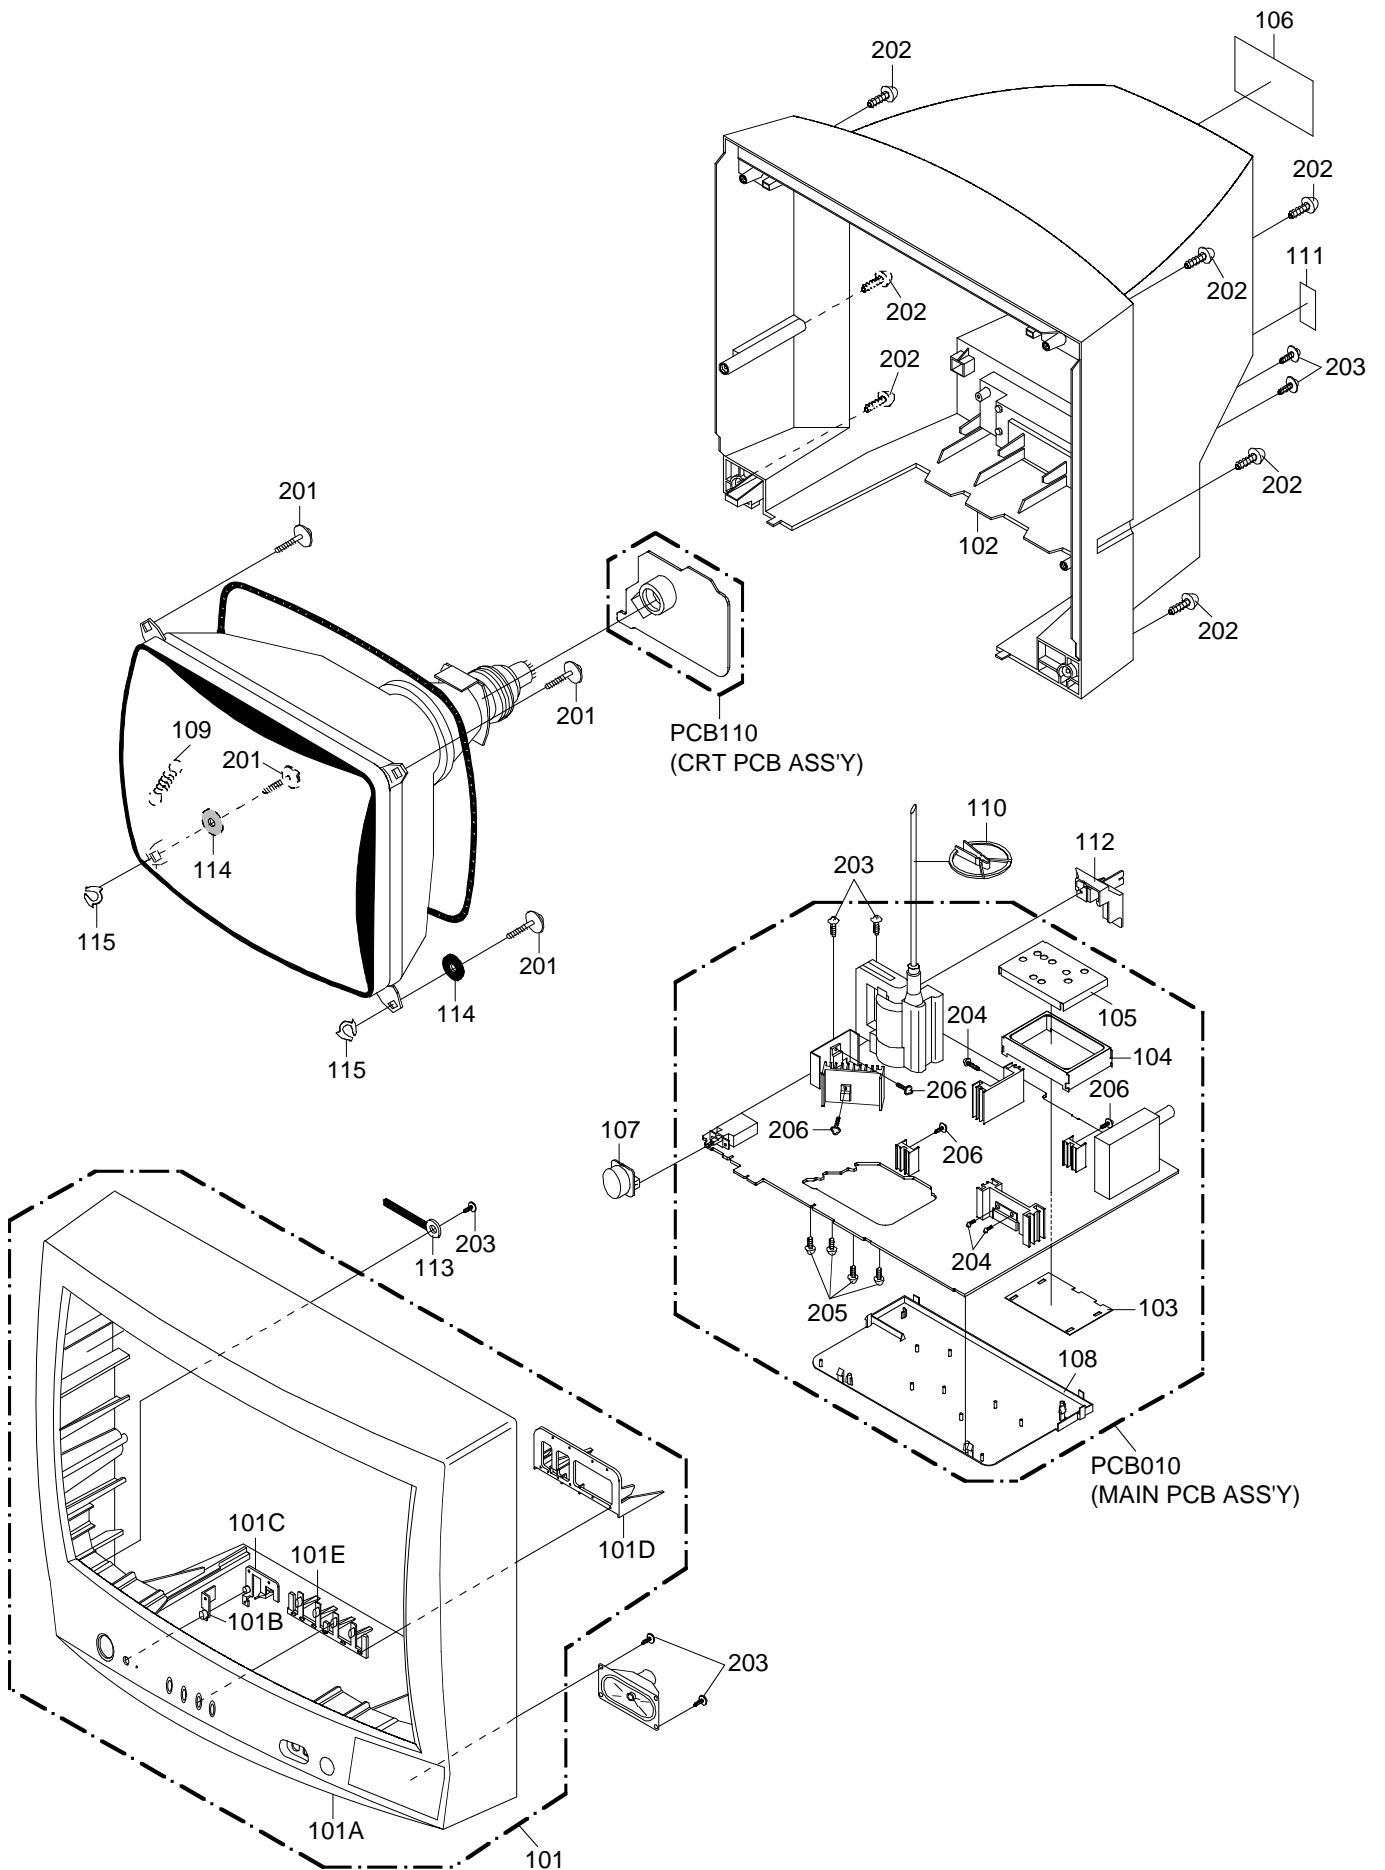

MECHANICAL REPLACEMENT PARTS LIST

Location No.	Part No.	Description	
101	A3M511G720	CABINET,FRONT ASSY	
101A	701WPJC370	CABINET,FRONT	
101B	711WPA0171	PLATE,FRONT	
101C	713WPA0214	GUIDE,REMOCON	
101D	735WPA0667	BUTTON,BASE	
101E	735WPBA659	BUTTON,FRAME	
102	A3M511G740	CABINET,BACK ASSY	
103	752WSAA006	PLATE,SHIELD	
104	752WSAA008	SHIELD,CASE	
105	752WSAA013	SHIELD,LID	
106	722549A240	SHEET,RATING	
107	735WPB0234	BUTTON,POWER	
108	755WPAA016	COVER,PCB	
109	741WUA0001	SPRING,EARTH	
110	899HV3T000	HOLDER,ANODE WIRE	
111	7230007540	SHEET,JACK	
112	761WPAA074	HOLDER,FBT	
113	8995034000	CORD CLIP UL CO.	
114	800WROA003	SHEET,CRT SUPPORT	
115	769WSA0011	WASHER CRT T=0.5	
201	8141J50C54	SCREW,TAP TITE(P) GW22	5x35
202	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16
203	8110630A04	SCREW,TAP TITE(P) BRAZIER	3x10
204	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8
205	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
206	8109130A04	SCREW,TAP TITE(B) WH7	3x10
---	723000C343	SHEET,BAR CODE	
---	791WHA0085	LAMIFILM,BAG	
---	792UHA0171	PACKAGE,TOP	
---	792UHAA048	PACKAGE BOTTOM	
---	793UCDB222	GIFT BOX	
---	A3M511N975	INSTRUCTION BOOK KIT	
---	J3M51101A	INSTRUCTION BOOK	
---	J3M51107A	QUICK SET-UP SHEET	
---	JB5XD200	POLYBAG,INSTRUCTION(REDCAUTION)	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.	RESISTORS	Description
R003	R002T4271J	RC	270 OHM 1/4W
R004	R002T4271J	RC	270 OHM 1/4W
R005	R801R7823J	RC	82K OHM 1/10W
R006	R801R7153J	RC	15K OHM 1/10W
R101	R801R7391J	RC	390 OHM 1/10W
R102	R801R7821J	RC	820 OHM 1/10W
R103	R801R7122J	RC	1.2K OHM 1/10W
R104	R801R7222J	RC	2.2K OHM 1/10W
R105	R801R7103J	RC	10K OHM 1/10W
R106	R801R7103J	RC	10K OHM 1/10W
R107	R801R7102J	RC	1K OHM 1/10W
R108	R801R7271J	RC	270 OHM 1/10W
R109	R002T4222J	RC	2.2K OHM 1/4W
R110	R801R7562J	RC	5.6K OHM 1/10W
R111	R801R7153J	RC	15K OHM 1/10W
R112	R002T4152J	RC	1.5K OHM 1/4W
R113	R801R7562J	RC	5.6K OHM 1/10W
R114	R801R7472J	RC	4.7K OHM 1/10W
R115	R801R7472J	RC	4.7K OHM 1/10W
R116	R801R7103J	RC	10K OHM 1/10W
R120	R801R7472J	RC	4.7K OHM 1/10W
R121	R002T4101J	RC	100 OHM 1/4W
R122	R801R7472J	RC	4.7K OHM 1/10W
R123	R801R7103J	RC	10K OHM 1/10W
R124	R801R7103J	RC	10K OHM 1/10W
R125	R801R7472J	RC	4.7K OHM 1/10W
R126	R801R7470J	RC	47 OHM 1/10W
R128	R801R7101J	RC	100 OHM 1/10W
R129	R801R7101J	RC	100 OHM 1/10W
R131	R801R7104J	RC	100K OHM 1/10W
R132	R801R7561J	RC	560 OHM 1/10W
R133	R801R7103J	RC	10K OHM 1/10W
R134	R801R7103J	RC	10K OHM 1/10W
R136	R002T4152J	RC	1.5K OHM 1/4W
R137	R801R7181J	RC	180 OHM 1/10W
R140	R801R7182J	RC	1.8K OHM 1/10W
R141	R801R7182J	RC	1.8K OHM 1/10W
R142	R801R7182J	RC	1.8K OHM 1/10W
R143	R801R7102J	RC	1K OHM 1/10W
R144	R002T4102J	RC	1K OHM 1/4W
R145	R002T4102J	RC	1K OHM 1/4W
R146	R002T4102J	RC	1K OHM 1/4W
R147	R002T4122J	RC	1.2K OHM 1/4W
R148	R801R7103J	RC	10K OHM 1/10W
R151	R801R7472J	RC	4.7K OHM 1/10W
R152	R002T4101J	RC	100 OHM 1/4W
R201	R801R7470J	RC	47 OHM 1/10W
R202	R801R7151J	RC	150 OHM 1/10W
R204	R801R7121J	RC	120 OHM 1/10W
R206	R801R7102J	RC	1K OHM 1/10W
R213	R002T2101J	RC	100 OHM 1/2W
R214	R801R7222J	RC	2.2K OHM 1/10W
R215	R801R7682J	RC	6.8K OHM 1/10W
R217	R801R7102J	RC	1K OHM 1/10W
R218	R801R7151J	RC	150 OHM 1/10W
R219	R801R7102J	RC	1K OHM 1/10W
R308	R002T4750J	RC	75 OHM 1/4W
R401	R002T2681J	RC	680 OHM 1/2W
△R402	R3X18A181J	R,METAL OXIDE	180 OHM 2W
R403	R002T4152J	RC	1.5K OHM 1/4W
R406	R002T4472J	RC	4.7K OHM 1/4W
R407	R002T2010J	RC	1 OHM 1/2W
R408	R002T4102J	RC	1K OHM 1/4W
△R410	R3X181221J	R,METAL OXIDE	220 OHM 1W
△R411	R635U2680J	R,FUSE	68 OHM 1/2W
R412	R002T4123J	RC	12K OHM 1/4W
R416	R002T22R2J	RC	2.2 OHM 1/2W
R417	R4X5T6392F	R,METAL	3.9K OHM 1/6W
R418	R002T4470J	RC	47 OHM 1/4W
R419	R801R7391J	RC	390 OHM 1/10W
R420	R801R7183J	RC	18K OHM 1/10W
R421	R00202823J	RC	82K OHM 1/2W
	R002T2823J	RC	82K OHM 1/2W
R422	R002T4334J	RC	330K OHM 1/4W
R423	R002T4224J	RC	220K OHM 1/4W
△R424	R3X181102J	R,METAL OXIDE	1K OHM 1W
R425	R002T2561J	RC	560 OHM 1/2W

or

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.	RESISTORS	Description
R426	R002T2561J	RC	560 OHM 1/2W
R427	R801R7101J	RC	100 OHM 1/10W
R428	R002T2010J	RC	1 OHM 1/2W
R429	R002T2562J	RC	5.6K OHM 1/2W
R430	R002T4104J	RC	100K OHM 1/4W
R446	R002T2471J	RC	470 OHM 1/2W
△R501	R002T2155J	RC	1.5M OHM 1/2W
R502	R801R7103J	RC	10K OHM 1/10W
△R503	R5X2AE3R9J	R,CEMENT	3.9 OHM 7W
R507	R801R7222J	RC	2.2K OHM 1/10W
R508	R4X5T6562F	R,METAL	5.6K OHM 1/6W
△R509	R63581R22J	R,FUSE	0.22 OHM 1W
R510	R002T4221J	RC	220 OHM 1/4W
R511	R002T4222J	RC	2.2K OHM 1/4W
R512	R801R7103J	RC	10K OHM 1/10W
△R516	R3X1811R2J	R,METAL OXIDE	1.2 OHM 1W
R517	R002T4152J	RC	1.5K OHM 1/4W
R518	R002T4124J	RC	120K OHM 1/4W
R519	R002T4271J	RC	270 OHM 1/4W
△R521	R3X28BR82J	R,METAL OXIDE	0.82 OHM 3W
R524	R002T4473J	RC	47K OHM 1/4W
R528	R002T4103J	RC	10K OHM 1/4W
R529	R002T4681J	RC	680 OHM 1/4W
R530	R002T4562J	RC	5.6K OHM 1/4W
R531	R002T2155J	RC	1.5M OHM 1/2W
R532	R002T4223J	RC	22K OHM 1/4W
△R534	R3X181331J	R,METAL OXIDE	330 OHM 1W
R535	R002T4222J	RC	2.2K OHM 1/4W
R536	R002T4222J	RC	2.2K OHM 1/4W
R537	R801R7561J	RC	560 OHM 1/10W
R538	R801R7103J	RC	10K OHM 1/10W
R540	R801R7101J	RC	100 OHM 1/10W
R541	R801R7273J	RC	27K OHM 1/10W
R542	R801R7102J	RC	1K OHM 1/10W
△R543	R3X28BR39J	R,METAL OXIDE	0.39 OHM 3W
R544	R002T2682J	RC	6.8K OHM 1/2W
R545	R002T2682J	RC	6.8K OHM 1/2W
R546	R002T4103J	RC	10K OHM 1/4W
R547	R002T4103J	RC	10K OHM 1/4W
R548	R801R7103J	RC	10K OHM 1/10W
R550	R002T2101J	RC	100 OHM 1/2W
R552	R002T2155J	RC	1.5M OHM 1/2W
R601	R801R7221J	RC	220 OHM 1/10W
R602	R002T4561J	RC	560 OHM 1/4W
R603	R801R7102J	RC	1K OHM 1/10W
R604	R002T4101J	RC	100 OHM 1/4W
R605	R801R7221J	RC	220 OHM 1/10W
R606	R002T4101J	RC	100 OHM 1/4W
R607	R801R7223J	RC	22K OHM 1/10W
R608	R801R7473J	RC	47K OHM 1/10W
R618	R801R7103J	RC	10K OHM 1/10W
R622	R801R7334J	RC	330K OHM 1/10W
R626	R002T4103J	RC	10K OHM 1/4W
R628	R801R7151J	RC	150 OHM 1/10W
R629	R801R7151J	RC	150 OHM 1/10W
R630	R801R7151J	RC	150 OHM 1/10W
R636	R801R7473J	RC	47K OHM 1/10W
R638	R801R7222J	RC	2.2K OHM 1/10W
R639	R801R7823J	RC	82K OHM 1/10W
R641	R801R7102J	RC	1K OHM 1/10W
R643	R801R7471J	RC	470 OHM 1/10W
R645	R801R7222J	RC	2.2K OHM 1/10W
R646	R002T4822J	RC	8.2K OHM 1/4W
R647	R801R7152J	RC	1.5K OHM 1/10W
R703	R002T4221J	RC	220 OHM 1/4W
R704	R801R7750J	RC	75 OHM 1/10W
R705	R801R7822J	RC	8.2K OHM 1/10W
R706	R002T2391J	RC	390 OHM 1/2W
R707	R002T2101J	RC	100 OHM 1/2W
R710	R801R7822J	RC	8.2K OHM 1/10W
R713	R002T4750J	RC	75 OHM 1/4W
R714	R002T4680J	RC	68 OHM 1/4W
R715	R002T4750J	RC	75 OHM 1/4W
R716	R002T4750J	RC	75 OHM 1/4W
R719	R002T4750J	RC	75 OHM 1/4W
R720	R00204750J	RC	75 OHM 1/4W
R721	R903N8102J	RC	1K OHM 1/8W

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.	Description
RESISTORS		
R725	R002T2391J RC	390 OHM 1/2W
R726	R801R7102J RC	1K OHM 1/10W
R727	R801R7104J RC	100K OHM 1/10W
R728	R801R7104J RC	100K OHM 1/10W
R736	R801R7103J RC	10K OHM 1/10W
R737	R801R7563J RC	56K OHM 1/10W
R738	R801R7561J RC	560 OHM 1/10W
R745	R801R7104J RC	100K OHM 1/10W
R750	R801R7101J RC	100 OHM 1/10W
R802	R002T4272J RC	2.7K OHM 1/4W
△R803	R3X18A123J R,METAL OXIDE	12K OHM 2W
R804	R002T4272J RC	2.7K OHM 1/4W
△R805	R3X18A123J R,METAL OXIDE	12K OHM 2W
R806	R002T4272J RC	2.7K OHM 1/4W
△R807	R3X18A123J R,METAL OXIDE	12K OHM 2W
R809	R801R7472J RC	4.7K OHM 1/10W
R811	R801R7472J RC	4.7K OHM 1/10W
R813	R002T4271J RC	270 OHM 1/4W
R814	R801R7472J RC	4.7K OHM 1/10W
R815	R002T4271J RC	270 OHM 1/4W
R816	R801R7271J RC	270 OHM 1/10W
△R819	R6358A2R2J R,FUSE	2.2 OHM 2W
R1004	R002T4682J RC	6.8K OHM 1/4W
R1005	R801R7222J RC	2.2K OHM 1/10W
R1010	R801R7103J RC	10K OHM 1/10W
R1011	R801R7103J RC	10K OHM 1/10W
R1014	R002T4122J RC	1.2K OHM 1/4W
R1015	R801R7123J RC	12K OHM 1/10W
CAPACITORS		
C001	CS0RB04H4K CC	0.022 UF 50V B
C002	E02LU0471M CE	470 UF 6.3V
C003	E50HU5010M CE	1 UF 50V
C006	CS0RCH412J CC	100 PF 50V CH
C007	CS0RB0414K CC	0.01 UF 50V B
C101	CS0RCH4U1J CC	68 PF 50V CH
C102	CS0RB0315K CC	0.1 UF 25V B
C103	CS0RCH4H1J CC	22 PF 50V CH
C104	CS0RB04Q3K CC	0.0047UF 50V B
C105	CS0RB0315K CC	0.1 UF 25V B
C106	CS0RB04H4K CC	0.022 UF 50V B
C108	CS0RCH4H1J CC	22 PF 50V CH
C109	CS0RCH4H1J CC	22 PF 50V CH
C111	CS0RF02Q5Z CC	0.47 UF 16V F
C112	CS0RCH4W1J CC	82 PF 50V CH
C113	CS0RCH4H1J CC	22 PF 50V CH
C114	CS0RB0315K CC	0.1 UF 25V B
C115	E02LT0222M CE	2200 UF 6.3V
C116	CS0RB04Q3K CC	0.0047UF 50V B
C118	CS0RB0315K CC	0.1 UF 25V B
C119	CS0RB0315K CC	0.1 UF 25V B
C120	CS0RB0216K CC	1 UF 16V B
C121	E02LU0101M CE	100 UF 6.3V
C122	E50HU2100M CE	10 UF 16V
C125	CS0RCH412J CC	100 PF 50V CH
C126	CS0RCH412J CC	100 PF 50V CH
C127	CS0RCH412J CC	100 PF 50V CH
C128	CS0RCH4E2J CC	150 PF 50V CH
C129	CS0RCH4H2J CC	220 PF 50V CH
C131	E50HU2100M CE	10 UF 16V
C132	CS0RCH431J CC	30 PF 50V CH
C139	CS0RF02Q5Z CC	0.47 UF 16V F
C140	CS0RCH4H2J CC	220 PF 50V CH
C141	CS0RB0315K CC	0.1 UF 25V B
C143	CS0RB0315K CC	0.1 UF 25V B
C201	CS0RCH430C CC	3 PF 50V CH
C202	CS0RB0413K CC	0.001 UF 50V B
C203	CS0RB04H4K CC	0.022 UF 50V B
C204	CS0RB04H4K CC	0.022 UF 50V B
C205	CS0RB0413K CC	0.001 UF 50V B
C206	CS0RB0216K CC	1 UF 16V B
C207	CS0RF04L5Z CC	0.33 UF 50V F
C209	E50HU2100M CE	10 UF 16V
C210	CS0RB0216K CC	1 UF 16V B
C212	CS0RB0414K CC	0.01 UF 50V B
C213	CS0RB0216K CC	1 UF 16V B
C215	CS0RB0315K CC	0.1 UF 25V B
C217	E02LU2470M CE	47 UF 16V

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.	Description
	CAPACITORS	
C218	CS0RB04H4K	CC 0.022 UF 50V B
C220	E02LU1471M	CE 470 UF 10V
C221	CS0RB0315K	CC 0.1 UF 25V B
C403	E02LT4471M	CE 470 UF 35V
C404	E02LTD2R2M	CE 2.2 UF 250V
C407	P235W1104J	CMP 0.1 UF 100V MKT
C408	E02LU5100M	CE 10 UF 50V
C412	P232T0473J	CMPL 0.047 UF 50V MMTV
△C414	E02LU4101M	CE 100 UF 35V
C417	E02LU5220M	CE 22 UF 50V
C418	E02LF3102M	CE 1000 UF 25V
C422	P235W1474J	CMP 0.47 UF 100V MKT
C437	P4J7F3334J	CMPP 0.33 UF 250V PMS
C440	P232W1103J	CMP 0.01 UF 100V MMTS
C442	P4N8FJ862H	CMPP 0.0086UF 1.25KV
△C446	E02LU5220M	CE 22 UF 50V
△C448	E0ELFD220M	CE 22 UF 250V
△C501	P2122B224M	CMP 0.22 UF 275V ECQUL
C502	CS0RB0216K	CC 1 UF 16V B
C503	E02LT8100M	CE 10 UF 100V
C504	CS0RB0413K	CC 0.001 UF 50V B
△C505	E52DHH820M	CE 82 UF 400V
C506	C0JBB0713K	CC 0.001 UF 2KV B
C507	C0JBB0713K	CC 0.001 UF 2KV B
C508	CS0RB0414K	CC 0.01 UF 50V B
C509	CS0RB0414K	CC 0.01 UF 50V B
C511	E02LF2222M	CE 2200 UF 16V
C515	E02LT2102M	CE 1000 UF 16V
C517	C0PLRR7U2K	CC 680 PF 2KV R
C518	E02LU54R7M	CE 4.7 UF 50V
C522	E50HU2100M	CE 10 UF 16V
C523	E02LU1221M	CE 220 UF 10V
C524	CS0RB0414K	CC 0.01 UF 50V B
△C525	CD39E0M13M	CC 0.001 UF 250V
△C526	P2122B224M	CMP 0.22 UF 275V ECQUL
C530	CS0RB0315K	CC 0.1 UF 25V B
△C531	E5EZF4102M	CE 1000 UF 35V
C532	C03LOR7K3K	CC 0.0027UF 2KV R
C533	E02LU0221M	CE 220 UF 6.3V
C535	C0PLRR7Q2K	CC 470 PF 2KV R
C536	P232T0473J	CMPL 0.047 UF 50V MMTV
C537	P232W0474J	CMPL 0.47 UF 50V MMTS
C539	E02LU5100M	CE 10 UF 50V
△C540	CD39E0MH3M	CC 0.0022UF 250V
C541	E62NFB101M	CE 100 UF 160V
C543	CS0RB0413K	CC 0.001 UF 50V B
C602	CS0RB0216K	CC 1 UF 16V B
C603	CS0RB0216K	CC 1 UF 16V B
C604	CS0RF0316Z	CC 1 UF 25V F
C605	CS0RB0216K	CC 1 UF 16V B
C607	CS0RB0216K	CC 1 UF 16V B
C608	CQGTB0415K	CC 0.1 UF 50V B
C609	CS0RB0315K	CC 0.1 UF 25V B
C610	E02LU0101M	CE 100 UF 6.3V
C611	E50HU53R3M	CE 3.3 UF 50V
C612	CS0RB04E3K	CC 0.0015UF 50V B
C613	E02LU1471M	CE 470 UF 10V
C614	CS0RB0216K	CC 1 UF 16V B
C615	CS0RB0216K	CC 1 UF 16V B
C616	CS0RB04Q3K	CC 0.0047UF 50V B
C618	CQGTB0415K	CC 0.1 UF 50V B
C619	CS0RB0315K	CC 0.1 UF 25V B
C620	CQGTB0415K	CC 0.1 UF 50V B
C621	E50HU2100M	CE 10 UF 16V
C622	CQGTB0415K	CC 0.1 UF 50V B
C623	CS0RB0315K	CC 0.1 UF 25V B
C626	CS0RB0315K	CC 0.1 UF 25V B
C633	CS0RB0414K	CC 0.01 UF 50V B
C634	E02LU5220M	CE 22 UF 50V
C635	E02LU5220M	CE 22 UF 50V
C638	CQGTB0414K	CC 0.01 UF 50V B
C711	E02LU2221M	CE 220 UF 16V
C715	E50HU2100M	CE 10 UF 16V
C716	CS0RCH412J	CC 100 PF 50V CH
C719	CS0RCH412J	CC 100 PF 50V CH
C721	CS0RCH412J	CC 100 PF 50V CH
C724	CS0RB0414K	CC 0.01 UF 50V B

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.	Description
CAPACITORS		
C725	E02LU1101M	100 UF 10V
C726	CS0RCH4Q2J	470 PF 50V CH
C727	CS0RCH4Q2J	470 PF 50V CH
C731	CS0RB0414K	0.01 UF 50V B
C736	CS0RB0216K	1 UF 16V B
C741	E50HU2100M	10 UF 16V
C742	E50HU2100M	10 UF 16V
C753	CS0RCH4Q2J	470 PF 50V CH
C754	CQGTCH4Q2J	470 PF 50V CH
C757	E02LU1101M	100 UF 10V
C759	CS0RB0413K	0.001 UF 50V B
C802	C0JBB0713K	0.001 UF 2KV B
C809	CQGTCH4L2J	330 PF 50V CH
C810	CS0RCH4L2J	330 PF 50V CH
C811	CQGTCH4L2J	330 PF 50V CH
C1003	E00NU52R2M	2.2 UF 50V
C1004	E02LU5220M	22 UF 50V
C1008	E5EZU5100M	10 UF 50V
C1009	E02LF3102M	1000 UF 25V
C1010	CS0RB0414K	0.01 UF 50V B
C1012	CS0RB04U3K	0.0068UF 50V B
C1013	E02LU4101M	100 UF 35V
C1014	E02LT4471M	470 UF 35V
DIODES		
D001	D97U03301B	DIODE,ZENER MTZJ33B T-77
D101	0021721150	LED SLR-342VCT32
D102	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77
D103	0021E5Q210	LED LTL-1CHGE-002A
D108	D1VT001330	DIODE,SILICON 1SS133T-77
D401	D97U03001B	DIODE,ZENER MTZJ30B T-77
D402	D97U03001B	DIODE,ZENER MTZJ30B T-77
D403	D2WT011E10	DIODE,SILICON 11E1-EIC
D404	D2WT011E10	DIODE,SILICON 11E1-EIC
△ D405	D2WTAU02A0	DIODE,SILICON AU02A-EIC
D406	D2WT011E10	DIODE,SILICON 11E1-EIC
D407	D2WT011E10	DIODE,SILICON 11E1-EIC
D408	D28XQS04N0	DIODE,SCHOTTKY 11EQS04N-TA2B5
△ D410	D2WTAU02A0	DIODE,SILICON AU02A-EIC
△ D501	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D502	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D503	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D504	D2WTRM11C0	DIODE,SILICON RM11C-EIC
D505	D2WT011E10	DIODE,SILICON 11E1-EIC
D506	D1VT001330	DIODE,SILICON 1SS133T-77
D507	D1VT001330	DIODE,SILICON 1SS133T-77
D508	D1VT001330	DIODE,SILICON 1SS133T-77
D509	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77
D511	D97U01201B	DIODE,ZENER MTZJ12B T-77
D512	D2WXS1400	DIODE,SCHOTTKY SB140-EIC
D513	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
D514	D1VT001330	DIODE,SILICON 1SS133T-77
D515	D2WXS1400	DIODE,SCHOTTKY SB140-EIC
D516	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
D517	D2WXN49370	DIODE,SILICON 1N4937
D519	D1VT001330	DIODE,SILICON 1SS133T-77
D520	D28F30DF60	DIODE,RECTIFIER 30DF6-FC
D521	D1VT001330	DIODE,SILICON 1SS133T-77
D525	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
△ D526	D2CF2016L0	DIODE,SILICON FE201-6L49
D527	D2WT011E10	DIODE,SILICON 11E1-EIC
D528	D97U01801B	DIODE,ZENER MTZJ18B T-77
D530	D1VT001330	DIODE,SILICON 1SS133T-77
D531	D97U01501B	DIODE,ZENER MTZJ15B T-77
D532	D2WXN49370	DIODE,SILICON 1N4937
D533	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D601	D1VT001330	DIODE,SILICON 1SS133T-77
D602	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D603	D1VT001330	DIODE,SILICON 1SS133T-77
D604	D2WT011E10	DIODE,SILICON 11E1-EIC
D605	D97U06R21B	DIODE,ZENER MTZJ6.2B T-77
D609	D2WXS1400	DIODE,SCHOTTKY SB140-EIC
D611	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D712	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D804	D1VT001330	DIODE,SILICON 1SS133T-77
D805	D1VT001330	DIODE,SILICON 1SS133T-77
D806	D1VT001330	DIODE,SILICON 1SS133T-77
D1001	D1VT001330	DIODE,SILICON 1SS133T-77

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.	ICS	Description
		ICS	
	IC101	I5PD0F013B	OECF013B
	IC102	I9UF032310	PST3231NR
	IC199	A3M511N015	S-24C16AFJA-TB-01
	IC201	I0WDE2248E	STV2248E
△	IC401	I0WTD81740	TDA8174A
	IC502	I1KA98R09A	KIA78R09API
	IC503	I1KA98R060	KIA278R06PI
△	IC506	0002E00610	PHOTO COUPLER LTV-817M-VB
	IC701	I0UF015010	MM1501XNRE
	IC1002	I0FSP52760	AN5276
		TRANSISTORS	
	Q102	T6YJ1037K0	TRANSISTOR,SILICON 2SA1037AKT146R,S
	Q103	T6YJ1037K0	TRANSISTOR,SILICON 2SA1037AKT146R,S
	Q201	T8AA03881S	TRANSISTOR,SILICON KTC3881S-RTK
	Q204	T8YJ2412K0	TRANSISTOR,SILICON 2SC2412KT146 R,S
	Q401	TUUU024990	TRANSISTOR,SILICON 2SD2499(LB0EC1)
	Q402	TC5T01627Y	TRANSISTOR,SILICON 2SC1627_Y(TPE2)
	Q403	TNYJB05001	COMPOUND TRANSISTOR DTC114EKAT146
△	Q501	T41F026510	TRANSISTOR,FIELD EFFECT 2SK2651-01MR
△	Q502	TCAT032034	TRANSISTOR,SILICON KTC3203_Y-AT
	Q503	T6YJ1037K0	TRANSISTOR,SILICON 2SA1037AKT146R,S
	Q505	TCAT032034	TRANSISTOR,SILICON KTC3203_Y-AT
	Q507	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
	Q508	TNYJJ05001	COMPOUND TRANSISTOR DTC114TKAT146
	Q509	TA3T016240	TRANSISTOR,SILICON 2SA1624-AA
	Q510	TNYJC05001	COMPOUND TRANSISTOR DTC124EKAT146
	Q511	TAAT01281Y	TRANSISTOR,SILICON KTA1281_Y
	Q512	TPYJB05001	COMPOUND TRANSISTOR DTA114EKAT146
	Q513	TA3T1371A0	TRANSISTOR,SILICON 2SA1371(D,E)-AE
	Q514	TC3T029090	TRANSISTOR,SILICON 2SC2909(S,T)-AA
	Q601	T8YJ2412K0	TRANSISTOR,SILICON 2SC2412KT146 R,S
	Q609	T8YJ2412K0	TRANSISTOR,SILICON 2SC2412KT146 R,S
	Q702	T8YJ2412K0	TRANSISTOR,SILICON 2SC2412KT146 R,S
	Q703	T8YJ2412K0	TRANSISTOR,SILICON 2SC2412KT146 R,S
△	Q804	TCA0042170	TRANSISTOR,SILICON KTC4217(O,Y)
△	Q805	TCA0042170	TRANSISTOR,SILICON KTC4217(O,Y)
△	Q806	TCA0042170	TRANSISTOR,SILICON KTC4217(O,Y)
	Q1002	TPYJC05001	COMPOUND TRANSISTOR DTA124EKAT146
		COILS & TRANSFORMERS	
	L001	02167F100J	COIL 10 UH
	L101	02167F100J	COIL 10 UH
	L102	02167F100J	COIL 10 UH
	L202	033700005R	COIL,VIDEO IFT 3700005
	L203	021LA61R0M	COIL 1 UH
	L204	021LA6120K	COIL 12 UH
	L206	021LA6R22M	COIL 0.22 UH
	L207	021LA6100J	COIL 10 UH
	L208	02167F3R3J	COIL 3.3 UH
	L401	021679472K	COIL 4.7 MH
	L403	022800033A	COIL,LINEARITY 20416A
△	L501	029T000091	COIL,LINE FILTER 0R8A393F28Y
	L502	02AHB9A972	CORE,FERRITE W5T29X7.5X19
△	L503	028R200015	COIL,DEGAUSS 8R200015
	L601	02167F100J	COIL 10 UH
	L704	021LA6220J	COIL 22 UH
	L706	021LA6220J	COIL 22 UH
	L707	021LA6220J	COIL 22 UH
	L708	021LA6220J	COIL 22 UH
	L711	021LA6220J	COIL 22 UH
	L713	021LA6150K	COIL 15 UH
	L715	021LA6100J	COIL 10 UH
	L717	021LA6100J	COIL 10 UH
	L801	02167F680J	COIL 68 UH
	T401	045009003J	TRANS,HORIZONTAL DRIVE ETH09K14BZ
△	T501	0481350864	TRANSFORMER,SWITCHING 81350864
		JACKS	
	J701	063G100042	SOCKET,21PIN 0350_9982_05
	J702	060J131015	HEADPHONE JACK MSJ-2000
	J703	060G401047	RCA JACK HTJ-032-03AY
	J704	060G401046	RCA JACK HTJ-032-03AW
△	J801	066F130020	SOCKET,CATHODE RAY,TUBE ISHS53S
		SWITCHES	
	SW102	0504101T34	SWITCH,TACT EVQ21505R
	SW104	0504101T34	SWITCH,TACT EVQ21505R
	SW106	0504101T34	SWITCH,TACT EVQ21505R
	SW107	0504101T34	SWITCH,TACT EVQ21505R

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	Part No.	Description
	SWITCHES	
△SW501	0530105019	SWITCH ESB92S22B
	VARIABLE RESISTORS	
VR401	V1K6313BTE	VOLUME,SEMI FIXED NVG6TLTAB102
VR420	V1K62Q2BT8	VOLUME,SEMI FIXED NVG6THTB471
VR501	V1163H3BTC	VOLUME,SEMI FIXED EVNCYAA03BE3
	P.C.BOARD ASSEMBLIES	
PCB010	A3M511G010K	PCB ASS'Y TMC572C
PCB110	A3M511G110K	PCB ASS'Y TCC433C
	MISCELLANEOUS	
B501	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B504	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
B701	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
B702	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
BT001	1412004013	BATTERY,MANGAN R03(AB)2PXXGI
BT002	1412004013	BATTERY,MANGAN R03(AB)2PXXGI
△CD501	1206655823	CORD,AC BUSH 1206655823
CD801	1278210014	BRAIDED WIRE SM1642-001
CD802	WDL6042038	FLAT CABLE AWM2468 A WG26 6C BLACK 420MM
CD803	WBL6034038	FLAT CABLE AWM2468 A WG26 4C BLACK 340MM
CF201	1012T5R512	FILTER,CERAMIC TRAP TPTRD5M50B01-A0
CF202	102E238R9E	FILTER,SAW J1981M
CF204	1012T03101	FILTER,CERAMIC TRAP MKT31.9MA110P-TF
CF303	1012T04001	FILTER,CERAMIC TRAP MKT40.4MA110P-TF
CP001	069W01001A	CONNECTOR PCB SIDE 003P-2100
CP101	069X160379	CONNECTOR PCB SIDE 06JQ-ST
CP401	069S450089	CONNECTOR PCB SIDE A1561WV2-A5P
CP501	069S320419	CONNECTOR PCB SIDE A3963WV2-3PD
CP502	069S420110	CONNECTOR PCB SIDE A1561WV2-2P
CP801	069S320010	CONNECTOR PCB SIDE A2361WV2-2P
CP1002	069S120419	CONNECTOR PCB SIDE A2502WV2-2P
CP802A	067U006049	WIRE HOLDER B2013H02-6P
CP802B	067U006049	WIRE HOLDER B2013H02-6P
CP803A	067U004029	WIRE HOLDER B2013H02-4P
CP803B	067U004029	WIRE HOLDER B2013H02-4P
EL001	124116281A	EYE LET XRY16X28BD
EL002	124120301A	EYE LET XRY20X30BD
△F501	080NT04004	FUSE 50T040H
△FB401	043221012F	TRANSFORMER,FLYBACK FQI-21B002
FH501	06710T0006	HOLDER,FUSE EYF-52BC
FH502	06710T0006	HOLDER,FUSE EYF-52BC
ICP501	0845T07003	IC PROTECTOR 20P_7000
ICP502	0845T03003	IC PROTECTOR 20P_3000
OS101	0773071001	REMOTE RECEIVER RPM7138-WH5
RY501	0560V20115	RELAY ALKS321
△SP351	070C434001	SPEAKER C109-47-148A
△TH501	D8E080A100	DEGAUSS ELEMENT B59209-J80-A10
TM101	076NOGX010	TRANSMITTER RC-GX010
TU001	0145517007	TUNER,VHF-UHF TUWRF4EG-778F2A
△V801	098A210440	CRT W/DY A51EER33X74
X101	100CT4R013	CRYSTAL HC-49/U-S
X601	100CT4R408	CRYSTAL HC-49/U
X602	100CT3R509	CRYSTAL HC-49/U

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
 CE..... ALUMI ELECTROLYTIC CAPACITOR
 CP..... POLYESTER CAPACITOR
 CPP..... POLYPROPYLENE CAPACITOR
 CPL..... PLASTIC CAPACITOR
 CMP..... METAL POLYESTER CAPACITOR
 CMPL..... METAL PLASTIC CAPACITOR
 CMPP..... METAL POLYPROPYLENE CAPACITOR

TOSHIBA Information Systems (UK) Ltd

Consumer Products Division, European Service Centre, Admiralty Way, Camberley, Surrey. GU15 3DT