
Model GXR Series

Triplex
Plunger Pump
Operating Instructions/
Repair Instructions
Manual

Consumer Pump

Horizontal/Vertical Pump with built-in Regulator, Thermal Relief Valve and Siphon Injector



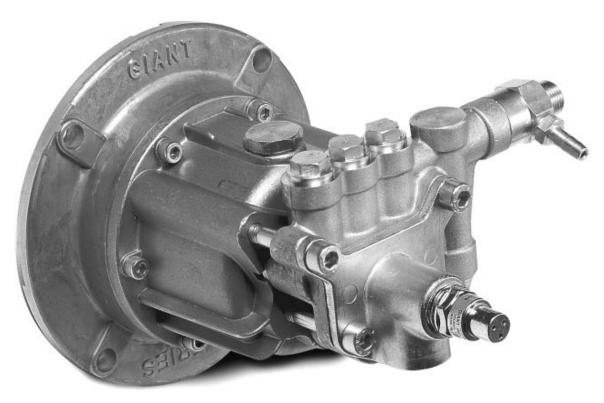



Updated 8/01

Contents:

| Installation Instructions: | page 2 |
|----------------------------|-----------|
| Pump Specifications: | page 3 |
| Exploded View/Kits: | page 4 |
| Parts List: | page 5 |
| Torque Specifications: | page 5 |
| Repair Instructions: | pages 6-7 |
| Dimensions: | back page |
| Warranty Information: | back page |

INSTALLATION INSTRUCTIONS

Installation of the Giant Industries, Inc., pump is not a complicated procedure, but there are some basic steps common to all pumps. The following information is to be considered as a general outline for installation. If you have unique requirements, please contact Giant Industries, Inc. or your local distributor for assistance.

- 1. For horizontal applications the pump should be installed flat on a base to a maximum of a 15 degree angle of inclination to ensure optimum lubrication.
- 2. The inlet to the pump should be sized for the flow rate of the pump with no unnecessary restrictions that can cause cavitation. Teflon tape should be used to seal all joints. Maximum inlet fluid temperature is 80°F.
- 3. The discharge plumbing from the pump should be properly sized to the flow rate to prevent line pressure loss to the work area. It is essential to provide a safety bypass valve between the pump and the work area to protect the pump from pressure spikes in the event of a blockage or the use of a shut-off gun.
- 4. Use of a dampener is necessary to minimize pulsation at drive elements, plumbing, connections, and other system areas. The use of a dampener with Giant Industries, Inc. pumps is optional, although recommended by Giant Industries, Inc. to further reduce system pulsation. Dampeners can also reduce the severity of pressure spikes that occur in systems using a shut-off gun. A dampener must be positioned downstream from the regulator.
- 6. Before beginning operation of your pumping system, remember: Check that the crankcase and seal areas have been properly lubricated per recommended schedules. Do not run the pump dry for extended periods of time. Cavitation will result in severe damage. Always remember to check that all plumbing valves are open and that pumped media can flow freely to the inlet of the pump.

Finally, remember that high pressure operation in a pump system has many advantages. But, if it is used carelessly and without regard to its potential hazard, it can cause serious injury.

IMPORTANT OPERATING CONDITIONS

Failure to comply with any of these conditions invalidates the warranty.

1. Prior to initial operation, Check for proper oil level. DO NOT OVERFILL.

Use Giant Synthetic Oil

Crankcase oil should be changed after the first 50 hours of operation, then at regular intervals of 500 hours or less depending on operating conditions.

- 2. Pump operation must not exceed rated pressure, volume, or RPM. <u>A pressure relief device must be installed in the discharge of the system.</u>
- 3. Acids, alkalines, or abrasive fluids cannot be pumped unless approval in writing is obtained before operation from Giant Industries, Inc.
- 4. Run the pump dry approximately 10 seconds to drain the water before exposure to freezing temperatures.

NOTE: Contact Giant Industries for Service School Information. Phone: (419)-531-4600

Specifications Model GXR Series

| GXR2224 | 2.2 GPM @ 2400 PSI |
|-------------------------------|--------------------------------------|
| GXR2424 | 2.4 GPM @ 2400 PSI |
| Maximum Inlet Pressure | Up to 90 PSIG¹ |
| RPM | 3450 |
| Plunger Diameter | 16mm |
| Stroke GXR2224 | 4.7mm (6.1 ° angle) |
| Stroke GXR2424 | 5.1mm (6.3 ° angle) |
| Crankcase Oil Capacity | .4.7 fl. oz. (4.1 fl.oz. horizontal) |
| Temperature of Pumped Fluids | Up to 80 °F |
| Inlet Port | 1/2" NPT |
| Discharge Ports | .3/8" NPT |
| Shaft Rotation | Either Direction ² |
| Weight | 9 lbs. |
| Width | 8.325" |
| Height | 6.45" |
| Swash Plate Bore (Horizontal) | 3/4" x 3/16" Keyway |
| Swash Plate Bore (Vertical) | 7/8" x 3/16" Keyway |
| Valve Type | Polyamide Plastic |
| | |

A 25 PSIG minimum inlet pressure is <u>required</u>.

² The pump itself can be driven in either direction of rotation; however, the cooling fan on TEFC motors must always be positioned so that the cooling air is drawn from the non-drive end of the motor towards the pump.

| GXR2224 ELECTRIC HORSEPOWER REQUIREMENTS | | | | | |
|--|-----|----------|----------|----------|----------|
| RPM | GPM | 1000 PSI | 1500 PSI | 2000 PSI | 2500 PSI |
| 3450 | 2.2 | 1.5 | 2.3 | 3.0 | 3.8 |

| GXR2224 GAS ENGINE HORSEPOWER REQUIREMENTS* | | | | | OWER |
|---|-----|----------|----------|----------|----------|
| RPM | GPM | 1000 PSI | 1500 PSI | 2000 PSI | 2500 PSI |
| 3450 | 2.2 | 2.0 | 3.0 | 4.0 | 5.0 |

| GXR2424 ELECTRIC HORSEPOWER REQUIREMENTS | | | | | |
|--|-----|---------|---------|---------|----------|
| RPM | GPM | 1000PSI | 1500PSI | 2000PSI | 2400 PSI |
| 3450 | 2.4 | 1.6 | 2.5 | 3.3 | 3.9 |

| GXR2424 GAS ENGINE HORSEPOWER | | | | | | |
|-------------------------------|-----|---------|---------|---------|----------|--|
| REQUIREMENTS* | | | | | | |
| RPM | GPM | 1000PSI | 1500PSI | 2000PSI | 2400 PSI | |
| 3450 | 2.4 | 2.2 | 3.3 | 4.4 | 5.2 | |

HORSEPOWER RATINGS:

The rating shown are the power requirements for the <u>pump</u>. Gas engine power outputs must be approximately twice the pump power requirements shown above.


We recommend a 1.15 service factor be specified when selecting an electric motor as the power source. To compute specific pump horse-power requirements, use the Following formula:

Electric HP = $(GPM \times PSI) / 1460$

Gas $HP = (GPM \times PSI) / 1100$

^{*} Engine power varies based on horizontal or vertical orientation as well as by makes and model from each manufacturer.

GXR SERIES EXPLODED VIEW

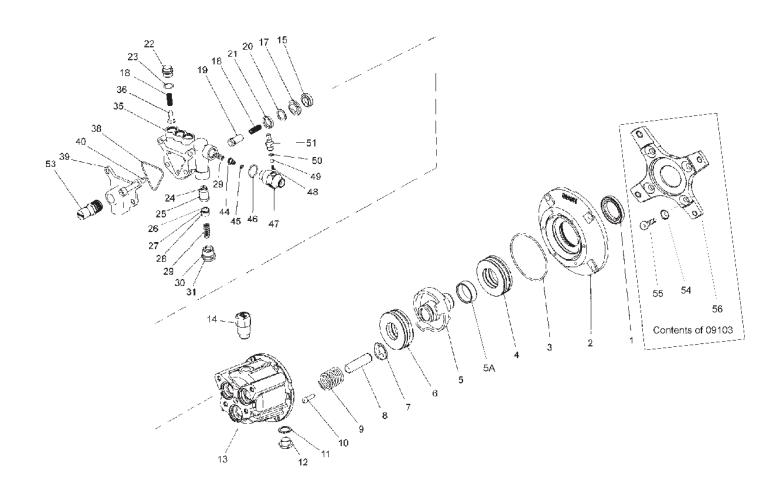

Plunger Packing Kit # 09465

| <u>Item</u> | Part # | <u>Description</u> | Qty. |
|-------------|--------|--------------------|------|
| 20 | 06290 | Support Ring | 3 |
| 21 | 06315 | V-Sleeve | 3 |

Valve Assembly Kit # 09466

| <u>Item</u> | <u>Part #</u> | <u>Description</u> | Qty. |
|-------------|---------------|----------------------|------|
| 18 | 07374 | Valve Spring | 6 |
| 19 | 06267 | Guided P-Valve | 3 |
| 36 | 06295 | Discharge Valve Cone | 3 |

Oil Seal Kit # 09468

| <u>Item</u> | Part # | <u>Description</u> | Qty. |
|-------------|--------|--------------------|------|
| 15 | 06316 | Plunger Oil Seal | 3 |

Regulator Repair Kit # 09534

| <u>Item</u> | Part # | <u>Description</u> | Qty. |
|-------------|--------|----------------------|------|
| 24 | 23507 | O-Ring | 1 |
| 25 | 06710 | Seat | 1 |
| 26 | 06386 | Ball | 1 |
| 27 | 06385 | O-Ring | 1 |
| 28 | 06384 | Plastic Poppet Valve | 1 |
| 30 | 06410 | O-Ring | 1 |
| | | | |

GXR SERIES PARTS LIST

| ITEM# | Part# | Description | QTY. | ITEM# | Part# | Description | QTY. |
|-------|---------|------------------------------|------|------------------------|---------------------|---------------------------|--------|
| 1 | 07805 | Radial Shaft Seal | 1 | 23 | 12007 | O-Ring | 3 |
| 2 | 06310* | Adapting Flange | 1 | 24 | 23507 | O-Ring | 1 |
| 3 | 06294 | O-Ring | 1 | 25 | 06710 | Seat | 1 |
| 4 | 06300 | Rear Bearing | 1 | 26 | 06386 | 6mm S.S. Ball | 1 |
| 5 | 06690** | Wobble Plate 6.1 Degree 3/4" | | 27 | 06385 | O-Ring | 1 |
| | | (GXRH1114) | 1 | 28 | 06384 | Plastic Poppet Valve | 1 |
| 5 | 06566** | Wobble Plate 6.3 Degree 3/4" | | 29 | 06382 | Spring | 1 |
| | | (GXRH2424) | 1 | 30 | 06410 | O-Ring | 1 |
| 5 | 06696⁺ | Wobble Plate 6.1 Degree 7/8" | | 31 | 06392 | Сар | 1 |
| | | (GXRV2224) | 1 | 35 | 06412 | Manifold | 1 |
| 5 | 06322⁺ | Wobble Plate 6.3 Degree 7/8" | | 36 | 06295 | Discharge Valve Cone | 3 |
| | | (GXRV2424) | 1 | 38 | 07910A | Triangle O-Ring | 1 |
| 5A | 07882 | Shaft Ring | 1 | 39 | 06298 | Suction Flange | 1 |
| 6 | 06301 | Front Bearing | 1 | 40 | 06302 | Stud Bolt | 4 |
| 7 | 06289 | Spring Disk | 3 | 44 ^A | 06308 | Orifice, 1.8mm | 1 |
| 8 | 06287 | Plunger, 16mm | 3 | 44 ^A | 06339 | Orifice, 2.1mm | 1 |
| 9 | 06288 | Plunger Spring | 3 | 44 ^A | 06340 | | 1 |
| 10 | 06299 | Socket Bolt | 6 | | | Orifice, 2.3mm | 1 |
| 11 | 08192 | Gasket | 1 | 45 46 | 06312 | O-Ring in Nozzle | 1 |
| 12 | 06273 | Oil Drain Plug | 1 | 46 47 | 07913 | O-Ring | 1 |
| 13 | 06282 | Crankcase (GXRV) | 1 | 47 | 06303 | Injector Retainer | 1 |
| 13 | 06338 | Crankcase (GXRH) | 1 | 48 | 23009 | Spring | 1 |
| 14 | 08083 | Vent Cap (Horizontal Only) | 1 | 49 50 | 23010-0100 | Ball | 1 |
| 15 | 06316 | Oil Seal | 3 | 50 51 | 12516-0001 12517 | O-Ring Hose Barb | 1 |
| 17 | 06292 | Spacer | 3 | 53 | | Thermal Relief Valve | 1 |
| 18 | 07374 | Valve Spring | 6 | 53 54** | 23422A 07468 | Locktooth Washer | 1 |
| 19 | 06267 | Guided P-Valve | 3 | 54 55 ⁺⁺ | 07467 | | 4 |
| 20 | 06290 | Pressure Ring | 3 | 56 ⁺⁺ | | Screws | 4 1 |
| 21 | 06315 | V-Sleeve, 16mm | 3 | 50 | 06334 | Mounting Flange "X" Style | ı |
| 22 | 06296 | Discharge Plug | 3 | | | | |

** 09103 Gasoline Flange Kit
A = See pump numbering system page 7

- * When ordering 06310, please order 17026, which includes 06300, 07805, and 06294.
- ** When ordering 06566, please order 17047 which includes 06566, 06301, and 07882.
- ** When ordering 06690, please order 17052 which includes 06690, 06301, and 07882.
- + When ordering 06322, please order 17027 which includes 06322, 06301, and 07882.
- + When ordering 06691, please order 17053 which includes 06691, 06301, and 07882.

GXR SERIES TORQUE SPECIFICATIONS

| Position | <u>ltem#</u> | <u>Description</u> | Torque Amount (ftlbs) |
|-----------------|--------------|--------------------|-----------------------|
| 10 | 06299 | Socket Bolt | 100 inlbs. |
| 40 | 06302 | Stud Bolt | 150 inlbs. |

REPAIR INSTRUCTION - GXR SERIES



1. With a 14mm socket wrench, remove the three discharge valve plugs (27). Inspect the valve plug o-rings (23) for wear, and replace as necessary.




2. Remove the valve spring (18) and valve cone (36) from the manifold (35). Inspect the parts for wear and replace as necessary.



3. With a crescent wrench, remove the injector retainer (47). Inspect the o-ring (46) for wear and replace as necessary.



8. Next, remove the four manifold bolts (40) with a 6mm allen wrench.

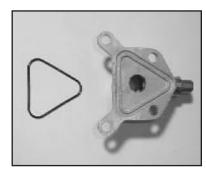



9. Remove the suction flange (39) and flange o-ring (38). Inspect the o-ring for wear and replace as necessary.



10. Tap the back of the manifold (35) with a rubber mallet to dislodge, and slide off the plungers. (8). Take note of the position of the discharge port so as to place the manifold in the same position during reassembly.

GXR SERIES REPAIR INSTRUCTIONS

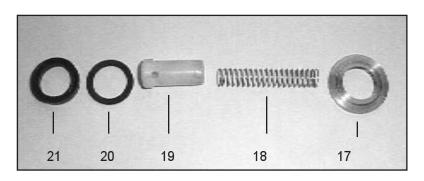

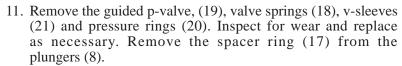



12. If the crankcase oil seals (15) are to be replaced, they can be removed by prying loose with a screwdriver. Take care not to make contact with the plunger (8) and pry out the oil seals from their housing. Seals should not be reinstalled until after step #16.

13. Reassemble in reverse order. Fill the crankcase with the proper amount of oil (see specifications page 3) The pump is now ready for operation.

For maintenance of the gear end of your pump, contact your local distributor or Giant Industries at: 419/531-4600

NOTE: Contact Giant Industries for


Service School Information. Phone: (419)-531-4600


GX and HR Pump Part Numbering System

| GX or HR Series | Flow | Pressure (in 100 psi increments) | | Injector Size | Thremal Relief Valve | Wobble Plate Shaft Bore |
|-----------------|--------|--|---|---------------|----------------------------|----------------------------------|
| Vertical | 20=GPM | 25=2500 PSI | | 1=2.1 mm | 1=1/2" | 1=3/4" |
| Horizontal | 23=GPM | | | 2=1.8mm | | 2=7/8" |
| | 25=GPM | | | 3=2.3mm | | 3=1" |
| | | | | | | 4=5/8" |
| GX or HR | 2.5 | 25 | _ | 1 | 1 | 1 |

For example, a GXV2525-112 is a GX pump that produces 2.5 GPM @ 2500 PSI, has a injector with a 2.1mm Oriface, 1/2" thermal relief valve and 7/8" wobble plate bore.

GXR Series Dimensions (inches)

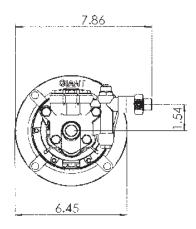

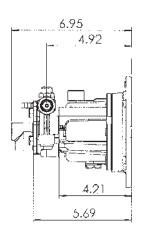

GIANT INDUSTRIES LIMITED WARRANTY

Giant Industries, Inc. pumps and accessories are warranted by the manufacturer to be free from defects in workmanship and material as follows:

- For portable pressure washers and self-service car wash applications, the discharge manifolds are guaranteed for the life of the pump. Our other pump parts, used in portable pressure washers and in car wash applications, are warranted for five years from the date of shipment for all pumps used in NON-SALINE, clean water applications.
- 2. One (1) year from the date of shipment for all other Giant industrial and consumer pumps.
- 3. Six (6) months from the date of shipment for all rebuilt pumps.
- 4. Ninety (90) days from the date of shipment for all Giant accessories.

This warranty is limited to repair or replacement of pumps and accessories of which the manufacturer's evaluation shows were defective at the time of shipment by the manufacturer. The following items are NOT covered or will void the warranty:

- 1. Defects caused by negligence or fault of the buyer or third party.
- 2. Normal wear and tear to standard wear parts.
- 3. Use of repair parts other than those manufactured or authorized by Giant.
- 4. Improper use of the product as a component part.
- 5. Changes or modifications made by the customer or third party.
- 6. The operation of pumps and or accessories exceeding the specifications set forth in the Operations Manuals provided by Giant Industries, Inc.

Liability under this warranty is on all non-wear parts and limited to the replacement or repair of those products returned freight prepaid to Giant Industries which are deemed to be defective due to workmanship or failure of material. A Returned Goods Authorization (R.G.A.) number and completed warranty evaluation form is required <u>prior</u> to the return to Giant Industries of all products under warranty consideration. Call (419)-531-4600 or fax (419)-531-6836 to obtain an R.G.A. number.

Repair or replacement of defective products as provided is the sole and exclusive remedy provided hereunder and the MANUFACTURER SHALL NOT BE LIABLE FOR FURTHER LOSS, DAMAGES, OR EXPENSES, INCLUDING INCIDENTAL AND CONSEQUENTIAL DAMAGES DIRECTLY OR INDIRECTLY ARISING FROM THE SALE OR USE OF THIS PRODUCT.

THE LIMITED WARRANTY SET FORTH HEREIN IS IN LIEU OF ALL OTHER WARRANTIES OR REPRESENTATION, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND ALL SUCH WARRANTIES ARE HEREBY DISCLAIMED AND EXCLUDED BY THE MANUFACTURER.

