



## 200-Watt Powered Subwoofer with Remote

Your RCA PRO-SW200P 200-Watt Powered Subwoofer is designed to give you the best possible low-frequency sound for the ultimate home theater experience. You will be astonished by the realism it adds to movie sound effects and the power it lends to all kinds of music.

The subwoofer combines the power of a built-in 200-watt RMS amplifier with a responsive, 12-inch coated paper cone woofer — all housed in a ported bass-reflex enclosure to produce tight, floor-rumbling powerful bass (down to 36 Hz) that you can feel as well as hear!

The infrared remote control lets you regulate the subwoofer's volume without interrupting your listening.

Your subwoofer has an adjustable high cut filter and high- and low-level inputs so it is easily incorporated into existing systems, or it can be an integral part of a subwoofer/satellite combination. Its other features include:

**Auto On/Off** — automatically switches the subwoofer's amplifier to standby if the subwoofer does not receive a signal for 8–11 minutes.

**Power Indicator** — the red indicator on the subwoofer's volume control lights when the amplifier receives an audio signal, and turns off when the amplifier goes into standby mode, so you can see at a glance when the subwoofer is operating.

**High-Level Input** — lets you connect the subwoofer to an amplifier's or receiver's speaker outputs.

**Note:** You need speaker wire (not supplied) to connect the subwoofer to an amplifier or receiver's speaker outputs.

**Low-Level Input** — lets you connect the subwoofer to an amplifier's or receiver's subwoofer out or pre out jacks. These inputs automatically sum left and right channel information.

**Note:** You need phono cables (not supplied) to connect the subwoofer to an amplifier or receiver's subwoofer out or pre out jacks.

**Volume Control** — lets you match the subwoofer's output level to your satellite speakers' output (if used). Rotate the control clockwise to increase, or counterclockwise to decrease, the subwoofer's output.

**Phase (Polarity) Switch** — Inverts the subwoofer's output polarity so you can set it to match the main speakers.



**Frequency Hz Control** — lets you set the high frequency cutoff point. Rotated fully clockwise, the subwoofer cuts high frequencies over 200 Hz. Rotated fully counterclockwise, it cuts high frequencies over 50 Hz.

**Remote Control** — lets you control the subwoofer's volume from up to 30 feet away. When you press **VOLUME DOWN/UP** on the remote control, just point the remote control at the subwoofer's infrared lens.

**Note:** If you lose your remote control, the subwoofer will still operate. Simply unplug the subwoofer for about 10 seconds, then plug it back in. Use the volume control on the front of the subwoofer to adjust the volume. You can order a replacement remote control through your local RadioShack store.

## SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

- Never open the cabinet or remove the metal control panel, as this might result in electrical shock or damage to the unit.

If your subwoofer needs servicing, contact your local RadioShack store.

- To prevent electrical shock, do not use a polarized plug with any extension cord or outlet unless the blades can be fully inserted to prevent blade exposure.

- Unplug the subwoofer power cord from the electrical outlet if it will not be used for a long time.
- Only connect this unit to a power supply of the type described in the owner's manual or marked on the unit.
- Route the power-supply cord so it is not likely to be walked on or pinched by items placed upon or against it, especially at the plug, the outlet, and the point where the cord exits the unit.
- Do not place the subwoofer where it might be knocked over or exposed to falling objects.
- The metal control panel on the back of the subwoofer acts as the heat sink for the subwoofer's internal amplifier. Therefore, place the unit at least 4 inches (10 cm) away from a wall, and do not let anything come into contact with this panel.

Placing the subwoofer on the same stand or shelf as your turntable can result in a low-frequency rumble or acoustic feedback.

#### **Cautions:**

- To prevent fire or shock, do not expose this subwoofer to rain or moisture.
- Do not place the subwoofer with its metal plate against the floor.
- Place the subwoofer away from heat sources such as radiators, stoves, or other appliances that produce heat.

## **CHOOSING A LOCATION**

#### **Cautions:**

- To prevent the cabinet from warping or discoloring, do not place the subwoofer in a place where it is exposed to direct sunlight or excessive humidity.

Where and how you position your subwoofer greatly affects its bass response. Adjusting the subwoofer's volume control in relation to the left and right speakers and adjusting the subwoofer's high cut filter also affects your speakers' overall sound.

Although low frequencies are non-directional, factors such as room reflections, standing waves, resonance, and absorption strongly affect your subwoofer's performance. For maximum bass output, place your subwoofer in a corner. To reduce output, move it away from corners and back walls. Even slightly moving the subwoofer can have a major effect on bass response.

We recommend that you test the subwoofer in different locations to determine where the best balance is between your satellite speakers (if used) and subwoofer. We also recommend that you place the subwoofer at least 4 inches away from the wall, and at least 2–3 feet away from your television or computer's disk drive system so the subwoofer's magnet will not distort the colors of your TV picture or erase your floppy disks.

## ATTACHING FEET

Using the supplied screws, secure the four protective feet (packed separately) into the threaded inserts at each corner of the cabinet's bottom.

## CONNECTING TO AN AMPLIFIER

You can connect your PRO-SW200P to an amplifier/receiver's subwoofer out or pre out jacks or speaker terminals.

### Notes:

- You can connect your PRO-SW200P to your TV if it has variable line out jacks.
- See "Connecting to Subwoofer Out or Pre Out Terminals" or "Connecting to Speaker Terminals."


**Caution:** To avoid any damage to the subwoofer or amplifier, disconnect power from your components before making any connections.

### Connecting to Subwoofer Out or Pre Out Terminals

Use this connection if your amplifier/receiver has jacks labeled SUBWOOFER OUT or PRE OUT. Do not use the PRE OUT jacks if they are already connected by cables or jumpers to your amplifier.

1. Connect the PRO-SW200P's **LOW LEVEL INPUT** jacks to the amplifier/receiver's line sub out or pre out jacks (or TV's audio line out jacks).

### Right Speaker      Amplifier/Receiver      Left Speaker Sub Out/Pre Out Terminal

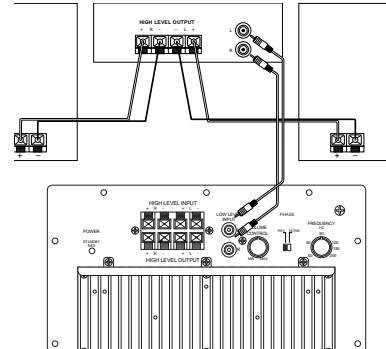


2. Connect your satellite speakers (if any) to the amplifier's or receiver's output terminals as they would normally be connected.

### Notes:

- On some receivers/amplifiers, the subwoofer out is a single jack. Use a single phono cable to connect the subwoofer jack to the "L" input on the PRO-SW200P.
- When connecting to a TV, we recommend using variable line output jacks, which will allow the PRO-SW200P's volume to change with the TV's volume. Refer to your TV owner's manual. Also, you can connect to the TV line out and then adjust the TV volume up or down. If the subwoofer volume changes with the TV volume, then the TV line out is variable.

## Connecting to Speaker Terminals

Connect the amplifier/receiver's speaker output terminals to the subwoofer's **HIGH LEVEL INPUT** terminals. Be sure to connect the terminals in phase, connecting positive (+) to positive and negative (-) to negative. Wiring the subwoofer with + to - causes reduced bass performance. To match the subwoofer's polarity with your system's polarity and receive full bass response, slide the **PHASE** switch to **REV** or **NOM**. Choose the setting that provides the greatest bass output.

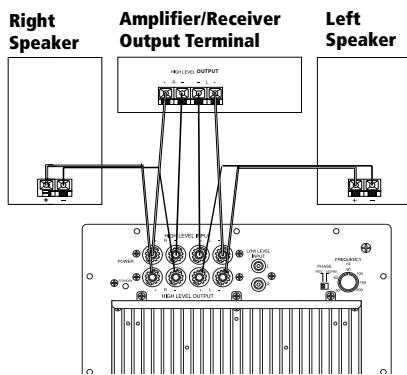


## Connecting Speaker Pins

If you use Megacable or any other high-quality, low-gauge speaker wire, the terminals will be too small to accommodate the wires from both the speaker (left or right) and the subwoofer. You need two pairs of speaker pins (RSU 10458503) to make the connection. Follow these steps to connect the wires to each terminal using speaker pins.

1. Twist together the ends of the wires from the left (or right) speaker's positive terminal and the amplifier/

receiver's left (or right) positive speaker terminal.

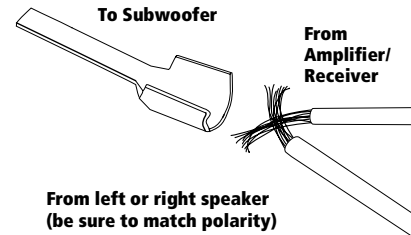

2. Position the twisted wire ends between the open barrel ends of the speaker pin.
3. Using a pair of pliers, crimp the open barrel ends of the speaker pin to hold the wire ends in place.
4. Plug the speaker pin into the proper terminal on the subwoofer.

## CONNECTING TO POWER

Plug the subwoofer's AC power cord into an AC outlet.

## ADJUSTING THE VOLUME

Once you have made all connections, follow these steps to adjust the volume.

1. Rotate the control on the front of the subwoofer to its lowest setting.
2. Turn on your amplifier/receiver and another component (such as a radio, cassette player, CD player, or turntable).
3. Begin playing an audio source (such as a CD) and adjust the amplifier/speaker's overall volume to a comfortable level. Rotate the volume

control clockwise, a little at a time, until you achieve a pleasing balance of bass between the subwoofer and the main speakers (and satellite speakers, if used). Bass output should not overpower the main speakers, but should blend across the entire musical range.

Once you have adjusted the subwoofer's volume control, use the amplifier/receiver's volume control to control the speakers' volume.

## ADJUSTING THE HIGH CUT FREQUENCY

**FREQUENCY HZ** (on the back of the subwoofer) adjusts the level (between 50 Hz and 200 Hz) at which the subwoofer begins passing frequencies to other speakers. This control's setting depends on the low frequency capabilities of your satellite speakers (if used), speaker placement, and other factors that affect bass performance.

To adjust the high cut frequency, first rotate **FREQUENCY HZ** clockwise until the music sounds too bass-heavy. Then rotate it counterclockwise until the bass sounds more natural.

If the mid-bass sounds natural but you want more low bass, rotate **FREQUENCY HZ** counterclockwise a little, then rotate the subwoofer's volume control clockwise by about the same amount. This increases low-bass output without affecting the mid-bass output.

To reduce low-bass output without affecting the mid-bass output, equally rotate **FREQUENCY HZ** clockwise and the subwoofer's volume control counterclockwise.

**Note:** Set **FREQUENCY HZ** to 200 Hz when using the subwoofer with mini home theater speakers.

## CARE AND MAINTENANCE

Your RCA PRO-SW200P 200-Watt Powered Subwoofer is an example of superior design and craftsmanship. The following suggestions will help you care for your subwoofer so you can enjoy it for years.



Keep the subwoofer dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.



Use and store the subwoofer only in normal temperature environments. Temperature extremes can shorten the life of electronic devices and distort or melt plastic parts.



Keep the subwoofer away from dust and dirt, which can cause premature wear of parts.



Never touch the subwoofer elements with your hands. Handle the subwoofer gently and carefully. Dropping it can damage the case and internal parts. If the subwoofer is dented or bent, the sound is distorted.



Wipe the subwoofer with a soft dry cloth occasionally to keep it looking new. Do not use water, harsh chemicals, cleaning solvents, or strong detergents to clean the subwoofer. Do not place a plastic covering on top of the cabinet, because the plastic's color could come off and stick to the finish.

Modifying or tampering with the subwoofer's internal components can cause a malfunction and might invalidate its warranty.

## Troubleshooting

This subwoofer has been manufactured to the specifications of RadioShack and is covered by a limited warranty from RadioShack. If your subwoofer is not operating as it should, take it to your local RadioShack store or call 1-800-THE-SHACK for assistance.

## SPECIFICATIONS

Amplifier Output .....	200W RMS (4 Ohms @ 1% THD)
Crossover .....	50 Hz–200 Hz Variable
Frequency Response .....	36 Hz–200 Hz
Power Voltage .....	AC 120 V/60 Hz
Power Consumption .....	120W
Dimensions (HWD) .....	16 × 16 × 16 Inches (407 × 407 × 407 mm)
Weight .....	45 lb (20.412 kg)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

### Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

04/99

**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**