INSTALLATION INSTRUCTIONS


DishDrawer™ dishwasher

DD90SDF(H)TX2, DD90SDFTM2 (Designer) & DD90S(H)TI2 (Integrated) models

NZ AU GB IE

Fisher&Paykel

1 FOLLOW THE INSTALLATION SEQUENCE RELEVANT TO YOUR MODEL

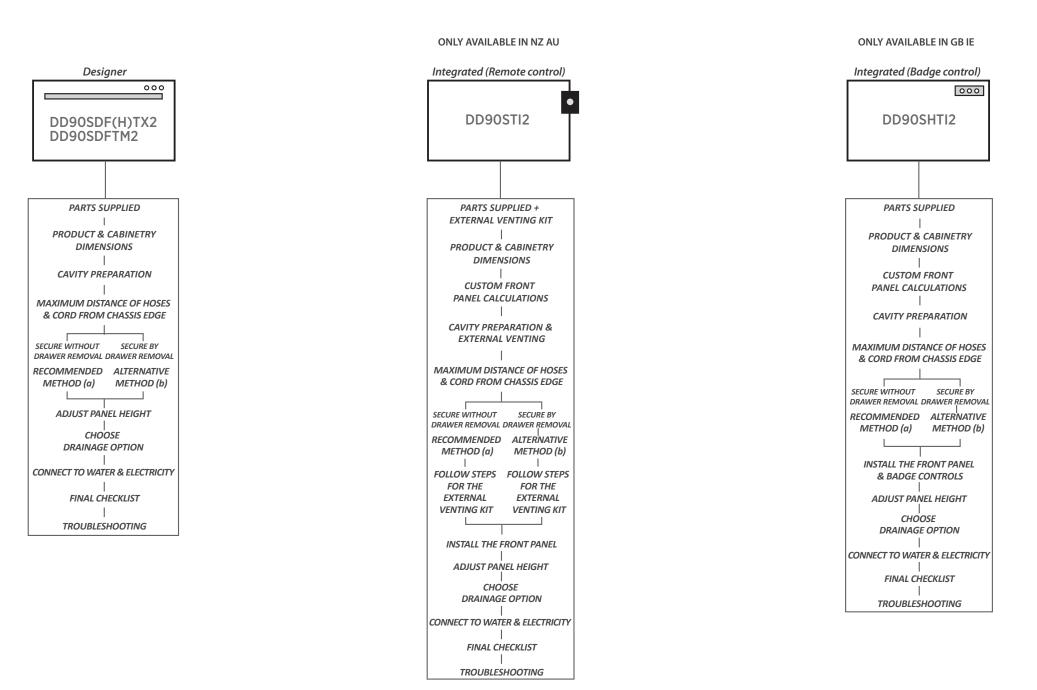

WARNING!

Electrical shock hazard


Before installing the dishwasher, remove the house fuse or open the circuit breaker.



This appliance must be earthed. In the event of a malfunction or breakdown, earthing will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-earthing conductor and an earthing plug. The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local codes and ordinances. WARNING- Improper connection of the equipmentearthing conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt as to whether the appliance is properly earthed.

Do not modify the power supply plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use an extension cord, adapter plug or multiple outlet box.

Failure to follow this advice may result in electrical shock or death.

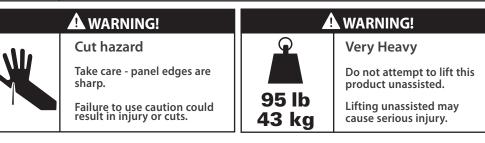

IMPORTANT SAFETY INSTRUCTIONS!

- Installation of this dishwasher requires basic mechanical and electrical skills.
- Be sure to leave these Instructions with the Customer.
- Installation must comply with your local building and electricity regulations.
- At the completion of the dishwasher installation, the Installer must perform the Final Checklist.
- Remove all packaging materials supplied with the dishwasher.
- This dishwasher is manufactured for indoor use only.
- Ensure all water connections are turned OFF. It is the responsibility of the plumber and electrician to ensure that each installation complies with all Codes and Regulations.
- The dishwasher MUST be installed to allow for future removal from the enclosure if service is required.
- The switched power outlet must be outside the dishwasher cavity, so that it is accessible after installation.
- Care should be taken when the appliance is installed or removed to reduce the likelihood of damage to the power supply cord and hoses.
- If the dishwasher is to be relocated from one installation to another it must be kept upright to avoid damage from water spillage.
- Make sure only new hoses are used for connection (supplied with the dishwasher). Old hoses should not be reused.
- Failure to install the dishwasher correctly could invalidate any warranty or liability claims.
- If the product is installed in a motor vehicle, boat or similar mobile facility, you must bring the vehicle, boat or mobile facility containing the product to the service shop at your expense or pay the service technician's travel to the location of the product.

SAVE THESE INSTRUCTIONS

2b ADDITIONAL SAFETY AND WARNINGS - INTEGRATED MODELS ONLY

A WARNING!

Fitting integrated front panels requires access to electrical service areas. This work must be performed and certified by a qualified electrical service technician.

Electrical Shock Hazard

WARNING: To reduce the risk of electrical shock, fire, or injury to persons, the installer must ensure that the dishwasher is completely enclosed at the time of installation.

Before fitting the front panel and connecting the integrated badges (where present), the installer must ensure that the dishwasher is disconnected from the power supply.

After installing the front panel, the installer must ensure that the following components are electrically earthed: the panel bracket, the integrated badge (where present) and any custom metal component (e.g. handle) that extends past the rubber seal.


Failure to follow these warnings may result in electrical shock, injury or fire.

IMPORTANT SAFETY INSTRUCTIONS!

- Read these instructions completely and carefully.
- Ensure the product is not plugged in.
- Installation of custom panels requires basic mechanical and electrical skills.
- Installation must comply with your local building and electricity regulations.
- Failure to install the custom panels correctly could invalidate any warranty or liability claims.

SAVE THESE INSTRUCTIONS

3*a* PARTS SUPPLIED - ALL MODELS

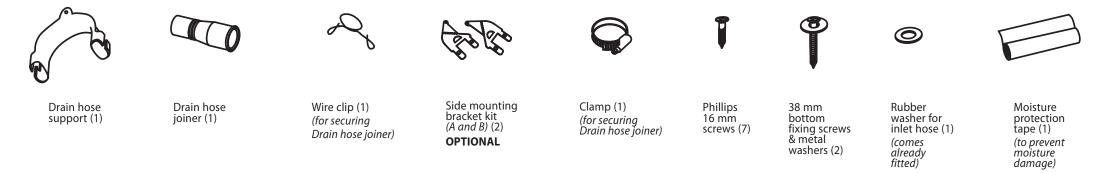


If the Drain hose supplied is not long enough to reach your services, you must use a Drain Hose Extension Kit P/N 525798 which will extend the drain hose by 3.6m. The kit is available from the nearest Fisher & Paykel Authorised Service Centre or through our local website listed at the end of this document.

3b ADDITIONAL PARTS SUPPLIED WITH INTEGRATED MODELS



External Venting kit (1)

supplied with Integrated models with remote (NZ AU) only

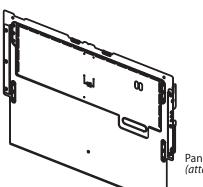

Panel bracket (1) (attached to product) Panel mounting screws (14)

1




Integrated rectangular badge (1) (Satin chrome supplied)



supplied with Integrated models with badge (GB IE) only

4 PRODUCT DIMENSIONS

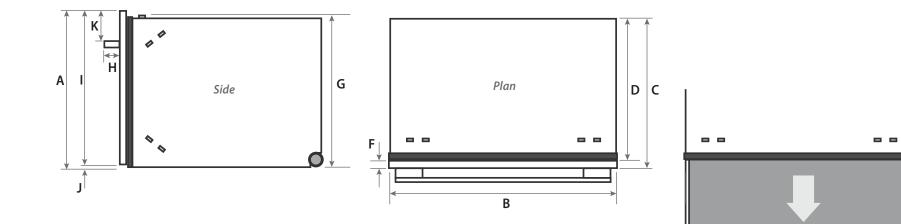

Product dimensions (mm)


		Designer	Integrated <i>Remote</i> <i>control</i>	Integrated Badge control
Α	overall height ¹ of product (incl. front panel height)	478	478	478
В	overall width of product	895	min. 855	min. 855
С	overall depth of product (excl. handle)	571	57 1 ²	571 ²
D	depth of chassis (to back of front panel)	553	553	553
Е	maximum extension of drawer (excl. handle)	545	545 ²	545 ²
F	depth of front panel (excl. handle)	18	16-20	16-20
G	height ¹ of chassis	458	458	458
Н	depth of handle	41	n/a	n/a
Ι	height of front panel	470	476 ³	470
J	height of ventilation gap below front panel	8	min. 2	min. 8
Κ	height from top of handle to top of front panel	64	n/a	n/a

¹includes 2 mm high bracket slots ²Assuming front panel thickness of 18 mm

³Recommended for a 2 mm ventilation gap below front panel, if cavity height is 480 mm

E


5 CABINETRY DIMENSIONS

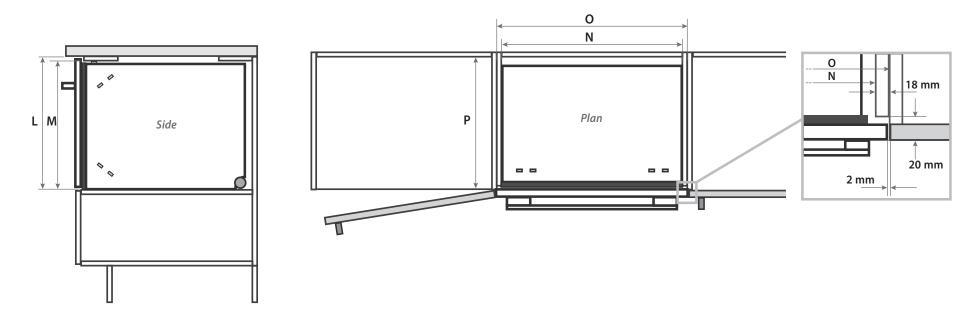

Minimum clearances from adjacent cabinetry

Cabinetry dimensions mm

		Designer	Integrated Remote control	Integrated Badge control
L	height of cavity (from support surface to underside of benchtop)	480	480*	480*
М	inside height of cavity	460	min. 460	min. 460
Ν	inside width of cavity	864	864	864
0	overall width of cabinetry	900	900	900
Ρ	inside depth of cavity	min. 560	min. 560	min. 560
*Re	commended			

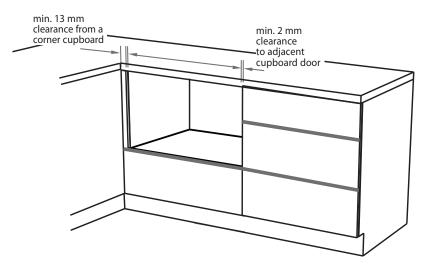



• INTEGRATED MODELS WITH REMOTE (NZ AU) ONLY - CUSTOM FRONT PANEL CALCULATIONS

FRONT PANEL SPECIFICATIONS

- 16 -20 mm panel thickness
- Adequately sealed to withstand moisture (50°C @ 80% RH)
- Maximum weight of panel: 9 kg

The following calculations assume the top of the panel is aligned with the top of the adjacent cabinetry:

WIDTH OF THE PANEL

Measure **A** (the width between adjacent door/drawer fronts) and write it in the first box below, then complete the equation.




HEIGHT OF THE PANEL

Measure **B** and write it in the first box below, then complete the equation.



Note: when the top of the dishwasher has to be lower than the adjacent cabinetry, the panel can be increased in height.

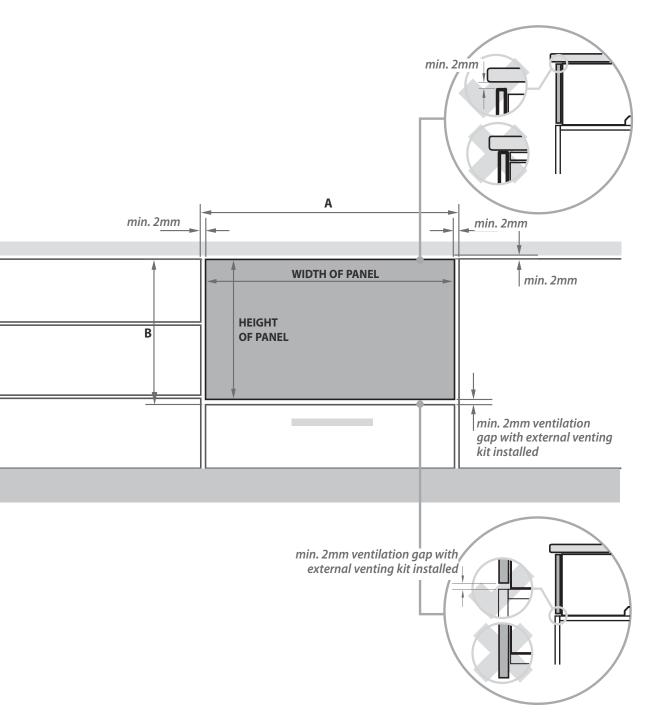

6) 📼 INTEGRATED MODELS WITH BADGE (GB IE) ONLY - CUSTOM FRONT PANEL CALCULATIONS

FRONT PANEL SPECIFICATIONS

- 16 -20 mm panel thickness
- Adequately sealed to withstand moisture (50°C @ 80% RH)
- Maximum weight of panel: 9 kg

The following calculations assume the top of the panel is aligned with the top of the adjacent cabinetry:

WIDTH OF THE PANEL

Measure **A** (the width between adjacent door/drawer fronts) and write it in the first box below, then complete the equation.




HEIGHT OF THE PANEL


Measure **B** and write it in the first box below, then complete the equation.




Note: when the top of the dishwasher has to be lower than the adjacent cabinetry, the panel can be increased in height.

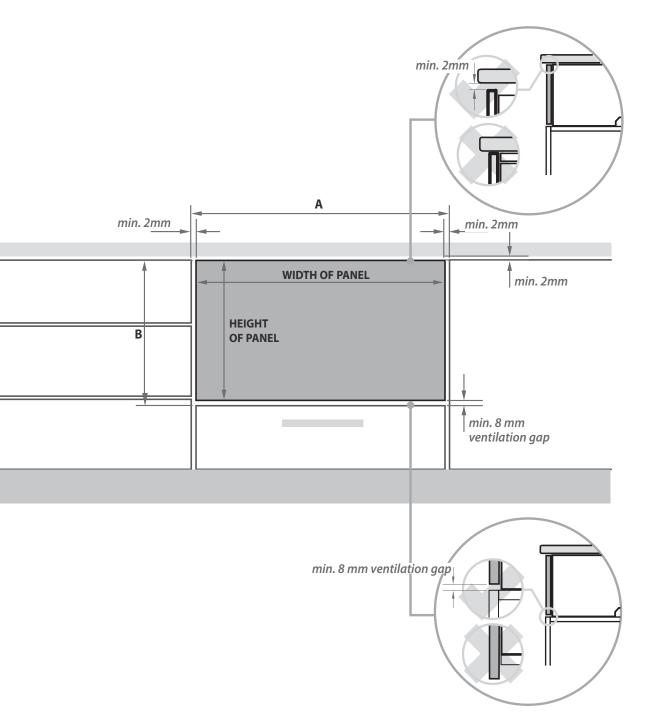

7a CAVITY PREPARATION

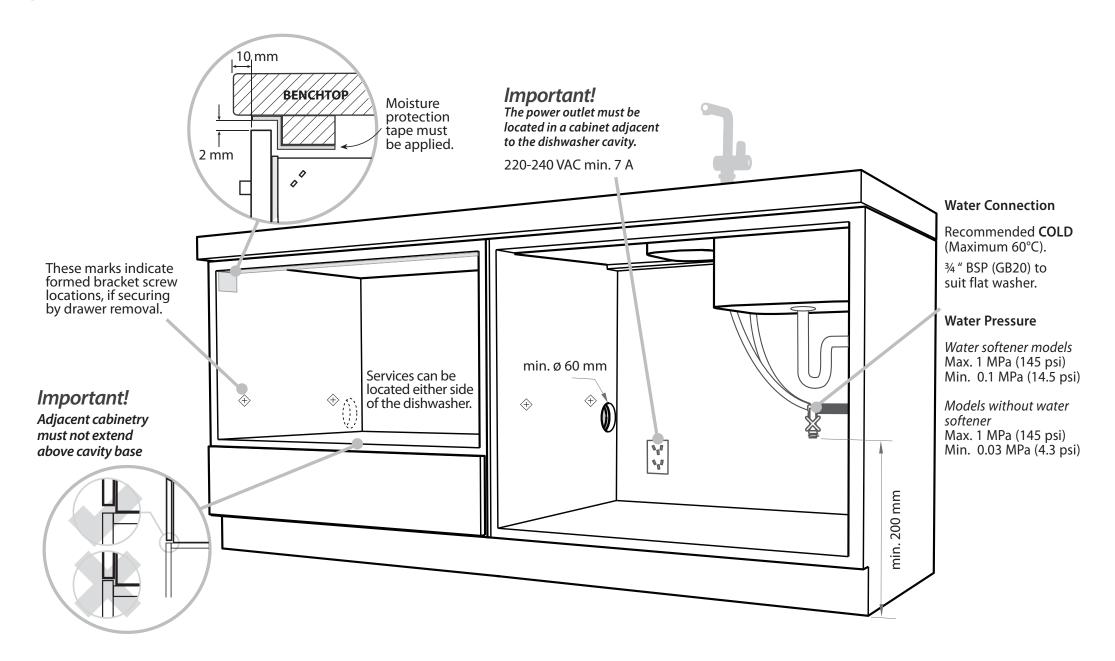

b INTEGRATED MODELS WITH REMOTE (NZ AU) ONLY - PREPARATION FOR EXTERNAL VENTING THROUGH SAME CABINET

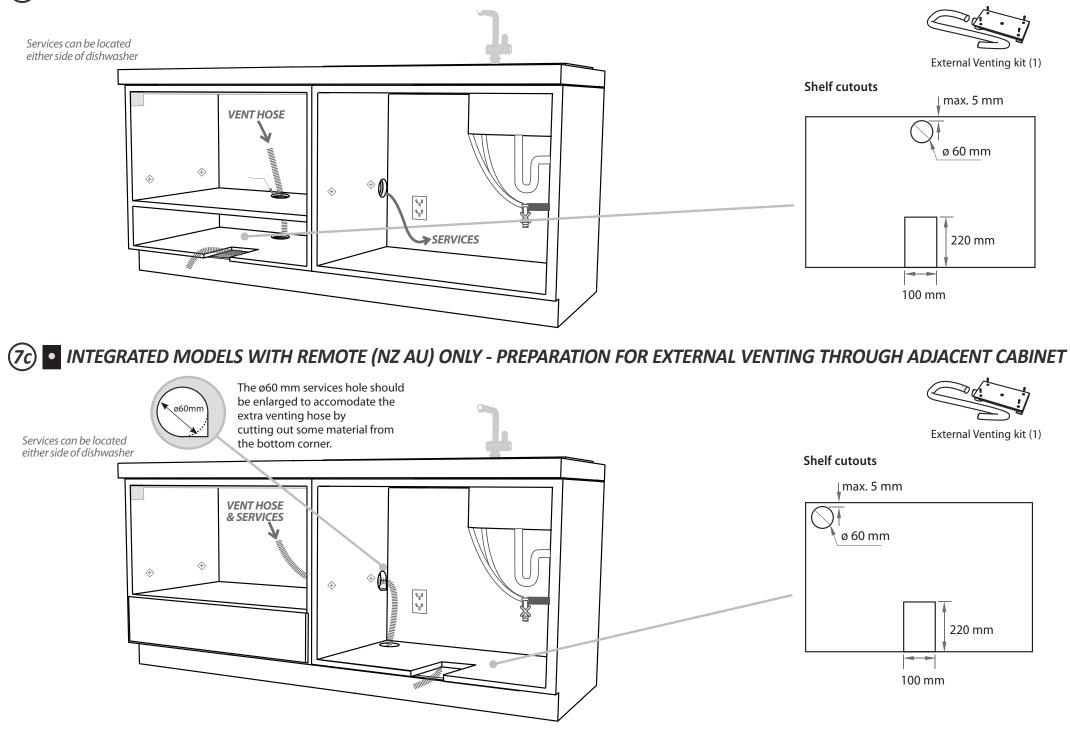


11

(8) MAXIMUM DISTANCE OF HOSES & CORD FROM CHASSIS EDGE


Left hand side	Right hand side		
Drain hose - 2000 mm	Drain hose - 1500 mm		
Inlet hose - 1650 mm	Inlet hose - 950 mm		
Power cord (excl. plug) - 750 mm	Power cord (excl. plug) - 400 mm		
Venting hose - 1265 mm	Venting_hose - 1925 mm		
(Integrated models with remote (NZ AU) only)	(Integrated models with remote (NZ AU) only)		


NOW CHOOSE WHICH INSTALLATION METHOD (a) or (b) IS MORE SUITABLE FOR YOUR CABINETRY...

RECOMMENDED METHOD (a) - SECURE WITHOUT DRAWER REMOVAL (FRAMELESS CABINETRY ONLY)

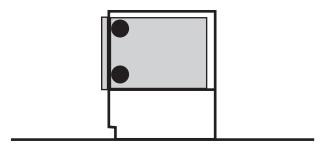



9a) ATTACH SIDE MOUNTING BRACKETS

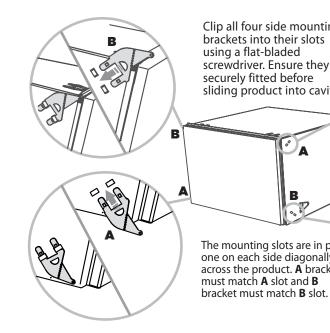

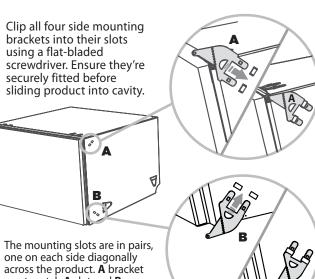


Integrated Models with REMOTE (NZ AU) ONLY -ATTACH VENTING HOSE

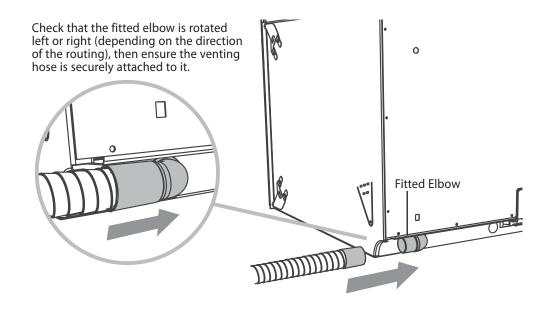


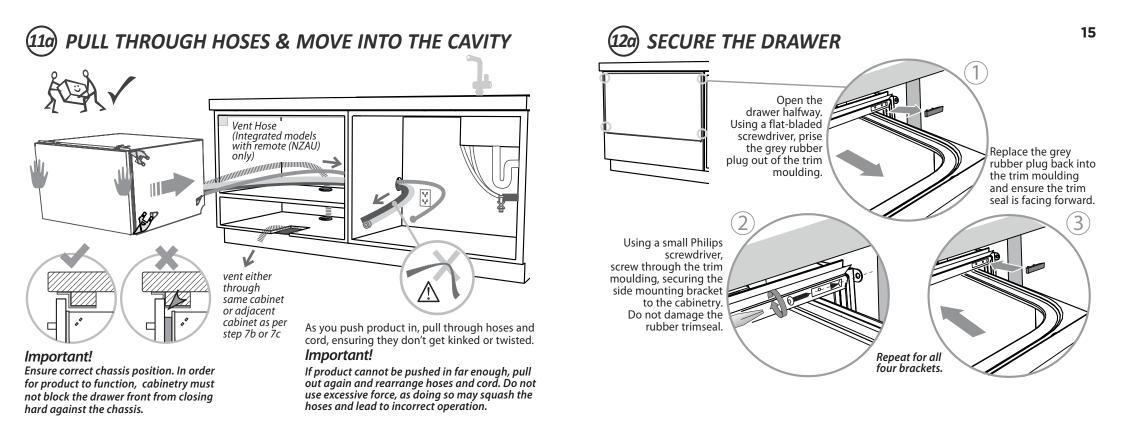

• INTEGRATED MODELS WITH REMOTE (NZ AU) ONLY - SECURE THE EXTERNAL VENT

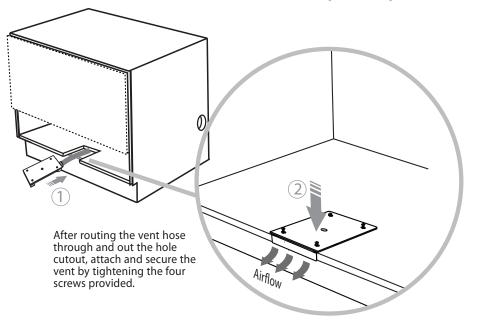



ALTERNATIVE METHOD (b) - SECURE BY DRAWER REMOVAL

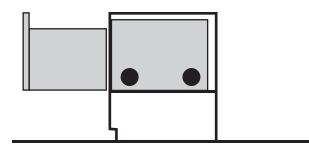

hard against the chassis.


(96) INTEGRATED MODELS WITH REMOTE (NZ AU) ONLY -ATTACH VENTING HOSE (10b) PULL THROUGH HOSES & MOVE INTO THE CAVITY

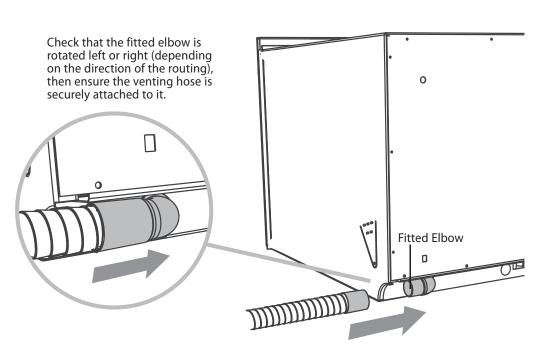


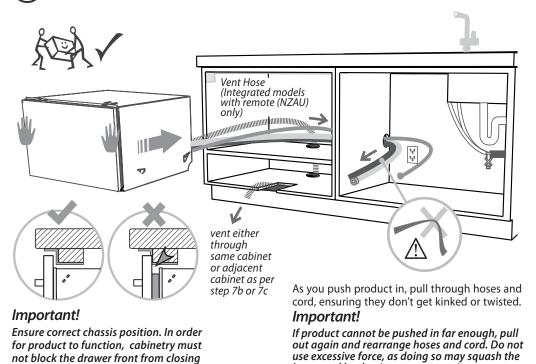


hoses and lead to incorrect operation.

11b REMOVE THE DRAWER

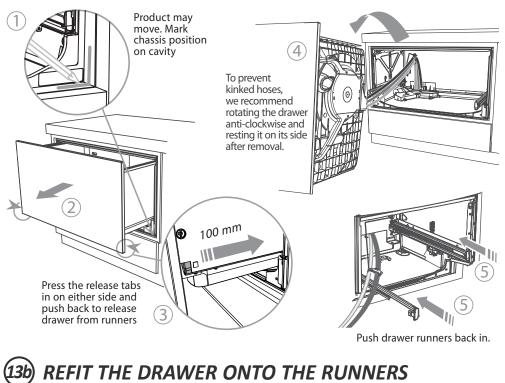


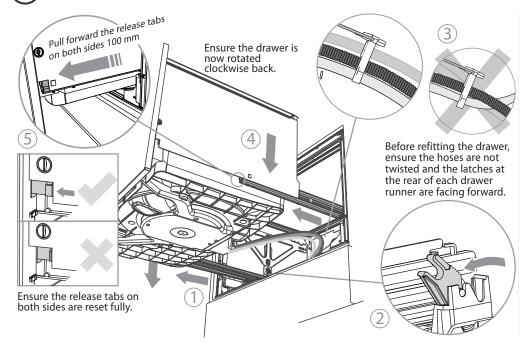



(12b) SECURE THE DRAWER TO THE CABINETRY

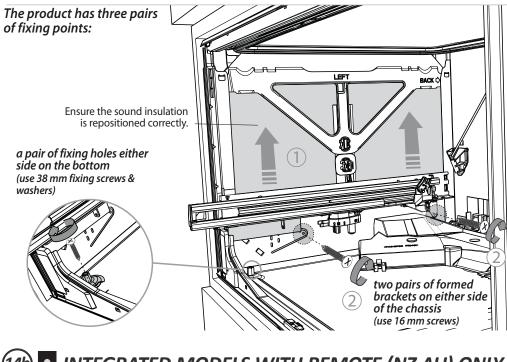


(14) INTEGRATED MODELS WITH REMOTE (NZ AU) ONLY -SECURE THE EXTERNAL VENT

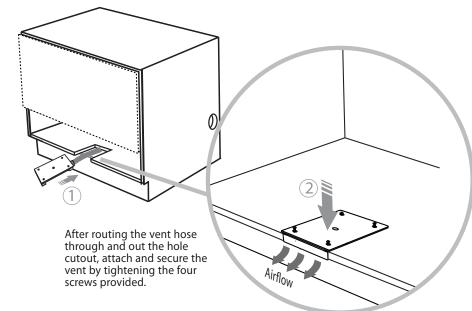

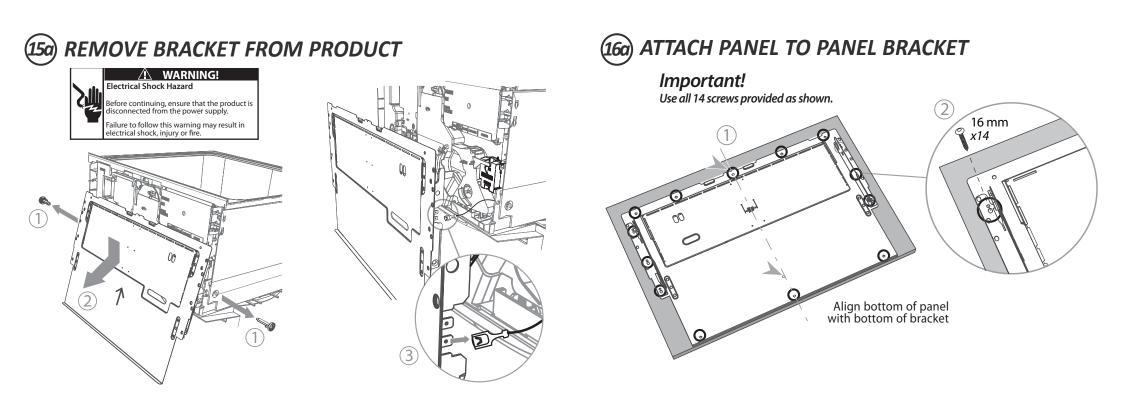


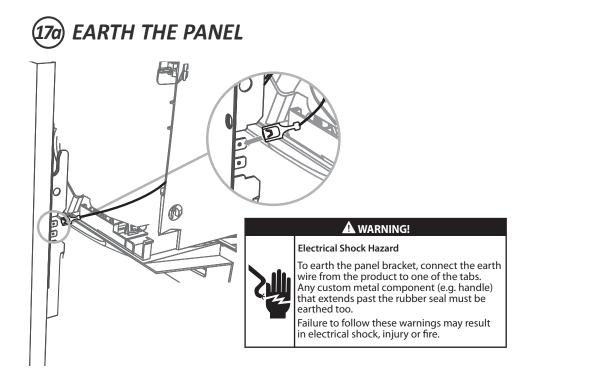

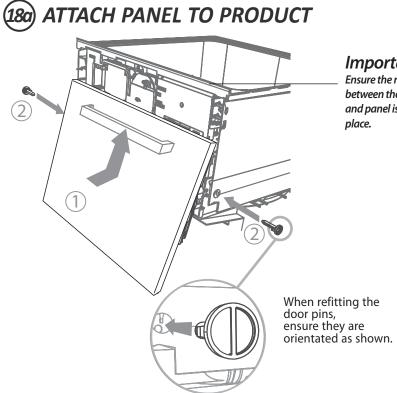



Important! Ensure the rubber seal between the drawer and panel is kept in

INTEGRATED MODELS WITH BADGE (GB IE) ONLY - INSTALLING THE FRONT PANEL & BADGE CONTROLS 20

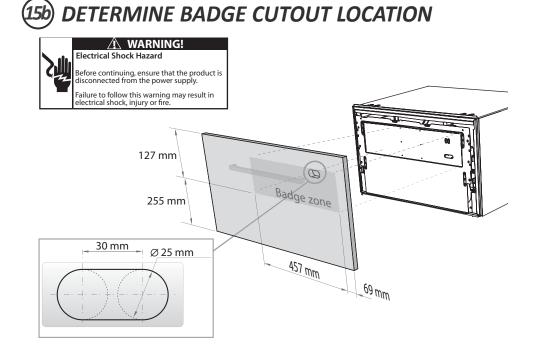


(16b) REMOVE BRACKET & DISCONNECT BADGE

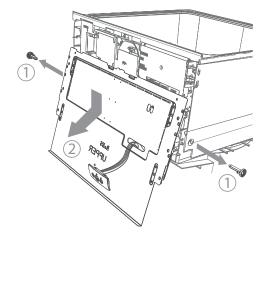


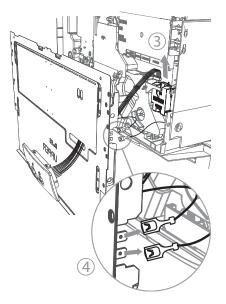


17b ROUTE BADGE WIRING THROUGH PANEL

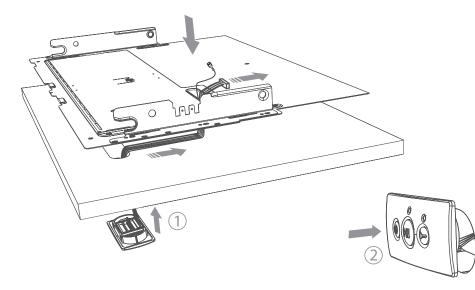


(186) ATTACH PANEL TO PANEL BRACKET

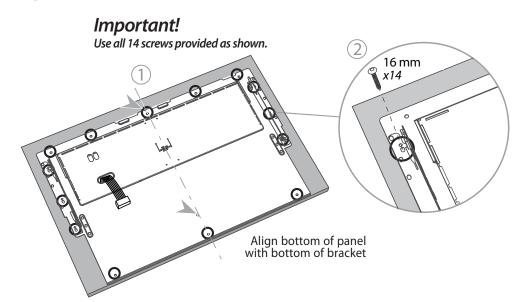

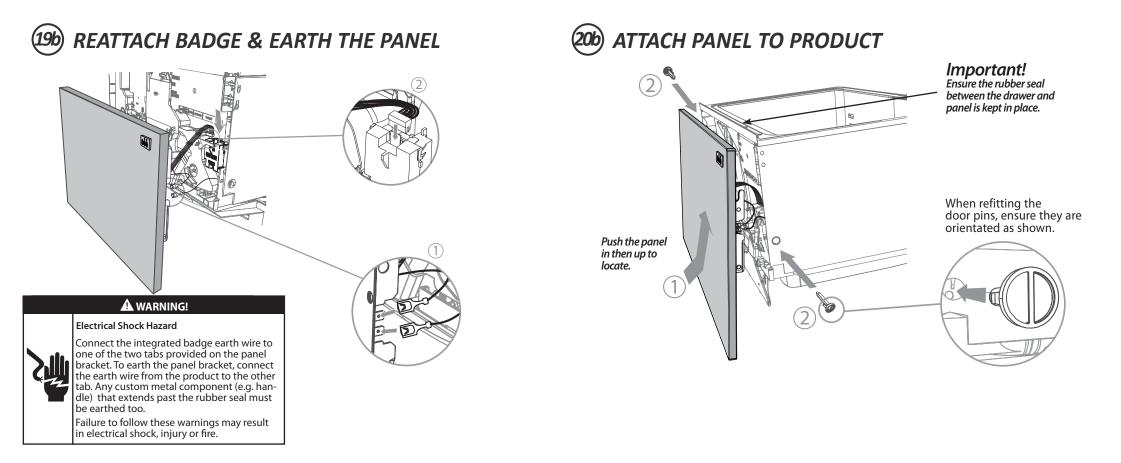

(21) ADJUST PANEL HEIGHT TO ALIGN THE CABINETRY GAPS

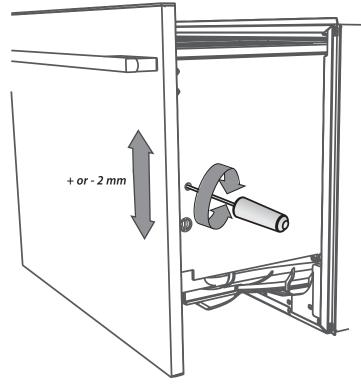

Insert an appropriately sized Philips screwdriver into the hole above the door pin and rotate the panel up or down to align the gaps in your cabinetry.

Repeat on the other side if necessary.


The panel has a maximum travel of 2 mm up or down.


Important!

Integrated models with remote control: Ensure that you maintain a minimum of 2 mm ventilation gap below the panel.

Designer models and ooo Integrated models with badge: Ensure that you maintain a minimum of 8 mm ventilation gap below the panel.


2) THERE ARE TWO DIFFERENT PLUMBING AND DRAINAGE OPTIONS. CHOOSE WHICH IS MORE SUITABLE.

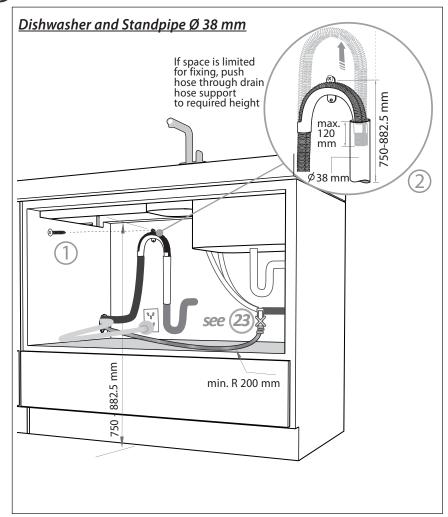

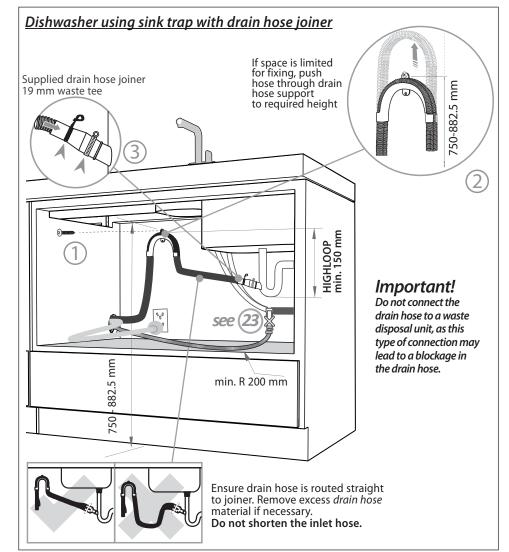

23


(23) CONNECT INLET HOSE TO COLD WATER (24) PLUG PRODUCT IN

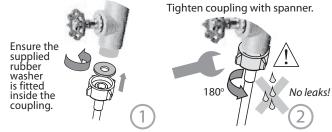



25) FINAL CHECKLIST

- Check all parts are installed.
- Ensure product is level, securely fastened to the cabinetry and opens and closes freely. The drawer must be free to fully close with no resistance from the cabinetry.
- Ensure inlet hose to water supply has supplied rubber washer fitted, and that it's tightened a further half turn after seal contact.
- Ensure any knockouts or plugs in drain connection have been drilled out and drain connection has been made.
- The drain hose joiner must not support the weight of excess hose material.
 Keep drain hose as fully extended as possible to prevent sagging. Any excess length of drain hose should be kept on the dishwasher side of the highloop.
- If connecting the drain hose to the sink trap, ensure the Highloop is a minimum 150 mm higher than the drain hose joiner.
- Ensure any packaging or tape securing the racks is removed from the drawer.
- Turn on the power and water supplies, then open the drawer. You should hear a beep and see a program indicator light up on the internal control panel.
 - Check the spray arms are in place and free to rotate.

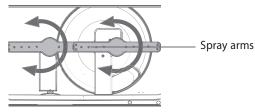

- Add three cups of water into the drawer. Press
 on the internal control panel until the indicator of the 'Rinse' program lights up. Close the drawer and press

 It o start the program.
- After the Rinse program has finished, ensure the dishwasher has run and drained correctly.
- Check water supply and drainage connection for leakage.

26 TROUBLESHOOTING

- Excessive water remaining above the filter plate, after the rinse cycle Check for a kinked drain hose or blocked waste connection, highloop not properly installed or drain hose not routed correctly.
- No water supply (This is displayed as a 'U1' fault -- see section 'If there is a fault' in the User guide for how to recognise this fault on models without a display.)

Check water is connected and turned on.

- The dishwasher is beeping continuously There is a fault. See section 'If there is a fault' in the User guide for further information and instructions.
- No program indicator lights up when the drawer is opened
 Ensure power is connected and is switched on. If it is and still no indicator
 ligths up, see the 'Preference options' section of the 'Quick start guide'. An
 option called 'Open drawer auto power-on' may need to be turned on.
- Water around water supply and drainage connections
 Check connections, existing plumbing and hoses for leaks. Check rubber washer and hose clamp are correctly fitted.
- If product is tipping
 Ensure the product is secured to the cabinetry.
- If front panels are misaligned

Check and relevel product. Check the cabinetry is square. Check and adjust front panel alignment if necessary.

- Drawer doesn't close properly Ensure nothing is obstructing the drawer from closing properly eg sound insulation, hoses or drawer latches.
- If a problem occurs, consult the 'Troubleshooting' section of the User guide.
- If after checking these points you still need assistance, please refer to the Service & Warranty book for warranty details and your nearest Authorised Service Centre, or contact us through our website, listed below.

Important!

SAVE THESE INSTRUCTIONS

The models shown in this document may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, please visit our local website listed at the end of this document or contact your local Fisher & Paykel dealer.