




# POWER FLEX

Model No. GGSY2921.0

Serial No. \_\_\_\_\_

Write the serial number in the space above for reference.

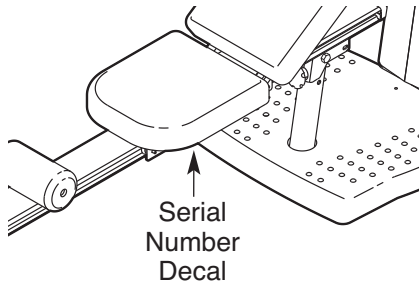

## USER'S MANUAL

### QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if a part is damaged or missing, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT DIRECTLY.


CALL TOLL-FREE:

**1-877-776-4777**

Mon.-Fri., 6 a.m.-6 p.m. MST

ON THE WEB:

[www.goldsgympowerflex.com](http://www.goldsgympowerflex.com)

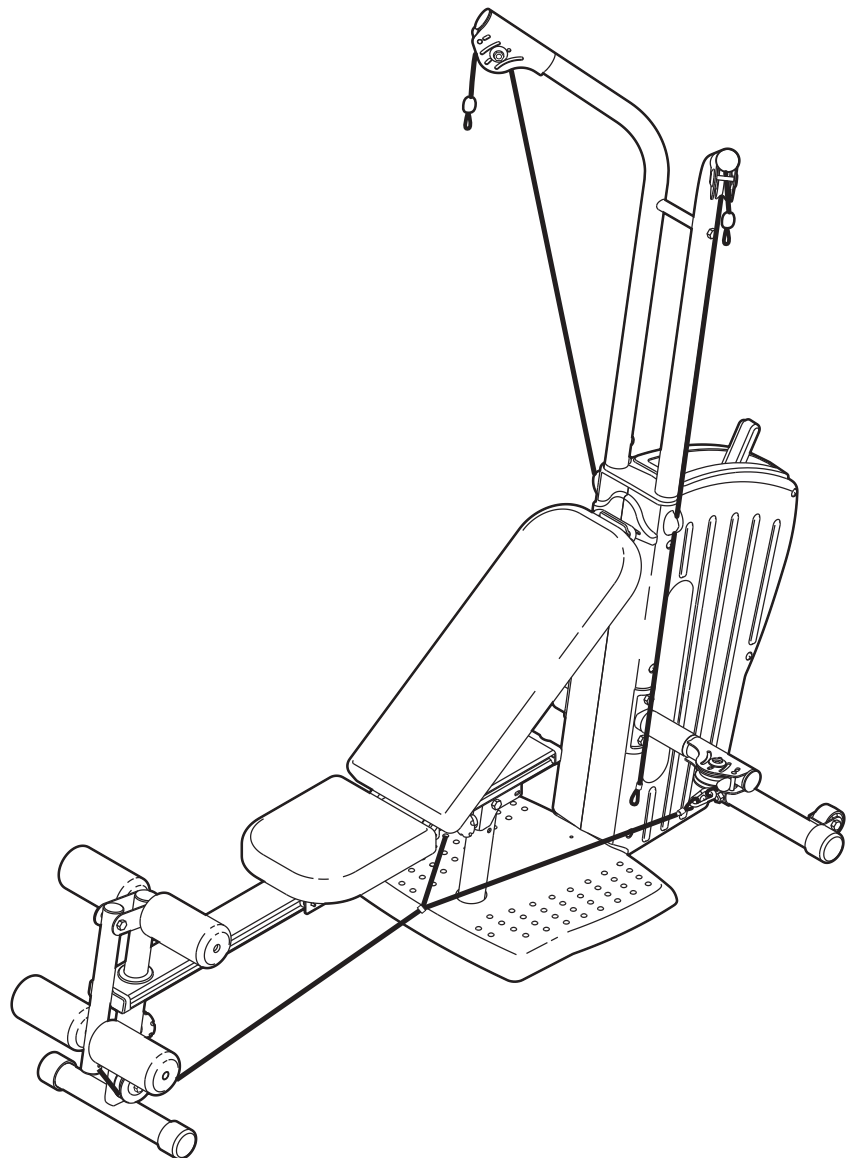

### ⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

---

# TABLE OF CONTENTS


IMPORTANT PRECAUTIONS .....	3
BEFORE YOU BEGIN .....	4
PART IDENTIFICATION CHART .....	5
ASSEMBLY .....	6
ADJUSTMENTS .....	11
ORDERING REPLACEMENT PARTS .....	.Back Cover
LIMITED WARRANTY .....	.Back Cover

Note: a PART LIST/EXPLODED DRAWING is attached in the center of this manual. Remove the PART LIST/EXPLODED DRAWING before beginning assembly.

# IMPORTANT PRECAUTIONS

**⚠ WARNING:** To reduce the risk of serious injury, read the following important precautions before using the resistance system.

1. Read all instructions in this manual and in the accompanying literature, and all warnings on the resistance system before using the resistance system. Use the resistance system only as described in this manual.
2. It is the responsibility of the owner to ensure that all users of the resistance system are adequately informed of all precautions.
3. The resistance system is intended for home use only. Do not use the resistance system in any commercial, rental, or institutional setting.
4. Keep the resistance system indoors, away from moisture and dust. Place the resistance system on a level surface, with a mat beneath it to protect the floor or carpet. Make sure that there is enough clearance around the resistance system to mount, dismount, and use the resistance system.
5. Inspect and properly tighten all parts regularly. Replace any worn parts immediately.
6. Keep children under 12 and pets away from the resistance system at all times.
7. Always wear athletic shoes for foot protection.
8. Keep hands and feet away from moving parts.
9. Make sure that the nylon ropes remain on the pulleys at all times. If the nylon ropes bind while you are exercising, stop immediately and make sure that the nylon ropes are on all of the pulleys.
10. The resistance system is designed to support a maximum user weight of 250 pounds.
11. Use the resistance system only with the included resistance bands, or those included with an optional GOLD'S GYM MAX PACK. Do not use other types of weight or resistance.
12. Pull on the long nylon rope only while sitting on the bench or standing on the base cover. Pull on the medium nylon ropes only while sitting on the bench, with the seat in one of the three positions closest to the upright base, or while standing on the base cover.
13. If you feel pain or dizziness at any time while exercising, stop immediately and begin cooling down.
14. The decals shown below have been placed on the resistance system in the locations shown on page 4. If a decal is missing or illegible, call the toll-free telephone number on the front cover of this manual and order a free replacement decal. Apply the replacement decal in the location shown.

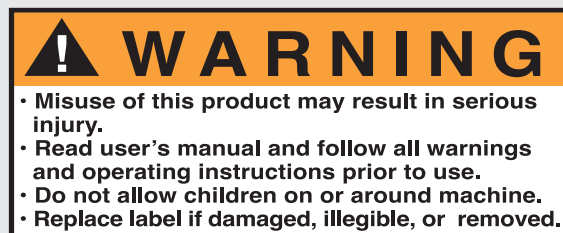

Decal 1



Decal 2

**⚠ WARNING:** Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

# BEFORE YOU BEGIN


Thank you for selecting the versatile GOLD'S GYM® POWER FLEX resistance system. The resistance system offers a selection of weight stations designed to develop every major muscle group of the body. Whether your goal is to tone your body, build dramatic muscle size and strength, or improve your cardiovascular system, the resistance system will help you to achieve the specific results you want.

**For your benefit, read this manual carefully before using the resistance system.** If you have additional questions, see the front cover of this manual. To help us assist you, please note the product model number

and serial number before calling. The model number is GGSY2921.0. The serial number can be found on a decal attached to the resistance system (see the front cover of this manual).


**To avoid a registration fee for any service needed under warranty, you must register the resistance system at [www.goldsgympowerflex.com/registration](http://www.goldsgympowerflex.com/registration).**

Before reading further, please familiarize yourself with the parts that are labeled in the drawing below.

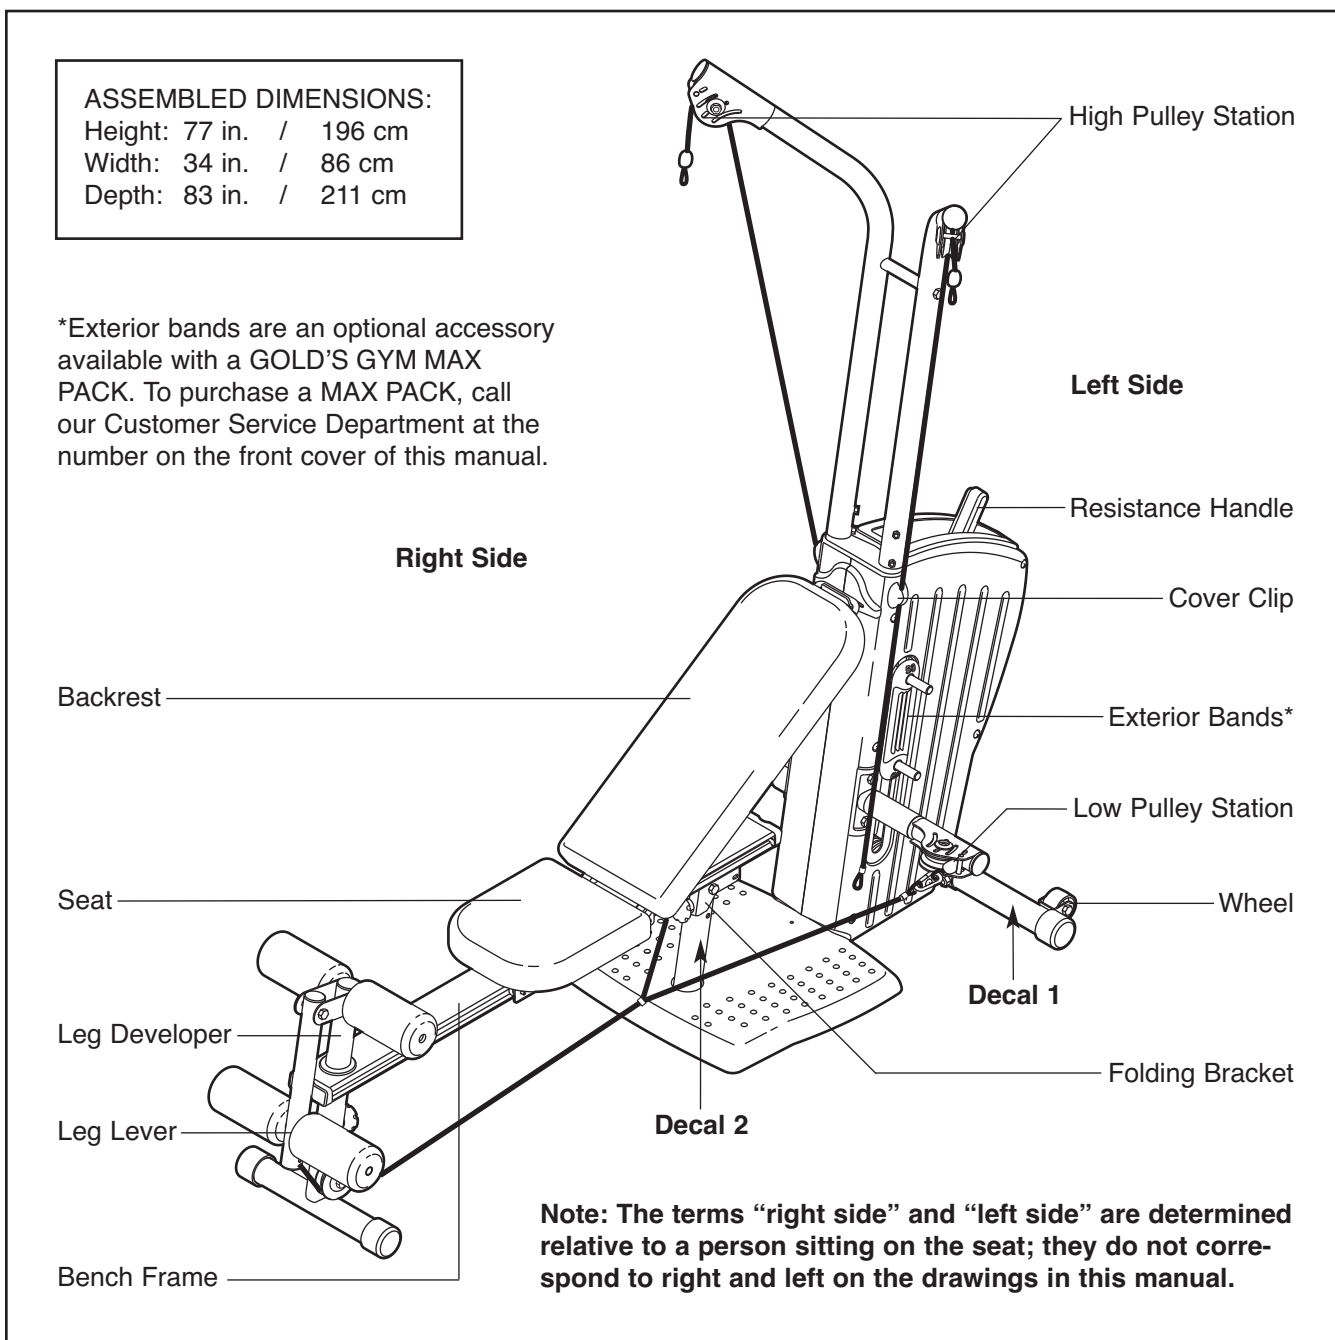

# PART IDENTIFICATION CHART

Refer to the drawings below to identify small parts used in assembly. The number in parentheses by each drawing is the key number of the part, from the PART LIST in the center of this manual. **Note: Some small parts may have been pre-attached. If a part is not in the parts bag, check to see if it has been pre-attached.**

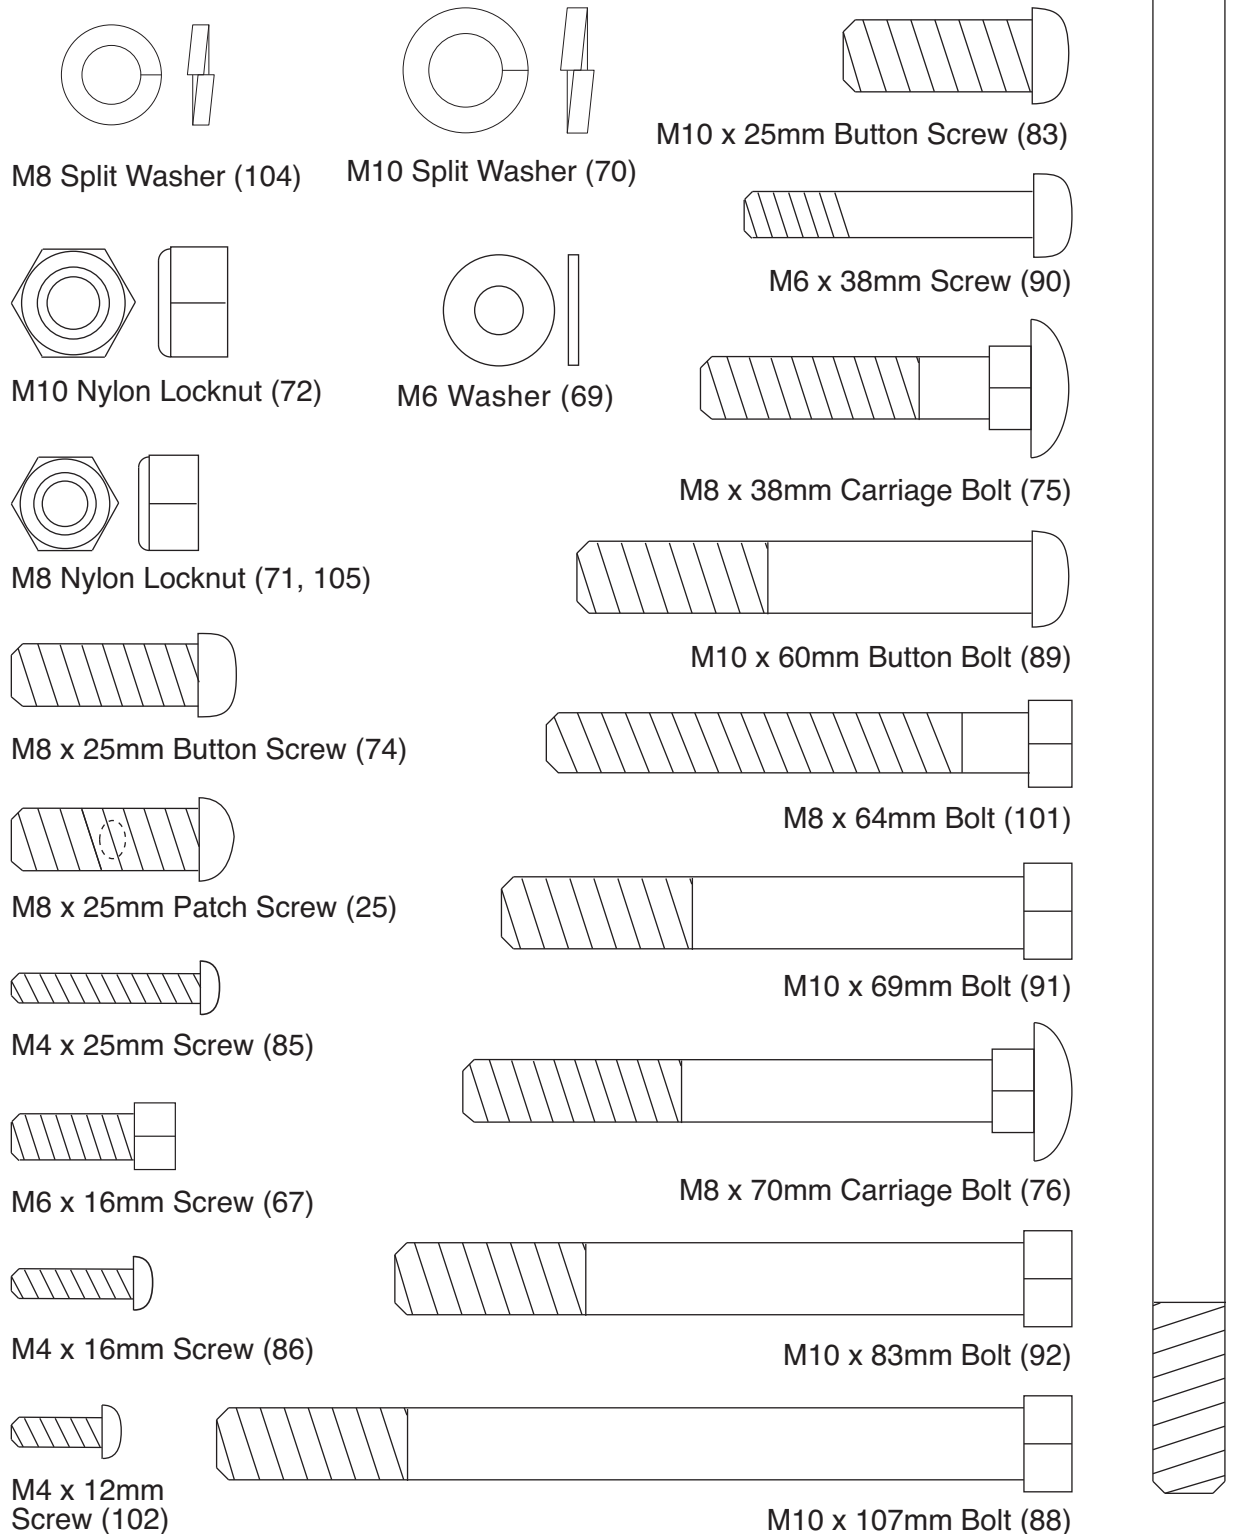

# ASSEMBLY

## Make Things Easier for Yourself






This manual is designed to ensure that the resistance system can be assembled successfully by anyone. Most people find that by setting aside plenty of time, assembly will go smoothly.

**Before beginning assembly, carefully read the following information and instructions:**

- Assembly requires two people.
- For help identifying small parts, use the **PART IDENTIFICATION CHART** on page 5.
- Tighten all parts as you assemble them, unless instructed to do otherwise.
- As you assemble the system, make sure all parts are oriented as shown in the drawings.

- Place all parts in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed.

**The following tools (not included) are required for assembly:**

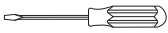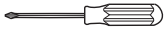- **Two adjustable wrenches** 
- **One rubber mallet** 
- **One standard screwdriver** 
- **One Phillips screwdriver** 
- **One Allen wrench (included)** 
- **Lubricant, such as grease or petroleum jelly.**

Assembly will be more convenient if you have a socket set, a set of open-end or closed-end wrenches, or a set of ratchet wrenches.


1. **Before beginning assembly, be sure that you have read and understand the information in the box above.**

Attach two Plastic Feet (46) to the Base Stabilizer (3) with two M4 x 16mm Screws (86).

Attach the Base Stabilizer (3) to the Base (4) with two M8 x 38mm Carriage Bolts (75), two M8 x 64mm Bolts (101), and four M8 Black Nylon Locknuts (71).


2. Attach two Plastic Feet (46) to the Base Cover (5) with two M4 x 16mm Screws (86).

Attach the Base Cover (5) to the Base Stabilizer (3) and Base (4) with three M4 x 25mm Screws (85).

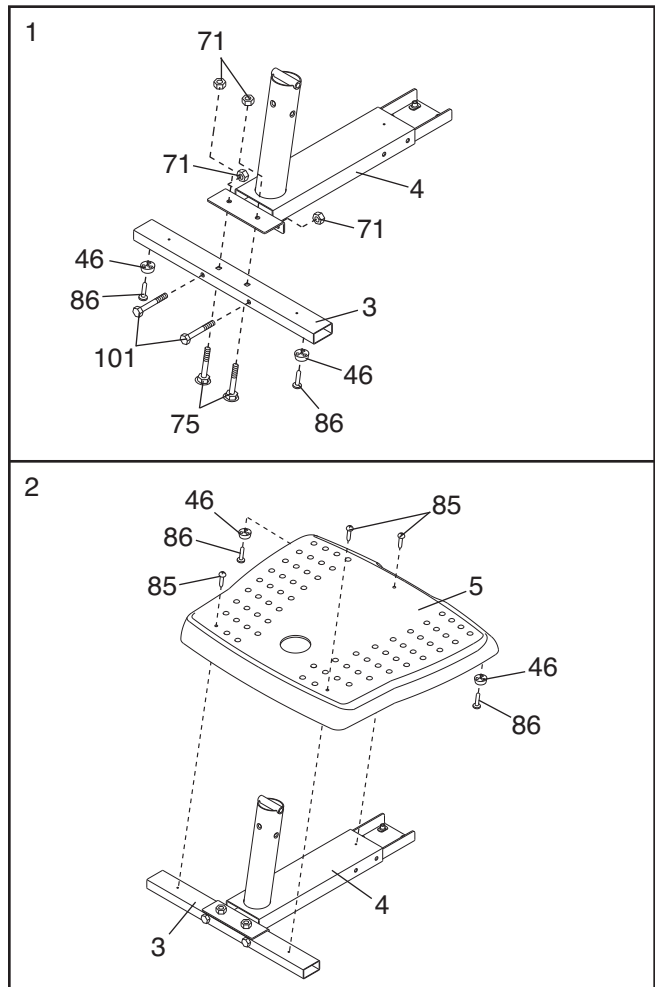


3. Attach the Left Arm (12) to the Upright Base (6) with two M10 x 25mm Button Screws (83) and two M10 Split Washers (70). **Note: Make sure that the grip tape is on top.**


**Attach the Right Arm (not shown) in the same manner.**

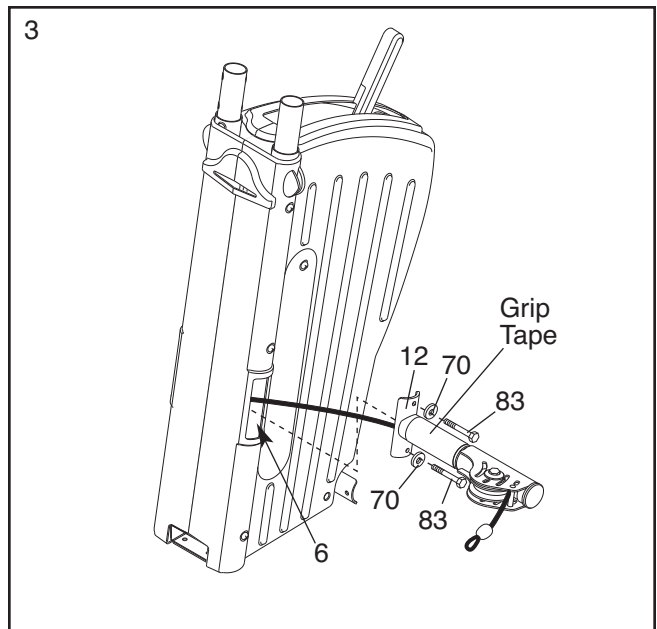

4. Orient the Upright Stabilizer (7) as shown. Attach the Upright Stabilizer to the Upright Base (6) with two M8 x 70mm Carriage Bolts (76) and two M8 Black Nylon Locknuts (71).

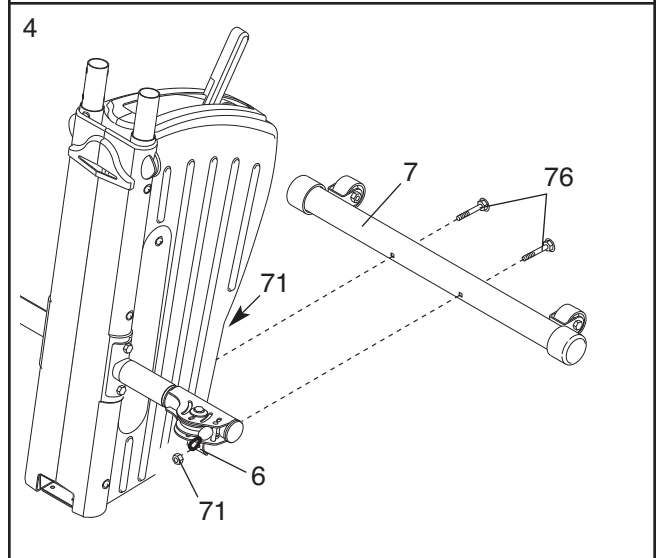

5. Slide the Base (4) into the Upright Base (6). Tip the Upright Base onto its back. Attach the Base to the Upright Base with the four M8 x 25mm Patch Screws (25).

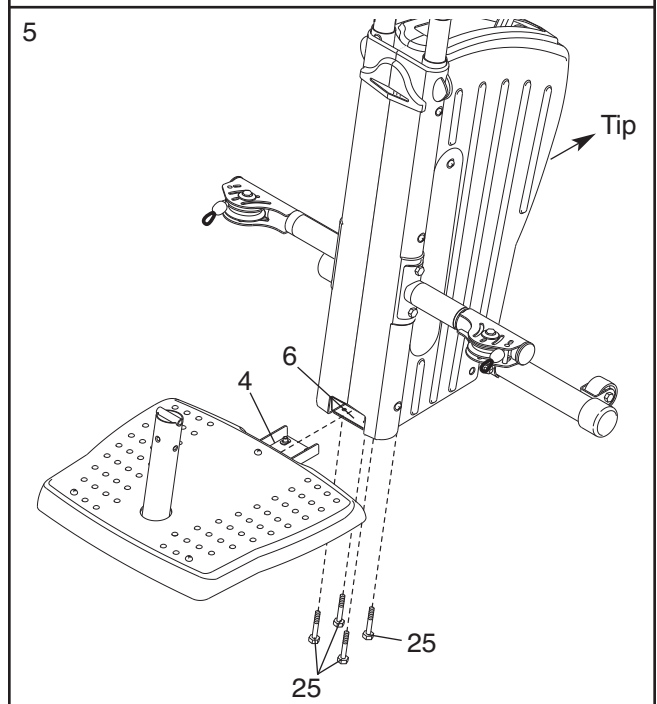


- Press two 57.1mm Round Outer Caps (59) onto the ends of the Front Leg (1).


Pull the Seat Knob (36) out as far as it will go and remove the Seat Frame (19) from the Bench Frame (2) and set it aside.

Orient the Bench Frame (2) as shown. Slide the Front Bench Frame Plate (39) into the indicated end of the Bench Frame, and align the holes in the Plate with the holes in the Bench Frame.

Orient the Front Leg (1) as shown. Attach the Front Leg to the Bench Frame (2) with the Front Bench Frame Plate (39), four M8 x 25mm Button Screws (74) and four M8 Split Washers (104).

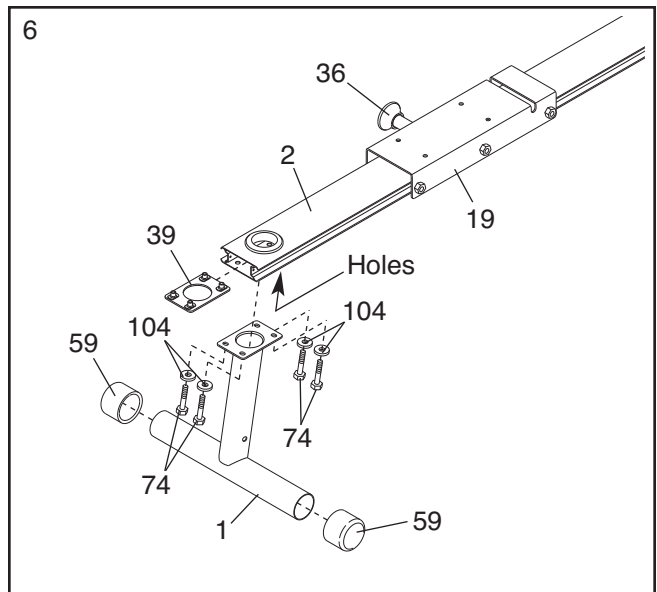


- Orient the Seat (20) and Seat Backing (115) as shown. Attach the Seat and Seat Backing to the Seat Frame (19) with four M6 x 16mm Screws (67).

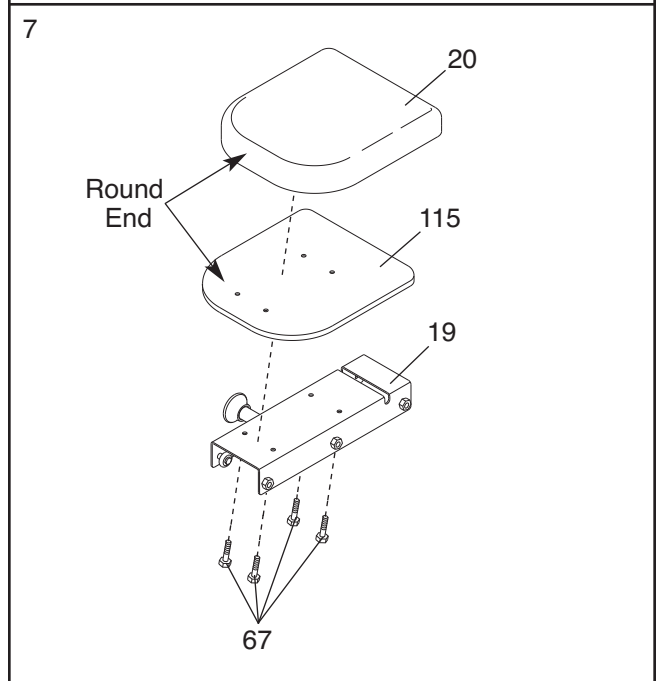

- Pull the Seat Knob (36, not shown) out as far as it will go, and slide the Seat Frame (19) onto the Bench Frame (2). Engage the Seat Knob into the third hole from the end of the Bench Frame.


Press the two Frame Inner Caps (58), with the wide ends oriented as shown, into the ends of the Bench Frame (2). Attach the Caps with four M4 x 16mm Screws (86).

Locate the Short Nylon Rope (54), which has three ends connected in the middle with a bracket. **Note that two ends of the Rope go out of one side of the bracket, and the third (single) end goes out the other side of the bracket.** Route the single end of the Short Nylon Rope under a "V"-Pulley (49). Attach the Pulley to the Front Leg (1) with an M10 x 107mm Bolt (88) and an M10 Nylon Locknut (72).

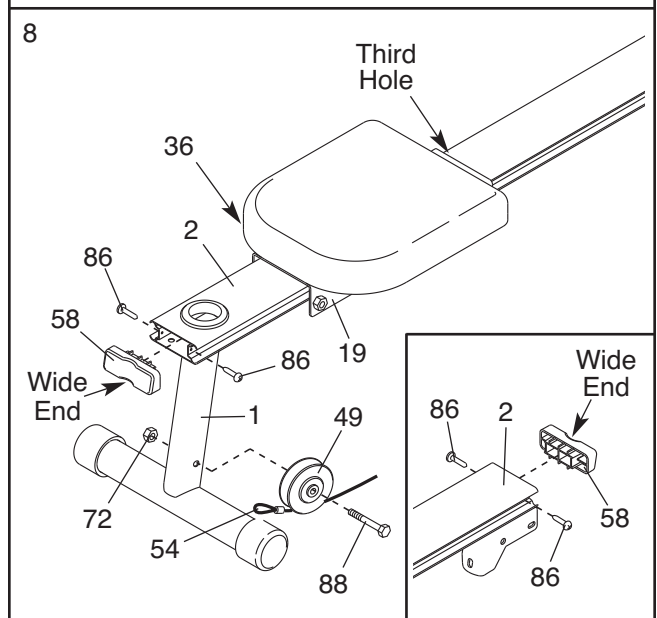



- Lubricate an M10 x 83mm Bolt (92). Attach the Pivot Bracket (23) to the Base (4) with the Bolt, an M10 Nylon Locknut (72), and a Bench Knob (41).

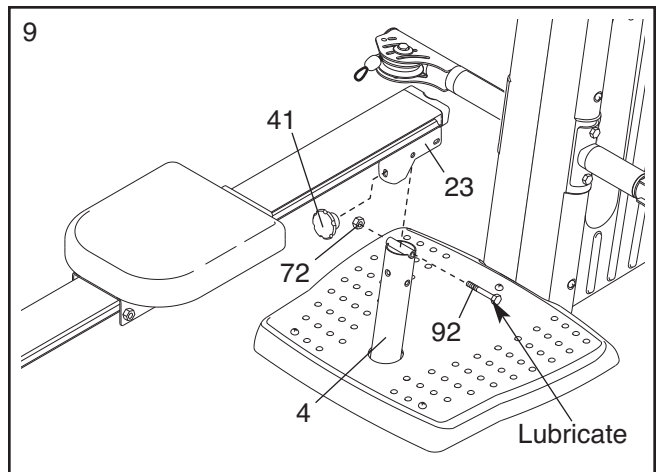


- Press two 2" Round Inner Caps (56) into the top and bottom of the Leg Developer (21). Press two 46mm Round Inner Caps (55) into the top and bottom of the Leg Lever (22).

Attach the Eyebolt (63) to the indicated side of the Leg Lever (22) with an M8 Zinc Nylon Locknut (105).

Lubricate an M10 x 69mm Bolt (91). Attach the Leg Lever (22) to the Leg Developer (21) with the Bolt and an M10 Nylon Locknut (72).


Press four 19mm Round Inner Caps (60) into the tubes on the Leg Developer (21) and the Leg Lever (22). Slide four Foam Pads (38) onto the tubes.

Slide the Leg Developer (21) into the Bench Frame (2). Align the hole in the Leg Developer with a hole in the Front Leg (1). Tighten a Bench Knob (41) into the hole in the Leg Developer.

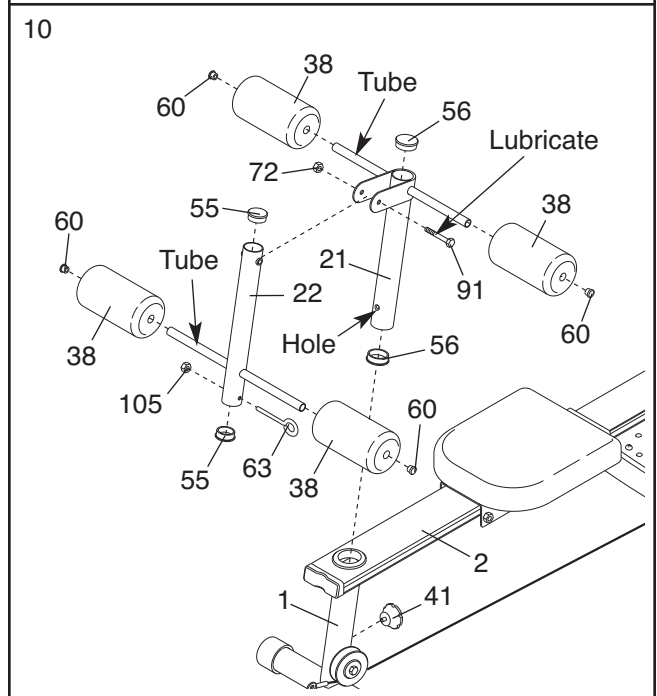


- Press four 1" Square Inner Caps (57) into the ends of the Backrest Frame (17). Attach a Plastic Foot (46) to the Backrest Frame with an M4 x 12mm Screw (102).


Orient the Backrest (18) and Backrest Backing (116) as shown. Attach the Backrest and Backrest Backing to the Backrest Frame (17) with four M6 Washers (69) and four M6 x 38mm Screws (90).

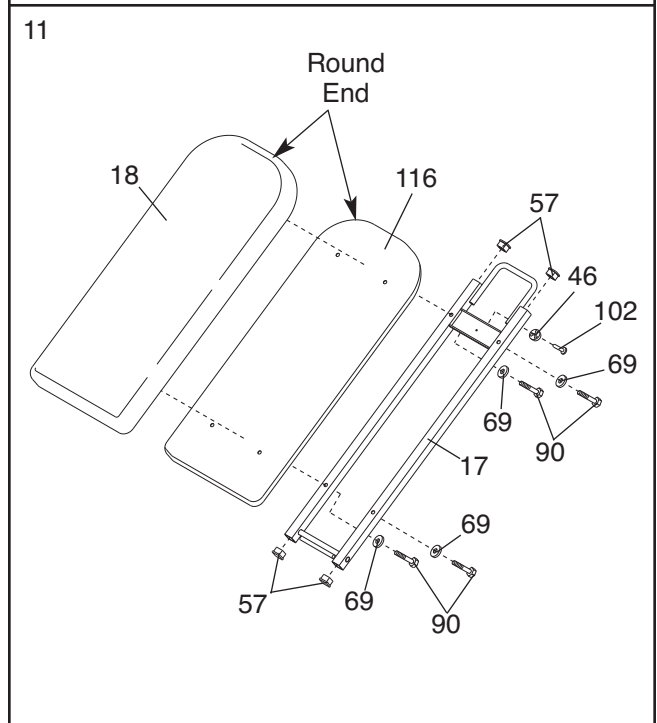

12. Slide the Backrest Frame (17) into the slot in the Seat Frame (19). Rest the Backrest Frame against the Upright Base (6).

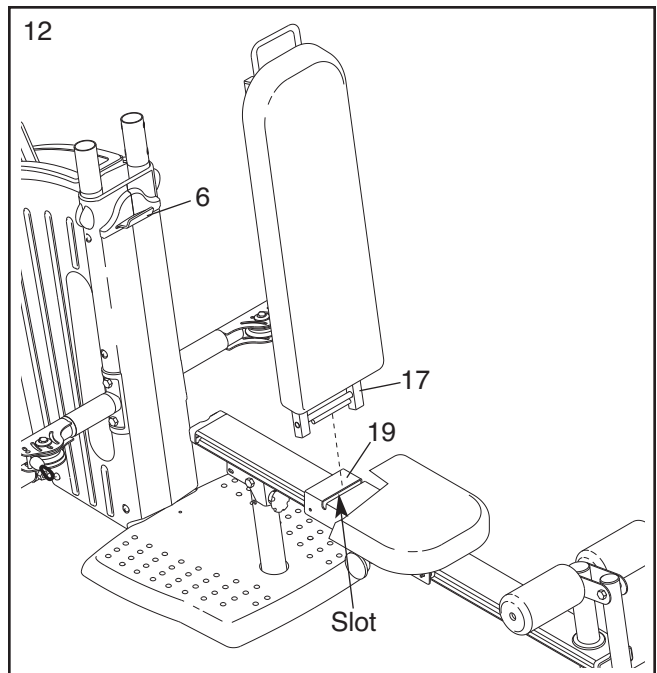


13. Wrap a Medium Nylon Rope (52) around a “V”-Pulley (49) with the ball on the side shown. **Note: Be sure the ball is on the correct end of the Rope; it should slide over the bracket holding the loop.** Attach the Pulley to the Pulley Arm (14) on the Right Upright (9) with an M10 x 60mm Button Bolt (89), two Pulley Bushings (48), and an M10 Nylon Locknut (72).

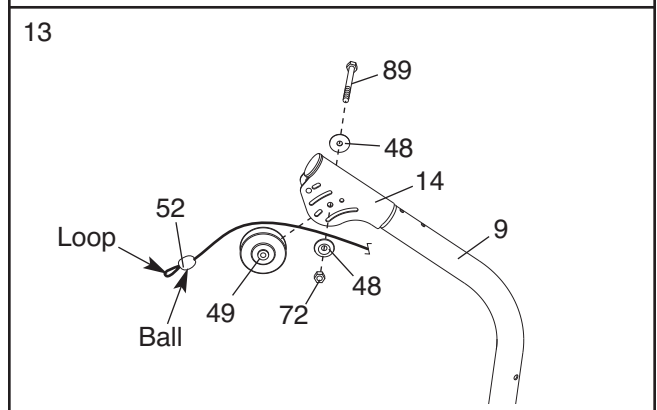

**Repeat this step with the Left Upright (not shown).**

14. Slide the Upright Cover (34) onto the Upright Base (6). Tip the Upright Cover forward and press down so that the front tabs engage the Left and Right Covers (10, 11). Press the back of the Upright Cover so that the rear tabs engage the Left and Right Covers.

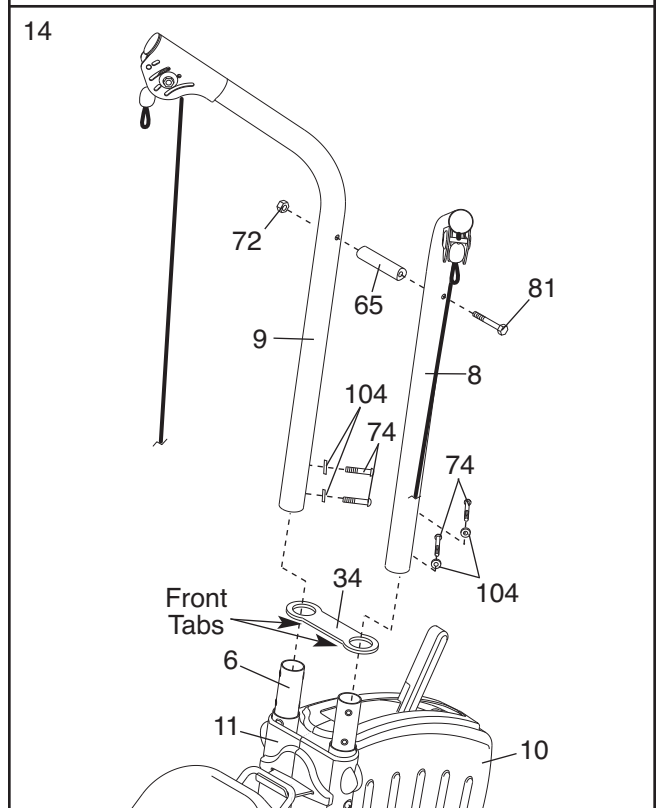

Orient the Left and Right Uprights (8, 9) as shown. Slide the Uprights onto the Upright Base (6). Attach the Left Upright to the Right Upright with an M10 x 215mm Bolt (81), the Upright Spacer (65), and an M10 Nylon Locknut (72). **Do not tighten the Nylon Locknut yet.**

Attach the Left and Right Uprights (8, 9) to the Upright Base (6) with four M8 x 25mm Button Screws (74) and four M8 Split Washers (104).

**Tighten the M10 Nylon Locknut (72).**

15. Make sure that all parts have been properly tightened. The use of the remaining parts will be explained in ADJUSTMENTS, beginning on the following page.

# ADJUSTMENTS


The instructions below describe how each part of the resistance system can be adjusted. Refer to the exercise guide accompanying this manual to see how the resistance system should be set up for each exercise. **IMPORTANT: When attaching the leg press strap, ankle strap, or handles, make sure that the accessories are in the correct starting position for the exercise to be performed. If there is any slack in the nylon ropes as an exercise is performed, the effectiveness of the exercise will be reduced.**

## ATTACHING THE SHORT NYLON ROPE

The Short Nylon Rope (54) has three ends connected in the middle with a bracket. **Note that two ends of the Rope go out of one side of the bracket, and the third (single) end goes out the other side of the bracket.**

To use the Leg Lever (22), attach the single end of the Short Nylon Rope (54) to the Eyebolt (63) on the Leg Lever with a Cable Clip (31), as shown in the inset drawing.


Attach the shorter of the other two ends of the Short Nylon Rope (54) to the left end of the Long Nylon Rope (53) with a Cable Clip (31). Attach the final end of the Short Nylon Rope to the right end of the Long Nylon Rope in the same manner. **Note: Only the left end of the Long Nylon Rope is shown.**

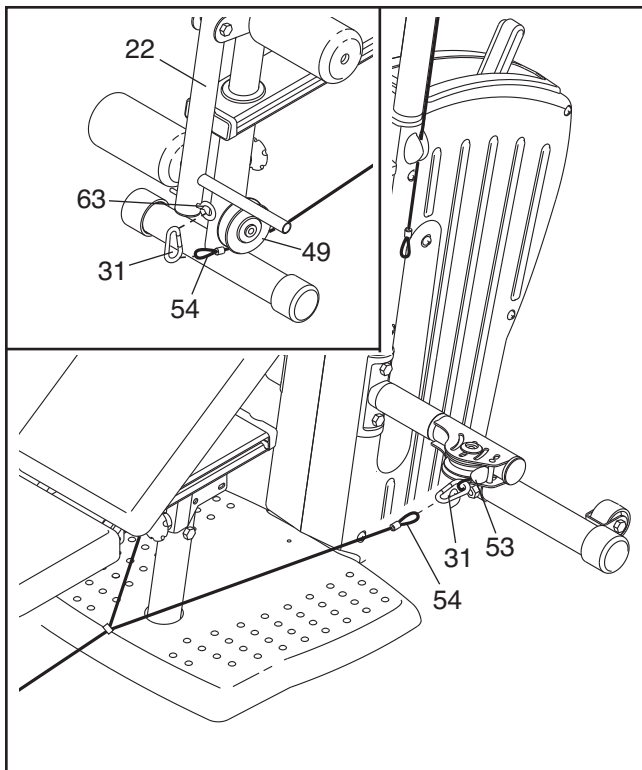

## ATTACHING THE MEDIUM NYLON ROPE

To use the high pulley stations, attach each Medium Nylon Rope (52) to an end of the Long Nylon Rope (53) with a Cable Clip (31).


When the Medium Nylon Ropes (52) are not connected to the Long Nylon Rope (53), snap the Medium Nylon Ropes into the cover clips on the Left and Right Covers (10, 11) to hold them out of the way.

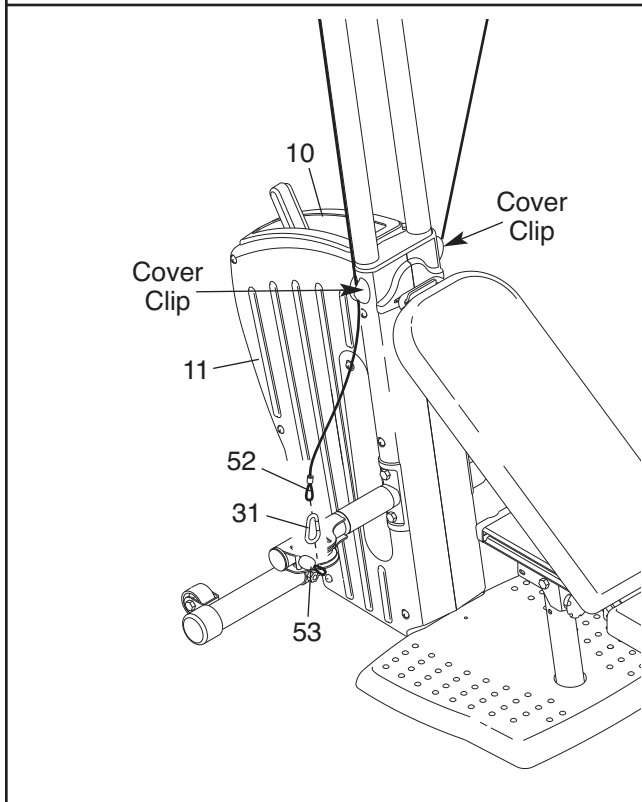

## ADJUSTING THE LEG DEVELOPER

To adjust the height of the Leg Developer (21), unscrew the Bench Knob (41) from the Front Leg (1). Align the hole in the Leg Developer with one of the three holes in the Front Leg. Retighten the Knob into the Front Leg and Leg Developer.


To remove the Leg Developer (21), make sure the short nylon rope is not attached to the eyebolt in the leg lever (see ATTACHING THE SHORT NYLON ROPE on page 11). Unscrew the Bench Knob (41) from the Front Leg (1) and lift the Leg Developer out of the Bench Frame (2).

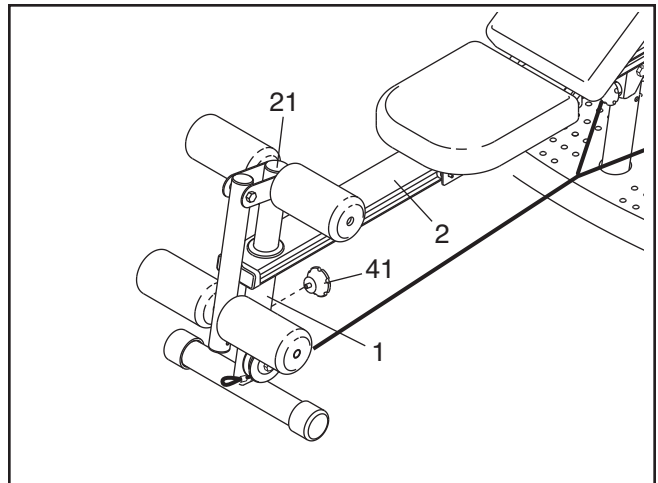

## ADJUSTING THE BACKREST


The Backrest (18) can be used in any of five positions: two level positions or three inclined positions. To use the Backrest in a level position, pull the Seat Knob (36) out as far as it will go. Move the Seat (20) and engage the Knob into one of the two adjustment holes in the Bench Frame (2) that are closest to the Leg Developer (21). Rest the Backrest on the Bench Frame.

To use the Backrest (18) in an inclined position, pull the Seat Knob (36) out as far as it will go and move the Seat (20). Engage the Knob into one of the three adjustment holes in the Bench Frame (2) that are closest to the Upright Base (6). Rest the Backrest Frame (17) on the bracket on the Upright Base, or against the Left and Right Uprights (8, 9).

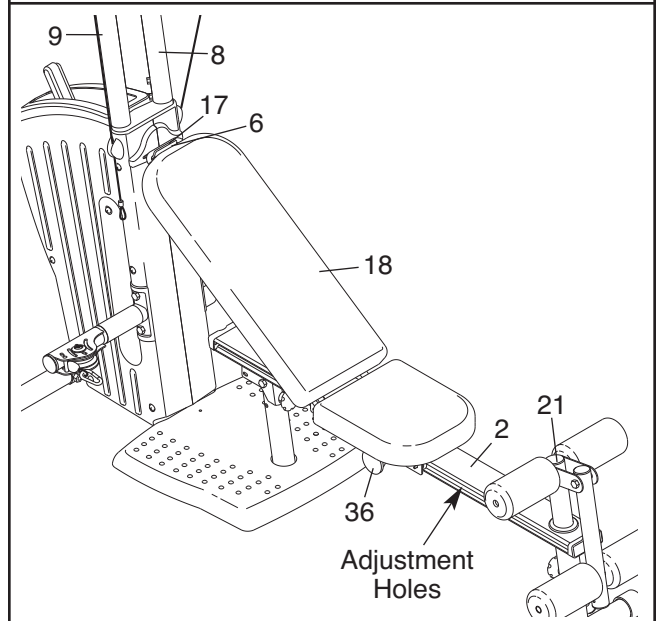


## REMOVING THE BACKREST

To remove the Backrest (18), raise the Backrest Frame (17) so that it stands directly over the Seat Frame (19). Lift the Backrest Frame straight up and out of the Seat Frame so the indicated bar disengages the Seat Frame.

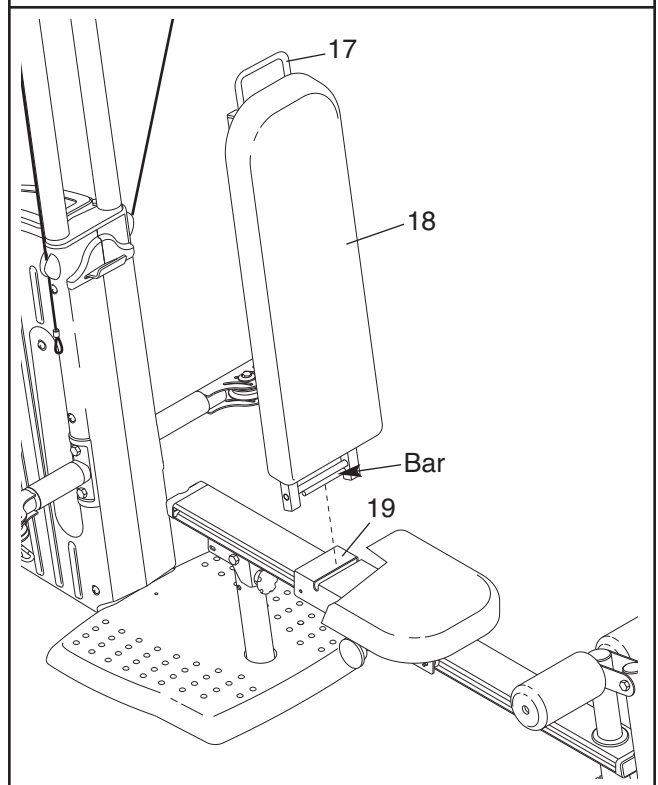

## ADJUSTING THE SEAT

To allow the Seat (20) to roll up and down the Bench Frame (2), remove the backrest from the Seat Frame (see REMOVING THE BACKREST on page 12). Pull the Seat Knob (36) out as far as it will go, and turn the Knob so that the pin rests at the end of the “L”-slot (see the inset drawing).

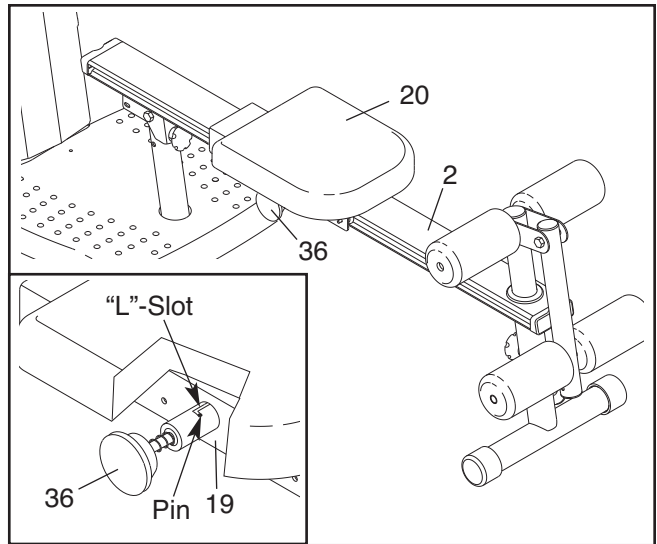


## ATTACHING THE ACCESSORIES TO THE HIGH OR LOW PULLEY STATIONS

The Handles (45) can be attached to the Medium Nylon Ropes (52) with two Cable Clips (31).

The Handles (45) and the Ankle Strap (not shown) can be attached to the Long Nylon Rope (not shown) in the same manner.

When using the Leg Press Strap (not shown), attach one side to the left end of the Long Nylon Rope (not shown), and the other side to the right end of the Long Nylon Rope, with two Cable Clips (31).

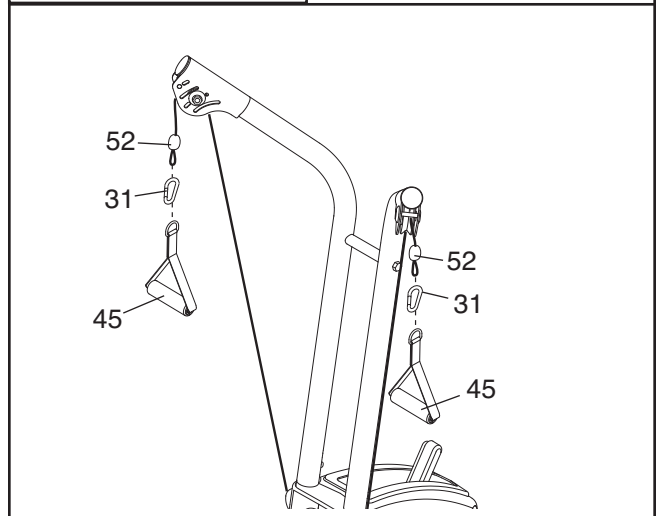


## ADJUSTING THE RESISTANCE

To change the amount of resistance, squeeze the resistance handle so that the pin on the Left Handle (26) disengages the Resistance Bracket (not shown). Line up the resistance handle with the number on the Left Cover (10) corresponding to the desired amount of resistance, and release the handle. Be sure that the pin on the Left Handle engages a hole in the Resistance Bracket.

Note: If you have purchased an optional GOLD'S GYM MAX PACK, a decal should have been placed on the Right Cover (11). This decal indicates the amount of resistance at each resistance handle position, when one or two sets of exterior bands have been attached to the resistance system. (To attach the exterior bands see ATTACHING EXTERIOR BANDS, on page 14.)

Note: The resistance system uses progressive resistance. As the bands begin to stretch, the amount of resistance will increase gradually. As the bands stretch further, the resistance will increase rapidly.

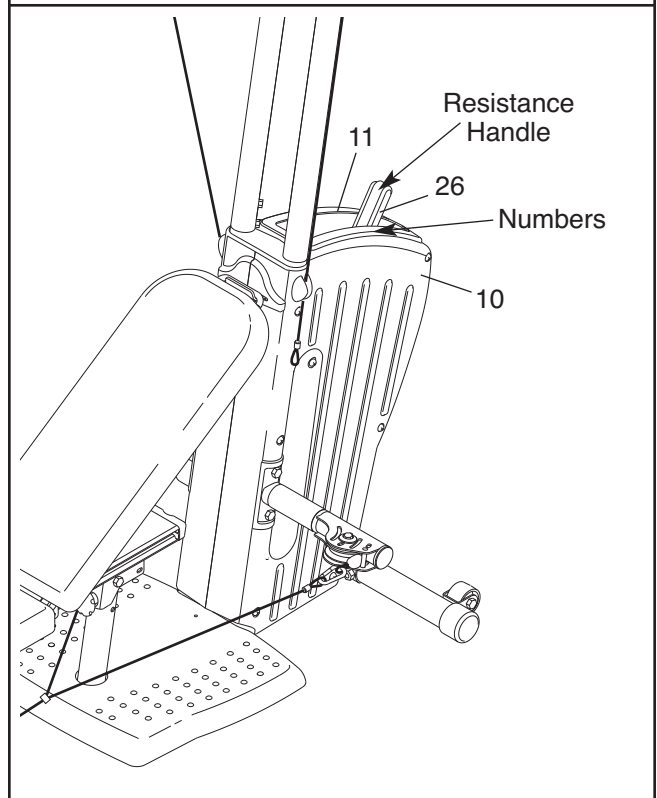

## STORING THE RESISTANCE SYSTEM

To store the resistance system, secure the Seat Knob (36) into the adjustment hole in the Bench Frame (2) that is closest to the Leg Developer (21) (see ADJUSTING THE BACKREST on page 12). Remove the indicated Bench Knob (41) from the Base (4) and lift the Leg Developer so that it rests against the Left and Right Uprights (8, 9). Engage the Knob into the indicated hole in the Base.

## ATTACHING EXTERIOR BANDS

Remove the 1/2" x 1" Button Screw (110) with the 1/2" Small Washer (82) from each side of the resistance system. Remove the Side Covers (42) from the Left and Right Covers (10, 11). Remove the 1/2" x 1" Button Screw with the 1/2" Washer (106) from each side of the resistance system.


Slide the four 17.5mm Spacers (A) onto the four Resistance Rods (B). (See the inset drawing for correct orientation.) Slide the two removed 1/2" Washers (106) onto two of the Rods.

Attach a Resistance Rod (B) and a Resistance Rod with a 1/2" Washer (106) to the indicated locations on the resistance system. Attach the other two Resistance Rods to the other side of the resistance system.

Slide an Exterior Band (C) onto each set of Resistance Rods (B). For more resistance, add a second Band to each set of Rods. **Note: It may be necessary to stretch the Bands to slide them onto the Rods.** Secure the Exterior Bands with the two Clips (D).

To purchase a MAX PACK, call our Customer Service Department at the number listed on the front cover of this manual. The MAX PACK shown is model number GGMC0921.

**▲ IMPORTANT:** Always place the same number of Exterior Bands (C) on each side of the resistance system. Use only the Bands included with a GOLD'S GYM MAX PACK. Always secure the Bands with the Clips (D).

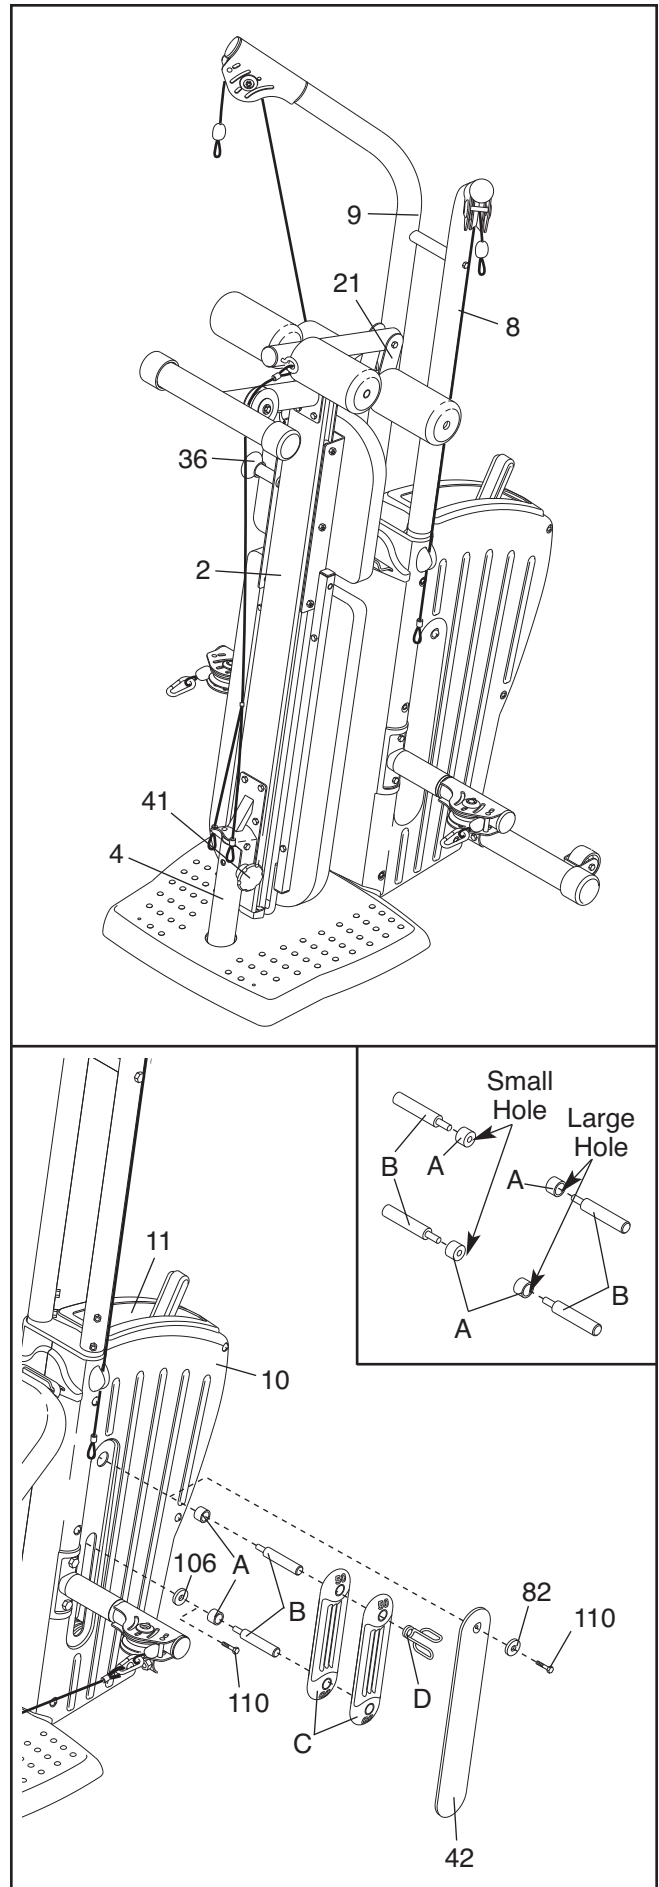

# PART LIST—Model No. GGSY2921.0


R1005A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Front Leg	61	4	50.8mm Round Inner Cap
2	1	Bench Frame	62	2	Wheel
3	1	Base Stabilizer	63	1	Eyebolt
4	1	Base	64	1	Resistance Spacer
5	1	Base Cover	65	1	Upright Spacer
6	1	Upright Base	66	1	M6 Zinc Nut
7	1	Upright Stabilizer	67	4	M6 x 16mm Screw
8	1	Left Upright	68	6	11.1mm Spacer
9	1	Right Upright	69	6	M6 Washer
10	1	Left Cover	70	4	M10 Split Washer
11	1	Right Cover	71	8	M8 Black Nylon Locknut
12	1	Left Arm	72	15	M10 Nylon Locknut
13	1	Right Arm	73	6	M6 Zinc Nylon Locknut
14	4	Pulley Arm	74	14	M8 x 25mm Button Screw
15	1	Resistance Bracket	75	2	M8 x 38mm Carriage Bolt
16	1	Resistance Leg	76	2	M8 x 70mm Carriage Bolt
17	1	Backrest Frame	77	2	M6 x 72mm Bolt
18	1	Backrest	78	1	M10 x 69mm Bolt
19	1	Seat Frame	79	2	M10 x 40mm Bolt
20	1	Seat	80	1	M10 x 127mm Bolt
21	1	Leg Developer	81	1	M10 x 215mm Bolt
22	1	Leg Lever	82	2	1/2" Small Washer
23	1	Pivot Bracket	83	4	M10 x 25mm Button Screw
24	1	Left Resistance Plate	84	1	M10 x 94mm Bolt
25	4	M8 x 25mm Patch Screw	85	7	M4 x 25mm Screw
26	1	Left Handle	86	14	M4 x 16mm Screw
27	1	Right Handle	87	1	Bench Leg Bushing
28	1	"U"-Bracket	88	1	M10 x 107mm Bolt
29	2	Band	89	4	M10 x 60mm Button Bolt
30	2	Resistance Wheel	90	4	M6 x 38mm Screw
31	5	Cable Clip	91	1	M10 x 69mm Bolt
32	4	13.5mm Spacer	92	1	M10 x 83mm Bolt
33	2	Inner Resistance Rod	93	2	M10 x 17mm Hex Screw
34	1	Upright Cover	94	2	M6 x 23mm Bolt
35	1	6000ZZ Bearing	95	1	M6 x 50mm Bolt
36	1	Seat Knob	96	1	M6 x 40mm Bolt
37	6	Seat Wheel	97	1	M10 x 75mm Bolt
38	4	Foam Pad	98	1	M10 x 50mm Shoulder Bolt
39	1	Front Bench Frame Plate	99	6	M6 Shoulder Bolt
40	1	Rear Bench Frame Plate	100	7	M6 Black Nylon Locknut
41	2	Bench Knob	101	2	M8 x 64mm Bolt
42	2	Side Cover	102	1	M4 x 12mm Screw
43	1	Leg Press Strap	103	2	M6 x 16mm Screw
44	1	Ankle Strap	104	14	M8 Split Washer
45	2	Handle	105	1	M8 Zinc Nylon Locknut
46	5	Plastic Foot	106	2	1/2" Washer
47	8	Pulley Arm Bushing	107	1	M10 Nylon Jamnut
48	8	Pulley Bushing	108	2	M4 x 16mm Tec Screw
49	5	"V"-Pulley	109	1	Spring
50	11	3 1/2" Pulley	110	4	1/2" x 1" Button Screw
51	3	Cable Trap	111	2	M8 x 25mm Button Bolt
52	2	Medium Nylon Rope	112	1	M10 x 25mm Bolt
53	1	Long Nylon Rope	113	1	Steel Wheel
54	1	Short Nylon Rope	114	1	608Z Bearing
55	2	45mm Round Inner Cap	115	1	Seat Backing
56	2	2" Round Inner Cap	116	1	Backrest Backing
57	4	1" Square Inner Cap	117	2	Shear Protector
58	2	Frame Inner Cap	118	1	Right Resistance Plate
59	4	57.1mm Round Outer Cap	#	1	User's Manual
60	4	19mm Round Inner Cap	#	1	Exercise Guide

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice.

# EXPLODED DRAWING—Model No. GGSY2921.0

R1005A

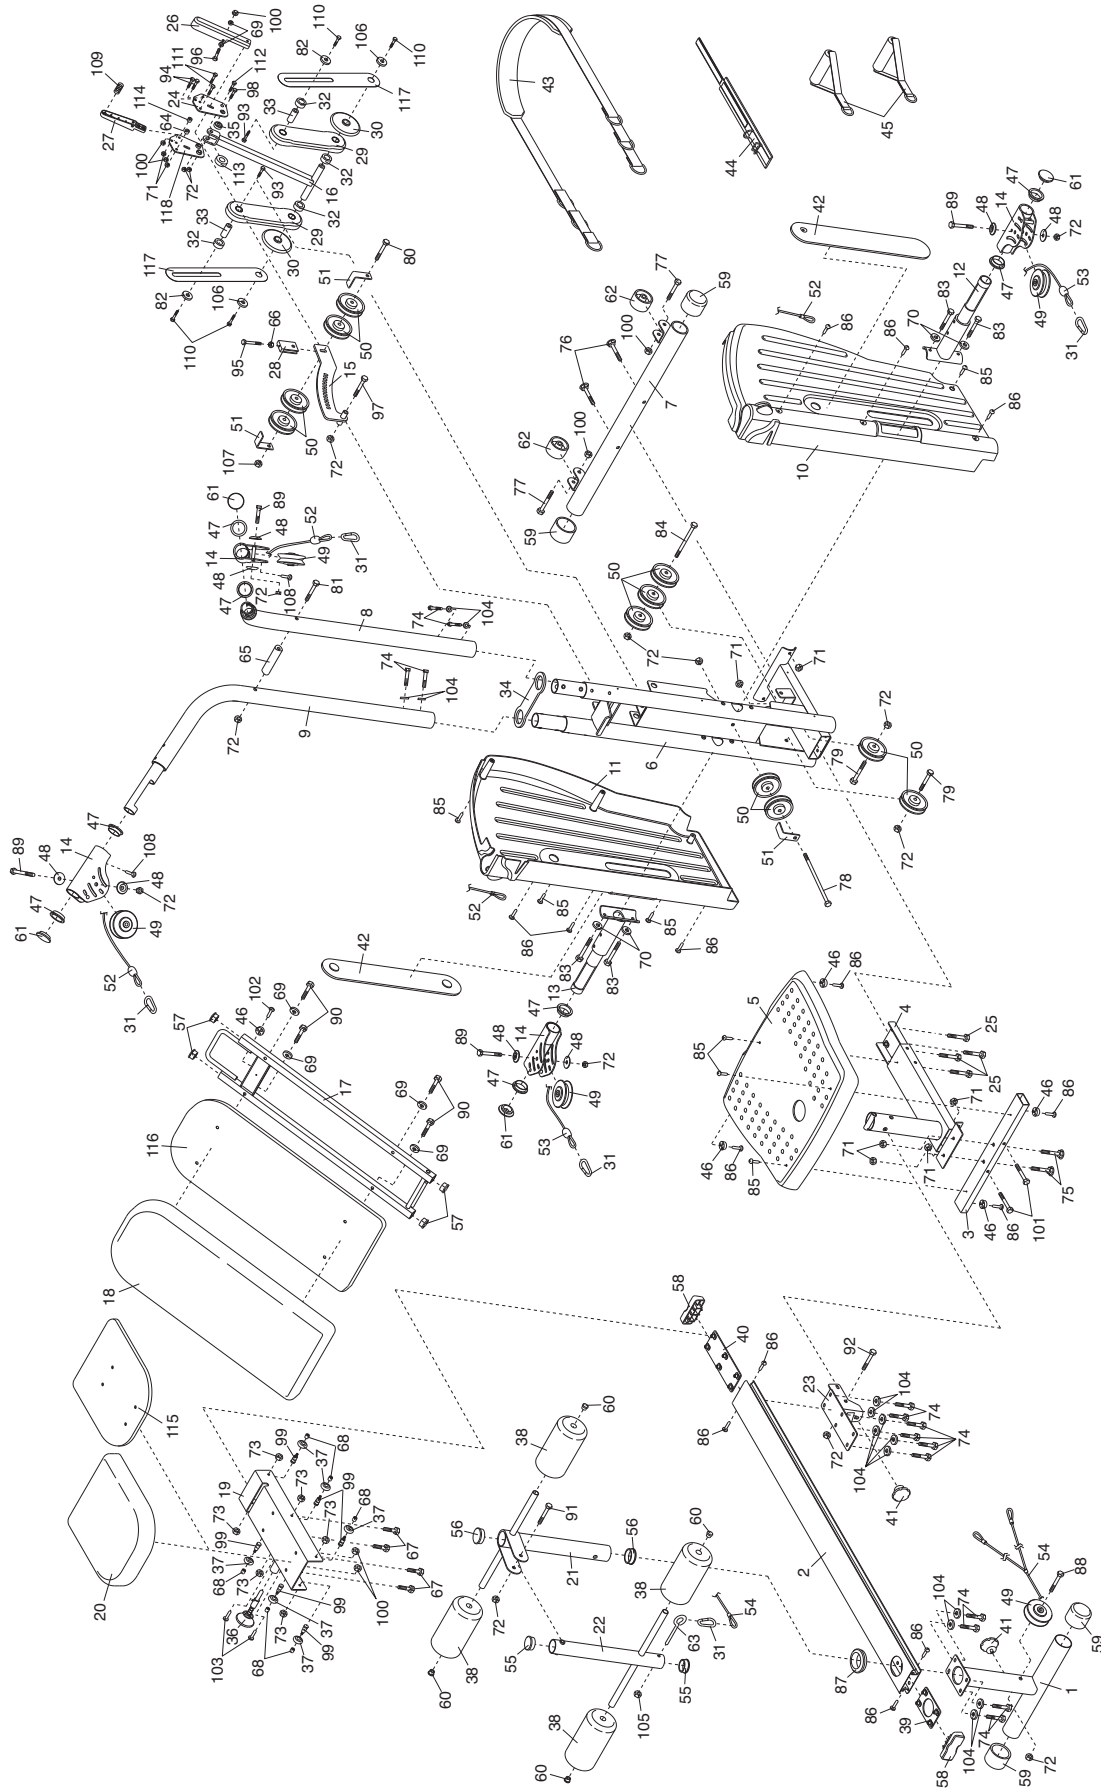



---

# ORDERING REPLACEMENT PARTS

To order replacement parts, see the front cover of this manual. To help us assist you, please be prepared to give the following information:

1. the MODEL NUMBER of the product (GGSY2921.0)
2. the NAME of the product (GOLD'S GYM POWER FLEX resistance system)
3. the SERIAL NUMBER of the product (see the front cover of this manual)
4. the KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST in the center of this manual)

---

## LIMITED WARRANTY

**WHAT IS COVERED**—The entire GOLD'S GYM POWER FLEX resistance system ("Product") is warranted to be free of all defects in material and workmanship.

**WHO IS COVERED**—The original purchaser or any person receiving the Product as a gift from the original purchaser.

**HOW LONG IS IT COVERED**—ICON Health & Fitness, Inc. ("ICON"), warrants the product frame for the lifetime of the original owner. ICON warrants all other parts for one year after the date of purchase. Labor is covered for ninety days.

**WHAT WE DO TO CORRECT COVERED DEFECTS**—We will ship to you, without charge, any replacement part or component, providing the repairs are authorized by ICON first and are performed by an ICON trained and authorized service provider, or, at our option, we will replace the Product.

**WHAT IS NOT COVERED**—Any failures or damage caused by unauthorized service, misuse, accident, negligence, improper assembly or installation, alterations, modifications without our written authorization or by failure on your part to use, operate, and maintain as set out in your User's Manual ("Manual").

**WHAT YOU MUST DO**—Always retain proof of purchase, such as your bill of sale; store, operate, and maintain the Product as specified in the Manual; notify our Customer Service Department of any defect within 10 days after discovery of the defect; as instructed, return any defected part for replacement or, if necessary, the entire product, for repair.

**USER'S MANUAL**—It is VERY IMPORTANT THAT YOU READ THE MANUAL before operating the Product. Remember to do the periodic maintenance requirements specified in the Manual to assure proper operation and your continued satisfaction.

**HOW TO GET PARTS AND SERVICE**—Simply call the toll-free phone number on the front cover of this manual and tell them your name and address and the serial number of your Product. They will tell you how to get a part replaced, or if necessary, arrange for service where your Product is located or advise you how to ship the Product for service. Before shipping, always obtain a Return Authorization Number (RA No.) from our Customer Service Department; securely pack your Product (save the original shipping carton if possible); put the RA No. on the outside of the carton and insure the product. Include a letter explaining the product or problem and a copy of your proof of purchase if you believe the service is covered by warranty.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

No one is authorized to change, modify or extend the terms of this limited warranty. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

**ICON HEALTH & FITNESS, INC., 1500 S. 1000 W., LOGAN, UT 84321-9813**