

ENFORCER[®] VIDEO

MANUAL

EVT-PB1-H05Q

Video, Power and Data Balun
with Voltage Booster



The ENFORCER EVT-PB1-H05Q Video, Power and Data (VPD) Balun with Voltage Booster combines the flexibility of a VPD Balun with the ability to boost insufficient voltage for use in CCTV applications. Boosted DC power is regulated to provide stable power suitable for voltage sensitive cameras.

- Transmit video up to 2000' over Cat5
- Selectable 12/24VDC output via jumper
- Regulated and filtered output.
- Output current protection – 500mA
- Small size for easy installation.
- Dual-colored LED power output indicator:
Red: 12VDC
Blue: 24VDC
- Green power input LED indicator.
- Built-in overload and short-circuit protection.

SECO-LARM[®] SLI[®]




Specifications:

		EVT-PB1-H05Q		
Voltage Booster	Output voltage	5/12/24VDC selectable by jumper (default 12VDC)		
	Operating voltages	Input voltage		
		7~12VDC/VAC	Regulated output voltage	
		12~24VDC/VAC	12VDC	
	Output current	500mA @ 5/12/24 VDC		
	Voltage input LED indicator	Green		
	Voltage output LED indicator	Red	5/12VDC	
Blue		24VDC		
Current protection	PTC 500mA			
Video	Range	2,000' (610m) B/W, 1,300' Color (400m)		
	Video format	RS170, NTSC, PAL, SECAM, CCIR		
	Maximum input	1vp-p		
	Insertion loss	< 2dB per pair from DC ~ 5 Mhz		
	Return loss	>-15dB from DC ~ 5 Mhz		
	Common mode rejection	60dB, 15KHz~5MHz		
	Frequency response	DC ~ 5 Mhz		
	Power	No power required for video		
Connections	Wire type	UTP (unshielded twisted pair)		
	Wire category	20 - 24 AWG @ screwless terminal blocks		
		CAT2 or better, CAT5 ideal, CAT6 improves range		
	Connectors	In	Removable terminal block	
		Out	Video	Pigtail BNC
			Power	Pigtail DC plug (center pin positive)
			Data	Wire
Attenuation	DC ~ 5 Mhz, 1.5 dB max			
Impedance	Coax, male BNC: 75 Ohms@ 1 MHz			
	Terminal block: 100 Ohms @ 1 MHz			
Other	Dimensions	3 1/4" x 2 9/16" x 3/4" (81 x 65 x 20mm)		
	Humidity range	0 ~ 95%		
	Temperature Range	14°~165°F (-10°~74°C)		
	Case	ABS Plastic		

NOTE: The VPD balun with voltage booster's efficiency rating is 85%. For more information see "Voltage Booster Efficiency Rate" on page 3.

Figure 1: Video, Power and Data Balun with Voltage Booster Detail

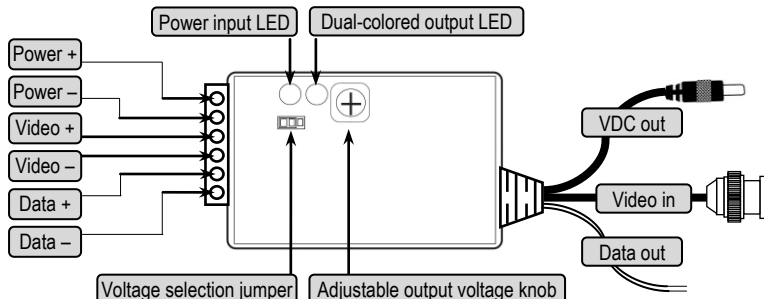

Installation:

1. Run UTP cable to the camera where the VPD balun is being installed.
2. Remove the cover by simultaneously pressing down on the top cover, and lifting up on the side mounting tabs. This will release the tight seal between the top and bottom covers.
3. Set the desired output voltage using the selection jumper according to table 1 below.
4. Connect output wires from the power supply to the power input terminal blocks on the balun. Observe correct polarity
5. Apply power and use table 2 and 3 below to check the status of the input and output voltages.
NOTE: To avoid potential damage, use a voltage meter to ensure proper voltage is present at the input and output terminal blocks. Observe correct polarity.
6. Connect the camera to the DC plug on the balun. If the output voltage is too low, then turn the rotary knob clockwise to increase the voltage or counter-clockwise to decrease the voltage.
7. Connect the video input male BNC input in from the VPD Balun to the camera.
8. If using a RS-485 controlled camera, connect the data in wires to the camera.
9. Using the input terminal blocks, connect data and video wires to the balun according to Figure 1.
IMPORTANT: Correct polarity must be observed on all connections.
10. Replace the cover on the voltage booster.

Table 1: Adjustable Output Voltage

Input Voltage	Output Voltage	Adjustable voltage range	Jumper Settings
7~12VDC	12VDC	12.5 ± 5%VDC	■ ■ ■
12~24VDC	24VDC	24.0 ± 10%VDC	■ ■ ■

Table 2: Wiring Distance 12 VDC Voltage Drop


24 AWG Wire	1 Pair	2 Pairs	3 Pairs
250mA	90'	220'	550'
500mA	45'	110'	285'
750mA	30'	75'	190'
1A	20'	55'	140'

Table 3: LED Indicators

LED colors	Status
Green	Power is connected
Red	Output is 12VDC
Blue	Output is 24VDC

NOTE: Chart is based on standard Cat5 24AWG wire and an allowable 10% voltage drop.

Figure 1: Sample Application

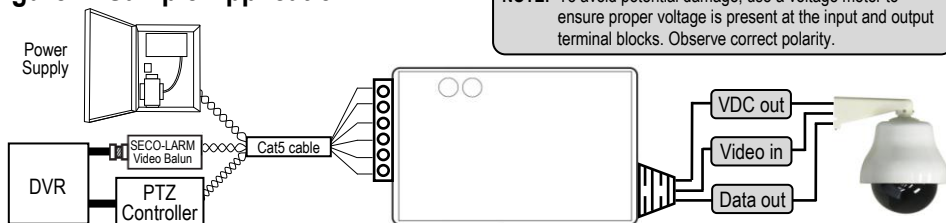

Also Available from SECO-LARM:

Passive VGA Balun



EVT-SBP-GQ

Passive & Active Video Baluns



EVT-PB1Q
(shown)

BNC-to-VGA Converter



VC-1BAQ

VPD Balun with Voltage Booster



EVT-PB1-H05Q

Voltage Booster Efficiency Rate:

The EVT-PB1-H05Q has a power efficiency rating of 85%. Under typical conditions, the booster will provide sufficient power to compensate for long cable runs. The following formulas can be used to determine if enough power is present at the power input of the voltage booster:

1. Calculate the amount of power measured in Watts:
 $\text{Voltage} \times \text{Current} = \text{Power}$
2. For example, if the voltage is 12VDC, and the current is 750mA:
 $12\text{VDC} \times .75 = 9 \text{ Watts}$
3. Then calculate the amount of power using the voltage booster with the following formula:
 $\text{Power Input} \times \text{Efficiency Rate} = \text{Power Output}$
4. Using the 9 Watts in the previous example, calculate power input of the booster:
 $9 \text{ Watts} \times .85 = 7.65 \text{ Watts}$
5. After the power has been calculated, the output current is calculated from the following formula:
 $\text{Power} / \text{Voltage} = \text{Current}$
6. Using the example of 9 watts present at the power input, and 7.65 Watts at the power output:
 $7.65 \text{ Watts} / 12\text{VDC} = 640\text{mA}$ of available current

Use Table 3 to determine if additional pairs of Cat5 cable will be needed to transmit power.

For more information see the Technical Bulletin for the ST-HB105-TTQ at www.seco-larm.com

Troubleshooting:

Output voltage is low/high

- Check voltage jumper settings
- Check output voltage adjustment.
- Check input voltage to make sure it meets the input requirements

Green input LED not on

- Check input power connections with multimeter to verify correct input voltage

Blue/red output LED not on

- Check to see if the load exceeds the maximum limit
- Temporarily disconnect power input and output wires for 30 seconds before connecting

WARRANTY This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for a period of one (1) year from the date of sale to the original consumer customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM. This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair, or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship. The sole obligation of SECO-LARM, and the purchaser's exclusive remedy, shall be limited to replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damages of any kind to the purchaser or anyone else.

NOTICE: The information and specifications printed in this manual are current at the time of publication. However, the SECO-LARM policy is one of continual development and improvement. For this reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints or typographical errors. Copyright © 2008 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606

Tel: 800-662-0800 / 949-261-2999 Fax: 949-261-7326

Website: www.seco-larm.com

E-mail: sales@seco-larm.com



PITSW4

mi-EVT-PB1-H05Q.docx