

30/8

SHARP SERVICE MANUAL

S47X413J-M100



COLOR TELEVISION

Chassis No. SN-51

13J-M100/150

CJ13M10/15

MODELS **14MJ10**

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

CONTENTS

	Page
• ELECTRICAL SPECIFICATIONS	1
• IMPORTANT SERVICE SAFETY PRECAUTION	2
• LOCATION OF USER'S CONTROL	6
• INSTALLATION AND SERVICE INSTRUCTIONS	7
• CHASSIS LAYOUT	13
• BLOCK DIAGRAM	14
• SCHEMATIC DIAGRAMS	15
• PRINTED WIRING BOARD ASSEMBLIES	19
• REPLACEMENT PARTS LIST	23
• PACKING OF THE SET	30

ELECTRICAL SPECIFICATIONS

POWER INPUT 120 V AC 60 Hz
 POWER RATING 66 W
 PICTURE SIZE 580cm²(89.9sq inch)
 CONVERGENCE Magnetic
 SWEEP DEFLECTION Magnetic
 FOCUS Hi-Bi-Potential Electrostatic
 INTERMEDIATE FREQUENCIES
 Picture IF Carrier Frequency 45.75 MHz
 Sound IF Carrier Frequency 41.25 MHz
 Color Sub-Carrier Frequency 42.17 MHz
 (Nominal)
 AUDIO POWER
 OUTPUT RATING 0.9W (at 10% distortion)

SPEAKER
 SIZE 8cm(Round)
 VOICE COIL IMPEDANCE 8ohm at 400 Hz
 ANTENNA INPUT IMPEDANCE
 VHF/UHF 75 ohm Unbalanced
 TUNING RANGES
 VHF-Channels 2thru 13
 UHF-Channels 14thru 69
 CATV Channels 1thru 125
 USA: (EIA, Channel Plan)

Specifications are subject to change without prior notice.

SHARP CORPORATION

SHARP ELECTRONICS CORPORATION

Service Headquarters: Sharp Plaza, Mahwah, New Jersey 07430-2135

SHARP ELECTRONICS OF CANADA LTD.

8103


IMPORTANT SERVICE SAFETY PRECAUTION

- Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and servicing guidelines which follow:

WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.
3. Semiconductor heat sinks are potential shock hazards when the chassis is operating.
4. The chassis in this receiver has two ground systems which are separated by insulation material. The non-isolated (hot) ground system is for the B+ voltage regulator circuit and the horizontal output circuit. The isolated ground system is for the low B+ DC voltages and the secondary circuit of the high voltage transformer.

To prevent electrical shock use an isolation transformer between the line cord and power receptacle, when servicing this chassis.

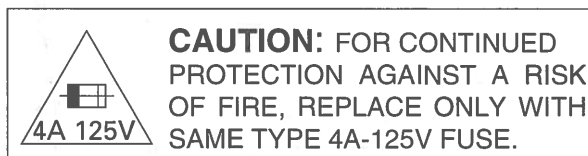

SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove the static charge by connecting a 10k ohm resistor in series with an insulated wire (such as a test probe) between the picture tube ground and the anode lead. (AC line cord should be disconnected from AC outlet.)

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage anode completely.

X-RADIATION AND HIGH VOLTAGE LIMITS

1. Be sure all service personnel are aware of the procedures and instructions covering X-radiation. The only potential source of X-ray in current solid state TV receivers is the picture tube. However, the picture tube does not emit measurable X-Ray radiation if the high voltage is as specified in the "High Voltage Check" instructions.

It is only when high voltage is excessive that X-radiation is capable of penetrating the shell of the picture tube including the lead in glass material. The important precaution is to keep the high voltage below the maximum level specified.

2. It is essential that service personal have available at all times an accurate high voltage meter.

The calibration of this meter should be checked periodically.

3. High voltage should always be kept at the rated value —no higher. Operation at higher voltages may cause a failure of the picture tube or high voltage circuitry and; also under certain conditions, may produce radiation that exceeds specifications.
4. When the high voltage regulator is operating properly there is no possibility of an X-radiation problem. Every time a color chassis is serviced, the brightness should be tested while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly.
5. Do not use a picture tube other than that specified or make unrecommended circuit modifications to the high voltage circuitry.

6. When trouble shooting and taking test measurements on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver.

Do not operate the receiver longer than is necessary to locate the cause of excessive voltage. on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver.

Do not operate the receiver longer than is necessary to locate the cause of excessive voltage.

IMPORTANT SERVICE SAFETY PRECAUTION

(Continued)

RETBEFOREURNING THE RECEIVER

(Fire & Shock Hazard)

Before returning the receiver to the user, perform the following safety checks.


1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators, etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.
 - Plug the AC cord directly into a 120 volt AC outlet, (Do not use an isolation transformer for this test).
 - Using to clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15 μ F capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to earth ground.
 - Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor.

- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor.

All check must be repeated with the AC line cord plug connection reversed. (IF necessary, a non-polarized adapter plug must be used only for the purpose of completing these check.)

Any current measured must not exceed 0.5 milliamp.


Any measurements not within the limits outlined above are indicative of a potential shock hazard and corrective action must be taken before returning the instrument to the customer.

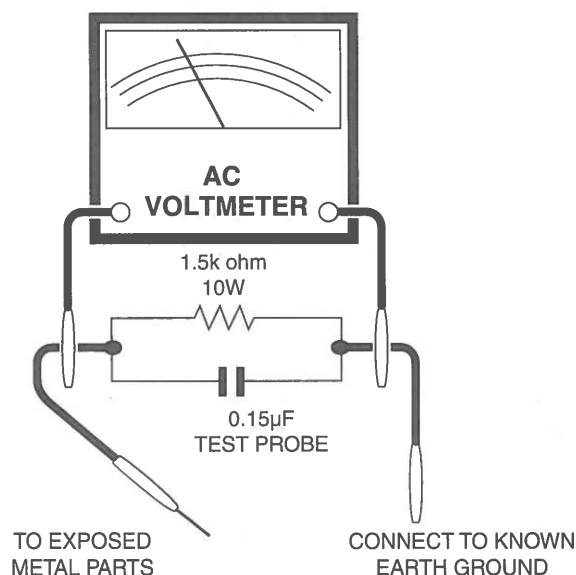

SAFETY NOTICE

Many electrical and mechanical parts in television receivers have special safety-related characteristics.

These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.

Replacement parts which have special safety characteristics are identified in this manual; electrical components having such features are identified by "  " and shaded areas in the Replacement Parts Lists and Schematic Diagrams.

For continued protection, replacement parts must be identical to those used in the original circuit.


The use of substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire, X-radiation or other hazards.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

- **Ne peut effectuer la réparation qu' un technicien spécialisé qui s'est parfaitement accoutumé à toute vérification de sécurité et aux conseils suivants.**

AVERTISSEMENT

1. N'entreprendre aucune modification de tout circuit. C'est dangereux.
2. Débrancher le récepteur avant toute réparation.
3. Les déversoirs thermiques à semi-conducteurs peuvent présenter un danger de choc électrique lorsque le récepteur est en marche.
4. Le châssis de ce récepteur possède deux systèmes de masse qui sont séparées par du matériel d'isolation. Le système de masse non-isolée (sous tension) est pour le circuit du régulateur de tension + B et le circuit de sortie horizontale. Le système de masse isolée est pour les tensions DC + B basses et le circuit secondaire du transformateur haute tension. Pour éviter tout risque d'électrocution lors de l'entretien de ce châssis, utiliser un transformateur d'isolation entre le cordon de ligne et la prise de courant.

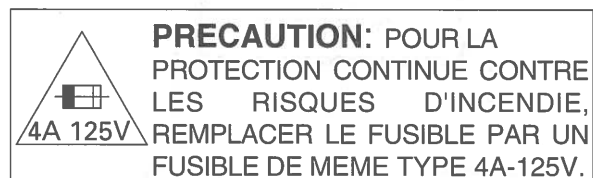

REPARATION DU SYSTEME A HAUTE TENSION ET DU TUBE-IMAGE

Lors de la réparation de ce système, supprimer la charge statique en branchant une résistance de 10 kW en série avec un fil isolé (comme une sonde d'essai) entre la mise à la terre du tube-image et le fil d'anode. (Le cordon d'alimentation doit être retiré de la prise murale.)

1. Le tube image dans ce récepteur emploie une protection intégrée contre l'implosion.
2. Par mesure de sécurité, changer le tube-image pour un tube du même numéro de type.
3. Ne pas lever le tube-image par son col.
4. Ne manipuler le tube-image qu'en portant des lunettes incassables et qu'après avoir déchargé totalement la haute tension.

LIMITES DES RADIATIONS X ET DE LA HAUTE TENSION

1. Tout le personnel réparateur doit être instruit des instructions et procédés relatifs aux radiations X.

Le tube-image, seule source de rayons X dans les téléviseurs transistorisés, n'émet pourtant pas de rayons mesurables si la haute tension est maintenue à un niveau préconisé dans la section "Vérification de la haute tension".

C'est seulement quand la haute tension est excessive que les rayons X peuvent entrer dans l'enveloppe du tube-image y compris le conducteur de verre. Il est important de maintenir la haute tension en-dessous du niveau spécifié.

2. Il est essentiel que le réparateur ait sous la main un voltmètre à haute tension qui doit être périodiquement étalonné.
3. La haute tension doit toujours être maintenue à la valeur de régime -et pas plus haute. L'opération à des tensions plus élevées peut entraîner une panne du tube-image ou du circuit à haute tension et, dans certaines conditions, peut entraîner une radiation dépassant les niveaux prescrits.
4. Quand le régulateur à haute tension fonctionne correctement, il n'y a aucun problème de radiation X. Chaque fois qu'un châssis couleurs est réparé, la luminosité doit être examinée tout en contrôlant la haute tension à l'aide d'un voltmètre pour s'assurer que la haute tension ne dépasse pas la valeur spécifiée et qu'elle soit correctement réglée.
5. Ne pas utiliser un tube-image autre que celui spécifié et ne pas effectuer de modifications déconseillées du circuit à haute tension.
6. Lors de la recherche des pannes et des mesures d'essai sur un récepteur qui présente une haute tension excessive, éviter de s'approcher inutilement du récepteur.
Ne pas faire fonctionner le récepteur plus longtemps que nécessaire pour localiser la cause de la tension excessive.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

(Suite)

VERIFICATIONS CONTRE L'INCEN-DIE ET LE CHOC ELECTRIQUE


Avant de rendre le récepteur à l'utilisateur, effectuer les vérifications suivantes.

1. Inspecter tous les faisceaux de câbles pour s'assurer que les fils ne soient pas pincés ou qu'un outil ne soit pas placé entre le châssis et les autres pièces métalliques du récepteur.
2. Inspecter tous les dispositifs de protection comme les boutons de commande non-métalliques, les isolants, le dos du coffret, les couvercles ou blindages de réglage et de compartiment, les réseaux de résistance-capacité, les isolateurs mécaniques, etc.
3. S'assurer qu'il n'y ait pas de danger d'électrocution en vérifiant la fuite de courant, de la façon suivante:
 - Brancher le cordon d'alimentation directement à une prise de courant de 120V. (Ne pas utiliser de transformateur d'isolation pour cet essai).
 - A l'aide de deux fils à pinces, brancher une résistance de 1,5 k Ω 10 watts en parallèle avec un condensateur de 0,15 μ F en série avec toutes les pièces métalliques exposées du coffret et une terre connue comme une conduite électrique ou une prise de terre branchée à la terre.
 - Utiliser un voltmètre CA d'une sensibilité d'au moins 5000 Ω /V pour mesurer la chute de tension en travers de la résistance.

- Toucher avec la sonde d'essai les pièces métalliques exposées qui présentent une voie de retour au châssis (antenne, coffret métallique, tête des vis, arbres de commande et des boutons, écusson, etc.) et mesurer la chute de tension CA en-travers de la résistance. Toutes les vérifications doivent être refaites après avoir inversé la fiche du cordon d'alimentation. (Si nécessaire, une prise d'adpatation non polarisée peut être utilisée dans le but de terminer ces vérifications.)

Tous les courants mesurés ne doivent pas dépasser 0.5 mA.

Dans le cas contraire, il y a une possibilité de choc électrique qui doit être supprimée avant de rendre le récepteur au client.

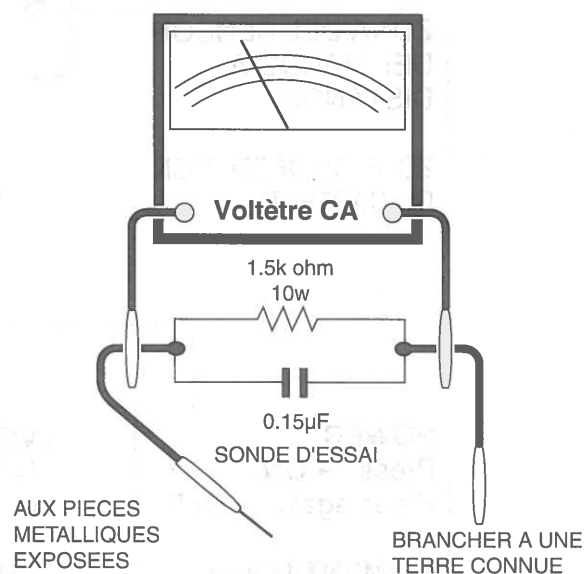

AVIS POUR LA SECURITE


De nombreuses pièces, électriques et mécaniques, dans les téléviseurs présentent des caractéristiques spéciales relatives à la sécurité, qui ne sont souvent pas évidentes à vue. Le degré de protection ne peut pas être nécessairement augmentée en utilisant des pièces de remplacement étalonnées pour haute tension, puissance, etc.

Les pièces de remplacement qui présentent ces caractéristiques sont identifiées dans ce manuel; les pièces électriques qui présentent ces particularités sont

identifiées par la marque " Δ " et hachurées dans la liste des pièces de remplacement et les diagrammes schématiques.

Pour assurer la protection, ces pièces doivent être identiques à celles utilisées dans le circuit d'origine. L'utilisation de pièces qui n'ont pas les mêmes caractéristiques que les pièces recommandées par l'usine, indiquées dans ce manuel, peut provoquer des électrocutions, incendies, radiations X ou autres accidents.

LOCATION OF USER'S CONTROL

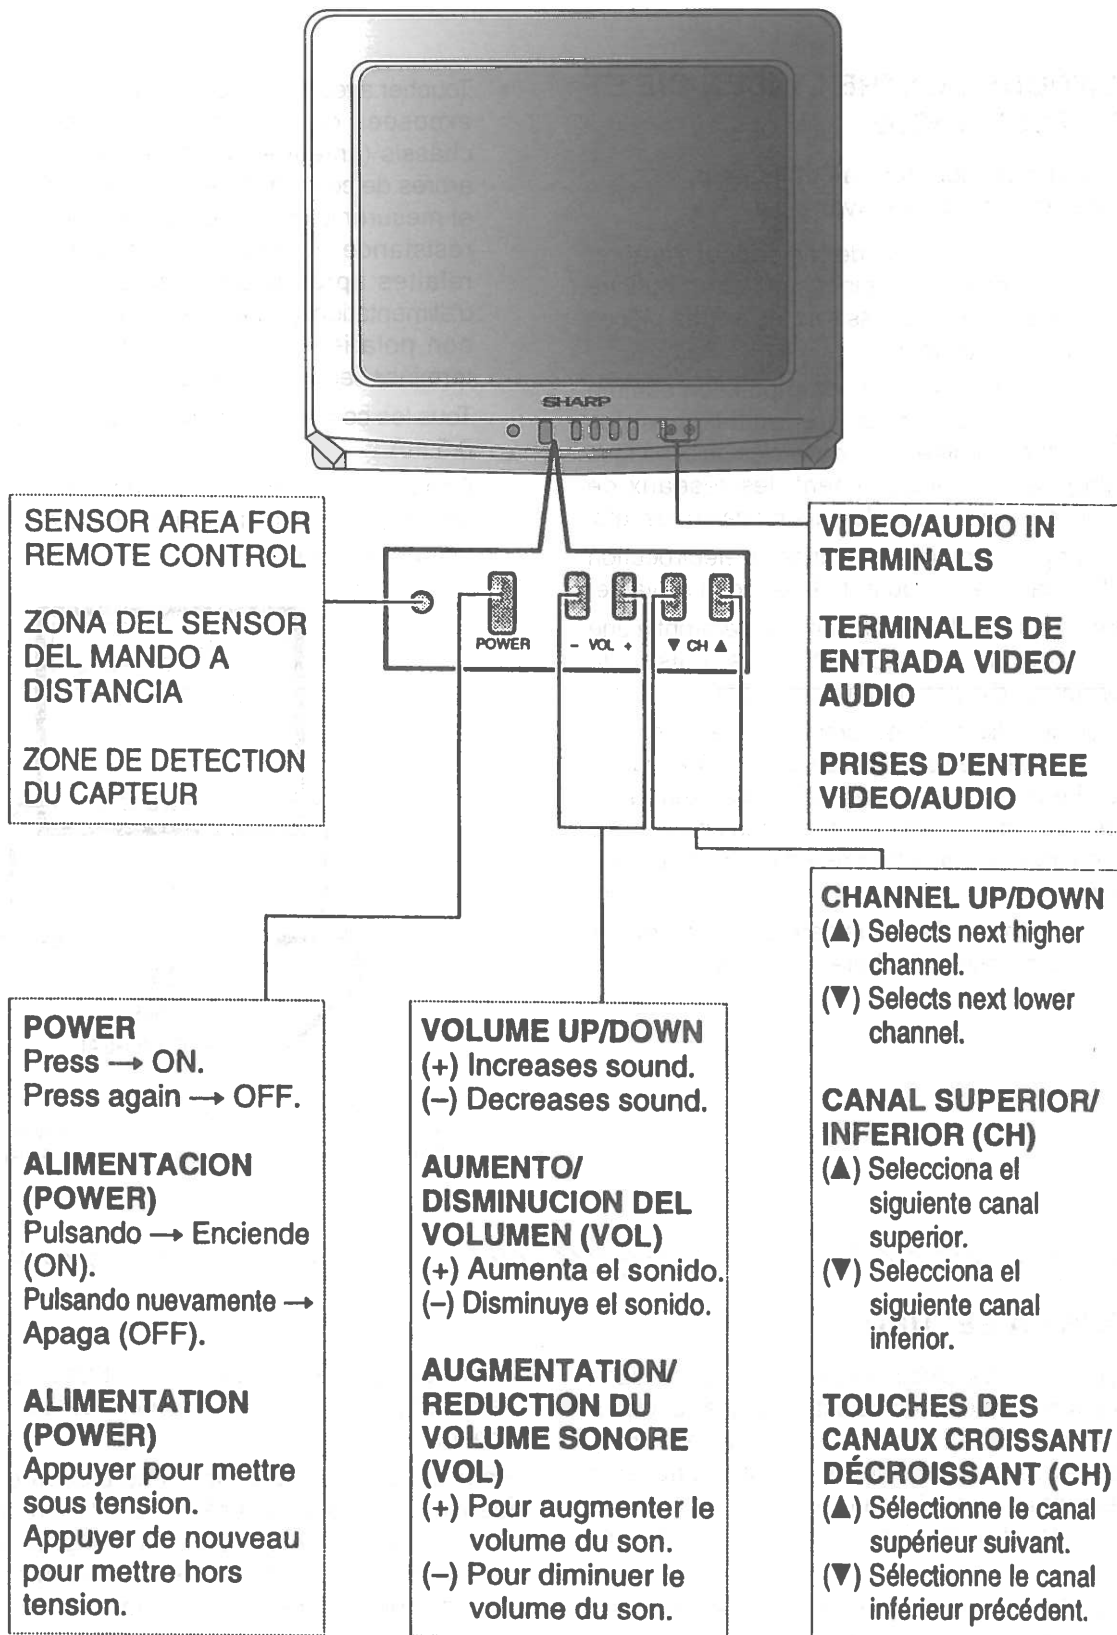

INSTALLATION AND SERVICE INSTRUCTIONS

- Note:** (1) When performing any adjustments to resistor controls and transformers use non-metallic screwdriver or TV alignment tools.
- (2) Before performing adjustment, TV set must be on at least 15 minutes.

CIRCUIT PROTECTION

The receiver is protected by a 4.0A fuse (F701), mounted on PWB-A, wired into one side of the AC line input.

X-RADIATION PROTECTOR CIRCUIT TEST

1. After service has been performed on the horizontal deflection system, high voltage system, B + system, test the X-Radiation protection circuit to ascertain proper operation as follows:
- 1) Apply 120V AC using a variac transformer for accurate input voltage.
 - 2) Allow for warm up and adjust all customer controls for normal picture and sound.
 - 3) Select a local channel.
 - 4) Connect a digital voltmeter to TP653 and make sure that the voltmeter reads 20.6V.
 - 5) Apply external 26.8V DC at TP653 by using an external DC supply, TV must be shut off.
 - 6) To reset the protector, unplug the AC cord and make a short circuit between TP651 and TP652. Now make sure that normal picture appears on the screen.
 - 7) If the operation of the horizontal oscillator does not stop in step 5, the circuit must be repaired before the set is returned to the customer.

HIGH VOLTAGE CHECK

High voltage is not adjustable but must be checked to verify that the receiver is operating within safe and efficient design limitations as specified checks should be as follows:

1. Connect an accurate high voltage meter between ground and anode of picture tube.
2. Operate receiver for at least 15 minutes at 120V AC line voltage, with strong air signal or properly tuned in test signal.
3. Set service mode on (See next page.), Service No.S19 and Bus data "01" (Y-mute on).
4. The voltage should be approximately 24.0kV (at zero beam)."

If a correct reading cannot be obtained, check circuitry for malfunctioning components. After the voltage test, make Y-mute off (normal mode).

For adjustments of this model, the bus data is converted to various analog signals by the D-A converter circuit.

Note: There are still a few analog adjustments in this series such as focus and master screen voltage.

Follow the steps below whenever service adjustment is required. See Figure "B" to determine if service adjustments are required.

1. Service mode -

Before putting unit into the service mode, check, that customer adjustments are in the normal mode. use the reset function in the video adjust menu to ensure customer controls are in their

To enter the service mode .

While Pressing the Vol-up and Ch- up buttons at once, plug the AC cord into a wall socket. Now the TV set is switched on and enters the service mode.

To exit the service mode, shut the television off by pressing the power button.

2. Service number selection

Once in the service mode, press the channel up or channel down button on the remote transmitter or at the set. the service adjustment number will vary in increments of one, from "S01" to S19.

Select the item you wish to adjust.

3. Data number selection

Press the volume up or down button to adjust the data number.

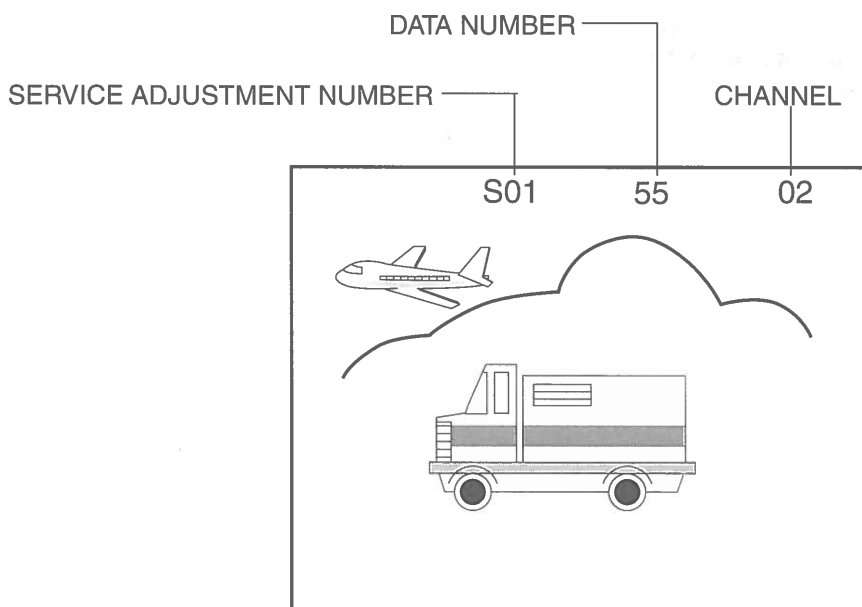


Figure B

SERVICE NUMBER	ADJUSTMENT ITEM	DATA		ADJUSTMENT CONTENTS	
		INITIAL VALUE	RANGE		
S01	PICTURE	55	00-7F	Must be set to "24"	
S02	TINT	46	00-7F		
S03	COLOR	32	00-7F		
S04	BRIGHTNESS	40	00-7F		
S05	SHARPNESS	28	00-3F		
S06	VERTICAL PHASE	00	00-07		
S07	HORIZONTAL PHASE	12	00-1F		
S08	RF-AGC	2A	00-3F		
S09	VERTICAL AMP	20	00-3F		
S10	VCO	2C	00-7F		
S11	R CUT-OFF	00	00-FF		
S12	G CUT -OFF	00	00-FF		
S13	B CUT-OFF	00	00-FF		
S14	G GAIN	7F	00-FF		
S15	B GAIN	7F	00-FF		
S16	TRAP(3.58MHz)	00	00 or 01		Must be set to "00"
S17	BALANCE	20	00-3F		Must be set to "20"
S18	C.C.POSITION	18	00-7F		00=NORMAL, 01=no"Y, 03=NO VERTICAL"
S19	Y-MUTE	00	00,01,03		

Table - A

Holding down both the CH UP/DOWN keys on the TV set at service mode for more then 2 seconds will automatically write the above initial values into IC2101.

PART REPLACED	ADJUSTMENT		NOTES
	NECESSARY	UNNECESSARY	
IC2001		X	Data is stored in IC2701.
IC201	X		The adjustment is needed to compensate for characteristics of parts including IC201.
IC2101	X		Holding down both the CH UP/DOWN keys on the TV set at service mode for more than 2 seconds will automatically write the above initial values into IC2101.
CRT	X		Adjust items related to picture tube only.

Table - B

■ adjustment

VCO Adjustment

1. Connect a digital voltmeter between pin (44) of IC201 and ground.
2. Select a good local channel.
3. Enter the service mode. select adjustment "S10".
4. Adjust the data so that digital voltmeter should read 2.2V
5. Adjustment is complete, remove the volt-meter, return to "normal" mode.

RF AGC Adjustment

1. Have unit receive a good local channel.
2. Enter the service mode and select service adjustment "S08".
3. Set the data value to point where no noise or beat appears.
4. Select another channel to confirm that no noise or beat appears.

NOTE 1 :You will have to come out of the service mode to select another channel.

NOTE 2 :Setting the data to "00" will produce a black raster.

Screen adjustment

1. Connect a digital voltmeter between TP852 and TP853 on the CRT socket PWB.

Note: These test points may not be provided.

Then connect the voltmeter to both ends of R852 located near Q852 on the foil side.

2. Select a good local channel.
3. Enter the service mode and select service adjustment "S03" and set the data value to "00" to set the color level to minimum.(Record original data code under adjustment "S03" before changing) You may skip this step if you selected a B/W picture or monoscope pattern.
4. Select service adjustment "S19" and adjust the data value to "01" this turn off the luminance signal (Y-mute).
5. Select service adjustment "S04" and adjust data value to obtain 0.17 volts on the digital voltmeter.
6. Adjust the master screen control until raster darkens to the point where raster is barely seen.
7. Adjust service adjustments "S11" red, "S12" green and "S13" blue to obtain a good grey scale with normal whites at low brightness level.

8. Select service adjustment "S19" and reset data to "00".

Select service adjustment "S03" and reset data to obtain normal color level.

9. Remove digital voltmeter.

Reset master screen control to obtain normal brightness range.

White balance adjustment

1. Have unit receive a good local channel.
2. Enter the service mode. select service adjustment "S03" and set to "00" (minimum color). "S03" does not have to be adjusted if you selected a B/W picture or monoscope pattern.
3. Alternately adjust service adjustment data of "S14" and "S15" until a good grey scale with normal whites is obtained.
4. Select service adjustment "S03" and adjust data to obtain normal color level.

Sub-picture adjustment

1. Have unit receive a good local channel.
2. Make sure the customer picture control is set to maximum.
3. Enter the service mode and select service adjustment "S01".
4. Adjust the data value to achieve normal contrast range.

Sub-Tint Adjustment

1. Have unit receive a good local channel.
2. Set customer tint control to center of it's range.
3. Enter the service mode and select service adjustment "S02".
4. Adjust "S02" data value to obtain normal flesh tones.

Sub-color adjustment

1. Have unit receive a good local channel.
2. Make sure the customer color control is set to center position .
3. Enter the service mode and select service adjustment "S03".
4. Adjust "S03" data value to obtain normal color level.

Sub-brightness adjustment

1. Have unit receive a good local channel.
2. Make sure the customer brightness control is set to center position.
3. Enter the service mode and select service adjustment "S04".
4. Adjust "S04" data value to obtain normal brightness level.

Vertical-size adjustment

1. Have unit receive a good local channel.
2. Enter the service mode and select service adjustment "S09".
3. While observing the top and bottom of the screen, adjust "S09" data value to proper vertical size.

Vertical phase adjustment

1. Enter the service mode and select service adjustment "S06".
2. Adjust data value to "00"~"03" so that picture is approximate center.

Note: This must be set "00"~"03" when adjust another data retrace line will be appear.

"Horizontal position adjustment

1. Have unit receive a good local channel.
2. Enter the service mode and select service adjustment "S07".
3. Adjust "S07" data value so that picture is centered.

Caption position adjustment (horizontal)

1. Have unit receive a good local channel.
2. Enter the service mode and select service adjustment "S18".
3. A black text box appears on the screen (see Figure C).
4. Adjust "S18" data value so that text box is positioned in the center of the screen.

3.58MHz trap adjustment

1. Have unit receive a good local channel.
2. Enter the service mode and select service adjustment "S16".
3. This is a two position adjustment, "00" is ON, "01" is OFF.
4. Adjust data value to "00" for normal viewing.

Sharpness and Audio balance adjustments

1. Have unit receive a good local channel.
2. Enter the service mode and select "S05" for sharpness and "S17" for balance.
 - Sharpness adjustments
3. Adjust data value to "24" (center of data range) for sharpness adjustment.
 - Audio balance adjustments
4. Adjust data value to "20" (center of data range) for Audio balance adjustment.


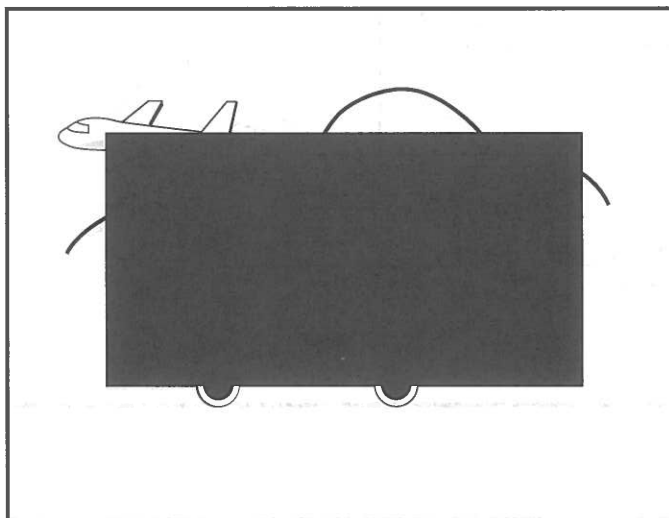


Figure C.


Memo

CHANG H. LAYO

CHASSIS LAYOUT

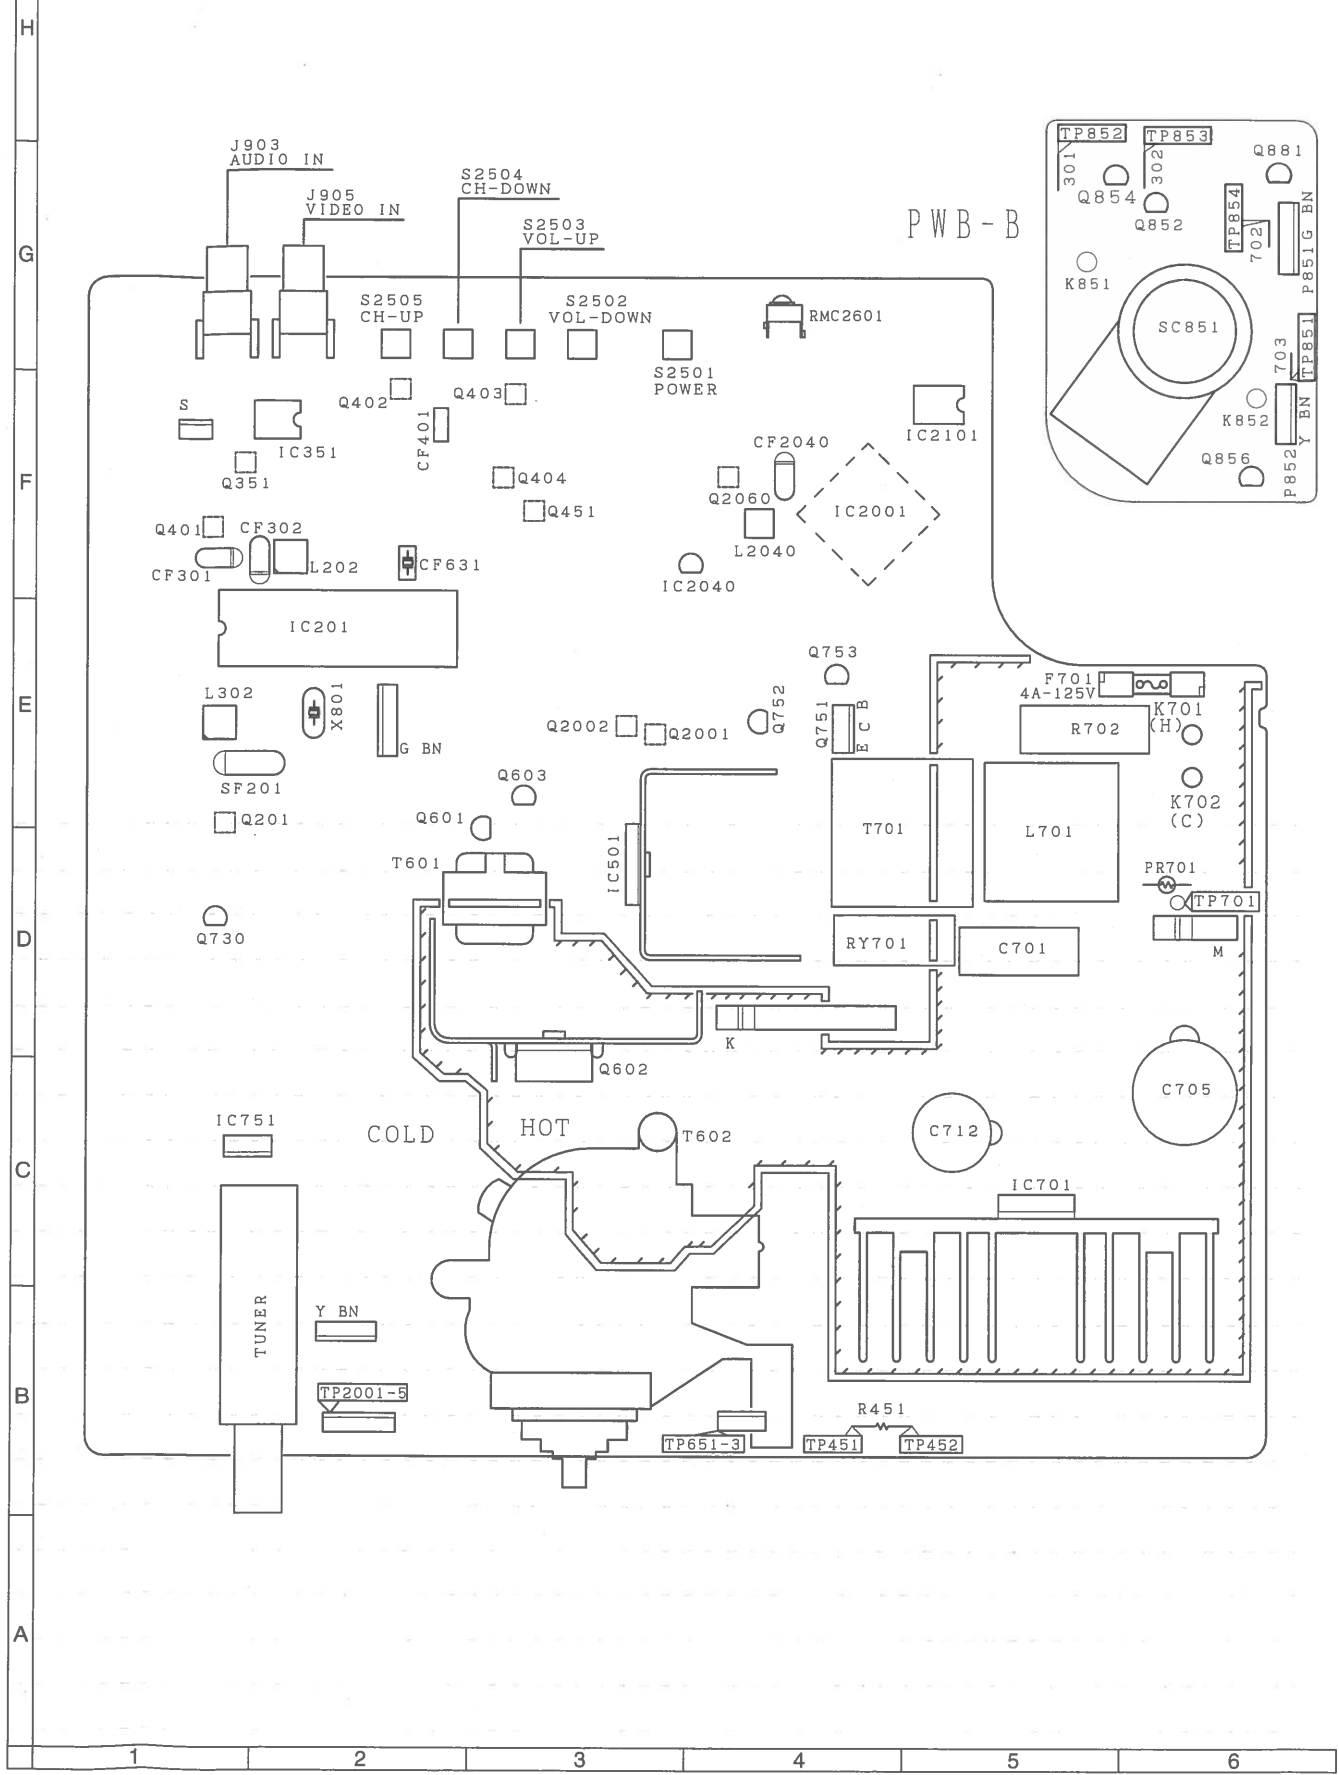

BLOCK DIAGRAM

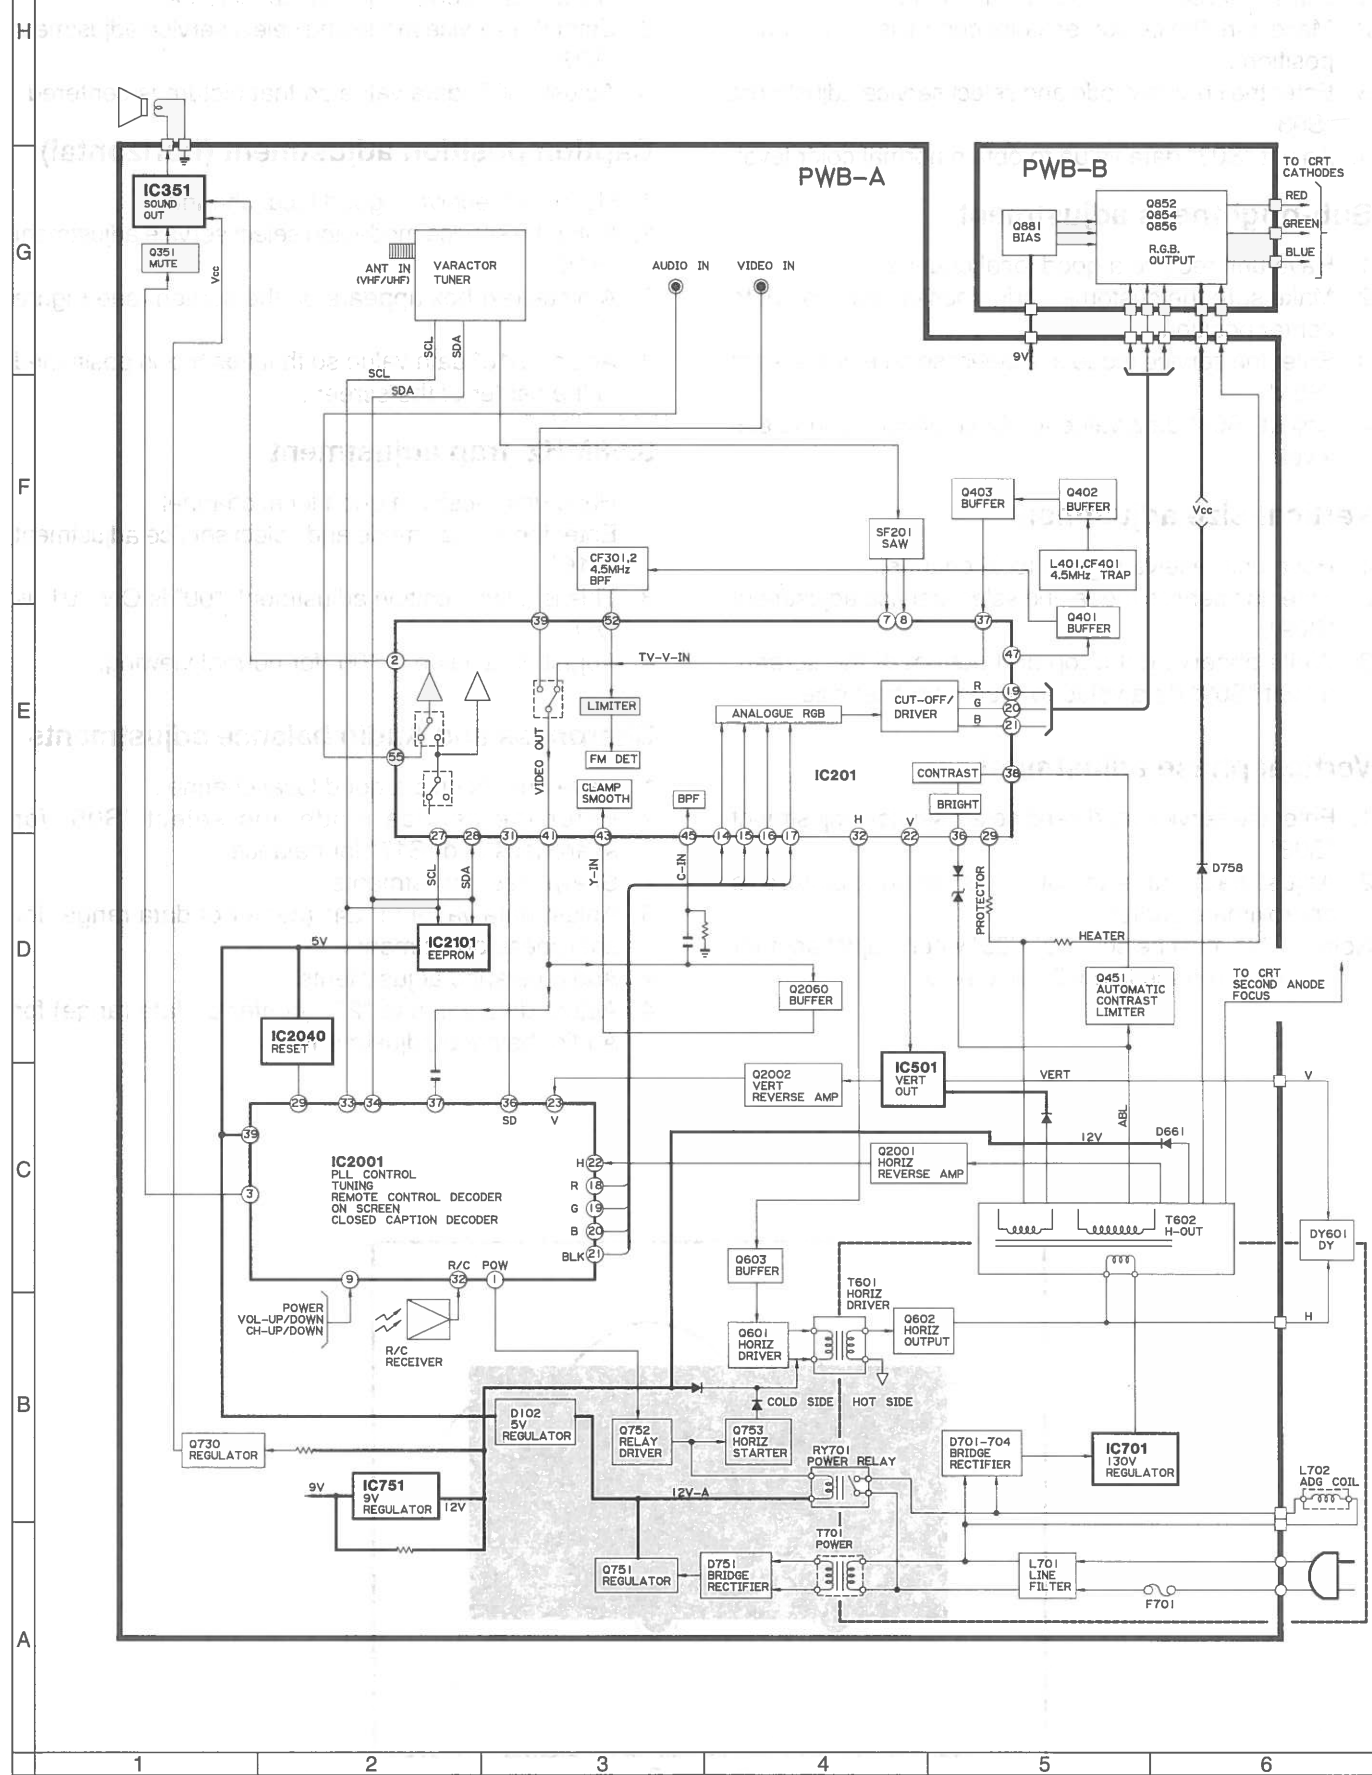

DESCRIPTION OF SCHEMATIC DIAGRAM

NOTE:

1. The unit of resistance "ohm" is omitted (K:1000 ohms, M:1 Meg ohm).
2. All resistors are 1/8 watt, unless otherwise noted.
3. All capacitors are μF , unless otherwise noted P: $\mu\mu F$.
4. (G) indicates $\pm 2\%$ tolerance may be used.
5. \perp indicates line isolated ground.
6. ∇ indicates hot ground.

WAVEFORM MEASUREMENT CONDITIONS:

1. Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.
2. \odot indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)

VOLTAGE MEASUREMENT CONDITIONS:


1. All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120V AC and all controls set for normal picture unless otherwise indicated.
2. All voltages measured with $1000\mu V$ B & W or Color signal.

\triangle AND SHADED () COMPONENTS = SAFETY RELATED PARTS.
 \blacktriangle MARK= X-RAY RELATED PARTS.

DRGANNES MARQUES \triangle ET HACHRES (): PIECES RELATIVES A LA SECURITE.
MARQUE \blacktriangle : PIECES RELATIVE AUX RAYONS X.

This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.

WAVE FORMS

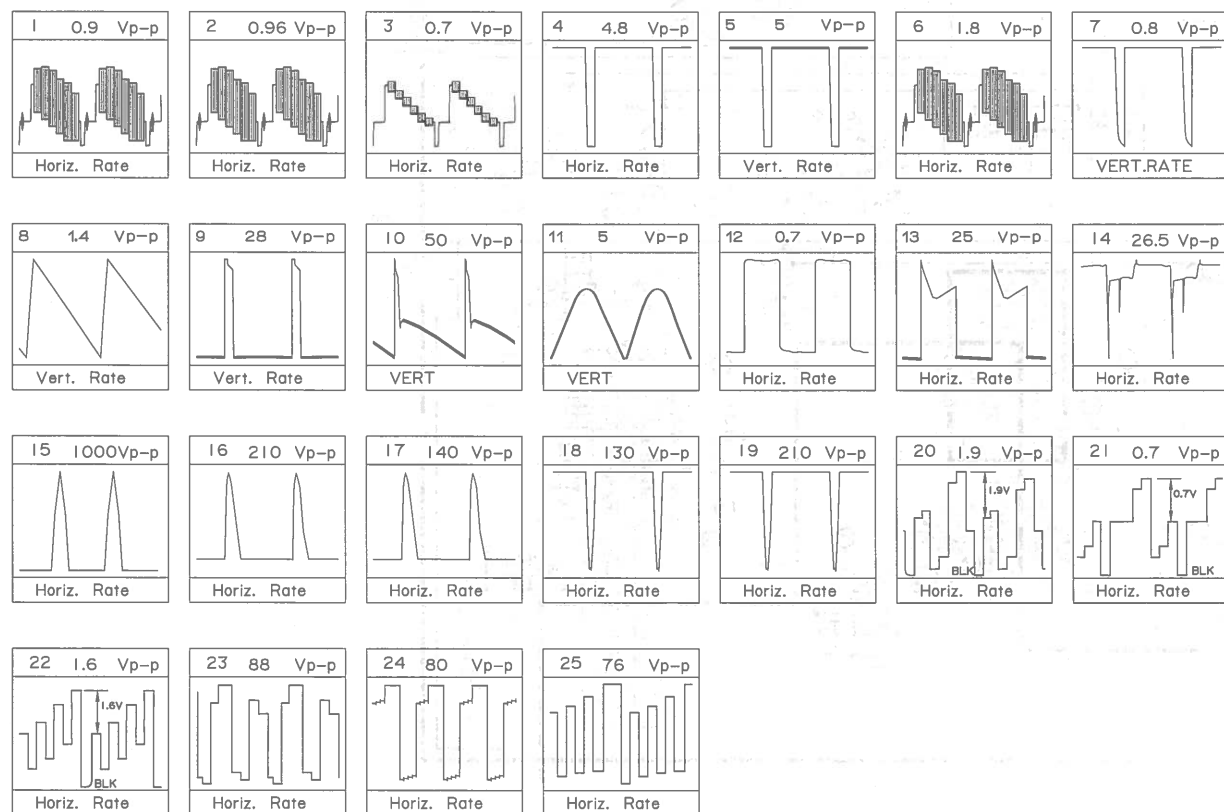

SCHEMATIC DIAGRAM: CRT Unit


MODEL 13J-M100/M150
MODEL 14MJ10
MODEL CJ13M10/15

\triangle AND SHADED () COMPONENTS = SAFETY RELATED PARTS.
 \blacktriangle MARK = X-RAY RELATED PARTS.

NOTE: 1. THE UNIT OF RESISTANCE "OHM" IS OMITTED (K=1000 OHMS, M=MEGAOHM).
2. ALL RESISTORS ARE 1/8WATT, UNLESS OTHERWISE NOTED.
3. ALL CAPACITORS ARE μF , UNLESS OTHERWISE NOTED (P= $\mu\mu F$).

NOTE: ALL DIODES ARE "1SS119" "DX00456E" OR "DX0046CE" UNLESS OTHERWISE SPECIFIED.

REPLACE WITH A PICTURE TUBE OF THE SAME TYPE NUMBER FOR CONTINUED SAFETY.

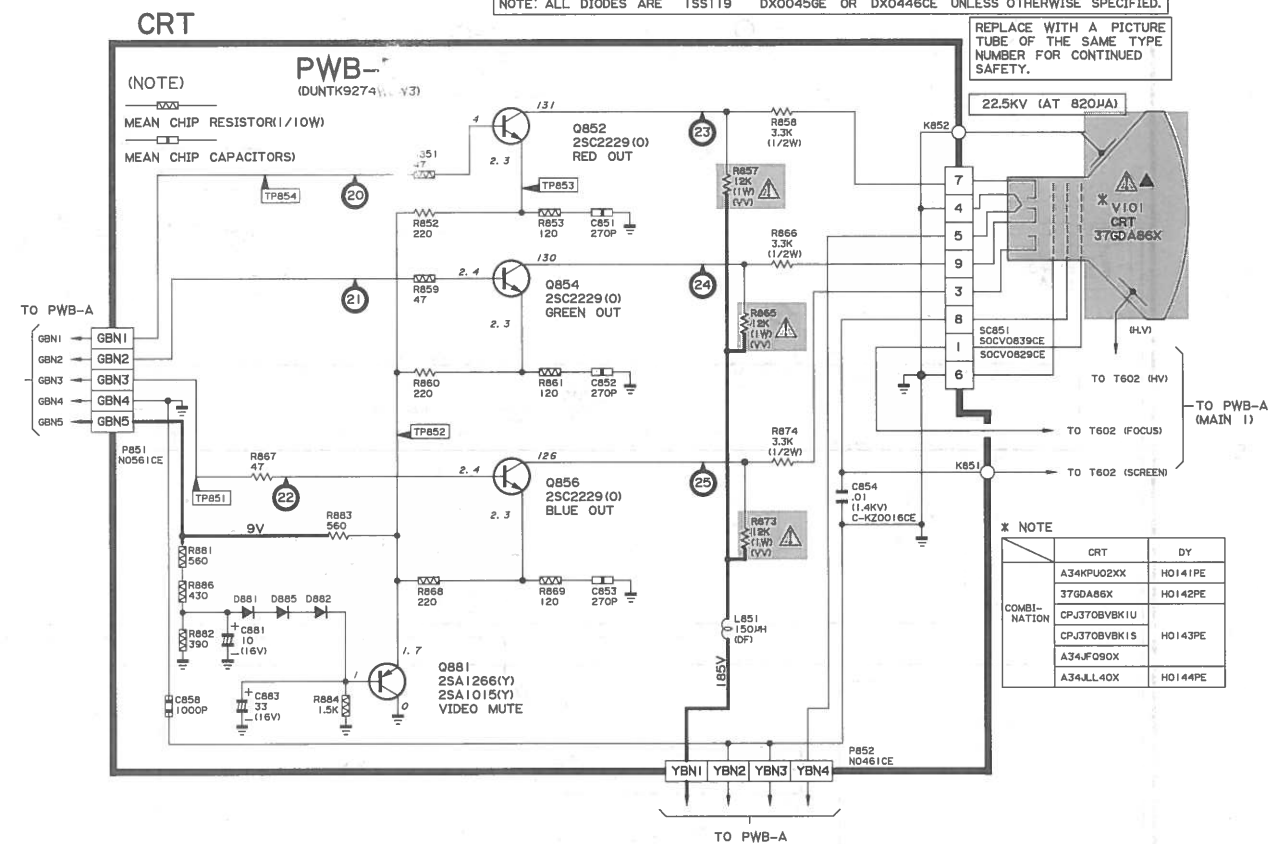

* NOTE

COMBINATION	CRT	DY
	A34KPU02XX	HO141PE
	37GDAB6X	HO142PE
	CPJ370VBK1U	HO143PE
	CPJ370VBK1S	HO143PE
	A34.F090X	
	A34.LL40X	HO144PE


SCHEMATIC DIAGRAM: MAIN Unit

MODEL 13J-M100/M150
MODEL CJ13M10/15
MODEL 14MJ10

MAIN

NOTE: 1. THE UNIT OF RESISTANCE "OHM" IS OMITTED
2. ALL RESISTORS ARE 1/8WATT, UNLESS OTHERWISE NOTED.
3. ALL CAPACITORS ARE .01UF, UNLESS OTHERWISE NOTED.
4. ALL DIODES ARE "1SS119" "DX00456E" OR "DX0446C" UNLESS OTHERWISE SPECIFIED.
5. ALL TRANSISTORS ARE "2SC2462" OR "2SD601AR" UNLESS OTHERWISE SPECIFIED.

(NOTE)
MEAN CHIP RESISTOR (1/8W)
MEAN CHIP CAPACITORS

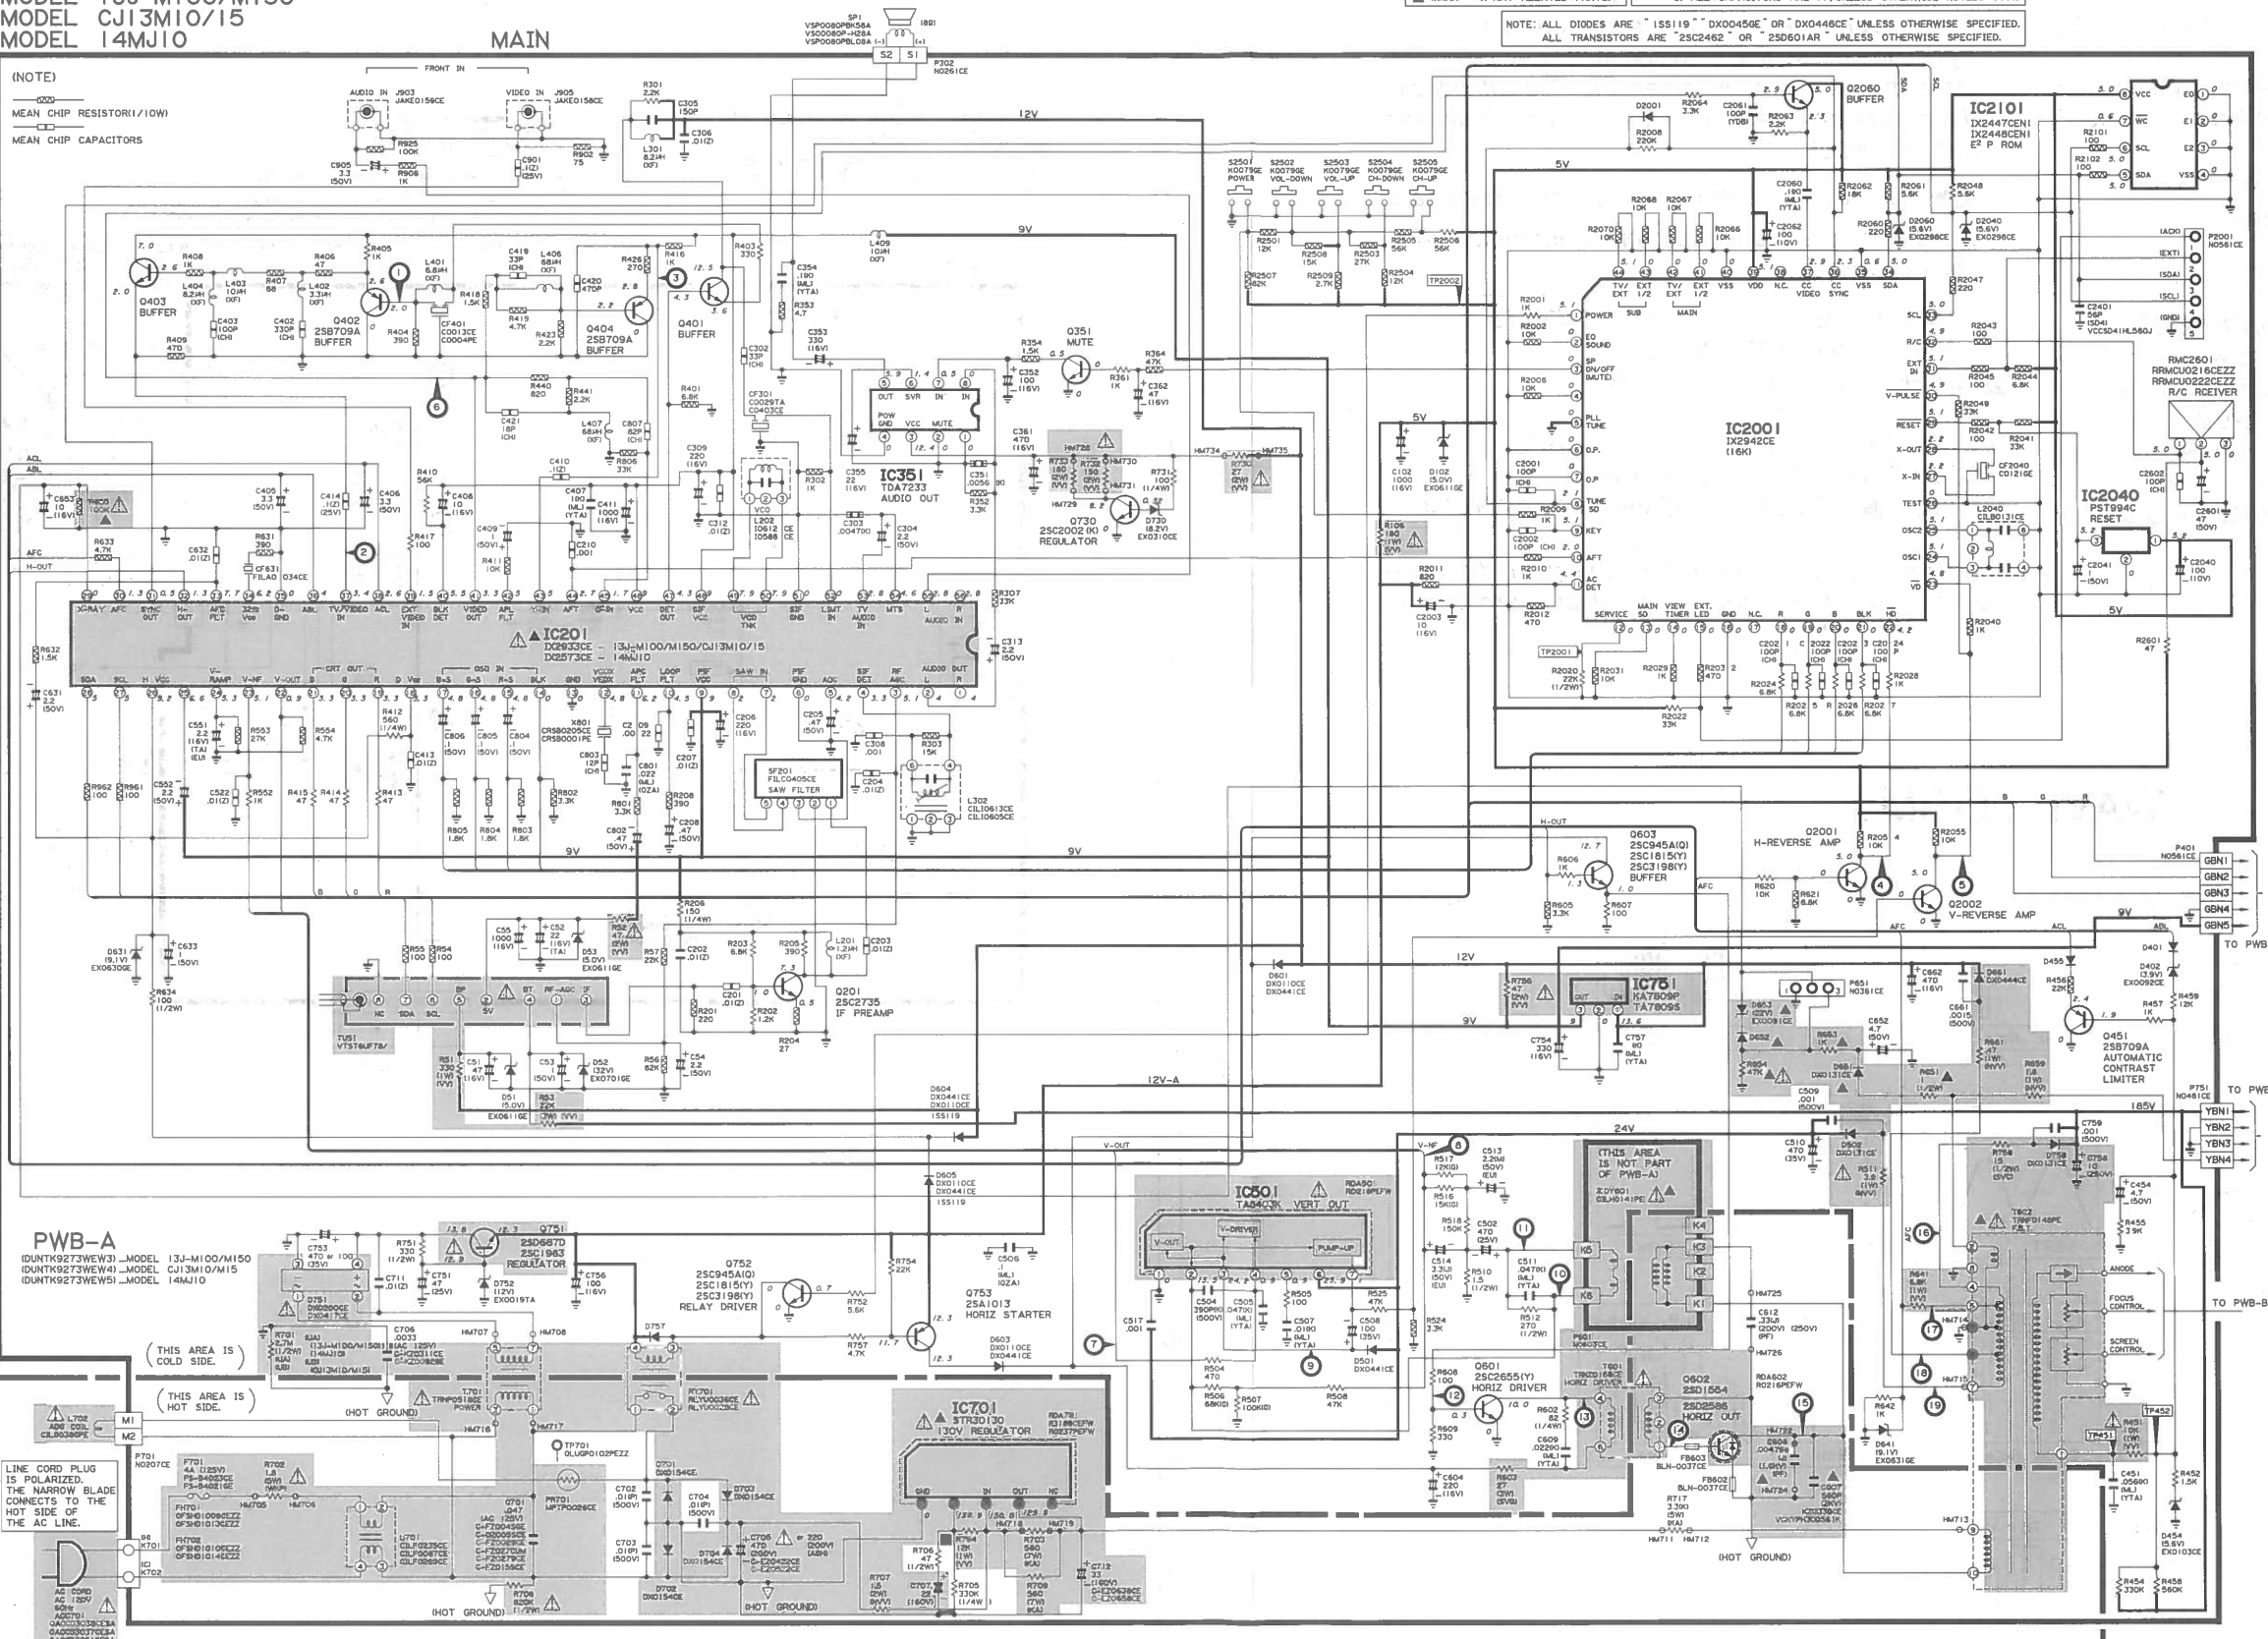

PWB-A
(DUNT9273WEW3)_MODEL 13J-M100/M150
(DUNT9273WEW4)_MODEL CJ13M10/15
(DUNT9273WEW5)_MODEL 14MJ10

(THIS AREA IS COLD SIDE.)
(THIS AREA IS HOT SIDE.)


LINE CORD PLUG IS POLARIZED. THE NARROW BLADE CONNECTS TO THE HOT SIDE OF THE AC LINE.

H
G
F
E
D
C
B
A


1 2 3 4 5 6 7 8 9 10 11 12

RPRINTED WIRING ASSEMBLIES

H
G
F
E
D
C
B
A

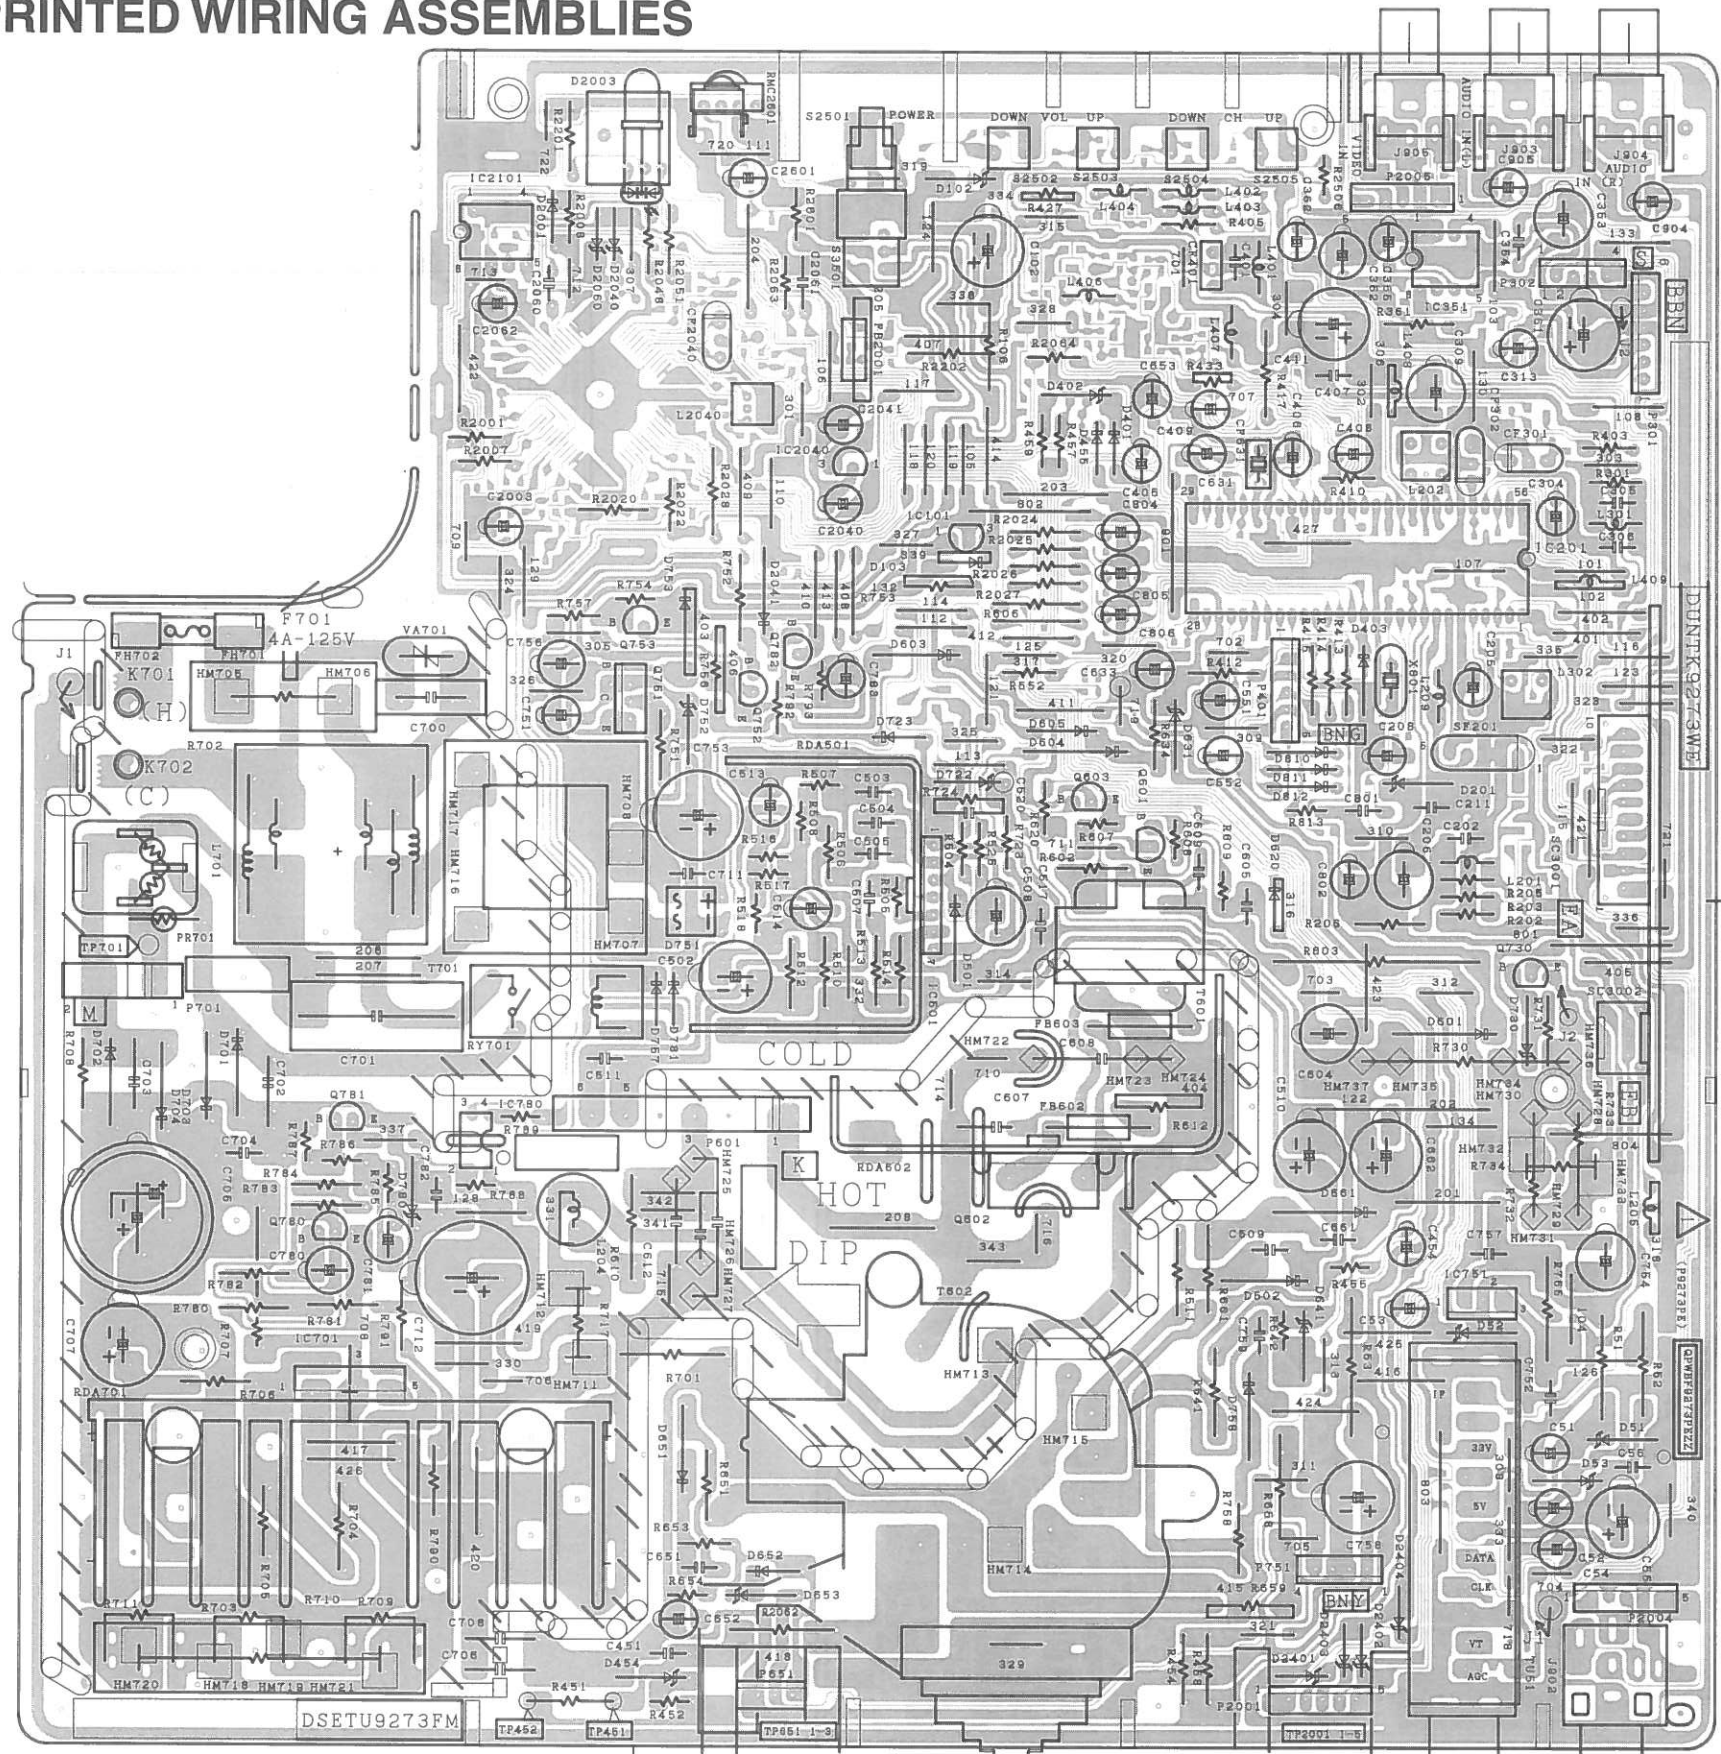


PWB-A : MAIN Unit (Wiring Side)

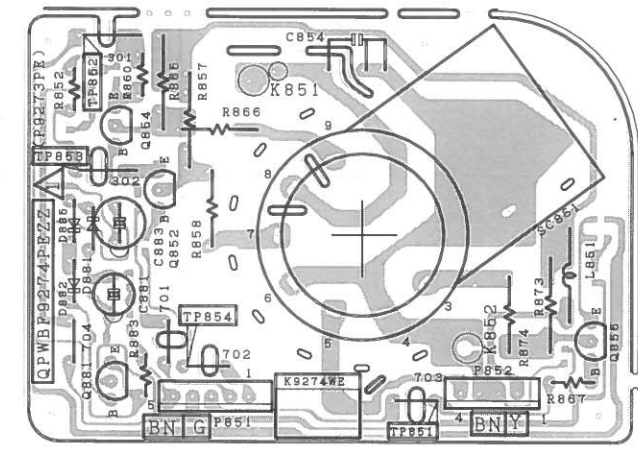


PWB-B : CRT Unit (Wiring Side)

1 2 3 4 5 6 7 8 9 10 11 12

H
G
F
E
D
C
B
A

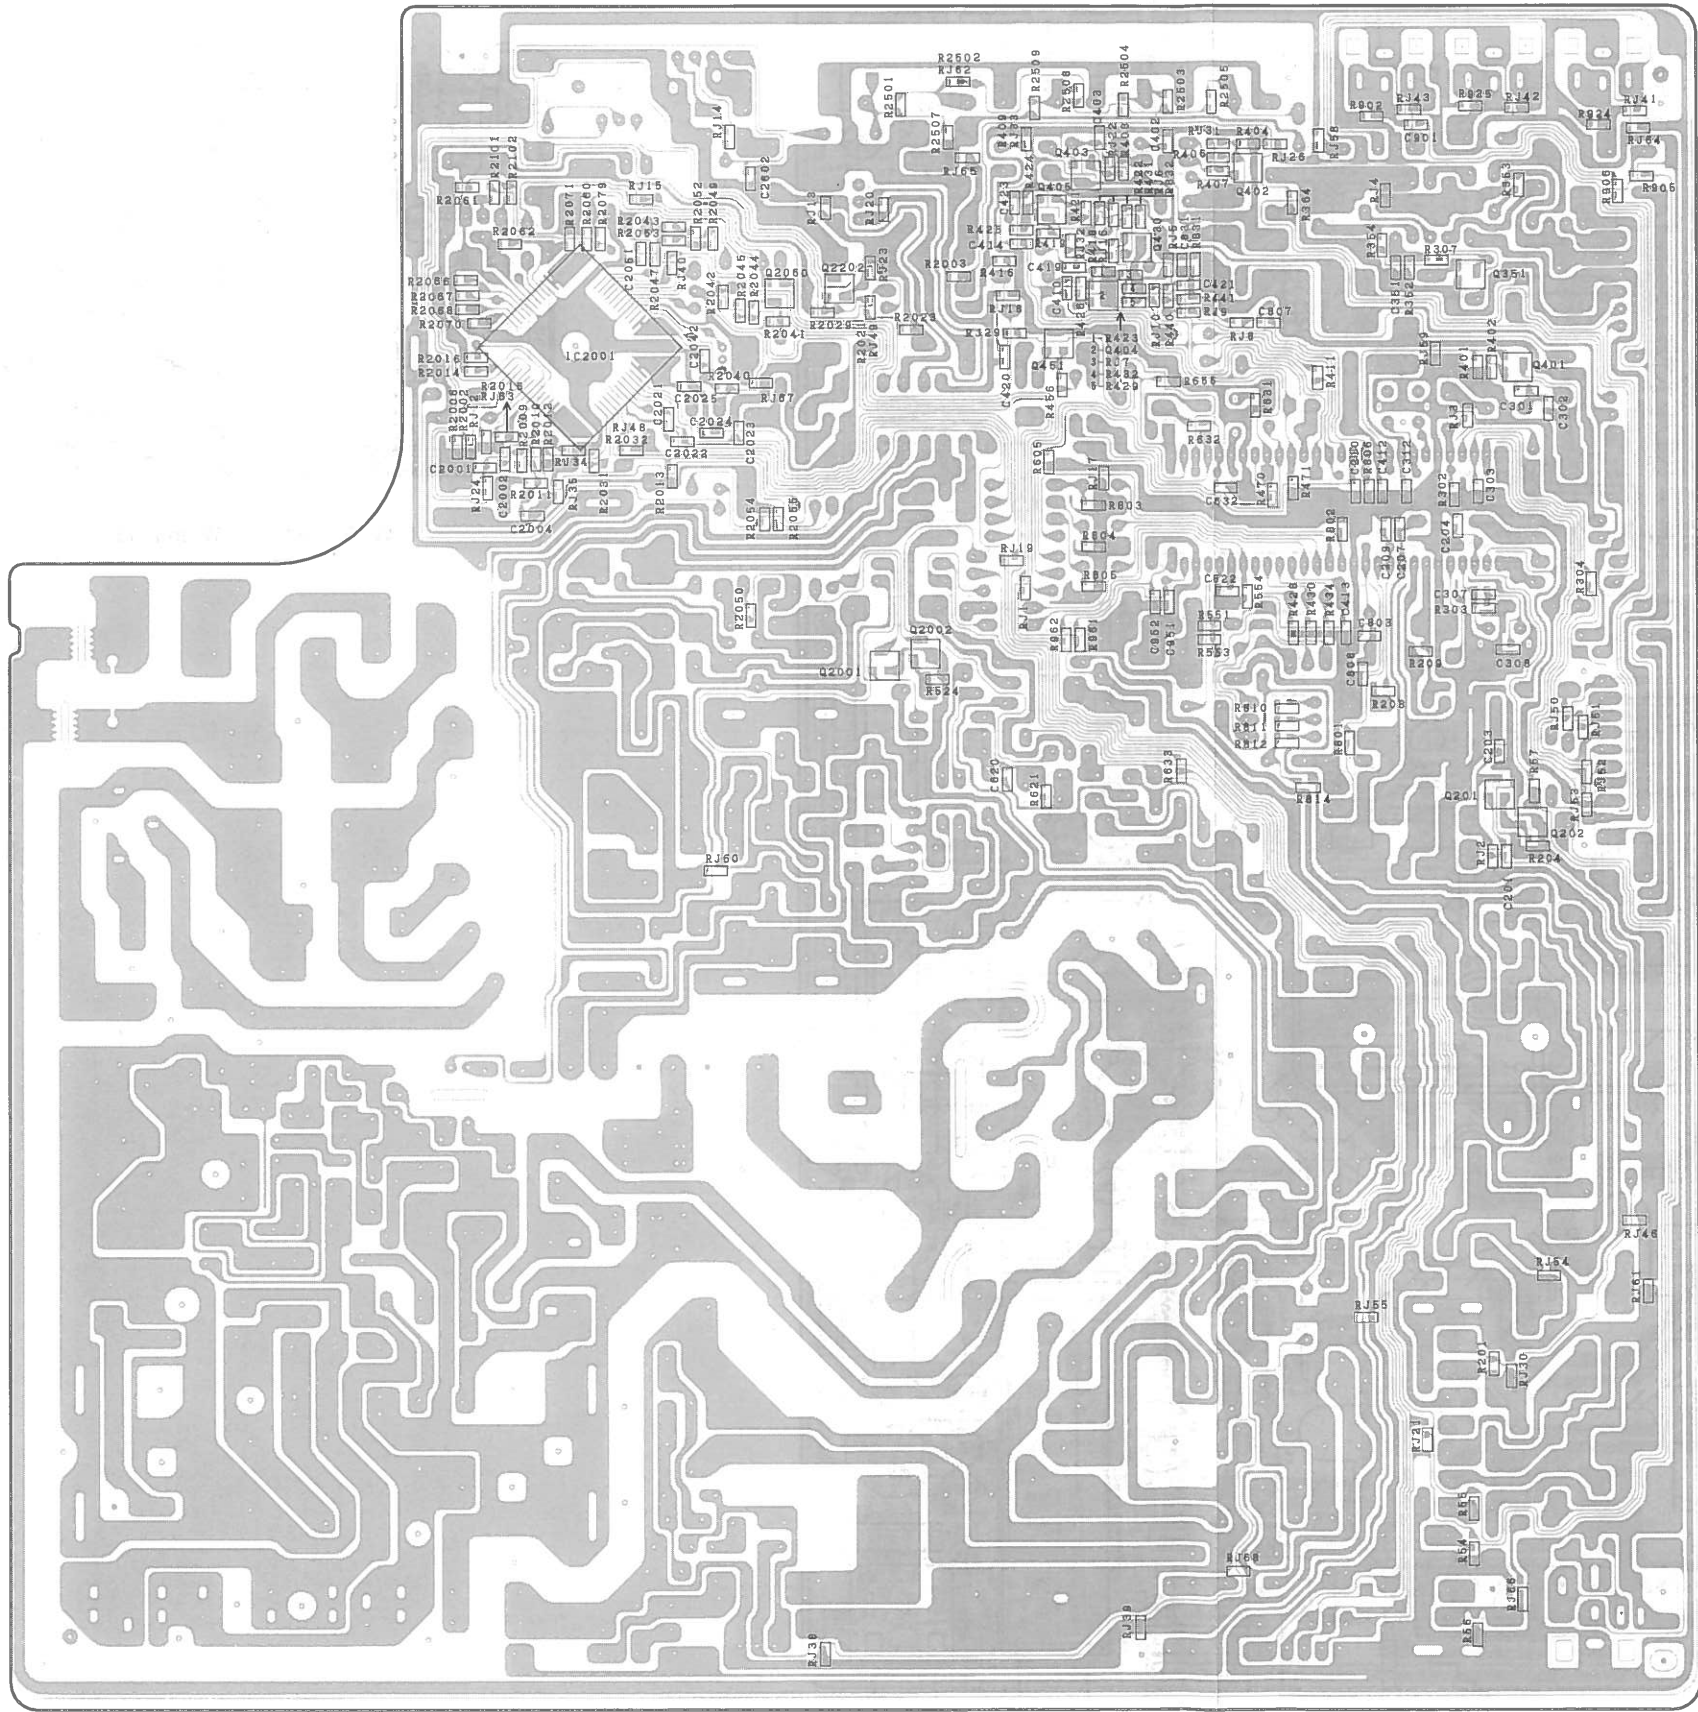

PWB-A : MAIN Unit (Chip Parts Side)

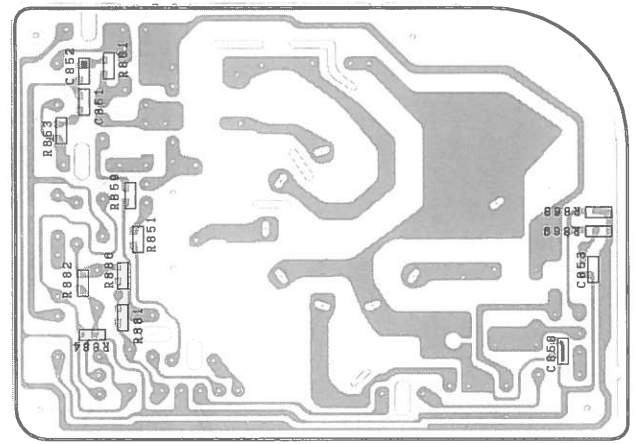

PWB-B : CRT Unit (Chip Parts Side)

1 2 3 4 5 6 7 8 9 10 11 12

PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual; electrical components having such features are identified by Δ and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which does not have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following information.

- | | |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. NO. |
| 3. PART NO. | 4. DESCRIPTION |

in USA: Contact your nearest SHARP Parts Distributor to order. For location of SHARP Parts Distributor, Please call Toll-Free; 1-800-BE-SHARP

MARK★: SPARE PARTS-DELIVERY SECTION

MARK▲ : X- RAY RELATED PARTS

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PICTURE TUBE

▲ Δ	VB370BVBK1U-S	R	CRT (DY601:H0143PE)	BX	
▲ Δ	VB370BVBK1S-S	R	CRT (DY601:H0143PE)		
	or		VBA34JFQ90X/*S	R CRT(DY601:H0143PE)	
	or		VB34KPU02X/*S	R CR (DY601:H0141PE)	BX
	or		VB34JLL40X/*S	R CRT (DY601:H0144PE)	BX
	or		VB37GDA86X/1E	R CRT (DY601:H0142PE)	BX
▲ Δ	RCiLH0141PEZZ	R	DY (CRT:A34KPU02XX)		
	or		RCiLH0142PEZZ	R DY (CRT:37GDA86X)	
	or		RCiLH0143PEZZ	R DY(CRT:CPJ370BVBK1UBC or CPJ370BVBK1S or A34JFQ90X)	
▲L702	RCiLG0386PEZZ	R	Degaussing Coil	AK	
	PMAGF3041CEZZ	J	Magnet Ass'y -Purity and Static Convergence	AG	
	PSPAG0004PEZZ	R	Wedge (Gum), Yoke	AC	
	QEARC1404PEZZ	R	Grounding strap	AD	
	MSPRT0001PEFJ	R	Spring for CRT	AC	

PRINTED WIRING BOARD ASSEMBLYS (NOT REPLACEMENT ITEM)

PWB-A	DUNTK9273WEW3	-	Main Unit (13J-M100/150)	-
PWB-A	DUNTK9273WEW4	-	Main Unit (CJ13M10/15)	-
PWB-A	DUNTK9273WEW5	-	Main Unit (14MJ10)	-
PWB-B	DUNTK9274WEW3	-	CRT Unit	-

LISTE DES PIÈCES

CHANGE DES PIÈCES

Les pièces de rechange qui présentent ces caractéristiques spéciales de sécurité, sont identifiées dans ce manuel : les pièces électriques qui présentent ces particularités, sont représentées par la marque Δ et sont hachurées dans les listes de pièces et dans les diagrammes schématiques.

La substitution d'une pièce de rechange par une autre qui ne présente pas les mêmes caractéristiques de sécurité que la pièce recommandée par l'usine et dans ce manuel de service, peut provoquer une électrocution, un incendie ou tout autre sinistre.

"COMMENT COMMANDER LES PIÈCES DE RECHANGE"

Pour que votre commande soit rapidement et correctement remplie, veuillez fournir les renseignements suivants.

- | | |
|---------------------|----------------|
| 1. NUMERO DU MODELE | 2. NO. DE REF |
| 3. NO. DE PIECE | 4. DESCRIPTION |

in CANADE: Contact SHARP Electronics of Canada Limited
Phone (416) 890-2100

★MARQUE: SECTION LIVRAISON DES PIÈCES DE RECHANGE

▲ MARQUE : PIÈCES RELATIVE AUX RAYONS X

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

DUNTK9273WEW3/W4/W5 MAIN UNIT

NOTE: THE PARTS HERES SHOWN ARE SUPPLIED AS AN ASSEMBLY NOT INDEPENDENTLY.

TUNER

▲ Δ	TU51	VTUVTST6UF78/	J Tuner	BD
------------	------	---------------	---------	----

INTEGRATED CIRCUITS

▲ Δ	IC201	RH-iX2933CEZZ	J TA1268N(13J-M100/150/ AR (CJ13M10/15)	
▲ Δ	IC201	RH-iX2573CEZZ	J (14MJ10)	
	IC351	VHiTDA7233/-1	J TDA7233	AF
	IC501	VHiTA8403K/-1	J TA8403k	AL
	IC701	VHiSTR301301E	J I.C.	AH
▲ Δ	IC751	VHiKA7809Pi-1	R KiA7809Pi	AE
	or	VHiTA7809S/-1		
	IC2001	RH-iX2942CEZZ	J I.C.	AV
	IC2040	VHiPST994C/-1	J PST994C	AD
	IC2101	RH-iX2447CEN1	J ST24C01B6	AL
	or	RH-iX2448CEN1		

TRANSISTORS

You can substitute "VS2SD601AR/-1" for "VS2SC2462-C-1".

Q201	VS2SC2735//1E	J	2SC2735	AC
Q351	VS2SD601AR/-1	J	2SD601(AR)	AC
Q401	VS2SD601AR/-1	J	2SD601(AR)	AC
Q402	VS2SB709AR/-1	J	2SB709(AR)	AC
Q403	VS2SD601AR/-1	J	2SD601(AR)	AC
Q404	VS2SB709AR/-1	J	2SB709(AR)	AC
Q451	VS2SB709AR/-1	J	2SB709(AR)	AC
Q601	VS2SC2655Y/-1	J	2SC2655(Y)	AE
▲ Q602	VS2SD1554//1E	J	2SD1554	AL

Ref. No. Part No. ★ Description Code

DUNTK9273WEW3/W4/W5 MAIN UNIT

or	VS2SD2586//1E		2SD2586	
Q603	VS2SC945AQ/-1	J	2SC945(AQ)	AB
or	VS2SC1815YW-1			
or	VS2SC3198-Y-1			
Q730	VS2SC2002-K1A	J	2SC2002	AC
△ Q751	VS2SD667D//-1	J	2SD667(D)	AE
or	VS2SC1983//-2	J		
Q752	VS2SC945AQ/-1	J	2SC945(AQ)	AB
or	VS2SC1815YW-1	J		
or	VS2SC3198-Y-1	J		
Q753	VS2SA1013//1E	J	2SA1013	AD
Q2001	VS2SD601AR/-1	J	2SD601AR	AC
Q2002	VS2SD601AR/-1	J	2SD601AR	AC
Q2060	VS2SD601AR/-1	J	2SD601AR	AC

DIODES

You can substitute "VHD1SS119//-1" for "RH-DX0446CEZZ".

D51	RH-EX0611GEZZ	J	Zener Diode	AA
D52	RH-EX0701GEZZ	J	Zener Diode	AB
D53	RH-EX0611GEZZ	J	Zener Diode	AA
D102	RH-EX0611GEZZ	J	Zener Diode	AA
D401	VHD1SS119//-1	J	Diode	AB
D402	RH-EX0092CEZZ	J	Zener Diode	AB
D454	RH-EX0103CEZZ	J	Zener Diode	AB
D455	VHD1SS119//-1	J	Diode	AB
D501	RH-DX0441CEZZ	J	Diode	AC
△ D502	RH-DX0131CEZZ	J	Diode	AC
D601	RH-DX0441CEZZ	J	Diode	AC
or	RH-DX0110CEZZ			
D603	RH-DX0441CEZZ	J	Diode	AC
or	RH-DX0110CEZZ			
D604	RH-DX0441CEZZ	J	Diode	AC
or	VHD1SS119//1E	J	Diode	AA
or	RH-DX0110CEZZ			
D605	RH-DX0441CEZZ	J	Diode	AA
or	VHD1SS119//1E	J	Diode	AA
or	RH-DX0110CEZZ			
D605	VHD1SS119//1E	J	Diode	AA
D631	RH-EX0630GEZZ	J	Zener Diode	AA
D641	RH-EX0631GEZZ	J	Zener Diode	AA
▲▲ D651	RH-DX0131CEZZ	J	Diode	AC
▲▲ D652	VHD1SS119//-1	J	Diode	AB
▲▲ D653	RH-EX0091CEZZ	J	Zener Diode	AB
△ D661	RH-DX0444CEZZ	J	Diode	AH
△ D701	RH-DX0154CEZZ	J	Diode	AC
△ D702	RH-DX0154CEZZ	J	Diode	AC
△ D703	RH-DX0154CEZZ	J	Diode	AC
△ D704	RH-DX0154CEZZ	J	Diode	AC
D730	RH-EX0310CEZZ	J	Zener Diode	AA
△ D751	RH-DX0417CEZZ	J	Diode	AE
or	RH-DX0200CEZZ			
D752	RH-EX0019TAZZ	J	Zener Diode	AB
D757	VHD1SS119//-1	J	Diode	AB

Ref. No. Part No. ★ Description Code

D758	RH-DX0131CEZZ	J	Diode	AC
D2001	VHD1SS119//-1	J	Diode	AB

PACKAGED CIRCUITS

△ PR701	RMPTP0026CEZZ	J	Packaged Circuit	AF
X801	RCRSB0001PEZZ	R	Crystal,3.58MHz	AL
or	RCRSB0205CEZZ			

FILTERS

CF301	RFILC0403CEZZ	J	Filter	AE
or	RFILC0029TAZZ			
CF401	RFILC0013CEZZ	J	Filter	AE
CF631	RFILA0034CEZZ	J	Filter	AD
CF2040	RFILC0121GEZZ	J	Filter	AD

COILS

L201	VP-XF1R2K0000	J	1.2μH	AB
L202	RCiLi0612CEZZ	J	If Coil	AE
or	RCiLi0588CEZZ			
L301	VP-XF8R2K0000	J	8.2μH	AB
L302	RCiLi0613CEZZ	J	If Coil	AE
or	RCiLi0605CEZZ			
L401	VP-XF6R8K0000	J	6.8μH	AB
L402	VP-XF3R3K0000	J	3.3μH	AB
L403	VP-XF100K0000	J	10μH	AB
L404	VP-XF8R2K0000	J	8.2μH	AB
L406	VP-XF680K0000	J	68μH	AB
L407	VP-XF680K0000	J	68μH	AB
L409	VP-XF100K0000	J	10μH	AB
△ L701	RCiLF0235CEZZ	J	Line Filter	AK
or	RCiLF0087CEZZ			
or	RCiLF0289CEZZ			
L2040	RCiLB0131CEZZ	J	Oscillation Coil	AE
SF201	RFILC0405CEZZ	J	S.A.W.Filter	AH

TRANSFORMERS

△ T601	RTRNZ0168CEZZ	J	H-Driver	AH
▲▲ T602	RTRNF0148PEZZ	R	H-OUT	BD
△ T701	RTRNP0518CEZZ	J	Power	AN

CAPACITORS

(EL:Electrolytic,M-Poly.:Metalized Polypro Film)

C51	VCEAGA1CW476M	J	47	16V	EL.	AB
C52	VCSATA1CE226K	J	22	16V	Tantalum	AD
C53	VCEAGA1HW105M	J	1.0	50V	EL.	AC
C54	VCEAGA1HW225M	J	2.2	50V	EL.	AB
C55	VCEAGA1CW108M	J	1000	16V	EL.	AD
C102	VCEAGA1CW108M	J	1000	16V	EL.	AD
C201	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C202	VCKYPA1HF103Z	J	0.01	50V	Ceramic	AA
C203	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C204	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C205	VCEAGA1HW474M	J	0.47	50V	EL.	AA
C206	VCEAGA1CW227M	J	220	16V	EL.	AC
C207	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C208	VCEAGA1HW474M	J	0.47	50V	EL.	AA
C209	VCKYCY1HB222K	J	2200p	50V	Ceramic	AA

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
DUNTK9273WEW3/W4/W5 MAIN UNIT					C612	VCFPPB2EB334J	J	0.33 250V M-Poly.	AF
C210	VCKYCY1HB102K	J	1000p 50V Ceramic	AA	C631	VCEAGA1HW225M	J	2.2 50V EL.	AB
C302	VCCCCY1HH330J	J	33p 50V Ceramic	AA	C632	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C303	VCKYCY1HB472K	J	4700p 50V Ceramic	AA	C633	VCEAGA1HW105M	J	1.0 50V EL.	AC
C304	VCEAGA1HW225M	J	2.2 50V EL.	AB	C652	VCEAGA1HW475M	J	4.7 50V EL.	AB
C305	VCKYPA1HB151K	J	150p 50V Ceramic	AA	C653	VCEAGA1CW106M	J	10 16V EL.	AA
C306	VCKYPA1HF103Z	J	0.01 50V Ceramic	AA	C661	VCKYPA2HB152K	J	1500p 500V Ceramic	AA
C308	VCKYCY1HB102K	J	1000p 50V Ceramic	AA	C662	VCEAGA1CW477M	J	470 16V EL.	AC
C309	VCEAGA1CW227M	J	220 16V EL.	AC	△ C701	RC-FZ004SGEZZ	J	0.47 AC125V Plastic	AE
C312	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA	or	RC-QZ005SCEZZ			
C313	VCEAGA1HW225M	J	2.2 50V EL.	AB	or	RC-FZ002SCEZZ			
C351	VCKYCY1HB562K	J	5600p 50V Ceramic	AA	or	RC-FZ027CUMZZ			
C352	VCEAGA1CW107M	J	100 16V EL.	AB	or	RC-FZ0279CEZZ			
C353	VCEAGA1CW337M	J	330 16V EL.	AC	or	RC-FZ015SCEZZ			
C354	VCQYTA1HM104K	J	0.1 50V Mylar	AC	C702	VCKYPB2HE103P	J	0.01 500V Ceramic	AB
C355	VCEAGA1CW226M	J	22 16V EL.	AB	C703	VCKYPB2HE103P	J	0.01 500V Ceramic	AB
C361	VCEAGA1CW477M	J	470 16V EL.	AC	C704	VCKYPB2HE103P	J	0.01 500V Ceramic	AB
C362	VCEAGA1CW476M	J	47 16V EL.	AB	△ C705	RC-EZ0422CEZZ	J	470 200V EL.	AN
C402	VCCCCY1HH331J	J	330p 50V Ceramic	AA	or	RC-EZ0522CEZZ			
C403	VCCCCY1HH101J	J	100p 50V Ceramic	AA	or	VCEAGH2DW227M			
C405	VCEAGA1HW335M	J	3.3 50V EL.	AB	△ C706	RC-KZ0030CEZZ	J	0.0033 AC125V Ceramic	AC
C406	VCEAGA1HW335M	J	3.3 50V EL.	AB	or	RC-KZ0311CEZZ			
C408	VCEAGA1CW106M	J	10 16V EL.	AA	or	RC-KZ0092GEZZ			
C409	VCEAGA1HW105M	J	1.0 50V EL.	AC	△ C707	VCEAGA2CW226M	J	22 160V EL.	AD
C410	VCKYCY1EF104Z	J	0.1 25V Ceramic	AA	C711	VCKYPA1HF103Z	J	0.01 50V Ceramic	AA
C411	VCEAGA1CW108M	J	1000 16V EL.	AD	C712	RC-EZ0638CEZZ	J	33 160V EL.	AD
C412	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA	or	RC-EZ0638CEZZ			
C413	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA	C751	VCEAGA1CW476M	J	47 16V EL.	AB
C414	VCKYCY1EF104Z	J	0.1 25V Ceramic	AA	C752	VCKYPA1HF103Z	J	0.01 50V Ceramic	AA
C419	VCCCCY1HH330J	J	33p 50V Ceramic	AA	C753	VCEAGA1VW477M	J	470 35V EL.	AD
C420	VCCCCY1HH271J	J	270p 50V Ceramic	AA	or	VCEAGA1VW107M	100 35V	EL.	
C421	VCCCCY1HH180J	J	18p 50V Ceramic	AA	C754	VCEAGA1CW337M	J	330 16V EL.	AC
C451	VCQYTA1HM563K	J	0.056 50V Mylar	AB	C756	VCEAGA1CW107M	J	100 16V EL.	AB
C454	VCEAGA1HW475M	J	4.7 50V EL.	AB	C757	VCQYTA1HM104K	J	0.1 50V Mylar	AC
C502	VCEAGA1EW477M	J	470 25V EL.	AD	△ C758	VCEAGA2EW106M	J	10 250V EL.	AC
C503	VCFYHA1HA394J	J	0.39 50V	AC	C759	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
C504	VCKYPA2HB391K	J	390p 500V Ceramic	AA	C801	RC-QZA223TAYK	J	0.022 50V Mylar	AB
C505	VCQYTA1HM473K	J	0.047 50V Mylar	AB	C802	VCEAGA1HW474M	J	0.47 50V EL.	AA
C507	VCQYTA1HM103K	J	0.01 50V Mylar	AB	C803	VCCCCY1HH120J	J	12p 50V Ceramic	AA
C508	VCEAGA1VW107M	J	100 35V EL.	AC	C804	VCEAGA1HW104M	J	0.1 50V EL.	AA
C509	VCKYPA2HB102K	J	1000p 500V Ceramic	AA	C805	VCEAGA1HW104M	J	0.1 50V EL.	AA
C510	VCEAGA1VW477M	J	470 35V EL.	AD	C806	VCEAGA1HW104M	J	0.1 50V EL.	AA
C511	VCQYTA1HM473K	J	0.047 50V Mylar	AB	C807	VCCCCY1HH820J	J	82p 50V Ceramic	AA
C513	VCEACA1HC225M	J	2.2 50V EL.	AC	C901	VCKYCY1EF104Z	J	0.1 25V Ceramic	AA
C514	VCEACA1HC335J	J	3.3 50V EL.	AC	C905	VCEAGA1HW335M	J	3.3 50V EL.	AB
C517	VCKYPA1HB102K	J	1000p 50V Ceramic	AA	C2001	VCCCCY1HH101J	J	100p 50V Ceramic	AA
C551	VCSATA1CE225K	J	2.2 16V Tantalum	AB	C2002	VCCCCY1HH101J	J	100p 50V Ceramic	AA
C552	VCEAGA1HW225M	J	2.2 50V EL.	AB	C2003	VCEAGA1CW106M	J	10 16V EL.	AA
C604	VCEAGA1CW227M	J	220 16V EL.	AC	C2021	VCCCCY1HH101J	J	100p 50V Ceramic	AA
▲△ C607	VCKYPH3DB561K	J	560p 2000V Ceramic	AC	C2022	VCCCCY1HH101J	J	100p 50V Ceramic	AA
or	RC-KZ0338CEZZ				C2023	VCCCCY1HH101J	J	100p 50V Ceramic	AA
▲△ C608	VCFPPD3CA472H	J	4700p 1600V M-Poly.	AD	C2024	VCCCCY1HH101J	J	100p 50V Ceramic	AA
C609	VCQYTA1HM223K	J	0.022 50V Mylar	AB	C2040	VCEAGA1AW107M	J	100 10V EL.	AB
					C2041	VCEAGA1HW105M	J	1.0 50V EL.	AC
					C2060	VCQYTA1HM104K	J	0.1 50V Mylar	AC
					C2061	VCCSD41HL101J	J	100p 50V Ceramic	AB

Ref. No.	Part No.	★	Description	Code
DUNTK9273WEW3/W4/W5 MAIN UNIT				
C2062	VCEAGA1AW107M	J	100 10V EL.	AB
C2601	VCEAGA1HW475M	J	4.7 50V EL.	AB
C2602	VCCCCY1HH101J	J	100p 50V Ceramic	AA
RESISTORS				
(M-Ox: Metal Oxide, M-Film: Metal Film)				
RJ1	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ3	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ5	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ6	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ7	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ9	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ10	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ12	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ13	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ14	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ15	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ17	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ18	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ19	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ20	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ21	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ24	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ26	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ29	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ30	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ32	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ35	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ40	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ49	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ52	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ53	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ55	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ59	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ62	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ63	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ64	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ65	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ66	VRN-MD2AL000J	J	00 0.1W M-Film	AA
RJ68	VRN-MD2AL000J	J	00 0.1W M-Film	AA
△ R51	VRS-VV3AB331J	J	330 1W M-Ox	AA
△ R52	VRS-VV3DB470J	J	47 2W M-Ox	AA
△ R53	VRS-VV3LB223J	J	22k 3.0W M-Ox	AB
R54	VRN-MD2AL101J	J	100 0.1W M-Film	AA
R55	VRN-MD2AL101J	J	100 0.1W M-Film	AA
R56	VRN-MD2AL823J	J	82k 0.1W M-Film	AA
R57	VRN-MD2AL223J	J	22k 0.1W M-Film	AA
△ R106	VRS-VV3AB181J	J	180 1W M-Ox	AA
R201	VRN-MD2AL221J	J	220 0.1W M-Film	AA
R202	VRD-RA2BE122J	J	1.2k 1/8W Carbon	AA
R203	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R204	VRN-MD2AL270J	J	27 0.1W M-Film	AA

Ref. No.	Part No.	★	Description	Code
R205	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R206	VRD-RA2EE151J	J	150 1/4W Carbon	AA
R208	VRN-MD2AL391J	J	390 0.1W M-Film	AA
R301	VRD-RA2BE222J	J	2.2k 1/8W Carbon	AA
R302	VRN-MD2AL102J	J	1.0k 0.1W M-Film	AA
R303	VRN-MD2AL153J	J	15k 0.1W M-Film	AA
R307	VRN-MD2AL333J	J	33k 0.1W M-Film	AA
R352	VRN-MD2AL332J	J	3.3k 0.1W M-Film	AA
R353	VRN-MD2AL4R7J	J	4.7 0.1W M-Film	AA
R354	VRN-MD2AL152J	J	1.5k 0.1W M-Film	AA
R361	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R364	VRN-MD2AL473J	J	47k 0.1W M-Film	AA
R401	VRN-MD2AL682J	J	6.8k 0.1W M-Film	AA
R403	VRD-RA2BE331J	J	330 1/8W Carbon	AA
R404	VRN-MD2AL391J	J	390 0.1W M-Film	AA
R405	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R406	VRN-MD2AL470J	J	47 0.1W M-Film	AA
R407	VRN-MD2AL680J	J	68 0.1W M-Film	AA
R408	VRN-MD2AL102J	J	1.0k 0.1W M-Film	AA
R409	VRN-MD2AL471J	J	470 0.1W M-Film	AA
R410	VRD-RA2BE563J	J	56k 1/8W Carbon	AA
R411	VRN-MD2AL103J	J	10k 0.1W M-Film	AA
R412	VRD-RA2EE561J	J	560 1/4W Carbon	AA
R413	VRD-RA2BE470J	J	47 1/8W Carbon	AA
R414	VRD-RA2BE470J	J	47 1/8W Carbon	AA
R415	VRD-RA2BE470J	J	47 1/8W Carbon	AA
R416	VRN-MD2AL102J	J	1.0k 0.1W M-Film	AA
R417	VRD-RA2BE101J	J	100 1/8W Carbon	AA
R418	VRN-MD2AL152J	J	1.5k 0.1W M-Film	AA
R419	VRN-MD2AL472J	J	4.7k 0.1W M-Film	AA
R423	VRN-MD2AL222J	J	2.2k 0.1W M-Film	AA
R426	VRN-MD2AL271J	J	270 0.1W M-Film	AA
R440	VRN-MD2AL821J	J	820 0.1W M-Film	AA
R441	VRN-MD2AL222J	J	2.2k 0.1W M-Film	AA
△ R451	VRS-VV3AB103J	J	10k 1W M-Ox	AA
R452	VRD-RA2BE152J	J	1.5k 1/8W Carbon	AA
R454	VRD-RA2BE334J	J	330k 1/8W Carbon	AA
R455	VRD-RA2BE392J	J	3.9k 1/8W Carbon	AA
R456	VRN-MD2AL223J	J	22k 0.1W M-Film	AA
R457	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R458	VRD-RA2BE564J	J	560k 1/8W Carbon	AA
R459	VRD-RA2BE123J	J	12k 1/8W Carbon	AA
R504	VRD-RA2BE471J	J	470 1/8W Carbon	AA
R505	VRD-RA2BE101J	J	100 1/8W Carbon	AA
R506	VRD-RA2BE683G	J	68k 1/8W Carbon	AA
R507	VRD-RA2BE104G	J	100k 1/8W Carbon	AA
R508	VRD-RA2BE473J	J	47k 1/8W Carbon	AA
R510	VRD-RM2HD1R5J	J	1.5 1/2W Carbon	AA
△ R511	VRN-VV3AB3R9J	J	3.9 1W M-Film	AA
R512	VRD-RM2HD271J	J	270 1/2W Carbon	AA
R516	VRD-RA2BE153G	J	15k 1/8W Carbon	AA
R517	VRD-RA2BE123G	J	12k 1/8W Carbon	AA
R518	VRD-RA2BE154J	J	150k 1/8W Carbon	AA
R524	VRN-MD2AL332J	J	3.3k 0.1W M-Film	AA
R525	VRD-RA2BE473J	J	47k 1/8W Carbon	AA
R552	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA

Ref. No.	Part No.	★	Description	Code
DUNTK9273WEW3/W4/W5 MAIN UNIT				
R553	VRN-MD2AL273J	J	27k 0.1W M-Film	AA
R554	VRN-MD2AL472J	J	4.7k 0.1W M-Film	AA
R602	VRD-RA2EE820J	J	82 1/4W Carbon	AA
△ R603	VRS-SV3LB270J	J	27 3.0W M-Ox	AB
R605	VRN-MD2AL332J	J	3.3k 0.1W M-Film	AA
R606	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R607	VRD-RA2BE101J	J	100 1/8W Carbon	AA
R608	VRD-RA2BE101J	J	100 1/8W Carbon	AA
R609	VRD-RA2BE331J	J	330 1/8W Carbon	AA
R620	VRD-RA2BE103J	J	10k 1/8W Carbon	AA
R621	VRN-MD2AL682J	J	6.8k 0.1W M-Film	AA
R631	VRN-MD2AL391J	J	390 0.1W M-Film	AA
R632	VRN-MD2AL152J	J	1.5k 0.1W M-Film	AA
R633	VRN-MD2AL472J	J	4.7k 0.1W M-Film	AA
R634	VRD-RM2HD101J	J	100 1/2W Carbon	AA
R641	VRS-VV3AB682J	J	6.8k 1W M-Ox	AA
R642	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
▲△ R651	VRD-RM2HD1R0J	J	1.0 1/2W Carbon	AA
▲△ R653	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
▲△ R654	VRD-RA2BE473J	J	47k 1/8W Carbon	AA
▲△ R655	VRN-MD2AL104J	J	100k 0.1W M-Film	AA
△ R659	VRN-VV3AB1R8J	J	1.8 1W M-Film	AA
△ R661	VRN-VV3ABR47J	J	0.47 1W M-Film	AA
△ R701	VRC-UA2HG275K	J	2.7M 1/2W Solid	AA
			(13J-M100/150/14MJ10)	
△ R701	VRC-UB2HG275K	J	2.7M 1/2W Solid	AA
			(CJ13M10/15)	
△ R702	VRW-KP3HC1R8K	J	1.8 5W Cement	AC
△ R703	VRS-KA3NG271J	J	270 7.0W M-Ox	AE
△ R704	VRS-VV3AB123J	J	12k 1W M-Ox	AA
R705	VRD-RA2EE334J	J	330k 1/4W Carbon	AA
R706	VRD-RM2HD470J	J	47 1/2W Carbon	AA
△ R707	VRN-VV3DB1R5J	J	1.5 2W M-Film	AB
△ R708	VRD-RM2HD824J	J	820k 1/2W Carbon	AA
△ R717	VRS-KA3HG3R3K	J	3.3 5W M-Ox	AD
△ R730	VRS-VV3DB270J	J	27 2W M-Ox	AA
R731	VRD-RA2EE101J	J	100 1/4W Carbon	AA
△ R732	VRS-VV2DB151J	J	150 2W M-Ox	AA
△ R733	VRS-VV3DB181J	J	180 2W M-Ox	AA
R751	VRD-RM2HD331J	J	330 1/2W Carbon	AA
R752	VRD-RA2BE562J	J	5.6k 1/8W Carbon	AA
R754	VRD-RA2BE223J	J	22k 1/8W Carbon	AA
△ R755	VRS-VV3DB470J	J	47 2W M-Ox	AA
R757	VRD-RA2BE472J	J	4.7k 1/8W Carbon	AA
△ R758	VRS-SV2HC150J	J	15 1/2W M-Ox	AA
R801	VRN-MD2AL332J	J	3.3k 0.1W M-Film	AA
R802	VRN-MD2AL332J	J	3.3k 0.1W M-Film	AA
R803	VRN-MD2AL182J	J	1.8k 0.1W M-Film	AA
R804	VRN-MD2AL182J	J	1.8k 0.1W M-Film	AA
R805	VRN-MD2AL182J	J	1.8k 0.1W M-Film	AA
R806	VRN-MD2AL333J	J	33k 0.1W M-Film	AA
R902	VRN-MD2AL750J	J	75 0.1W M-Film	AA

Ref. No.	Part No.	★	Description	Code
R906	VRN-MD2AL102J	J	1.0k 0.1W M-Film	AA
R925	VRN-MD2AL104J	J	100k 0.1W M-Film	AA
R961	VRN-MD2AL101J	J	100 0.1W M-Film	AA
R962	VRN-MD2AL101J	J	100 0.1W M-Film	AA
R2001	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R2002	VRN-MD2AL103J	J	10k 0.1W M-Film	AA
R2006	VRN-MD2AL103J	J	10k 0.1W M-Film	AA
R2008	VRD-RA2BE224J	J	220k 1/8W Carbon	AA
R2009	VRN-MD2AL102J	J	1.0k 0.1W M-Film	AA
R2010	VRN-MD2AL102J	J	1.0k 0.1W M-Film	AA
R2011	VRN-MD2AL821J	J	820 0.1W M-Film	AA
R2012	VRN-MD2AL471J	J	470 0.1W M-Film	AA
R2020	VRD-RM2HD223J	J	22k 1/2W Carbon	AA
R2022	VRD-RA2BE333J	J	33k 1/8W Carbon	AA
R2024	VRD-RA2BE822J	J	8.2k 1/8W Carbon	AA
R2025	VRD-RA2BE822J	J	8.2k 1/8W Carbon	AA
R2026	VRD-RA2BE822J	J	8.2k 1/8W Carbon	AA
R2027	VRD-RA2BE122J	J	1.2k 1/8W Carbon	AA
R2028	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R2029	VRN-MD2AL102J	J	1.0k 0.1W M-Film	AA
R2031	VRN-MD2AL103J	J	10k 0.1W M-Film	AA
R2032	VRN-MD2AL471J	J	470 0.1W M-Film	AA
R2040	VRN-MD2AL102J	J	1.0k 0.1W M-Film	AA
R2041	VRN-MD2AL333J	J	33k 0.1W M-Film	AA
R2042	VRN-MD2AL101J	J	100 0.1W M-Film	AA
R2043	VRN-MD2AL101J	J	100 0.1W M-Film	AA
R2044	VRN-MD2AL682J	J	6.8k 0.1W M-Film	AA
R2045	VRN-MD2AL101J	J	100 0.1W M-Film	AA
R2047	VRN-MD2AL221J	J	220 0.1W M-Film	AA
R2048	VRD-RA2BE562J	J	5.6k 1/8W Carbon	AA
R2049	VRN-MD2AL333J	J	33k 0.1W M-Film	AA
R2054	VRN-MD2AL103J	J	10k 0.1W M-Film	AA
R2055	VRN-MD2AL103J	J	10k 0.1W M-Film	AA
R2060	VRN-MD2AL221J	J	220 0.1W M-Film	AA
R2061	VRN-MD2AL562J	J	5.6k 0.1W M-Film	AA
R2062	VRN-MD2AL183J	J	18k 0.1W M-Film	AA
R2063	VRD-RA2BE222J	J	2.2k 1/8W Carbon	AA
R2064	VRD-RA2BE332J	J	3.3k 1/8W Carbon	AA
R2066	VRN-MD2AL103J	J	10k 0.1W M-Film	AA
R2067	VRN-MD2AL103J	J	10k 0.1W M-Film	AA
R2068	VRN-MD2AL103J	J	10k 0.1W M-Film	AA
R2070	VRN-MD2AL103J	J	10k 0.1W M-Film	AA
R2101	VRN-MD2AL101J	J	100 0.1W M-Film	AA
R2102	VRN-MD2AL101J	J	100 0.1W M-Film	AA
R2501	VRN-MD2AL123J	J	12k 0.1W M-Film	AA
R2503	VRN-MD2AL273J	J	27k 0.1W M-Film	AA
R2504	VRN-MD2AL123J	J	12k 0.1W M-Film	AA
R2505	VRN-MD2AL563J	J	56k 0.1W M-Film	AA
R2506	VRD-RA2BE563J	J	56k 1/8W Carbon	AA
R2507	VRN-MD2AL823J	J	82k 0.1W M-Film	AA
R2508	VRN-MD2AL153J	J	15k 0.1W M-Film	AA
R2509	VRN-MD2AL272J	J	2.7k 0.1W M-Film	AA
R2601	VRD-RA2BE331J	J	330 1/8W Carbon	AA

Ref. No.	Part No.	★	Description	Code
DUNTK9273WEW3/W4/W5 MAIN UNIT				

SWITCHES

S2501	QSW-K0079GEZZ	J	Power	AB
S2502	QSW-K0079GEZZ	J	Vol-down	AB
S2503	QSW-K0079GEZZ	J	Vol-up	AB
S2504	QSW-K0079GEZZ	J	Ch-down	AB
S2505	QSW-K0079GEZZ	J	Ch-up	AB

MISCELLANEOUS PARTS

△ RY701	RRLYU0036CEZZ	J	Relay	AM
or	RRLYU0028CEZZ			
△ F701	QFS-B4023CEZZ	J	Fuse	AC
or	QFS-B4021GEZZ			
FB602	RBLN-0037CEZZ	J	Balun	AB
FB603	RBLN-0037CEZZ	J	Balun	AB
FH701	QFSDH1013CEZZ	J	Fuse Holder	AC
or	QFSDH1009CEZZ			
FH702	QFSDH1014CEZZ	J	Fuse Holder	AC
or	QFSDH1010CEZZ			
J903	QJAKE0159CEZZ	J	Jack, audio in	AF
J905	QJAKE0158CEZZ	J	Jack, Video in	AF
P302	QPLGN0261CEZZ	J	Plug	AB
P401	QPLGN0561CEZZ	J	Plug	AB
P601	QPLGN0603CEZZ	J	Plug	AB
P651	QPLGN0361CEZZ	J	Plug	AB
P701	QPLGN0207CEZZ	J	Plug	AA
P751	QPLGN0461CEZZ	J	Plug	AB
P2001	QPLGN0561CEZZ	J	Plug	AB
RMC2601	RRMCU0222CEZZ	J	Remote Receiver	AL
or	RRMCU0216CEZZ			
RDA501	PRDAR0218PEFW	R	Heat Sink	AD
RDA602	PRDAR0216PEFW	R	Heat Sink	AE
RDA701	PRDAR0237PEFW	R	Heat Sink	AK
or	PRDAR3188CEFW			
TP701	QLUGP0102PEZZ	R	Lug	AA
	PZETM0016CEZZ	J	Insulator	AB
	LHLDW1002PEZZ	R	Holder	AB
	LX-BZ3100CEFD	J	Screw	AA
	LX-BZ3100CEFD	J	Screw	AA
	LX-BZ3100CEFD	J	Screw	AA
	LX-TZ3004CEFD	J	Screw	AA

Ref. No.	Part No.	★	Description	Code
DUNTK9274WEW3 CRT UNIT				

TRANSISTORS

Q852	VS2SC2229O/1E	J	2SC2229(O)	AD
Q854	VS2SC2229O/1E	J	2SC2229(O)	AD
Q856	VS2SC2229O/1E	J	2SC2229(O)	AD
Q881	VS2SA1266-Y-1	J	2SA1266(Y)	AA

DIODES

You can substitute "VHD1SS119// -1" for "RH-DX0446CEZZ".

D881	VHD1SS119// -1	J	1SS119	AB
D882	VHD1SS119// -1	J	1SS119	AB
D885	VHD1SS119// -1	J	1SS119	AB

COIL

L851	VP-DF151K0000	J	150μH	AB
------	---------------	---	-------	----

CAPACITORS

C851	VCCCCY1HH271J	J	270p	50V	Ceramic	AA
C852	VCCCCY1HH271J	J	270p	50V	Ceramic	AA
C853	VCCCCY1HH271J	J	270p	50V	Ceramic	AA
C854	RC-KZ0016CEZZ	J	0.1	1.4kV	Ceramic	AC
C858	VCKYCY1HB102K	J	1000p	50V	Ceramic	AA
C881	VCEAGA1CW106M	J	10	16V	EL.	AA
C883	VCEAGA1CW336M	J	33	16V	EL.	AB

RESISTORS

R851	VRN-MD2AL470J	J	47	0.1W	Metal.Film	AA
R852	VRD-RA2BE271J	J	270	1/8W	Carbon	AA
R853	VRN-MD2AL121J	J	120	0.1W	Metal.Film	AA
△ R857	VRS-VV3AB123J	J	12k	1W	Metal Oxide	AA
R858	VRD-RM2HD332J	J	3.3k	1/2W	Carbon	AA
R859	VRN-MD2AL470J	J	47	0.1W	Metal.Film	AA
R860	VRD-RA2BE271J	J	270	1/8W	Carbon	AA
R861	VRN-MD2AL121J	J	120	0.1W	Metal.Film	AA
△ R865	VRS-VV3AB123J	J	12k	1W	Metal Oxide	AA
R866	VRD-RM2HD332J	J	3.3k	1/2W	Carbon	AA
R867	VRD-RA2BE470J	J	47	1/8W	Carbon	AA
R868	VRN-MD2AL271J	J	270	0.1W	Metal.Film	AA
R869	VRN-MD2AL121J	J	120	0.1W	Metal.Film	AA
△ R873	VRS-VV3AB123J	J	12k	1W	Metal.Oxide	AA
R874	VRD-RM2HD332J	J	3.3k	1/2W	Carbon	AA
R881	VRN-MD2AL561J	J	560	0.1W	Metal.Film	AA
R882	VRN-MD2AL391J	J	390	0.1W	Metal.Film	AA
R883	VRD-RA2BE561J	J	560	1/8W	Carbon	AA
R884	VRN-MD2AL152J	J	1.5k	0.1W	Metal.Film	AA
R886	VRN-MD2AL431J	J	430	0.1W	Metal.Film	AA

MISCELLANEOUS PARTS

P851	QPLGN0561CEZZ	J	Plug	AB
P852	QPLGN0461CEZZ	J	Plug	AB
SC851	QSOCV0839CEZZ	J	Socket,CRT	AK

Ref. No. Part No. ★ Description Code

CABINET PARTS

13J-M100

1	CCABA2395WEV0	R	Cabinet Ass'y,Front	AZ
1-1	-	R	Cabinet,Front	-
1-2	GCOVA0078PEKA	R	Cover for R/C	AD
1-3	JBTN-0258PESA	R	Button,Power, VOL/CH-up/down	AE
2	GCABB2309PEKA	R	Rear Cabinet	AW

CJ13M10

1	CCABA2409WEV0	R	Cabinet Ass'y,Front	AZ
1-1	-	R	Cabinet,Front	-
1-2	GCOVA0078PEKA	R	Cover for R/C	AD
1-3	JBTN-0258PESA	R	Button,Power, VOL/CH-up/down	AE
2	GCABB2325PEKA	R	Rear Cabinet	AW

13J-M150

1	CCABA2395WEV2	R	Cabinet Ass'y,Front	AZ
1-1	-	R	Cabinet,Front	-
1-2	GCOVA0078PEKA	R	Cover for R/C	AD
1-3	JBTN-0258PESB	R	Button,Power, VOL/CH-up/down	AR
2	GCABB2309PEKB	R	Rear Cabinet	AW

CJ13M15

1	CCABA2409WEV2	R	Cabinet Ass'y,Front	AZ
1-1	-	R	Cabinet,Front	-
1-2	GCOVA0078PEKA	R	Cover for R/C	AD
1-3	JBTN-0258PESB	R	Button,Power, VOL/CH-up/down	AR
2	GCABB2325PEKB	R	Rear Cabinet	AW

14MJ10

1	CCABA2410WEV0	R	Cabinet Ass'y,Front	AZ
1-1	-	R	Cabinet,Front	-
1-2	GCOVA0078PEKA	R	Cover for R/C	AD
1-3	JBTN-0258PESA	R	Button,Power, VOL/CH-up/down	AE
2	GCABB2326PEKA	R	Rear Cabinet	AW

MISCELLANEOUS PARTS

	QANTR0022PEZZ	R	Rod Antenna (13J-M100/150/CJ13M10/15)	AP
	QANTR0010PEZZ	R	Rod Antenna (14MJ10)	AV
△	QACCD3051CESA	J	AC Cord	AK
or	QACCD3038CESA			
or	QACCD3037CESA			
	QCNW-2105PEZZ	R	Connecting Cord	AF

Ref. No. Part No. ★ Description Code


	QCNW-2106PEZZ	R	Connecting Cord	AE
	QCNW-2107PEZZ	R	Connecting Cord	AE
	QEARC1404PEZZ	R	Ground-Part	AD
SP2	VSP0080PBL08A	J	Speaker	AL
or	VSP0080P-H28A	J	Speaker	AM
or	VSP0080PBK58A	J	Speaker	AL

SUPPLIED ACCESSORIES

RRMCG1324CESA	J	Infrared R-C (13J-M100/150/CJ13M10)	AT
RRMCG1324CESB	J	Infrared R-C (CJ13M15)	AT
RRMCG1339CESA	J	Infrared R-C (14MJ10)	AT
RUNTK0393CEZZ	J	Antenna adaptor (14MJ10)	AH
TGAN-0018PEZZ	R	Guarantee Card (13J-M100/150)	AD
TINS-6042PEZZ	R	Operation Manual (13J-M100/150)	AD
TINS-6080PEZZ	R	Operation Manual (CJ13M10/15)	AD
TINS-6084PEZZ	R	Operation Manual (14MJ10)	AD

**PACKING PARTS
(NOT REPLACEMENT ITEM)**

SPAKC6214PEZZ	R	Packing Case(13J-M100)	-
SPAKC6215PEZZ	R	Packing Case(13J-M150)	-
SPAKC6244PEZZ	R	Packing Case(CJ13M10)	-
SPAKC6225PEZZ	R	Packing Case(CJ13M15)	-
SPAKC6226PEZZ	R	Packing Case(14MJ10)	-
SPAKP0031PEZZ	R	Polyethylene Sack	-
SPAKX2630PEZZ	R	Buffer Material	-
SSAKA0005PEZZ	R	Polyethylene Sack (13J-M100/150)	-
SSAKA0001PEZZ	R	Polyethylene Sack (CJ13M10/15/14MJ10)	-

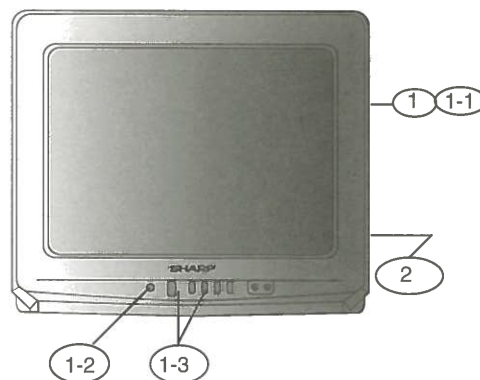

PACKING OF THE SET

